



Lawn & Garden Tractor

Model No. 72084 — 5900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Hood and Grill	1	Head / Valve / Breather	28
Hood and Grill	2	Head / Valve / Breather	29
Dash	3	Ignition / Electrical	30
Steering Wheel and Tilt	4	Blower Housing & Baffles	31
Lower Steering	5	Starting System	32
Front Axle	6	Fuel System	33
Front Axle	7	Fuel System	34
Seat	8	Engine Controls	35
Fuel Tank and Hydro Reservoir	9	Air Intake / Filtration	36
Fender and Footrest	10	Exhaust	37
Hoodstand and Firewall	11	Tuff Torq Transmission K61 (Toro)	
Lift Lever and Height of Cut	12	Transaxle Case	38
Lift Lever and Height of Cut	13	Center Case	39
Frame	14	Pump Shaft	40
Hydro Drive Components	15	Motor Shaft	41
Twin Cylinder Engine, Muffler, and P.T.O.	16	Range Shift	42
Clutch 92-6885	17	Bypass Return	43
Battery	18	Lever Damper	44
Hydro Brake	19	N-Centering	45
Hydro Control	20	Brake Interlock	46
Hydro Transaxle	21	Differential Gear	47
Cruise Control	22	Final Pinion	48
Rear Wheel	23	Axle Shaft	49
Kohler Engine CV16S-PS61514		Brake	50
Crankshaft	24	Electric Schematic Hydro Drive Cruise Control ..	51
Crankcase	25	Wire Harness Routing — Twin Cylinder Engine .	52
Crankcase	26	Wire Harness Routing — Cruise Control	53
Oil Pan / Lubrication	27		

Accessories

Description	Model / Part No.	Description	Model / Part No.
38" Side Discharge Mower	78216	Snowthrower Adaptor Kit	92-6829
38" Recycler®	78226	adapts model 79261 snowthrower to fit YGT	
42" Side Discharge Mower	78231	Snow Blade Adaptor Kit	92-6828
48" Side Discharge Mower	78260	adapts model 79251 snow blade to fit YGT	
38" Twin Bagger	79202	38" Recycler® Kit	79710
42"/48" Vacuum Bagger	79203	converts model 78216 38" side discharge	
48" Snow Blade	79252	mower to Recycler®	
42" Snow Thrower	79262	Indicator Light	92-6831
36" Tiller	29271		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INCL	includes
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex head flange	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y*. *X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


If a part number is not shown, you cannot order the part.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y)*. *X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

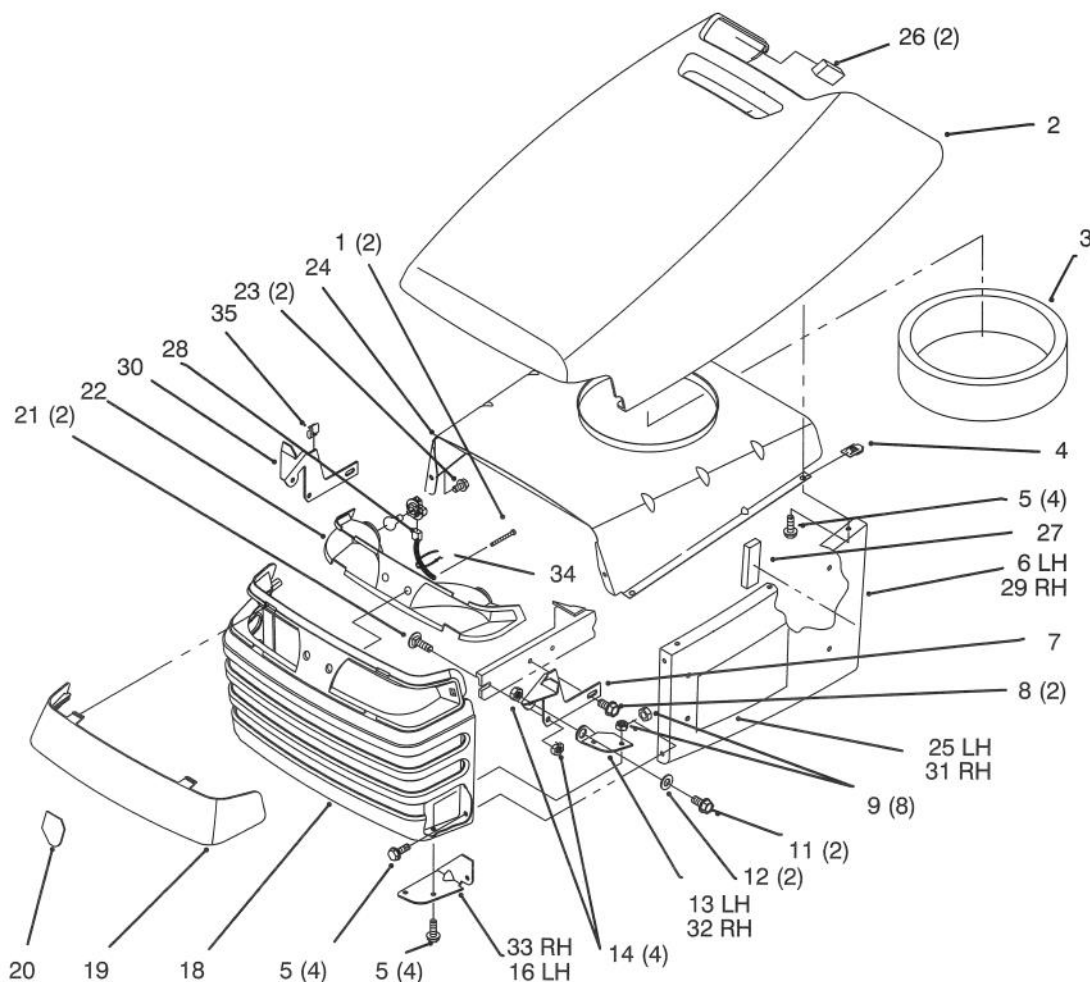

Sheet No.: 2

Hood and Grill


Ref. No.	Part No.	Qty.	Description
1	32144-32	2	Screw-Plastic
2	93-0490	1	Hood
3	92-7076	1	Inlet-Seal Air
4	92-7006	4	Nut
5	32105-15	12	Screw-HH
6	93-0491	1	Sidepanel-LH Hood
7	92-6918-03	1	Bracket-Hinge LH
8	32144-14	2	Screw-HH
9	32128-10	8	Nut-Lock HHF
11	322-3	2	Screw-HH
12	105503	2	Bushing
13	92-6997-03	1	Hinge-Hood LH
14	3296-29	4	Nut-Lock
16	92-7049-03	1	Bracket-Hood Hinge LH
18	93-0494	1	Grille & Screen ASM
19	92-6656	1	Lens-Headlight
20	92-6987	1	Decal-Horsehead
21	3230-1	2	Screw-CARR
22	88-3970	1	Reflector-Lamp
23	46-8093	2	Screw-TAP
24	92-6914-03	1	Baffle-Hood Upper
25	92-6728	1	Decal-Hood LH
26	92-7147	2	Foam-Hood
27	92-7148	2	Foam-Sidepanel
28	88-4320	1	Harness-Wire
29	93-0492	1	Sidepanel-RH Hood

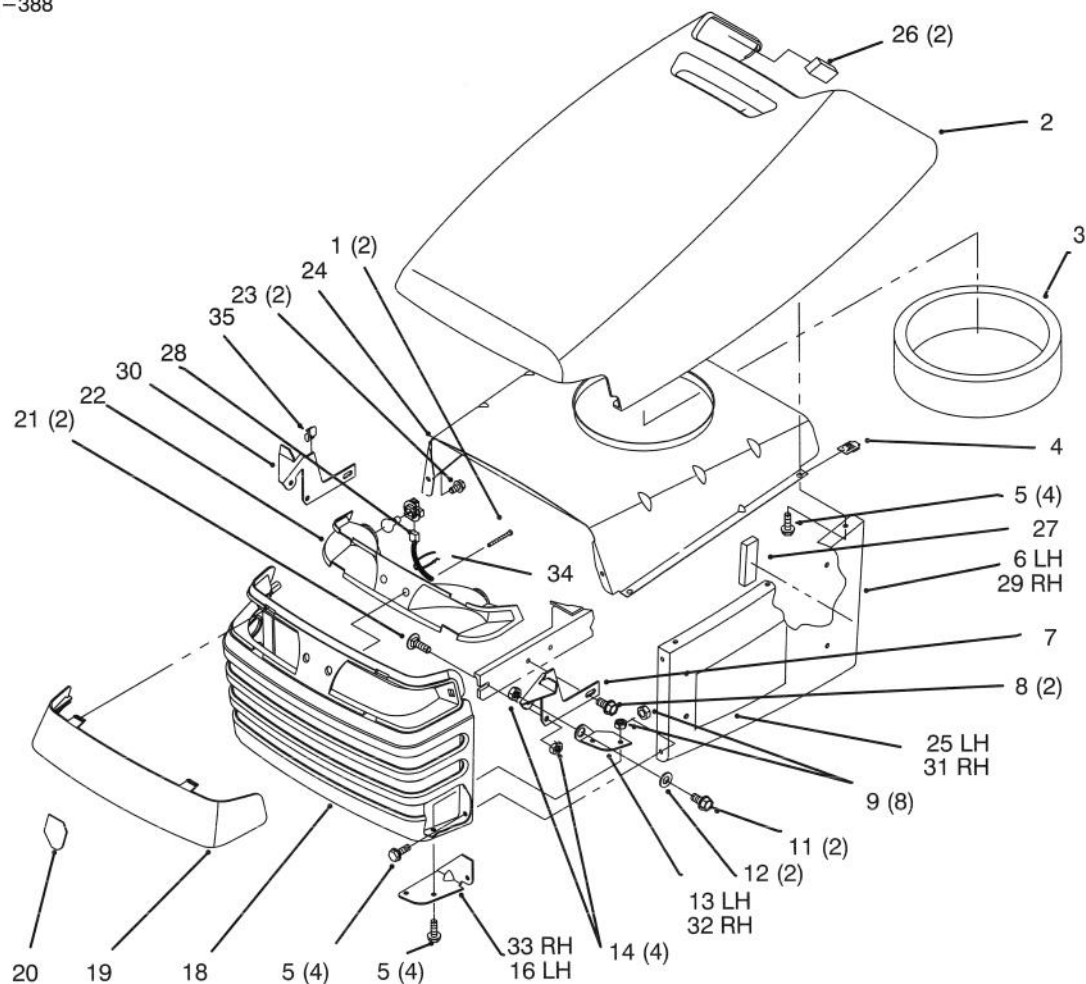

Sheet No.: 2

Hood and Grill


Ref. No.	Part No.	Qty.	Description
30	92-6917-03	1	Bracket-Hinge RH
31	92-6729	1	Decal-Hood RH
32	92-6996-03	1	Hinge-Hood RH
33	92-7048-03	1	Bracket-Hood Hinge RH
34	614249	1	Tie Strap
35	702366	1	Clip-Wire Retainer

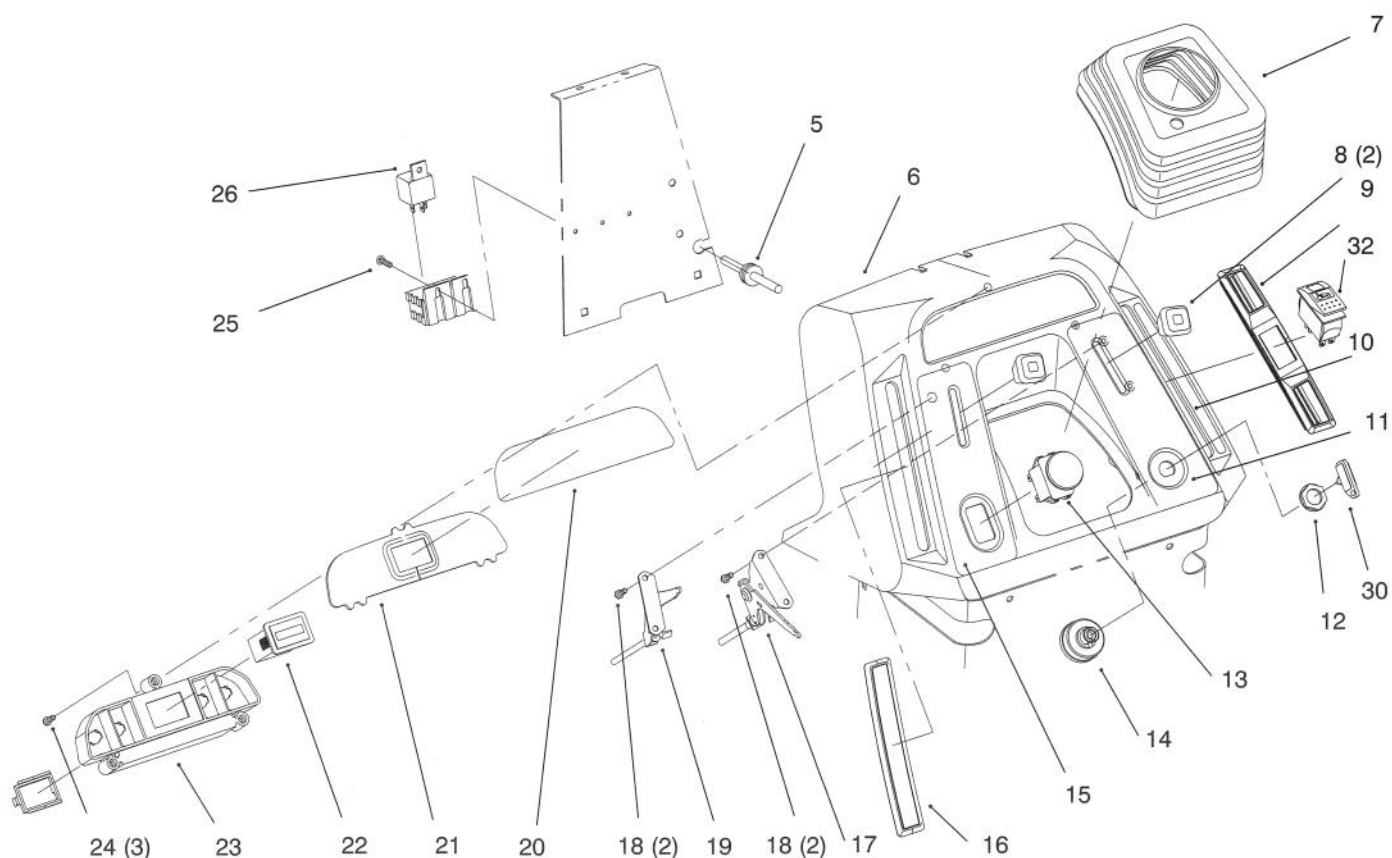

Sheet No.: 19

Dash


Ref. No.	Part No.	Qty.	Description
5	237-141	1	Grommet
6	93-0519	1	Dash
7	92-6680	1	Boot-Steering
8	66-0120	2	Knob
9	93-0516	1	Cover-Cruise
11	92-6721	1	Decal-Throttle/Ignition
12	700919	1	Nut
13	92-6787	1	Switch-PTO
14	92-6785	1	Switch INC 12 & 30
15	92-6720	1	Decal-Choke/PTO
16	92-6797	1	Cover-Slot LH
17	92-6784	1	Control-Throttle
18	32144-32	4	Screw-Plastic
19	92-6783	1	Control-Choke
20	92-6973	1	Decal-Dash Lens
21	92-6705	1	Lens-Dash
22	92-6715	1	Hourmeter
23	92-6709	1	Light-Indicator
24	32104-118	3	Screw-PH
25	32144-8	3	Screw-PPH
26	116397	1	Relay
26	116397	3	Relay
30	62-7770	1	Key-Ignition
32	93-0527	1	Switch-Cruise

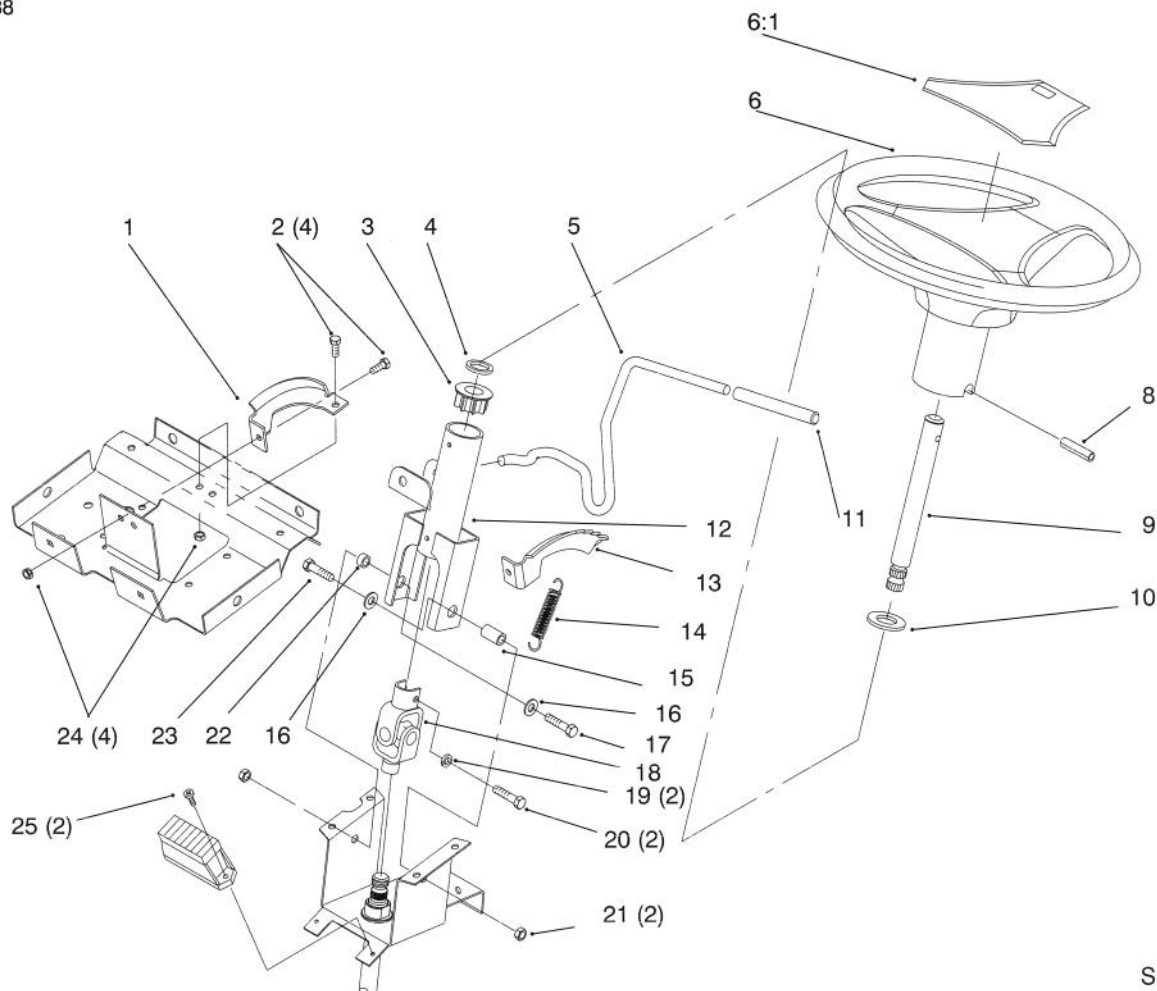

Sheet No.: 9

Steering Wheel and Tilt


Ref. No.	Part No.	Qty.	Description
1	92-6777-03	1	Bracket-Support
2	321-4	4	Screw-HH
3	93-1146	1	Bushing-Steering
4	7896	1	Washer-Bowed
5	92-6971	1	Lever-Tilt
6	92-6657	1	Steering Wheel
8	32121-111	1	Pin-Spiral
9	92-6704	1	Shaft-Steering
10	3256-28	1	Washer-Flat
11	92-6798	1	Cap-Rod
12	93-1148-03	1	Column
13	92-6776	1	Bracket-Detent
14	93-1357	1	Spring-Extension
15	92-6999	1	Spacer-Yoke
16	3256-23	2	Washer-Flat
17	322-3	1	Screw-HH
18	92-6717	1	U-Joint-Steering
19	3253-4	2	Washer-Lock
20	48-7730	2	Screw-HH
21	3296-29	2	Nut-Lock
22	92-6998	1	Spacer-Yoke
23	322-17	1	Screw-HH
24	3296-8	4	Nut-Lock
25	32144-8	2	Screw-PPH

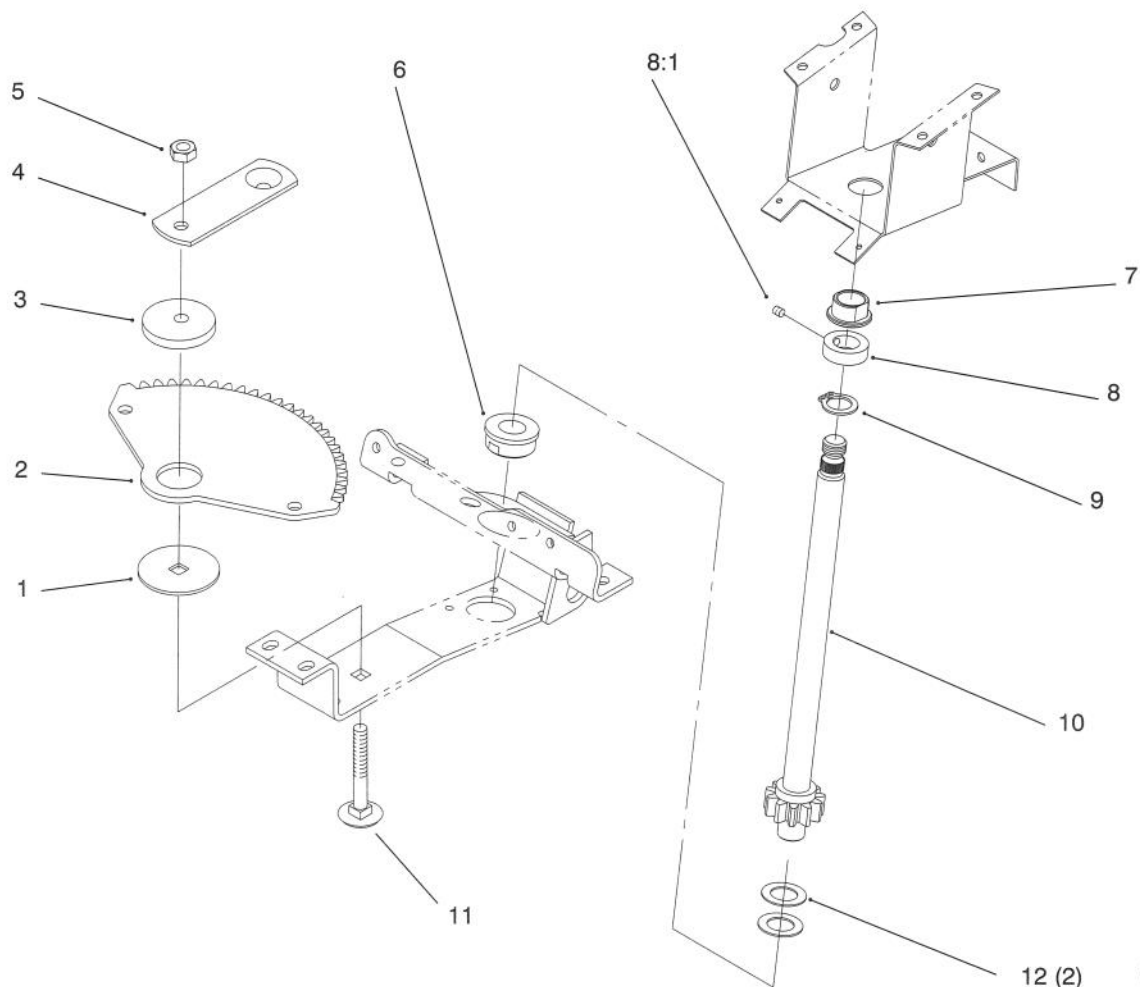

Sheet No.: 8

Lower Steering

Ref. No.	Part No.	Qty.	Description
1	111419	1	Washer-Bearing
2	78-2610	1	Gear-Sector
3	111418	1	Bushing
4	78-9150-03	1	Plate
5	108881	1	Nut-Hex
6	110391	1	Bearing-Wheel
7	109189	1	Bearing-Flange
8	111383	1	Collar W/Set Screw
8:1	3245-32	1	Screw-Set
9	111646	1	Grip Ring
10	92-6702	1	Shaft-Steering Lower
11	3231-4	1	Bolt-CARR
12	1278	2	Washer-Shim
	78-2451	1	Rod
	920041	1	Washer

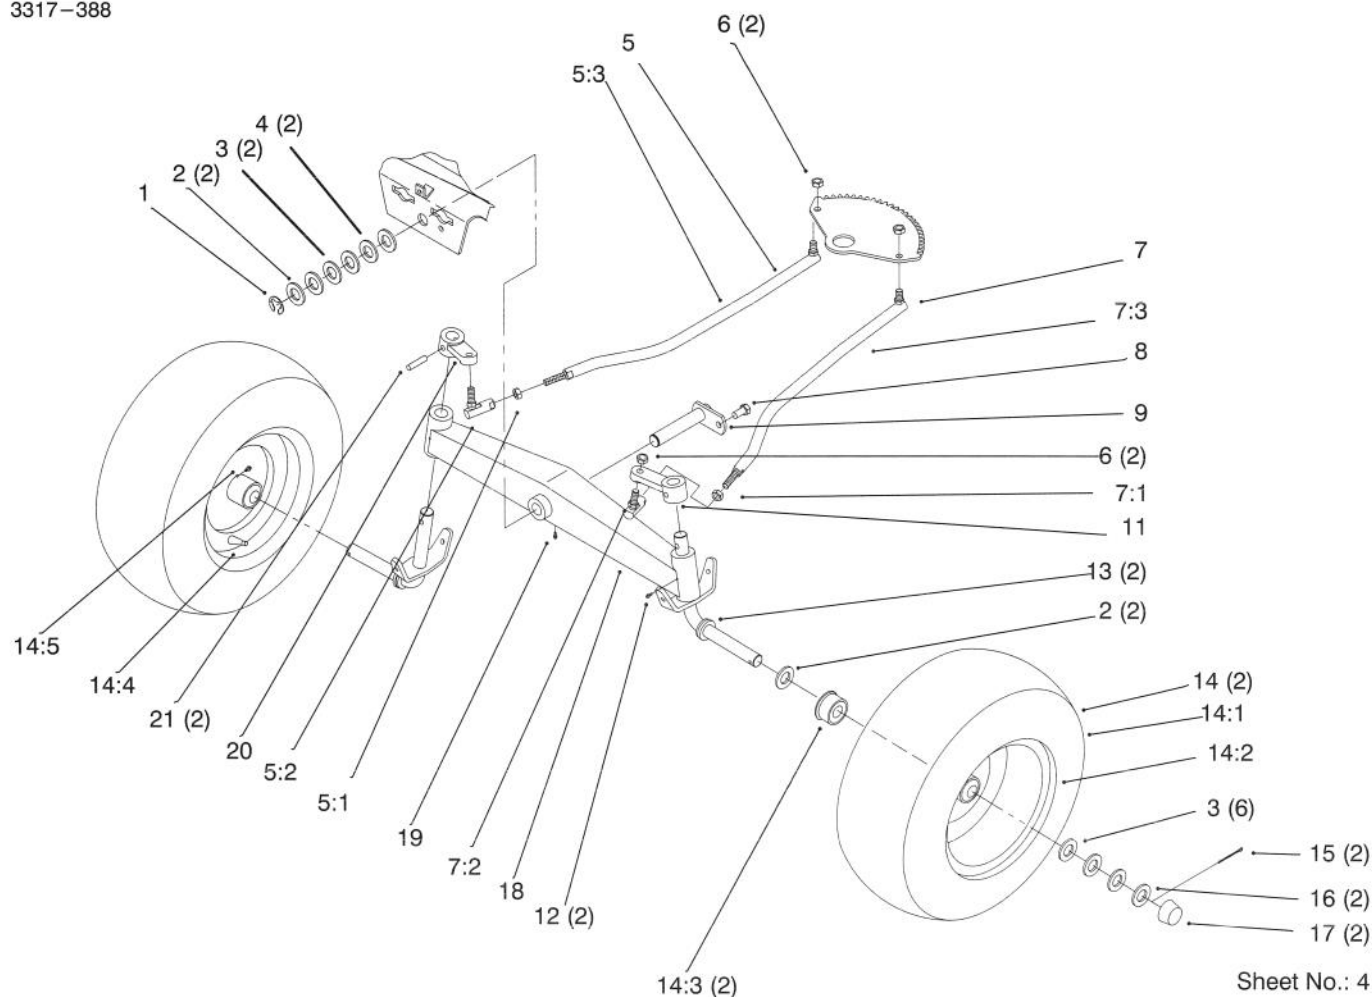


Sheet No.: 4

Front Axle

Ref. No.	Part No.	Qty.	Description
1	5618	1	Ring-Retaining
2	5210	4	Washer-Shim
3	1278	4	Washer-Shim
4	9202324	2	Washer
5	92-6883	1	Steering Link RH
☆5:1		1	Nut-HJ
5:2	78-2920	1	Joint-Ball
5:3	78-5801	1	Joint-Ball RH W/ Jam Nut
6	9150026	4	Nut-Lock
7	92-6884	1	Steering Link LH
☆7:1		1	Nut-HJ
7:2	78-2920	1	Joint-Ball
7:3	78-5811	1	Joint-Ball LH
8	9267154	1	Screw
9	92-7057-03	1	Pin-Front
11	78-1940-01	1	Arm-Front Spindle RH
12	302-5	2	Fitting-Grease
13	78-2601-01	2	Spindle
☆14		2	Wheel & Tire ASM
14:1	117127	2	Tire
14:2	78-1680	2	Wheel
14:3	110513	4	Bearing-Wheel
14:4	5108	2	Valve-Tire Tubeless
14:5	109500	2	Fitting-Grease
15	3272-17	2	Pin-Cotter


☆ Not serviced

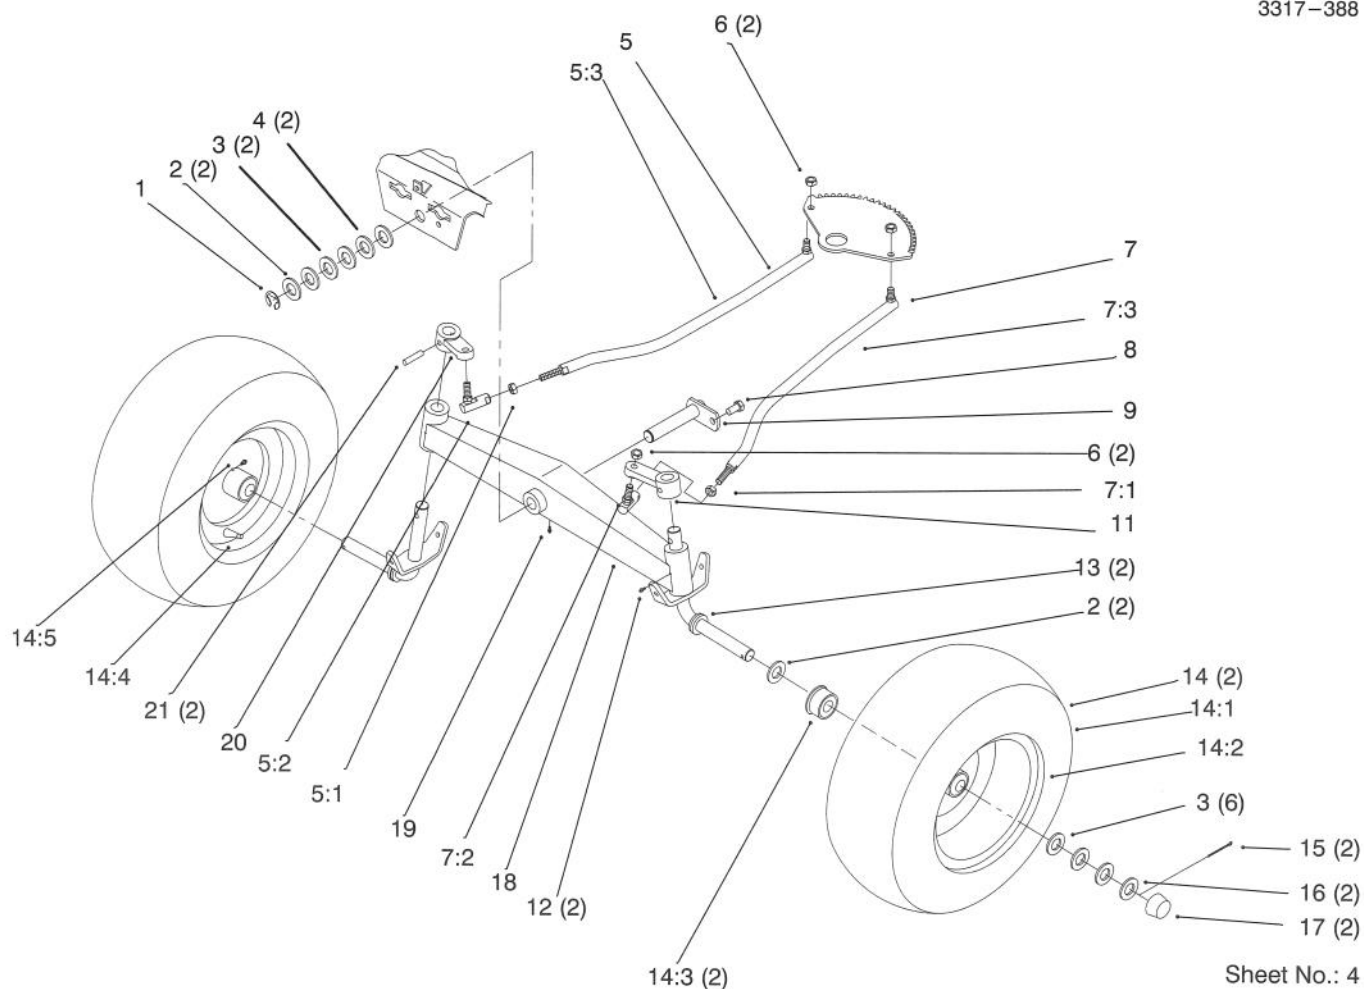

Sheet No.: 4

Front Axle


Ref. No.	Part No.	Qty.	Description
16	28-2480	2	Washer-Flat
17	61-9780	2	Hubcap
18	78-7960-01	1	Axle-Front
19	302-11	1	Fitting-Grease
20	78-1950-01	1	Arm-Front Spindle LH
21	933270	2	Pin-Roll

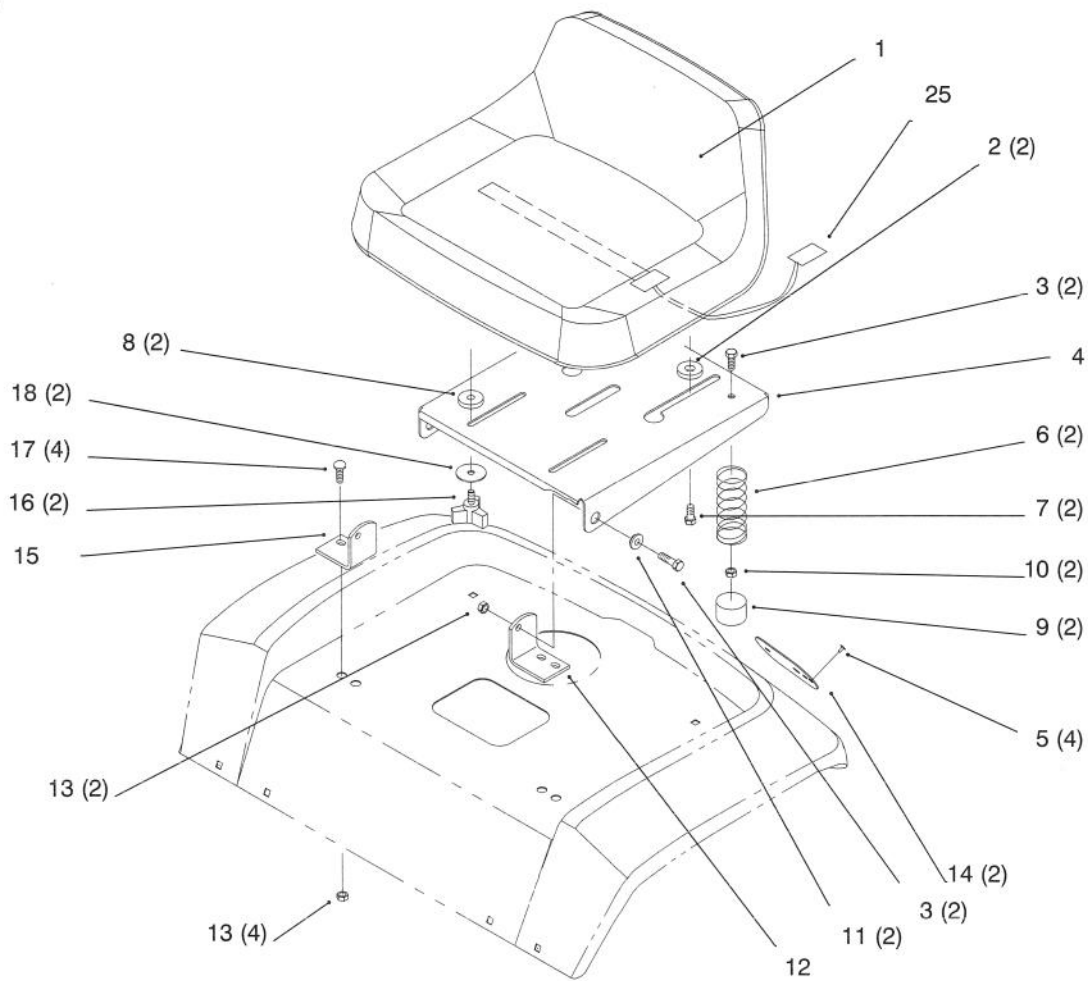

Sheet No.: 18

Seat


Ref. No.	Part No.	Qty.	Description
1	92-6511	1	Seat
2	92-6750	2	Spacer-Nylon
3	322-5	4	Screw-HH
4	92-6972-03	1	Support-Seat
5	3290-282	4	Pop Rivet
6	92-7054	2	Spring-Compression
7	92-6986	2	Bolt-Shoulder
8	109989	2	Spacer
9	701178	2	Cap-Protector
10	3296-58	2	Nut-Flange
11	105503	2	Bushing
12	79-0970-03	1	Bracket-Pivot LH
13	3296-29	6	Nut-Lock
14	106557	2	Reflector
15	79-0950-03	1	Bracket-Pivot RH
16	700806	2	Knob
17	3230-2	4	Screw-CARR
18	5-4460	2	Washer-Fender
25	38-1420	1	Switch-Seat

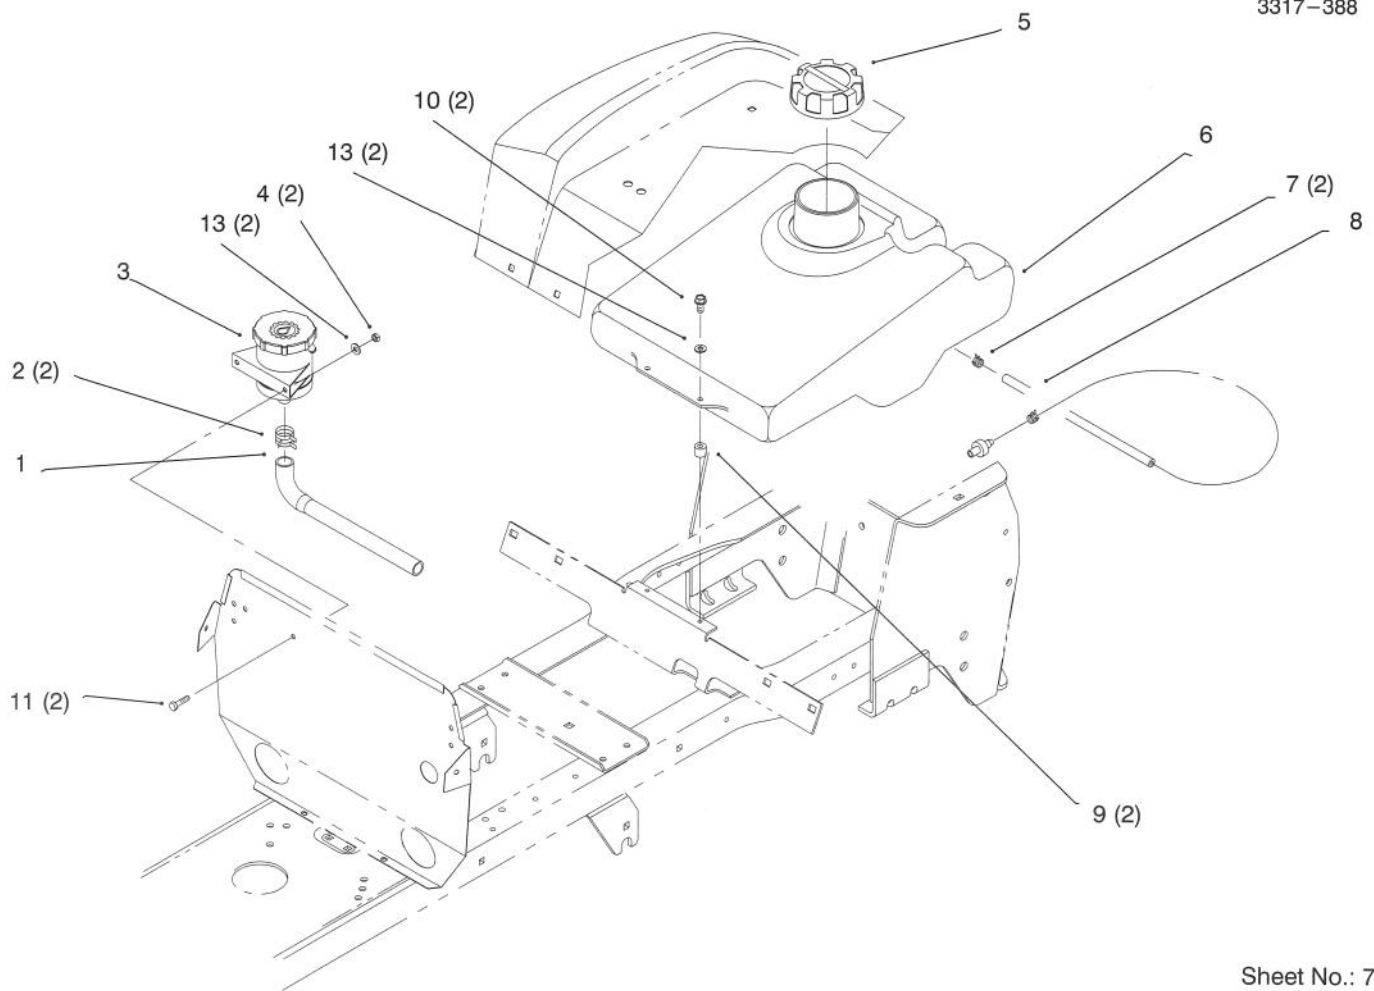

Sheet No.: 7

Fuel Tank and Hydro Reservoir


Ref. No.	Part No.	Qty.	Description
1	92-6737	1	Hose
2	2412-129	2	Clamp-Hose
3	79-3500	1	Reservoir
4	3296-42	2	Nut-Lock
5	88-3980	1	Gas Cap ASM
6	92-6506	1	Tank-Gas
7	2412-98	2	Clamp-Hose
8	93-1627	1	Hose-Fuel Line
9	93-1144	2	Spacer-Fuel Tank
10	32104-96	2	Screw-HHST
11	321-4	2	Screw-HH
13	3256-22	4	Washer-Flat

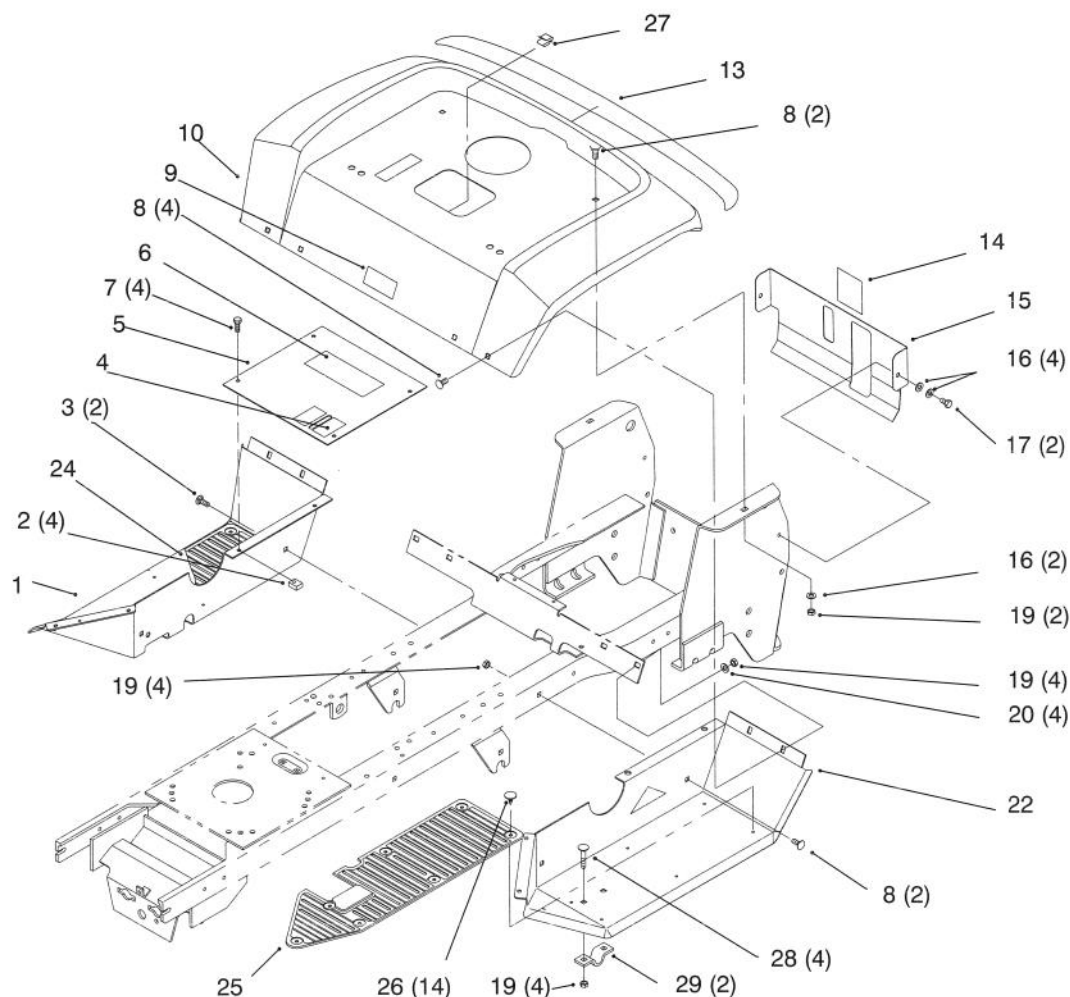

Sheet No.: 17

Fender and Footrest


Ref. No.	Part No.	Qty.	Description
1	92-6747-01	1	Footrest-RH
2	92-6876	4	Nut-Retainer
3	3230-23	2	Screw-CARR
4	92-6725	1	Decal-HOC
5	93-0489-01	1	Plate-Footrest W/Decal
6	92-8946	1	Decal-Danger
7	92-7020	4	Screw-TTH
8	3230-2	8	Screw-CARR
9	76-1340	1	Decal-USA
10	92-6795-01	1	Fender
13	92-6730	1	Decal-Rear Fender
14	92-6727	1	Decal-Fuel Level
15	92-6713-03	1	Cover-Rear
16	3256-23	6	Washer-Flat
17	9266934	2	Screw-HWHTF
19	3296-29	14	Nut-Lock
20	3256-71	4	Washer-Flat
22	92-6746-01	1	Footrest-LH
24	92-6687	1	Mat-Foot RH
25	92-6688	1	Mat-Foot LH
26	3290-479	14	Fastener-Panel
27	702366	1	Clip-Wire Retainer
28	3230-20	4	Bolt-CARR
29	106288	2	Clamp

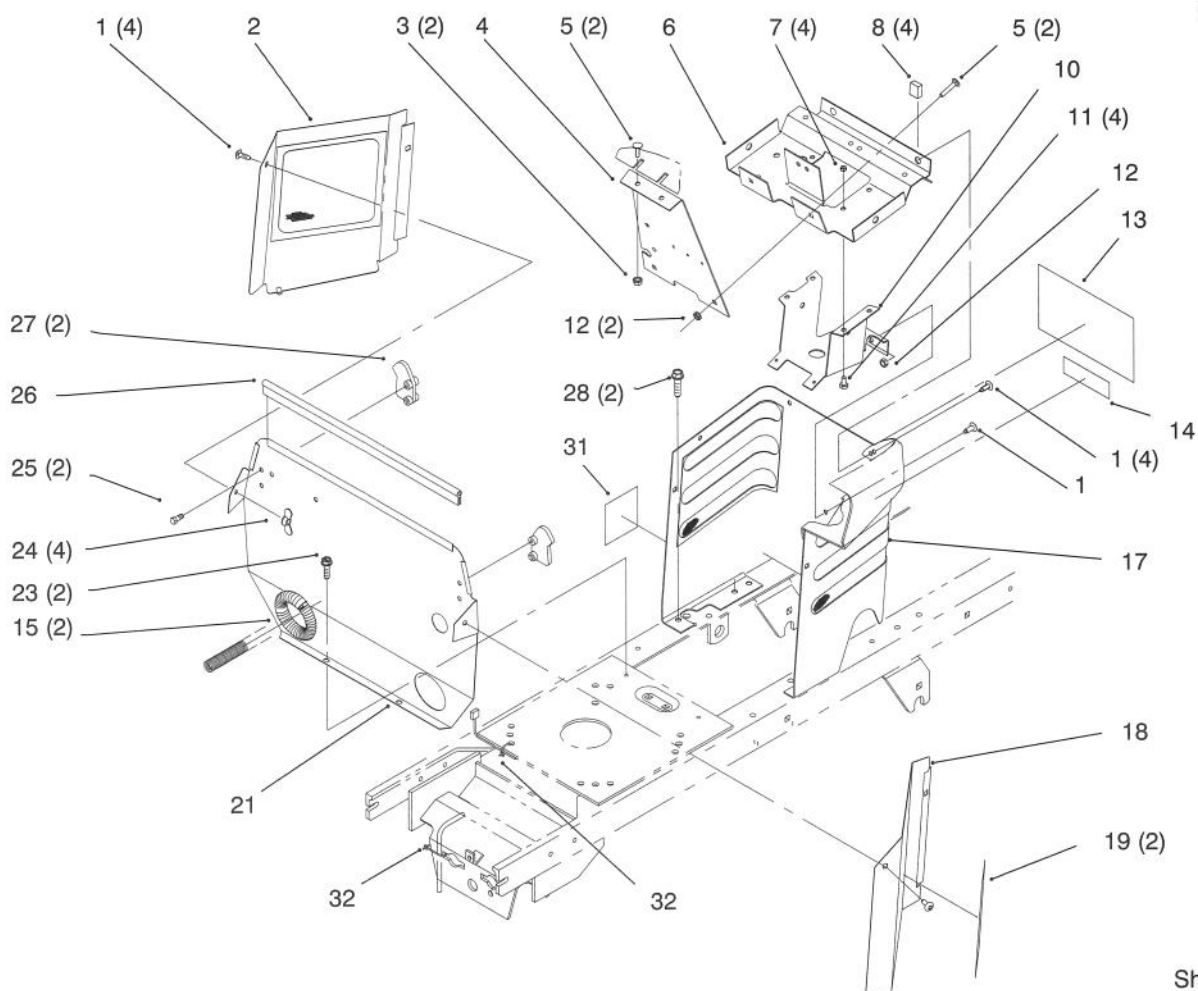

Sheet No.: 10

Hoodstand and Firewall


Ref. No.	Part No.	Qty.	Description
1	92-7020	9	Screw-TTH
2	92-6937-03	1	Cover-Side RH
3	32149-2	2	Nut-Hex Lock
4	92-6793-03	1	Panel-Support Dash
5	3229-11	4	Bolt-CARR
6	92-6859-03	1	Support-Dash
7	3296-8	4	Nut-Lock
8	92-6860	4	Nut-Retainer
10	92-6778-03	1	Support-Column
11	321-4	4	Screw-HH
12	3296-42	3	Nut-Lock
13	93-0302	1	Decal-Slope/Park Brake
14	83-6620	1	Decal-Instruction
15	24-7924	2	Cover-Drive Shaft
17	93-0486-03	1	Hoodstand W/Decals
18	92-6936-03	1	Cover-Side LH
19	92-6735	2	Decal-266-H
21	92-6771-03	1	Baffle-Rear
23	32144-4	2	Screw-TAP
24	32103-22	4	Nut-Wing
25	46-8093	2	Screw-TAP
26	93-1131	1	Trim-Seal
27	92-6960	2	Latch-Hood
28	32144-14	2	Screw-HH
32	614249	2	Tie Strap

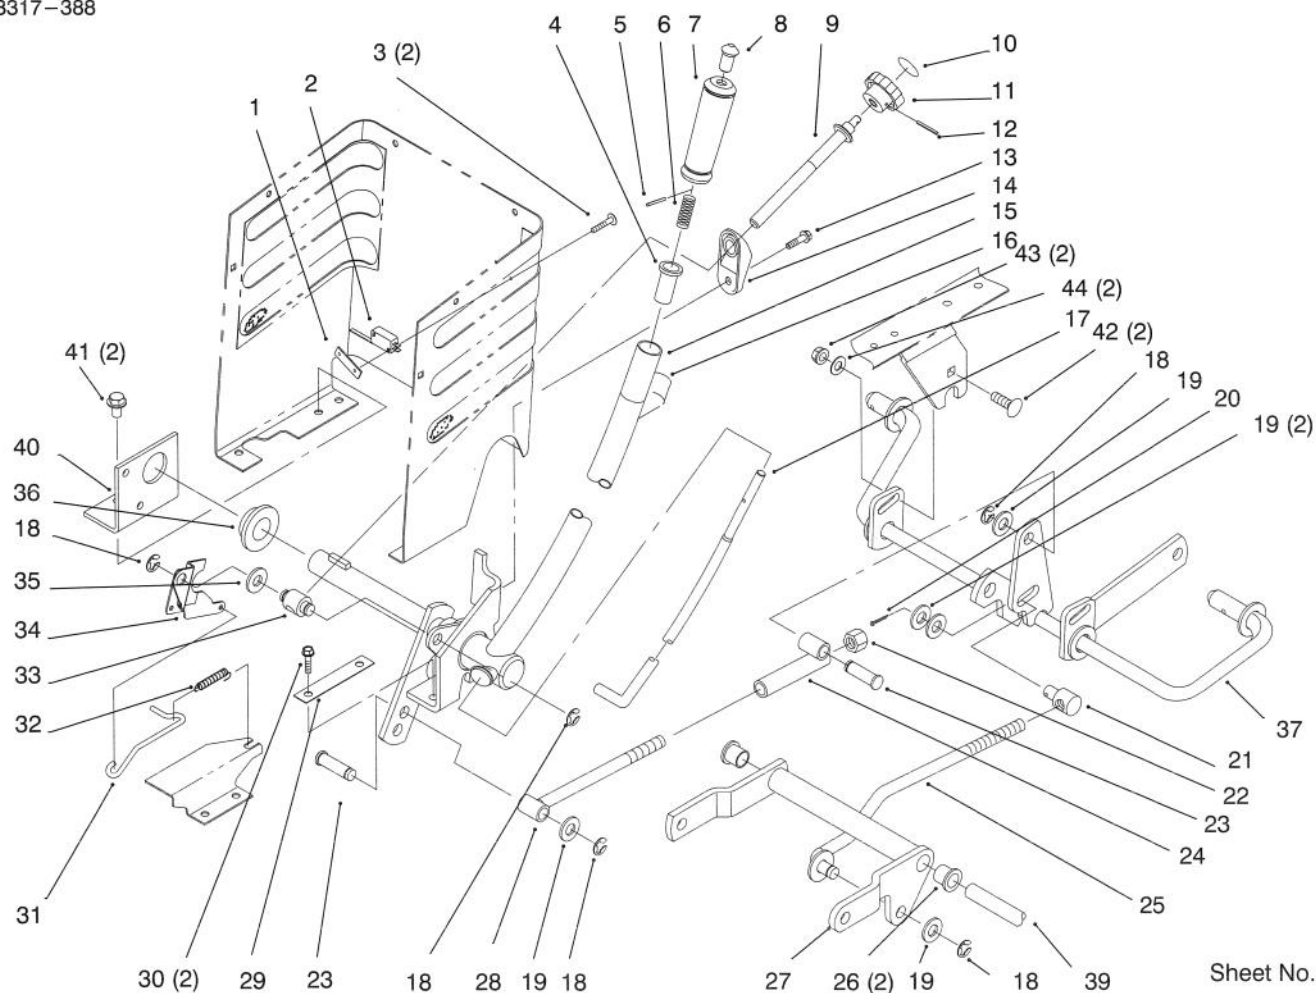

Sheet No.: 11

Lift Lever and Height of Cut


Ref. No.	Part No.	Qty.	Description
1	3290-354	1	Nut-Speed
2	88-9930	1	Switch-Micro
3	147665	2	Screw
4	8130	1	Retainer-Spring
5	933148	1	Pin-Spirol
6	3624	1	Spring-Compression
7	92-6710	1	Grip-Handle
8	92-6711	1	Tip-Rod
9	92-6965	1	Rod-HOC
10	78-9740	1	Decal-HOC Knob
11	115593	1	Knob
12	933141	1	Pin-Spirol
13	32144-4	1	Screw-TAP
14	92-6794	1	Wedge-HOC Adjust
15	92-6874-03	1	Lever-Lift
16	112168	1	Decal-Lift
17	92-6977-03	1	Rod-Lift Lever
18	32120-47	5	Ring-Retaining
19	3256-26	5	Washer-Flat
20	3272-6	1	Pin-Cotter
21	8870	1	Trunnion
22	3296-23	1	Nut-Lock
23	79-1250	2	Pin
24	78-7390	1	Link
25	78-2431	1	Rod
26	256-90	2	Bushing-Flange

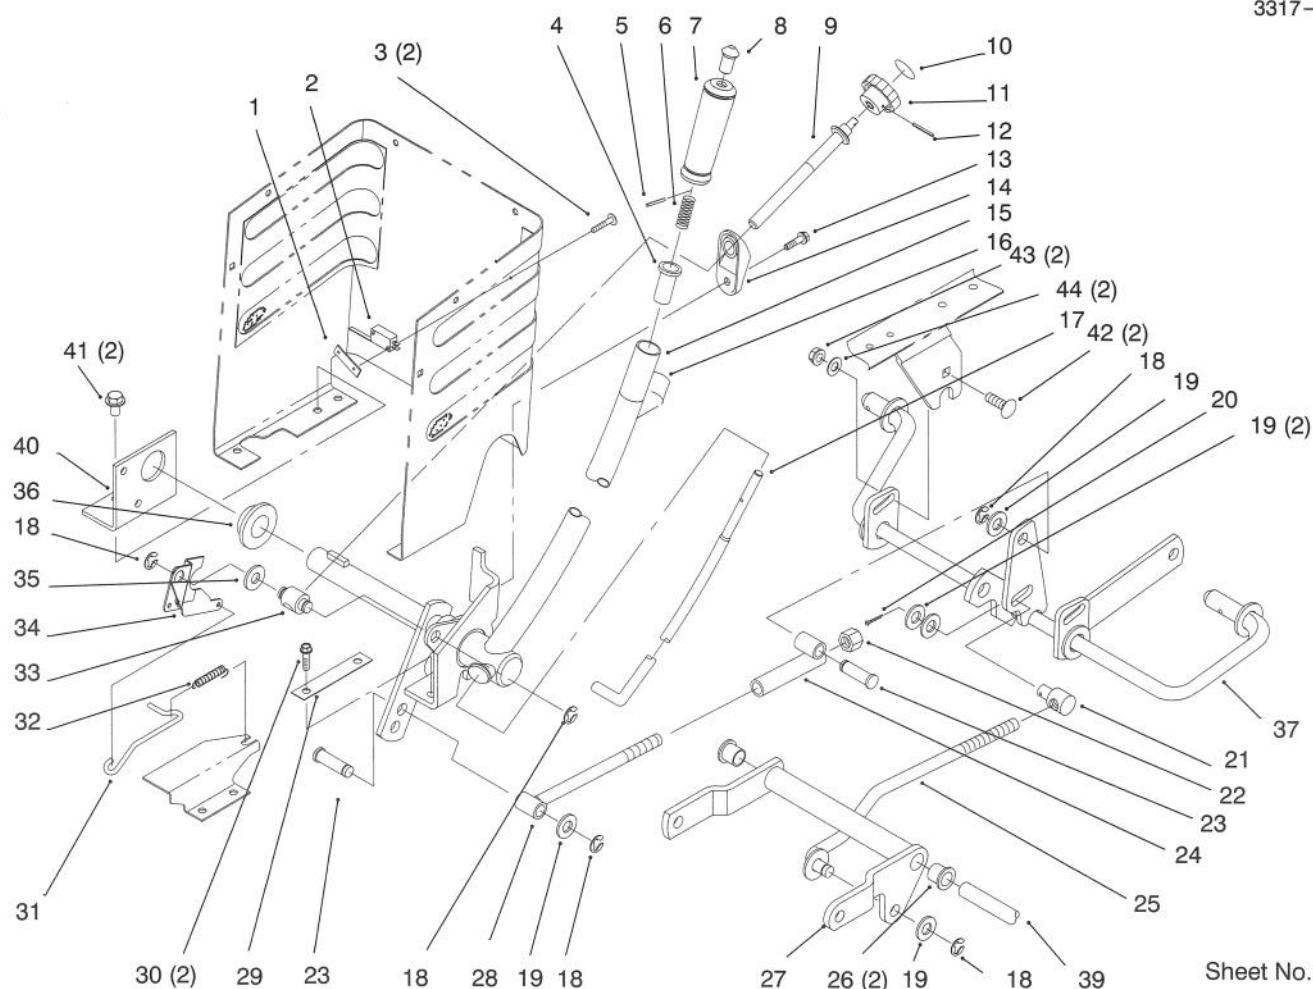

Sheet No.: 11

Lift Lever and Height of Cut


Ref. No.	Part No.	Qty.	Description
27	92-6855-03	1	Arm
28	78-7360	1	Rod
29	78-6810-03	1	Plate
30	32144-14	2	Screw-HH
31	92-6978	1	Rod-HOC Indicator
32	92-7007	1	Spring-Extension
33	78-2140	1	Trunnion
34	92-6979	1	Plate-HOC Gage
35	9202634	1	Washer-Flat
36	106269	1	Bearing-Flange
37	79-3401-03	1	Gage Shaft
39	78-6831	1	Shaft
40	93-0523	1	Bracket-Pivot Linkage
41	32144-14	2	Screw-HH
42	3231-25	2	Screw-CARR
43	3256-24	2	Washer-Flat
44	3296-39	2	Nut-Lock

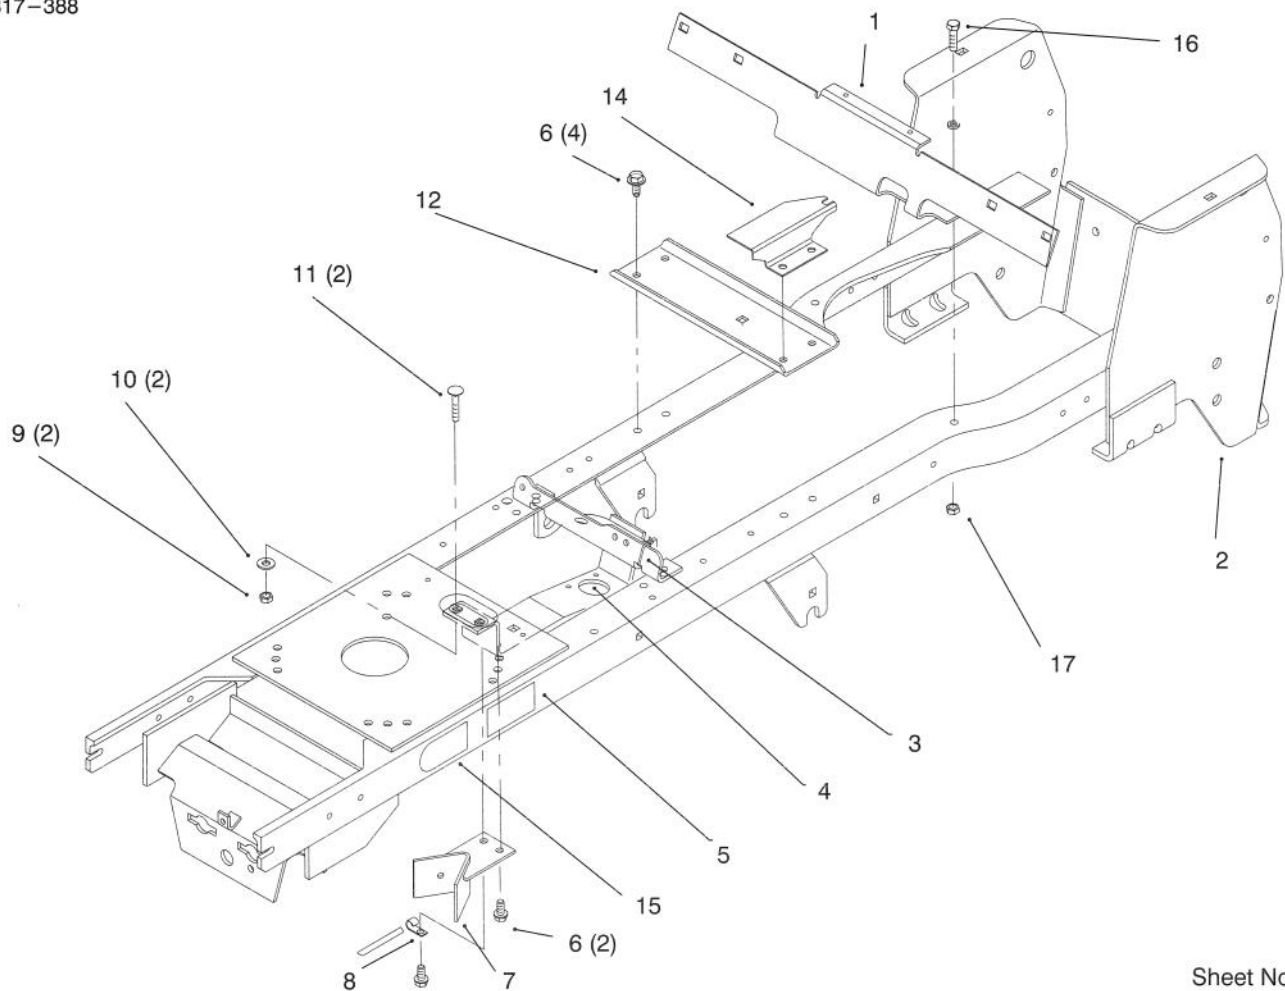

Sheet No.: 14

Frame


Ref. No.	Part No.	Qty.	Description
1	92-6674-03	1	Support-Fender
2	93-0522	1	Frame W.a.
3	614249	1	Tie Strap
4	92-6992-03	1	Bracket-Steering
5	79-6730	1	Decal-Belt Install
6	32144-14	6	Screw-HH
7	78-2491-03	1	Stop-PTO
8	8830	1	Retainer-"j"
9	3296-29	2	Nut-Lock
10	3256-23	2	Washer-Flat
11	3230-2	2	Screw-CARR
12	92-6868-03	1	Bracket-Idler
14	92-6964-03	1	Bracket-HOC
15	92-8747	2	Decal-Attach-A-Matic
16	322-5	1	Screw-HH
17	3296-29	1	Nut-Lock

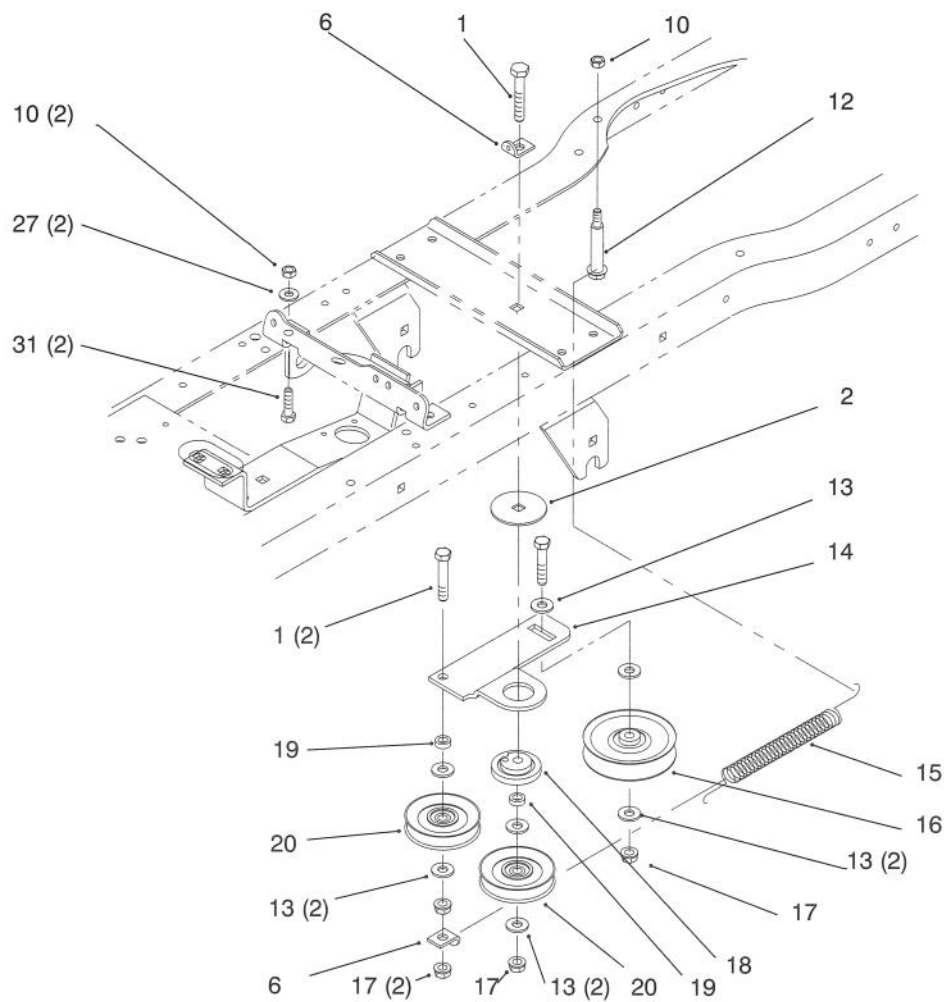

Sheet No.: 3

Hydro Drive Components


Ref. No.	Part No.	Qty.	Description
1	323-10	3	Screw-HH
2	111419	1	Washer-Bearing
6	2534	2	Clip-Spring
10	3296-29	3	Nut-Lock
12	88-4590	1	Bolt-Shoulder
13	3256-24	7	Washer-Flat
14	92-6900	1	Arm-Idler
15	79-7530	1	Spring-Extension
16	92-7101	1	Pulley-Flat
17	3296-59	4	Nut-Lock
18	111418	1	Bushing
19	93-3658	2	Spacer
20	92-7102	2	Pulley-Idler
27	3256-23	2	Washer-Flat
31	322-5	2	Screw-HH

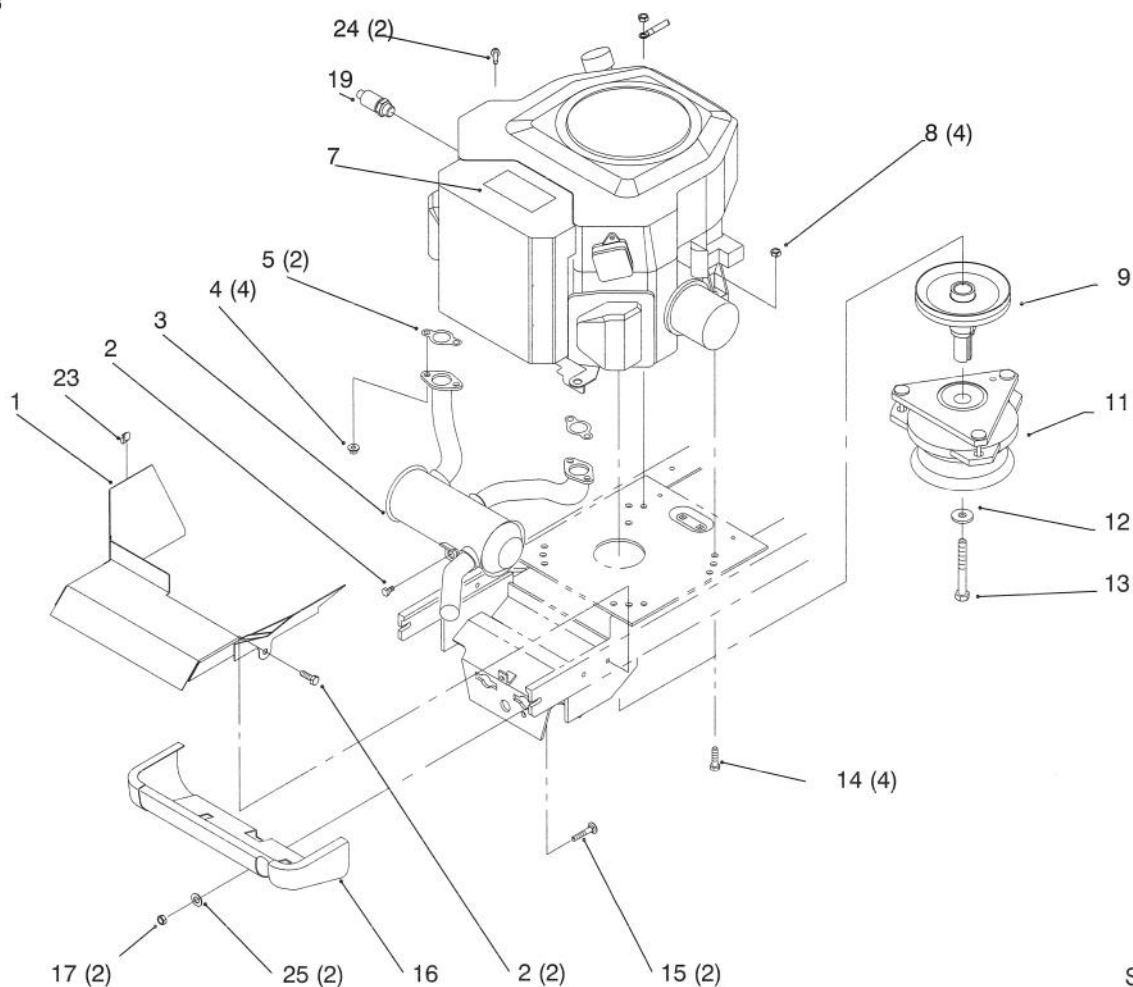

Sheet No.: 5

Twin Cylinder Engine, Muffler, and P.T.O.


Ref. No.	Part No.	Qty.	Description
1	92-6879-03	1	Baffle—Muffler
2	9266934	3	Screw—HWHTF
3	92-6861	1	Muffler
4	92-6780	4	Nut—HHF
5	93-0350	2	Gasket—Exhaust
7	92-6763	1	Decal—Toro Power Plus 16
8	3296-29	4	Nut—Lock
9	92-6888	1	Pulley
11	92-6885	1	Clutch—PTO
12	112843	1	Washer—PTO
13	9114466	1	Screw HH
14	322-9	4	Screw—HH
15	3231-22	2	Bolt—CARR
16	92-6867-01	1	Shield—Muffler
17	3296-39	2	Nut—Lock
19	92-6877	1	Valve—Oil Drain
23	702366	1	Clip—Wire Retainer
24	32144-118	2	Screw—PPH
25	3256-24	2	Washer—Flat

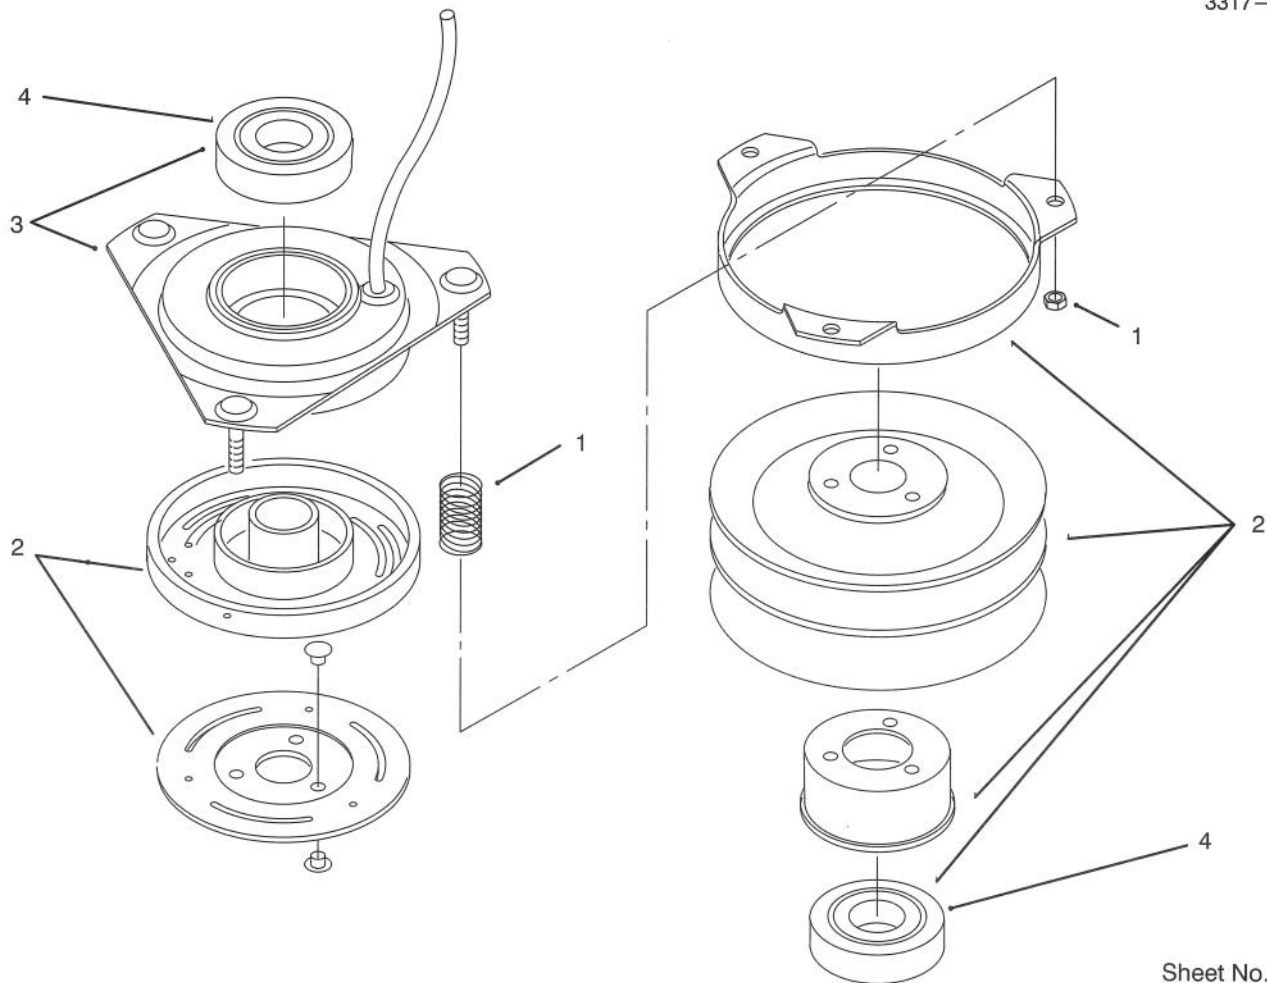

Sheet No.: 501

Clutch 92-6885


Ref. No.	Part No.	Qty.	Description
1	92-3014	3	Nut & Spring ASM
2	92-3015	1	Rotor ASM W/Bearing
3	92-3016	1	Field ASM W/Bearing
4	114064	2	Bearing-Elec Clutch

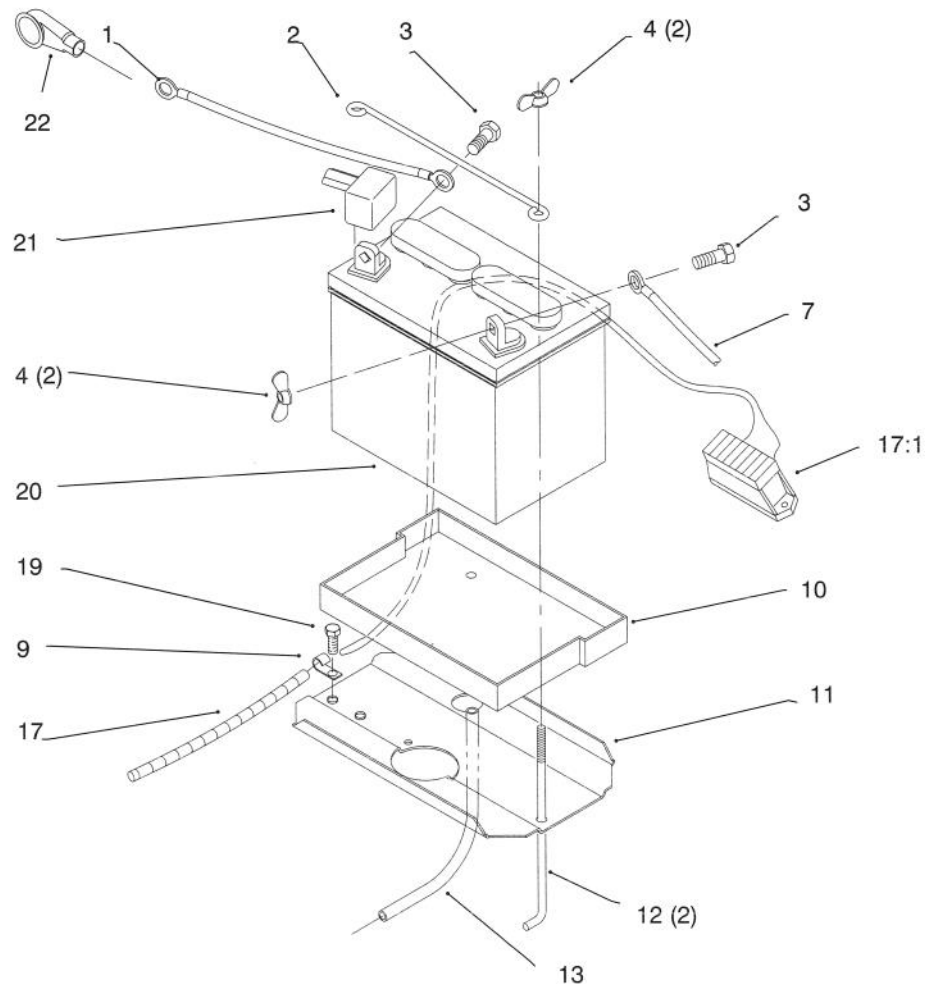

Sheet No.: 6

Battery


Ref. No.	Part No.	Qty.	Description
1	92-6989	1	Cable-Battery Red
2	117316	1	Rod-Battery Hold Down
3	321-4	2	Screw-HH
4	32103-22	4	Nut-Wing
7	93-0324	1	Cable-Battery Black
9	8830	1	Retainer-"j"
10	106948	1	Tray-Battery
11	78-6820-03	1	Plate-Battery
12	109547	2	Hook-Battery
13	114720	1	Tube-Battery Drain
17	92-6904	1	Harness-Wire
19	32144-14	1	Screw-HH
20	115877	1	Battery
21	109553	1	Boot-Battery Cable
22	93-3190	1	Boot-Terminal Insulator

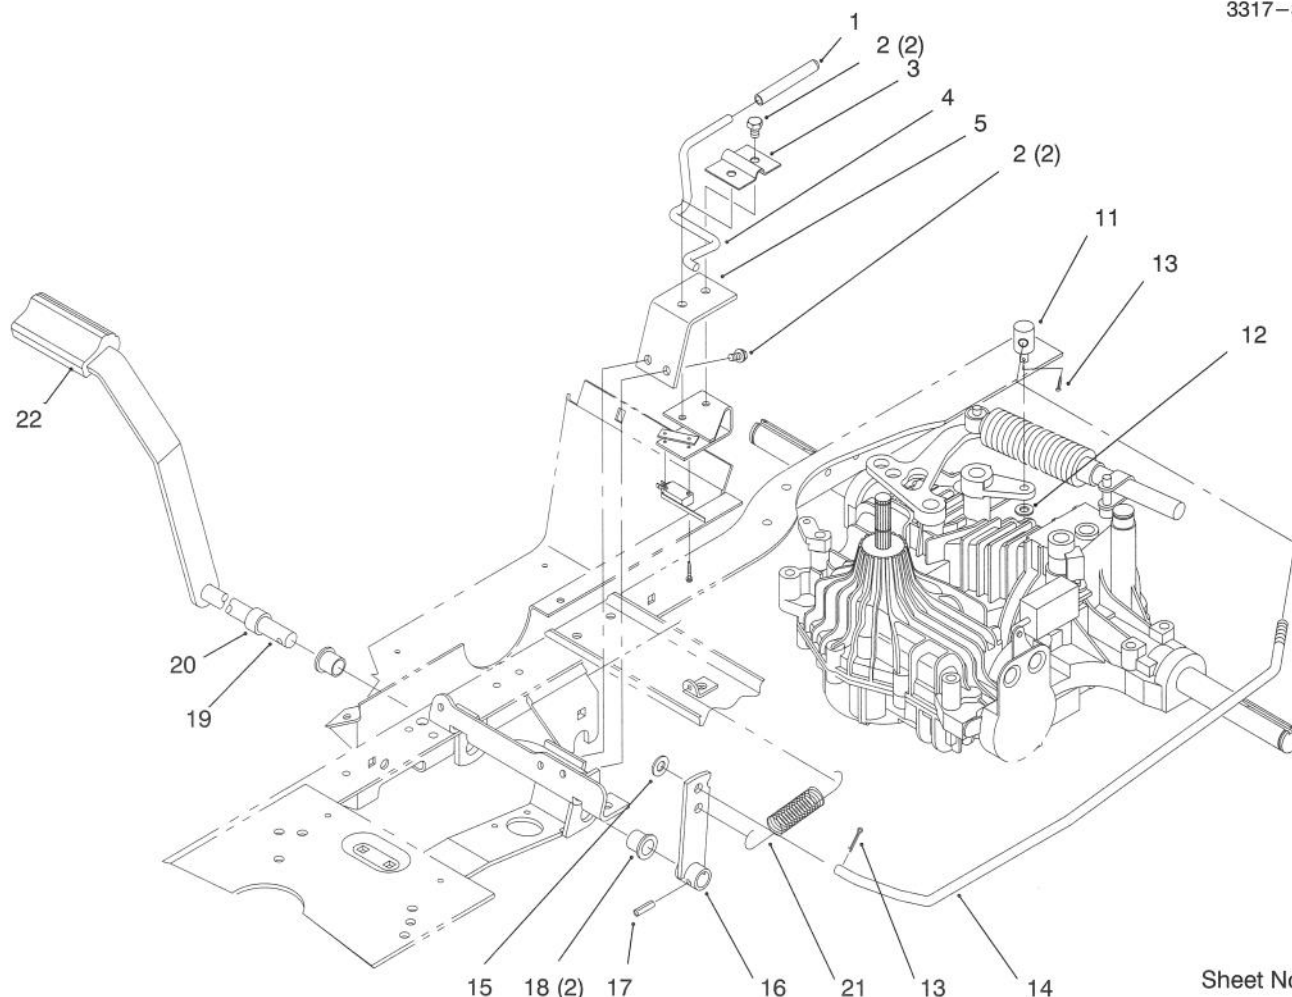

Sheet No.: 12

Hydro Brake


Ref. No.	Part No.	Qty.	Description
1	92-7009	1	Grip-Parking Brake
2	32144-14	4	Screw-HH
3	92-7000-03	1	Bracket-Park Brake
4	93-3167	1	Rod-Park Brake
5	92-7004-03	1	Support-Park Brake
11	92-6968	1	Trunnion-Brake
12	3256-23	1	Washer-Flat
13	3272-6	2	Pin-Cotter
14	92-6988	1	Rod-Brake
15	3256-24	1	Washer-Flat
16	92-6948-03	1	Lever-Brake
17	32121-69	1	Pin-Spring
18	256-90	2	Bushing-Flange
19	92-6951-03	1	Pedal-Brake
20	92-6982	1	Spacer-Brake
21	93-0540	1	Spring-Extension
22	65-2920	1	Pad-Pedal

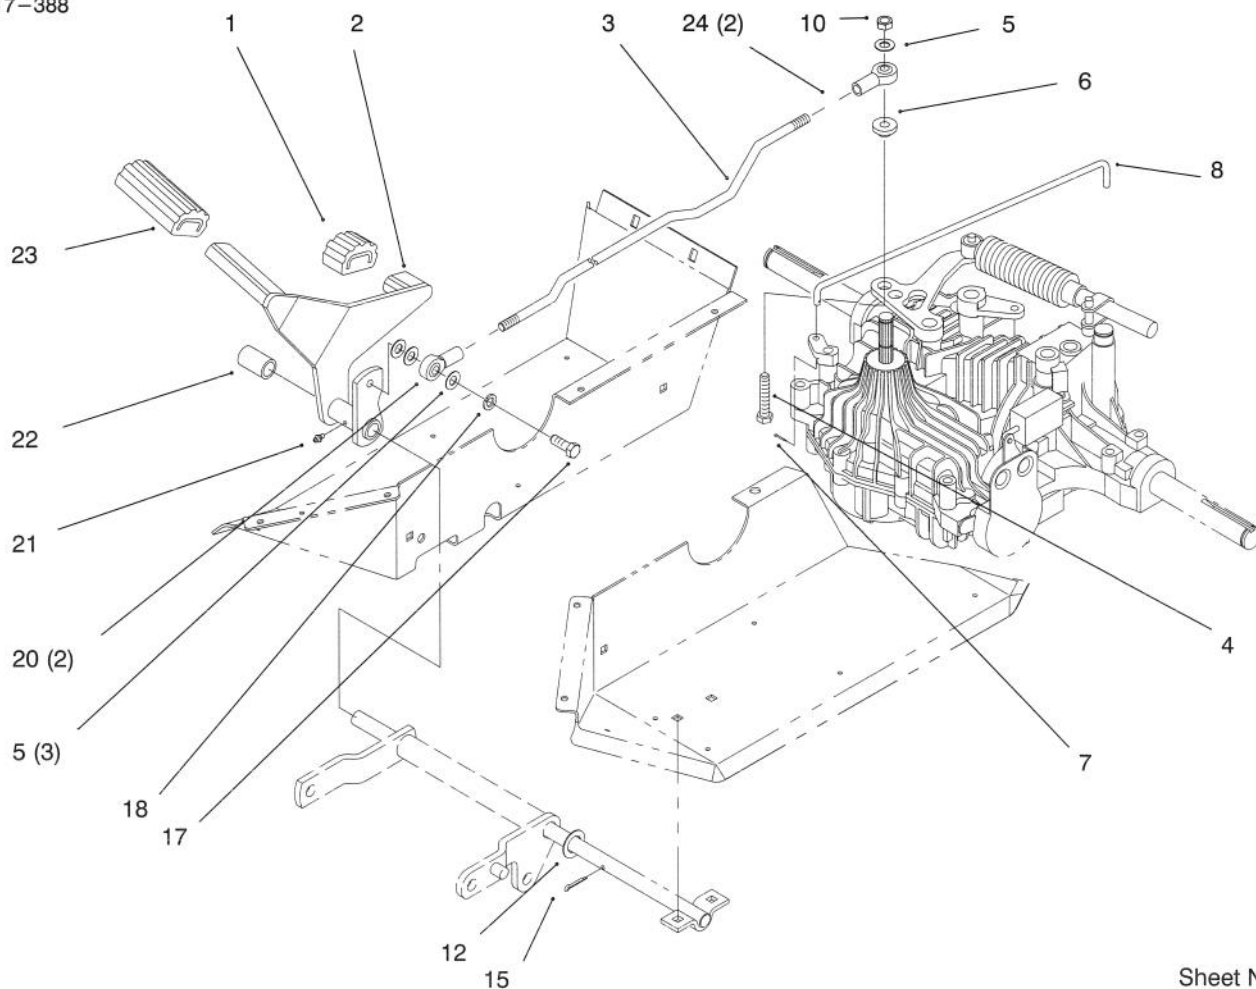

Sheet No.: 13

Hydro Control


Ref. No.	Part No.	Qty.	Description
1	92-6903	1	Pad-Pedal Reverse
2	92-6913-03	1	Pedal-Hydro
3	92-7018	1	Rod
4	323-10	1	Screw-HH
5	3256-24	4	Washer-Flat
6	92-6962	1	Bushing
7	3272-2	1	Pin-Cotter
8	92-6970	1	Rod-Bypass
10	3296-39	1	Nut-Lock
12	9202154	1	Washer-Flat
15	3272-16	1	Pin-Cotter
17	323-7	1	Screw-HH
18	3253-5	1	Washer-Lock
20	92-7008	2	Rod End
21	302-26	1	Fitting-Grease
22	92-6966	1	Spacer-Hydro Pedal
23	92-6902	1	Pad-Pedal Forward
24	3220-3	2	Nut-HJ

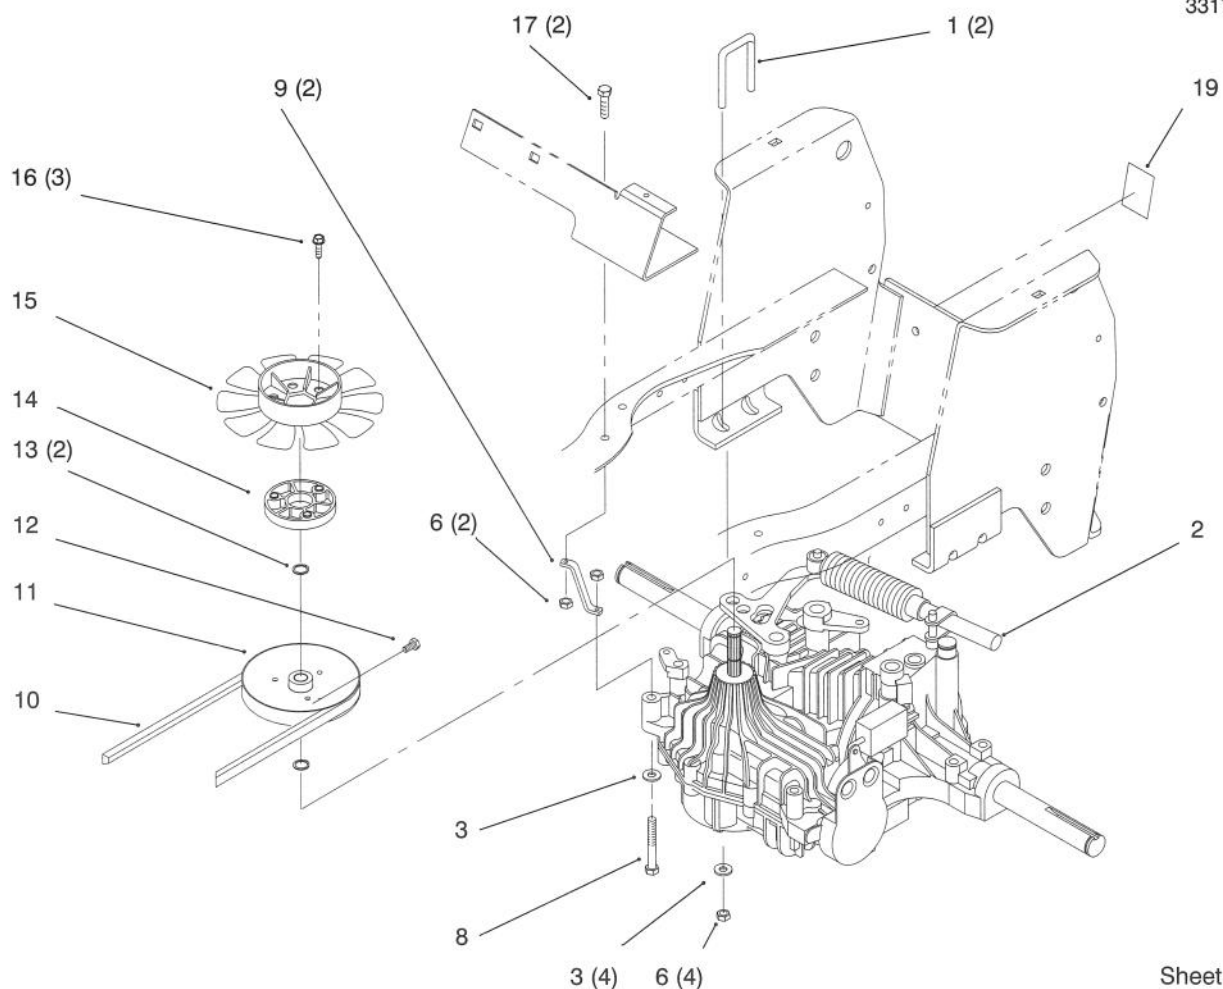

Sheet No.: 15

Hydro Transaxle


Ref. No.	Part No.	Qty.	Description
1	92-6769	2	U-Bolt
2	92-6762	1	Transaxle-Tuff Torq K61
3	3256-23	5	Washer-Flat
6	3296-29	6	Nut-Lock
8	322-12	1	Screw HH
9	93-0525-03	1	Strap-Torque
10	92-6718	1	Belt-Hydro
11	92-6686	1	Pulley
12	3245-32	1	Screw-Set
13	936118	2	Snap Ring
14	92-6943	1	Spacer-Fan
15	92-6742	1	Fan
16	49-2040	3	Screw-HH
17	322-6	1	Screw-HH
19	92-6726	1	Decal-Hydro Valve

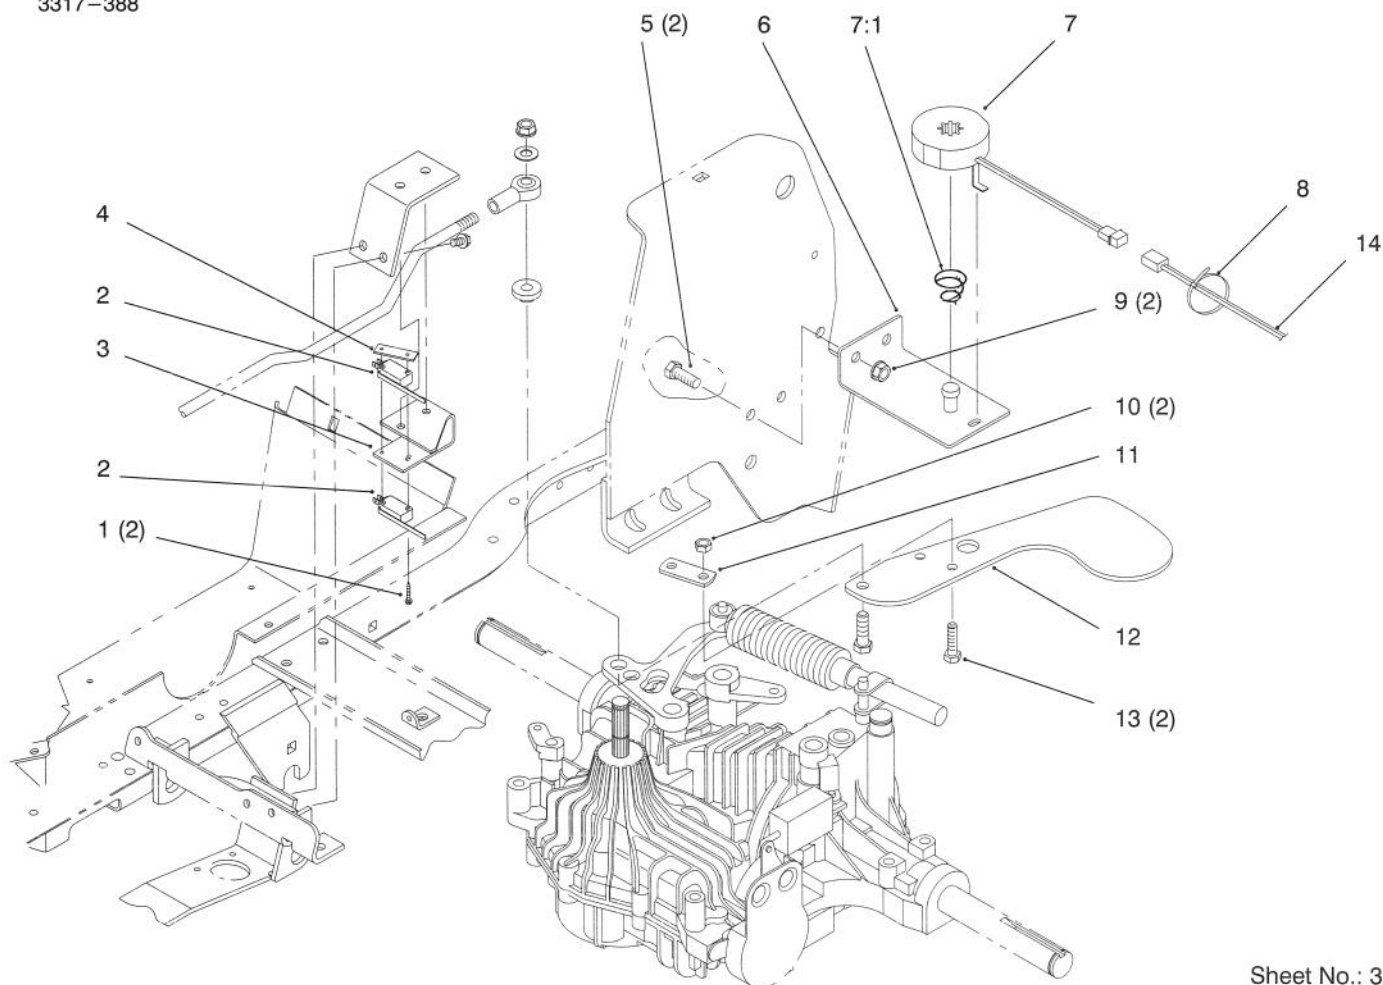

Sheet No.: 32

Cruise Control

Ref. No.	Part No.	Qty.	Description
1	93-0539	2	Screw-PPH
2	88-9930	2	Switch-Micro
3	93-0520-03	1	Bracket-Micro Sw
4	3290-354	1	Nut-Speed
5	323-6	2	Screw-HH
6	93-0512-03	1	Cruise Bracket
7	93-4366	1	Magnet Assembly (INCL 7:1)
7:1	93-6601	1	Spring-Concial
8	614249	1	Tie Strap
9	3296-39	2	Nut-Lock
10	3296-29	2	Nut-Lock
11	93-0515	1	Clamp-Cruise
12	93-0511	1	Arm-Cruise
13	322-16	2	Screw-HH
14	93-4364	1	Harness-Wire

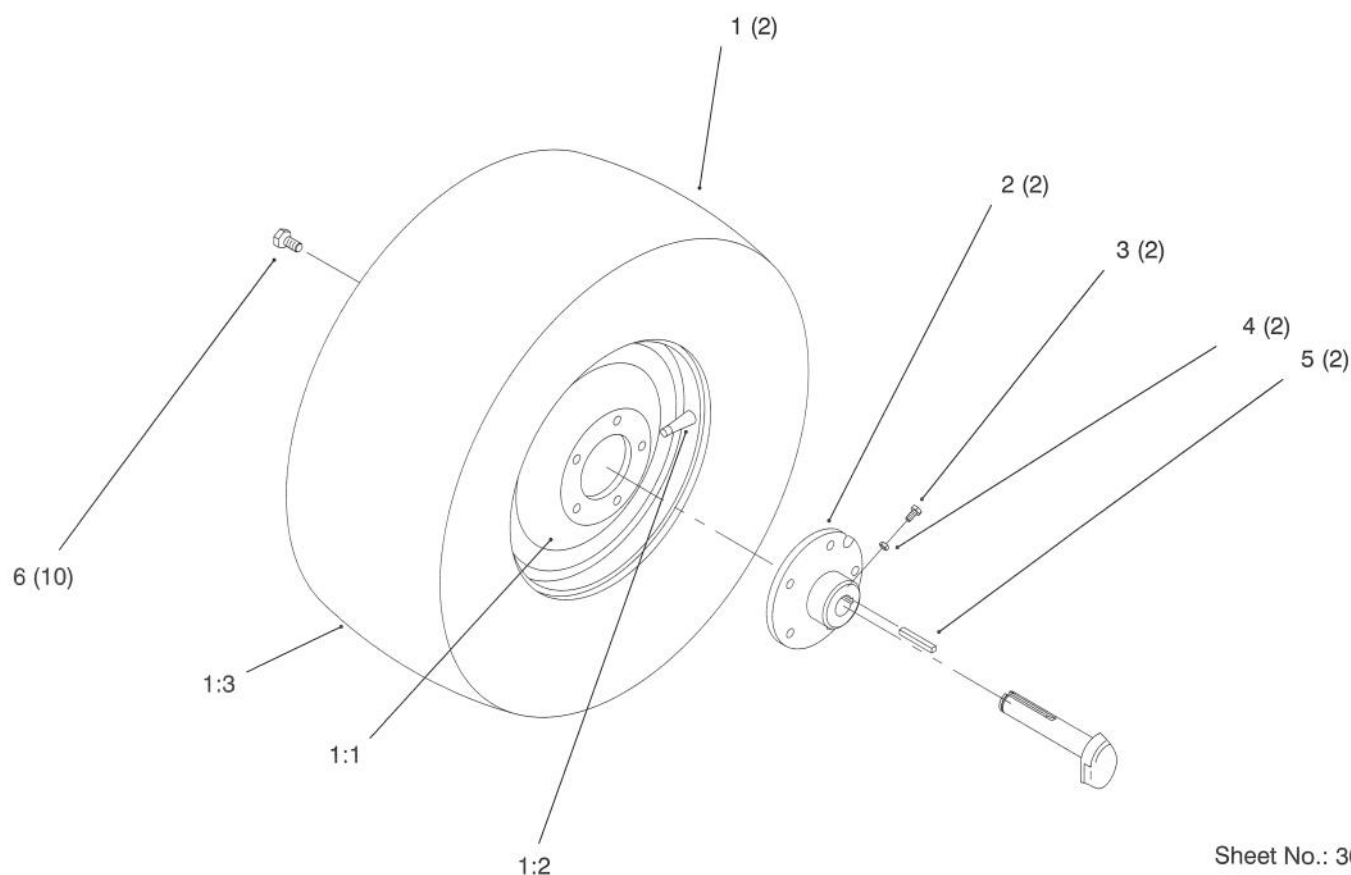


Sheet No.: 30

Rear Wheel

Ref. No.	Part No.	Qty.	Description
☆1		2	Wheel & Tire ASM Rear
1:1	78-1221	2	Wheel
1:2	5108	2	Valve-Tire Tubeless
1:3	116971	2	Tire
2	93-3659-03	2	Hub-Wheel
3	3243-5	2	Screw-Set
4	3218-3	2	Nut-HJ
5	5-1336	2	Key
6	83-2720	10	Bolt-Lug


☆ Not serviced

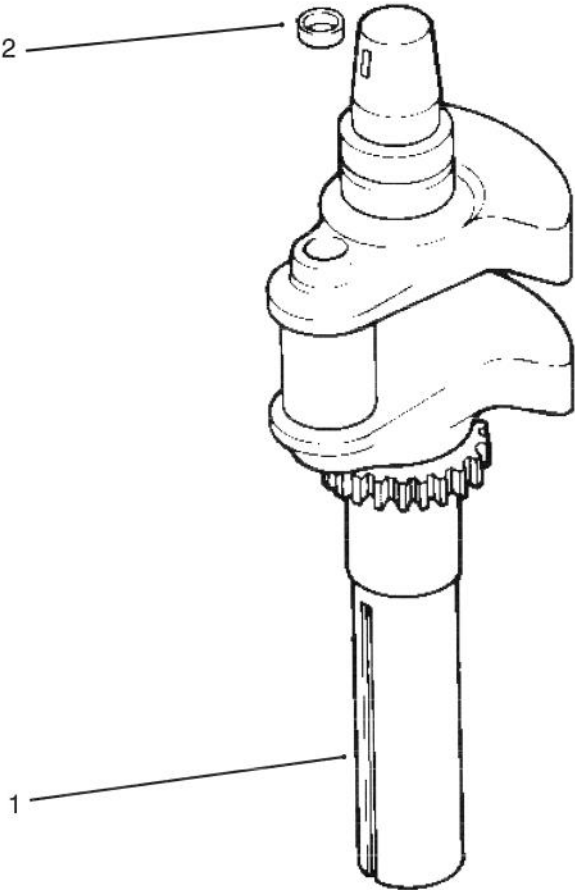

Sheet No.: 201
C-1959

Crankshaft

Ref. No.	Part No.	Qty.	Description
1	24 014 42	1	Crankshaft
2	52 139 09	1	Plug-Cup

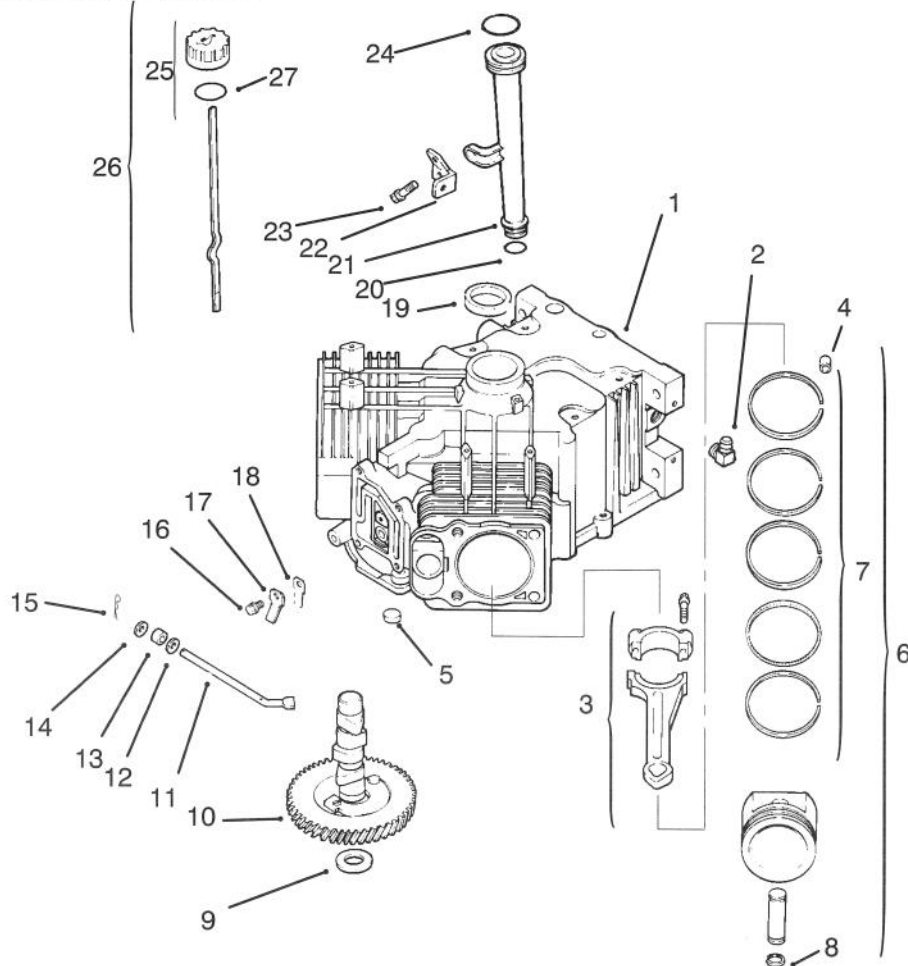


Sheet No.: 202
C-1960

Crankcase

Ref. No.	Part No.	Qty.	Description
1	24 522 09	1	Short Block
2	25 155 02	1	Connector-90 DEG
3	24 067 01	2	Connecting Rod STD
3	24 067 02	2	Connecting Rod .25
†4	12 380 03	6	Dowel-Locating
5	52 139 09	1	Plug-Cup
6	24 874 01	2	Piston ASM STD INC 4/7/8
6	24 874 02	2	Piston ASM .25 INC 4/7/8
6	24 874 03	2	Piston ASM .50 INC 4/7/8
†7	24 108 01	2	Ring Set STD INC 4/8
7	24 108 02	2	Ring Set .25 INC 4/8
7	24 108 03	2	Ring Set .50 INC 4/8
†8	24 018 01	4	Retainer-Piston Pin
9	12 422 07	1	Shim-Camshaft A/R
9	12 422 08	1	Shim-Camshaft A/R
9	12 422 09	1	Shim-Camshaft A/R
9	12 422 10	1	Shim-Camshaft A/R
9	12 422 11	1	Shim-Camshaft A/R
9	12 422 12	1	Shim-Camshaft A/R
9	12 422 13	1	Shim-Camshaft A/R
10	24 012 05	1	Camshaft
11	24 144 01	1	Shaft-Governor Cross
12	X-25-63	1	Washer-Flat
13	12 032 01	1	Seal-Governor Shaft
14	X-25-102	1	Washer-Flat
15	12 380 04	1	Pin-Governor Hitch

† Included in a service kit or in an assembly

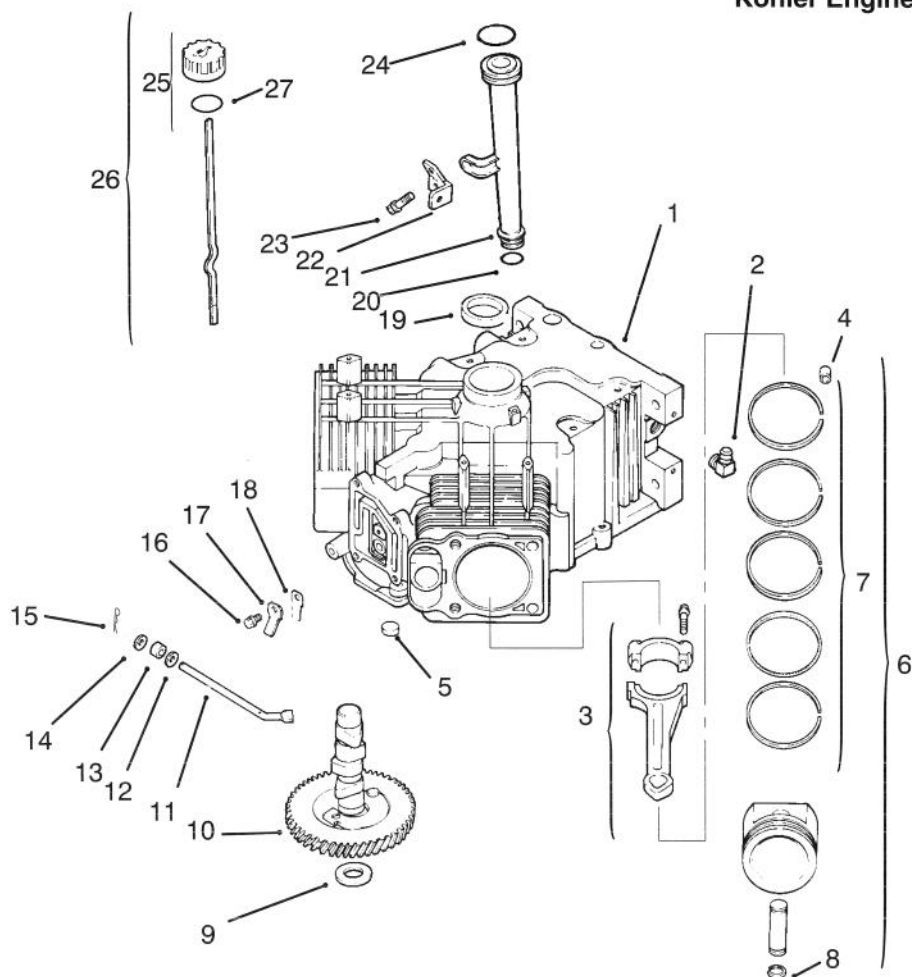


Sheet No.: 202
C-1960

Crankcase

Ref. No.	Part No.	Qty.	Description
16	M-0545010	2	Screw M5x0.8x10
17	24 018 04	2	Retainer-Reed
18	24 402 01	2	Reed-Breather
19	24 032 01	1	Seal-Oil
20	12 153 01	1	O Ring-Lower Fill Tube
21	12 123 04	1	Tube-Oil Fill
22	24 126 19	1	Bracket-Oil Fill Tube
23	M-0549016	1	Screw M5x0.8x16
24	12 153 02	1	O Ring-Upper Fill Tube
25	24 038 04	1	Dipstick INC 26-27
†26	25 755 13	1	Kit-Oil Cap INC 3
†27	12 153 03	1	O Ring-Fill Cap
*	24 755 03	1	Gasket Set

† Included in a service kit or in an assembly

* Not illustrated

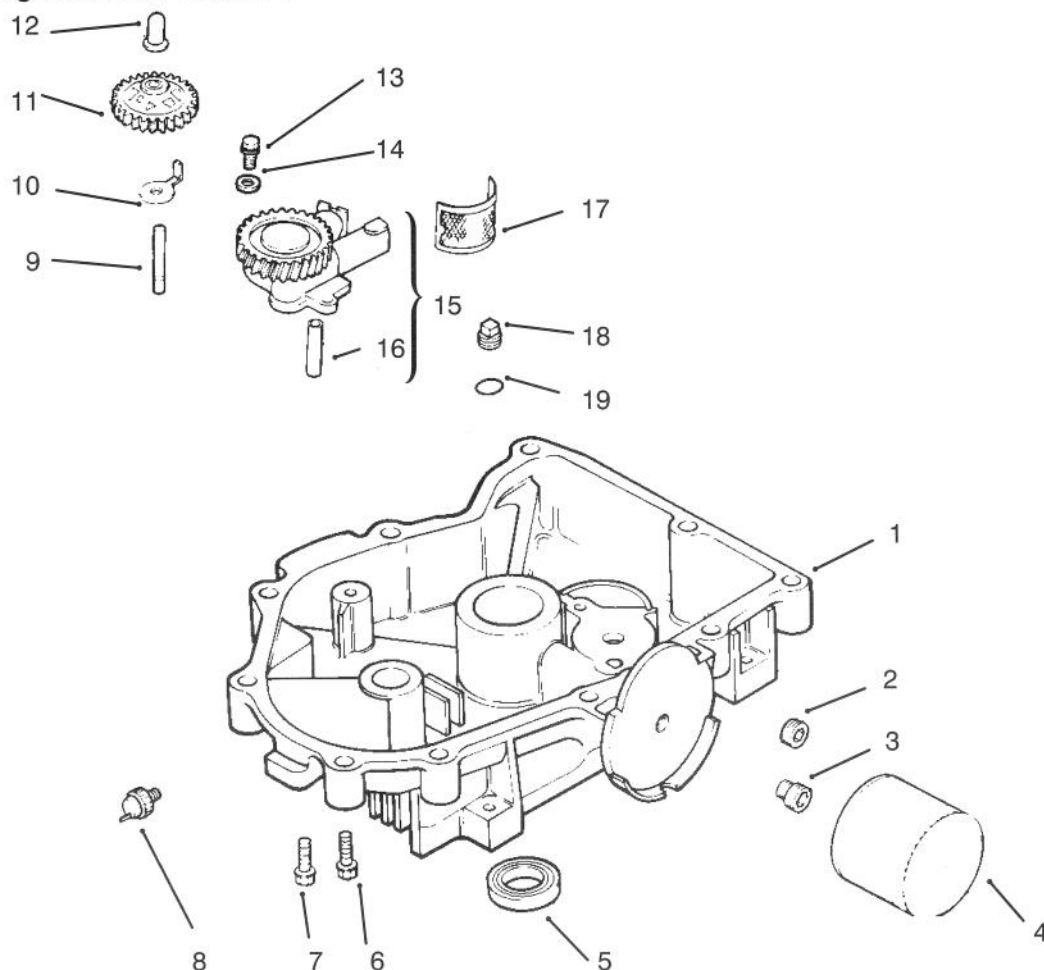


Sheet No.: 203
C-1961

Oil Pan / Lubrication

Ref. No.	Part No.	Qty.	Description
1	24 199 01	1	Oil Pan
2	X-75-32	1	Plug-HS 3/8 NPTF
3	24 136 01	1	Nipple-Oil Filter
4	12 050 01	1	Filter-Oil
5	52 032 08	1	Seal-Oil
6	24 086 17	1	Screw M8x1.25x45
7	24 086 16	9	Screw M8x1.25x45
8	52 099 06	1	Switch-Oil Pressure
9	12 144 02	1	Shaft-Governor Gear
10	52 448 02	1	Tab-Locking
11	24 043 11	1	Governor Gear ASM
12	12 380 01	1	Pin-Governor Regulating
13	M-0645025	2	Screw-Valve Cover
14	Sm-0631005	2	Washer-Governor
15	24 393 05	1	Oil Pump ASM INC 16
†16	24 123 05	1	Tube-Oil Pickup
17	12 162 02	1	Screen-Oil Pickup
18	X-75-10	1	Plug-SH 3/8 NPTF
19	24 153 08	1	O Ring
*	25 113 05	1	Decal-Oil Sentry

† Included in a service kit or in an assembly

* Not illustrated

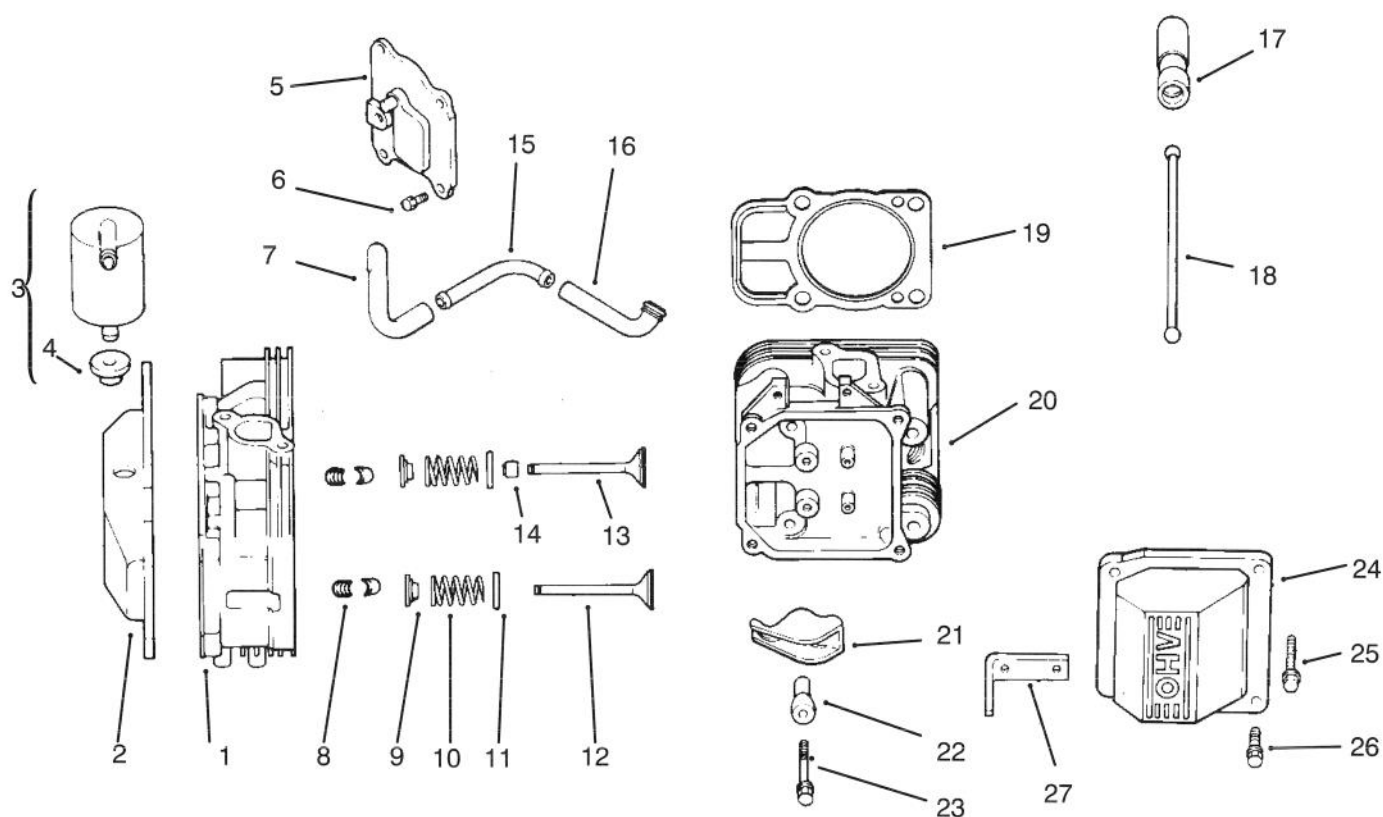


Sheet No.: 204
C-1962

Head / Valve / Breather

Ref. No.	Part No.	Qty.	Description
1	24 318 11	1	Head ASM-#1 Cylinder
2	24 096 16	1	Cover-Rocker
3	24 755 20	1	Kit-Breather INC 4
†4	25 313 02	1	Grommet-Rubber
5	24 096 15	1	Cover-Breather
6	Sm-0645020	4	Screw M6x1.0x20
7	24 326 05	1	Hose-Breather
8	12 755 03	4	Kit-Retainer
9	12 173 01	4	Cap-Valve Spring
10	24 089 02	4	Spring-Valve
11	52 018 01	4	Retainer-Spring
12	24 016 01	2	Valve-Exhaust
13	24 017 01	2	Valve-Intake
14	24 032 05	2	Seal-Valve Stem
15	24 294 02	1	Fitting
16	24 326 04	1	Hose-Breather
17	12 351 01	4	Lifter-Valve
18	24 411 02	4	Rod-Push
19	24 041 08	2	Gasket-Cylinder Head
20	24 318 12	1	Head ASM-#2 Cylinder
21	24 186 02	4	Arm-Rocker
22	24 194 01	4	Ball-Rocker Pivot
23	M-0640034	4	Screw M6x1.0x34
24	24 096 12	1	Cover-Rocker
25	12 086 16	8	Screw M10x1.5x91
26	M-0651030	8	Screw M6x1.0x30


† Included in a service kit or in an assembly

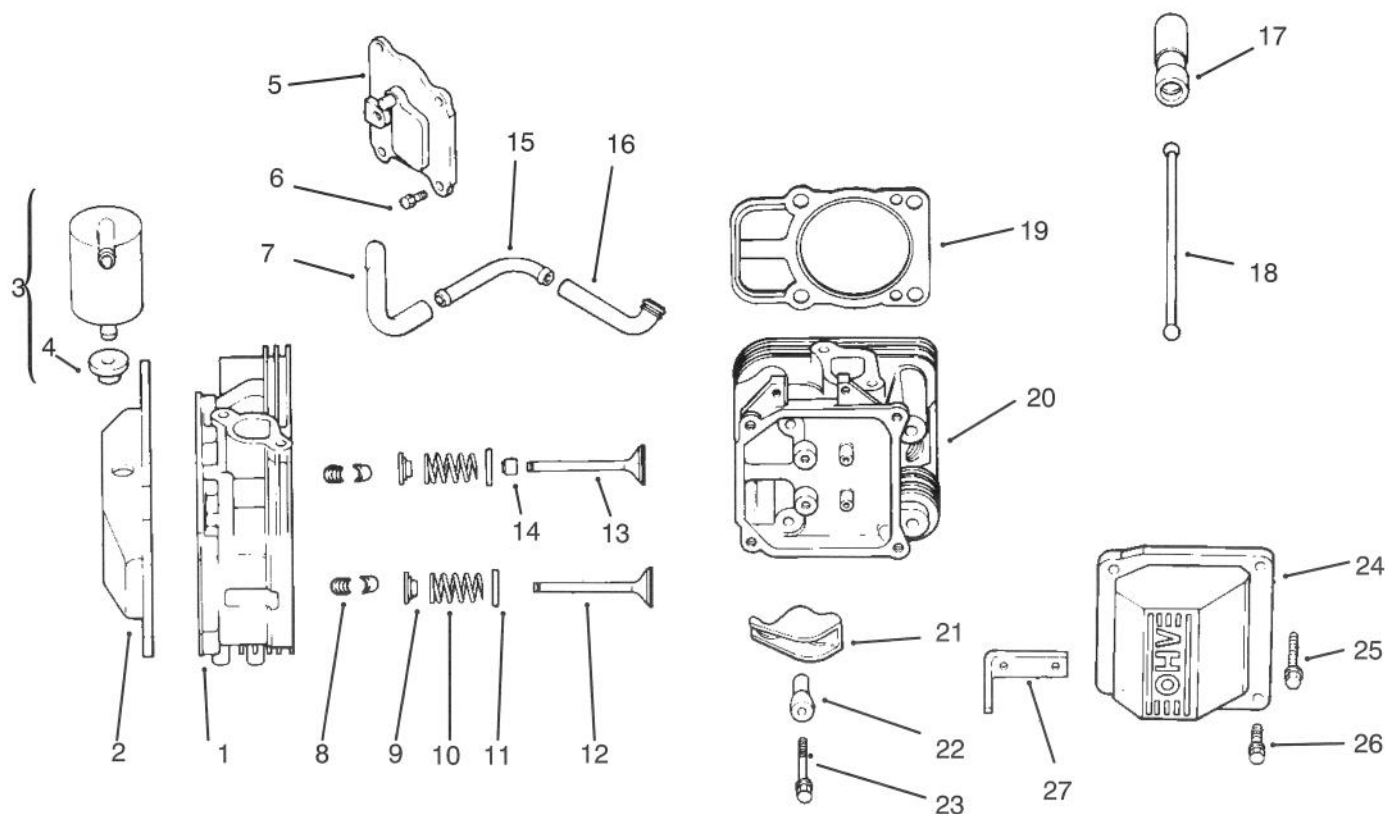

Sheet No.: 204
C-1962

Head / Valve / Breather

Ref. No.	Part No.	Qty.	Description
27	24 445 01	1	Strap-Lifting

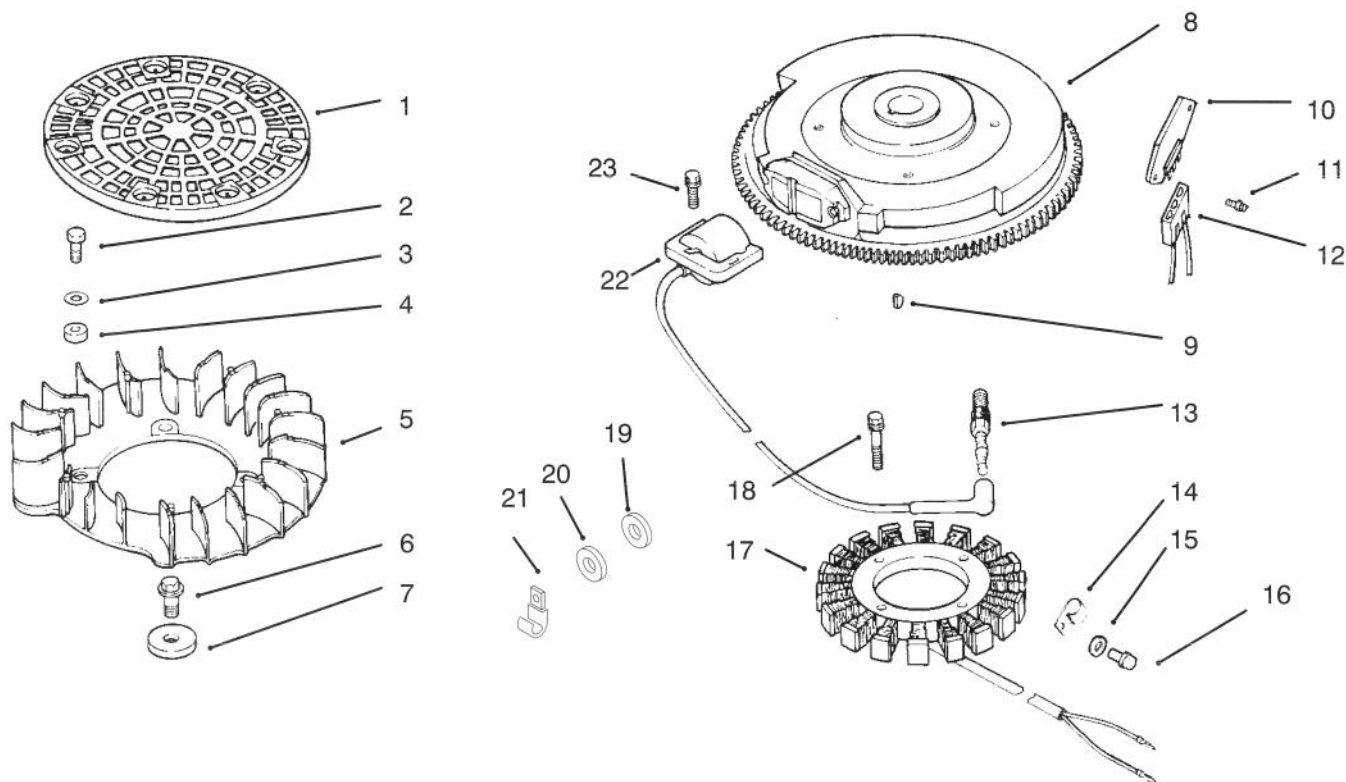


Sheet No.: 205
C-1963

Ignition / Electrical

Ref. No.	Part No.	Qty.	Description
1	24 162 17	1	Screen-Grass
2	M-0401025	4	Screw M4x0.7x24
3	X-25-92	4	Washer-Flat
4	24 112 04	1	Spacer-Fan
5	24 157 03	1	Fan
6	M-0639016	4	Screw M6x1.0x16
7	12 112 01	4	Spacer-Fan
8	24 025 04	1	Flywheel ASM
9	X-42-15	1	Key
10	25 403 03	1	Rectifier-Regulator
11	24 086 06	2	Screw-Phillips
12	236602	1	Connector-Regulator
13	12 132 02	2	Spark Plug
14	48 154 02	1	Clip-Stator Harness
15	12 468 03	1	Washer-Flywheel Screw
16	12 086 14	1	Screw-Flywheel Mounting
17	24 085 01	1	Stator-15 Amp
18	M-0548025	2	Screw M5x0.8x25
19	X-25-63	2	Washer-Flat
20	X-25-92	2	Washer-Flat
21	235173	1	Clip-Cable
22	24 584 01	1	Module-Ignition
23	M-0545020	4	Screw M5x0.8x20
*	24 113 18	1	Decal-Grass Screen
*	24 176 06	1	Harness-Wire
*	24 518 04	1	Lead-Green

* Not illustrated

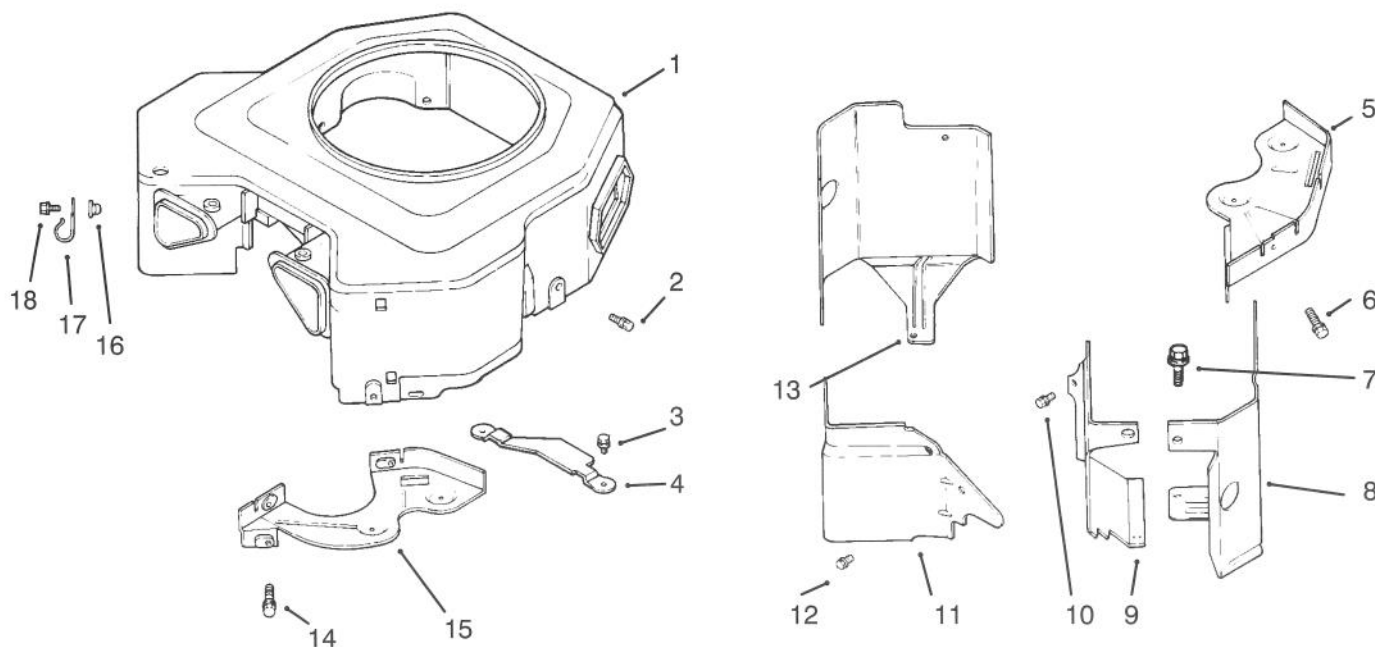


Sheet No.: 206
C-1964

Blower Housing & Baffles

Ref. No.	Part No.	Qty.	Description
1	24 027 20	1	Housing-Blower ASM
2	M-0549016	3	Screw M5x0.8x16
3	Sm-0645016	4	Screw M6x1.0x16
4	24 314 05	1	Guard-Flywheel
5	24 146 02	1	Plate-Backing #2 Side
6	M-0545020	2	Screw M5x0.8x20
7	M-0551016	1	Screw M5x0.8x14
8	24 063 20	1	Baffle-Cylinder #2 Side
9	24 063 15	1	Baffle-Valley #1 Side
10	M-0549010	2	Screw M5x0.8x10
11	24 063 14	1	Baffle-Valley #2 Side
12	M-0549016	2	Screw M5x0.8x16
13	24 063 06	1	Baffle-Cylinder #1 Side
14	M-0649016	2	Screw M6x1.0x16
15	24 146 14	1	Plate-Backing #1 Side
16	24 100 01	4	Nut-Plastic
17	47 154 01	1	Clip-Cable
18	24 086 12	1	Screw-Cable Clip
*	24 100 02	2	Nut INC W/Blower Hsng
*	24 113 10	1	Decal-Horsepower
*	25 139 16	1	Plug INC W/Blower Hsng

* Not illustrated

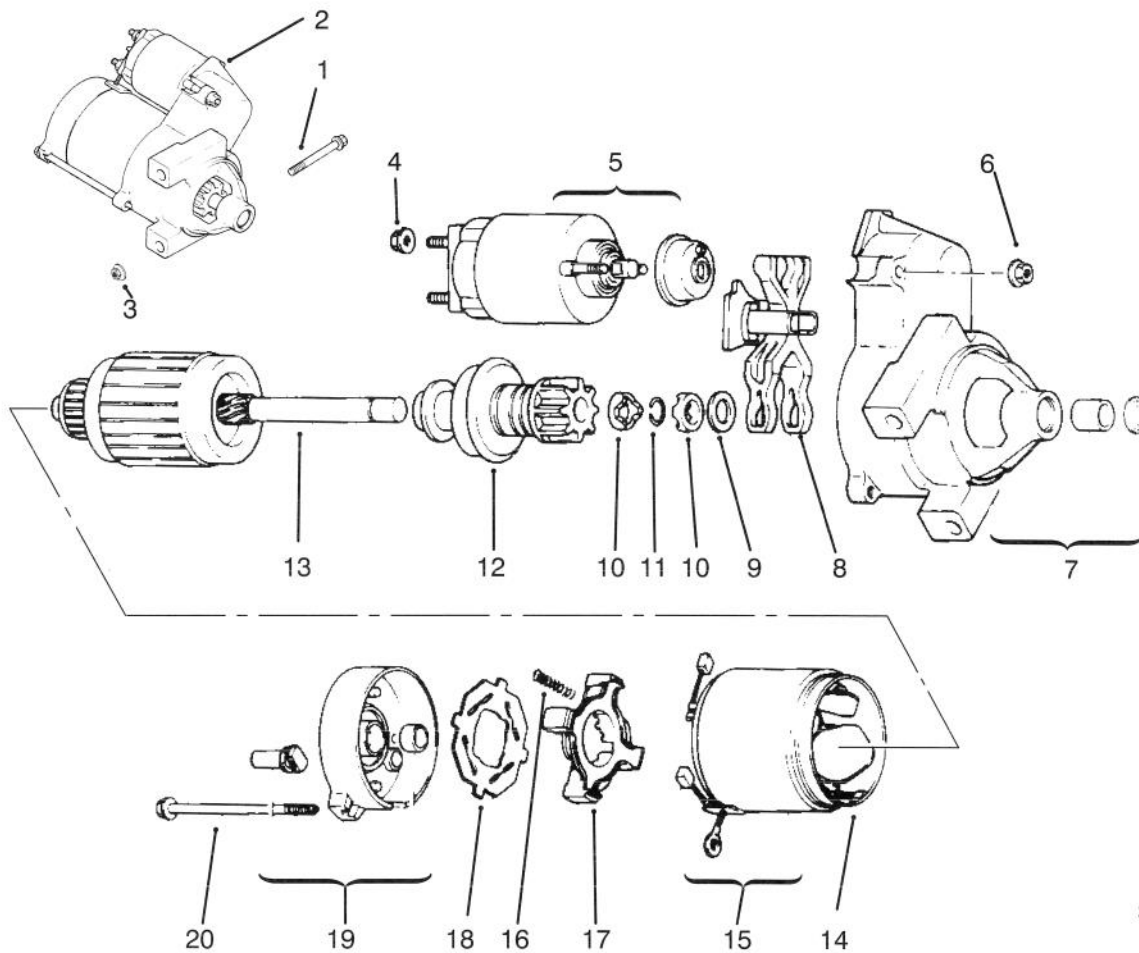


Sheet No.: 207
C-1965

Starting System

Ref. No.	Part No.	Qty.	Description
1	M-0839080	2	Screw M8x1.25x80
2	12 098 03	1	Starter INC 4-20
3	M-0841080	1	Nut M8x1.25
†4	52 100 09	1	Nut-Starter
†5	52 435 02	1	Solenoid
†6	52 100 10	2	Nut Starter
†7	12 081 02	1	Cap-Drive End
†8	12 090 10	1	Lever Starter Drive
†9	42 468 14	1	Washer-Thrust
†10	52 100 08	2	Nut-Stop Collar
†11	52 141 03	1	Ring-Retainer
†12	12 239 01	1	Drive-Pinion
†13	12 170 03	1	Armature-Starter
†14	12 471 01	1	Frame
†15	52 221 01	1	Kit-Brush INC 16
†16	52 089 09	4	Spring-Brush
†17	52 323 03	1	Holder-Brush
†18	52 168 01	1	Insulator
†19	12 301 01	1	Cap-Commutator End
†20	52 211 05	2	Bolt

† Included in a service kit or in an assembly

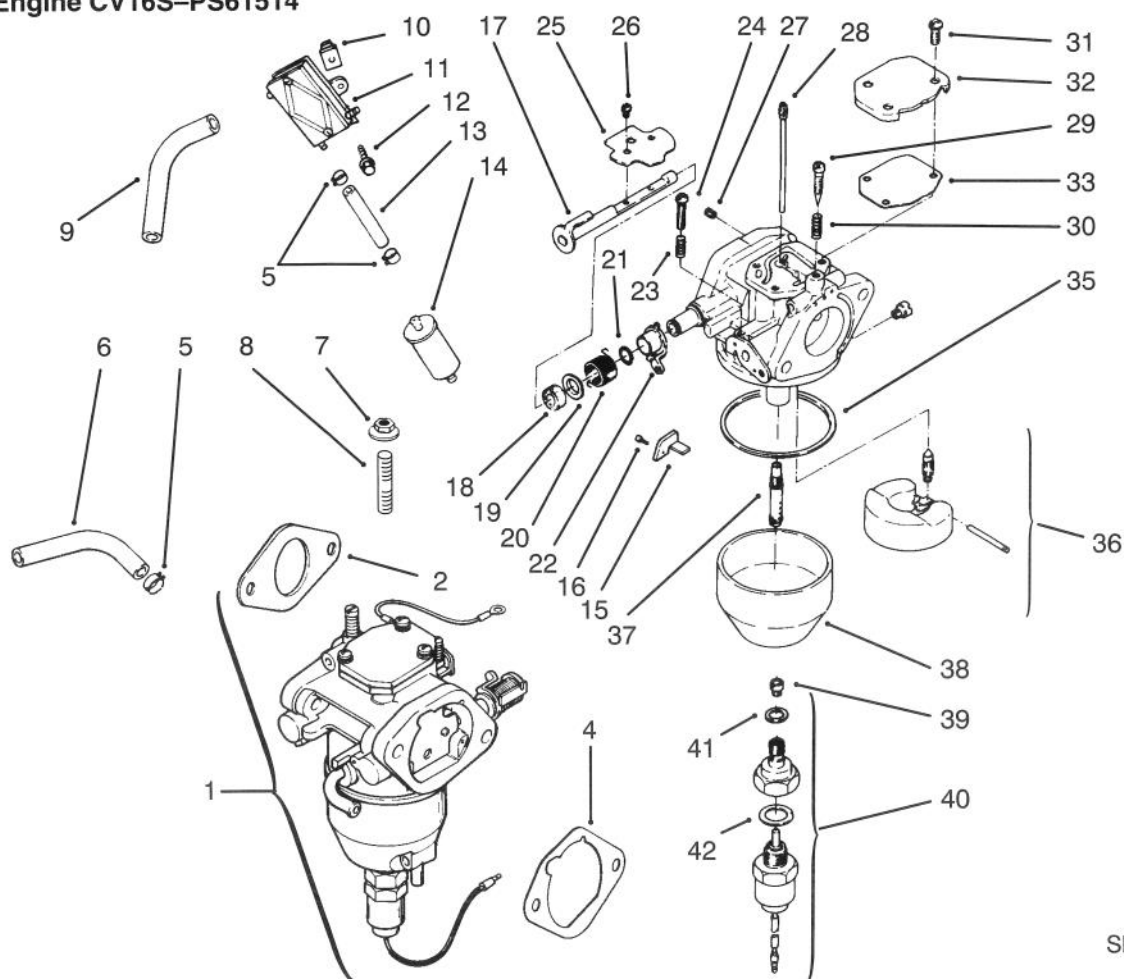


Sheet No.: 208
C-1966

Fuel System

Ref. No.	Part No.	Qty.	Description
1	24 853 24	1	Kit-Carb INC 2/4/15-42
†2	24 041 15	1	Gasket-Carburetor
†4	24 041 14	1	Gasket-A/C Base
5	X-426-9	6	Clamp-Hose
6	24 353 03	1	Line-Fuel 10 1/2"
7	Sm-0641060	2	Nut M6x1.0
8	M-0629095	2	Stud M6x1.0x95
9	52 353 22	1	Line-Fuel 12"
10	24 100 01	2	Nut-Plastic
11	24 393 04	1	Pump-Fuel
12	24 086 12	2	Screw-Cable Clip
13	25 353 15	1	Line-Fuel 3 1/2"
14	25 050 02	1	Filter-Fuel
†15	24 126 29	1	Bracket-Throttle Stop
†16	M-0259006	1	Screw M2.5x45x5.5
†17	24 144 15	1	Shaft-Choke
†18	24 468 05	1	Washer
†19	24 241 01	1	Collar-Choke
†20	24 089 22	1	Spring-Choke Return
†21	24 141 04	1	Ring-Choke Lever
†22	24 090 10	1	Lever-Choke
†23	24 089 24	1	Spring-Throttle Screw
†24	24 086 19	1	Screw-Throttle Adjust
†25	24 462 02	1	Valve-Choke
†26	24 086 20	4	Screw-Throttle Shaft
†27	24 337 27	1	Jet-Air Bleed

† Included in a service kit or in an assembly

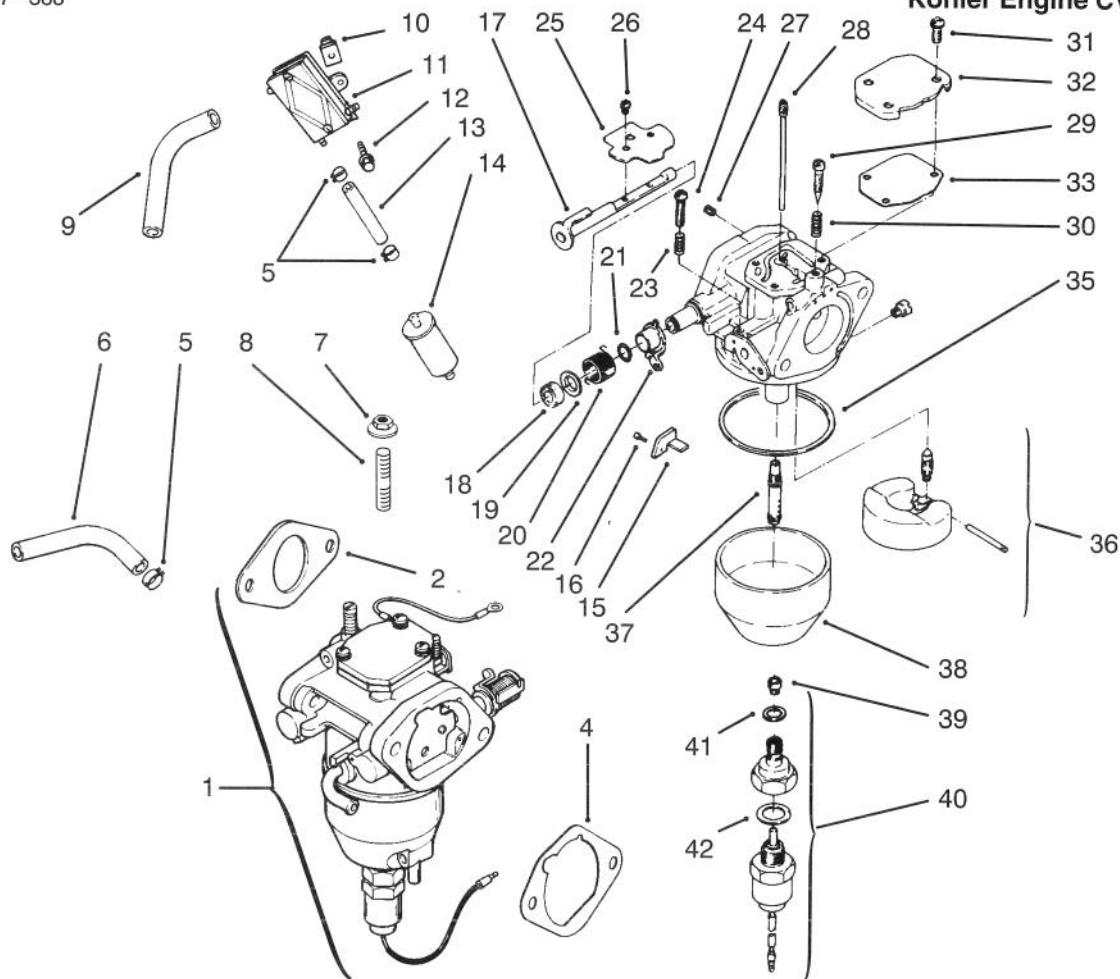


Sheet No.: 208
C-1966

Fuel System

Ref. No.	Part No.	Qty.	Description
†28	24 337 11	1	Jet—Slow
†29	24 086 22	1	Screw—Idle Adjust
†30	24 089 23	1	Spring—Idle Adjust Screw
†31	24 086 21	3	Screw
†32	24 096 13	1	Cover—Passage
†33	24 041 18	1	Gasket—Passage Cover
†35	24 041 19	1	Gasket—Float Chamber
†36	24 757 05	1	Kit—Float Repair
†37	24 369 01	1	Nozzle—Main
†38	24 234 01	1	Chamber—Float
†39	24 337 20	1	Jet—Main
†40	24 755 15	1	Kit—Solenoid INC 41—42
†41	24 041 21	1	Gasket—Chamber Screw
†42	24 041 20	1	Gasket—Solenoid
*	24 041 15	1	Gasket—Carburetor
*	24 063 22	1	Baffle—Carburetor
*	24 755 25	1	Kit—Hi Alt 1500—3000 M
*	24 755 26	1	Kit—Hi Alt Over 3000 M
*	24 757 06	1	Kit—Carburetor Repair

† Included in a service kit or in an assembly


* Not illustrated

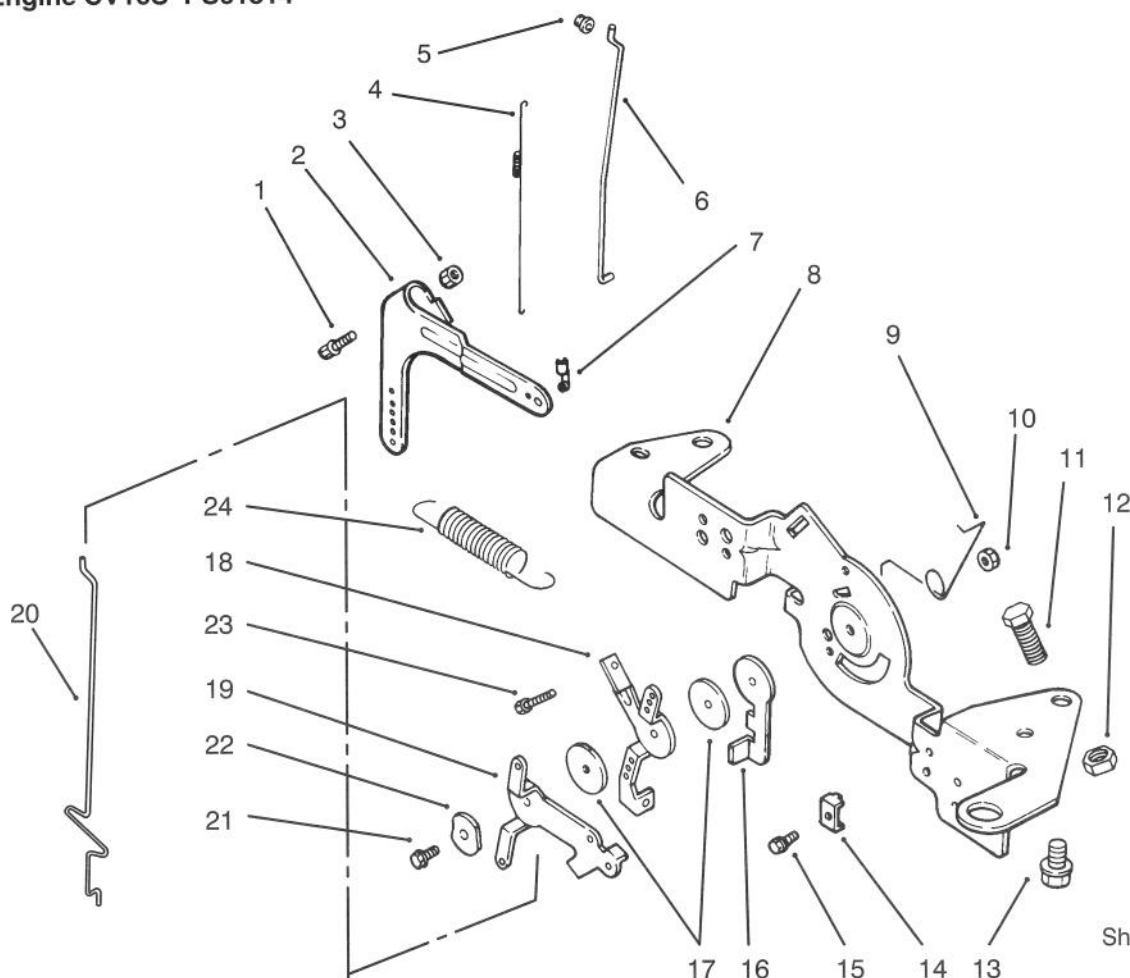

Sheet No.: 209
C-1967

Engine Controls

Ref. No.	Part No.	Qty.	Description
1	Sm-0642025	1	Screw M6x1.0x25
2	24 090 11	1	Lever-Governor
3	Sm-0641060	1	Nut M6x1.0
4	24 089 01	1	Spring-Linkage
5	25 158 08	1	Bushing-Linkage
6	24 079 04	1	Linkage-Throttle
7	25 158 11	1	Bushing-Linkage
8	24 126 13	1	Bracket-Control
9	24 089 03	1	Spring-Choke Return
10	M-0547050	1	Nut M5x0.8
11	Sm-0545016	1	Screw M5x0.8x16
12	M-0446030	1	Nut-Hex M4x0.7
13	Sm-0645016	4	Screw M6x1.0x16
14	12 237 01	2	Clamp-Cable
15	Sm-0545016	2	Screw M5x0.8x16
16	24 090 07	1	Lever-Throttle Actuator
17	24 468 01	3	Washer
18	24 090 03	1	Lever-Throttle Control
19	24 090 05	1	Lever-Choke
20	24 079 05	1	Linkage-Choke
21	M-0545020	1	Screw M5x0.8x20
22	41 468 03	1	Washer-Wave
23	M-0401025	1	Screw M4x0.7x24
24	24 089 18	1	Spring-Governor

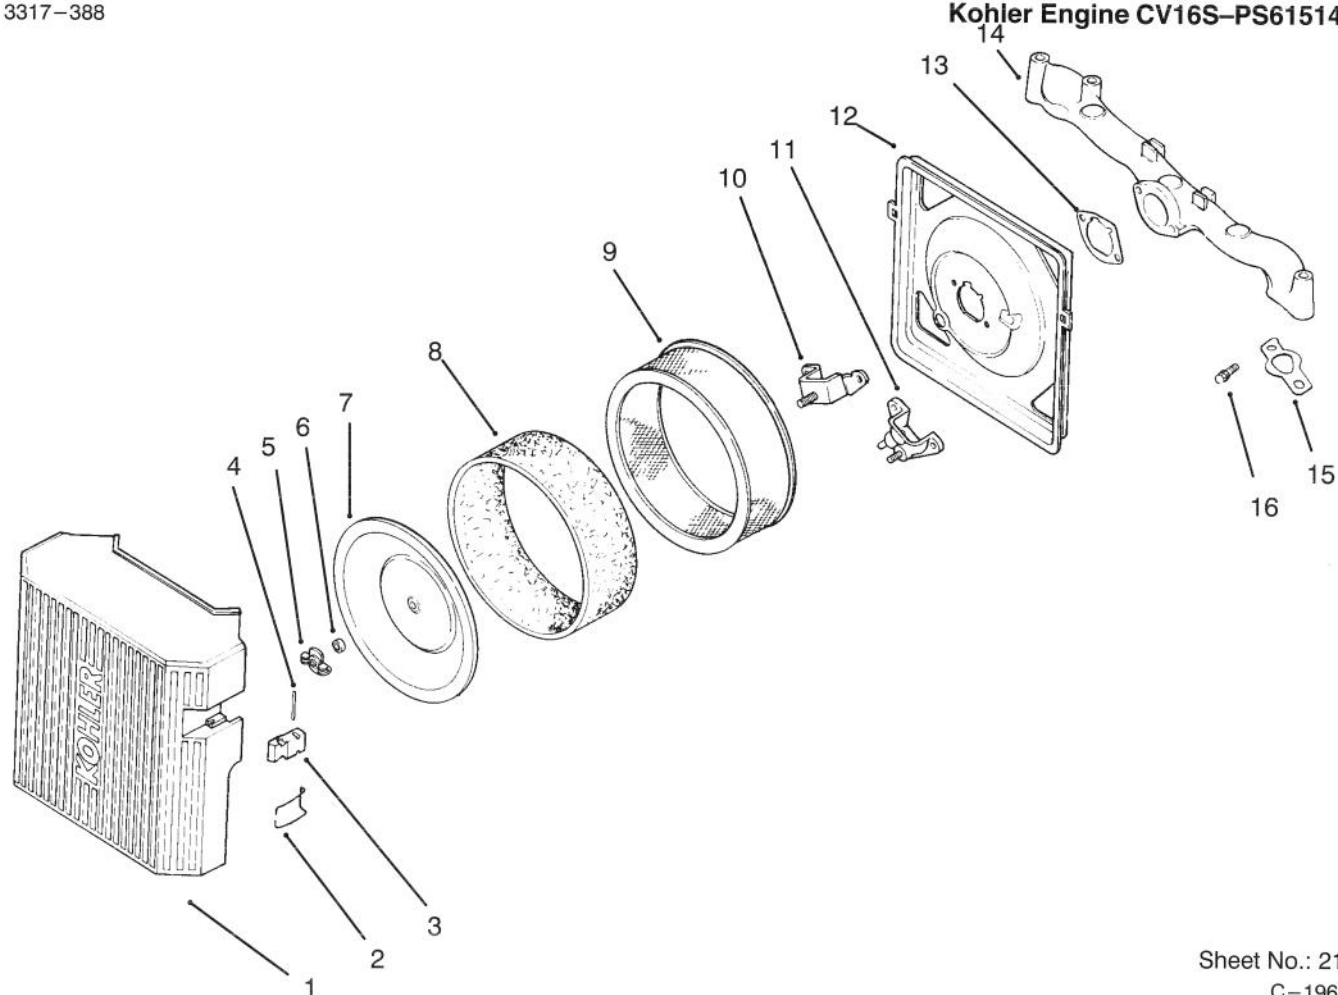


Sheet No.: 210
C-1968

Air Intake / Filtration

Ref. No.	Part No.	Qty.	Description
1	24 743 01	1	Kit-A/C Cover INC 2-4
†2	24 089 04	2	Spring-Latch
†3	24 344 01	2	Latch-Lever
†4	24 380 03	2	Pin-Latch Lever
5	12 100 01	1	Nut-Wing
6	24 032 03	1	Seal-Air Intake
7	24 096 01	1	Cover-Inner Air Cleaner
8	24 083 02	1	Element-Precleaner
9	47 083 03	1	Element-Air Cleaner
10	24 109 01	1	Cup-Fuel Spitback
11	24 041 13	1	Gasket-Fuel Spitback Cup
12	24 094 02	1	Base-Air Cleaner
13	24 041 14	1	Gasket-A/C Base
14	24 164 06	1	Manifold-Intake
15	24 041 01	2	Gasket-Intake Manifold
16	M-0639055	4	Screw M6x1.0x18


† Included in a service kit or in an assembly

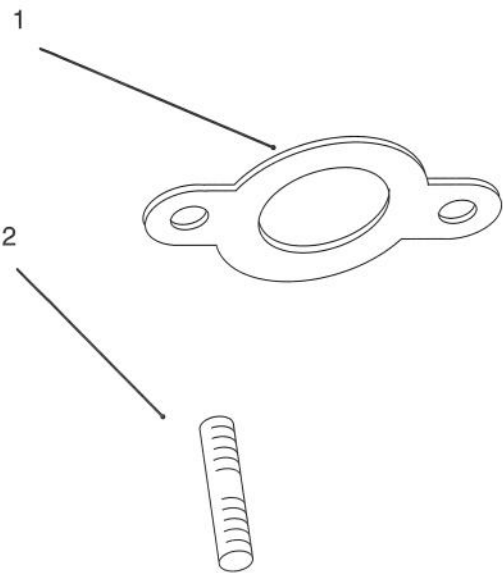

Sheet No.: 211
C-1969

Exhaust

Ref. No.	Part No.	Qty.	Description
1	24 041 02	2	Gasket-Exhaust
2	M-0829033	4	Stud M8x1.25x20

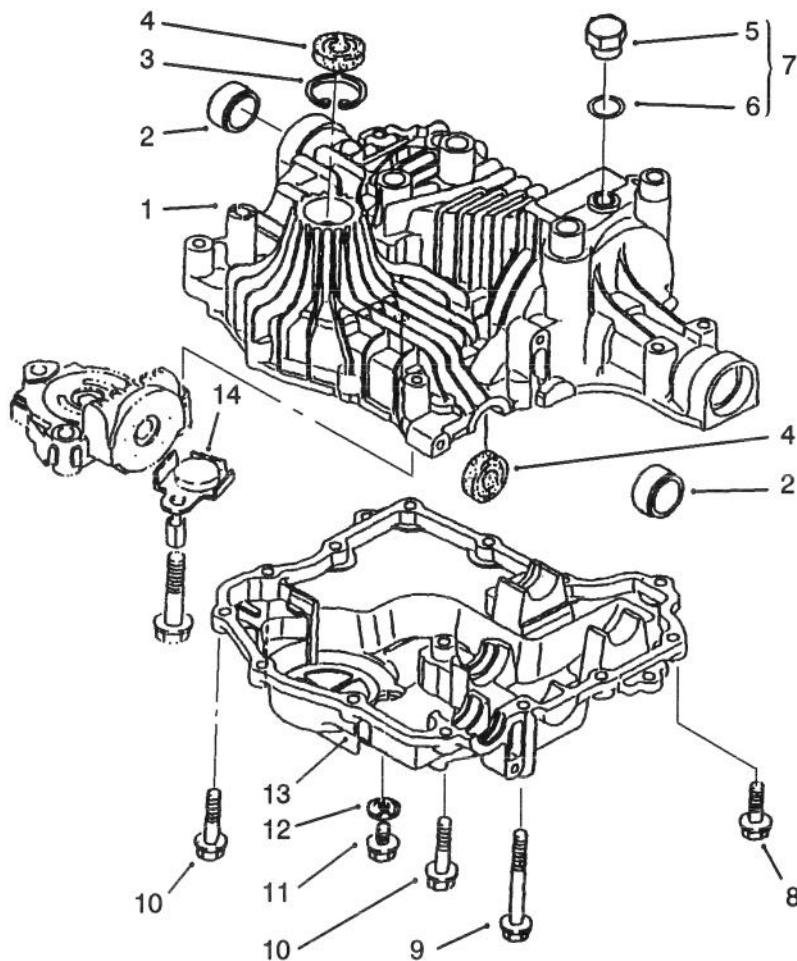


Sheet No.: 401
c-1860

Transaxle Case

Ref. No.	Part No.	Qty.	Description
1	93-0351	1	Upper Case ASM INC 2-6
†2		2	Bushing
†3	93-0360	1	Ring
†4	93-0361	2	Seal
†5		1	Plug
†6		1	Packing
7	93-0356	1	Plug/Packing INC 5-6
8	93-0363	11	Screw-TAP
9	93-0354	1	Bolt
10	93-0364	2	Screw-TAP
11	93-0362	1	Bolt
13	93-0353	1	Case-Lower
14	93-0355	1	Magnet

† Included in a service kit or in an assembly

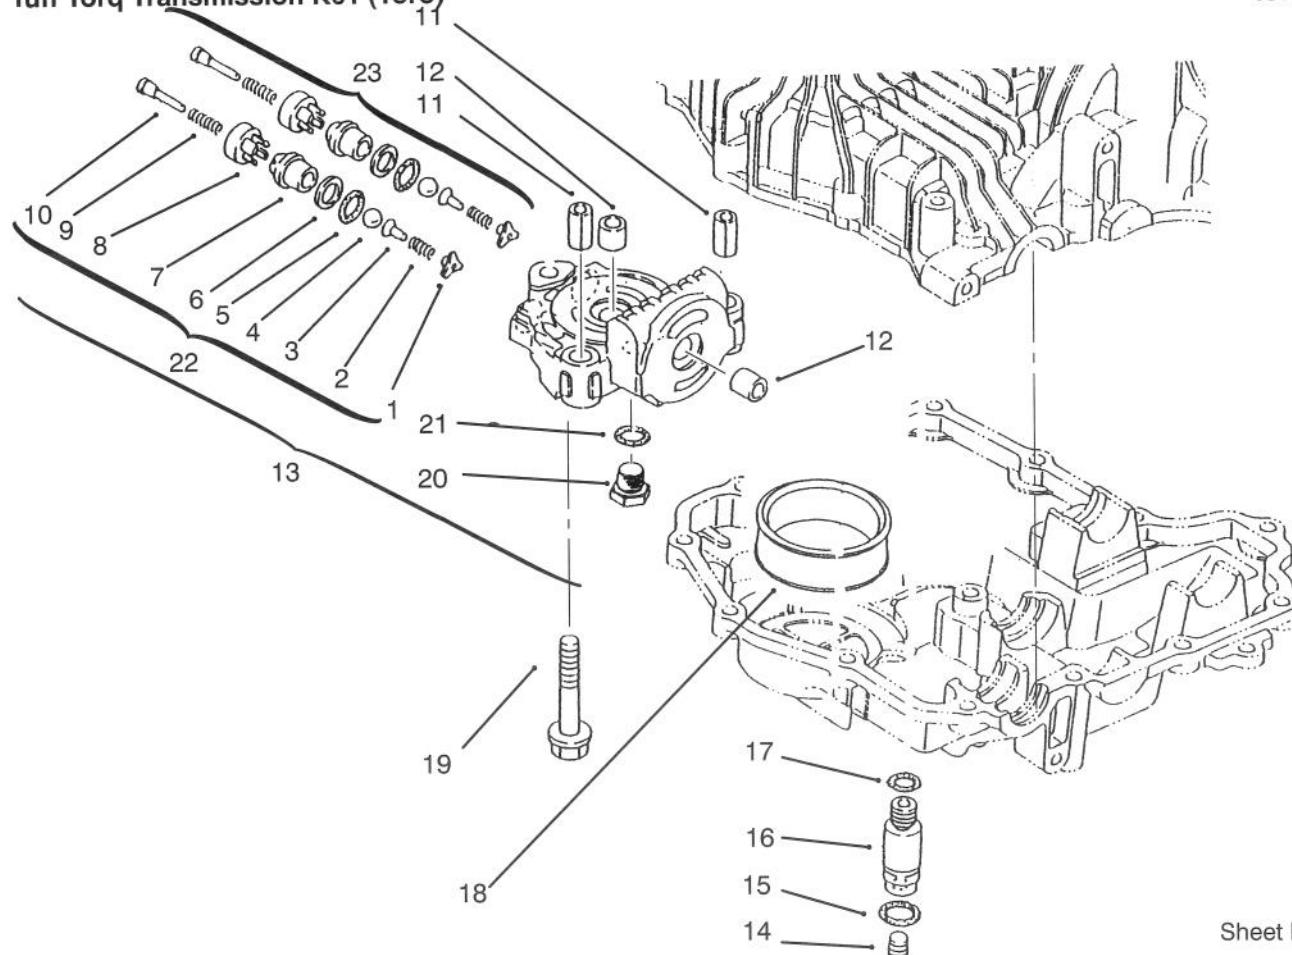


Sheet No.: 402

c-1877

Center Case

Ref. No.	Part No.	Qty.	Description
†1	93-0461	2	Holder-Bypass
†2		2	Spring
†3		2	Holder-Ball
†4		1	Ball
†5	93-0465	2	Packing
†6	93-0466	2	Ring-Back Up
†7		1	Sleeve A1
†8		2	Valve B
†9		2	Spring
†10		2	Pin-Push
†11	93-0471	2	Pin-Knock
†12	93-0472	2	Bushing
13	93-0484	1	Case INC 11-12 & 20-23
14	93-0474	1	Plug
15	93-0475	1	Packing
16	93-0476	1	Connector
17	93-0481	1	Packing
18	93-0478	1	Filter
19	93-0479	3	Bolt
20	93-0480	1	Plug
21	93-0481	1	Packing
22	93-0482	1	Valve ASM A1 INC 1-10
23	93-0483	1	Valve ASM A2

† Included in a service kit or in an assembly

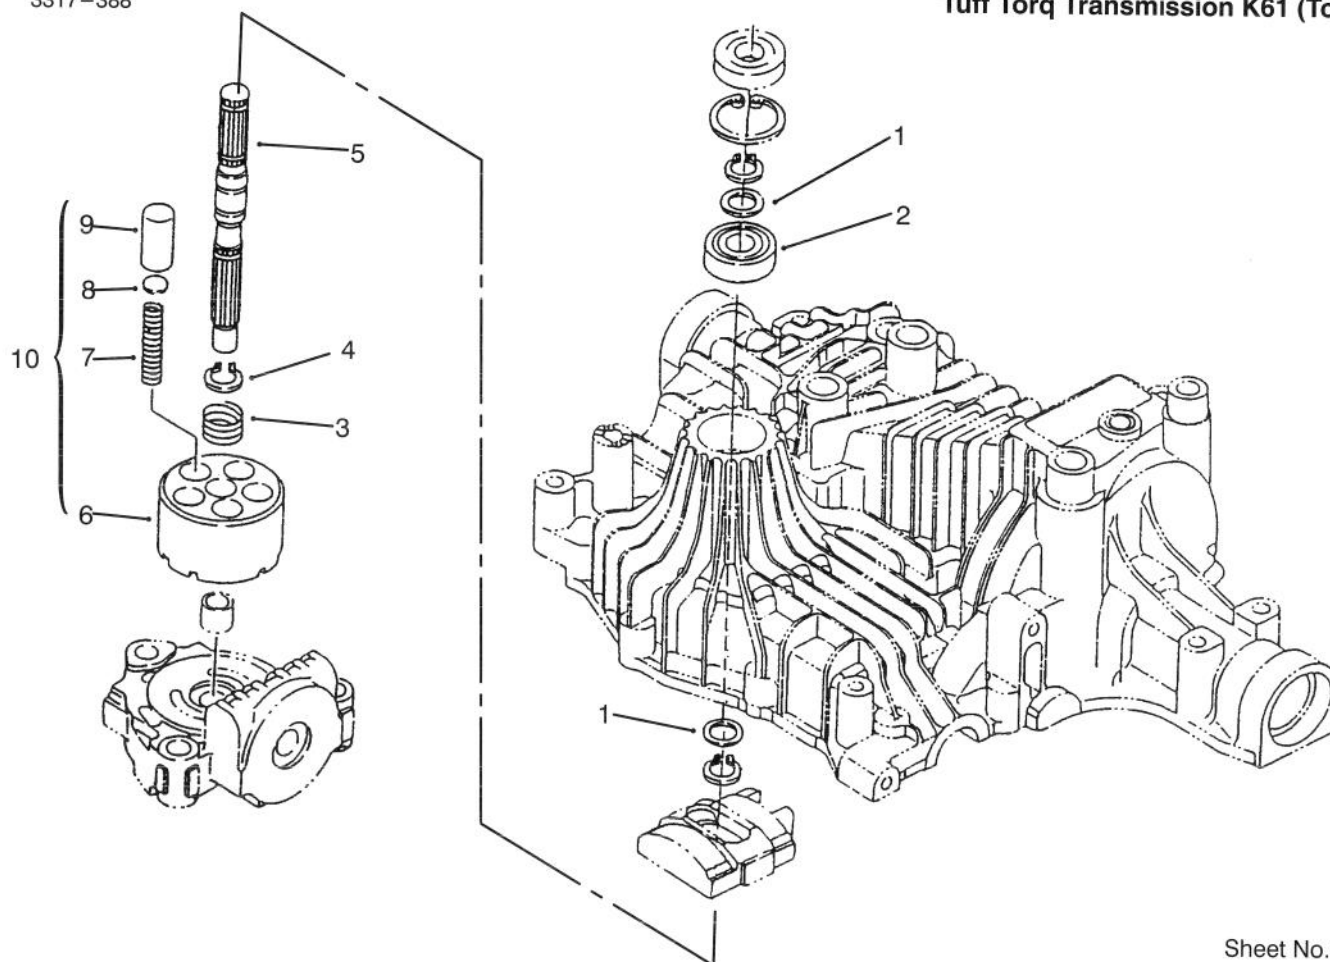


Sheet No.: 403
C-1861

Pump Shaft

Ref. No.	Part No.	Qty.	Description
1	93-0371	2	Washer
2	93-0374	1	Bearing-Ball
3	93-0370	1	Spring
4	93-0373	3	Ring-Snap
5	93-0372	1	Shaft-Pump
†6		1	Block-Cylinder
†7		5	Spring
†8		5	Washer
†9		5	Piston
10	93-0365	1	Cylinder ASM INC 6-9

† Included in a service kit or in an assembly

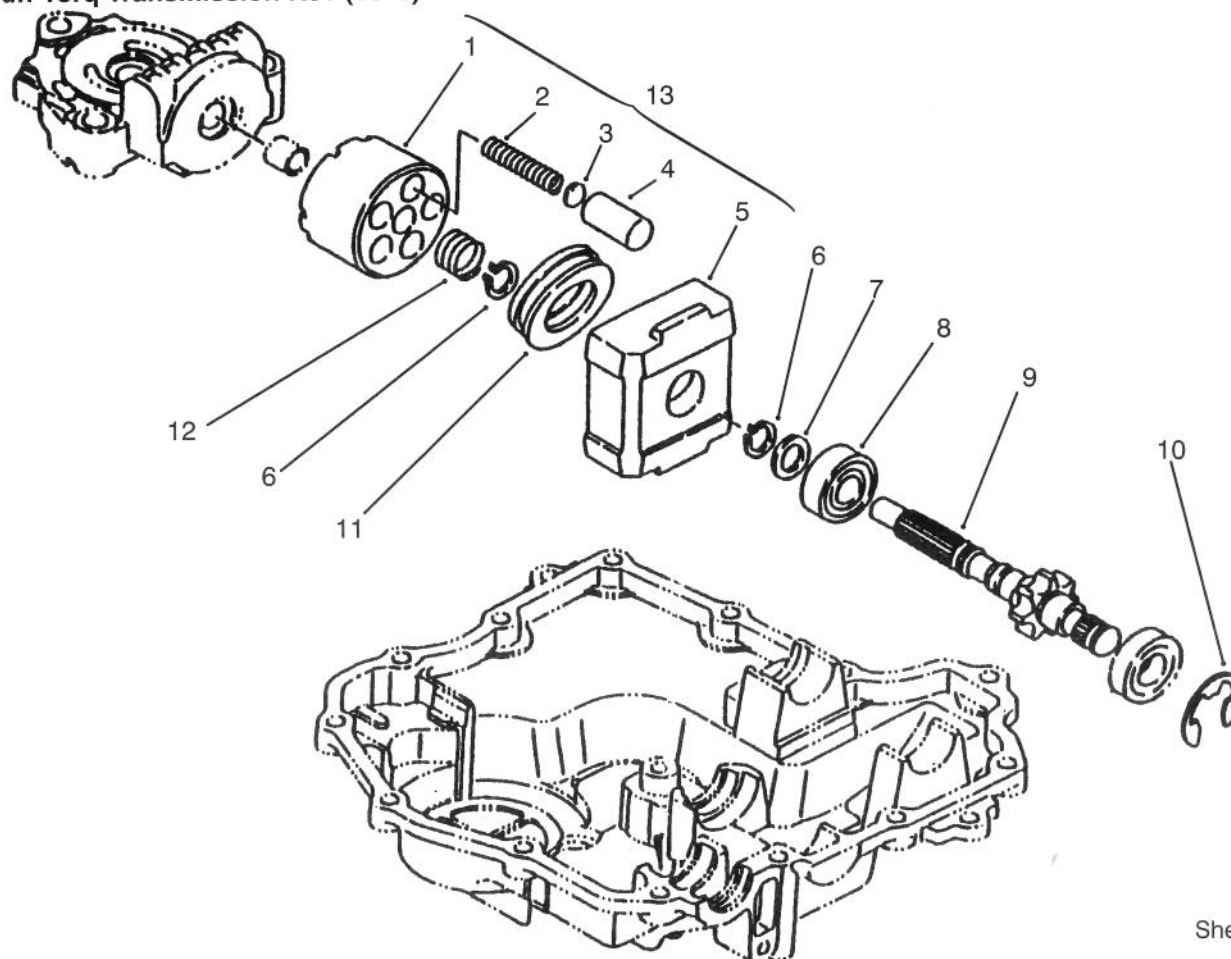


Sheet No.: 404

c-1862

Motor Shaft

Ref. No.	Part No.	Qty.	Description
1		1	Block-Cylinder
2		1	Spring
3		5	Washer
4		5	Piston
5	93-0375	1	Housing
6	93-0373	2	Ring-Snap
7	93-0371	1	Washer
8	93-0374	1	Bearing-Ball
9	93-0386	1	Shaft-Motor
10	93-0387	1	E Ring
11	93-0376	1	Bearing-Thrust
12		1	Spring
13	93-0365	1	Cylinder ASM INC 1-4

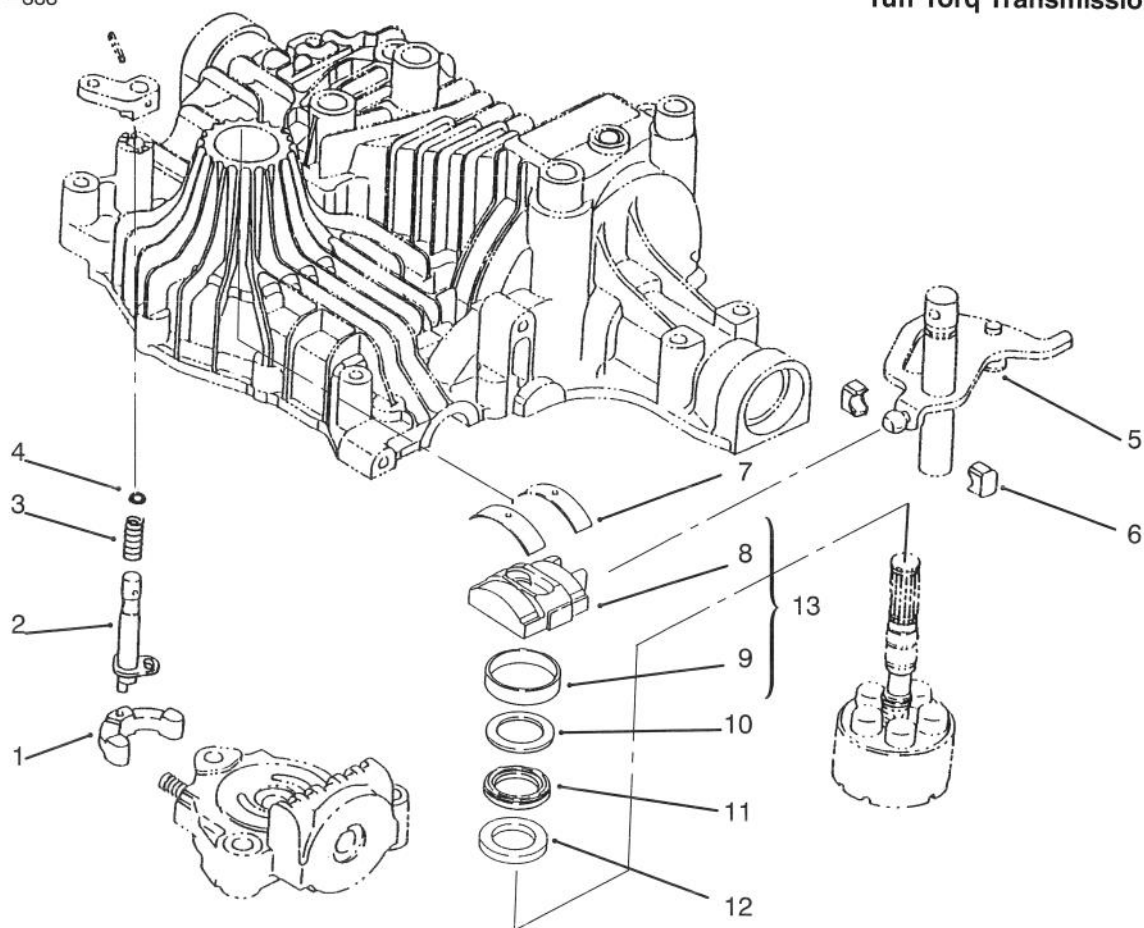


Sheet No.: 405

c-1863

Range Shift

Ref. No.	Part No.	Qty.	Description
1	93-0395	1	Arm
2	93-0397	1	Shaft-Bypass
3	93-0396	1	Spring
4	93-0400	1	Packing
5	93-0398	1	Block Set INC 6
†6		1	Block-Shift
7	93-0388	2	Thrust Metal
†8		1	Plate-Swash
†9		1	Bushing-Swashplate
10	93-0394	1	Plate-Thrust
11	93-0392	1	Bearing
12	93-0393	1	Plate-Thrust
13	93-0389	1	Swash Plate INC 8-9


† Included in a service kit or in an assembly

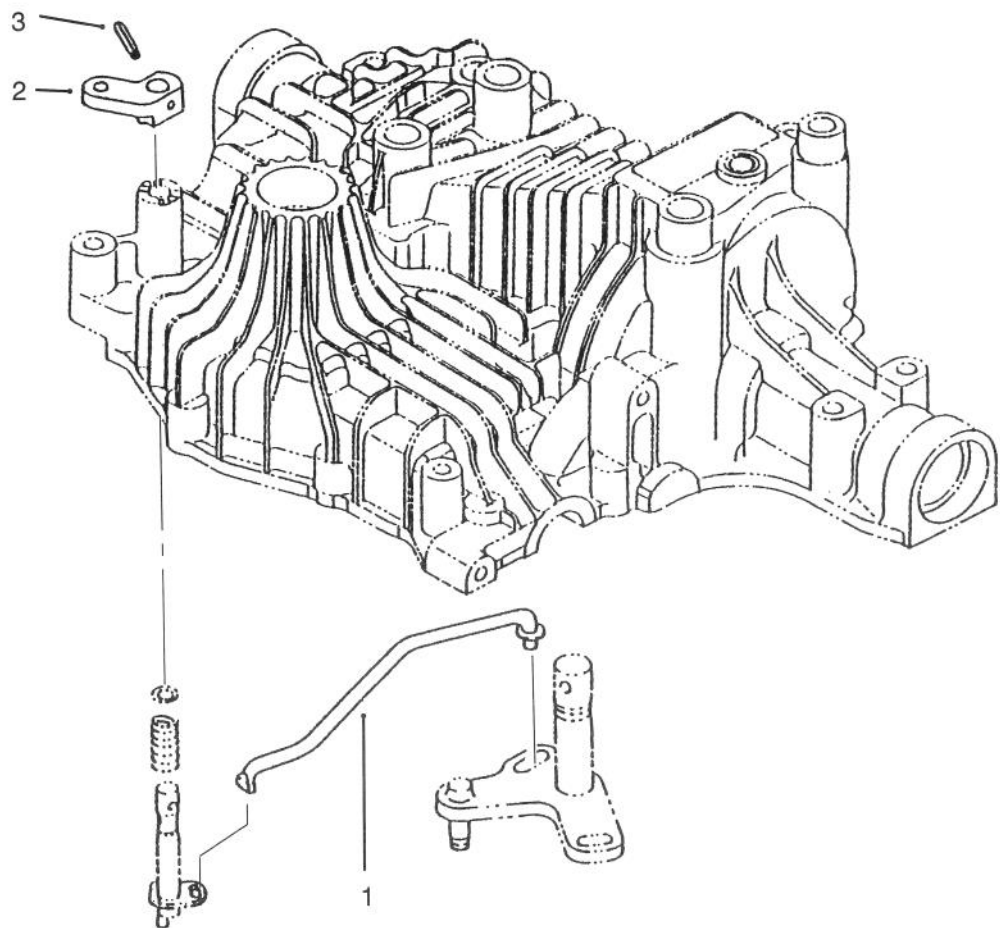

Sheet No.: 406
c-1864

Bypass Return


Ref. No.	Part No.	Qty.	Description
1	93-0401	1	Rod-Bypass
2	93-0402	1	Arm-Valve Release
3	93-0403	1	Pin-Roll

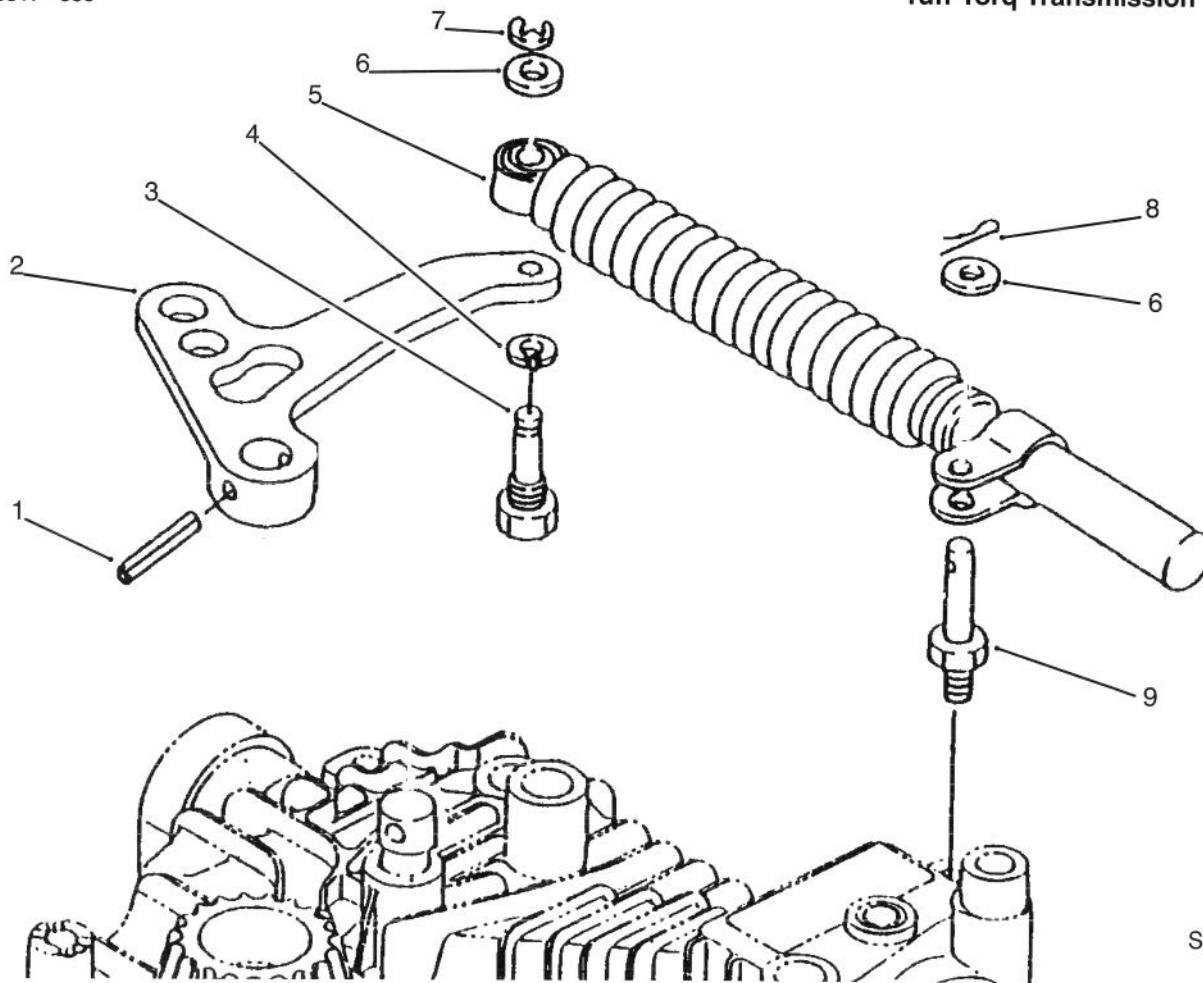

Sheet No.: 407
C-1865

Lever Damper

Ref. No.	Part No.	Qty.	Description
1	93-0411	1	Pin-Roll
2	93-0404	1	Arm
3	93-0407	1	Bolt
4	93-0409	1	Washer
5	93-0405	1	Shock Absorber
6	93-0408	2	Washer
7	93-0410	1	Ring
8	93-0412	1	Pin-Cotter
9	93-0406	1	Stud

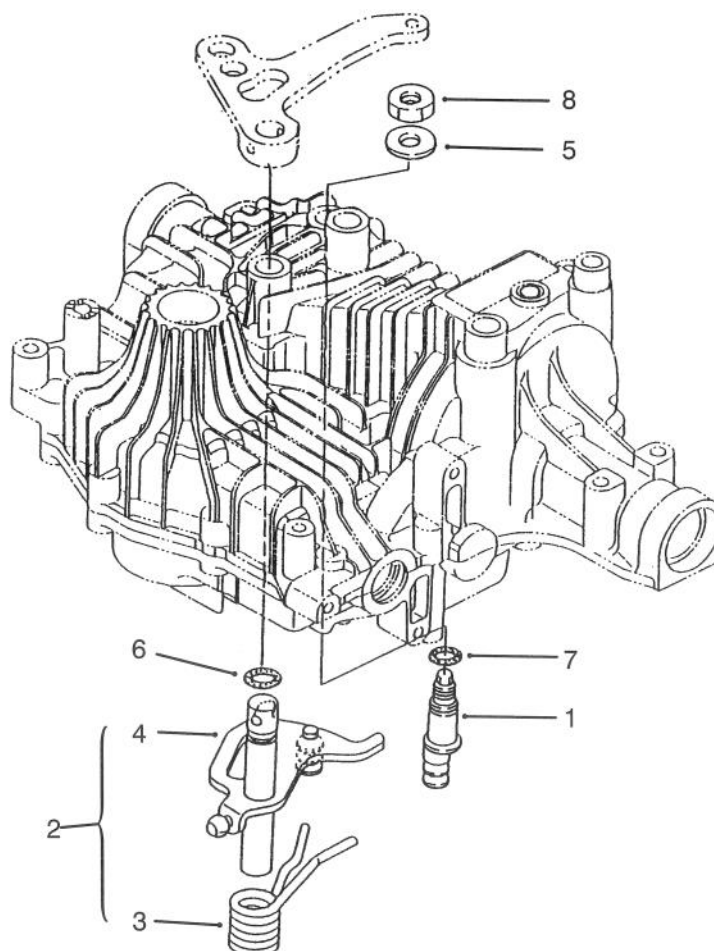


Sheet No.: 408

C-1866

N-Centering

Ref. No.	Part No.	Qty.	Description
1	93-0413	1	Fulcrum
2	93-0414	1	Shaft ASM INC 3-4
†3		1	Spring
†4		1	Shaft-Control
5	93-0417	1	Washer
6	93-0418	1	Packing
7	93-0419	1	Packing
8	93-0420	1	Nut

† Included in a service kit or in an assembly

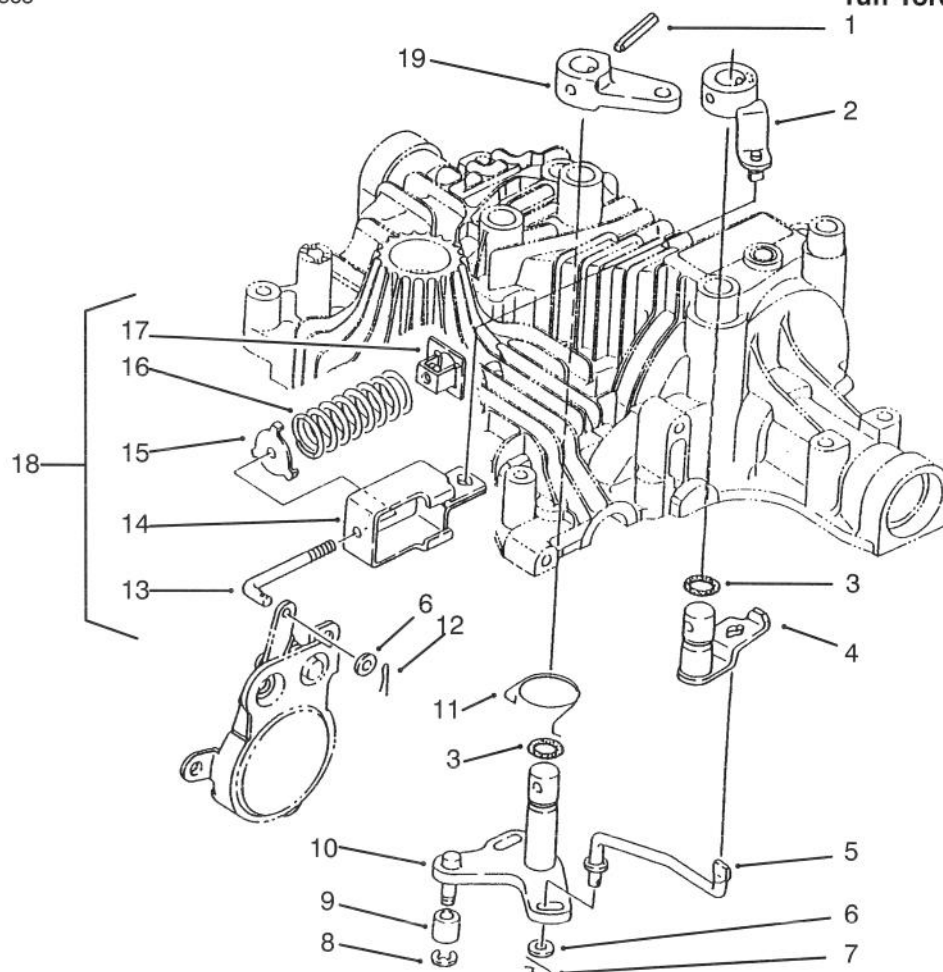


Sheet No.: 409

C-1867

Brake Interlock

Ref. No.	Part No.	Qty.	Description
1	93-0411	2	Pin-Roll
2	93-0433	1	Arm-Brake B
3	93-0418	2	Packing
4	93-0432	1	Arm-Brake A
5	93-0431	1	Rod-Brake
6	93-0435	2	Washer
7	93-0434	1	Pin-Snap
8	93-0410	1	Ring
9	93-0421	1	Bushing
10	93-0430	1	Shaft-Brake
11	93-0422	1	Return-Brake
12	93-0412	1	Pin-Cotter
†13	93-0428	1	Rod-Adjuster
†14	93-0426	1	Holder-Spring
†15	93-0425	1	Guide-Spring
†16	93-0427	1	Spring
†17	93-0424	1	Adjuster
18	93-0423	1	Rod ASM INC 13-17
19	93-0429	1	Arm-Brake


† Included in a service kit or in an assembly

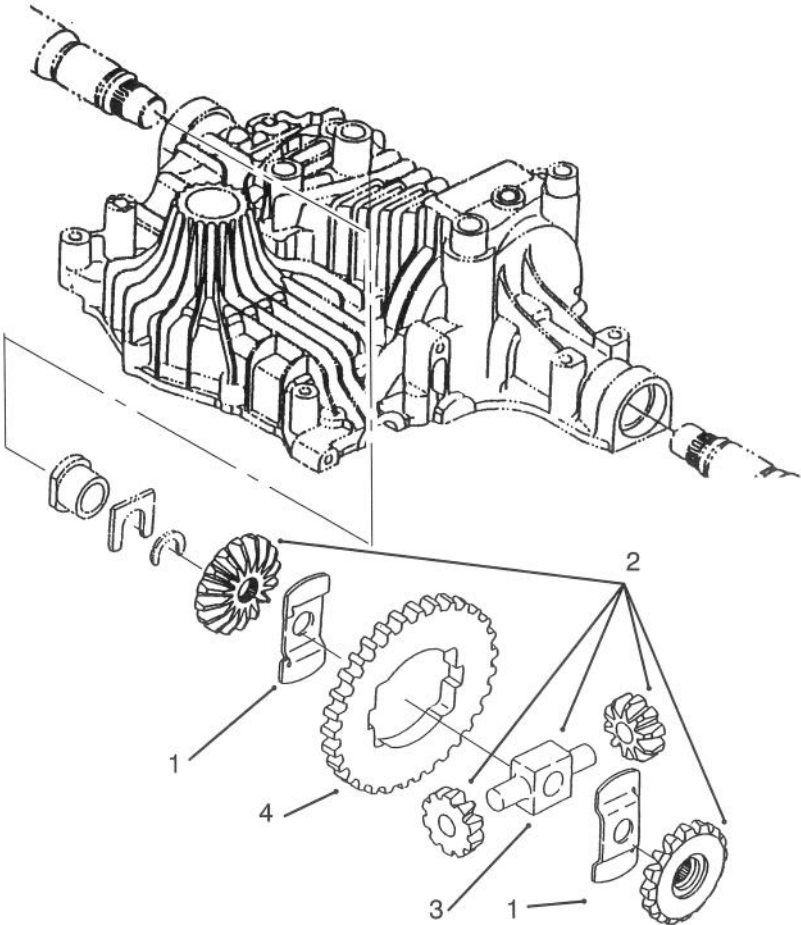

Sheet No.: 410
c-1868

Differential Gear


Ref. No.	Part No.	Qty.	Description
1	93-0444	2	Washer-Thrust
2	93-0440	1	Differential Gear ASM
3	93-0443	1	Shaft-Pinion
4	93-0445	1	Gear-Final

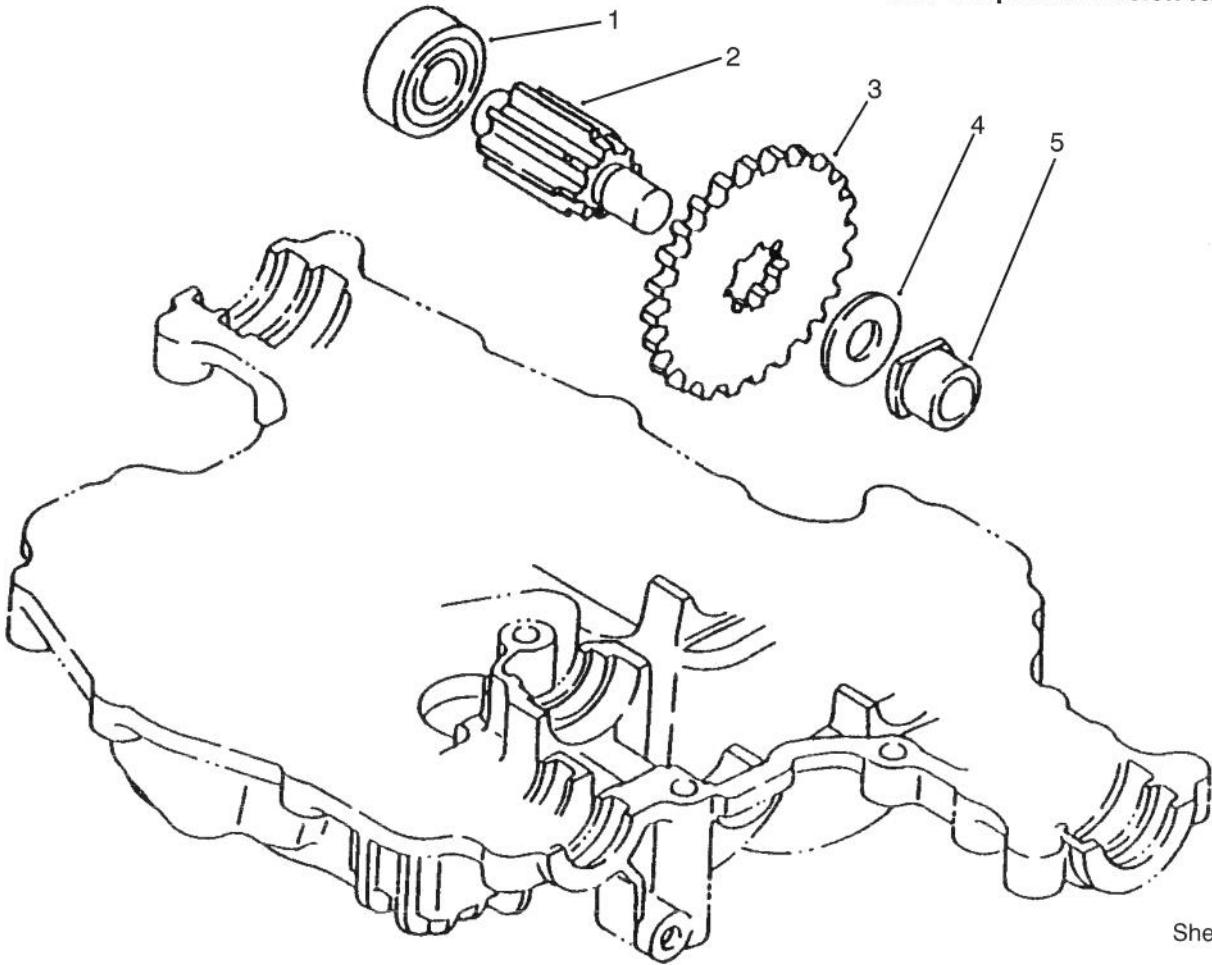

Sheet No.: 411
C-1869

Final Pinion

Ref. No.	Part No.	Qty.	Description
1	93-0446	1	Bearing
2	93-0447	1	Shaft-Final Pinion
3	93-0448	1	Gear-Final Shaft
4	93-0449	1	Washer
5	93-0450	1	Bushing

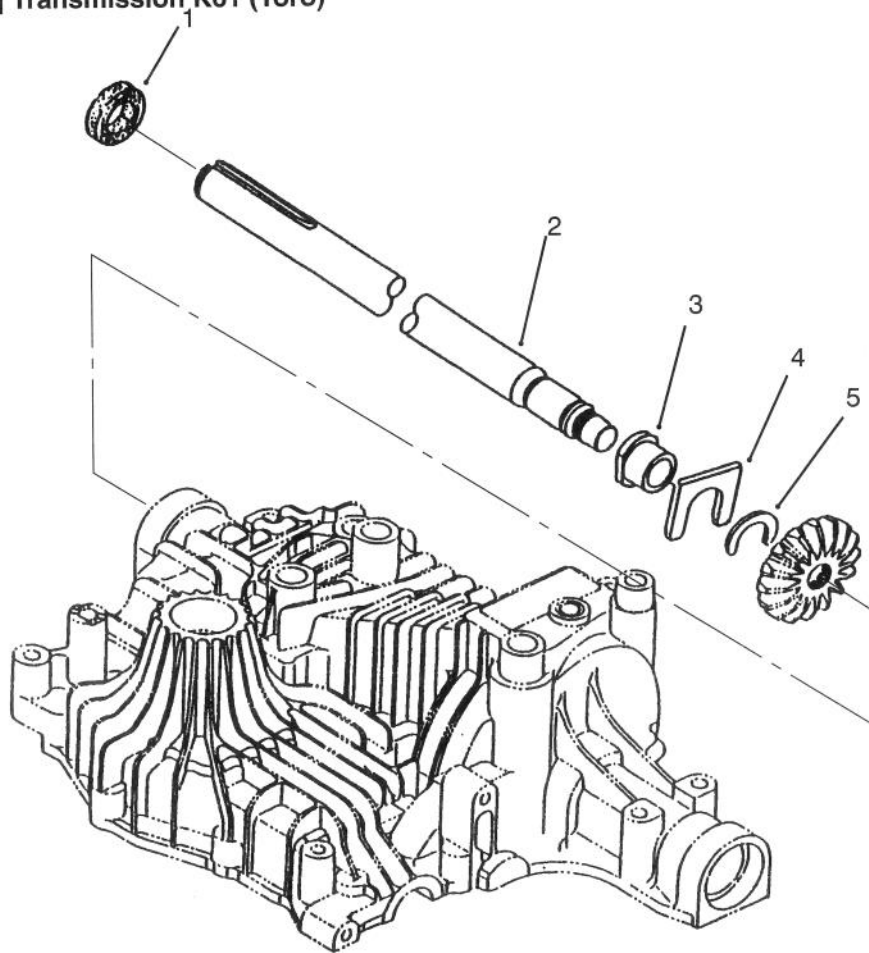


Sheet No.: 412

C-1870

Axle Shaft

Ref. No.	Part No.	Qty.	Description
1	93-0451	2	Seal
2	93-0452	1	Shaft-Axle Right
3	93-0454	2	Bushing
4	93-0455	2	Washer-Thrust
5	93-0456	2	Ring
*	93-0453	1	Shaft-Axle Left

* Not illustrated

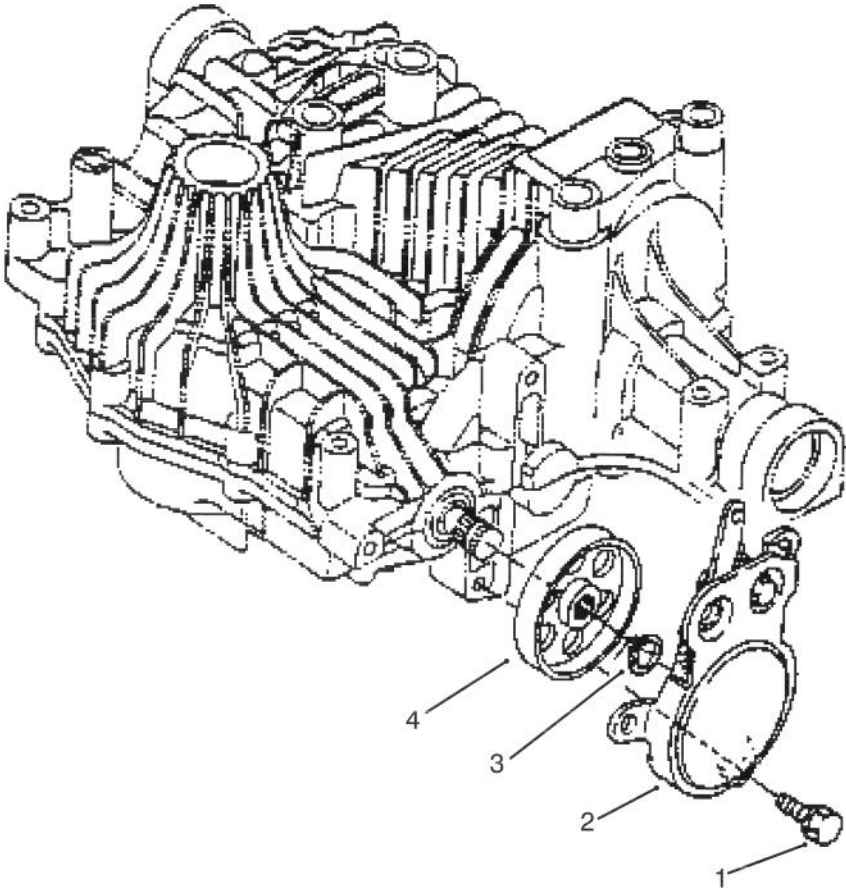


Sheet No.: 413
C-1871


Brake

Ref. No.	Part No.	Qty.	Description
1	93-0457	3	Bolt W/Washer
2	93-0458	1	Band-Brake Interlock
3	93-0373	1	Ring-Snap
4	93-0460	1	Drum-Brake


Electric Schematic Hydro Drive Cruise Control

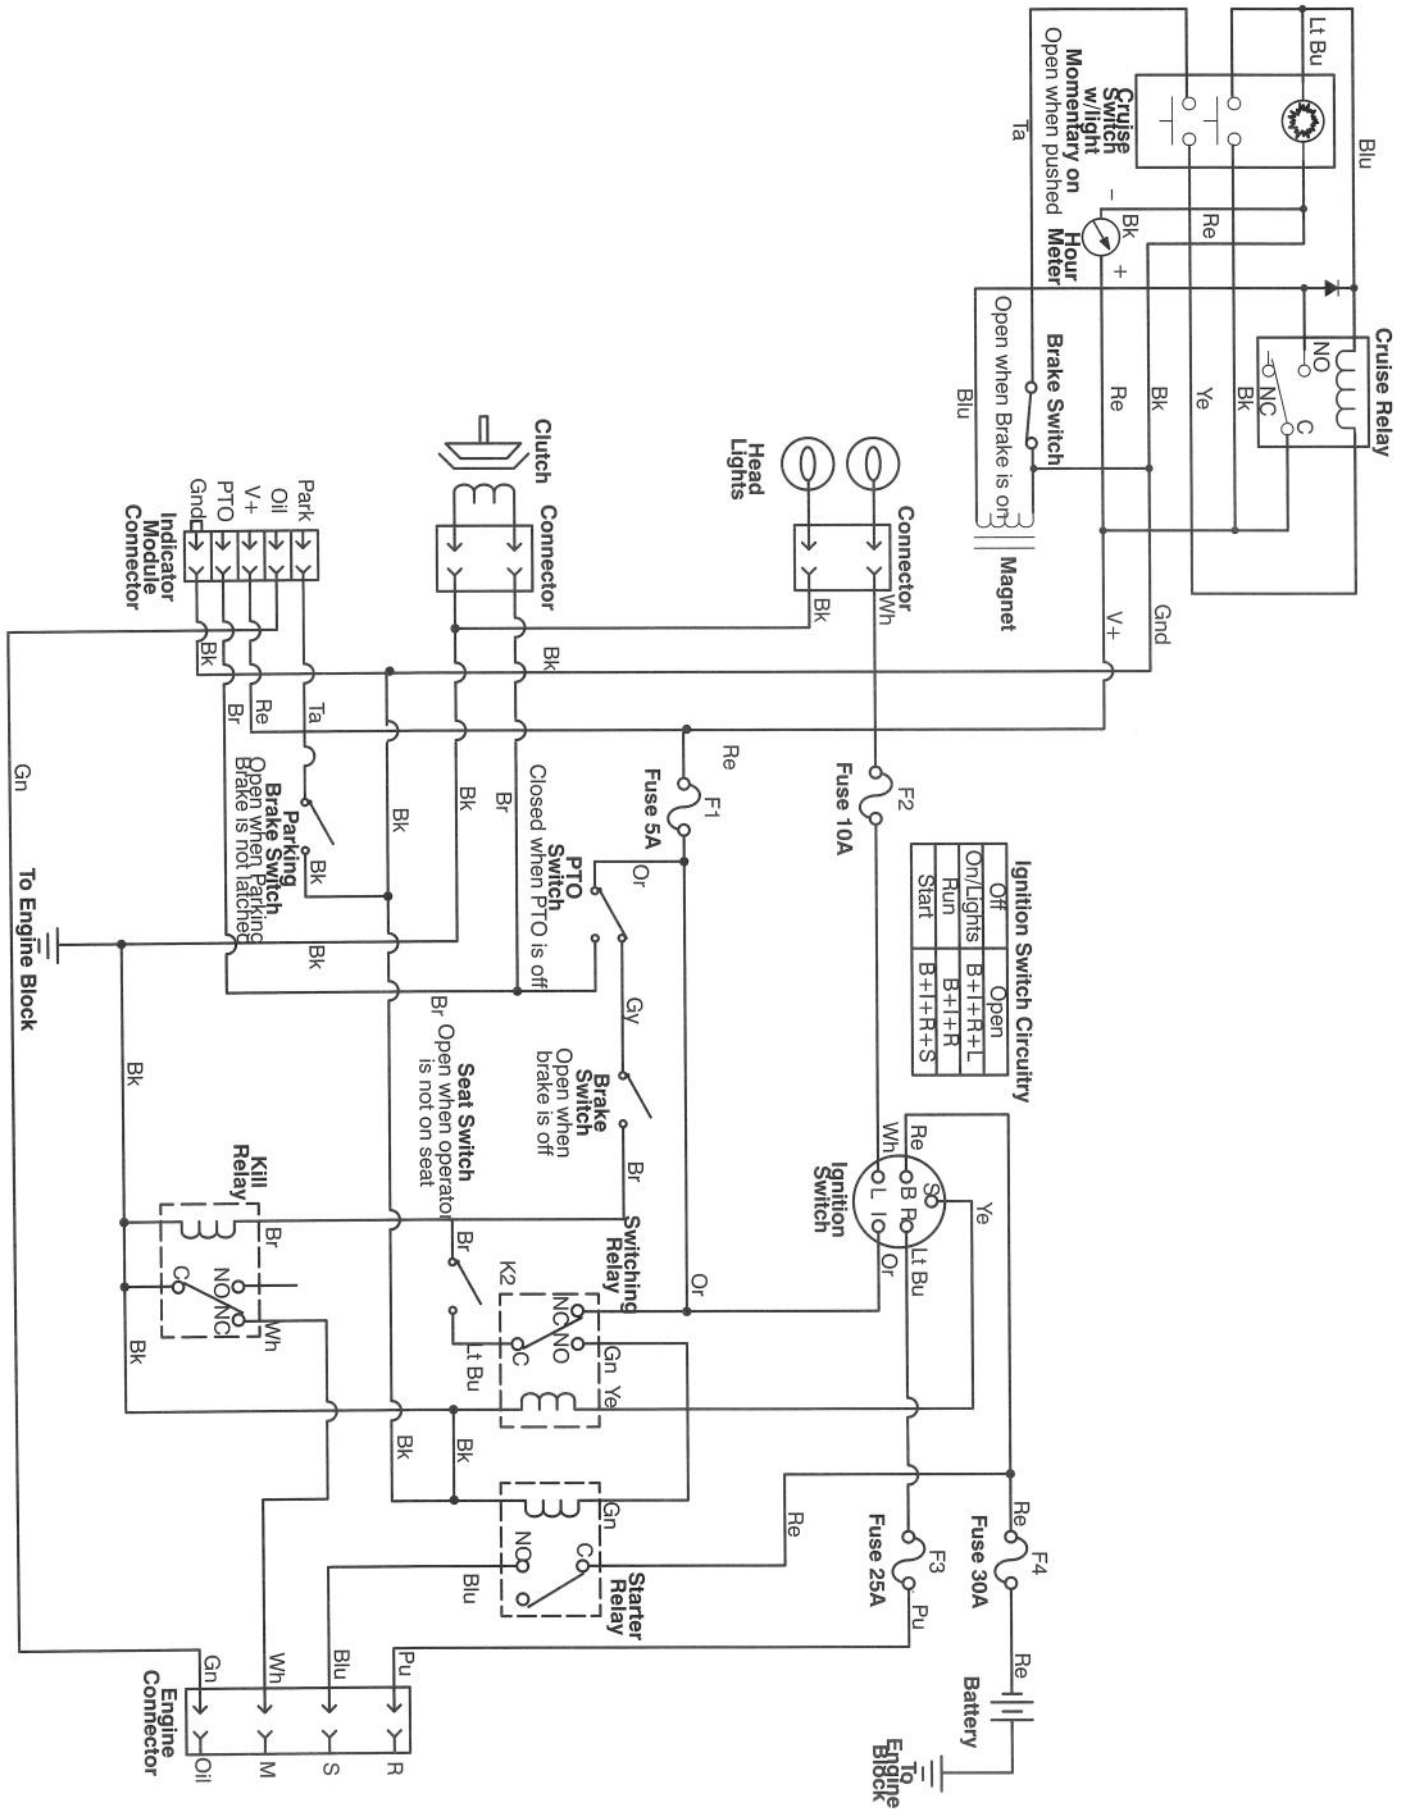

Wire Harness Routing — Twin Cylinder Engine

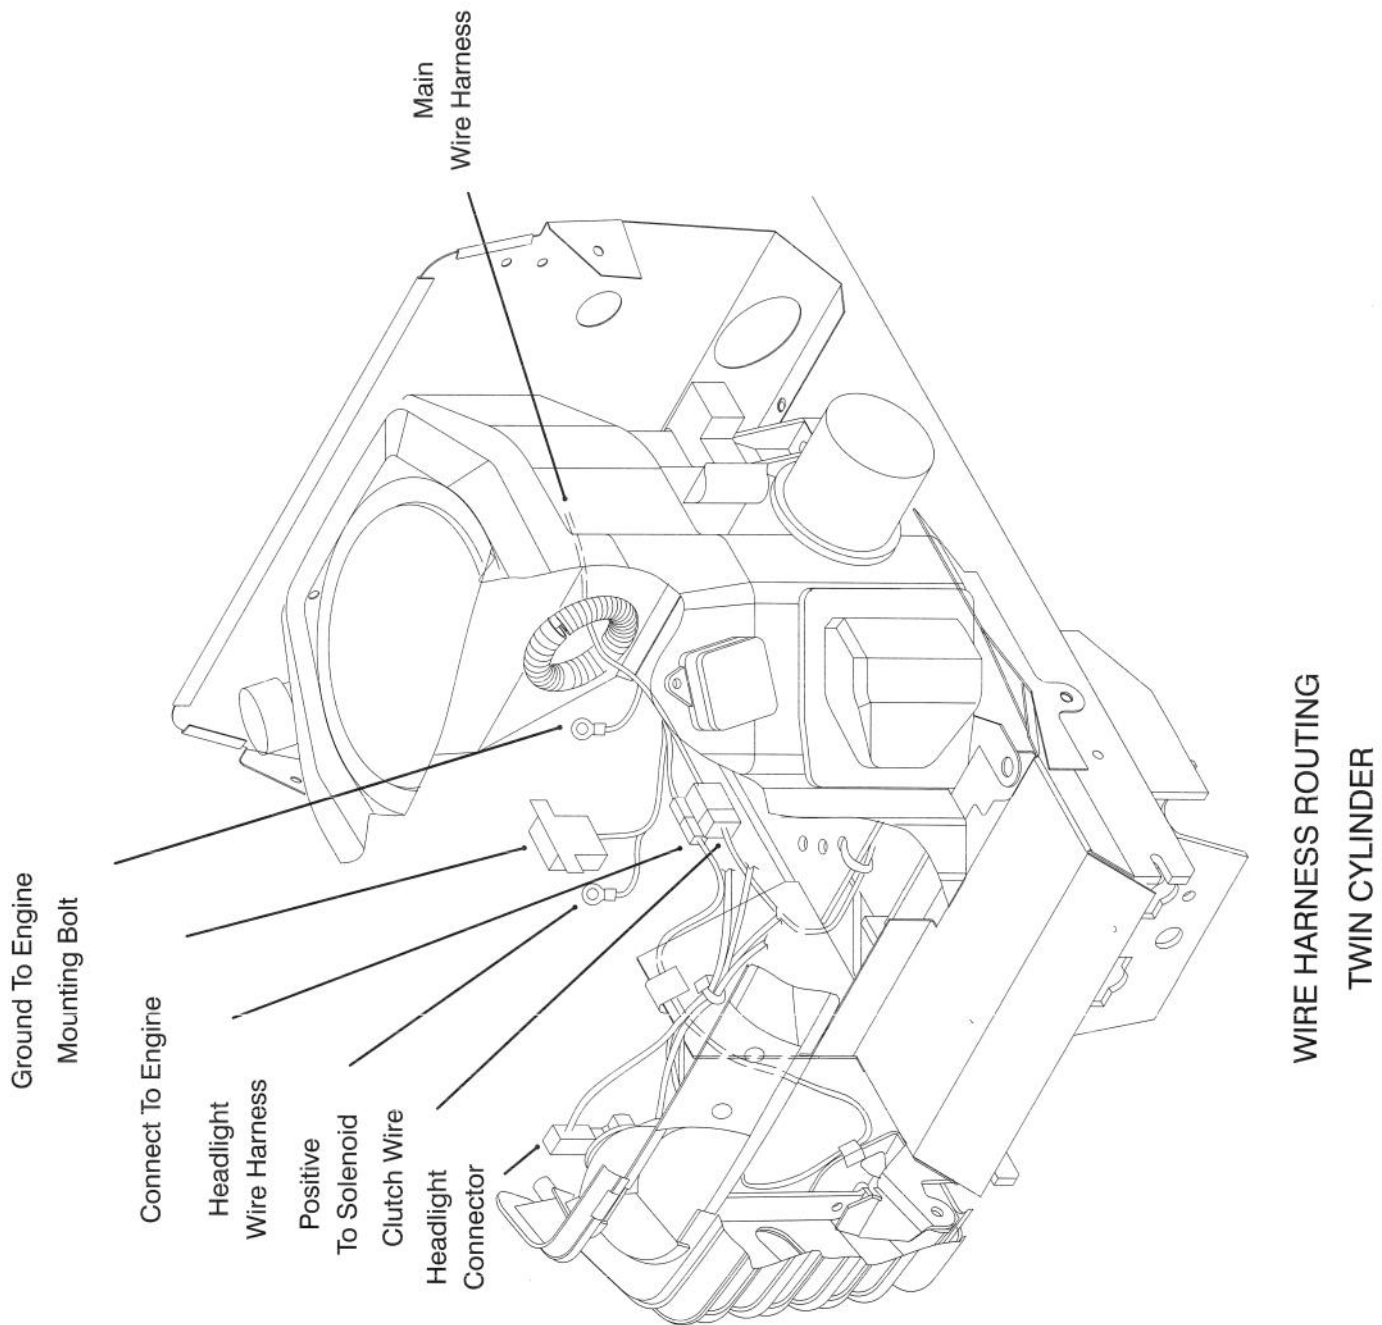

Wire Harness Routing — Cruise Control

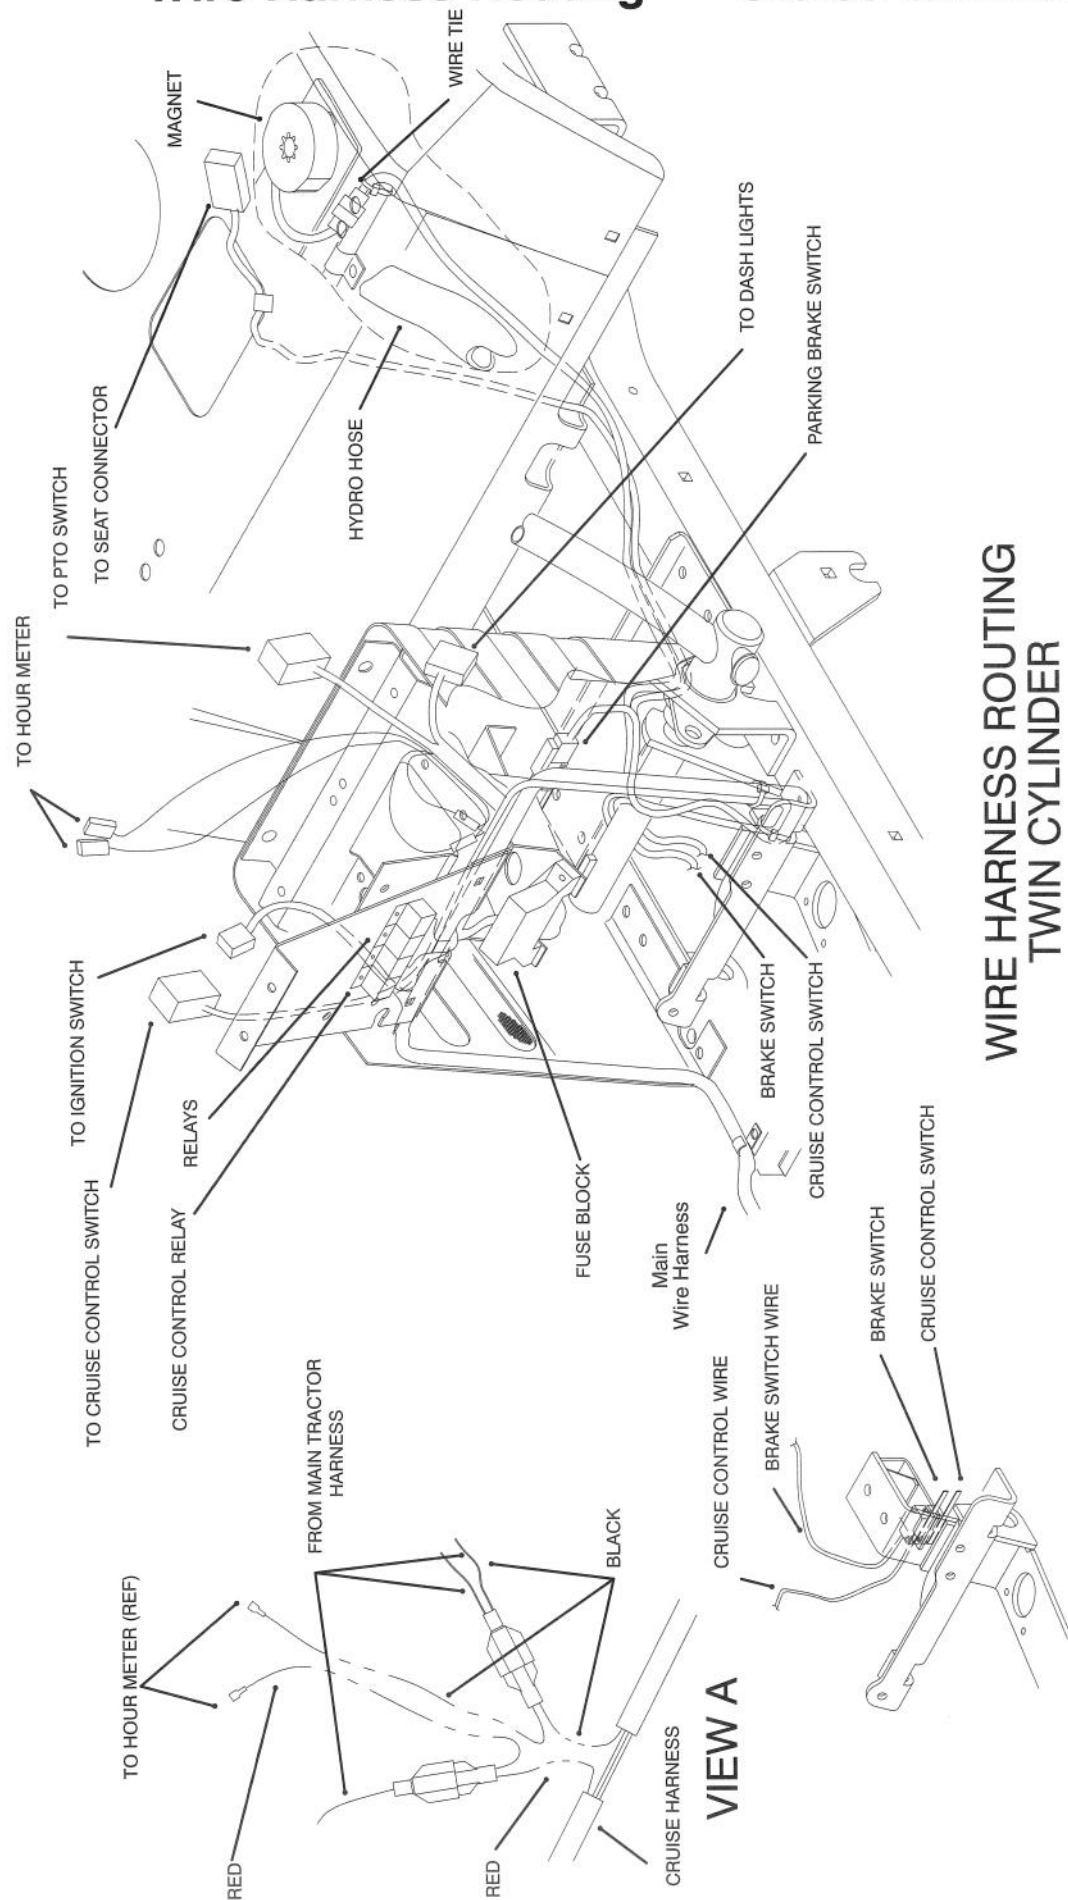

WIRE HARNESS ROUTING
TWIN CYLINDER

BRAKE SWITCH-HYDRO
WITH CRUISE CONTROL

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
1278	5	12	2	Washer-Shim
1278	6	3	4	Washer-Shim
2534	15	6	2	Clip-Spring
3624	12	6	1	Spring-Compression
5108	6	14:4	2	Valve-Tire Tubeless
5210	6	2	4	Washer-Shim
5618	6	1	1	Ring-Retaining
7896	4	4	1	Washer-Bowed
8130	12	4	1	Retainer-Spring
8830	14	8	1	Retainer-"j"
8830	18	9	1	Retainer-"j"
8870	12	21	1	Trunnion
105503	1	12	2	Bushing
105503	8	11	2	Bushing
106269	13	36	1	Bearing-Flange
106288	10	29	2	Clamp
106557	8	14	2	Reflector
106948	18	10	1	Tray-Battery
108881	5	5	1	Nut-Hex
109189	5	7	1	Bearing-Flange
109547	18	12	2	Hook-Battery
109553	18	21	1	Boot-Battery Cable
109989	8	8	2	Spacer
110391	5	6	1	Bearing-Wheel
110513	6	14:3	4	Bearing-Wheel
111383	5	8	1	Collar W/Set Screw
111418	5	3	1	Bushing
111418	15	18	1	Bushing
111419	5	1	1	Washer-Bearing
111419	15	2	1	Washer-Bearing
111646	5	9	1	Grip Ring
112168	12	16	1	Decal-Lift
112843	16	12	1	Washer-PTO
114064	17	4	2	Bearing-Elec Clutch
114720	18	13	1	Tube-Battery Drain
115510	2		2	Plate
115593	12	11	1	Knob
115877	18	20	1	Battery
116397	3	26	1	Relay
116397	3	26	3	Relay
117127	6	14:1	2	Tire
117316	18	2	1	Rod-Battery Hold Down
147665	12	3	2	Screw
614249	2	34	1	Tie Strap
614249	11	32	2	Tie Strap
614249	14	3	1	Tie Strap
614249	22	8	1	Tie Strap
700806	8	16	2	Knob
700919	3	12	1	Nut
701178	8	9	2	Cap-Protector
702366	2	35	1	Clip-Wire Retainer
702366	10	27	1	Clip-Wire Retainer
702366	16	23	1	Clip-Wire Retainer
920041	5		1	Washer
933141	12	12	1	Pin-Spirol
933148	12	5	1	Pin-Spirol
933270	7	21	2	Pin-Roll
936118	21	13	2	Snap Ring
9114466	16	13	1	Screw HH
9150026	6	6	4	Nut-Lock
9202154	20	12	1	Washer-Flat
9202324	6	4	2	Washer

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
9202634	13	35	1	Washer-Flat
9266934	10	17	2	Screw-HWHTF
9266934	16	2	3	Screw-HWHTF
9267154	6	8	1	Screw
5-1336	23	5	2	Key
5-4460	8	18	2	Washer-Fender
24-7924	11	15	2	Cover-Drive Shaft
28-2480	6	16	2	Washer-Flat
38-1420	8	25	1	Switch-Seat
46-8093	1	23	2	Screw-TAP
46-8093	11	25	2	Screw-TAP
48-7730	4	20	2	Screw-HH
49-2040	21	16	3	Screw-HH
61-9780	6	17	2	Hubcap
62-7770	3	30	1	Key-Ignition
65-2920	19	22	1	Pad-Pedal
66-0120	3	8	2	Knob
76-1340	10	9	1	Decal-USA
78-1680	6	14:2	2	Wheel
78-1940-01	6	11	1	Arm-Front Spindle RH
78-1950-01	7	20	1	Arm-Front Spindle LH
78-2140	13	33	1	Trunnion
78-2431	12	25	1	Rod
78-2451	5		1	Rod
78-2491-03	14	7	1	Stop-PTO
78-2601-01	6	13	2	Spindle
78-2610	5	2	1	Gear-Sector
78-2920	6	5:2	1	Joint-Ball
78-2920	6	7:2	1	Joint-Ball
78-5801	6	5:3	1	Joint-Ball RH W/ Jam Nut
78-5811	6	7:3	1	Joint-Ball LH
78-6810-03	13	29	1	Plate
78-6820-03	18	11	1	Plate-Battery
78-6831	13	39	1	Shaft
78-7360	13	28	1	Rod
78-7390	12	24	1	Link
78-7960-01	7	18	1	Axle-Front
78-9150-03	5	4	1	Plate
78-9740	12	10	1	Decal-HOC Knob
79-0950-03	8	15	1	Bracket-Pivot RH
79-0970-03	8	12	1	Bracket-Pivot LH
79-1250	12	23	2	Pin
79-3401-03	13	37	1	Gage Shaft
79-3500	9	3	1	Reservoir
79-6730	14	5	1	Decal-Belt Install
79-7530	15	15	1	Spring-Extension
83-2720	23	6	10	Bolt-Lug
83-6620	11	14	1	Decal-Instruction
88-3970	1	22	1	Reflector-Lamp
88-3980	9	5	1	Gas Cap ASM
88-4320	1	28	1	Harness-Wire
88-4590	15	12	1	Bolt-Shoulder
88-9930	12	2	1	Switch-Micro
88-9930	22	2	2	Switch-Micro
92-3014	17	1	3	Nut & Spring ASM
92-3015	17	2	1	Rotor ASM W/Bearing
92-3016	17	3	1	Field ASM W/Bearing
92-6506	9	6	1	Tank-Gas
92-6511	8	1	1	Seat
92-6656	1	19	1	Lens-Headlight
92-6657	4	6	1	Steering Wheel
92-6674-03	14	1	1	Support-Fender

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-6675	2		1	Fender
92-6680	3	7	1	Boot-Steering
92-6686	21	11	1	Pulley
92-6687	10	24	1	Mat-Foot RH
92-6688	10	25	1	Mat-Foot LH
92-6702	5	10	1	Shaft-Steering Lower
92-6704	4	9	1	Shaft-Steering
92-6705	3	21	1	Lens-Dash
92-6709	3	23	1	Light-Indicator
92-6710	12	7	1	Grip-Handle
92-6711	12	8	1	Tip-Rod
92-6713-03	10	15	1	Cover-Rear
92-6715	3	22	1	Hourmeter
92-6717	4	18	1	U-Joint-Steering
92-6718	21	10	1	Belt-Hydro
92-6720	3	15	1	Decal-Choke/PTO
92-6721	3	11	1	Decal-Throttle/Ignition
92-6725	10	4	1	Decal-HOC
92-6726	21	19	1	Decal-Hydro Valve
92-6727	10	14	1	Decal-Fuel Level
92-6728	1	25	1	Decal-Hood LH
92-6729	2	31	1	Decal-Hood RH
92-6730	10	13	1	Decal-Rear Fender
92-6735	11	19	2	Decal-266-H
92-6737	9	1	1	Hose
92-6742	21	15	1	Fan
92-6746-01	10	22	1	Footrest-LH
92-6747-01	10	1	1	Footrest-RH
92-6750	8	2	2	Spacer-Nylon
92-6760	23	1	2	Wheel & Tire ASM Rear
92-6762	21	2	1	Transaxle-Tuff Torq K61
92-6763	16	7	1	Decal-Toro Power Plus 16
92-6769	21	1	2	U-Bolt
92-6771-03	11	21	1	Baffle-Rear
92-6776	4	13	1	Bracket-Detent
92-6777-03	4	1	1	Bracket-Support
92-6778-03	11	10	1	Support-Column
92-6780	16	4	4	Nut-HHF
92-6783	3	19	1	Control-Choke
92-6784	3	17	1	Control-Throttle
92-6785	3	14	1	Switch INC 12 & 30
92-6787	3	13	1	Switch-PTO
92-6793-03	11	4	1	Panel-Support Dash
92-6794	12	14	1	Wedge-HOC Adjust
92-6795-01	10	10	1	Fender
92-6797	3	16	1	Cover-Slot LH
92-6798	4	11	1	Cap-Rod
92-6855-03	13	27	1	Arm
92-6859-03	11	6	1	Support-Dash
92-6860	11	8	4	Nut-Retainer
92-6861	16	3	1	Muffler
92-6867-01	16	16	1	Shield-Muffler
92-6868-03	14	12	1	Bracket-Idler
92-6874-03	12	15	1	Lever-Lift
92-6876	10	2	4	Nut-Retainer
92-6877	16	19	1	Valve-Oil Drain
92-6879-03	16	1	1	Baffle-Muffler
92-6883	6	5	1	Steering Link RH
92-6884	6	7	1	Steering Link LH
92-6885	16	11	1	Clutch-PTO
92-6888	16	9	1	Pulley
92-6900	15	14	1	Arm-Idler

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-6902	20	23	1	Pad-Pedal Forward
92-6903	20	1	1	Pad-Pedal Reverse
92-6904	18	17	1	Harness-Wire
92-6913-03	20	2	1	Pedal-Hydro
92-6914-03	1	24	1	Baffle-Hood Upper
92-6917-03	2	30	1	Bracket-Hinge RH
92-6918-03	1	7	1	Bracket-Hinge LH
92-6936-03	11	18	1	Cover-Side LH
92-6937-03	11	2	1	Cover-Side RH
92-6943	21	14	1	Spacer-Fan
92-6948-03	19	16	1	Lever-Brake
92-6951-03	19	19	1	Pedal-Brake
92-6960	11	27	2	Latch-Hood
92-6962	20	6	1	Bushing
92-6964-03	14	14	1	Bracket-HOC
92-6965	12	9	1	Rod-HOC
92-6966	20	22	1	Spacer-Hydro Pedal
92-6968	19	11	1	Trunnion-Brake
92-6970	20	8	1	Rod-Bypass
92-6971	4	5	1	Lever-Tilt
92-6972-03	8	4	1	Support-Seat
92-6973	3	20	1	Decal-Dash Lens
92-6977-03	12	17	1	Rod-Lift Lever
92-6978	13	31	1	Rod-HOC Indicator
92-6979	13	34	1	Plate-HOC Gage
92-6982	19	20	1	Spacer-Brake
92-6986	8	7	2	Bolt-Shoulder
92-6987	1	20	1	Decal-Horsehead
92-6988	19	14	1	Rod-Brake
92-6989	18	1	1	Cable-Battery Red
92-6992-03	14	4	1	Bracket-Steering
92-6996-03	2	32	1	Hinge-Hood RH
92-6997-03	1	13	1	Hinge-Hood LH
92-6998	4	22	1	Spacer-Yoke
92-6999	4	15	1	Spacer-Yoke
92-7000-03	19	3	1	Bracket-Park Brake
92-7004-03	19	5	1	Support-Park Brake
92-7006	1	4	4	Nut
92-7007	13	32	1	Spring-Extension
92-7008	20	20	2	Rod End
92-7009	19	1	1	Grip-Parking Brake
92-7018	20	3	1	Rod
92-7020	10	7	4	Screw-TTH
92-7020	11	1	9	Screw-TTH
92-7048-03	2	33	1	Bracket-Hood Hinge RH
92-7049-03	1	16	1	Bracket-Hood Hinge LH
92-7054	8	6	2	Spring-Compression
92-7057-03	6	9	1	Pin-Front
92-7076	1	3	1	Inlet-Seal Air
92-7101	15	16	1	Pulley-Flat
92-7102	15	20	2	Pulley-Idler
92-7147	1	26	2	Foam-Hood
92-7148	1	27	2	Foam-Sidepanel
92-8747	14	15	2	Decal-Attach-A-Matic
92-8946	10	6	1	Decal-Danger
93-0302	11	13	1	Decal-Slope/Park Brake
93-0324	18	7	1	Cable-Battery Black
93-0350	16	5	2	Gasket-Exhaust
93-0486-03	11	17	1	Hoodstand W/Decals
93-0489-01	10	5	1	Plate-Footrest W/Decal
93-0490	1	2	1	Hood
93-0491	1	6	1	Sidepanel-LH Hood

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
93-0492	1	29	1	Sidepanel-RH Hood
93-0494	1	18	1	Grille & Screen ASM
93-0511	22	12	1	Arm-Cruise
93-0512-03	22	6	1	Cruise Bracket
93-0515	22	11	1	Clamp-Cruise
93-0516	3	9	1	Cover-Cruise
93-0519	3	6	1	Dash
93-0520-03	22	3	1	Bracket-Micro Sw
93-0522	14	2	1	Frame W.a.
93-0523	13	40	1	Bracket-Pivot Linkage
93-0525-03	21	9	1	Strap-Torque
93-0527	3	32	1	Switch-Cruise
93-0539	22	1	2	Screw-PPH
93-0540	19	21	1	Spring-Extension
93-1131	11	26	1	Trim-Seal
93-1144	9	9	2	Spacer-Fuel Tank
93-1146	4	3	1	Bushing-Steering
93-1148-03	4	12	1	Column
93-1357	4	14	1	Spring-Extension
93-1627	9	8	1	Hose-Fuel Line
93-3167	19	4	1	Rod-Park Brake
93-3190	18	22	1	Boot-Terminal Insulator
93-3658	15	19	2	Spacer
93-3659-03	23	2	2	Hub-Wheel
93-4364	22	14	1	Harness-Wire
93-4366	22	7	1	Magnet Assembly
237-141	3	5	1	Grommet
2412-98	9	7	2	Clamp-Hose
2412-129	9	2	2	Clamp-Hose
256-90	12	26	2	Bushing-Flange
256-90	19	18	2	Bushing-Flange
302-5	6	12	2	Fitting-Grease
302-11	7	19	1	Fitting-Grease
302-26	20	21	1	Fitting-Grease
321-4	4	2	4	Screw-HH
321-4	9	11	2	Screw-HH
321-4	11	11	4	Screw-HH
321-4	18	3	2	Screw-HH
322-3	1	11	2	Screw-HH
322-3	4	17	1	Screw-HH
322-5	8	3	4	Screw-HH
322-5	14	16	1	Screw-HH
322-5	15	31	2	Screw-HH
322-6	21	17	1	Screw-HH
322-9	16	14	4	Screw-HH
322-12	21	8	1	Screw HH
322-16	22	13	2	Screw-HH
322-17	4	23	1	Screw-HH
323-6	22	5	2	Screw-HH
323-7	20	17	1	Screw-HH
323-10	15	1	3	Screw-HH
323-10	20	4	1	Screw-HH
3218-3	23	4	2	Nut-HJ
3220-3	20	24	2	Nut-HJ
3229-11	11	5	4	Bolt-CARR
3230-1	1	21	2	Screw-CARR
3230-2	8	17	4	Screw-CARR
3230-2	10	8	8	Screw-CARR
3230-2	14	11	2	Screw-CARR
3230-20	10	28	4	Bolt-CARR
3230-23	10	3	2	Screw-CARR
3231-4	5	11	1	Bolt-CARR

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3231-22	16	15	2	Bolt-CARR
3231-25	13	42	2	Screw-CARR
3243-5	23	3	2	Screw-Set
3245-32	5	8:1	1	Screw-Set
3245-32	21	12	1	Screw-Set
3253-4	4	19	2	Washer-Lock
3253-5	20	18	1	Washer-Lock
3256-22	9	13	4	Washer-Flat
3256-23	4	16	2	Washer-Flat
3256-23	10	16	6	Washer-Flat
3256-23	14	10	2	Washer-Flat
3256-23	15	27	2	Washer-Flat
3256-23	19	12	1	Washer-Flat
3256-23	21	3	5	Washer-Flat
3256-24	13	43	2	Washer-Flat
3256-24	15	13	7	Washer-Flat
3256-24	16	25	2	Washer-Flat
3256-24	19	15	1	Washer-Flat
3256-24	20	5	4	Washer-Flat
3256-26	12	19	5	Washer-Flat
3256-28	4	10	1	Washer-Flat
3256-71	10	20	4	Washer-Flat
3272-2	20	7	1	Pin-Cotter
3272-6	12	20	1	Pin-Cotter
3272-6	19	13	2	Pin-Cotter
3272-16	20	15	1	Pin-Cotter
3272-17	6	15	2	Pin-Cotter
3290-282	8	5	4	Pop Rivet
3290-354	12	1	1	Nut-Speed
3290-354	22	4	1	Nut-Speed
3290-479	10	26	14	Fastener-Panel
3296-8	4	24	4	Nut-Lock
3296-8	11	7	4	Nut-Lock
3296-23	12	22	1	Nut-Lock
3296-29	1	14	4	Nut-Lock
3296-29	4	21	2	Nut-Lock
3296-29	8	13	6	Nut-Lock
3296-29	10	19	14	Nut-Lock
3296-29	14	9	2	Nut-Lock
3296-29	14	17	1	Nut-Lock
3296-29	15	10	3	Nut-Lock
3296-29	16	8	4	Nut-Lock
3296-29	21	6	6	Nut-Lock
3296-29	22	10	2	Nut-Lock
3296-39	13	44	2	Nut-Lock
3296-39	16	17	2	Nut-Lock
3296-39	20	10	1	Nut-Lock
3296-39	22	9	2	Nut-Lock
3296-42	9	4	2	Nut-Lock
3296-42	11	12	3	Nut-Lock
3296-58	8	10	2	Nut-Flange
3296-59	15	17	4	Nut-Lock
32103-22	11	24	4	Nut-Wing
32103-22	18	4	4	Nut-Wing
32104-96	9	10	2	Screw-HHST
32104-118	3	24	3	Screw-PH
32105-15	1	5	12	Screw-HH
32120-47	12	18	5	Ring-Retaining
32121-69	19	17	1	Pin-Spring
32121-111	4	8	1	Pin-Spiral
32128-10	1	9	8	Nut-Lock HHF
32144-4	11	23	2	Screw-TAP

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
32144-4	12	13	1	Screw-TAP
32144-8	3	25	3	Screw-PPH
32144-8	4	25	2	Screw-PPH
32144-14	1	8	2	Screw-HH
32144-14	11	28	2	Screw-HH
32144-14	13	30	2	Screw-HH
32144-14	13	41	2	Screw-HH
32144-14	14	6	6	Screw-HH
32144-14	18	19	1	Screw-HH
32144-14	19	2	4	Screw-HH
32144-32	1	1	2	Screw-Plastic
32144-32	3	18	4	Screw-Plastic
32144-118	16	24	2	Screw-PPH
32149-2	11	3	2	Nut-Hex Lock