



Count on it.

Parts Catalog

42in Two-Stage Snowthrower

Model No. 190-032-101—Serial No. 260000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake clutch

CARR: carriage

CCW: counter clock wise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Auger Housing, Discharge Chute and Impeller Assembly 4

Handle, Crank Rod and Drive Assembly 6

Spindle and Belt Assembly 8


Auger Housing, Discharge Chute and Impeller Assembly

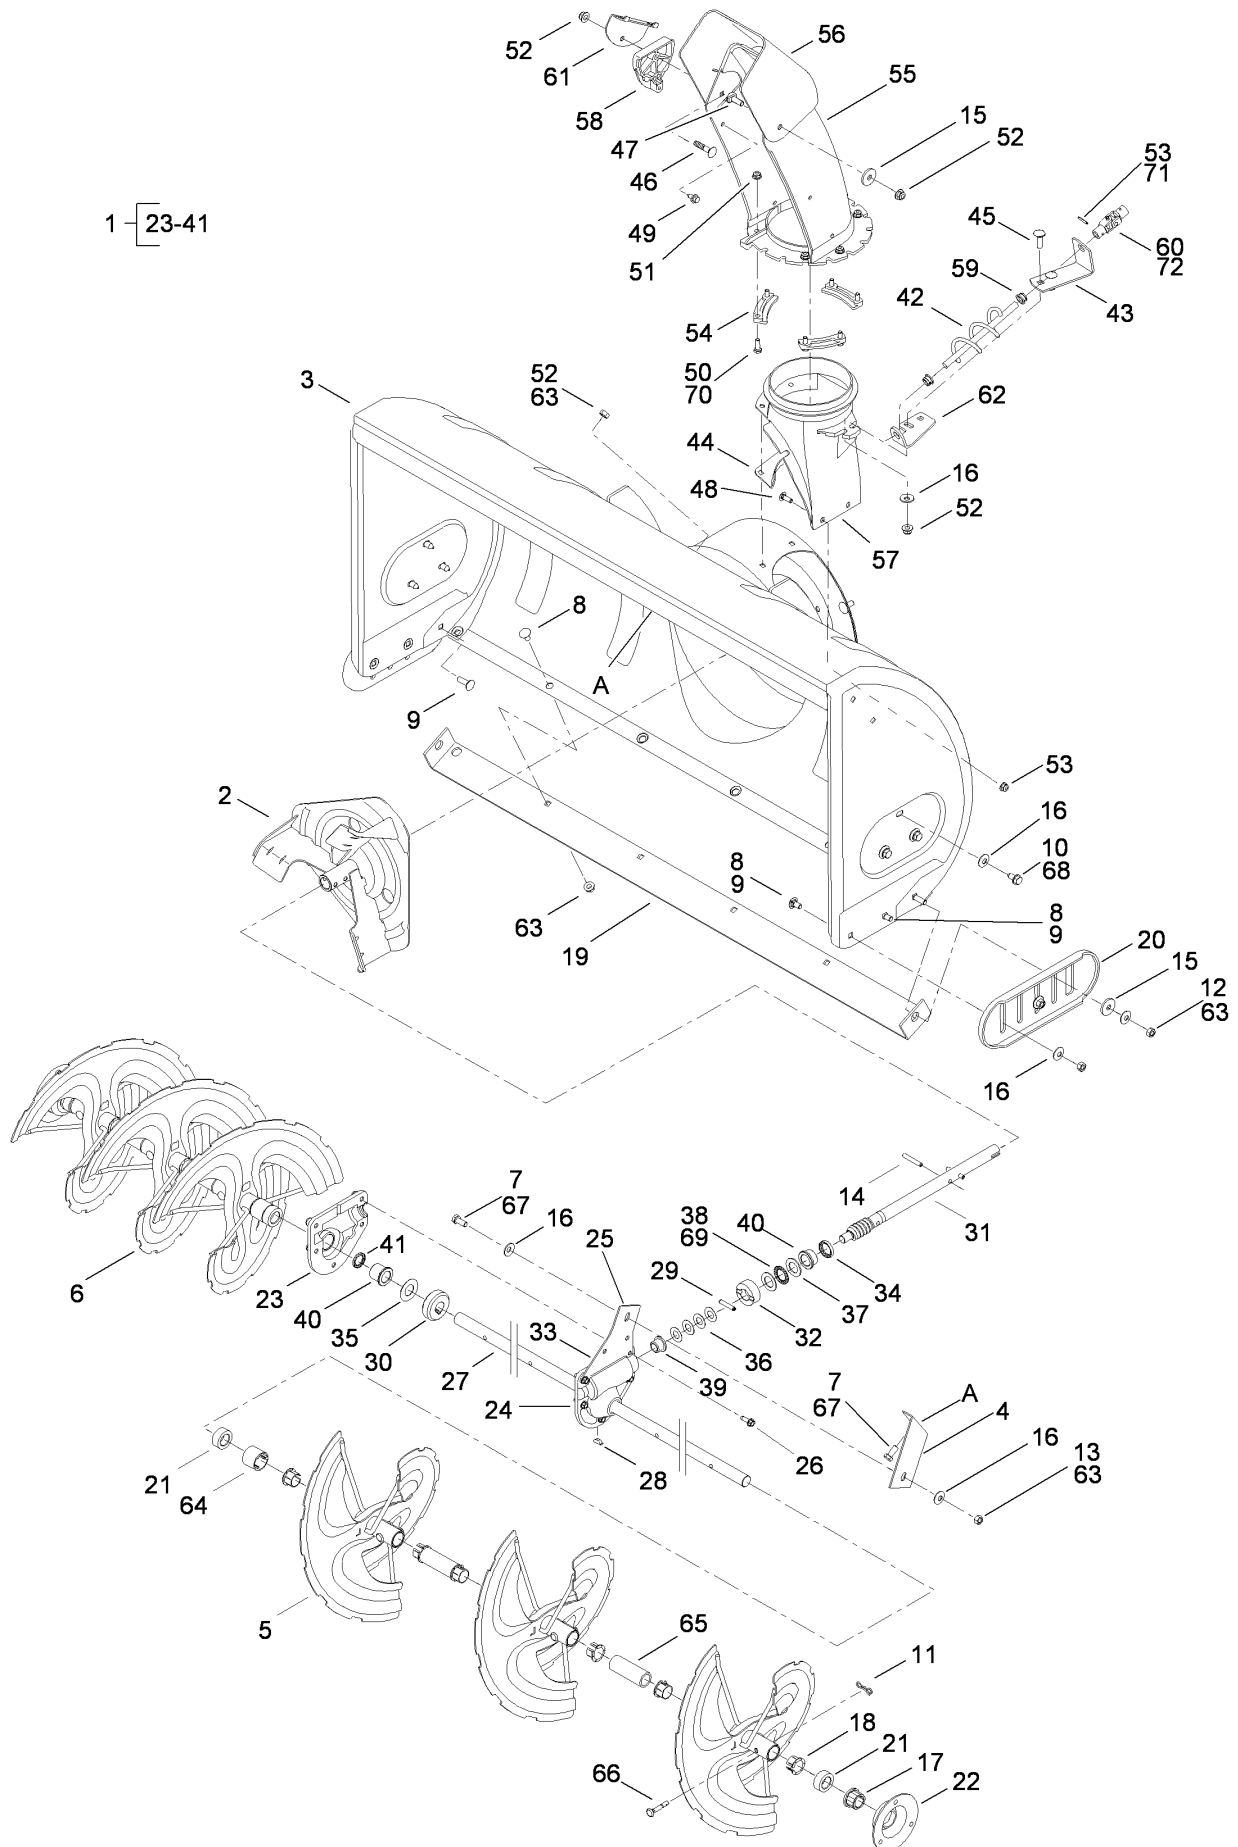

Auger Housing, Discharge Chute and Impeller Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-1135	1	Auger Gear Box ASM	37	112-3662	2	Washer-Thrust
2	112-0959	1	Impeller ASM	38	112-3663	1	Bearing-Thrust
3	112-0957	1	Housing ASM	39	112-3664	1	Bearing-Flange
4	112-0965	1	Bracket-Housing, Brace	40	112-3665	1	Bearing-Flange
5	112-0961	3	LH Spiral Auger ASM	41	112-3667	2	Seal-Grease
6	112-0962	3	RH Spiral Auger ASM	42	112-0956	1	Crank Chute ASM
7	112-1071	2	Screw-HH	43	112-0966	1	Bracket-Chute
8	112-1072	10	Bolt-CARR	44	112-0968	1	Reinforcement-Chute
9	112-0598	2	Bolt-CARR	45	112-0598	2	Bolt-CARR
10	112-0598	8	Bolt-CARR	46	112-1073	1	Bolt-CARR
11	112-0990	8	Pin-Cotter	47	112-0971	1	Bolt-CARR
12	112-0437	6	Nut-Hex	48	112-0479	5	Bolt-CARR
13	112-1120	2	Nut-Hex	49	112-1085	1	Screw-HH
14	112-1130	2	Pin-Roll	50	112-0499	6	Screw-HH
15	112-1159	3	Washer-Flat	51	112-0636	11	Nut-Lock, Flange
16	112-0435	17	Washer-Bell	52	112-0650	5	Nut-Lock, Flange
17	112-1179	2	Bearing-Flange	53	112-0992	1	Pin-Spring, Spiral
18	112-1022	12	Bearing-Flange	54	112-1002	3	Keeper-Flange, Chute
19	112-1061	1	Bracket-Plate, Skid	55	112-1007	1	Chute-Lower
20	112-1063	2	Shoe-Slide	56	112-0999	1	Chute-Upper
21	112-0980	4	Spacer	57	112-1009	1	Adapter-Chute, Discharge
22	112-1066	2	Housing-Bearing, Hex	58	112-1008	1	Guide-Cable
23	112-3650	1	Housing-Reducer, RH	59	112-0928	2	Bearing-Ball
24	112-3651	1	Housing-Reducer, LH	60	112-1205	1	Joint Block ASM
25	112-3652	1	Plate-Brace, Housing	61	112-1064	1	Bracket-Cable
26	112-0587	5	Screw-TAP	62	112-1067	1	Bracket-Crank, Chute
27	112-3653	1	Axle-Spiral	63	112-0511	6	Nut-Lock, Flange
28	112-3654	1	Key-Hi Pro	64	112-1000	2	Spacer
29	112-3655	1	Pin-Spirol, Spring	65	112-1006	4	Sleeve
30	112-3656	1	Gear-Worm, 20T	66	112-1020	8	Pin-Shear
31	112-3657	1	Shaft-Worm	67	119-3956	2	Screw
32	112-3658	1	Collar-Thrust	68	112-6070	2	Screw-TAP
33	112-3659	1	Plug-Grease	69	119-3957	1	Bearing-Thrust
34	112-3660	1	Seal-Grease	70	112-6179	6	Screw-Hex
35	112-0813	2	Washer-Thrust	71	119-3958	1	Pin-Spirol
36	112-3661	4	Washer-Flat	72	119-3959	1	Joint Block ASM


Handle, Crank Rod and Drive Assembly

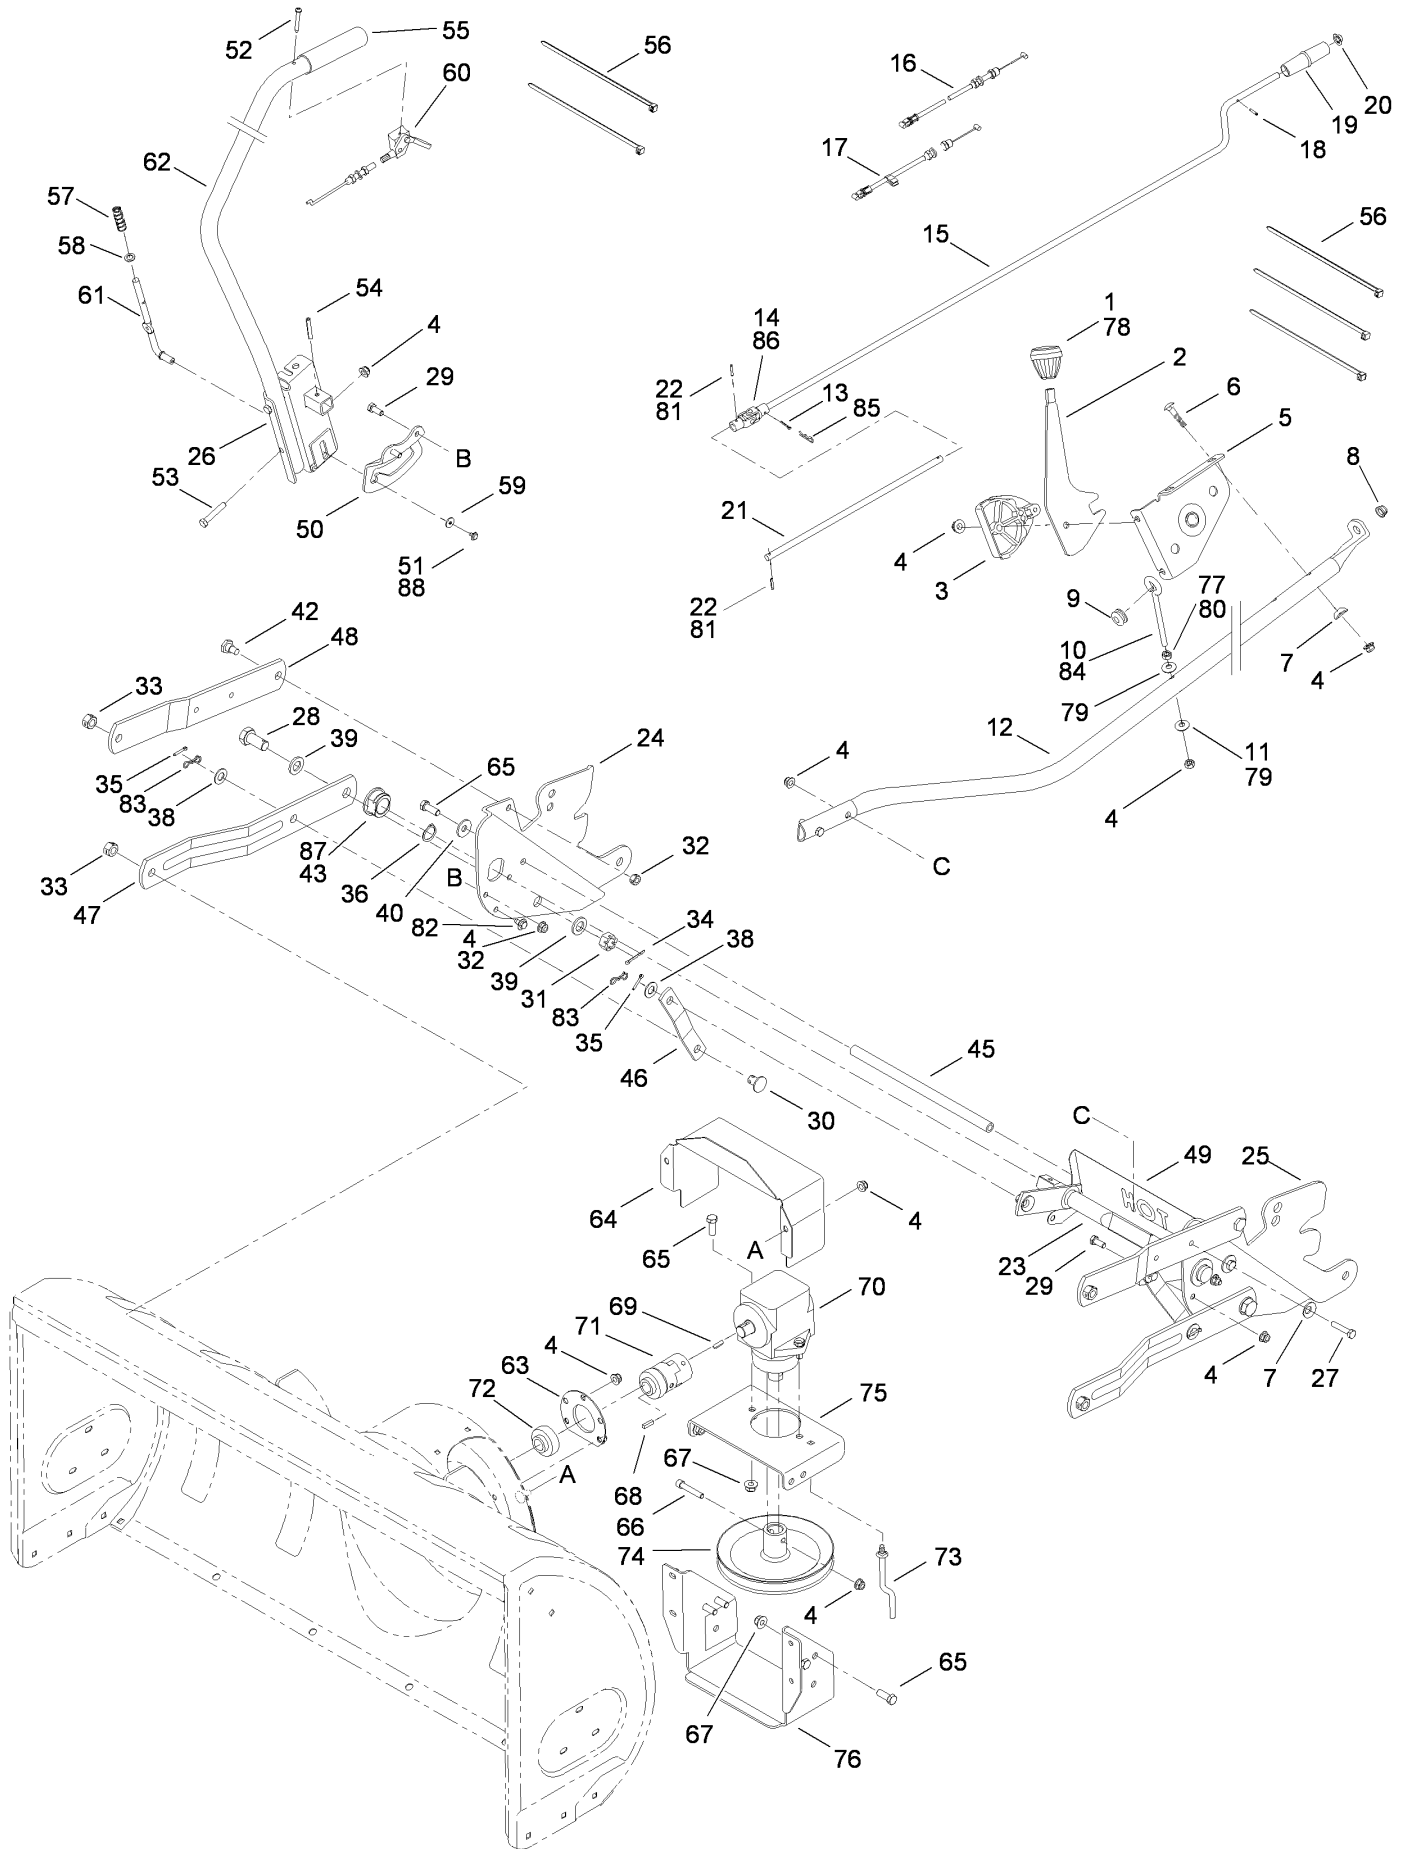

Handle, Crank Rod and Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-1138	1	Knob	47	112-1049	2	Link
2	112-1065	1	Handle-Tilt, Chute	48	112-1050	2	Link
3	112-1008	1	Guide-Cable	49	112-1056	1	Shield-Heat
4	112-0650	22	Nut-Lock, Flange	50	112-1068	1	Bracket-Lift
5	112-0944	1	Bracket-Tilt, Chute	51	112-0857	1	Screw-HH, TAP
6	112-1073	2	Bolt-CARR	52	112-1093	1	Screw-Pan HD
7	112-1169	2	Washer-Saddle	53	112-1095	2	Bolt-HH
8	112-0929	1	Bushing	54	112-1130	1	Pin-Roll
9	112-1015	1	Grommet	55	112-0995	1	Grip
10	112-1029	1	Eyebolt	56	112-0527	5	Tie-Cable
11	112-0435	1	Washer-Bell	57	112-1013	1	Spring-Compression
12	112-1039	1	Tube-Support, Chute	58	112-0407	1	Washer-Flat
13	112-0354	1	Pin-Cotter	59	112-1168	1	Washer-Flat
14	112-1205	1	Joint Block ASM	60	112-1024	1	Cable-Lift, W/Trigger
15	112-1031	1	Rod-Crank, Chute	61	112-1032	1	Rod-Index, Lift
16	112-1025	1	Cable-Chute	62	112-1040	1	Tube-Handle, Lift
17	112-1026	1	Cable-Chute	63	112-0937	1	Housing-Bearing
18	112-1131	1	Pin-Roll	64	112-0967	1	Cover-Belt
19	112-0993	1	Knob-Crank, Chute	65	112-0492	8	Screw-HH
20	112-1141	1	Nut-Push	66	112-1096	1	Screw-HSH
21	112-1028	1	Rod	67	112-0668	6	Nut-Lock, Flange
22	112-0992	2	Pin-Spring, Spiral	68	112-1122	1	Key-Square
23	112-0945	1	Rod ASM	69	112-1123	1	Key-Hi Pro
24	112-3669	1	RH Support Plate ASM	70	112-1134	1	Drive-Angle, Right
25	112-3670	1	LH Support Plate ASM	71	112-1137	1	Coupler-Flexible
26	112-0950	1	Lift Bracket ASM	72	112-1180	1	Bearing-Ball (W/Out Collar)
27	112-0594	2	Screw-HH	73	112-1033	1	Rod-Keeper, Belt
28	112-0975	2	Screw-HH	74	112-1042	1	Pulley-Drive
29	112-1090	4	Screw-HH	75	112-1053	1	Bracket-Mounting
30	112-0376	2	Pin-Bracket, Lift	76	112-1062	1	Plate-Skid
31	112-0982	2	Nut-Hex Castle	77	112-0437	1	Nut-Hex
32	112-0909	4	Nut-Lock	78	119-3955	1	Knob
33	112-1117	4	Nut-Hex, Lock	79	112-0485	2	Washer-Spring
34	112-0412	2	Pin-Cotter	80	112-0522	1	Nut-Hex
35	112-1128	8	Pin-Cotter	81	119-3958	1	Pin-Spirol
36	112-1132	1	Ring-Snap	82	112-0556	2	Screw-HWH
38	112-1163	4	Washer-Flat	83	119-3960	2	Pin-Cotter, Bow Tie
39	112-1167	4	Washer-Flat	84	119-3964	1	Bolt-Eye
40	112-1170	2	Washer-Bell	85	119-3965	1	Pin-Cotter
42	112-1019	2	Bolt-Shoulder	86	119-3959	1	Joint Block ASM
43	112-1178	2	Bearing-Flange	87	119-3966	2	Bearing-Flange
45	112-1030	1	Rod	88	119-3967	1	Screw-Washer, Hex Index
46	112-1048	2	Link				

Spindle and Belt Assembly

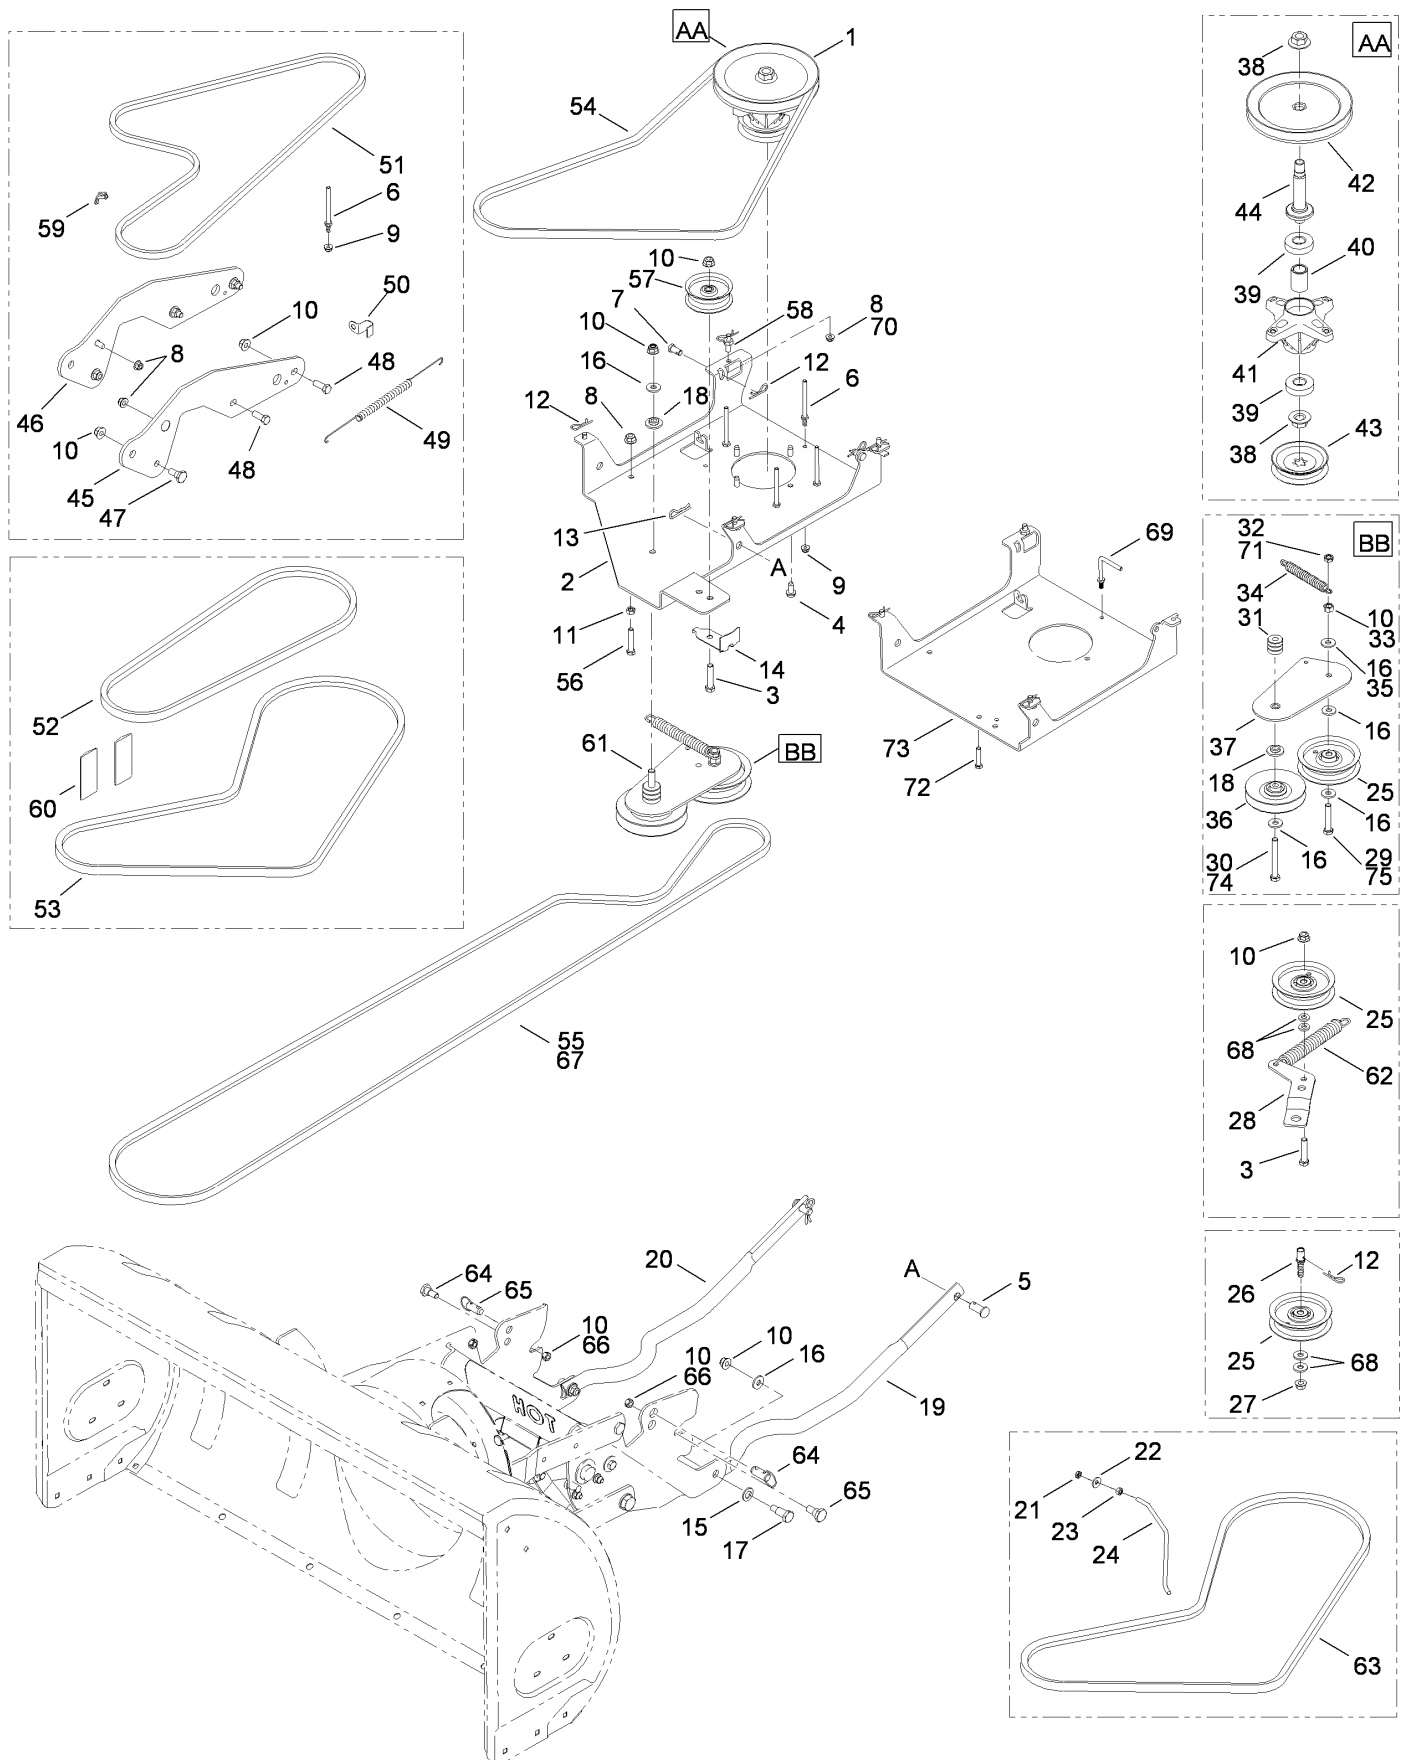

Spindle and Belt Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-0946	1	7 Inch Pulley Spindle ASM	39	112-0377	2	Bearing-Ball
2	112-0951	1	Bracket-Mounting, Pulley	40	112-3680	1	Spacer
3	112-0513	2	Screw-HH	41	112-3681	1	Housing-Spindle, Deck
4	112-0395	4	Screw-HWH	42	112-3682	1	Pulley-Deck, 7 Inch
5	112-1097	2	Pin-Clevis	43	112-3683	1	Pulley-3.75 Inch
6	112-1101	4	Keeper-Belt	44	112-3684	1	Shaft-Spindle
7	112-3674	2	Pin-Clevis	45	112-0953	1	LH Bracket ASM
8	112-0650	4	Nut-Lock, Flange	46	112-0952	1	RH Bracket ASM
9	112-0636	4	Nut-Lock, Flange	47	112-3685	2	Bolt-Shoulder
10	112-0668	11	Nut-Lock, Flange	48	112-0492	4	Screw-HH
11	112-0437	1	Nut-Hex	49	112-1014	1	Spring-Extension
12	112-0398	7	Pin-Click	50	112-3686	1	Clamp
13	112-0989	2	Pin-Clip, Internal	51	112-1196	1	Belt- V Type
14	112-1148	1	Keeper-Belt	52	112-1192	1	Belt-V, A Section
15	112-1156	2	Washer-Flat	53	112-1194	1	Belt-V Type
16	112-1018	4	Washer-Isomount	54	112-1191	1	Belt-V
17	112-1174	2	Bolt-Shoulder	55	112-1189	1	Belt-V Type
18	112-0508	2	Spacer-Shoulder	56	112-1095	1	Bolt-HH
19	112-1037	1	Tube-Support, LH	57	112-3687	1	Pulley-Idler, Flat
20	112-1038	1	Tube-Support, RH	58	112-0972	1	Pin
21	112-1108	1	Nut-Hex, Jam	59	112-0986	1	Nut-Wing
22	112-0485	1	Washer-Spring	60	112-1145	2	Reflector
23	112-0522	1	Nut-Hex	61	112-0958	1	Doubler Idler Bracket ASM
24	112-1027	1	Rod-Keeper, Belt	62	112-0324	1	Spring-Extension
25	112-0303	3	Pulley-Idler, 3.50 Inch	63	112-1299	1	V-Belt, B Section
26	112-0948	1	Spacer-Idler	64	112-0565	1	Bolt-Shoulder
27	112-0385	1	Nut-Lock, Flange	65	119-3954	1	Pin-Release, Quick
28	112-1057	1	Bracket-Idler	66	112-1113	2	Nut-Lock
29	112-3675	1	Screw-HH	67	119-3961	1	Belt-V
30	112-0856	1	Screw-HH	68	112-0544	2	Washer-Flat
31	112-3676	3	Spacer	69	119-3962	1	Pin-Keeper, Belt
32	112-3677	1	Nut-Nylon, Jam	70	112-1115	4	Nut-Hex, Center Lock
33	112-0343	1	Nut-Hex	71	119-3963	1	Nut
34	112-3678	1	Spring-Extension	72	112-0557	1	Screw-HH
35	112-0415	1	Washer-Lock	73	119-3968	1	Bracket-Mounting, Pulley
36	112-0365	1	Pulley	74	112-0978	1	Bolt-Hex
37	112-3679	1	Idler Pivot ASM	75	112-0421	1	Screw-HH
38	112-0330	2	Nut-Lock, Flange				

Notes:

Notes:



Count on it.