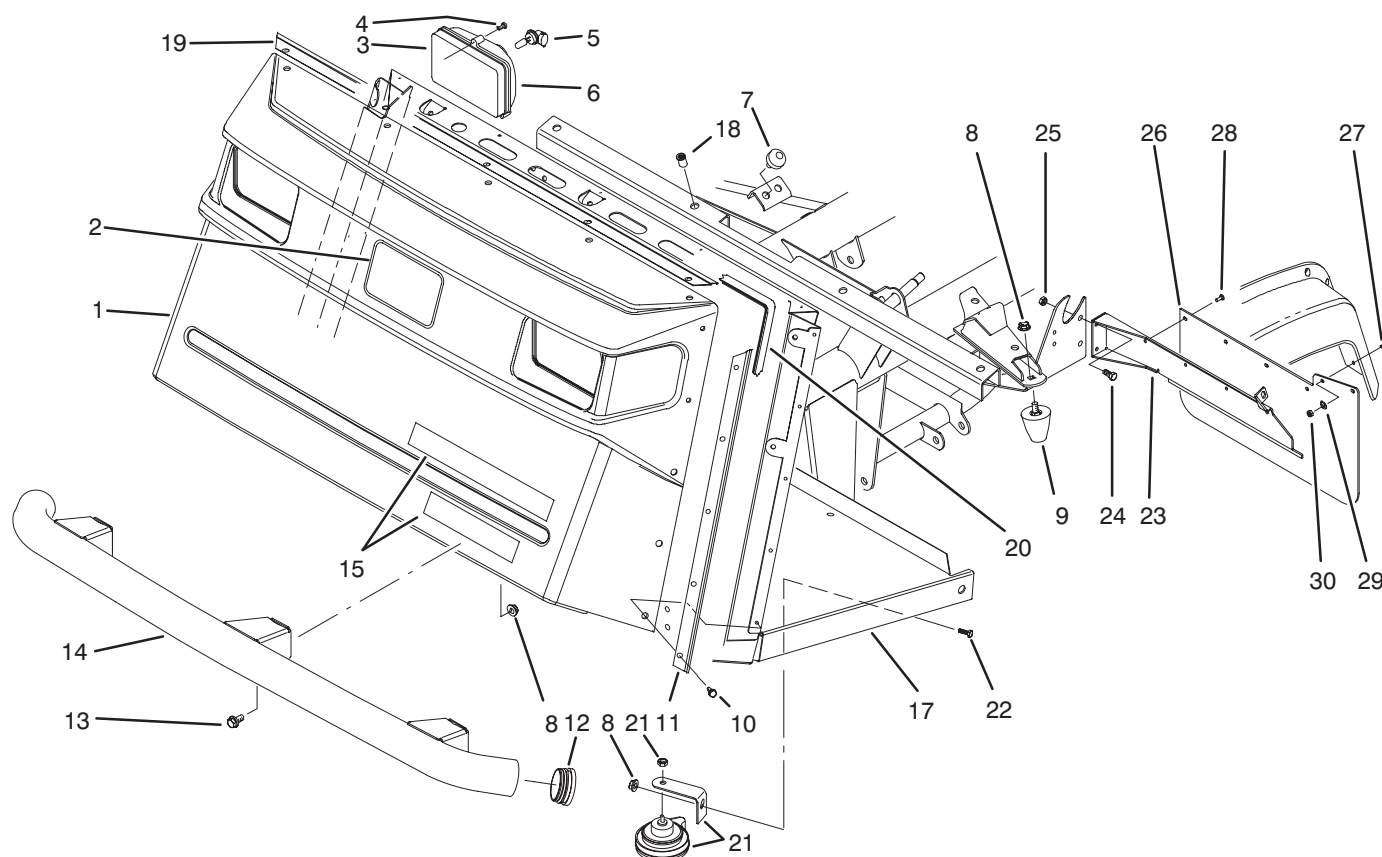 


TORO®**MODEL NO. 07206-50001 & UP****PARTS
CATALOG****WORKMAN 3300D**

T-1581


FRONT BUMPER & HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	87-0710	Hood	1
2	62-5550	Decal - TORO	1
3	87-2120	Headlight Assembly (Incl. Ref. #5-6)	2
4	32104-88	Screw	6
5	87-6320	Bulb - Headlight	2
6	87-6330	Lens - Headlight	2
7	87-2440	Bumper	2
8	3290-357	Nut - Flange Lock	9
9	26-0071	Bumper	2
10	87-6620	Screw	15
11	87-8120	Bracket - Trim Side	2
12	2410-42	Cap - Front Bumper	2
13	3234-1	Screw - Hex. Flange Hd.	6
14	87-4070	Bumper - Front	1
15	87-6070	Decal - Workman 3300D	1

Ref. No.	Part No.	Description	No. Used
17	92-4197	Operators Platform Assy. (Incl. Ref. #18)	1
18	32148-7	Nut - Clinch	8
19	87-8130	Bracket - Trim Top	1
20	87-8160	Trim	1
21	116749	Horn Assembly	1
22	323-4	Screw - Cap Hex. Hd.	1
23	87-9330	Bracket - Mudflap LH	1
*	87-9340	Bracket - Mudflap RH	1
24	321-4	Screw - Cap Hex. Hd.	4
25	32128-33	Nut - Lock	4
26	87-9320	Mudflap	2
27	3250-13	Screw - Pan Hd.	4
28	146489	Rivet - Pop	8
29	3256-61	Washer - Flat	4
30	3296-2	Nut - Lock	4

*Not Illustrated

 
TPS

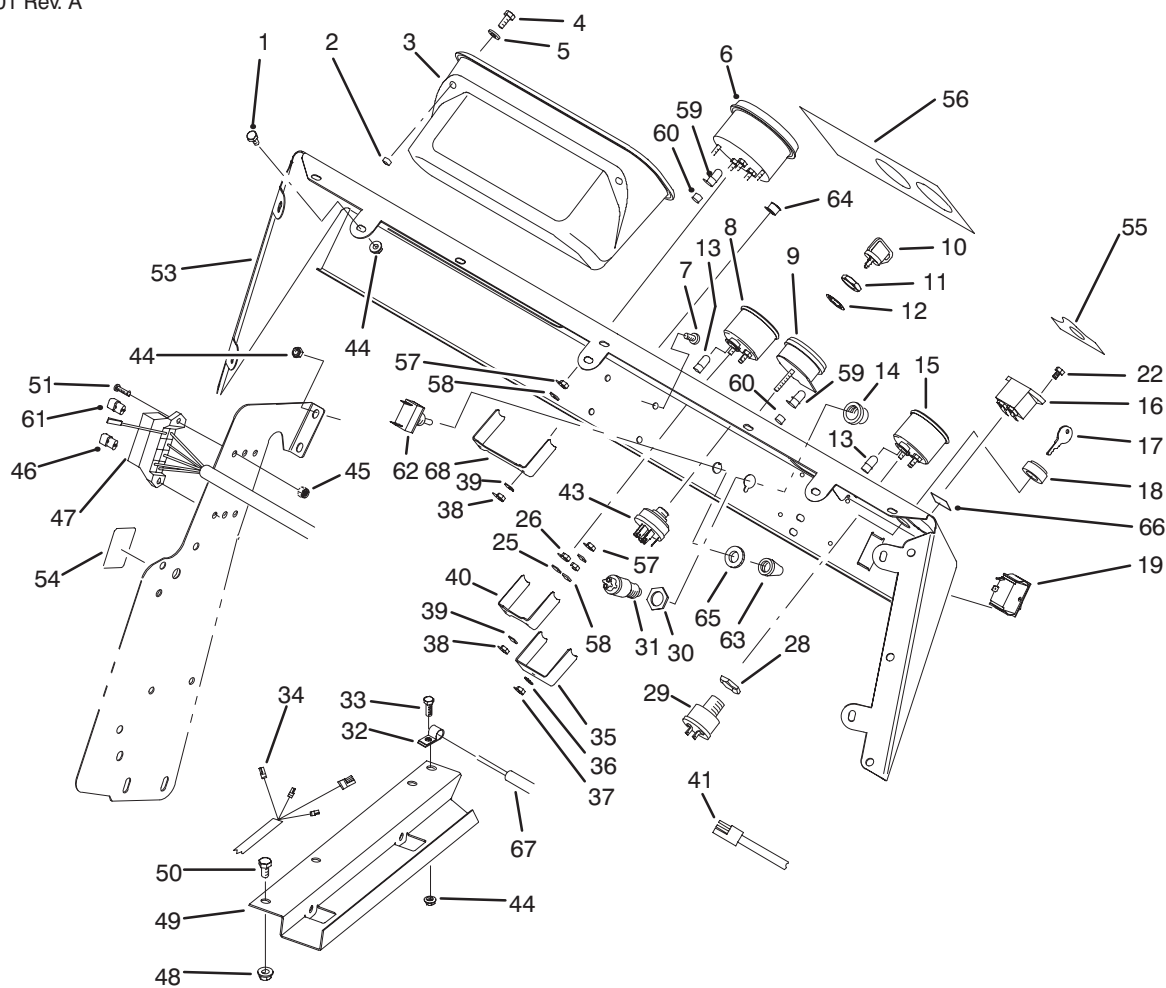

T-2012

CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	321-2	Screw - Cap Hex. Hd.	7	29	87-4030	Supervisor Switch Assembly (Incl. Ref. #17, 18 & 28)	1
2	32148-6	Insert - Threaded	2	30		Nut - Hex.	1
3	87-3780	Box - Glove	1	31	18-2830	Horn Switch Assembly (Incl. Ref. #14 & 30)	1
4	321-3	Screw - Cap Hex. Hd.	2	32	2412-89	Clamp - R	1
5	3256-22	Washer - Flat	2	33	321-4	Screw - Cap Hex. Hd.	1
6	87-9940	Tachometer Assembly (Incl. Ref. #38, 39, 57-60 & 68)	1	34	93-7130	Harness - Wire Rear	1
7	3274-31	Screw - Button Hd.	4	35		Clamp - Light	1
8	87-5590	Temperature Gauge Assy. (Incl. Ref. #38-40, 57 & 58)	1	36	3254-1	Washer - Lock	1
9	93-7053	Warning Light Assembly (Incl. Ref. #35-37, 59 & 60)	1	37	3217-26	Nut - Hex.	1
10	63-8360	Key - Ignition	1	38	3217-25	Nut - Hex.	4
11	218-446	Nut - Hex.	1	39	3253-15	Washer - Lock	4
12	218-447	Washer - Lock	1	40		Clamp - Temp. Gauge	1
13	218-600	Bulb	2	41	87-4230	Harness - Wire Front LH	1
14		Button - Horn	1	43	27-2360	Ignition Switch Assembly (Incl. Ref. #11 & 12)	1
15	87-5580	Fuel Gauge Assembly (Incl. Ref. #38-40, 57 & 58)	1	44	32128-33	Nut - Flange	12
16	75-6820	Hourmeter	1	45	3296-2	Nut - Lock	2
17	87-0740	Key - Supervisor Switch	1	46	218-574	Fuse - 7.5 Amp	2
18	87-1720	Nut - Supervisor Switch	1	47	87-8500	Front Wire Harness Assy. (Incl. Ref. #13)	1
19	87-3790	Switch - Light	1	48	32128-20	Nut - Flange	3
22	32144-18	Screw - Cap Hex. Hd.	2	49	93-7094	Cover - Wire Harness	1
28		Nut - Hex.	1	50	322-2	Screw - Cap Hex. Hd.	3
				51	3250-13	Screw	2

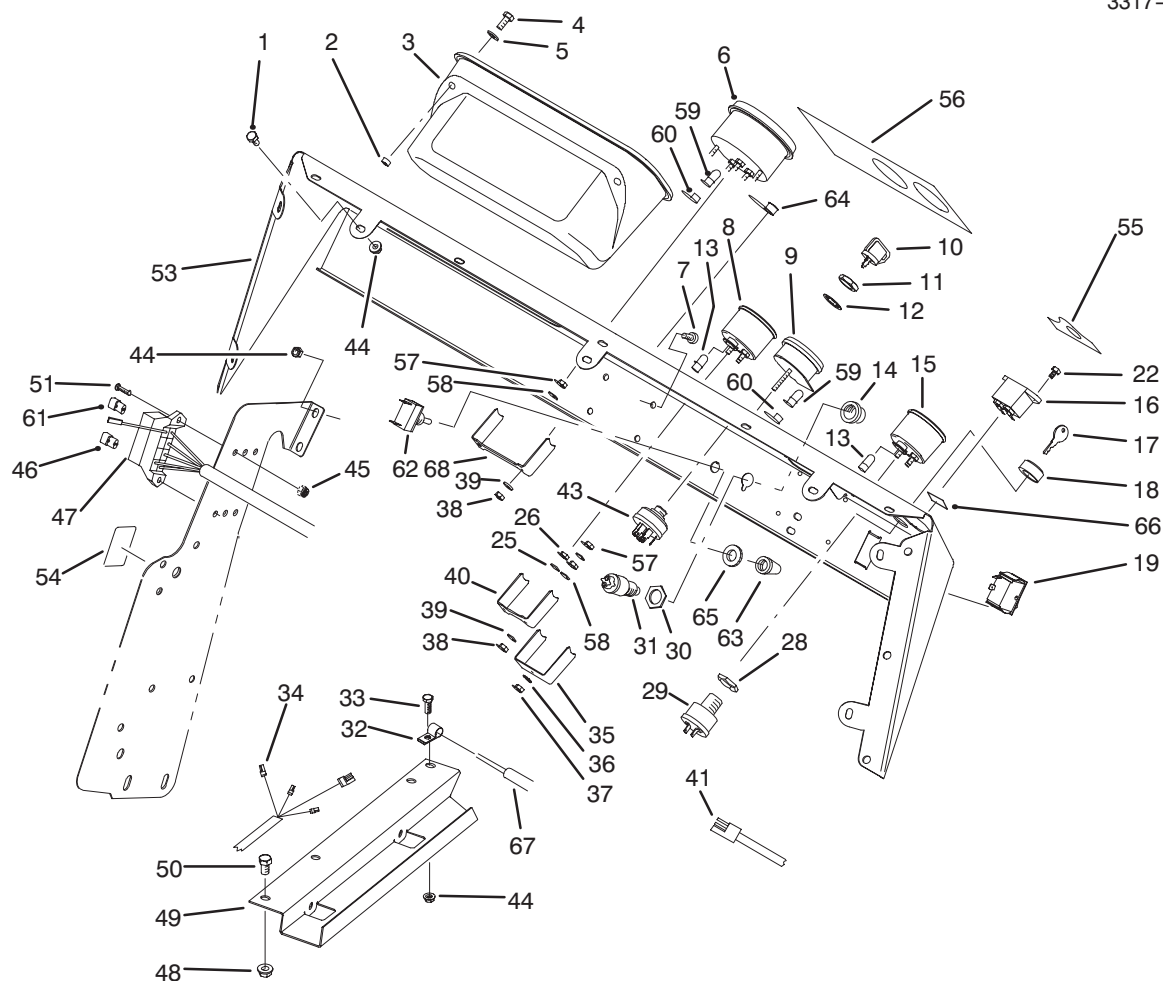 



T-2012

CONTROL PANEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
53	87-8550	Control Panel Assembly (Incl. Ref. #55-56)	1	61	218-578	Fuse - 10 Amp	1
54	93-9851	Decal - Fuse Block	1	62	20-7150	Toggle Switch Assembly (Incl. Ref. #65)	1
55	93-9856	Decal - Supervisor	1	63	218-473	Boot - Switch	1
56	93-9445	Decal - Dash	1	64	2410-64	Plug - Hole	1
57	3217-29	Nut - Jam	7	65		Nut - Lock	1
58	3253-19	Washer - Lock	7	66	93-7252	Decal - CE	1
59	219-17	Bulb - Warning Light	5	67	87-8590	Cable - Clutch	1
60	87-6270	Socket & Bulb Assembly (Incl. Ref. #59)	5	68		Clamp - Tachometer	1

  ELECTRICAL SCHEMATIC

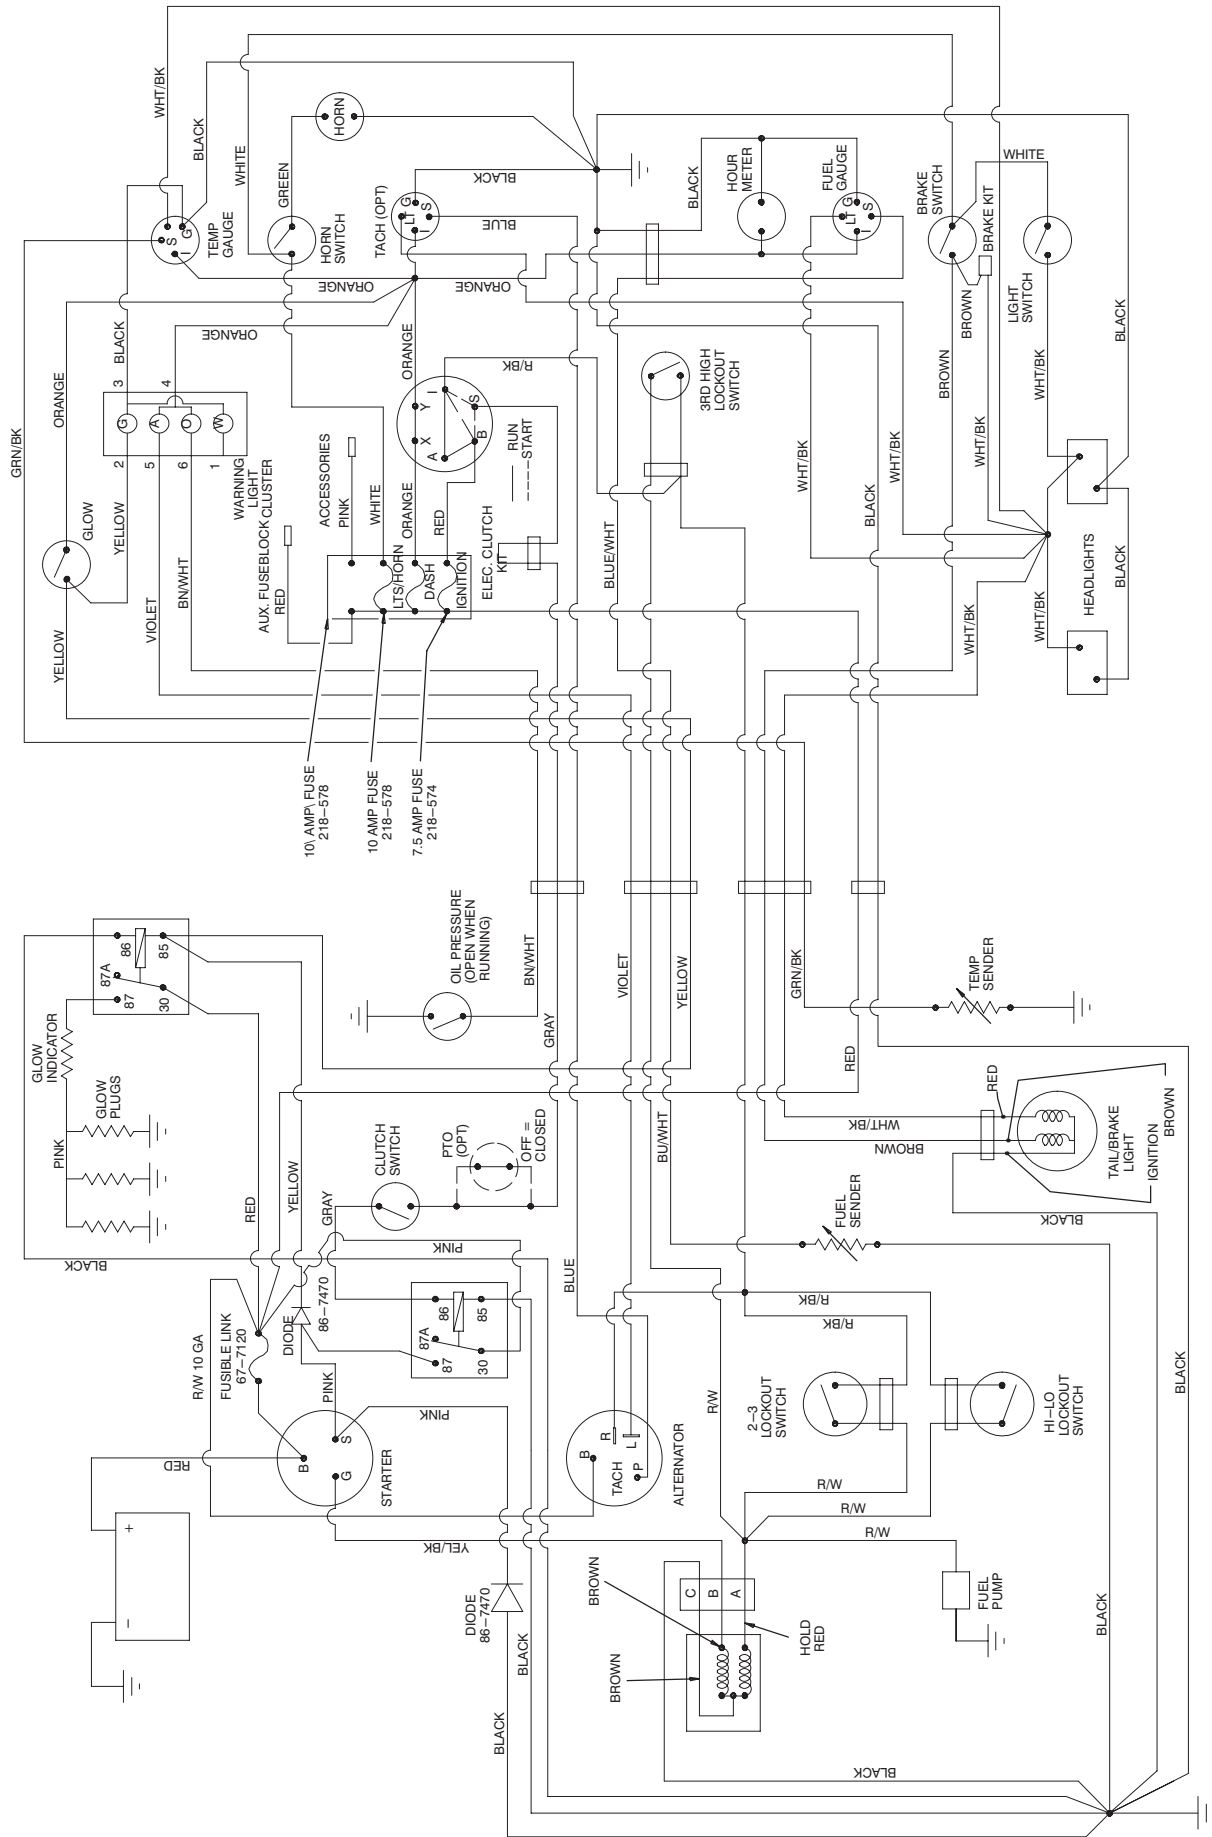

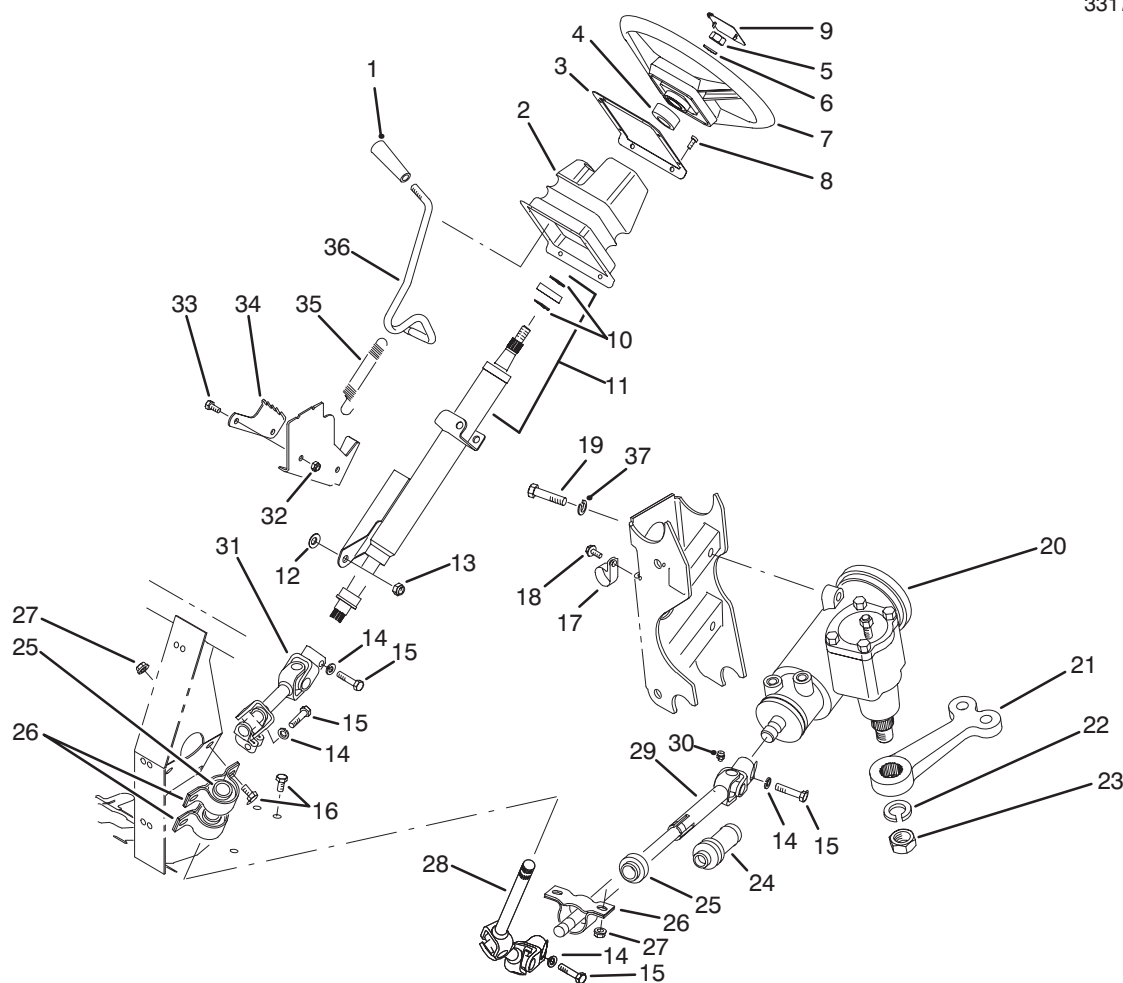


T-1584

STEERING LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	233-39	Knob	1	21	87-0370	Arm - Pitman	1
2	87-3460	Boot - Tilt Steering	1	22	39-7420	Washer - Lock	1
3	87-4720	Plate - Steering Boot	1	23	39-7440	Nut - Lock	1
4	21-9260	Spacer	1	24	92-4157	Boot - Steering Shaft	1
5	3277-1	Nut - Hex.	1	25	87-2280	Bearing	3
6	48-8070	Washer - Flat	1	26	87-3250	Mount - Bearing	3
7	87-3820	Wheel - Steering	1	27	32128-20	Nut - Flange	6
8	32144-116	Screw - Pan Head	8	28	92-4155	Slip Joint Assembly - Upper	1
9	87-3750	Cover - Steering Wheel	1	29	92-4156	Slip Joint Assembly - Lower	1
10	43-6550	Ring - Retaining	2			(Incl. Ref. #24 & 30)	
11	92-4153	Assembly - Steering Column	1	30	302-5	Fitting - Grease	1
		(Incl. Ref. #10)		31	92-4154	Universal Joint Assembly	1
12	3290-455	Washer	1	32	3296-42	Nut - Lock	2
13	3296-59	Nut - Lock	1	33	321-3	Screw - Cap Hex. Hd.	2
14	3253-4	Washer - Lock	4	34	87-3610	Bracket - Detent	1
15	48-7740	Screw - Cap Hex. Hd.	4	35	65-5360	Spring - Extension	1
16	322-2	Screw - Cap Hex. Hd.	6	36	87-3130	Lever - Tilt Steering	1
17	2412-105	Clamp - R	2	37	87-7480	Washer - Lock	3
18	32144-10	Screw - Self Tapping	2	*	87-3100	Lower Shaft Assembly	1
19	93-7145	Screw - Cap Hex. Hd.	3			(Incl. Ref. #24 & 28-30)	
20	87-1500	Steering Gear Assembly	1	*	87-3120	Steering Column & Shaft	1
		(Incl. Ref. #22 & 23)				(Incl. Ref. #10, 11 & 31)	

 *Not Illustrated

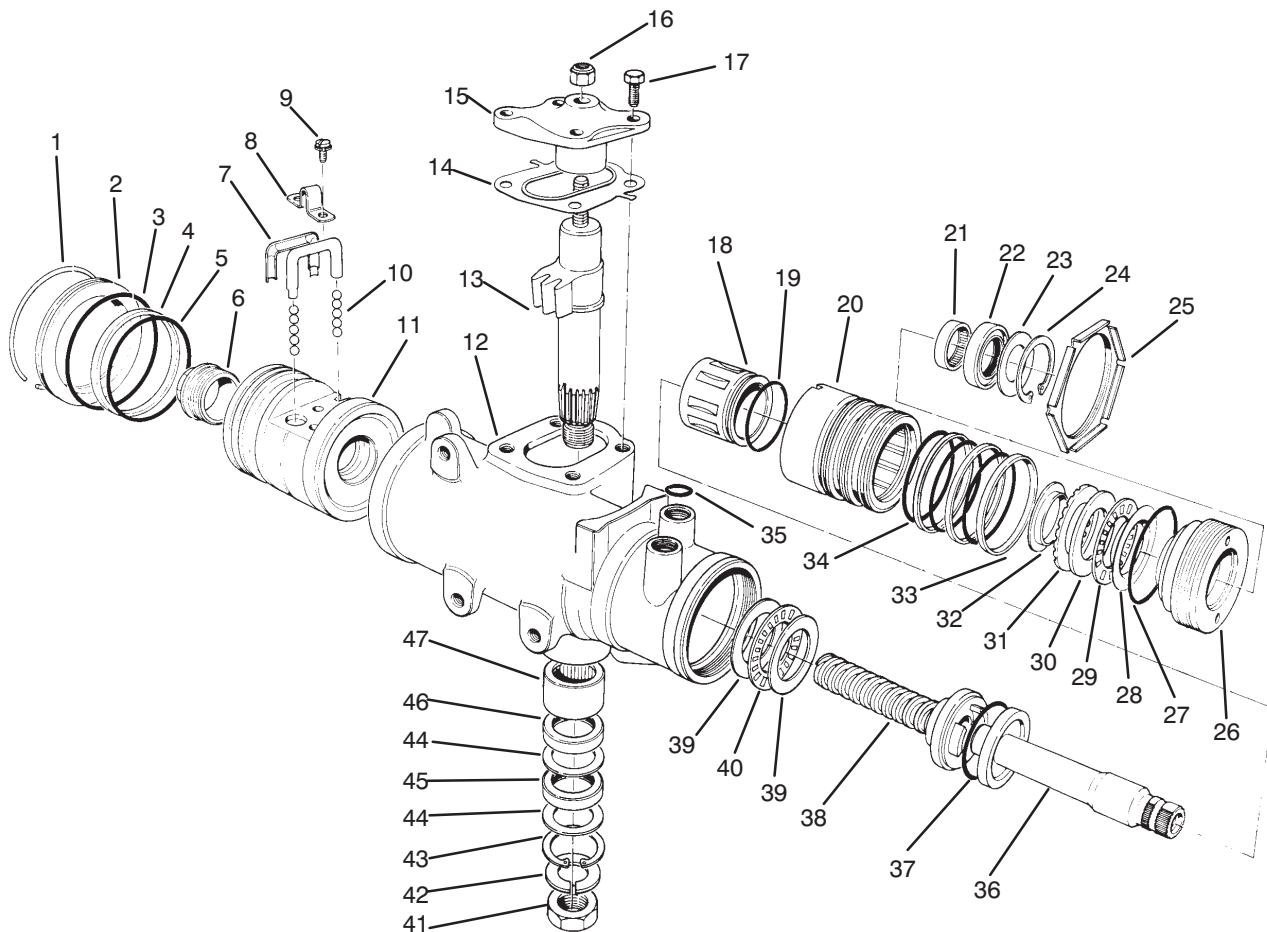


T-1580

STEERING GEAR ASSEMBLY NO. 87-1500

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Ring - Retaining	1	26		Plug - Adjuster	1
2	92-4165	Plug - Housing End	1	27	28-8200	O-Ring	1
3		Seal - Housing End Plug	1	28		Race - Upper Bearing	1
4		Ring - Rack Piston	1	29		Bearing - Roller, Thrust	1
5		O-Ring, Rack Piston	1	30		Race - Thrust Bearing	1
6	18-4340	Plug - Rack Piston End	1	31		Spacer - Thrust Bearing	1
7	92-4168	Return - Guide Ball	2	32		Retainer - Bearing	1
8	18-4270	Clamp - Ball Return Guide	1	33		Ring - Valve Body	3
9	18-4260	Assy. - Screw/Lockwasher	2	34		O-Ring	3
10	18-5190	Ball - Chrome Alloy	11	35	39-7310	O-Ring	3
11		Nut - Rack Piston	1	36		Shaft - Stub	1
12		Housing - Steering Gear	1	37		O-Ring	1
13		Gear - Pitman Shaft	1	38		Worm - Steering	1
14	28-8280	Seal Kit - Side Cover (Incl. Ref. #17)	1	39		Race - Thrust Bearing	2
15		Cover - Housing Side	1	40		Bearing - Roller, Thrust	1
16	28-8220	Nut - Lash Adjuster	1	41	39-7440	Nut - Pitman Arm	1
17	28-8210	Bolt - Flange Hex. Hd.	4	42	39-7420	Washer - Lock	1
18		Spool Valve	1	43		Ring - Retaining	1
19		O-Ring, Spool Valve	1	44		Washer - Seal, Backup	2
20		Valve Body	1	45		Seal - Pitman Shaft	1
21	92-4169	Bearing - Needle	1	46		Seal - Pitman Shaft	1
22		Seal - Stub Shaft	1	47	92-4170	Bearing - Pitman Shaft	1
23		Seal - Stub Shaft Dust	1	*	92-4161	Assembly - Cover Service Housing Side (Incl. Ref. #14-17)	1
24		Ring - Retaining	1				
25	92-4159	Nut - Adjuster Plug Lock	1				

 *Not Illustrated

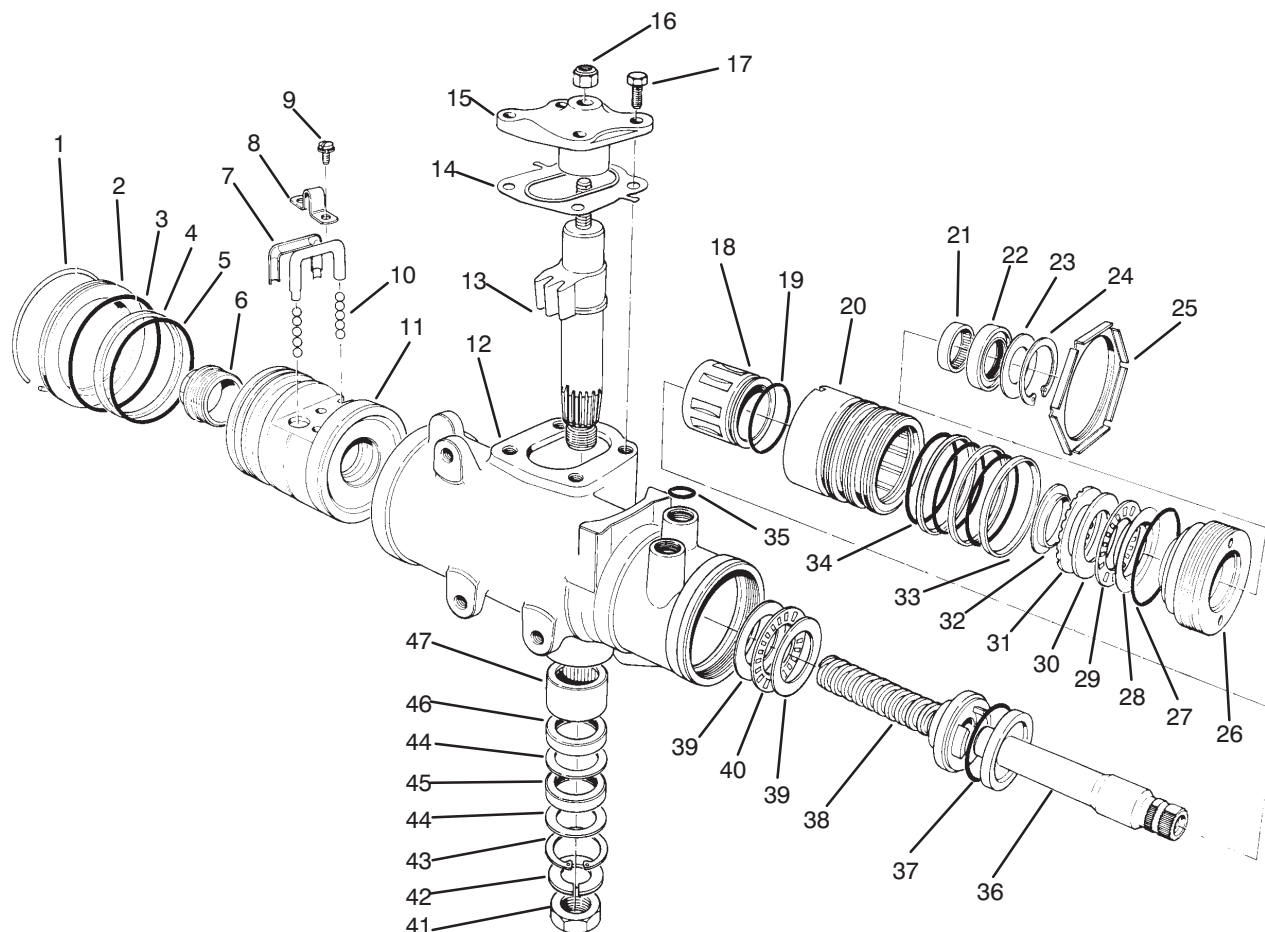


T-1580

STEERING GEAR ASSEMBLY NO. 87-1500

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
*	28-8270	Seal Service Kit – End Plug (Incl. Ref. #1 & 3)	1	*	92-4162	Pitman Shaft – Gear Service (Incl. Ref. #13-15 & 17)	1
*	28-8290	Seal Service Kit Rack/Piston (Incl. Ref. #4 & 5)	1	*	92-4158	Valve Assy. – Hyd. Gear (Incl. Ref. #18-20, 33, 34, 36 & 37)	1
*	18-5180	Bearing Kit – Lower Thrust (Incl. Ref. #39-40)	1	*	92-4160	Bearing Service Kit – Upper (Incl. Ref. #28-32)	1
*	18-5160	Seal Kit – Pitman Shaft (Incl. Ref. #43-46)	1	*	92-4166	Rack/Piston/Nut Assembly (Incl. Ref. #1-11 & 38)	1
*	18-5170	Seal Kit – Valve Ring (Incl. Ref. #19, 33, 34 & 37)	1	*	92-4164	Plug Assy. – Service Adjust. (Incl. Ref. #21-24 & 26-32)	1
*	92-4163	Assy. – Steering Housing (Incl. Ref. #12 & 43-47)	1	*	87-1500	Steering Gear (Complete)	1
*	92-4167	Assembly – Plug Service (Incl. Ref. #22-24 & 27)	1				

 *Not Illustrated

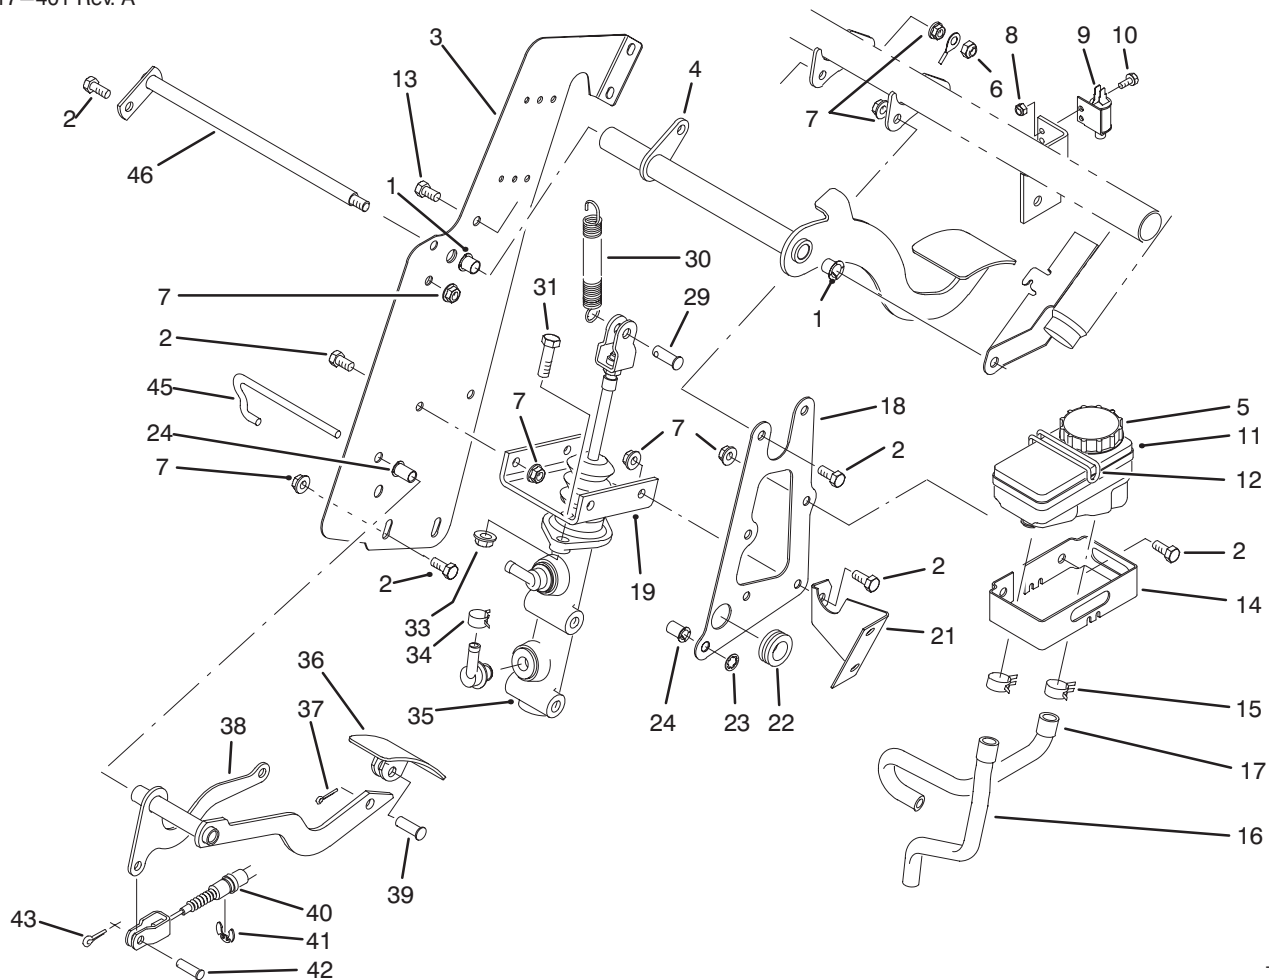


T-1585

BRAKE & ACCELERATOR PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	256-257	Bushing - Flange	2
2	322-2	Screw - Cap Hex. Hd.	12
3	87-2910	Support - Pedal RH	1
4	87-2540	Pedal - Brake	1
5	92-4112	Assembly - Cap	1
6	3296-29	Nut - Lock	1
7	32128-20	Nut - Flange Lock	13
8	3296-2	Nut - Lock	2
9	55-7120	Switch - Brake Light	1
10	3290-321	Screw - Hex. Flange Hd.	2
11	87-3040	Brake Fluid Reservoir Assy. (Incl. Ref. #5)	1
12	87-7570	Retainer - Reservoir	1
13	322-5	Screw - Cap Hex. Hd.	1
14	87-2890	Cradle - Reservoir	1
15	2412-143	Clamp - Hose	2
16	87-0670	Hose - Reservoir Front	1
17	87-0660	Hose - Reservoir Rear	1
18	87-2660	Support - Pedal LH	1
19	87-2640	Support - Master Cylinder	1

Ref. No.	Part No.	Description	No. Used
21	87-2650	Gusset	1
22	240-6	Grommet	1
23	32151-56	Ring - Push-On	1
24	52-2890	Bushing - Flange	2
29	283-2	Pin - Clevis	1
30	21-1830	Spring - Extension	1
31	323-7	Screw - Cap Hex. Hd.	2
33	3290-357	Nut - Flange Lock	2
34	2412-144	Clamp - Hose	2
35	87-3030	Master Cylinder Assembly	1
36	87-2670	Pedal - Accelerator	1
37	3272-6	Pin - Cotter	1
38	87-4790	Arm - Accelerator Pedal	1
39	283-85	Pin - Clevis	1
40	87-8610	Cable - Accelerator	1
41	32120-47	Ring - E	1
42	283-30	Pin - Clevis	1
43	3272-10	Pin - Cotter	1
45	87-2880	Shaft - Accelerator Pedal	1
46	87-2590	Shaft - Brake Pedal	1

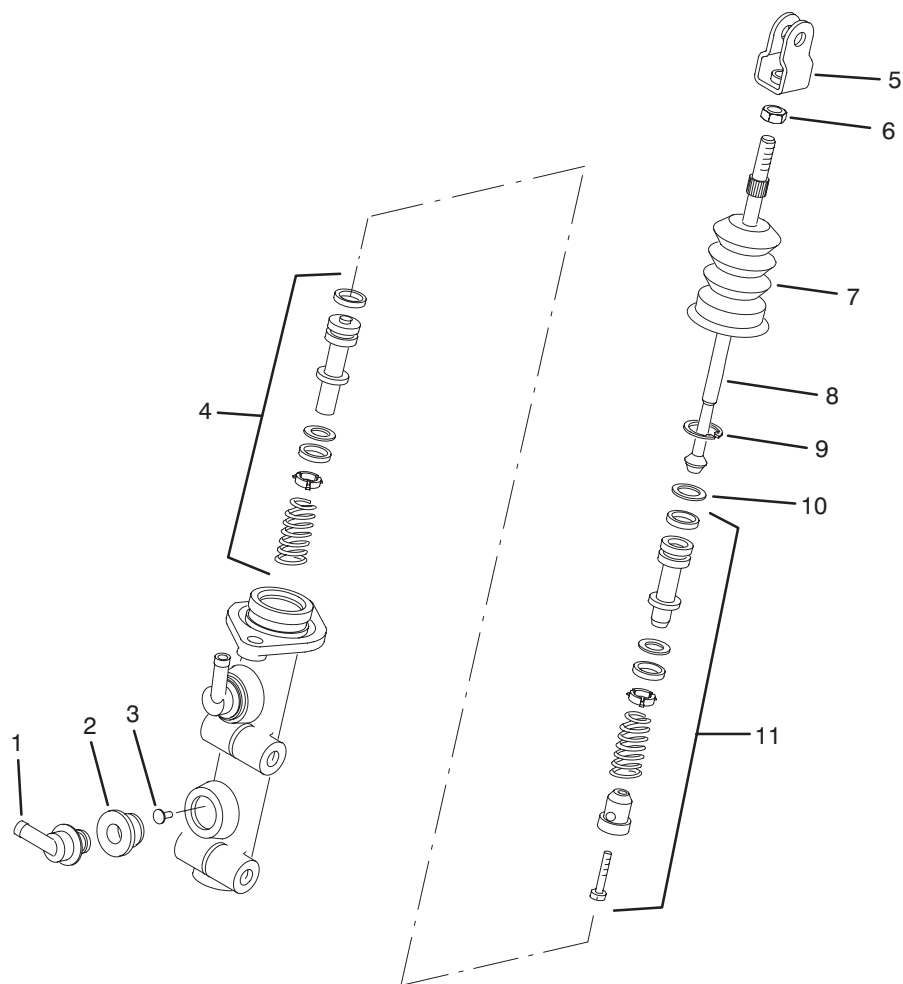 


T-1586

MASTER BRAKE CYLINDER NO. 87-3030

Ref. No.	Part No.	Description	No. Used
1	92-4104	Adaptor – Pipe Fitting	2
2		Seal	2
3	92-4103	Pin – Stop	1
4	92-4102	Secondary Piston Assembly	1
5	92-4110	Clevis	1
6	21-0360	Nut	1

Ref. No.	Part No.	Description	No. Used
7	92-4107	Dust Cover	1
8	92-4106	Rod – Push	1
9	92-4109	Circlip	1
10	92-4108	Washer – Retainer	1
11	92-4101	Primary Piston Assembly	1

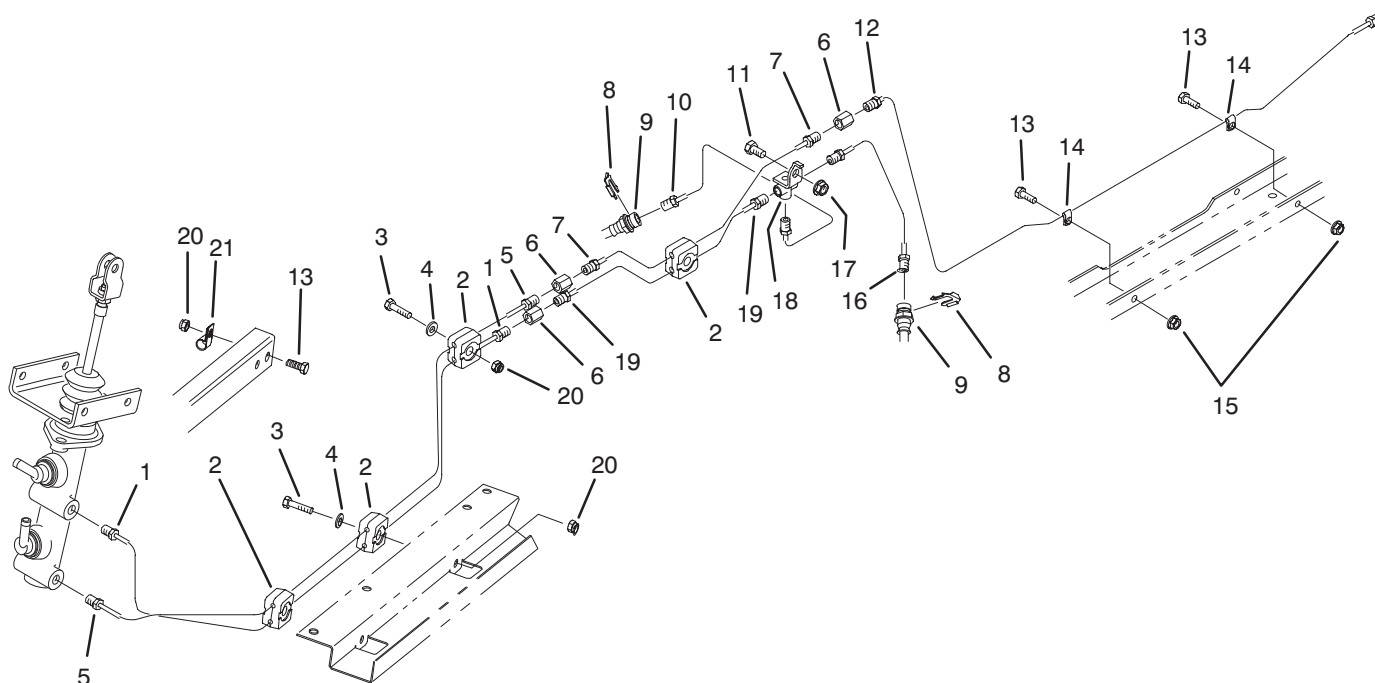 

T-1587


HYDRAULIC BRAKE LINE ROUTING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-7083	Tube - Brake Front	1
2	87-7660	Clamp - Brake Line	8
3	321-9	Screw - Cap Hex. Hd.	4
4	3256-22	Washer - Flat	4
5	93-7084	Tube - Brake Rear	1
6	87-3570	Fitting - Union	3
7	93-7086	Tube - Brake Rear	1
8	87-3580	Retainer - Brake Hose	2
9	93-7123	Hose - Brake Front	2
10	93-7081	Tube - Brake Front RH	1
11	322-2	Screw - Cap Hex. Hd.	1


Ref. No.	Part No.	Description	No. Used
12	93-7087	Tube - Brake Rear	1
13	321-4	Screw - Cap Hex. Hd.	3
14	2412-149	R-Clamp	2
15	32128-33	Nut - Flange Head	2
16	93-7082	Tube - Brake Front LH	1
17	32128-20	Nut - Flange	1
18	87-3560	Tee - Brake Line	1
19	93-7085	Tube - Brake Front	1
20	3296-42	Nut - Lock	5
21	2412-89	Clamp - R	1

HYDRAULIC SCHEMATIC

 3317-401 Rev. A

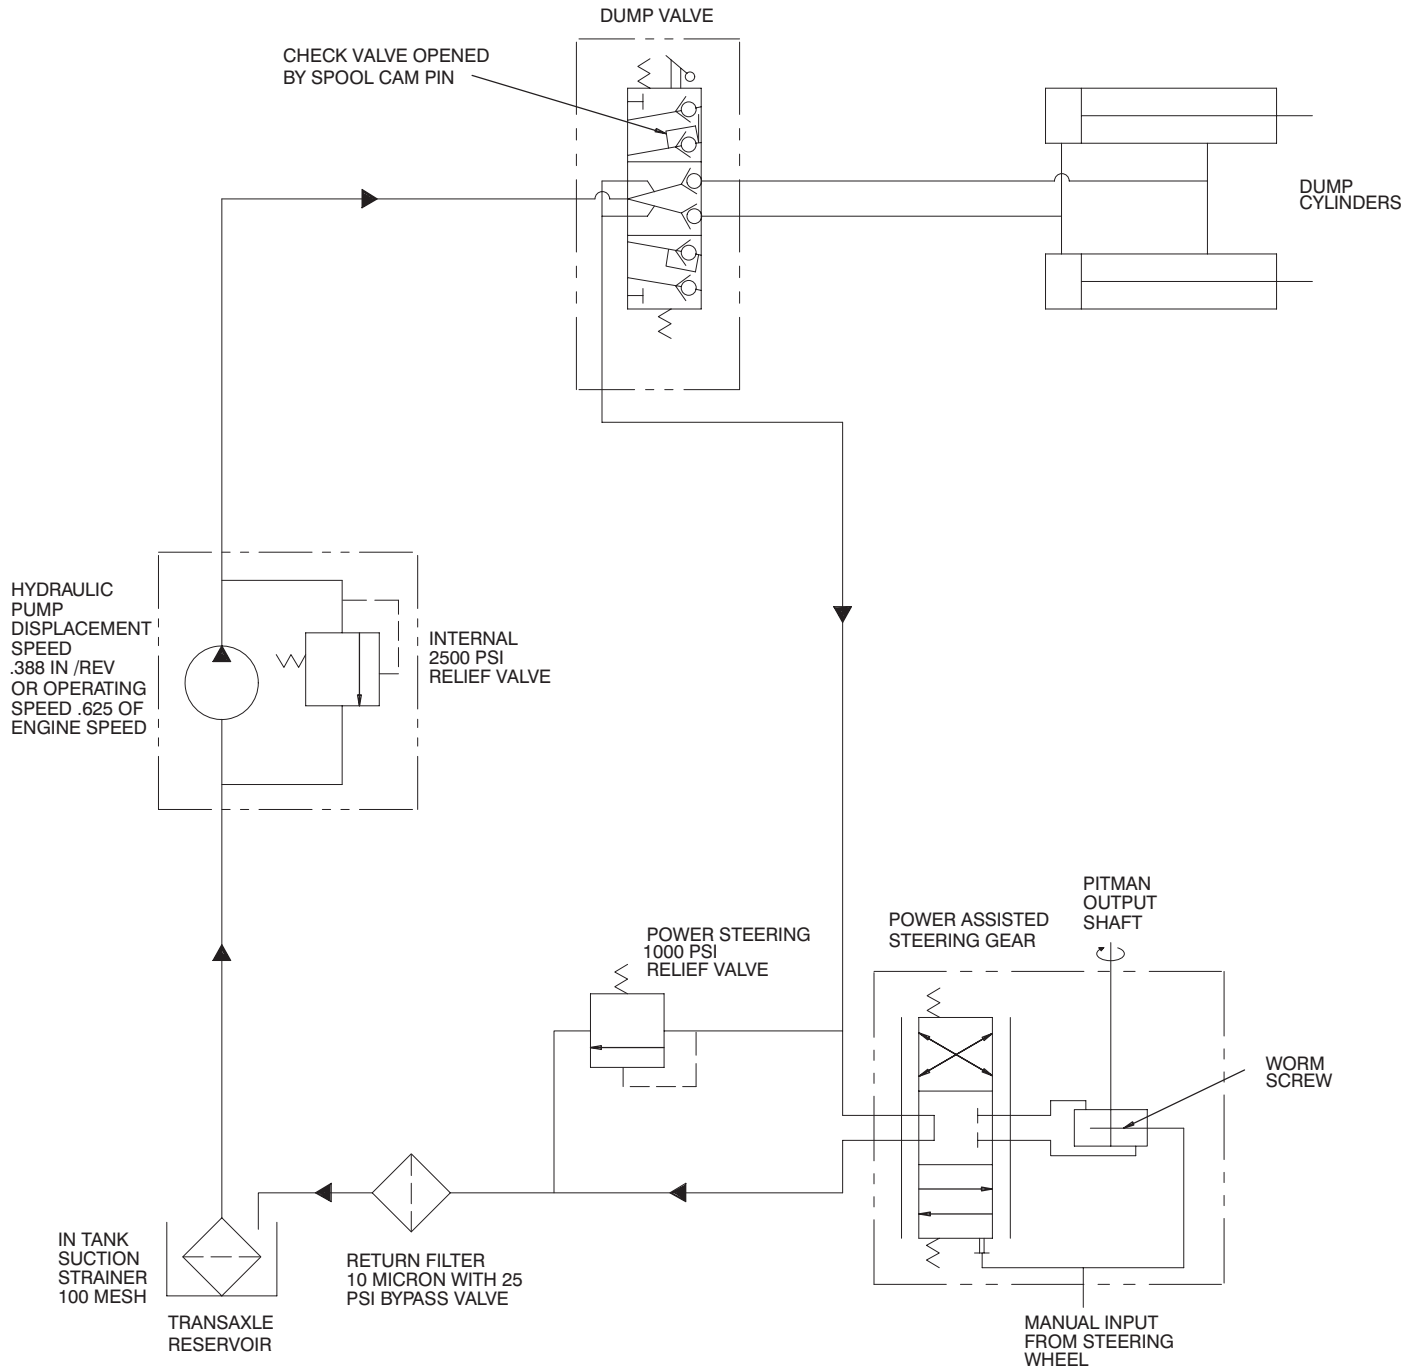

T-1626

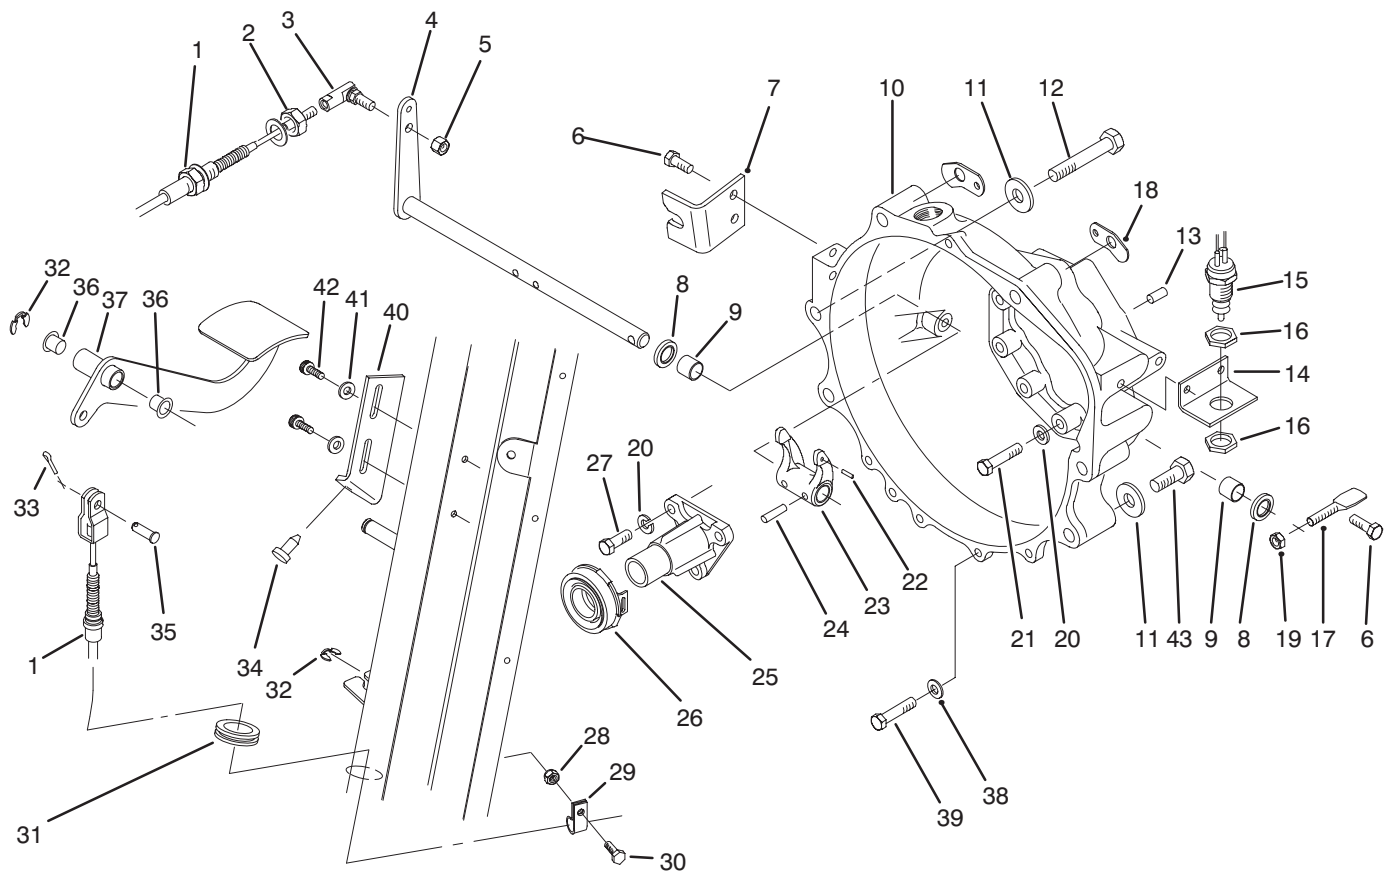 


T-1658

CLUTCH LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	87-8590	Clutch Cable Assembly (Incl. Ref. #2)	1
2	3220-2	Nut - Jam	1
3	2411-33	Joint - Ball	1
4	87-5280	Shaft - Release	1
5	3296-4	Nut - Lock	1
6	66-3160	Screw - Cap Hex. Hd.	4
7	87-8471	Bracket - Clutch	1
8	87-1920	Seal - Shaft	2
9	87-3770	Bushing - Sleeve	2
10	93-7120	Housing - Bell	1
11	3256-5	Washer - Flat	4
12	3215-2	Screw - Cap Hex. Hd.	5
13	87-1910	Pin - Alignment	2
14	87-5350	Bracket - Switch	1
15	87-5490	Switch - Neutral	1
16	3218-20	Nut - Jam	2
17	87-5360	Lever	1
18	87-6410	Bracket - Harness	2
19	3296-29	Nut - Lock	1
20	42-9850	Washer - Lock	12
21	42-9530	Screw - Cap Hex. Hd.	9

Ref. No.	Part No.	Description	No. Used
22	32121-7	Pin - Roll	1
23	87-5300	Fork - Clutch	1
24	32121-24	Pin - Roll	2
25	87-5320	Guide - Release	1
26	87-2100	Bearing - Release	1
27	57-6380	Screw - Cap Hex. Hd.	3
28	32128-33	Nut - Flange Lock	1
29	2412-89	Clamp - R	1
30	321-4	Screw - Cap Hex. Hd.	1
31	240-5	Grommet	1
32	32120-47	Ring - E	2
33	3272-10	Pin - Cotter	1
34	87-8460	Bumper	1
35	283-30	Pin - Clevis	1
36	256-257	Bushing - Flange	2
37	87-2610	Pedal - Clutch	1
38	3256-23	Washer - Lock	4
39	66-3160	Screw - Cap Hex. Hd.	4
40	87-8710	Tab - Clutch	1
41	3256-22	Washer - Flat	2
42	87-6620	Screw - Torx Hd.	2
43	42-9250	Screw - Cap Hex. Hd.	1

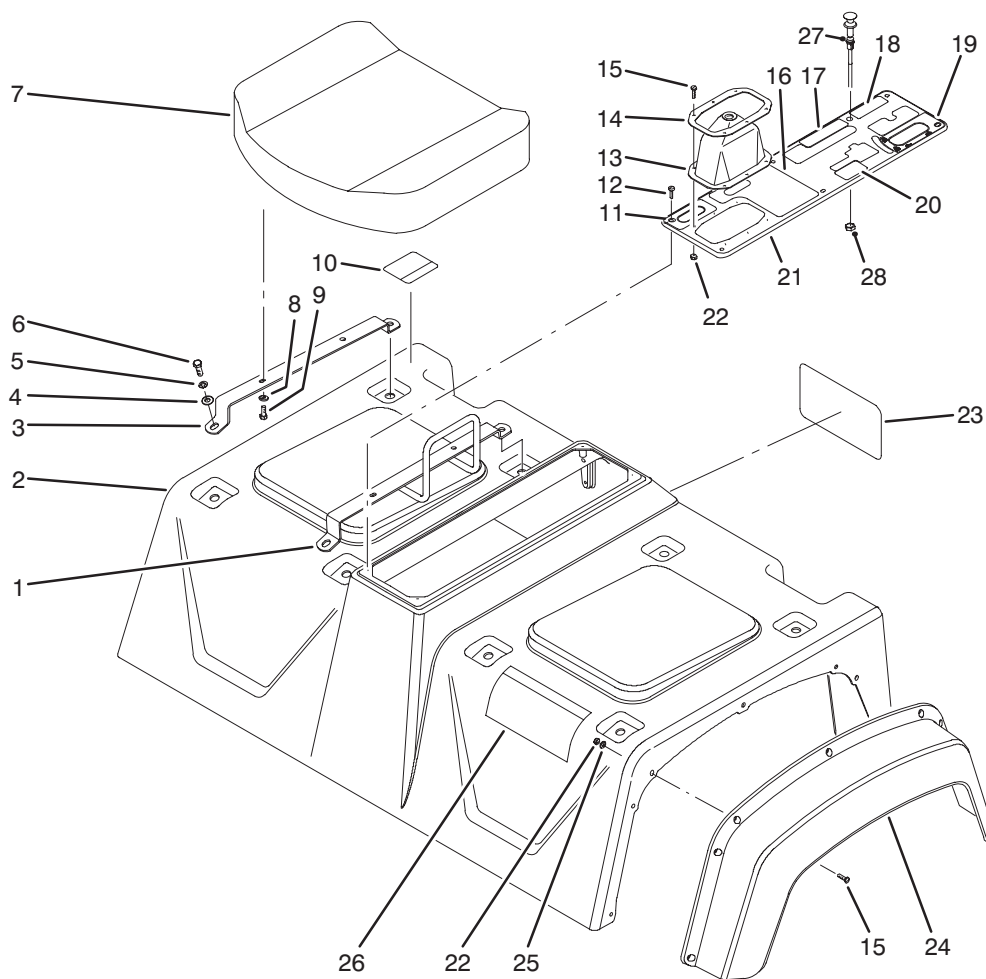 


T-1589

SEAT BASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-6890	Hold - Hand	1	19	93-9444	Decal - Dump Hydraulics	1
2	87-7070	Skirt Assembly (Incl. Ref. #10 & 26)	1	20	93-9443	Decal - Parking Brake	1
3	87-3800	Bracket - Seat Bottom	3	21	87-8080	Console Plate Assembly (Incl. Ref. #11 & 16-20)	1
4	3256-23	Washer - Flat	4	22	3296-2	Nut - Lock	20
5	3253-4	Washer - Lock	8	23	87-9070	Decal - Quick Ref. EN	1
6	322-5	Screw - Cap Hex. Hd.	8	*	92-5497	Decal - Quick Ref. DU	1
7	87-5060	Cushion - Seat Bottom	2	*	92-5498	Decal - Quick Ref. FR	1
8	3256-22	Washer - Flat	8	*	92-5499	Decal - Quick Ref. GR	1
9	321-4	Screw - Cap Hex. Hd.	8	*	92-6400	Decal - Quick Ref. IT	1
10	93-9448	Decal - Caution	1	*	92-6402	Decal - Quick Ref. SP	1
11	93-9857	Decal - Axle Range	1	*	92-6403	Decal - Quick Ref. SW	1
12	32144-52	Screw - Hex. Hd.	6	*	93-9431	Decal - Quick Ref. DN	1
13	87-8620	Boot - Shift	1	*	93-9432	Decal - Quick Ref. FN	1
14	87-3760	Plate - Shift Boot	1	*	93-9433	Decal - Quick Ref. NO	1
15	3250-13	Screw - Hex. Hd.	20	*	93-9434	Decal - Quick Ref. PO	1
16	93-9861	Decal - PTO	1	24	87-9480	Fender - Front	2
17	93-9430	Decal - Differential Lock	1	25	3256-61	Washer - Flat	14
18	93-9866	Decal - Remote Hydraulics	1	26	93-9860	Decal - Danger	1

 *Not Illustrated

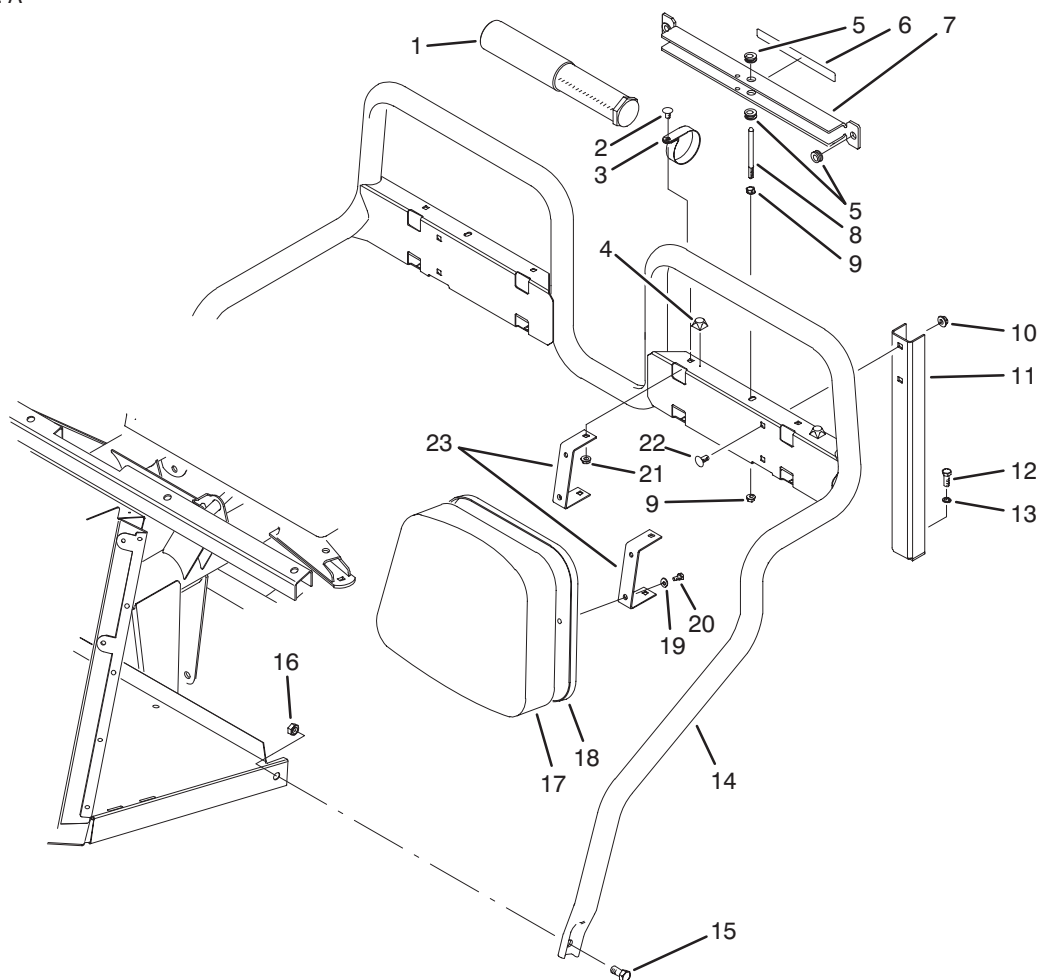


T-1779

SEAT BACK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-0720	Tube – Manual	1
2	3230-18	Bolt – Carriage	8
3	2412-133	Clamp – R	2
4	111071	Bumper	2
5	92-5972	Grommet	4
6	93-9852	Decal – Danger	1
7	87-7950	Bed Support Assembly (Incl. Ref. #5 & 6)	1
8	87-7940	Stud	1
9	32128-44	Nut – Flange Lock	2
10	3290-357	Nut – Flange Lock	4
11	87-2510	Bracket – Seat Frame	2

Ref. No.	Part No.	Description	No. Used
12	323-6	Screw – Cap Hex. Hd.	2
13	3253-21	Washer – Lock	2
14	87-6170	Frame – Seat	1
15	325-4	Screw – Cap Hex. Hd.	2
16	3296-23	Nut – Lock	2
17	87-6290	Cushion – Seat Back	2
18	87-6280	Plate – Seat Back	2
19	3256-22	Washer – Flat	8
20	321-4	Screw – Cap Hex. Hd.	8
21	32128-20	Nut – Flange Lock	8
22	3231-21	Bolt – Carriage	4
23	87-6240	Bracket – Seat Back	4

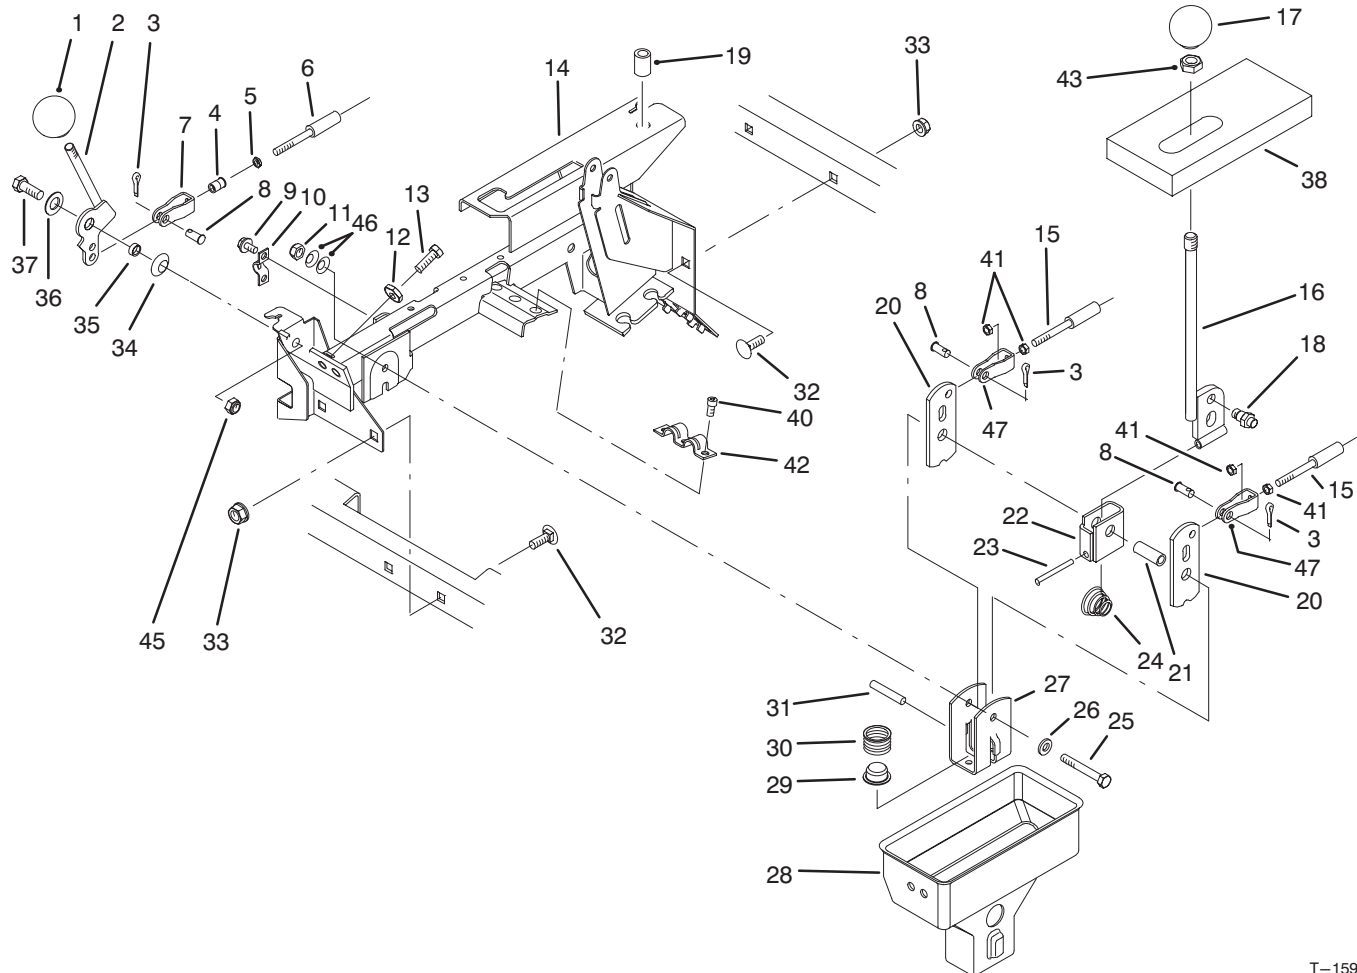 


T-1590

HI-LO & SHIFT LEVER ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	233-37	Knob	1
2	87-4350	Lever - Hi-Lo	1
3	3272-6	Pin - Cotter	3
4	32148-15	Insert - Threaded	1
5	3219-14	Nut	1
6	87-4420	Hi-Lo Cable Assembly (Incl. Ref. #5)	1
7	87-7160	Assembly - Clevis, Cable (Incl. Ref. #4)	1
8	283-62	Pin - Clevis	3
9	32144-4	Screw - Hex. Washer Hd.	2
10	87-4340	Clamp - Cable	1
11	3296-58	Nut - Lock	1
12	3220-3	Nut - Jam	2
13	3211-8	Screw - Cap Hex. Hd.	2
14	87-8110	Lever Support Assembly (Incl. Ref. #19)	1
15	87-4260	Cable Assembly (Incl. Ref. #41)	2
16	87-2040	Lever - Shift	1
17	87-6720	Knob	1
18	87-3650	Pin - Shift	1
19	32148-7	Nut - Clinch	2
20	87-3540	Link - Shift	2
21	87-2520	Tube - Pivot	1


Ref. No.	Part No.	Description	No. Used
22	87-6040	Bracket - Shifter	1
23	32121-48	Pin - Roll	1
24	87-2900	Spring - Compression	1
25	322-12	Screw - Cap Hex. Hd.	1
26	87-8640	Washer - Flat	1
27	87-3520	Clevis	1
28	87-2260	Boot - Shift Lower	1
29	87-3530	Button - Shifter	1
30	87-3660	Spring - Compression	1
31	3290-507	Pin - Dowel	1
32	3231-21	Bolt - Carriage	4
33	3290-357	Nut - Flange Lock	4
34	3290-221	Washer - Spring	1
35	76-9100	Spacer - Hi-Lo Lever	1
36	49-9150	Washer - Flat	1
37	323-6	Screw - Cap Hex. Hd.	1
38	87-6570	Foam - Seal	1
40	65-5220	Screw - Hex. Socket Hd.	3
41	3220-1	Nut - Jam	4
42	87-4960	Clamp - Cable	1
43	3218-18	Nut - Jam	1
45	3296-39	Nut - Lock	1
46	3290-456	Washer - Belleville	2
47	87-2310	Clevis - Cable	2

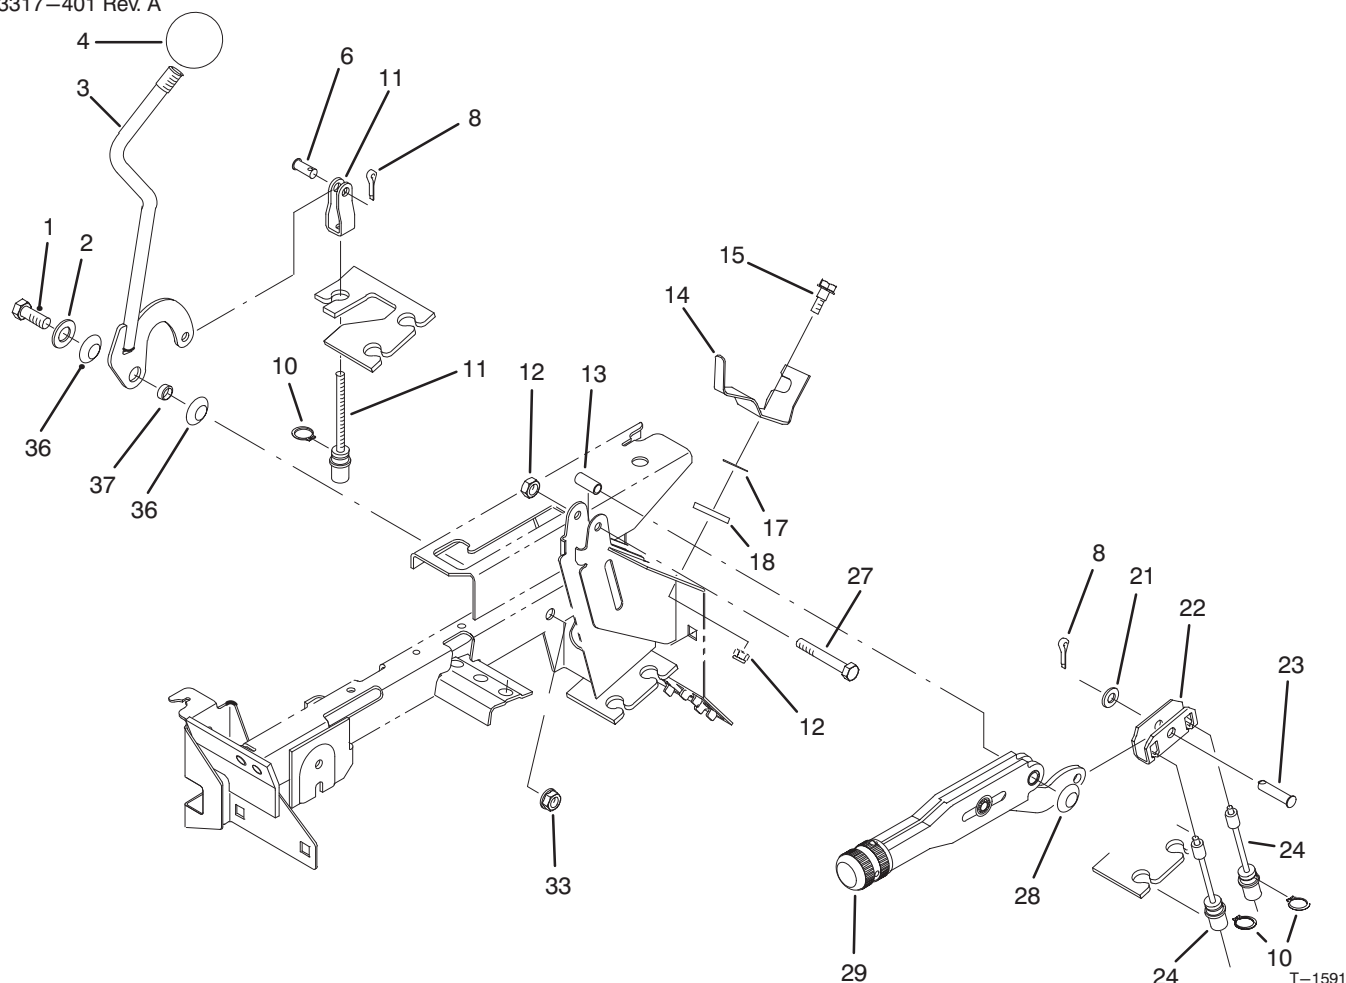 

DIFFERENTIAL LOCK & PARKING BRAKE ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw - Cap Hex. Hd.	1
2	49-9150	Washer - Flat	1
3	87-5030	Lever - Differential Lock	1
4	233-48	Knob	1
6	283-62	Pin - Clevis	1
8	3272-10	Pin - Cotter	2
10	32120-47	Ring - Retaining	3
11	87-4460	Differential Lock Cable	1
12	3296-42	Nut - Lock	2
13	87-4710	Spacer - Barking Brake	1
14	87-6640	Lever - Dump Stop	1
15	42-3560	Screw - Shoulder	1


Ref. No.	Part No.	Description	No. Used
17	3290-478	Washer - Belleville	1
18	71-5320	Washer - Flat	1
21	3256-23	Washer - Flat	1
22	87-3480	Plate - Brake Equalizer	1
23	283-14	Pin - Clevis	1
24	87-8240	Cable - Parking Brake	2
27	321-9	Screw - Cap Hex. Hd.	1
28	3290-477	Washer - Curved	1
29	87-2710	Lever - Parking Brake	1
33	3296-39	Nut - Lock	1
36	3290-221	Washer - Spring	2
37	76-2290	Spacer	1

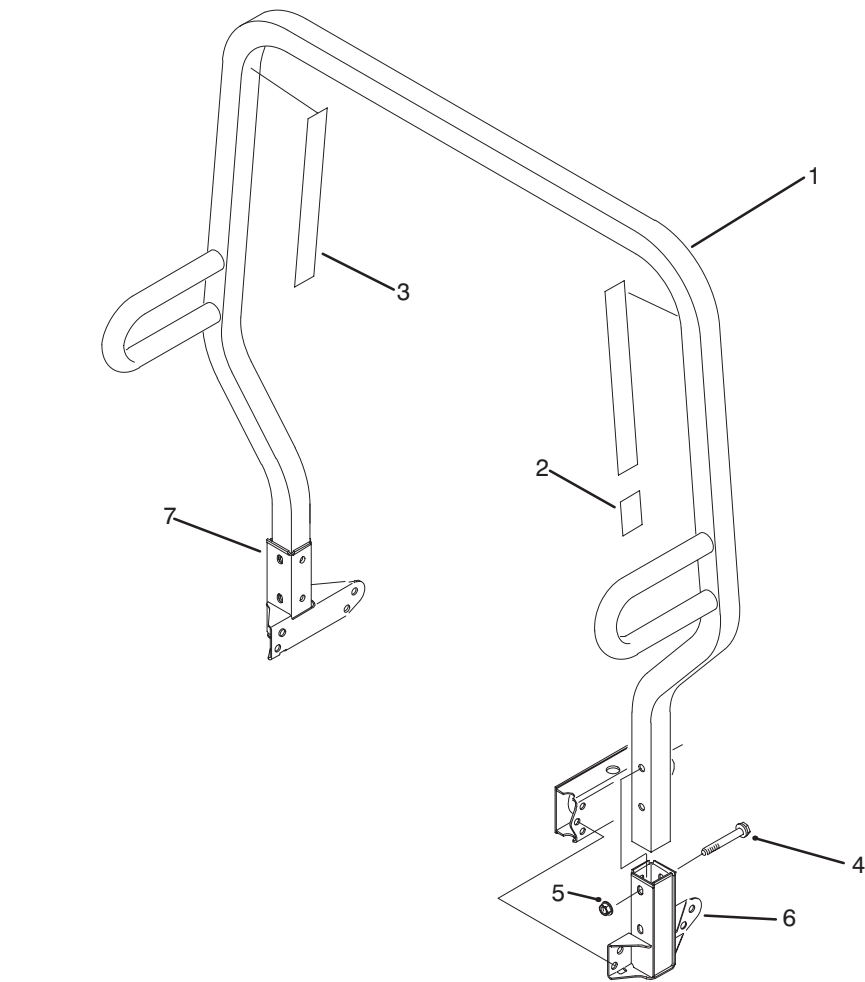 

T-1592

R.O.P.S. ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-7090	Assembly - Frame, R.O.P.S. (Incl. Ref. #2 & 3)	1	4	3234-40	Screw - Hex. Flange Hd.	4
2	93-9850	Decal - Rollover	1	5	32128-23	Nut - Flange Lock	4
3	93-9859	Decal - ROPS	2	6	87-6950	Receiver - LH	1
				7	87-6960	Receiver - RH	1

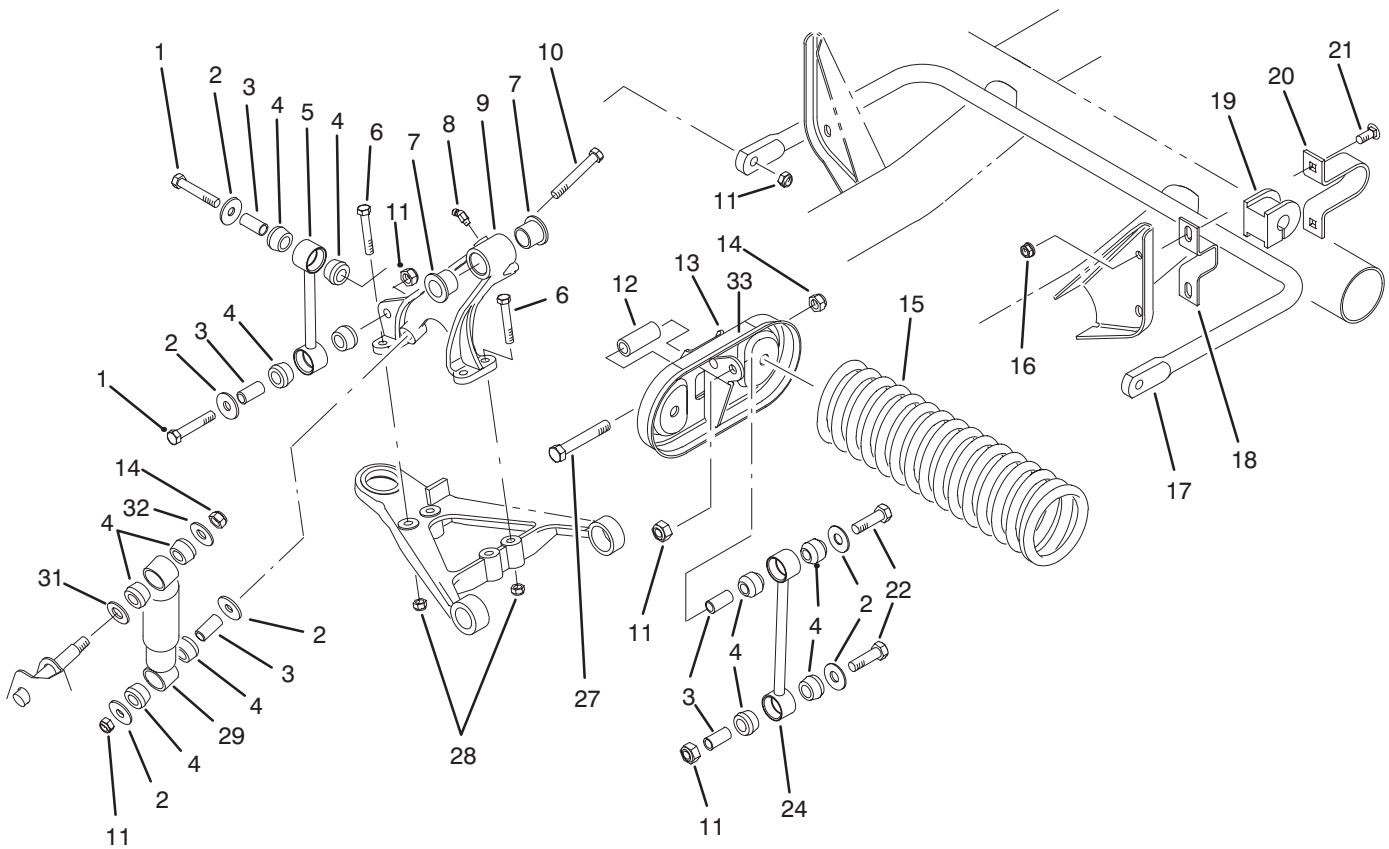 

T-1593


FRONT SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	324-10	Screw – Cap Hex. Hd.	4
2	87-5330	Washer	12
3	87-3600	Spacer	10
4	87-3920	Bushing – Rubber	24
5	87-3860	Link – Anti-Sway Bar	2
6	323-12	Screw – Cap Hex. Hd.	8
7	33-3090	Bushing – Flange	4
8	302-11	Fitting – Grease	1
9	87-0150	Tower – Control Arm RH	1
*	87-0160	Tower – Control Arm LH	1
10	324-13	Screw – Cap Hex. Hd.	2
11	3296-48	Nut – Lock	10
12	87-2500	Sleeve – Spring Pivot	2
13	87-7150	Assembly – Cradle, Spring (Incl. Ref. #33)	2
14	3296-23	Nut – Lock	4

Ref. No.	Part No.	Description	No. Used
15	87-0690	Spring – Compression	2
16	3290-357	Nut – Flange Lock	4
17	87-3850	Bar – Anti-Sway	1
18	87-3890	Bracket – Anti-Sway Bar	2
19	87-3910	Bushing – Anti-Sway Bar	2
20	87-4010	Clamp – Anti-Sway Bar	2
21	3231-3	Bolt – Carriage	4
22	324-9	Screw – Cap Hex. Hd.	4
24	87-2480	Link – Stabilizer	2
27	325-13	Screw – Cap Hex. Hd.	4
28	3296-39	Nut – Lock	8
29	87-3110	Absorber – Shock	2
31	3256-27	Washer – Flat	2
32	3256-6	Washer – Flat	2
‡33	93-9879	Decal – Warning	2

*Not Illustrated

 ‡For different language versions of this part, see International Decal Cross Reference.

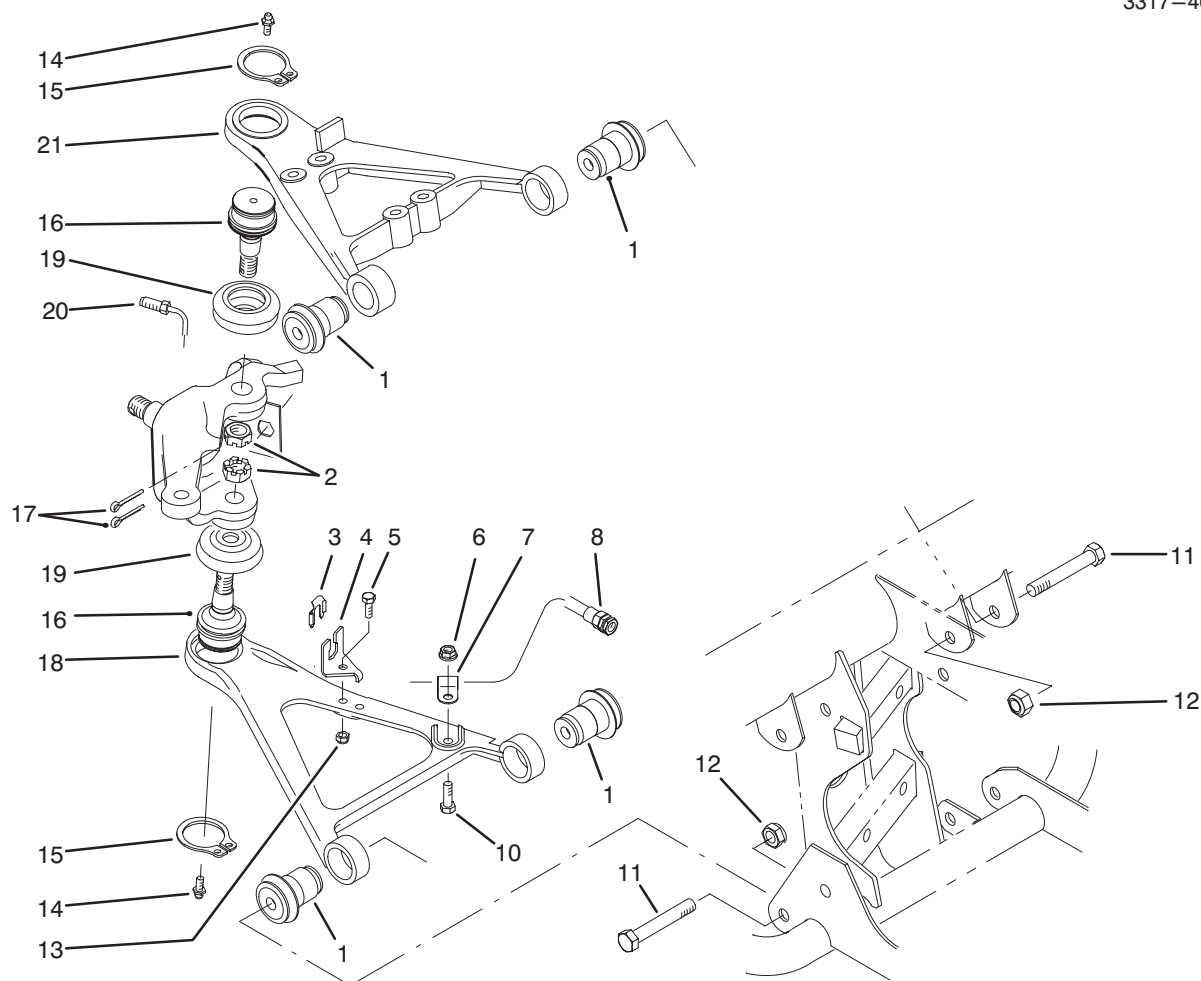


T-1594

FRONT SUSPENSION CONTROL ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	87-1450	Bushing - Rubber	8
2	32136-2	Nut - Slotted	2
3	87-3580	Retainer - Brake Hose	2
4	87-2870	Bracket - Brake Hose	2
5	321-6	Screw - Cap Hex. Hd.	2
6	32128-20	Nut - Flange Lock	2
7	2412-10	Clamp - R	2
8	93-7123	Hose - Brake Front	2
10	322-5	Screw - Cap Hex. Hd.	2
11	325-13	Screw - Cap Hex. Hd	8
12	3296-23	Nut - Flange Lock	8
13	3296-42	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
14	302-5	Fitting - Grease	4
15	32151-104	Ring - Snap	4
16	87-1430	Joint - Ball	4
17	3272-12	Pin - Cotter	4
18	87-0210	Arm - Control Lower RH	1
*	87-0220	Arm - Control Lower LH	1
19	87-2420	Boot	4
20	87-2800	Tube - Brake RH	1
*	87-2790	Tube - Brake LH	1
21	93-7135	Arm - Control Upper RH	1
*	93-7133	Arm - Control Upper LH	1

 *Not Illustrated

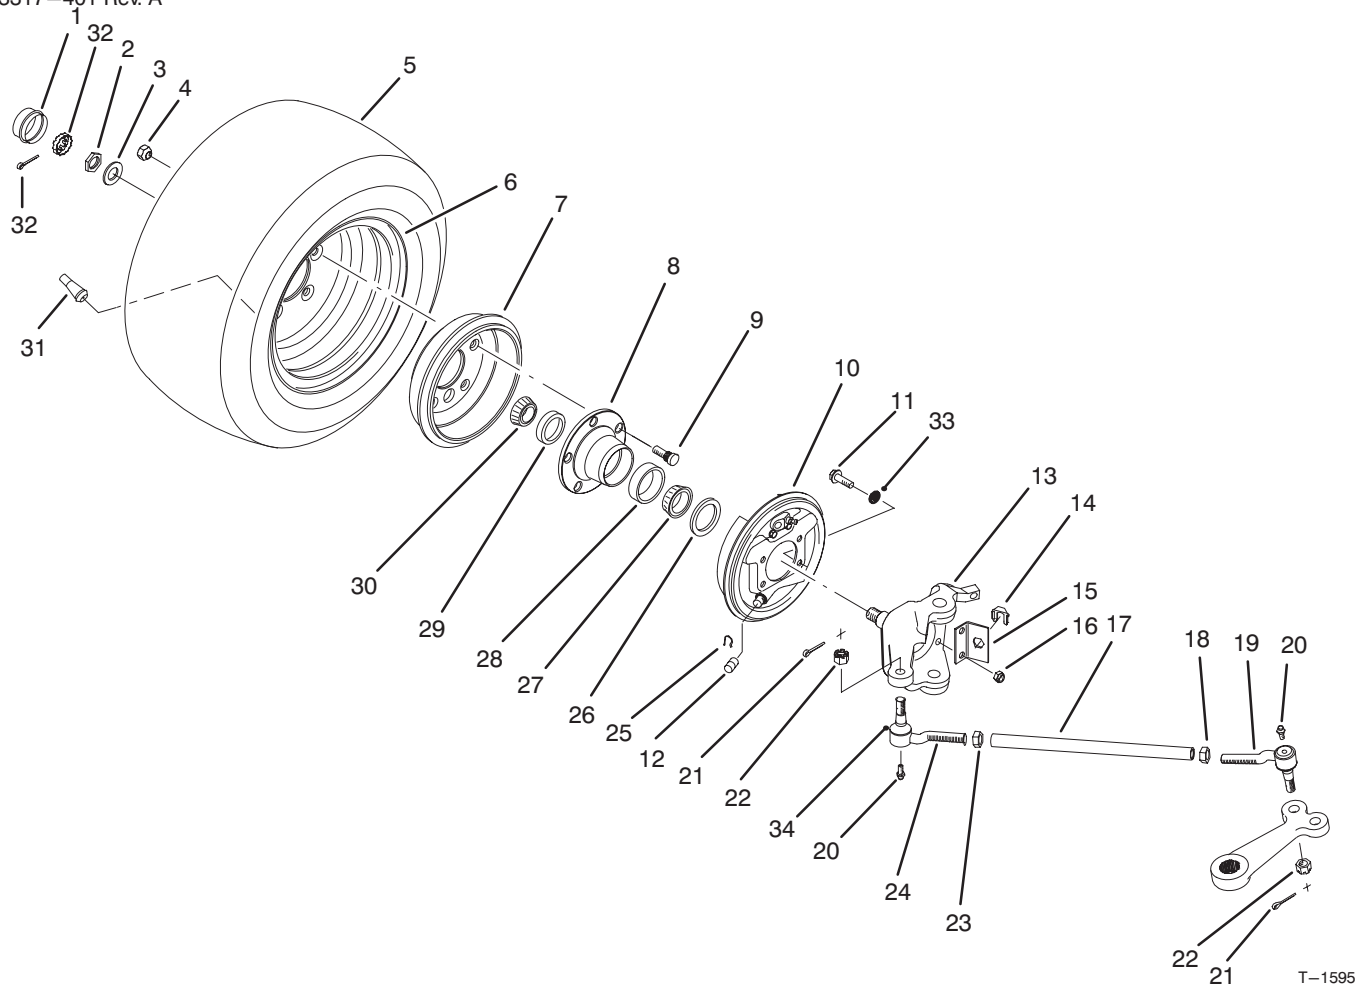


T-1595

FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	241-119	Cap Dust	2
2	3220-7	Nut - Jam	2
3	93-0309	Washer - Tab	2
4	23-7270	Nut - Lug	10
5	87-3300	Tire	2
6	87-5720	Rim	2
7	87-0270	Drum - Brake	2
8	87-5560	Hub - Wheel	2
9	87-8730	Stud - Drive	10
10	87-3010	Brake Assembly - RH	1
*	87-3020	Brake Assembly - LH	1
11	323-8	Screw - Hex. Flange Hd.	8
12	87-3450	Plug	2
13	87-9430	Spindle - RH	1
*	87-9440	Spindle - LH	1
14	87-3580	Retainer	2
15	87-2820	Bracket - Hose	2
16	3296-39	Nut - Lock	8
17	87-2410	Rod - Tie	2
18	3218-21	Nut - Jam	2

Ref. No.	Part No.	Description	No. Used
19	87-1470	Rod End Assy. - LH Thread (Incl. Ref. # 20-22 & 34)	2
20	302-5	Fitting - Grease	4
21	3272-12	Pin - Cotter	4
22	32136-3	Nut - Slotted	4
23	3220-11	Nut - Jam	2
24	87-1480	Rod End Assy. - RH Thread (Incl. Ref. #20-22 & 34)	2
25	87-3310	Clip - Brake Cable	2
26	87-3590	Seal - Bearing	2
27	254-106	Cone - Bearing	2
28	254-107	Cup - Bearing	2
29	254-72	Cup - Bearing	2
30	254-94	Cone - Bearing	2
31	232-27	Stem - Valve	2
32	3272-12	Pin - Cotter	2
33	3253-21	Washer - Lock	8
34		Seal - Rod End	4
35	93-0307	Nut - Retainer	2
*	87-5340	Seal Kit - Tie Rod End (Incl. Ref. #20-22 & 34)	4

 *Not Illustrated

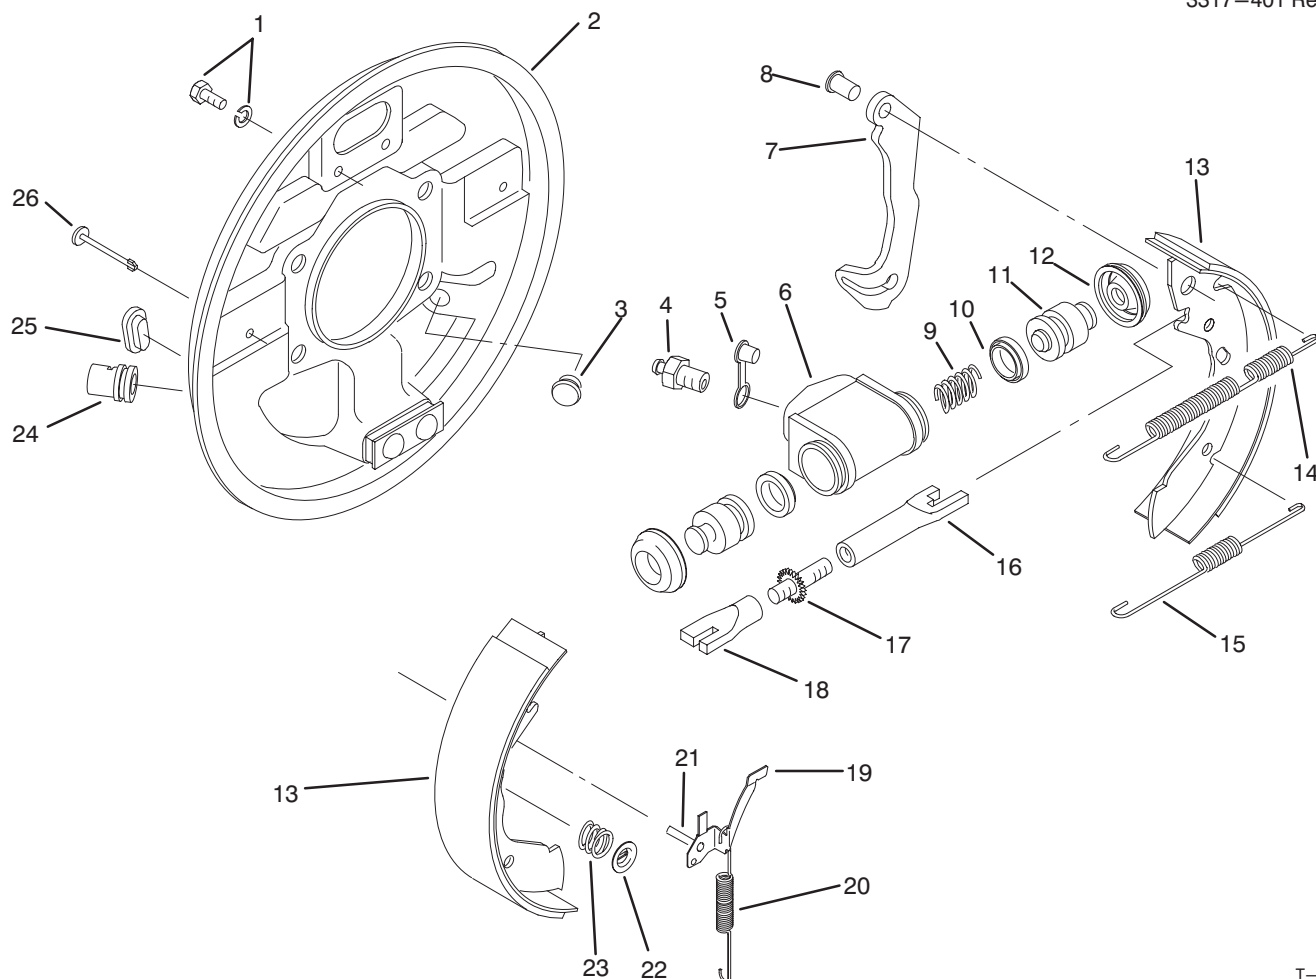


T-1596

FRONT BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-4135	Set Bolt	2	19	92-4123	Assembly - Pawl LH (Incl. Ref. #21)	1
2	92-4115	Backplate Assembly LH (Incl. Ref. #24)	1	*	92-4124	Assembly - Pawl RH (Incl. Ref. #21)	1
*	92-4116	Backplate Assembly RH (Incl. Ref. #24)	1	20	92-4129	Spring - Adjuster, LH	1
3	92-4125	Plug	1	*	92-4130	Spring - Adjuster, RH	1
4	92-4113	Screw - Bleed	1	21		Pin - Pawl	1
5	92-4114	Cap - Bleed Screw	1	22	92-4131	Washer - Hold Down	2
6		Body	1	23	92-4132	Spring - Hold Down	2
7		Lever - Operating LH/RH	1	24		Guide - Pipe	1
8		Pin	1	25	92-4134	Plug - Inspection	1
9		Spring	1	26	92-4133	Pin - Hold Down	2
10		Seal - 'L' Type	2	*	92-4121	Assembly - Adjuster LH (Incl. Ref. #16-18)	1
11		Piston	2	*	92-4122	Assembly - Adjuster RH (Incl. Ref. #16-18)	1
12		Cover - Dust	2	*	92-4117	Assy. - Wheel Cylinder LH (Incl. Ref. #4-6 & 9-12)	1
13	92-4120	Shoe & Lining Set (Incl. Ref. #7 & 8)	1	*	92-4118	Assy. - Wheel Cylinder RH (Incl. Ref. #4-6 & 9-12)	1
14	92-4126	Spring - Shoe, Upper LH	1	*	92-4119	Kit - Seal (Incl. Ref. #10 & 12)	1
*	92-4127	Spring - Shoe, Upper RH	1	*	87-3010	Front Brake Assembly - RH (Complete)	1
15	92-4128	Spring - Shoe, Lower	1	*	87-3020	Front Brake Assembly - LH (Complete)	1
16		Pushrod - Female LH	1				
*		Pushrod - Female RH	1				
17		Bolt - Adjuster	1				
18		Sleeve - Adjuster	1				

 *Not Illustrated

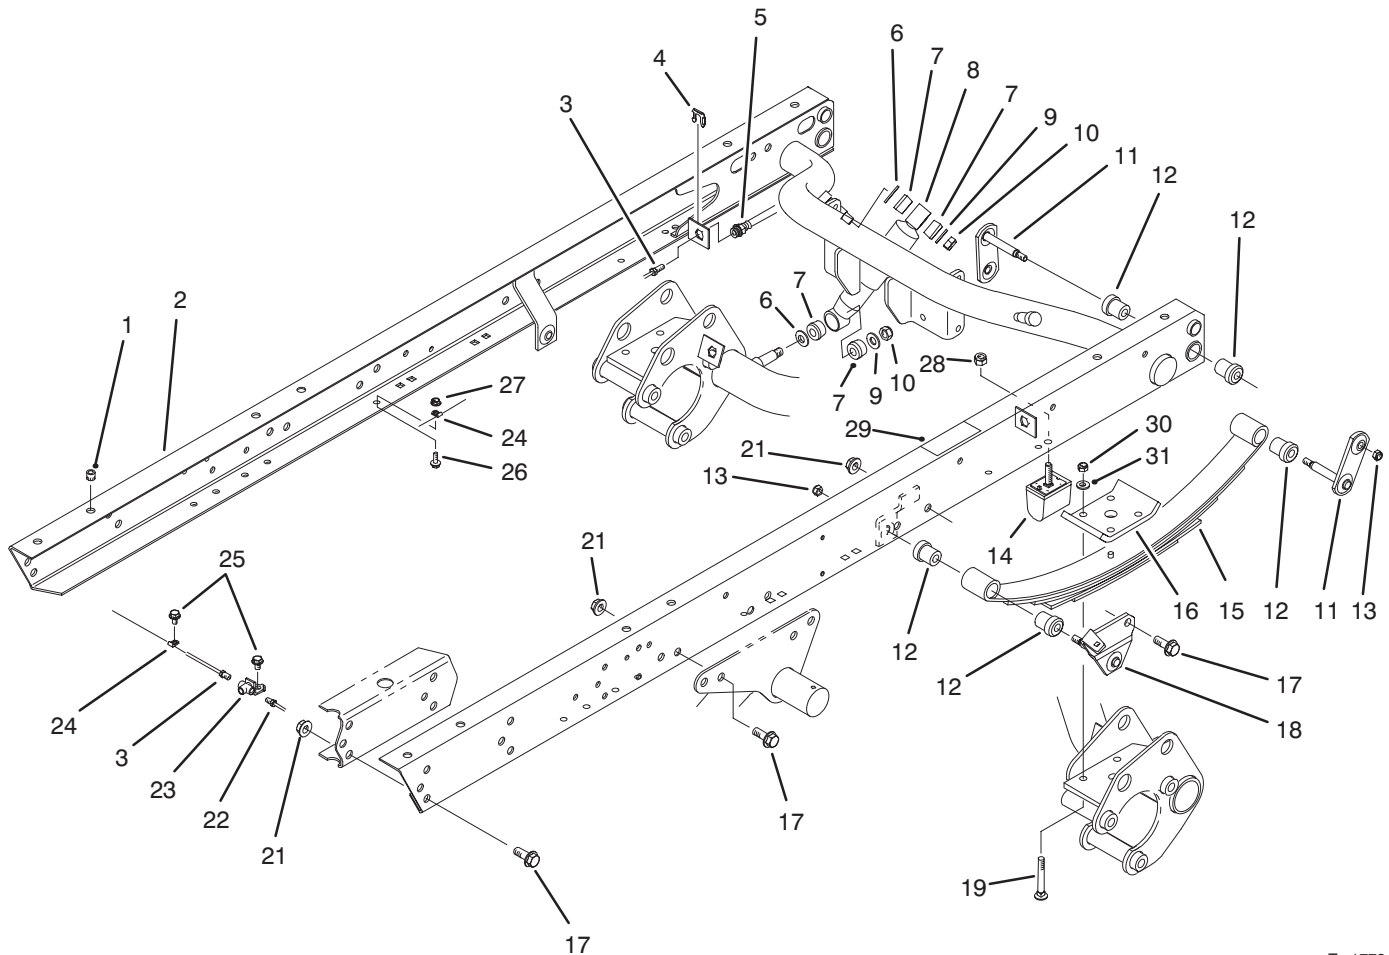


T-1778

REAR FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32148-10	Insert - Threaded	8
2	87-8440	Assembly - Rear Frame (Incl. Ref. #1 & 29)	1
3	87-3270	Tube - Brake RH	1
4	87-3580	Retainer	2
5	87-4100	Hose - Brake	2
6	3256-27	Washer - Flat	4
7	87-3920	Bushing - Rubber	8
8	87-3110	Shock Absorber	2
9	3256-6	Washer - Flat	4
10	3296-23	Nut - Lock	4
11	87-3980	Shackle - Spring	4
12	87-4760	Bushing	12
13	3296-39	Nut - Lock	6
14	87-3470	Bumper - Spring	2
15	87-1490	Spring - Leaf	2

Ref. No.	Part No.	Description	No. Used
16	87-7470	Plate - Clamp	2
17	3234-38	Screw - Hex. Flange Hd.	22
18	87-3960	Mount - Spring LH	1
*	87-3940	Mount - Spring RH	1
19	3232-17	Bolt - Carriage	8
21	32128-23	Nut - Flange Lock	22
22	87-3280	Tube - Brake LH	1
23	87-3560	Tee - Brake Tube	1
24	2412-149	Clamp - Tube	5
25	32104-82	Screw - Hex. Flange Hd.	2
26	321-4	Screw - Hex. Flange Hd.	3
27	32128-33	Nut - Flange Lock	4
28	48-9520	Nut - Lock	2
29	93-8071	Decal - Caution	1
30	3296-76	Nut - Lock	8
31	87-7480	Washer - Flat	8

 *Not Illustrated

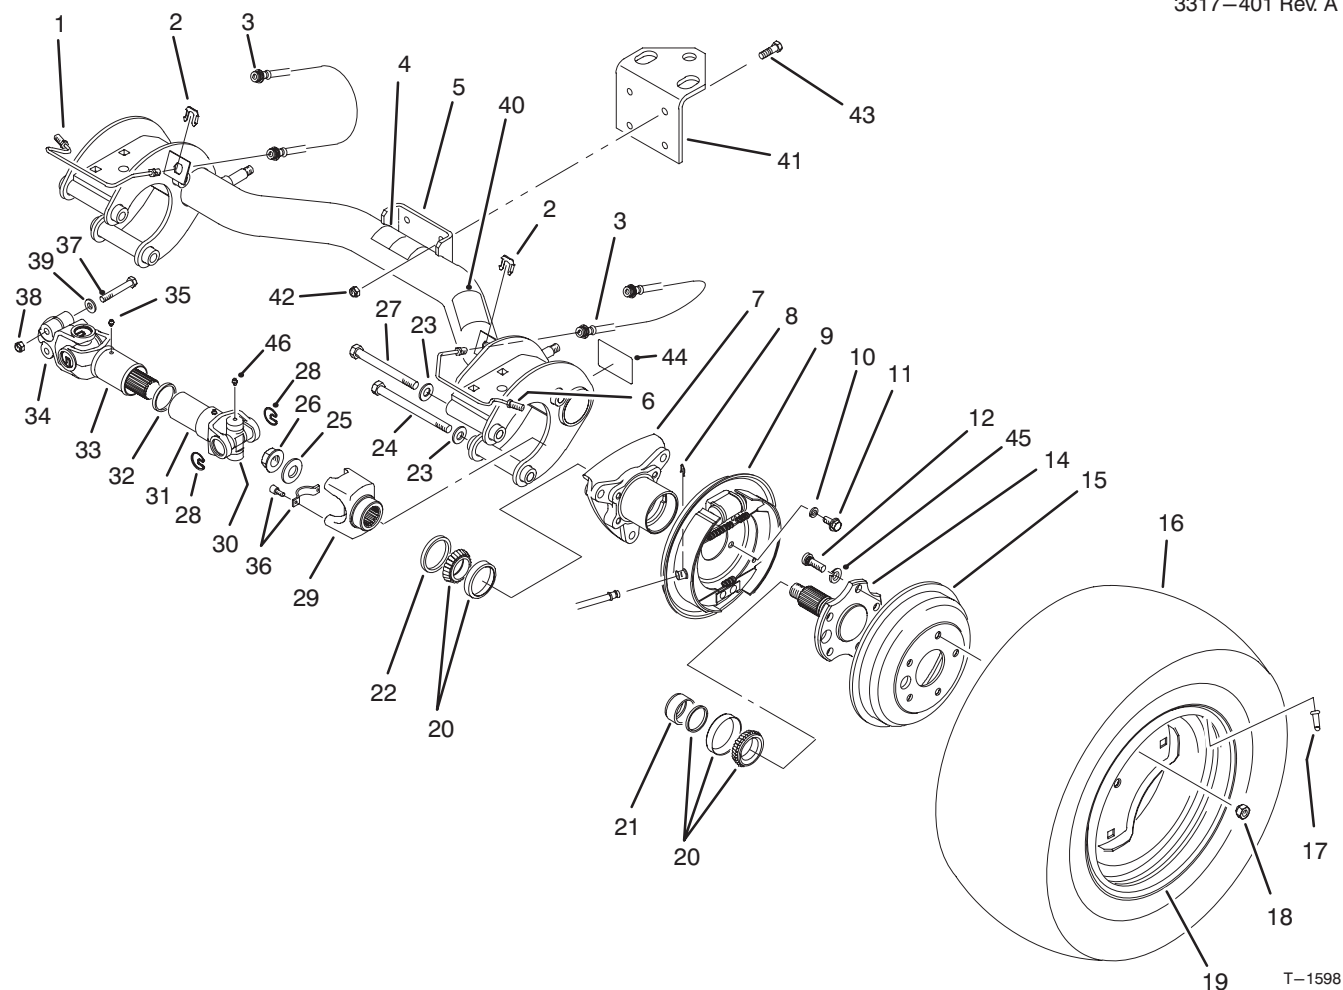


T-1598

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-4090	Tube - Brake RH	1	21	87-4060	Spacer - Bearing	2
2	87-3580	Retainer - Brake Hose	2	22	87-3590	Seal - Bearing	2
3	87-4100	Hose - Brake	2	23	87-7270	Washer - Flat	6
4	93-9442	Decal - ATF	1	24	325-20	Screw - Cap Hex. Hd.	5
5	87-7110	Assembly - Axle, Rear (Incl. Ref. #4, 40 & 44)	1	25	87-3060	Washer - Flat	2
6	87-4080	Tube - Brake LH	1	26	32128-53	Nut - Flange Lock	2
7	87-2240	Housing - Axle	2	27	325-19	Screw - Cap Hex. Hd.	1
8	87-3310	Clip - Brake Cable	2	28	92-4188	Ring - Snap	12
9	93-7126	Brake Assembly LH	1	29	92-4190	Yoke - End	2
*	93-7125	Brake Assembly RH	1	30	92-4187	Cross & Bearing Kit	4
10	3253-21	Washer - Lock	8	31	92-4182	Yoke & Hub	2
11	323-6	Screw - Cap Hex. Hd.	8	32	92-4180	Seal	2
12	87-2080	Stud - Drive	10	33	92-4179	Yoke, Shaft & Seal Tube	2
14	93-7090	Stub - Axle	2	34	92-4177	Yoke - Double Clamp	2
15	93-7128	Drum - Brake	2	35	302-5	Fitting - Grease	4
16	87-6740	Tire - Rear 24"	2	36	92-4189	Strap & Bolt Kit	4
*	87-3290	Tire - Rear 23" (Optional)	2	37	87-8700	Screw - Cap Hex. Hd.	4
17	232-27	Valve - Stem	2	38	32128-36	Nut - Lock	4
18	23-7270	Nut - Lug	10	39	80-6990	Washer	4
19	87-6750	Rim - Rear 24"	2	40	93-9862	Decal - PTO	1
*	87-3000	Rim - Rear 23" (Optional)	2	41	92-5951	Angle - Hitch	1
20	87-1970	Bearing Matched Set	2	42	3296-39	Nut - Lock	4
				43	323-7	Screw - Cap Hex. Hd.	4
				44	93-9449	Decal - Grease	2
				45	3253-6	Washer - Lock	10

 
*Not Illustrated

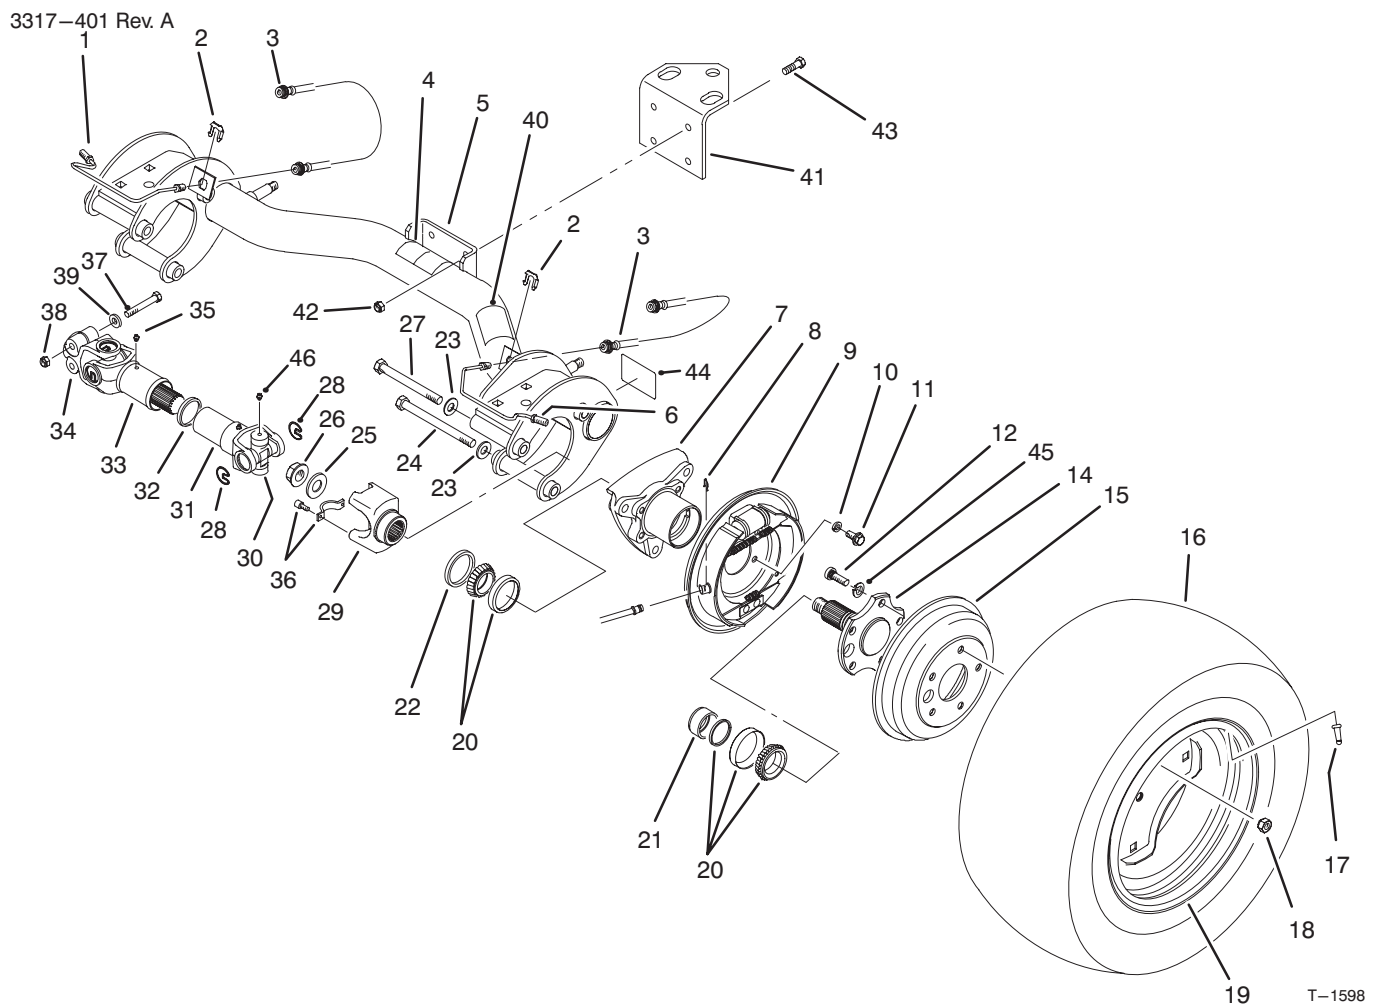

REAR AXLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
46	302-58	Fitting - Grease	16
*	93-7124	Driveshaft Assembly (Incl. Ref. #28-36 & 46)	2

Ref. No.	Part No.	Description	No. Used
*	87-5370	Rear Tire & Wheel Assembly (24")	2
*	87-6370	Rear Tire & Wheel Assembly (Optional 23")	2

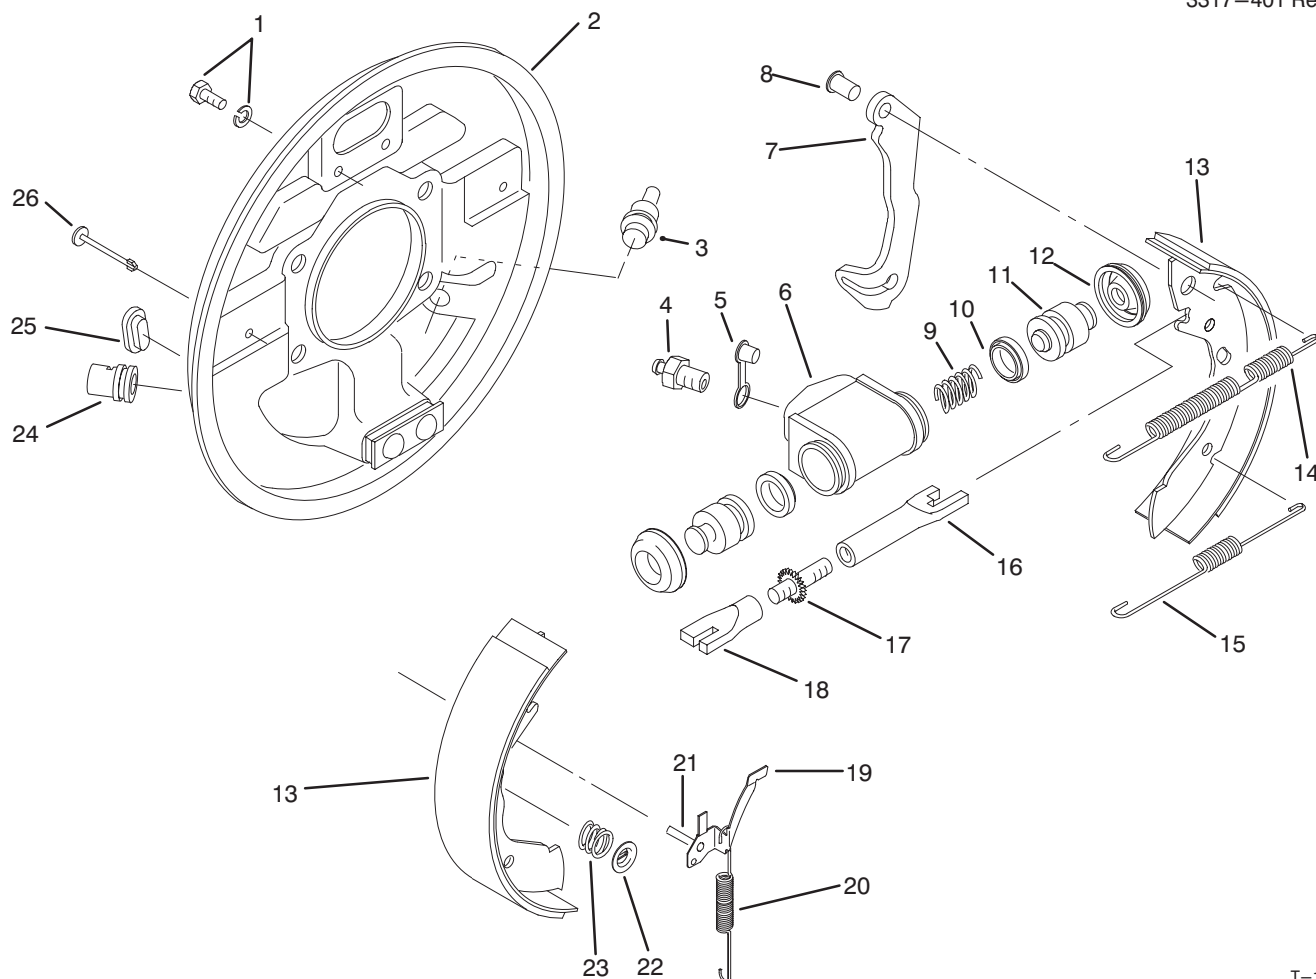 


T-1599

REAR BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-4135	Set Bolt	2	19	92-4123	Assembly - Pawl LH (Incl. Ref. #21)	1
2	92-4136	Backplate Assembly LH (Incl. Ref. #24)	1	*	92-4124	Assembly - Pawl RH (Incl. Ref. #21)	1
*	92-4100	Backplate Assembly RH (Incl. Ref. #24)	1	20	92-4150	Spring - Adjuster, LH	1
3	92-4146	Plug	1	*	92-4151	Spring - Adjuster, RH	1
4	92-4137	Screw - Bleed	1	21		Pin - Pawl	1
5	92-4114	Cap - Bleed Screw	1	22	92-4131	Washer - Hold Down	2
6		Body	1	23	92-4152	Spring - Hold Down	2
7		Lever - Operating LH/RH	1	24		Guide - Pipe	1
8		Pin	1	25	92-4134	Plug - Inspection	1
9		Spring	1	26	92-4133	Pin - Hold Down	2
10		Seal - 'L' Type	2	*	92-4144	Assembly - Adjuster LH (Incl. Ref. #16-18)	1
11		Piston	2	*	92-4145	Assembly - Adjuster RH (Incl. Ref. #16-18)	1
12		Cover - Dust	2	*	92-4140	Assy. - Wheel Cylinder LH (Incl. Ref. #4-6 & 9-12)	1
13	92-4143	Shoe & Lining Set (Incl. Ref. #7 & 8)	1	*	92-4141	Assy. - Wheel Cylinder RH (Incl. Ref. #4-6 & 9-12)	1
14	92-4147	Spring - Shoe, Upper LH	1	*	92-4142	Seal Kit (Incl. Ref. #10 & 12)	1
*	92-4148	Spring - Shoe, Upper RH	1	*	93-7125	Rear Brake Assembly - RH (Complete)	1
15	92-4149	Spring - Shoe, Lower	1	*	93-7126	Rear Brake Assembly - LH (Complete)	1
16		Pushrod - Female LH	1				
*		Pushrod - Female RH	1				
17		Bolt - Adjuster	1				
18		Sleeve - Adjuster	1				

 *Not Illustrated

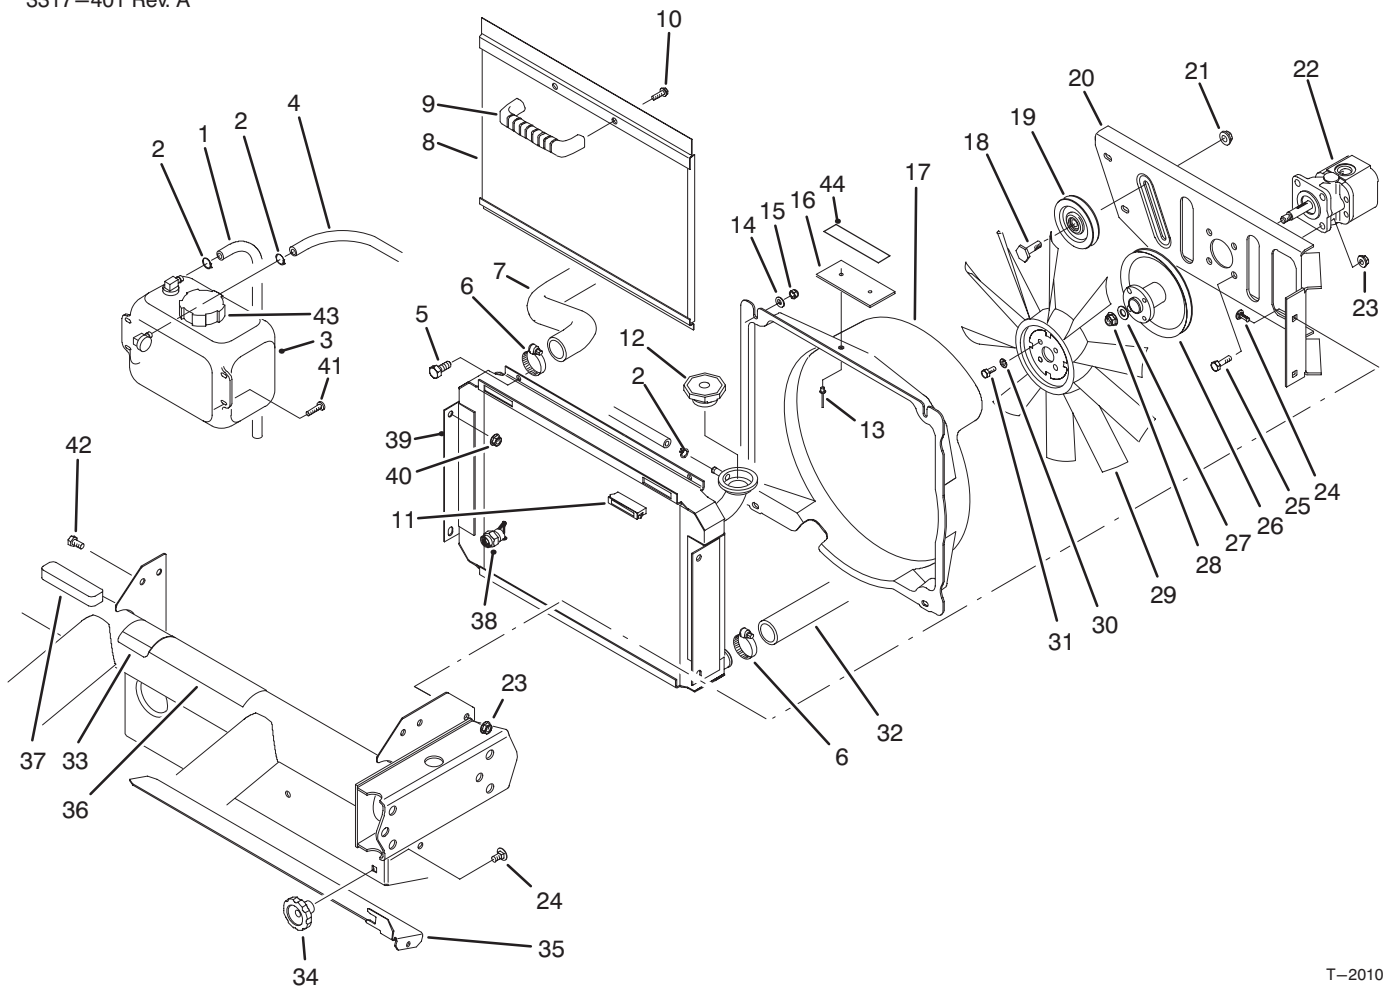


T-2010

RADIATOR & HYDRAULIC PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-3381	Tube - Overflow	2
2	92-2379	Clamp - Hose	3
3	87-3710	Overflow Reservoir Assembly (Incl. Ref. #43)	1
4	71-3383	Hose - Overflow	1
5	321-4	Screw - Cap Hex. Hd.	4
6	2412-34	Clamp - Hose	2
7	87-7330	Hose - Radiator Upper	1
8	93-7103	Screen - Radiator	1
9	65-5100	Handle	1
10	46-8091	Screw - Hex. Flange Hd.	2
11	58-4250	Magnet	2
12	66-3240	Cap - Radiator	1
13	3290-271	Rivet - Pop	2
14	3256-22	Washer - Flat	4
15	3296-42	Nut - Lock	4
16	76-8750	Plate - Warning	1
17	92-4198	Fan Shroud Assembly (Incl. Ref. #13,16 & 44)	1
18	32141-86	Screw - Leveler	1
19	63-8140	Pulley	1
20	93-7088	Support - Fan	1
21	3290-357	Nut - Flange Lock	1
22	87-5700	Hydraulic Pump Assembly	1


Ref. No.	Part No.	Description	No. Used
23	3296-29	Nut - Flange Lock	8
24	3230-23	Bolt - Carriage	5
25	322-5	Screw - Cap Hex. Hd.	4
26	87-7320	Pulley	1
27	3256-45	Washer - Flat	1
28	3296-5	Nut - Flange Lock	1
29	84-1880	Fan	1
30	3253-3	Washer - Lock	4
31	321-3	Screw - Cap Hex. Hd.	4
32	87-4150	Hose - Radiator Lower	1
33	93-7275	Decal - Starting Fluid	1
34	19-4050	Knob	1
35	87-9300	Door - Clean Out	1
36	93-9447	Decal - Caution	1
37	87-9810	Foam - Overflow Tank	1
38	92-4111	Petcock - Radiator	1
39	93-7051	Radiator Assembly (Incl. Ref. #38)	1
40	32128-20	Nut - Lock	4
41	3250-20	Screw - Round Hd.	4
42	322-2	Screw - Cap Hex. Hd.	4
43	87-7050	Cap - Reservoir	1
44	93-6681	Decal - Warning	1

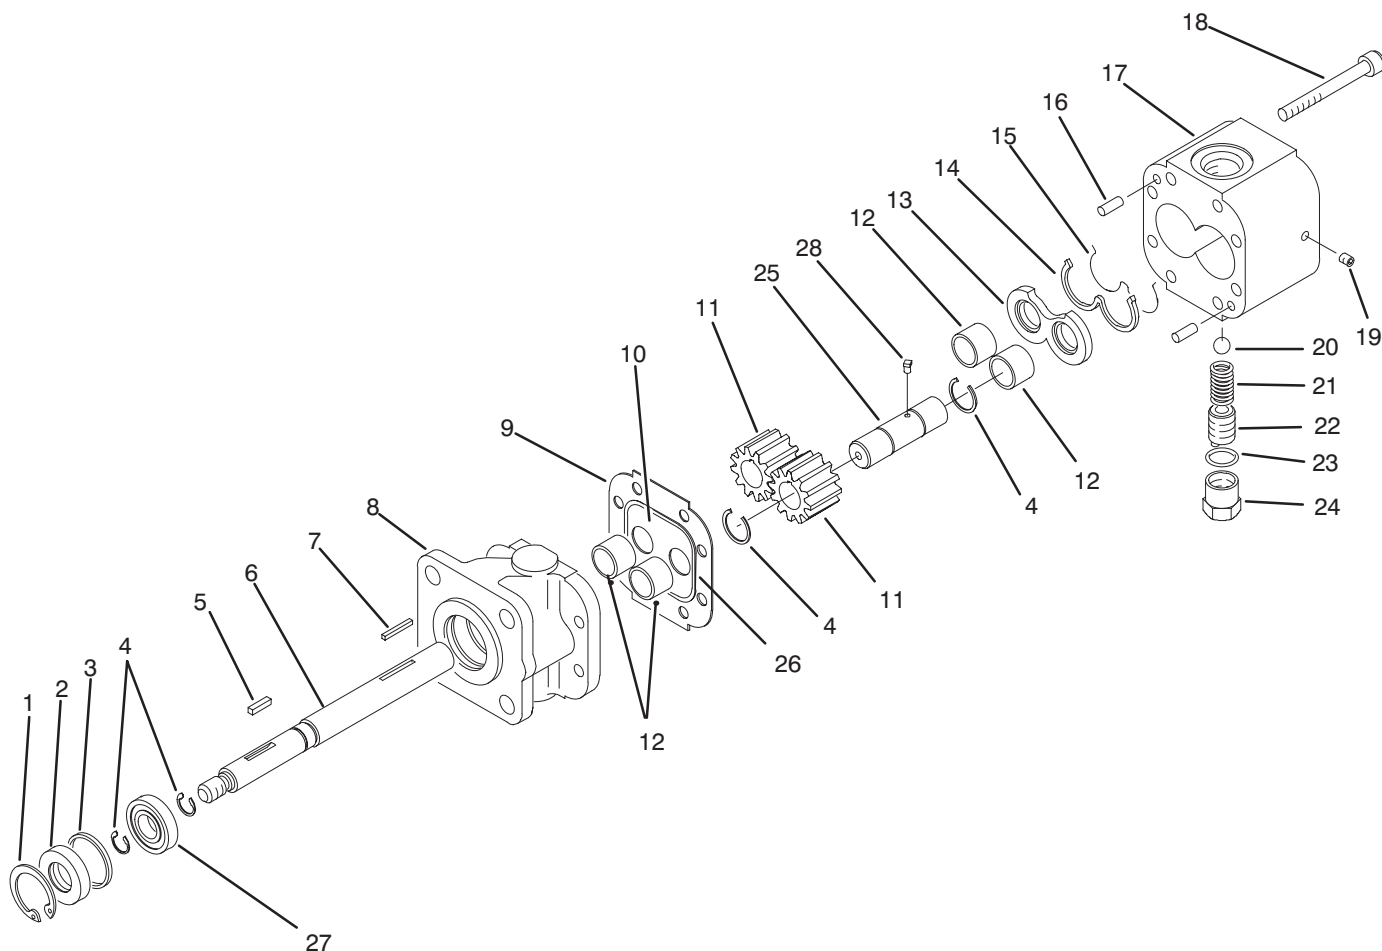 

T-1601

HYDRAULIC PUMP ASSEMBLY NO. 87-5700

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32151-41	Ring – Retaining	1	15	92-2196	Seal – Pressure Plate	1
2	92-2195	Seal – Oil	1	16	92-2176	Pin – Dowel	2
3	92-2186	Spacer	1	17	92-2187	Housing – Gear, End	1
4	92-2178	Ring – Crescent	4	18	92-2173	Screw – Cap Socket Head	8
5	92-2179	Key – Square	1	19	92-2185	Plug	1
6	92-2189	Shaft – Drive	1	20	92-2193	Ball	1
7	92-2177	Pin – Shear	1	21	92-2194	Spring	1
8	92-2188	Stator	1	22	92-2174	Screw – Adjusting	1
9	92-2182	Plate – Seal	1	23	92-2180	Gasket – Copper	1
10	92-2183	Plate – Wear	1	24	92-2184	Cap – Relief Valve	1
11	92-2175	Gear	2	25	92-2190	Shaft – Idler	1
12	92-2192	Bearing	4	26	92-2198	Seal	1
13	92-2181	Plate – Pressure	1	27	92-2191	Bearing	1
14	92-2197	Seal – Back Up	1	28	92-2199	Key – Ball	1

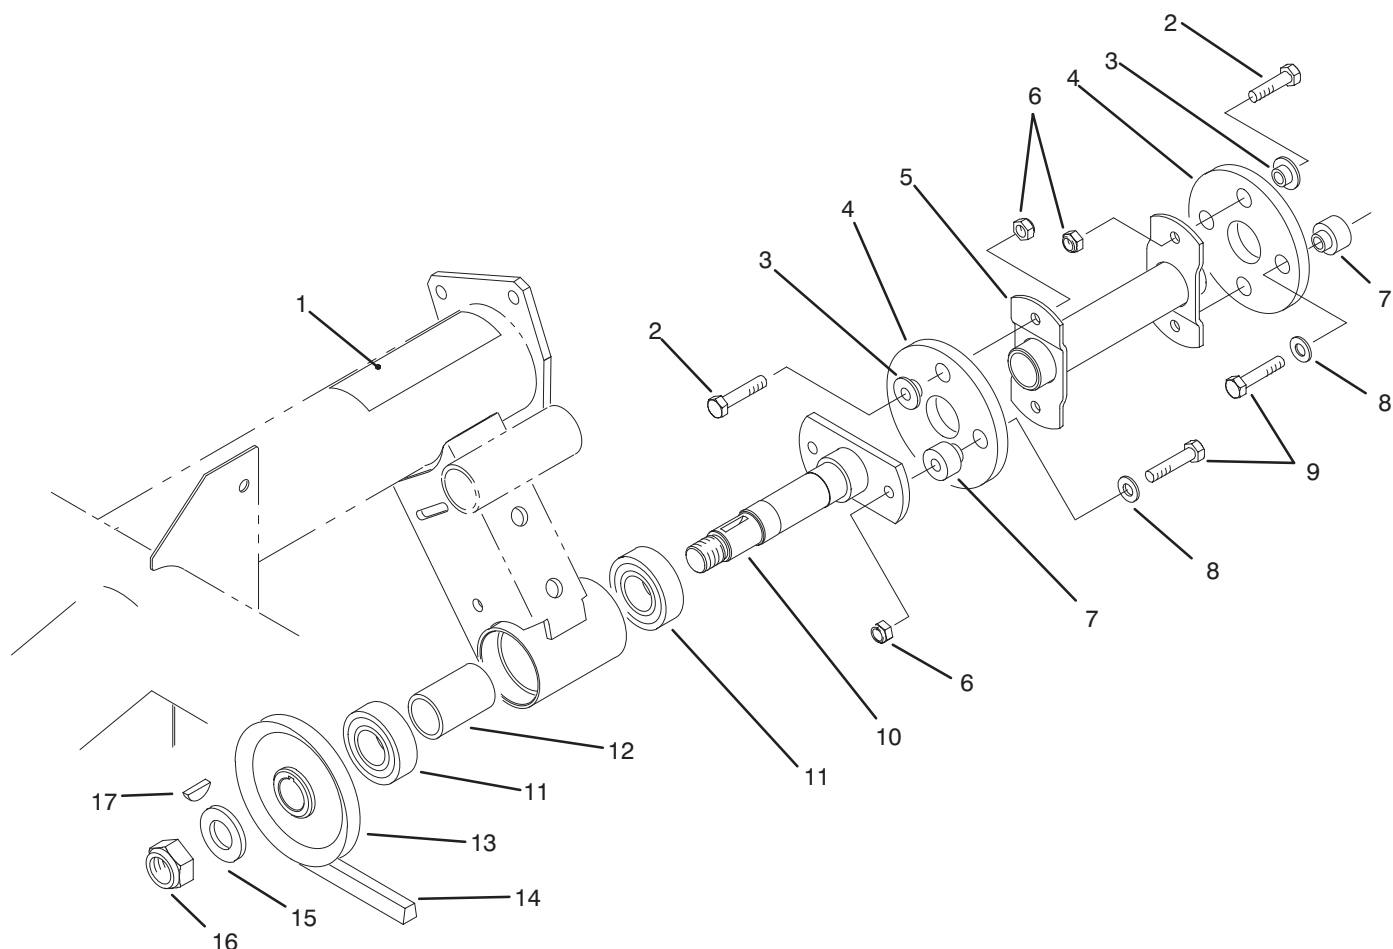 


T-1660

HYDRAULIC PUMP DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
‡1	93-7814	Decal – Caution	1
2	322-5	Screw – Cap Hex. Hd.	4
3	27-6600	Spacer – Thin	4
4	44-2230	Disc – Rubber	2
5	87-4120	Driveshaft	1
6	3296-29	Nut – Lock	6
7	27-6590	Spacer – Thick	4
8	3256-3	Washer – Flat	4
9	322-7	Screw – Cap Hex. Hd.	4

Ref. No.	Part No.	Description	No. Used
10	87-2720	Driveshaft	1
11	251-82	Bearing – Ball	2
12	87-2750	Spacer – Bearing	1
13	87-3370	Pulley	1
14	87-3210	Belt – V	1
15	3256-28	Washer – Flat	1
16	3296-15	Nut – Lock	1
17	3257-7	Key – Woodruff	1

 
‡For different language versions of this part, see International Decal Cross Reference.

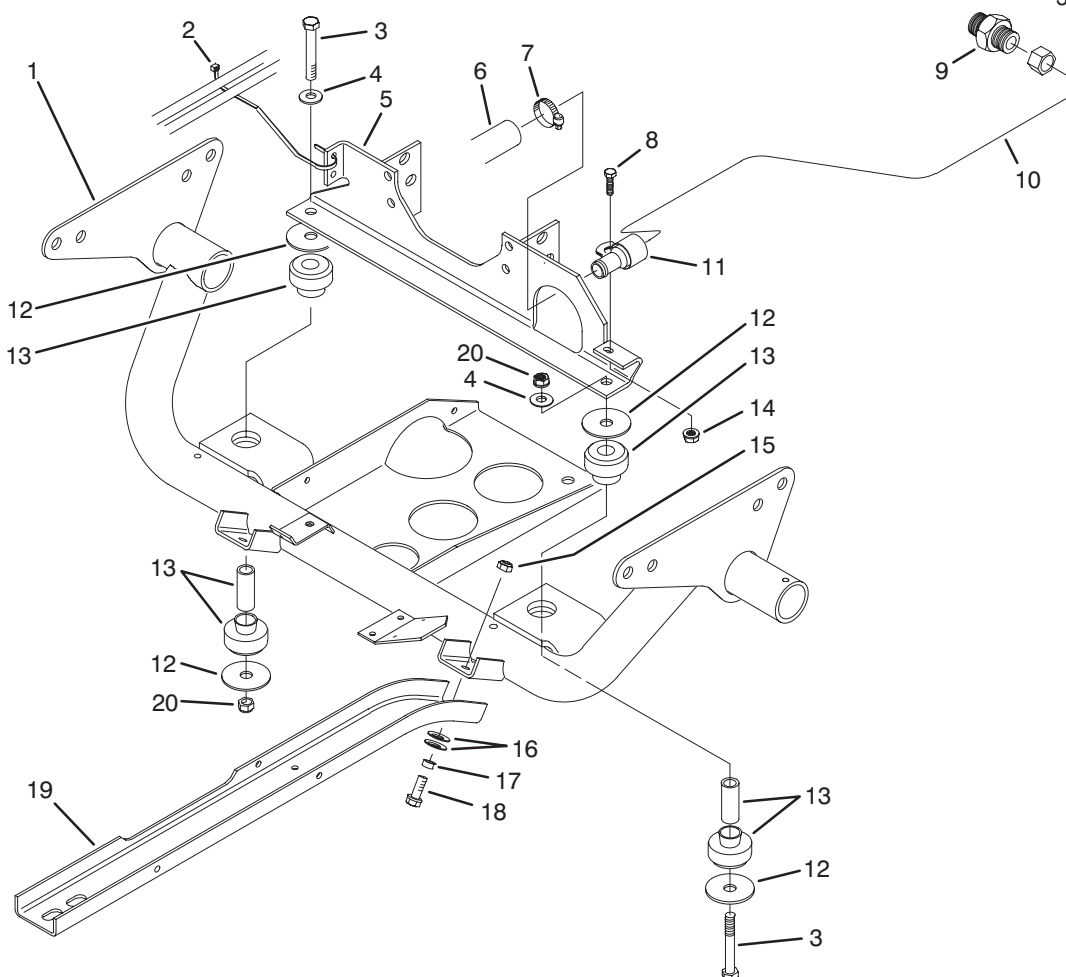

T-1661

ENGINE FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7099	Frame - Engine	1	11	2412-106	Clamp - R	1
2	3290-378	Tie - Cable	1	12	87-5100	Washer - Flat	4
3	324-12	Screw - Cap Hex. Hd.	2	13	87-4970	Engine Mount Assembly	2
4	3256-25	Washer - Flat	2	14	32128-33	Nut - Flange	1
5	93-7100	Mount - Engine	1	15	3296-39	Nut - Lock	6
6	87-7350	Hose - Suction	1	16	3290-413	Washer - Belleville	12
7	2412-34	Clamp - Hose	1	17	76-9100	Spacer	6
8	321-4	Screw - Cap Hex. Hd.	1	18	3234-11	Screw - Cap Hex. Hd.	6
9	87-7290	Fitting - Hydraulic	1	19	87-4730	Guard - Belly	2
10	87-6900	Tube - Hydraulic	1	20	3296-48	Nut - Lock	2

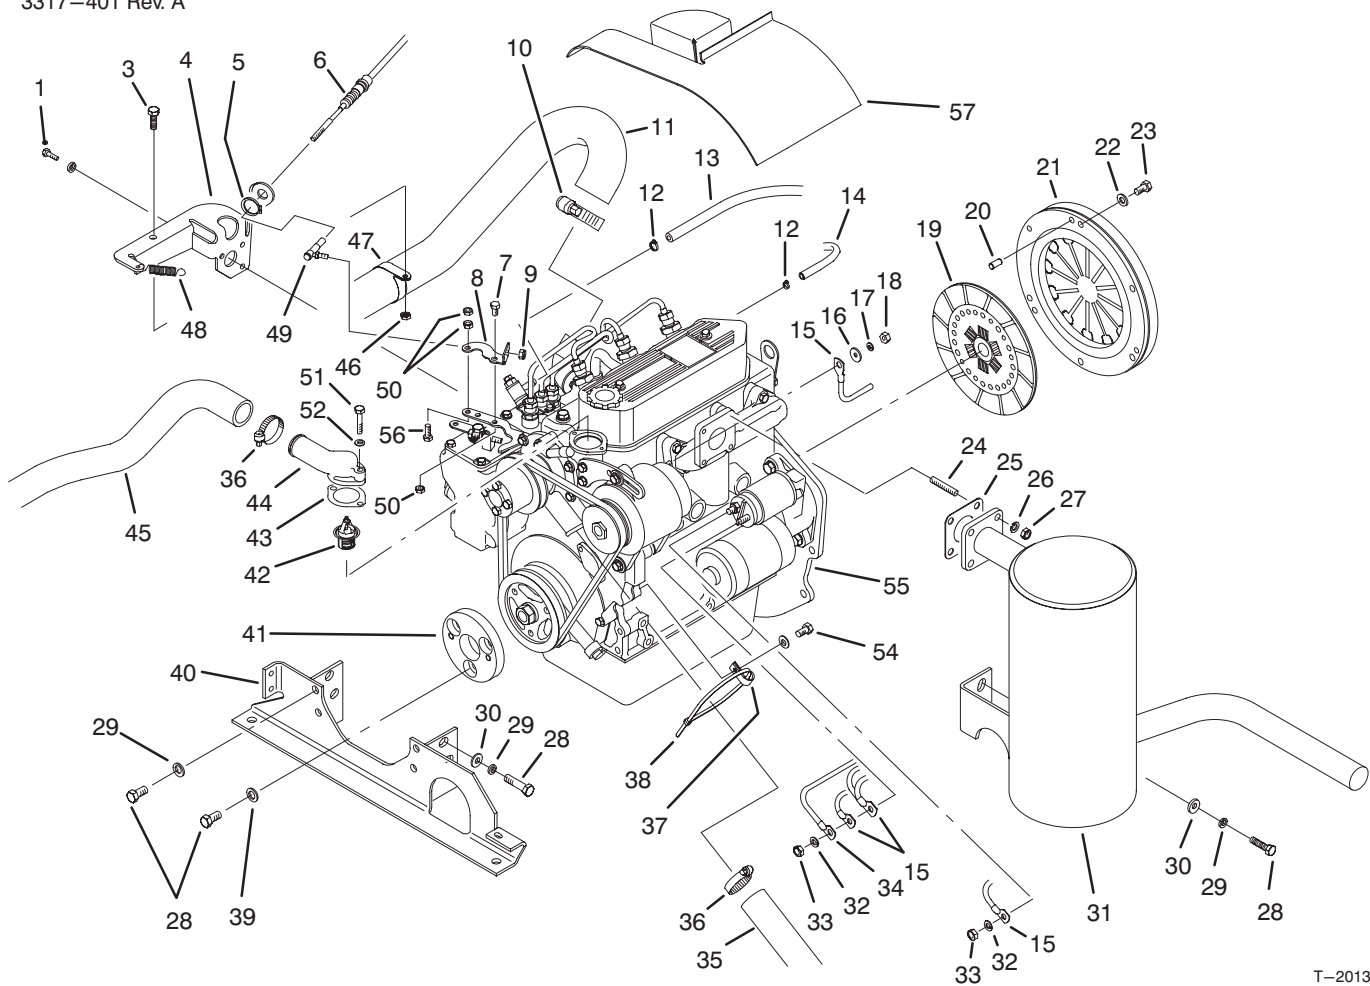 


T-2013

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	42-9440	Screw - Cap Hex. Hd.	3
3	322-3	Screw - Cap Hex. Hd.	1
4	87-5870	Bracket - Cable	1
5	32120-47	Ring - Retaining	1
6	87-8610	Cable - Accelerator	1
7	321-2	Screw - Cap Hex. Hd.	1
8	87-7440	Plate - Throttle	1
9	3296-3	Nut - Lock	1
10	2412-92	Clamp - Hose	1
11	87-4050	Hose - Air Intake	1
12	2412-108	Clamp - Hose	2
13	27-5360	Hose - Fuel	1
14	75-4706	Hose	1
15	93-7130	Harness - Wire	1
16	5-3637	Washer - Flat	1
17	43-5920	Washer - Lock	1
18	48-7880	Nut - Lock	1
19	87-4700	Disc - Clutch	1
20	51-5610	Pin - Alignment	3
21	87-4690	Cover - Clutch	1
22	3253-4	Washer - Lock	6
23	48-7700	Screw - Cap Hex. Hd.	6
24	42-9570	Stud - Muffler	4
25	42-9110	Gasket - Muffler	1
26	42-9850	Washer - Lock	4
27	48-7930	Nut	4
28	63-7790	Screw - Cap Hex. Hd.	13
29	48-9590	Washer - Lock	10


Ref. No.	Part No.	Description	No. Used
30	3256-25	Washer	6
31	93-7102	Muffler	1
32	3254-2	Washer - Lock	2
33	42-9580	Nut - Lock	2
34	87-3070	Cable - Battery Pos.	1
35	87-4150	Hose - Radiator Lower	1
36	2412-34	Clamp	2
37	2412-149	Clamp - R	1
38	3290-379	Tie - Cable	1
39	36-4790	Washer - Thrust	3
40	93-7100	Mount - Engine	1
41	87-4110	Puck - Engine Adapter	1
42	67-5050	Thermostat	1
43	64-4430	Gasket - Thermostat	1
44	87-3410	Housing - Thermostat	1
45	87-7330	Hose - Radiator Upper	1
46	3296-29	Nut - Lock	1
47	2412-107	Clamp - R	1
48	67-1450	Spring	1
49	18-1720	Joint - Ball	1
50	3296-56	Nut - Lock	3
51	48-7660	Screw - Cap Hex. Hd.	2
52	48-8010	Washer - Lock	2
54	42-9440	Bolt & Washer	1
55	87-2090	Engine	1
56	321-5	Screw - Cap Hex. Hd.	1
57	92-5964	Cover - Engine	1

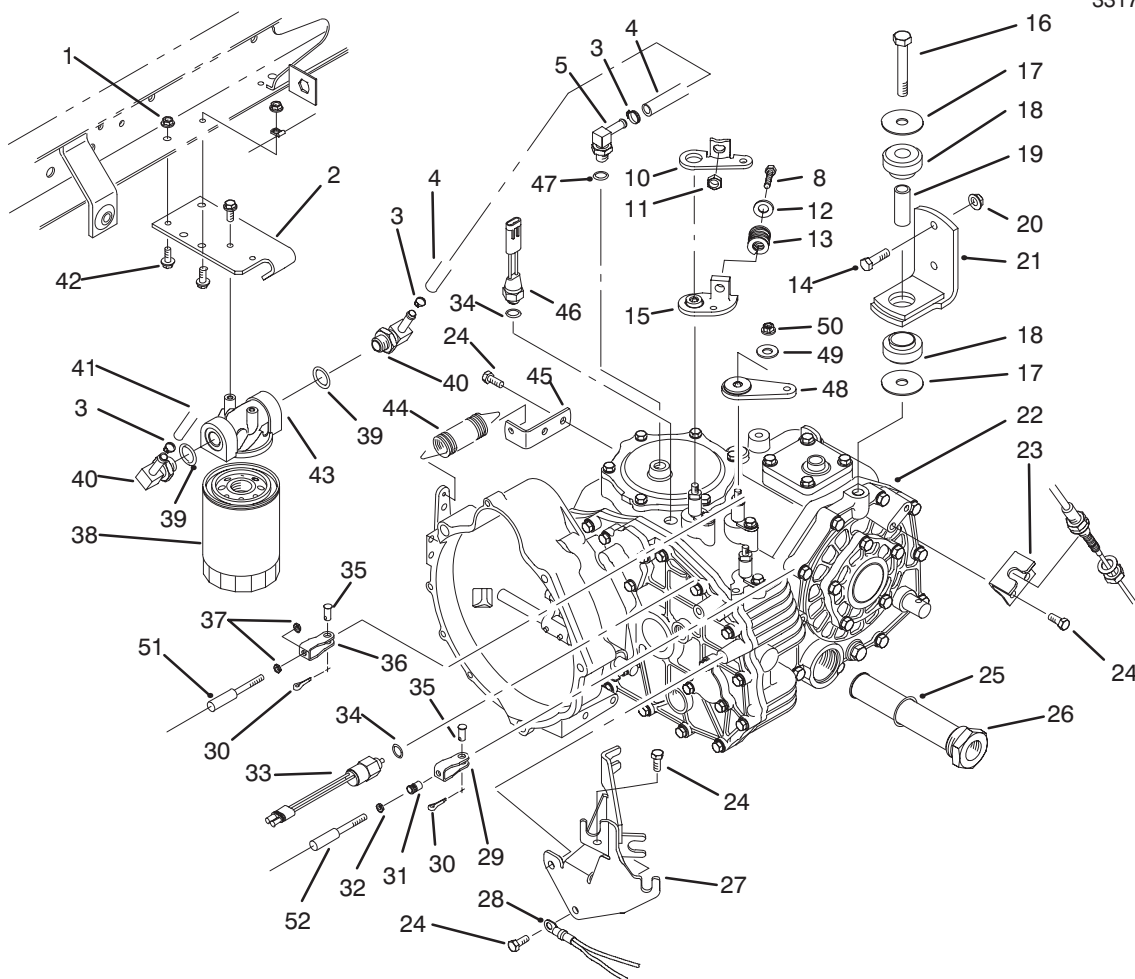 

T-1707

TRANSAXLE INSTALLATION ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32128-33	Nut - Flange Lock	1	29	87-7160	Cable Clevis Assembly (Incl. Ref. #31)	1
2	87-7040	Bracket - Oil Filter	1	30	3272-6	Pin - Cotter	3
3	2412-36	Clamp - Hose	3	31	32148-15	Nut - Clinch	1
4	87-5730	Hose - Hydraulic	1	32	3219-14	Nut - Hex.	1
5	354-135	Fitting - Hydraulic 90° (Incl. Ref. #47)	1	33	87-6710	Switch - Supervisor	1
8	323-10	Screw - Cap Hex. Hd.	1	34	237-30	Seal - O-Ring	2
10	87-8250	Plate - Shift Arm	1	35	283-62	Pin - Clevis	3
11	32128-21	Nut - Lock	1	36	87-2310	Clevis - Cable	2
12	3256-4	Washer - Flat	1	37	3220-1	Nut - Jam	4
13	87-6910	Spring - Compression	1	38	54-0110	Element - Oil Filter	1
14	323-7	Screw - Cap Hex. Hd.	4	39	237-79	Seal - O-Ring	2
15	87-7970	Arm - Shift	1	40	354-134	Fitting - Hydraulic 90° (Incl. Ref. #39)	2
16	3215-1	Screw - Cap Hex. Hd.	2	41	87-4920	Hose - Hydraulic	1
17	87-5100	Washer	4	42	3234-4	Screw - Hex. Flange Hd.	4
18	87-4970	Transaxle Mount Assembly (Incl. Ref. #19)	2	43	87-8780	Head - Oil Filter	1
19		Spacer - Mount	2	44	68-9950	Spring - Extension	1
20	3296-39	Nut - Flange Lock	4	45	87-7170	Bracket - Clutch Spring	1
21	87-5800	Bracket - Mount	2	46	72-4310	Switch - Ball N.C.	1
22	87-9490	Transaxle Assembly	1	47	237-42	Seal - O-Ring	1
23	87-4470	Bracket	1	48	87-7960	Lever - Shift Arm	2
24	66-3160	Screw - Cap Hex. Hd.	7	49	80-6990	Washer - Flat	3
25	237-123	Seal - O-Ring	1	50	48-9520	Nut - Lock	3
26	87-3990	Oil Strainer Assembly (Incl. Ref. #25)	1	51	87-4260	Shift Cable Assembly (Incl. Ref. #37)	2
27	87-4820	Bracket - Cable	1	52	87-4420	Hi-Lo Cable Assembly (Incl. Ref. #32)	1
28	87-3080	Cable - Battery Neg.	1				

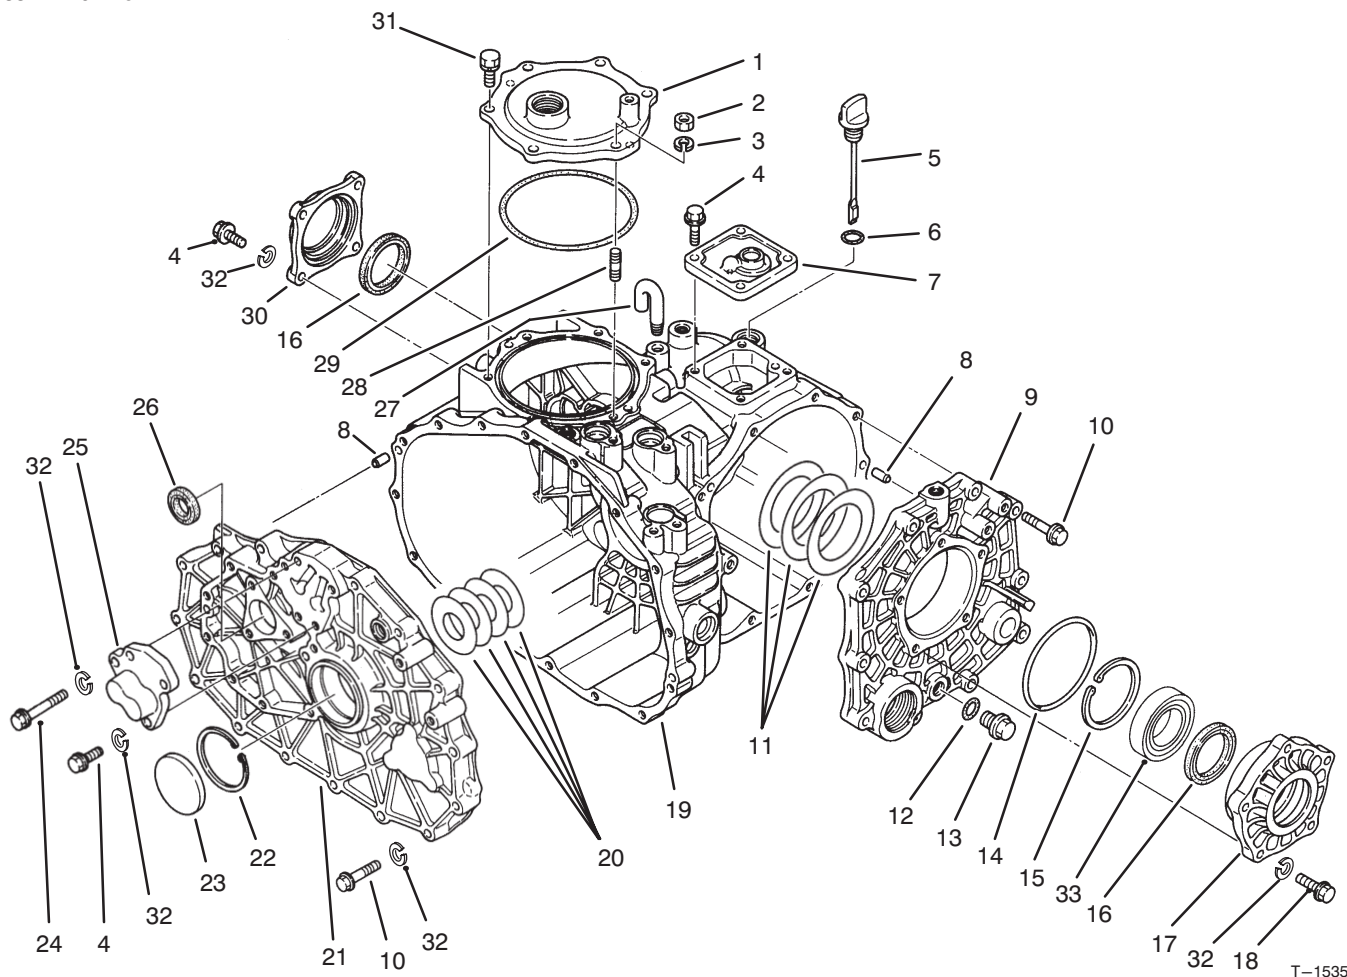 

TRANSAXLE CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-0656	Cover – P.T.O.	1
2	48-7930	Nut – Hex.	1
3	92-0762	Washer – Lock	1
4	60-6750	Screw – Cap Hex. Hd.	11
5	92-0662	Cap – Oil	1
6	92-0788	O-Ring	1
7	92-0652	Cover – Upper	1
8	92-0765	Pin – Alignment	4
9	92-0653	Cover – Side	1
10	42-9530	Screw – Cap Hex. Hd.	25
11	92-0809	Shim Set	1
12	92-0787	O-Ring	1
13	92-0773	Drain Plug Assembly (Incl. Ref. #12)	1
14	92-0789	O-Ring	1
15	92-0760	Ring – Retaining	1
16	92-0793	Seal – Oil	2


Ref. No.	Part No.	Description	No. Used
17	92-0654	Carrier – Differential	1
18	48-7730	Screw – Cap Hex. Hd.	5
19	92-0651	Case – Transaxle	1
20	92-0808	Shim Set	1
21	92-0657	Plate – Center	1
22	92-0759	Ring – Retaining	1
23	92-0807	Cap – Sealing	1
24	48-7560	Screw – Cap Hex. Hd.	1
25	92-0706	Cap – Fork Shaft	1
26	92-0791	Seal – Oil	1
27	92-0743	Breather – Air	1
28	92-0804	Stud	1
29	92-0790	O-Ring	1
30	92-0655	Cover – Seal	1
31	92-0796	Screw – Cap Hex. Hd.	5
32	42-9850	Washer – Lock	42
33	92-0775	Bearing – Ball	2

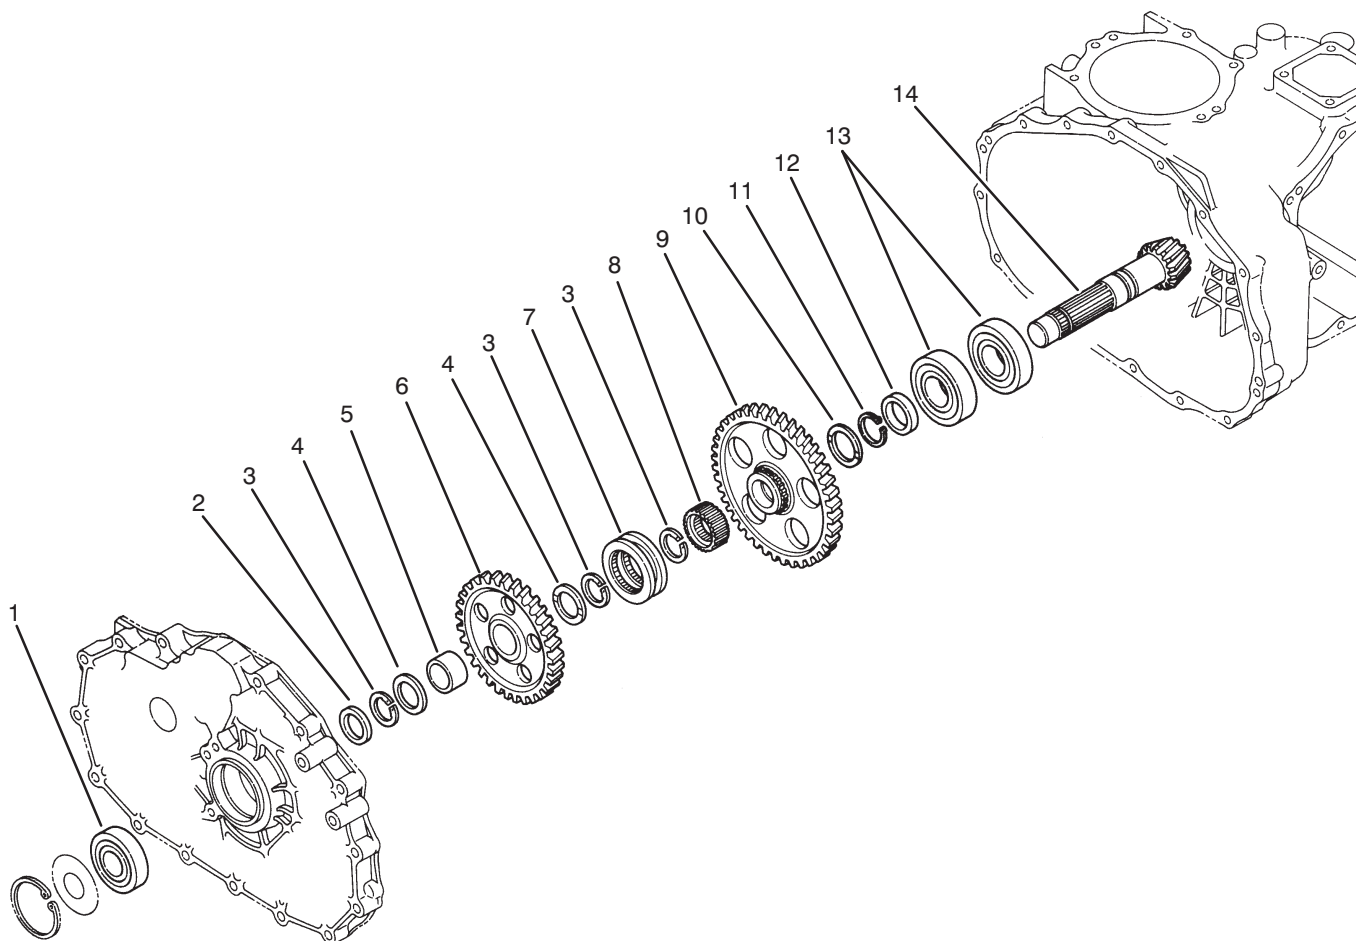 

T-1536

COUNTERSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0712	Bearing – Ball	1	9	92-0717	Gear – 71T	1
2	92-0716	Collar	1	10	92-0741	Washer – Thrust	1
3	92-0764	Ring – Retaining	3	11	92-0755	Ring – Retaining	1
4	92-0711	Washer – Thrust	2	12	92-0713	Collar	1
5	92-0783	Sleeve – Inner	1	13	92-0714	Bearing – Ball	2
6	92-0715	Gear – 49T	1	14	92-0710	Counter Shaft Assembly (Incl. Ring Gear)	1
7	92-0718	Shifter – Hi-Lo	1				
8	92-0719	Collar – Spline	1				

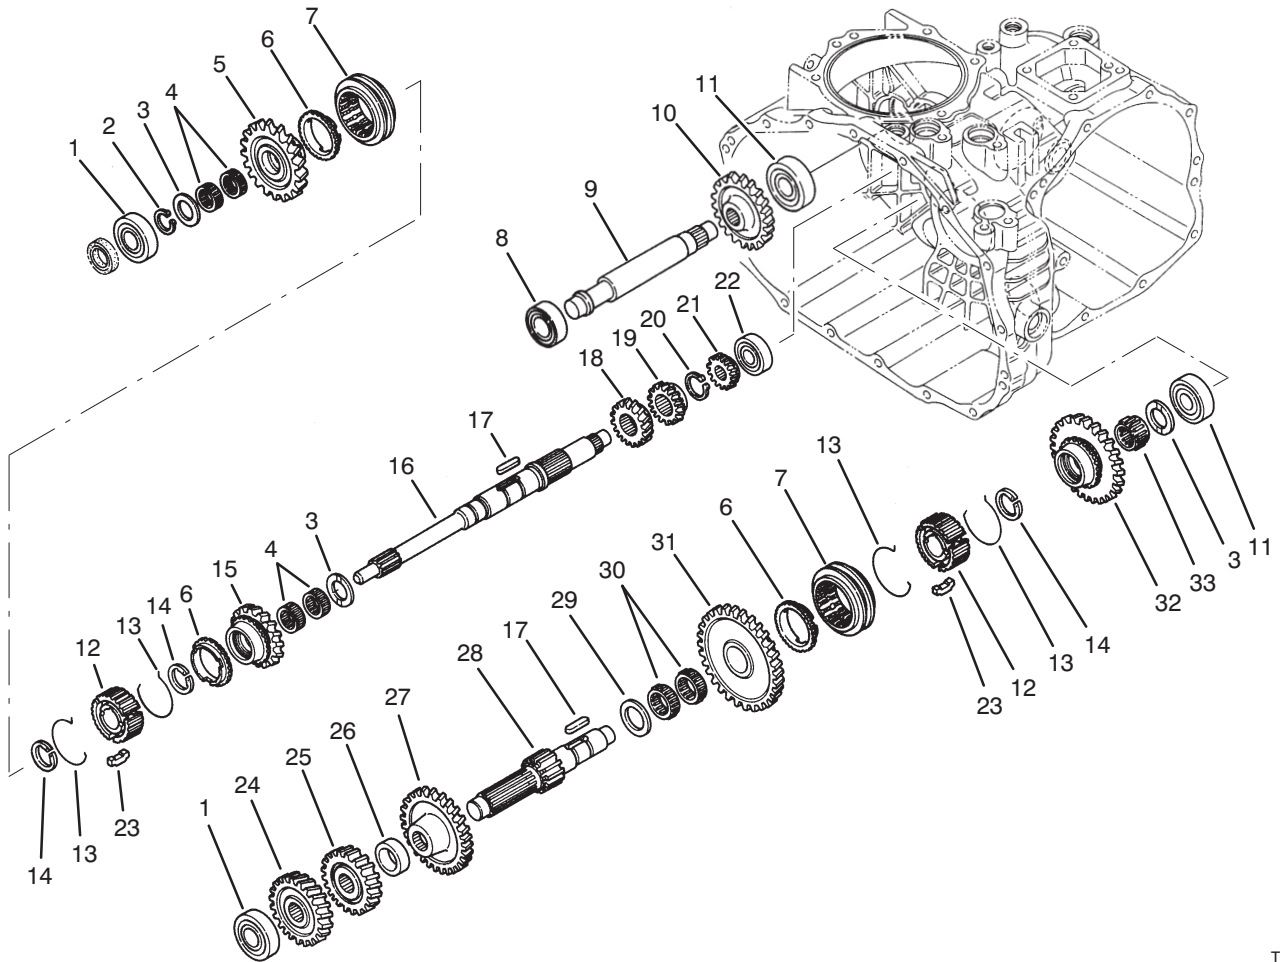 


T-1533

TRANSAXLE GEAR SHAFTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	251-8	Bearing – Ball	2
2	92-0753	Ring – Retaining	1
3	92-0740	Washer – Thrust	3
4	92-0781	Bearing – Needle	4
5	92-5181	Gear – 22T	1
6	92-0667	Ring – Synchro	3
7	92-0668	Shifter – Synchro	2
8	251-346	Bearing – Ball	1
9	92-0824	Shaft – Reverse Idler	1
10	92-0684	Gear – 33T	1
11	92-0778	Bearing – Ball	2
12	92-0664	Hub – Synchro	2
13	92-0666	Spring – Synchro	4
14	92-0763	Ring – Retaining	3
15	92-0821	Gear – 24T	1
16	92-0663	Shaft – Main	1
17	92-0772	Key	2


Ref. No.	Part No.	Description	No. Used
18	92-0687	Gear – 16T	1
19	92-0672	Gear – 18T	1
20	92-0754	Ring – Retaining	1
21	92-0673	Gear – 14T	1
22	92-0650	Bearing – Ball	1
23	92-0665	Key – Synchro	6
24	92-5182	Gear – 31T	1
25	92-0679	Gear – 23T	1
26	92-0680	Collar	1
27	92-0823	Gear – 43T	1
28	92-0674	Shaft – Reduction	1
29	92-0682	Washer – Thrust	1
30	92-0681	Bearing – Needle	2
31	92-0677	Gear – 49T	1
32	92-0819	Gear – 40T	1
33	92-0782	Bearing – Needle	1

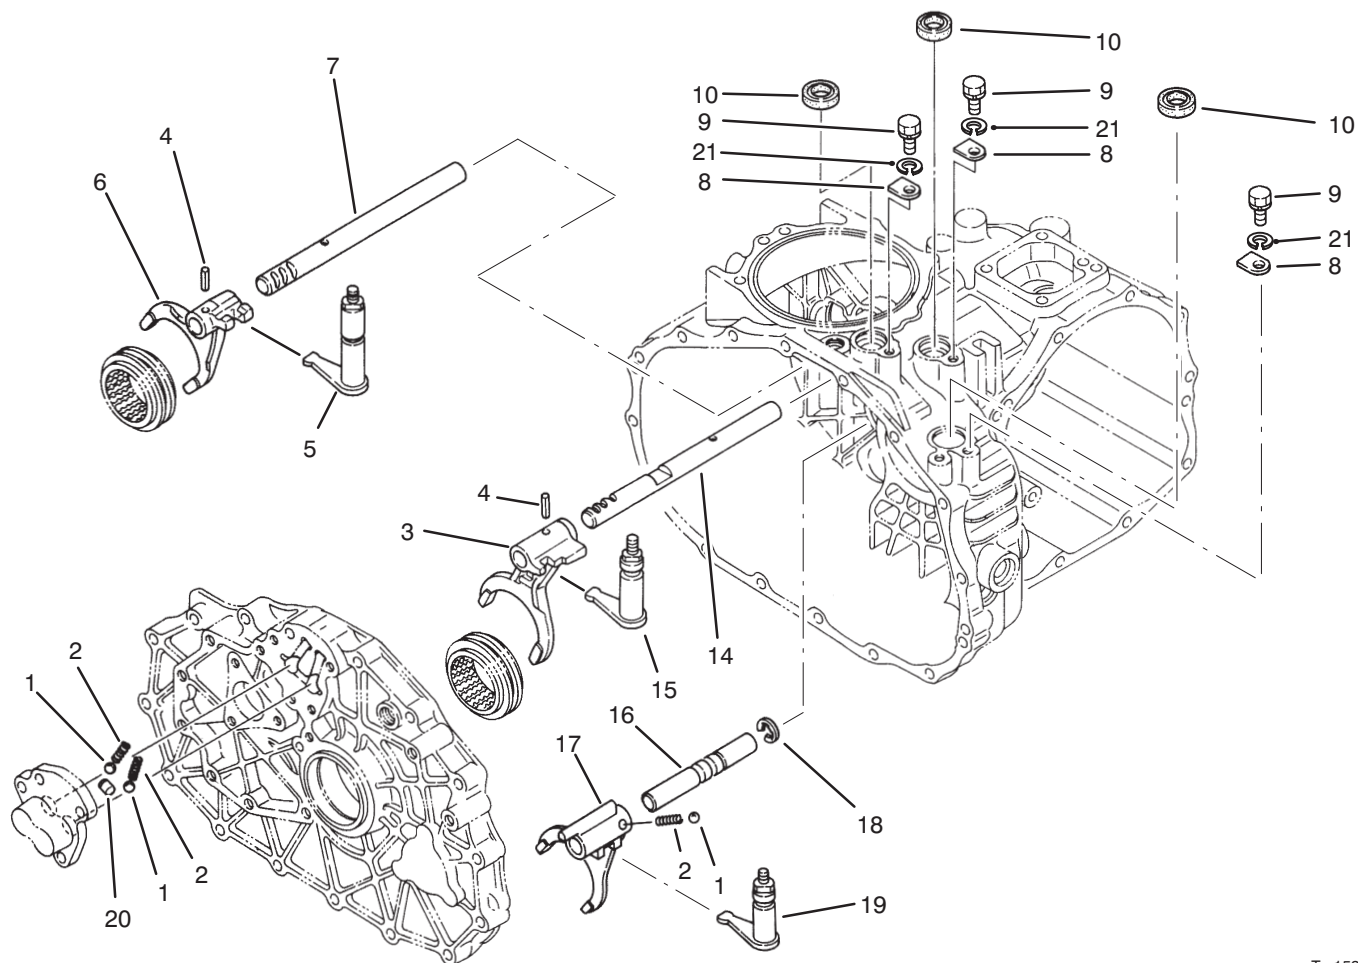 

T-1530

SHIFT FORK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0785	Ball	3	10	92-0729	Seal – Oil	3
2	92-0731	Spring – Compression	3	14	92-0698	Shaft – Fork R-1	1
3	92-0700	Fork – Shift R-1	1	15	92-0816	Arm – Shift Fork R-1	1
4	92-0769	Pin – Spring	2	16	92-0708	Shaft – Fork Hi-Lo	1
5	92-0817	Arm – Shift Fork 2-3	1	17	92-0709	Fork – Shift Hi-Lo	1
6	92-0701	Fork – Shift 2-3	1	18	92-0761	Ring – Retaining	1
7	92-0699	Shaft – Fork 2-3	1	19	92-0818	Arm – Shift Fork Hi-Lo	1
8	92-0732	Plate – Keeper	3	20	92-0705	Lock – Spindle	1
9	48-7700	Screw – Cap Hex. Hd.	3	21	42-9850	Washer – Lock	3

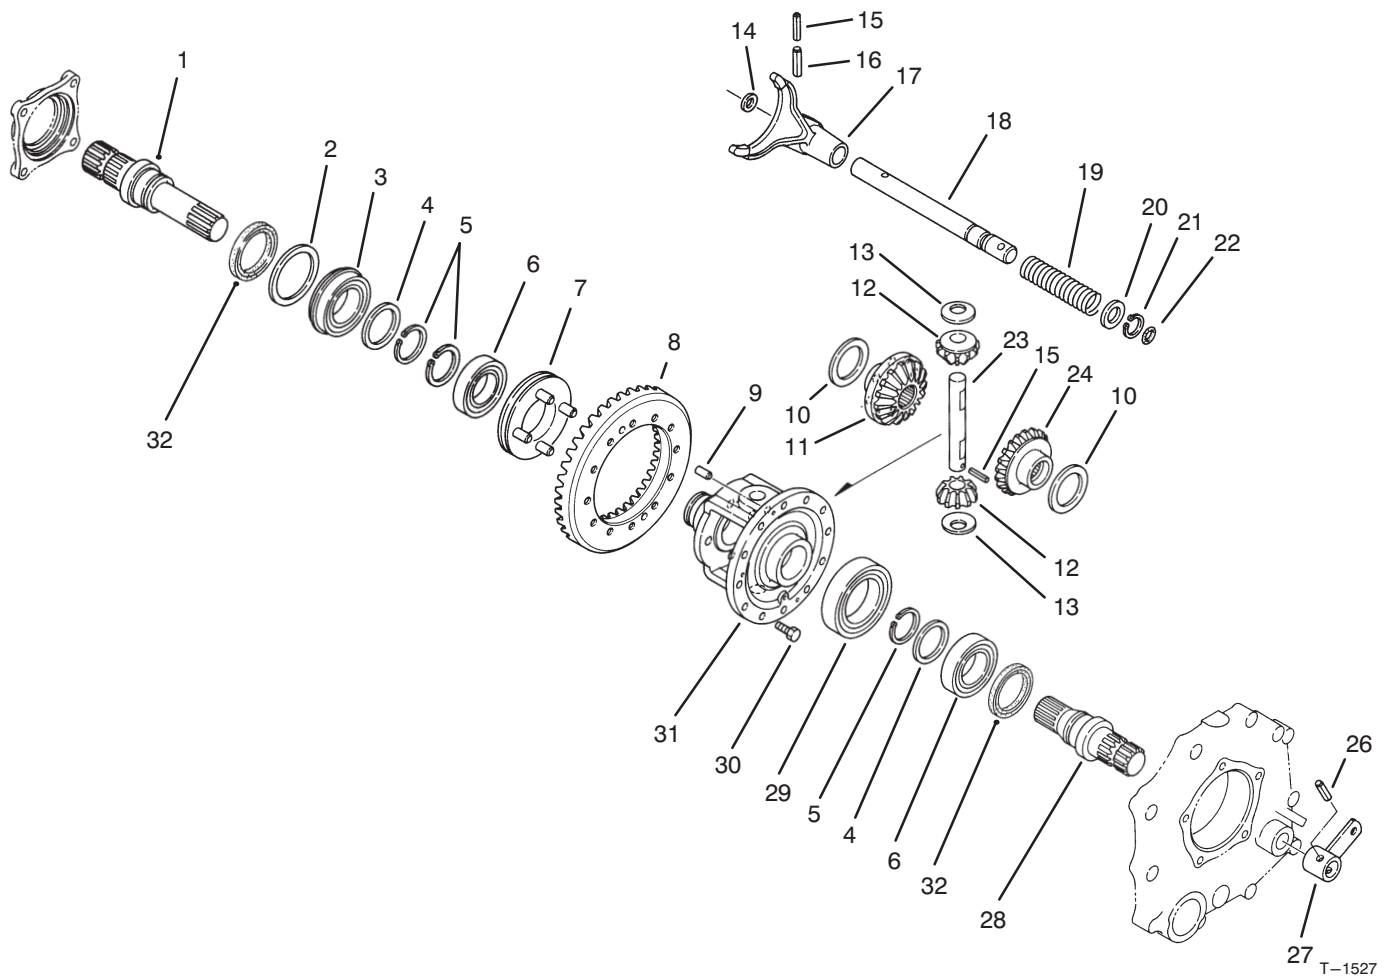 


T-1527

DIFFERENTIAL GEAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-0726	Shaft — Axle R.H.	1
2	92-0728	Washer	1
3	92-0780	Bearing — Ball	1
4	92-0727	Washer	2
5	92-0756	Ring — Retaining	3
6	92-0775	Bearing — Ball	2
7	92-0730	Slider — Differential Lock	1
8	92-0710	Ring Gear Assembly (Incl. Counter Shaft)	1
9	92-0765	Pin — Alignment	2
10	92-0747	Washer — Thrust	2
11	92-0746	Gear — Side R.H.	1
12	92-0748	Gear — Pinion	2
13	92-0750	Washer	2
14	92-0744	Washer	1
15	92-0768	Pin — Spring	2

Ref. No.	Part No.	Description	No. Used
16	92-0771	Pin — Spring	1
17	92-0721	Fork — Differential Lock	1
18	92-0722	Shaft — Lock Fork	1
19	92-0723	Spring — Compression	1
20	92-0733	Washer	1
21	92-0753	Ring — Retaining	1
22	92-0787	O-Ring	1
23	92-0749	Shaft — Pinion	1
24	92-0745	Gear — Side L.H.	1
26	92-0770	Pin — Spring	1
27	92-0724	Arm — Differential Lock	1
28	92-0725	Shaft — Axle L.H.	1
29	92-0776	Bearing — Ball	1
30	92-0803	Screw — Hex. Flange Hd.	12
31	92-0720	Case — Differential	1
32	92-0793	Seal — Oil	2

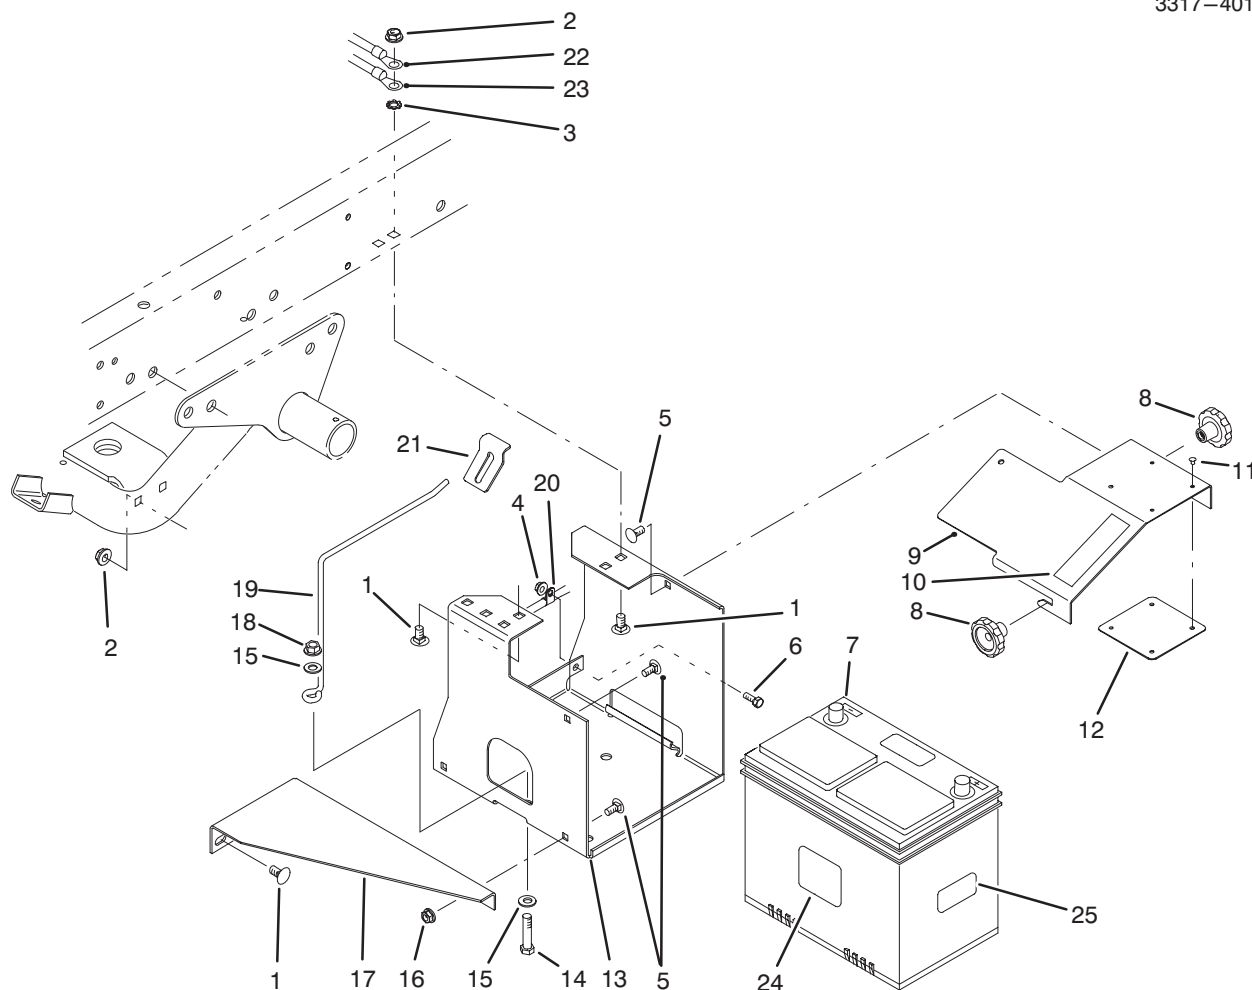 


T-2014

BATTERY MOUNT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3231-21	Bolt - Carriage	6
2	3290-357	Nut - Flange Lock	6
3	3255-9	Washer - Lock ETLW	1
4	32128-33	Nut - Flange Lock	1
5	3230-23	Bolt - Carriage	4
6	321-4	Screw - Cap Hex. Hd.	1
7	63-9230	Battery	1
8	19-4050	Knob	2
9	87-5130	Cover - Battery Base	1
10	93-6687	Decal - No Step	1
11	3296-27	Rivet - Plastic	4
12	87-7620	Shield - Plastic	1
13	87-5120	Bracket - Battery Base	1

Ref. No.	Part No.	Description	No. Used
14	323-9	Screw - Cap Hex. Hd.	1
15	3256-24	Washer - Flat	2
16	32128-20	Nut - Flange Lock	2
17	87-5110	Support - Lower	1
18	3296-39	Nut - Flange Lock	1
19	87-7600	Rod - Battery Support	1
20	2412-89	Clamp - R	1
21	87-7610	Tab - Battery Support	1
22	93-7130	Harness - Wire Rear	1
23	87-3080	Cable - Battery Neg.	1
24	93-6668	Decal - Charging	1
25	93-7276	Decal - Danger	1

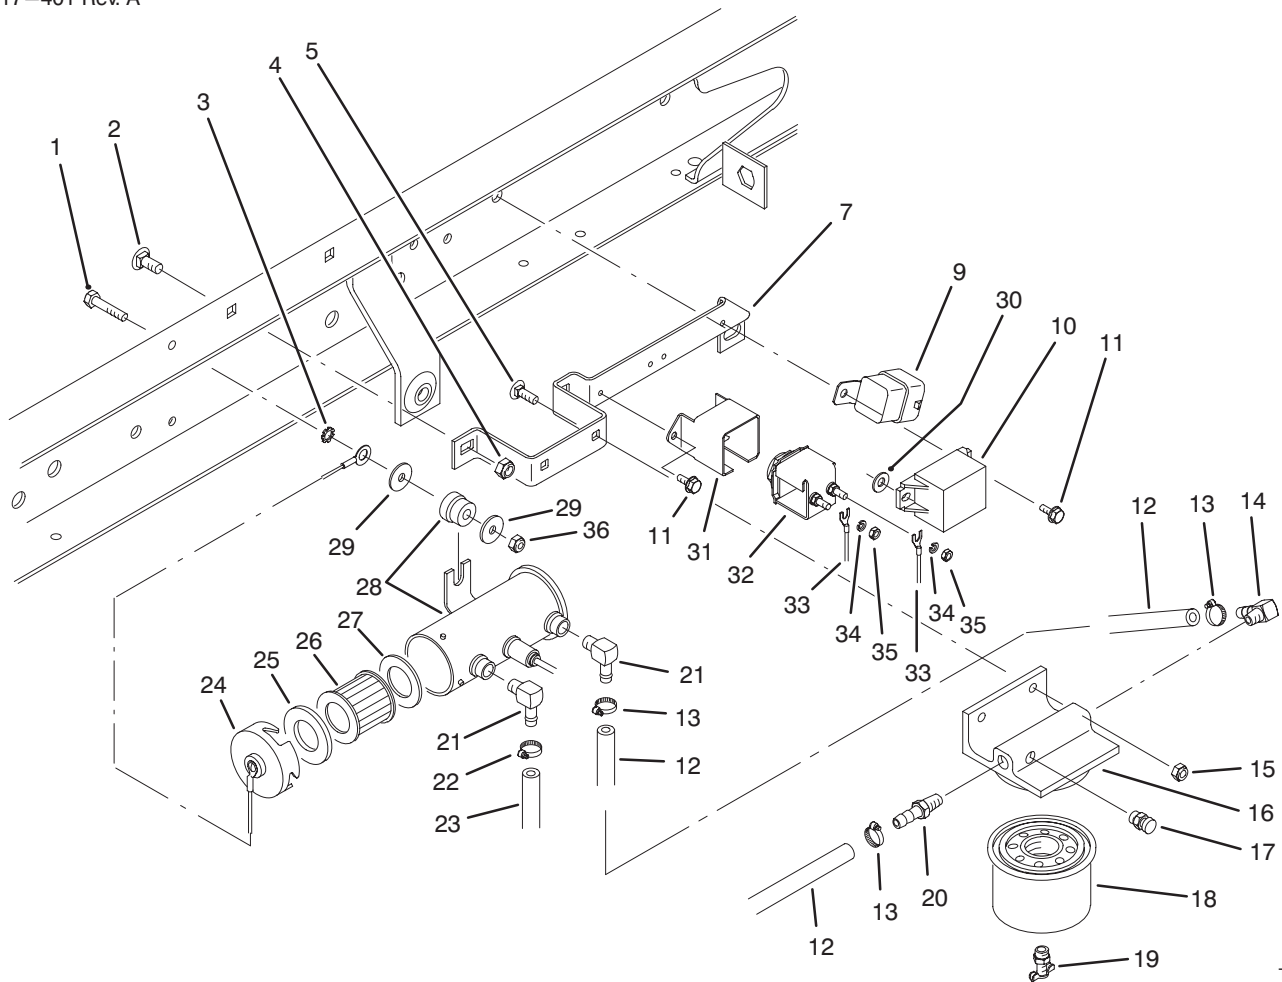 


T-1664

FUEL FILTER, FUEL PUMP & RELAY MOUNTING

Ref. No.	Part No.	Description	No. Used
1	48-7650	Screw – Cap Hex. Hd.	2
2	3230-23	Bolt – Carriage	2
3	3255-7	Washer – ETLW	1
4	3296-29	Nut – Lock	2
5	3229-25	Nut – Lock	2
7	87-7380	Bracket – Relay/Indicator	1
9	70-1480	Relay – S.P.D.T.	1
10	66-8800	Relay	1
11	12-5450	Screw – Hex. Hd.	4
12	27-5360	Hose – Fuel	2
13	2412-108	Clamp – Hose	3
14	353-707	Fitting – 90° Barb	1
15	3296-42	Nut – Lock	2
16	63-8280	Head – Filter	1
17	63-8290	Vent – Air	1
18	63-8300	Element – Filter	1
19	63-8310	Drain – Filter	1
20	353-783	Fitting – Straight	1


Ref. No.	Part No.	Description	No. Used
21	46-3710	Fitting – 90°	2
22	92-2379	Clamp – Hose	1
23	63-9640	Hose – Fuel Tank to Pump	1
24	43-2580	Magnet	1
25	43-2560	Gasket	1
26	43-2550	Filter	1
27	43-2570	Gasket	1
28	53-8150	Fuel Pump Assembly (Incl. Ref. #24-27)	1
29	3256-67	Washer – Flat	3
30	3256-22	Washer – Flat	1
31	70-8560	Retainer – Indicator	1
32	66-8700	Glow Plug Indicator Assy. (Incl. Ref. #34-35)	1
33	93-7130	Harness – Wire	1
34	48-8000	Washer – Lock	2
35	43-5970	Nut	2
36	49-7810	Nut – Lock	2

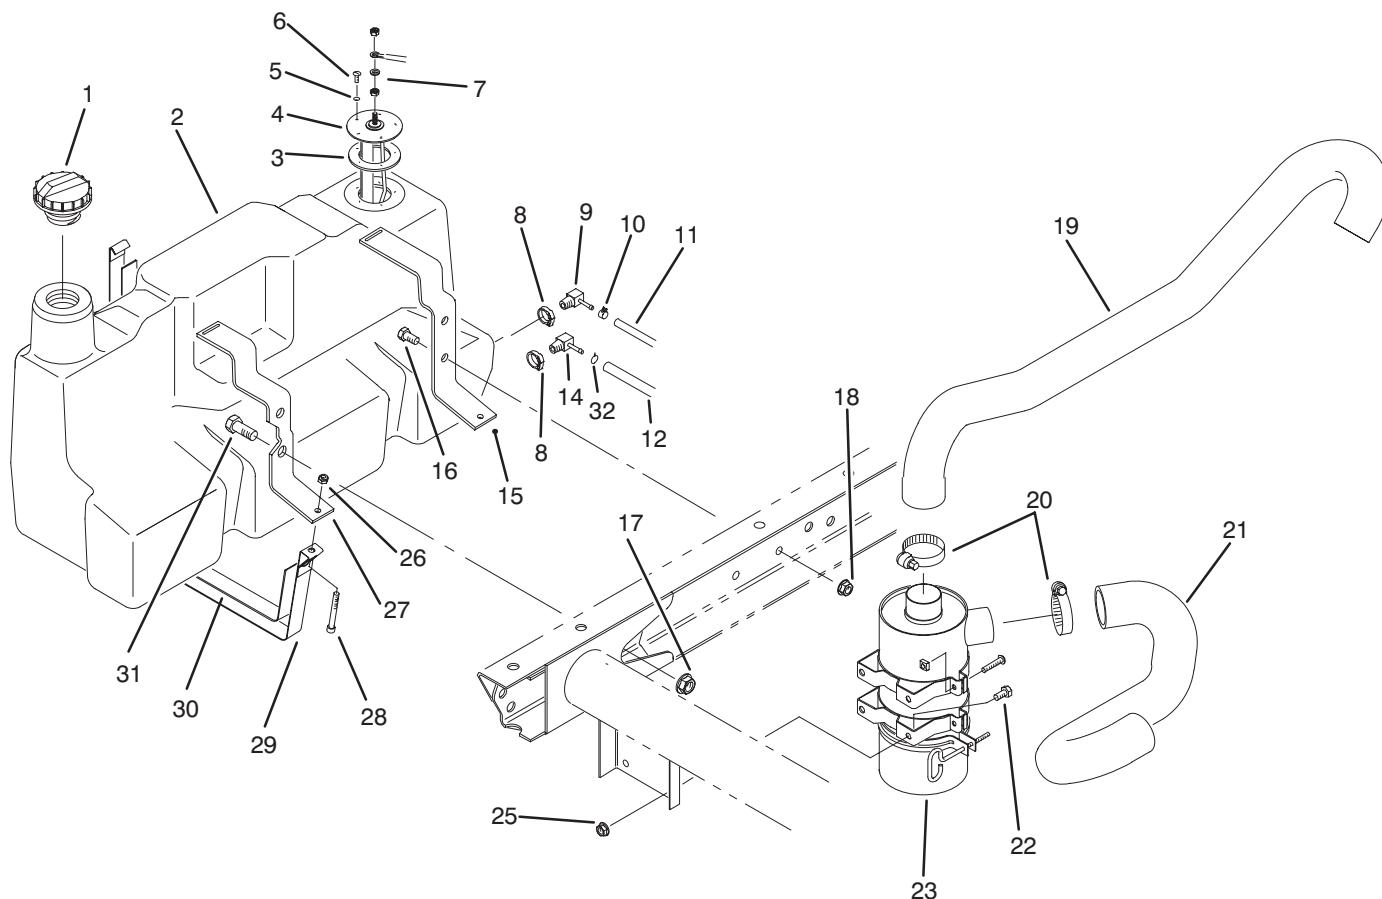 

T-1665

FUEL TANK & AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-3102	Cap - Fuel	1	17	32128-23	Nut - Flange	2
2	87-0650	Fuel Tank Assembly (Incl. Ref. #8, 9 & 14)	1	18	3290-357	Nut - Flange	2
3	62-7650	Gasket - Sending Unit	1	19	87-4050	Hose - Air Cleaner	1
4	63-7640	Unit - Sending	1	20	2412-92	Clamp - Hose	2
5	3253-15	Washer - Lock	5	21	87-9310	Hose - Air Cleaner	1
6	32122-24	Screw - Round Hd.	5	22	322-2	Screw - Cap Hex. Hd.	4
7	5-3637	Washer - Flat	1	23	87-9410	Air Cleaner Assembly	1
8	2412-36	Clamp	1	25	32128-20	Nut - Flange Lock	4
9	76-4430	Fitting - Fuel 90°	1	26	3296-42	Nut - Lock	2
10	2412-108	Clamp - Hose	1	27	87-3150	Support - Front	1
11	75-4706	Hose - Fuel	1	28	3274-54	Screw - Hex. Socket Hd.	2
12	63-9640	Hose - Fuel	1	29	87-3160	Strap - Tank Support	2
14	353-781	Fitting - Fuel 90°	1	30	87-3170	Pad - Tank Support Strap	2
15	87-3140	Support - Rear	1	31	3234-38	Screw - Cap Hex. Hd.	2
16	323-4	Screw - Cap Hex. Hd.	2	32	92-2379	Clamp - Hose	1

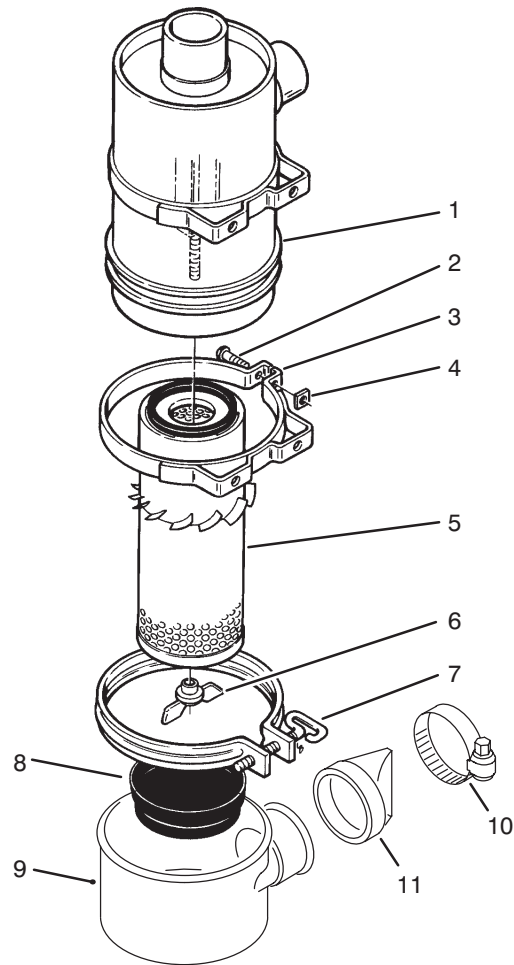 


T-1349

AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Body	1	7	33-1340	Clamp Assembly	1
2	3258-19	Screw - Round Head	2	8	33-1310	Baffle	1
3	33-1350	Band Assembly (Incl. Ref. #2 & 4)	2	9	87-9390	Cup	1
4	32107-11	Nut - Square	2	10	2412-130	Clamp - Hose	1
5	33-1300	Assembly - Element	1	11	87-9400	Valve	1
6	33-1330	Assembly - Nut	1	*	87-9410	Air Cleaner (Complete) (Incl. Ref. #1 & 5-11)	1

 *Not Illustrated

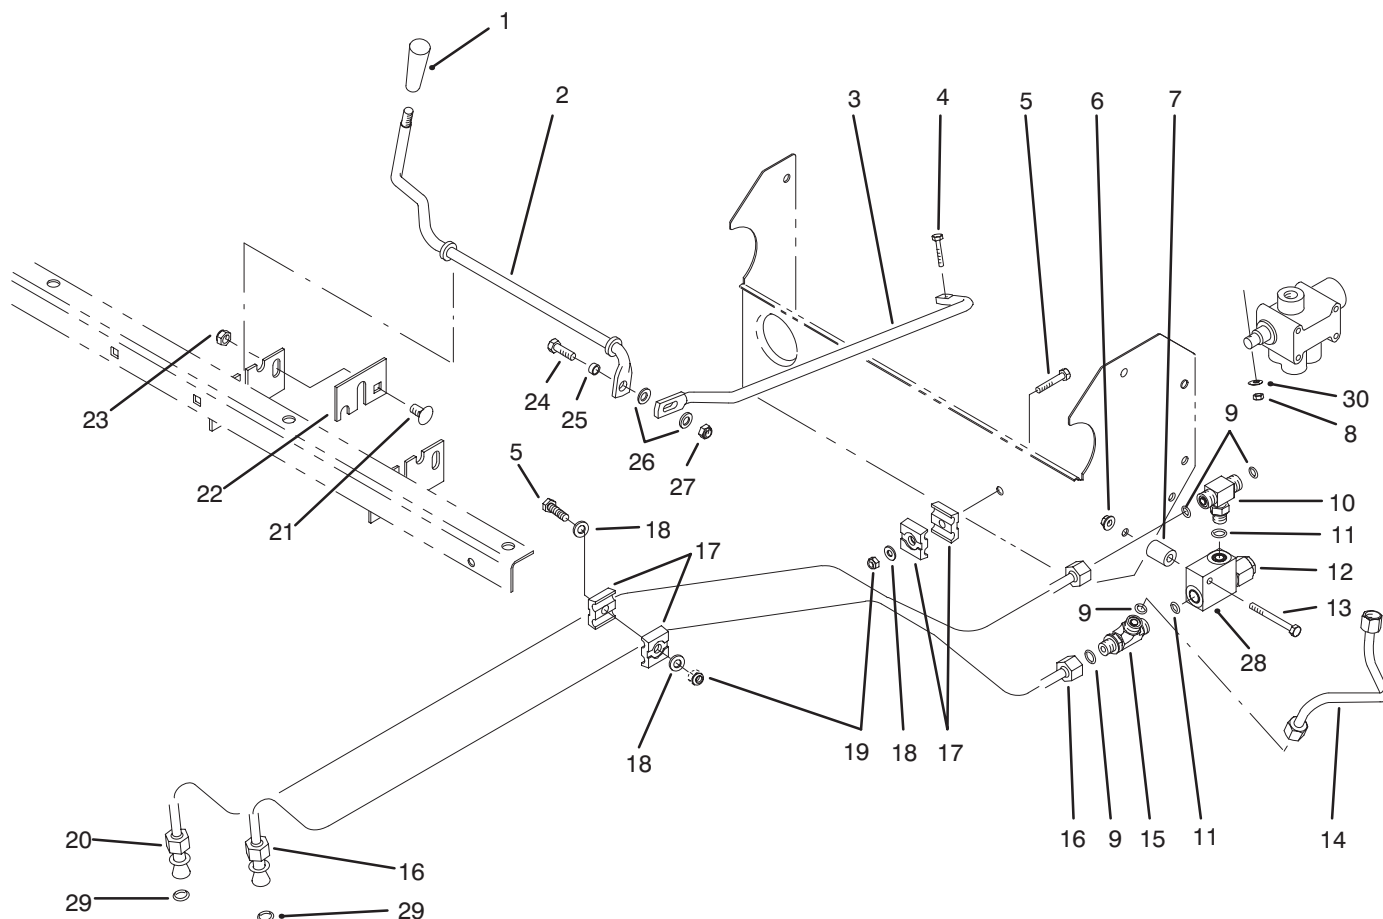


T-1610

LIFT VALVE LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	233-39	Knob	1	17	56-7973	Clamp - Hydraulic Tube	4
2	87-4500	Rod - Pivot	1	18	3256-22	Washer - Flat	3
3	87-4510	Rod - Connecting	1	19	3296-42	Nut - Lock	2
4	87-5150	Screw - Cap Hex. Hd.	1	20	87-4540	Hydraulic Tube Assembly (Incl. Ref. #29)	1
5	321-9	Screw - Cap Hex. Hd.	2	21	3231-21	Bolt - Carriage	1
6	32128-33	Nut - Flange Lock	1	22	87-4490	Bracket - Hold-Down	1
7	75-9610	Spacer	1	23	3296-39	Nut - Lock	1
8	87-5140	Nut - Lock	1	24	322-5	Screw - Cap Hex. Hd.	1
9	237-22	Seal - O-Ring	4	25	87-5080	Spacer - Connecting	1
10	340-94	Fitting - Hydraulic Tee (Incl. Ref. #9 & 11)	1	26	3256-23	Washer - Flat	2
11	237-42	Seal - O-Ring	2	27	3296-29	Nut - Lock	1
12	92-2160	Cartridge - Relief Valve	1	28	92-2161	Body - Relief Valve	1
13	321-15	Screw - Cap Hex. Hd.	1	29	39-7310	Seal - O-Ring	2
14	87-4560	Tube - Hydraulic	1	30	3256-14	Washer - Flat	1
15	340-86	Fitting - Hydraulic Tee (Incl. Ref. #9 & 11)	1	*	87-3680	Assembly - Relief Valve (Incl. Ref. #12 & 28)	1
16	87-9350	Hydraulic Tube Assembly (Incl. Ref. #29)	1				

 *Not Illustrated

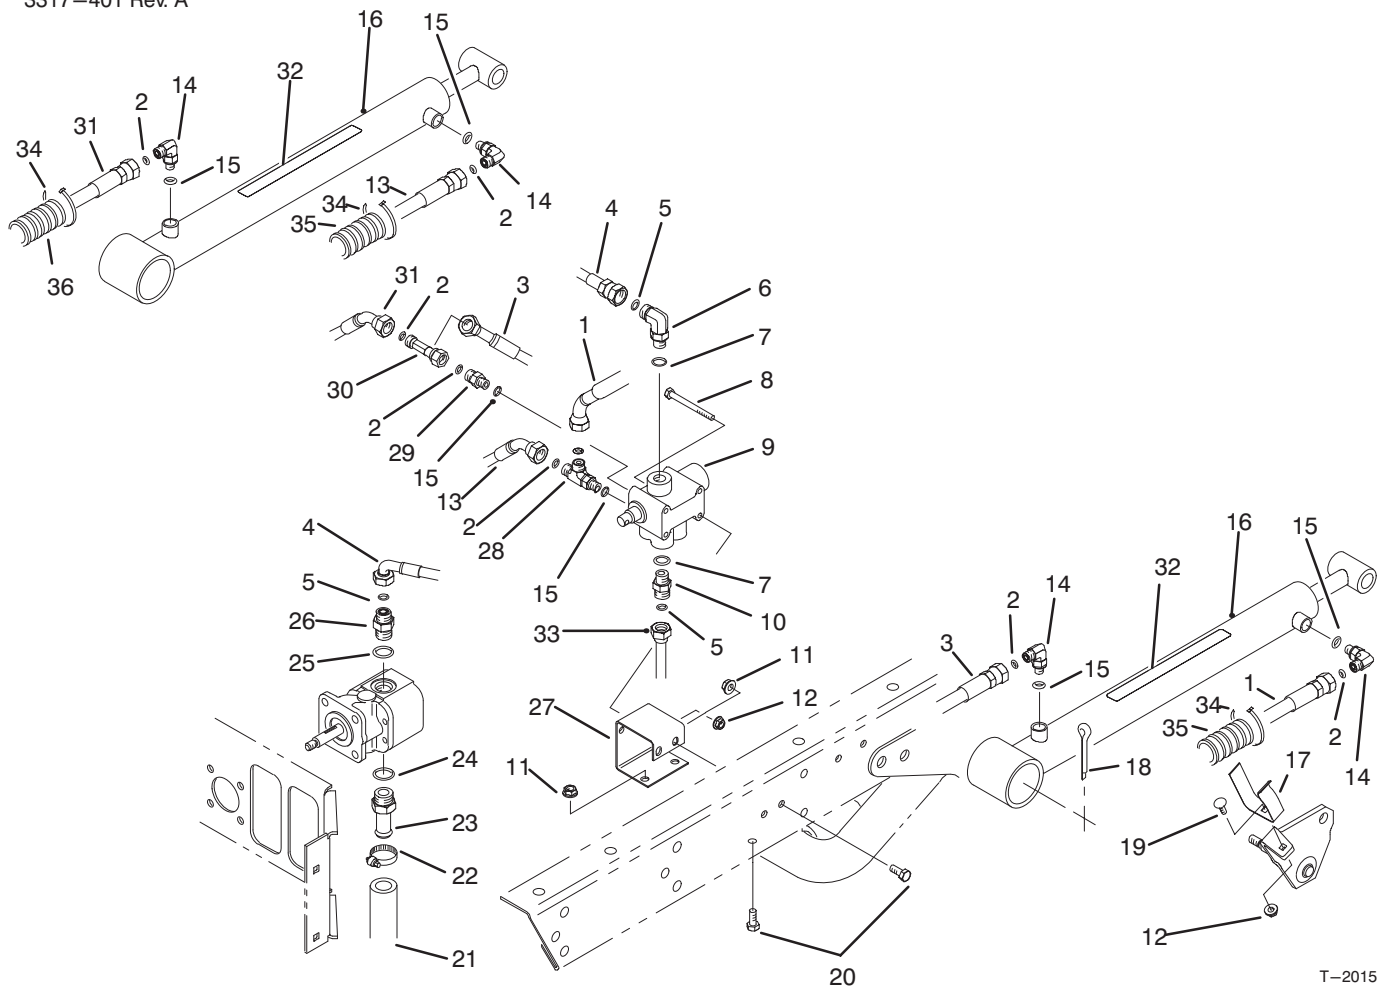


T-2015

LIFT VALVE & CYLINDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-2697	Hose – Hydraulic LH	1
2	237-21	Seal – O-Ring	6
3	87-4880	Hose – Hydraulic LH	1
4	87-4870	Hose – Hydraulic	1
5	237-22	Seal – O-Ring	3
6	340-77	Fitting – Hydraulic 90° (Incl. Ref. #5 & 7)	1
7	237-42	Seal – O-Ring	2
8	321-14	Screw – Cap Hex. Hd.	2
9	43-1950	Valve	1
10	340-2	Fitting – Straight	1
11	32128-20	Nut – Flange Head	4
12	32128-33	Nut – Flange Head	4
13	87-4910	Hose – Hydraulic RH	1
14	340-132	Fitting – Hydraulic 90° (Incl. Ref. #2 & 15)	4
15	237-78	Seal – O-Ring	4
16	87-7990	Hydraulic Cylinder Assy. (Incl. Ref. #32)	2
17	87-3720	Retainer – Cylinder	2
18	3272-37	Pin – Cotter	2
19	3229-25	Screw – Carriage	2

Ref. No.	Part No.	Description	No. Used
20	322-3	Screw – Cap Hex. Hd.	4
21	87-7350	Hose – Hydraulic	1
22	2412-34	Clamp	1
23	354-136	Fitting – Hydraulic Straight (Incl. Ref. #24)	1
24	237-80	Seal – O-Ring	1
25	237-79	Seal – O-Ring	1
26	340-3	Fitting – Hydraulic Straight (Incl. Ref. #5 & 25)	1
27	87-4520	Bracket – Dump Valve	1
28	340-140	Fitting – Hydraulic Tee (Incl. Ref. #2 & 15)	1
29	340-92	Fitting – Hydraulic Straight (Incl. Ref. #2 & 15)	1
30	340-151	Fitting – Hydraulic Tee (Incl. Ref. #2)	1
31	87-4900	Hose – Hydraulic RH	1
32	93-9852	Decal – Warning	2
33	87-4560	Tube – Hydraulic	1
34	3290-378	Tie – Cable	6
35	24-7923	Conduit – Hose	2
36	24-7922	Conduit – Hose	1

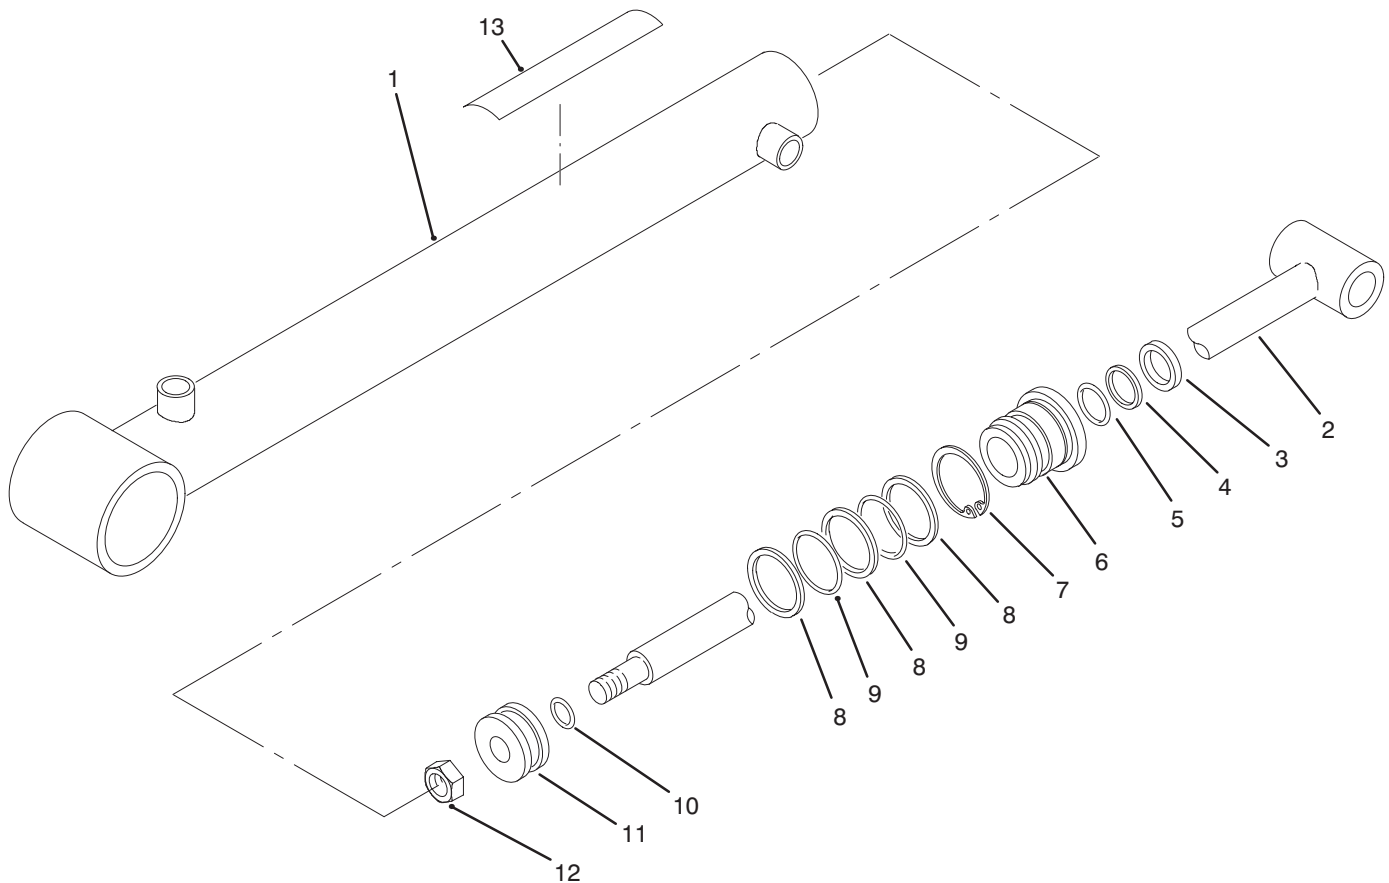 


T-1612

LIFT CYLINDER 87-7990

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Barrel Assembly	1	9		Seal - O-Ring	2
2	92-2163	Shaft	1	10		Seal - O-Ring	1
3		Seal - Dust	1	11	43-5150	Piston	1
4		Backup	1	12	32152-10	Nut	1
5		Seal - O-Ring	1	13	93-9852	Decal - Warning	1
6	92-2162	Head	1	*	92-2165	Kit - Repair (Incl. Ref. #3-5 & 8-10)	1
7	84-1680	Ring - Retaining	1				
8		Backup	3				

 *Not Illustrated

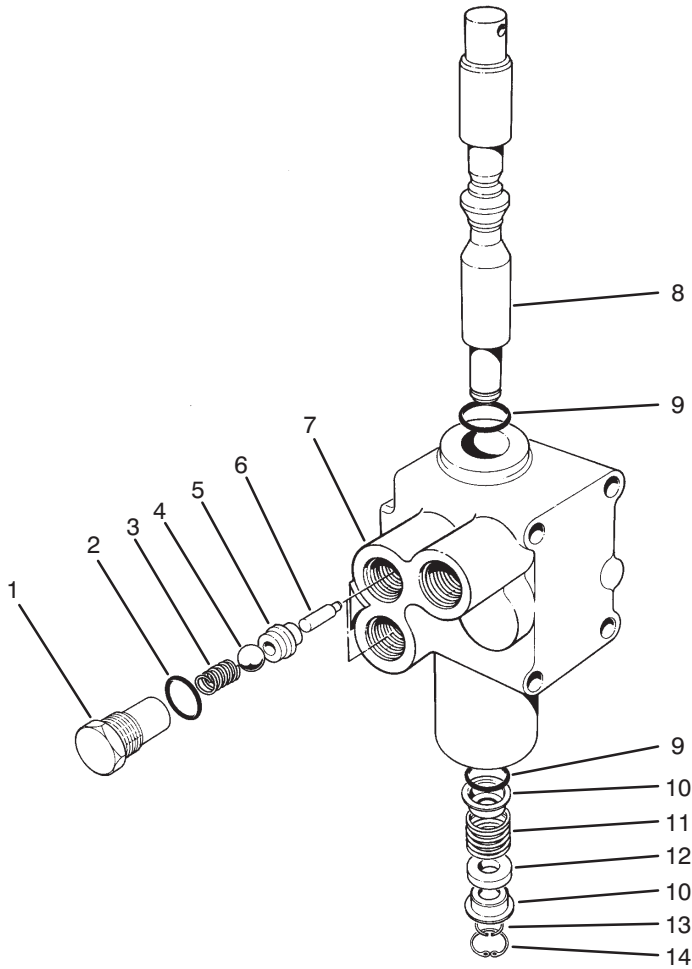


T-0280

CONTROL VALVE ASSEMBLY NO. 43-1950

Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2
2	237-42	O-Ring	2
3	22-8340	Spring	2
4	22-8350	Ball	2
5	22-8370	Seat-Check Valve	2
6	22-8360	Pin - Cam	2
7		Body	1

Ref. No.	Part No.	Description	No. Used
8	22-8420	Spool	1
9	22-8500	O-Ring	2
10	22-8380	Retainer - Spring	2
11	22-8410	Spring	1
12	23-3030	Spacer	1
13	22-8480	Ring - Retaining, Spool	1
14	22-8490	Ring - Retaining	1

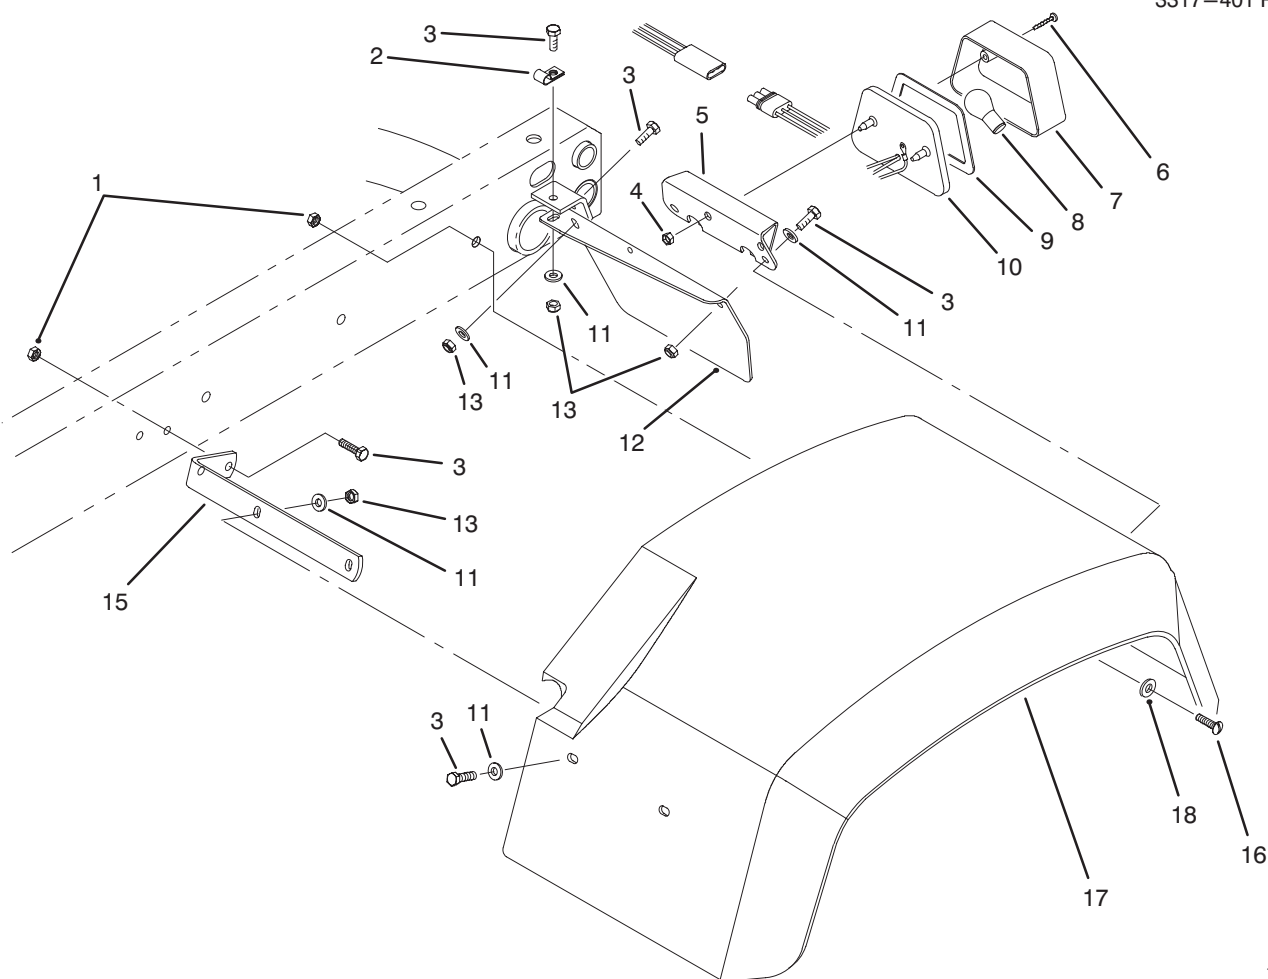 


T-1613

REAR FENDER & TAIL LIGHT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	6	10	87-2110	Tail Light Assembly (Incl. Ref. #6-9)	1
2	2412-89	Clamp - R	1	11	3256-22	Washer - Flat	16
3	321-6	Screw - Cap Hex. Hd.	16	12	87-5750	Plate - Tail Light LH	1
4	3290-506	Palnut	2	*	87-6250	Plate - Tail Light RH	1
5	87-5770	U-Bracket - Tail Light	1	13	3296-42	Nut - Lock	16
6	32144-93	Screw - Self Tapping	2	15	87-6870	Bracket - Front	2
7	87-6300	Lens	1	16	3274-94	Screw - Socket Button Hd.	6
8		Bulb (#1157 Std. 12 Volt)	1	17	87-6660	Fender - Rear 24"	2
9	87-6310	Gasket	1	18	3256-24	Washer - Flat	6

 *Not Illustrated

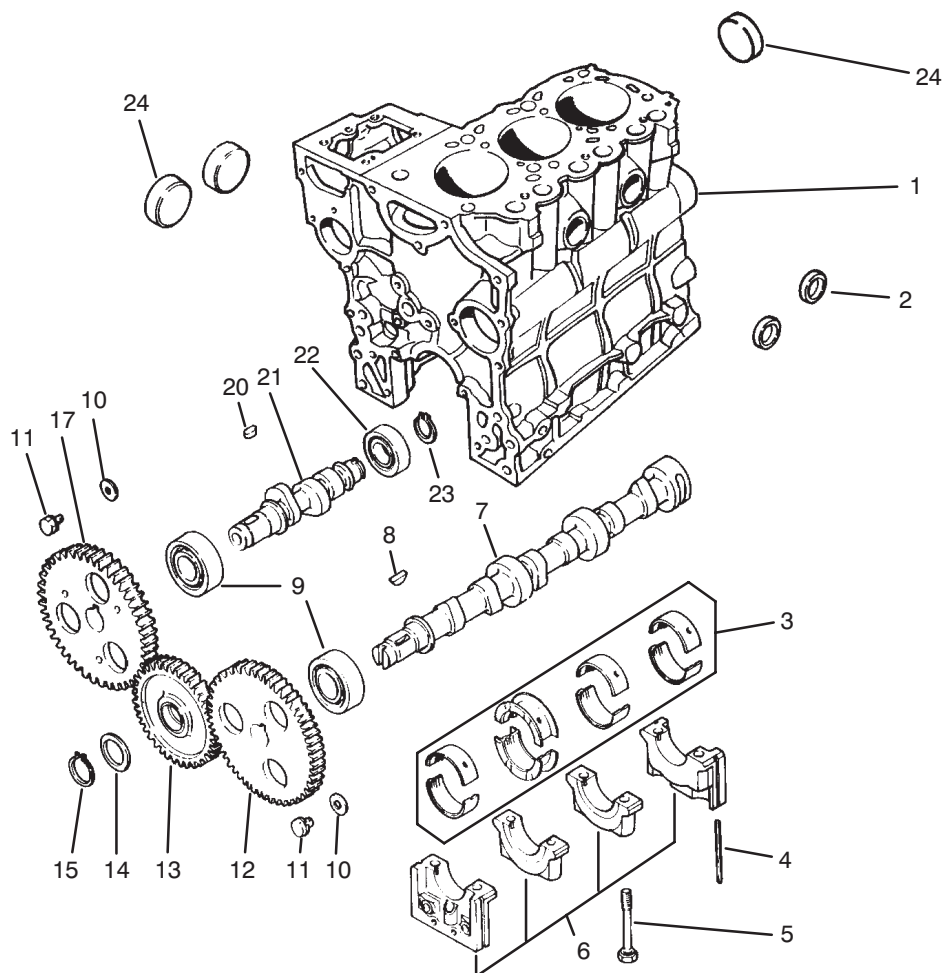


T-0564

CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-0828	Block Sub-Assembly (Incl. Ref. #2, 5, 6 & 24)	1
2	42-7080	Cap	2
3	75-4900	Bearing Set STD	1
	67-2410	Bearing Set 0.25	1
	67-2420	Bearing Set 0.50	1
4	67-2200	Seal	4
5	67-2250	Bolt	8
6		Cap Assembly	1
7	67-3010	Cam Shaft	1
8	56-0480	Key - Woodruff	1
9	67-3030	Bearing	2

Ref. No.	Part No.	Description	No. Used
10	67-3000	Washer	2
11	42-9490	Bolt w/Washer	2
12	92-0827	Gear	1
13	92-0842	Gear Assembly	1
14	92-0839	Plate	1
15	92-0841	Ring - Retaining	1
17	92-0840	Gear	1
20	42-7840	Key	1
21	67-3060	Shaft	1
22	67-3050	Bearing	1
23	67-3080	Ring - Retaining	1
24	56-0020	Plug	3

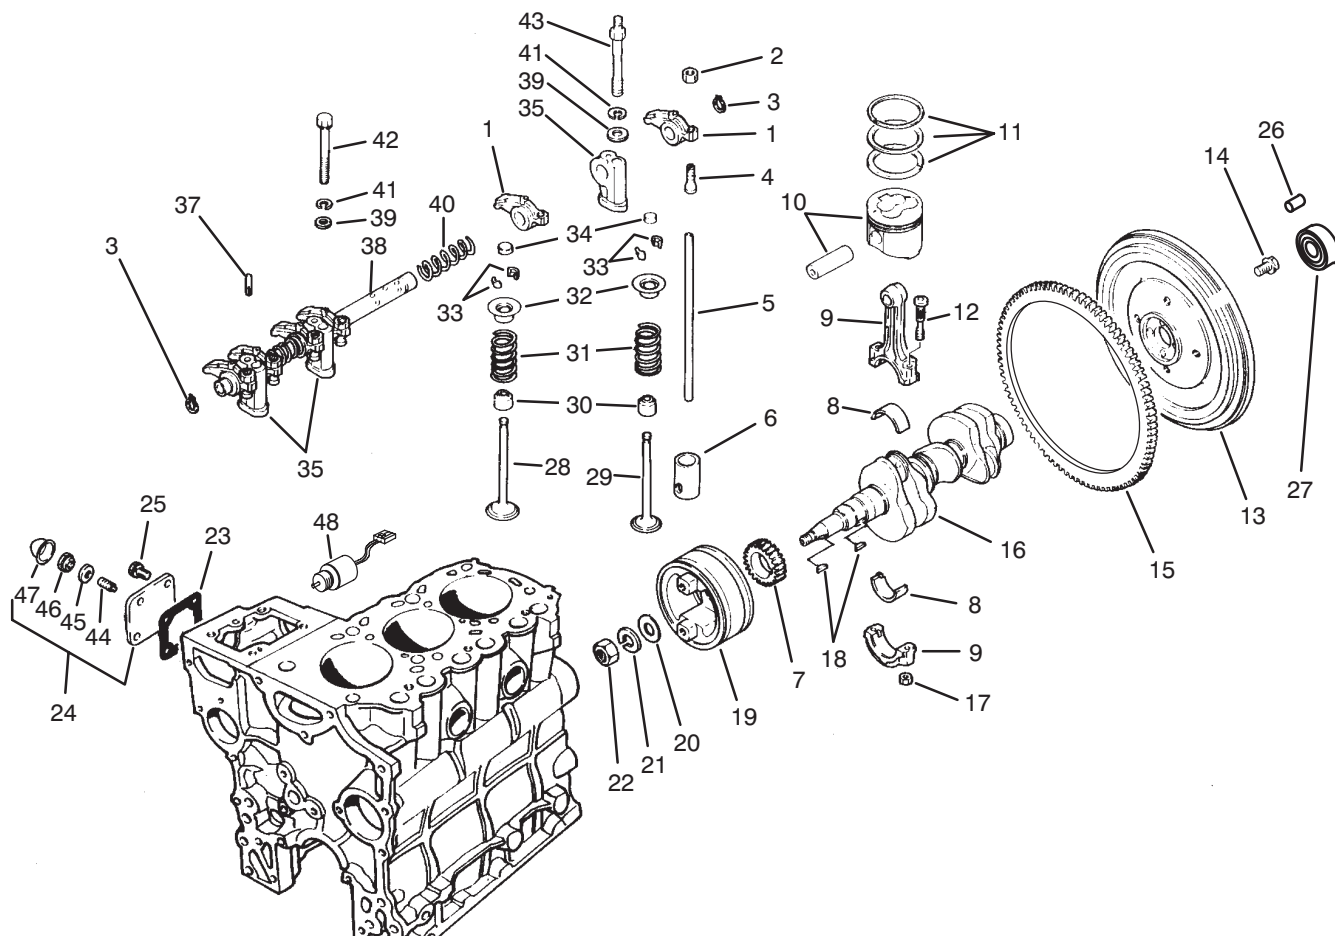 


T-0565

VALVES AND CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	67-3160	Arm - Rocker	6	21	67-2960	Washer - Lock	1
2	67-3230	Nut - Jam	6	22	67-2940	Nut - Jam	1
3	67-3240	Ring - Retaining	2	23	67-4310	Gasket	1
4	67-3210	Screw - Adjusting	6	24	67-4250	Cover Assembly (Incl. Ref. #44-47)	1
5	67-3150	Rod - Push	6	25	42-9440	Bolt W/Washer	4
6	67-3120	Tappet	6	26	51-5610	Pin - Dowel	3
7	92-0835	Gear	1	27	92-1914	Bearing - Ball	1
8	75-5010	Bearing Set STD	3	28	67-3130	Valve - Intake	3
*	67-2890	Bearing Set 0.25 US	3	29	67-3140	Valve - Exhaust	3
*	67-2900	Bearing Set 0.50 US	3	30	42-7870	Seal	6
9	67-2850	Connecting Rod Assembly (Incl. Ref. #12 & 17)	3	31	67-3110	Spring	6
10	92-0832	Piston & Pin Set STD	3	32	67-3100	Retainer	6
*	92-0833	Piston & Pin Set 0.25 OS	3	33	42-7860	Lock	12
*	92-0834	Piston & Pin Set 0.50 OS	3	34	67-3180	Cap	6
11	67-2790	Ring Set STD	3	35	67-3200	Stay - Rocker	3
*	67-2800	Ring Set 0.25 OS	3	37	67-3220	Pin	1
*	67-2810	Ring Set 0.5005	3	38	67-3190	Rocker Shaft Assembly	1
12	67-2860	Bolt	6	39	42-9660	Washer	4
13	92-0836	Flywheel Assembly (Incl. Ref. #15)	1	40	67-3170	Spring	2
14	67-2990	Bolt	4	41	67-3260	Washer	6
15	67-2980	Gear - Ring	1	42	42-9510	Bolt	1
16	92-0845	Crankshaft	1	43	67-3250	Bolt - Rockers Stay	2
17	42-9590	Nut	6	44	43-3160	Screw - Adjusting	1
18	56-0480	Key - Woodruff	2	45	75-5120	Gasket	1
19	70-8680	Pulley - Crankshaft	1	46	43-5960	Nut - Special	1
20	67-2950	Washer	1	47	43-2820	Cap - Sealing	1
				48	63-7440	Solenoid - Shutoff	1

 *Not Illustrated

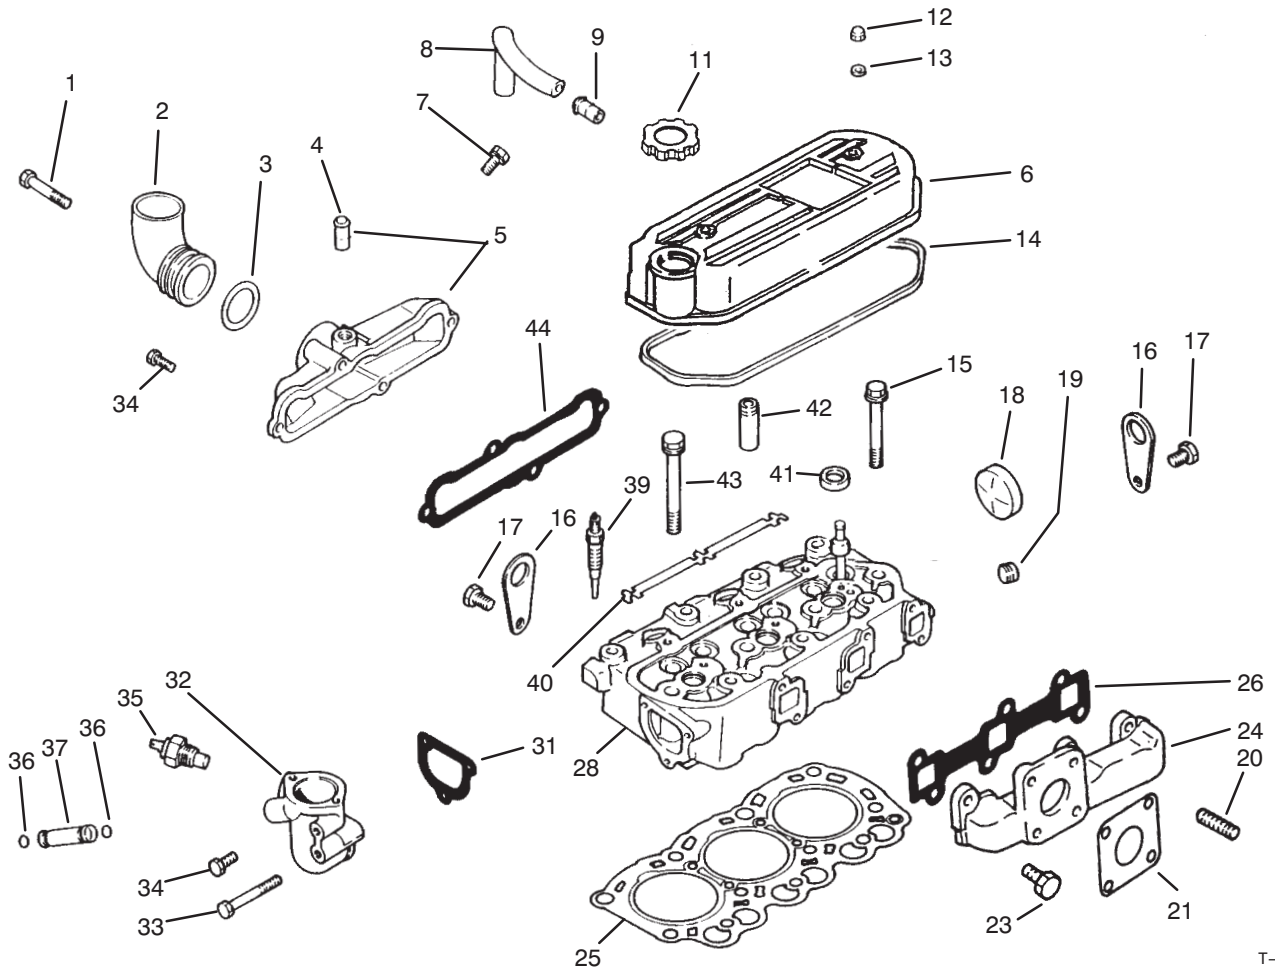


T-1666

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-4400	Bolt	2
2	67-4520	Pipe	1
3	67-4540	O-Ring	1
4	42-7510	Pipe	1
5	67-4530	Sub-Assy. Cover (Intake)	1
6	92-0846	Cover Assembly (Incl. Ref. #9)	1
7	42-9430	Bolt w/Washer	1
8	67-2670	Hose - Breather	1
9	42-7510	Pipe	1
11	92-0847	Assy. - Cap (Oil Filler)	1
12	67-2770	Nut - Cap	2
13	67-2780	Washer	2
14	67-2760	Gasket	1
15	67-2740	Bolt - Flange	3
16	67-2680	Hanger - Engine	2
17	67-2340	Bolt w/Washer	2
18	56-0020	Plug - Expansion	1
19	67-2570	Plug - Taper	1
20	42-9570	Stud	4

Ref. No.	Part No.	Description	No. Used
21	42-9110	Gasket	1
23	67-4590	Bolt	6
24	70-8750	Manifold - Exhaust	1
25	67-2720	Gasket - Cylinder Head	1
26	67-4570	Gasket - Exhaust Manifold	1
28	92-0826	Cylinder Head Assembly (Incl. Ref. #18, 41 & 42)	1
31	67-4460	Gasket (Thermostat Fitting)	1
32	92-0837	Fitting - Thermostat	1
33	67-4470	Bolt	1
34	67-2330	Bolt	4
35	67-4510	Gauge Nut - Water Temp.	1
36	43-2710	O-Ring	2
37	67-4480	Pipe - By-Pass	1
39	92-0844	Plug - Glow	3
40	67-4690	Plate - Glow Plug	1
41	67-2710	Cap - Sealing	3
42	67-2700	Guide - Valve	6
43	67-2730	Bolt	8
44	67-4550	Gasket - Intake Manifold	1

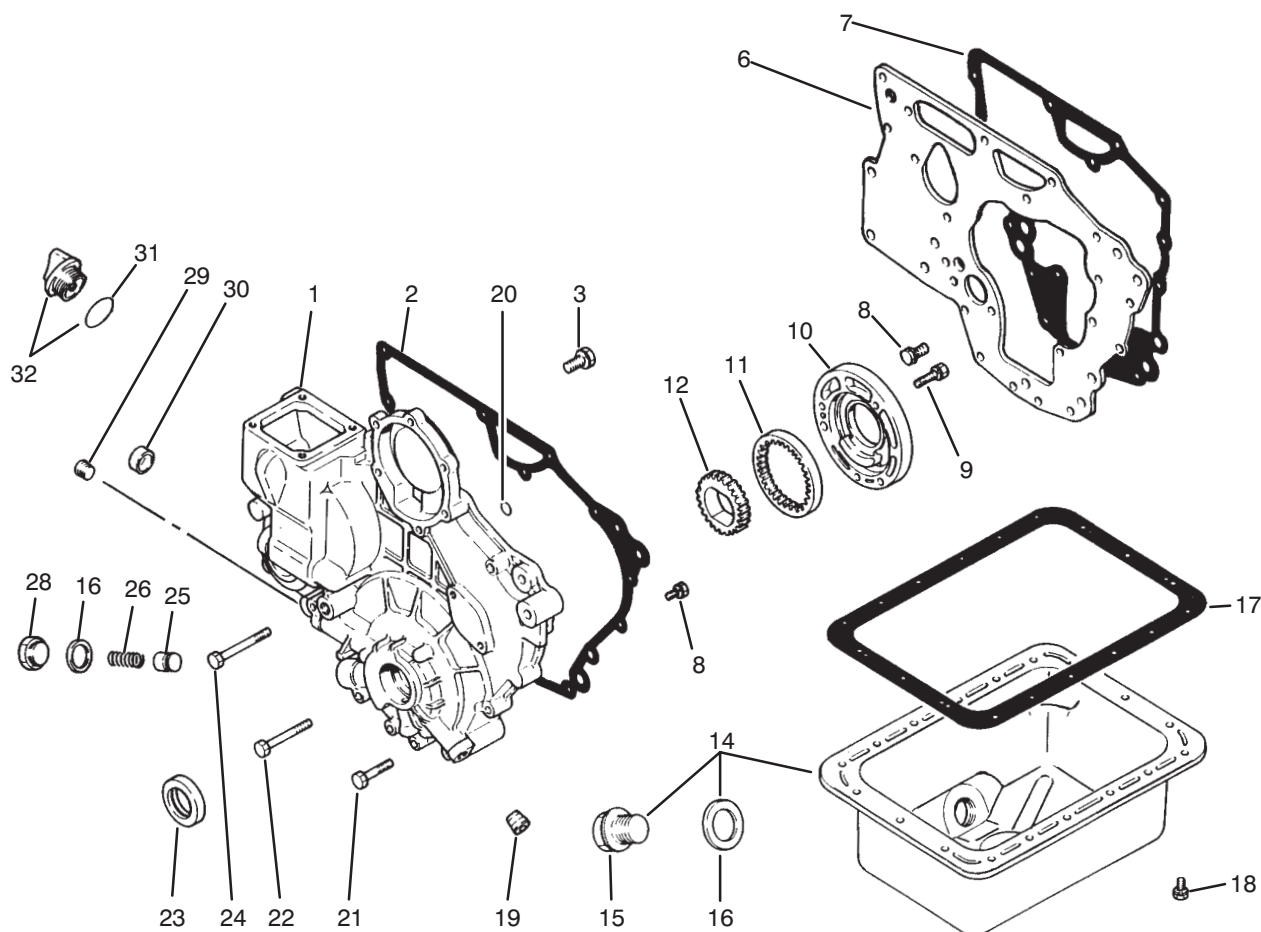 


T-0567

CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	75-4920	Case Sub-Assembly	1	19	42-7210	Plug	1
2	67-2580	Gasket - Case	1	20	67-2630	O-Ring	2
3	67-2340	Bolt w/Washer	3	21	67-2600	Bolt	3
6	67-2310	Plate	1	22	67-2610	Bolt	4
7	67-2320	Gasket - Plate	1	23	67-2590	Oil Seal	1
8	42-9440	Bolt w/Washer	11	24	67-2620	Bolt	1
9	67-2560	Bolt w/Washer	3	25	67-2500	Plunger	1
10	67-2550	Housing - Oil Pump	1	26	67-2510	Spring	1
11	67-2540	Gear - Outer	1	28	67-2520	Plug	1
12	67-2530	Gear - Inner	1	29	67-2570	Plug	1
14	75-4910	Oil Pan Assembly (Incl. Ref. #15-16)	1	30	67-2640	Cap	1
15	42-9260	Plug	1	31	67-2660	O-Ring	1
16	42-7290	Gasket - Oil Drain	2	32	67-2650	Oil Fill Cap Assembly (Inc. Ref. #31)	1
17	67-2480	Gasket - Oil Pan	1	*	75-5040	Gasket Kit	1
18	42-9490	Bolt w/Washer	18				

 *Not Illustrated

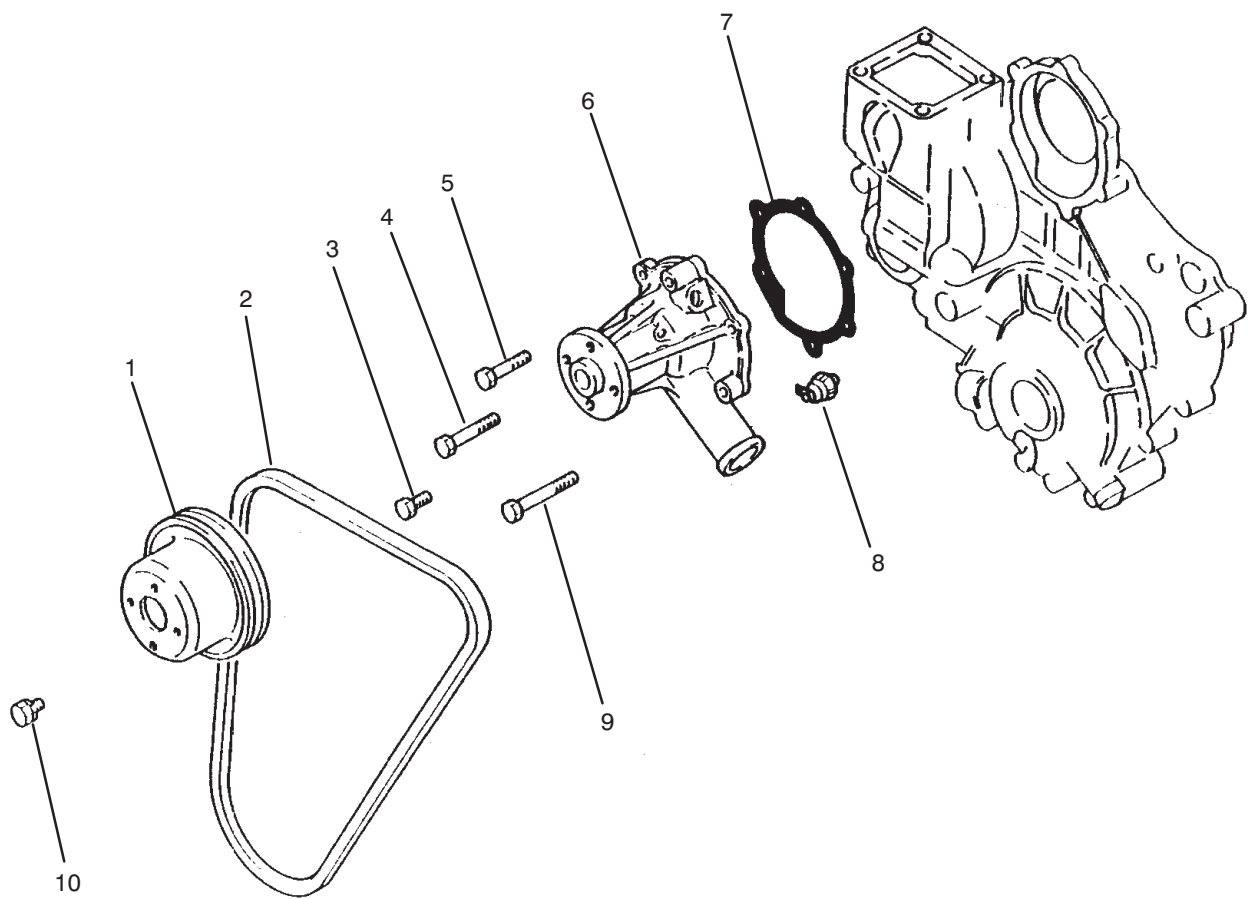


T-0568

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-4360	Pulley	1
2	67-4410	V-Belt	1
3	67-2330	Bolt	2
4	67-4400	Bolt	1
5	67-2600	Bolt	1


Ref. No.	Part No.	Description	No. Used
6	67-4380	Pump Assembly	1
7	67-4390	Gasket	1
8	67-4350	Oil Pressure Switch	1
9	67-2610	Bolt	2
10	42-9490	Bolt w/Washer	4

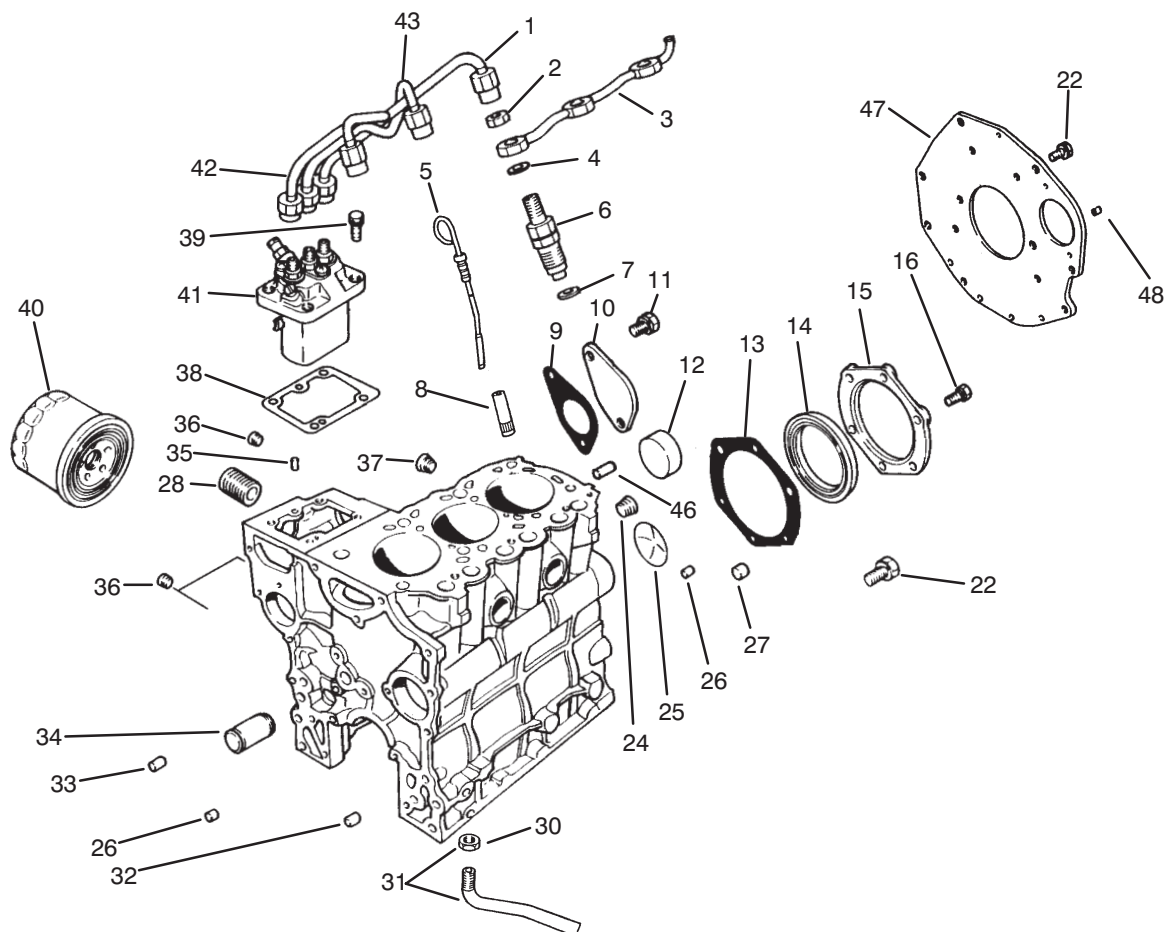 

T-1667

FUEL SUPPLY & ENGINE BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	67-3420	Assy. — Pipe No. 3	1	32	67-2370	Bushing	1
2	67-3430	Nut	3	33	42-7190	Bushing	2
3	67-3450	Pipe — Fuel Return	1	34	92-0829	Shaft — Idler	1
4	67-3440	Gasket	3	35	56-0220	Pin	2
5	67-2450	Dipstick	1	36	67-2210	Plug	3
6	67-3380	Nozzle & Holder Assembly	1	37	56-0100	Plug	1
7	67-3390	Gasket	3	38	67-3280	Shim 0.2	1
8	67-2220	Guide	1	*	67-3290	Shim 0.3	1
9	67-2300	Gasket	1	*	67-3300	Shim 0.5	1
10	67-2290	Cover	1	*	67-3310	Shim 0.4	1
11	67-2340	Bolt w/Washer	2	*	67-3320	Shim 0.6	1
12	56-0020	Plug	3	*	67-3330	Shim 0.7	1
13	67-2280	Gasket	1	*	67-3340	Shim 0.8	1
14	67-2230	Oil Seal	1	*	67-3350	Shim 0.9	1
15	67-2270	Case	1	*	67-3360	Shim 1.0	1
16	67-2330	Bolt	6	39	67-3370	Bolt w/Washer	4
22	67-2440	Bolt w/Washer	6	40	67-4330	Oil Filter Assembly	1
24	67-2390	Plug	1	41	67-3270	Pump Assembly	1
25	67-2350	Plug	1	42	67-3400	Pipe No. 1 Assembly	1
26	67-2360	Bushing	2	43	67-3410	Pipe No. 2 Assembly	1
27	67-2380	Bushing	3	46	42-7160	Pin — Dowel	1
28	56-1230	Shaft — Oil Filter	1	47	92-0830	Plate — Rear	1
30	42-9650	Nut — Jam	1	48	92-0831	Pin — Knock	1
31	67-4340	Screen Assembly (Incl. Ref. #30)	1				

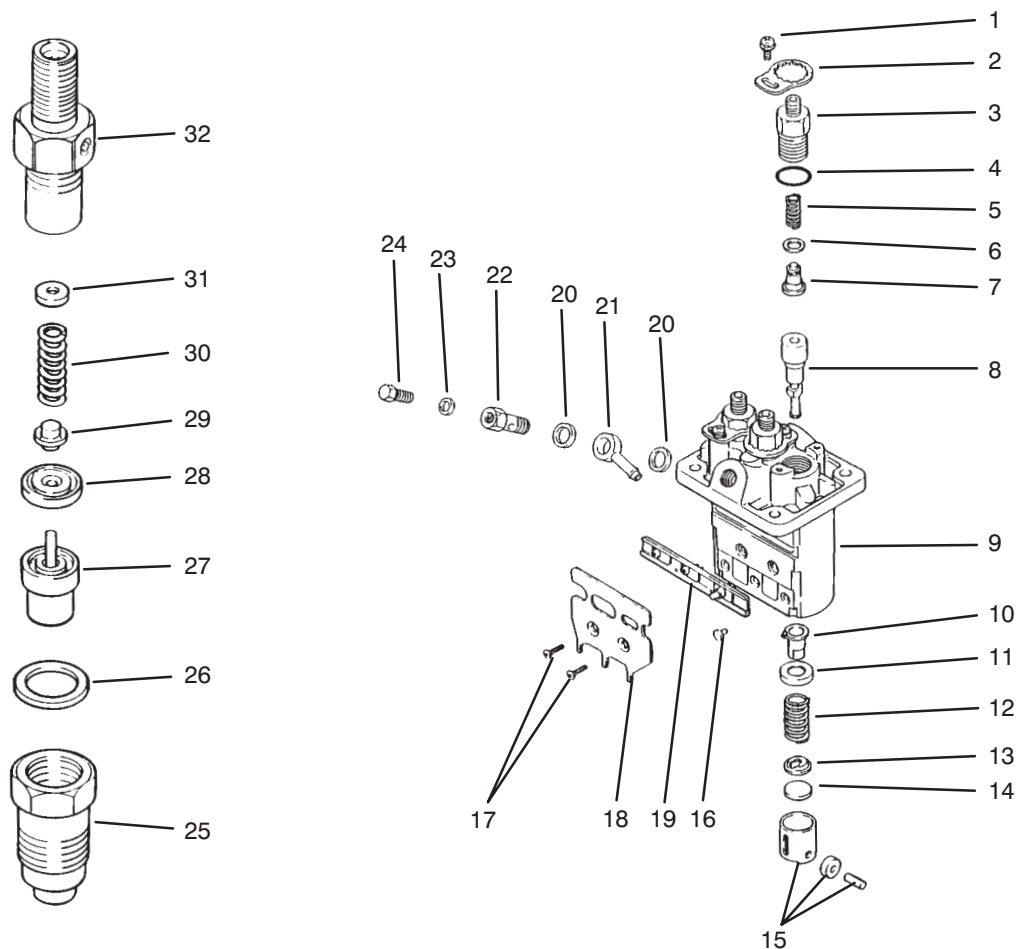 


T-0570

FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-3770	Screw w/Washer	3
2	67-3760	Plate - Lock	3
3	67-3470	Holder - Delivery Valve	3
4	67-3480	O-Ring	3
5	67-3490	Spring	3
6	42-8240	Gasket	3
7	67-3500	Sub-Assy. - Valve	3
8	67-3510	Sub-Assy. - Element	3
9	67-3460	Sub-Assy. - Housing	1
10	67-3520	Sub-Assy. - Sleeve	3
11	67-3530	Seat	3
12	67-3540	Spring	3
13	67-3550	Seat	3
14	67-3560	Plate - Shim 1.85	1
*	67-3570	Plate - Shim 1.9	1
*	67-3580	Plate - Shim 1.95	1
*	67-3590	Plate - Shim 2.0	1
*	67-3600	Plate - Shim 2.05	1
*	67-3610	Plate - Shim 2.1	1
*	67-3620	Plate - Shim 2.15	1
*	67-3630	Plate - Shim 2.2	1
*	67-3640	Plate - Shim 2.25	1

Ref. No.	Part No.	Description	No. Used
*14	67-3650	Plate - Shim 2.3	1
*	67-3660	Plate - Shim 2.35	1
*	67-3670	Plate - Shim 2.4	1
*	67-3680	Plate - Shim 2.45	1
*	67-3690	Plate - Shim 2.5	1
15	67-3700	Tappet Assembly	3
16	67-3810	Pin	3
17	67-3790	Screw	2
18	67-3800	Bracket	1
19	67-3780	Rack Assembly	1
20	67-3750	Washer	2
21	67-3740	Nipple	1
22	67-3730	Screw	1
23	67-3720	Washer	1
24	67-3710	Screw - Air Bleed	1
25	67-3970	Nut	3
26	67-3980	Gasket	3
27	67-3960	Nozzle Assembly	3
28	67-3950	Piece	3
29	67-3940	Pin	3
30	67-3930	Spring	3

 *Not Illustrated

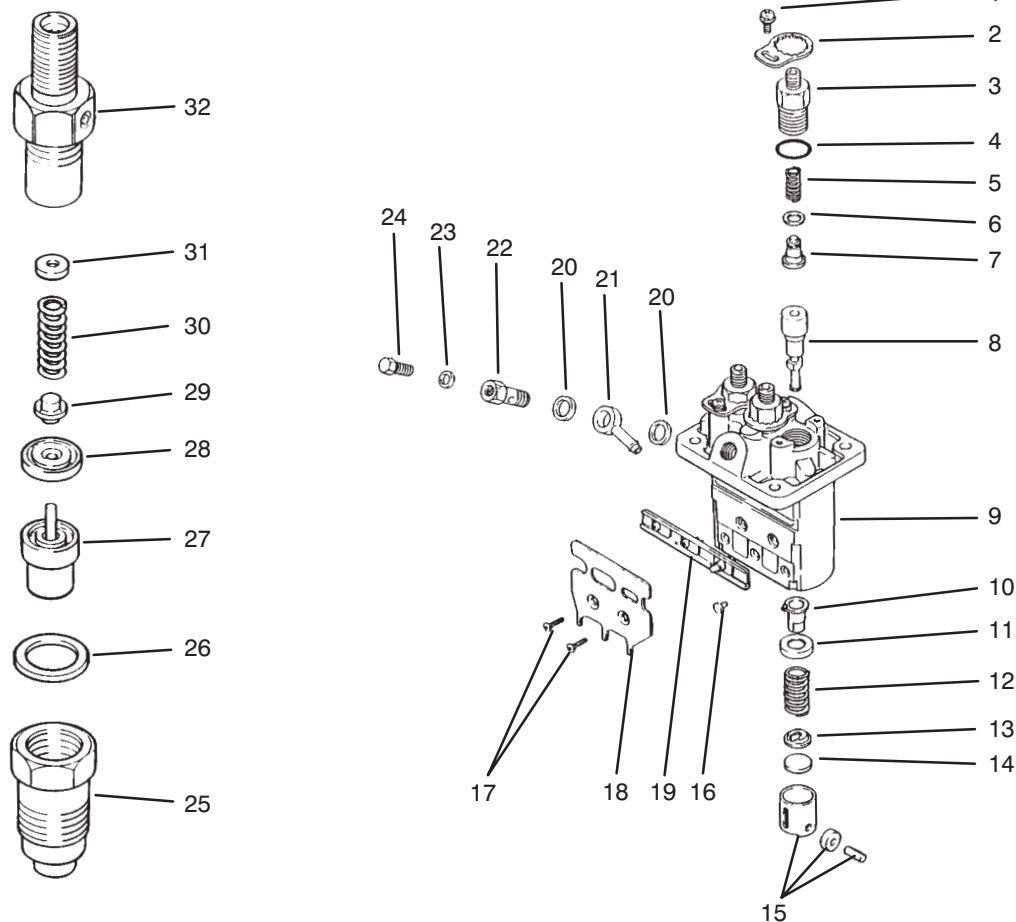


T-0570

FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
31	67-3830	Washer 1.25	1
*	67-3840	Washer 1.3	1
*	67-3850	Washer 1.35	1
*	67-3860	Washer 1.4	1
*	67-3870	Washer 1.45	1
*	67-3880	Washer 1.5	1
*	67-3890	Washer 1.55	1
*	67-3900	Washer 1.6	1
*	67-3910	Washer 1.65	1
*	67-3920	Washer 1.7	1

Ref. No.	Part No.	Description	No. Used
32	75-5000	Body Sub-Assy.	3
*	53-8150	Pump Assembly (Incl. Ref. #1-24)	1
*	67-3380	Nozzle & Holder Assembly (Incl. Ref. #25-32)	3

 *Not Illustrated

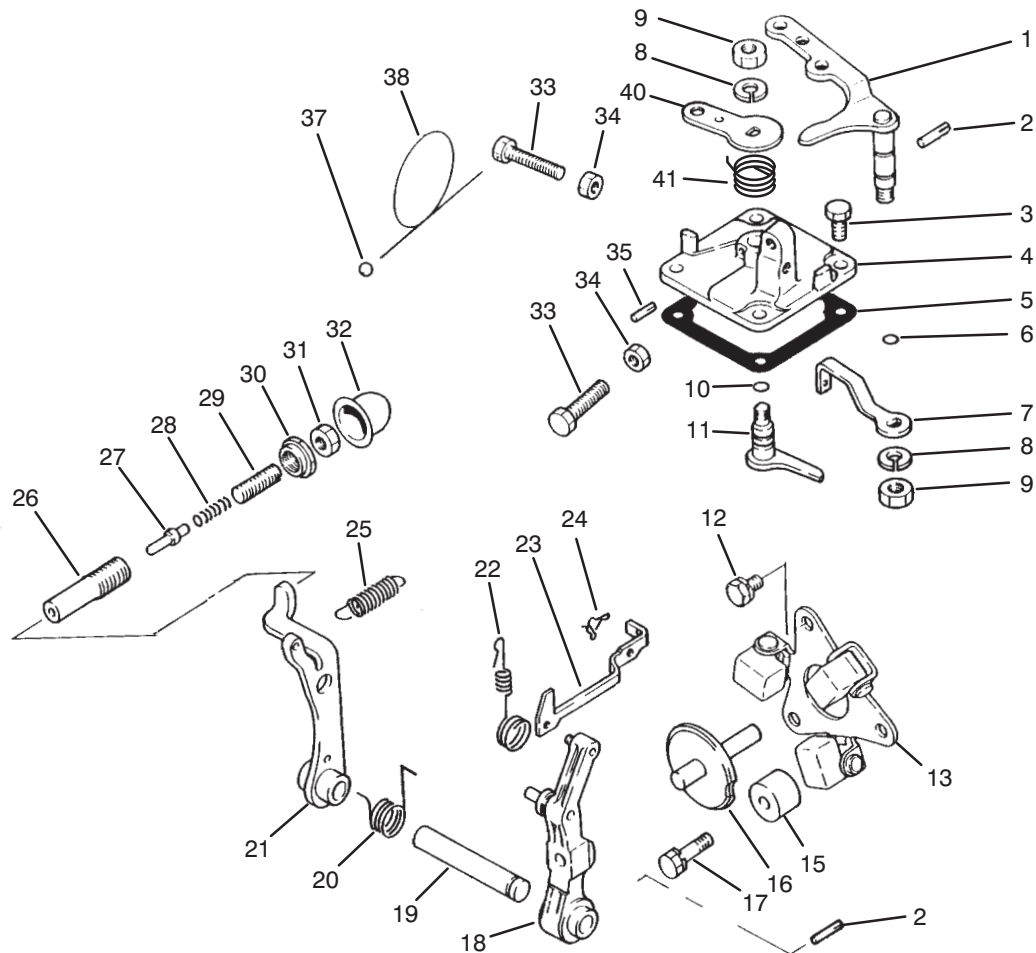


T-0571A

GOVERNOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-3990	Lever Assembly (Speed Control)	1
2	67-4000	Pin	2
3	67-4270	Bolt	4
4	67-4130	Cover - Governor	1
5	67-4160	Gasket	1
6	42-8830	O-Ring	1
7	75-4930	Lever - Governor Spring	1
8	67-3260	Washer	2
9	42-9640	Nut - Jam	2
10	42-8830	O-Ring	1
11	67-4140	Stop Lever Assembly	1
12	42-9430	Bolt w/Washer	2
13	67-4040	Weight Assembly	1
15	67-4010	Stopper	1
16	67-4070	Sliding Shaft Assembly	1
17	67-4280	Bolt w/Washer	1
18	67-4060	Governor Lever Assembly	1
19	67-4050	Shaft	1
20	67-5040	Spring	1
21	67-4090	Tension Lever Assembly	1
22	67-4300	Ring - Retaining	1

Ref. No.	Part No.	Description	No. Used
23	67-4030	Rod - Tie	1
24	67-4080	Clip	1
25	67-4260	Spring	1
26	67-4210	Case - Torque Spring	1
27	67-4230	Stopper	1
28	67-4190	Spring - Torque	1
29	67-4220	Screw - Adjusting	1
30	67-4200	Nut - Special	1
31	67-4180	Nut	1
32	67-4240	Cap	1
33	42-9420	Bolt	4
34	67-4290	Nut	4
35	67-4120	Pin	1
37	42-8690	Metal - Sealing	1
38	42-8700	Wire	1
40	67-4150	Lever - Stop	1
41		Spring - Return	1
*	67-4110	Cover Assembly (Incl. Ref. #4, 10, 11, 35 & 40-42)	1
*	92-0838	Spring Set (Incl. Ref. #26-31)	1

 
*Not Illustrated

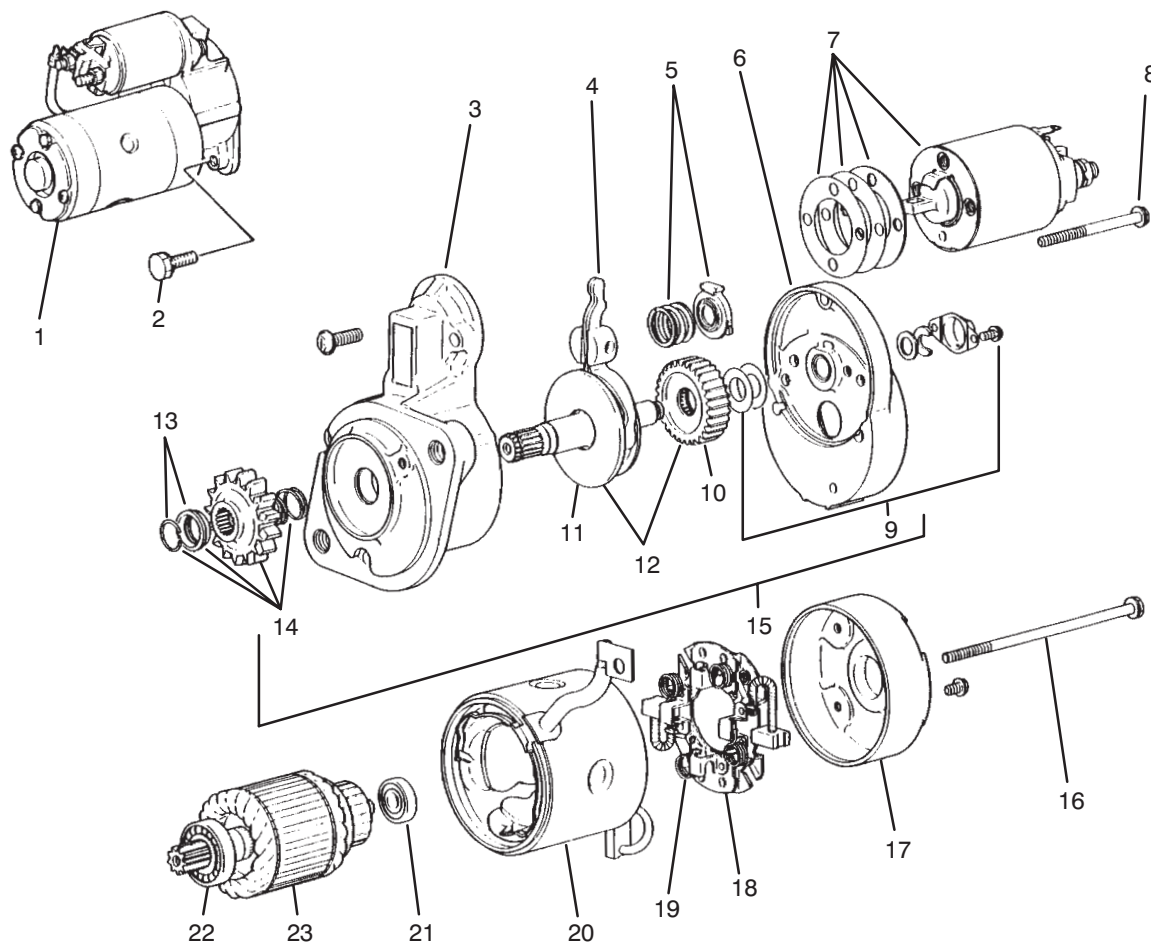

T-0572

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	67-4600	Starter Assembly (Incl. Ref. #3-23)	1	14	67-4770	Pinion Set (Incl. Ref. #13)	1
2	92-0843	Bolt w/Washer	2	15	67-4760	Shaft Assembly (Incl. Ref. #9 - 12 & 14)	1
3	67-4710	Front Bracket Assembly	1	16	56-1610	Bolt	1
4	67-4720	Lever Assembly	1	17	56-1720	Assy. - Bracket (Rear)	1
5	67-4730	Spring Set	1	18	56-1700	Brush Holder Assembly (Incl. Ref. #19)	1
6	67-4740	Center Bracket Assembly	1	19	56-1710	Spring - Brush	4
7	67-4750	Switch Assembly	1	20	67-4800	Yoke Assembly	1
8	52-1570	Bolt Set	1	21	56-1600	Bearing - Rear	1
9	56-1680	Cover Set	1	22	56-1590	Bearing - Front	1
10	56-1670	Gear	1	23	56-1580	Armature Set (Incl. Ref. #21 & 22)	1
11	67-4790	Shaft Assembly	1				
12	67-4780	Gear Set (Incl. Ref. #10 & 11)	1				
13	56-1640	Stopper Set	1				

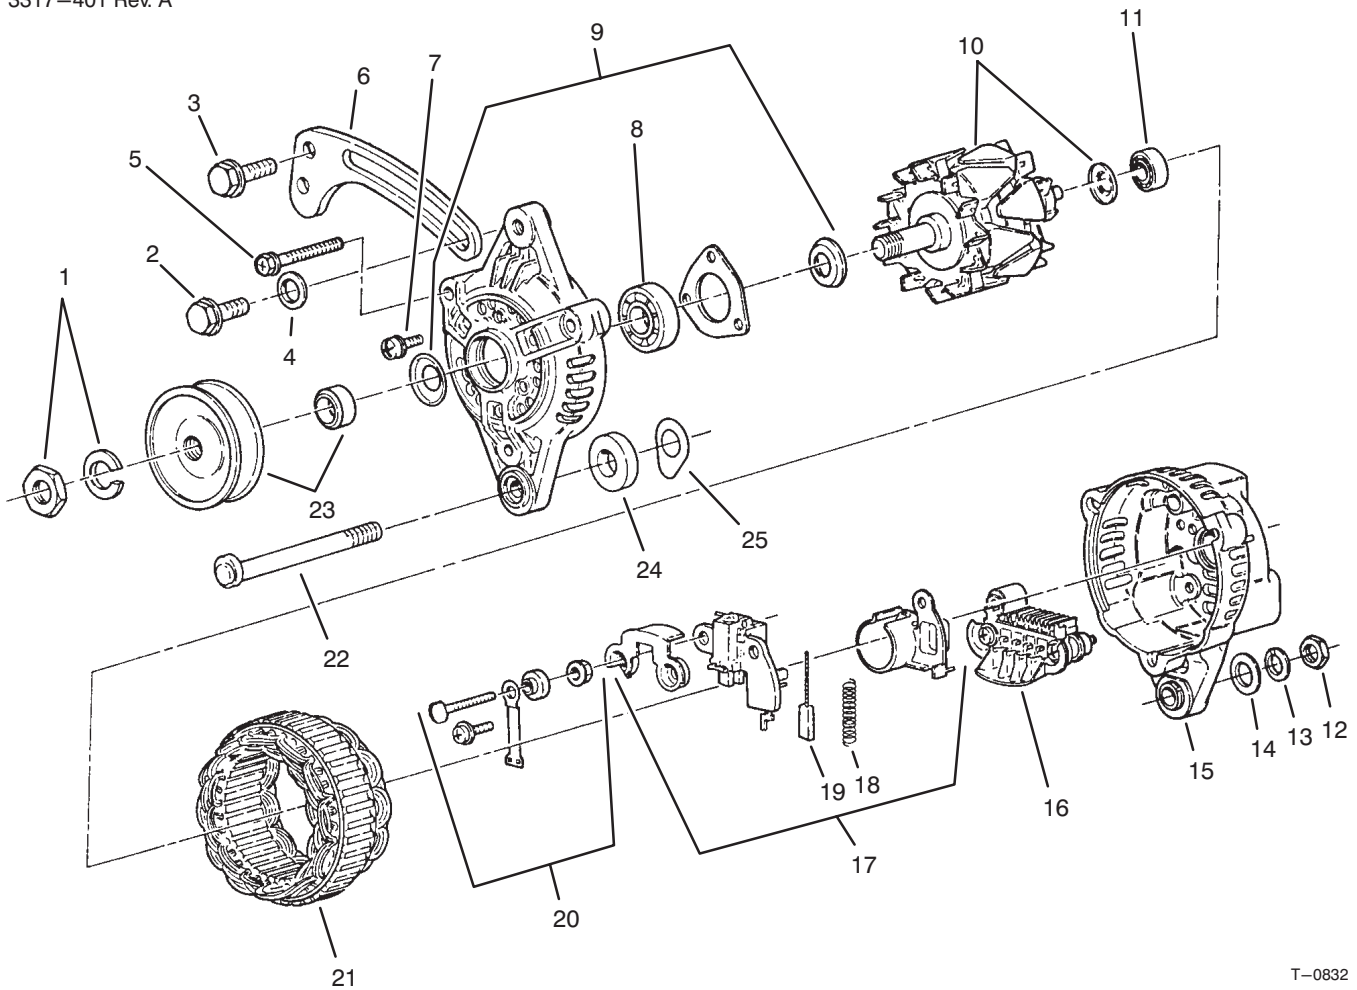 

T-0832

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	43-1920	Nut – Set	1
2	67-4660	Bolt – Flange	1
3	42-9440	Bolt w/Washer	1
4	54-8660	Washer – Flat	1
5	67-4820	Bolt Set	1
6	75-4940	Brace – Generator	1
7	67-4840	Screw – Set	1
8	67-4850	Bearing – Front	1
9	67-4830	Front Bracket Assembly (Incl. Ref. #7 & 8)	1
10	67-4860	Rotor Assembly (Incl. Ref. #11)	1
11	67-4870	Bearing – Rear	1
12	67-4670	Nut	1
13	67-3260	Washer – Lock	1
14	42-9660	Washer – Flat	1

Ref. No.	Part No.	Description	No. Used
15	67-4890	Rear Bracket Assembly (Incl. Ref. #16-20)	1
16	67-4930	Rectifier Assembly	1
17	67-4910	Regulator Assembly (Incl. Ref. #18 & 19)	1
18	43-0510	Spring – Brush	2
19	67-4920	Brush	2
20	67-4900	Terminal Set	1
21	67-4880	Stator Assembly	1
22	67-4640	Bolt	1
23	67-4810	Pulley Set	1
24	67-4620	Spacer	1
25	43-0370	Shim	5
*	67-4630	Alternator Assembly (Incl. Ref. #1-25)	1

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
111071	Bumper	14 4 2	42-8830	O-Ring	54 6 1
116749	Horn Assembly	1 21 1	42-8830	O-Ring	54 10 1
146489	Rivet - Pop	1 28 8	42-9110	Gasket	48 21 1
5-3637	Washer - Flat	39 7 1	42-9110	Gasket - Muffler	30 25 1
5-3637	Washer - Flat	30 16 1	42-9250	Screw - Cap Hex. Hd.	12 43 1
12-5450	Screw - Hex. Hd.	38 11 4	42-9260	Plug	49 15 1
18-1720	Joint - Ball	30 49 1	42-9420	Bolt	54 33 4
18-2830	Horn Switch Assembly	2 31 1	42-9430	Bolt w/Washer	48 7 1
18-4260	Assy. - Screw/Lockwasher	6 9 2	42-9430	Bolt w/Washer	54 12 2
18-4270	Clamp - Ball Return Guide	6 8 1	42-9440	Bolt & Washer	30 54 1
18-4340	Plug - Rack Piston End	6 6 1	42-9440	Bolt w/Washer	47 25 4
18-5160	Seal Kit - Pitman Shaft	7 * 1	42-9440	Bolt w/Washer	56 3 1
18-5170	Seal Kit - Valve Ring	7 * 1	42-9440	Bolt w/Washer	49 8 11
18-5180	Bearing Kit - Lower Thrust	7 * 1	42-9440	Screw - Cap Hex. Hd.	30 1 3
18-5190	Ball - Chrome Alloy	6 10 11	42-9490	Bolt w/Washer	50 10 4
19-4050	Knob	37 8 2	42-9490	Bolt w/Washer	46 11 2
19-4050	Knob	26 34 1	42-9490	Bolt w/Washer	49 18 18
20-7150	Toggle Switch Assembly	3 62 1	42-9510	Bolt	47 42 1
21-0360	Nut	9 6 1	42-9530	Screw - Cap Hex. Hd.	32 10 25
21-1830	Spring - Extension	8 30 1	42-9530	Screw - Cap Hex. Hd.	12 21 9
21-9260	Spacer	5 4 1	42-9570	Stud	48 20 4
22-8330	Plug	44 1 2	42-9570	Stud - Muffler	30 24 4
22-8340	Spring	44 3 2	42-9580	Nut - Lock	30 33 2
22-8350	Ball	44 4 2	42-9590	Nut	47 17 6
22-8360	Pin - Cam	44 6 2	42-9640	Nut - Jam	54 9 2
22-8370	Seat-Check Valve	44 5 2	42-9650	Nut - Jam	51 30 1
22-8380	Retainer - Spring	44 10 2	42-9660	Washer	47 39 4
22-8410	Spring	44 11 1	42-9660	Washer - Flat	56 14 1
22-8420	Spool	44 8 1	42-9850	Washer - Lock	12 20 12
22-8480	Ring - Retaining, Spool	44 13 1	42-9850	Washer - Lock	35 21 3
22-8490	Ring - Retaining	44 14 1	42-9850	Washer - Lock	30 26 4
22-8500	O-Ring	44 9 2	42-9850	Washer - Lock	32 32 42
23-3030	Spacer	44 12 1	43-0370	Shim	56 25 5
23-7270	Nut - Lug	20 4 10	43-0510	Spring - Brush	56 18 2
23-7270	Nut - Lug	23 18 10	43-1920	Nut - Set	56 1 1
24-7922	Conduit - Hose	42 36 1	43-1950	Valve	42 9 1
24-7923	Conduit - Hose	42 35 2	43-2550	Filter	38 26 1
26-0071	Bumper	1 9 2	43-2560	Gasket	38 25 1
27-2360	Ignition Switch Assembly	2 43 1	43-2570	Gasket	38 27 1
27-5360	Hose - Fuel	38 12 2	43-2580	Magnet	38 24 1
27-5360	Hose - Fuel	30 13 1	43-2710	O-Ring	48 36 2
27-6590	Spacer - Thick	28 7 4	43-2820	Cap - Sealing	47 47 1
27-6600	Spacer - Thin	28 3 4	43-3160	Screw - Adjusting	47 44 1
28-8200	O-Ring	6 27 1	43-5150	Piston	43 11 1
28-8210	Bolt - Flange Hex. Hd.	6 17 4	43-5920	Washer - Lock	30 17 1
28-8220	Nut - Lash Adjuster	6 16 1	43-5960	Nut - Special	47 46 1
28-8270	Seal Service Kit - End Plug	7 * 1	43-5970	Nut	38 35 2
28-8280	Seal Kit - Side Cover	6 14 1	43-6550	Ring - Retaining	5 10 2
28-8290	Seal Service Kit	7 * 1	44-2230	Disc - Rubber	28 4 2
33-1300	Assembly - Element	40 5 1	46-3710	Fitting - 90°	38 21 2
33-1310	Baffle	40 8 1	46-8091	Screw - Hex. Flange Hd.	26 10 2
33-1330	Assembly - Nut	40 6 1	48-7560	Screw - Cap Hex. Hd.	32 24 1
33-1340	Clamp Assembly	40 7 1	48-7650	Screw - Cap Hex. Hd.	38 1 2
33-1350	Band Assembly	40 3 2	48-7660	Screw - Cap Hex. Hd.	30 51 2
33-3090	Bushing - Flange	18 7 4	48-7700	Screw - Cap Hex. Hd.	35 9 3
36-4790	Washer - Thrust	30 39 3	48-7700	Screw - Cap Hex. Hd.	30 23 6
39-7310	O-Ring	6 35 3	48-7730	Screw - Cap Hex. Hd.	32 18 5
39-7310	Seal - O-Ring	41 29 2	48-7740	Screw - Cap Hex. Hd.	5 15 4
39-7420	Washer - Lock	5 22 1	48-7880	Nut - Lock	30 18 1
39-7420	Washer - Lock	6 42 1	48-7930	Nut	30 27 4
39-7440	Nut - Lock	5 23 1	48-7930	Nut - Hex.	32 2 1
39-7440	Nut - Pitman Arm	6 41 1	48-8000	Washer - Lock	38 34 2
42-3560	Screw - Shoulder	16 15 1	48-8010	Washer - Lock	30 52 2
42-7080	Cap	46 2 2	48-8070	Washer - Flat	5 6 1
42-7160	Pin - Dowel	51 46 1	48-9520	Nut - Lock	22 28 2
42-7190	Bushing	51 33 2	48-9520	Nut - Lock	31 50 3
42-7210	Plug	49 19 1	48-9590	Washer - Lock	30 29 10
42-7290	Gasket - Oil Drain	49 16 2	49-7810	Nut - Lock	38 36 2
42-7510	Pipe	48 4 1	49-9150	Washer - Flat	16 2 1
42-7510	Pipe	48 9 1	49-9150	Washer - Flat	15 36 1
42-7840	Key	46 20 1	51-5610	Pin - Alignment	30 20 3
42-7860	Lock	47 33 12	51-5610	Pin - Dowel	47 26 3
42-7870	Seal	47 30 6	52-1570	Bolt Set	55 8 1
42-8240	Gasket	52 6 3	52-2890	Bushing - Flange	8 24 2
42-8690	Metal - Sealing	54 37 1	53-8150	Fuel Pump Assembly	38 28 1
42-8700	Wire	54 38 1			

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
53-8150	Pump Assembly	53 * 1	67-2450	Dipstick	51 5 1
54-0110	Element - Oil Filter	31 38 1	67-2480	Gasket - Oil Pan	49 17 1
54-8660	Washer - Flat	56 4 1	67-2500	Plunger	49 25 1
55-7120	Switch - Brake Light	8 9 1	67-2510	Spring	49 26 1
56-0020	Plug	51 12 3	67-2520	Plug	49 28 1
56-0020	Plug	46 24 3	67-2530	Gear - Inner	49 12 1
56-0020	Plug - Expansion	48 18 1	67-2540	Gear - Outer	49 11 1
56-0100	Plug	51 37 1	67-2550	Housing - Oil Pump	49 10 1
56-0220	Pin	51 35 2	67-2560	Bolt w/Washer	49 9 3
56-0480	Key - Woodruff	46 8 1	67-2570	Plug	49 29 1
56-0480	Key - Woodruff	47 18 2	67-2570	Plug - Taper	48 19 1
56-1230	Shaft - Oil Filter	51 28 1	67-2580	Gasket - Case	49 2 1
56-1580	Armature Set	55 23 1	67-2590	Oil Seal	49 23 1
56-1590	Bearing - Front	55 22 1	67-2600	Bolt	50 5 1
56-1600	Bearing - Rear	55 21 1	67-2600	Bolt	49 21 3
56-1610	Bolt	55 16 1	67-2610	Bolt	50 9 2
56-1640	Stopper Set	55 13 1	67-2610	Bolt	49 22 4
56-1670	Gear	55 10 1	67-2620	Bolt	49 24 1
56-1680	Cover Set	55 9 1	67-2630	O-Ring	49 20 2
56-1700	Brush Holder Assembly	55 18 1	67-2640	Cap	49 30 1
56-1710	Spring - Brush	55 19 4	67-2650	Oil Fill Cap Assembly	49 32 1
56-1720	Assy. - Bracket (Rear)	55 17 1	67-2660	O-Ring	49 31 1
56-7973	Clamp - Hydraulic Tube	41 17 4	67-2670	Hose - Breather	48 8 1
57-6380	Screw - Cap Hex. Hd.	12 27 3	67-2680	Hanger - Engine	48 16 2
58-4250	Magnet	26 11 2	67-2700	Guide - Valve	48 42 6
60-6750	Screw - Cap Hex. Hd.	32 4 11	67-2710	Cap - Sealing	48 41 3
62-5550	Decal - TORO	1 2 1	67-2720	Gasket - Cylinder Head	48 25 1
62-7650	Gasket - Sending Unit	39 3 1	67-2730	Bolt	48 43 8
63-7440	Solenoid - Shutoff	47 48 1	67-2740	Bolt - Flange	48 15 3
63-7640	Unit - Sending	39 4 1	67-2760	Gasket	48 14 1
63-7790	Screw - Cap Hex. Hd.	30 28 13	67-2770	Nut - Cap	48 12 2
63-8140	Pulley	26 19 1	67-2780	Washer	48 13 2
63-8280	Head - Filter	38 16 1	67-2790	Ring Set STD	47 11 3
63-8290	Vent - Air	38 17 1	67-2800	Ring Set 0.25 OS	47 * 3
63-8300	Element - Filter	38 18 1	67-2810	Ring Set 0.5005	47 * 3
63-8310	Drain - Filter	38 19 1	67-2850	Connecting Rod Assembly	47 9 3
63-8360	Key - Ignition	2 10 1	67-2860	Bolt	47 12 6
63-9230	Battery	37 7 1	67-2890	Bearing Set 0.25 US	47 * 3
63-9640	Hose - Fuel	39 12 1	67-2900	Bearing Set 0.50 US	47 * 3
63-9640	Hose - Fuel Tank to Pump	38 23 1	67-2940	Nut - Jam	47 22 1
64-4430	Gasket - Thermostat	30 43 1	67-2950	Washer	47 20 1
65-5100	Handle	26 9 1	67-2960	Washer - Lock	47 21 1
65-5220	Screw - Hex. Socket Hd.	15 40 3	67-2980	Gear - Ring	47 15 1
65-5360	Spring - Extension	5 35 1	67-2990	Bolt	47 14 4
66-3160	Screw - Cap Hex. Hd.	12 6 4	67-3000	Washer	46 10 2
66-3160	Screw - Cap Hex. Hd.	31 24 7	67-3010	Cam Shaft	46 7 1
66-3160	Screw - Cap Hex. Hd.	12 39 4	67-3030	Bearing	46 9 2
66-3240	Cap - Radiator	26 12 1	67-3050	Bearing	46 22 1
66-8700	Glow Plug Indicator Assy.	38 32 1	67-3060	Shaft	46 21 1
66-8800	Relay	38 10 1	67-3080	Ring - Retaining	46 23 1
67-1450	Spring	30 48 1	67-3100	Retainer	47 32 6
67-2200	Seal	46 4 4	67-3110	Spring	47 31 6
67-2210	Plug	51 36 3	67-3120	Tappet	47 6 6
67-2220	Guide	51 8 1	67-3130	Valve - Intake	47 28 3
67-2230	Oil Seal	51 14 1	67-3140	Valve - Exhaust	47 29 3
67-2250	Bolt	46 5 8	67-3150	Rod - Push	47 5 6
67-2270	Case	51 15 1	67-3160	Arm - Rocker	47 1 6
67-2280	Gasket	51 13 1	67-3170	Spring	47 40 2
67-2290	Cover	51 10 1	67-3180	Cap	47 34 6
67-2300	Gasket	51 9 1	67-3190	Rocker Shaft Assembly	47 38 1
67-2310	Plate	49 6 1	67-3200	Stay - Rocker	47 35 3
67-2320	Gasket - Plate	49 7 1	67-3210	Screw - Adjusting	47 4 6
67-2330	Bolt	50 3 2	67-3220	Pin	47 37 1
67-2330	Bolt	51 16 6	67-3230	Nut - Jam	47 2 6
67-2330	Bolt	48 34 4	67-3240	Ring - Retaining	47 3 2
67-2340	Bolt w/Washer	49 3 3	67-3250	Bolt - Rockers Stay	47 43 2
67-2340	Bolt w/Washer	51 11 2	67-3260	Washer	54 8 2
67-2340	Bolt w/Washer	48 17 2	67-3260	Washer	47 41 6
67-2350	Plug	51 25 1	67-3260	Washer - Lock	56 13 1
67-2360	Bushing	51 26 2	67-3270	Pump Assembly	51 41 1
67-2370	Bushing	51 32 1	67-3280	Shim 0.2	51 38 1
67-2380	Bushing	51 27 3	67-3290	Shim 0.3	51 * 1
67-2390	Plug	51 24 1	67-3300	Shim 0.5	51 * 1
67-2410	Bearing Set 0.25	46 1	67-3310	Shim 0.4	51 * 1
67-2420	Bearing Set 0.50	46 1	67-3320	Shim 0.6	51 * 1
67-2440	Bolt w/Washer	51 22 6	67-3330	Shim 0.7	51 * 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
67-3340	Shim 0.8	51 * 1	67-4120	Pin	54 35 1
67-3350	Shim 0.9	51 * 1	67-4130	Cover - Governor	54 4 1
67-3360	Shim 1.0	51 * 1	67-4140	Stop Lever Assembly	54 11 1
67-3370	Bolt w/Washer	51 39 4	67-4150	Lever - Stop	54 40 1
67-3380	Nozzle & Holder Assembly	53 * 3	67-4160	Gasket	54 5 1
67-3380	Nozzle & Holder Assembly	51 6 1	67-4180	Nut	54 31 1
67-3390	Gasket	51 7 3	67-4190	Spring - Torque	54 28 1
67-3400	Pipe No. 1 Assembly	51 42 1	67-4200	Nut - Special	54 30 1
67-3410	Pipe No. 2 Assembly	51 43 1	67-4210	Case - Torque Spring	54 26 1
67-3420	Assy. - Pipe No. 3	51 1 1	67-4220	Screw - Adjusting	54 29 1
67-3430	Nut	51 2 3	67-4230	Stopper	54 27 1
67-3440	Gasket	51 4 3	67-4240	Cap	54 32 1
67-3450	Pipe - Fuel Return	51 3 1	67-4250	Cover Assembly	47 24 1
67-3460	Sub-Assy. - Housing	52 9 1	67-4260	Spring	54 25 1
67-3470	Holder - Delivery Valve	52 3 3	67-4270	Bolt	54 3 4
67-3480	O-Ring	52 4 3	67-4280	Bolt w/Washer	54 17 1
67-3490	Spring	52 5 3	67-4290	Nut	54 34 4
67-3500	Sub-Assy. - Valve	52 7 3	67-4300	Ring - Retaining	54 22 1
67-3510	Sub-Assy. - Element	52 8 3	67-4310	Gasket	47 23 1
67-3520	Sub-Assy. - Sleeve	52 10 3	67-4330	Oil Filter Assembly	51 40 1
67-3530	Seat	52 11 3	67-4340	Screen Assembly	51 31 1
67-3540	Spring	52 12 3	67-4350	Oil Pressure Switch	50 8 1
67-3550	Seat	52 13 3	67-4360	Pulley	50 1 1
67-3560	Plate - Shim 1.85	52 14 1	67-4380	Pump Assembly	50 6 1
67-3570	Plate - Shim 1.9	52 * 1	67-4390	Gasket	50 7 1
67-3580	Plate - Shim 1.95	52 * 1	67-4400	Bolt	48 1 2
67-3590	Plate - Shim 2.0	52 * 1	67-4400	Bolt	50 4 1
67-3600	Plate - Shim 2.05	52 * 1	67-4410	V-Belt	50 2 1
67-3610	Plate - Shim 2.1	52 * 1	67-4460	Gasket (Thermostat Fitting)	48 31 1
67-3620	Plate - Shim 2.15	52 * 1	67-4470	Bolt	48 33 1
67-3630	Plate - Shim 2.2	52 * 1	67-4480	Pipe - By-Pass	48 37 1
67-3640	Plate - Shim 2.25	52 * 1	67-4510	Gauge Nut - Water Temp.	48 35 1
67-3650	Plate - Shim 2.3	52 * 14 1	67-4520	Pipe	48 2 1
67-3660	Plate - Shim 2.35	52 * 1	67-4530	Sub-Assy. Cover (Intake)	48 5 1
67-3670	Plate - Shim 2.4	52 * 1	67-4540	O-Ring	48 3 1
67-3680	Plate - Shim 2.45	52 * 1	67-4550	Gasket - Intake Manifold	48 44 1
67-3690	Plate - Shim 2.5	52 * 1	67-4570	Gasket - Exhaust Manifold	48 26 1
67-3700	Tappet Assembly	52 15 3	67-4590	Bolt	48 23 6
67-3710	Screw - Air Bleed	52 24 1	67-4600	Starter Assembly	55 1 1
67-3720	Washer	52 23 1	67-4620	Spacer	56 24 1
67-3730	Screw	52 22 1	67-4630	Alternator Assembly	56 * 1
67-3740	Nipple	52 21 1	67-4640	Bolt	56 22 1
67-3750	Washer	52 20 2	67-4660	Bolt - Flange	56 2 1
67-3760	Plate - Lock	52 2 3	67-4670	Nut	56 12 1
67-3770	Screw w/Washer	52 1 3	67-4690	Plate - Glow Plug	48 40 1
67-3780	Rack Assembly	52 19 1	67-4710	Front Bracket Assembly	55 3 1
67-3790	Screw	52 17 2	67-4720	Lever Assembly	55 4 1
67-3800	Bracket	52 18 1	67-4730	Spring Set	55 5 1
67-3810	Pin	52 16 3	67-4740	Center Bracket Assembly	55 6 1
67-3830	Washer 1.25	53 31 1	67-4750	Switch Assembly	55 7 1
67-3840	Washer 1.3	53 * 1	67-4760	Shaft Assembly	55 15 1
67-3850	Washer 1.35	53 * 1	67-4770	Pinion Set	55 14 1
67-3860	Washer 1.4	53 * 1	67-4780	Gear Set	55 12 1
67-3870	Washer 1.45	53 * 1	67-4790	Shaft Assembly	55 11 1
67-3880	Washer 1.5	53 * 1	67-4800	Yoke Assembly	55 20 1
67-3890	Washer 1.55	53 * 1	67-4810	Pulley Set	56 23 1
67-3900	Washer 1.6	53 * 1	67-4820	Bolt Set	56 5 1
67-3910	Washer 1.65	53 * 1	67-4830	Front Bracket Assembly	56 9 1
67-3920	Washer 1.7	53 * 1	67-4840	Screw - Set	56 7 1
67-3930	Spring	52 30 3	67-4850	Bearing - Front	56 8 1
67-3940	Pin	52 29 3	67-4860	Rotor Assembly	56 10 1
67-3950	Piece	52 28 3	67-4870	Bearing - Rear	56 11 1
67-3960	Nozzle Assembly	52 27 3	67-4880	Stator Assembly	56 21 1
67-3970	Nut	52 25 3	67-4890	Rear Bracket Assembly	56 15 1
67-3980	Gasket	52 26 3	67-4900	Terminal Set	56 20 1
67-3990	Lever Assembly	54 1 1	67-4910	Regulator Assembly	56 17 1
67-4000	Pin	54 2 2	67-4920	Brush	56 19 2
67-4010	Stopper	54 15 1	67-4930	Rectifier Assembly	56 16 1
67-4030	Rod - Tie	54 23 1	67-5040	Spring	54 20 1
67-4040	Weight Assembly	54 13 1	67-5050	Thermostat	30 42 1
67-4050	Shaft	54 19 1	68-9950	Spring - Extension	31 44 1
67-4060	Governor Lever Assembly	54 18 1	70-1480	Relay - S.P.D.T.	38 9 1
67-4070	Sliding Shaft Assembly	54 16 1	70-8560	Retainer - Indicator	38 31 1
67-4080	Clip	54 24 1	70-8680	Pulley - Crankshaft	47 19 1
67-4090	Tension Lever Assembly	54 21 1	70-8750	Manifold - Exhaust	48 24 1
67-4110	Cover Assembly	54 * 1	71-3381	Tube - Overflow	26 1 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
71-3383	Hose - Overflow	26 4 1	87-2750	Spacer - Bearing	28 12 1
71-5320	Washer - Flat	16 18 1	87-2790	Tube - Brake LH	19 * 1
72-4310	Switch - Ball N.C.	31 46 1	87-2800	Tube - Brake RH	19 20 1
74-0720	Tube - Manual	14 1 1	87-2820	Bracket - Hose	20 15 2
75-4706	Hose	30 14 1	87-2870	Bracket - Brake Hose	19 4 2
75-4706	Hose - Fuel	39 11 1	87-2880	Shaft - Accelerator Pedal	8 45 1
75-4900	Bearing Set STD	46 3 1	87-2890	Cradle - Reservoir	8 14 1
75-4910	Oil Pan Assembly	49 14 1	87-2900	Spring - Compression	15 24 1
75-4920	Case Sub-Assembly	49 1 1	87-2910	Support - Pedal RH	8 3 1
75-4930	Lever - Governor Spring	54 7 1	87-3000	Rim - Rear 23	23 * 2
75-4940	Brace - Generator	56 6 1	87-3010	Brake Assembly - RH	20 10 1
75-5000	Body Sub-Assy.	53 32 3	87-3010	Front Brake Assembly - RH	21 * 1
75-5010	Bearing Set STD	47 8 3	87-3020	Brake Assembly - LH	20 * 1
75-5040	Gasket Kit	49 * 1	87-3020	Front Brake Assembly - LH	21 * 1
75-5120	Gasket	47 45 1	87-3030	Master Cylinder Assembly	8 35 1
75-6820	Hourmeter	2 16 1	87-3040	Brake Fluid Reservoir Assy.	8 11 1
75-9610	Spacer	41 7 1	87-3060	Washer - Flat	23 25 2
76-2290	Spacer	16 37 1	87-3070	Cable - Battery Pos.	30 34 1
76-4430	Fitting - Fuel 90°	39 9 1	87-3080	Cable - Battery Neg.	37 23 1
76-8750	Plate - Warning	26 16 1	87-3080	Cable - Battery Neg.	31 28 1
76-9100	Spacer	29 17 6	87-3100	Lower Shaft Assembly	5 * 1
76-9100	Spacer - Hi-Lo Lever	15 35 1	87-3110	Absorber - Shock	18 29 2
80-6990	Washer	23 39 4	87-3110	Shock Absorber	22 8 2
80-6990	Washer - Flat	31 49 3	87-3120	Steering Column & Shaft	5 * 1
84-1680	Ring - Retaining	43 7 1	87-3130	Lever - Tilt Steering	5 36 1
84-1880	Fan	26 29 1	87-3140	Support - Rear	39 15 1
87-0150	Tower - Control Arm RH	18 9 1	87-3150	Support - Front	39 27 1
87-0160	Tower - Control Arm LH	18 * 1	87-3160	Strap - Tank Support	39 29 2
87-0210	Arm - Control Lower RH	19 18 1	87-3170	Pad - Tank Support Strap	39 30 2
87-0220	Arm - Control Lower LH	19 * 1	87-3210	Belt - V	28 14 1
87-0270	Drum - Brake	20 7 2	87-3250	Mount - Bearing	5 26 3
87-0370	Arm - Pitman	5 21 1	87-3270	Tube - Brake RH	22 3 1
87-0650	Fuel Tank Assembly	39 2 1	87-3280	Tube - Brake LH	22 22 1
87-0660	Hose - Reservoir Rear	8 17 1	87-3290	Tire - Rear 23	23 * 2
87-0670	Hose - Reservoir Front	8 16 1	87-3300	Tire	20 5 2
87-0690	Spring - Compression	18 15 2	87-3310	Clip - Brake Cable	23 8 2
87-0710	Hood	1 1 1	87-3310	Clip - Brake Cable	20 25 2
87-0740	Key - Supervisor Switch	2 17 1	87-3370	Pulley	28 13 1
87-1430	Joint - Ball	19 16 4	87-3410	Housing - Thermostat	30 44 1
87-1450	Bushing - Rubber	19 1 8	87-3450	Plug	20 12 2
87-1470	Rod End Assy. - LH Thread	20 19 2	87-3460	Boot - Tilt Steering	5 2 1
87-1480	Rod End Assy. - RH Thread	20 24 2	87-3470	Bumper - Spring	22 14 2
87-1490	Spring - Leaf	22 15 2	87-3480	Plate - Brake Equalizer	16 22 1
87-1500	Steering Gear (Complete)	7 * 1	87-3520	Clevis	15 27 1
87-1500	Steering Gear Assembly	5 20 1	87-3530	Button - Shifter	15 29 1
87-1720	Nut - Supervisor Switch	2 18 1	87-3540	Link - Shift	15 20 2
87-1910	Pin - Alignment	12 13 2	87-3560	Tee - Brake Line	10 18 1
87-1920	Seal - Shaft	12 8 2	87-3560	Tee - Brake Tube	22 23 1
87-1970	Bearing Matched Set	23 20 2	87-3570	Fitting - Union	10 6 3
87-2040	Lever - Shift	15 16 1	87-3580	Retainer	22 4 2
87-2080	Stud - Drive	23 12 10	87-3580	Retainer	20 14 2
87-2090	Engine	30 55 1	87-3580	Retainer - Brake Hose	23 2 2
87-2100	Bearing - Release	12 26 1	87-3580	Retainer - Brake Hose	19 3 2
87-2110	Tail Light Assembly	45 10 1	87-3580	Retainer - Brake Hose	10 8 2
87-2120	Headlight Assembly	1 3 2	87-3590	Seal - Bearing	23 22 2
87-2240	Housing - Axle	23 7 2	87-3590	Seal - Bearing	20 26 2
87-2260	Boot - Shift Lower	15 28 1	87-3600	Spacer	18 3 10
87-2280	Bearing	5 25 3	87-3610	Bracket - Detent	5 34 1
87-2310	Clevis - Cable	31 36 2	87-3650	Pin - Shift	15 18 1
87-2310	Clevis - Cable	15 47 2	87-3660	Spring - Compression	15 30 1
87-2410	Rod - Tie	20 17 2	87-3680	Assembly - Relief Valve	41 * 1
87-2420	Boot	19 19 4	87-3710	Overflow Reservoir Assembly	26 3 1
87-2440	Bumper	1 7 2	87-3720	Retainer - Cylinder	42 17 2
87-2480	Link - Stabilizer	18 24 2	87-3750	Cover - Steering Wheel	5 9 1
87-2500	Sleeve - Spring Pivot	18 12 2	87-3760	Plate - Shift Boot	13 14 1
87-2510	Bracket - Seat Frame	14 11 2	87-3770	Bushing - Sleeve	12 9 2
87-2520	Tube - Pivot	15 21 1	87-3780	Box - Glove	2 3 1
87-2540	Pedal - Brake	8 4 1	87-3790	Switch - Light	2 19 1
87-2590	Shaft - Brake Pedal	8 46 1	87-3800	Bracket - Seat Bottom	13 3 3
87-2610	Pedal - Clutch	12 37 1	87-3820	Wheel - Steering	5 7 1
87-2640	Support - Master Cylinder	8 19 1	87-3850	Bar - Anti-Sway	18 17 1
87-2650	Gusset	8 21 1	87-3860	Link - Anti-Sway Bar	18 5 2
87-2660	Support - Pedal LH	8 18 1	87-3890	Bracket - Anti-Sway Bar	18 18 2
87-2670	Pedal - Accelerator	8 36 1	87-3910	Bushing - Anti-Sway Bar	18 19 2
87-2710	Lever - Parking Brake	16 29 1	87-3920	Bushing - Rubber	18 4 24
87-2720	Driveshaft	28 10 1	87-3920	Bushing - Rubber	22 7 8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
87-3940	Mount - Spring RH	22 * 1	87-5770	U-Bracket - Tail Light	45 5 1
87-3960	Mount - Spring LH	22 18 1	87-5800	Bracket - Mount	31 21 2
87-3980	Shackle - Spring	22 11 4	87-5870	Bracket - Cable	30 4 1
87-3990	Oil Strainer Assembly	31 26 1	87-6040	Bracket - Shifter	15 22 1
87-4010	Clamp - Anti-Sway Bar	18 20 2	87-6070	Decal - Workman 3300D	1 15 1
87-4030	Supervisor Switch Assembly	2 29 1	87-6170	Frame - Seat	14 14 1
87-4050	Hose - Air Cleaner	39 19 1	87-6240	Bracket - Seat Back	14 23 4
87-4050	Hose - Air Intake	30 11 1	87-6250	Plate - Tail Light RH	45 * 1
87-4060	Spacer - Bearing	23 21 2	87-6270	Socket & Bulb Assembly	3 60 5
87-4070	Bumper - Front	1 14 1	87-6280	Plate - Seat Back	14 18 2
87-4080	Tube - Brake LH	23 6 1	87-6290	Cushion - Seat Back	14 17 2
87-4090	Tube - Brake RH	23 1 1	87-6300	Lens	45 7 1
87-4100	Hose - Brake	23 3 2	87-6310	Gasket	45 9 1
87-4100	Hose - Brake	22 5 2	87-6320	Bulb - Headlight	1 5 2
87-4110	Puck - Engine Adapter	30 41 1	87-6330	Lens - Headlight	1 6 2
87-4120	Driveshaft	28 5 1	87-6370	Rear Tire & Wheel Assembly	24 * 2
87-4150	Hose - Radiator Lower	26 32 1	87-6410	Bracket - Harness	12 18 2
87-4150	Hose - Radiator Lower	30 35 1	87-6570	Foam - Seal	15 38 1
87-4230	Harness - Wire Front LH	2 41 1	87-6620	Screw	1 10 15
87-4260	Cable Assembly	15 15 2	87-6620	Screw - Torx Hd.	12 42 2
87-4260	Shift Cable Assembly	31 51 2	87-6640	Lever - Dump Stop	16 14 1
87-4340	Clamp - Cable	15 10 1	87-6660	Fender - Rear 24	45 17 2
87-4350	Lever - Hi-Lo	15 2 1	87-6710	Switch - Supervisor	31 33 1
87-4420	Hi-Lo Cable Assembly	15 6 1	87-6720	Knob	15 17 1
87-4420	Hi-Lo Cable Assembly	31 52 1	87-6740	Tire - Rear 24	23 16 2
87-4460	Differential Lock Cable	16 11 1	87-6750	Rim - Rear 24	23 19 2
87-4470	Bracket	31 23 1	87-6870	Bracket - Front	45 15 2
87-4490	Bracket - Hold-Down	41 22 1	87-6890	Hold - Hand	13 1 1
87-4500	Rod - Pivot	41 2 1	87-6900	Tube - Hydraulic	29 10 1
87-4510	Rod - Connecting	41 3 1	87-6910	Spring - Compression	31 13 1
87-4520	Bracket - Dump Valve	42 27 1	87-6950	Receiver - LH	17 6 1
87-4540	Hydraulic Tube Assembly	41 20 1	87-6960	Receiver - RH	17 7 1
87-4560	Tube - Hydraulic	41 14 1	87-7040	Bracket - Oil Filter	31 2 1
87-4560	Tube - Hydraulic	42 33 1	87-7050	Cap - Reservoir	26 43 1
87-4690	Cover - Clutch	30 21 1	87-7070	Skirt Assembly	13 2 1
87-4700	Disc - Clutch	30 19 1	87-7090	Assembly - Frame, R.O.P.S.	17 1 1
87-4710	Spacer - Barking Brake	16 13 1	87-7110	Assembly - Axle, Rear	23 5 1
87-4720	Plate - Steering Boot	5 3 1	87-7150	Assembly - Cradle, Spring	18 13 2
87-4730	Guard - Belly	29 19 2	87-7160	Assembly - Clevis, Cable	15 7 1
87-4760	Bushing	22 12 12	87-7160	Cable Clevis Assembly	31 29 1
87-4790	Arm - Accelerator Pedal	8 38 1	87-7170	Bracket - Clutch Spring	31 45 1
87-4820	Bracket - Cable	31 27 1	87-7270	Washer - Flat	23 23 6
87-4870	Hose - Hydraulic	42 4 1	87-7290	Fitting - Hydraulic	29 9 1
87-4880	Hose - Hydraulic LH	42 3 1	87-7320	Pulley	26 26 1
87-4900	Hose - Hydraulic RH	42 31 1	87-7330	Hose - Radiator Upper	26 7 1
87-4910	Hose - Hydraulic RH	42 13 1	87-7330	Hose - Radiator Upper	30 45 1
87-4920	Hose - Hydraulic	31 41 1	87-7350	Hose - Hydraulic	42 21 1
87-4960	Clamp - Cable	15 42 1	87-7350	Hose - Suction	29 6 1
87-4970	Engine Mount Assembly	29 13 2	87-7380	Bracket - Relay/Indicator	38 7 1
87-4970	Transaxle Mount Assembly	31 18 2	87-7440	Plate - Throttle	30 8 1
87-5030	Lever - Differential Lock	16 3 1	87-7470	Plate - Clamp	22 16 2
87-5060	Cushion - Seat Bottom	13 7 2	87-7480	Washer - Flat	22 31 8
87-5080	Spacer - Connecting	41 25 1	87-7480	Washer - Lock	5 37 3
87-5100	Washer	31 17 4	87-7570	Retainer - Reservoir	8 12 1
87-5100	Washer - Flat	29 12 4	87-7600	Rod - Battery Support	37 19 1
87-5110	Support - Lower	37 17 1	87-7610	Tab - Battery Support	37 21 1
87-5120	Bracket - Battery Base	37 13 1	87-7620	Shield - Plastic	37 12 1
87-5130	Cover - Battery Base	37 9 1	87-7660	Clamp - Brake Line	10 2 8
87-5140	Nut - Lock	41 8 1	87-7940	Stud	14 8 1
87-5150	Screw - Cap Hex. Hd.	41 4 1	87-7950	Bed Support Assembly	14 7 1
87-5280	Shaft - Release	12 4 1	87-7960	Lever - Shift Arm	31 48 2
87-5300	Fork - Clutch	12 23 1	87-7970	Arm - Shift	31 15 1
87-5320	Guide - Release	12 25 1	87-7990	Hydraulic Cylinder Assy.	42 16 2
87-5330	Washer	18 2 12	87-8080	Console Plate Assembly	13 21 1
87-5340	Seal Kit - Tie Rod End	20 * 4	87-8110	Lever Support Assembly	15 14 1
87-5350	Bracket - Switch	12 14 1	87-8120	Bracket - Trim Side	1 11 2
87-5360	Lever	12 17 1	87-8130	Bracket - Trim Top	1 19 1
87-5370	Rear Tire & Wheel Assembly	24 * 2	87-8160	Trim	1 20 1
87-5490	Switch - Neutral	12 15 1	87-8240	Cable - Parking Brake	16 24 2
87-5560	Hub - Wheel	20 8 2	87-8250	Plate - Shift Arm	31 10 1
87-5580	Fuel Gauge Assembly	2 15 1	87-8440	Assembly - Rear Frame	22 2 1
87-5590	Temperature Gauge Assy.	2 8 1	87-8460	Bumper	12 34 1
87-5700	Hydraulic Pump Assembly	26 22 1	87-8471	Bracket - Clutch	12 7 1
87-5720	Rim	20 6 2	87-8500	Front Wire Harness Assy.	2 47 1
87-5730	Hose - Hydraulic	31 4 1	87-8550	Control Panel Assembly	3 53 1
87-5750	Plate - Tail Light LH	45 12 1	87-8590	Cable - Clutch	3 67 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
87-8590	Clutch Cable Assembly	12 1 1	92-0726	Shaft - Axle R.H.	36 1 1
87-8610	Cable - Accelerator	30 6 1	92-0727	Washer	36 4 2
87-8610	Cable - Accelerator	8 40 1	92-0728	Washer	36 2 1
87-8620	Boot - Shift	13 13 1	92-0729	Seal - Oil	35 10 3
87-8640	Washer - Flat	15 26 1	92-0730	Slider - Differential Lock	36 7 1
87-8700	Screw - Cap Hex. Hd.	23 37 4	92-0731	Spring - Compression	35 2 3
87-8710	Tab - Clutch	12 40 1	92-0732	Plate - Keeper	35 8 3
87-8730	Stud - Drive	20 9 10	92-0733	Washer	36 20 1
87-8780	Head - Oil Filter	31 43 1	92-0740	Washer - Thrust	34 3 3
87-9070	Decal - Quick Ref. EN	13 23 1	92-0741	Washer - Thrust	33 10 1
87-9300	Door - Clean Out	26 35 1	92-0743	Breather - Air	32 27 1
87-9310	Hose - Air Cleaner	39 21 1	92-0744	Washer	36 14 1
87-9320	Mudflap	1 26 2	92-0745	Gear - Side L.H.	36 24 1
87-9330	Bracket - Mudflap LH	1 23 1	92-0746	Gear - Side R.H.	36 11 1
87-9340	Bracket - Mudflap RH	1 * 1	92-0747	Washer - Thrust	36 10 2
87-9350	Hydraulic Tube Assembly	41 16 1	92-0748	Gear - Pinion	36 12 2
87-9390	Cup	40 9 1	92-0749	Shaft - Pinion	36 23 1
87-9400	Valve	40 11 1	92-0750	Washer	36 13 2
87-9410	Air Cleaner (Complete)	40 * 1	92-0753	Ring - Retaining	34 2 1
87-9410	Air Cleaner Assembly	39 23 1	92-0753	Ring - Retaining	36 21 1
87-9430	Spindle - RH	20 13 1	92-0754	Ring - Retaining	34 20 1
87-9440	Spindle - LH	20 * 1	92-0755	Ring - Retaining	33 11 1
87-9480	Fender - Front	13 24 2	92-0756	Ring - Retaining	36 5 3
87-9490	Transaxle Assembly	31 22 1	92-0759	Ring - Retaining	32 22 1
87-9810	Foam - Overflow Tank	26 37 1	92-0760	Ring - Retaining	32 15 1
87-9940	Tachometer Assembly	2 6 1	92-0761	Ring - Retaining	35 18 1
92-0650	Bearing - Ball	34 22 1	92-0762	Washer - Lock	32 3 1
92-0651	Case - Transaxle	32 19 1	92-0763	Ring - Retaining	34 14 3
92-0652	Cover - Upper	32 7 1	92-0764	Ring - Retaining	33 3 3
92-0653	Cover - Side	32 9 1	92-0765	Pin - Alignment	32 8 4
92-0654	Carrier - Differential	32 17 1	92-0765	Pin - Alignment	36 9 2
92-0655	Cover - Seal	32 30 1	92-0768	Pin - Spring	36 15 2
92-0656	Cover - P.T.O.	32 1 1	92-0769	Pin - Spring	35 4 2
92-0657	Plate - Center	32 21 1	92-0770	Pin - Spring	36 26 1
92-0662	Cap - Oil	32 5 1	92-0771	Pin - Spring	36 16 1
92-0663	Shaft - Main	34 16 1	92-0772	Key	34 17 2
92-0664	Hub - Synchro	34 12 2	92-0773	Drain Plug Assembly	32 13 1
92-0665	Key - Synchro	34 23 6	92-0775	Bearing - Ball	36 6 2
92-0666	Spring - Synchro	34 13 4	92-0775	Bearing - Ball	32 33 2
92-0667	Ring - Synchro	34 6 3	92-0776	Bearing - Ball	36 29 1
92-0668	Shifter - Synchro	34 7 2	92-0778	Bearing - Ball	34 11 2
92-0672	Gear - 18T	34 19 1	92-0780	Bearing - Ball	36 3 1
92-0673	Gear - 14T	34 21 1	92-0781	Bearing - Needle	34 4 4
92-0674	Shaft - Reduction	34 28 1	92-0782	Bearing - Needle	34 33 1
92-0677	Gear - 49T	34 31 1	92-0783	Sleeve - Inner	33 5 1
92-0679	Gear - 23T	34 25 1	92-0785	Ball	35 1 3
92-0680	Collar	34 26 1	92-0787	O-Ring	32 12 1
92-0681	Bearing - Needle	34 30 2	92-0787	O-Ring	36 22 1
92-0682	Washer - Thrust	34 29 1	92-0788	O-Ring	32 6 1
92-0684	Gear - 33T	34 10 1	92-0789	O-Ring	32 14 1
92-0687	Gear - 16T	34 18 1	92-0790	O-Ring	32 29 1
92-0698	Shaft - Fork R-1	35 14 1	92-0791	Seal - Oil	32 26 1
92-0699	Shaft - Fork 2-3	35 7 1	92-0793	Seal - Oil	32 16 2
92-0700	Fork - Shift R-1	35 3 1	92-0793	Seal - Oil	36 32 2
92-0701	Fork - Shift 2-3	35 6 1	92-0796	Screw - Cap Hex. Hd.	32 31 5
92-0705	Lock - Spindle	35 20 1	92-0803	Screw - Hex. Flange Hd.	36 30 12
92-0706	Cap - Fork Shaft	32 25 1	92-0804	Stud	32 28 1
92-0708	Shaft - Fork Hi-Lo	35 16 1	92-0807	Cap - Sealing	32 23 1
92-0709	Fork - Shift Hi-Lo	35 17 1	92-0808	Shim Set	32 20 1
92-0710	Counter Shaft Assembly	33 14 1	92-0809	Shim Set	32 11 1
92-0710	Ring Gear Assembly	36 8 1	92-0816	Arm - Shift Fork R-1	35 15 1
92-0711	Washer - Thrust	33 4 2	92-0817	Arm - Shift Fork 2-3	35 5 1
92-0712	Bearing - Ball	33 1 1	92-0818	Arm - Shift Fork Hi-Lo	35 19 1
92-0713	Collar	33 12 1	92-0819	Gear - 40T	34 32 1
92-0714	Bearing - Ball	33 13 2	92-0821	Gear - 24T	34 15 1
92-0715	Gear - 49T	33 6 1	92-0823	Gear - 43T	34 27 1
92-0716	Collar	33 2 1	92-0824	Shaft - Reverse Idler	34 9 1
92-0717	Gear - 71T	33 9 1	92-0826	Cylinder Head Assembly	48 28 1
92-0718	Shifter - Hi-Lo	33 7 1	92-0827	Gear	46 12 1
92-0719	Collar - Spline	33 8 1	92-0828	Block Sub-Assembly	46 1 1
92-0720	Case - Differential	36 31 1	92-0829	Shaft - Idler	51 34 1
92-0721	Fork - Differential Lock	36 17 1	92-0830	Plate - Rear	51 47 1
92-0722	Shaft - Lock Fork	36 18 1	92-0831	Pin - Knock	51 48 1
92-0723	Spring - Compression	36 19 1	92-0832	Piston & Pin Set STD	47 10 3
92-0724	Arm - Differential Lock	36 27 1	92-0833	Piston & Pin Set 0.25 OS	47 * 3
92-0725	Shaft - Axle L.H.	36 28 1	92-0834	Piston & Pin Set 0.50 OS	47 * 3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-0835	Gear	47 7 1	92-4124	Assembly - Pawl RH	25 * 1
92-0836	Flywheel Assembly	47 13 1	92-4125	Plug	21 3 1
92-0837	Fitting - Thermostat	48 32 1	92-4126	Spring - Shoe, Upper LH	21 14 1
92-0838	Spring Set	54 * 1	92-4127	Spring - Shoe, Upper RH	21 * 1
92-0839	Plate	46 14 1	92-4128	Spring - Shoe, Lower	21 15 1
92-0840	Gear	46 17 1	92-4129	Spring - Adjuster, LH	21 20 1
92-0841	Ring - Retaining	46 15 1	92-4130	Spring - Adjuster, RH	21 * 1
92-0842	Gear Assembly	46 13 1	92-4131	Washer - Hold Down	21 22 2
92-0843	Bolt w/Washer	55 2 2	92-4131	Washer - Hold Down	25 22 2
92-0844	Plug - Glow	48 39 3	92-4132	Spring - Hold Down	21 23 2
92-0845	Crankshaft	47 16 1	92-4133	Pin - Hold Down	21 26 2
92-0846	Cover Assembly	48 6 1	92-4133	Pin - Hold Down	25 26 2
92-0847	Assy. - Cap (Oil Filler)	48 11 1	92-4134	Plug - Inspection	21 25 1
92-1914	Bearing - Ball	47 27 1	92-4134	Plug - Inspection	25 25 1
92-2160	Cartridge - Relief Valve	41 12 1	92-4135	Set Bolt	21 1 2
92-2161	Body - Relief Valve	41 28 1	92-4135	Set Bolt	25 1 2
92-2162	Head	43 6 1	92-4136	Backplate Assembly LH	25 2 1
92-2163	Shaft	43 2 1	92-4137	Screw - Bleed	25 4 1
92-2165	Kit - Repair	43 * 1	92-4140	Assy. - Wheel Cylinder LH	25 * 1
92-2173	Screw - Cap Socket Head	27 18 8	92-4141	Assy. - Wheel Cylinder RH	25 * 1
92-2174	Screw - Adjusting	27 22 1	92-4142	Seal Kit	25 * 1
92-2175	Gear	27 11 2	92-4143	Shoe & Lining Set	25 13 1
92-2176	Pin - Dowel	27 16 2	92-4144	Assembly - Adjuster LH	25 * 1
92-2177	Pin - Shear	27 7 1	92-4145	Assembly - Adjuster RH	25 * 1
92-2178	Ring - Crescent	27 4 4	92-4146	Plug	25 3 1
92-2179	Key - Square	27 5 1	92-4147	Spring - Shoe, Upper LH	25 14 1
92-2180	Gasket - Copper	27 23 1	92-4148	Spring - Shoe, Upper RH	25 * 1
92-2181	Plate - Pressure	27 13 1	92-4149	Spring - Shoe, Lower	25 15 1
92-2182	Plate - Seal	27 9 1	92-4150	Spring - Adjuster, LH	25 20 1
92-2183	Plate - Wear	27 10 1	92-4151	Spring - Adjuster, RH	25 * 1
92-2184	Cap - Relief Valve	27 24 1	92-4152	Spring - Hold Down	25 23 2
92-2185	Plug	27 19 1	92-4153	Assembly - Steering Column	5 11 1
92-2186	Spacer	27 3 1	92-4154	Universal Joint Assembly	5 31 1
92-2187	Housing - Gear, End	27 17 1	92-4155	Slip Joint Assembly - Upper	5 28 1
92-2188	Stator	27 8 1	92-4156	Slip Joint Assembly - Lower	5 29 1
92-2189	Shaft - Drive	27 6 1	92-4157	Boot - Steering Shaft	5 24 1
92-2190	Shaft - Idler	27 25 1	92-4158	Valve Assy. - Hyd. Gear	7 * 1
92-2191	Bearing	27 27 1	92-4159	Nut - Adjuster Plug Lock	6 25 1
92-2192	Bearing	27 12 4	92-4160	Bearing Service Kit - Upper	7 * 1
92-2193	Ball	27 20 1	92-4161	Assembly - Cover Service	6 * 1
92-2194	Spring	27 21 1	92-4162	Pitman Shaft - Gear Service	7 * 1
92-2195	Seal - Oil	27 2 1	92-4163	Assy. - Steering Housing	7 * 1
92-2196	Seal - Pressure Plate	27 15 1	92-4164	Plug Assy. - Service Adjust.	7 * 1
92-2197	Seal - Back Up	27 14 1	92-4165	Plug - Housing End	6 2 1
92-2198	Seal	27 26 1	92-4166	Rack/Piston/Nut Assembly	7 * 1
92-2199	Key - Ball	27 28 1	92-4167	Assembly - Plug Service	7 * 1
92-2379	Clamp - Hose	26 2 3	92-4168	Return - Guide Ball	6 7 2
92-2379	Clamp - Hose	38 22 1	92-4169	Bearing - Needle	6 21 1
92-2379	Clamp - Hose	39 32 1	92-4170	Bearing - Pitman Shaft	6 47 1
92-2697	Hose - Hydraulic LH	42 1 1	92-4177	Yoke - Double Clamp	23 34 2
92-4100	Backplate Assembly RH	25 * 1	92-4179	Yoke, Shaft & Seal Tube	23 33 2
92-4101	Primary Piston Assembly	9 11 1	92-4180	Seal	23 32 2
92-4102	Secondary Piston Assembly	9 4 1	92-4182	Yoke & Hub	23 31 2
92-4103	Pin - Stop	9 3 1	92-4187	Cross & Bearing Kit	23 30 4
92-4104	Adaptor - Pipe Fitting	9 1 2	92-4188	Ring - Snap	23 28 12
92-4106	Rod - Push	9 8 1	92-4189	Strap & Bolt Kit	23 36 4
92-4107	Dust Cover	9 7 1	92-4190	Yoke - End	23 29 2
92-4108	Washer - Retainer	9 10 1	92-4197	Operators Platform Assy.	1 17 1
92-4109	Circlip	9 9 1	92-4198	Fan Shroud Assembly	26 17 1
92-4110	Clevis	9 5 1	92-5181	Gear - 22T	34 5 1
92-4111	Petcock - Radiator	26 38 1	92-5182	Gear - 31T	34 24 1
92-4112	Assembly - Cap	8 5 1	92-5497	Decal - Quick Ref. DU	13 * 1
92-4113	Screw - Bleed	21 4 1	92-5498	Decal - Quick Ref. FR	13 * 1
92-4114	Cap - Bleed Screw	21 5 1	92-5499	Decal - Quick Ref. GR	13 * 1
92-4114	Cap - Bleed Screw	25 5 1	92-5951	Angle - Hitch	23 41 1
92-4115	Backplate Assembly LH	21 2 1	92-5964	Cover - Engine	30 57 1
92-4116	Backplate Assembly RH	21 * 1	92-5972	Grommet	14 5 4
92-4117	Assy. - Wheel Cylinder LH	21 * 1	92-6400	Decal - Quick Ref. IT	13 * 1
92-4118	Assy. - Wheel Cylinder RH	21 * 1	92-6402	Decal - Quick Ref. SP	13 * 1
92-4119	Kit - Seal	21 * 1	92-6403	Decal - Quick Ref. SW	13 * 1
92-4120	Shoe & Lining Set	21 13 1	93-0307	Nut - Retainer	20 35 2
92-4121	Assembly - Adjuster LH	21 * 1	93-0309	Washer - Tab	20 3 2
92-4122	Assembly - Adjuster RH	21 * 1	93-3102	Cap - Fuel	39 1 1
92-4123	Assembly - Pawl LH	21 19 1	93-6668	Decal - Charging	37 24 1
92-4123	Assembly - Pawl LH	25 19 1	93-6681	Decal - Warning	26 44 1
92-4124	Assembly - Pawl RH	21 * 1	93-6687	Decal - No Step	37 10 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
93-7051	Radiator Assembly	26 39 1	237-21	Seal - O-Ring	42 2 6
93-7053	Warning Light Assembly	2 9 1	237-22	Seal - O-Ring	42 5 3
93-7081	Tube - Brake Front RH	10 10 1	237-22	Seal - O-Ring	41 9 4
93-7082	Tube - Brake Front LH	10 16 1	237-30	Seal - O-Ring	31 34 2
93-7083	Tube - Brake Front	10 1 1	237-42	O-Ring	44 2 2
93-7084	Tube - Brake Rear	10 5 1	237-42	Seal - O-Ring	42 7 2
93-7085	Tube - Brake Front	10 19 1	237-42	Seal - O-Ring	41 11 2
93-7086	Tube - Brake Rear	10 7 1	237-42	Seal - O-Ring	31 47 1
93-7087	Tube - Brake Rear	10 12 1	237-78	Seal - O-Ring	42 15 4
93-7088	Support - Fan	26 20 1	237-79	Seal - O-Ring	42 25 1
93-7090	Stub - Axle	23 14 2	237-79	Seal - O-Ring	31 39 2
93-7094	Cover - Wire Harness	2 49 1	237-80	Seal - O-Ring	42 24 1
93-7099	Frame - Engine	29 1 1	237-123	Seal - O-Ring	31 25 1
93-7100	Mount - Engine	29 5 1	240-5	Grommet	12 31 1
93-7100	Mount - Engine	30 40 1	240-6	Grommet	8 22 1
93-7102	Muffler	30 31 1	241-119	Cap Dust	20 1 2
93-7103	Screen - Radiator	26 8 1	2410-42	Cap - Front Bumper	1 12 2
93-7120	Housing - Bell	12 10 1	2410-64	Plug - Hole	3 64 1
93-7123	Hose - Brake Front	19 8 2	2411-33	Joint - Ball	12 3 1
93-7123	Hose - Brake Front	10 9 2	2412-10	Clamp - R	19 7 2
93-7124	Driveshaft Assembly	24 * 2	2412-34	Clamp	42 22 1
93-7125	Brake Assembly RH	23 * 1	2412-34	Clamp	30 36 2
93-7125	Rear Brake Assembly - RH	25 * 1	2412-34	Clamp - Hose	26 6 2
93-7126	Brake Assembly LH	23 9 1	2412-34	Clamp - Hose	29 7 1
93-7126	Rear Brake Assembly - LH	25 * 1	2412-36	Clamp	39 8 1
93-7128	Drum - Brake	23 15 2	2412-36	Clamp - Hose	31 3 3
93-7130	Harness - Wire	30 15 1	2412-89	Clamp - R	45 2 1
93-7130	Harness - Wire	38 33 1	2412-89	Clamp - R	37 20 1
93-7130	Harness - Wire Rear	37 22 1	2412-89	Clamp - R	10 21 1
93-7130	Harness - Wire Rear	2 34 1	2412-89	Clamp - R	12 29 1
93-7133	Arm - Control Upper LH	19 * 1	2412-89	Clamp - R	2 32 1
93-7135	Arm - Control Upper RH	19 21 1	2412-92	Clamp - Hose	30 10 1
93-7145	Screw - Cap Hex. Hd.	5 19 3	2412-92	Clamp - Hose	39 20 2
93-7252	Decal - CE	3 66 1	2412-105	Clamp - R	5 17 2
93-7275	Decal - Starting Fluid	26 33 1	2412-106	Clamp - R	29 11 1
93-7276	Decal - Danger	37 25 1	2412-107	Clamp - R	30 47 1
93-7814	Decal - Caution	28 1 1	2412-108	Clamp - Hose	39 10 1
93-8071	Decal - Caution	22 29 1	2412-108	Clamp - Hose	30 12 2
93-9430	Decal - Differential Lock	13 17 1	2412-108	Clamp - Hose	38 13 3
93-9431	Decal - Quick Ref. DN	13 * 1	2412-130	Clamp - Hose	40 10 1
93-9432	Decal - Quick Ref. FN	13 * 1	2412-133	Clamp - R	14 3 2
93-9433	Decal - Quick Ref. NO	13 * 1	2412-143	Clamp - Hose	8 15 2
93-9434	Decal - Quick Ref. PO	13 * 1	2412-144	Clamp - Hose	8 34 2
93-9442	Decal - ATF	23 4 1	2412-149	Clamp - R	30 37 1
93-9443	Decal - Parking Brake	13 20 1	2412-149	Clamp - Tube	22 24 5
93-9444	Decal - Dump Hydraulics	13 19 1	2412-149	R-Clamp	10 14 2
93-9445	Decal - Dash	3 56 1	251-8	Bearing - Ball	34 1 2
93-9447	Decal - Caution	26 36 1	251-82	Bearing - Ball	28 11 2
93-9448	Decal - Caution	13 10 1	251-346	Bearing - Ball	34 8 1
93-9449	Decal - Grease	23 44 2	254-72	Cup - Bearing	20 29 2
93-9850	Decal - Rollover	17 2 1	254-94	Cone - Bearing	20 30 2
93-9851	Decal - Fuse Block	3 54 1	254-106	Cone - Bearing	20 27 2
93-9852	Decal - Danger	14 6 1	254-107	Cup - Bearing	20 28 2
93-9852	Decal - Warning	42 32 2	256-257	Bushing - Flange	8 1 2
93-9852	Decal - Warning	43 13 1	256-257	Bushing - Flange	12 36 2
93-9856	Decal - Supervisor	3 55 1	283-2	Pin - Clevis	8 29 1
93-9857	Decal - Axle Range	13 11 1	283-14	Pin - Clevis	16 23 1
93-9859	Decal - ROPS	17 3 2	283-30	Pin - Clevis	12 35 1
93-9860	Decal - Danger	13 26 1	283-30	Pin - Clevis	8 42 1
93-9861	Decal - PTO	13 16 1	283-62	Pin - Clevis	16 6 1
93-9862	Decal - PTO	23 40 1	283-62	Pin - Clevis	15 8 3
93-9866	Decal - Remote Hydraulic	13 18 1	283-62	Pin - Clevis	31 35 3
93-9879	Decal - Warning	18 33 2	283-85	Pin - Clevis	8 39 1
218-446	Nut - Hex.	2 11 1	302-5	Fitting - Grease	19 14 4
218-447	Washer - Lock	2 12 1	302-5	Fitting - Grease	20 20 4
218-473	Boot - Switch	3 63 1	302-5	Fitting - Grease	5 30 1
218-574	Fuse - 7.5 Amp	2 46 2	302-5	Fitting - Grease	23 35 4
218-578	Fuse - 10 Amp	3 61 1	302-11	Fitting - Grease	18 8 1
218-600	Bulb	2 13 2	302-58	Fitting - Grease	24 46 16
219-17	Bulb - Warning Light	3 59 5	321-2	Screw - Cap Hex. Hd.	2 1 7
232-27	Stem - Valve	20 31 2	321-2	Screw - Cap Hex. Hd.	30 7 1
232-27	Valve - Stem	23 17 2	321-3	Screw - Cap Hex. Hd.	2 4 2
233-37	Knob	15 1 1	321-3	Screw - Cap Hex. Hd.	26 31 4
233-39	Knob	41 1 1	321-3	Screw - Cap Hex. Hd.	5 33 2
233-39	Knob	5 1 1	321-4	Screw - Cap Hex. Hd.	26 5 4
233-48	Knob	16 4 1	321-4	Screw - Cap Hex. Hd.	37 6 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
321-4	Screw - Cap Hex. Hd.	29 8 1	3230-23	Bolt - Carriage	26 24 5
321-4	Screw - Cap Hex. Hd.	13 9 8	3231-3	Bolt - Carriage	18 21 4
321-4	Screw - Cap Hex. Hd.	10 13 3	3231-21	Bolt - Carriage	37 1 6
321-4	Screw - Cap Hex. Hd.	14 20 8	3231-21	Bolt - Carriage	41 21 1
321-4	Screw - Cap Hex. Hd.	1 24 4	3231-21	Bolt - Carriage	14 22 4
321-4	Screw - Cap Hex. Hd.	12 30 1	3231-21	Bolt - Carriage	15 32 4
321-4	Screw - Cap Hex. Hd.	2 33 1	3232-17	Bolt - Carriage	22 19 8
321-4	Screw - Hex. Flange Hd.	22 26 3	3234-1	Screw - Hex. Flange Hd.	1 13 6
321-5	Screw - Cap Hex. Hd.	30 56 1	3234-4	Screw - Hex. Flange Hd.	31 42 4
321-6	Screw - Cap Hex. Hd.	45 3 16	3234-11	Screw - Cap Hex. Hd.	29 18 6
321-6	Screw - Cap Hex. Hd.	19 5 2	3234-38	Screw - Cap Hex. Hd.	39 31 2
321-9	Screw - Cap Hex. Hd.	10 3 4	3234-38	Screw - Hex. Flange Hd.	22 17 22
321-9	Screw - Cap Hex. Hd.	41 5 2	3234-40	Screw - Hex. Flange Hd.	17 4 4
321-9	Screw - Cap Hex. Hd.	16 27 1	3250-13	Screw	2 51 2
321-14	Screw - Cap Hex. Hd.	42 8 2	3250-13	Screw - Hex. Hd.	13 15 20
321-15	Screw - Cap Hex. Hd.	41 13 1	3250-13	Screw - Pan Hd.	1 27 4
322-2	Screw - Cap Hex. Hd.	8 2 12	3250-20	Screw - Round Hd.	26 41 4
322-2	Screw - Cap Hex. Hd.	10 11 1	3253-3	Washer - Lock	26 30 4
322-2	Screw - Cap Hex. Hd.	5 16 6	3253-4	Washer - Lock	13 5 8
322-2	Screw - Cap Hex. Hd.	39 22 4	3253-4	Washer - Lock	5 14 4
322-2	Screw - Cap Hex. Hd.	26 42 4	3253-4	Washer - Lock	30 22 6
322-2	Screw - Cap Hex. Hd.	2 50 3	3253-6	Washer - Lock	23 45 10
322-3	Screw - Cap Hex. Hd.	30 3 1	3253-15	Washer - Lock	39 5 5
322-3	Screw - Cap Hex. Hd.	42 20 4	3253-15	Washer - Lock	2 39 4
322-5	Screw - Cap Hex. Hd.	28 2 4	3253-19	Washer - Lock	3 58 7
322-5	Screw - Cap Hex. Hd.	13 6 8	3253-21	Washer - Lock	23 10 8
322-5	Screw - Cap Hex. Hd.	19 10 2	3253-21	Washer - Lock	14 13 2
322-5	Screw - Cap Hex. Hd.	8 13 1	3253-21	Washer - Lock	20 33 8
322-5	Screw - Cap Hex. Hd.	41 24 1	3254-1	Washer - Lock	2 36 1
322-5	Screw - Cap Hex. Hd.	26 25 4	3254-2	Washer - Lock	30 32 2
322-7	Screw - Cap Hex. Hd.	28 9 4	3255-7	Washer - ETLW	38 3 1
322-12	Screw - Cap Hex. Hd.	15 25 1	3255-9	Washer - Lock ETLW	37 3 1
323-4	Screw - Cap Hex. Hd.	39 16 2	3256-3	Washer - Flat	28 8 4
323-4	Screw - Cap Hex. Hd.	1 22 1	3256-4	Washer - Flat	31 12 1
323-6	Screw - Cap Hex. Hd.	16 1 1	3256-5	Washer - Flat	12 11 4
323-6	Screw - Cap Hex. Hd.	23 11 8	3256-6	Washer - Flat	22 9 4
323-6	Screw - Cap Hex. Hd.	14 12 2	3256-6	Washer - Flat	18 32 2
323-6	Screw - Cap Hex. Hd.	15 37 1	3256-14	Washer - Flat	41 30 1
323-7	Screw - Cap Hex. Hd.	31 14 4	3256-22	Washer - Flat	10 4 4
323-7	Screw - Cap Hex. Hd.	8 31 2	3256-22	Washer - Flat	2 5 2
323-7	Screw - Cap Hex. Hd.	23 43 4	3256-22	Washer - Flat	13 8 8
323-8	Screw - Hex. Flange Hd.	20 11 8	3256-22	Washer - Flat	45 11 16
323-9	Screw - Cap Hex. Hd.	37 14 1	3256-22	Washer - Flat	26 14 4
323-10	Screw - Cap Hex. Hd.	31 8 1	3256-22	Washer - Flat	41 18 3
323-12	Screw - Cap Hex. Hd.	18 6 8	3256-22	Washer - Flat	14 19 8
324-9	Screw - Cap Hex. Hd.	18 22 4	3256-22	Washer - Flat	38 30 1
324-10	Screw - Cap Hex. Hd.	18 1 4	3256-22	Washer - Flat	12 41 2
324-12	Screw - Cap Hex. Hd.	29 3 2	3256-23	Washer - Flat	13 4 4
324-13	Screw - Cap Hex. Hd.	18 10 2	3256-23	Washer - Flat	16 21 1
325-4	Screw - Cap Hex. Hd.	14 15 2	3256-23	Washer - Flat	41 26 2
325-13	Screw - Cap Hex. Hd.	19 11 8	3256-23	Washer - Lock	12 38 4
325-13	Screw - Cap Hex. Hd.	18 27 4	3256-24	Washer - Flat	37 15 2
325-19	Screw - Cap Hex. Hd.	23 27 1	3256-24	Washer - Flat	45 18 6
325-20	Screw - Cap Hex. Hd.	23 24 5	3256-25	Washer	30 30 6
3211-8	Screw - Cap Hex. Hd.	15 13 2	3256-25	Washer - Flat	29 4 2
3215-1	Screw - Cap Hex. Hd.	31 16 2	3256-27	Washer - Flat	22 6 4
3215-2	Screw - Cap Hex. Hd.	12 12 5	3256-27	Washer - Flat	18 31 2
3217-25	Nut - Hex.	2 38 4	3256-28	Washer - Flat	28 15 1
3217-26	Nut - Hex.	2 37 1	3256-45	Washer - Flat	26 27 1
3217-29	Nut - Jam	3 57 7	3256-61	Washer - Flat	13 25 14
3218-18	Nut - Jam	15 43 1	3256-61	Washer - Flat	1 29 4
3218-20	Nut - Jam	12 16 2	3256-67	Washer - Flat	38 29 3
3218-21	Nut - Jam	20 18 2	3257-7	Key - Woodruff	28 17 1
3219-14	Nut	15 5 1	3258-19	Screw - Round Head	40 2 2
3219-14	Nut - Hex.	31 32 1	3272-6	Pin - Cotter	15 3 3
3220-1	Nut - Jam	31 37 4	3272-6	Pin - Cotter	31 30 3
3220-1	Nut - Jam	15 41 4	3272-6	Pin - Cotter	8 37 1
3220-2	Nut - Jam	12 2 1	3272-10	Pin - Cotter	16 8 2
3220-3	Nut - Jam	15 12 2	3272-10	Pin - Cotter	12 33 1
3220-7	Nut - Jam	20 2 2	3272-10	Pin - Cotter	8 43 1
3220-11	Nut - Jam	20 23 2	3272-12	Pin - Cotter	19 17 4
3229-25	Nut - Lock	38 5 2	3272-12	Pin - Cotter	20 21 4
3229-25	Screw - Carriage	42 19 2	3272-12	Pin - Cotter	20 32 2
3230-18	Bolt - Carriage	14 2 8	3272-37	Pin - Cotter	42 18 2
3230-23	Bolt - Carriage	38 2 2	3274-31	Screw - Button Hd.	2 7 4
3230-23	Bolt - Carriage	37 5 4	3274-54	Screw - Hex. Socket Hd.	39 28 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3274-94	Screw - Socket Button Hd.	45 16 6	32107-11	Nut - Square	40 4 2
3277-1	Nut - Hex.	5 5 1	32120-47	Ring - E	12 32 2
3290-221	Washer - Spring	15 34 1	32120-47	Ring - E	8 41 1
3290-221	Washer - Spring	16 36 2	32120-47	Ring - Retaining	30 5 1
3290-271	Rivet - Pop	26 13 2	32120-47	Ring - Retaining	16 10 3
3290-321	Screw - Hex. Flange Hd.	8 10 2	32121-7	Pin - Roll	12 22 1
3290-357	Nut - Flange	39 18 2	32121-24	Pin - Roll	12 24 2
3290-357	Nut - Flange Lock	37 2 6	32121-48	Pin - Roll	15 23 1
3290-357	Nut - Flange Lock	1 8 9	32122-24	Screw - Round Hd.	39 6 5
3290-357	Nut - Flange Lock	14 10 4	32128-20	Nut - Flange	10 17 1
3290-357	Nut - Flange Lock	18 16 4	32128-20	Nut - Flange	5 27 6
3290-357	Nut - Flange Lock	26 21 1	32128-20	Nut - Flange	2 48 3
3290-357	Nut - Flange Lock	15 33 4	32128-20	Nut - Flange Head	42 11 4
3290-357	Nut - Flange Lock	8 33 2	32128-20	Nut - Flange Lock	19 6 2
3290-378	Tie - Cable	29 2 1	32128-20	Nut - Flange Lock	8 7 13
3290-378	Tie - Cable	42 34 6	32128-20	Nut - Flange Lock	37 16 2
3290-379	Tie - Cable	30 38 1	32128-20	Nut - Flange Lock	14 21 8
3290-413	Washer - Belleville	29 16 12	32128-20	Nut - Flange Lock	39 25 4
3290-455	Washer	5 12 1	32128-20	Nut - Lock	26 40 4
3290-456	Washer - Belleville	15 46 2	32128-21	Nut - Lock	31 11 1
3290-477	Washer - Curved	16 28 1	32128-23	Nut - Flange	39 17 2
3290-478	Washer - Belleville	16 17 1	32128-23	Nut - Flange Lock	17 5 4
3290-506	Palnut	45 4 2	32128-23	Nut - Flange Lock	22 21 22
3290-507	Pin - Dowel	15 31 1	32128-33	Nut - Flange	29 14 1
3296-2	Nut - Lock	8 8 2	32128-33	Nut - Flange	2 44 12
3296-2	Nut - Lock	13 22 20	32128-33	Nut - Flange Head	42 12 4
3296-2	Nut - Lock	1 30 4	32128-33	Nut - Flange Head	10 15 2
3296-2	Nut - Lock	2 45 2	32128-33	Nut - Flange Lock	31 1 1
3296-3	Nut - Lock	30 9 1	32128-33	Nut - Flange Lock	37 4 1
3296-4	Nut - Lock	12 5 1	32128-33	Nut - Flange Lock	41 6 1
3296-5	Nut - Flange Lock	26 28 1	32128-33	Nut - Flange Lock	22 27 4
3296-15	Nut - Lock	28 16 1	32128-33	Nut - Flange Lock	12 28 1
3296-23	Nut - Flange Lock	19 12 8	32128-33	Nut - Lock	1 25 4
3296-23	Nut - Lock	22 10 4	32128-36	Nut - Lock	23 38 4
3296-23	Nut - Lock	18 14 4	32128-44	Nut - Flange Lock	14 9 2
3296-23	Nut - Lock	14 16 2	32128-53	Nut - Flange Lock	23 26 2
3296-27	Rivet - Plastic	37 11 4	32136-2	Nut - Slotted	19 2 2
3296-29	Nut - Flange Lock	26 23 8	32136-3	Nut - Slotted	20 22 4
3296-29	Nut - Lock	38 4 2	32141-86	Screw - Leveler	26 18 1
3296-29	Nut - Lock	28 6 6	32144-4	Screw - Hex. Washer Hd.	15 9 2
3296-29	Nut - Lock	8 6 1	32144-10	Screw - Self Tapping	5 18 2
3296-29	Nut - Lock	12 19 1	32144-18	Screw - Cap Hex. Hd.	2 22 2
3296-29	Nut - Lock	41 27 1	32144-52	Screw - Hex. Hd.	13 12 6
3296-29	Nut - Lock	30 46 1	32144-93	Screw - Self Tapping	45 6 2
3296-39	Nut - Flange Lock	37 18 1	32144-116	Screw - Pan Head	5 8 8
3296-39	Nut - Flange Lock	31 20 4	32148-6	Insert - Threaded	2 2 2
3296-39	Nut - Lock	45 1 6	32148-7	Nut - Clinch	1 18 8
3296-39	Nut - Lock	22 13 6	32148-7	Nut - Clinch	15 19 2
3296-39	Nut - Lock	29 15 6	32148-10	Insert - Threaded	22 1 8
3296-39	Nut - Lock	20 16 8	32148-15	Insert - Threaded	15 4 1
3296-39	Nut - Lock	41 23 1	32148-15	Nut - Clinch	31 31 1
3296-39	Nut - Lock	18 28 8	32151-41	Ring - Retaining	27 1 1
3296-39	Nut - Lock	16 33 1	32151-56	Ring - Push-On	8 23 1
3296-39	Nut - Lock	23 42 4	32151-104	Ring - Snap	19 15 4
3296-39	Nut - Lock	15 45 1	32152-10	Nut	43 12 1
3296-42	Nut - Lock	16 12 2	340-2	Fitting - Straight	42 10 1
3296-42	Nut - Lock	19 13 2	340-3	Fitting - Hydraulic Straight	42 26 1
3296-42	Nut - Lock	45 13 16	340-77	Fitting - Hydraulic 90°	42 6 1
3296-42	Nut - Lock	26 15 4	340-86	Fitting - Hydraulic Tee	41 15 1
3296-42	Nut - Lock	38 15 2	340-92	Fitting - Hydraulic Straight	42 29 1
3296-42	Nut - Lock	41 19 2	340-94	Fitting - Hydraulic Tee	41 10 1
3296-42	Nut - Lock	10 20 5	340-132	Fitting - Hydraulic 90°	42 14 4
3296-42	Nut - Lock	39 26 2	340-140	Fitting - Hydraulic Tee	42 28 1
3296-42	Nut - Lock	5 32 2	340-151	Fitting - Hydraulic Tee	42 30 1
3296-48	Nut - Lock	18 11 10	353-707	Fitting - 90° Barb	38 14 1
3296-48	Nut - Lock	29 20 2	353-781	Fitting - Fuel 90°	39 14 1
3296-56	Nut - Lock	30 50 3	353-783	Fitting - Straight	38 20 1
3296-58	Nut - Lock	15 11 1	354-134	Fitting - Hydraulic 90°	31 40 2
3296-59	Nut - Lock	5 13 1	354-135	Fitting - Hydraulic 90°	31 5 1
3296-76	Nut - Lock	22 30 8	354-136	Fitting - Hydraulic Straight	42 23 1
32104-82	Screw - Hex. Flange Hd.	22 25 2			
32104-88	Screw	1 4 6			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Workman 3300D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Workman 3300D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Workman 3300D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Front Bumper & Hood Assembly	1	Transaxle Installation Assembly	31
Control Panel Assembly	2-3	Transaxle Case Assembly	32
Electrical Schematic	4	Countershaft Assembly	33
Steering Linkage Assembly	5	Transaxle Gear Shafts Assembly	34
Steering Gear Assembly No. 87-1500	6-7	Shift Fork Assembly	35
Brake & Accelerator Pedal Assembly	8	Differential Gear Assembly	36
Master Brake Cylinder No. 87-3030	9	Battery Mount Assembly	37
Hydraulic Brake Line Routing Assembly	10	Fuel Filter, Pump & Relay Mounting	38
Hydraulic Schematic	11	Fuel Tank & Air Cleaner Assembly	39
Clutch Linkage Assembly	12	Air Cleaner Assembly	40
Seat Base Assembly	13	Lift Valve Linkage Assembly	41
Seat Back Assembly	14	Lift Valve & Cylinder Assembly	42
Hi-Lo Shift Levers Assemblies	15	Lift Cylinder No. 87-7990	43
Differential Lock & Parking Brake Assemblies	16	Control Valve Assembly No. 43-1950	44
R.O.P.S. Assembly	17	Rear Fender & Tail Light Assembly	45
Front Suspension Assembly	18	Camshaft Assembly	46
Front Suspension Control Arm Assembly	19	Valves & Crankshaft Assembly	47
Front Wheel Assembly	20	Cylinder Head Assembly	48
Front Brake Assembly	21	Crankcase Assembly	49
Rear Frame Assembly	22	Water Pump Assembly	50
Rear Axle Assembly	23-24	Fuel Supply & Engine Block Assembly	51
Rear Brake Assembly	25	Fuel Injection Pump Assembly	52-53
Radiator & Hydraulic Pump Assembly	26	Governor Assembly	54
Hydraulic Pump Assembly No. 87-5700	27	Starter Assembly	55
Hydraulic Pump Drive Assembly	28	Alternator Assembly	56
Engine Frame Assembly	29	TORO Part Number Index	57-66
Engine Installation Assembly	30		

