

LAWN-BOY®

48cm REAR BAGGING MOWER

MODEL NO. 10910B-5900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN-BOY owners as quickly as possible, minor changes are incorporated into LAWN-BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN-BOY Distributor or his Authorized LAWN-BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.


To order replacement parts from an Authorized Service Dealer, supply the following information:

- 1. Model and serial number.
- 2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

 Description	Page	Description	Page
Housing Assembly	3	Handle Assembly	8
Engine Assembly	4	Bag Assembly	9
Blade Assembly	5	Engine Briggs & Stratton Model	
Rear Axle Assembly	6	122802-3214-01	10-18
Gear Case Assembly	7	Lawn-Boy Part Number Index	19

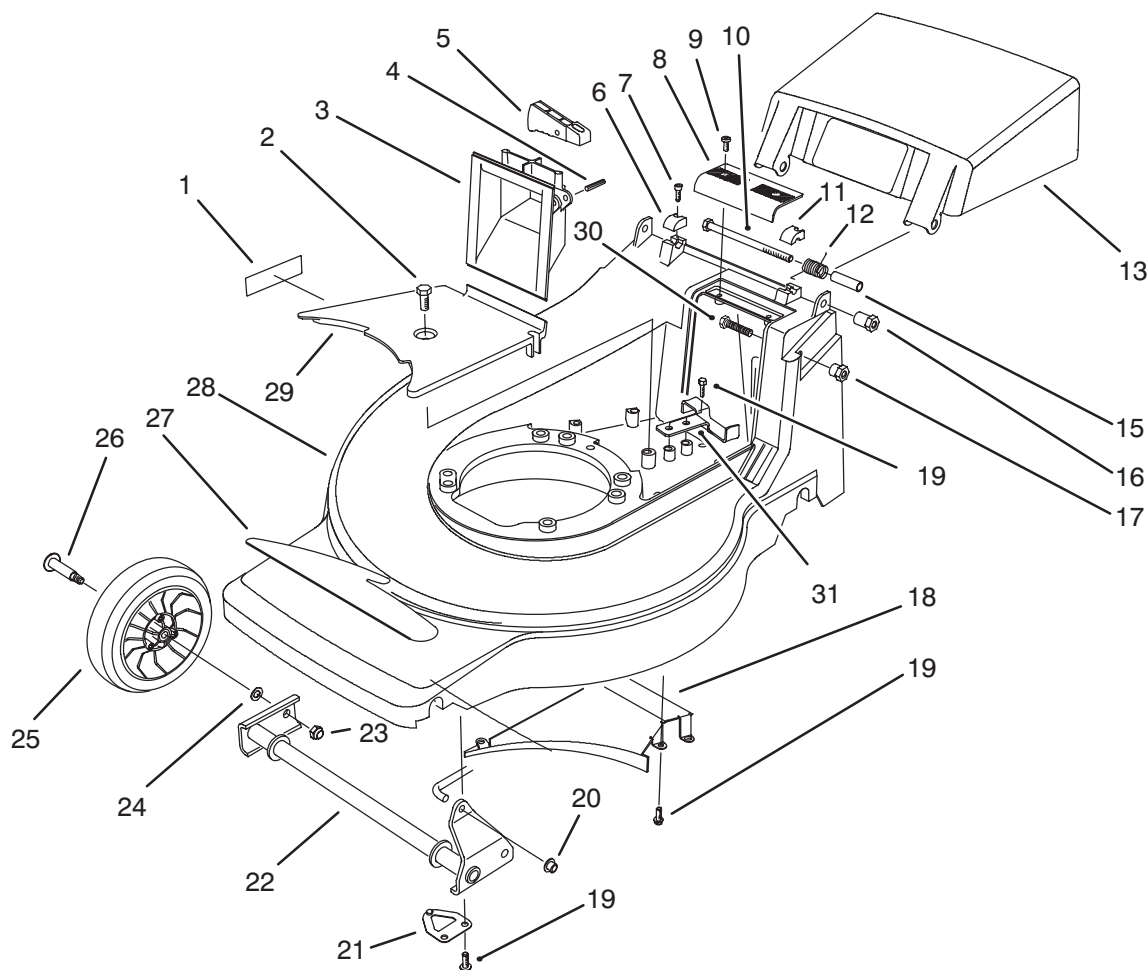


C-2232

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1	93-4105	Decal – Danger	1	18	71-7990	Ramp – Discharge	1
2	32144-70	Screw – Tapping	1	19	32144-4	Screw – Tapping	10
3	71-7870	Grip – Lower	1	20	32112-1	Nut – Push	1
4	3284-5	Pin – Groove	1	21	71-8830	Retainer – Shaft	2
5	71-7930	Trigger – HOC	1	†22	92-9304	Pivot – Front	1
6	71-7910	Cap – R.H. Hinge Bolt	1	23	92-8819	Nut – Lock	2
7	65-5210	Screw – Thread Forming	2	24	40-1940	Washer	2
8	71-7860	Grip – Upper	1	25	92-8810	Wheel & Tire Assembly	2
9	32144-97	Screw – Pan Hd. Phillips	2	26	92-8811	Bolt – Wheel	2
10	92-8806	Screw – Hex Hd. Cap	2	27	92-8835	Decal – Deck 400XS	1
11	71-7900	Cap – L.H. Hinge Bolt	1	†28	16-8889	Housing (Incl. Ref. #1)	1
†12	71-9840	Spring – Door	2	29	71-7920	Cover – Belt	1
13	71-9800	Door – Discharge	1	30	92-8818	Screw – Hex Hd. Cap	2
15	92-9313	Spacer – Door	2	31	71-7890	Guide – Rear Belt	1
16	93-7161	Spacer – Handle	1				
17	93-7162	Spacer – Handle	2				

 † Obtain From Toro Europe N.V.

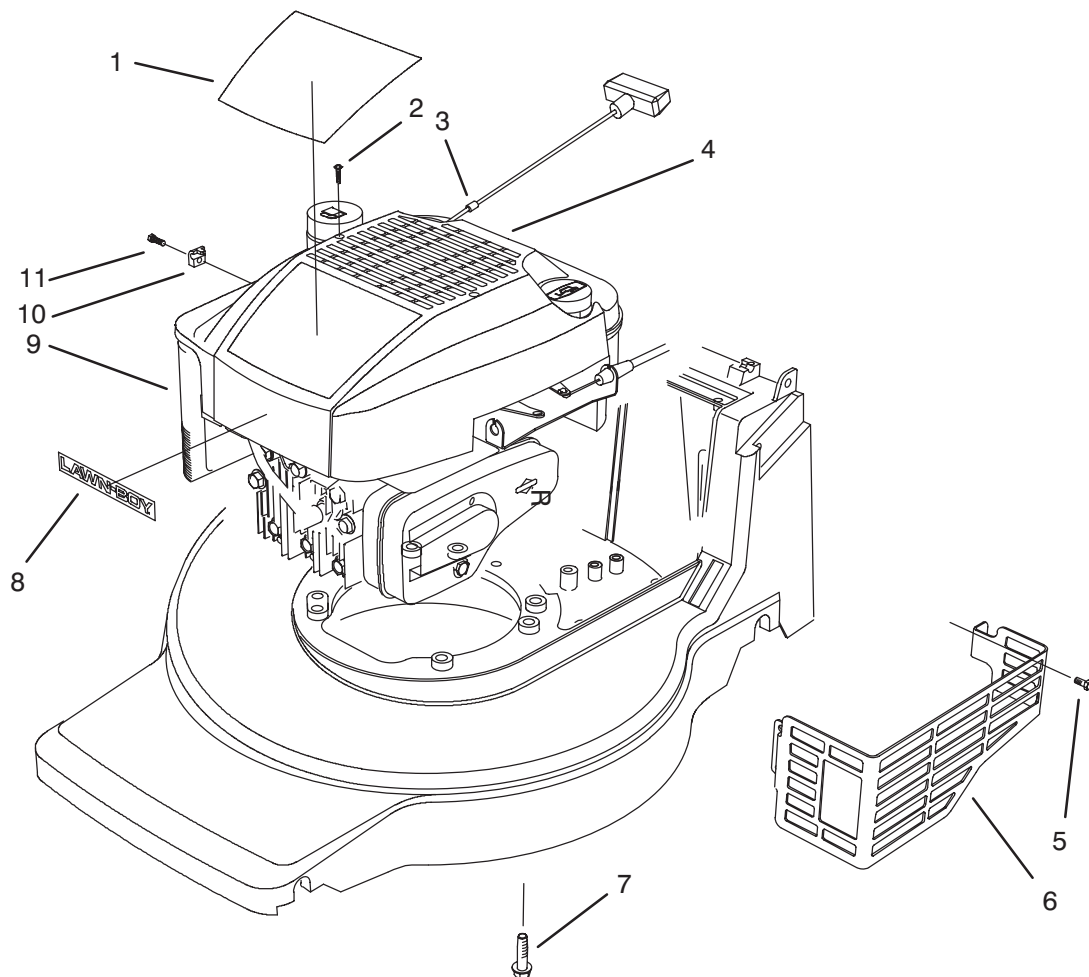


C-1886

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-8829	Decal - Recoil	1
2	92-7887	Screw - Mounting	2
3	2210-316	Stop - Rope	1
4	92-8883	Cover - XTE	1
5	32144-73	Screw - Hex Washer Head Thread Forming	3

Ref. No.	Part No.	Description	No. Used
6	82-8550	Shield - Muffler	1
7	32144-102	Screw - Tapping	3
8	92-8615	Decal - Shroud	1
9		Engine	1
10	2210-249	Clamp - Casing	1
11	86-7990	Screw - Clamp	1

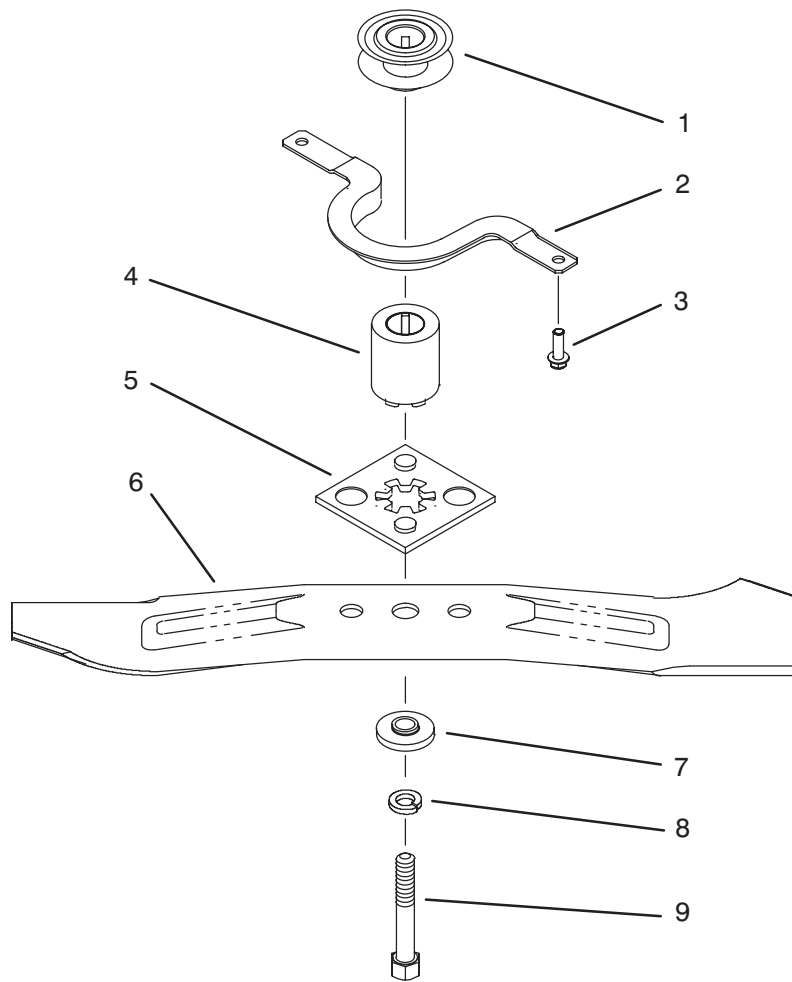 


C-1892

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-2271	Pulley – Driver	1
2	71-7960	Guide – Belt	1
3	32144-4	Screw – Tapping	2
4	92-8807	Hub – Blade Driver	1
5	146046	Plate – Blade Driver	1

Ref. No.	Part No.	Description	No. Used
6	612079	Blade – 48cm	1
7	92-8626	Spacer – Blade	1
8	3253-22	Washer – Lock	1
9	26-0670	Bolt – Blade	1

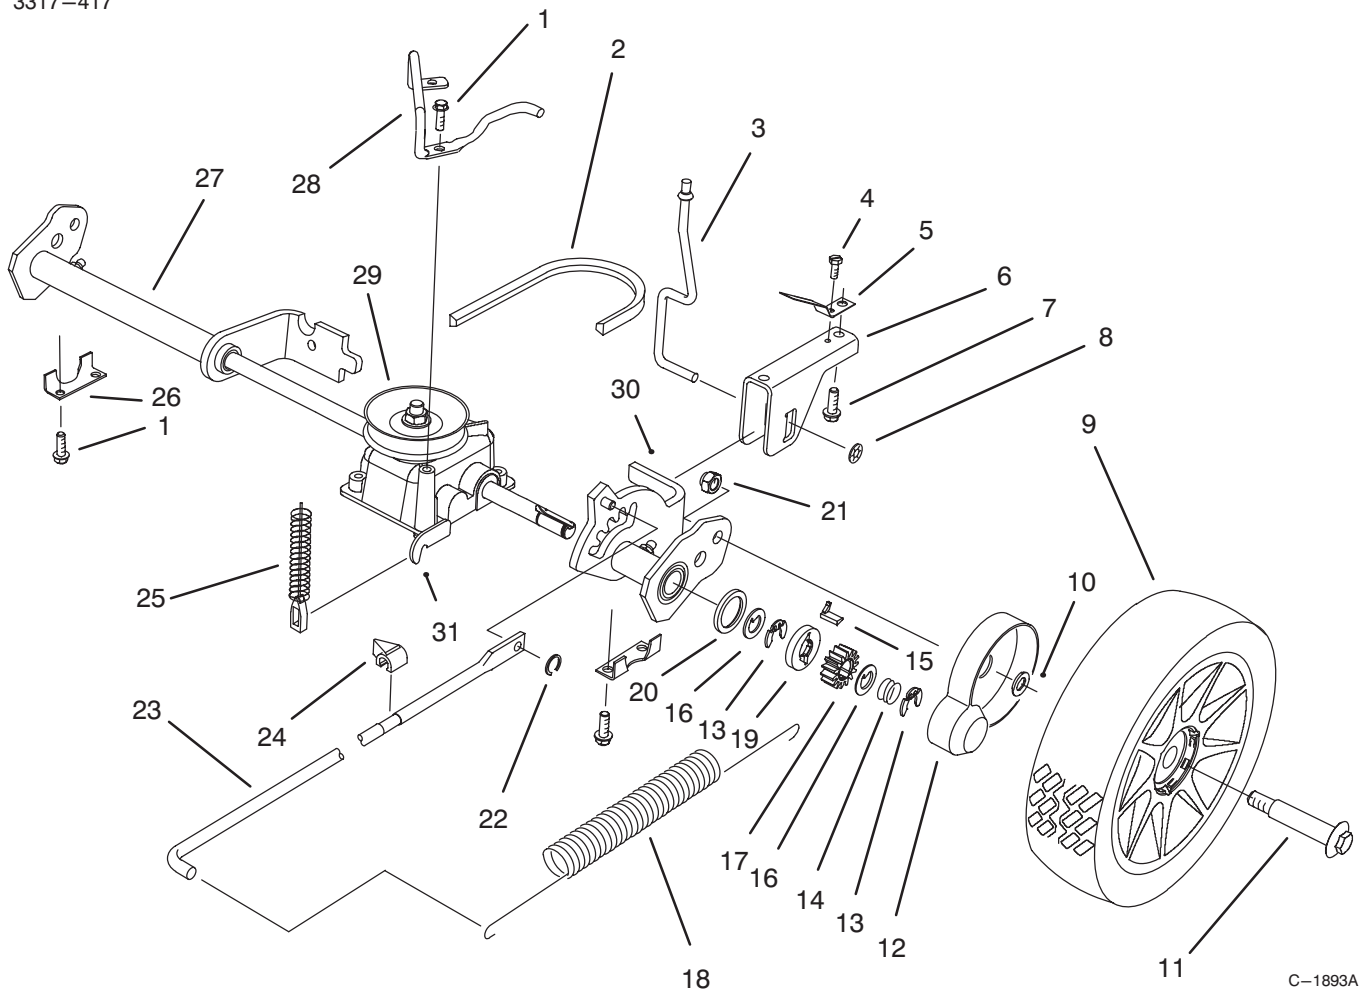 

C-1893A


REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw – Tapping	6
2	71-9450	V-Belt – Gear Case	1
3	71-7840	Rod – Trigger	1
4	32144-31	Screw – Tapping	1
5	71-8060	Spring – Trigger Retainer	2
6	71-8080	Saddle – H.O.C.	1
7	63-8590	Screw	2
8	32112-13	Nut – Push	1
9	92-9318	Wheel & Tire Assembly	2
10	74-1670	Spacer – Wheel	2
11	92-1057	Bolt – Shoulder	2
12	74-1660	Cover – Wheel	2
13	65-2720	Ring – Retaining	4
14	65-4720	Spring – Compression	2
15	66-6050	Key – Rocking L.H.	1
*	66-6040	Key – Rocking R.H.	1

Ref. No.	Part No.	Description	No. Used
16	65-4740	Washer – Thrust Keyed	4
17	65-4750	Gear – Pinion	2
†18	92-9300	Spring – Counterbalance	1
19	65-4760	Washer	2
20	65-4710	Ring – Friction	2
21	3296-59	Nut – Lock	2
22	32151-93	Ring – Grip	1
†23	92-9301	Rod – Link	1
24	71-7980	Indicator – H.O.C.	1
25	71-8310	Spring – Compression	1
26	71-7770	Plate – Securing Rear	2
†27	92-9310	Arm – R.H. Pivot	1
†28	71-9850	Retainer – Belt	1
29	71-9600	Case – Gear	1
†30	92-9311	Arm – L.H. Pivot	1
31	71-9630	Bracket – Traction	1

*Not Illustrated

 † Obtain From Toro Europe N.V.

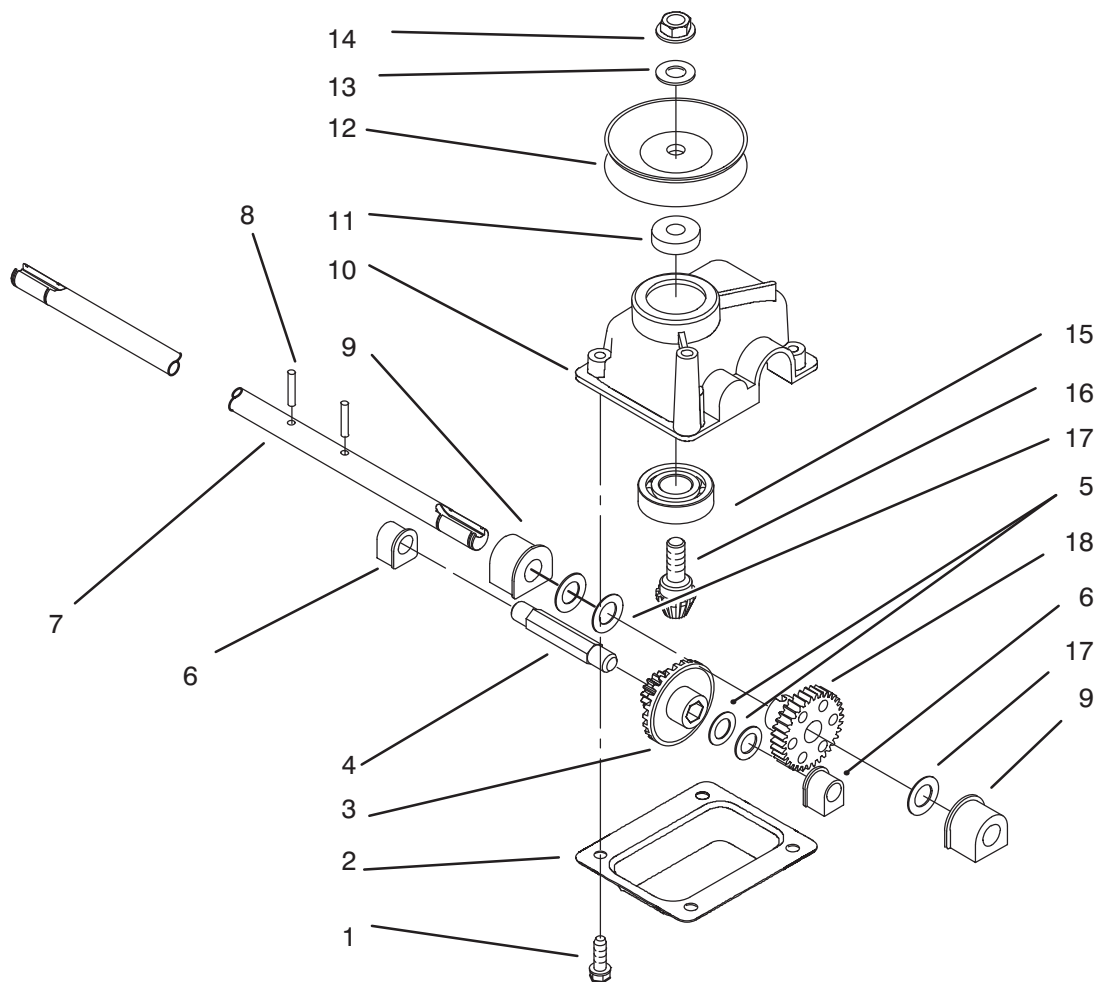


C-1292A

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw – Taptite	4	11	62-6660	Spacer	1
2	614668	Cover – Gear Case	1	12	71-9610	Pulley – Half	2
3	55-3760	Pinion – 15 Tooth	1	13	3256-24	Washer	1
4	614696	Shaft – Intermediate	1	14	3296-5	Nut	1
5	36-4791	Washer	2	15	38-7820	Bearing – Ball	1
6	60-8750	Bushing	2	16	60-8890	Gear – Bevel Pinion	1
†7	71-9620	Shaft – Output	1	17	36-4780	Washer – Thrust	3
8	32121-63	Pin – Spirol	2	18	614596	Gear 34 Tooth	1
9	60-8850	Bushing – Output	2	†*	71-9600	Gear Case Ass'y Complete	1
10	614578	Gearcase	1				

*Not Illustrated

 † Obtain From Toro Europe N.V.

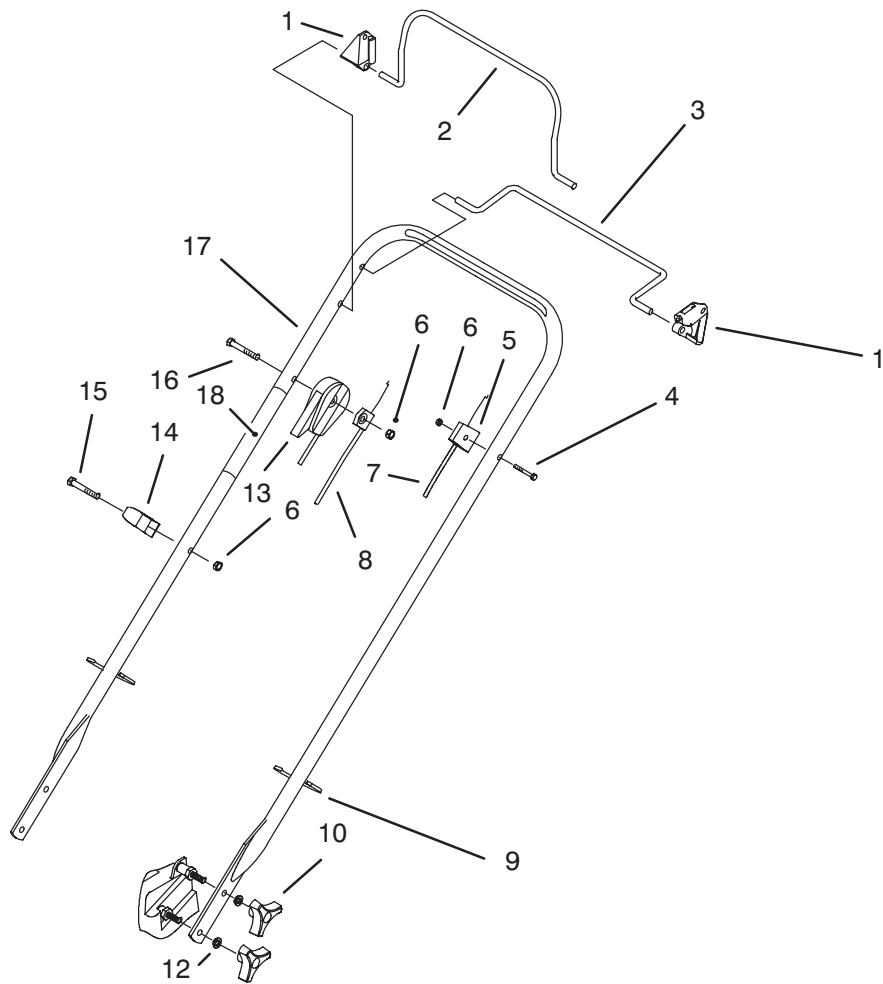


C-2233

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-5412	Stop - Pivot	2
2	92-1002	Bail - Flywheel Brake	1
3	92-1001	Bail - S.P. Control	1
4	321-48	Screw - Hex Hd. Screw	1
5	92-7729	Anchor - Cable S.P. Upper	1
6	3296-73	Nut - Lock	3
7	92-9316	Cable - Traction	1
8	92-9315	Cable - Flywheel Brake	1
9	3290-378	Tie - Cable	2

Ref. No.	Part No.	Description	No. Used
10	93-7159	Knob	4
12	3253-33	Washer - Lock	4
13	93-4379	Cable - Throttle	1
14	92-7720	Guide - Rope	1
15	321-53	Screw - Hex Hd. Cap	1
16	321-49	Screw - Hex Hd. Cap	1
†17	92-8800	Handle	1
18	93-7266	Decal - Operation	1

 † Obtain From Toro Europe N.V.

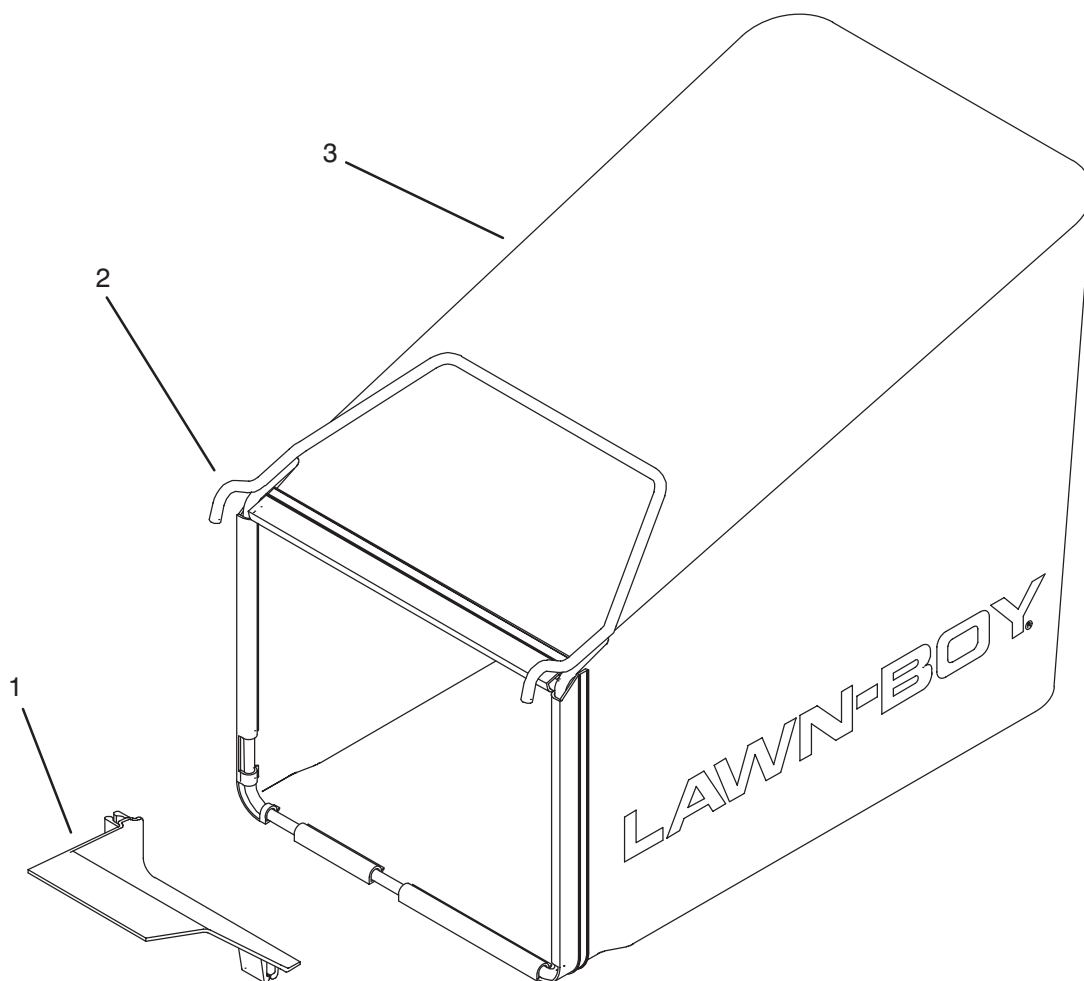


C-1890

BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-3750	Ramp - Grass Bag	1
†2	71-8180	Frame	1

Ref. No.	Part No.	Description	No. Used
3	92-8890	Bag - Grass	1

 † Obtain From Toro Europe N.V.

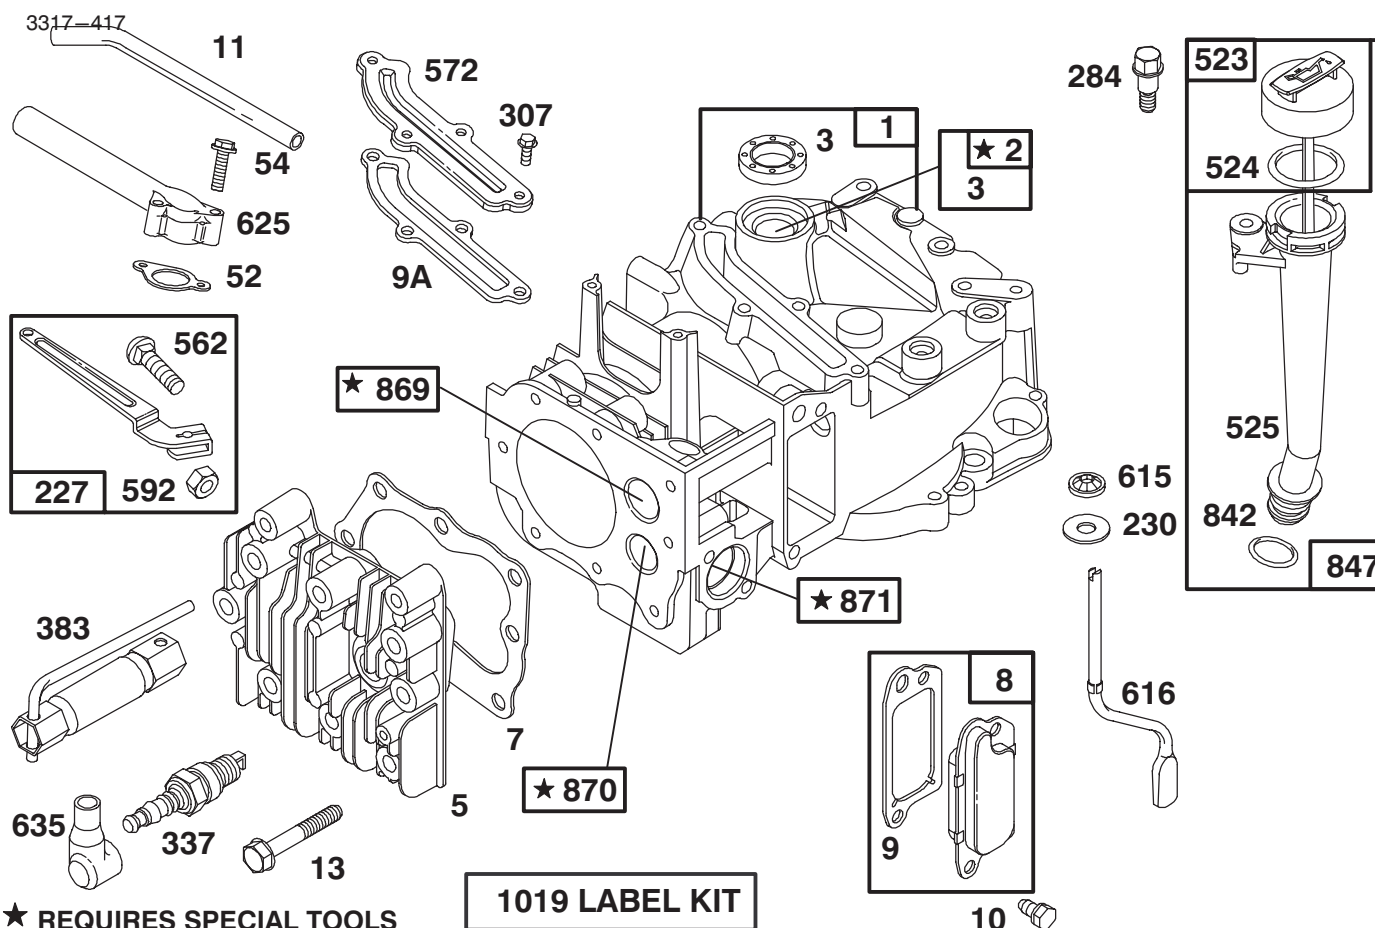


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122802-3214-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing — Cylinder	1
★3	299819	Seal — Oil	1
5	213861	Head — Cylinder	1
★7	272200	Gasket — Cylinder Head	1
8	495786	Breather — Valve Chamber	1
★9	272481	Gasket — Valve Cover	1
★9A	272238	Gasket — Baffle Plate	1
10	94650	Screw — Breather Mtg.	1
11	231933	Tube — Breather	1
13	94547	Screw — Cylinder Head	1
★52	272199	Gasket — Intake Elbow	1
54	94526	Screw — Intake Elbow Mtg.	1
227	492349	Lever Assembly — Gov.	1
230	67072	Washer — Gov. Crank	1
284	94511	Screw — Hex. Head	1
307	94515	Screw — Hex. Head	1
337	802592	Plug — Spark	1
383	89838	Wrench — Spark Plug	1
523	495264	Cap With Dipstick — Oil Filler	1

Ref. No.	Part No.	Description	No. Used
★524	280393	Seal — Filler Tube	1
525	495265	Tube — Oil Filler	1
562	92613	Bolt — Governor Lever	1
572	224328	Baffle — Cylinder	1
592	231082	Nut — Hex.	1
615	94474	Fastener	1
616	262578	Crank — Governor	1
625	281085	Tube — Fuel Intake	1
635	66538	Elbow — Spark Plug	1
★842	280966	Seal — O-Ring	1
847	495263	Oil Fill Tube and Dipstick Assy.	1
869	213512	Seat — Intake Valve	1
870	213513	Seat — Exhaust Valve	1
871	262001	Guide — Exhaust Valve	1
1019	494256	Note: 63709 Guide — Intake Valve Label Kit	1

 ★ Included in Gasket Set—Part No. 496117.

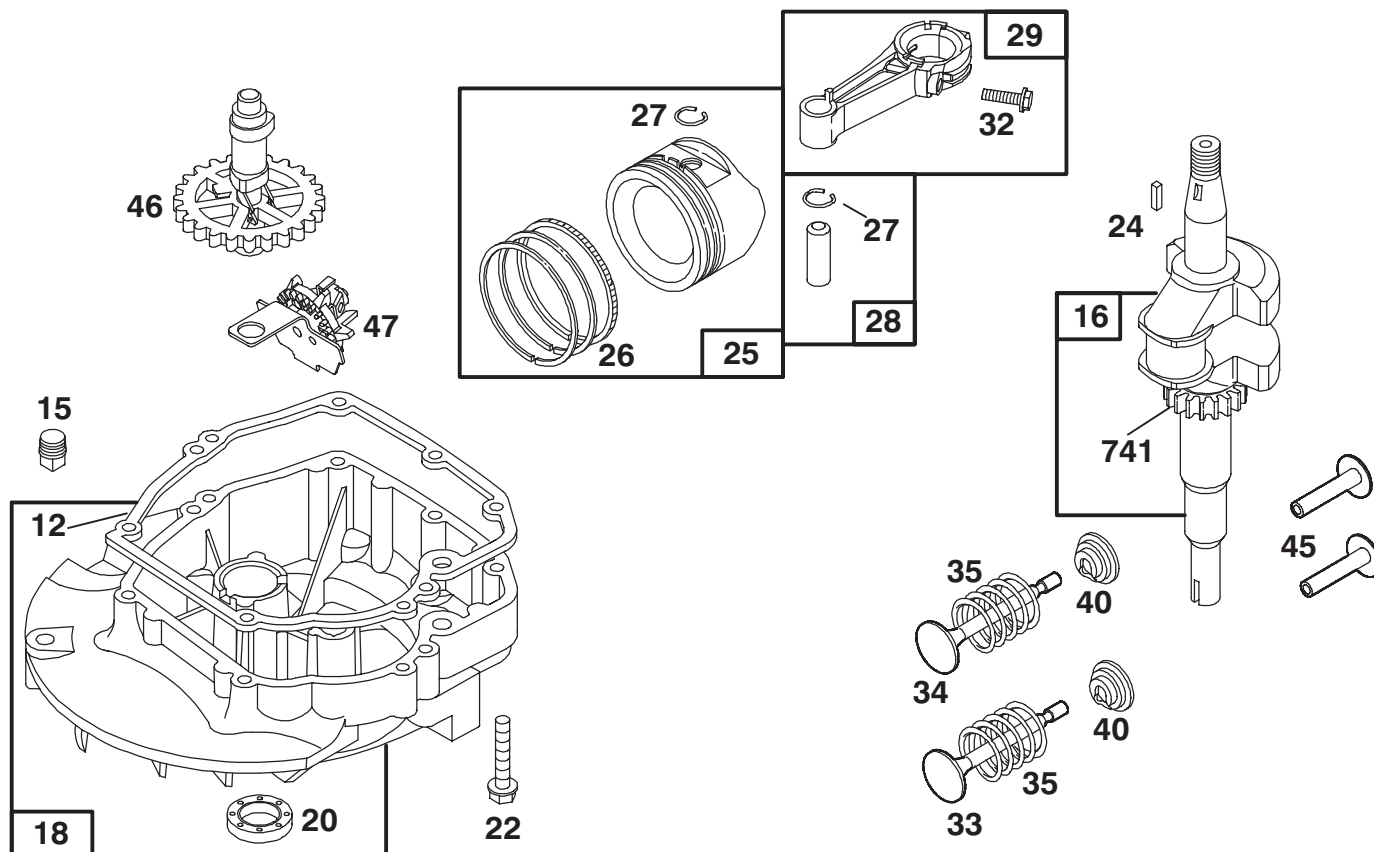


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122802-3214—01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket — Crankcase	1
15	94720	Plug — Oil Drain	1
16	496809	Crankshaft	
		Note: Order 94388 For Timing Gear Key.	
18	493279	Sump — Engine	1
★20	399781	Seal — Oil	1
22	94220	Screw — Sump Mtg. Sem	1
		Note: 94612 Screw — Hex. Head (One (1) Used in Hole Nearest Breather.)	1
24	222698	Key — Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock — Piston Pin	1
28	298909	Pin — Piston (Standard)	1
	298908	Pin — Piston (.005" O.S.)	1
29	490566	Rod Assembly — Connecting	1
		Note: For Connecting Rod With .020" Undersize Crankpin Bearing — Order No. 490743.	
32	94699	Screw — Connecting Rod	1
33	262651	Valve — Exhaust	1
34	262652	Valve — Intake	1
35	262224	Spring — Valve	1
40	93312	Retainer — Valve Spring	1
45	262204	Tappet — Valve	1
46	492828	Gear — Cam	1
47	493737	Slinger — Oil	1
741	262598	Gear — Timing	1

 ★ Included in Gasket Set—Part No. 496117.

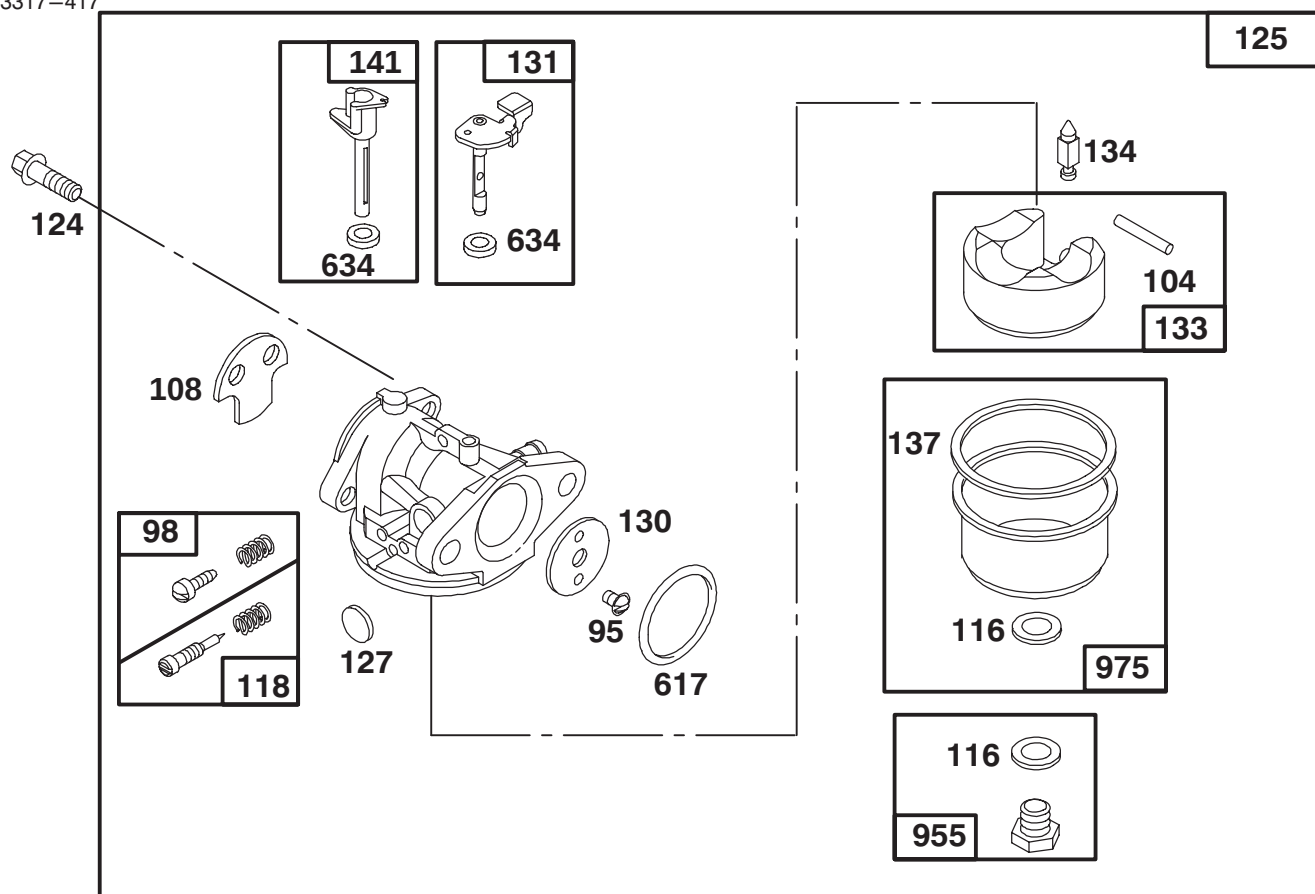

Assemblies include all parts shown in frames.




ENGINE BRIGGS & STRATTON MODEL 122802-3214-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw - Throttle Valve Mtg.	1
98	398185	Screw - Idle Adjustment	1
●104	231371	Pin - Float Hinge	1
108	223471	Valve - Choke	1
●◆116		Gasket - Sealing (Sold in Kit Only)	1
●118	493765	Valve - Needle	1
124	94525	Screw - Carburetor Mtg.	1
125	494216	Carburetor	1
●127		Plug - Welch (Sold in Kit Only).	1
130	223470	Valve - Throttle	1
131	493267	Shaft - Throttle	1

Ref. No.	Part No.	Description	No. Used
133	398187	Float Assy. - Carburetor	1
●134	398188	Valve - Inlet (Includes Seat)	1
●◆137		Gasket - Bowl (Sold in Kit Only).	1
141	494218	Shaft - Choke	1
●◆617	270344	Seal - Fuel Intake Tube	1
●◆634		Washer - Shaft (Sold in Kit Only).	1
955	493763	Screw - Bowl Mtg. (Std.) Note: 494870 Screw - Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. - Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

   ◆ Included in Carburetor Gasket Set—Part No. 490937.

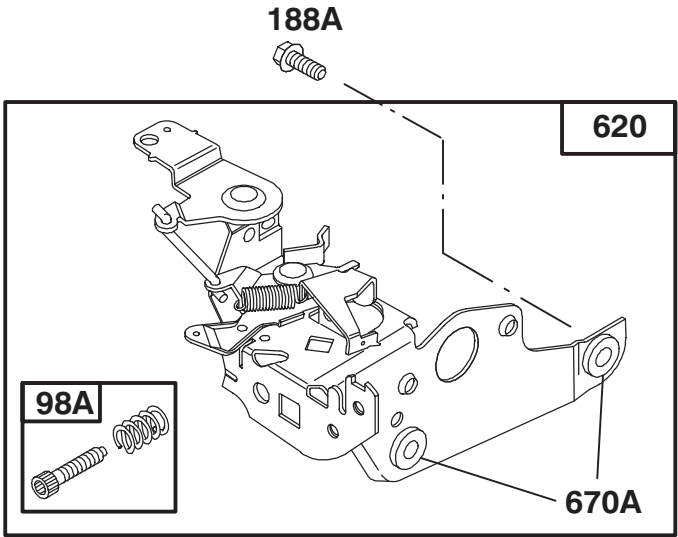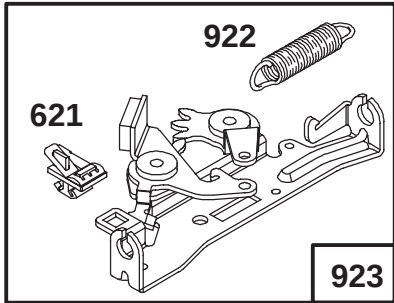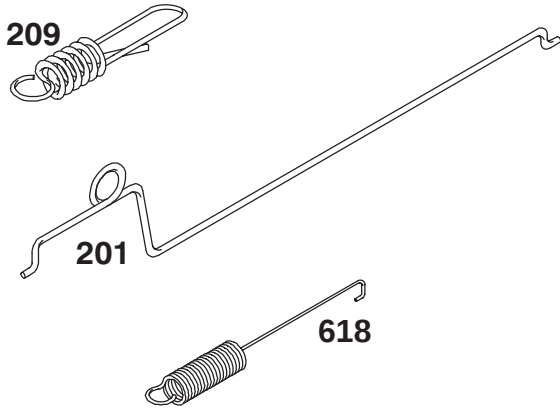


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122802-3214-01

Ref. No.	Part No.	Description	No. Used
98A	493280	Screw — Speed Adjust	1
188A	94644	Screw — Hex. Head	1
201	262579	Link — Governor	1
209	262662	Spring — Governor	1
258	94512	Screw — Hex. Head	1
618	262749	Spring — Return	1

Ref. No.	Part No.	Description	No. Used
620	495975	Bracket — Carburetor	1
621	396847	Switch — Stop	1
670A	493823	Spacer — Bracket	1
922	262640	Spring — Brake	1
923	493442	Brake Assembly	1

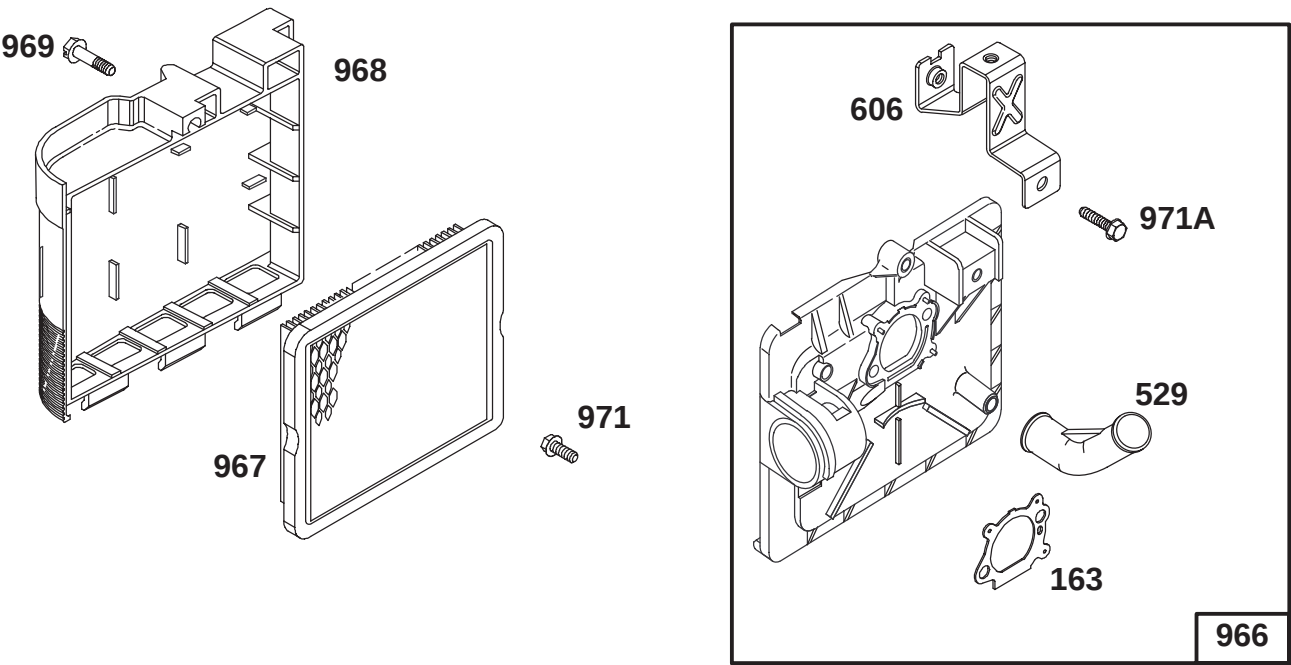 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122802-3214-01

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket – Air Cleaner	1
529	281299	Grommet – Breather	1
606	224815	Strap – Bracket	1
966	496116	Base – Air Cleaner	1
967	491588	Filter – Air	1

Ref. No.	Part No.	Description	No. Used
968	281340	Cover – Air Cleaner	1
969	94120	Screw – Cover Mtg.	1
971	94121	Screw – Air Cleaner	1
971A	94749	Screw – Hex. Head	1

 ★ Included in Gasket Set—Part No. 496117.

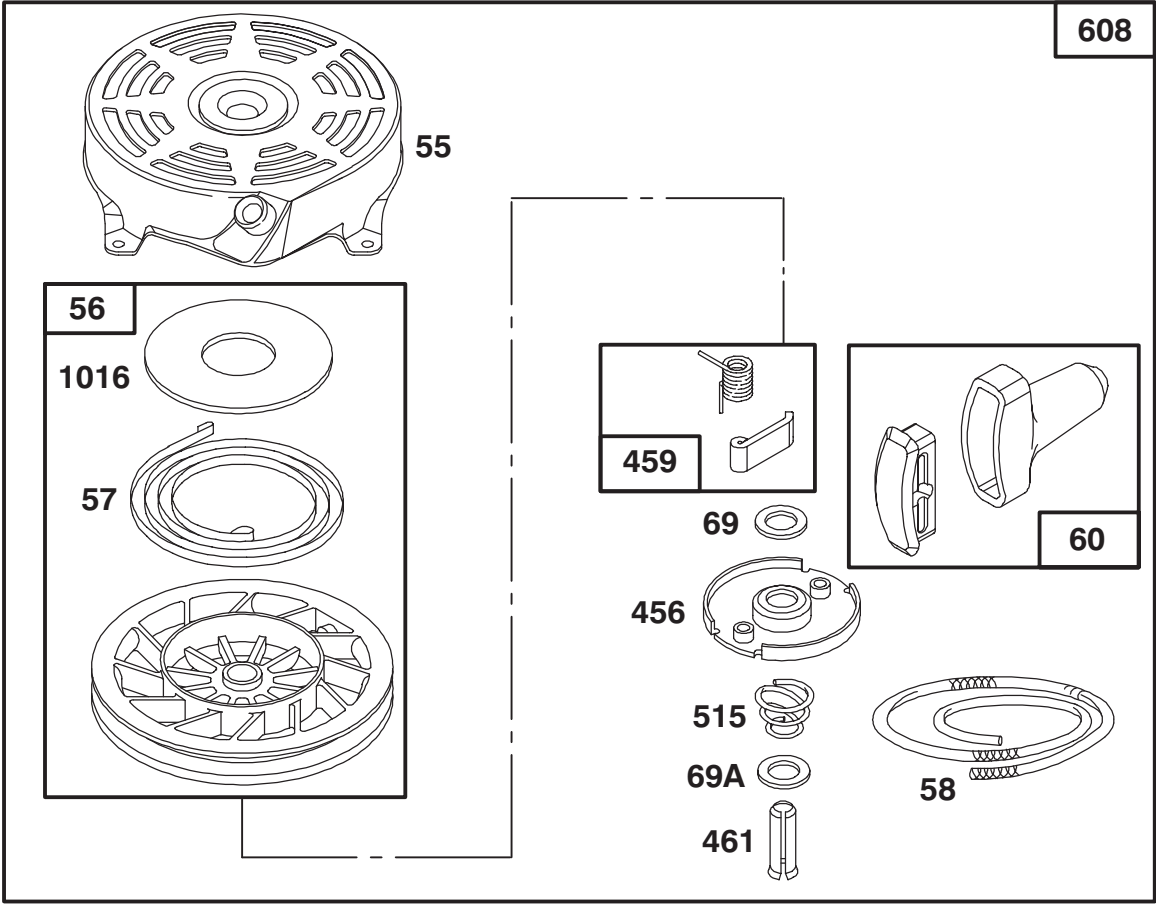


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122802-3214-01

Ref. No.	Part No.	Description	No. Used
55	492831	Housing – Rewind Starter	1
56	493824	Pulley – Rewind Starter	1
57	262594	Spring – Rewind Starter	1
58	280399	Rope – Rewind Starter	1
60	393152	Handle – Rewind Starter	1
69	280973	Washer – Rewind Starter	1
69A	224322	Washer – Rewind Starter	1
456	224321	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	492833	Pawl – Starter	1
461	262626	Pin – Starter	1
515	262625	Spring – Torsion	1
608	493295	Starter Assy. – Rewind Includes: 94128 Screw – Hex. Head 92987 Nut – Hex.	1
1016	224278	Cover – Rewind Starter	1




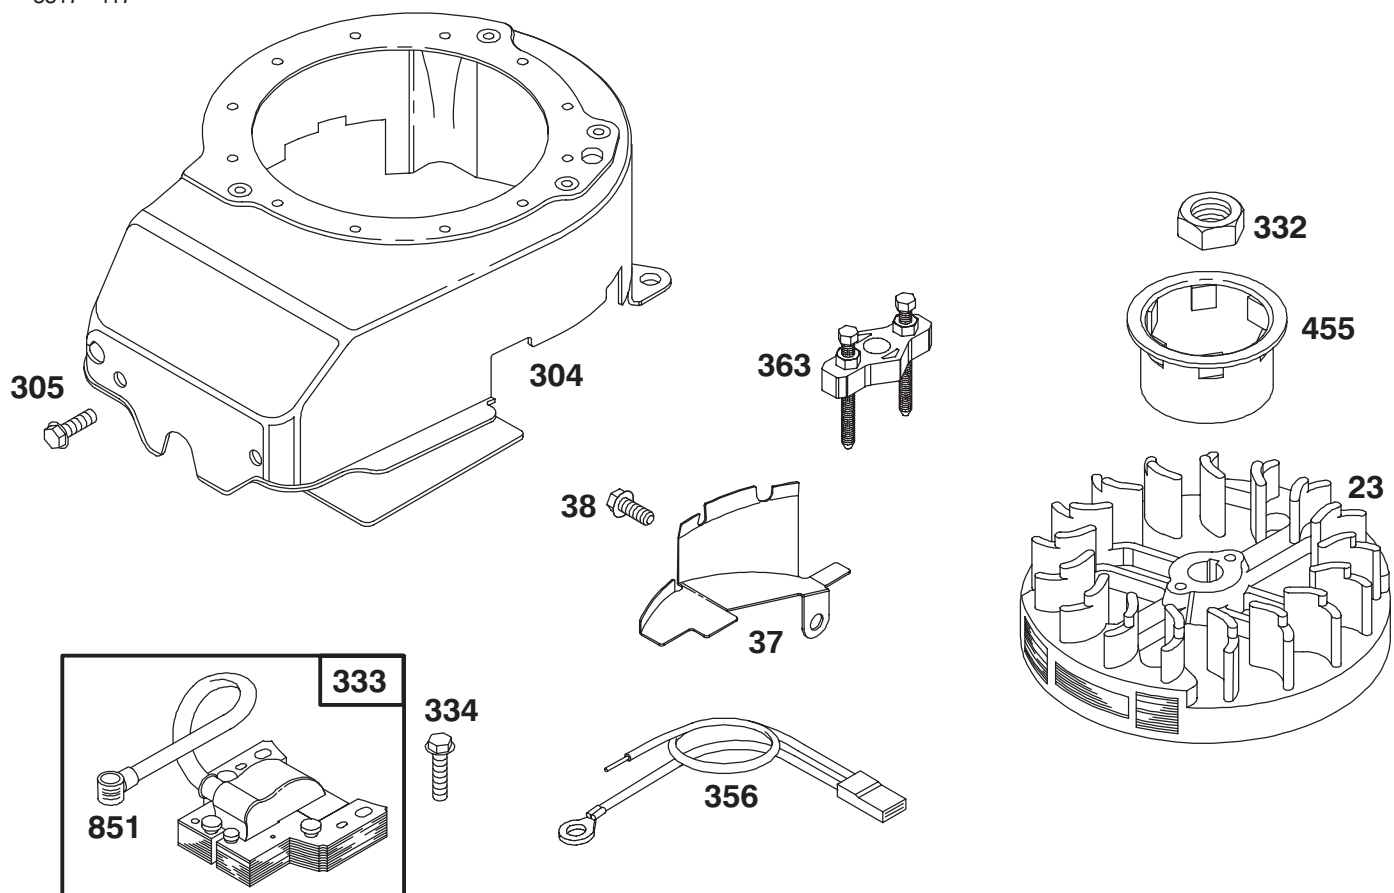 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122802-3214-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard – Flywheel	1
38	94608	Screw – Hex. Hd.	1
304	493293	Housing – Blower	1
305	94786	Screw – Sem	1
332	92284	Nut – Flywheel	1

Ref. No.	Part No.	Description	No. Used
333	802574	Armature – Magneto	1
334	94731	Screw – Sem	1
356	398808	Wire – Ground	1
363	19069	Puller – Flywheel	1
455	224250	Cup – Starter	1
851	221798	Terminal – Ignition Cable	1

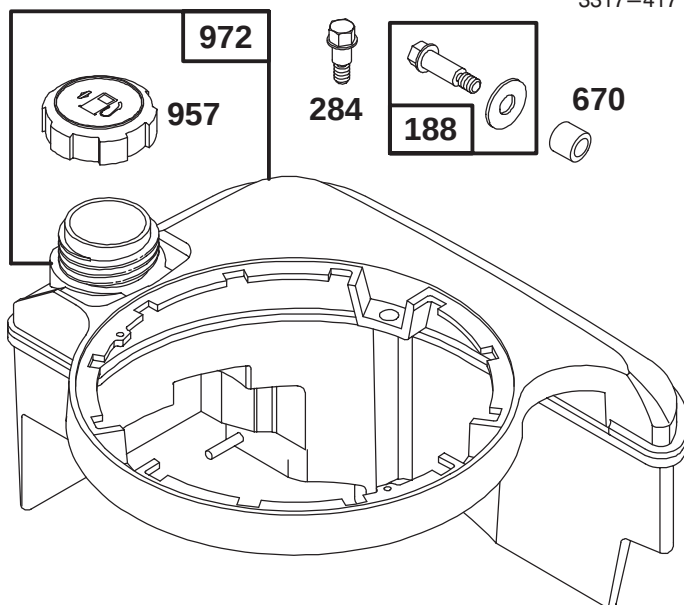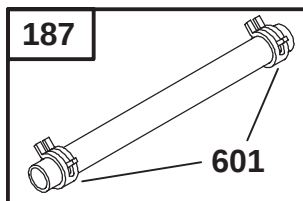  
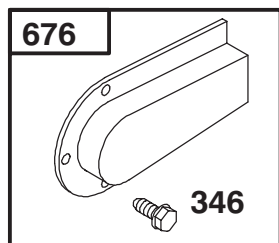 
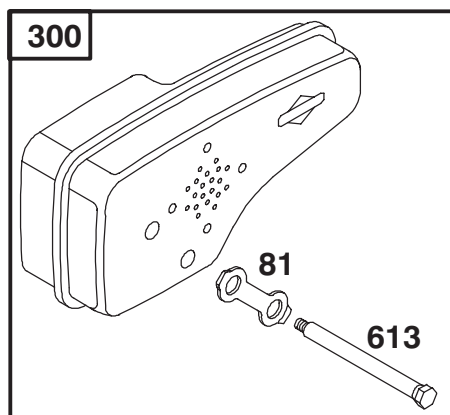 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122802-3214-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188	398540	Screw – Tank Mounting	1
284	94511	Screw – Hex. Head	1
300	490547	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1

Ref. No.	Part No.	Description	No. Used
601	93807	Clamp – Hose	1
613	94231	Screw – Muffler Mtg.	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

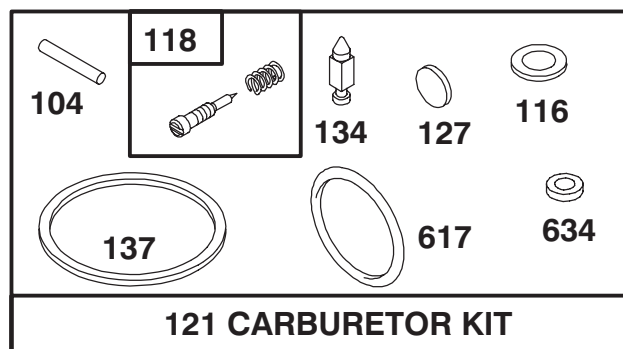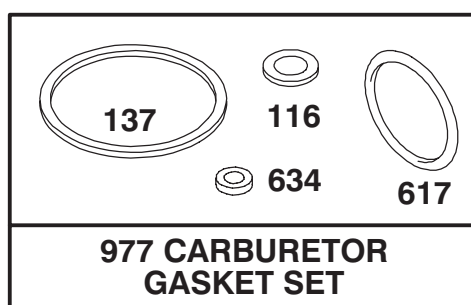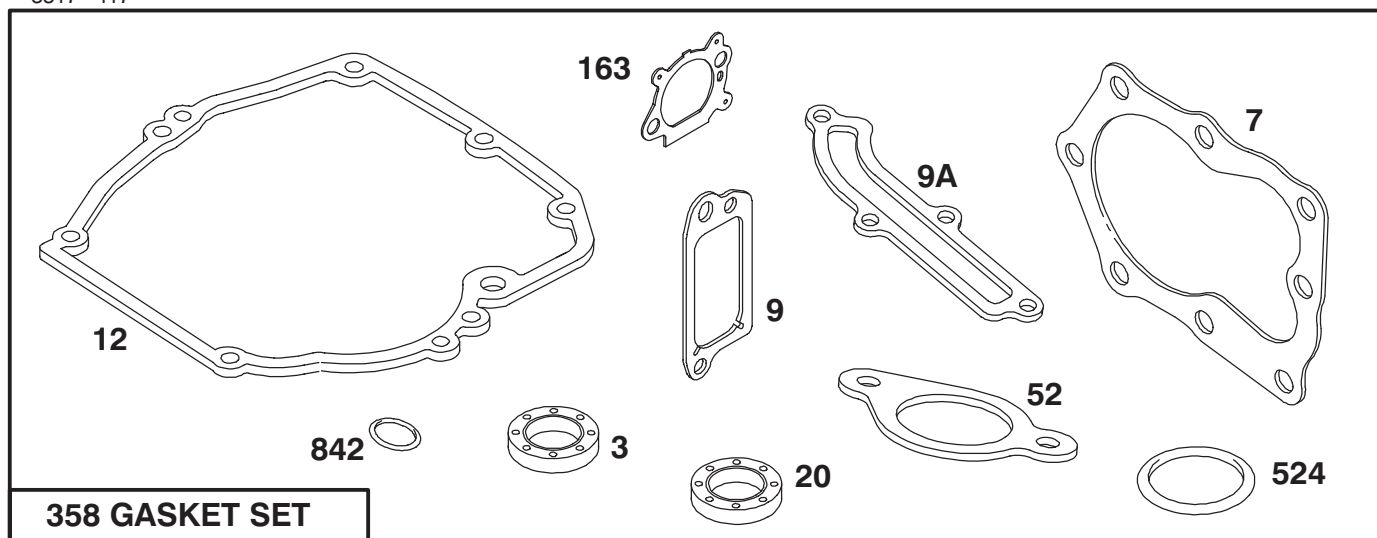   

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122802-3214-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272200	Gasket – Cylinder Hd.	1
★9	272481	Gasket – Valve Cover	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
◆116		Gasket – Sealing (Sold in Kit Only)	1
●118	493765	Valve – Needle	1
121	493762	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
◆137		Gasket – Bowl (Sold in Kit Only).	1
★163	272653	Gasket – Air Cleaner	1
358	496117	Gasket Set	1
★524	280393	Seal – Filler Tube	1
◆617	270344	Seal – Fuel Intake Tube	1
◆634		Washer – Shaft (Sold in Kit Only)	1
★842	280966	Seal – O-Ring	1
977	490937	Gasket Set – Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 496117.

LAWN-BOY PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
146046	Plate – Blade Driver	5 5 1	92-1002	Bail – Flywheel Brake	8 2 1
612079	Blade – 48cm	5 6 1	92-1057	Bolt – Shoulder	6 11 2
614578	Gearcase	7 10 1	92-2271	Pulley – Driver	5 1 1
614596	Gear 34 Tooth	7 18 1	92-5412	Stop – Pivot	8 1 2
614668	Cover – Gear Case	7 2 1	92-7720	Guide – Rope	8 14 1
614696	Shaft – Intermediate	7 4 1	92-7729	Anchor – Cable S.P. Upper	8 5 1
16-8889	Housing	3 28 1	92-7887	Screw – Mounting	4 2 2
26-0670	Bolt – Blade	5 9 1	92-8615	Decal – Shroud	4 8 1
36-4780	Washer – Thrust	7 17 3	92-8626	Spacer – Blade	5 7 1
36-4791	Washer	7 5 2	92-8800	Handle	8 17 1
38-7820	Bearing – Ball	7 15 1	92-8806	Screw – Hex Hd. Cap	3 10 2
40-1940	Washer	3 24 2	92-8807	Hub – Blade Driver	5 4 1
49-2040	Screw – Taptite	7 1 4	92-8810	Wheel & Tire Assembly	3 25 2
55-3760	Pinion – 15 Tooth	7 3 1	92-8811	Bolt – Wheel	3 26 2
60-8750	Bushing	7 6 2	92-8818	Screw – Hex Hd. Cap	3 30 2
60-8850	Bushing – Output	7 9 2	92-8819	Nut – Lock	3 23 2
60-8890	Gear – Bevel Pinion	7 16 1	92-8829	Decal – Recoil	4 1 1
62-6660	Spacer	7 11 1	92-8835	Decal – Deck 400XS	3 27 1
63-8590	Screw	6 7 2	92-8883	Cover – XTE	4 4 1
65-2720	Ring – Retaining	6 13 4	92-8890	Bag – Grass	9 3 1
65-4710	Ring – Friction	6 20 2	92-9300	Spring – Counterbalance	6 18 1
65-4720	Spring – Compression	6 14 2	92-9301	Rod – Link	6 23 1
65-4740	Washer – Thrust Keyed	6 16 4	92-9304	Pivot – Front	3 22 1
65-4750	Gear – Pinion	6 17 2	92-9310	Arm – R.H. Pivot	6 27 1
65-4760	Washer	6 19 2	92-9311	Arm – L.H. Pivot	6 30 1
65-5210	Screw – Thread Forming	3 7 2	92-9313	Spacer – Door	3 15 2
66-6040	Key – Rocking R.H.	6 * 1	92-9315	Cable – Flywheel Brake	8 8 1
66-6050	Key – Rocking L.H.	6 15 1	92-9316	Cable – Traction	8 7 1
71-3750	Ramp – Grass Bag	9 1 1	92-9318	Wheel & Tire Assembly	6 9 2
71-7770	Plate – Securing Rear	6 26 2	93-4105	Decal – Danger	3 1 1
71-7840	Rod – Trigger	6 3 1	93-4379	Cable – Throttle	8 13 1
71-7860	Grip – Upper	3 8 1	93-7159	Knob	8 10 4
71-7870	Grip – Lower	3 3 1	93-7161	Spacer – Handle	3 16 1
71-7890	Guide – Rear Belt	3 31 1	93-7162	Spacer – Handle	3 17 2
71-7900	Cap – L.H. Hinge Bolt	3 11 1	93-7266	Decal – Operation	8 18 1
71-7910	Cap – R.H. Hinge Bolt	3 6 1	2210-249	Clamp – Casing	4 10 1
71-7920	Cover – Belt	3 29 1	2210-316	Stop – Rope	4 3 1
71-7930	Trigger – HOC	3 5 1	321-48	Screw – Hex Hd. Screw	8 4 1
71-7960	Guide – Belt	5 2 1	321-49	Screw – Hex Hd. Cap	8 16 1
71-7980	Indicator – H.O.C.	6 24 1	321-53	Screw – Hex Hd. Cap	8 15 1
71-7990	Ramp – Discharge	3 18 1	3253-22	Washer – Lock	5 8 1
71-8060	Spring – Trigger Retainer	6 5 2	3253-33	Washer – Lock	8 12 4
71-8080	Saddle – H.O.C.	6 6 1	3256-24	Washer	7 13 1
71-8180	Frame	9 2 1	3284-5	Pin – Groove	3 4 1
71-8310	Spring – Compression	6 25 1	3290-378	Tie – Cable	8 9 2
71-8830	Retainer – Shaft	3 21 2	3296-5	Nut	7 14 1
71-9450	V-Belt – Gear Case	6 2 1	3296-59	Nut – Lock	6 21 2
71-9600	Case – Gear	6 29 1	3296-73	Nut – Lock	8 6 3
71-9600	Gear Case Ass'y Complete	7 * 1	32112-1	Nut – Push	3 20 1
71-9610	Pulley – Half	7 12 2	32112-13	Nut – Push	6 8 1
71-9620	Shaft – Output	7 7 1	32121-63	Pin – Spirol	7 8 2
71-9630	Bracket – Traction	6 31 1	32144-4	Screw – Tapping	6 1 6
71-9800	Door – Discharge	3 13 1	32144-4	Screw – Tapping	5 3 2
71-9840	Spring – Door	3 12 2	32144-4	Screw – Tapping	3 19 10
71-9850	Retainer – Belt	6 28 1	32144-31	Screw – Tapping	6 4 1
74-1660	Cover – Wheel	6 12 2	32144-70	Screw – Tapping	3 2 1
74-1670	Spacer – Wheel	6 10 2	32144-73	Screw – Hex Washer Head	4 5 3
82-8550	Shield – Muffler	4 6 1	32144-97	Screw – Pan Hd. Phillips	3 9 2
86-7990	Screw – Clamp	4 11 1	32144-102	Screw – Tapping	4 7 3
92-1001	Bail – S.P. Control	8 3 1	32151-93	Ring – Grip	6 22 1

*Not Illustrated

MAINTENANCE RECORD

[illegible]