



**Count on it.**

**Parts Catalog**

**53cm Super Recycler<sup>®</sup> Lawn Mower**

Model No. 20793—Serial No. 31000001 and Up

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations


**AR:** as required  
**ASM:** assembly  
**BBC:** blade brake clutch  
**CARR:** carriage  
**CCW:** counter clock wise  
**CW:** clockwise  
**DEG:** degrees  
**ECM:** electronic control module  
**EXT:** external  
**FH:** flat head  
**GA:** gauge  
**HD:** heavy-duty  
**HF:** hex flange  
**HH:** hex head  
**HHF:** hex head flange  
**HHFTF:** hex head flange thread forming  
**HJ:** hex jam  
**HLH:** hex lag head  
**HOC:** height-of-cut

**HSBH:** hex socket button head  
**HSFH:** hex socket flat head  
**HSH:** hex socket head  
**HWH:** hex washer head  
**HWHTF:** hex washer head thread forming  
**HYD:** hydraulic  
**LH:** left hand  
**NI:** nylon insert  
**NPTF:** national pipe thread fine  
**PFH:** phillips flat head  
**PPH:** phillips pan head  
**PPHTF:** phillips pan head thread forming  
**PRH:** phillips round head  
**PTH:** phillips truss head  
**PTO:** power-take-off  
**RH:** right hand  
**ROPS:** roll-over protection system  
**RRB:** rear roller brush

**SFH:** slotted fillister head  
**SHH:** slotted hex head  
**SHWH:** slotted hex washer head  
**SPH:** slotted pan head  
**SQH:** square head  
**SRH:** slotted round head  
**STD:** standard  
**TAP:** self tapping  
**TTH:** torx truss head


# Contents

Housing and Rear Door Assembly .....	4
Housing Assembly No. 115-2855 .....	5
Front Wheel and Height-of-Cut Assembly .....	6
Transmission, Rear Wheel and Height-of-Cut Assembly .....	7
Engine and Blade Assembly .....	8
Upper Handle Assembly .....	9
Brake Bail Assembly .....	10
Rear Bag Assembly .....	11
Attachments and Accessories .....	12

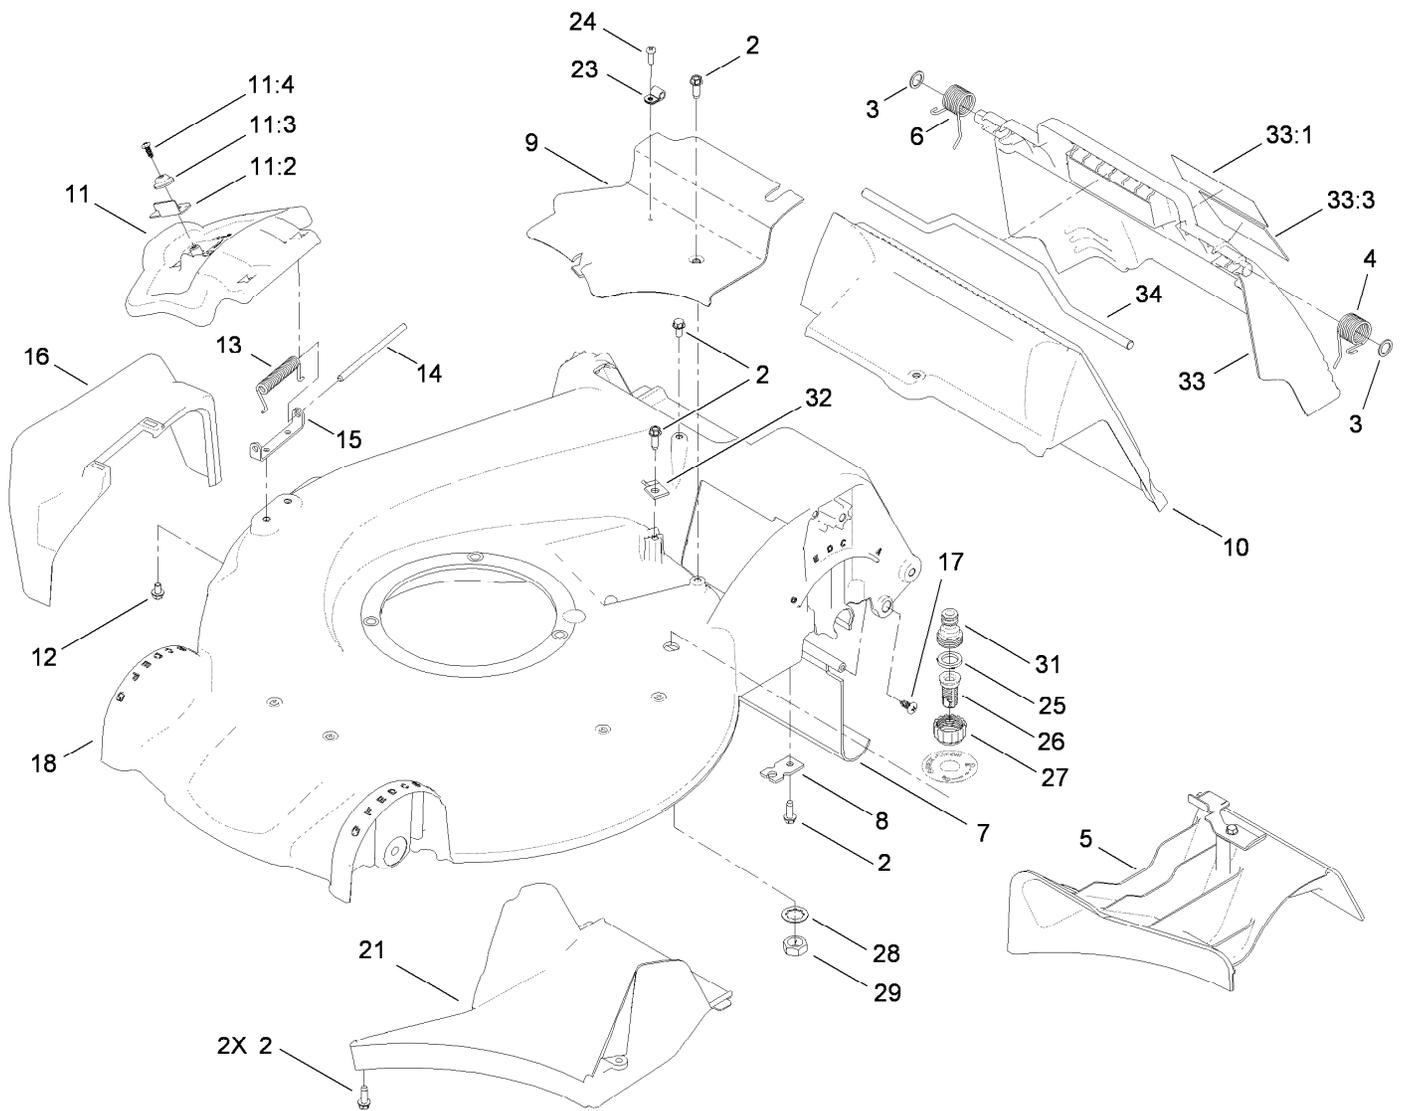


## Housing and Rear Door Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
2	49-2040	6	Screw-HWHTF	17	117-1092	2	Screw-PTH
3	94-8196	2	Washer-Nylon	18	115-2855	1	Housing ASM
4	115-2859	1	Spring-Torsion	21	107-7495	1	Tunnel-Discharge
5	115-8413	1	Mulch Plug ASM	23	98-2256	1	Clamp
6	114-7924	1	Spring-Torsion	24	32144-32	1	Screw
7	114-1586	1	Shield-Trailing	25	112-6438	1	Washer-Seal, Washout Port
8	107-7497	1	Bracket-Cable, Traction	26	112-6400	1	Port-Washout
9	107-7494	1	Cover-Belt	27	112-6401	1	Coupling-Hose, Washout Port
10	114-2668	1	Chute	28	3254-5	1	Washer-Tooth, Internal
11	107-3717	1	Discharge Door ASM	29	3218-6	1	Nut-Jam
11:2	107-0795	1	Latch-Door	31	112-6437	1	Adapter-Connect, Quick
11:3	107-7456	1	Cap-Door	32	62-3720	1	Clamp-Cable
11:4	107-7461	1	Screw-Plastite	33	119-3803	1	Rear Door ASM
12	99-8445	2	Screw-HWH	33:1	114-7982	1	Decal-Warning
13	99-5293	1	Spring-Torsion	33:3	104-7908	1	Decal-Warning
14	99-5291	1	Rod-Cover	34	117-9378	1	Rod-Deflector
15	112-6416	1	Bracket-Cover				
16	108-3753	1	Chute-Discharge, Side				

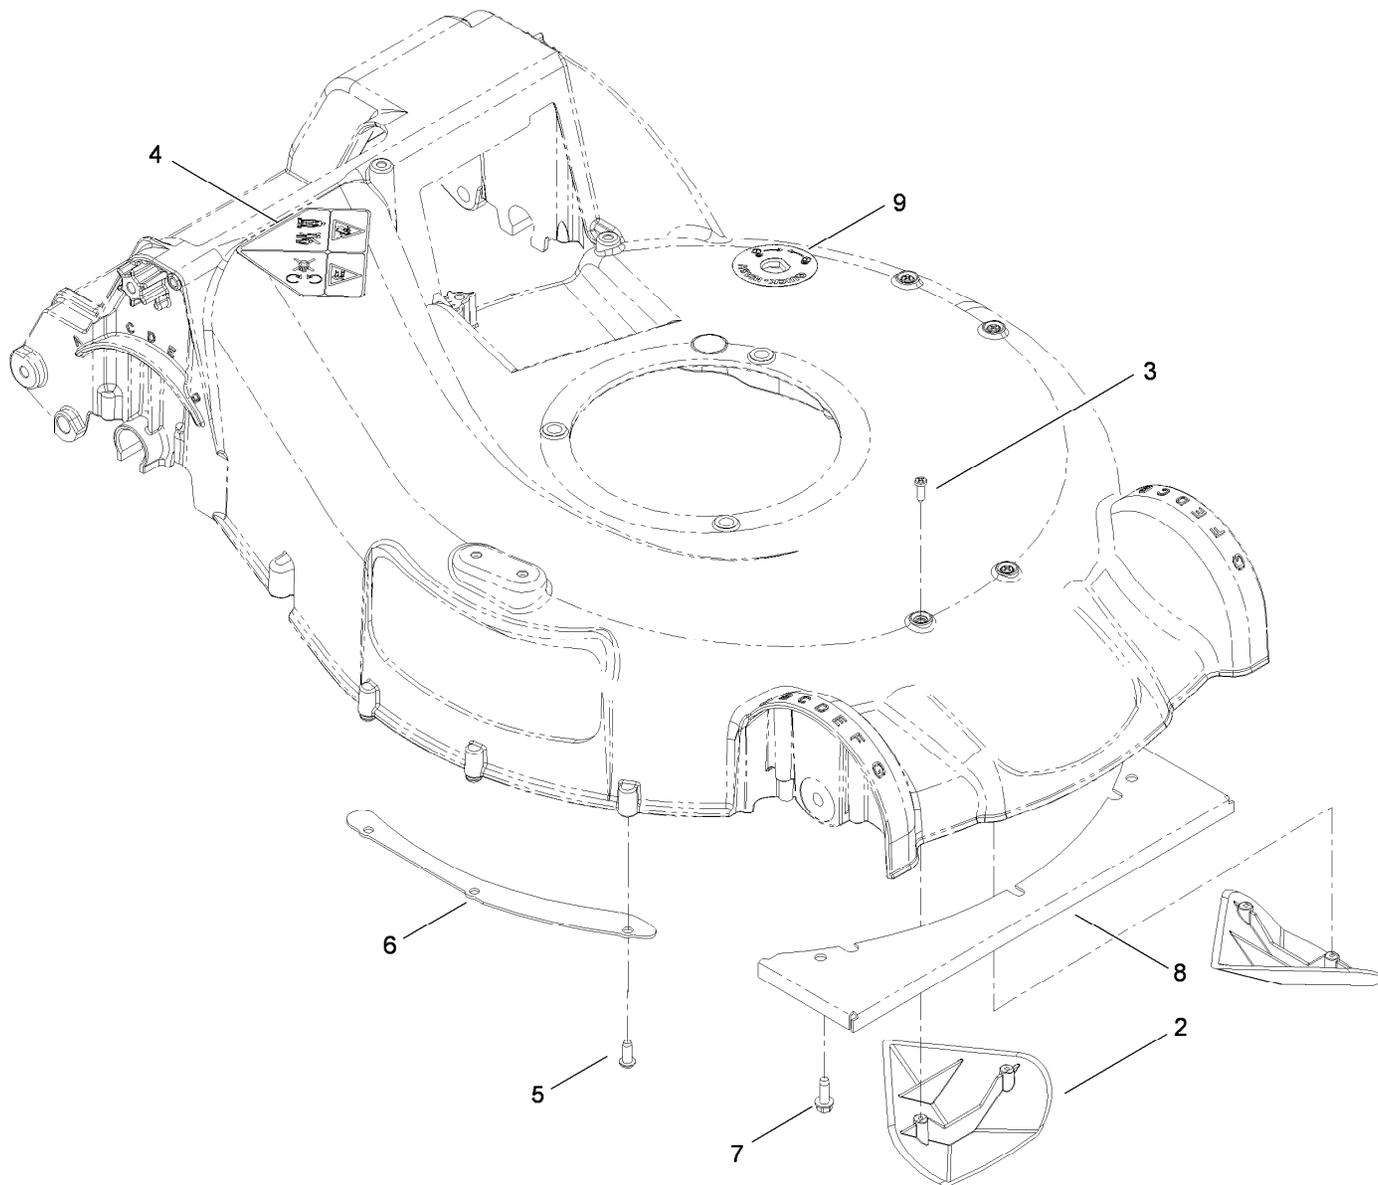


## Housing Assembly No. 115-2855

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	108-3798	2	Kicker-Housing
3	32144-111	4	Screw-PPH
4	112-8760	1	Decal-Danger
5	63-8590	3	Screw
6	105-1316-03	1	Sheet-Lip
7	49-2040	3	Screw-HWHTF
8	108-3797-03	1	Plate-Cover, Front
9	112-8867	1	Decal-Port, Washout

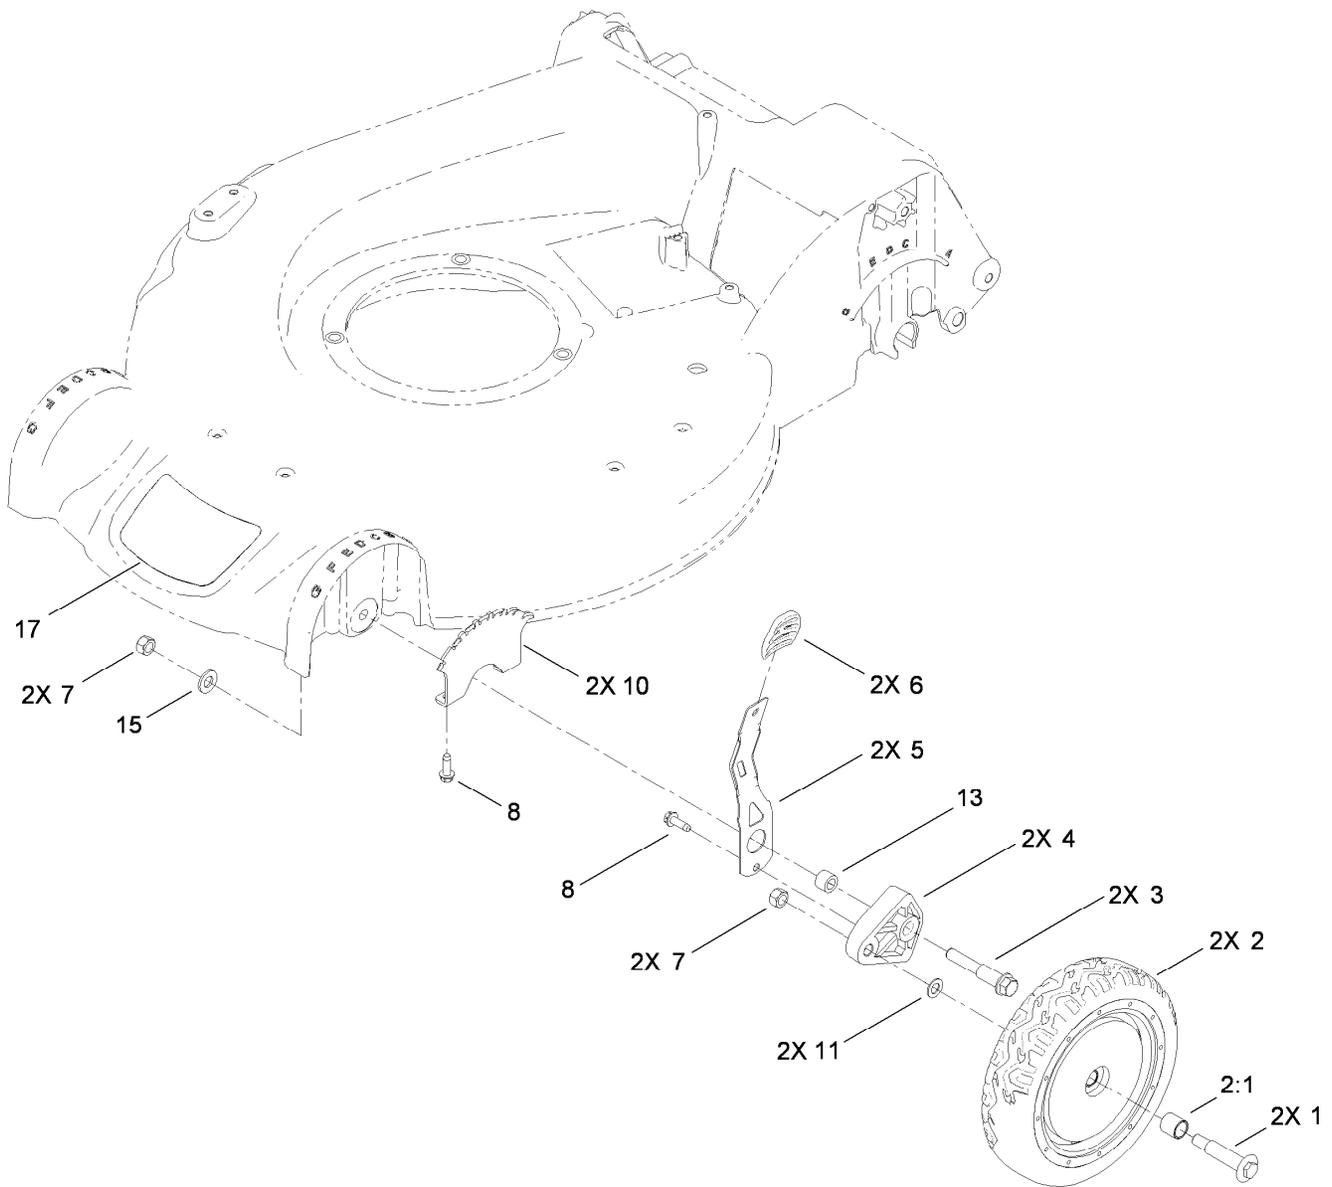

## Front Wheel and Height-of-Cut Assembly

Ref.	Part Number	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3706	2	8 Inch Wheel ASM
2:1	27-6250	2	Bushing
3	114-3467	2	Screw-Shoulder
4	107-7492	2	Arm-Pivot
5	107-7491	2	Arm-Spring
6	105-3042	2	Knob-Lever, HOC
7	603773	4	Nut
8	49-2040	13	Screw-HWHTF
10	107-7478	4	Plate-HOC
11	40-1940	2	Washer
13	52-2480	2	Spacer-Wheel
15	3256-24	2	Washer-Flat
17	114-2608	1	Decal-Housing

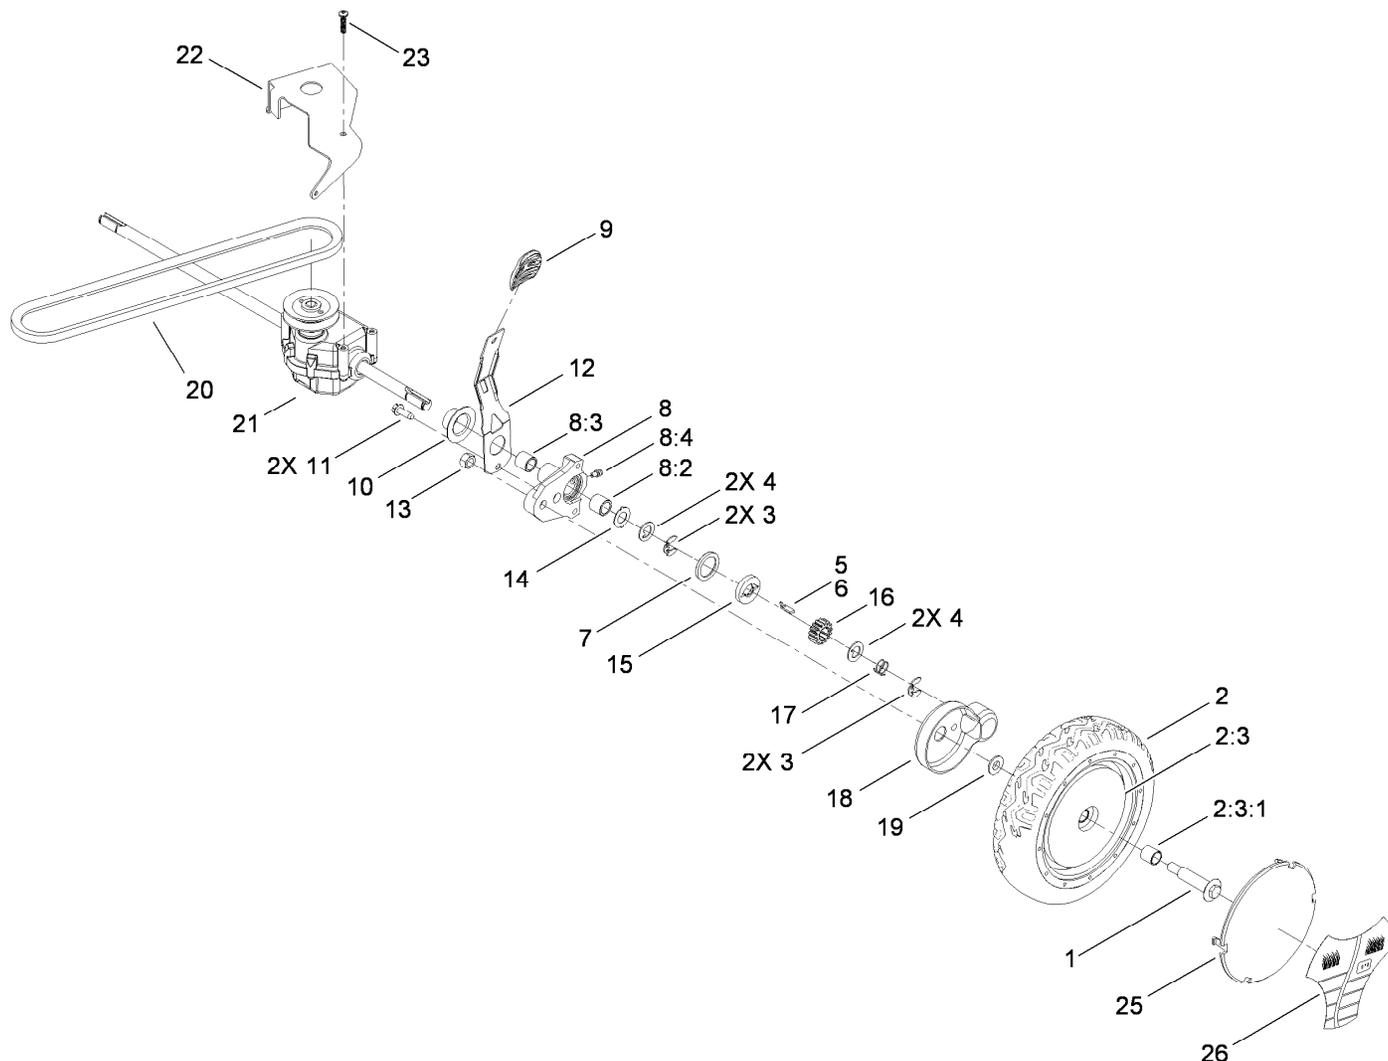


## Transmission, Rear Wheel and Height-of-Cut Assembly

Ref.	Part Number	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3707	2	8 Inch Wheel And Gear ASM
2:3		1	8 Inch Wheel ASM ■
2:3:1	27-6250	2	Bushing
3	65-2720	4	Ring-Clip, Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH ●
7	65-4710	2	Ring-Friction
8	100-8774	2	Pivot Arm ASM
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
8:4	302-56	1	Fitting-Grease
9	105-3042	2	Knob-Lever, HOC
10	42-3520	2	Cap-End

Ref.	Part Number	Qty.	Description
11	49-2040	2	Screw-HWHTF
12	107-7491	2	Arm-Spring
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover, Wheel
20	92-1043	1	V-Belt
21	115-4560	1	Transmission ASM
22	114-7977-03	1	Bracket-Transmission
23	108-7476	3	Screw-Plastite
25	100-6351	1	Cover-Wheel
26	100-1519	1	Label-Wheel, Smart

● Not illustrated

■ Not serviced separately

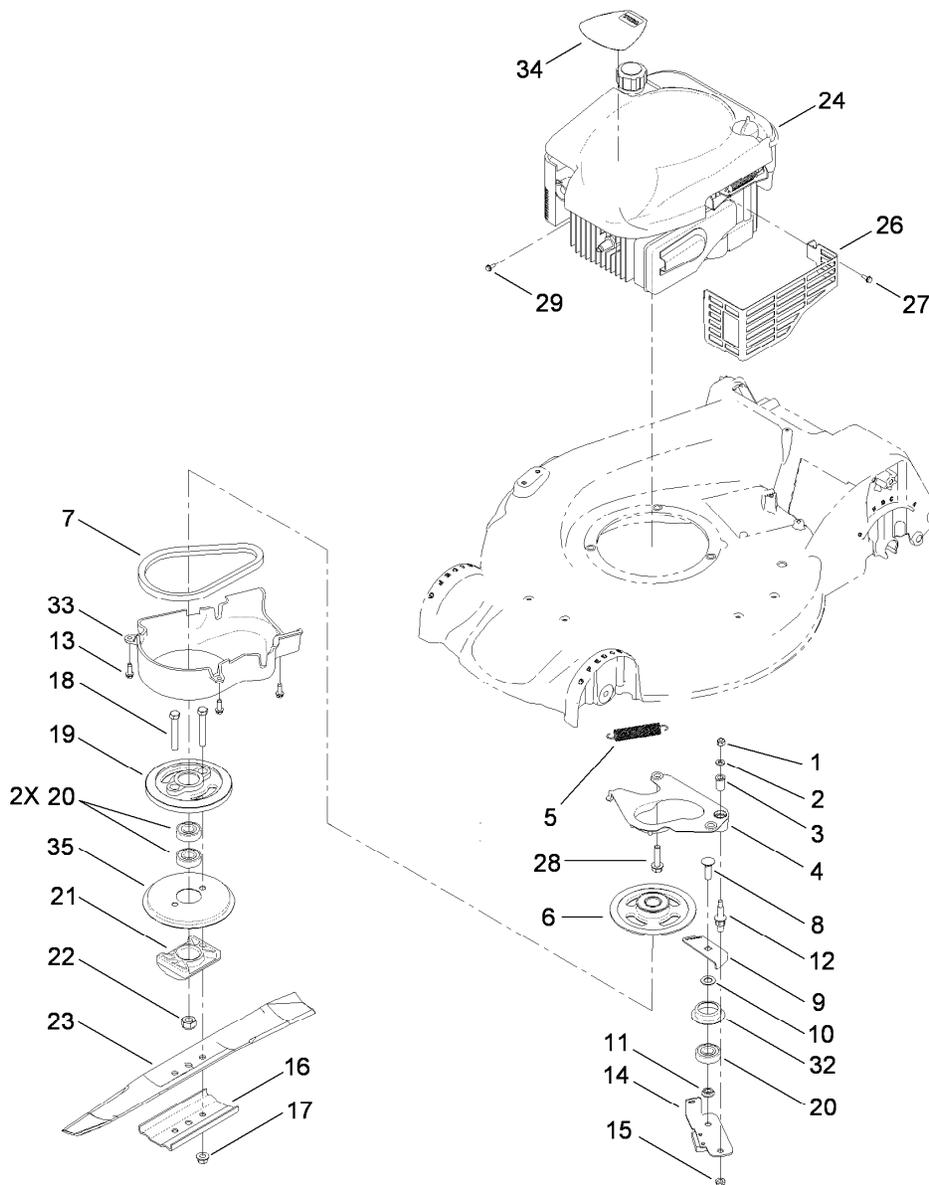


## Engine and Blade Assembly

Ref.	Part Number	Qty.	Description
1	3296-42	1	Nut-Lock, NI
2	3256-16	1	Washer-Flat
3	107-0797	1	Bushing
4	107-0761	1	Plate-Anchor
5	108-3792	1	Spring-Tension, Brake
6	117-5970	1	Pulley-BBC
7	110-1790	1	Belt-BBC
8	3231-25	1	Screw-CARR
9	107-7471	1	Plate-Guide
10	605256	1	Washer
11	107-0758	1	Spacer-Bearing
12	107-0759	1	Bolt-Shoulder
13	49-2040	3	Screw-HWHTF
14	107-7477	1	Brake Arm ASM
15	603773	2	Nut
16	108-3766-03	1	Support-Blade
17	54-9190	2	Nut-Lock

Ref.	Part Number	Qty.	Description
18	3211-42	2	Screw-HH
19	107-0754	1	Drum
20	100-1048	3	Bearing-Ball
21	107-7487	1	Support-Blade
22	108-9342	1	Nut-Hex
23	108-3762-03	1	Blade-Recycling
24		1	Engine-B&s, 126T02-0261-B1 ● ■
26	104-7577-03	1	Shield-Muffler
27	32144-1	3	Screw-Taptite
28	32144-102	3	Screw-HWH
29	32144-112	1	Screw-HWH
32	108-3790	1	Retainer-Belt
33	107-7488	1	Cover
34	115-4654	1	Decal-Shroud
35	108-3787	1	Disc


● Not serviced separately

■ Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

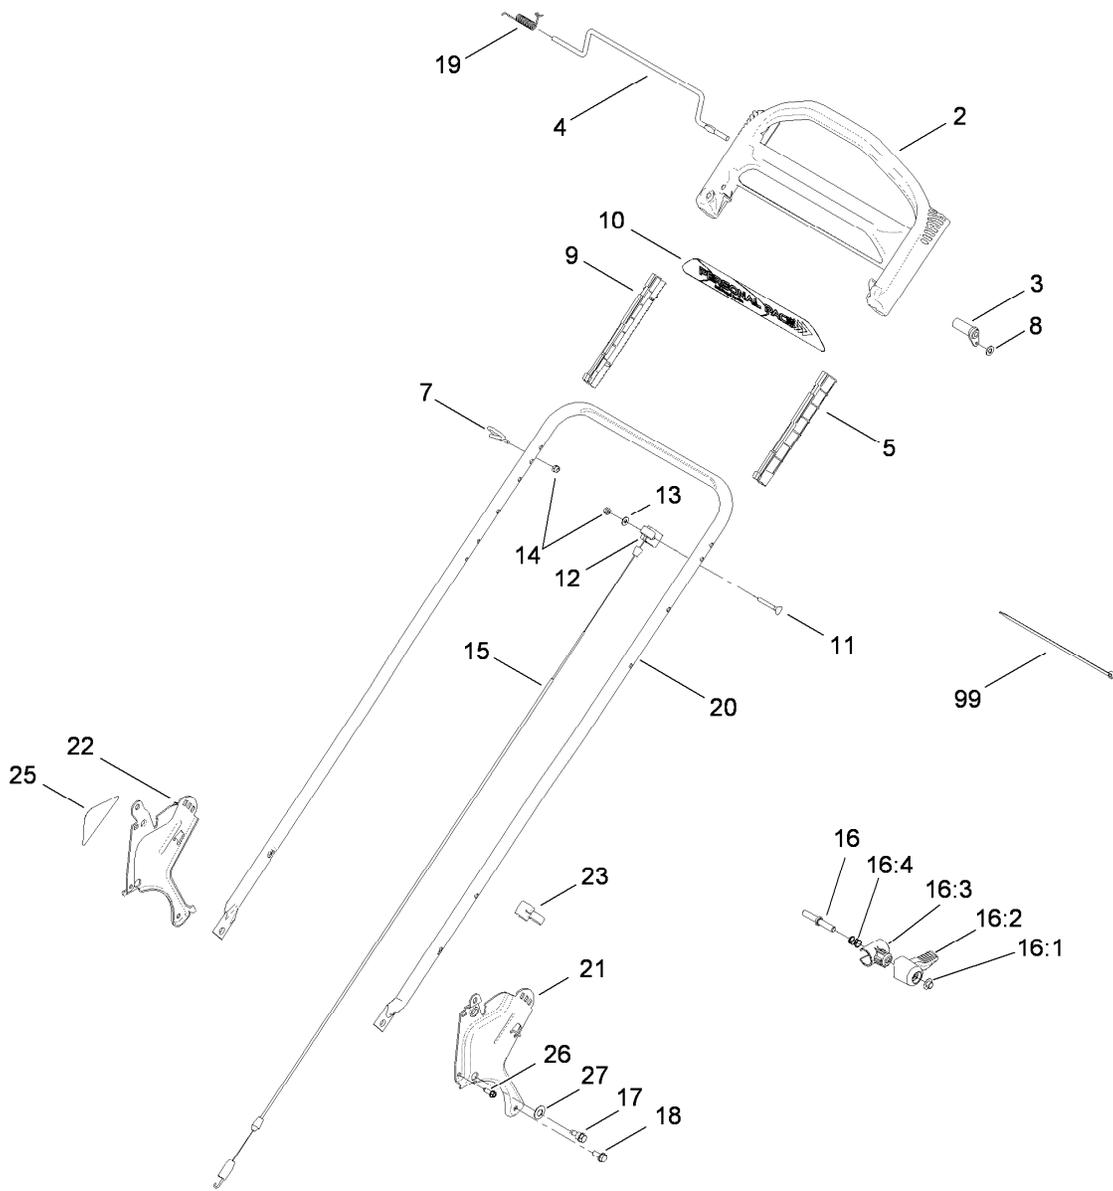


## Upper Handle Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	104-8678	1	Handle-Control	16:2	114-7995	1	Lever
3	99-1589	1	Lever-Traction	16:3	114-7996	1	Anchor-Spring
4	99-1588	1	Bar-Control, Traction	16:4	115-2858	1	Spring-Compression
5	105-6842	1	Guide-LH	17	115-1958	2	Bolt-Shoulder
7	86-9671	1	Guide-Rope	18	32144-11	2	Screw-HWHTF
8	3256-23	1	Washer-Flat	19	104-8690	1	Spring-Torsion
9	105-6841	1	Guide-RH	20	115-1300-05	1	Handle
10	110-7056	1	Decal-Handle	21	114-2671-03	1	Bracket-Handle, LH
11	321-50	1	Screw-HH	22	114-2672-03	1	Bracket-Handle, RH
12	99-5239	1	Anchor-Cable	23	106-6805	1	Guide-Cable
13	3256-1	1	Washer-Flat	25	115-2884	1	Decal-Instruction
14	3296-73	2	Nut-Lock, NI	26	49-2040	2	Screw-HWHTF
15	108-8158	1	Cable-Traction	27	112-9972	2	Washer-Conical, Spring
16	115-2860	2	Quick Release ASM	99	614249	3	Strap-Tie
16:1	109-0917	1	Nut-Push				

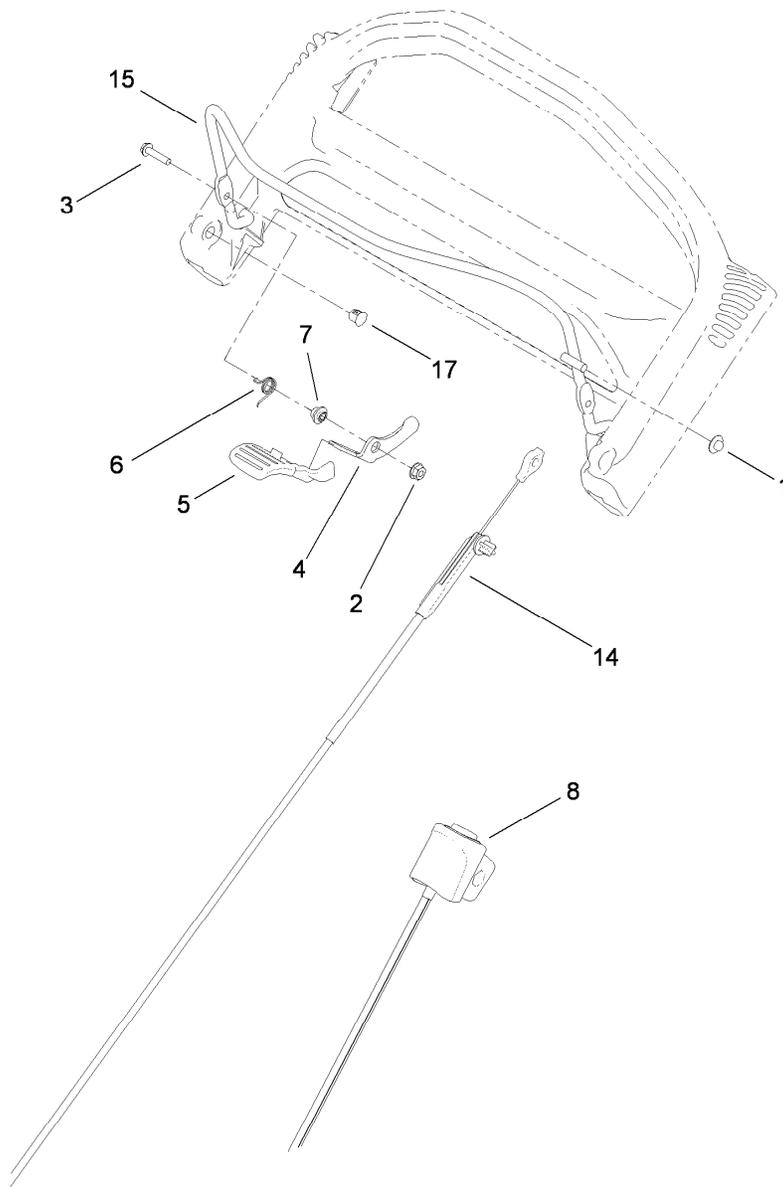

## Brake Bail Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3290-337	1	Nut-Speed
2	32128-17	1	Nut-Lock, Flange
3	106-9169	1	Screw
4	106-6802	1	Lever
5	112-8884	1	Knob-BBC
6	107-7462	1	Spring-Torsion
7	107-7463	1	Spacer
8	117-5975	1	Switch Housing ASM
14	108-8155	1	Cable ASM
15	108-3788-03	1	Bail-Brake
17	104-9368	1	Plug-Dome

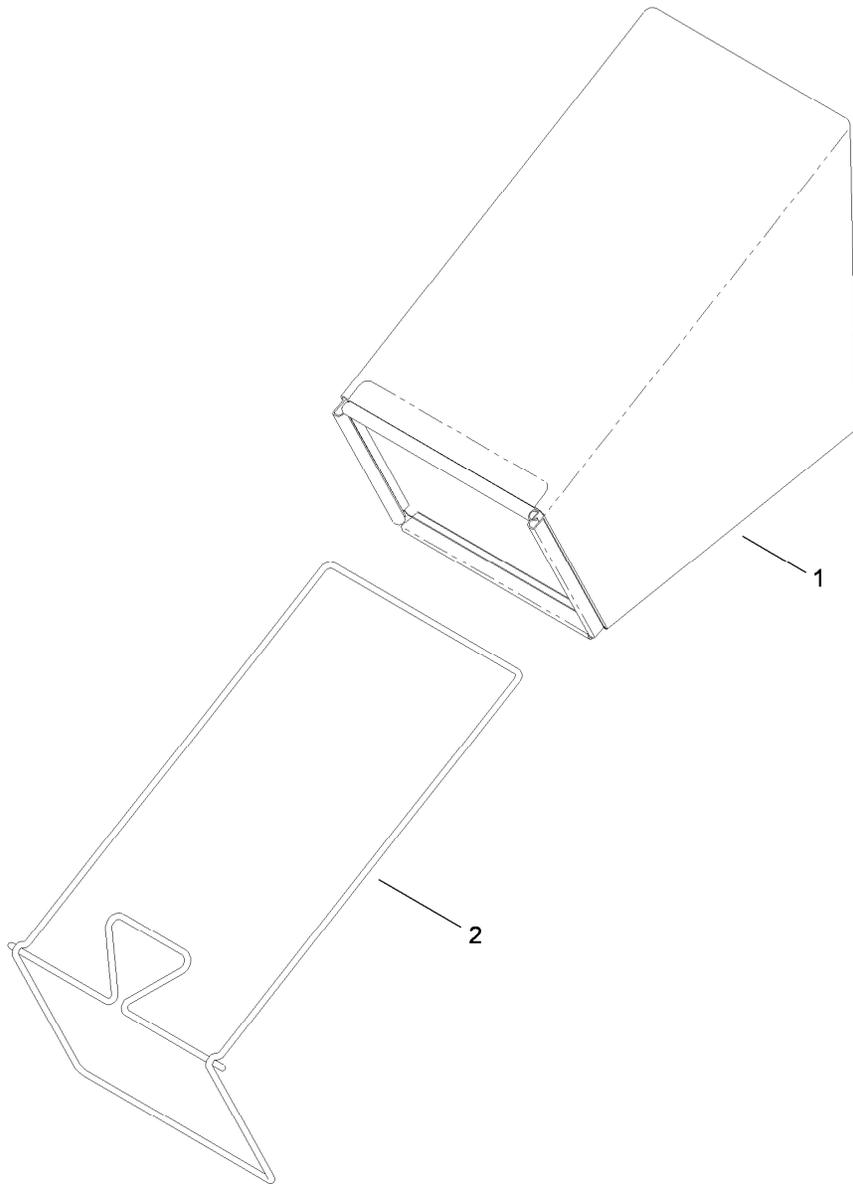

## Rear Bag Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-2664	1	Grass Bag ASM
2	114-2679-03	1	Frame-Bag

# Attachments and Accessories

## For 20793 53cm Super Recycler Lawn Mower

<b>Product Name</b>	<b>Model/Part</b>
Traction Assist Handle Kit.....	108-8120
Toro Walk Mower Cover.....	490-7462
Plain Walk Mower Cover.....	490-7463
Dethatcher Kit.....	59131

**Notes:**

**Notes:**

**Notes:**



**Count on it.**