 




MODEL NO. 20462-590001-
6900001 & UP
MODEL NO. 20463-590001-
6900001 & UP

**PARTS
CATALOG**

**21" RECYCLER[®]
Mower**

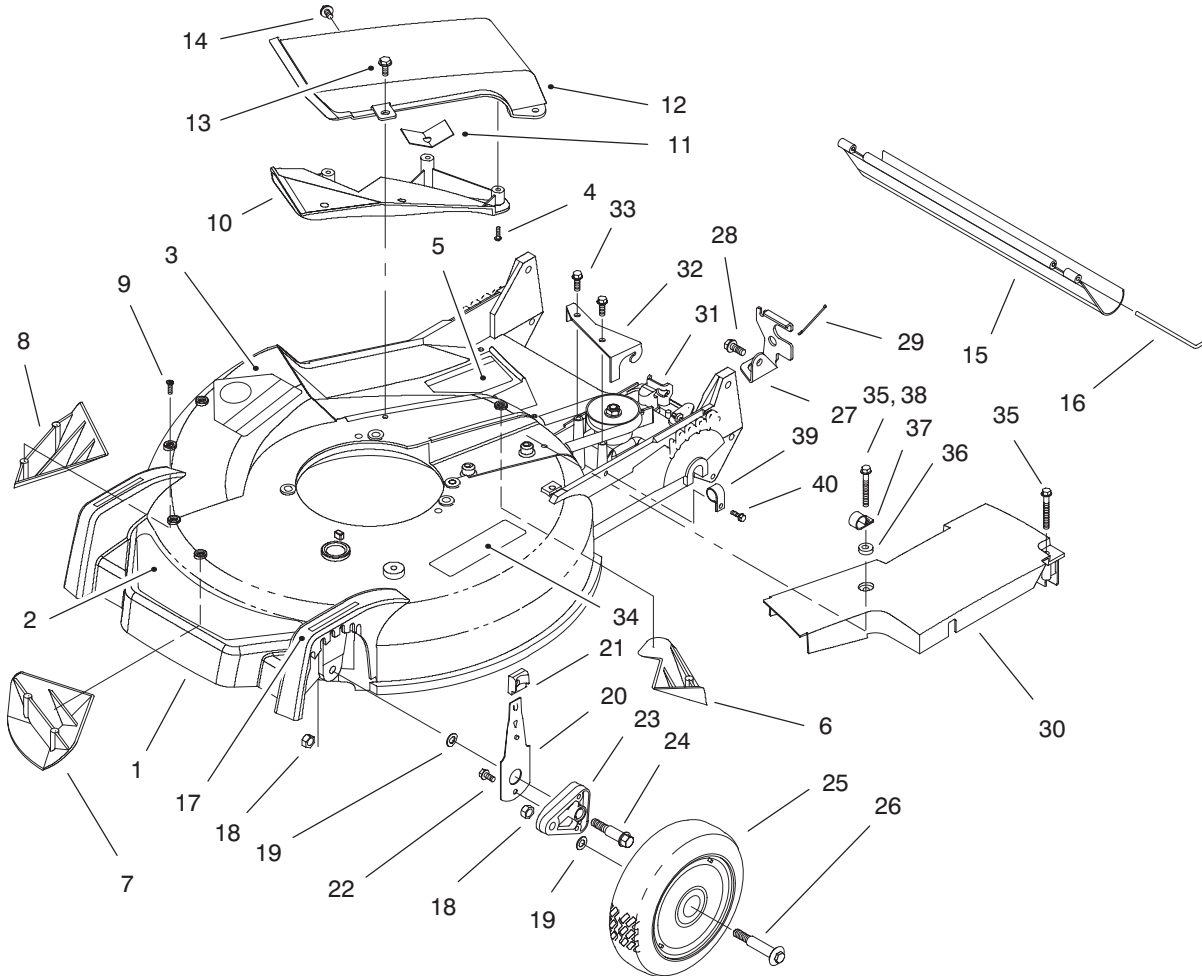


C-2259

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	16-9489	Housing - 21" (Incl. Ref. #3, 5-9 pg. 1 & 34 pg. 2)	1
2	93-3696	Decal - Deck	1
3	39-5770	Decal - Danger	1
4		Screw - PPH	5
5	82-8450	Decal - Danger Deck	1
6	92-1750	Plate - Kicker Rear	1
7	92-1720	Kicker - RH Front	1
8	92-1730	Kicker - LH Front	1
9	32144-111	Screw - PPH	6
10		Deflector - Recycler	1
11		Guard - Cover	1
12	14-4069	Cover - Recycler (Incl. Ref. #4, 10, & 11)	1
13	46-6811	Screw - Hex Washer Hd.	3
14	46-6810	Screw - Hex Washer Hd.	1

Ref. No.	Part No.	Description	No. Used
15	44-0580	Shield - Trailing	1
16	33-3208	Rod - Shield	1
17	92-2279	Decal - HOC	4
18	3296-6	Nut - Lock	6
19	40-1940	Washer	4
20	66-0541	Spring Arm Ass'y - Front	2
21	25-7740	Knob - Arm	4
22	32144-85	Screw - Hex Hd.	4
23	66-0580	Arm - Pivot	2
24	66-0560	Screw - Shoulder	2
25	14-9989	Wheel & Tire Assembly	2
26	27-6232	Bolt - Wheel	4
27	82-5680	Bracket - Adjustment Trac.	1
28	32144-70	Screw - Tapping	4
29	46-7030	Retainer - Cable	1
30	93-4188	Cover - Belt	1
31	62-6673	Gear Case Assembly	1

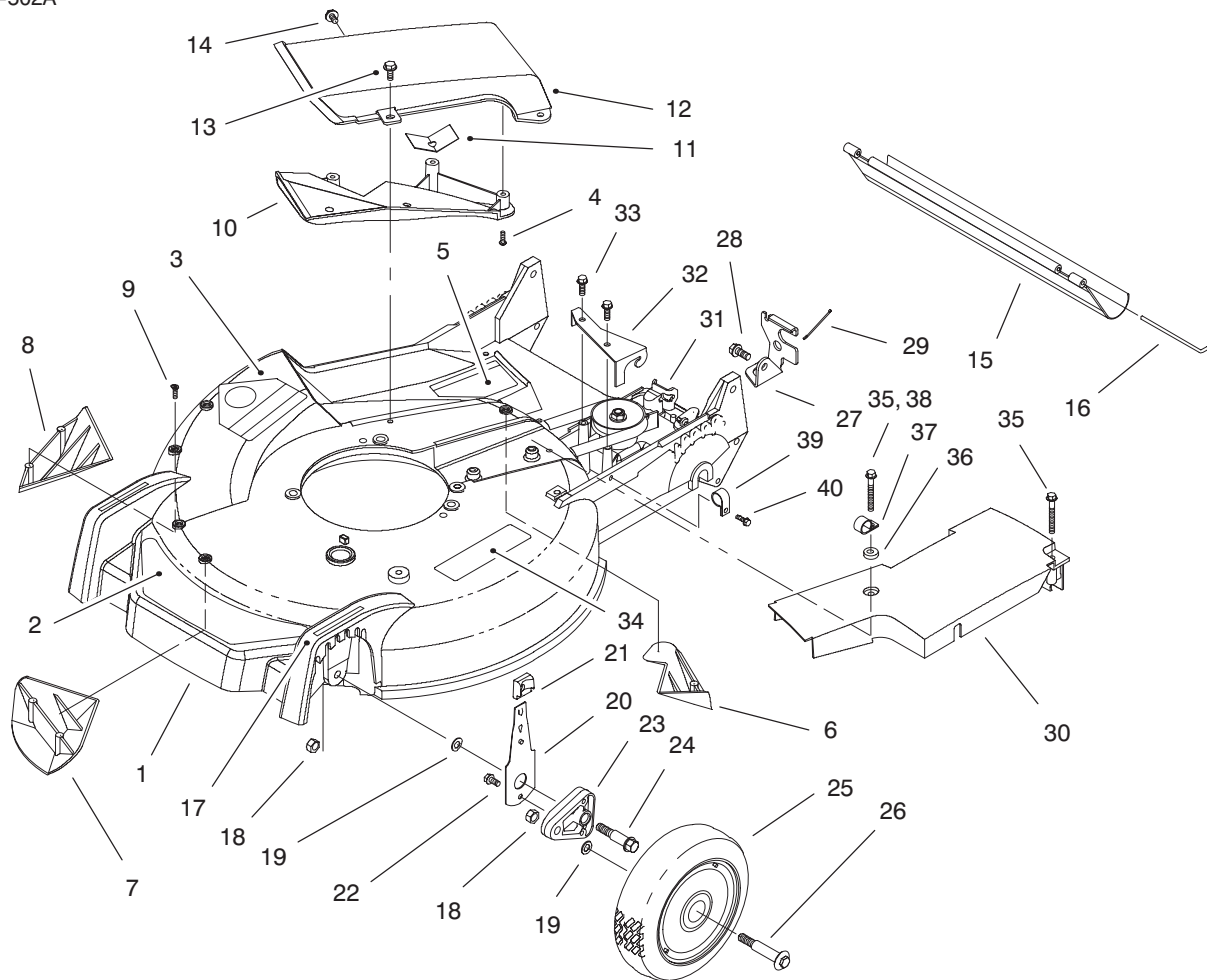 


C-2259

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
32	62-4320	Bracket - Guide Belt	1
33	49-2040	Screw - Hex Hd.	2
34	93-0248	Decal - Warning	1
35	37-7260	Screw - Tapping (Model No. 20462 Only)	2
35	37-7260	Screw - Tapping (Model No. 20463 Only)	1
36	3-5792	Washer (Model No. 20463 Only)	1

Ref. No.	Part No.	Description	No. Used
37	2412-87	Clamp - Cable (Model No. 20463 Only)	1
38	37-7262	Screw - Special (Model No. 20463 Only)	1
39	2412-83	R-Clamp (Model No. 20463 Only)	1
40	32144-112	Screw - Thr'd Form (Model No. 20463 Only)	1

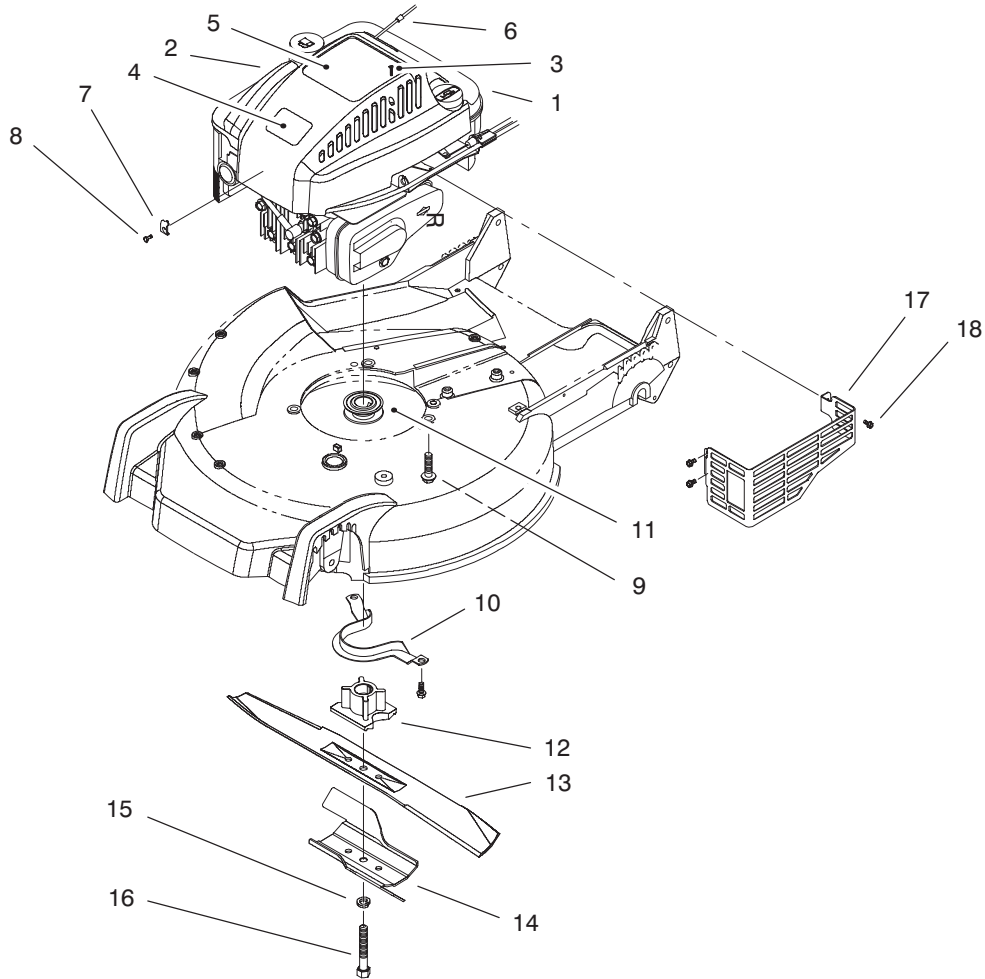 


C-2260

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Engine Assembly	1
2	93-0243	Shroud - QT Wedge	1
3	32144-121	Screw	2
4	92-2289	Plate - Logo Toro	1
5	93-3698	Decal - Engine	1
6	2210-316	Stop - Rope (P/W Eng.)	1
7	2210-249	Clamp - Casing (P/W Eng.)	1
8	93-8470	Screw - Clamp (P/W Eng.)	1
9	32144-102	Screw	3
10	66-0570	Guide - Belt	1

Ref. No.	Part No.	Description	No. Used
11	62-7550	Pulley - Driver	1
12	93-4107	Retainer - Blade	1
13	93-4106	Blade - 21"	1
14	94-1608	Stiffener - Blade	1
15	3253-22	Washer - Lock	1
16	26-0670	Bolt - Blade	1
17	82-8550	Shield - Muffler	1
18	32144-73	Screw - Hex Washer Hd Thread Forming	3

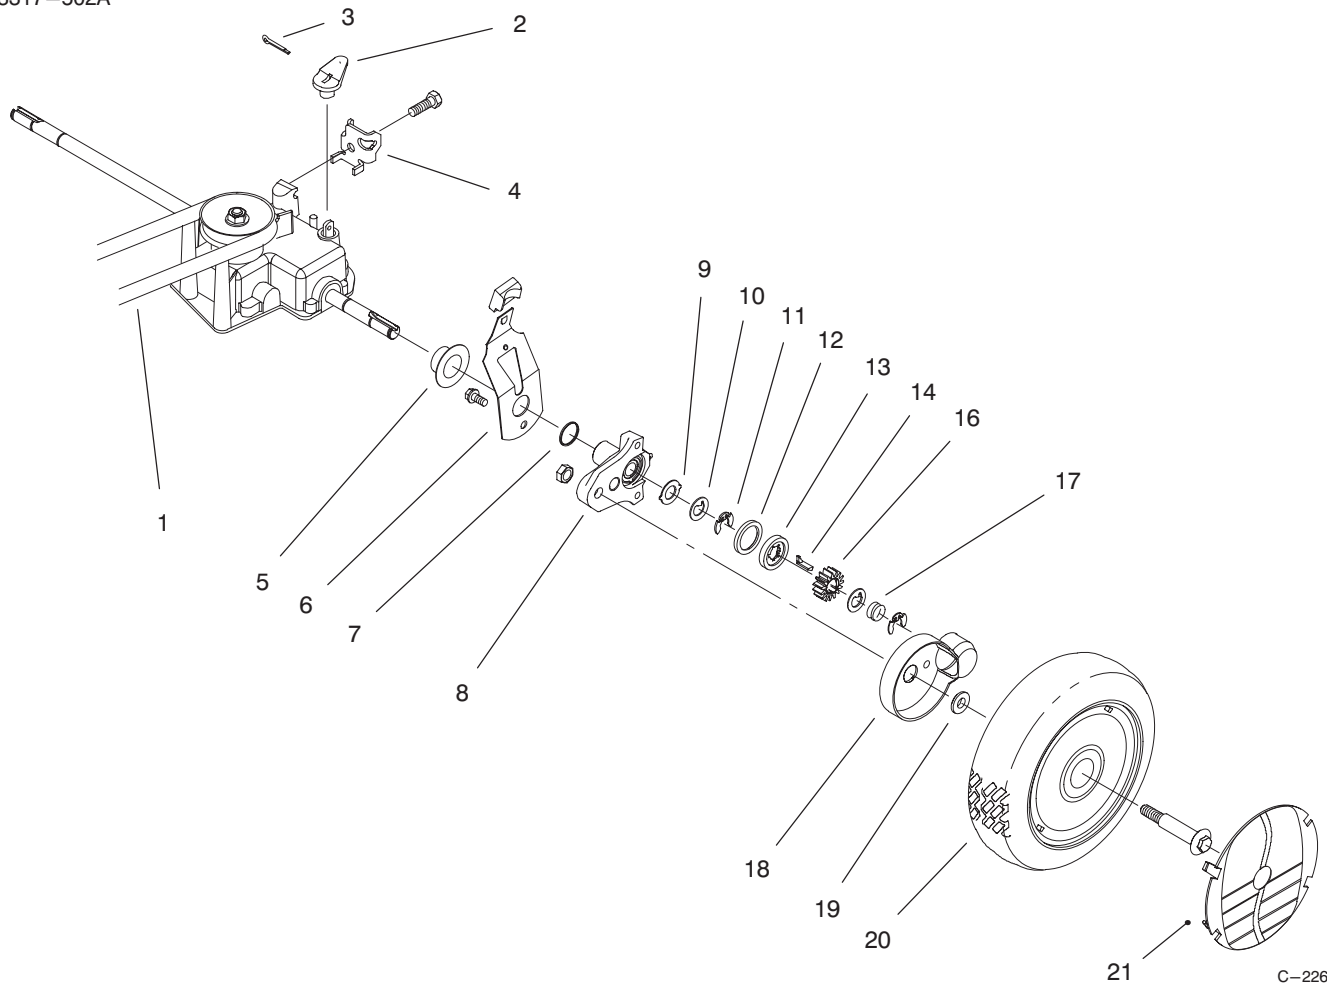 


C-2261

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62-3900	V-Belt	1
2	60-8821	Lever - Shift	1
3	3272-10	Pin - Cotter	1
4	82-8780	Retainer - Cable	1
5	42-3520	Cap - End	2
6	63-8721	Spring Arm Ass'y	2
7	237-153	O-Ring	2
8	63-8701	Pivot Arm Ass'y	2
9	65-4730	Washer - Thrust	2
10	65-4740	Washer - Thrust Keyed	4
11	65-2720	Ring - Retaining	4

Ref. No.	Part No.	Description	No. Used
12	65-4710	Ring - Friction	2
13	65-4760	Washer	2
14	66-6050	Key - Rocking LH	1
*	66-6040	Key - Rocking RH	1
16	65-4750	Gear - Pinion	2
17	65-4720	Spring - Compression	2
18	74-1660	Cover - Wheel	2
19	74-1671	Spacer - Cover Wheel	2
20	16-0029	Wheel & Tire Assembly	2
21	91-2253	Cover - Wheel	1

 *Not Illustrated

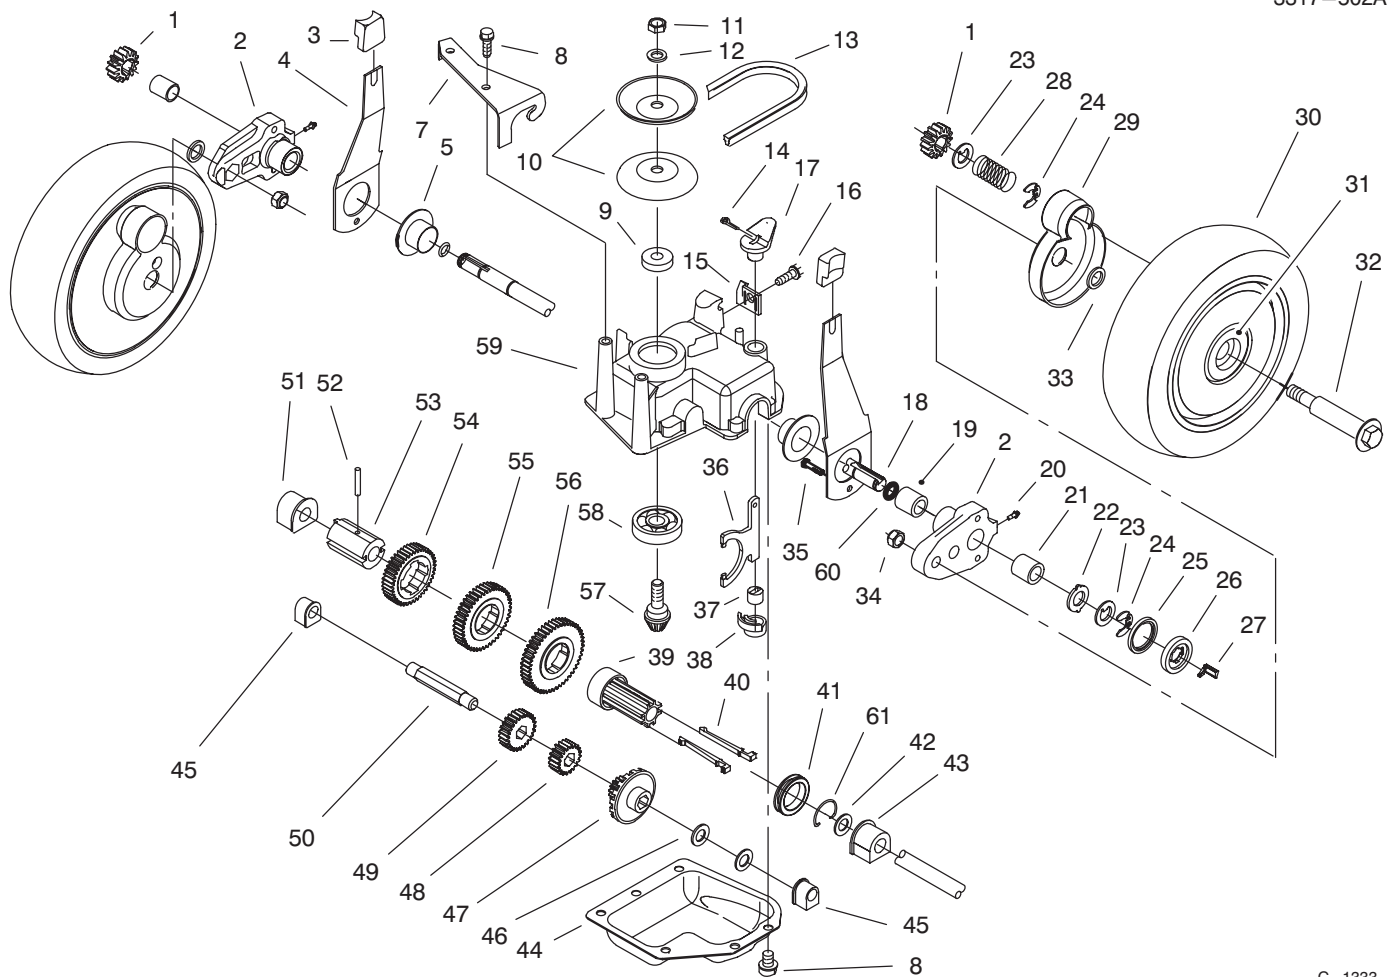


C-1333

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	65-4750	Pinion	2	26	65-4760	Washer - Clutch	2
2	63-8701-03	Pivot Arm Assembly (Incl. Ref # 19, 20, & 21)	2	27	66-6050	Key - Rocker L.H.	1
3	25-7740	Knob - Arm	2	*	66-6040	Key - Rocker R.H.	1
4	63-8721	Spring Arm Assembly	2	28	65-4720	Spring	2
5	42-3520	End Cap	2	29	74-1660	Cover - Wheel	2
7	62-4320	Bracket - Belt Guide	1	30	16-0029	Wheel - Tire & Gear Ass'y (Incl. Ref. # 31)	2
8	49-2040	Screw - Self Tapping	8	31	27-6250	Bushing - Wheel	4
9	62-6660	Spacer	1	32	27-6232	Wheel Bolt	2
10	60-8840	Pulley - Half	2	33	74-1670	Spacer - Wheel Cover	2
11	3296-5	Locknut	1	34	3296-6	Locknut	2
12	3256-24	Washer - Flat	1	35	32144-85	Screw	2
13	62-3900	V-Belt	1	36	60-8870	Yoke - Shift	1
14	3272-10	Pin - Cotter	1	37	29-9570	Bushing - Yoke	1
15	82-8780	Cable - Retainer	1	38	60-8810	Retainer - Shift Fork	1
16	32144-70	Screw - Thread Forming	1	39	76-0780	Sleeve - Shift Key	1
17	60-8821	Lever - Shift	1	40	76-0760	Key - Shift	2
18	65-4770	Shaft - Output	1	41	76-0770	Collar - Shift	1
19	70-9760	Bushing	2	42	36-4780	Washer - Thrust	1
20	302-56	Fitting - Grease	2	43	60-8770	Bushing - Output Shaft	1
21	48-2060	Needle Bearing	2	44	60-8730	Cover - Gear Case	1
22	65-4730	Thrust Washer	2	45	60-8750	Bushing - Int. Shaft	2
23	65-4740	Thrust Washer	4	46	36-4791	Washer - Thrust	2
24	65-2720	Ring - Retaining	4	47	55-3760	Gear - Pinion 15 Tooth	1
25	65-4710	Ring - Friction	2	48	55-3780	Gear - Pinion 20 Tooth	1

*Not Illustrated

 3317-502A

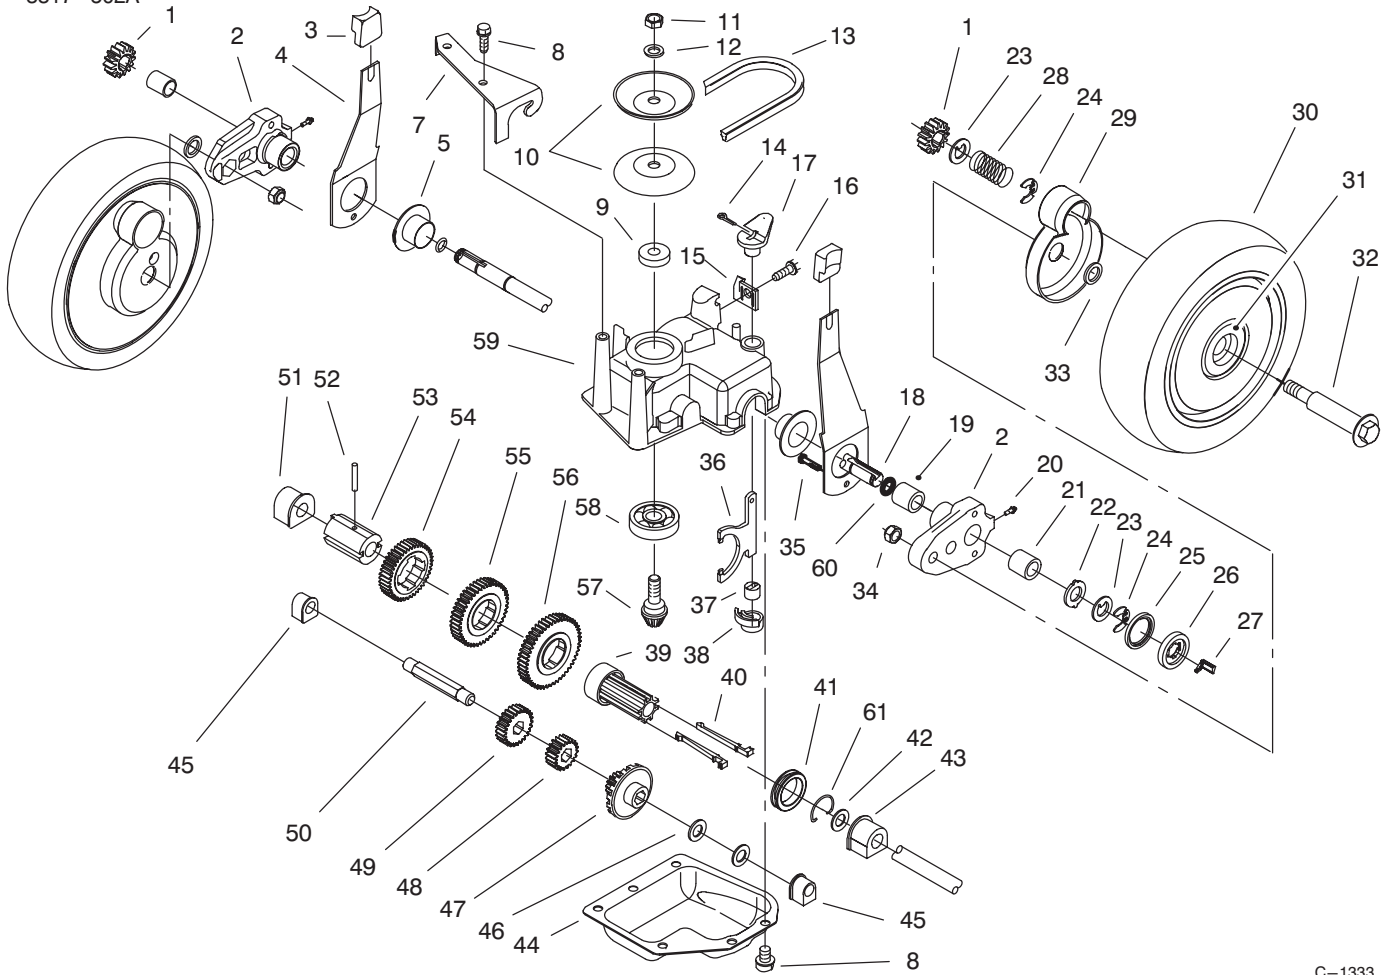


C-1333

GEAR CASE ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
49	55-3800	Gear – Pinion	1
50	60-8800	Shaft – Intermediate	1
51	60-8850	Bushing – Output Shaft	1
52	32121-120	Pin – Coil	1
53	60-8790	Sleeve – Gear	1
54	55-3810	Gear – 39 Tooth 3rd Gear	1
55	55-3790	Gear – 44 Tooth 2nd Gear	1

Ref. No.	Part No.	Description	No. Used
56	55-3770	Gear – 49 Tooth 1st Gear	1
57	60-8890	Pinion – Bevel	1
58	38-7820	Bearing – Ball	1
59	60-8710	Gear Case – Upper	1
60	237-153	O-Ring	2
61	65-5250	Clip – Spring	1
*	62-6673	Gear Case Assembly	1

 
*Not Illustrated

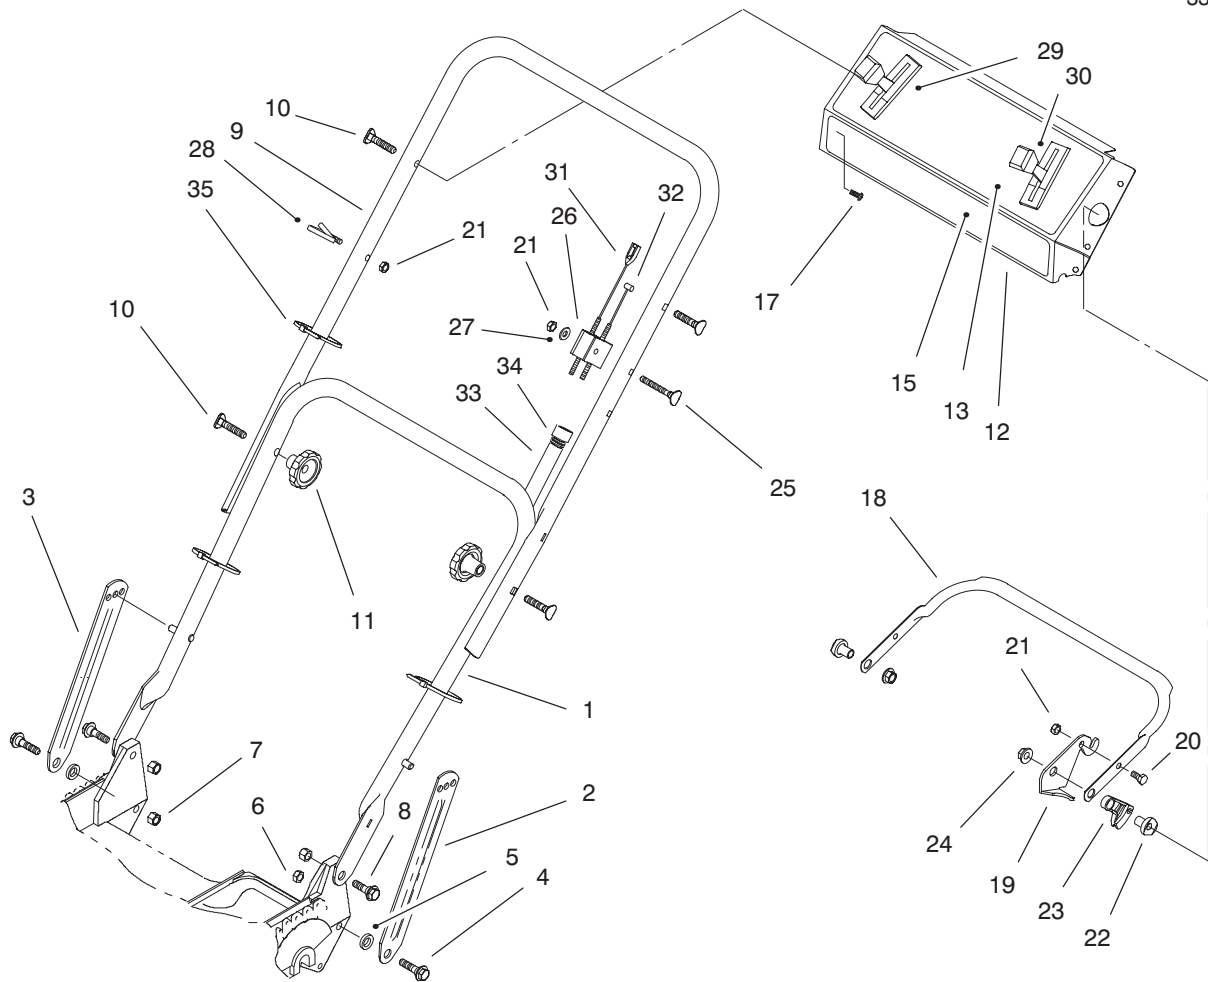

C-2262

HANDLE ASSEMBLY (Model No. 20462 Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	82-5531	Handle - Lower	1	19	66-5351	Lever - Control	1
2	84-8361	Latch - Handle LH	1	20	321-39	Screw - Hex Hd. Cap	1
3	84-8401	Latch - Handle RH	1	21	3296-73	Nut - Lock	3
4	27-7210	Screw - Shoulder	2	22	49-1630	Spacer - Support	2
5	3-3287	Spacer	2	23	46-5520	Lever - Traction	1
6	3296-47	Nut - Lock	1	24	3296-74	Nut - Flange	2
7	3296-72	Nut - Lock	3	25	92-2269	Screw - Handle	1
8	27-7211	Screw - Shoulder	2	26	46-6980	Support - Cable	1
9	92-2278	Handle - Upper	1	27	3256-1	Washer - Flat	1
10	92-2260	Screw - Handle	4	28	86-9671	Guide - Rope	1
11	19-4050	Knob	2	29	76-2712	Control - Speed Ground	1
12	16-9499	Panel - Control (Incl. Ref. #13)	1	30	93-4186	Cable - Throttle	1
13	93-4191	Decal - Instruction	1	31	93-4187	Cable - Brake	1
15	93-3697	Decal - Panel Front	1	32	46-5481	Cable - Traction	1
17	92-9665	Screw - Phillips Hd.	5	33	46-6440	Cover - Cables Control	1
18	71-3080	Bar - Control	1	34	2412-50	Clip - Tubing Convolutd	4
				35	3290-378	Tie - Cable	3

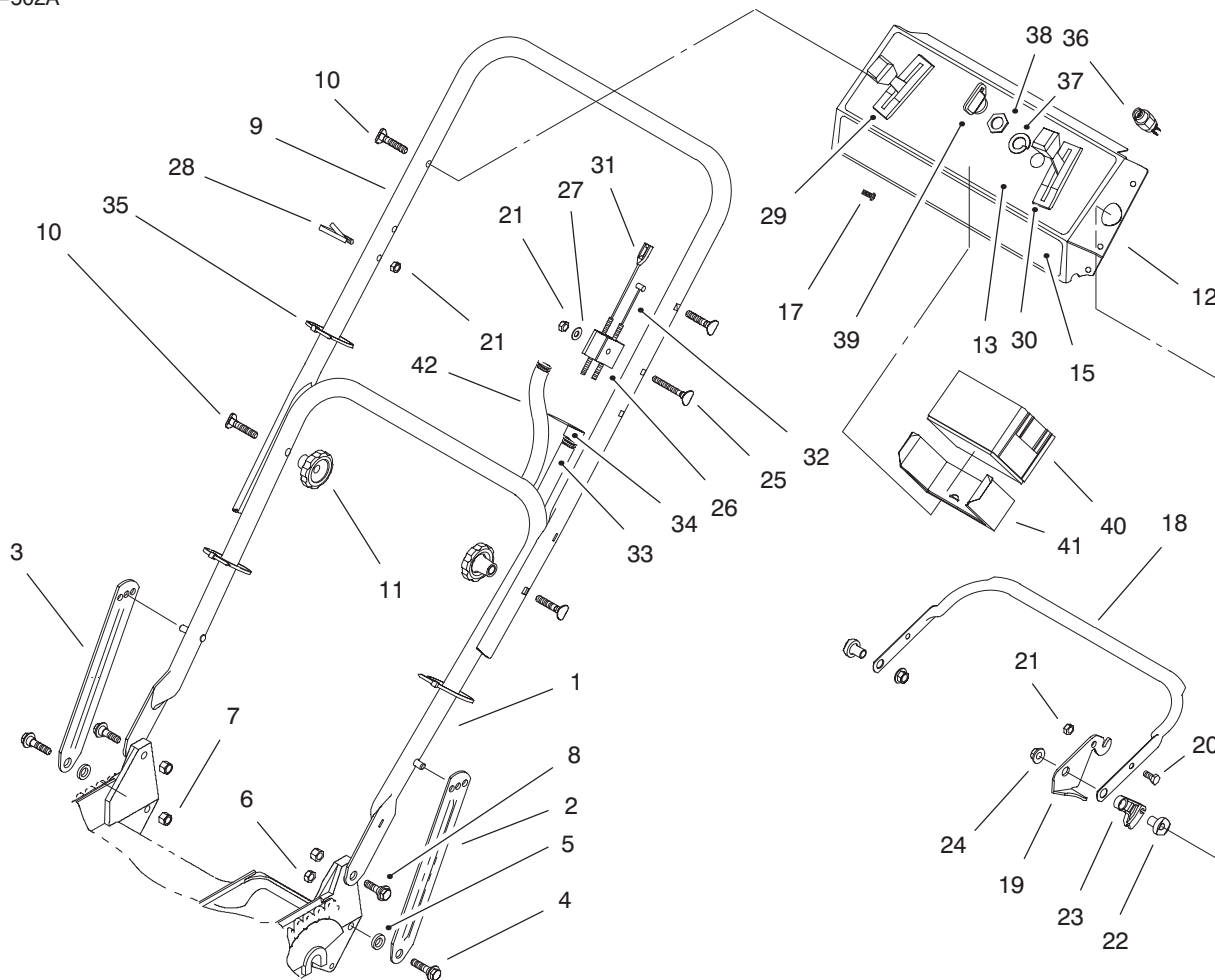 


C-2263

HANDLE ASSEMBLY (Model No. 20463 Only)

Ref. No.	Part No.	Description	No. Used
1	82-5531	Handle - Lower	1
2	84-8361	Latch - Handle LH	1
3	84-8401	Latch - Handle RH	1
4	27-7210	Screw - Shoulder	2
5	3-3287	Spacer	2
6	3296-47	Nut - Lock	1
7	3296-72	Nut - Lock	3
8	27-7211	Screw - Shoulder	2
9	92-2278	Handle - Upper	1
10	92-2260	Screw - Handle	4
11	19-4050	Knob	2
12	16-9509	Panel - Control (Incl. Ref. #13)	1
13	93-4192	Decal - Instruction	1
15	93-3697	Decal - Panel Front	1
17	92-9665	Screw - Phillips Hd.	5
18	71-3080	Bar - Control	1
19	66-5351	Lever - Control	1
20	321-39	Screw - Hex Hd. Cap	1
21	3296-73	Nut - Lock	3
22	49-1630	Spacer - Support	2
23	46-5520	Lever - Traction	1

Ref. No.	Part No.	Description	No. Used
24	3296-74	Nut - Flange	2
25	92-2269	Screw - Handle	1
26	46-6980	Support - Cable	1
27	3256-1	Washer - Flat	1
28	86-9671	Guide - Rope	1
29	76-2712	Control - Speed Ground	1
30	93-4186	Cable - Throttle	1
31	93-4187	Cable - Brake	1
32	46-5481	Cable - Traction	1
33	46-6440	Cover - Cables Control	1
34	2412-50	Clip - Tubing Convolved	4
35	3290-378	Tie - Cable	3
36	46-5780	Switch - Starter (Incl. Ref. #37 & 38)	1
37	3254-5	Washer - Lock	1
38	218-461	Nut - Hex	1
39	63-8360	Key - Ignition	1
40	55-7520	Battery Assembly	1
41	55-8180	Retainer - Battery	1
42	80-3670	Harness - Wire	1
*	92-1743	Charger - Battery	1

 *Not Illustrated

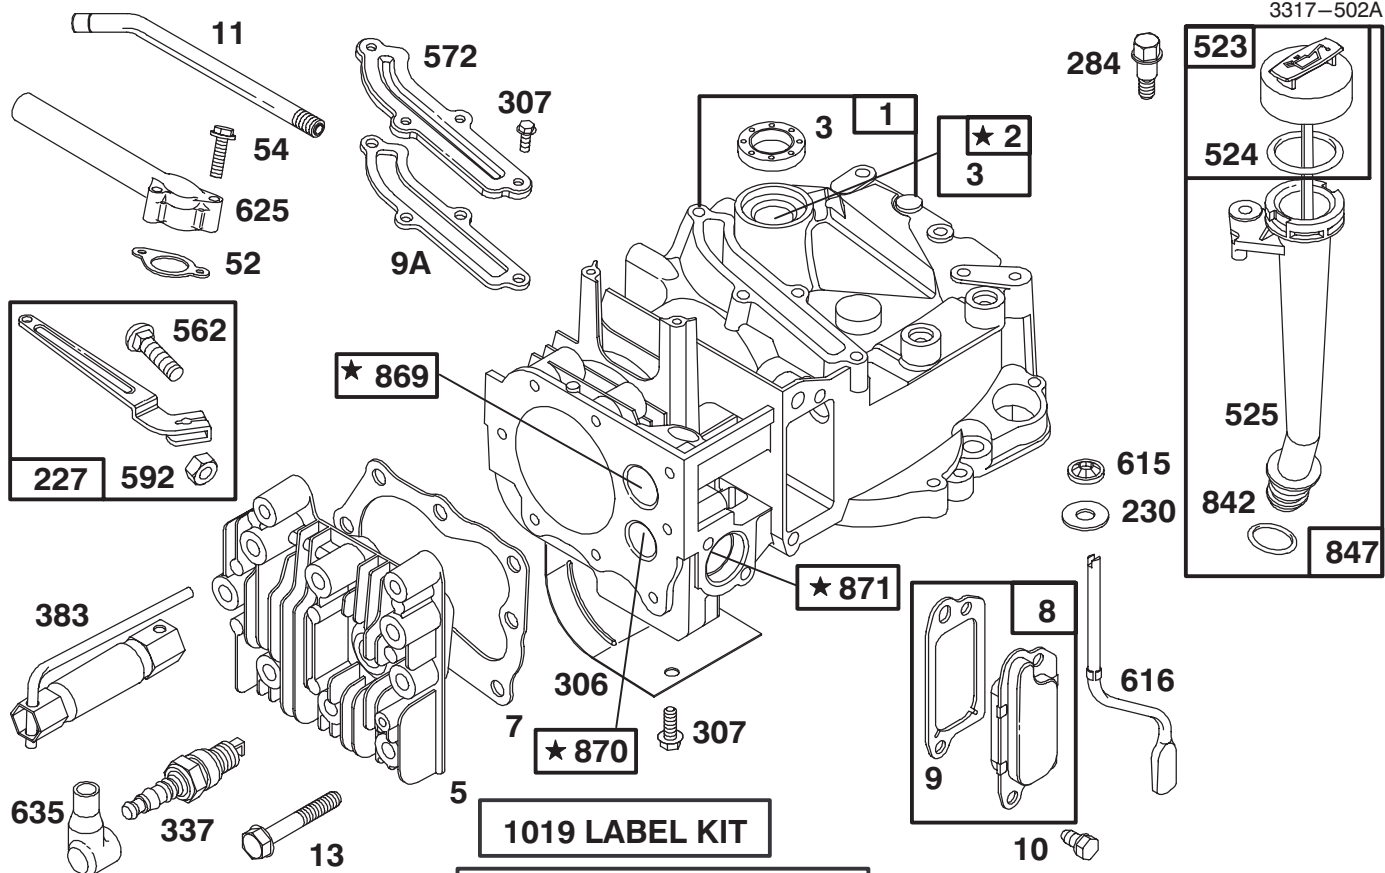

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

1019 LABEL KIT
1058 OWNER'S MANUAL


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 128802-0615-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214368	Head – Cylinder	1
★7	272916	Gasket – Cylinder Head	1
8	495786	Breather – Valve Chamber	1
★9	272481	Gasket – Valve Cover	1
★9A	272238	Gasket – Baffle Plate	1
10	94650	Screw – Breather Mtg.	1
11	231933	Tube – Breather	1
13	94547	Screw – Cylinder Head	1
★52	272199	Gasket – Intake Elbow Mounting	1
54	94526	Screw – Intake Elbow Mounting	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex. Head	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex. Head	1
337	802592	Plug – Spark	1
383	89838	Wrench – Spark Plug	1

Ref. No.	Part No.	Description	No. Used
523	495264	Cap With Dipstick – Oil Filler	1
★524	280393	Seal – Filler Tube	1
525	495265	Tube – Oil Filler	1
562	92613	Bolt – Governor Lever	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	262578	Crank – Governor	1
625	281085	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
★842	280966	Seal – O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat – Intake Valve	1
870	213513	Seat – Exhaust Valve	1
871	262001	Guide – Exhaust Valve	1
		Note: 63709 Guide – Intake Valve	1
1019	494256	Label Kit	1
1058	272262	Owner's Manual	1

 ★ Included in Gasket Set—Part No. 496117.

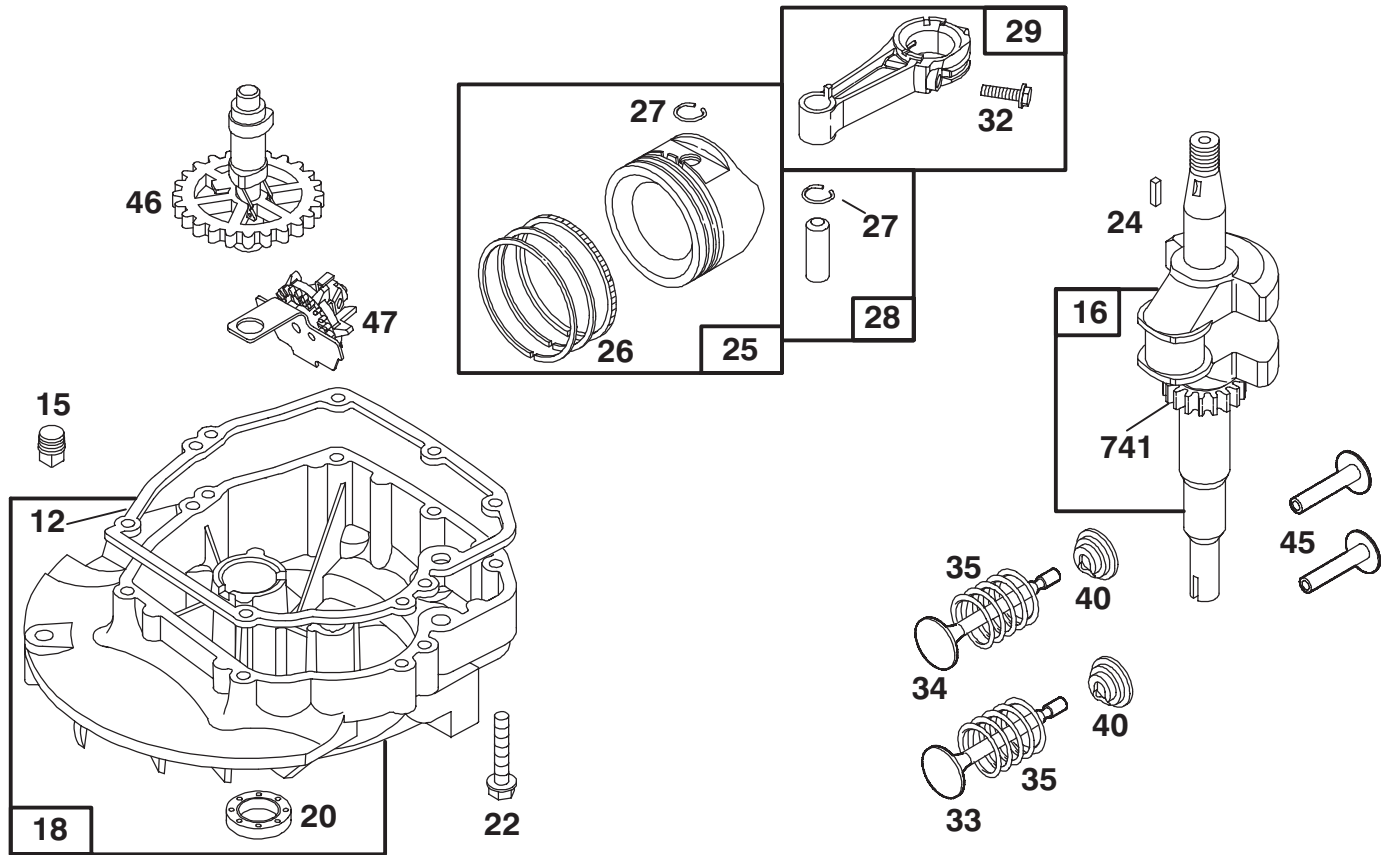


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 128802-0615-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket – Crankcase	1
15	94720	Plug – Oil Drain	1
16	494546	Crankshaft	
		Note: Order 94388 For Timing Gear Key.	
18	493279	Sump – Engine	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex. Head	1
		Note: 94612 Screw – Hex. Head (One (1) Used in Hole Nearest Breather.)	
24	222698	Key – Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock – Piston Pin	1
28	298909	Pin – Piston (Standard)	1
	298908	Pin – Piston (.005" O.S.)	1
29	490566	Rod Assembly – Conn.	1
		Note: For Conn. Rod With .020" Undersize Crankpin Bearing – Order No. 490743.	
32	94699	Screw – Conn. Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	492828	Gear – Cam	1
47	493737	Slinger – Oil	1
741	262598	Gear – Timing	1

 ★ Included in Gasket Set—Part No. 496117.

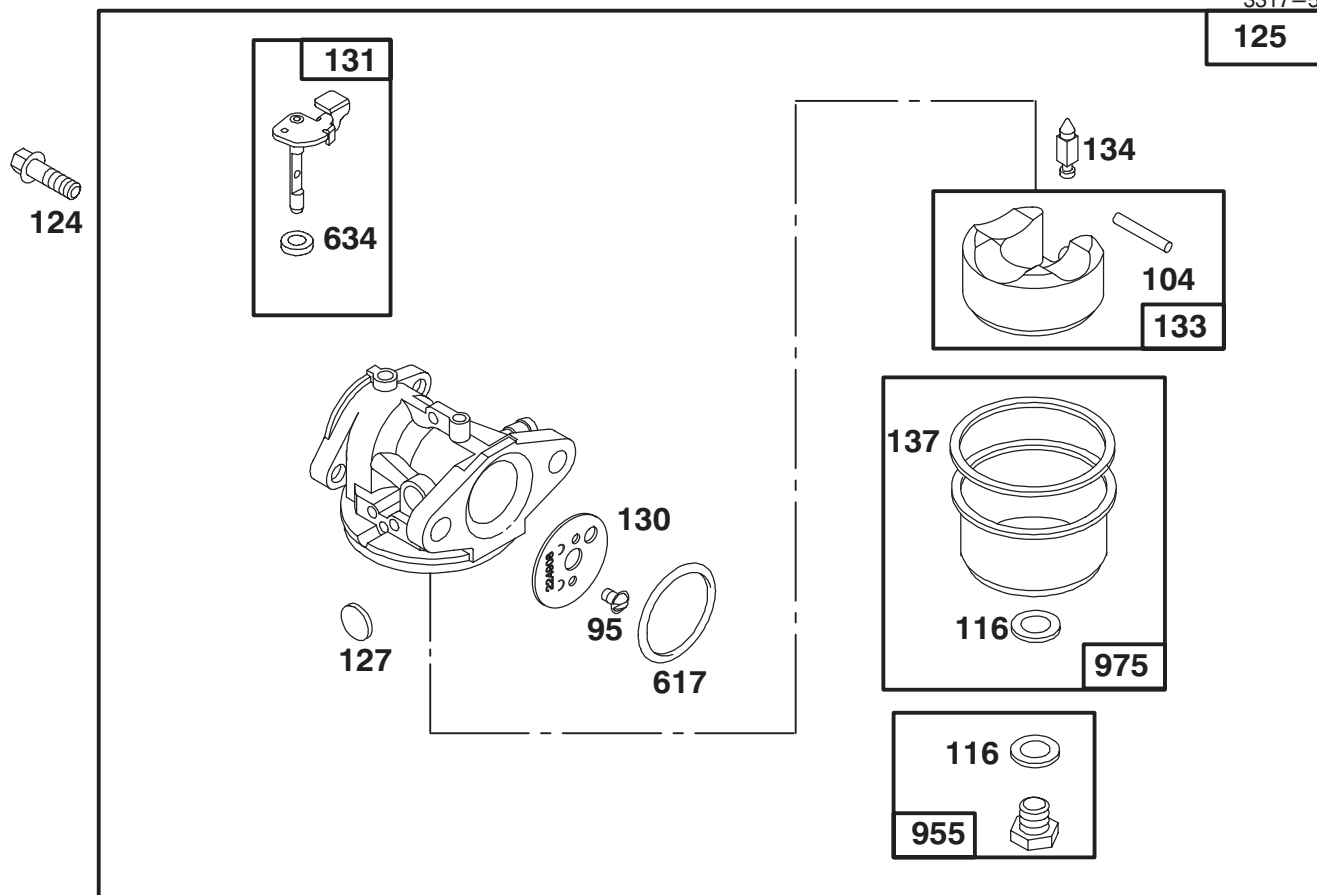

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 128802-0615-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Throttle Valve Mounting	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket–Sealing (Sold in Kit Only).	1
124	94525	Screw – Carburetor Mtg.	1
125	497347	Carburetor	1
●127		Plug – Welch (Sold in Kit Only).	1
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float Assy. – Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only).	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer–Shaft (Sold in Kit Only).	1
955	494870	Screw – Bowl Mtg. (Std.)	1
		Note: 497315 Screw – Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. – Carburetor	1

●Included in Carburetor Kit–Part No. 493762.

 ◆Included in Carburetor Gasket Set–Part No. 490937.

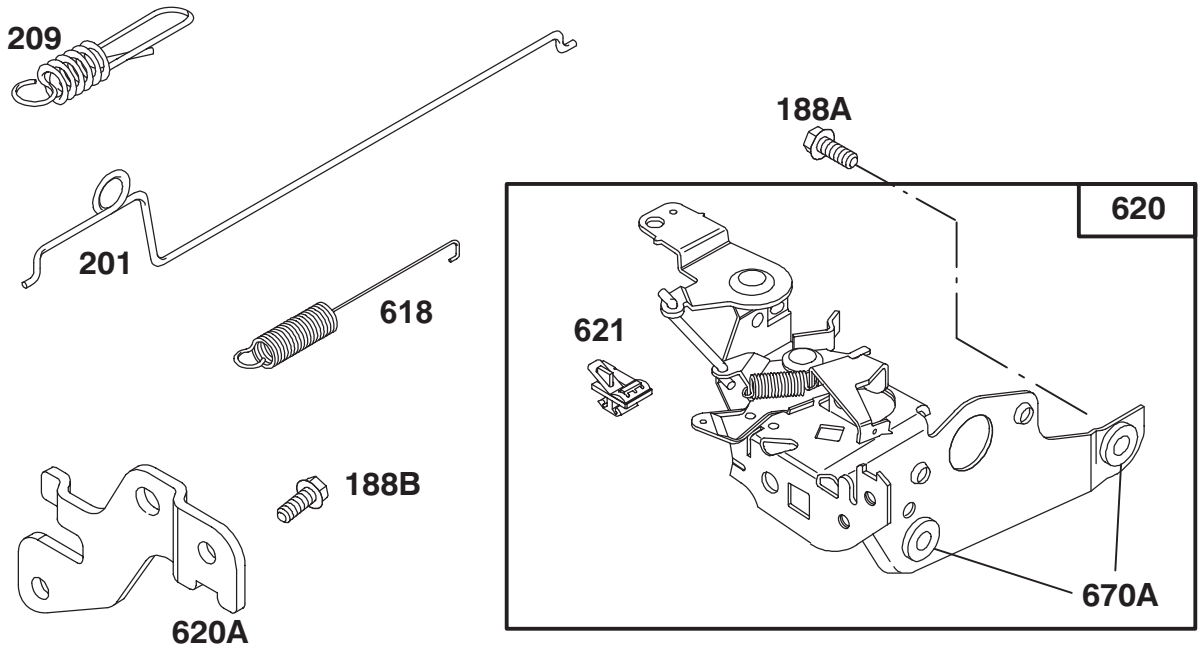


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 128802-0615-01

Ref. No.	Part No.	Description	No. Used
188A	94644	Screw - Hex. Head	1
188B	94602	Screw - Hex. Head	1
201	262579	Link - Governor	1
209	262661	Spring - Governor	1
618	262749	Spring - Return	1

Ref. No.	Part No.	Description	No. Used
620	497203	Bracket - Carburetor	1
620A	225152	Bracket - Control	1
621	396847	Switch - Stop	1
670A	493823	Spacer - Bracket	1

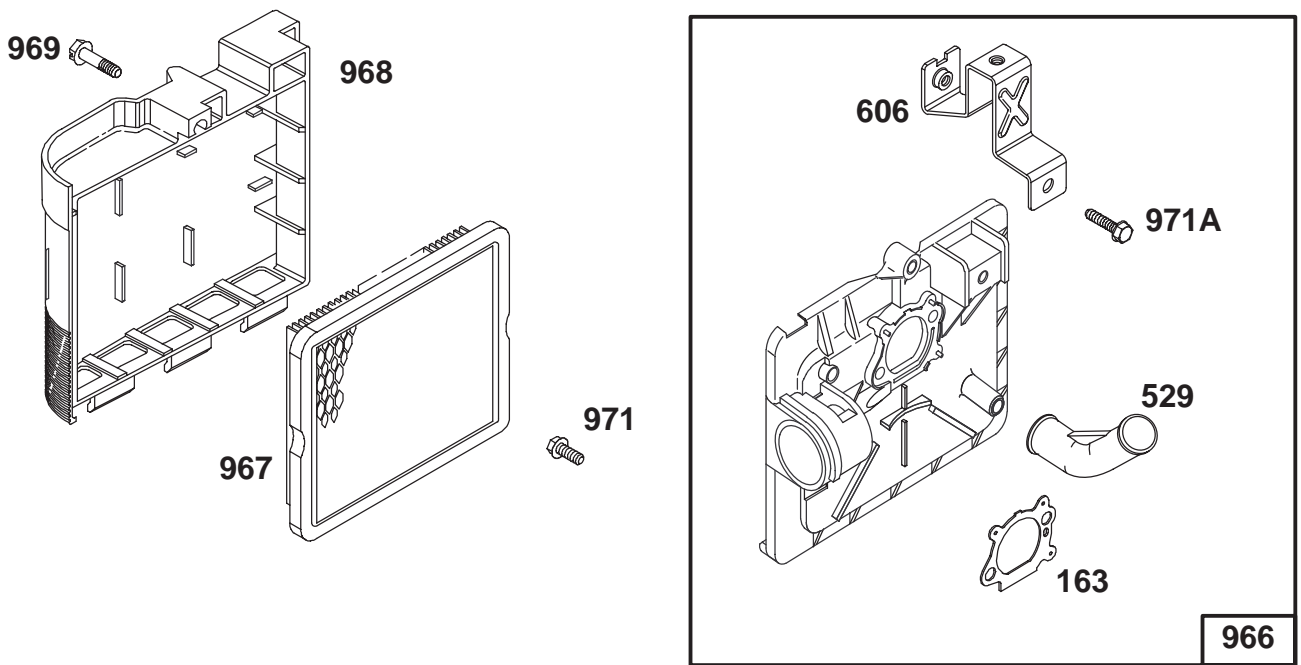 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 128802-0615-01

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket – Air Cleaner	1
529	281299	Grommet – Breather	1
606	224815	Strap – Bracket	1
966	496116	Base – Air Cleaner	1
967	491588	Filter – Air	1

Ref. No.	Part No.	Description	No. Used
968	281340	Cover – Air Cleaner	1
969	94120	Screw – Cover Mtg.	1
971	94121	Screw – Air Cleaner	1
971A	94749	Screw – Hex. Head	1

 ★ Included in Gasket Set—Part No. 496117.

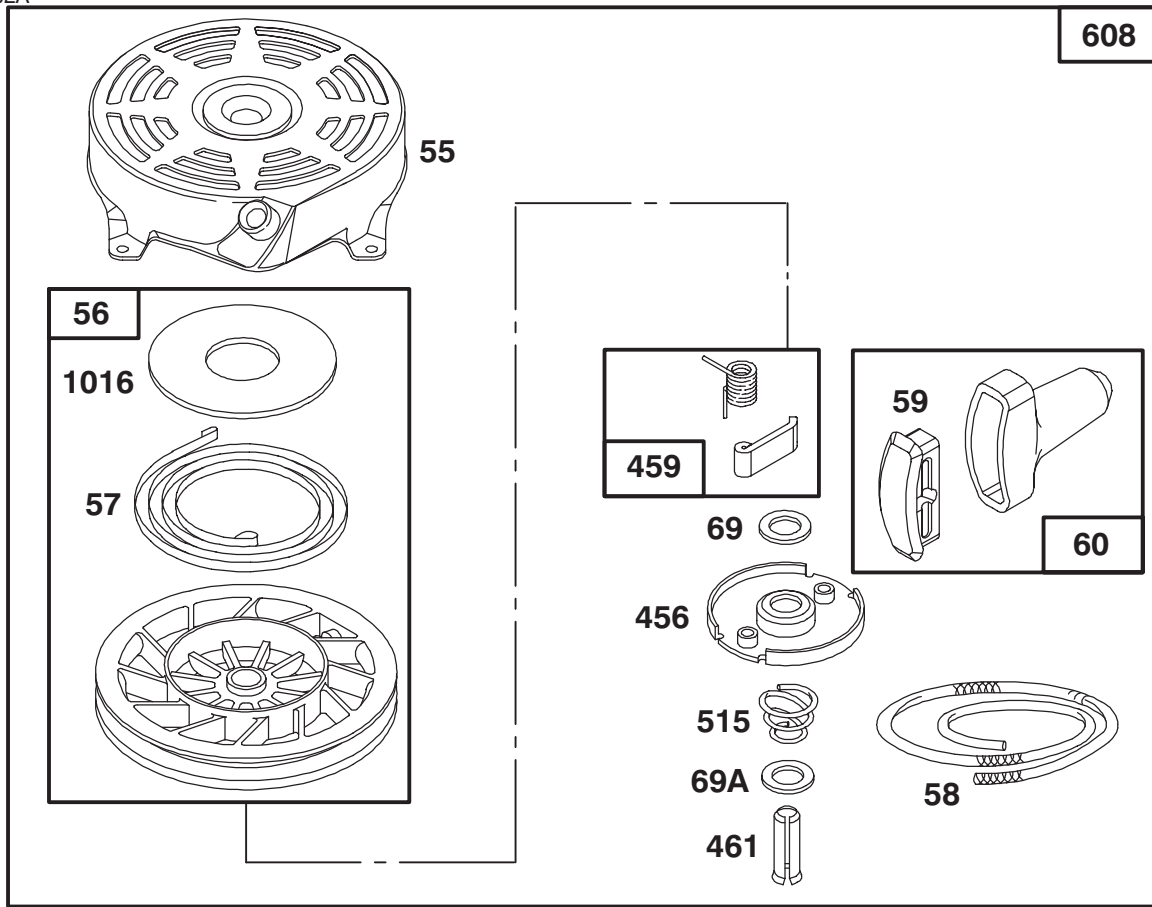


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 128802-0615-01

Ref. No.	Part No.	Description	No. Used
55	492831	Housing – Rewind Starter	1
56	493824	Pulley – Rewind Starter	1
57	262594	Spring – Rewind Starter	1
58	280399	Rope – Rewind Starter	1
59	396892	Insert – Handle	1
60	393152	Handle – Rewind Starter	1
69	280973	Washer – Rewind Starter	1
69A	224322	Washer – Rewind Starter	1
456	224321	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	492833	Pawl – Starter	1
461	262626	Pin – Starter	1
515	262625	Spring – Torsion	1
608	493295	Starter Assy. – Rewind	1
		Includes:	
		94128 Screw – Hex. Hd.	1
		92987 Nut – Hex.	1
1016	224278	Cover – Rewind Starter	1





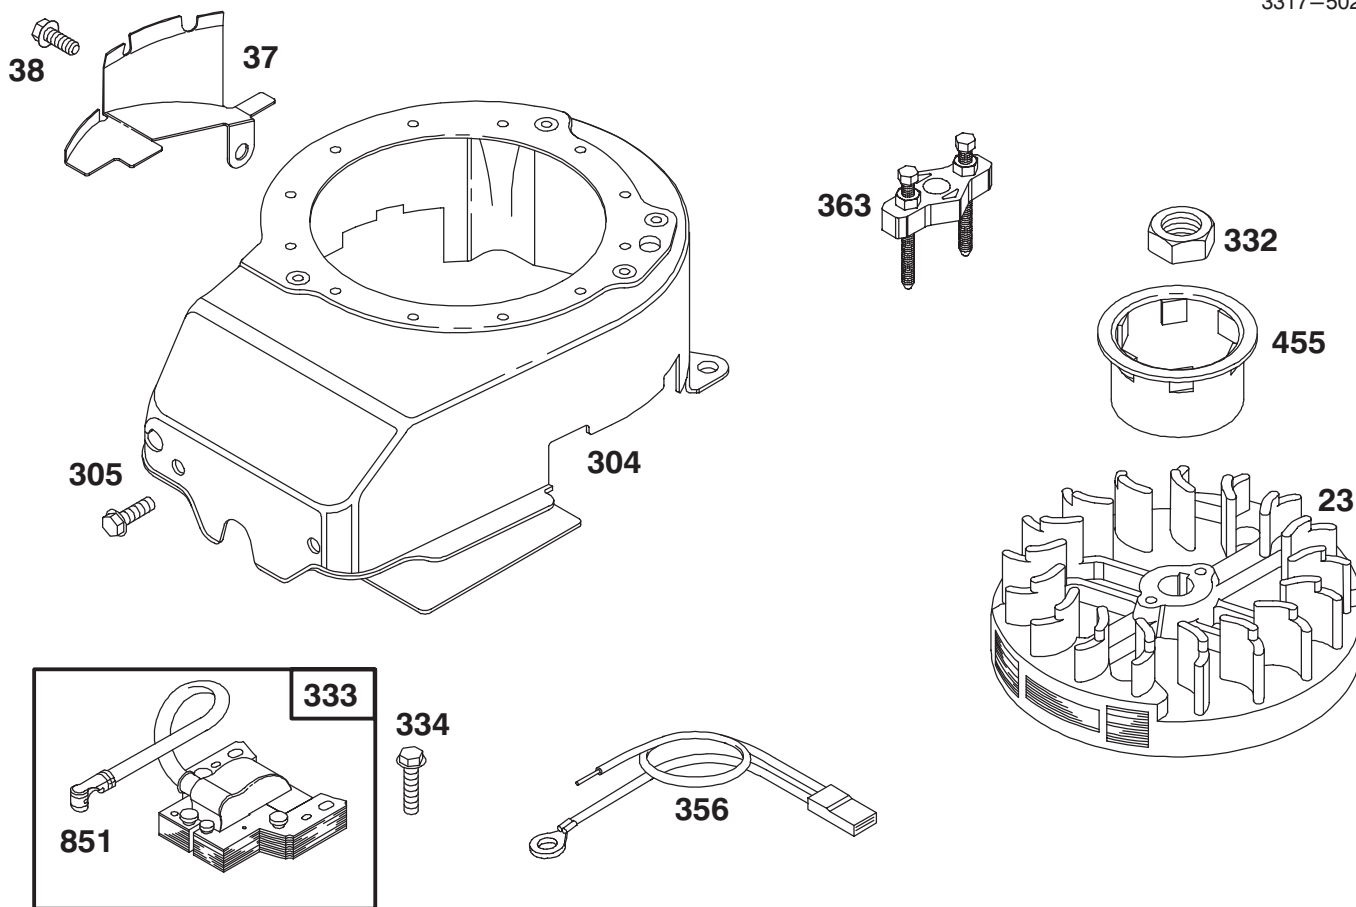 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 128802-0615-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard - Flywheel	1
38	94786	Screw - Hex. Head	1
304	493294	Housing - Blower	1
305	94786	Screw - Sem	1
332	92284	Nut - Flywheel	1

Ref. No.	Part No.	Description	No. Used
333	802574	Armature - Magneto	1
334	94731	Screw - Sem	1
356	398808	Wire - Ground	1
363	19069	Puller - Flywheel	1
455	224250	Cup - Starter	1
851	493880	Terminal - Ignition Cable	1

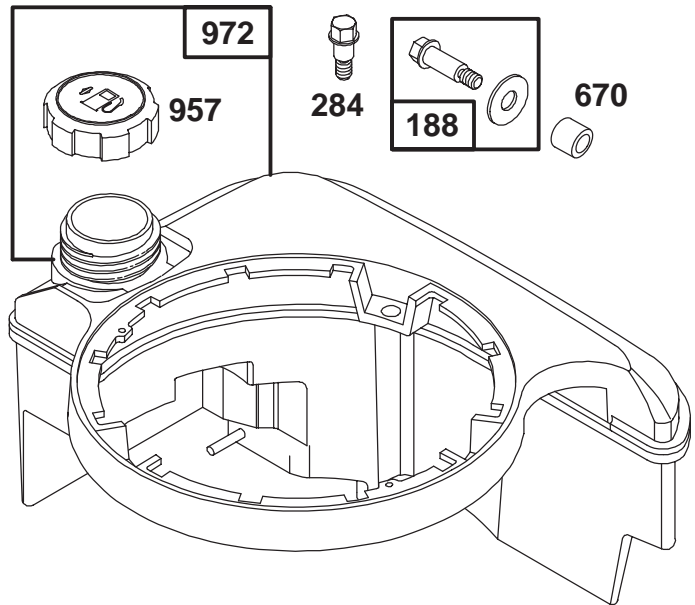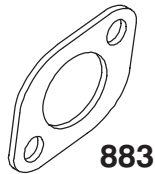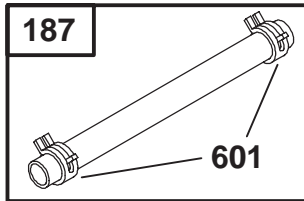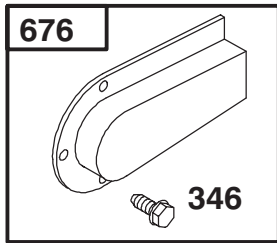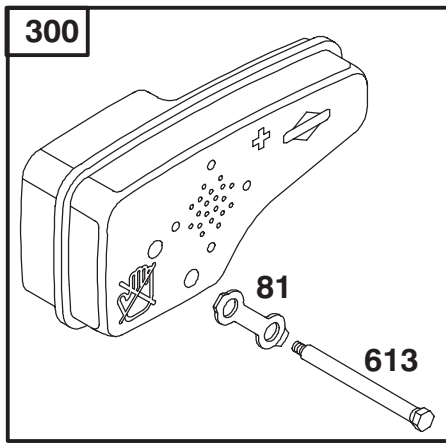     


Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 128802-0615-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188	398540	Screw – Tank Mounting	1
284	94511	Screw – Hex. Head	1
300	496106	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93807	Clamp – Hose	1


Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Muffler Mtg.	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

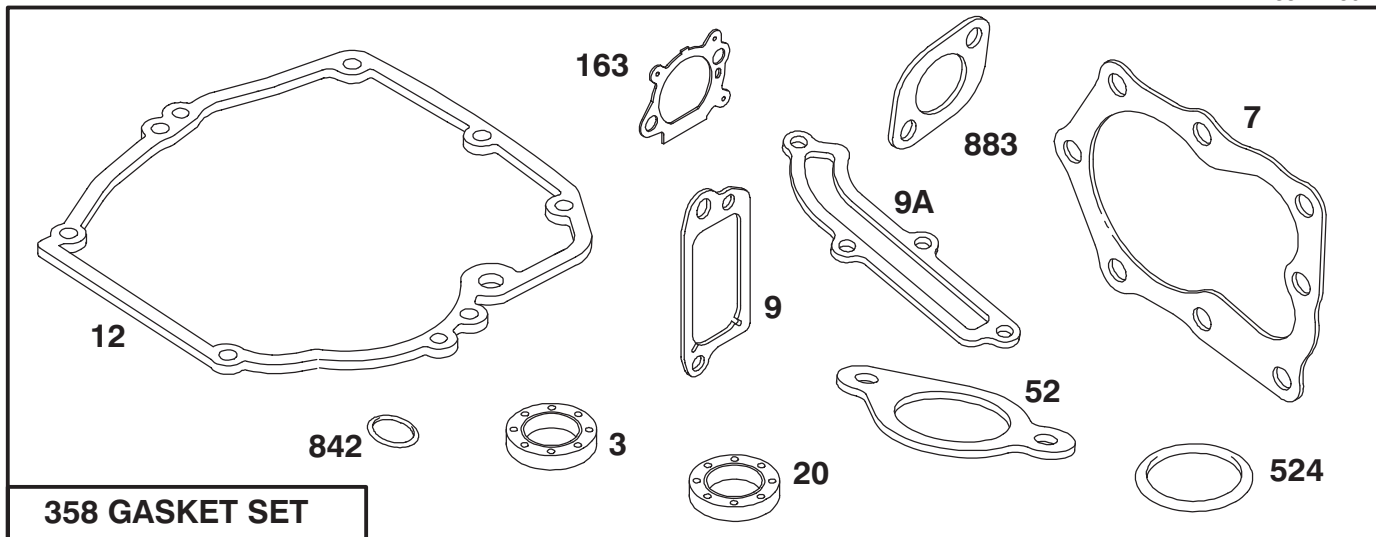 

358 GASKET SET

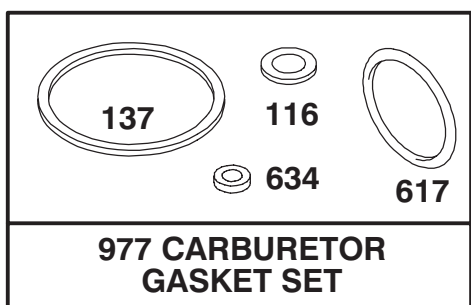 

977 CARBURETOR GASKET SET

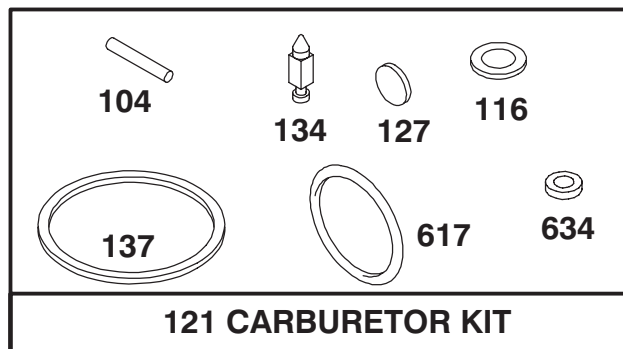 

121 CARBURETOR KIT

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 128802-0615-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272200	Gasket – Cylinder Hd.	1
★9	272481	Gasket – Valve Cover	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket – Sealing (Sold in Kit Only).	1
121	493762	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only).	1
★163	272653	Gasket – Air Cleaner	1
358	496117	Gasket Set	1
★524	280393	Seal – Filler Tube	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only).	1
★842	280966	Seal – O-Ring	1
★883	272253	Gasket – Exhaust	1
977	490937	Gasket Set – Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 496117.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
	Guard – Cover	1	11	1	60-8710	Gear Case – Upper	6	59	1
	Deflector – Recycler	1	10	1	60-8730	Cover – Gear Case	5	44	1
	Screw	1	4	5	60-8750	Bushing – Int. Shaft	5	45	2
	Engine	3	1	1	60-8770	Bushing – Output Shaft	5	43	1
3-3287	Spacer	7	5	2	60-8790	Sleeve – Gear	6	53	1
3-3287	Spacer	8	5	2	60-8800	Shaft – Intermediate	6	50	1
3-5792	Washer	2	36	1	60-8810	Retainer – Shift Fork	5	38	1
14-4069	Cover – Recycler	1	12	1	60-8821	Lever – Shift	4	2	1
14-9989	Wheel & Tire Assembly	1	25	2	60-8821	Lever – Shift	5	17	1
16-0029	Wheel & Tire Assembly	4	20	2	60-8840	Pulley – Half	5	10	2
16-0029	Wheel – Tire & Gear Ass'y	5	30	2	60-8850	Bushing – Output Shaft	6	51	1
16-9489	Housing – 21	1	1	1	60-8870	Yoke – Shift	5	36	1
16-9499	Panel – Control	7	12	1	60-8890	Pinion – Bevel	6	57	1
16-9509	Panel – Control	8	12	1	62-3900	V-Belt	4	1	1
19-4050	Knob	7	11	2	62-3900	V-Belt	5	13	1
19-4050	Knob	8	11	2	62-4320	Bracket – Belt Guide	5	7	1
25-7740	Knob – Arm	5	3	2	62-4320	Bracket – Guide Belt	2	32	1
25-7740	Knob – Arm	1	21	4	62-6660	Spacer	5	9	1
26-0670	Bolt – Blade	3	16	1	62-6673	Gear Case Assembly	6	*	1
27-6232	Bolt – Wheel	1	26	4	62-6673	Gear Case Assembly	1	31	1
27-6232	Wheel Bolt	5	32	2	62-7550	Pulley – Driver	3	11	1
27-6250	Bushing – Wheel	5	31	4	63-8360	Key – Ignition	8	39	1
27-7210	Screw – Shoulder	7	4	2	63-8701	Pivot Arm Ass'y	4	8	2
27-7210	Screw – Shoulder	8	4	2	63-8701-03	Pivot Arm Assembly	5	2	2
27-7211	Screw – Shoulder	7	8	2	63-8721	Spring Arm Ass'y	4	6	2
27-7211	Screw – Shoulder	8	8	2	63-8721	Spring Arm Assembly	5	4	2
29-9570	Bushing – Yoke	5	37	1	65-2720	Ring – Retaining	4	11	4
33-3208	Rod – Shield	1	16	1	65-2720	Ring – Retaining	5	24	4
36-4780	Washer – Thrust	5	42	1	65-4710	Ring – Friction	4	12	2
36-4791	Washer – Thrust	5	46	2	65-4710	Ring – Friction	5	25	2
37-7260	Screw – Tapping	2	35	1	65-4720	Spring	5	28	2
37-7260	Screw – Tapping	2	35	2	65-4720	Spring – Compression	4	17	2
37-7262	Screw – Special	2	38	1	65-4730	Thrust Washer	5	22	2
38-7820	Bearing – Ball	6	58	1	65-4730	Washer – Thrust	4	9	2
39-5770	Decal – Danger	1	3	1	65-4740	Thrust Washer	5	23	4
40-1940	Washer	1	19	4	65-4740	Washer – Thrust Keyed	4	10	4
42-3520	Cap – End	4	5	2	65-4750	Gear – Pinion	4	16	2
42-3520	End Cap	5	5	2	65-4750	Gear – Pinion	5	1	2
44-0580	Shield – Trailing	1	15	1	65-4760	Washer	4	13	2
46-5481	Cable – Traction	7	32	1	65-4760	Washer – Clutch	5	26	2
46-5481	Cable – Traction	8	32	1	65-4770	Shaft – Output	5	18	1
46-5520	Lever – Traction	7	23	1	65-5250	Clip – Spring	6	61	1
46-5520	Lever – Traction	8	23	1	66-0541	Spring Arm Ass'y – Front	1	20	2
46-5780	Switch – Starter	8	36	1	66-0560	Screw – Shoulder	1	24	2
46-6440	Cover – Cables Control	7	33	1	66-0570	Guide – Belt	3	10	1
46-6440	Cover – Cables Control	8	33	1	66-0580	Arm – Pivot	1	23	2
46-6810	Screw – Hex Washer Hd.	1	14	1	66-5351	Lever – Control	7	19	1
46-6811	Screw – Hex Washer Hd.	1	13	3	66-5351	Lever – Control	8	19	1
46-6980	Support – Cable	7	26	1	66-6040	Key – Rocker R.H.	5	*	1
46-6980	Support – Cable	8	26	1	66-6040	Key – Rocking RH	4	*	1
46-7030	Retainer – Cable	1	29	1	66-6050	Key – Rocker L.H.	5	27	1
48-2060	Needle Bearing	5	21	2	66-6050	Key – Rocking LH	4	14	1
49-1630	Spacer – Support	7	22	2	70-9760	Bushing	5	19	2
49-1630	Spacer – Support	8	22	2	71-3080	Bar – Control	7	18	1
49-2040	Screw – Hex Hd.	2	33	2	71-3080	Bar – Control	8	18	1
49-2040	Screw – Self Tapping	5	8	8	74-1660	Cover – Wheel	4	18	2
55-3760	Gear – Pinion 15 Tooth	5	47	1	74-1660	Cover – Wheel	5	29	2
55-3770	Gear – 49 Tooth 1st Gear	6	56	1	74-1670	Spacer – Wheel Cover	5	33	2
55-3780	Gear – Pinion 20 Tooth	5	48	1	74-1671	Spacer – Cover Wheel	4	19	2
55-3790	Gear – 44 Tooth 2nd Gear	6	55	1	76-0760	Key – Shift	5	40	2
55-3800	Gear – Pinion	6	49	1	76-0770	Collar – Shift	5	41	1
55-3810	Gear – 39 Tooth 3rd Gear	6	54	1	76-0780	Sleeve – Shift Key	5	39	1
55-7520	Battery Assembly	8	40	1	76-2712	Control – Speed Ground	7	29	1
55-8180	Retainer – Battery	8	41	1	76-2712	Control – Speed Ground	8	29	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3317-502A

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
80-3670	Harness - Wire	8	42	1	2210-249	Clamp - Casing (P/W Eng.)	3	7	1
82-5531	Handle - Lower	7	1	1	237-153	O-Ring	4	7	2
82-5531	Handle - Lower	8	1	1	237-153	O-Ring	6	60	2
82-5680	Bracket - Adjustment Trac.	1	27	1	2412-50	Clip - Tubing Convuluted	7	34	4
82-8450	Decal - Danger Deck	1	5	1	2412-50	Clip - Tubing Convuluted	8	34	4
82-8550	Shield - Muffler	3	17	1	2412-83	R-Clamp	2	39	1
82-8780	Cable - Retainer	5	15	1	2412-87	Clamp - Cable	2	37	1
82-8780	Retainer - Cable	4	4	1	302-56	Fitting - Grease	5	20	2
84-8361	Latch - Handle LH	7	2	1	321-39	Screw - Hex Hd. Cap	7	20	1
84-8361	Latch - Handle LH	8	2	1	321-39	Screw - Hex Hd. Cap	8	20	1
84-8401	Latch - Handle RH	7	3	1	3253-22	Washer - Lock	3	15	1
84-8401	Latch - Handle RH	8	3	1	3254-5	Washer - Lock	8	37	1
86-9671	Guide - Rope	7	28	1	3256-1	Washer - Flat	7	27	1
86-9671	Guide - Rope	8	28	1	3256-1	Washer - Flat	8	27	1
91-2253	Cover - Wheel	4	21	1	3256-24	Washer - Flat	5	12	1
92-1720	Kicker - RH Front	1	7	1	3272-10	Pin - Cotter	4	3	1
92-1730	Kicker - LH Front	1	8	1	3272-10	Pin - Cotter	5	14	1
92-1743	Charger - Battery	8	*	1	3290-378	Tie - Cable	7	35	3
92-1750	Plate - Kicker Rear	1	6	1	3290-378	Tie - Cable	8	35	3
92-2260	Screw - Handle	7	10	4	3296-5	Locknut	5	11	1
92-2260	Screw - Handle	8	10	4	3296-6	Locknut	5	34	2
92-2269	Screw - Handle	7	25	1	3296-6	Nut - Lock	1	18	6
92-2269	Screw - Handle	8	25	1	3296-47	Nut - Lock	7	6	1
92-2278	Handle - Upper	7	9	1	3296-47	Nut - Lock	8	6	1
92-2278	Handle - Upper	8	9	1	3296-72	Nut - Lock	7	7	3
92-2279	Decal - HOC	1	17	4	3296-72	Nut - Lock	8	7	3
92-2289	Plate - Logo Toro	3	4	1	3296-73	Nut - Lock	7	21	3
92-9665	Screw - Phillips Hd.	7	17	5	3296-73	Nut - Lock	8	21	3
92-9665	Screw - Phillips Hd.	8	17	5	3296-74	Nut - Flange	7	24	2
93-0243	Shroud - QT Wedge	3	2	1	3296-74	Nut - Flange	8	24	2
93-0248	Decal - Warning	2	34	1	32121-120	Pin - Coil	6	52	1
93-3696	Decal - Deck	1	2	1	32144-70	Screw - Tapping	1	28	4
93-3697	Decal - Panel Front	7	15	1	32144-70	Screw - Thread Forming	5	16	1
93-3697	Decal - Panel Front	8	15	1	32144-73	Screw - Hex Washer Hd	3	18	3
93-3698	Decal - Engine	3	5	1	32144-85	Screw	5	35	2
93-4106	Blade - 21	3	13	1	32144-85	Screw - Hex Hd.	1	22	4
93-4107	Retainer - Blade	3	12	1	32144-102	Screw	3	9	3
93-4186	Cable - Throttle	7	30	1	32144-111	Screw - PPH	1	9	6
93-4186	Cable - Throttle	8	30	1	32144-112	Screw - Thr'd Form	2	40	1
93-4187	Cable - Brake	7	31	1	32144-121	Screw	3	3	2
93-4187	Cable - Brake	8	31	1					
93-4188	Cover - Belt	1	30	1					
93-4191	Decal - Instruction	7	13	1					
93-4192	Decal - Instruction	8	13	1					
93-8470	Screw - Clamp (P/W Eng.)	3	8	1					
94-1608	Stiffener - Blade	3	14	1					
218-461	Nut - Hex	8	38	1					
2210-316	Stop - Rope (P/W Eng.)	3	6	1					

OPTIONAL EQUIPMENT

- Recycler Side Discharge Kit Model No. 59197
- Recycler Bagging Kit Model No. 59195
- Dethatcher Kit Model No. 59131
- Mow & Feed Model No. 52070

*Not Illustrated

