


TORO®

MODEL NO. 20802BC-5900001 & UP
MODEL NO. 20807BC-5900001 & UP

PARTS CATALOG

48cm RECYCLER® MOWER

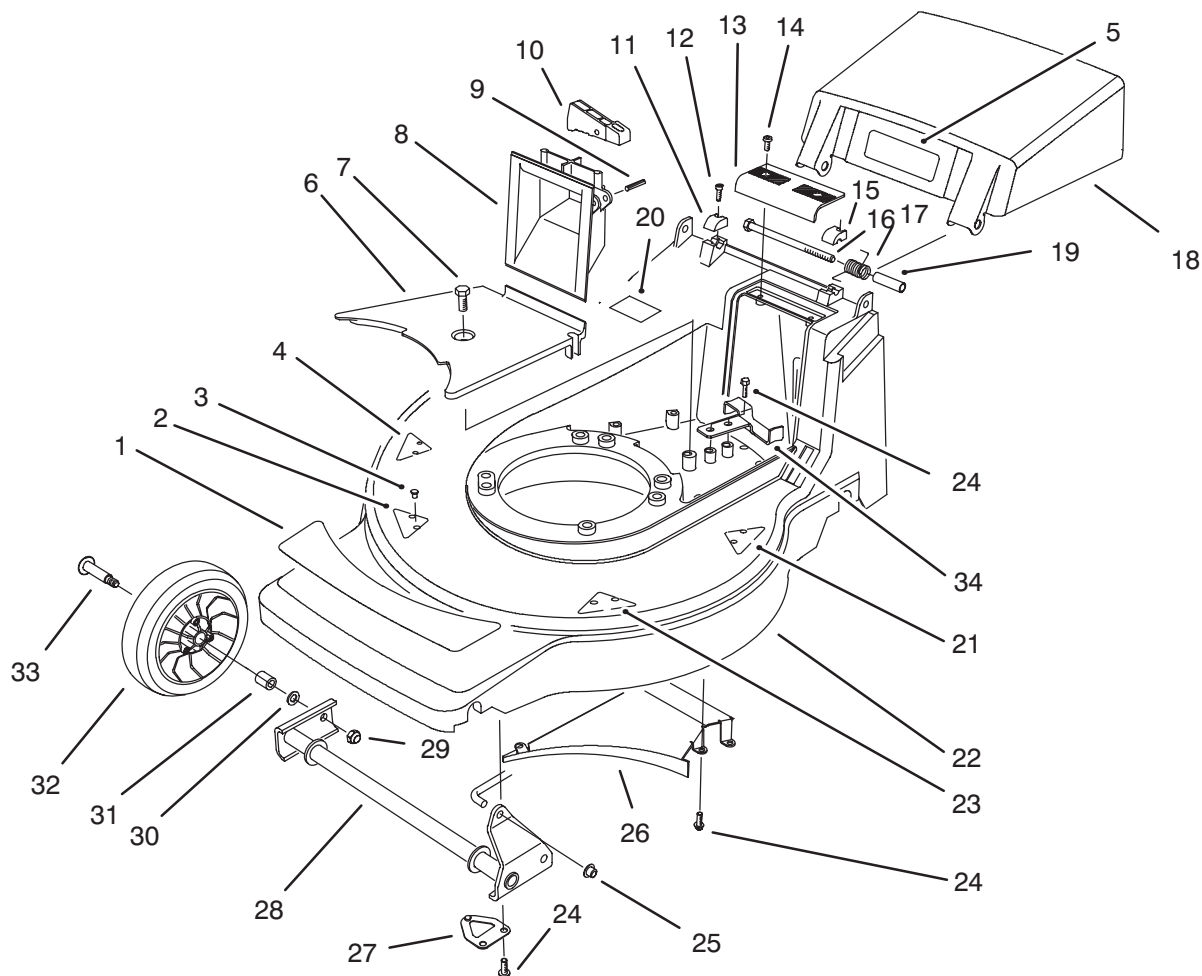

C-2272

HOUSING ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	92-7863	Decal - Deck	1
2	71-8920	Kicker - Front Right	1
3	32144-111	Screw - Phillips Hd.	8
4	71-9230	Kicker - Rear Right	1
†5	93-4105	Decal - Danger	1
6	71-7920	Cover - Belt	1
7	32144-70	Screw - Tapping	1
8	71-7870	Grip - Lower	1
9	3284-5	Pin - Groove	1
10	71-7930	Trigger - H.O.C.	1
11	71-7910	Cap - Bolt Hinge R.H.	1
12	65-5210	Screw - Thread Forming	2
13	71-7860	Grip - Upper	1
14	32144-97	Screw - Phillips Hd.	2
15	71-7900	Cap - Bolt Hinge L.H.	1
16	322-29	Screw - Hex Hd. Cap	2
†17	71-9840	Spring - Door	2
18	71-9800	Door - Discharge	1

Ref. No.	Part No.	Description	No. Used
19	71-8580	Spacer - Door	2
20	66-1700	Decal - Noise	1
21	71-9250	Kicker - Rear Left	1
†22	16-5989	Housing - Deck (Incl. Ref. #2-5, 20, 21, & 23)	1
23	71-9440	Kicker - Front Left	1
24	32144-4	Screw - Tapping (Model No. 20802BC Only)	8
24	32144-4	Screw - Tapping (Model No. 20807BC Only)	10
25	32112-11	Nut - Push	1
26	71-7990	Ramp - Discharge	1
27	71-8830	Retainer - Shaft	2
†28	71-7820	Pivot - Front	1
29	3296-5	Nut - Lock	2
30	40-1940	Washer	2
31	27-6250	Bushing	2

† Obtain From Toro Europe N.V.

Copyright 1994 The Toro Company
All Rights Reserved

TPS

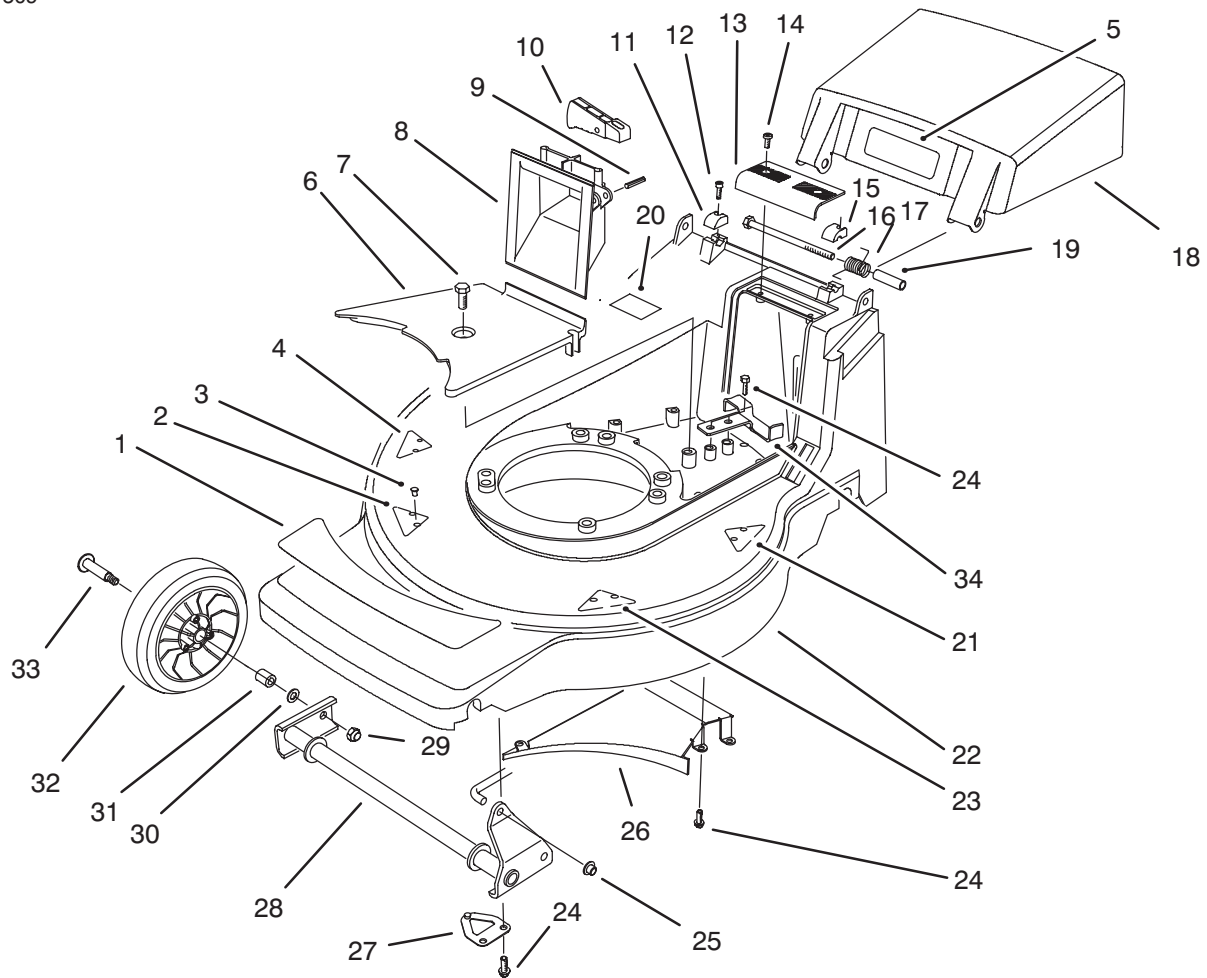


C-2272

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
32	46-1113	Wheel & Tire Assembly 7"	2
33	27-6230	(Incl. Ref. #31) Bolt - Wheel	2


Ref. No.	Part No.	Description	No. Used
34	71-7890	Guide - Belt Rear (Model No. 20807BC Only)	1

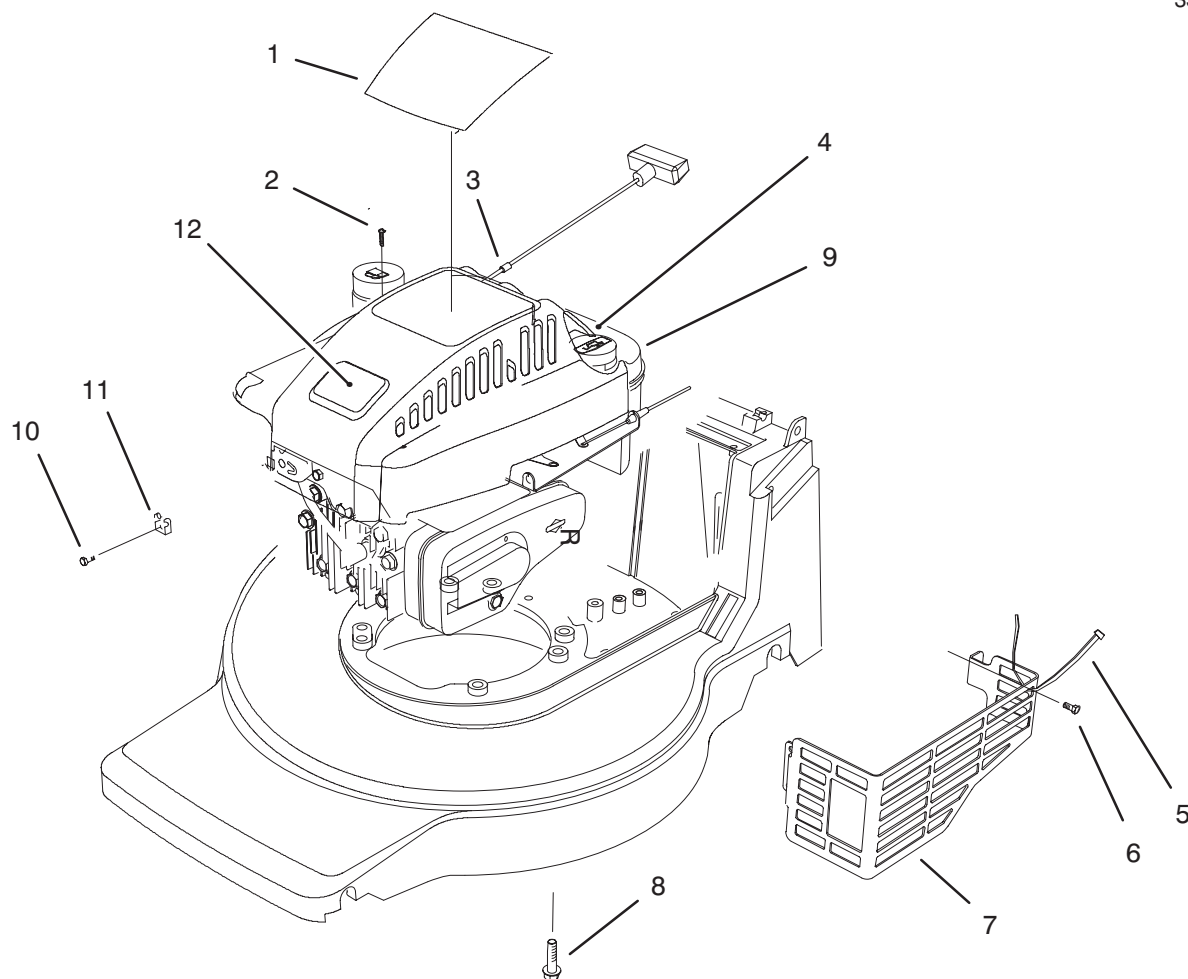

C-2273

ENGINE ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4354	Decal - Engine	1	7	92-7852	Shield - Muffler	1
2	32144-121	Screw - Mounting	2	8	32144-102	Screw - Engine	3
3	2210-316	Stop - Rope	1	9		Engine	1
4	93-0243	Shroud - QT Wedge	1	10	93-8470	Screw - Clamp	1
5	3290-378	Tie - Cable	1	11	2210-249	Clamp - Casing	1
6	32144-73	Screw - Hex Washer Hd. Thread Forming	3	12	92-2289	Plate - Logo Toro	1

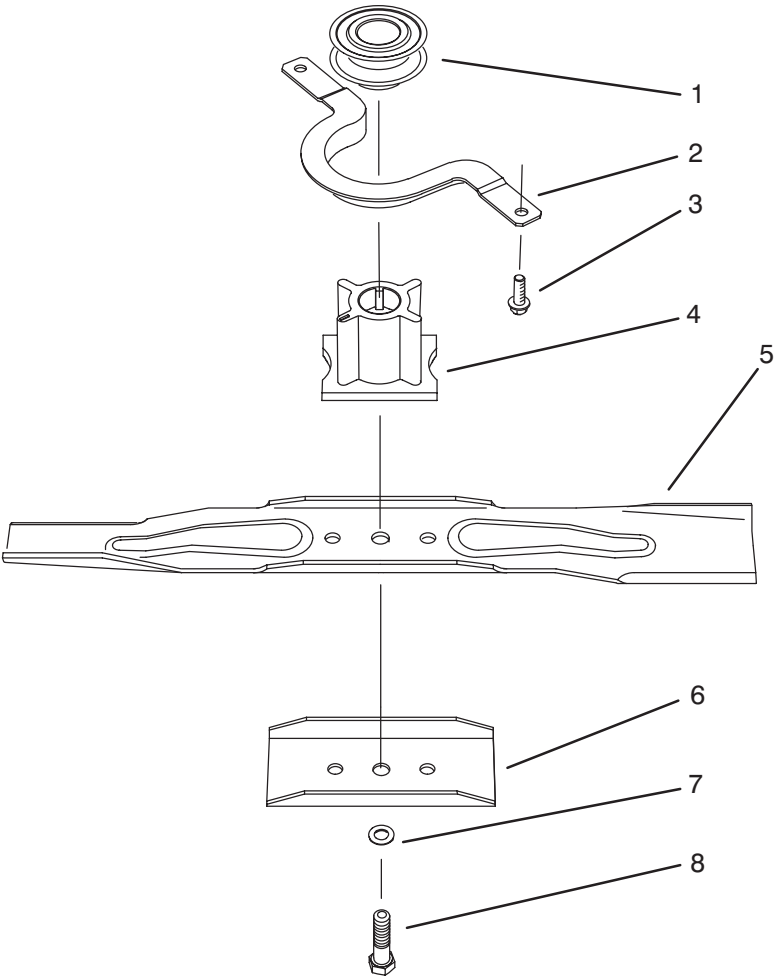

C-1012

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-7550	Pulley – Driver (Model No. 20807BC Only)	1	4	71-7940	Retainer – Blade	1
2	71-7960	Guide – Engine Belt (Model No. 20807BC Only)	1	5	71-9260	Blade – 48cm Recycler	1
3	32144-4	Screw – Tapping (Model No. 20807BC Only)	2	6	80-0510	Stiffener – Blade	1
				7	3253-22	Washer – Lock	1
				8	26-0672	Bolt – Blade	1

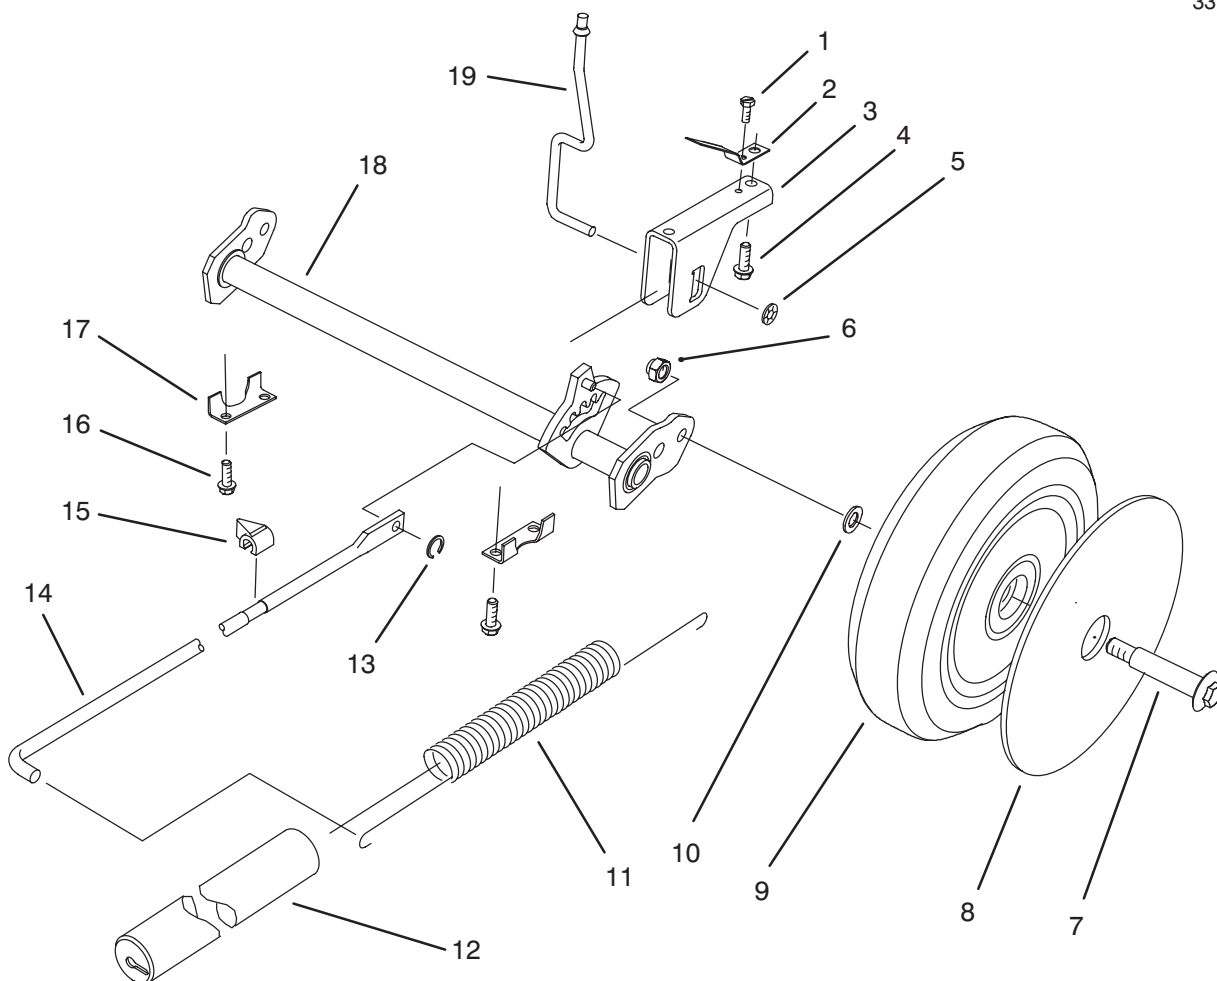


C-2006

REAR AXLE ASSEMBLY (Model No. 20802BC Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32144-31	Screw – Tapping	1	11	71-7740	Spring – Counterbalance	1
2	71-8060	Spring – Trigger Ret.	2	12	71-8450	Cover – Spring	1
3	71-8080	Saddle – H.O.C.	1	13	32151-93	Ring – Grip	1
4	63-8590	Screw	2	14	71-7970	Rod – Link	1
5	32112-13	Nut – Push	1	15	71-7980	Indicator – H.O.C.	1
6	3296-5	Nut – Lock	2	16	32144-4	Screw – Tapping	4
7	27-6230	Bolt – Wheel	2	17	71-7770	Plate – Securing Rear	2
8	92-7663	Cover – Wheel	1	†18	71-7800	Arm – Pivot	1
9	14-9949	Wheel & Tire Assembly	2	19	71-7840	Rod – Trigger	1
10	40-1940	Washer	2				

† Obtain From Toro Europe N.V.

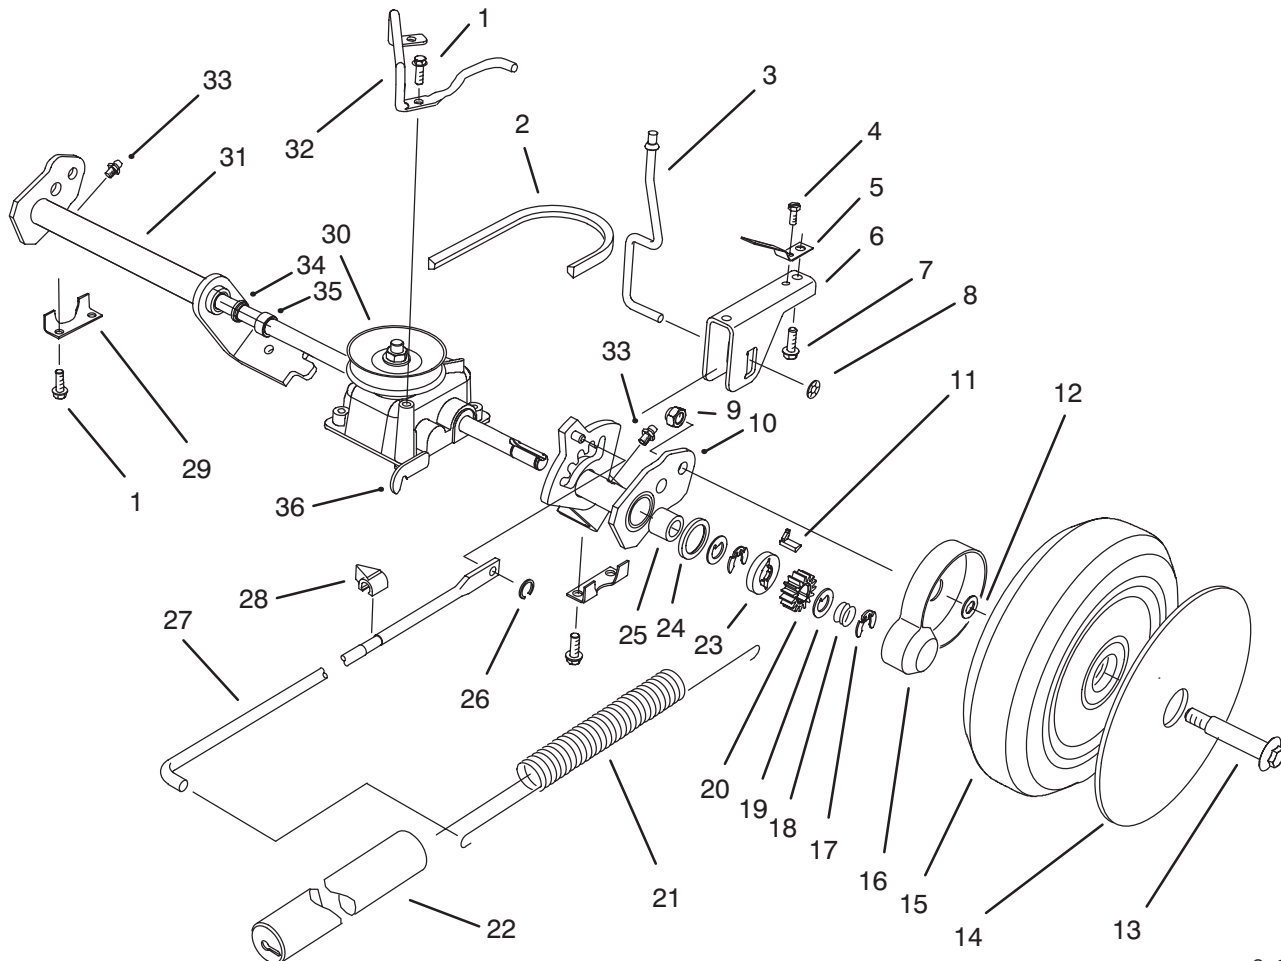

C-2013


REAR AXLE ASSEMBLY (Model No. 20807BC Only)

Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Tapping	6
2	71-9450	V-Belt	1
3	71-7840	Rod - Trigger	1
4	32144-31	Screw - Tapping	1
5	71-8060	Spring - Trigger Ret.	2
6	71-8080	Saddle - H.O.C.	1
7	63-8590	Screw	2
8	32112-13	Nut - Push	1
9	3296-5	Nut - Lock	2
†10	92-9677	Arm - Pivot L.H. (Incl. Ref. #25, & 33-35)	1
11	66-6050	Key - Rocking L.H.	1
*	66-6040	Key - Rocking R.H.	1
12	74-1670	Spacer - Wheel	2
13	27-6230	Bolt - Wheel	2
14	92-7663	Cover - Wheel	1
15	14-9959	Wheel & Tire Assembly	2
16	74-1660	Cover - Wheel	2
17	65-2720	Ring - Retaining	4
18	65-4720	Spring - Compression	2

Ref. No.	Part No.	Description	No. Used
19	65-4740	Washer - Thrust Keyed	4
20	65-4750	Gear - Pinion	2
21	71-7740	Spring - Counterbalance	1
22	71-8450	Cover - Spring	1
23	65-4760	Washer	2
24	65-4710	Ring - Friction	2
25	48-2060	Bearing - Roller	2
26	32151-93	Ring - Grip	1
27	71-7970	Rod - Link	1
28	71-7980	Indicator - H.O.C.	1
29	71-7770	Plate - Securing Rear	2
†30	71-9600	Gear Case Assembly	1
†31	92-9680	Arm - Pivot R.H. (Incl. Ref. #25, & 33-35)	1
†32	71-9850	Retainer - Belt	1
33	302-26	Fitting - Grease	2
34	47-6730	Seal - Oil	2
35	47-2890	Bushing	2
36	71-9630	Bracket - Traction	1

*Not Illustrated

† Obtain From Toro Europe N.V.

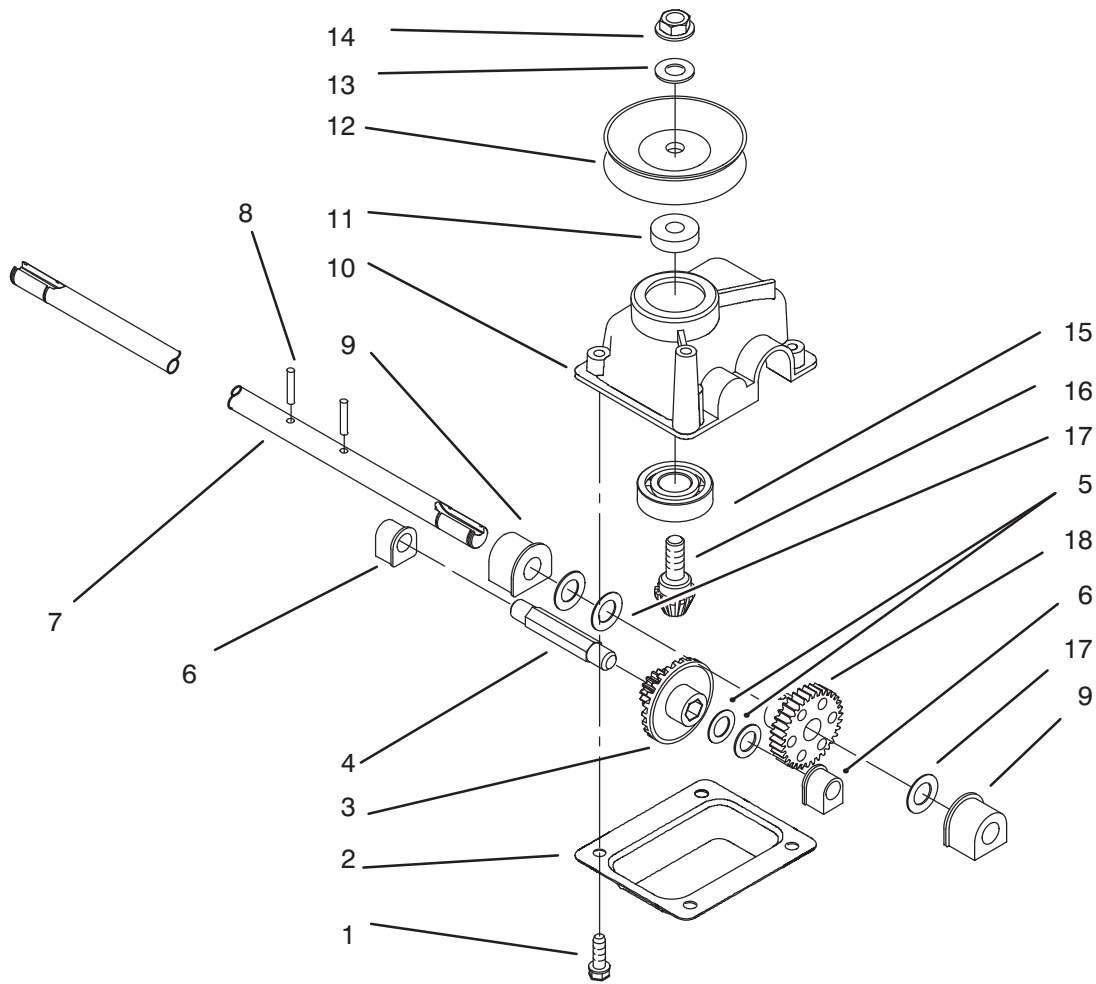


C-1292a

GEAR CASE ASSEMBLY (Model No. 20807BC Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw - Taptite	4	11	62-6660	Spacer	1
2	614668	Cover - Gear Case	1	12	71-9610	Pulley - Half	2
3	55-3760	Pinion - 15 Tooth	1	13	3256-24	Washer	1
4	614696	Shaft - Intermediate	1	14	3296-5	Nut	1
5	36-4791	Washer	2	15	38-7820	Bearing - Ball	1
6	60-8750	Bushing	2	16	60-8890	Gear - Bevel Pinion	1
†7	71-9620	Shaft - Output	1	17	36-4780	Washer - Thrust	3
8	32121-114	Pin - Groove	2	18	614596	Gear 34 Tooth	1
9	60-8850	Bushing - Output	2	†*	71-9600	Gear Case Ass'y Complete	1
10	614578	Cover - Gearcase	1				

*Not Illustrated

† Obtain From Toro Europe N.V.

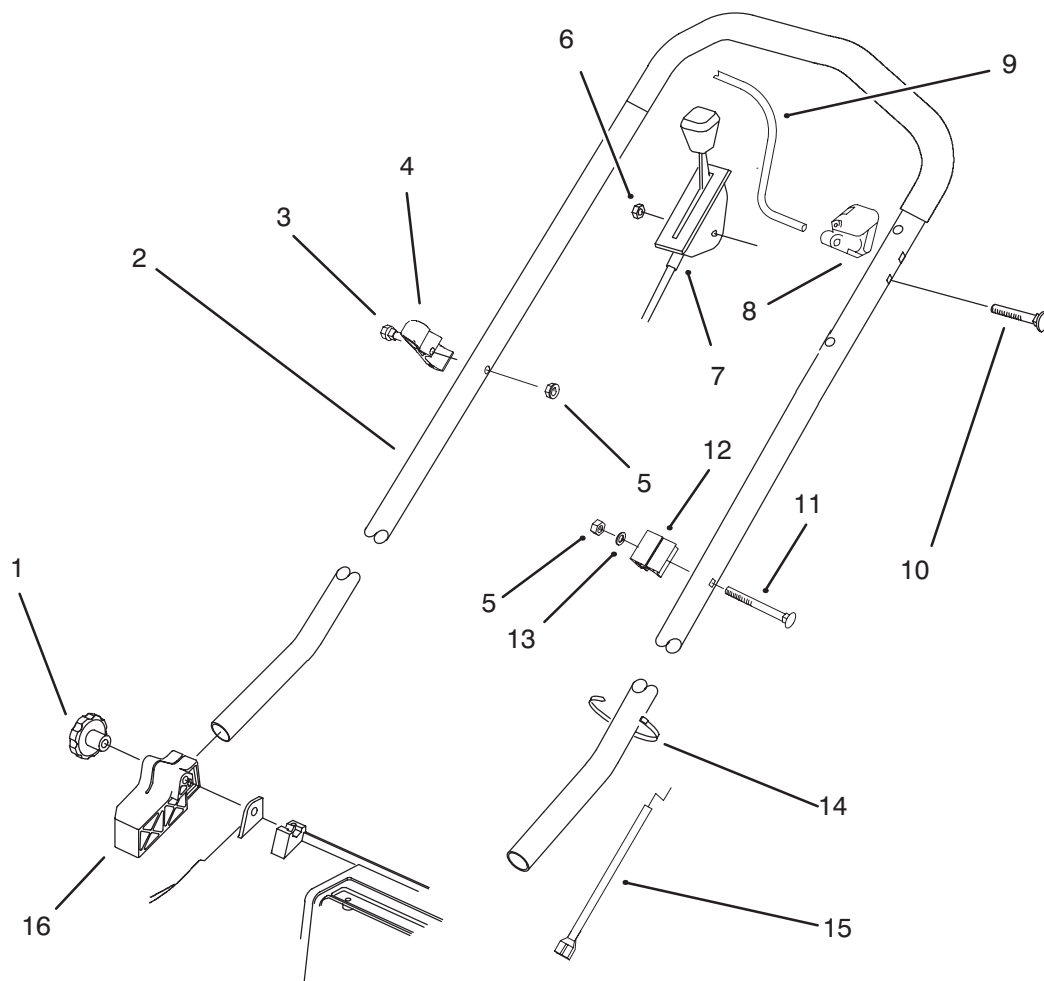

C-2274


HANDLE ASSEMBLY (Model No. 20802BC Only)

Ref. No.	Part No.	Description	No. Used
1	19-4050	Knob	2
2	71-9024	Handle	1
3	321-52	Screw - Hex Hd. Cap	1
4	93-3772	Guide - Rope	1
5	3296-42	Nut - Lock	2
6	3296-56	Nut - Lock	1
7	93-1118	Control - Throttle	1
8	92-5412	Stop - Pivot	1
9	93-0336	Bail - Control	1

Ref. No.	Part No.	Description	No. Used
10	46-6430	Screw - Handle	1
11	46-6432	Screw - Handle	1
12	46-6980	Support - Cable	1
13	3256-22	Washer - Flat	1
14	3290-378	Tie - Cable	1
15	93-1116	Cable - Brake	1
†16	71-8100	Mount - Handle R.H.	1
†*	71-8090	Mount - Handle L.H.	1

*Not Illustrated

† Obtain From Toro Europe N.V.

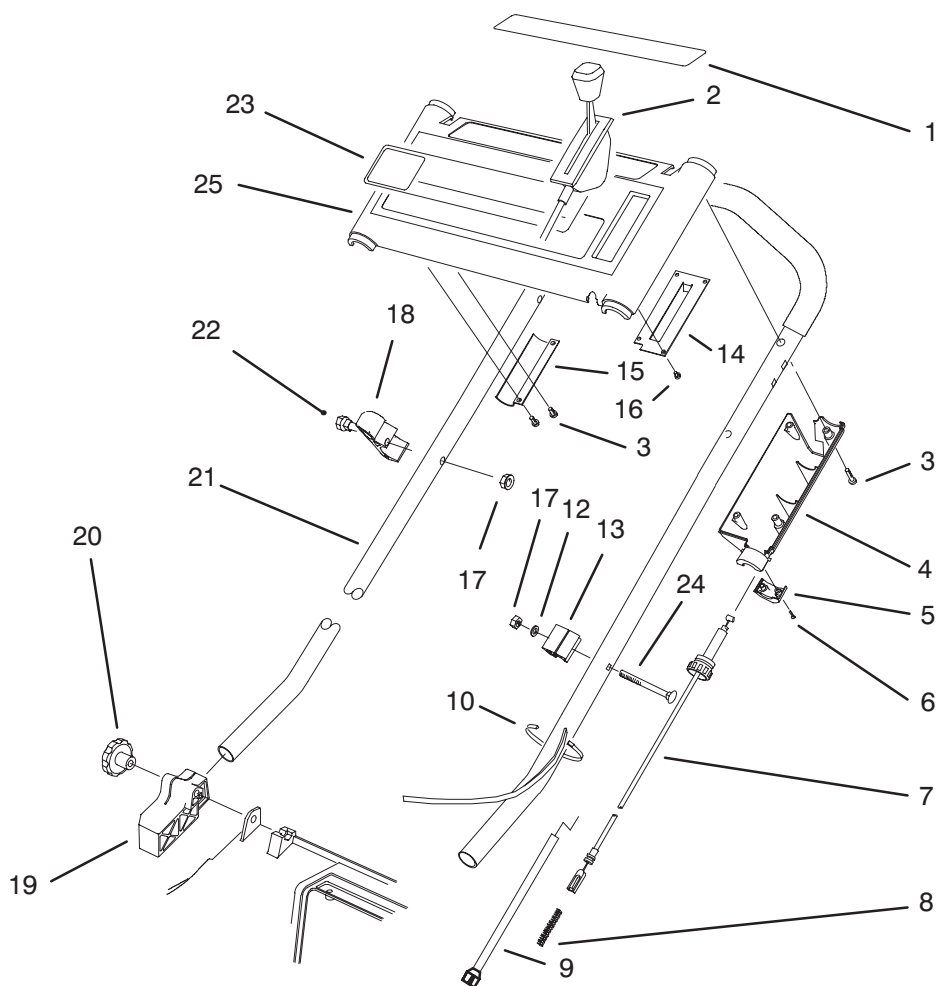


C-2275

HANDLE ASSEMBLY (Model No. 20807BC Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-6652	Decal - Instruction	1	15	71-8130	Bracket - Control	1
2	93-1117	Control - Throttle	1	16	32144-98	Screw - Phillips Pan Hd.	4
3	32144-97	Screw - Phillips Pan Hd.	5	17	3296-42	Nut - Lock	2
4	93-0339	Cover - Throttle Lower	1	†18	93-3772	Guide - Rope	1
5	71-7630	Cap - Throttle Lower	1	†19	71-8100	Mount - Handle R.H.	1
6	32144-99	Screw - Phillips Pan Hd.	2	†*	71-8090	Mount - Handle L.H.	1
7	93-1119	Cable - Traction	1	20	19-4050	Knob	2
8	71-8310	Spring - Compression	1	21	71-9023	Handle Assembly	1
9	93-1116	Cable - Brake	1	22	321-52	Screw - Hex Hd. Cap	1
10	3290-378	Tie - Cable	1	23	92-7865	Decal - Panel SP	1
12	3256-22	Washer - Flat	1	24	46-6432	Screw - Handle	1
13	46-6980	Support - Cable	1	25	16-9519	Panel - Control (Incl. Ref. #1, & 23)	1
14	71-8040	Plate - Throttle	1				

*Not Illustrated

† Obtain From Toro Europe N.V.

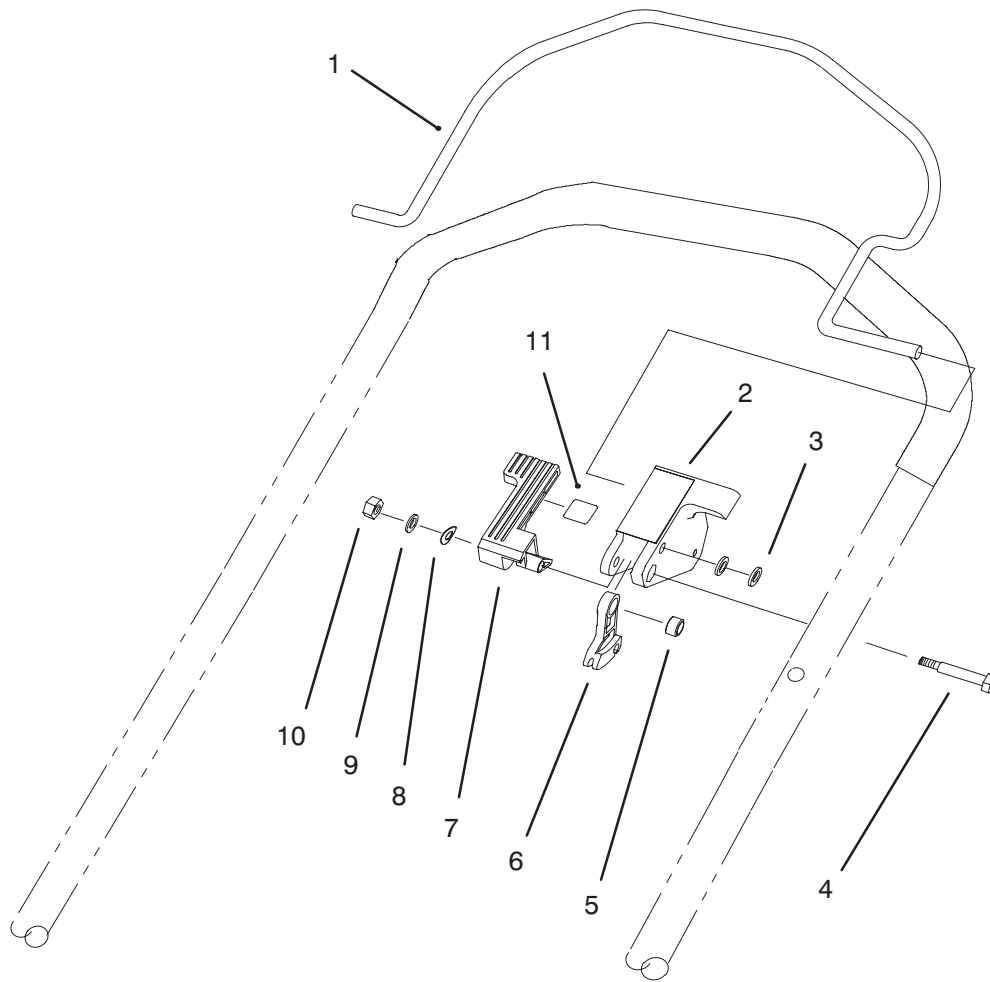


C-2276

CONTROL ASSEMBLY (Model No. 20807BC Only)

Ref. No.	Part No.	Description	No. Used
1	93-0335	Bail - Control SP	1
2	93-0340	Stop - Pivot	1
3	3256-70	Washer - Flat	2
4	92-3132	Bolt - Shoulder	1
5	92-3133	Spacer - Lever Traction	1
6	46-5520	Lever - Traction	1

Ref. No.	Part No.	Description	No. Used
7	92-2299	Lever - Shift	1
8	92-2298	Washer - Spring	1
9	3256-49	Washer - Flat	1
10	3296-2	Nut - Lock	1
11	93-6653	Decal - Traction	1

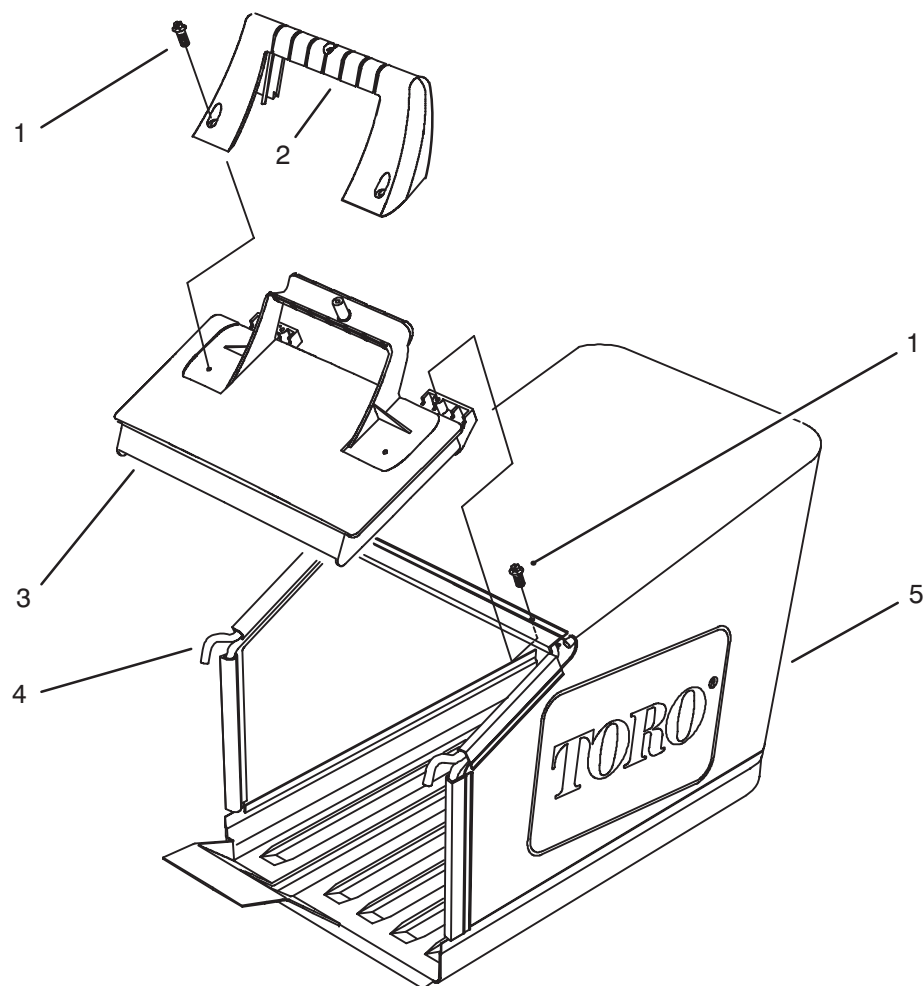


C-1509

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw – Thr'd Form	5
†2	71-9480	Handle – Door	1
†3	71-9470	Door – Bag	1

Ref. No.	Part No.	Description	No. Used
†4	71-9900	Frame – Bag	1
5	71-9460	Bag – Grass	1

† Obtain From Toro Europe N.V.

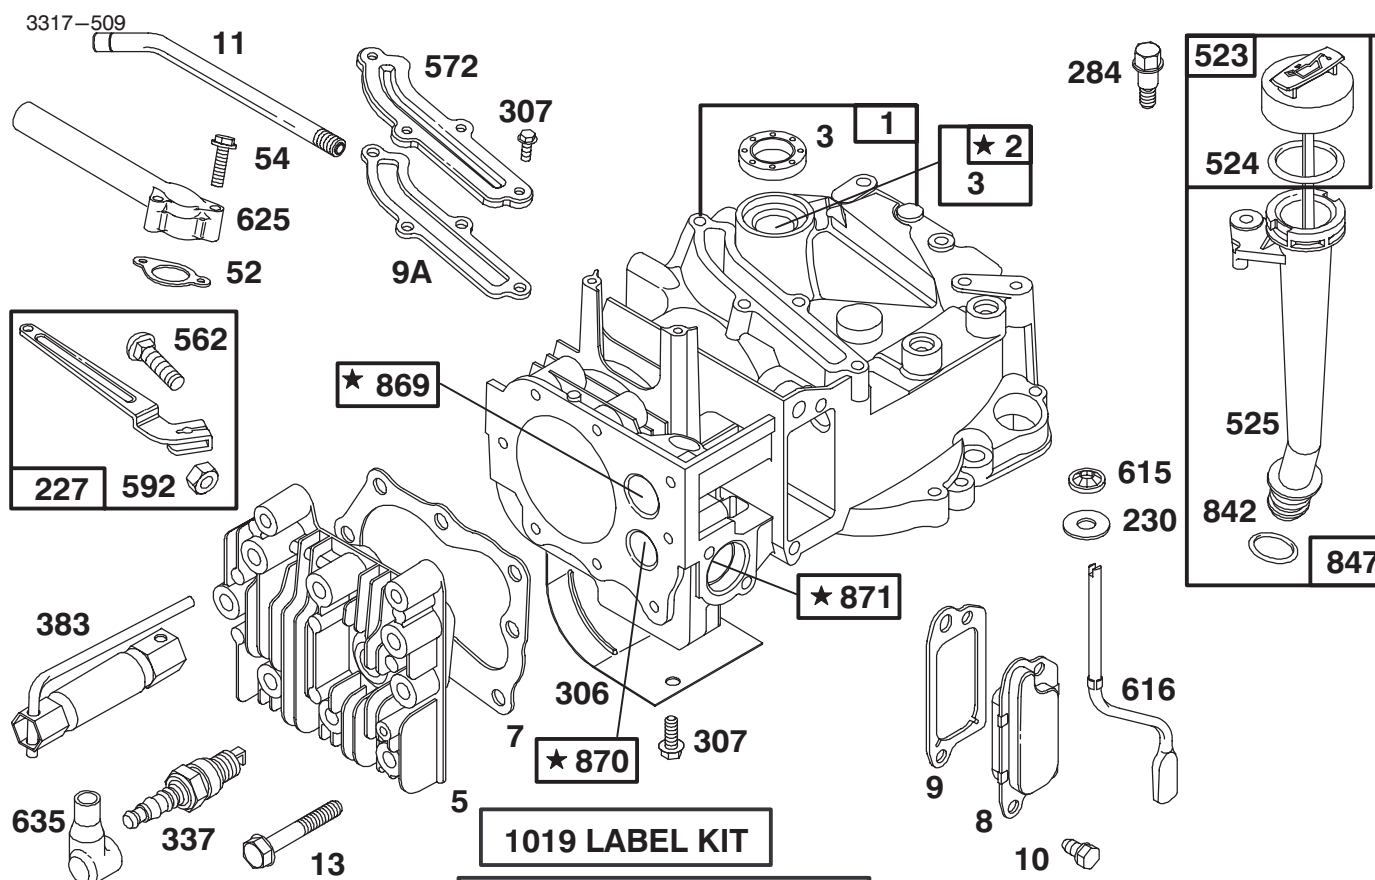

★ REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.

1058 OWNER'S MANUAL


Assemblies include all parts shown in
frames.

ENGINE BRIGGS & STRATTON MODEL 12A802-0611-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing — Cylinder	1
★3	299819	Seal — Oil	1
5	214349	Head — Cylinder	1
★7	272916	Gasket — Cylinder Head	1
8	494489	Breather — Valve Chamber	1
★9	272481	Gasket — Breather	1
★9A	272238	Gasket — Baffle Plate	1
10	94650	Screw — Breather Mtg.	1
11	231933	Tube — Breather	1
13	94547	Screw — Cylinder Head	1
★52	272199	Gasket — Intake Elbow	1
54	94526	Screw — Intake Elbow Mounting	1
227	492349	Lever Assembly — Gov.	1
230	67072	Washer — Gov. Crank	1
284	94511	Screw — Hex. Head	1
306	224324	Shield — Cylinder	1
307	94515	Screw — Hex. Head	1
337	802592	Plug — Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench — Spark Plug	1
523	495264	Cap With Dipstick — Oil Filler	1
★524	280393	Seal — Filler Tube	1
525	495265	Tube — Oil Filler	1
562	92613	Bolt — Governor Lever	1
572	224328	Baffle — Cylinder	1
592	231082	Nut — Hex.	1
615	94474	Fastener	1
616	262578	Crank — Governor	1
625	281085	Tube — Fuel Intake	1
635	66538	Elbow — Spark Plug	1
★842	280966	Seal — O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat — Intake Valve	1
870	213513	Seat — Exhaust Valve	1
871	262001	Guide — Exhaust Valve	1
		Note: 63709 Guide — Intake Valve	1
1019	494256	Label Kit	1
1058	272262	Owner's Manual	1

★ Included in Gasket Set—Part No. 496117.

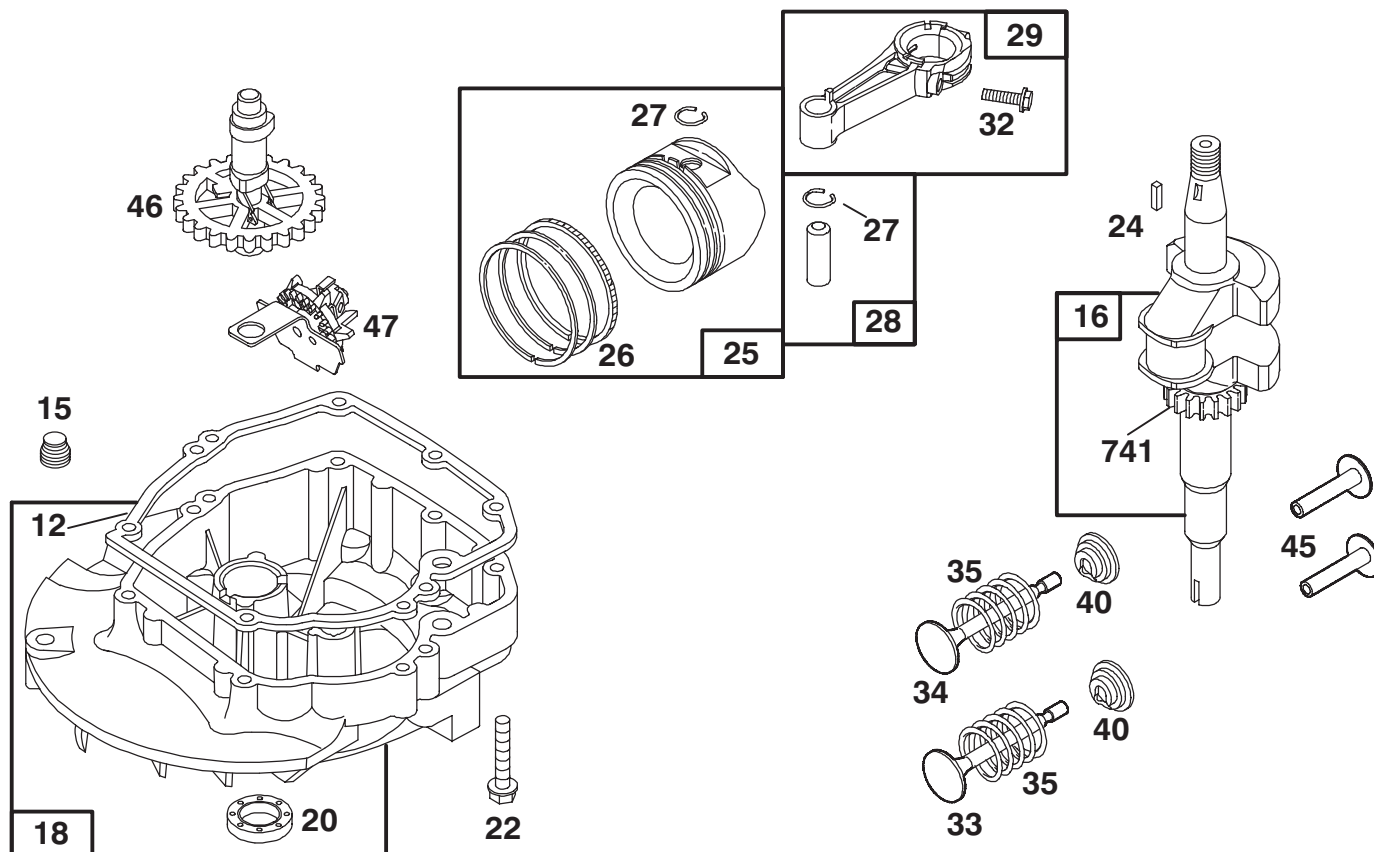


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12A802-0611-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket — Crankcase	1	27	26026	Lock — Piston Pin	1
15	94720	Plug — Oil Drain	1	28	298909	Pin — Piston (Standard)	1
16	494546	Crankshaft	1		298908	Pin — Piston (.005" O.S.)	1
		Note: Order 94388 For Timing Gear Key.	1	29	490566	Rod Assembly — Conn.	1
18	493279	Sump — Engine	1			Note: For Conn. Rod With .020" Undersize Crankpin Bearing — Order No. 490743.	1
★20	399781	Seal — Oil	1	32	94699	Screw — Conn. Rod	1
22	94220	Screw — Hex. Head	1	33	262651	Valve — Exhaust	1
		Note: 94612 Screw — Hex. Head (One (1) Used in Hole Nearest Breather)	1	34	262652	Valve — Intake	1
24	222698	Key — Flywheel	1	35	262224	Spring — Valve	1
25	493262	Piston Assy. (Standard)	1	40	93312	Retainer — Valve Spring	1
	493385	Piston Assy. (.010" O.S.)	1	45	262204	Tappet — Valve	1
	493386	Piston Assy. (.020" O.S.)	1	46	492830	Gear — Cam	1
	493387	Piston Assy. (.030" O.S.)	1	47	493737	Slinger — Oil	1
26	493261	Ring Set (Standard)	1	741	262598	Gear — Timing	1
	493388	Ring Set (.010" O.S.)	1				
	493389	Ring Set (.020" O.S.)	1				
	493390	Ring Set (.030" O.S.)	1				

★ Included in Gasket Set—Part No. 496117.

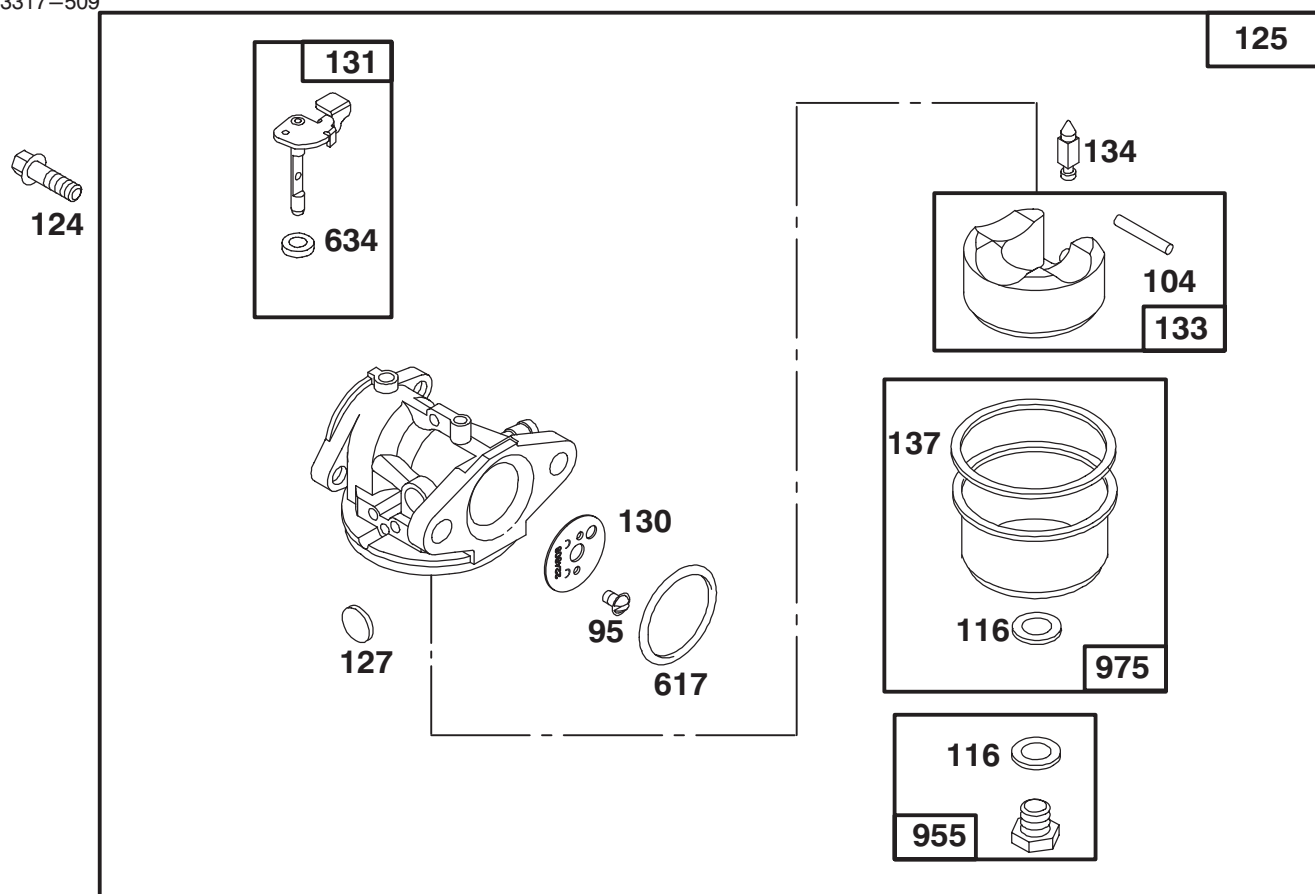

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12A802-0611-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Throttle Valve Mounting	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket–Sealing (Sold in Kit Only)	1
124	94525	Screw – Carburetor Mtg.	1
125	497314	Carburetor	1
●127		Plug – Welch (Sold in Kit Only)	1
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float Assy. – Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer–Shaft (Sold in Kit Only)	1
955	497315	Screw – Bowl Mtg. (Std.)	1
		Note: 496495 Screw – Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. – Carburetor	1

●Included in Carburetor Kit–Part No. 493762.

◆Included in Carburetor Gasket Set–Part No. 490937.

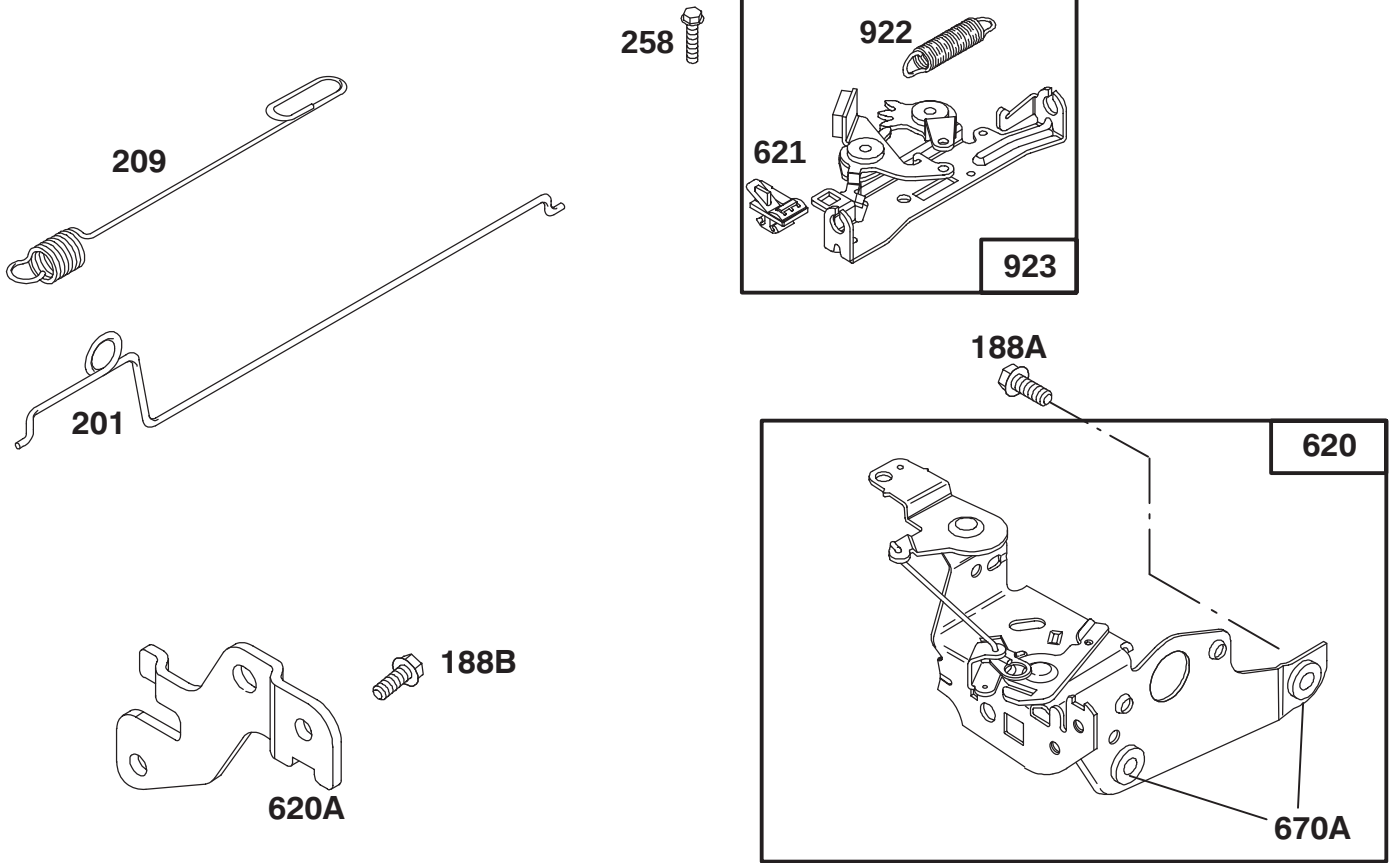


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12A802-0611-01

Ref. No.	Part No.	Description	No. Used
188A	94644	Screw – Hex. Head	1
188B	94602	Screw – Hex. Head	1
201	262579	Link – Governor	1
209	263045	Spring – Governor	1
258	94512	Screw–Hex. Head	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
670A	493823	Spacer – Bracket	1
922	262640	Spring–Brake	1
923	493442	Brake Assembly	1

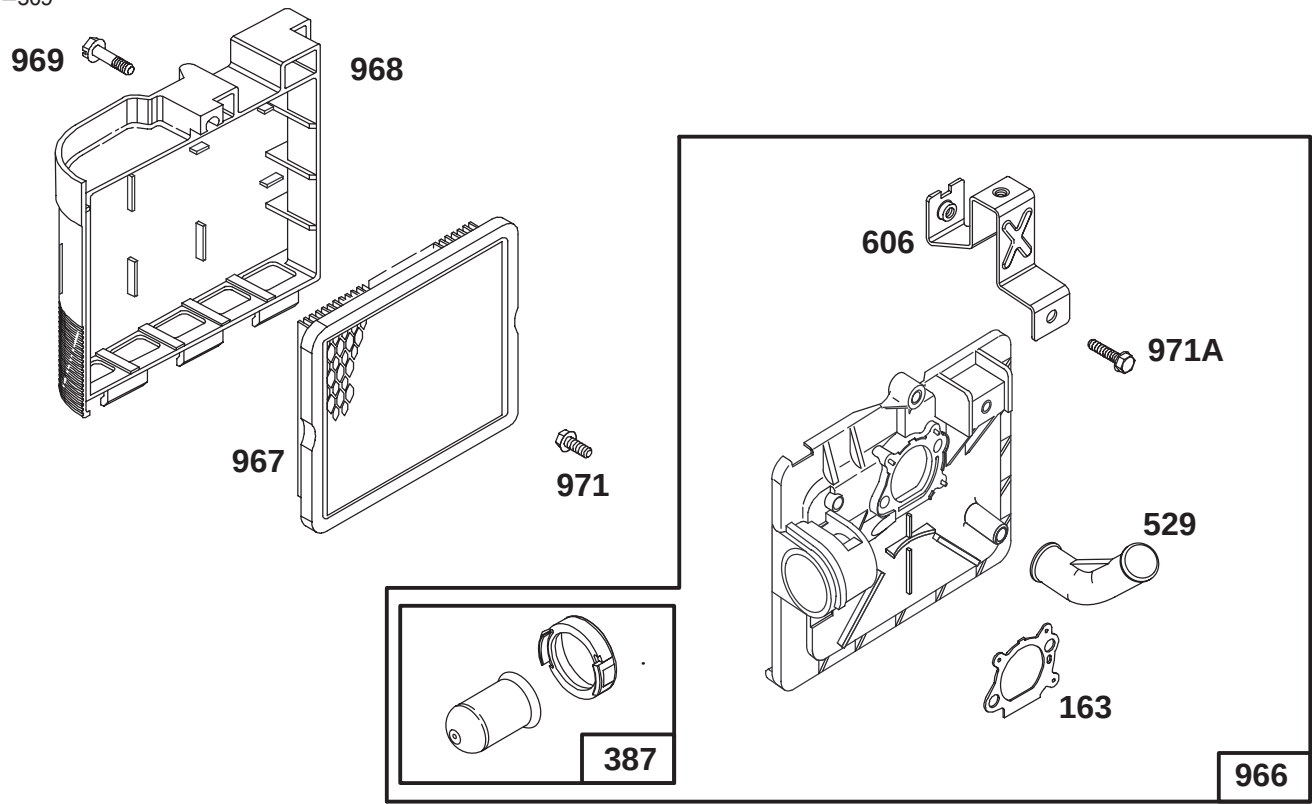


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12A802-0611-01

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket — Air Cleaner	1
387	496115	Primer—Carburetor	1
529	281299	Grommet — Breather	1
606	224815	Strap — Bracket	1
966	496116	Base — Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
967	491588	Filter — Air	1
968	281340	Cover — Air Cleaner	1
969	94120	Screw — Cover Mtg.	1
971	94121	Screw — Air Cleaner	1
971A	94749	Screw — Hex. Head	1


★ Included in Gasket Set—Part No. 496117.

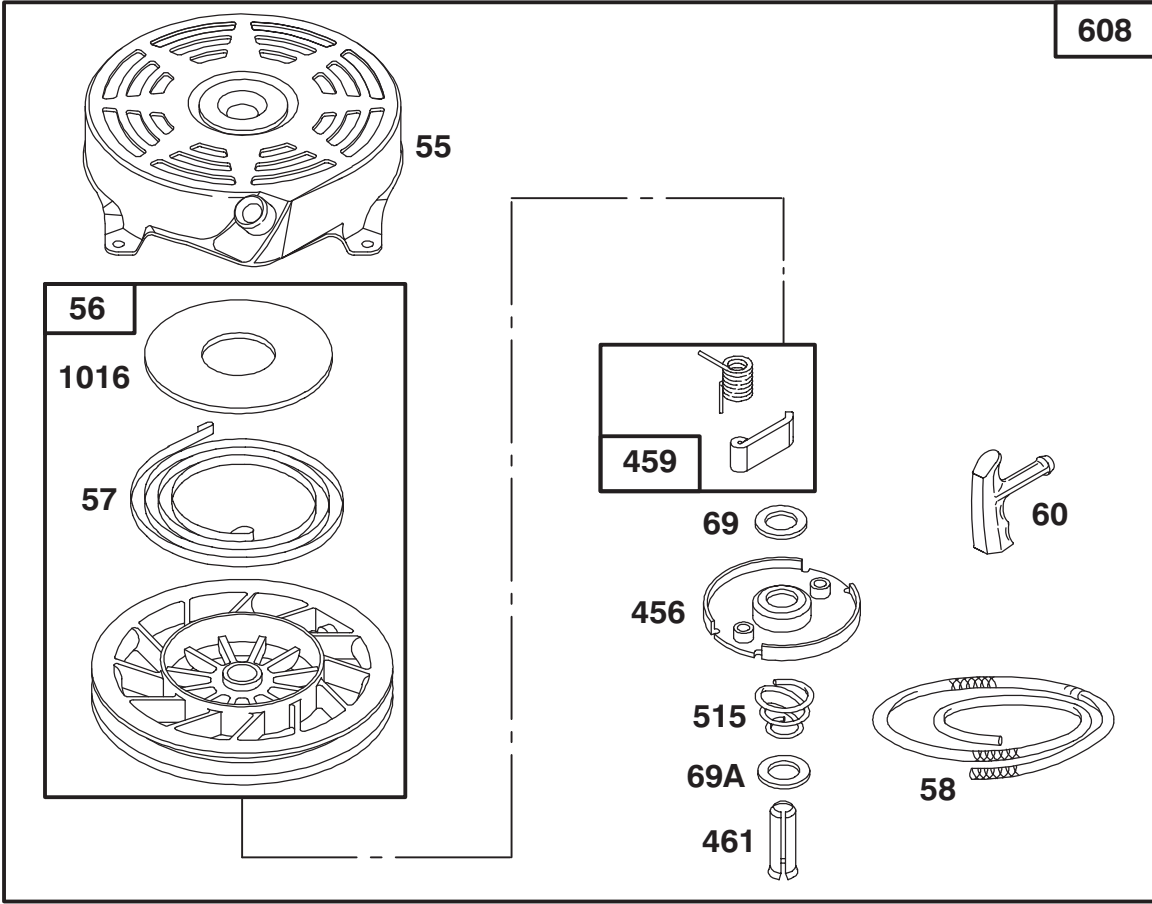

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12A802-0611-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
55	492831	Housing – Rewind Starter	1	459	492833	Pawl – Starter	1
56	493824	Pulley – Rewind Starter	1	461	262626	Pin – Starter	1
57	262594	Spring – Rewind Starter	1	515	262625	Spring – Torsion	1
58	280399	Rope – Rewind Starter	1	608	493295	Starter Assy. – Rewind	1
60	393152	Handle – Rewind Starter	1	Includes:			
69	280973	Washer – Rewind Starter	1			94128 Screw – Hex. Hd.	1
69A	224322	Washer – Rewind Starter	1			92987 Nut – Hex.	1
456	224321	Retainer – Rewind Starter	1	1016	224278	Cover – Rewind Starter	1




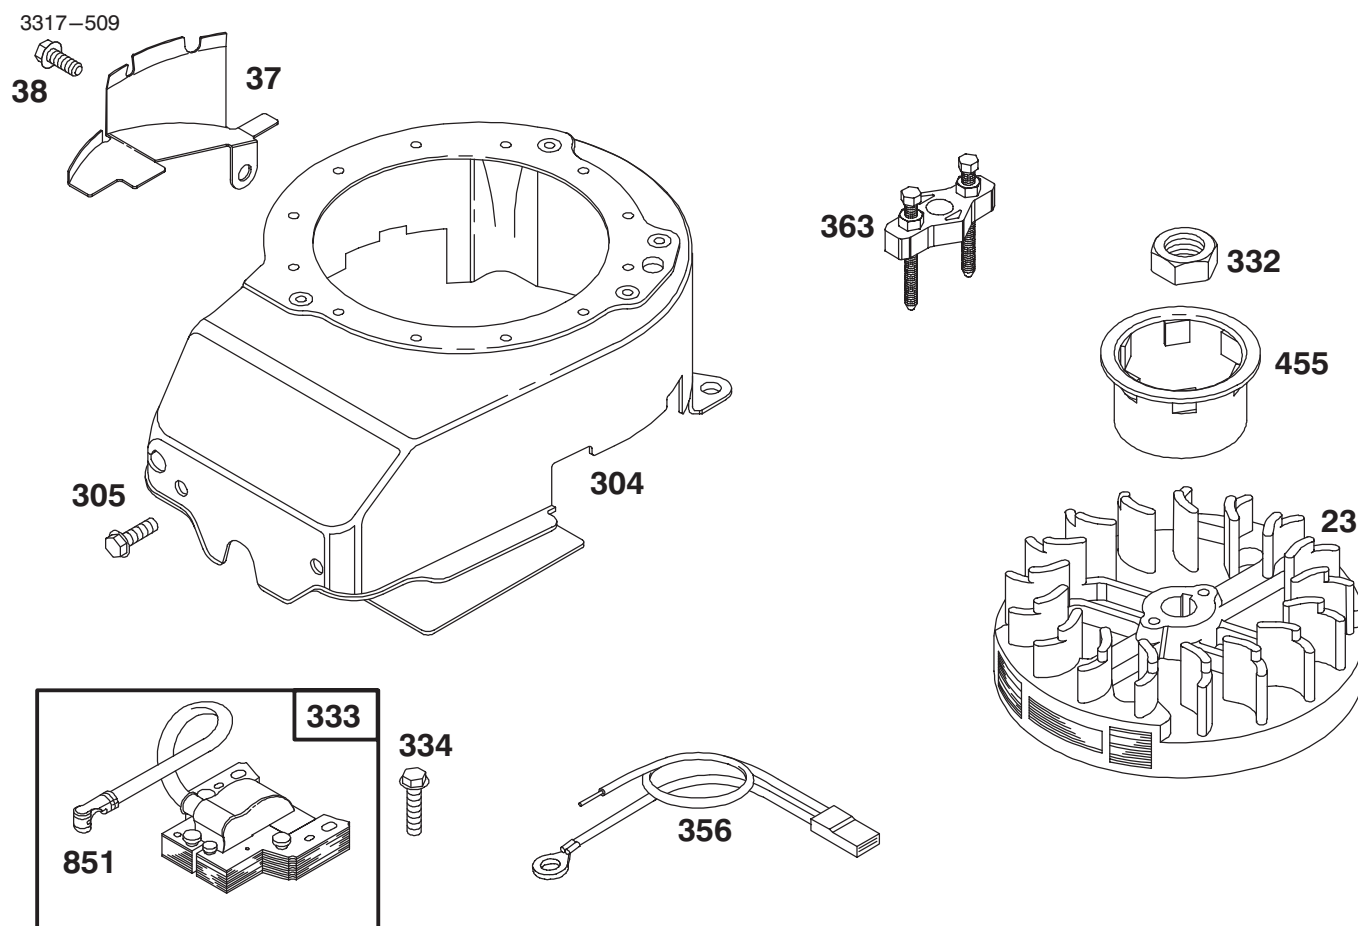


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12A802—0611—01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard — Flywheel	1
38	94608	Screw — Hex. Head	1
304	493293	Housing — Blower	1
305	94513	Screw — Sem	1
332	92284	Nut — Flywheel	1

Ref. No.	Part No.	Description	No. Used
333	802574	Armature — Magneto	1
334	93381	Screw — Sem	1
356	398808	Wire — Ground	1
363	19069	Flywheel Puller	1
455	224250	Cup — Starter	1
851	493880	Terminal — Ignition Cable	1

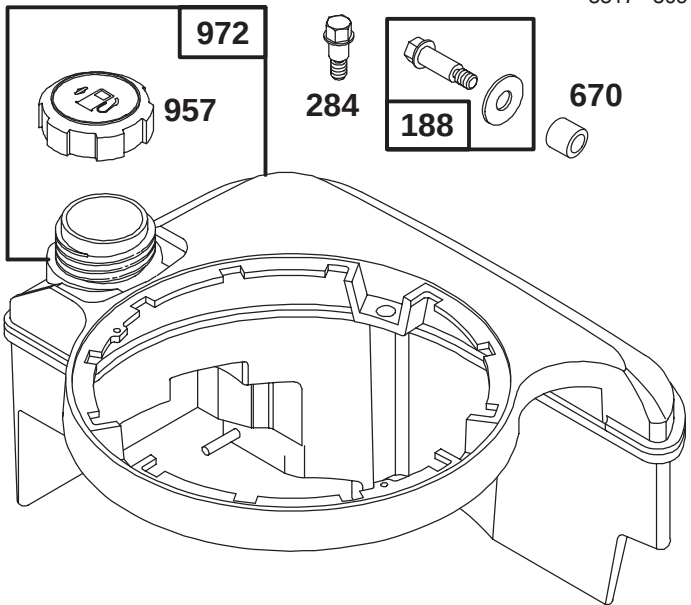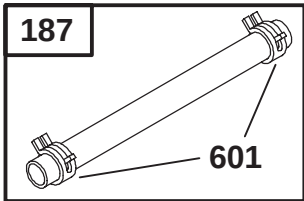
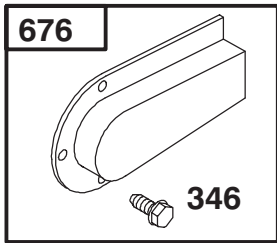
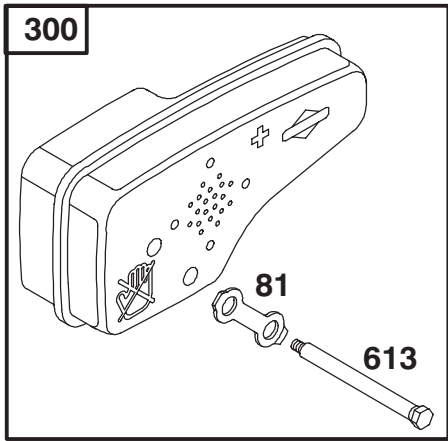


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12A802-0611-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188	398540	Screw – Tank Mounting	1
284	94511	Screw – Hex. Head	1
300	496106	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93807	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Muffler Mtg.	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

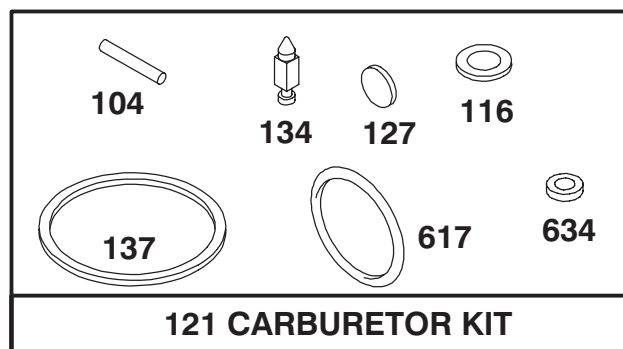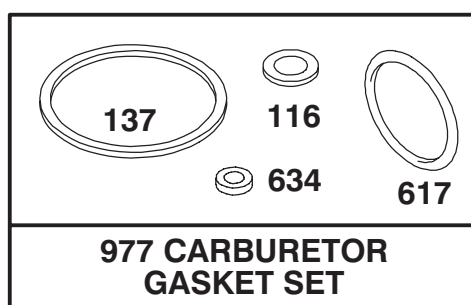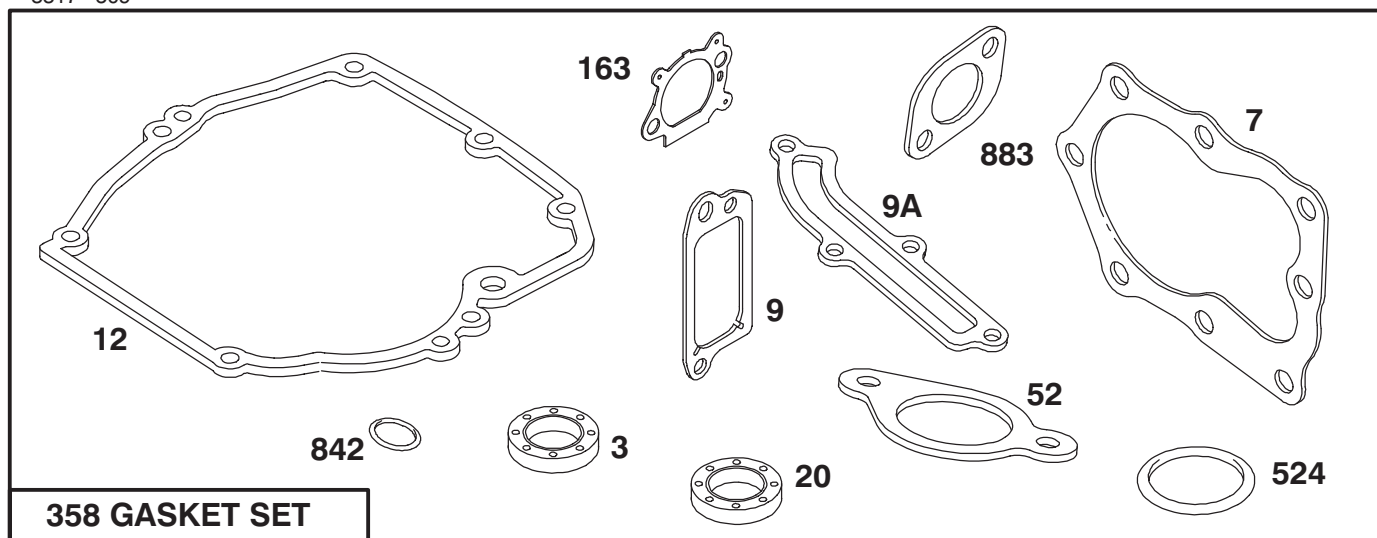

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12A802-0611-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272916	Gasket – Cylinder Hd.	1
★9	272481	Gasket – Valve Cover	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Breather	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket – Sealing (Sold in Kit Only)	1
121	493762	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
★842	280966	Seal – O-Ring	1
★883	272253	Gasket – Exhaust	1
977	490937	Gasket Set – Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 496117.

TORO PART NUMBER INDEX

3317-509

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
614578	Cover – Gearcase	7 10 1	71-7930	Trigger – H.O.C.	1 10 1
614596	Gear 34 Tooth	7 18 1	71-7940	Retainer – Blade	4 4 1
614668	Cover – Gear Case	7 2 1	71-7960	Guide – Engine Belt	4 2 1
614696	Shaft – Intermediate	7 4 1	71-7970	Rod – Link	5 14 1
14-9949	Wheel & Tire Assembly	5 9 2	71-7970	Rod – Link	6 27 1
14-9959	Wheel & Tire Assembly	6 15 2	71-7980	Indicator – H.O.C.	5 15 1
16-5989	Housing – Deck	1 22 1	71-7980	Indicator – H.O.C.	6 28 1
16-9519	Panel – Control	9 25 1	71-7990	Ramp – Discharge	1 26 1
19-4050	Knob	8 1 2	71-8040	Plate – Throttle	9 14 1
19-4050	Knob	9 20 2	71-8060	Spring – Trigger Ret.	5 2 2
26-0672	Bolt – Blade	4 8 1	71-8060	Spring – Trigger Ret.	6 5 2
27-6230	Bolt – Wheel	5 7 2	71-8080	Saddle – H.O.C.	5 3 1
27-6230	Bolt – Wheel	6 13 2	71-8080	Saddle – H.O.C.	6 6 1
27-6230	Bolt – Wheel	2 33 2	71-8090	Mount – Handle L.H.	8 * 1
27-6250	Bushing	1 31 2	71-8090	Mount – Handle L.H.	9 * 1
36-4780	Washer – Thrust	7 17 3	71-8100	Mount – Handle R.H.	8 16 1
36-4791	Washer	7 5 2	71-8100	Mount – Handle R.H.	9 19 1
38-7820	Bearing – Ball	7 15 1	71-8130	Bracket – Control	9 15 1
40-1940	Washer	5 10 2	71-8310	Spring – Compression	9 8 1
40-1940	Washer	1 30 2	71-8450	Cover – Spring	5 12 1
46-1113	Wheel & Tire Assembly 7	2 32 2	71-8450	Cover – Spring	6 22 1
46-5520	Lever – Traction	10 6 1	71-8580	Spacer – Door	1 19 2
46-6430	Screw – Handle	8 10 1	71-8830	Retainer – Shaft	1 27 2
46-6432	Screw – Handle	8 11 1	71-8920	Kicker – Front Right	1 2 1
46-6432	Screw – Handle	9 24 1	71-9023	Handle Assembly	9 21 1
46-6980	Support – Cable	8 12 1	71-9024	Handle	8 2 1
46-6980	Support – Cable	9 13 1	71-9230	Kicker – Rear Right	1 4 1
47-2890	Bushing	6 35 2	71-9250	Kicker – Rear Left	1 21 1
47-6730	Seal – Oil	6 34 2	71-9260	Blade – 48cm Recycler	4 5 1
48-2060	Bearing – Roller	6 25 2	71-9440	Kicker – Front Left	1 23 1
49-2040	Screw – Taptite	7 1 4	71-9450	V-Belt	6 2 1
55-3760	Pinion – 15 Tooth	7 3 1	71-9460	Bag – Grass	11 5 1
60-8750	Bushing	7 6 2	71-9470	Door – Bag	11 3 1
60-8850	Bushing – Output	7 9 2	71-9480	Handle – Door	11 2 1
60-8890	Gear – Bevel Pinion	7 16 1	71-9600	Gear Case Ass'y Complete	7 * 1
62-6660	Spacer	7 11 1	71-9600	Gear Case Assembly	6 30 1
62-7550	Pulley – Driver	4 1 1	71-9610	Pulley – Half	7 12 2
63-8590	Screw	5 4 2	71-9620	Shaft – Output	7 7 1
63-8590	Screw	6 7 2	71-9630	Bracket – Traction	6 36 1
65-2720	Ring – Retaining	6 17 4	71-9800	Door – Discharge	1 18 1
65-4710	Ring – Friction	6 24 2	71-9840	Spring – Door	1 17 2
65-4720	Spring – Compression	6 18 2	71-9850	Retainer – Belt	6 32 1
65-4740	Washer – Thrust Keyed	6 19 4	71-9900	Frame – Bag	11 4 1
65-4750	Gear – Pinion	6 20 2	74-1660	Cover – Wheel	6 16 2
65-4760	Washer	6 23 2	74-1670	Spacer – Wheel	6 12 2
65-5210	Screw – Thread Forming	1 12 2	80-0510	Stiffener – Blade	4 6 1
66-1700	Decal – Noise	1 20 1	92-2289	Plate – Logo Toro	3 12 1
66-6040	Key – Rocking R.H.	6 * 1	92-2298	Washer – Spring	10 8 1
66-6050	Key – Rocking L.H.	6 11 1	92-2299	Lever – Shift	10 7 1
71-7630	Cap – Throttle Lower	9 5 1	92-3132	Bolt – Shoulder	10 4 1
71-7740	Spring – Counterbalance	5 11 1	92-3133	Spacer – Lever Traction	10 5 1
71-7740	Spring – Counterbalance	6 21 1	92-5412	Stop – Pivot	8 8 1
71-7770	Plate – Securing Rear	5 17 2	92-7663	Cover – Wheel	5 8 1
71-7770	Plate – Securing Rear	6 29 2	92-7663	Cover – Wheel	6 14 1
71-7800	Arm – Pivot	5 18 1	92-7852	Shield – Muffler	3 7 1
71-7820	Pivot – Front	1 28 1	92-7863	Decal – Deck	1 1 1
71-7840	Rod – Trigger	6 3 1	92-7865	Decal – Panel SP	9 23 1
71-7840	Rod – Trigger	5 19 1	92-9677	Arm – Pivot L.H.	6 10 1
71-7860	Grip – Upper	1 13 1	92-9680	Arm – Pivot R.H.	6 31 1
71-7870	Grip – Lower	1 8 1	93-0243	Shroud – QT Wedge	3 4 1
71-7890	Guide – Belt Rear	2 34 1	93-0335	Bail – Control SP	10 1 1
71-7900	Cap – Bolt Hinge L.H.	1 15 1	93-0336	Bail – Control	8 9 1
71-7910	Cap – Bolt Hinge R.H.	1 11 1	93-0339	Cover – Throttle Lower	9 4 1
71-7920	Cover – Belt	1 6 1	93-0340	Stop – Pivot	10 2 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
93-1116	Cable - Brake	9 9 1	3296-5	Nut - Lock	5 6 2
93-1116	Cable - Brake	8 15 1	3296-5	Nut - Lock	6 9 2
93-1117	Control - Throttle	9 2 1	3296-5	Nut - Lock	1 29 2
93-1118	Control - Throttle	8 7 1	3296-42	Nut - Lock	8 5 2
93-1119	Cable - Traction	9 7 1	3296-42	Nut - Lock	9 17 2
93-3772	Guide - Rope	8 4 1	3296-56	Nut - Lock	8 6 1
93-3772	Guide - Rope	9 18 1	32112-11	Nut - Push	1 25 1
93-4105	Decal - Danger	1 5 1	32112-13	Nut - Push	5 5 1
93-4354	Decal - Engine	3 1 1	32112-13	Nut - Push	6 8 1
93-6652	Decal - Instruction	9 1 1	32121-114	Pin - Groove	7 8 2
93-6653	Decal - Traction	10 11 1	32144-4	Screw - Tapping	6 1 6
93-8470	Screw - Clamp	3 10 1	32144-4	Screw - Tapping	4 3 2
2210-249	Clamp - Casing	3 11 1	32144-4	Screw - Tapping	5 16 4
2210-316	Stop - Rope	3 3 1	32144-4	Screw - Tapping	1 24 10
302-26	Fitting - Grease	6 33 2	32144-4	Screw - Tapping	1 24 8
321-52	Screw - Hex Hd. Cap	8 3 1	32144-31	Screw - Tapping	5 1 1
321-52	Screw - Hex Hd. Cap	9 22 1	32144-31	Screw - Tapping	6 4 1
322-29	Screw - Hex Hd. Cap	1 16 2	32144-70	Screw - Tapping	1 7 1
3253-22	Washer - Lock	4 7 1	32144-73	Screw - Hex Washer Hd.	3 6 3
3256-22	Washer - Flat	9 12 1	32144-97	Screw - Phillips Hd.	1 14 2
3256-22	Washer - Flat	8 13 1	32144-97	Screw - Phillips Pan Hd.	9 3 5
3256-24	Washer	7 13 1	32144-98	Screw - Phillips Pan Hd.	9 16 4
3256-49	Washer - Flat	10 9 1	32144-99	Screw - Phillips Pan Hd.	9 6 2
3256-70	Washer - Flat	10 3 2	32144-102	Screw - Engine	3 8 3
3284-5	Pin - Groove	1 9 1	32144-111	Screw - Phillips Hd.	1 3 8
3290-378	Tie - Cable	3 5 1	32144-111	Screw - Thr'd Form	11 1 5
3290-378	Tie - Cable	9 10 1	32144-121	Screw - Mounting	3 2 2
3290-378	Tie - Cable	8 14 1	32151-93	Ring - Grip	5 13 1
3296-2	Nut - Lock	10 10 1	32151-93	Ring - Grip	6 26 1
3296-5	Nut	7 14 1			

MAINTENANCE RECORD

[illegible]