 


TORO®

MODEL NO. 20904BC-5900001 & UP
MODEL NO. 20909BC-5900001 & UP

PARTS CATALOG

48cm REAR BAGGING MOWER

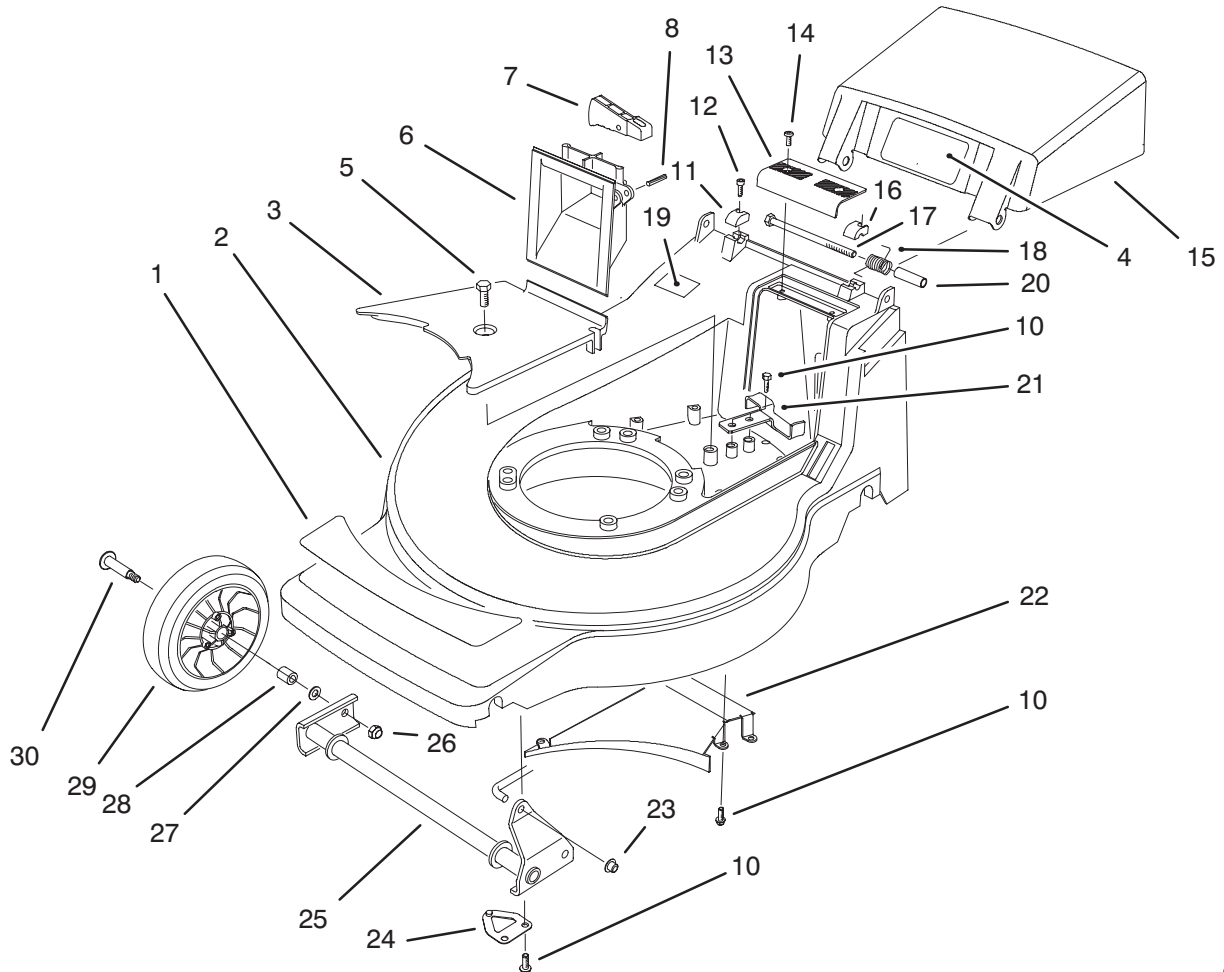

C-2277

HOUSING ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	71-9860	Decal - 48cm	1
2	16-5979	Housing - 48cm	1
3	71-7920	Cover - Belt	1
†4	93-4105	Decal - Danger	1
5	32144-70	Screw - Hex. Flange Hd.	1
6	71-7870	Grip - Lower	1
7	71-7930	Trigger - H.O.C.	1
8	3284-5	Pin - Roll	1
10	32144-4	Screw - Thread Forming (Model No. 20904BC Only)	8
10	32144-4	Screw - Thread Forming (Model No. 20909BC Only)	10
11	71-7910	Cap - Hinge Bolt R.H.	1
12	65-5210	Screw - Thread Forming	2
13	71-7860	Grip - Upper	1

Ref. No.	Part No.	Description	No. Used
14	32144-97	Screw - Thread Forming	2
15	71-9800	Door - Discharge	1
16	71-7900	Cap - Hinge Bolt L.H.	1
17	322-29	Screw - Cap Hex. Hd.	2
†18	71-9840	Spring - Door	2
19	66-1700	Decal - Noise	1
20	71-8580	Spacer - Door	2
21	71-7890	Guide - Belt Rear (Model No. 20209BC Only)	1
22	71-7990	Ramp - Discharge	1
23	32112-11	Nut - Push	1
24	71-8830	Retainer - Shaft	2
†25	71-7820	Pivot - Front	1
26	3296-5	Nut - Lock	2
27	40-1940	Washer - Wheel	2

† Obtain From Toro Europe N.V.

© The TORO Company -1994
All Rights Reserved

 TPS

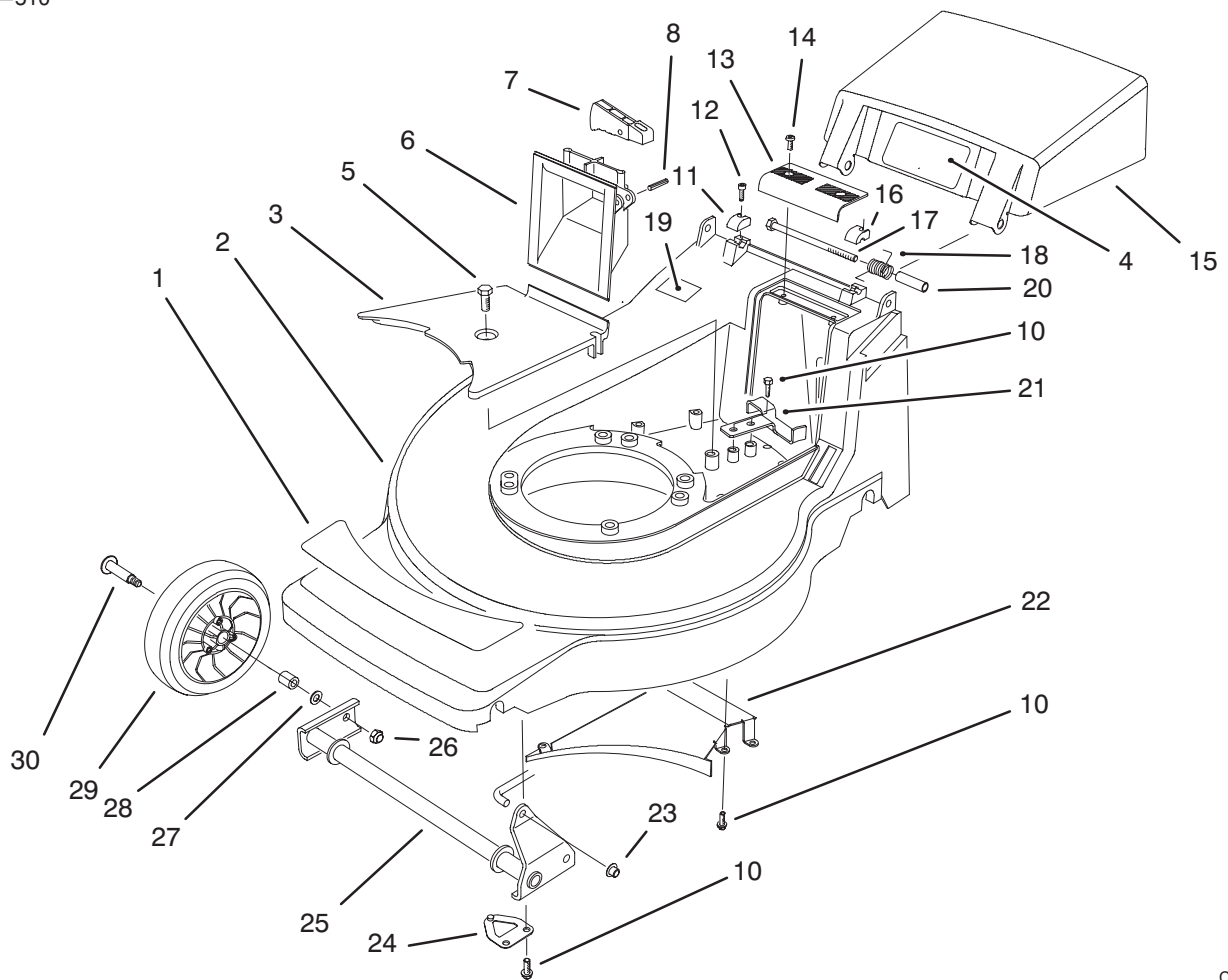


C-2277

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
28	27-6250	Bushing - Wheel	4
29	46-1113	Wheel & Tire Assembly (Incl. Ref. #28)	2


Ref. No.	Part No.	Description	No. Used
30	27-6230	Bolt - Wheel	2

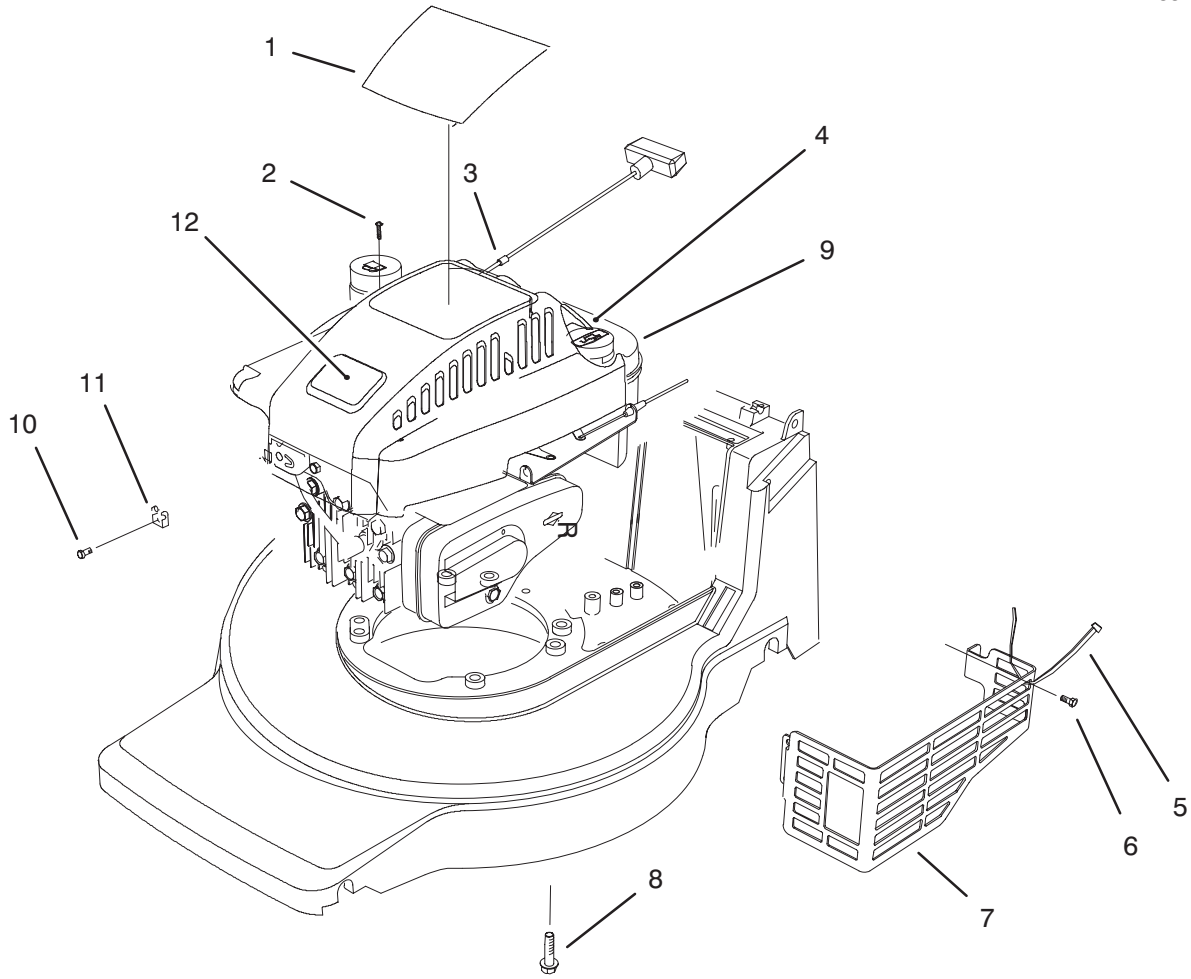 

C-2273

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4354	Decal - Engine	1	7	92-7852	Shield - Muffler	1
2	32144-121	Screw	2	8	32144-102	Screw - Engine Mount	3
3	2210-316	Stop - Rope	1	9		Engine - B&S Quantum	1
4	93-0243	Shroud - QT Wedge	1	10	93-8470	Screw - Clamp	1
5	3290-378	Tie - Cable	1	11	2210-249	Clamp - Cable	1
6	32144-73	Screw - Muffler	3	12	92-2289	Decal - Toro Logo	1

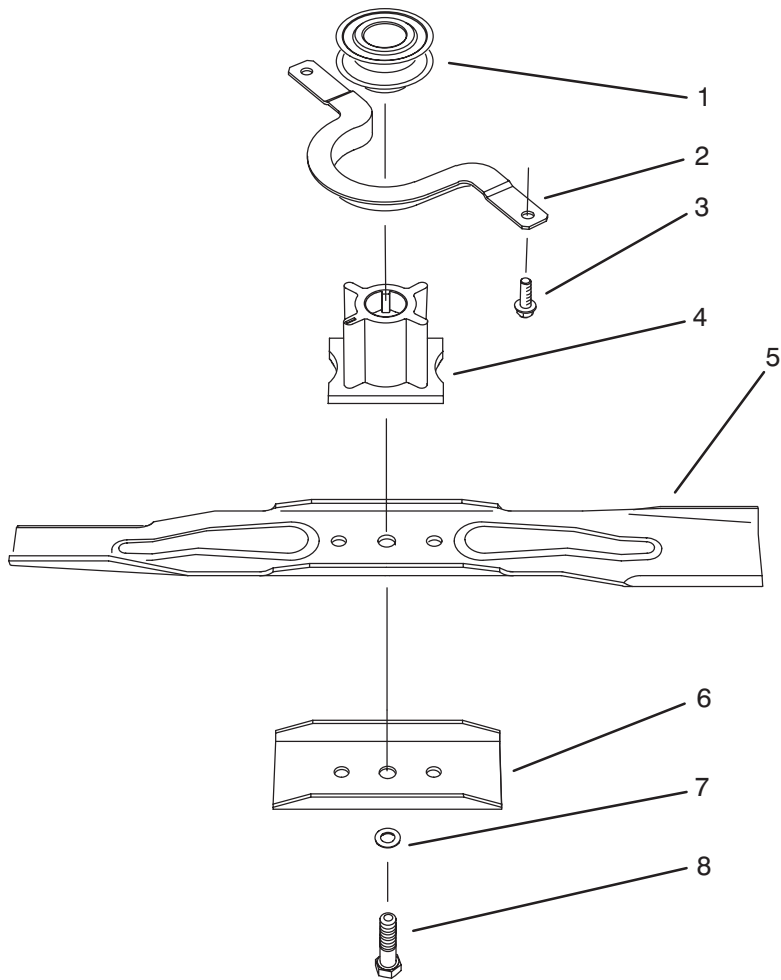 


C-1012

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62—7550	Pulley — Driver (Model No. 20909BC Only)	1	4	71—7940	Retainer — Blade	1
2	71—7960	Guide — Engine Belt (Model No. 20909BC Only)	1	†5	92—9813	Blade — 48cm	1
3	32144—4	Screw — Tapping (Model No. 20909BC Only)	2	†6	92—9812	Stiffener — Blade	1
				7	3253—22	Washer — Lock	1
				8	26—0672	Bolt — Blade	1

 † Obtain From Toro Europe N.V.

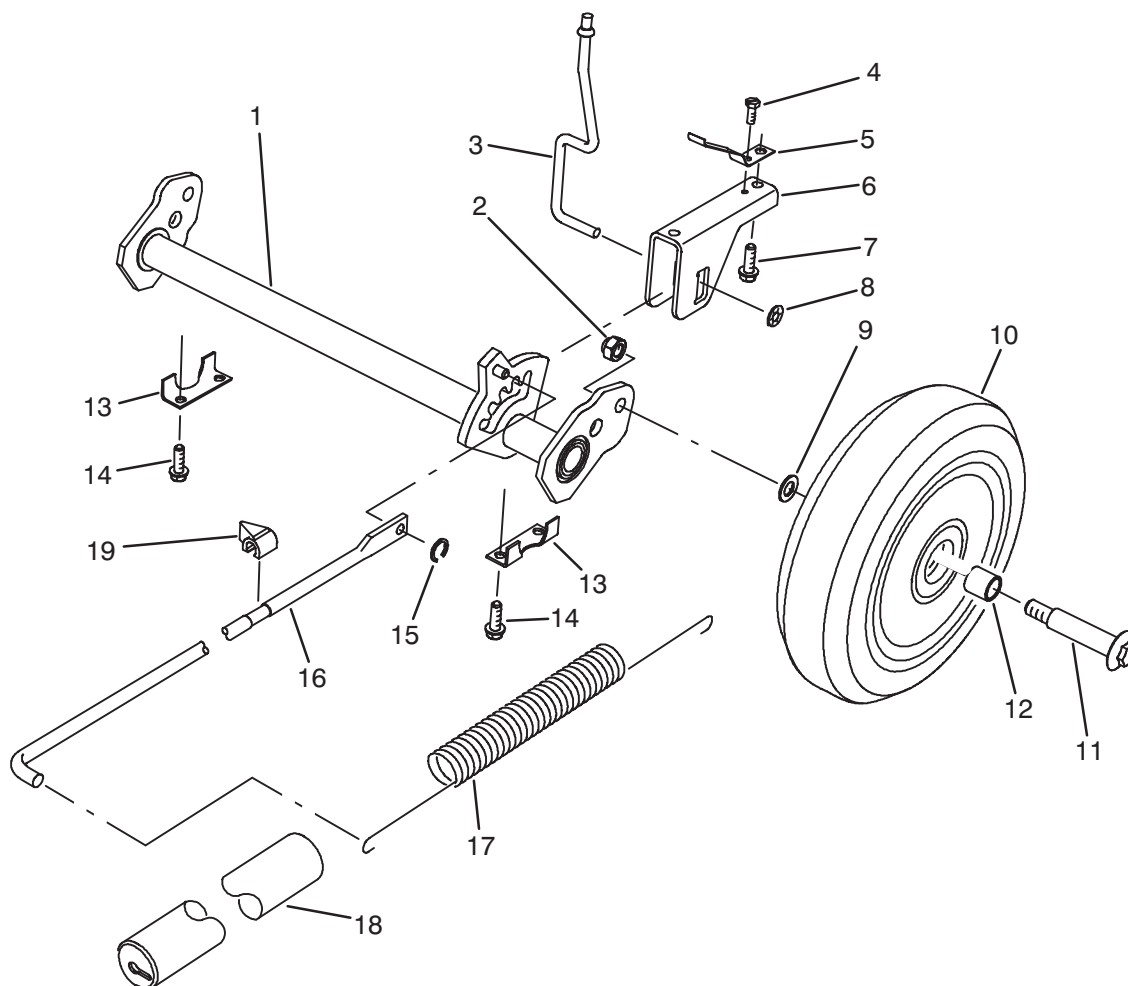


C-0363

H. P. REAR AXLE ASSEMBLY (Model No. 20904BC Only)

Ref. No.	Part No.	Description	No. Used
†1	71-7800	Pivot – Rear H.P.	1
2	3296-5	Nut – Lock	2
3	71-7840	Rod – Trigger	1
4	32144-31	Screw – Thread Forming	1
5	71-8060	Spring – Trigger Return	2
6	71-8080	Saddle – H.O.C.	1
7	63-8590	Screw – Thread Forming	2
8	32112-13	Nut – Push	1
9	40-1940	Washer – Wheel	2
10	11-9509	Wheel & Tire Assembly (Incl. Ref. #12)	2

Ref. No.	Part No.	Description	No. Used
11	27-6230	Bolt – Wheel	2
12	27-6250	Bushing – Wheel	4
13	71-7770	Plate – Rear Securing	2
14	32144-4	Screw – Thread Forming	4
15	32151-93	Ring – Grip	1
16	71-7970	Rod – Link	1
17	71-7740	Spring – Counterbalance	1
18	71-8450	Cover – Spring	1
19	71-7980	Indicator – H.O.C.	1

 † Obtain From Toro Europe N.V.

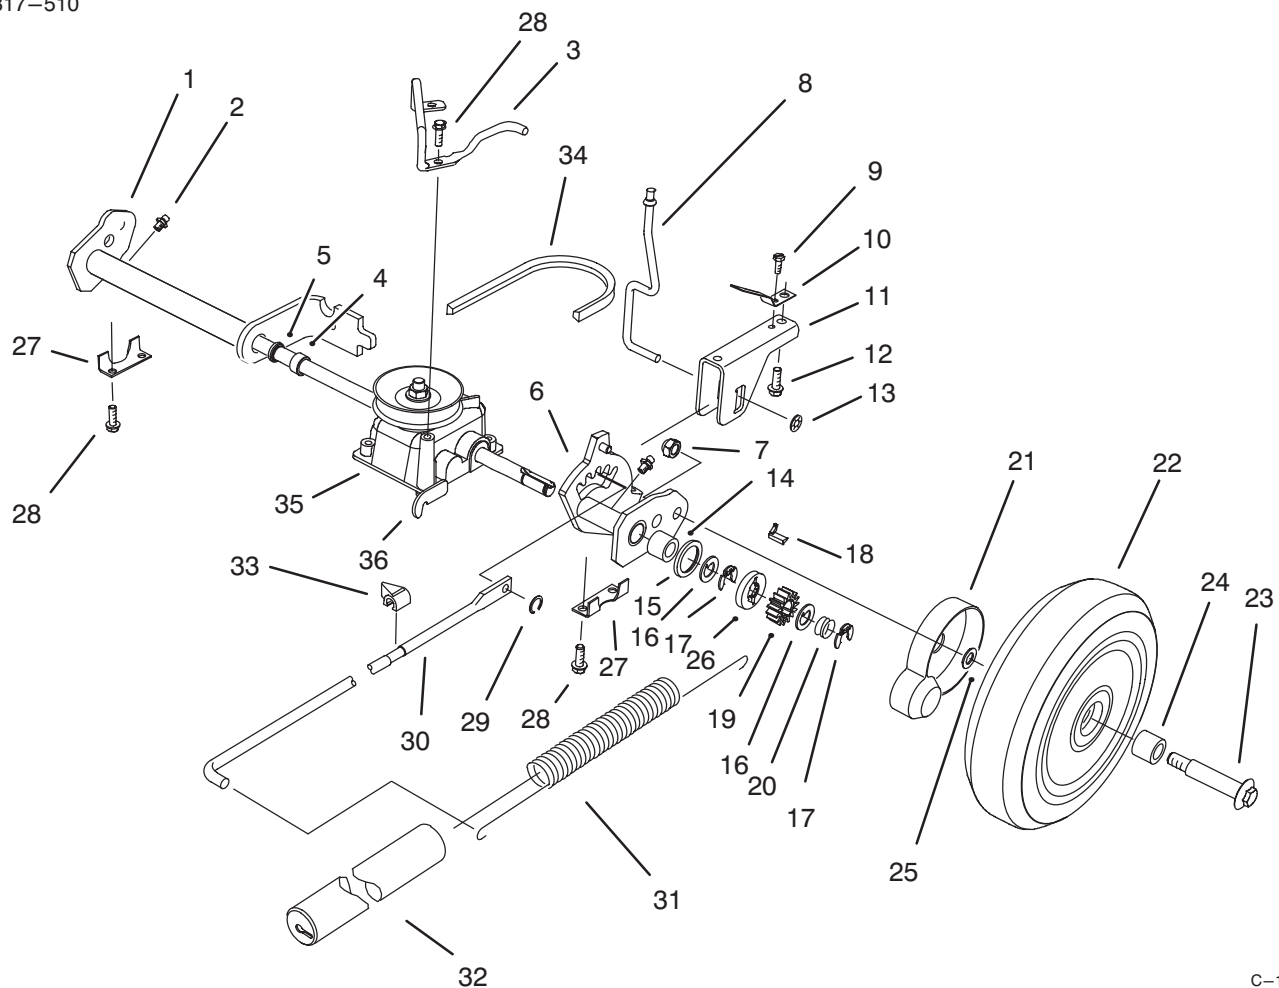

C-1880


S. P. REAR AXLE ASSEMBLY (Model No. 20909BC Only)

Ref. No.	Part No.	Description	No. Used
†1	92-9680	Rear Pivot Assembly R.H. (Incl. Ref. #2, 4, 5 & 14)	1
2	302-26	Fitting - Grease	2
†3	71-9850	Retainer - Belt	1
4	47-2890	Bushing - Sleeve	2
5	47-6730	Seal - Grease	2
†6	92-9677	Rear Pivot Assembly L.H. (Incl. Ref. #2, 4, 5 & 14)	1
7	3296-5	Nut - Lock	2
8	71-7840	Rod - Trigger	1
9	32144-31	Screw - Thread Forming	1
10	71-8060	Spring - Trigger Return	2
11	71-8080	Saddle - H.O.C.	1
12	63-8590	Screw - Thread Forming	2
13	32112-13	Nut - Push	1
14	48-2060	Bearing - Needle	2
15	65-4710	Washer - Friction	2
16	65-4740	Washer - Keyed Thrust	4
17	65-2720	Ring - Retaining	4
18	66-6050	Key - Rocking L.H.	1
*	66-6040	Key - Rocking R.H.	1

Ref. No.	Part No.	Description	No. Used
19	65-4750	Gear - Pinion	2
20	65-4720	Spring - Compression	2
21	74-1660	Cover - Wheel	2
22	14-9959	Wheel, Tire & Gear Assy. (Incl. Ref. #24)	2
23	27-6230	Bolt - Wheel	2
24	27-6250	Bushing - Wheel	4
25	74-1670	Spacer - Wheel	2
26	65-4760	Washer - Clutch	2
27	71-7770	Plate - Rear Securing	2
28	32144-4	Screw - Thread Forming	6
29	32151-93	Ring - Grip	1
30	71-7970	Rod - Link	1
†31	71-7740	Spring - Counterbalance	1
32	71-8450	Cover - Spring	1
33	71-7980	Indicator - H.O.C.	1
34	71-9450	V-Belt	1
35	71-9600	Gearcase Assembly (Incl. Ref. #36)	1
36	71-9630	Bracket - Traction	1

*Not Illustrated

 † Obtain From Toro Europe N.V.

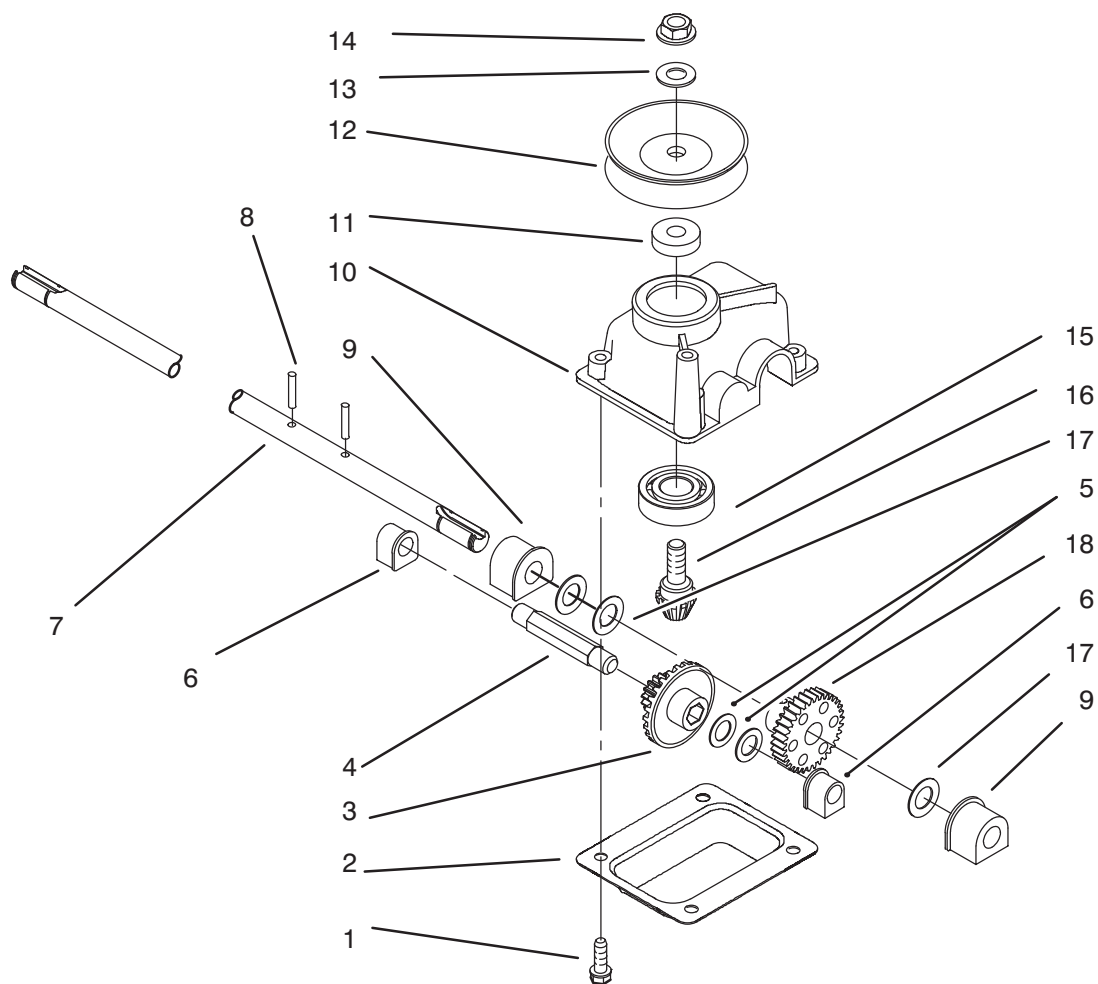

C-1292a


GEAR CASE ASSEMBLY (Model No. 20209BC Only)

Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw - Taptite	4
2	614668	Cover - Gear Case	1
3	55-3760	Pinion - 15 Tooth	1
4	614696	Shaft - Intermediate	1
5	36-4791	Washer	2
6	60-8750	Bushing	2
†7	71-9620	Shaft - Output	1
8	32121-114	Pin - Groove	2
9	60-8850	Bushing - Output	2
10	614578	Gearcase	1

Ref. No.	Part No.	Description	No. Used
11	62-6660	Spacer	1
12	71-9610	Pulley - Half	2
13	3256-24	Washer	1
14	3296-5	Nut	1
15	38-7820	Bearing - Ball	1
16	60-8890	Gear - Bevel Pinion	1
17	36-4780	Washer - Thrust	3
18	614596	Gear 34 Tooth	1
†*	71-9600	Gear Case Ass'y Complete	1

*Not Illustrated

 † Obtain From Toro Europe N.V.

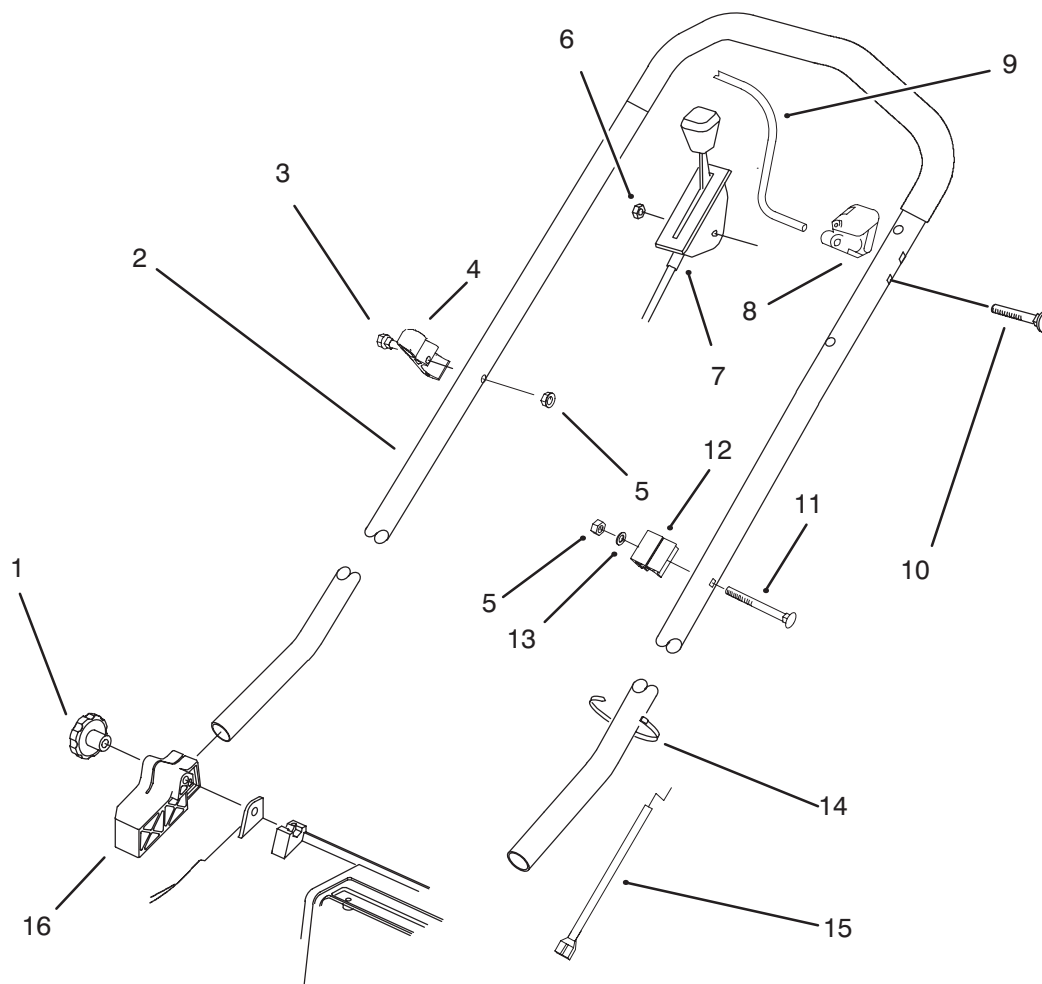

C-2274


HANDLE ASSEMBLY (Model No. 20904BC Only)

Ref. No.	Part No.	Description	No. Used
1	19-4050	Knob	2
2	71-9024	Handle	1
3	321-52	Screw - Hex Hd. Cap	1
†4	93-3772	Guide - Rope	1
5	3296-42	Nut - Lock	2
6	3296-56	Nut - Lock	1
7	93-1118	Control - Throttle	1
8	92-5412	Stop - Pivot	1
†9	93-0336	Bail - Control	1

Ref. No.	Part No.	Description	No. Used
10	46-6430	Screw - Handle	1
11	46-6432	Screw - Handle	1
12	46-6980	Support - Cable	1
13	3256-22	Washer - Flat	1
14	3290-378	Tie - Cable	1
15	93-1116	Cable - Brake	1
16	71-8100	Mount - Handle R.H.	1
*	71-8090	Mount - Handle L.H.	1

*Not Illustrated

 † Obtain From Toro Europe N.V.

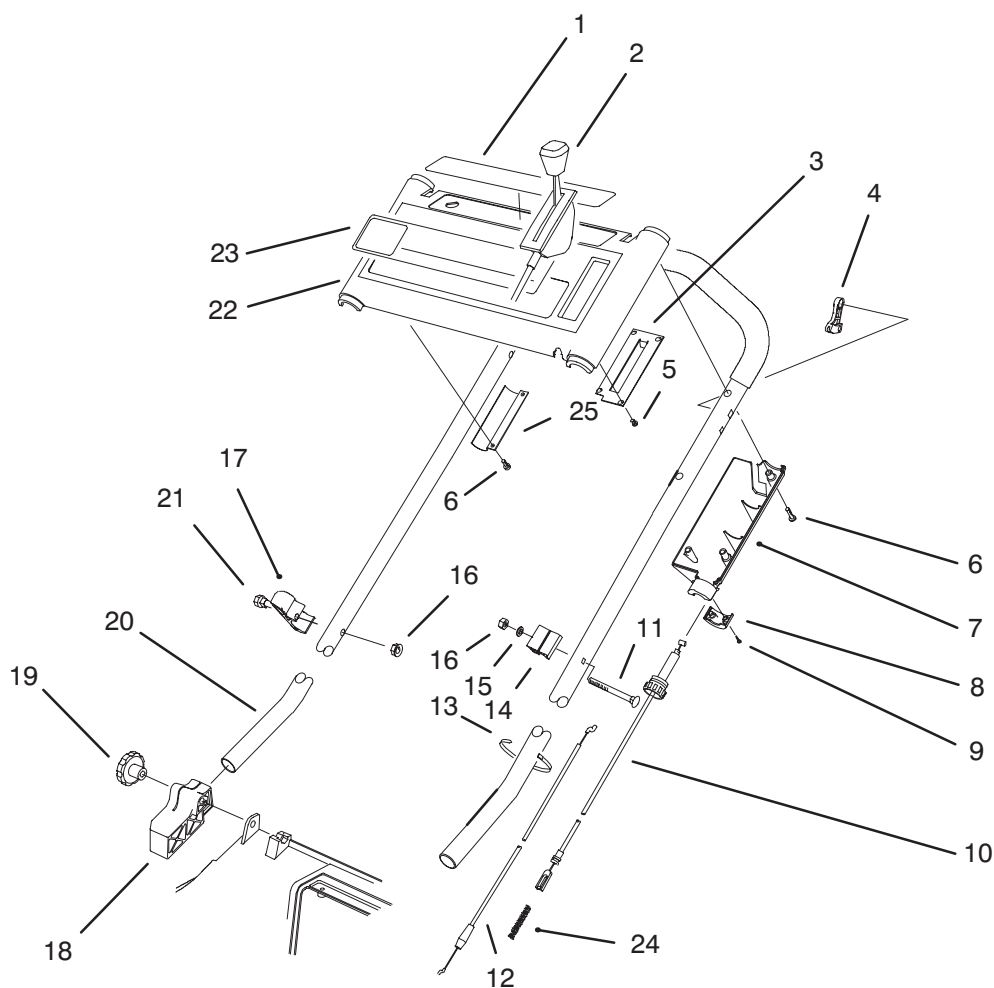


C-2278

HANDLE ASSEMBLY (Model No. 20909BC Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-6652	Decal - Instruction	1	15	3256-22	Washer - Flat	1
2	93-1117	Control - Throttle	1	16	3296-42	Nut - Lock	2
3	71-8040	Plate - Throttle	1	†17	93-3772	Guide - Rope	1
4	46-5520	Lever - Traction	1	18	71-8100	Mount - Handle R.H.	1
5	32144-98	Screw - Phillips Pan Hd.	4	*	71-8090	Mount - Handle L.H.	1
6	32144-97	Screw - Phillips Pan Hd.	5	19	19-4050	Knob	2
7	93-0339	Cover - Throttle Lower	1	20	71-9023	Handle Assembly	1
8	71-7630	Cap - Throttle Lower	1	21	321-52	Screw - Hex Hd. Cap	1
9	32144-99	Screw - Phillips Pan Hd.	2	22	16-9519	Panel - Control (Incl. Ref. #1 & 23)	1
10	93-1119	Cable - Traction	1	23	71-9861	Decal - Panel	1
11	46-6432	Screw - Handle	1	24	71-8310	Spring - Compression	1
12	93-1116	Cable - Brake	1	25	71-8130	Bracket - Control	1
13	3290-378	Tie - Cable	1				
14	46-6980	Support - Cable	1				

*Not Illustrated

 † Obtain From Toro Europe N.V.

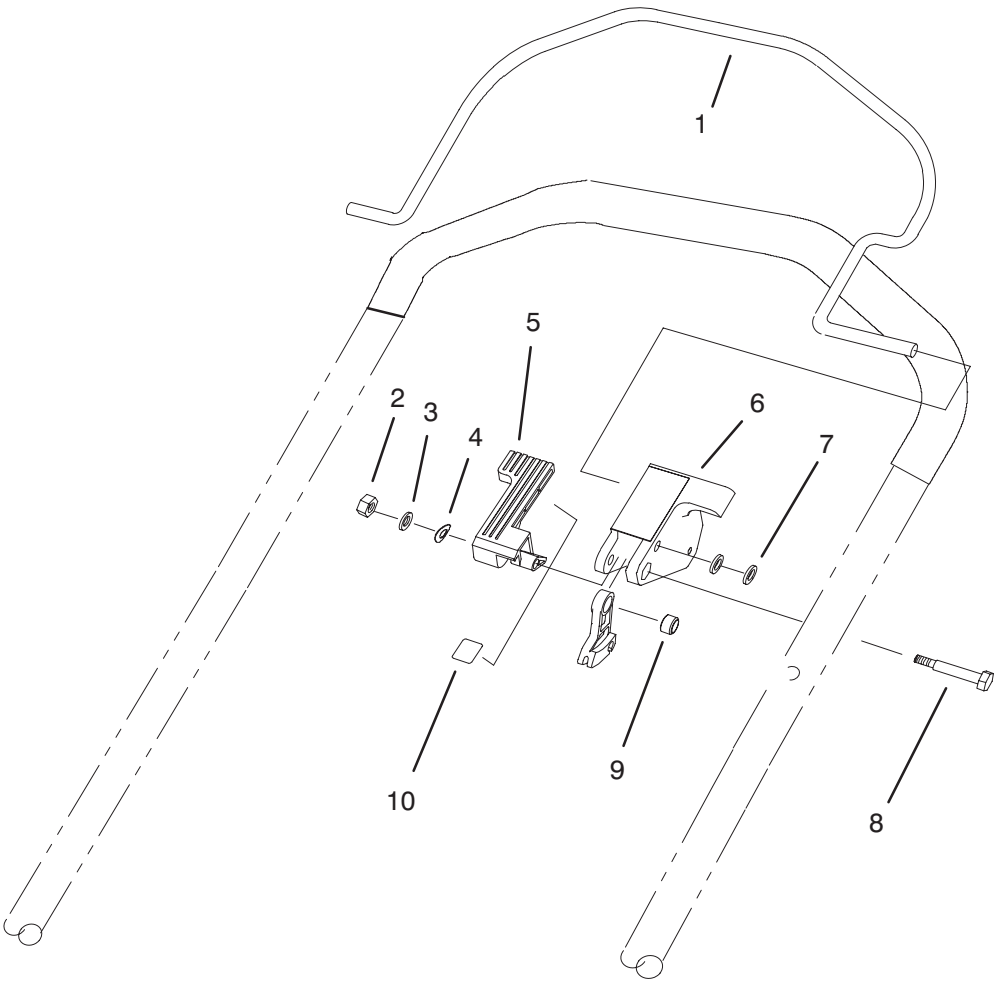


C-2082

CONTROL ASSEMBLY (Model No. 20909BC Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1	93-0335	Bail - Control SP	1	6	93-0340	Stop - Pivot	1
2	3296-2	Nut - Lock	1	7	3256-70	Washer - Flat	2
3	3256-49	Washer - Flat	1	8	92-3132	Bolt - Shoulder	1
4	92-2298	Washer - Spring	1	9	92-3133	Spacer - Traction Lever	1
5	92-2299	Lever - Shift	1	10	93-6653	Decal - Traction	1

 † Obtain From Toro Europe N.V.

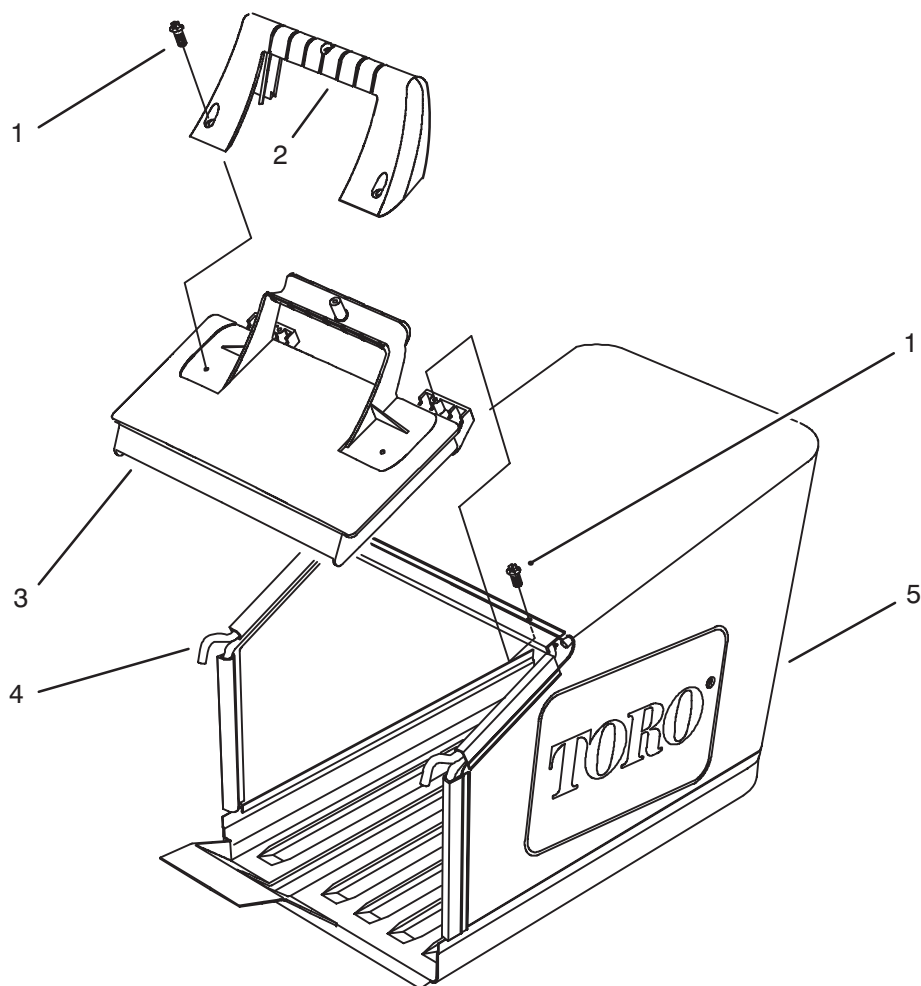


C-1509

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Thr'd Form	5
†2	71-9480	Handle - Door	1
†3	71-9470	Door - Bag	1

Ref. No.	Part No.	Description	No. Used
†4	71-9900	Frame - Bag	1
5	71-9460	Bag - Grass	1

 † Obtain From Toro Europe N.V.

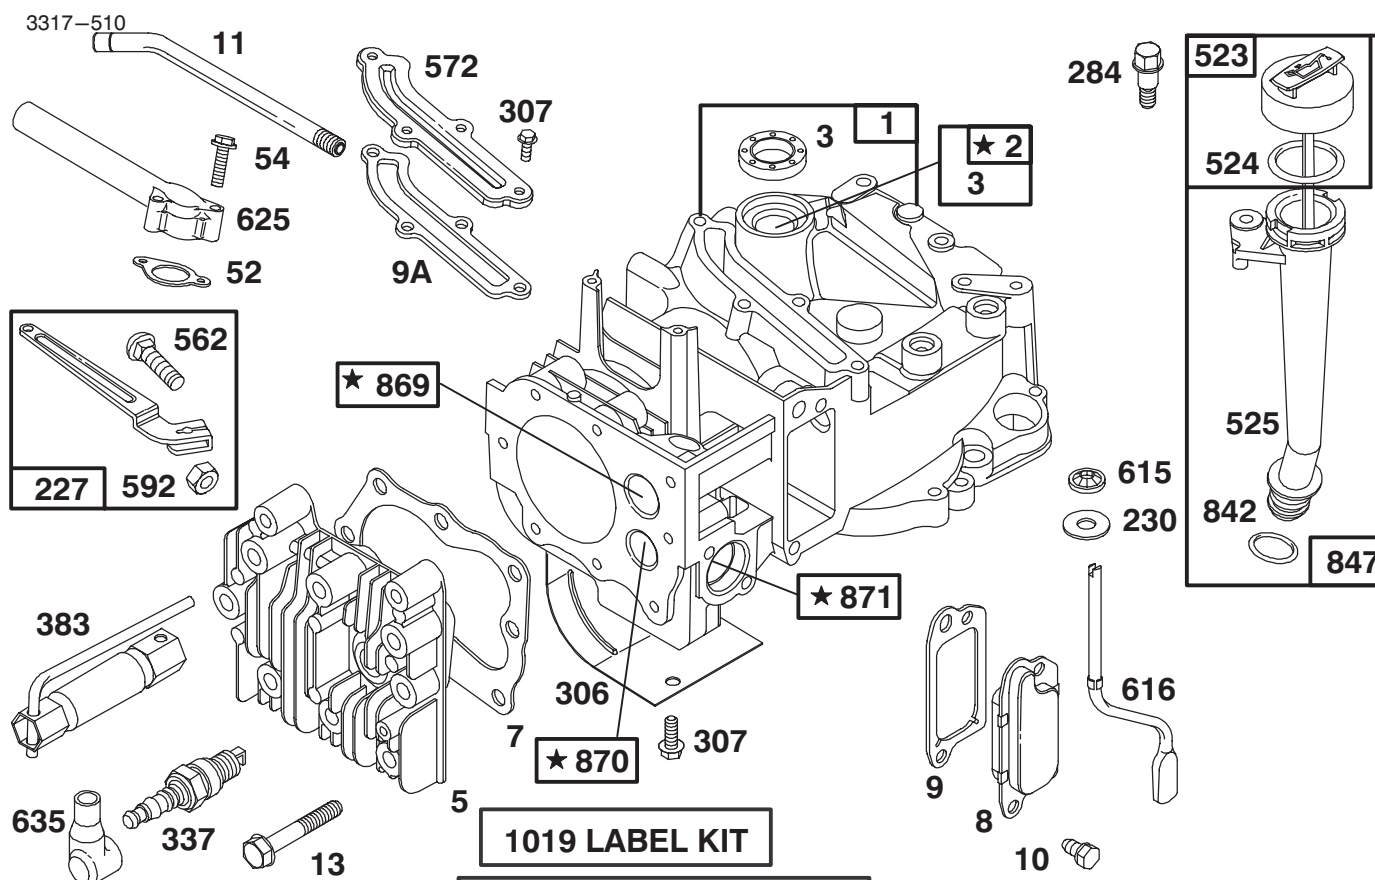

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

1058 OWNER'S MANUAL


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12A802-0611-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing — Cylinder	1
★3	299819	Seal — Oil	1
5	214349	Head — Cylinder	1
★7	272916	Gasket — Cylinder Head	1
8	494489	Breather — Valve Chamber	1
★9	272481	Gasket — Breather	1
★9A	272238	Gasket — Baffle Plate	1
10	94650	Screw — Breather Mtg.	1
11	231933	Tube — Breather	1
13	94547	Screw — Cylinder Head	1
★52	272199	Gasket — Intake Elbow	1
54	94526	Screw — Intake Elbow Mounting	1
227	492349	Lever Assembly — Gov.	1
230	67072	Washer — Gov. Crank	1
284	94511	Screw — Hex. Head	1
306	224324	Shield — Cylinder	1
307	94515	Screw — Hex. Head	1
337	802592	Plug — Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench — Spark Plug	1
523	495264	Cap With Dipstick — Oil Filler	1
★524	280393	Seal — Filler Tube	1
525	495265	Tube — Oil Filler	1
562	92613	Bolt — Governor Lever	1
572	224328	Baffle — Cylinder	1
592	231082	Nut — Hex.	1
615	94474	Fastener	1
616	262578	Crank — Governor	1
625	281085	Tube — Fuel Intake	1
635	66538	Elbow — Spark Plug	1
★842	280966	Seal — O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat — Intake Valve	1
870	213513	Seat — Exhaust Valve	1
871	262001	Guide — Exhaust Valve	1
		Note: 63709 Guide — Intake Valve	1
1019	494256	Label Kit	1
1058	272262	Owner's Manual	1

 ★ Included in Gasket Set—Part No. 496117.

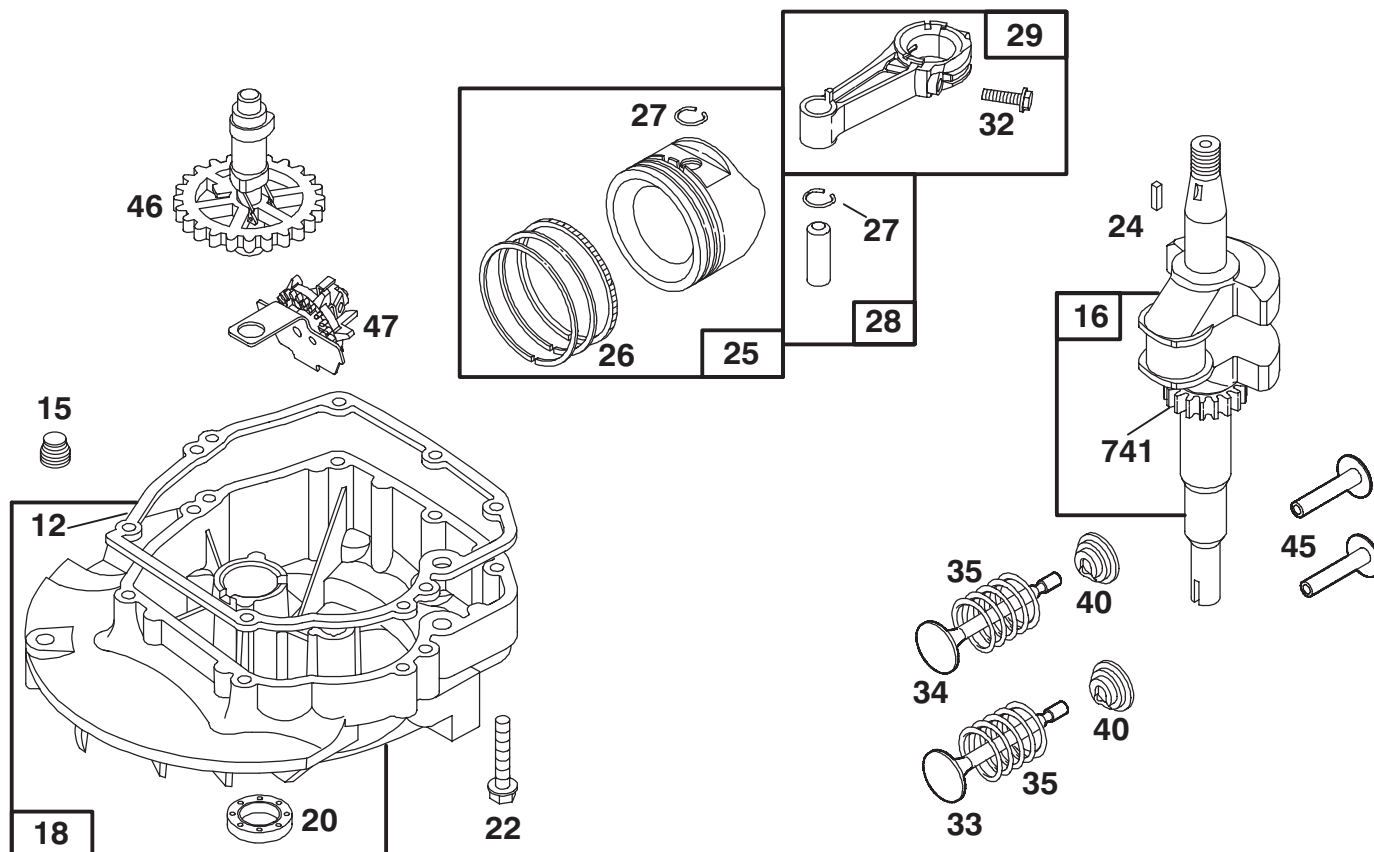


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12A802-0611—01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket — Crankcase	1
15	94720	Plug — Oil Drain	1
16	494546	Crankshaft	1
		Note: Order 94388 For Timing Gear Key.	1
18	493279	Sump — Engine	1
★20	399781	Seal — Oil	1
22	94220	Screw — Hex. Head	1
		Note: 94612 Screw — Hex. Head (One (1) Used in Hole Nearest Breather)	1
24	222698	Key — Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock — Piston Pin	1
28	298909	Pin — Piston (Standard)	1
	298908	Pin — Piston (.005" O.S.)	1
29	490566	Rod Assembly — Conn.	1
		Note: For Conn. Rod With .020" Undersize Crankpin Bearing — Order No. 490743.	1
32	94699	Screw — Conn. Rod	1
33	262651	Valve — Exhaust	1
34	262652	Valve — Intake	1
35	262224	Spring — Valve	1
40	93312	Retainer — Valve Spring	1
45	262204	Tappet — Valve	1
46	492830	Gear — Cam	1
47	493737	Slinger — Oil	1
741	262598	Gear — Timing	1

 ★ Included in Gasket Set—Part No. 496117.

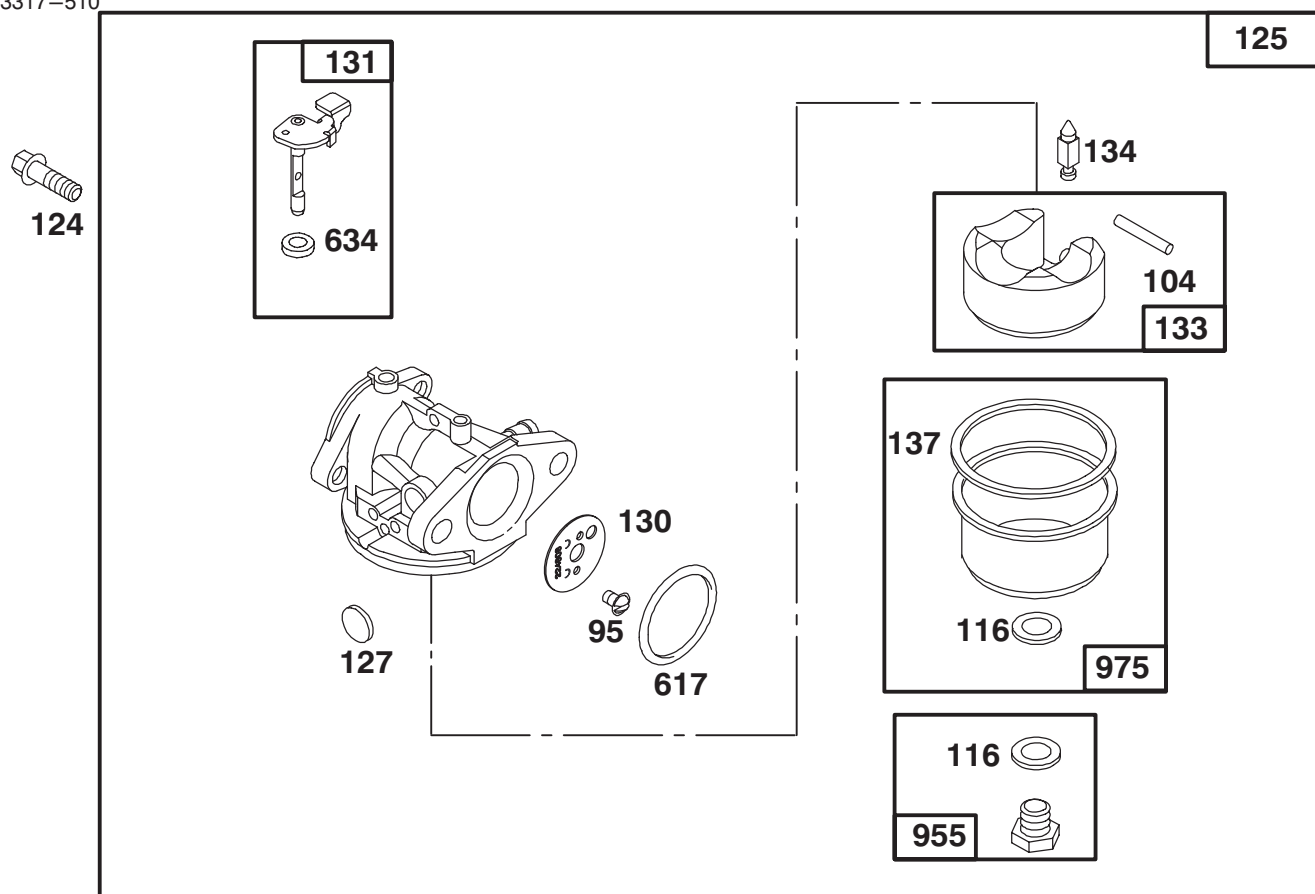

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12A802-0611-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Throttle Valve Mounting	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket–Sealing (Sold in Kit Only)	1
124	94525	Screw – Carburetor Mtg.	1
125	497314	Carburetor	1
●127		Plug – Welch (Sold in Kit Only)	1
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float Assy. – Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer–Shaft (Sold in Kit Only)	1
955	497315	Screw – Bowl Mtg. (Std.)	1
		Note: 496495 Screw – Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. – Carburetor	1

●Included in Carburetor Kit–Part No. 493762.

 ◆Included in Carburetor Gasket Set–Part No. 490937.

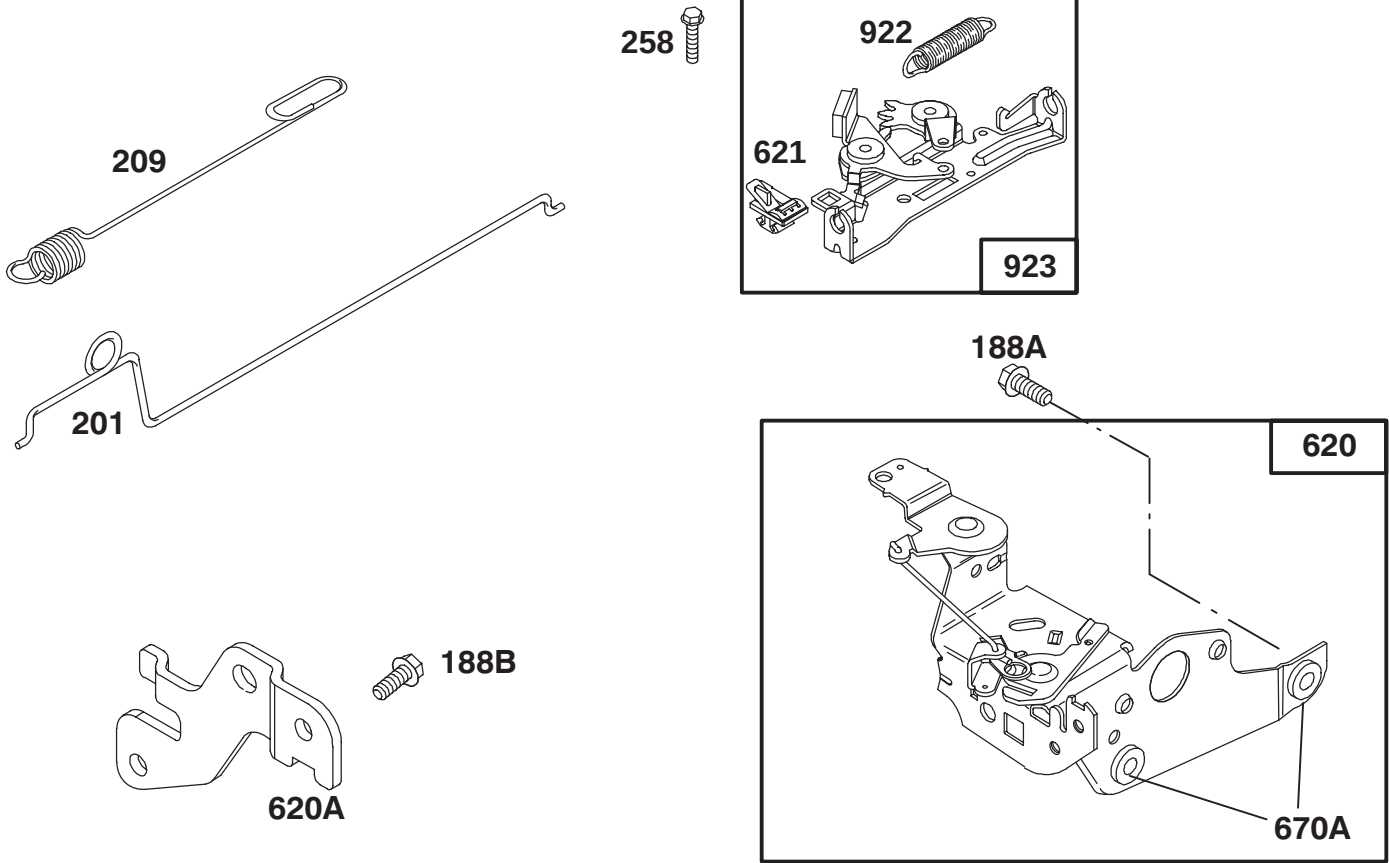


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12A802-0611—01

Ref. No.	Part No.	Description	No. Used
188A	94644	Screw — Hex. Head	1
188B	94602	Screw — Hex. Head	1
201	262579	Link — Governor	1
209	263045	Spring — Governor	1
258	94512	Screw—Hex. Head	1
620	497203	Bracket — Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket — Control	1
621	396847	Switch — Stop	1
670A	493823	Spacer — Bracket	1
922	262640	Spring—Brake	1
923	493442	Brake Assembly	1

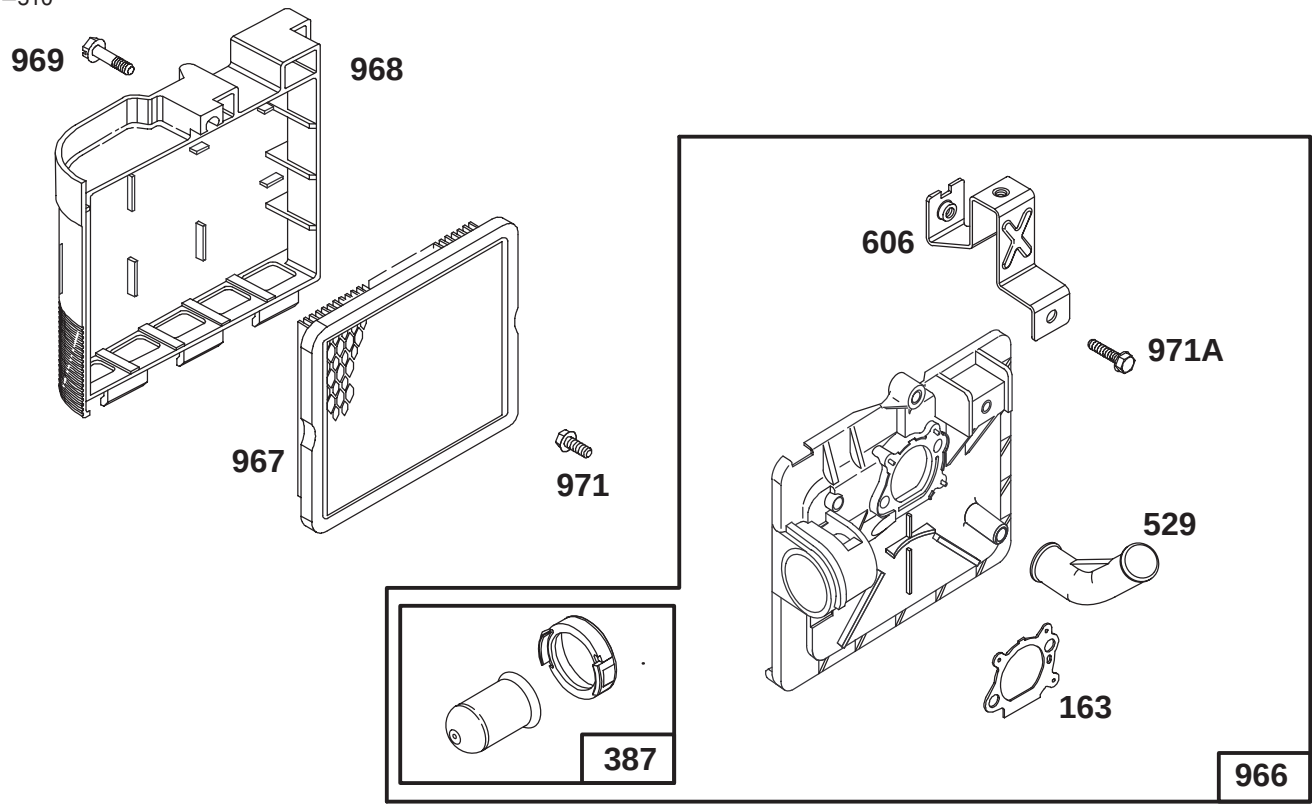 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12A802-0611-01

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket — Air Cleaner	1
387	496115	Primer—Carburetor	1
529	281299	Grommet — Breather	1
606	224815	Strap — Bracket	1
966	496116	Base — Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
967	491588	Filter — Air	1
968	281340	Cover — Air Cleaner	1
969	94120	Screw — Cover Mtg.	1
971	94121	Screw — Air Cleaner	1
971A	94749	Screw — Hex. Head	1

 ★ Included in Gasket Set—Part No. 496117.

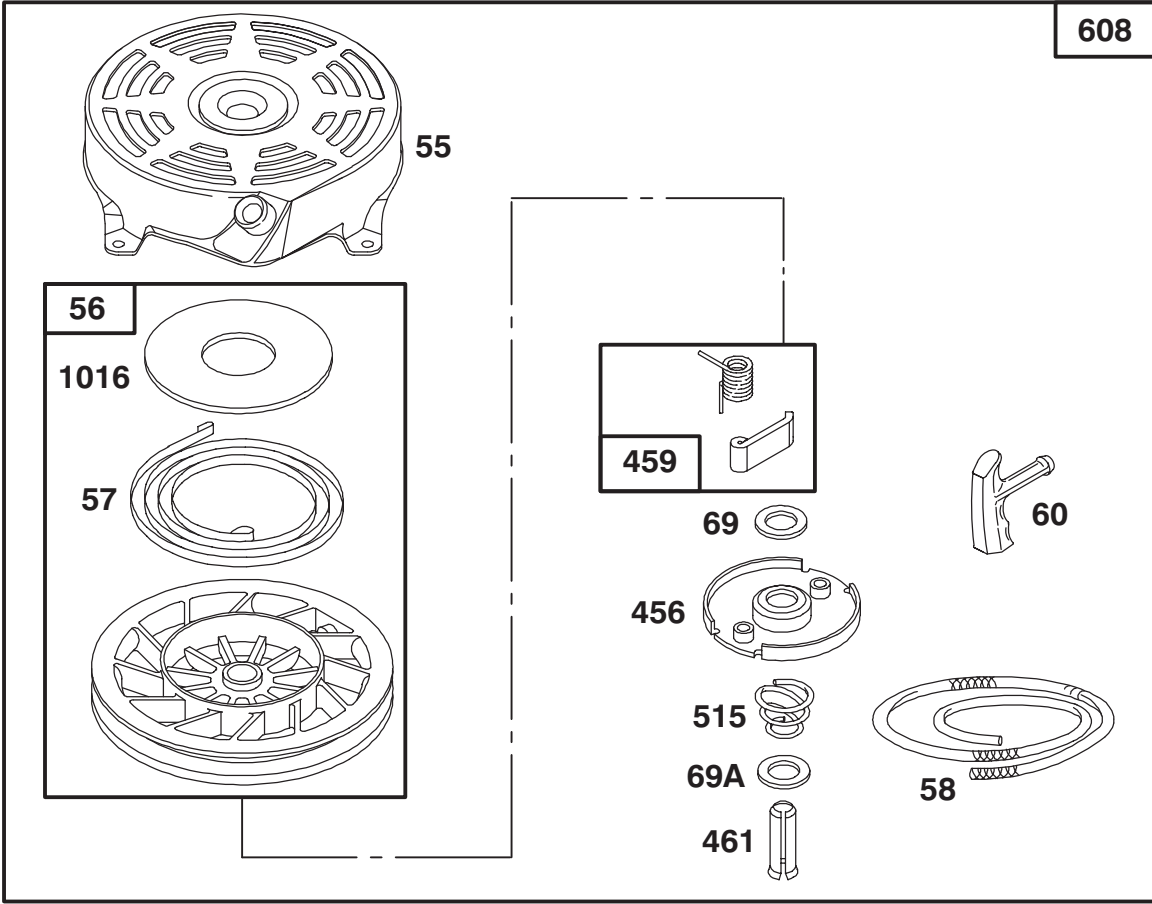


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12A802-0611-01

Ref. No.	Part No.	Description	No. Used
55	492831	Housing – Rewind Starter	1
56	493824	Pulley – Rewind Starter	1
57	262594	Spring – Rewind Starter	1
58	280399	Rope – Rewind Starter	1
60	393152	Handle – Rewind Starter	1
69	280973	Washer – Rewind Starter	1
69A	224322	Washer – Rewind Starter	1
456	224321	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	492833	Pawl – Starter	1
461	262626	Pin – Starter	1
515	262625	Spring – Torsion	1
608	493295	Starter Assy. – Rewind	1
		Includes:	
		94128 Screw – Hex. Hd.	1
		92987 Nut – Hex.	1
1016	224278	Cover – Rewind Starter	1




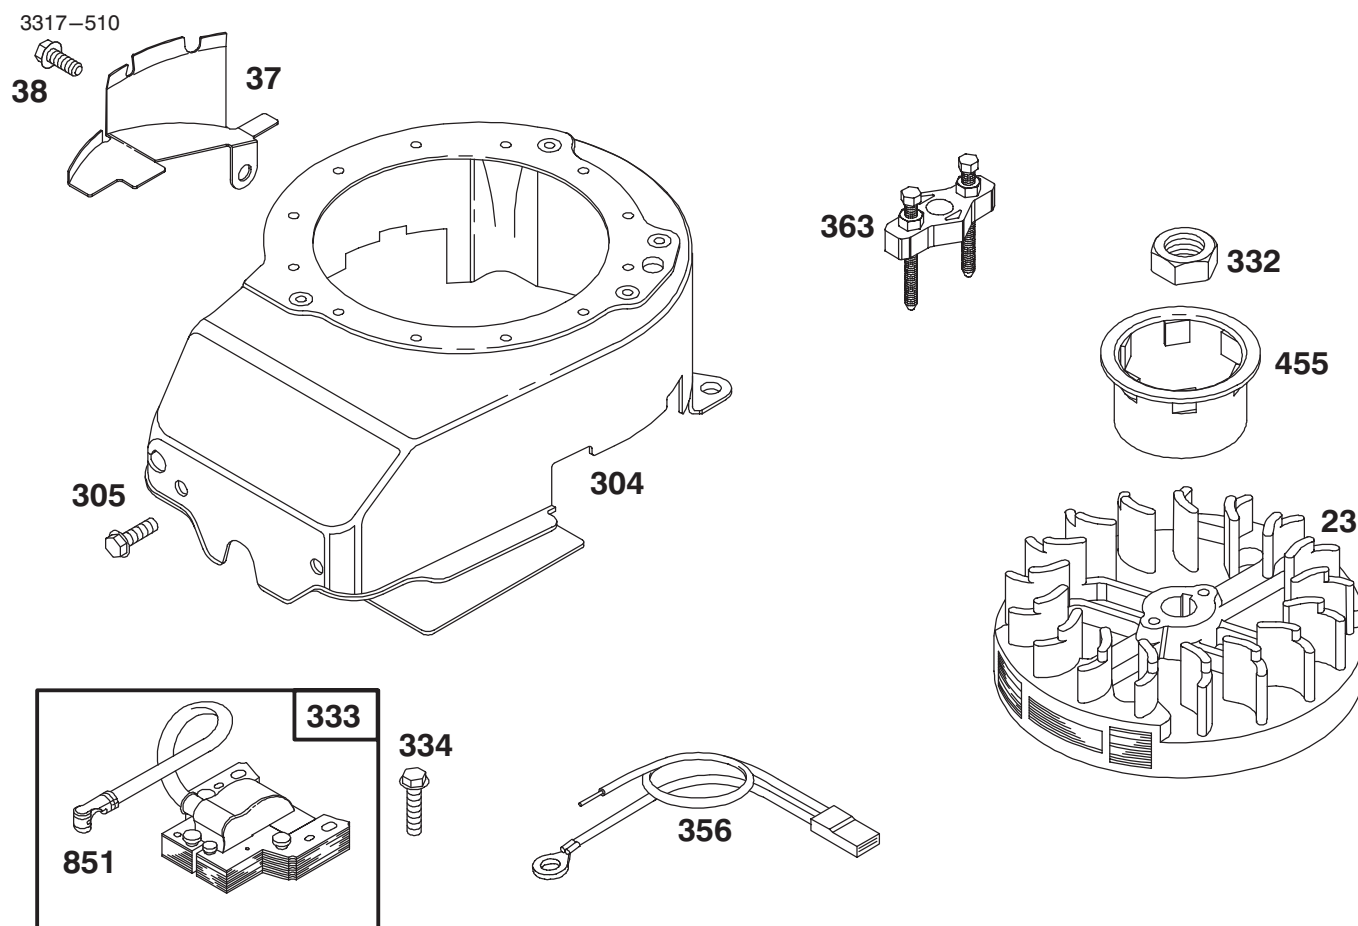 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12A802—0611—01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard — Flywheel	1
38	94608	Screw — Hex. Head	1
304	493293	Housing — Blower	1
305	94513	Screw — Sem	1
332	92284	Nut — Flywheel	1

Ref. No.	Part No.	Description	No. Used
333	802574	Armature — Magneto	1
334	93381	Screw — Sem	1
356	398808	Wire — Ground	1
363	19069	Flywheel Puller	1
455	224250	Cup — Starter	1
851	493880	Terminal — Ignition Cable	1

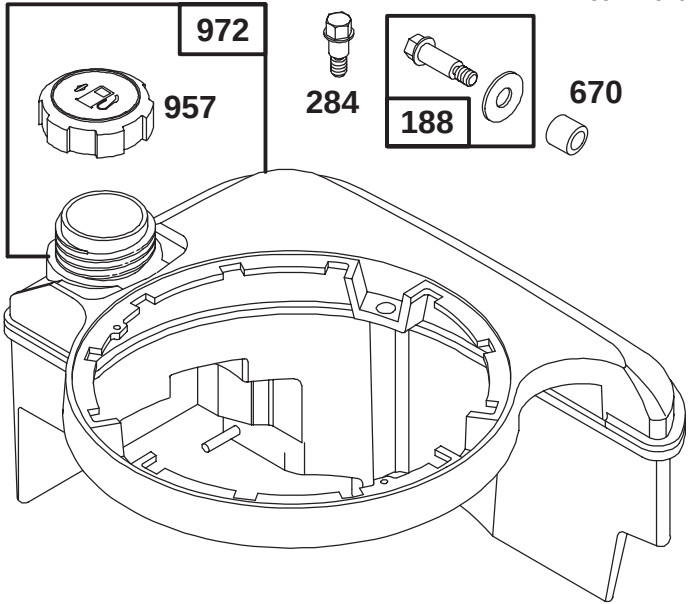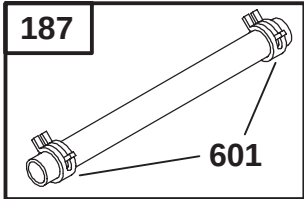  
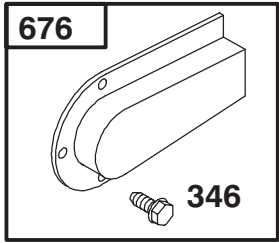 
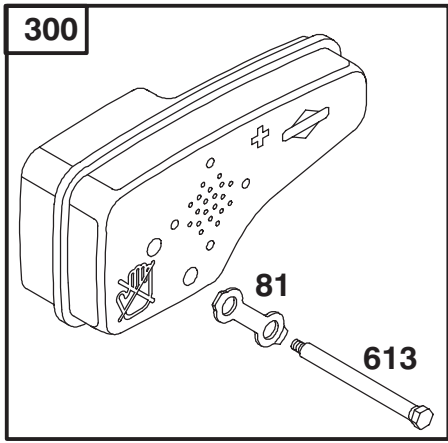 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12A802-0611-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188	398540	Screw – Tank Mounting	1
284	94511	Screw – Hex. Head	1
300	496106	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93807	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Muffler Mtg.	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

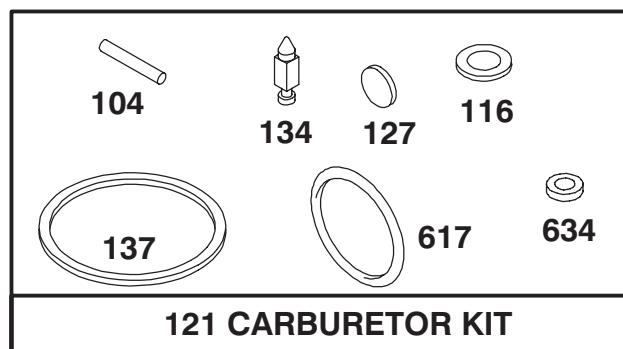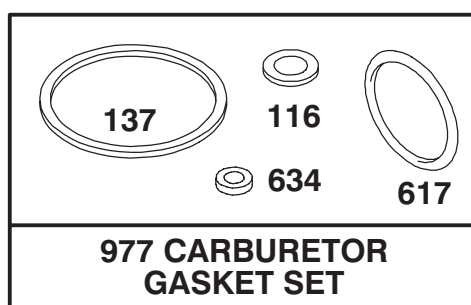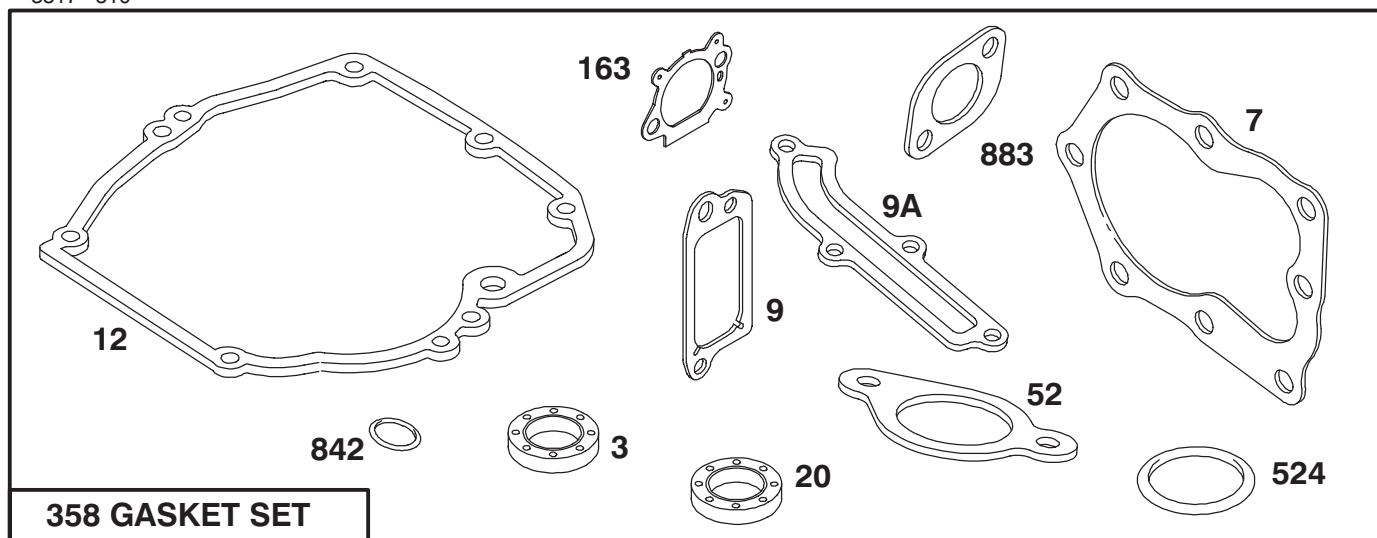   

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12A802-0611-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272916	Gasket – Cylinder Hd.	1
★9	272481	Gasket – Valve Cover	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Breather	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket – Sealing (Sold in Kit Only)	1
121	493762	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
★842	280966	Seal – O-Ring	1
★883	272253	Gasket – Exhaust	1
977	490937	Gasket Set – Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 496117.

TORO PART NUMBER INDEX

3317-510

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
	Engine – B&S Quantum	3 9 1	71-7900	Cap – Hinge Bolt L.H.	1 16 1
614578	Gearcase	7 10 1	71-7910	Cap – Hinge Bolt R.H.	1 11 1
614596	Gear 34 Tooth	7 18 1	71-7920	Cover – Belt	1 3 1
614668	Cover – Gear Case	7 2 1	71-7930	Trigger – H.O.C.	1 7 1
614696	Shaft – Intermediate	7 4 1	71-7940	Retainer – Blade	4 4 1
11-9509	Wheel & Tire Assembly	5 10 2	71-7960	Guide – Engine Belt	4 2 1
14-9959	Wheel, Tire & Gear Assy.	6 22 2	71-7970	Rod – Link	5 16 1
16-5979	Housing – 48cm	1 2 1	71-7970	Rod – Link	6 30 1
16-9519	Panel – Control	9 22 1	71-7980	Indicator – H.O.C.	5 19 1
19-4050	Knob	8 1 2	71-7980	Indicator – H.O.C.	6 33 1
19-4050	Knob	9 19 2	71-7990	Ramp – Discharge	1 22 1
26-0672	Bolt – Blade	4 8 1	71-8040	Plate – Throttle	9 3 1
27-6230	Bolt – Wheel	5 11 2	71-8060	Spring – Trigger Return	5 5 2
27-6230	Bolt – Wheel	6 23 2	71-8060	Spring – Trigger Return	6 10 2
27-6230	Bolt – Wheel	2 30 2	71-8080	Saddle – H.O.C.	5 6 1
27-6250	Bushing – Wheel	5 12 4	71-8080	Saddle – H.O.C.	6 11 1
27-6250	Bushing – Wheel	6 24 4	71-8090	Mount – Handle L.H.	8 * 1
27-6250	Bushing – Wheel	2 28 4	71-8090	Mount – Handle L.H.	9 * 1
36-4780	Washer – Thrust	7 17 3	71-8100	Mount – Handle R.H.	8 16 1
36-4791	Washer	7 5 2	71-8100	Mount – Handle R.H.	9 18 1
38-7820	Bearing – Ball	7 15 1	71-8130	Bracket – Control	9 25 1
40-1940	Washer – Wheel	5 9 2	71-8310	Spring – Compression	9 24 1
40-1940	Washer – Wheel	1 27 2	71-8450	Cover – Spring	5 18 1
46-1113	Wheel & Tire Assembly	2 29 2	71-8450	Cover – Spring	6 32 1
46-5520	Lever – Traction	9 4 1	71-8580	Spacer – Door	1 20 2
46-6430	Screw – Handle	8 10 1	71-8830	Retainer – Shaft	1 24 2
46-6432	Screw – Handle	8 11 1	71-9023	Handle Assembly	9 20 1
46-6432	Screw – Handle	9 11 1	71-9024	Handle	8 2 1
46-6980	Support – Cable	8 12 1	71-9450	V-Belt	6 34 1
46-6980	Support – Cable	9 14 1	71-9460	Bag – Grass	11 5 1
47-2890	Bushing – Sleeve	6 4 2	71-9470	Door – Bag	11 3 1
47-6730	Seal – Grease	6 5 2	71-9480	Handle – Door	11 2 1
48-2060	Bearing – Needle	6 14 2	71-9600	Gear Case Ass'y Complete	7 * 1
49-2040	Screw – Taptite	7 1 4	71-9600	Gearcase Assembly	6 35 1
55-3760	Pinion – 15 Tooth	7 3 1	71-9610	Pulley – Half	7 12 2
60-8750	Bushing	7 6 2	71-9620	Shaft – Output	7 7 1
60-8850	Bushing – Output	7 9 2	71-9630	Bracket – Traction	6 36 1
60-8890	Gear – Bevel Pinion	7 16 1	71-9800	Door – Discharge	1 15 1
62-6660	Spacer	7 11 1	71-9840	Spring – Door	1 18 2
62-7550	Pulley – Driver	4 1 1	71-9850	Retainer – Belt	6 3 1
63-8590	Screw – Thread Forming	5 7 2	71-9860	Decal – 48cm	1 1 1
63-8590	Screw – Thread Forming	6 12 2	71-9861	Decal – Panel	9 23 1
65-2720	Ring – Retaining	6 17 4	71-9900	Frame – Bag	11 4 1
65-4710	Washer – Friction	6 15 2	74-1660	Cover – Wheel	6 21 2
65-4720	Spring – Compression	6 20 2	74-1670	Spacer – Wheel	6 25 2
65-4740	Washer – Keyed Thrust	6 16 4	92-2289	Decal – Toro Logo	3 12 1
65-4750	Gear – Pinion	6 19 2	92-2298	Washer – Spring	10 4 1
65-4760	Washer – Clutch	6 26 2	92-2299	Lever – Shift	10 5 1
65-5210	Screw – Thread Forming	1 12 2	92-3132	Bolt – Shoulder	10 8 1
66-1700	Decal – Noise	1 19 1	92-3133	Spacer – Traction Lever	10 9 1
66-6040	Key – Rocking R.H.	6 * 1	92-5412	Stop – Pivot	8 8 1
66-6050	Key – Rocking L.H.	6 18 1	92-7852	Shield – Muffler	3 7 1
71-7630	Cap – Throttle Lower	9 8 1	92-9677	Rear Pivot Assembly L.H.	6 6 1
71-7740	Spring – Counterbalance	5 17 1	92-9680	Rear Pivot Assembly R.H.	6 1 1
71-7740	Spring – Counterbalance	6 31 1	92-9812	Stiffener – Blade	4 6 1
71-7770	Plate – Rear Securing	5 13 2	92-9813	Blade – 48cm	4 5 1
71-7770	Plate – Rear Securing	6 27 2	93-0243	Shroud – QT Wedge	3 4 1
71-7800	Pivot – Rear H.P.	5 1 1	93-0335	Bail – Control SP	10 1 1
71-7820	Pivot – Front	1 25 1	93-0336	Bail – Control	8 9 1
71-7840	Rod – Trigger	5 3 1	93-0339	Cover – Throttle Lower	9 7 1
71-7840	Rod – Trigger	6 8 1	93-0340	Stop – Pivot	10 6 1
71-7860	Grip – Upper	1 13 1	93-1116	Cable – Brake	9 12 1
71-7870	Grip – Lower	1 6 1	93-1116	Cable – Brake	8 15 1
71-7890	Guide – Belt Rear	1 21 1	93-1117	Control – Throttle	9 2 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
93-1118	Control - Throttle	8 7 1	3296-5	Nut - Lock	5 2 2
93-1119	Cable - Traction	9 10 1	3296-5	Nut - Lock	6 7 2
93-3772	Guide - Rope	8 4 1	3296-42	Nut - Lock	8 5 2
93-3772	Guide - Rope	9 17 1	3296-42	Nut - Lock	9 16 2
93-4105	Decal - Danger	1 4 1	3296-56	Nut - Lock	8 6 1
93-4354	Decal - Engine	3 1 1	32112-11	Nut - Push	1 23 1
93-6652	Decal - Instruction	9 1 1	32112-13	Nut - Push	5 8 1
93-6653	Decal - Traction	10 10 1	32112-13	Nut - Push	6 13 1
93-8470	Screw - Clamp	3 10 1	32121-114	Pin - Groove	7 8 2
2210-249	Clamp - Cable	3 11 1	32144-4	Screw - Tapping	4 3 2
2210-316	Stop - Rope	3 3 1	32144-4	Screw - Thread Forming	1 10 10
302-26	Fitting - Grease	6 2 2	32144-4	Screw - Thread Forming	1 10 8
321-52	Screw - Hex Hd. Cap	8 3 1	32144-4	Screw - Thread Forming	5 14 4
321-52	Screw - Hex Hd. Cap	9 21 1	32144-4	Screw - Thread Forming	6 28 6
322-29	Screw - Cap Hex. Hd.	1 17 2	32144-31	Screw - Thread Forming	5 4 1
3253-22	Washer - Lock	4 7 1	32144-31	Screw - Thread Forming	6 9 1
3256-22	Washer - Flat	8 13 1	32144-70	Screw - Hex. Flange Hd.	1 5 1
3256-22	Washer - Flat	9 15 1	32144-73	Screw - Muffler	3 6 3
3256-24	Washer	7 13 1	32144-97	Screw - Phillips Pan Hd.	9 6 5
3256-49	Washer - Flat	10 3 1	32144-97	Screw - Thread Forming	1 14 2
3256-70	Washer - Flat	10 7 2	32144-98	Screw - Phillips Pan Hd.	9 5 4
3284-5	Pin - Roll	1 8 1	32144-99	Screw - Phillips Pan Hd.	9 9 2
3290-378	Tie - Cable	3 5 1	32144-102	Screw - Engine Mount	3 8 3
3290-378	Tie - Cable	9 13 1	32144-111	Screw - Thr'd Form	11 1 5
3290-378	Tie - Cable	8 14 1	32144-121	Screw	3 2 2
3296-2	Nut - Lock	10 2 1	32151-93	Ring - Grip	5 15 1
3296-5	Nut - Lock	1 26 2	32151-93	Ring - Grip	6 29 1
3296-5	Nut	7 14 1			

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]