



Count on it.

Form No. 3363-992 Rev A

Parts Catalog

G132 Rear-Engine Riding Mower

Model No. 70185—Serial No. 310000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake clutch

CARR: carriage

CCW: counter clock wise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents

- Body and Decal Assembly 4
- Seat and Rear Bag Assembly 5
- Front Axle and Steering Assembly 6
- Deck and Spindle Assembly 7
- Deck Suspension Assembly 9
- Engine and Fuel Tank Assembly 10
- Gear Transmission and Linkage Assembly 11
- Transmission Assembly No. 110-8649 12
- Electrical Assembly 14
- Attachments and Accessories 15

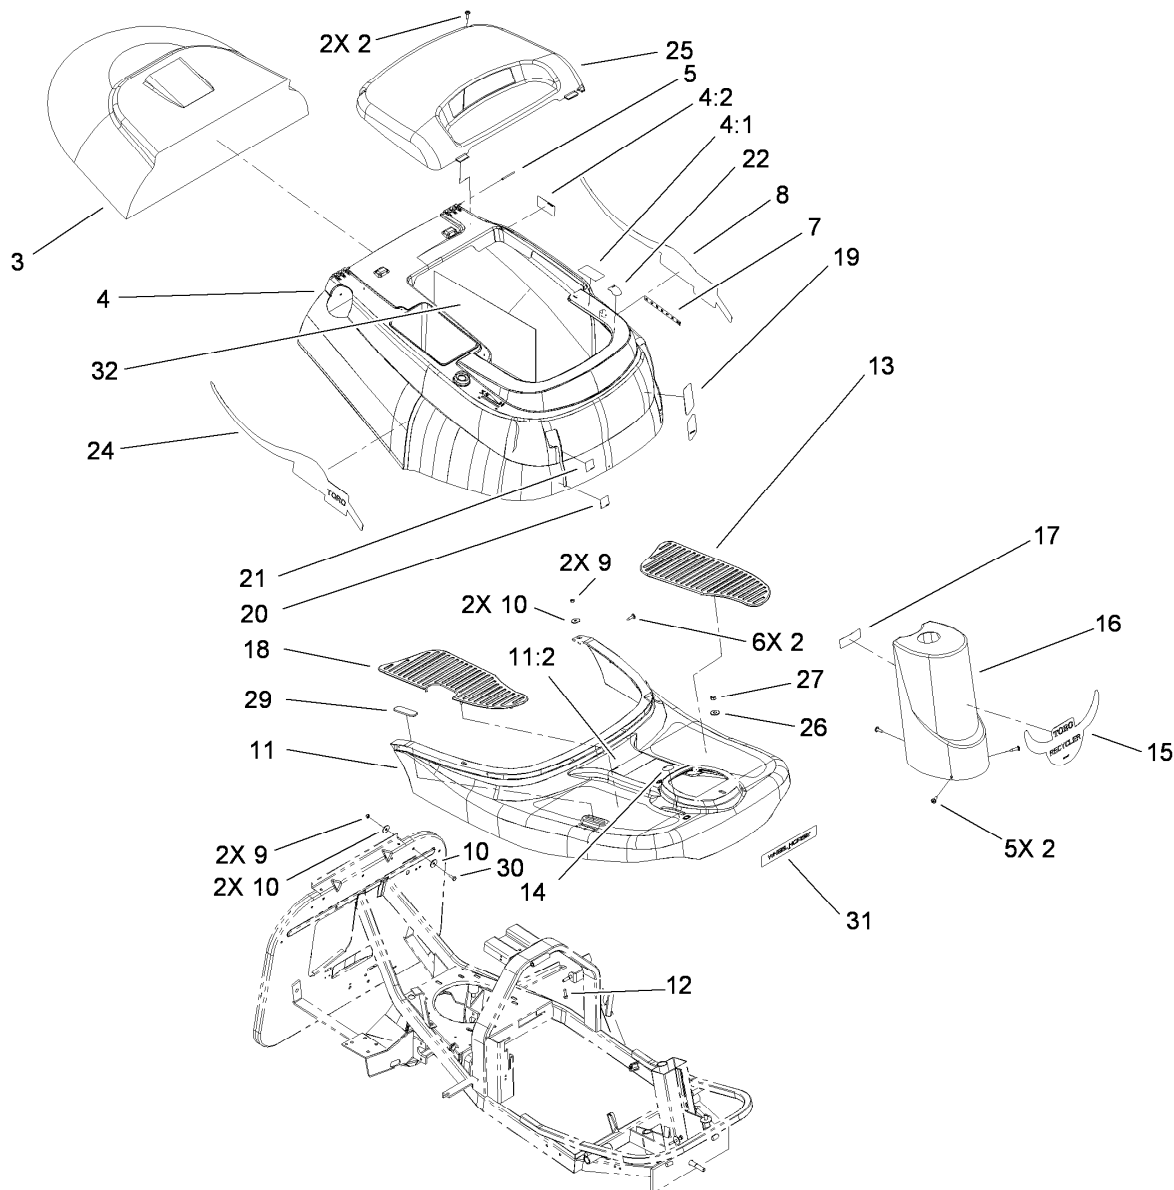

Body and Decal Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
2	106-2851	13	Screw-HH, TAP	16	106-2906	1	Steering-Turret
3	106-1810	1	Cover-Grass Bag	17		1	Decal-Run Lights ■
4	106-2885	1	Shroud And Decal ASM	18	106-2972	1	Floormat-RH
4:1		1	Decal-Danger ■	19		1	Decal-HOC ■
4:2		1	Decal-Warning, Hot ■	20		1	Decal-PTO, Disengage ■
5	106-2870	2	Pin-Dowel	21		1	Decal-PTO, Engage ■
7		1	Decal-Shift ■	22		1	Decal-Switch ■
8	107-8978	1	Decal	24	107-8979	1	Decal
9	33023-00	7	Nut-Lock	25	106-2860	1	Cover-Engine
10	106-2853	12	Washer-Flat	26	106-2854	1	Washer-Flat
11	106-2901	1	Foot Rest And Decal ASM	27	46-0330	1	Nut-Lock
11:2		1	Decal-Caution ■	29	106-2987	1	Cover
12	33113-020	2	Screw-HH	30	33113-016	2	Screw-HH
13	106-2973	1	Floormat-LH	31	106-6525	1	Decal
14		1	Decal-Clutch, Intl Rer ■	32	119-2735	1	Insulation
15	106-6517	1	Decal-Front	99	106-2887	1	Decal Kit ●

● Not illustrated

■ Not serviced separately




Ref.	Part Number	Qty.	Description
13	106-2944	1	Plate-Seat
14	33104-016	4	Screw-HHF
15	33113-016	1	Screw-HH
16	106-2929	2	Clip
17	106-2857	1	Seat
18	106-2871	2	Pin-Spring
19	114-3187	1	Frame-Complete
20	106-2865	1	Washer-Flat
21	106-1807	1	Spacer
22	106-2853	2	Washer-Flat
23	33113-035	2	Screw-HH
24	114-3212	2	Spacer-Collector

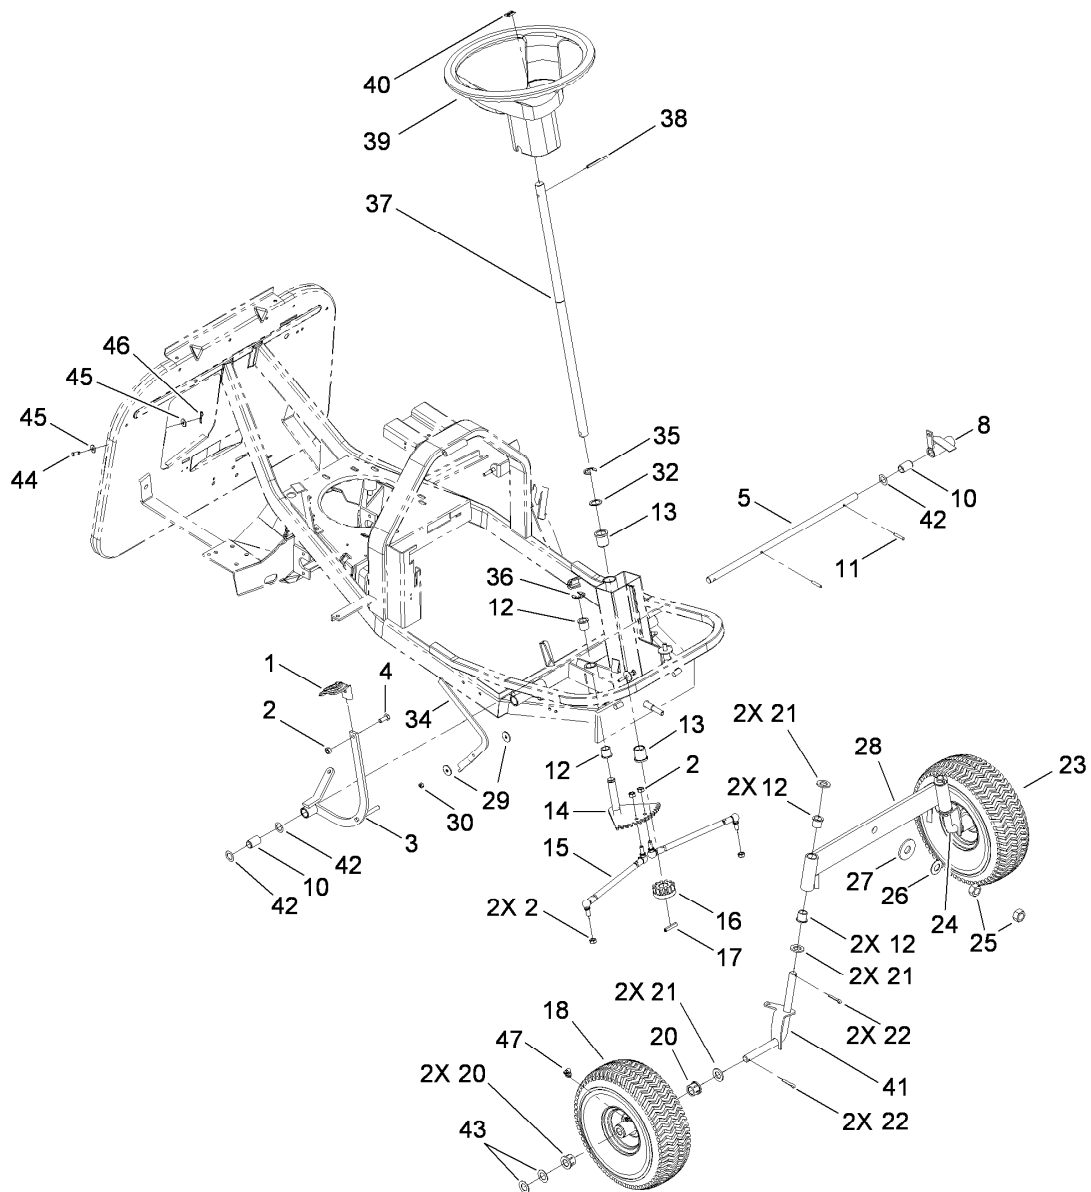

Front Axle and Steering Assembly

Ref.	Part Number	Qty.	Description
1	106-2957	1	Pedal-Brake
2	46-0330	6	Nut-Lock
3	114-3207	1	Lever-Clutch
4	33114-020	1	Screw-HH
5	106-2985	1	Shaft
8	106-2978	1	Bushing
10	106-2962	2	Bushing
11	106-2874	2	Pin-Dowel
12	106-1811	6	Bushing
13	106-2873	2	Bushing
14	106-2868	1	Rack-Steering
15	106-2933	2	Rod-Tie
16	106-2878	1	Gear-Steering
17	106-1845	1	Pin-Spiral
18	106-2951	2	Wheel
20	106-6508	4	Bushing
21	33098-00	6	Washer-Flat
22	3272-21	4	Pin-Cotter
23	106-2907	2	Tire
24	106-2953	1	Axle-Wheel, LH
25	33018-00	2	Nut-Hex

Ref.	Part Number	Qty.	Description
26	106-2926	1	Washer-Bell
27	106-2925	1	Washer-Flat
28	106-2864	1	Axle-Front
29	106-2853	2	Washer-Flat
30	33023-00	1	Nut-Lock
32	106-1807	1	Spacer
34	106-2961	1	Lever
35	106-2909	1	Ring-Retaining, EXT
36	106-2908	1	Ring-Retaining, EXT
37	106-2872	1	Shaft-Steering
38	106-1846	1	Pin-Roll
39	106-2883	1	Wheel-Steering
40	98-1459	1	Decal
41	106-2952	1	Axle-Wheel, RH
42	106-1835	3	Spacer
43	106-6544	4	Washer
44	106-6543	1	Pin-Grooved
45	106-2865	2	Washer-Flat
46	106-2879	1	Pin-Hair
47	106-6546	2	Zerk-Grease, 90 DEG

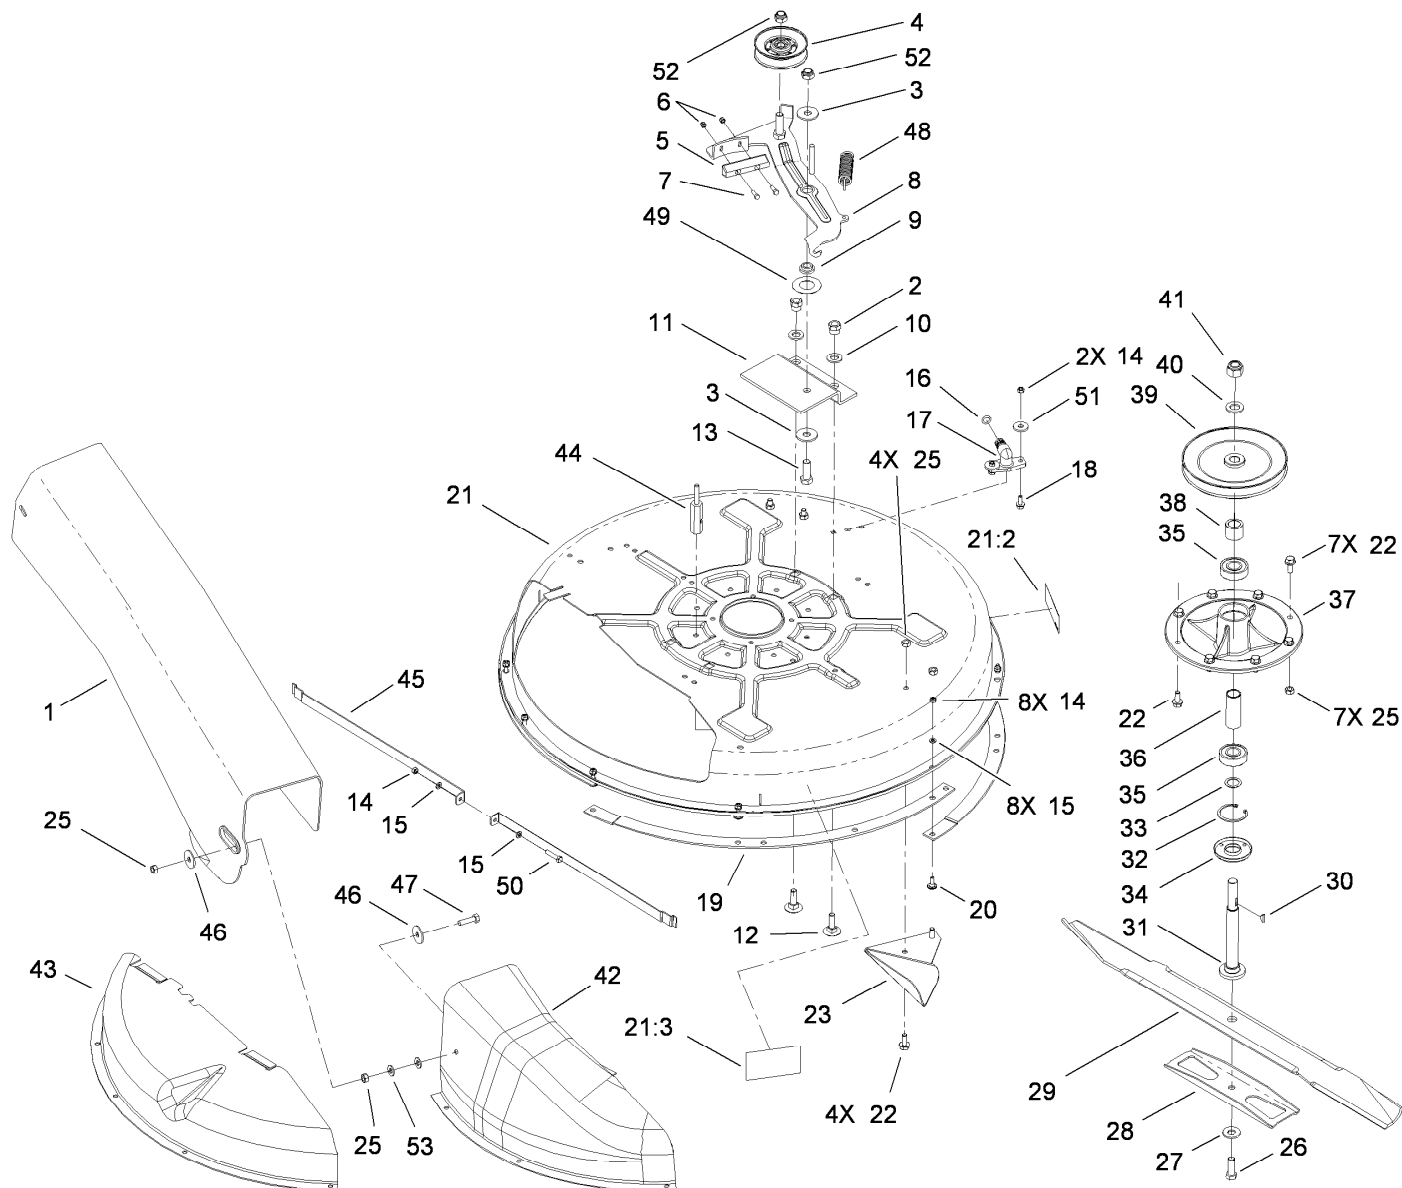


Deck and Spindle Assembly

Ref.	Part Number	Qty.	Description
1	106-2970	1	Tube-Discharge
2	46-0090	2	Nut-Lock
3	106-2922	2	Washer-Flat
4	106-1813	1	Pulley-Idler
5	106-1814	1	Brake-Rubber
6	46-0410	2	Nut-Lock
7	60-6910	2	Screw
8	114-3209	1	Brake ASM
9	106-2892	1	Bushing
10	33096-00	2	Washer-Flat
11	106-2884	1	Bracket-Deck
12	33126-035	2	Screw-CARR
13	33116-035	1	Screw-HH
14	33023-00	11	Nut-Lock
15	33093-00	10	Washer-Flat
16	106-1847	1	O-Ring
17	95-2747	1	Fitting-Washout
18	33103-016	2	Screw-HHF
19	80-4490	4	Ring-Deck

Ref.	Part Number	Qty.	Description
20	106-6510	8	Screw-Sh
21	106-6545	1	Deck ASM
21:2		1	Decal-Caution ●
21:3		1	Decal-Cover, Discharge ●
22	33104-020	12	Screw-HHF
23	80-2630	2	Kicker
25	46-0330	13	Nut-Lock
26	3212-5	1	Screw-HH
27	106-2858	1	Washer-Bell
28	80-4570	1	Stiffener
29	106-6547	1	Blade-Recycler
30	106-1805	1	Key
31	106-2902	1	Shaft-Spindle
32	106-2910	1	Ring-Snap
33	106-1807	1	Spacer
34	80-4370	1	Shield-Bearing
35	251-297	2	Bearing-Ball
36	106-2888	1	Spacer
37	56-7030	1	Spindle

● Not serviced separately

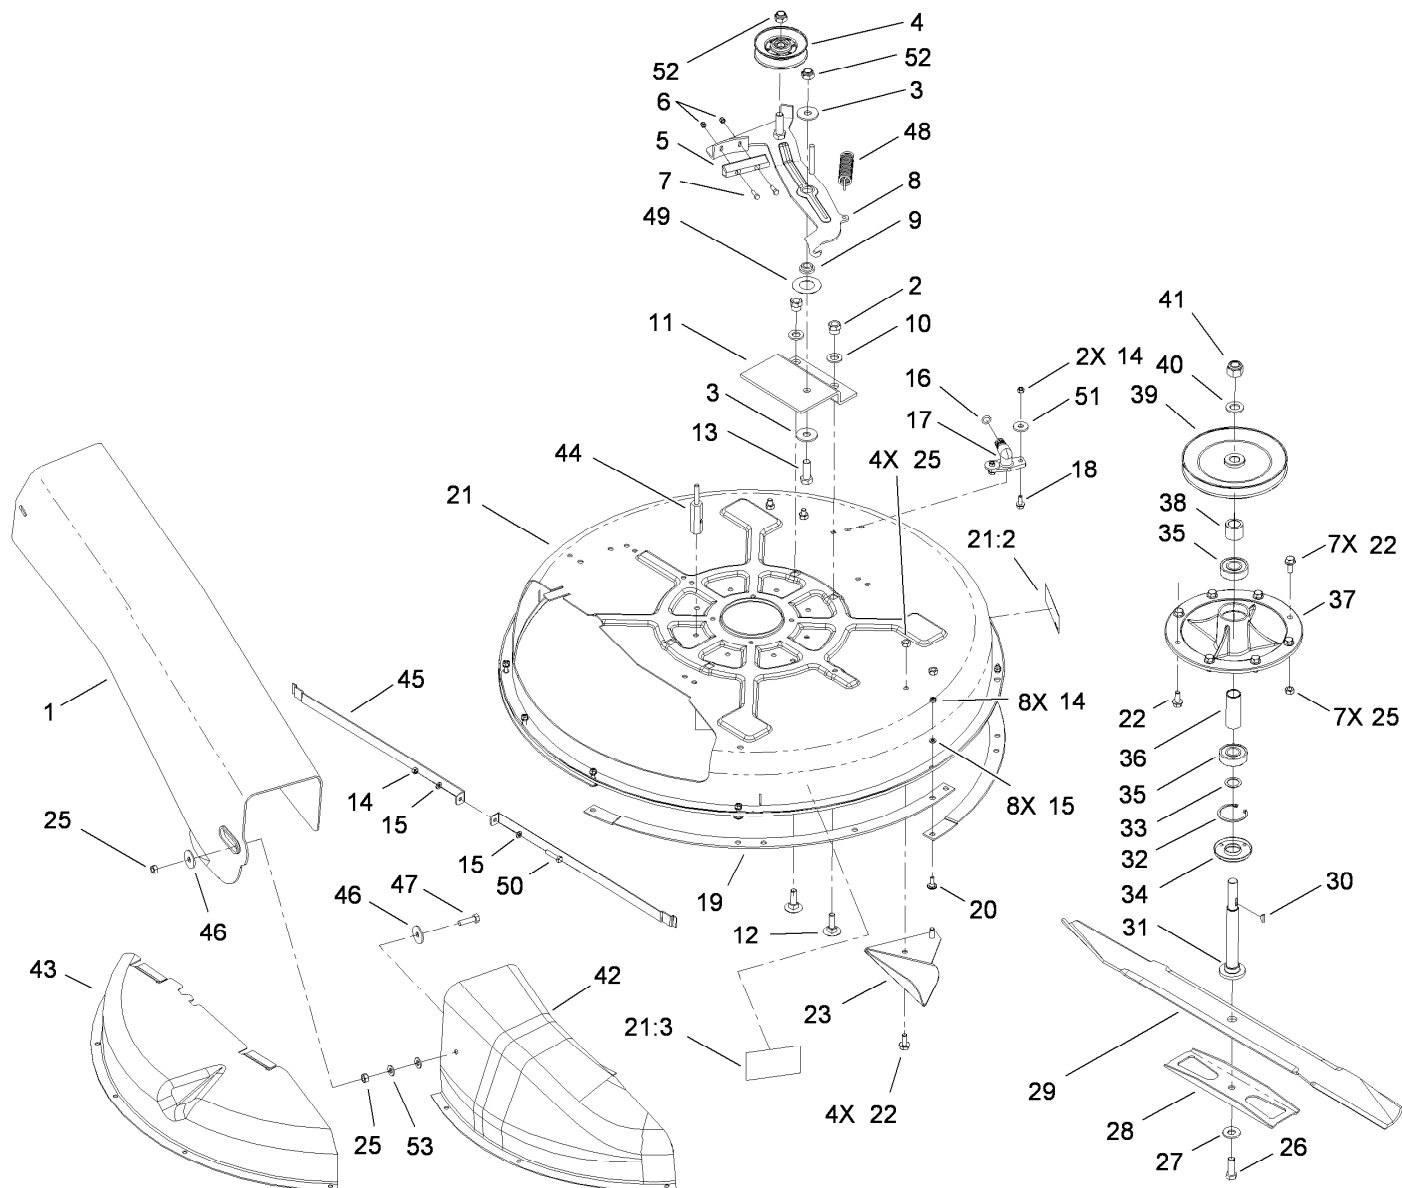

Deck and Spindle Assembly (continued)


Ref.	Part Number	Qty.	Description
38	106-1842	1	Spacer
39	106-1812	1	Pulley
40	33098-00	1	Washer-Flat
41	106-2914	1	Nut-Hex
42	106-2898	1	Tunnel-Discharge
43	106-2899	1	Cover-Recycler
44	106-2897	1	Guide-Belt
45	106-6542	2	Strap-Deck

Ref.	Part Number	Qty.	Description
46	106-2855	2	Washer-Flat
47	33114-030	1	Screw-HH
48	106-1838	1	Spring-Extension
49	106-2893	1	Spacer
50	33113-030	1	Screw-HH
51	106-2865	2	Washer-Flat
52	106-6513	2	Nut-Lock
53	33094-00	2	Washer-Plain

● Not serviced separately



Ref.	Part Number	Qty.	Description
19	106-2896	2	Bracket-Deck
20	33104-020	10	Screw-HHF
23	33094-00	1	Washer-Plain
24	106-2879	1	Pin-Hair
25	106-2882	1	Screw-CARR
26	114-3198	1	Deck-Hanger, Support
27	106-2967	2	Handle
28	106-2954	1	Lever-Blade, Clutch
29	106-2955	1	Bushing
30	106-2869	3	Shim
31	106-2950	1	Spring-Compression
32	106-1806	6	Washer
33	106-6512	1	Plate
34	33113-016	4	Screw-HH
35	106-6406	1	Decal-Recycler
36	107-2229	1	Spring-Lift, Deck
37	114-3203	5	Bushing-Linkage, Deck

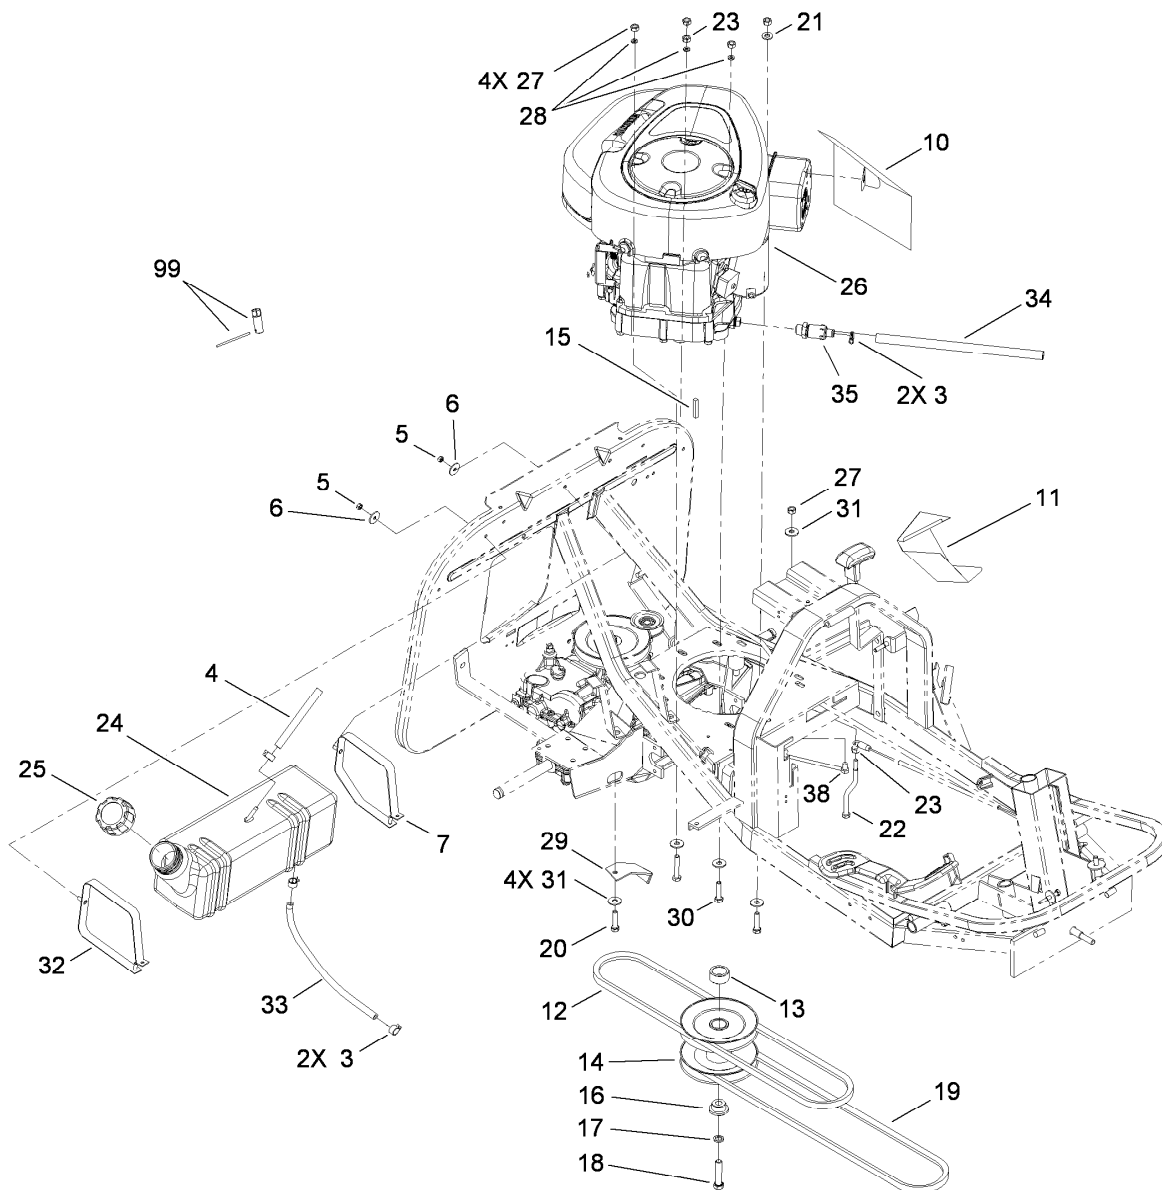


Engine and Fuel Tank Assembly

Ref.	Part Number	Qty.	Description
3	107-2210	4	Clamp-Tube
4	106-2990	1	Hose-Fuel
5	33023-00	2	Nut-Lock
6	106-2853	2	Washer-Flat
7	106-6541	1	Strap-Fuel Tank, Left
10	119-2733	1	Shield-Muffler
11	119-2734	1	Deflector-Exhaust
12	106-2905	1	Belt
13	106-1836	1	Spacer
14	106-2915	1	Pulley
15	67-7490	1	Key-Square
16	106-1837	1	Spacer
17	106-2856	1	Washer-Lock
18	3212-8	1	Screw-HH
19	106-1826	1	Belt-Deck
20	33114-035	3	Screw-HH
21	33094-00	1	Washer-Plain

Ref.	Part Number	Qty.	Description
22	106-2974	2	Guide-Belt
23	33014-00	2	Nut-Hex
24	106-6537	1	Tank-Fuel
25	55-3576	1	Gas Cap ASM
26		1	Engine-Briggs, 219807-0138-B1 ● ■
27	46-0330	5	Nut-Lock
28	33093-00	3	Washer-Flat
29	107-2239	1	Bracket, Drive Belt
30	33114-045	1	Screw-HH
31	106-2854	5	Washer-Flat
32	106-6540	1	Strap-Fuel Tank, Right
33	107-1555	1	Hose-Fuel
34	107-2241	1	Tube-Drain, Oil
35	92-6877	1	Valve-Drain, Oil
38	110-8650	1	Guide-Belt
99	107-8937	1	Plug-Wrench

● Not serviced separately

■ Obtain parts from www.briggsandstratton.com

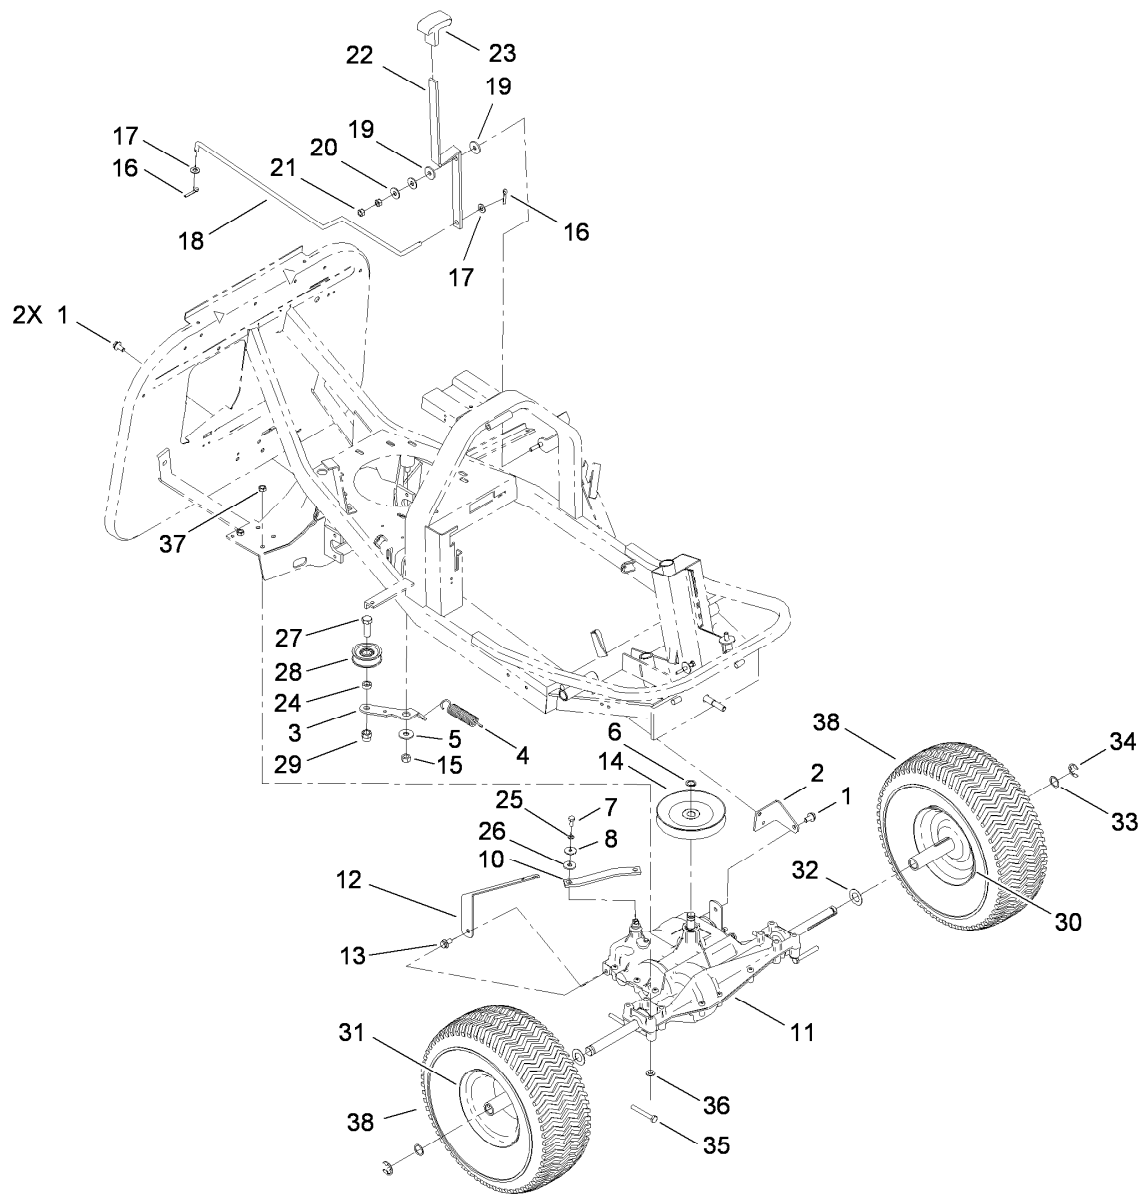


Gear Transmission and Linkage Assembly

Ref.	Part Number	Qty.	Description
1	106-6516	3	Screw-HHF TAP
2	106-2979	1	Bracket
3	106-2938	1	Bracket-Idler
4	106-2936	1	Spring-Extension
5	106-2921	1	Washer-Flat
6	106-2862	1	Ring-External
7	321-3	1	Screw-HH
8	106-2853	1	Washer-Flat
10	106-2976	1	Bracket
11	110-8649	1	Differential-Gear
12	114-3123	1	Plate-Switch, Transmission
13	106-6516	1	Screw-HHF TAP
14	106-2932	1	Pulley
15	33025-00	1	Nut-Lock
16	3272-21	2	Pin-Cotter
17	33094-00	2	Washer-Plain
18	114-3122	1	Link-Transmission, Dana
19	106-2975	2	Washer
20	106-2854	2	Washer-Flat


Ref.	Part Number	Qty.	Description
21	33014-00	2	Nut-Hex
22	106-2935	1	Lever-Clutch
23	106-2967	1	Handle
24	106-2986	1	Spacer
25	106-6506	1	Washer-Lock/Sp
26	106-6514	1	Washer-Flat
27	33116-035	1	Screw-HH
28	114-3206	1	Pulley
29	46-0090	1	Nut-Lock
30	114-3200	1	Wheel-Rear Left
31	114-3201	1	Wheel-Rear Right
32	114-3190	2	Spacer-Inner
33	114-3202	2	Spacer-Outer
34	106-2909	2	Ring-Retaining, EXT
35	33114-060	4	Screw-HH
36	33094-00	4	Washer-Plain
37	46-0330	4	Nut-Lock
38	106-2913	2	Tire

Transmission Assembly No. 110-8649

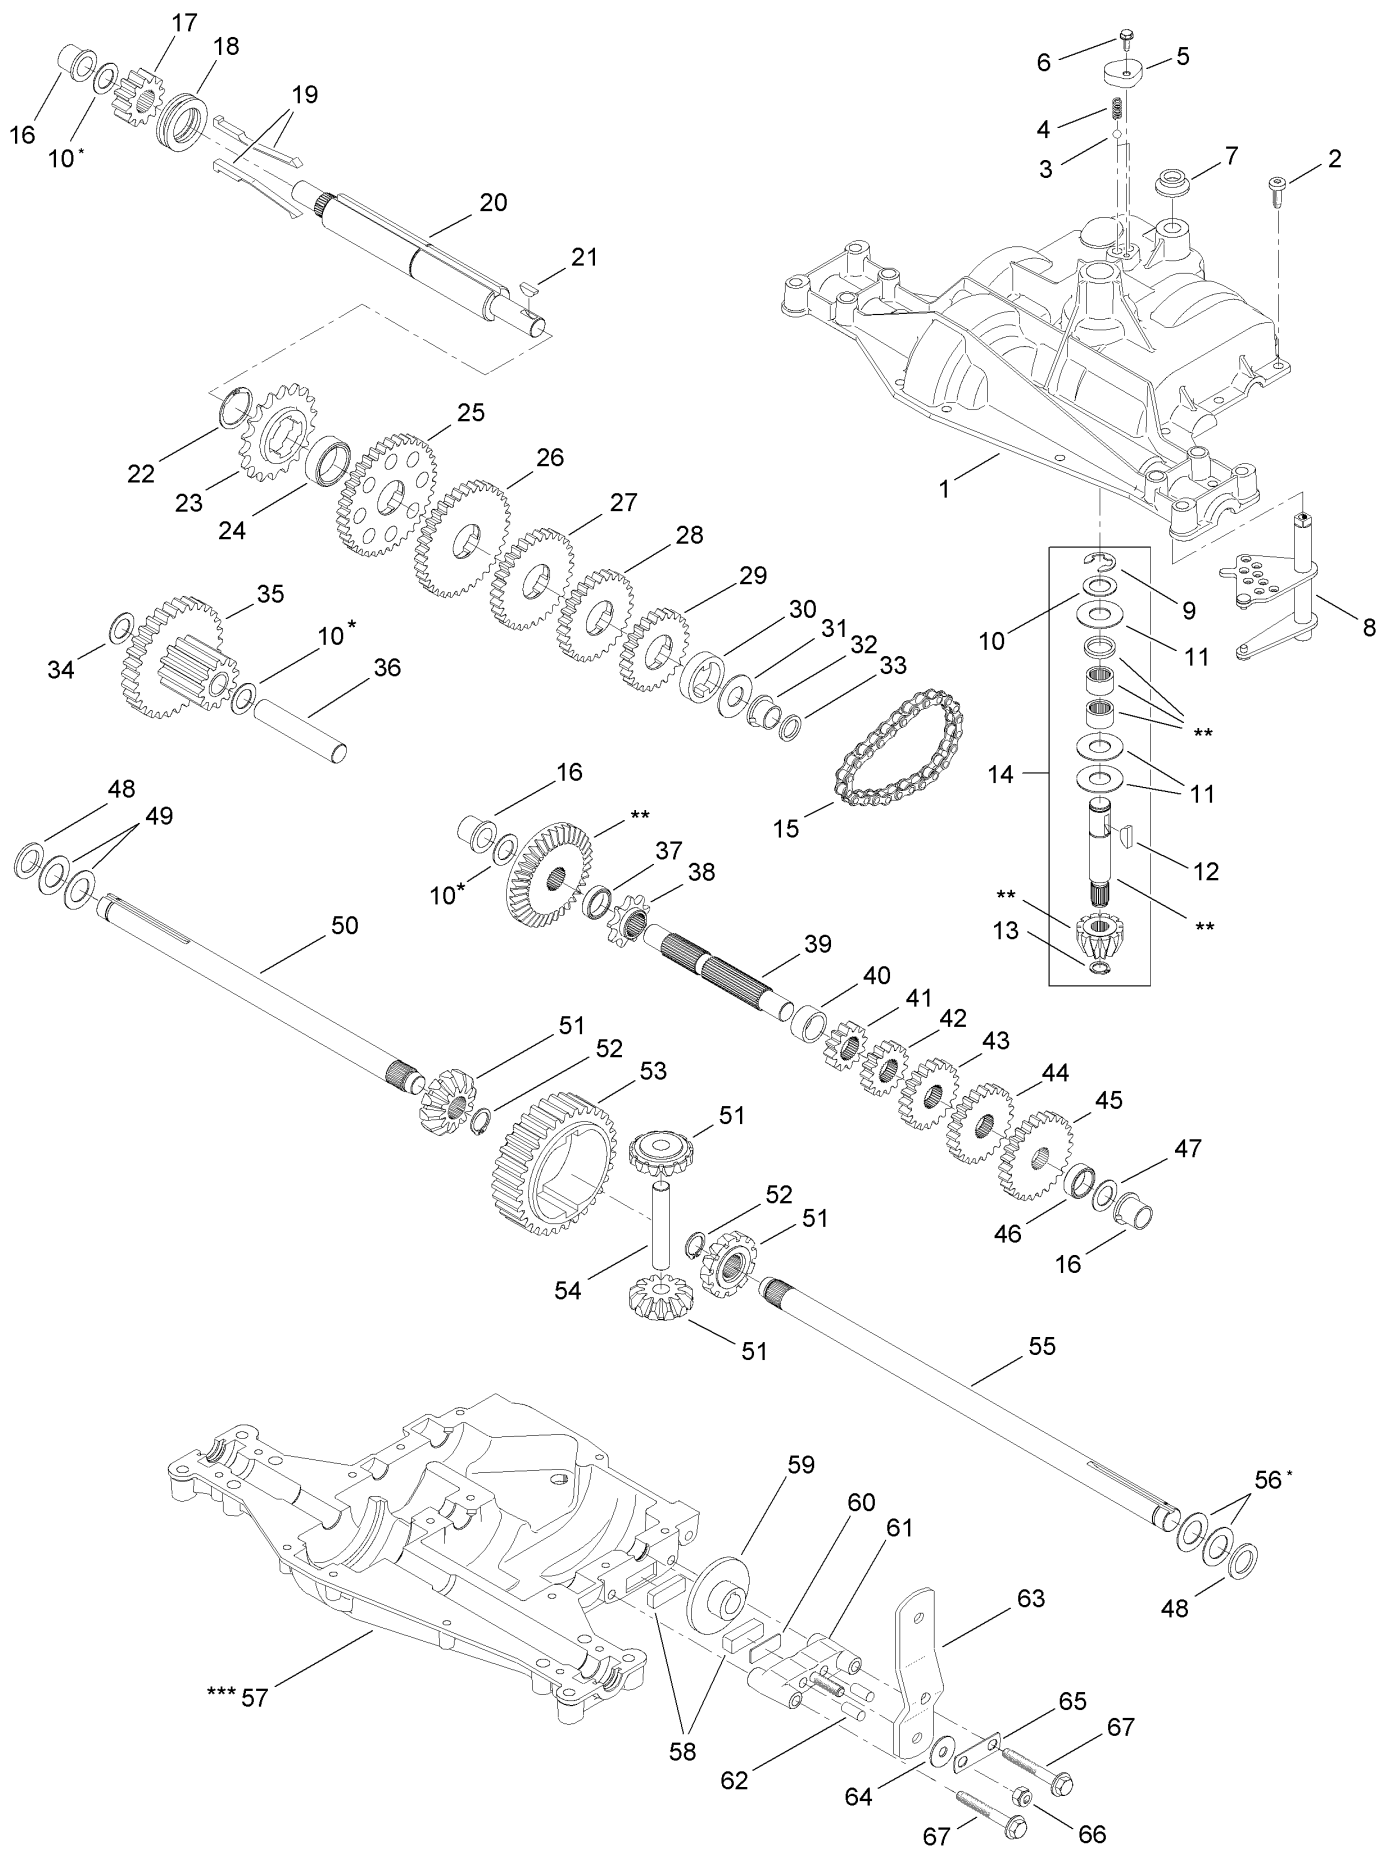

Transmission Assembly No. 110-8649 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-0850	1	Housing-Upper	35	110-3186	1	Combination Gear ASM (12T 30T)
2	110-3153	16	Screw-Tapping	36	110-3187	1	Shaft-Idler
3	110-3154	2	Ball-Detent	37	117-0858	1	Spacer
4	110-3155	2	Spring-Detent	38	110-3190	1	Sprocket-9T
5	110-3156	1	Cover-Detent	39	117-0859	1	Shaft-Drive
6	110-3157	1	Screw-Tapping	40	117-0860	1	Spacer
7	110-3158	1	V-Ring	41	117-0861	1	Gear-Spur,12T
8	117-0851	1	Shifter Kit	42	110-3195	1	Gear-Spur, 15T
9	110-3161	1	Ring-Retaining	43	117-0862	1	Gear-Spur,20T
10	110-3162	4	Shim ASM (.625 Shaft)	44	117-0863	1	Gear-Spur,25T
11	110-3163	3	Washer-Plain	45	117-0864	1	Gear-Spur,28T
12	110-3164	1	Key-Woodruff	46	110-3194	1	Spacer
13	110-3167	1	Ring-Retaining	47	110-3198	1	Washer-Plain
14	117-0852	1	Input Shaft Kit	48	110-3199	2	Washer-Neoprene
15	110-3168	1	Chain-Pitch, 24	49	110-3200	2	Washer-Plain
16	110-3169	3	Bearing-Flange	50	117-0865	1	Axle-LH
17	110-3170	1	Gear-Spur, 12T	51	117-0866	1	Miter Gear Kit
18	110-3171	1	Collar-Clutch	52	110-3203	2	Ring-Retaining
19	110-3172	1	Clutch Keys ASM	53	110-3204	1	Gear-Spur, 32T
20	110-3173	1	Shaft-Intermediate	54	110-3205	1	Shaft-Cross
21	110-3174	1	Key-Woodruff	55	117-0867	1	Axle-RH
22	110-3175	1	Ring-Retaining	56	110-3192	1	Shim ASM (.750 Shaft)
23	110-3176	1	Sprocket-18T	57	110-3208	1	Housing-Lower
24	117-0853	1	Spacer	58	117-0868	2	Puck-Brake
25	117-0854	1	Gear-Spur,37T	59	110-3210	1	Disc-Brake
26	110-3178	1	Gear-Spur, 35T	60	110-3211	1	Spacer-Puck, Brake
27	117-0855	1	Gear-Spur,30T	61	110-3212	1	Jaw-Brake
28	117-0856	1	Gear-Spur,25T	62	110-3213	2	Pin-Dowel
29	117-0857	1	Gear-Spur,22T	63	117-0869	1	Lever-Actuating
30	110-3181	1	Spacer	64	110-3215	1	Washer-Plain
31	110-3182	1	Washer-Plain	65	110-3216	1	Bracket-Rotation, Anti
32	110-3183	1	Bearing-Flange	66	110-3218	1	Nut-Lock
33	110-3184	1	Seal-Oil	67	110-3217	2	Screw-Tapping
34	110-3185	1	Washer-Plain				

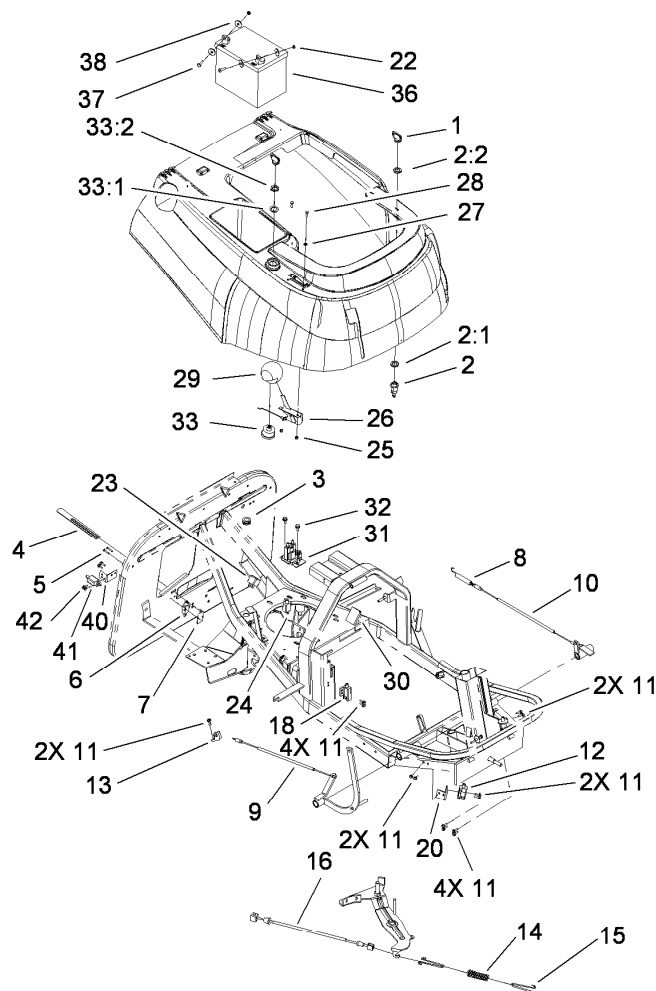

Electrical Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	63-8360	2	Key-Ignition	23	98-7249	1	Relay
2	46-5780	1	Starter Switch ASM	24	65-7410	1	Switch-Pole, Single
2:1	3254-5	1	Washer-Tooth	25	46-0410	2	Nut-Lock
2:2	218-461	1	Nut-HH	26	106-2916	1	Throttle Cable ASM
3	106-2863	1	Grommet	27	52-6430	2	Washer
4	106-1831	1	Lever-Bag Fill	28	60-6910	2	Screw
5	106-2850	2	Screw	29	106-2989	1	Knob
6	106-1843	1	Switch	30	99-3700	1	Module
7	106-1827	1	Clamp-Bag Fill	31	47-1910	1	Solenoid
8	106-2981	1	Spring-Extension	32	106-2852	2	Screw-HHF, TAP
9	106-2983	1	Cable	33	88-9830	1	Key Switch ASM
10	106-2982	1	Cable	33:1	3254-5	1	Washer-Tooth
11	106-1849	16	Screw-HH, TAP	33:2	218-461	1	Nut-HH
12	65-7410	1	Switch-Pole, Single	36	104-1755	1	Battery-155 Cca
13	106-2998	1	Switch	37	33113-020	2	Screw-HH
14	106-2917	1	Spring-Compression	38	106-2853	4	Washer-Flat
15	106-2918	2	Hook-Spring	39	114-3214	1	Harness-Wiring, Gear ●
16	106-2956	1	Cable	40	114-3211	1	Bracket-Collector, Switch
18	86-4690	1	Switch-Interlock	41	65-7410	1	Switch-Pole, Single
20	106-1816	1	Bracket-Switch	42	106-1849	4	Screw-HH, TAP
22	33013-00	2	Nut-Hex				

● Not illustrated

Attachments and Accessories

For 70185 G132 Rear-Engine Riding Mower

Product Name	Model/Part
Blade-32in	105-0526
Hitch Bracket Kit	107-2206
Rear Discharge Deflector Kit	79472



Count on it.