 




MODEL NO. 71205-5900001 & UP

**PARTS
CATALOG**

1338XLE LAWN TRACTOR

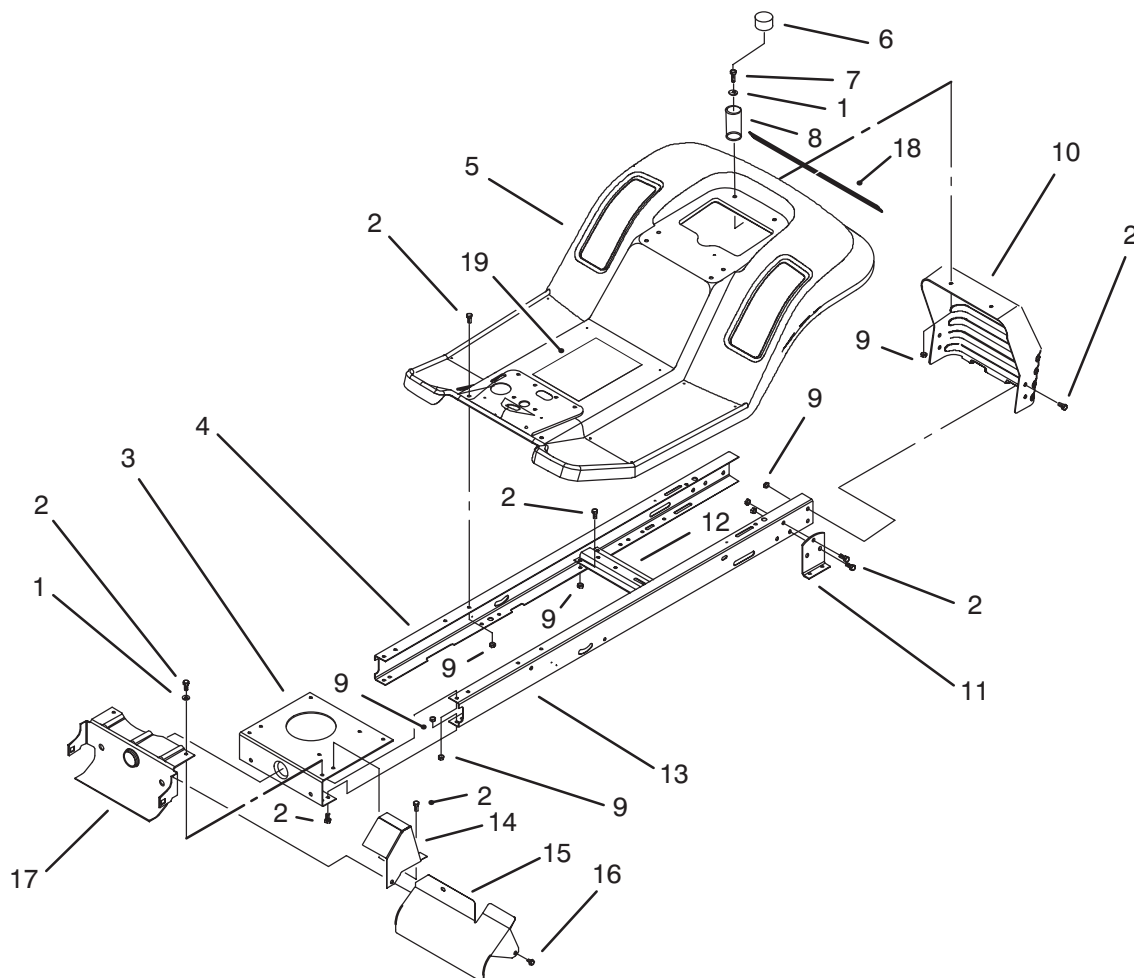


C-2150

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3256-23	Washer - Flat	4
2	322-3	Screw - Hex Hd. Cap	22
3	88-4630	Plate - Engine Mount	1
4	88-4650	Rail - R.H. Frame	1
5	88-3840-01	Body - Rear	1
6	701178	Cap - Protector	2
7	322-5	Screw - Hex Hd. Cap	2
8	88-6220	Spring - Compression	2
9	3296-29	Nut - Lock	24
10	88-3940	Panel - Rear Hitch	1

Ref. No.	Part No.	Description	No. Used
11	88-5260	Bracket - Transaxle Mt.	2
12	88-4620	Bracket - Idler Pivot	1
13	88-4660	Rail - L.H. Frame	1
14	88-4960	Shield - Exhaust Pipe	1
15	88-6290	Shield - Muffler	1
16	32104-76	Screw - Thread Tapping	1
17	88-5120	Support - Front Axle	1
18	93-4144	Decal - Rear Body	1
19	93-6675	Decal - Instruction	1

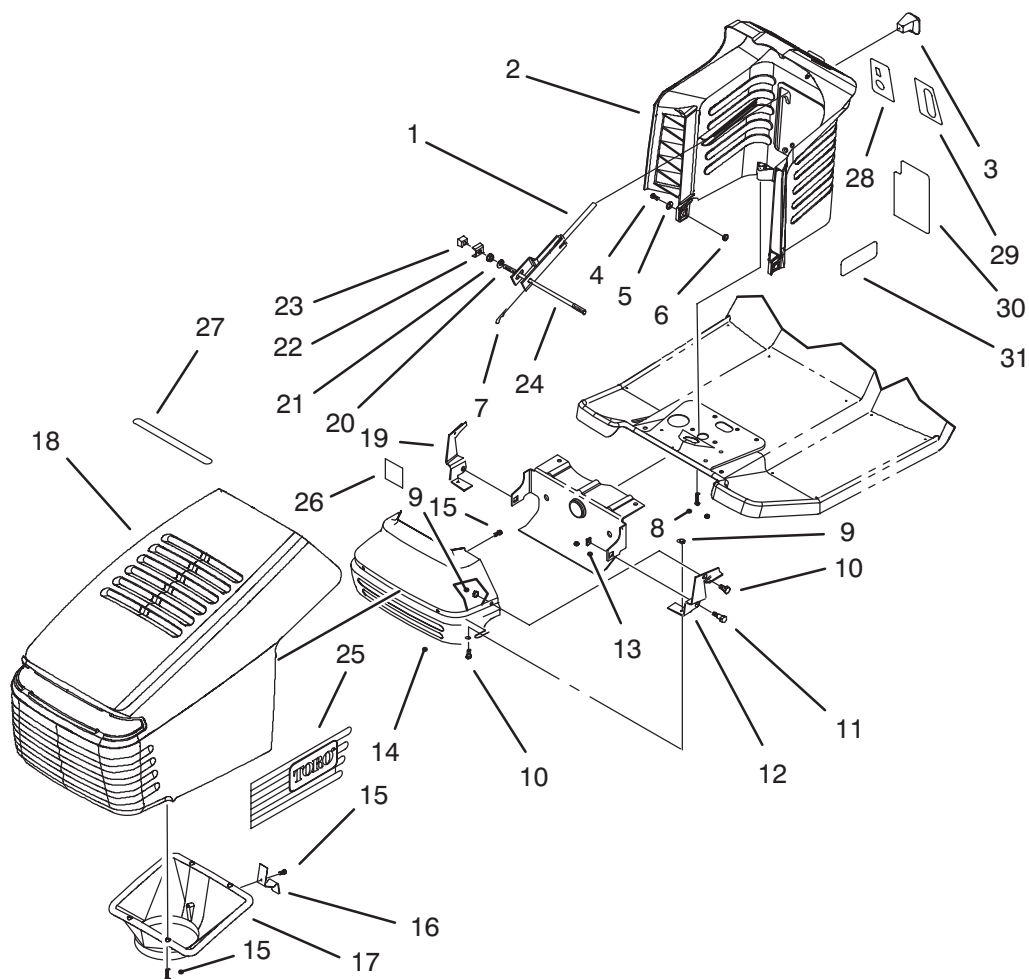 


C-1308

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5190	Lever - Deck Engage	1
2	93-0303	Tower - Steering	1
3	62-1292	Knob - Engage Lever	1
4	322-3	Screw - Hex Hd. Cap	2
5	3256-23	Washer - Flat	2
6	3296-29	Nut - Lock	2
7	3290-307	Pin - Cotter	2
8	46-8091	Screw - Plastite	2
9	3296-42	Nut - Lock	4
10	321-2	Screw - Hex Hd. Cap	4
11	28-0540	Bolt - Shoulder	2
12	88-6050	Bracket - Hood Pivot L.H.	1
13	3290-496	Nut - Retained	2
14	88-3930	Shield - Heat	1
15	46-8090	Screw - Plastite	8
16	88-4220	Latch - Hood	1

Ref. No.	Part No.	Description	No. Used
17	88-4050	Duct - Hood Air	1
18	92-8650	Hood	1
19	88-6040	Bracket - Hood Pivot R.H.	1
20	3256-24	Washer - Flat	2
21	32128-43	Nut - Flange	2
22	88-4160	Clamp - Pivot Rod	2
23	88-4140	Nut - Wedge	2
24	88-4170	Rod - Tower Pivot	1
25	92-2467	Decal - Hood R.H.	1
*	92-2468	Decal - Hood L.H.	1
26	92-5782	Patch - Heat Tape	1
27	92-5748	Decal - Air Duct	1
28	92-5731	Decal - Ignition/Lights	1
29	92-5730	Decal - Throttle	1
30	93-6673	Decal - Deck Engage	1
31	93-4145	Decal - Tower 1338XL	2

 
*Not Illustrated

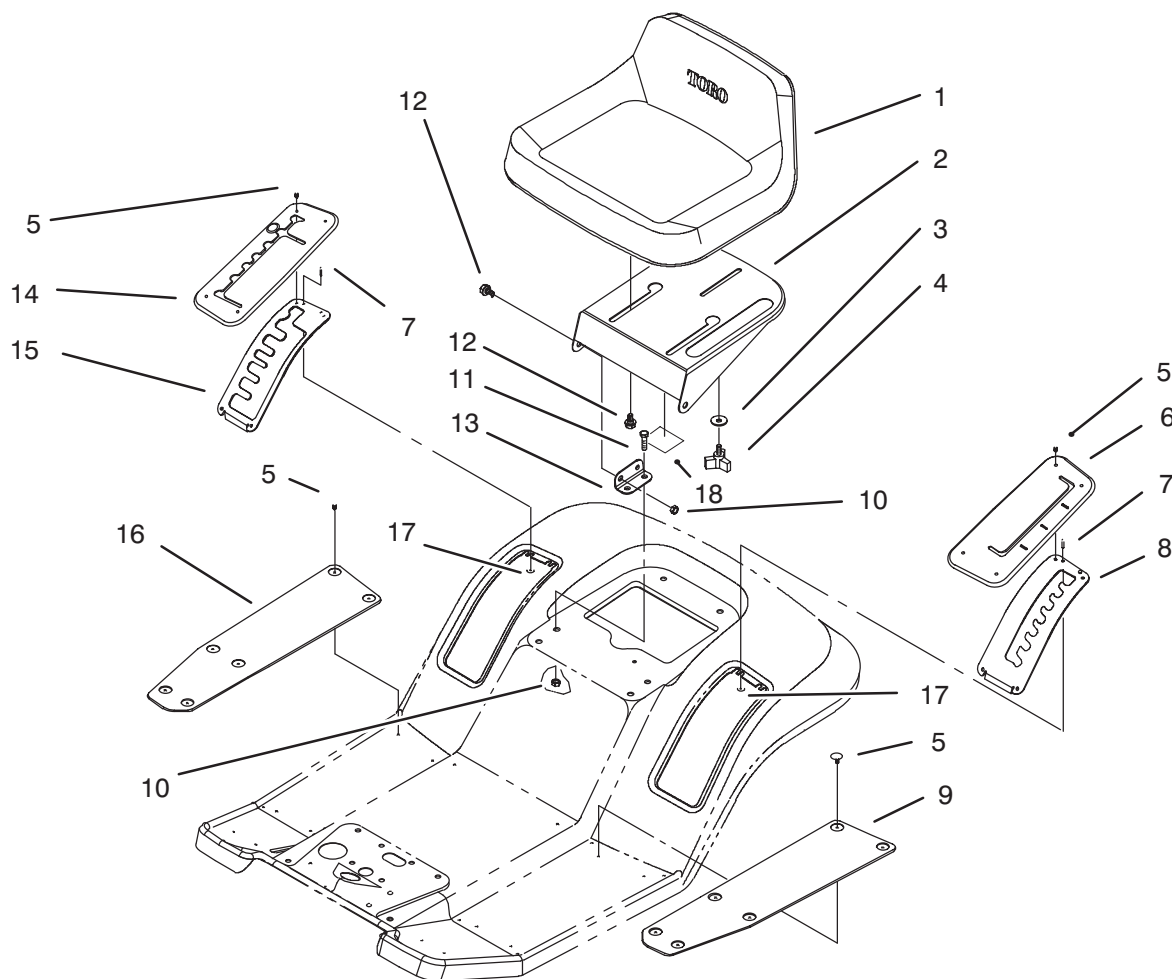

C-1830A

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-3950	Seat	1	10	3296-29	Nut - Lock	6
2	88-4910	Support - Seat	1	11	322-3	Screw - Hex Hd. Cap	4
3	5-4460	Washer - Fender	1	12	37-8770	Bolt - Shoulder	4
4	92-9674	Knob - Studded	1	13	88-4820	Bracket - Seat Hinge	2
5	3290-479	Fastener - Panel	20	14	93-7656	Cover - Shift Gate	1
6	93-7657	Cover - H.O.C.	1	15	88-5020	Gate - Shift	1
7	3290-282	Rivet - Pop	4	16	88-5220	Mat - R.H. Foot	1
8	88-5030	Gate - H.O.C.	1	17	3269-26	Washer - Backup	4
9	88-5240	Mat - L.H. Foot	1	18	114621	Decal - Noise	1

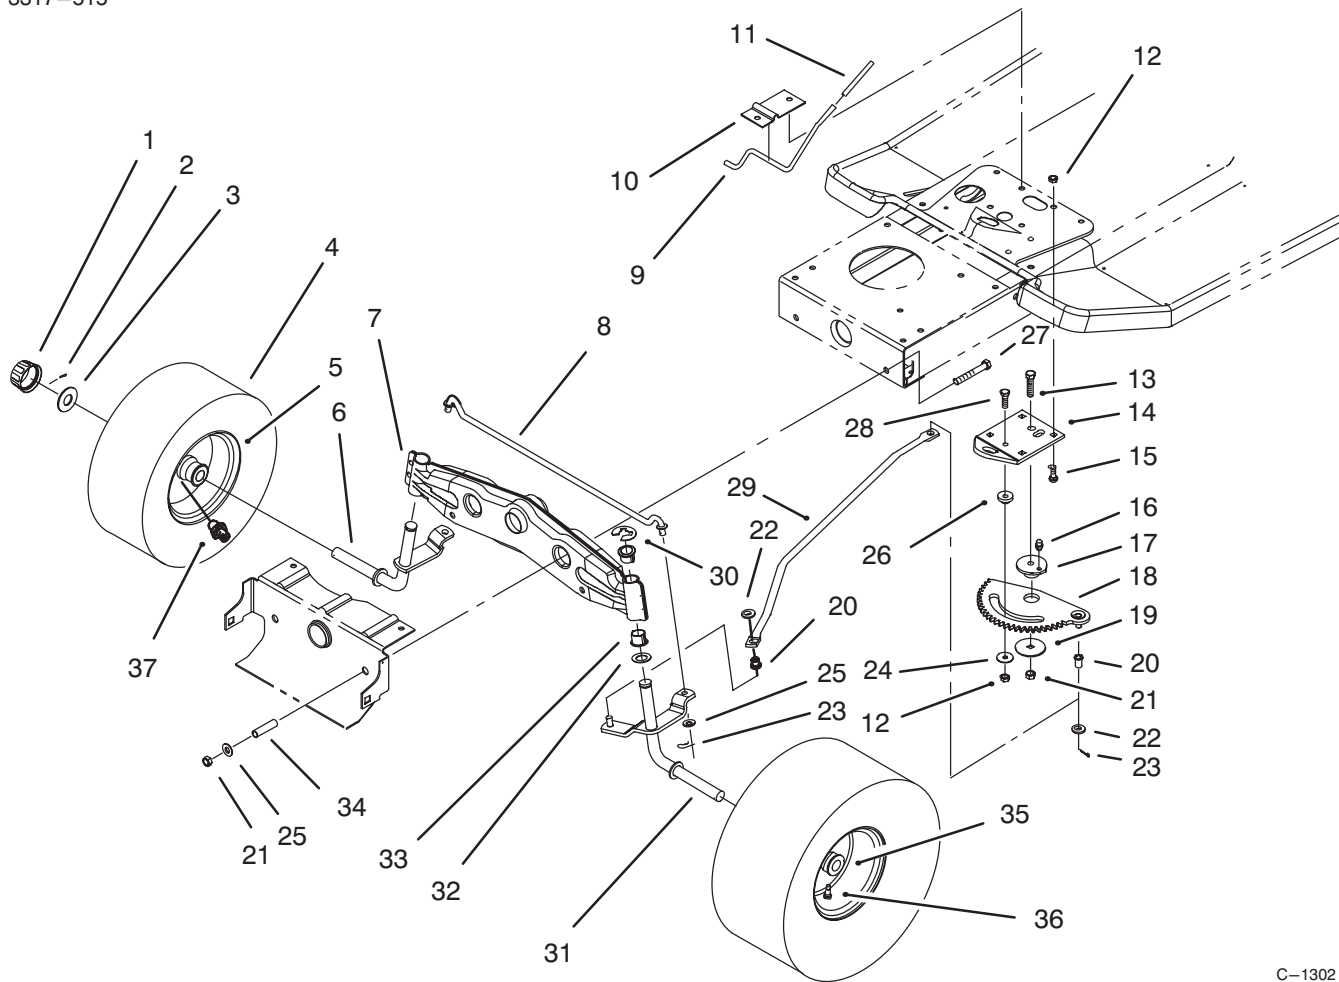 


C-1302

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9780	Cap - Hub	2
2	3272-12	Pin - Cotter	2
3	28-2480	Washer	2
4	88-4070	Tire - 13"	2
5	88-4370	Rim - Front Wheel	2
6	92-7889	Spindle - R.H.	1
7	88-4460	Axle - Front	1
8	88-5380	Rod - Steering Tie	1
9	88-5510	Rod - Parking Brake	1
10	88-5520	Bracket - Parking Brake	1
11	88-0890	Grip - Brake Rod	1
12	3296-29	Nut - Lock	5
13	3231-4	Screw - Carriage	1
14	88-5130	Bracket - Steering Rack	1
15	3230-1	Bolt - Carriage	4
16	302-26	Fitting - Grease	1
17	88-4670	Bushing - Eccentric	1
18	88-5200	Rack - Steering	1
19	111419	Washer - Fender	1
20	52-2891	Bushing - Steering Link	2
21	3296-39	Nut - Lock	3

Ref. No.	Part No.	Description	No. Used
22	3256-25	Washer - Flat	2
23	3272-10	Pin - Cotter	4
24	5-4460	Washer - Fender	1
25	3256-24	Washer - Flat	4
26	88-5010	Spacer - Steering Rack	1
27	323-13	Screw - Hex Hd. Cap	2
28	3230-3	Screw - Carriage	1
29	88-4830	Link - Drag	1
30	32151-48	E-Ring	2
31	92-7890	Spindle - L.H.	1
32	3-6498	Washer - Thrust	2
33	88-5800	Bushing - Steering Spindle	4
34	88-5470	Spacer - Front Axle	2
35	88-4400	Bearing - Wheel	4
36	232-27	Valve Stem w/Cap	2
37	302-5	Fitting - Grease	2
*	232-39	Inner Tube	2
*	88-4280	Wheel & Tire Assembly (Incl. Ref. #4 & 5)	2

 
*Not Illustrated

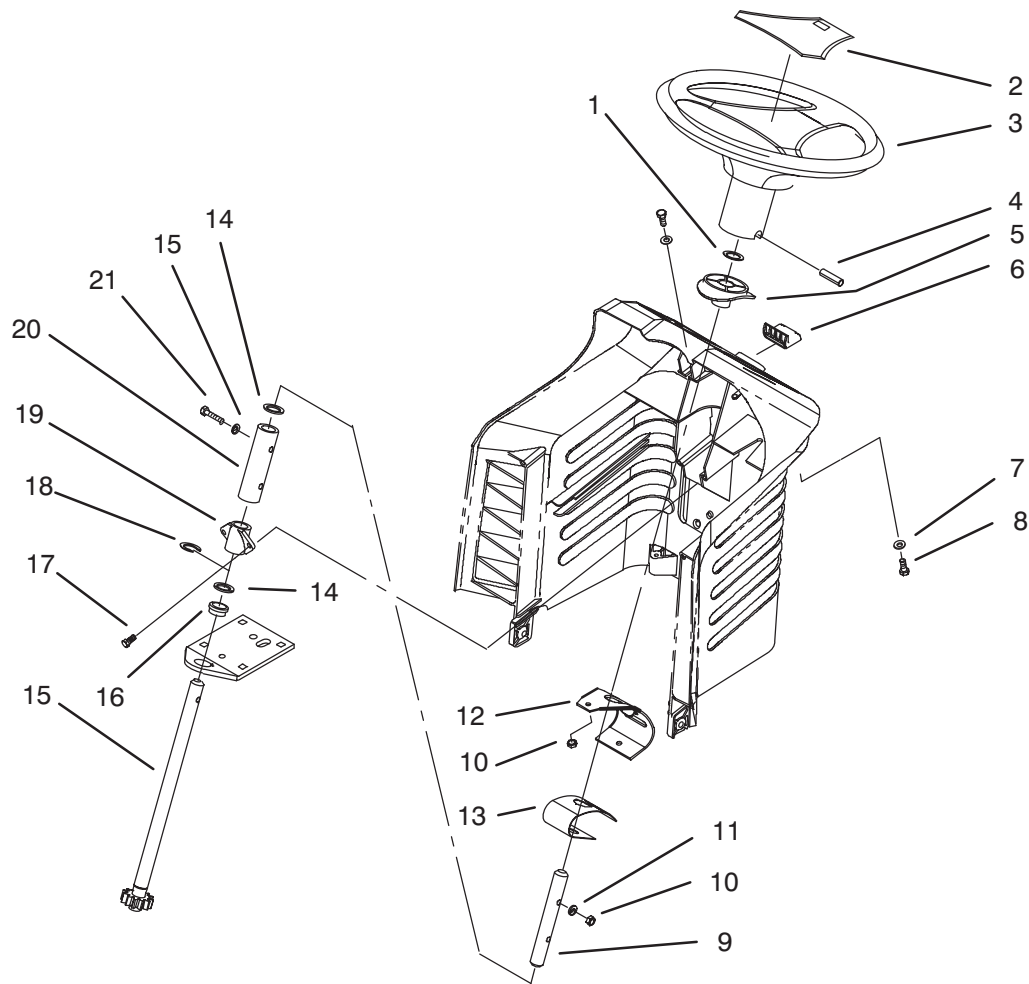

C-1344A

STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32151-81	Ring - Retaining	1	11	3-7501	Washer - Curved	4
2	88-3870	Cover - Steering Wheel	1	12	88-5180	Bracket - Backup	1
3	88-3850	Wheel - Steering (Incl. Ref. #2)	1	13	88-4890	Spring - Leaf	1
4	32121-78	Pin - Roll	1	14	3-6498	Washer - Thrust	2
5	88-4190	Bushing - Sliding	1	15	88-6370	Shaft - Steering Short	1
6	88-4180	Button - Release	1	16	88-5150	Bushing - Flange	1
7	3256-22	Washer - Flat	2	17	27-0220	Screw - Plastite	2
8	321-4	Screw - Hex Hd. Cap	2	18	32151-48	E-Ring	1
9	88-6300	Shaft - Steering Upper	1	19	88-4210	Bushing - Stationary	1
10	3296-42	Nut - Lock	4	20	88-6090	Coupling - Steering	1
				21	321-9	Screw - Hex Hd. Cap	2

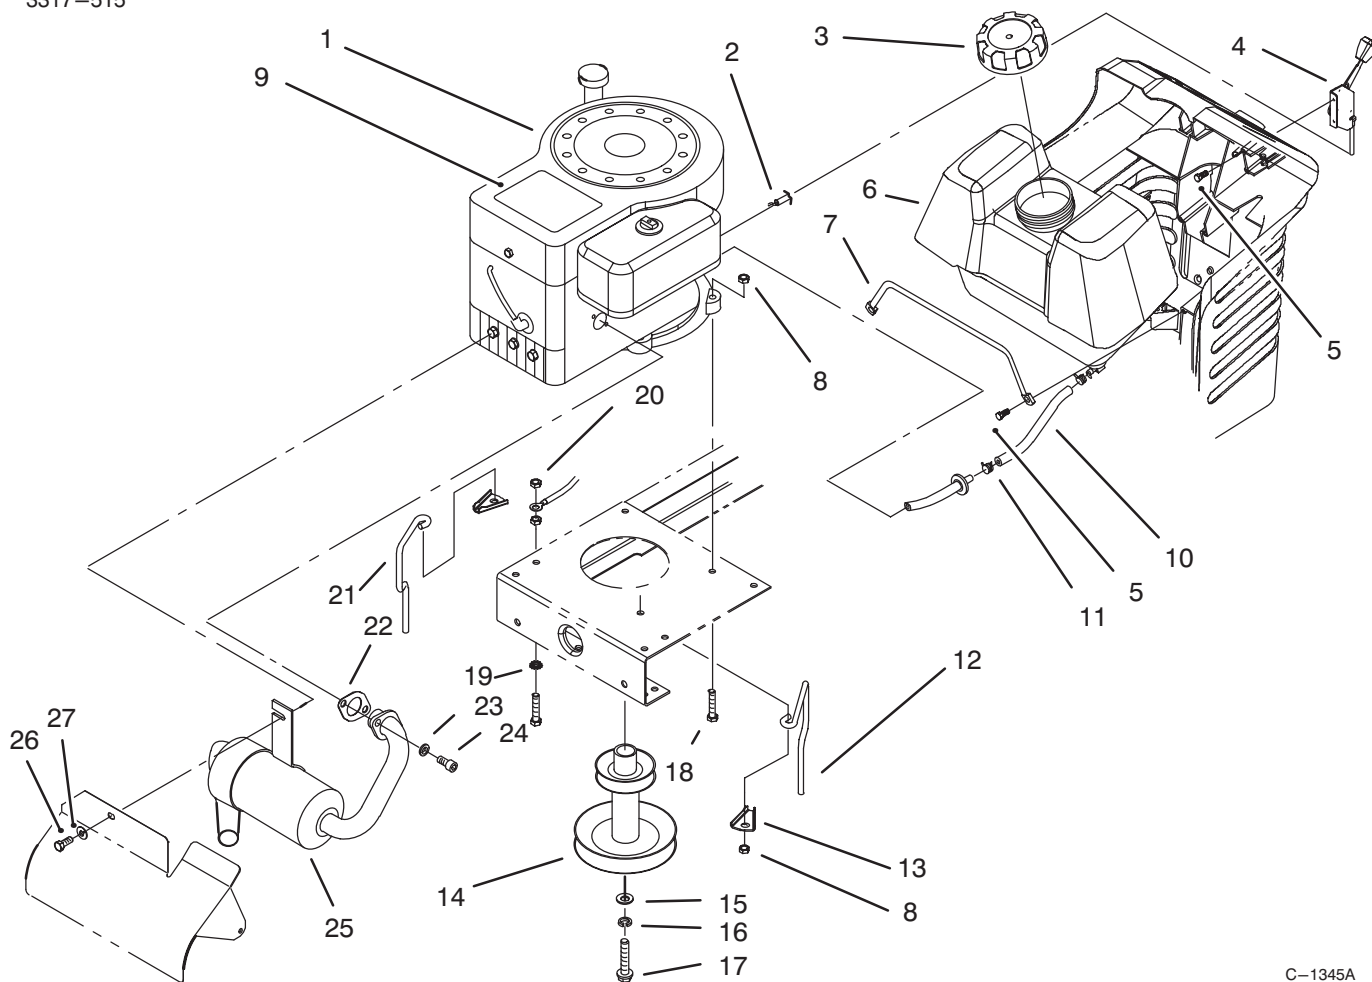 


C-1345A

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Engine — 13 H.P.	1
2	88-4350	Cable — Throttle	1
3	88-3980	Cap — Gas	1
4	88-4340	Control — Throttle	1
5	27-0220	Screw — Plastite	4
6	88-3880	Tank — Gas	1
7	88-5920	Rod — Gas Tank	1
8	3296-29	Nut — Lock	3
9	92-8757	Decal — Engine 13 H.P.)	1
10	47-2963	Line — Fuel	1
11	2412-98	Clamp — Hose	2
12	88-5830	Guide — Belt L.H.	1
13	76-3820	Anchor — Belt Guide	2
14	88-4850	Pulley — Engine	1

Ref. No.	Part No.	Description	No. Used
15	3256-25	Washer — Flat	1
16	3253-22	Washer — Lock	1
17	26-0671	Bolt — Blade	1
18	322-9	Screw — Hex Hd. Cap	4
19	3255-8	Washer — Ext. Tooth Lock	1
20	32149-1	Nut — Keps	2
21	88-5840	Guide — Belt R.H.	1
22	88-4410	Gasket — Muffler	1
23	3253-4	Washer — Lock	2
24	3274-12	Screw — Hex Soc. Hd.	2
25	88-6480	Muffler	1
26	321-4	Screw — Hex Hd. Cap	1
27	3253-3	Washer — Lock	1

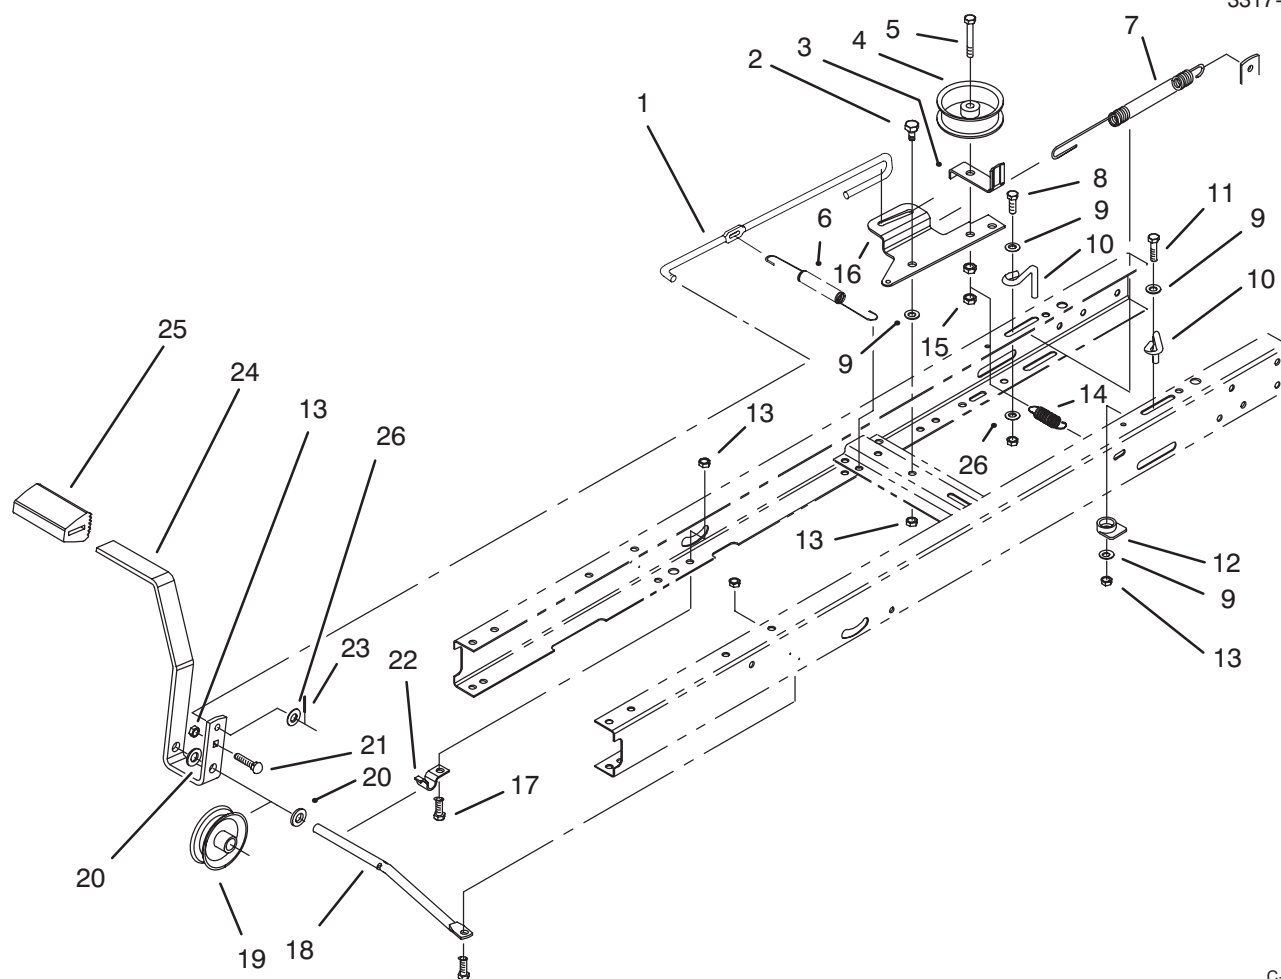 


C-2103

CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5270	Rod - Clutch/Brake	1
2	37-8770	Bolt - Shoulder	1
3	88-5560	Guide - Idler Belt	1
4	88-5680	Pulley - Flat Idler	1
5	323-11	Screw - Hex Hd. Cap	1
6	27-8890	Spring - Pedal Return	1
7	88-6140	Spring - Brake	1
8	322-5	Screw - Hex Hd. Cap	1
9	5-4460	Washer - Flat	4
10	88-5460	Guide - Trans. Belt	2
11	322-7	Screw - Hex Hd. Cap	1
12	84-5610	Guide - Cable	2
13	3296-29	Nut - Lock	6

Ref. No.	Part No.	Description	No. Used
14	88-6330	Spring - Extension	1
15	3296-59	Nut - Lock	2
16	88-6070	Arm - Idler	1
17	322-3	Screw - Hex Hd. Cap	2
18	88-5500	Rod - Pedal Pivot	1
19	88-4700	Pulley - Cable	1
20	3256-26	Washer - Flat	2
21	3230-3	Bolt - Carriage	1
22	88-4810	Clamp - Shift Pivot	1
23	3272-10	Pin - Cotter	1
24	88-5000	Pedal - Clutch/Brake	1
25	65-2920	Pad - Pedal	1
26	3256-23	Washer - Flat	2

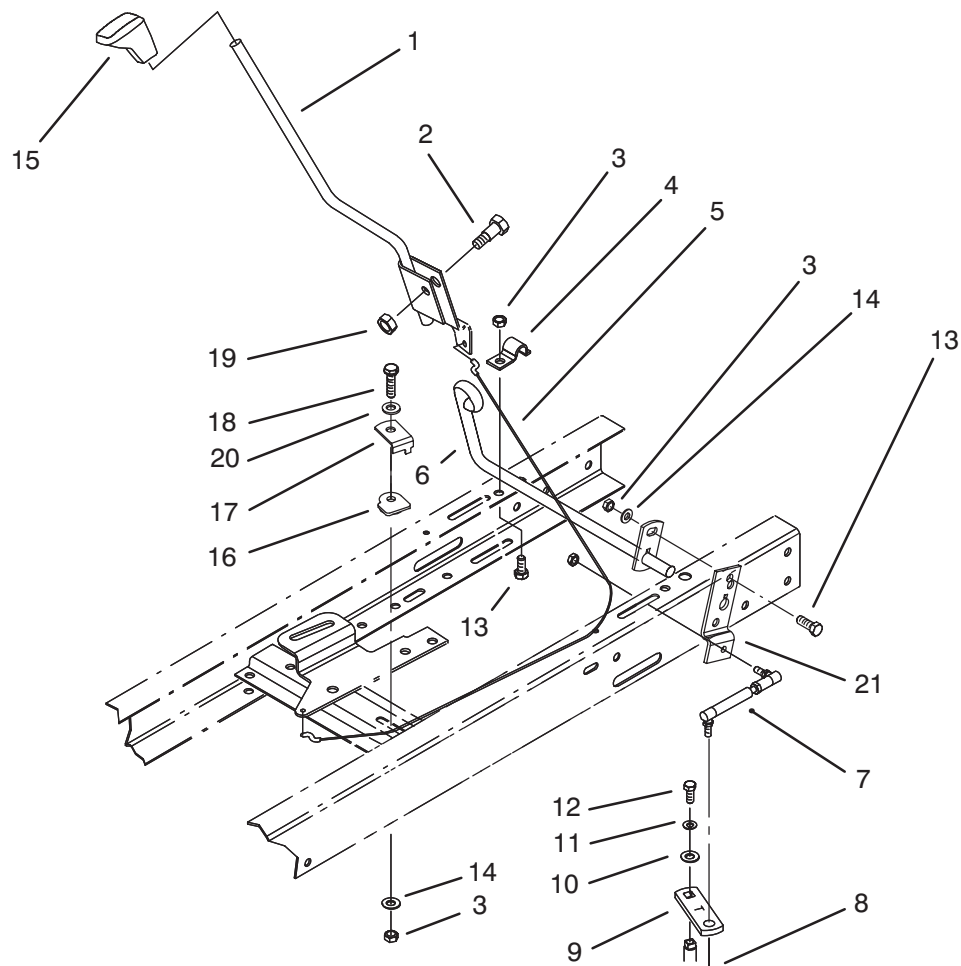 


C-1317

SHIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5300	Lever - Shift	1
2	5-4015	Bolt - Shoulder	1
3	3296-29	Nut - Lock	4
4	88-4810	Clamp - Shift Pivot	2
5	55-9321	Cable - Shotgo	1
6	92-5796	Pivot - Shift	1
7	88-5530	Rod - Shift Tie	1
8	3296-3	Nut - Lock	2
9	88-5340	Lever - Trans. Shift	1
10	7-5461	Washer - Hardened	1
11	3253-3	Washer - Lock	1


Ref. No.	Part No.	Description	No. Used
12	329-23	Screw - Hex Hd. Cap	1
13	322-3	Screw - Hex Hd. Cap	3
14	3256-23	Washer - Flat	2
15	62-1292	Knob - Shift	1
16	84-5610	Guide - Cable	2
17	88-5930	Keeper - Cable	1
18	3230-3	Bolt - Carriage	1
19	3296-39	Nut - Lock	1
20	3256-25	Washer - Flat	1
21	92-5794	Lever - Shift Pivot	1

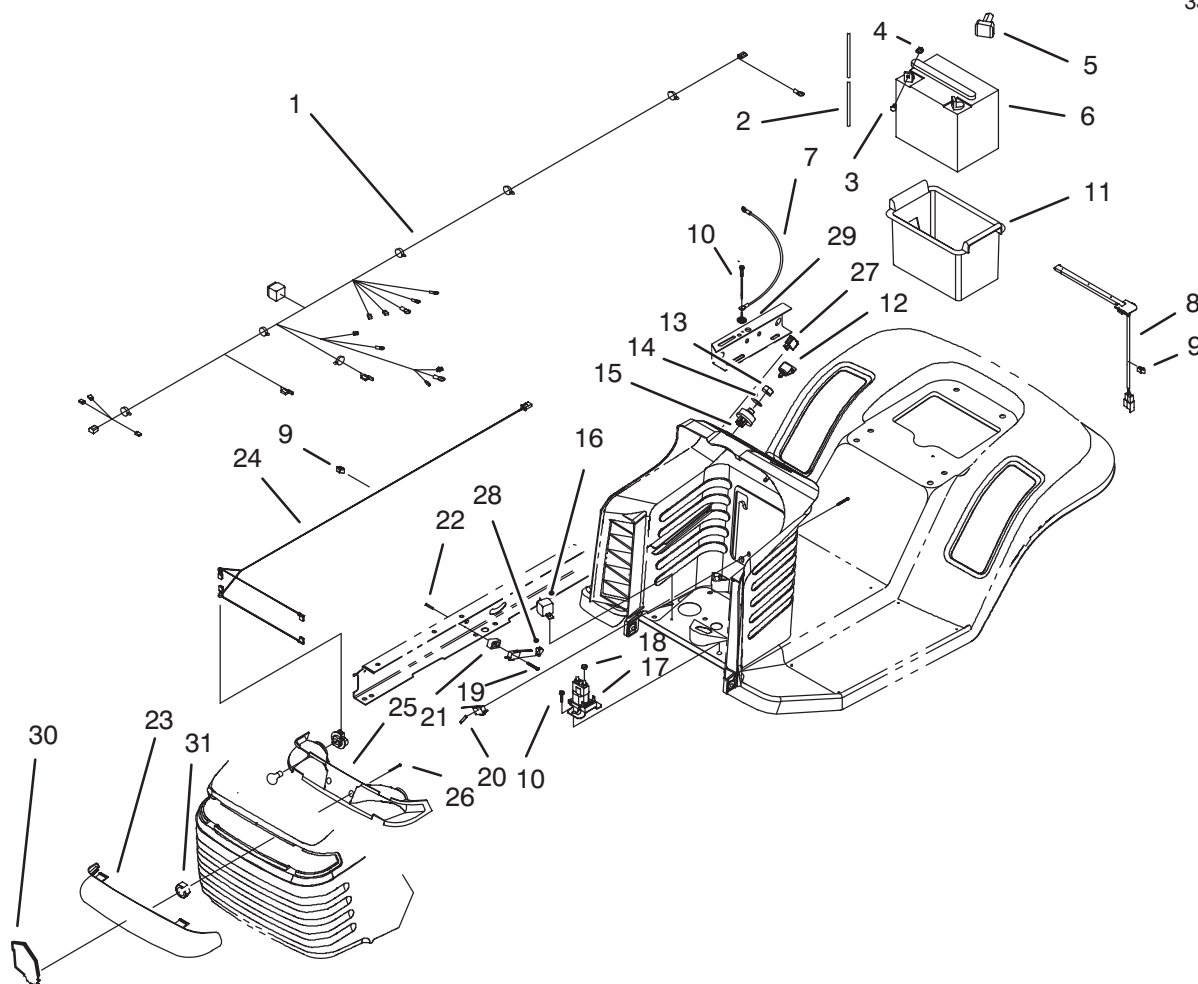 

C-1831A

ELECTRICAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-3810	Harness - Wire	1	16	116397	Relay	1
2	56-2540	Vent - Tube	1	17	92-9845	Solenoid	1
3	321-4	Screw - Hex Hd. Cap	2	18	32149-2	Nut - Keps	3
4	32103-22	Nut - Wing	2	19	93-0539	Screw - Phillips Hd.	4
5	28-8080	Boot - Battery Terminal	1	20	88-9932	Switch - Micro	2
6	80-2600	Battery - 7 Plate	1	21	88-4880	Spacer - Microswitch	1
7	44-8110	Cable - Battery Negative	1	22	3290-354	Speednut	2
8	38-1420	Switch - Seat	1	23	88-3960	Lens - Headlights	1
9	702366	Clip - Wire Retainer	3	24	88-4320	Harness - Wire	1
10	32144-4	Screw - Hex Hd. Thr'd Form.	3	25	88-3970	Reflector & Lamp	1
11	88-4040	Box - Battery	1	26	32144-32	Screw - Plastite	2
12	63-8360	Key - Ignition	1	27	92-8875	Switch - Rocker	1
13	218-461	Nut - Hex	1	28	93-3240	Seal - Plunger	2
14	3254-5	Washer - Lock	1	29	3255-7	Washer - Ext. Tooth Lock	1
15	88-9830	Switch - Ignition	1	30	80-2240	Plate- Grille Panel	1
				31	3290-299	Nut - Tinnerman	1

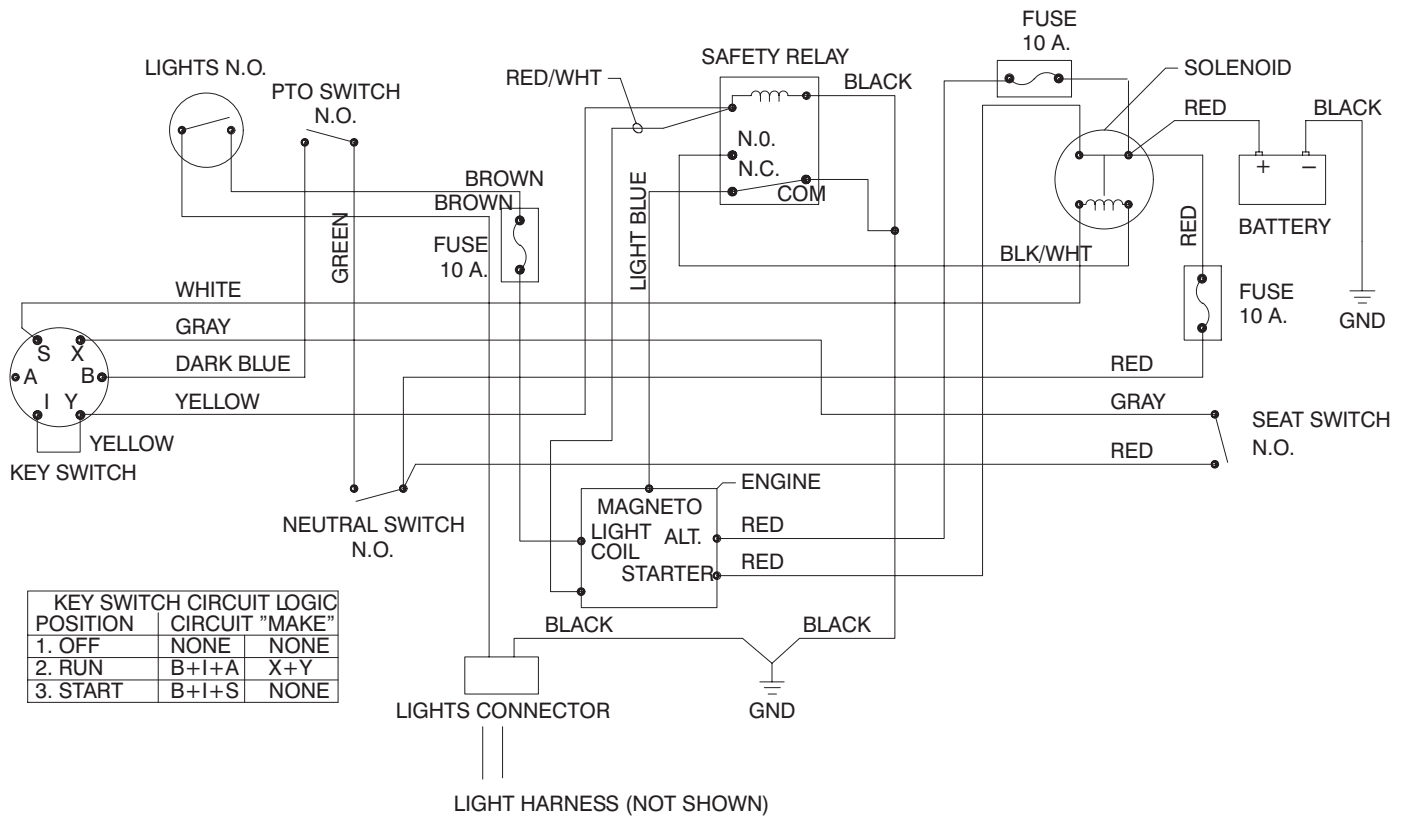 


C-2186A

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used

Ref. No.	Part No.	Description	No. Used

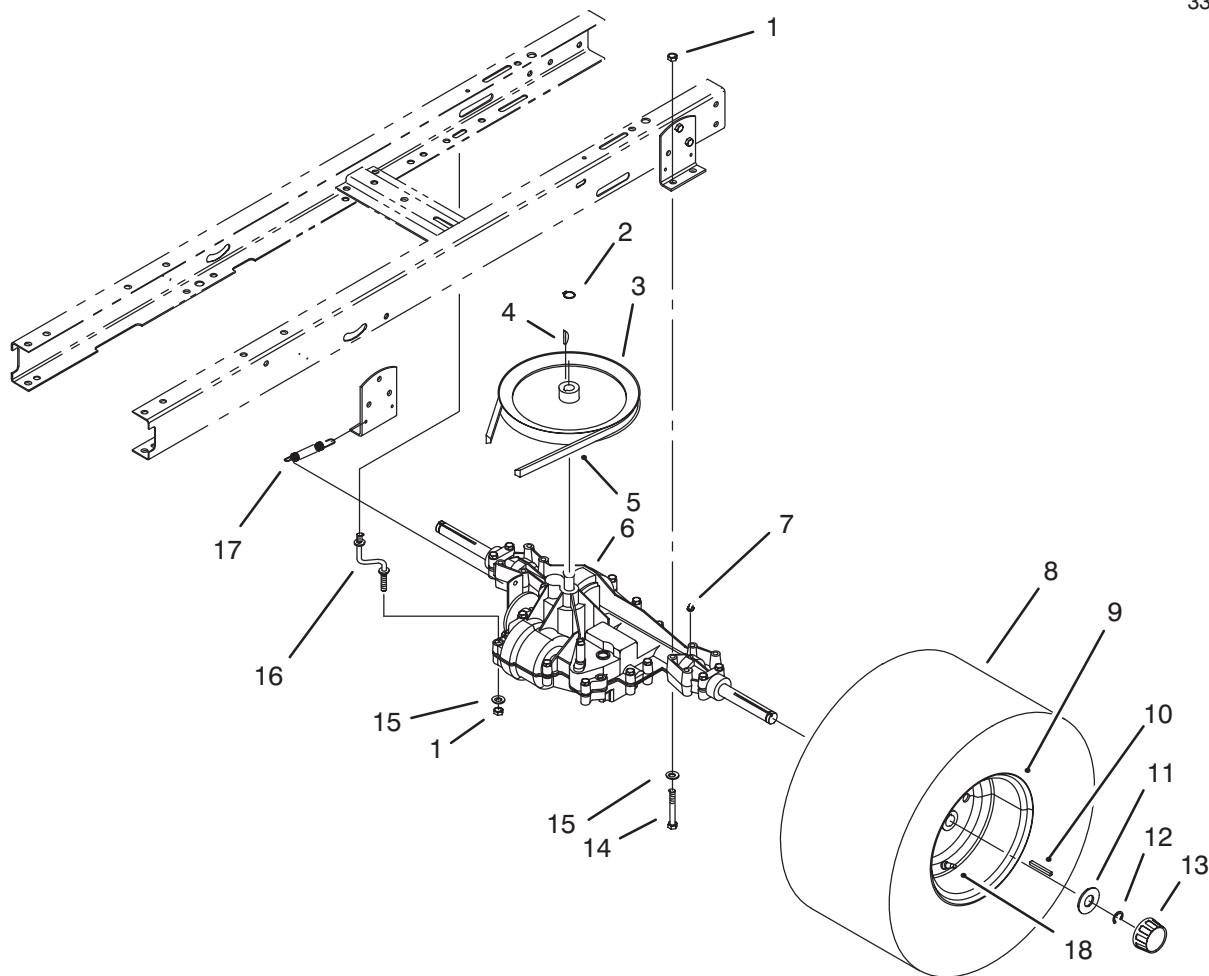 


C-1305

TRANSAXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	8	12	32151-48	E-Ring	2
2	32120-64	Ring - Snap	1	13	61-9780	Cap - Hub	2
3	88-4840	Pulley - Transmission	1	14	322-12	Screw - Hex Hd. Cap	4
4	3257-23	Key - Woodruff	1	15	3256-23	Washer - Flat	8
5	88-6240	V-Belt - Traction	1	16	88-5350	Strap - Torque	2
6	88-6450	Transaxle	1	17	26-6700	Spring - Brake Return	1
7	302-11	Fitting - Grease	2	18	232-27	Valve Stem w/Cap	2
8	88-4090	Tire	2	*	232-41	Inner Tube (Optional)	2
9	88-4390	Rim	2	*	88-4300	Wheel & Tire Assembly (Incl. Ref. #8 & 9)	2
10	7-0036	Key - Square	2				
11	28-2480	Washer	2				

 *Not Illustrated

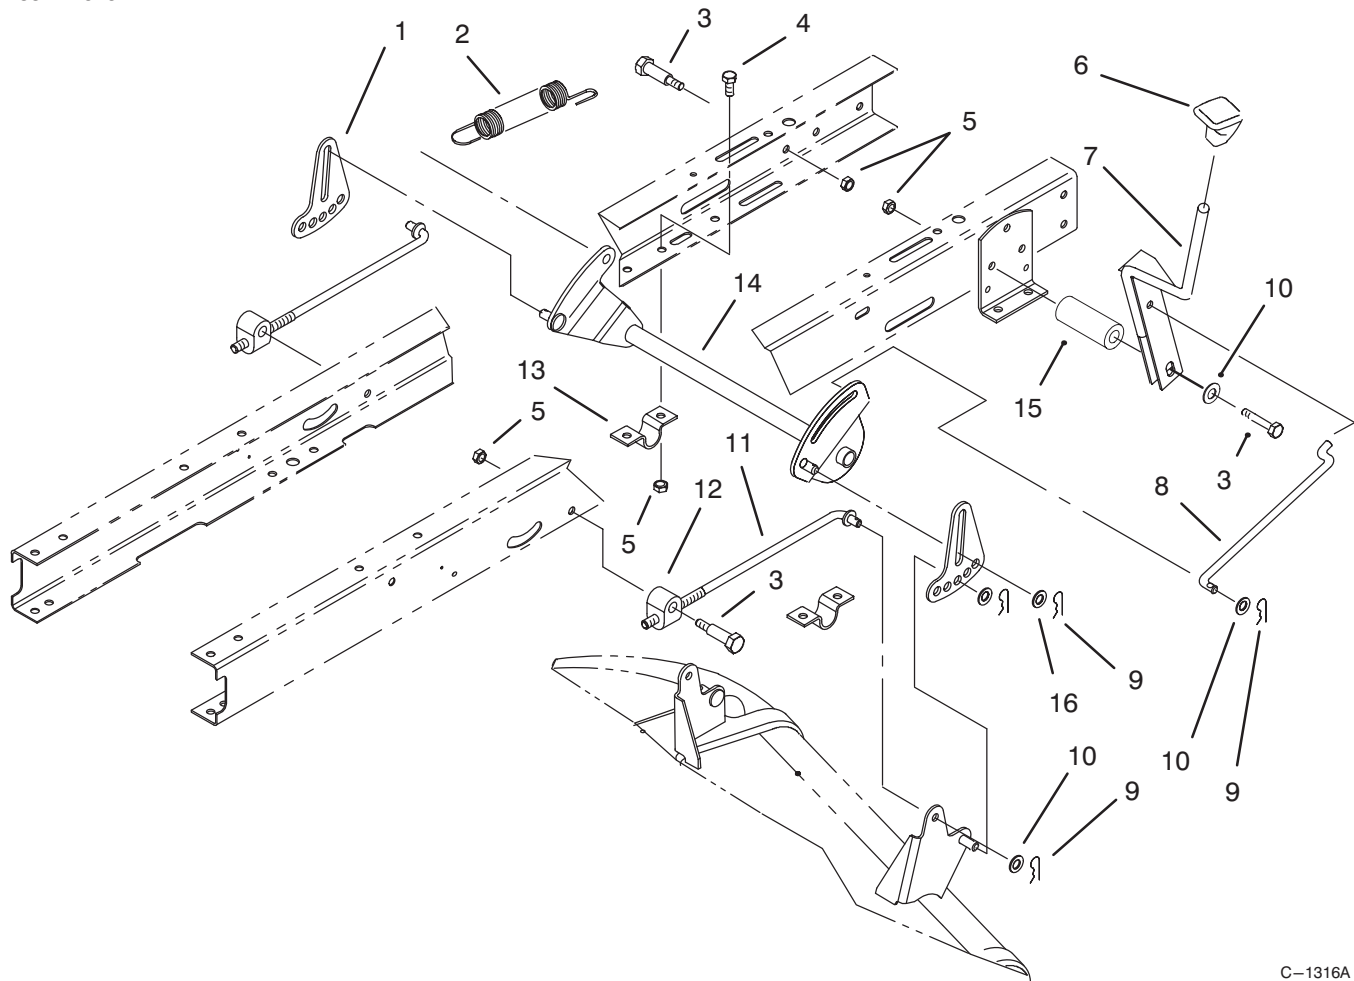


C-1316A

HEIGHT OF CUT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5570	Link - Adjusting H.O.C.	2
2	88-6460	Spring - Extension	1
3	7-0030	Bolt - Shoulder	4
4	322-3	Screw - Hex Hd. Cap	4
5	3296-29	Nut - Lock	8
6	62-1292	Knob - Shift	1
7	93-3822	Lever - H.O.C.	1
8	88-5900	Link - H.O.C.	1


Ref. No.	Part No.	Description	No. Used
9	3290-307	Pin - Hair Cotter	7
10	3256-24	Washer - Flat	4
11	88-5450	Rod - Hanger Rear	2
12	88-4230	Trunnion - H.O.C. Rear	2
13	88-4730	Clamp - H.O.C. Pivot	2
14	88-5110	Pivot - H.O.C.	1
15	65-7210	Spacer	1
16	80-6990	Washer - Hardened	4

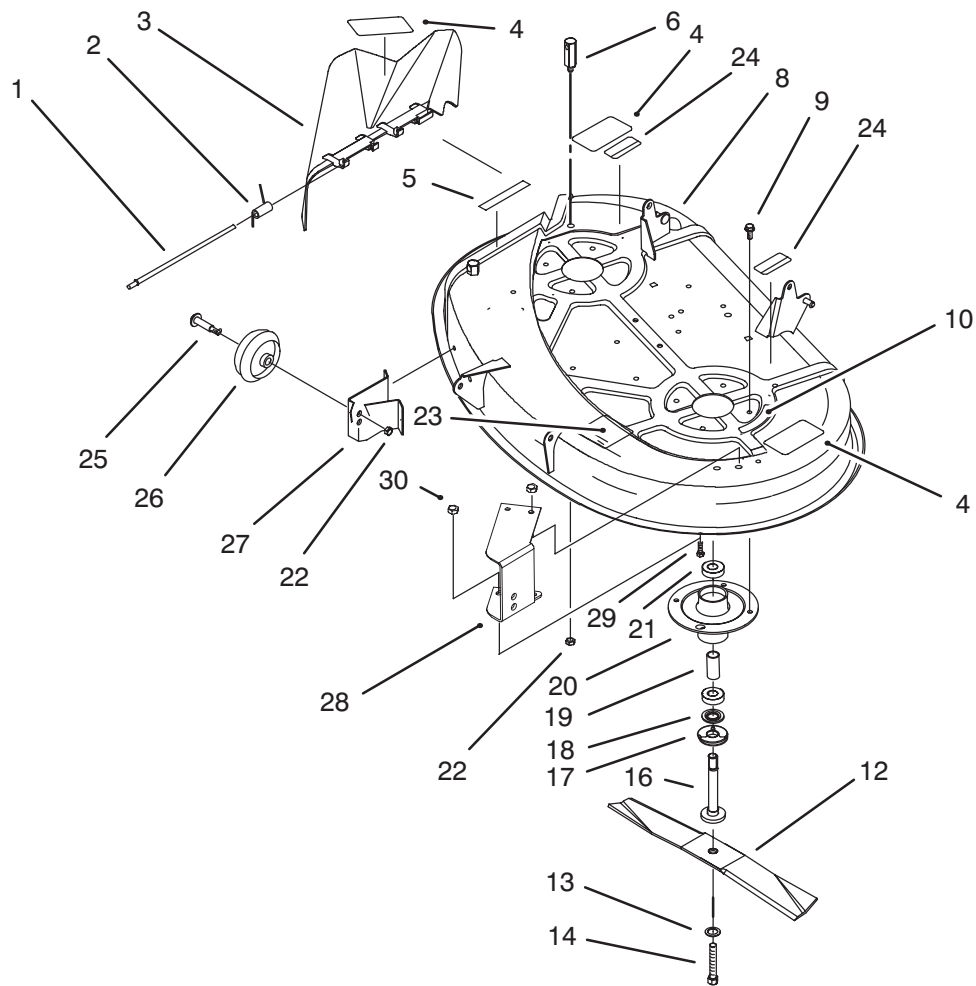 

C-2287A

HOUSING & SPINDLE ASSEMBLY (38" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	57-4380	Rod - Deflector Hinge	1	17	80-4360	Shield - Bearing	2
2	57-6950	Spring - Torsion	1	18	80-4380	Spacer - Hardened	2
3	93-7695	Deflector Ass'y (Incl. Ref. #4)	1	19	62-3661	Spacer - Bearing	2
4	93-7010	Decal - Danger	3	20	88-4510	Housing - Spindle	2
5	93-7009	Decal - Deflector Danger	1	21	38-7820	Bearing - Spindle	4
6	57-4360	Post - Rear Pivot	1	22	3296-39	Nut - Lock	3
8	93-3158-01	Deck - 38"	1	23	93-6679	Decal - Belt Guide	1
9	32144-41	Screw - Taptite	8	24	93-6674	Decal - Caution Spring	2
10	93-6677	Decal - Shield Danger	1	25	56-6591	Bolt - Shoulder	2
12	57-4700	Blade - Side Discharge	2	26	701756	Wheel - Deck	2
13	3290-465	Washer - Belleville	2	27	88-5740	Bracket - R.H.	1
14	26-0671	Bolt - Blade	2	28	93-3896	Bracket - L.H.	1
16	80-4341	Shaft - Spindle	2	29	322-3	Screw - Hex Hd. Cap	6
				30	3296-29	Nut - Lock	6

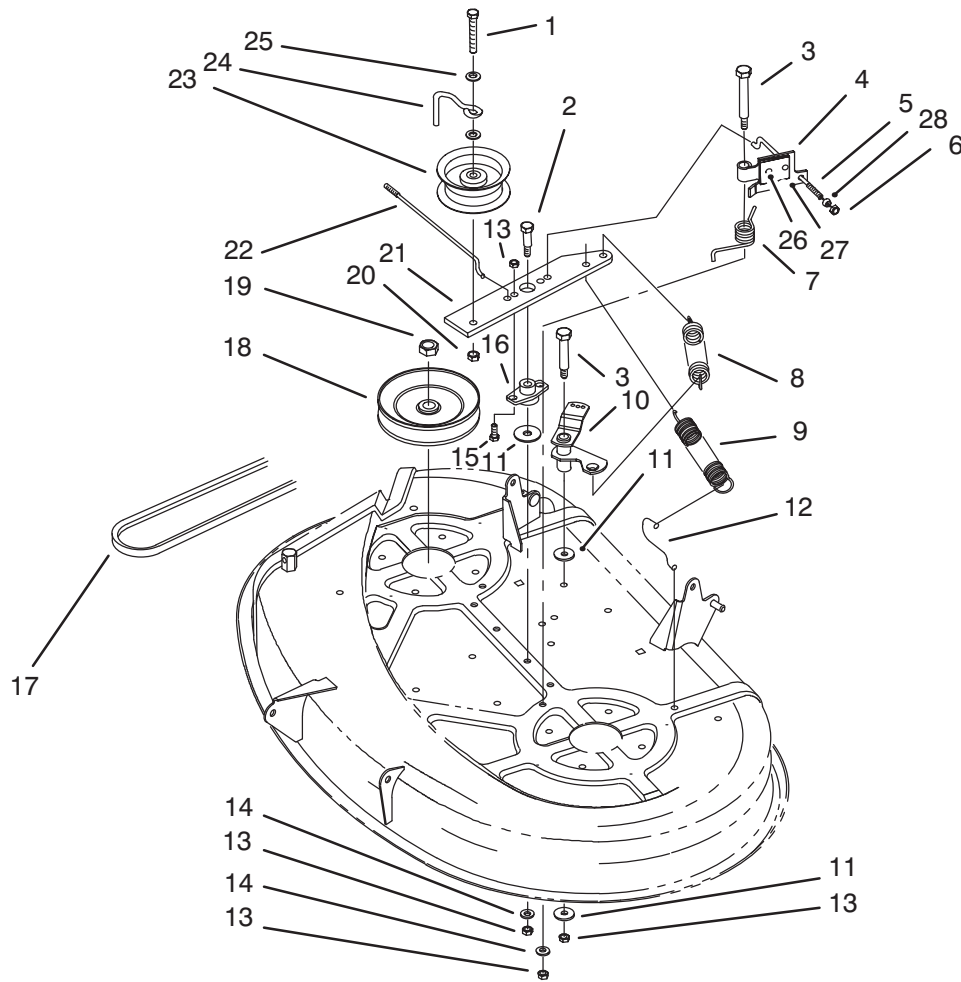 


C-1347

BRAKE ASSEMBLY (38" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used
1	323-12	Screw - Hex Hd. Cap	1
2	7-0030	Bolt - Shoulder	1
3	88-4590	Bolt - Shoulder	3
4	88-6100	Brake - Deck (Incl. Ref. #26 & 27)	2
5	88-5550	Rod - Deck Brake L.H.	1
6	3296-42	Nut - Lock	2
7	88-5910	Spring - Torsion	2
8	88-6130	Spring - Deck Engage	1
9	92-8934	Spring - Extension	1
10	88-5390	Bellcrank	1
11	3256-68	Washer - Fender	3
12	88-5970	Hook - Spring Return	1
13	3296-29	Nut - Lock	6
14	3256-23	Washer - Flat	3

Ref. No.	Part No.	Description	No. Used
15	322-5	Screw - Hex Hd. Cap	2
16	88-4980	Bushing - Idler Arm	1
17	88-6250	V-Belt - Deck	1
18	88-5330	Pulley - Deck	2
19	3219-6	Nut - Lock	2
20	3296-39	Nut - Lock	1
21	88-4870	Arm - Idler	1
22	88-5540	Rod - Deck Brake R.H.	1
23	88-5630	Pulley - Idler	1
24	88-5070	Guide - Idler Belt	1
25	3256-24	Washer - Flat	2
26	3290-282	Rivet - Pop	4
27	56-9830	Pad - Brake	2
28	67-0710	Ball - Swivel	2

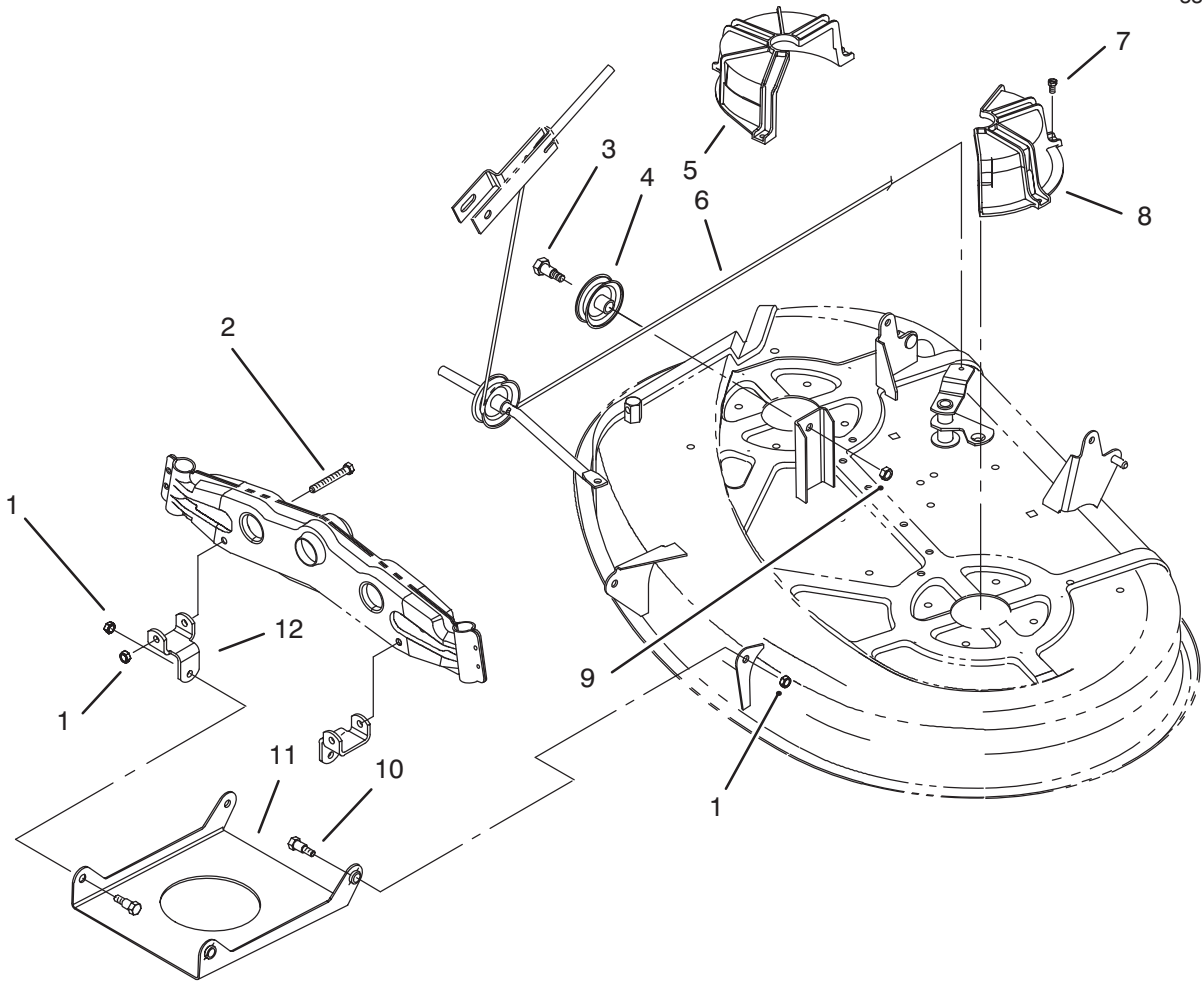 


C-1348

CABLE & COVER ASSEMBLY (38" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	6
2	322-12	Screw - Hex Hd. Cap	2
3	23-0310	Bolt - Shoulder	1
4	88-4700	Pulley - Cable	1
5	88-4020	Guide - Deck Belt R.H.	1
6	88-6410	Cable - Deck Engage	1
7	32104-76	Screw - Thread Cutting	5

Ref. No.	Part No.	Description	No. Used
8	88-4030	Guide - Deck Belt L.H.	1
9	3296-39	Nut - Lock	1
10	28-0540	Bolt - Shoulder	4
11	88-4900	Pan - Front Deck Suspension	1
12	88-4640	Bracket - Deck Suspension	2

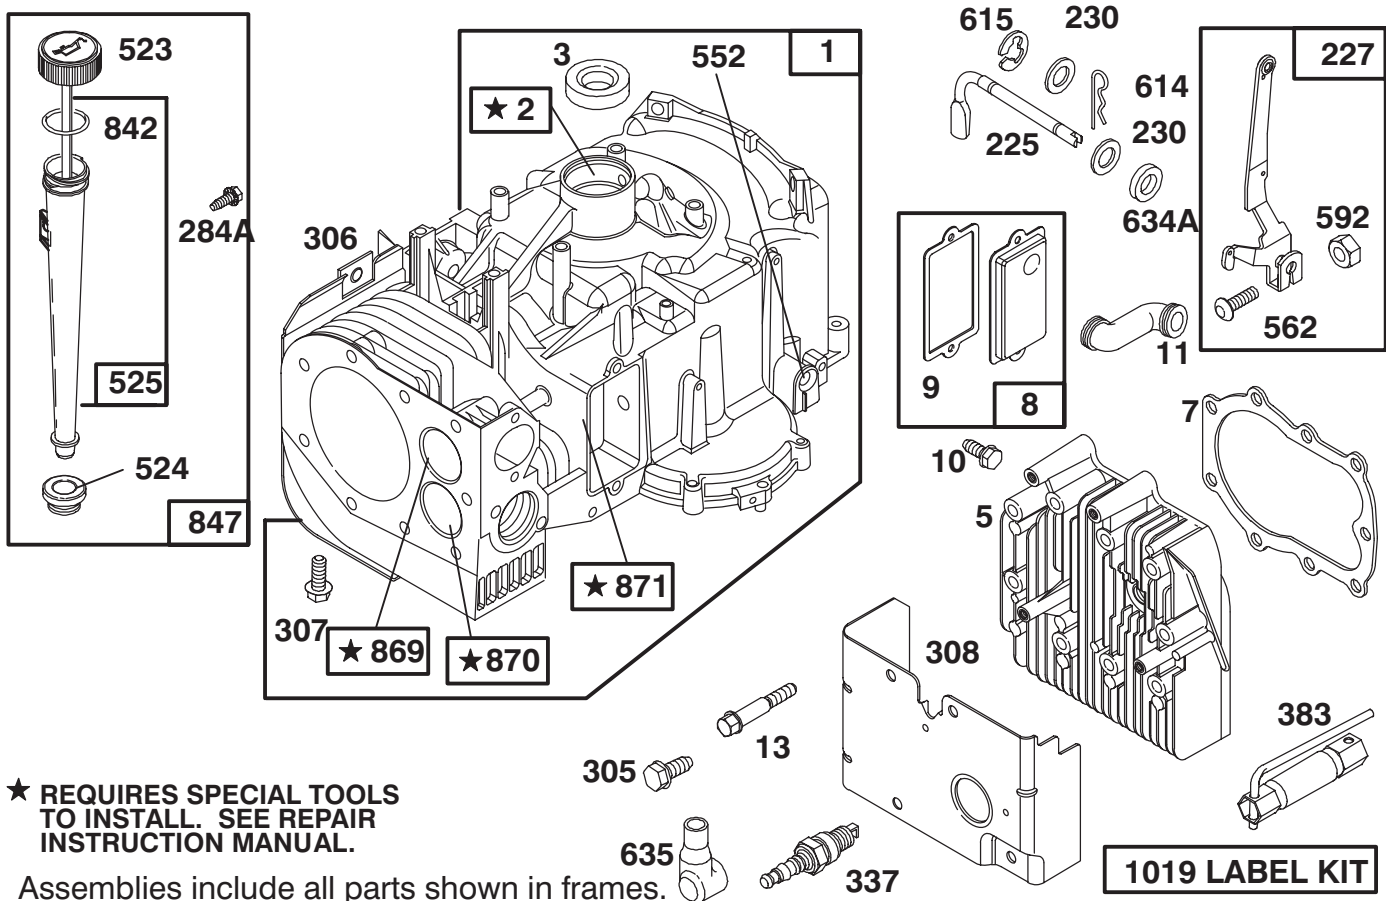 


ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	1
2	399265	Bearing—Cylinder	1
★3	391086	Seal—Oil	1
5	494240	Head—Cylinder	1
★7	271866	Gasket—Cylinder Head	1
8	495735	Breather Assembly	1
★9	27803	Gasket—Valve Cover	1
10	94621	Screw—Sem	1
11	280100	Tube—Breather	1
13	94622	Screw—Cylinder Head	1
225	231058	Crank—Governor	1
227	493935	Lever Assy.—Governor	1
230	94742	Washer—Gov. Crank	1
284A	94073	Screw—Hex Head	1
305	94786	Screw—Hex. Washer Hd.	1
306	224545	Shield—Cylinder	1
307	94623	Screw—Cyl. Shield Mtg.	1
308	491490	Cover—Cylinder Head	1
337	802592	Plug—Spark	1
383	89838	Wrench—Spark Plug	1

Ref. No.	Part No.	Description	No. Used
523	495230	Cap and Dipstick—Oil Filler	1
★524	68838	Seal—Filler Tube	1
525	496113	Tube—Oil Filler	1
552	231597	Bushing—Gov. Crank	1
562	92613	Bolt—Governor Lever	1
592	231082	Nut—Hex.	1
614	93306	Cotter—Hair Pin	1
615	93307	Retainer—E-Ring	1
★634A	491323	Seal—Governor	1
635	66538	Elbow—Spark Plug	1
★842	270920	Seal—Oil Filler Cap	1
847	496415	Fill Group—Oil	1
869	261463	Seat—Intake Valve (Std.)	1
870	213316	Seat—Exhaust Valve (Std.)	1
871	261961	Guide—Exhaust Valve	1
		Note: 231218 Guide—Intake Valve	1
1019	491255	Label Kit	1

 ★ Included in Gasket Set—Part No. 494241.

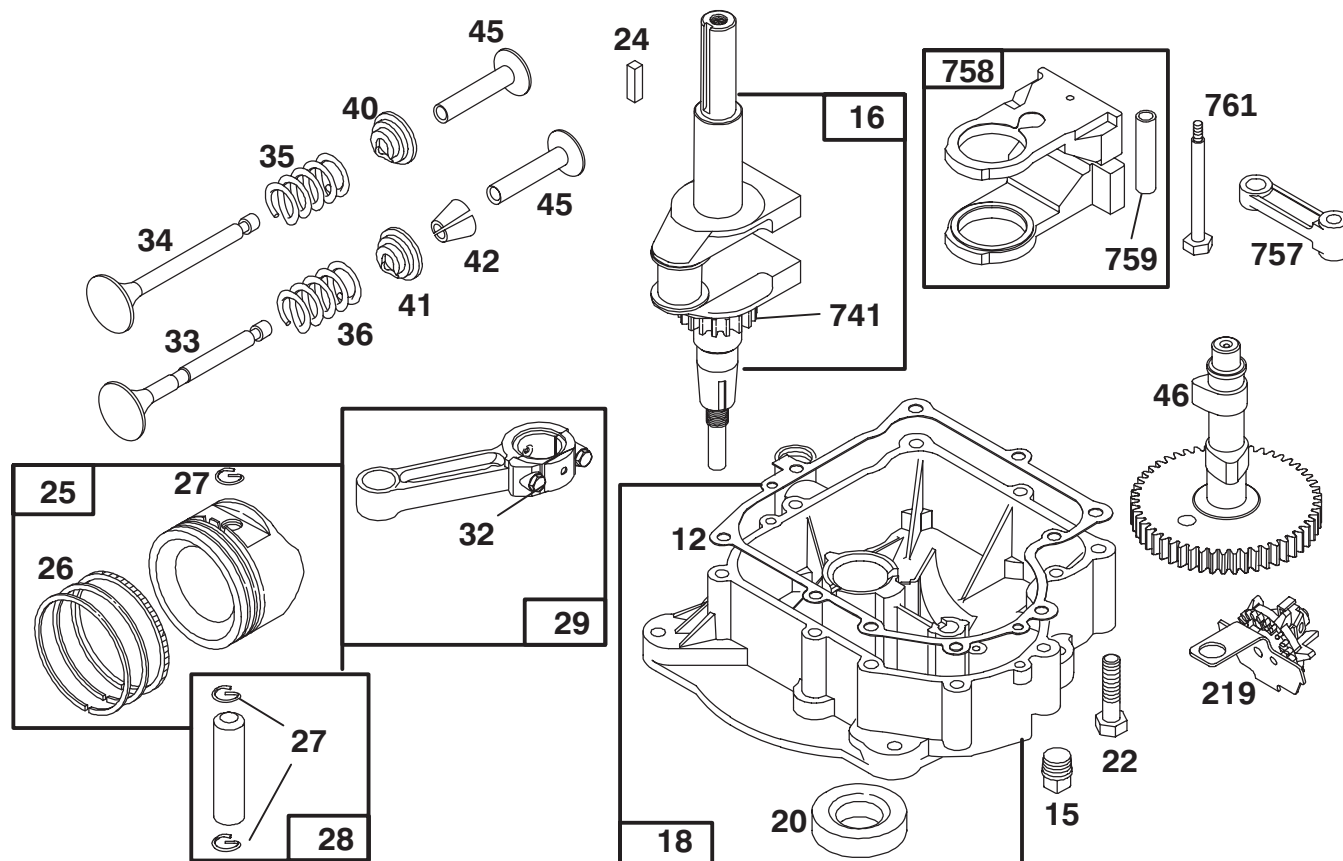


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket—Crkcse. (1/64" Thick)	1	27	260924	Lock—Piston Pin	1
★	271997	Gasket—Crkcse. (.005" Thick)	1	28	299691	Pin Assy.—Piston (Std.)	1
★	271996	Gasket—Crkcse. (.009" Thick)	1		391286	Pin Assy.—Piston (.005" O.S.)	1
15	94239	Plug—Oil Drain	1	29	490348	Rod Assy.—Connecting	1
16	495162	Crankshaft	1		490469	Rod—Connecting	1
	94196	Key—Timing Gear	1	32	94671	Screw—Connecting Rod	1
18	494238	Base—Engine	1	33	262246	Valve—Exhaust	1
★20	291675	Seal—Oil	1	34	262247	Valve—Intake	1
22	94624	Screw—Base Mtg. Sem	1	35	65906	Spring—Intake Valve	1
24	222698	Key—Flywheel	1	36	26828	Spring—Exhaust Valve	1
25	394661	Piston Assy. (Std.)	1	40	221596	Retainer—Intake Valve	1
	394662	Piston Assy. (.010" O.S.)	1	41	292260	Rotacoil—Exhaust Valve	1
	394663	Piston Assy. (.020" O.S.)	1	42	93630	Retainer—Ex. Valve Rotacoil	1
	394664	Piston Assy. (.030" O.S.)	1	45	262248	Tappet—Valve	1
26	391780	Ring Set—Piston (Std.)	1	46	212897	Gear—Cam	1
	391781	Ring Set—Piston (.010" O.S.)	1	219	490815	Oil Slinger, Gov. Gear Assy.	1
	391782	Ring Set—Piston (.020" O.S.)	1	741	262932	Gear—Timing	1
	391783	Ring Set—Piston (.030" O.S.)	1	757	212359	Link—Counterweight	1
				758	399891	Counterweight Assy.	1
				759	298909	Pin—Counterweight	1
				761	93875	Screw—Counterweight	1

 ★ Included in Gasket Set—Part No. 494241.

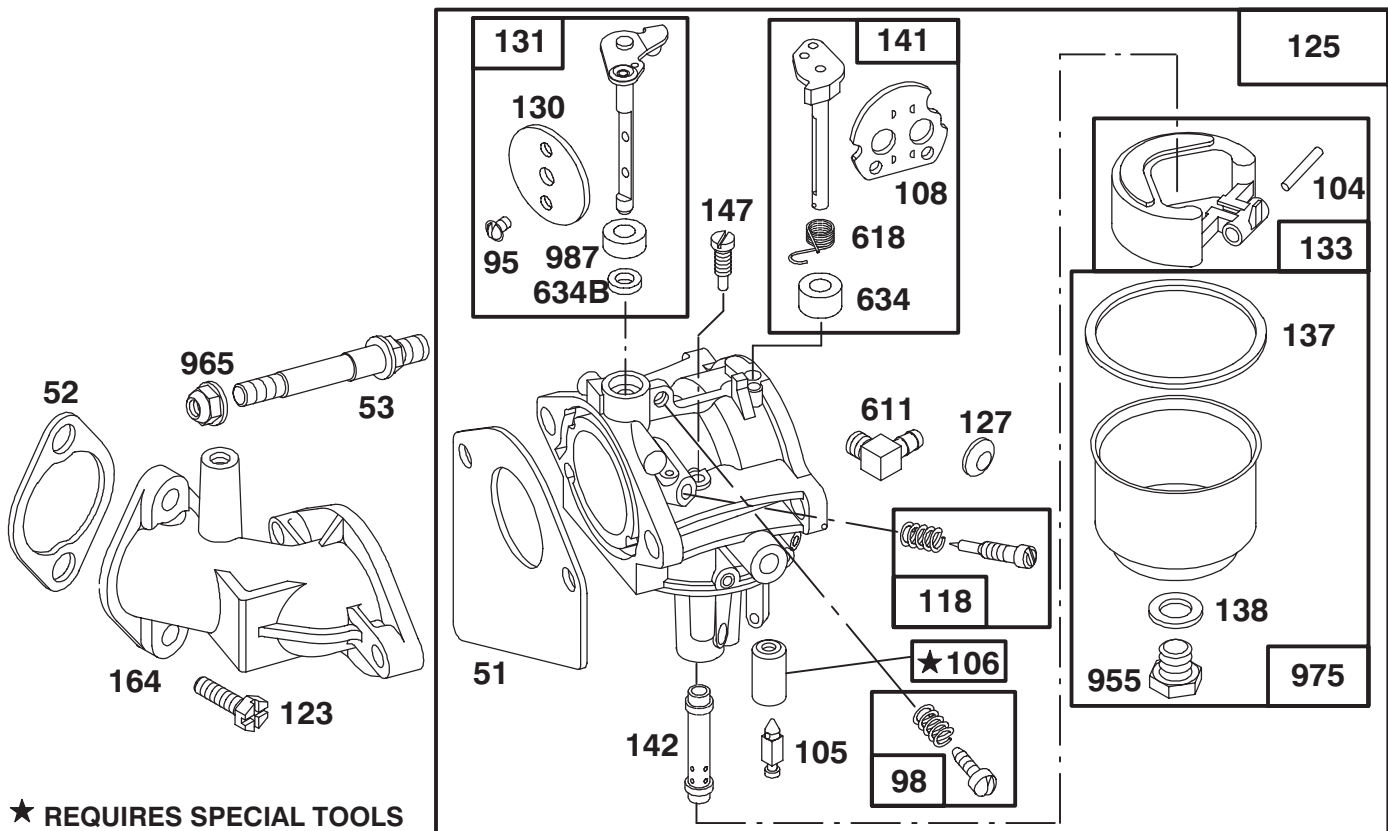

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01


Ref. No.	Part No.	Description	No. Used
●51	272465	Gasket—Carburetor (Carb. to Elbow)	1
★52	272554	Gasket—Carburetor (Elbow to Cylinder)	1
53	94637	Stud—Carb. Mtg.	1
●95	94098	Screw—Throttle	1
98	495800	Screw—Idle Speed	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224540	Valve—Choke	1
118	494383	Valve—Needle	1
121	495799	Carburetor Overhaul Kit	1
123	94616	Screw—Elbow Mtg.	1
125	495706	Carburetor Assembly	1
●127		Plug—Welch (Sold in Kit Only).	1
130	224539	Valve—Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft and Lever— Throttle	1
133	494381	Float—Carburetor	1
●◆137	281165	Gasket—Float Bowl	1
●◆138	281164	Washer—Float Bowl Screw	1
141	495931	Shaft and Lever—Choke	1
●142	494537	Nozzle—Carburetor	1
●147	231794	Pilot—Jet	1
164	213819	Carburetor—Elbow	1
611	494451	Fuel Inlet Tube	1
618	262803	Spring—Choke Return	1
●634	281168	Seal—Choke Shaft	1
●634B	398970	Washer—Throttle Shaft	1
955	94642	Screw—Fuel Bowl	1
965	94010	Locknut—Air Cleaner Mtg.	1
975	494378	Bowl Assy.—Carburetor	1
977	494385	Carburetor Gasket Kit	1
●987	281166	Seal—Throttle Shaft	1

◆ Included in Carburetor Gasket Set—Part No.494385.

★ Included in Gasket Set—Part No. 494241.

 ● Included in Carburetor Overhaul Kit—Part No. 495799.

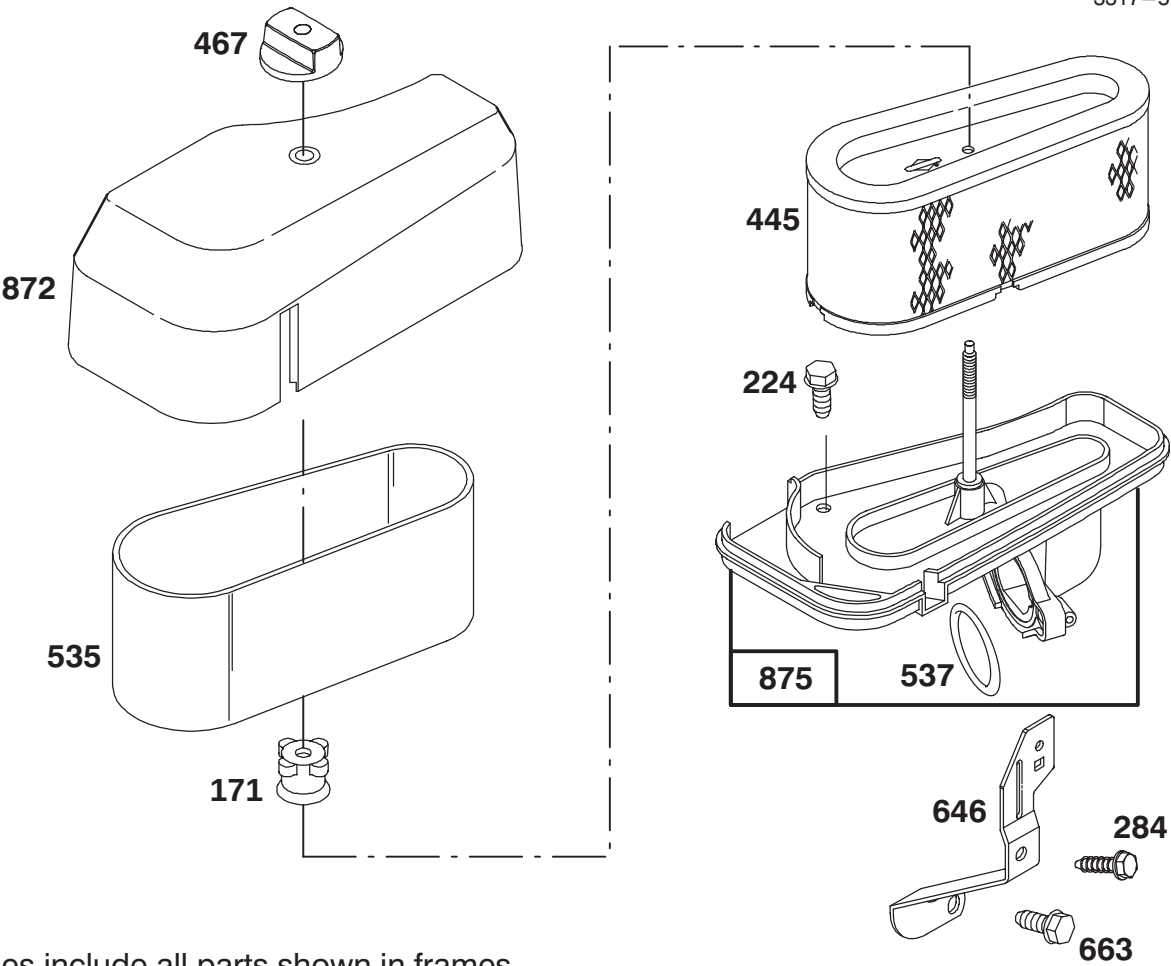


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut—Air Cleaner Mtg.	1
224	94513	Screw—Air Cleaner Sem	1
284	94704	Screw Hex. Head	1
445	493909	Cartridge—Air Cleaner	1
467	493903	Knob—Air Cleaner	1
535	272403	Element—Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
★537	281106	O-Ring—Air Cleaner	1
646	224546	Brace—Air Cleaner	1
663	94620	Screw—Hex. Hd.	1
872	281361	Cover—Air Cleaner	1
875	494237	Body—Air Cleaner	1

 ★ Included in Gasket Set—Part No. 494241.

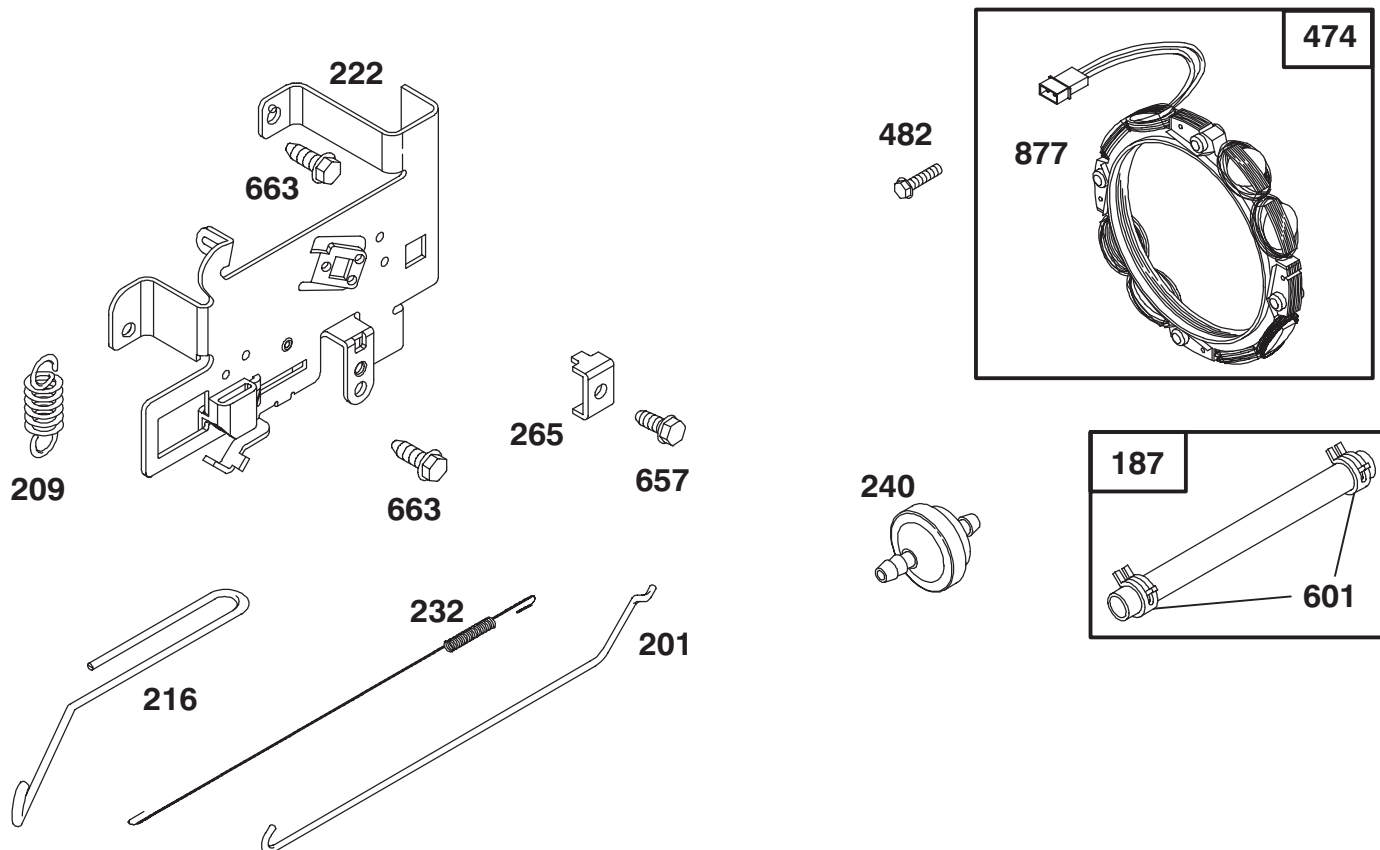


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used
187	393815	Line—Fuel (11" Long, Cut to Suit)	1
201	262767	Link—Governor	1
209	260871	Spring—Governor	1
216	262766	Link—Choke	1
222	495611	Plate—Governor Control	1
232	262785	Spring—Governor Link	1
240	394358	Filter—Fuel	1
265	221535	Clamp—Casing	1

Ref. No.	Part No.	Description	No. Used
474	393474	Stator—Alternator (Dual Circuit)	1
482	93621	Screw—Sem	1
601	93053	Clamp—Fuel Pipe	1
657	93496	Screw—Sem	1
663	94620	Screw—Hex. Hd.	1
877	393456	Diode and Connector Assy (Dual Circuit)	1

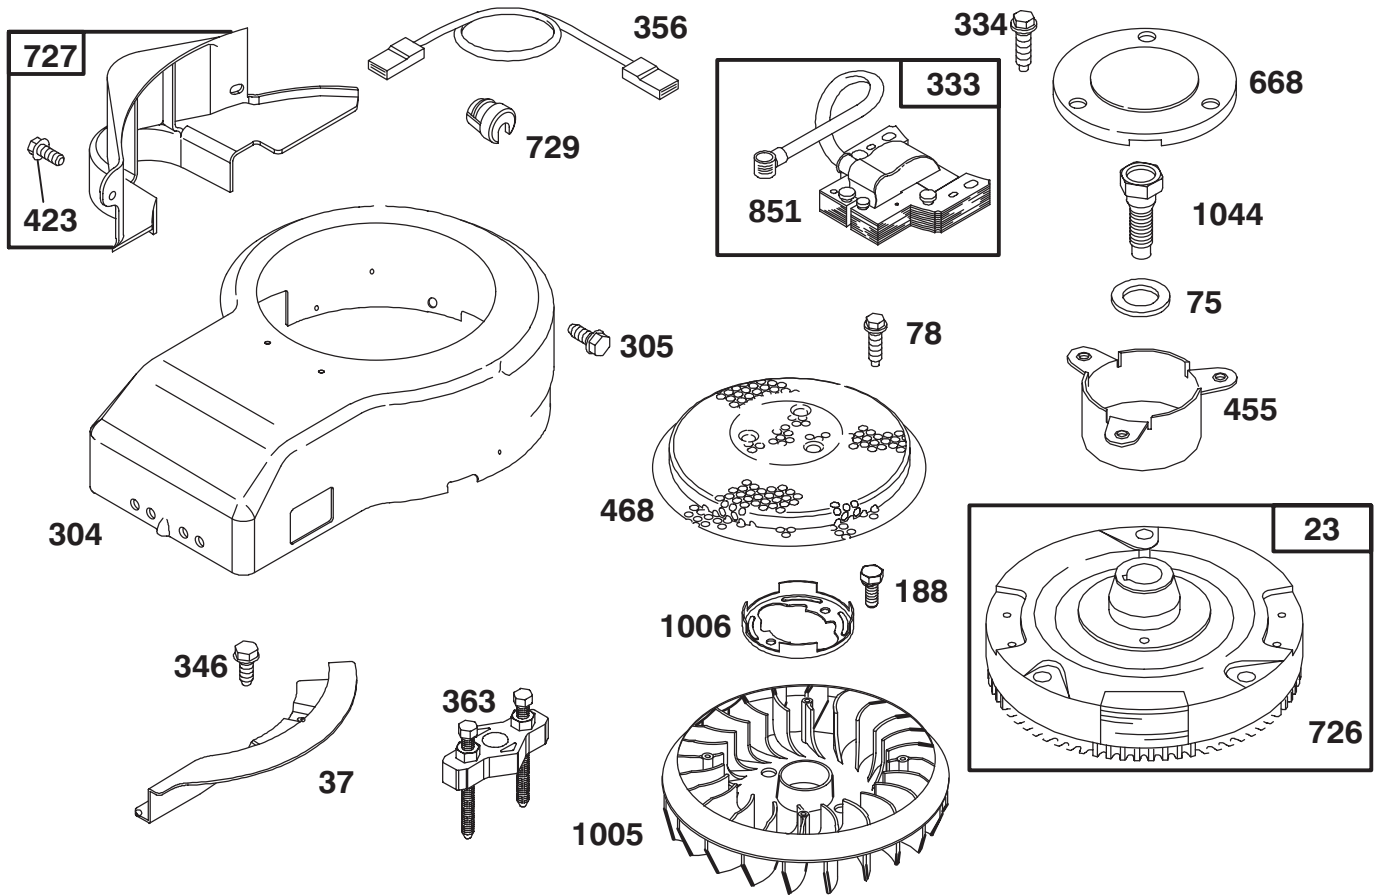 

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel and Ring Gear Assy.-Magneto		363	19203	Puller-Flywheel	
37	224502	Guard-Flywheel		423	94073	Screw-Sem	
75	224061	Washer-Spring		455	222561	Cup-Screen Mounting	
78	93805	Screw-Sem		468	224948	Screen-Flush Rotating	
188	93535	Screw-Sem (3/4" Long)		668	280848	Spacer	
304	496431	Housing-Blower		726	392134	Gear-Ring (Includes Mtg Hardware)	
305	94619	Screw-Blower Housing Mounting		727	490324	Cover-Starter	
333	492341	Armature-Magneto		729	281159	Clip-Lead Wire	
334	93381	Screw-Armature Mtg.		851	221798	Terminal-Ignition Cable	
346	93705	Screw-Hex. Head		1005	281355	Fan-Flywheel	
356	494328	Wire Assembly		1006	224413	Retainer-Fan	
				1044	94673	Screw-Hex. Head	

729A



 728



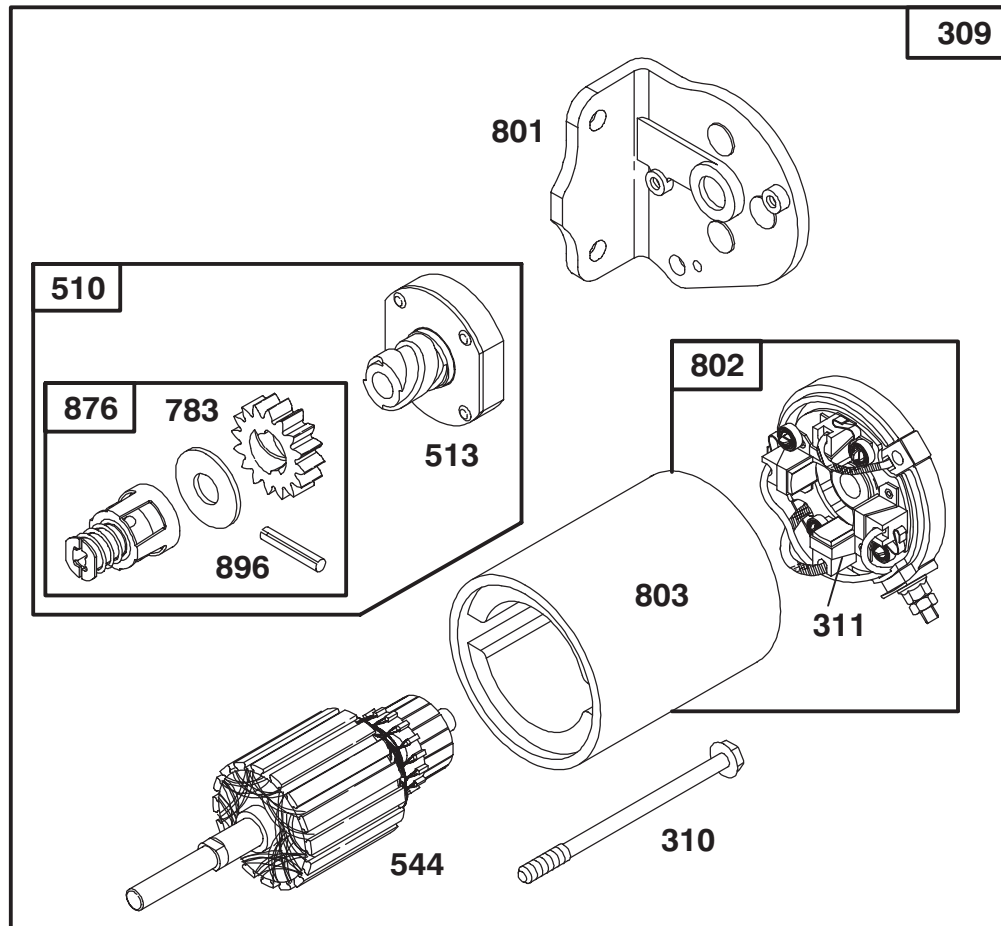


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor and Drive Assy.	1
310	94003	Bolt Hex. Hd.	1
311	395538	Brush Assy.	1
510	495878	Starter Drive Assy.	1
513	398003	Clutch Assy.	1
544	390837	Armature Assy.	1
728	94627	Screw-Hex. Hd.	1
729A	224723	Retainer-Wire	1

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	394856	Drive End Cap Assy.	1
802	395537	End Cap Assy. Commutator	1
803	398159	Housing Assy.	1
876	495877	Retainer And Pin	1
896	94288	Pin-Roll	1

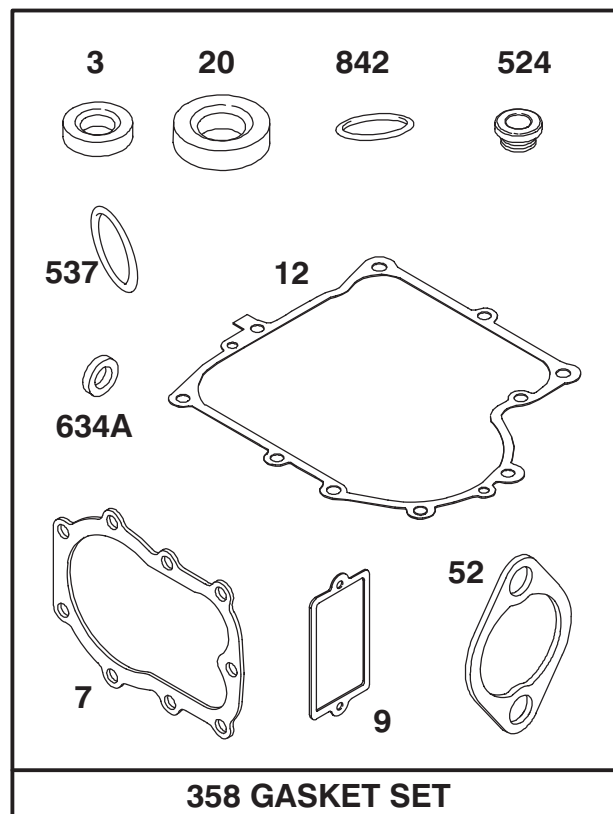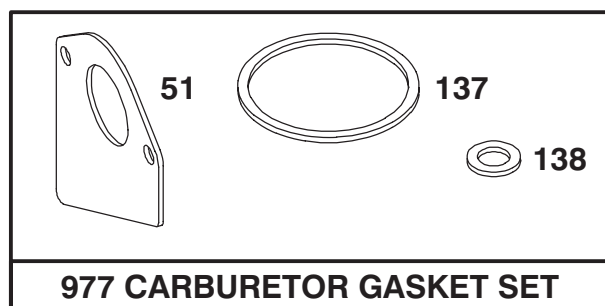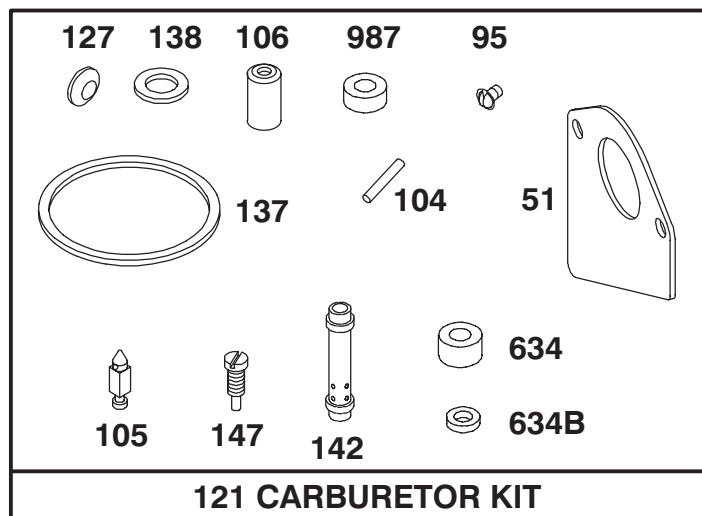   

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01


Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	1
★7	271866	Gasket—Cylinder Head	1
★9	27803	Gasket—Valve Cover	1
★12	271916	Gasket—Crankcase Cover (1/64" Thick)	1
★	271997	Gasket—Crankcase Cover (.005" Thick)	1
★	271996	Gasket—Crankcase Cover (.009" Thick)	1
★20	291675	Seal—Oil	1
◆◆51	272465	Gasket—Carburetor (Carb. to Elbow)	1
★52	272554	Gasket—Carburetor (Elbow to Cylinder)	1
●95	94098	Screw—Throttle	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1

★ Included in Gasket Set—Part No. 494241.

● Included in Carburetor Kit—Part No. 495799.

Ref. No.	Part No.	Description	No. Used
121	495799	Carburetor Kit	1
●127		Plug—Welch (Sold in Kit Only).	1
◆◆137	281165	Gasket—Float Bowl	1
◆◆138	281164	Washer—Float Bowl Screw	1
●142	494537	Nozzle—Carburetor	1
●147	231794	Pilot—Jet	1
358	494241	Gasket Set	1
★524	68838	Seal—Filler Tube	1
★537	281106	O-Ring—Air Cleaner	1
●634	281168	Seal—Choke Shaft	1
★634A	491323	Seal—Governor	1
●634B	394970	Washer—Throttle Shaft	1
★842	270920	Seal—Oil Filler Cap	1
977	494358	Carburetor Gasket Set	1
●987	281166	Seal—Throttle Shaft	1

 
◆ Included in Carburetor Gasket Set—Part No. 494385.

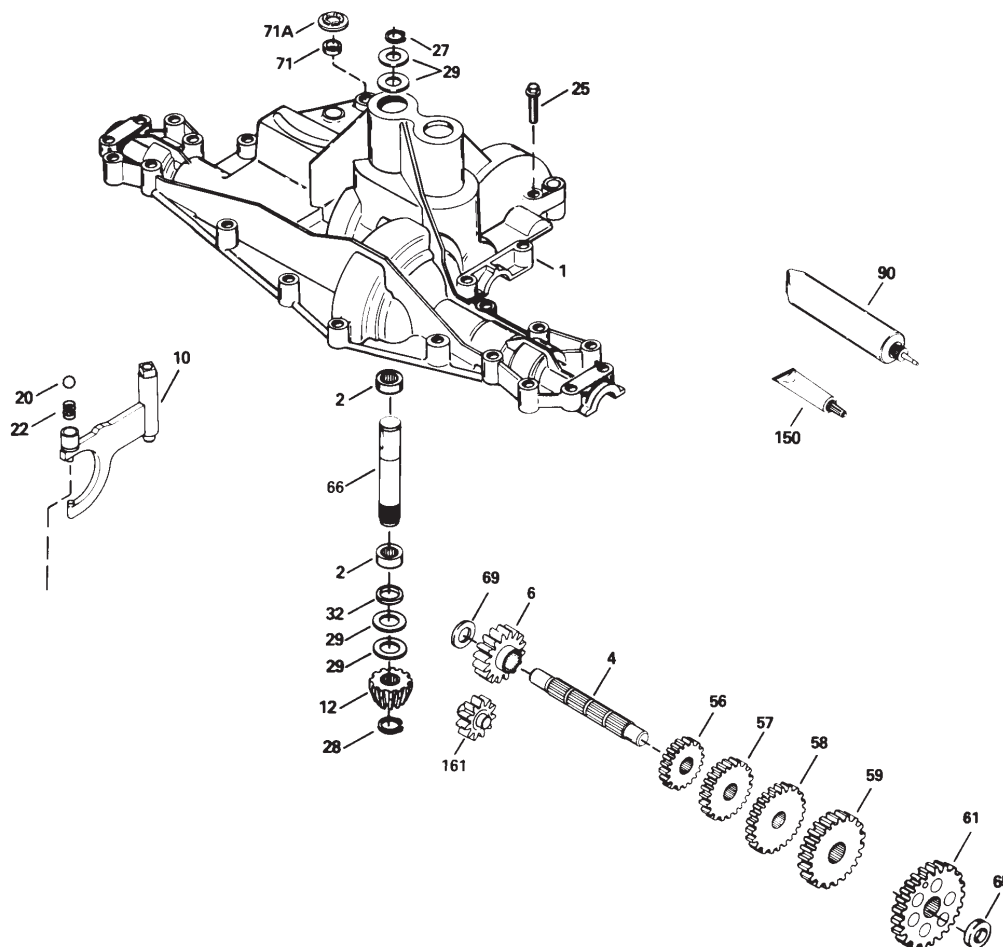

PEERLESS TRANSAXLE MODEL NO. 915-020

Ref. No.	Part No.	Description	No. Used
1	772128	Transaxle Cover	1
4	776300	Countershaft	1
6	778281	Spur Gear (16 Teeth)	1
10	784370	Shift Rod & Fork	1
12	778262	Bevel Pinion (14 Teeth)	1
20	792139	Ball (3/8" dia.)	1
22	792142	Spring	1
25	792073	Screw	17
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	4
32	792001	O-Ring	1
56	778151	Spur Gear (15 Teeth)	1
57	778249	Spur Gear (23 Teeth)	1

Ref. No.	Part No.	Description	No. Used
58	778314	Spur Gear (21 Teeth)	1
59	778129A	Spur Gear (30 Teeth)	1
61	778265	Spur Gear (34 Teeth)	1
65	780162	Washer	1
66	776299	Input Shaft (3.522" lg.)	1
69	780161	Thrust Washer	1
71	788069	Square Cut Ring	1
71A	792145	Pushnut	1
90	788067B	Grease (32 oz. btl. Bentonite grease)	1
150	510334	Gasket Eliminator (Loctite #515)	1
161	776302	Reverse Idler Assembly	1

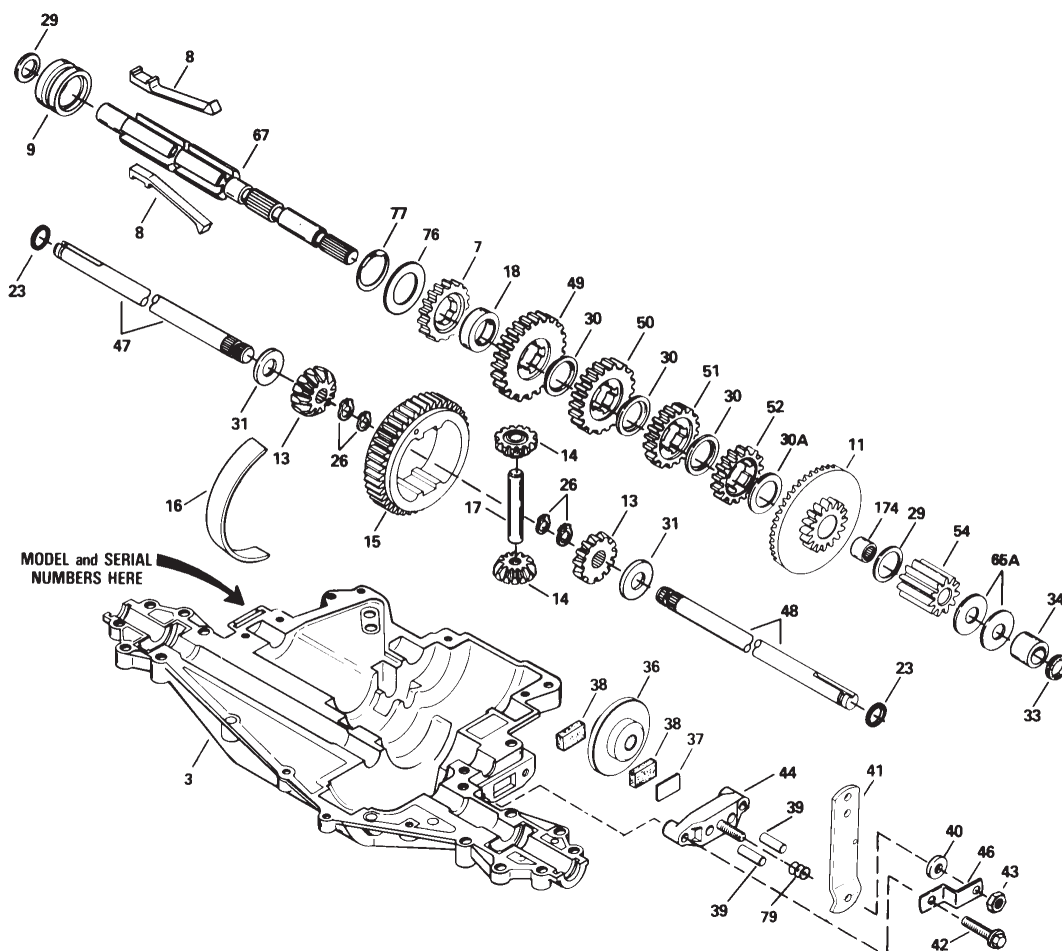 

PEERLESS TRANSAXLE MODEL NO. 915—020 (Cont.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
3	770110	Transaxle Case	1	38	790006	Brake Pad	2
7	778122A	Spur Gear (22 Teeth)	1	39	786026	Dowel Pin	2
8	792133	Shift Key	4	40	792076A	Washer	1
9	784352	Shift Collar	1	41	790045	Brake Lever	1
11	778261	Bevel Gear & Bearing (44/16 Teeth) (Incl. Ref. #174)	1	42	792073	Screw	2
13	778221	Bevel Gear (16 Teeth)	2	43	792075	Locknut	1
14	778068	Differential Pinion	2	44	790025	Brake Pad Holder	1
15	778260	Ring Gear	1	46	786086	Brake Lever Bracket	1
16	786150	Bearing Strip	1	47	774869	Axle (16—13/16" lg.)	1
17	78139	Drive Pin	1	48	774688	Axle (11—5/8" lg.) (Incl. Ref. #26)	1
18	786147	Neutral Spacer	1	49	778125	Spur Gear (35 Teeth)	1
23	788061	Seal Ring	2	50	778250	Spur Gear (17 Teeth)	1
26	792125	Retaining Ring (pkg. of 2)	4	51	778313	Spur Gear (19 Teeth)	1
29	780072	Washer	2	52	778121A	Spur Gear (20 Teeth)	1
30	780108	Washer	3	54	778263	Spur Gear (11 Teeth)	1
30A	789145	Washer	1	65A	780160	Washer	2
31	780001	Washer	2	67	776352	Shifter & Brake Shaft	1
33	788076	O—Ring	1	76	780090	Washer	1
34	780159	Bushing	1	77	788078A	Inverted Retaining Ring (pkg. of 2)	1
36	790071	Brake Disk	1	79	792144	Spring	1
37	790007	Brake Pad Plate	1	174	780085	Needle Bearing	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
111419	Washer – Fender	4 19 1	84-5610	Guide – Cable	8 16 2
114621	Decal – Noise	3 18 1	88-0890	Grip – Brake Rod	4 11 1
116397	Relay	9 16 1	88-3840-01	Body – Rear	1 5 1
701178	Cap – Protector	1 6 2	88-3850	Wheel – Steering	5 3 1
701756	Wheel – Deck	13 26 2	88-3870	Cover – Steering Wheel	5 2 1
702366	Clip – Wire Retainer	9 9 3	88-3880	Tank – Gas	6 6 1
3-6498	Washer – Thrust	5 14 2	88-3930	Shield – Heat	2 14 1
3-6498	Washer – Thrust	4 32 2	88-3940	Panel – Rear Hitch	1 10 1
3-7501	Washer – Curved	5 11 4	88-3950	Seat	3 1 1
5-4015	Bolt – Shoulder	8 2 1	88-3960	Lens – Headlights	9 23 1
5-4460	Washer – Fender	3 3 1	88-3970	Reflector & Lamp	9 25 1
5-4460	Washer – Fender	4 24 1	88-3980	Cap – Gas	6 3 1
5-4460	Washer – Flat	7 9 4	88-4020	Guide – Deck Belt R.H.	15 5 1
7-0030	Bolt – Shoulder	14 2 1	88-4030	Guide – Deck Belt L.H.	15 8 1
7-0030	Bolt – Shoulder	12 3 4	88-4040	Box – Battery	9 11 1
7-0036	Key – Square	11 10 2	88-4050	Duct – Hood Air	2 17 1
7-5461	Washer – Hardened	8 10 1	88-4070	Tire – 13	4 4 2
23-0310	Bolt – Shoulder	15 3 1	88-4090	Tire	11 8 2
26-0671	Bolt – Blade	13 14 2	88-4140	Nut – Wedge	2 23 2
26-0671	Bolt – Blade	6 17 1	88-4160	Clamp – Pivot Rod	2 22 2
26-6700	Spring – Brake Return	11 17 1	88-4170	Rod – Tower Pivot	2 24 1
27-0220	Screw – Plastite	6 5 4	88-4180	Button – Release	5 6 1
27-0220	Screw – Plastite	5 17 2	88-4190	Bushing – Sliding	5 5 1
27-8890	Spring – Pedal Return	7 6 1	88-4210	Bushing – Stationary	5 19 1
28-0540	Bolt – Shoulder	15 10 4	88-4220	Latch – Hood	2 16 1
28-0540	Bolt – Shoulder	2 11 2	88-4230	Trunnion – H.O.C. Rear	12 12 2
28-2480	Washer	4 3 2	88-4280	Wheel & Tire Assembly	4 * 2
28-2480	Washer	11 11 2	88-4300	Wheel & Tire Assembly	11 * 2
28-8080	Boot – Battery Terminal	9 5 1	88-4320	Harness – Wire	9 24 1
37-8770	Bolt – Shoulder	7 2 1	88-4340	Control – Throttle	6 4 1
37-8770	Bolt – Shoulder	3 12 4	88-4350	Cable – Throttle	6 2 1
38-1420	Switch – Seat	9 8 1	88-4370	Rim – Front Wheel	4 5 2
38-7820	Bearing – Spindle	13 21 4	88-4390	Rim	11 9 2
44-8110	Cable – Battery Negative	9 7 1	88-4400	Bearing – Wheel	4 35 4
46-8090	Screw – Plastite	2 15 8	88-4410	Gasket – Muffler	6 22 1
46-8091	Screw – Plastite	2 8 2	88-4460	Axle – Front	4 7 1
47-2963	Line – Fuel	6 10 1	88-4510	Housing – Spindle	13 20 2
52-2891	Bushing – Steering Link	4 20 2	88-4590	Bolt – Shoulder	14 3 3
55-9321	Cable – Shotgo	8 5 1	88-4620	Bracket – Idler Pivot	1 12 1
56-2540	Vent – Tube	9 2 1	88-4630	Plate – Engine Mount	1 3 1
56-6591	Bolt – Shoulder	13 25 2	88-4640	Bracket – Deck	15 12 2
56-9830	Pad – Brake	14 27 2	88-4650	Rail – R.H. Frame	1 4 1
57-4360	Post – Rear Pivot	13 6 1	88-4660	Rail – L.H. Frame	1 13 1
57-4380	Rod – Deflector Hinge	13 1 1	88-4670	Bushing – Eccentric	4 17 1
57-4700	Blade – Side Discharge	13 12 2	88-4700	Pulley – Cable	15 4 1
57-6950	Spring – Torsion	13 2 1	88-4700	Pulley – Cable	7 19 1
61-9780	Cap – Hub	4 1 2	88-4730	Clamp – H.O.C. Pivot	12 13 2
61-9780	Cap – Hub	11 13 2	88-4810	Clamp – Shift Pivot	8 4 2
62-1292	Knob – Engage Lever	2 3 1	88-4810	Clamp – Shift Pivot	7 22 1
62-1292	Knob – Shift	12 6 1	88-4820	Bracket – Seat Hinge	3 13 2
62-1292	Knob – Shift	8 15 1	88-4830	Link – Drag	4 29 1
62-3661	Spacer – Bearing	13 19 2	88-4840	Pulley – Transmission	11 3 1
63-8360	Key – Ignition	9 12 1	88-4850	Pulley – Engine	6 14 1
65-2920	Pad – Pedal	7 25 1	88-4870	Arm – Idler	14 21 1
65-7210	Spacer	12 15 1	88-4880	Spacer – Microswitch	9 21 1
67-0710	Ball – Swivel	14 28 2	88-4890	Spring – Leaf	5 13 1
76-3820	Anchor – Belt Guide	6 13 2	88-4900	Pan – Front Deck	15 11 1
80-2240	Plate – Grille Panel	9 30 1	88-4910	Support – Seat	3 2 1
80-2600	Battery – 7 Plate	9 6 1	88-4960	Shield – Exhaust Pipe	1 14 1
80-4341	Shaft – Spindle	13 16 2	88-4980	Bushing – Idler Arm	14 16 1
80-4360	Shield – Bearing	13 17 2	88-5000	Pedal – Clutch/Brake	7 24 1
80-4380	Spacer – Hardened	13 18 2	88-5010	Spacer – Steering Rack	4 26 1
80-6990	Washer – Hardened	12 16 4	88-5020	Gate – Shift	3 15 1
84-5610	Guide – Cable	7 12 2	88-5030	Gate – H.O.C.	3 8 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3317-515

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
88-5070	Guide - Idler Belt	14 24 1	92-5748	Decal - Air Duct	2 27 1
88-5110	Pivot - H.O.C.	12 14 1	92-5782	Patch - Heat Tape	2 26 1
88-5120	Support - Front Axle	1 17 1	92-5794	Lever - Shift Pivot	8 21 1
88-5130	Bracket - Steering Rack	4 14 1	92-5796	Pivot - Shift	8 6 1
88-5150	Bushing - Flange	5 16 1	92-7889	Spindle - R.H.	4 6 1
88-5180	Bracket - Backup	5 12 1	92-7890	Spindle - L.H.	4 31 1
88-5190	Lever - Deck Engage	2 1 1	92-8650	Hood	2 18 1
88-5200	Rack - Steering	4 18 1	92-8757	Decal - Engine 13 H.P.)	6 9 1
88-5220	Mat - R.H. Foot	3 16 1	92-8875	Switch - Rocker	9 27 1
88-5240	Mat - L.H. Foot	3 9 1	92-8934	Spring - Extension	14 9 1
88-5260	Bracket - Transaxle Mt.	1 11 2	92-9674	Knob - Studded	3 4 1
88-5270	Rod - Clutch/Brake	7 1 1	92-9845	Solenoid	9 17 1
88-5300	Lever - Shift	8 1 1	93-0303	Tower - Steering	2 2 1
88-5330	Pulley - Deck	14 18 2	93-0539	Screw - Phillips Hd.	9 19 4
88-5340	Lever - Trans. Shift	8 9 1	93-3158-01	Deck - 38	13 8 1
88-5350	Strap - Torque	11 16 2	93-3240	Seal - Plunger	9 28 2
88-5380	Rod - Steering Tie	4 8 1	93-3810	Harness - Wire	9 1 1
88-5390	Bellcrank	14 10 1	93-3822	Lever - H.O.C.	12 7 1
88-5450	Rod - Hanger Rear	12 11 2	93-3896	Bracket - L.H.	13 28 1
88-5460	Guide - Trans. Belt	7 10 2	93-4144	Decal - Rear Body	1 18 1
88-5470	Spacer - Front Axle	4 34 2	93-4145	Decal - Tower 1338XL	2 31 2
88-5500	Rod - Pedal Pivot	7 18 1	93-6673	Decal - Deck Engage	2 30 1
88-5510	Rod - Parking Brake	4 9 1	93-6674	Decal - Caution Spring	13 24 2
88-5520	Bracket - Parking Brake	4 10 1	93-6675	Decal - Instruction	1 19 1
88-5530	Rod - Shift Tie	8 7 1	93-6677	Decal - Shield Danger	13 10 1
88-5540	Rod - Deck Brake R.H.	14 22 1	93-6679	Decal - Belt Guide	13 23 1
88-5550	Rod - Deck Brake L.H.	14 5 1	93-7009	Decal - Deflector Danger	13 5 1
88-5560	Guide - Idler Belt	7 3 1	93-7010	Decal - Danger	13 4 3
88-5570	Link - Adjusting H.O.C.	12 1 2	93-7656	Cover - Shift Gate	3 14 1
88-5630	Pulley - Idler	14 23 1	93-7657	Cover - H.O.C.	3 6 1
88-5680	Pulley - Flat Idler	7 4 1	93-7695	Deflector Ass'y	13 3 1
88-5740	Bracket - R.H.	13 27 1	218-461	Nut - Hex	9 13 1
88-5800	Bushing -	4 33 4	232-27	Valve Stem w/Cap	11 18 2
88-5830	Guide - Belt L.H.	6 12 1	232-27	Valve Stem w/Cap	4 36 2
88-5840	Guide - Belt R.H.	6 21 1	232-39	Inner Tube	4 * 2
88-5900	Link - H.O.C.	12 8 1	232-41	Inner Tube (Optional)	11 * 2
88-5910	Spring - Torsion	14 7 2	2412-98	Clamp - Hose	6 11 2
88-5920	Rod - Gas Tank	6 7 1	302-5	Fitting - Grease	4 37 2
88-5930	Keeper - Cable	8 17 1	302-11	Fitting - Grease	11 7 2
88-5970	Hook - Spring Return	14 12 1	302-26	Fitting - Grease	4 16 1
88-6040	Bracket - Hood Pivot R.H.	2 19 1	321-2	Screw - Hex Hd. Cap	2 10 4
88-6050	Bracket - Hood Pivot L.H.	2 12 1	321-4	Screw - Hex Hd. Cap	9 3 2
88-6070	Arm - Idler	7 16 1	321-4	Screw - Hex Hd. Cap	5 8 2
88-6090	Coupling - Steering	5 20 1	321-4	Screw - Hex Hd. Cap	6 26 1
88-6100	Brake - Deck	14 4 2	321-9	Screw - Hex Hd. Cap	5 21 2
88-6130	Spring - Deck Engage	14 8 1	322-3	Screw - Hex Hd. Cap	1 2 22
88-6140	Spring - Brake	7 7 1	322-3	Screw - Hex Hd. Cap	12 4 4
88-6220	Spring - Compression	1 8 2	322-3	Screw - Hex Hd. Cap	2 4 2
88-6240	V-Belt - Traction	11 5 1	322-3	Screw - Hex Hd. Cap	3 11 4
88-6250	V-Belt - Deck	14 17 1	322-3	Screw - Hex Hd. Cap	8 13 3
88-6290	Shield - Muffler	1 15 1	322-3	Screw - Hex Hd. Cap	7 17 2
88-6300	Shaft - Steering Upper	5 9 1	322-3	Screw - Hex Hd. Cap	13 29 6
88-6330	Spring - Extension	7 14 1	322-5	Screw - Hex Hd. Cap	1 7 2
88-6370	Shaft - Steering Short	5 15 1	322-5	Screw - Hex Hd. Cap	7 8 1
88-6410	Cable - Deck Engage	15 6 1	322-5	Screw - Hex Hd. Cap	14 15 2
88-6450	Transaxle	11 6 1	322-7	Screw - Hex Hd. Cap	7 11 1
88-6460	Spring - Extension	12 2 1	322-9	Screw - Hex Hd. Cap	6 18 4
88-6480	Muffler	6 25 1	322-12	Screw - Hex Hd. Cap	15 2 2
88-9830	Switch - Ignition	9 15 1	322-12	Screw - Hex Hd. Cap	11 14 4
88-9932	Switch - Micro	9 20 2	323-11	Screw - Hex Hd. Cap	7 5 1
92-2467	Decal - Hood R.H.	2 25 1	323-12	Screw - Hex Hd. Cap	14 1 1
92-2468	Decal - Hood L.H.	2 * 1	323-13	Screw - Hex Hd. Cap	4 27 2
92-5730	Decal - Throttle	2 29 1	329-23	Screw - Hex Hd. Cap	8 12 1
92-5731	Decal - Ignition/Lights	2 28 1	3219-6	Nut - Lock	14 19 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3230-1	Bolt - Carriage	4 15 4	3296-29	Nut - Lock	8 3 4
3230-3	Bolt - Carriage	8 18 1	3296-29	Nut - Lock	12 5 8
3230-3	Bolt - Carriage	7 21 1	3296-29	Nut - Lock	2 6 2
3230-3	Screw - Carriage	4 28 1	3296-29	Nut - Lock	6 8 3
3231-4	Screw - Carriage	4 13 1	3296-29	Nut - Lock	1 9 24
3253-3	Washer - Lock	8 11 1	3296-29	Nut - Lock	3 10 6
3253-3	Washer - Lock	6 27 1	3296-29	Nut - Lock	4 12 5
3253-4	Washer - Lock	6 23 2	3296-29	Nut - Lock	14 13 6
3253-22	Washer - Lock	6 16 1	3296-29	Nut - Lock	7 13 6
3254-5	Washer - Lock	9 14 1	3296-29	Nut - Lock	13 30 6
3255-7	Washer - Ext. Tooth Lock	9 29 1	3296-39	Nut - Lock	15 9 1
3255-8	Washer - Ext. Tooth Lock	6 19 1	3296-39	Nut - Lock	8 19 1
3256-22	Washer - Flat	5 7 2	3296-39	Nut - Lock	14 20 1
3256-23	Washer - Flat	1 1 4	3296-39	Nut - Lock	4 21 3
3256-23	Washer - Flat	2 5 2	3296-39	Nut - Lock	13 22 3
3256-23	Washer - Flat	14 14 3	3296-42	Nut - Lock	14 6 2
3256-23	Washer - Flat	8 14 2	3296-42	Nut - Lock	2 9 4
3256-23	Washer - Flat	11 15 8	3296-42	Nut - Lock	5 10 4
3256-23	Washer - Flat	7 26 2	3296-59	Nut - Lock	7 15 2
3256-24	Washer - Flat	12 10 4	32103-22	Nut - Wing	9 4 2
3256-24	Washer - Flat	2 20 2	32104-76	Screw - Thread Cutting	15 7 5
3256-24	Washer - Flat	14 25 2	32104-76	Screw - Thread Tapping	1 16 1
3256-24	Washer - Flat	4 25 4	32120-64	Ring - Snap	11 2 1
3256-25	Washer - Flat	6 15 1	32121-78	Pin - Roll	5 4 1
3256-25	Washer - Flat	8 20 1	32128-43	Nut - Flange	2 21 2
3256-25	Washer - Flat	4 22 2	32144-4	Screw - Hex Hd. Thr'd	9 10 3
3256-26	Washer - Flat	7 20 2	32144-32	Screw - Plastite	9 26 2
3256-68	Washer - Fender	14 11 3	32144-41	Screw - Taptite	13 9 8
3257-23	Key - Woodruff	11 4 1	32149-1	Nut - Keps	6 20 2
3269-26	Washer - Backup	3 17 4	32149-2	Nut - Keps	9 18 3
3272-10	Pin - Cotter	4 23 4	32151-48	E-Ring	11 12 2
3272-10	Pin - Cotter	7 23 1	32151-48	E-Ring	5 18 1
3272-12	Pin - Cotter	4 2 2	32151-48	E-Ring	4 30 2
3274-12	Screw - Hex Soc. Hd.	6 24 2	32151-81	Ring - Retaining	5 1 1
3290-282	Rivet - Pop	3 7 4			
3290-282	Rivet - Pop	14 26 4			
3290-299	Nut - Tinnerman	9 31 1			
3290-307	Pin - Cotter	2 7 2			
3290-307	Pin - Hair Cotter	12 9 7			
3290-354	Speednut	9 22 2			
3290-465	Washer - Belleville	13 13 2			
3290-479	Fastener - Panel	3 5 20			
3290-496	Nut - Retained	2 13 2			
3296-3	Nut - Lock	8 8 2			
3296-29	Nut - Lock	11 1 8			
3296-29	Nut - Lock	15 1 6			

OPTIONAL EQUIPMENT

Easy Empty Bagger Kit	Model No. 79116
Twin Bagger	Model No. 79101
Anti-Scalp Kit	Model No. 79181
Recycler Kit (Standard)	Model No. 79170
Wheel Weight Kit	Model No. 59159
42 Snowblade Kit	Model No. 79150
Tire Chains	Part No. 11-0430
Hi-Sail Bagging Blade	Part No. 57-4700
Headlight Kit (Standard)	Model No. 79180