 




MODEL NO. 71205-5900001 & UP

**PARTS
CATALOG**

1338XLE LAWN TRACTOR

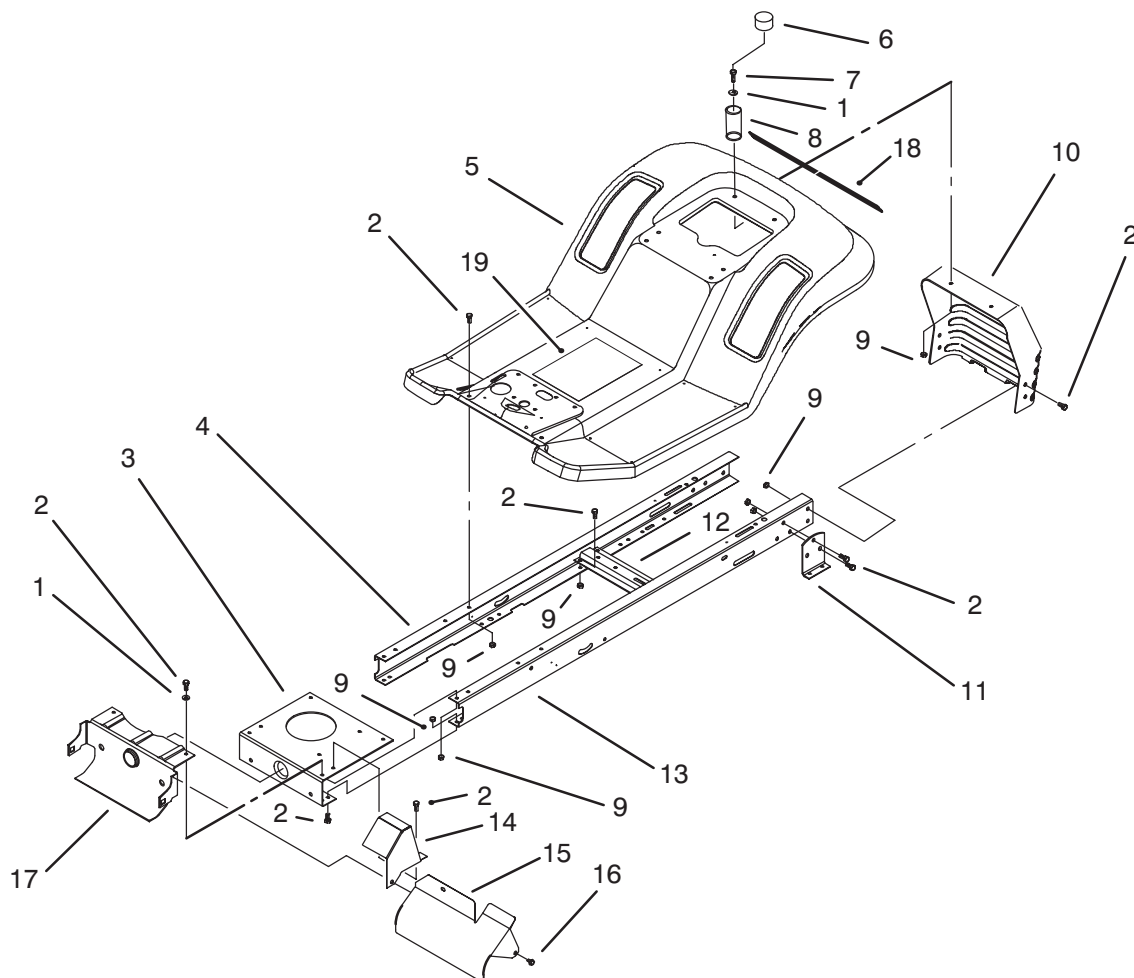


C-2150

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3256-23	Washer - Flat	4
2	322-3	Screw - Hex Hd. Cap	22
3	88-4630	Plate - Engine Mount	1
4	88-4650	Rail - R.H. Frame	1
5	88-3840-01	Body - Rear	1
6	701178	Cap - Protector	2
7	322-5	Screw - Hex Hd. Cap	2
8	88-6220	Spring - Compression	2
9	3296-29	Nut - Lock	24
10	88-3940	Panel - Rear Hitch	1

Ref. No.	Part No.	Description	No. Used
11	88-5260	Bracket - Transaxle Mt.	2
12	88-4620	Bracket - Idler Pivot	1
13	88-4660	Rail - L.H. Frame	1
14	88-4960	Shield - Exhaust Pipe	1
15	88-6290	Shield - Muffler	1
16	32104-76	Screw - Thread Tapping	1
17	88-5120	Support - Front Axle	1
18	93-4144	Decal - Rear Body	1
19	93-6675	Decal - Instruction	1

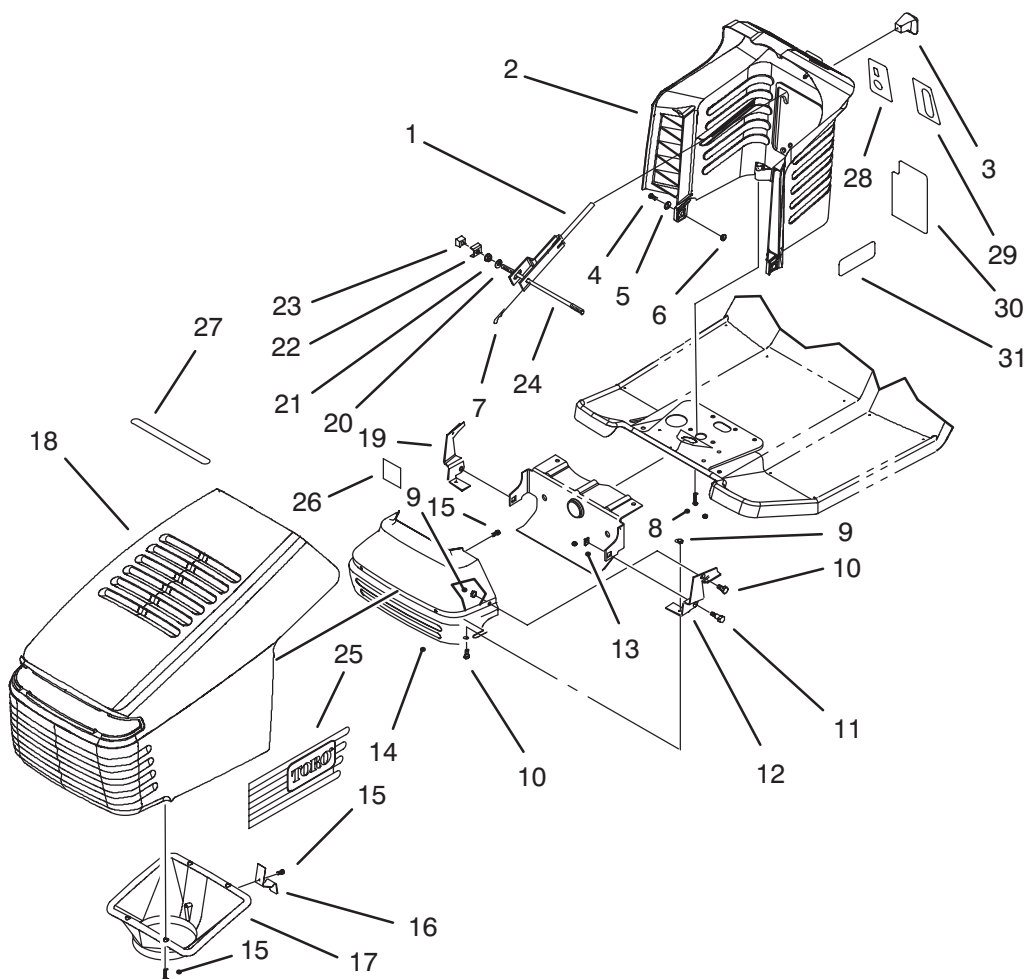 


C-1308

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5190	Lever - Deck Engage	1
2	93-0303	Tower - Steering	1
3	62-1292	Knob - Engage Lever	1
4	322-3	Screw - Hex Hd. Cap	2
5	3256-23	Washer - Flat	2
6	3296-29	Nut - Lock	2
7	3290-307	Pin - Cotter	2
8	46-8091	Screw - Plastite	2
9	3296-42	Nut - Lock	4
10	321-2	Screw - Hex Hd. Cap	4
11	28-0540	Bolt - Shoulder	2
12	88-6050	Bracket - Hood Pivot L.H.	1
13	3290-496	Nut - Retained	2
14	88-3930	Shield - Heat	1
15	46-8090	Screw - Plastite	8
16	88-4220	Latch - Hood	1

Ref. No.	Part No.	Description	No. Used
17	88-4050	Duct - Hood Air	1
18	92-8650	Hood	1
19	88-6040	Bracket - Hood Pivot R.H.	1
20	3256-24	Washer - Flat	2
21	32128-43	Nut - Flange	2
22	88-4160	Clamp - Pivot Rod	2
23	88-4140	Nut - Wedge	2
24	88-4170	Rod - Tower Pivot	1
25	92-2467	Decal - Hood R.H.	1
*	92-2468	Decal - Hood L.H.	1
26	92-5782	Patch - Heat Tape	1
27	92-5748	Decal - Air Duct	1
28	92-5731	Decal - Ignition/Lights	1
29	92-5730	Decal - Throttle	1
30	93-6673	Decal - Deck Engage	1
31	93-4145	Decal - Tower 1338XL	2

 *Not Illustrated

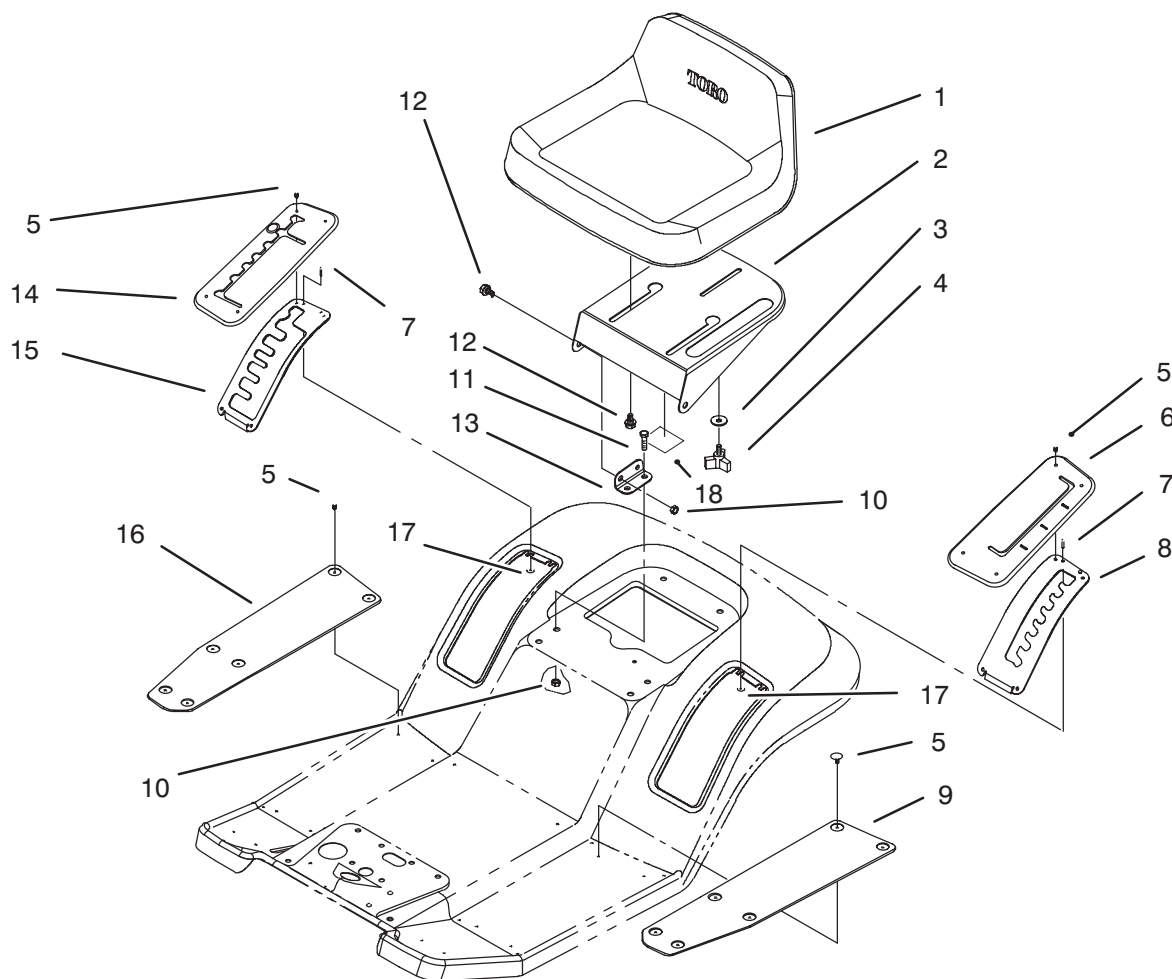


C-1830A

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-3950	Seat	1
2	88-4910	Support - Seat	1
3	5-4460	Washer - Fender	1
4	92-9674	Knob - Studded	1
5	3290-479	Fastener - Panel	20
6	93-7657	Cover - H.O.C.	1
7	3290-282	Rivet - Pop	4
8	88-5030	Gate - H.O.C.	1
9	88-5240	Mat - L.H. Foot	1

Ref. No.	Part No.	Description	No. Used
10	3296-29	Nut - Lock	6
11	322-3	Screw - Hex Hd. Cap	4
12	37-8770	Bolt - Shoulder	4
13	88-4820	Bracket - Seat Hinge	2
14	93-7656	Cover - Shift Gate	1
15	88-5020	Gate - Shift	1
16	88-5220	Mat - R.H. Foot	1
17	3269-26	Washer - Backup	4
18	114621	Decal - Noise	1

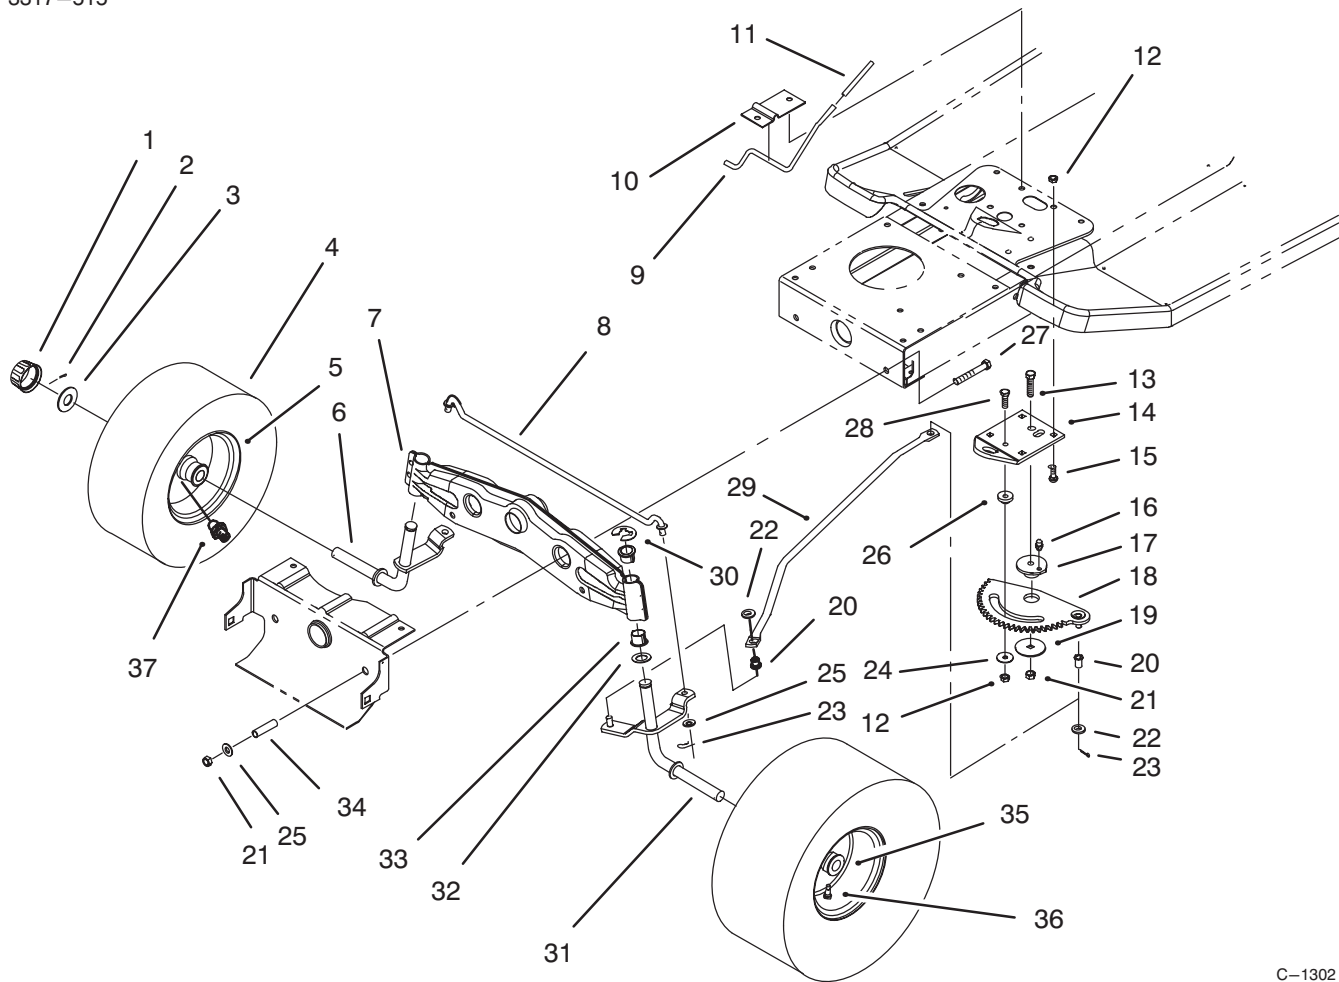 


C-1302

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9780	Cap - Hub	2
2	3272-12	Pin - Cotter	2
3	28-2480	Washer	2
4	88-4070	Tire - 13"	2
5	88-4370	Rim - Front Wheel	2
6	92-7889	Spindle - R.H.	1
7	88-4460	Axle - Front	1
8	88-5380	Rod - Steering Tie	1
9	88-5510	Rod - Parking Brake	1
10	88-5520	Bracket - Parking Brake	1
11	88-0890	Grip - Brake Rod	1
12	3296-29	Nut - Lock	5
13	3231-4	Screw - Carriage	1
14	88-5130	Bracket - Steering Rack	1
15	3230-1	Bolt - Carriage	4
16	302-26	Fitting - Grease	1
17	88-4670	Bushing - Eccentric	1
18	88-5200	Rack - Steering	1
19	111419	Washer - Fender	1
20	52-2891	Bushing - Steering Link	2
21	3296-39	Nut - Lock	3

Ref. No.	Part No.	Description	No. Used
22	3256-25	Washer - Flat	2
23	3272-10	Pin - Cotter	4
24	5-4460	Washer - Fender	1
25	3256-24	Washer - Flat	4
26	88-5010	Spacer - Steering Rack	1
27	323-13	Screw - Hex Hd. Cap	2
28	3230-3	Screw - Carriage	1
29	88-4830	Link - Drag	1
30	32151-48	E-Ring	2
31	92-7890	Spindle - L.H.	1
32	3-6498	Washer - Thrust	2
33	88-5800	Bushing - Steering Spindle	4
34	88-5470	Spacer - Front Axle	2
35	88-4400	Bearing - Wheel	4
36	232-27	Valve Stem w/Cap	2
37	302-5	Fitting - Grease	2
*	232-39	Inner Tube	2
*	88-4280	Wheel & Tire Assembly (Incl. Ref. #4 & 5)	2

 
*Not Illustrated

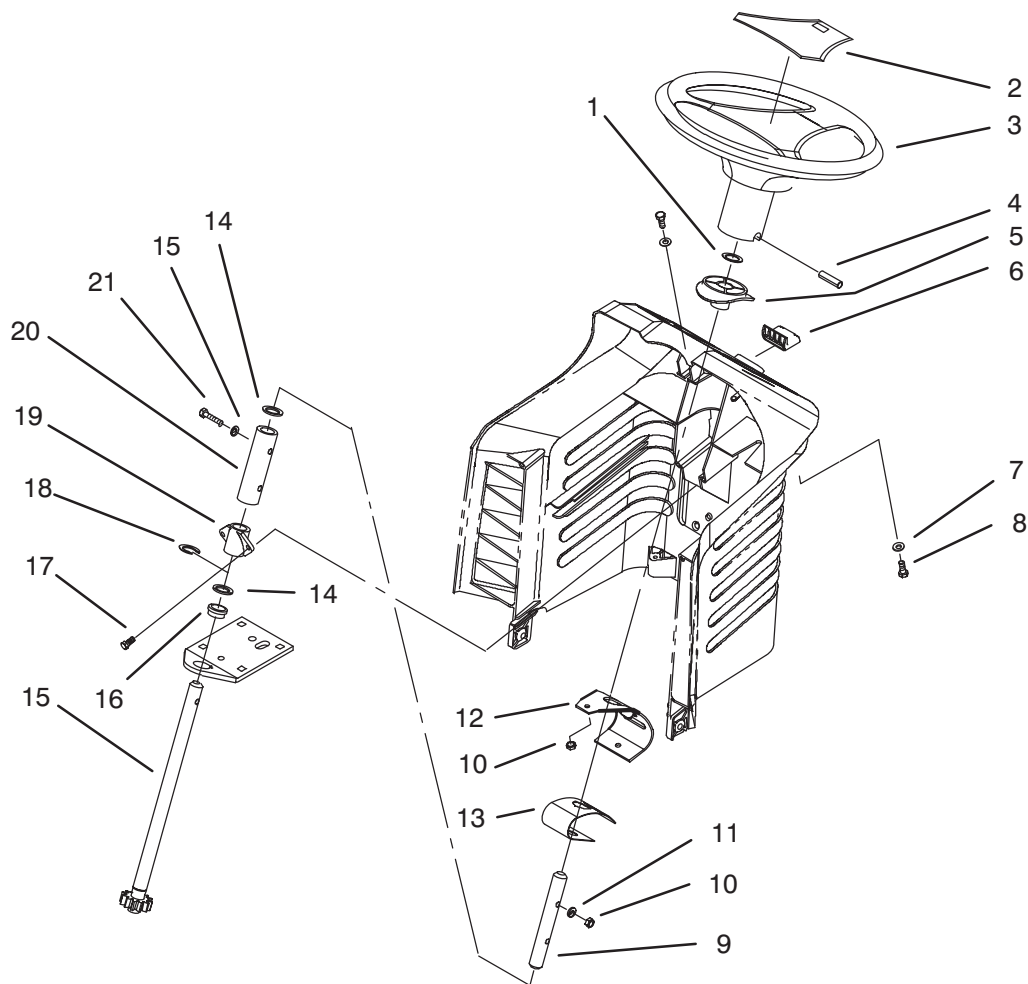

C-1344A

STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32151-81	Ring - Retaining	1	11	3-7501	Washer - Curved	4
2	88-3870	Cover - Steering Wheel	1	12	88-5180	Bracket - Backup	1
3	88-3850	Wheel - Steering (Incl. Ref. #2)	1	13	88-4890	Spring - Leaf	1
4	32121-78	Pin - Roll	1	14	3-6498	Washer - Thrust	2
5	88-4190	Bushing - Sliding	1	15	88-6370	Shaft - Steering Short	1
6	88-4180	Button - Release	1	16	88-5150	Bushing - Flange	1
7	3256-22	Washer - Flat	2	17	27-0220	Screw - Plastite	2
8	321-4	Screw - Hex Hd. Cap	2	18	32151-48	E-Ring	1
9	88-6300	Shaft - Steering Upper	1	19	88-4210	Bushing - Stationary	1
10	3296-42	Nut - Lock	4	20	88-6090	Coupling - Steering	1
				21	321-9	Screw - Hex Hd. Cap	2

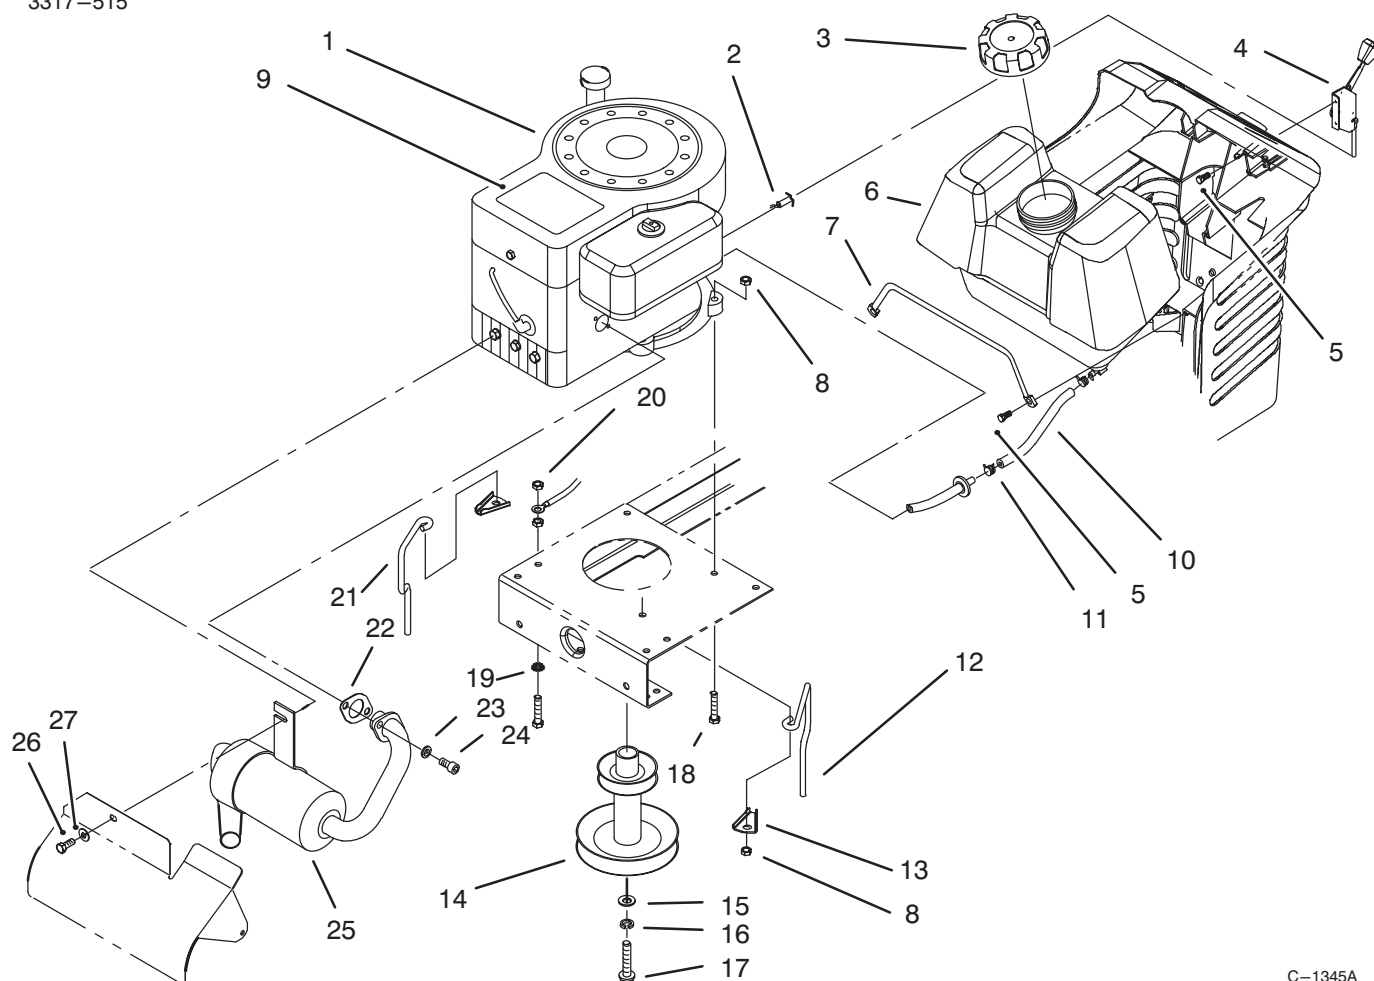 


C-1345A

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Engine — 13 H.P.	1
2	88-4350	Cable — Throttle	1
3	88-3980	Cap — Gas	1
4	88-4340	Control — Throttle	1
5	27-0220	Screw — Plastite	4
6	88-3880	Tank — Gas	1
7	88-5920	Rod — Gas Tank	1
8	3296-29	Nut — Lock	3
9	92-8757	Decal — Engine 13 H.P.)	1
10	47-2963	Line — Fuel	1
11	2412-98	Clamp — Hose	2
12	88-5830	Guide — Belt L.H.	1
13	76-3820	Anchor — Belt Guide	2
14	88-4850	Pulley — Engine	1

Ref. No.	Part No.	Description	No. Used
15	3256-25	Washer — Flat	1
16	3253-22	Washer — Lock	1
17	26-0671	Bolt — Blade	1
18	322-9	Screw — Hex Hd. Cap	4
19	3255-8	Washer — Ext. Tooth Lock	1
20	32149-1	Nut — Keps	2
21	88-5840	Guide — Belt R.H.	1
22	88-4410	Gasket — Muffler	1
23	3253-4	Washer — Lock	2
24	3274-12	Screw — Hex Soc. Hd.	2
25	88-6480	Muffler	1
26	321-4	Screw — Hex Hd. Cap	1
27	3253-3	Washer — Lock	1

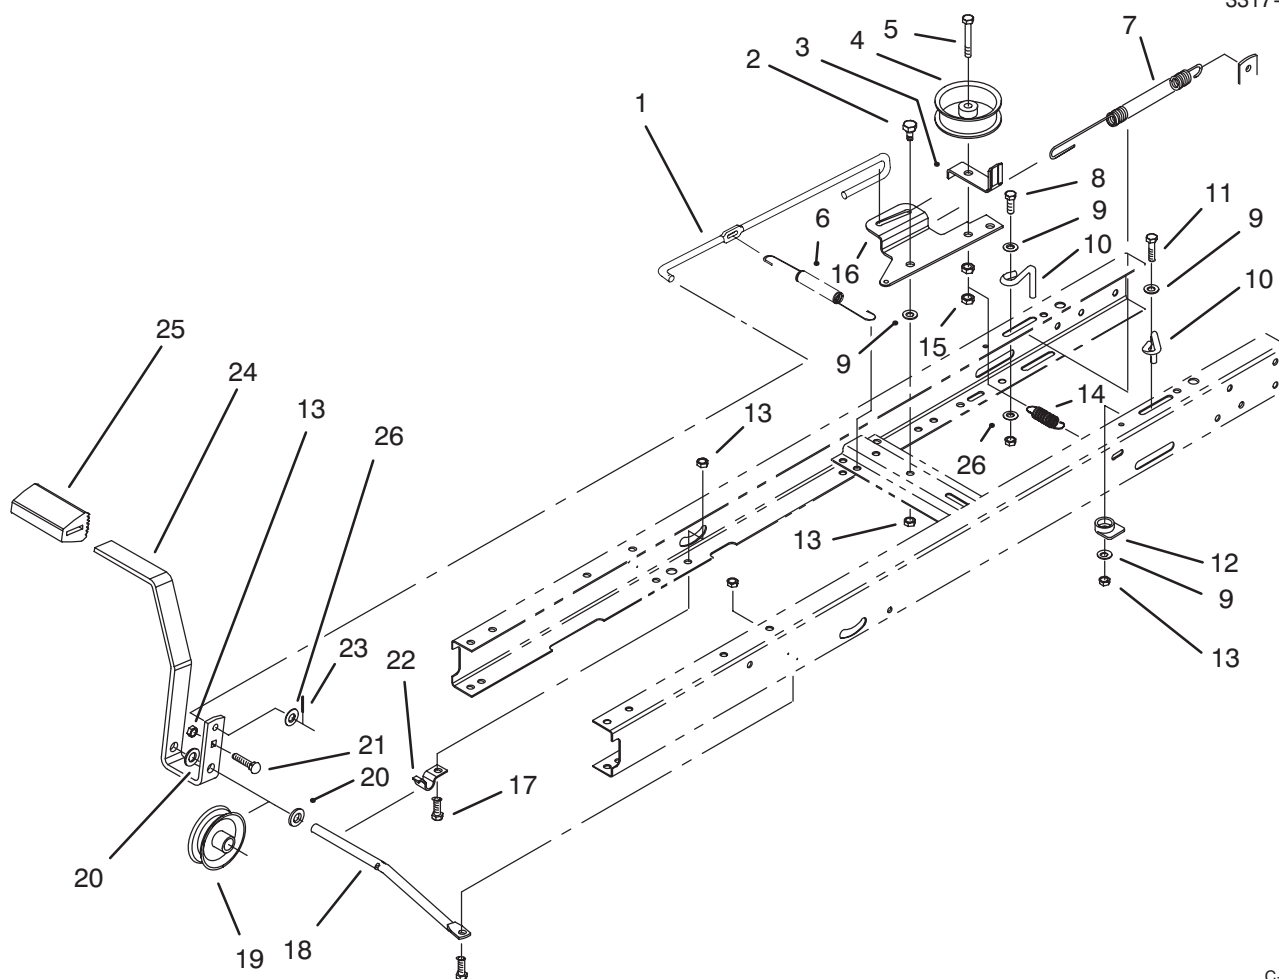 


C-2103

CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5270	Rod - Clutch/Brake	1
2	37-8770	Bolt - Shoulder	1
3	88-5560	Guide - Idler Belt	1
4	88-5680	Pulley - Flat Idler	1
5	323-11	Screw - Hex Hd. Cap	1
6	27-8890	Spring - Pedal Return	1
7	88-6140	Spring - Brake	1
8	322-5	Screw - Hex Hd. Cap	1
9	5-4460	Washer - Flat	4
10	88-5460	Guide - Trans. Belt	2
11	322-7	Screw - Hex Hd. Cap	1
12	84-5610	Guide - Cable	2
13	3296-29	Nut - Lock	6

Ref. No.	Part No.	Description	No. Used
14	88-6330	Spring - Extension	1
15	3296-59	Nut - Lock	2
16	88-6070	Arm - Idler	1
17	322-3	Screw - Hex Hd. Cap	2
18	88-5500	Rod - Pedal Pivot	1
19	88-4700	Pulley - Cable	1
20	3256-26	Washer - Flat	2
21	3230-3	Bolt - Carriage	1
22	88-4810	Clamp - Shift Pivot	1
23	3272-10	Pin - Cotter	1
24	88-5000	Pedal - Clutch/Brake	1
25	65-2920	Pad - Pedal	1
26	3256-23	Washer - Flat	2

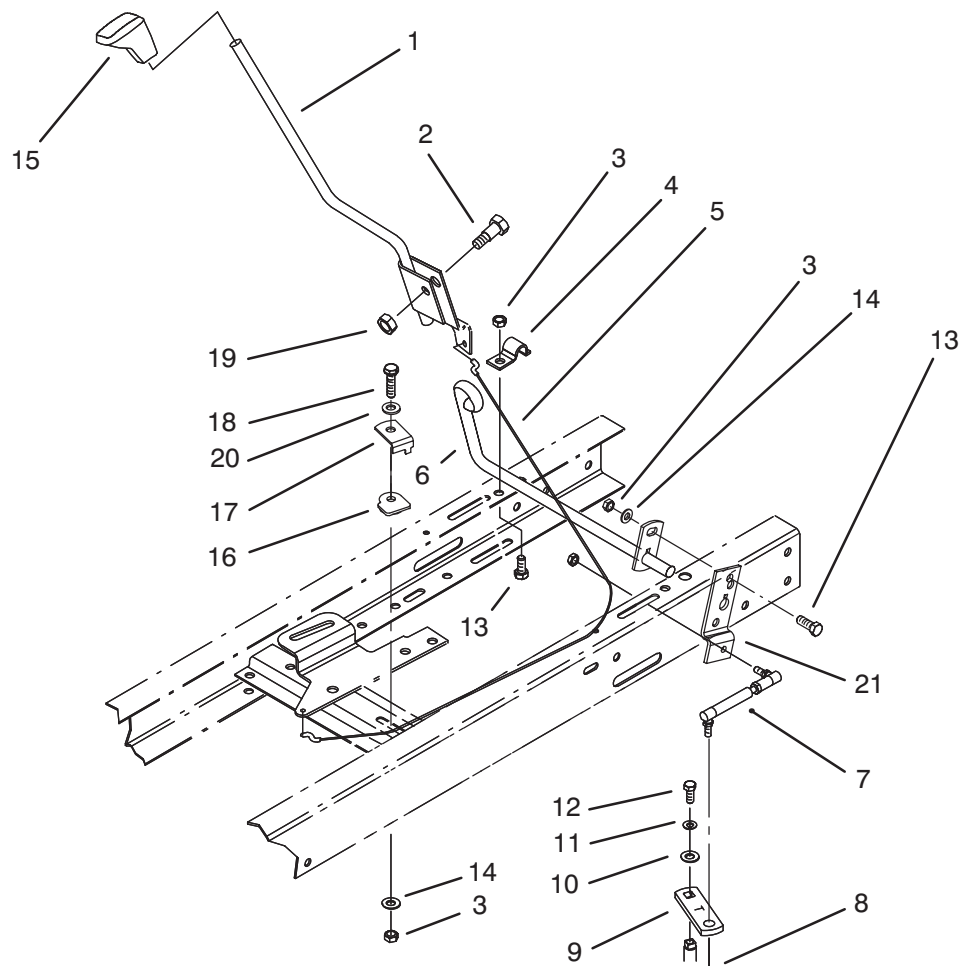 


C-1317

SHIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5300	Lever - Shift	1
2	5-4015	Bolt - Shoulder	1
3	3296-29	Nut - Lock	4
4	88-4810	Clamp - Shift Pivot	2
5	55-9321	Cable - Shotgo	1
6	92-5796	Pivot - Shift	1
7	88-5530	Rod - Shift Tie	1
8	3296-3	Nut - Lock	2
9	88-5340	Lever - Trans. Shift	1
10	7-5461	Washer - Hardened	1
11	3253-3	Washer - Lock	1


Ref. No.	Part No.	Description	No. Used
12	329-23	Screw - Hex Hd. Cap	1
13	322-3	Screw - Hex Hd. Cap	3
14	3256-23	Washer - Flat	2
15	62-1292	Knob - Shift	1
16	84-5610	Guide - Cable	2
17	88-5930	Keeper - Cable	1
18	3230-3	Bolt - Carriage	1
19	3296-39	Nut - Lock	1
20	3256-25	Washer - Flat	1
21	92-5794	Lever - Shift Pivot	1

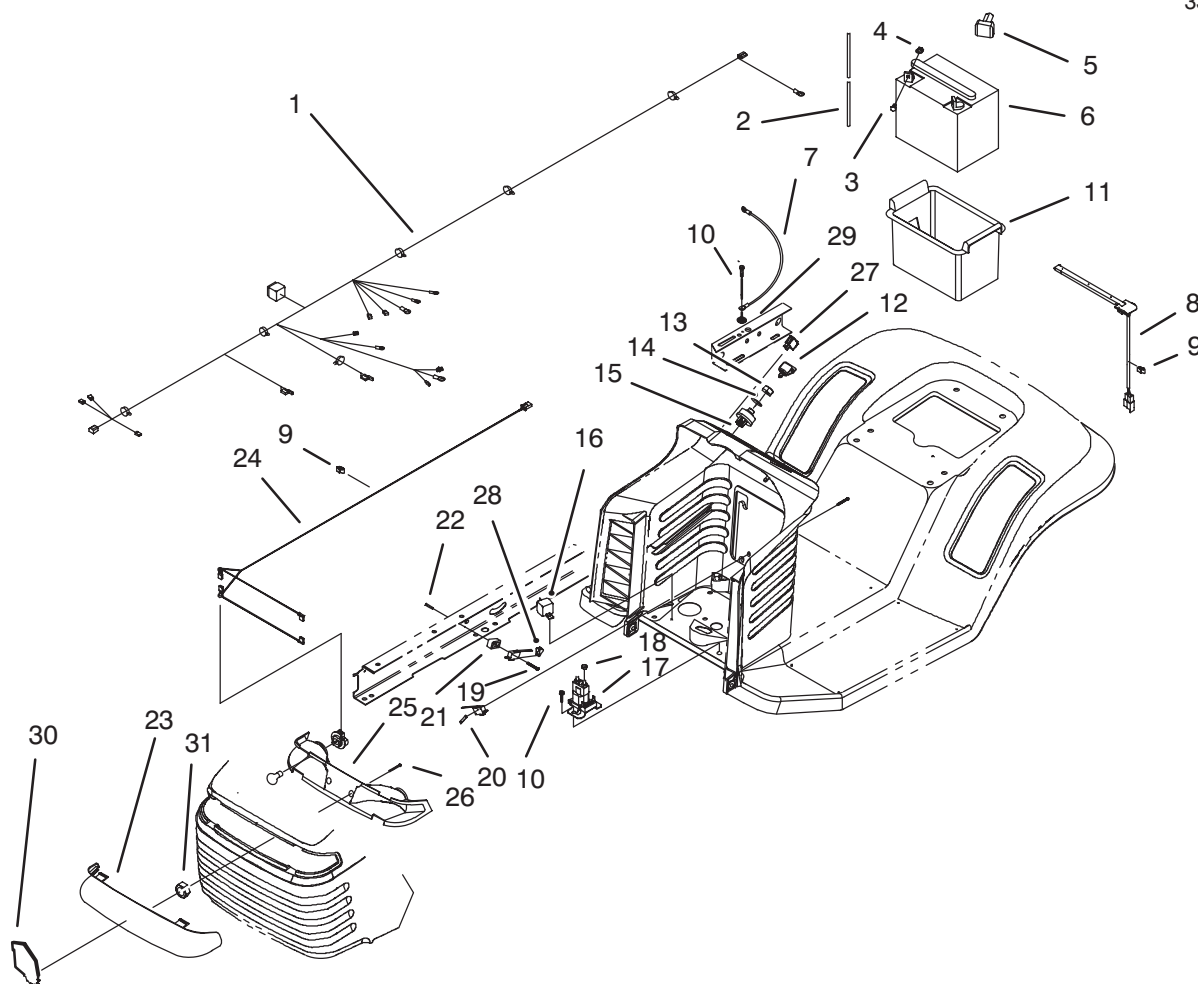 

C-1831A

ELECTRICAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-3810	Harness - Wire	1	16	116397	Relay	1
2	56-2540	Vent - Tube	1	17	92-9845	Solenoid	1
3	321-4	Screw - Hex Hd. Cap	2	18	32149-2	Nut - Keps	3
4	32103-22	Nut - Wing	2	19	93-0539	Screw - Phillips Hd.	4
5	28-8080	Boot - Battery Terminal	1	20	88-9932	Switch - Micro	2
6	80-2600	Battery - 7 Plate	1	21	88-4880	Spacer - Microswitch	1
7	44-8110	Cable - Battery Negative	1	22	3290-354	Speednut	2
8	38-1420	Switch - Seat	1	23	88-3960	Lens - Headlights	1
9	702366	Clip - Wire Retainer	3	24	88-4320	Harness - Wire	1
10	32144-4	Screw - Hex Hd. Thr'd Form.	3	25	88-3970	Reflector & Lamp	1
11	88-4040	Box - Battery	1	26	32144-32	Screw - Plastite	2
12	63-8360	Key - Ignition	1	27	92-8875	Switch - Rocker	1
13	218-461	Nut - Hex	1	28	93-3240	Seal - Plunger	2
14	3254-5	Washer - Lock	1	29	3255-7	Washer - Ext. Tooth Lock	1
15	88-9830	Switch - Ignition	1	30	80-2240	Plate- Grille Panel	1
				31	3290-299	Nut - Tinnerman	1

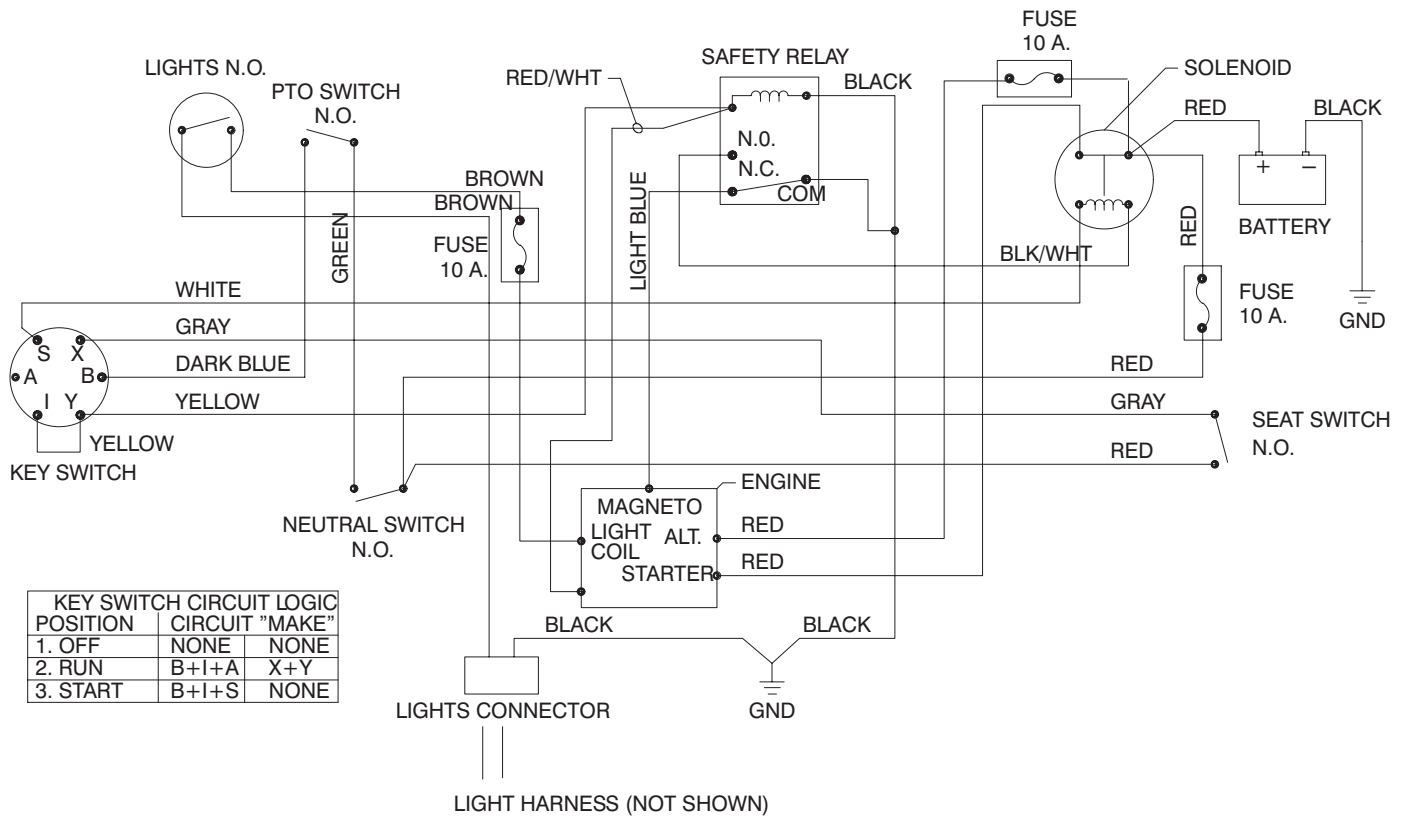 


C-2186A

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used

Ref. No.	Part No.	Description	No. Used

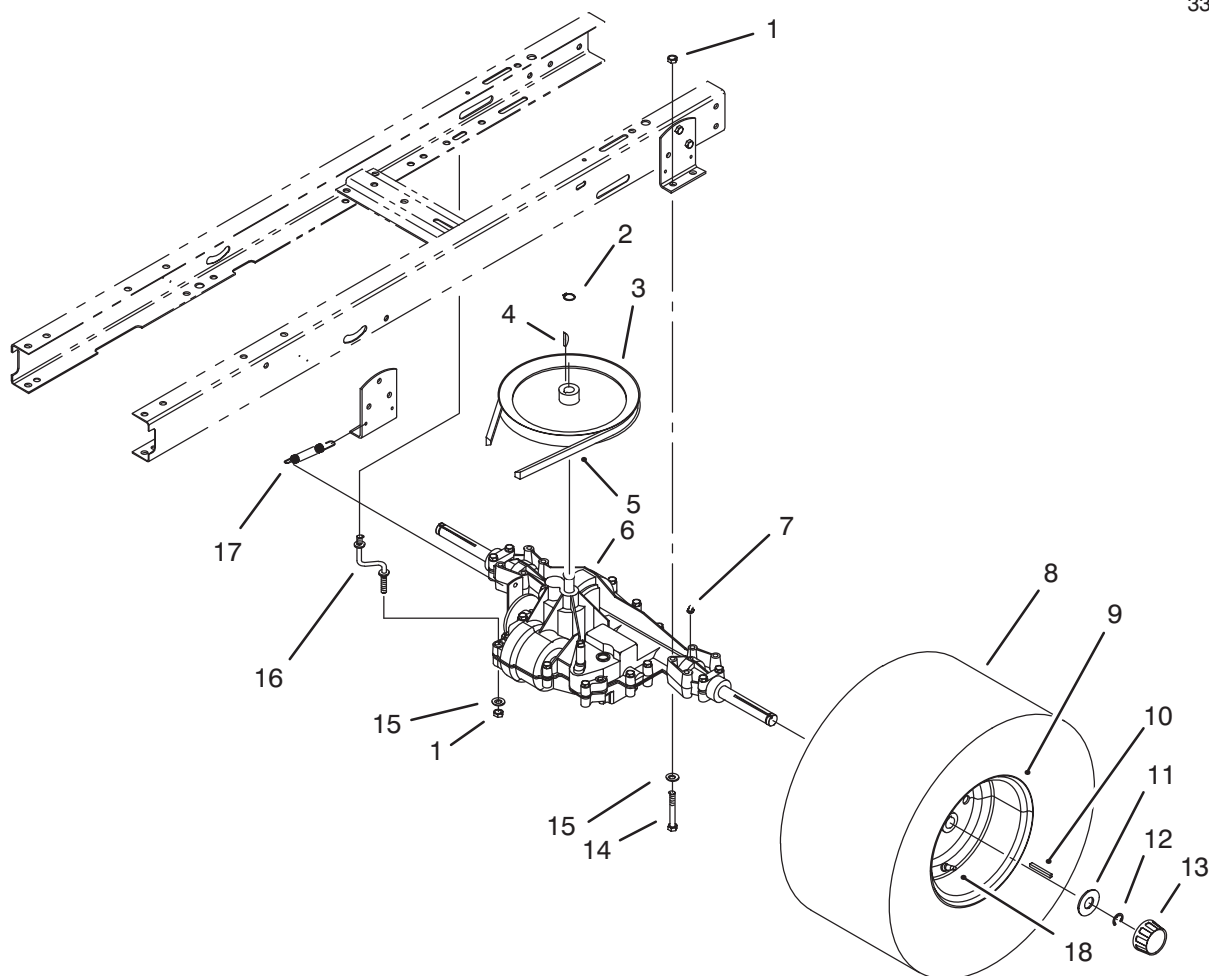 


C-1305

TRANSAXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	8	12	32151-48	E-Ring	2
2	32120-64	Ring - Snap	1	13	61-9780	Cap - Hub	2
3	88-4840	Pulley - Transmission	1	14	322-12	Screw - Hex Hd. Cap	4
4	3257-23	Key - Woodruff	1	15	3256-23	Washer - Flat	8
5	88-6240	V-Belt - Traction	1	16	88-5350	Strap - Torque	2
6	88-6450	Transaxle	1	17	26-6700	Spring - Brake Return	1
7	302-11	Fitting - Grease	2	18	232-27	Valve Stem w/Cap	2
8	88-4090	Tire	2	*	232-41	Inner Tube (Optional)	2
9	88-4390	Rim	2	*	88-4300	Wheel & Tire Assembly (Incl. Ref. #8 & 9)	2
10	7-0036	Key - Square	2				
11	28-2480	Washer	2				

 *Not Illustrated

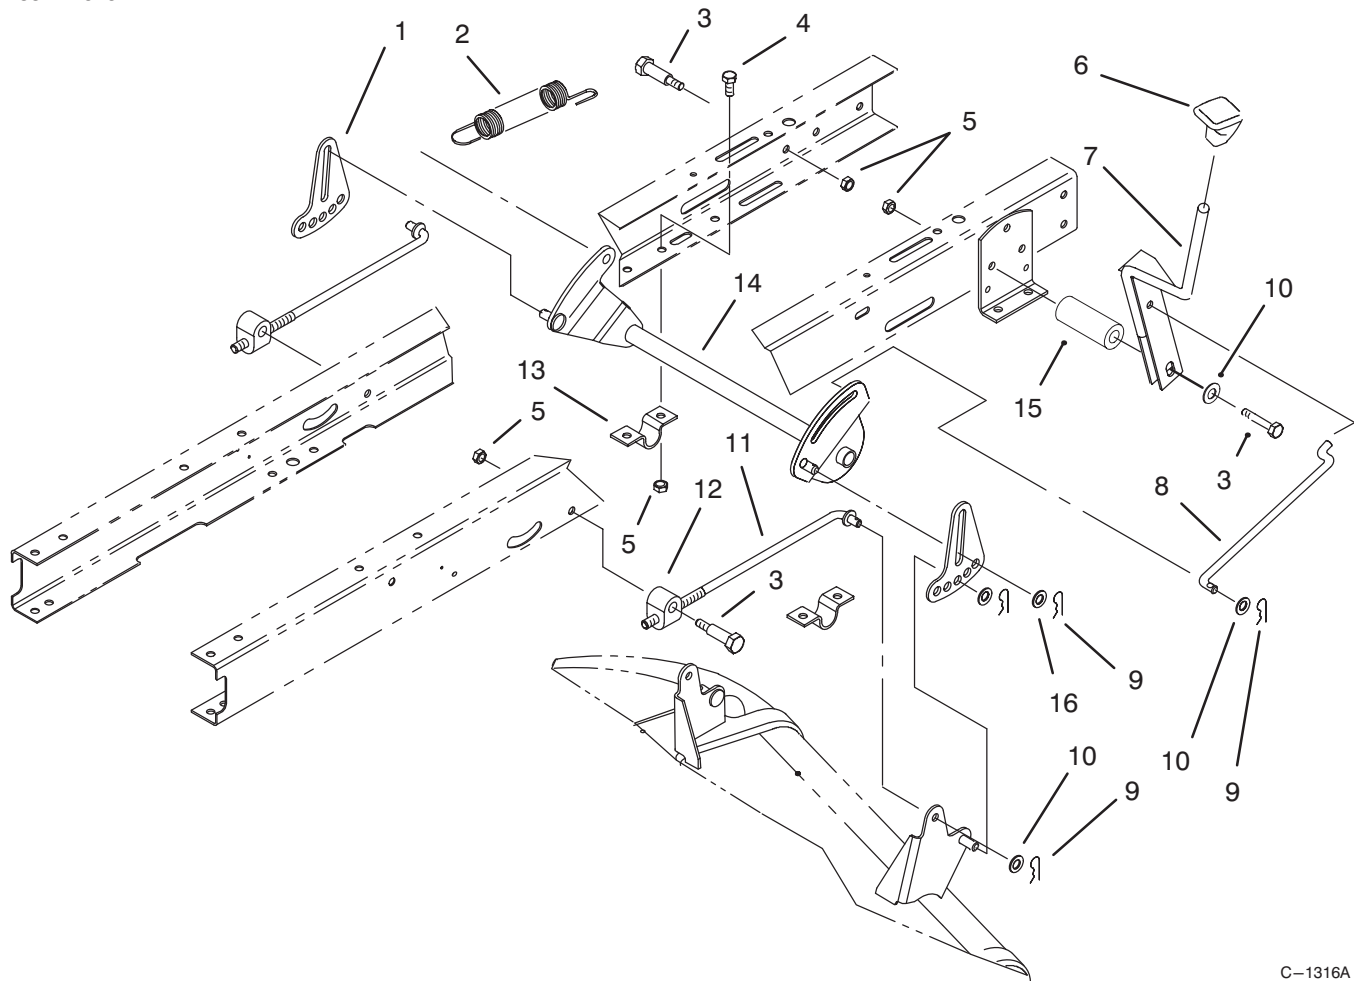


C-1316A

HEIGHT OF CUT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5570	Link - Adjusting H.O.C.	2
2	88-6460	Spring - Extension	1
3	7-0030	Bolt - Shoulder	4
4	322-3	Screw - Hex Hd. Cap	4
5	3296-29	Nut - Lock	8
6	62-1292	Knob - Shift	1
7	93-3822	Lever - H.O.C.	1
8	88-5900	Link - H.O.C.	1


Ref. No.	Part No.	Description	No. Used
9	3290-307	Pin - Hair Cotter	7
10	3256-24	Washer - Flat	4
11	88-5450	Rod - Hanger Rear	2
12	88-4230	Trunnion - H.O.C. Rear	2
13	88-4730	Clamp - H.O.C. Pivot	2
14	88-5110	Pivot - H.O.C.	1
15	65-7210	Spacer	1
16	80-6990	Washer - Hardened	4

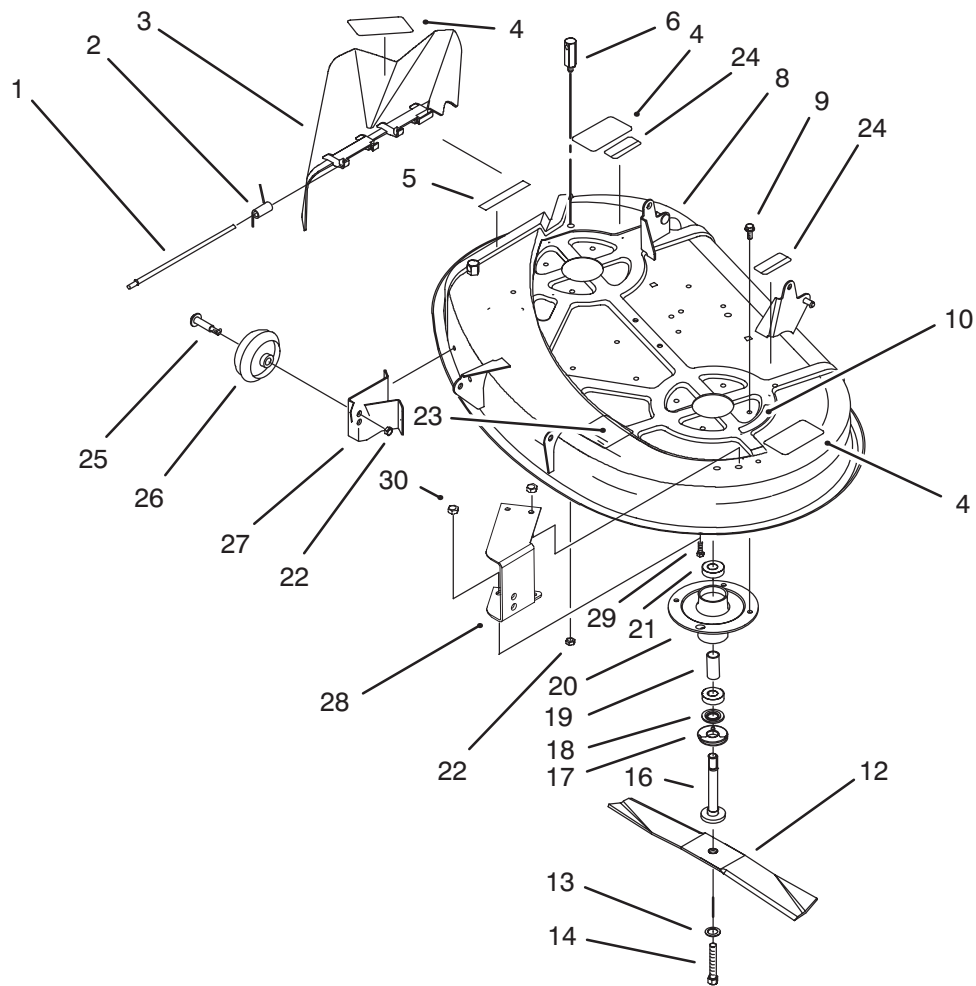 

C-2287A

HOUSING & SPINDLE ASSEMBLY (38" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	57-4380	Rod - Deflector Hinge	1	17	80-4360	Shield - Bearing	2
2	57-6950	Spring - Torsion	1	18	80-4380	Spacer - Hardened	2
3	93-7695	Deflector Ass'y (Incl. Ref. #4)	1	19	62-3661	Spacer - Bearing	2
4	93-7010	Decal - Danger	3	20	88-4510	Housing - Spindle	2
5	93-7009	Decal - Deflector Danger	1	21	38-7820	Bearing - Spindle	4
6	57-4360	Post - Rear Pivot	1	22	3296-39	Nut - Lock	3
8	93-3158-01	Deck - 38"	1	23	93-6679	Decal - Belt Guide	1
9	32144-41	Screw - Taptite	8	24	93-6674	Decal - Caution Spring	2
10	93-6677	Decal - Shield Danger	1	25	56-6591	Bolt - Shoulder	2
12	57-4700	Blade - Side Discharge	2	26	701756	Wheel - Deck	2
13	3290-465	Washer - Belleville	2	27	88-5740	Bracket - R.H.	1
14	26-0671	Bolt - Blade	2	28	93-3896	Bracket - L.H.	1
16	80-4341	Shaft - Spindle	2	29	322-3	Screw - Hex Hd. Cap	6
				30	3296-29	Nut - Lock	6

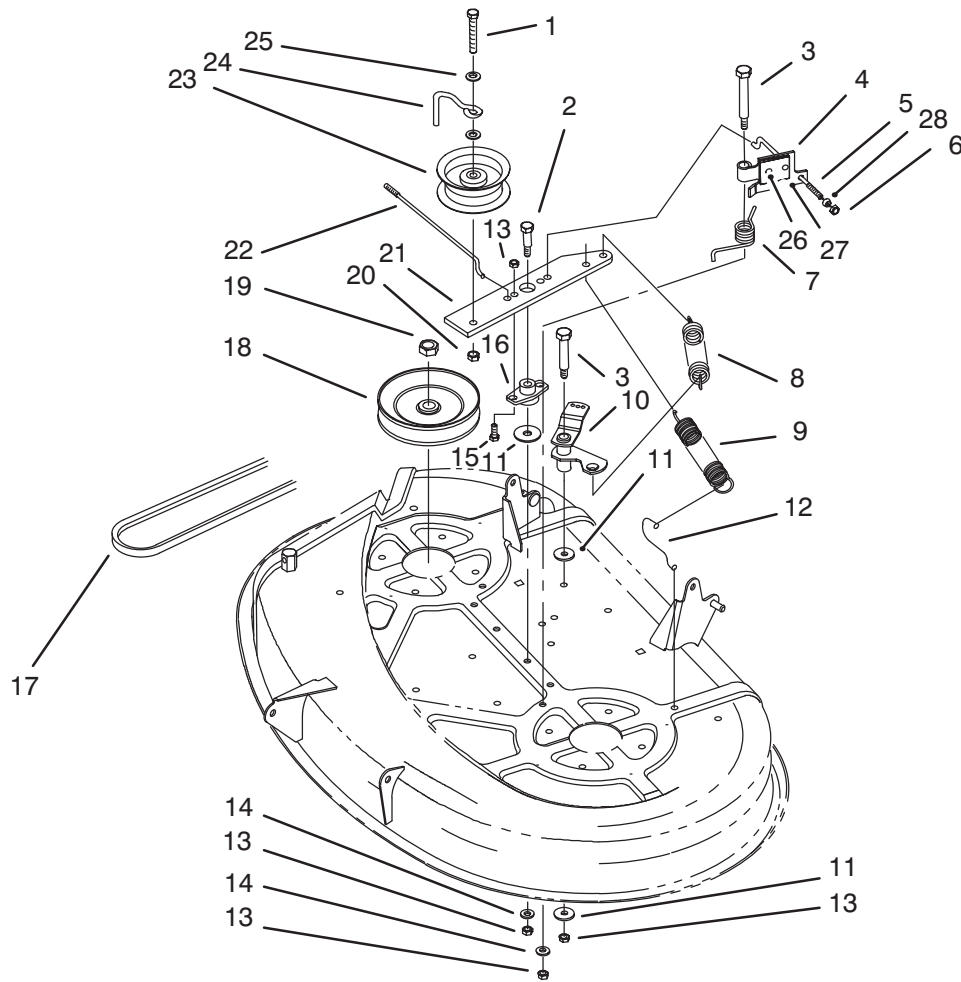 


C-1347

BRAKE ASSEMBLY (38" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used
1	323-12	Screw - Hex Hd. Cap	1
2	7-0030	Bolt - Shoulder	1
3	88-4590	Bolt - Shoulder	3
4	88-6100	Brake - Deck (Incl. Ref. #26 & 27)	2
5	88-5550	Rod - Deck Brake L.H.	1
6	3296-42	Nut - Lock	2
7	88-5910	Spring - Torsion	2
8	88-6130	Spring - Deck Engage	1
9	92-8934	Spring - Extension	1
10	88-5390	Bellcrank	1
11	3256-68	Washer - Fender	3
12	88-5970	Hook - Spring Return	1
13	3296-29	Nut - Lock	6
14	3256-23	Washer - Flat	3


Ref. No.	Part No.	Description	No. Used
15	322-5	Screw - Hex Hd. Cap	2
16	88-4980	Bushing - Idler Arm	1
17	88-6250	V-Belt - Deck	1
18	88-5330	Pulley - Deck	2
19	3219-6	Nut - Lock	2
20	3296-39	Nut - Lock	1
21	88-4870	Arm - Idler	1
22	88-5540	Rod - Deck Brake R.H.	1
23	88-5630	Pulley - Idler	1
24	88-5070	Guide - Idler Belt	1
25	3256-24	Washer - Flat	2
26	3290-282	Rivet - Pop	4
27	56-9830	Pad - Brake	2
28	67-0710	Ball - Swivel	2

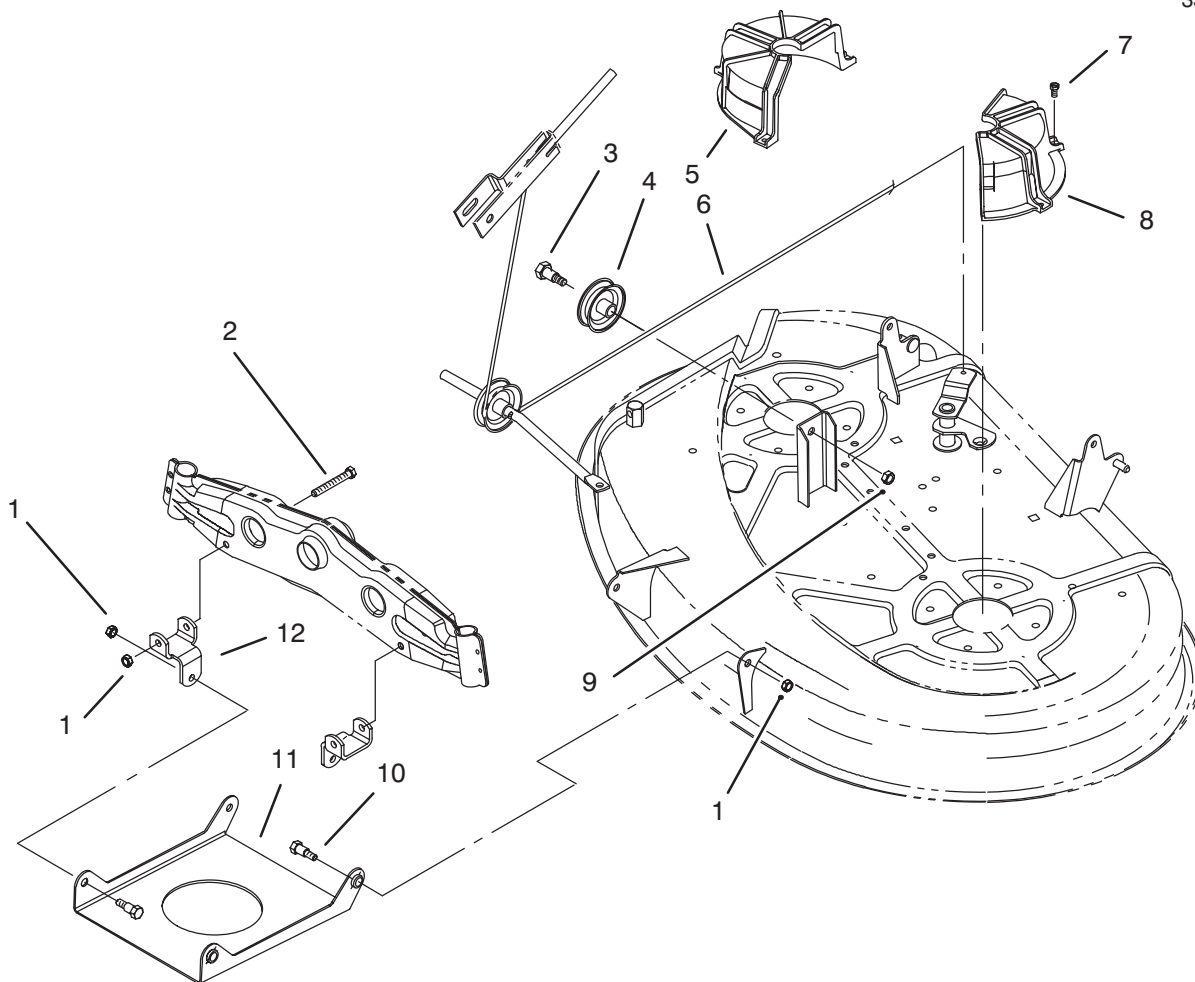 

C-1348

CABLE & COVER ASSEMBLY (38" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	6	8	88-4030	Guide - Deck Belt L.H.	1
2	322-12	Screw - Hex Hd. Cap	2	9	3296-39	Nut - Lock	1
3	23-0310	Bolt - Shoulder	1	10	28-0540	Bolt - Shoulder	4
4	88-4700	Pulley - Cable	1	11	88-4900	Pan - Front Deck Suspension	1
5	88-4020	Guide - Deck Belt R.H.	1	12	88-4640	Bracket - Deck Suspension	2
6	88-6410	Cable - Deck Engage	1				
7	32104-76	Screw - Thread Cutting	5				

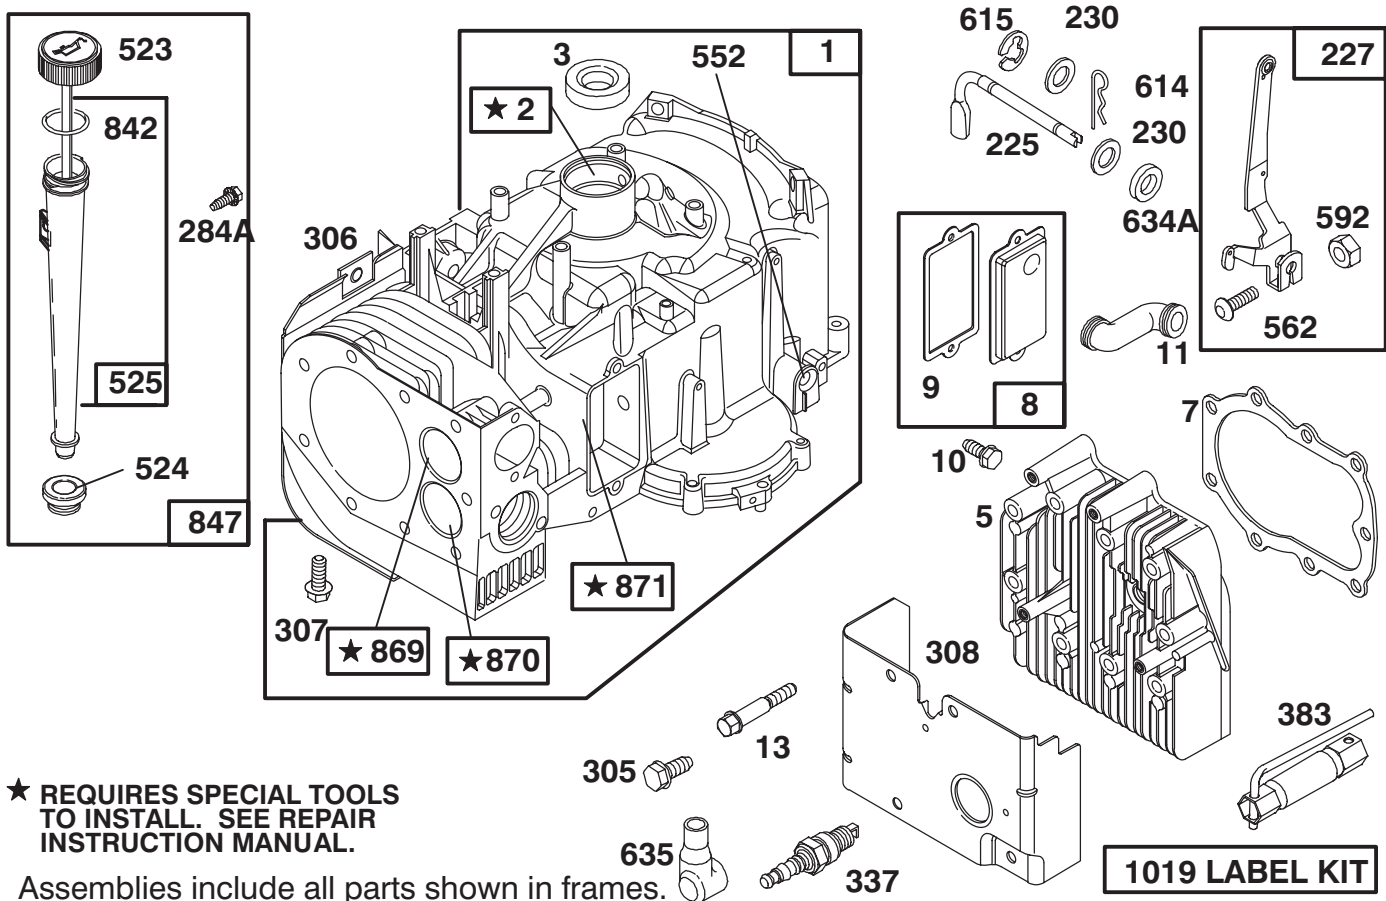 


ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	1
2	399265	Bearing—Cylinder	1
★3	391086	Seal—Oil	1
5	494240	Head—Cylinder	1
★7	271866	Gasket—Cylinder Head	1
8	495735	Breather Assembly	1
★9	27803	Gasket—Valve Cover	1
10	94621	Screw—Sem	1
11	280100	Tube—Breather	1
13	94622	Screw—Cylinder Head	1
225	231058	Crank—Governor	1
227	493935	Lever Assy.—Governor	1
230	94742	Washer—Gov. Crank	1
284A	94073	Screw—Hex Head	1
305	94786	Screw—Hex. Washer Hd.	1
306	224545	Shield—Cylinder	1
307	94623	Screw—Cyl. Shield Mtg.	1
308	491490	Cover—Cylinder Head	1
337	802592	Plug—Spark	1
383	89838	Wrench—Spark Plug	1

Ref. No.	Part No.	Description	No. Used
523	495230	Cap and Dipstick—Oil Filler	1
★524	68838	Seal—Filler Tube	1
525	496113	Tube—Oil Filler	1
552	231597	Bushing—Gov. Crank	1
562	92613	Bolt—Governor Lever	1
592	231082	Nut—Hex.	1
614	93306	Cotter—Hair Pin	1
615	93307	Retainer—E-Ring	1
★634A	491323	Seal—Governor	1
635	66538	Elbow—Spark Plug	1
★842	270920	Seal—Oil Filler Cap	1
847	496415	Fill Group—Oil	1
869	261463	Seat—Intake Valve (Std.)	1
870	213316	Seat—Exhaust Valve (Std.)	1
871	261961	Guide—Exhaust Valve	1
		Note: 231218 Guide—Intake Valve	1
1019	491255	Label Kit	1

 ★ Included in Gasket Set—Part No. 494241.

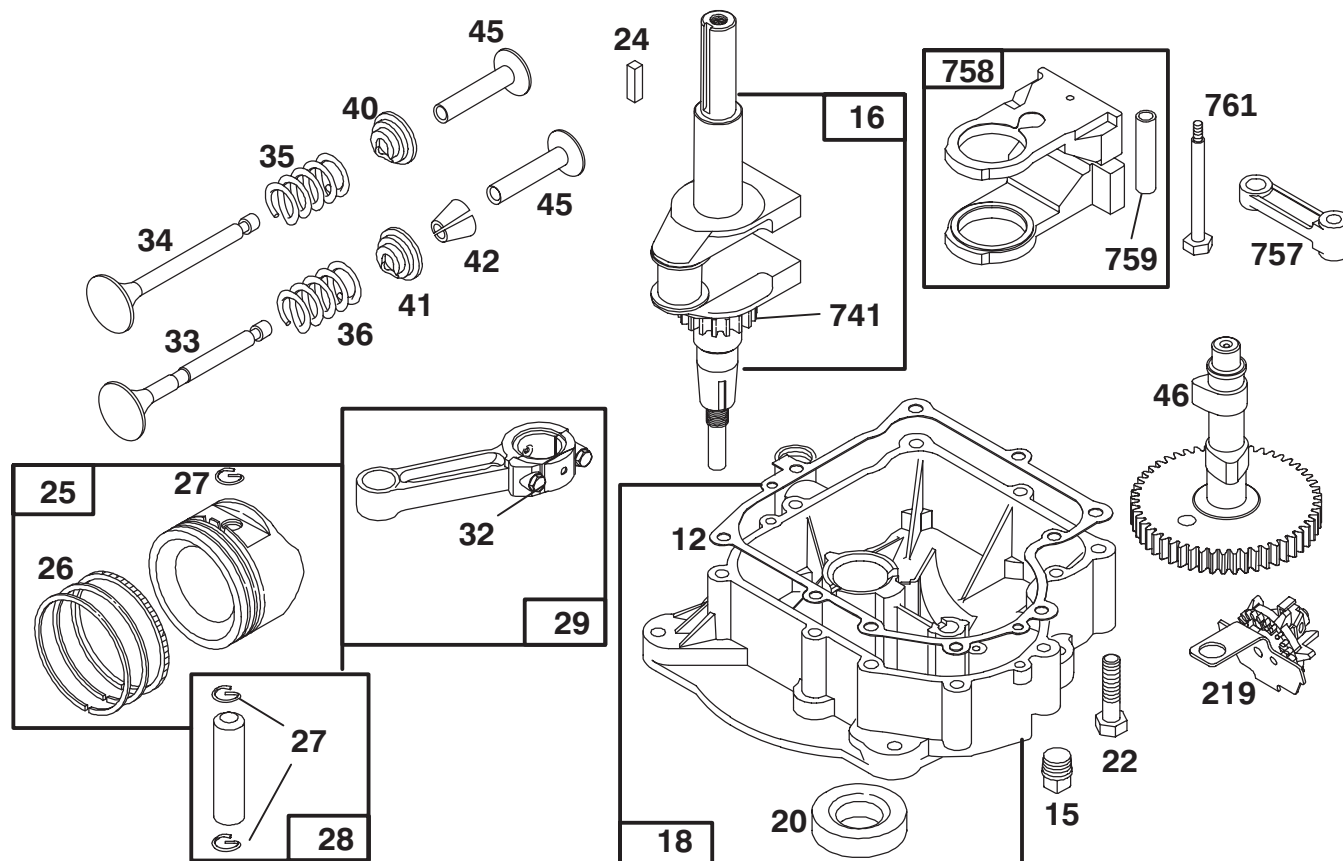


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket—Crkcse. (1/64" Thick)	1	27	260924	Lock—Piston Pin	1
★	271997	Gasket—Crkcse. (.005" Thick)	1	28	299691	Pin Assy.—Piston (Std.)	1
★	271996	Gasket—Crkcse. (.009" Thick)	1		391286	Pin Assy.—Piston (.005" O.S.)	1
15	94239	Plug—Oil Drain	1	29	490348	Rod Assy.—Connecting	1
16	495162	Crankshaft	1		490469	Rod—Connecting (020" U.S. Crankpin Bore)	1
	94196	Key—Timing Gear	1	32	94671	Screw—Connecting Rod	1
18	494238	Base—Engine	1	33	262246	Valve—Exhaust	1
★20	291675	Seal—Oil	1	34	262247	Valve—Intake	1
22	94624	Screw—Base Mtg. Sem	1	35	65906	Spring—Intake Valve	1
24	222698	Key—Flywheel	1	36	26828	Spring—Exhaust Valve	1
25	394661	Piston Assy. (Std.)	1	40	221596	Retainer—Intake Valve	1
	394662	Piston Assy. (.010" O.S.)	1	41	292260	Rotacoil—Exhaust Valve	1
	394663	Piston Assy. (.020" O.S.)	1	42	93630	Retainer—Ex. Valve Rotacoil	1
	394664	Piston Assy. (.030" O.S.)	1	45	262248	Tappet—Valve	1
26	391780	Ring Set—Piston (Std.)	1	46	212897	Gear—Cam	1
	391781	Ring Set—Piston (.010" O.S.)	1	219	490815	Oil Slinger, Gov. Gear Assy.	1
	391782	Ring Set—Piston (.020" O.S.)	1	741	262932	Gear—Timing	1
	391783	Ring Set—Piston (.030" O.S.)	1	757	212359	Link—Counterweight	1
				758	399891	Counterweight Assy.	1
				759	298909	Pin—Counterweight	1
				761	93875	Screw—Counterweight	1

 ★ Included in Gasket Set—Part No. 494241.

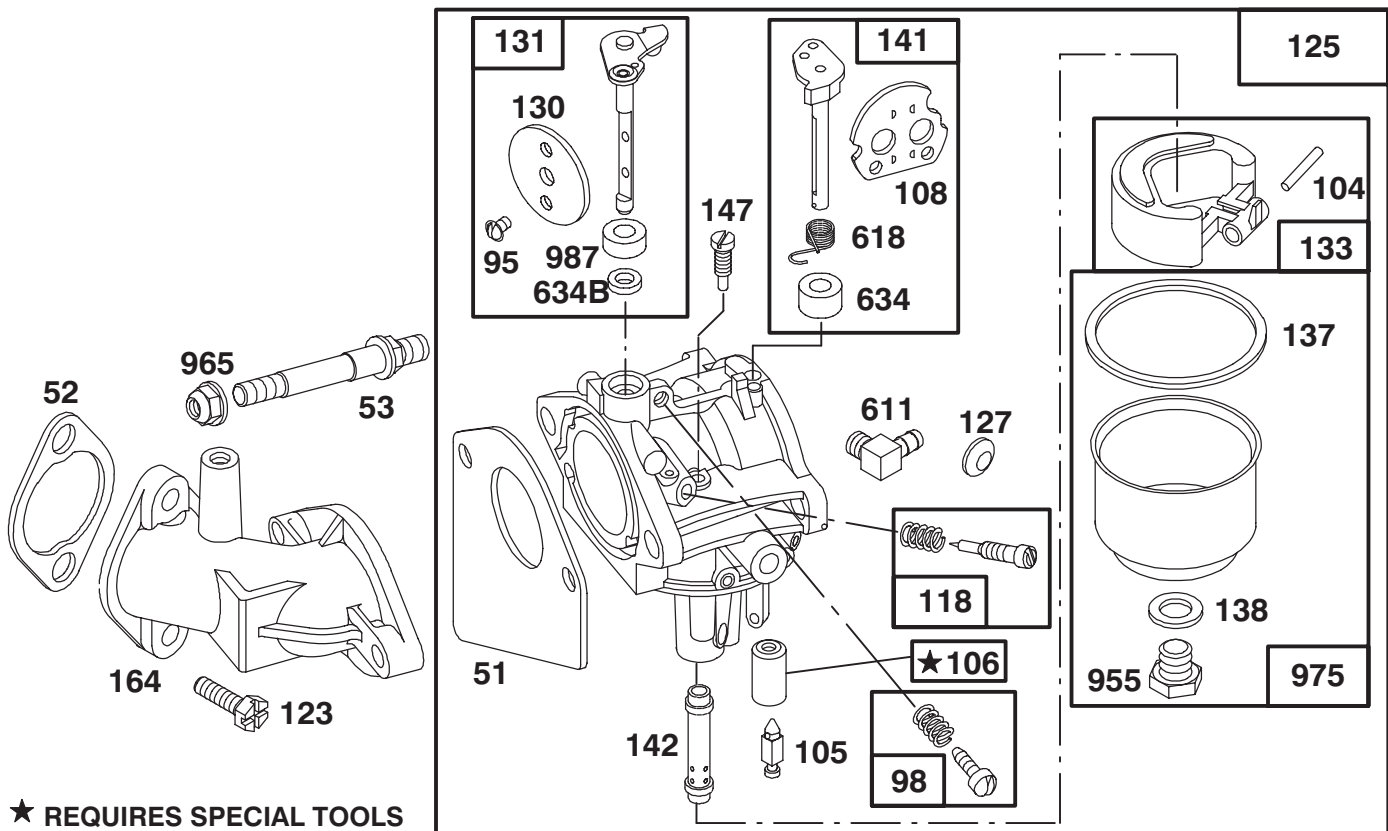

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01


Ref. No.	Part No.	Description	No. Used
●51	272465	Gasket—Carburetor (Carb. to Elbow)	1
★52	272554	Gasket—Carburetor (Elbow to Cylinder)	1
53	94637	Stud—Carb. Mtg.	1
●95	94098	Screw—Throttle	1
98	495800	Screw—Idle Speed	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224540	Valve—Choke	1
118	494383	Valve—Needle	1
121	495799	Carburetor Overhaul Kit	1
123	94616	Screw—Elbow Mtg.	1
125	495706	Carburetor Assembly	1
●127		Plug—Welch (Sold in Kit Only).	1
130	224539	Valve—Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft and Lever— Throttle	1
133	494381	Float—Carburetor	1
●◆137	281165	Gasket—Float Bowl	1
●◆138	281164	Washer—Float Bowl Screw	1
141	495931	Shaft and Lever—Choke	1
●142	494537	Nozzle—Carburetor	1
●147	231794	Pilot—Jet	1
164	213819	Carburetor—Elbow	1
611	494451	Fuel Inlet Tube	1
618	262803	Spring—Choke Return	1
●634	281168	Seal—Choke Shaft	1
●634B	398970	Washer—Throttle Shaft	1
955	94642	Screw—Fuel Bowl	1
965	94010	Locknut—Air Cleaner Mtg.	1
975	494378	Bowl Assy.—Carburetor	1
977	494385	Carburetor Gasket Kit	1
●987	281166	Seal—Throttle Shaft	1

◆ Included in Carburetor Gasket Set—Part No.494385.

● Included in Carburetor Overhaul Kit—Part No. 495799.

 ★ Included in Gasket Set—Part No. 494241.

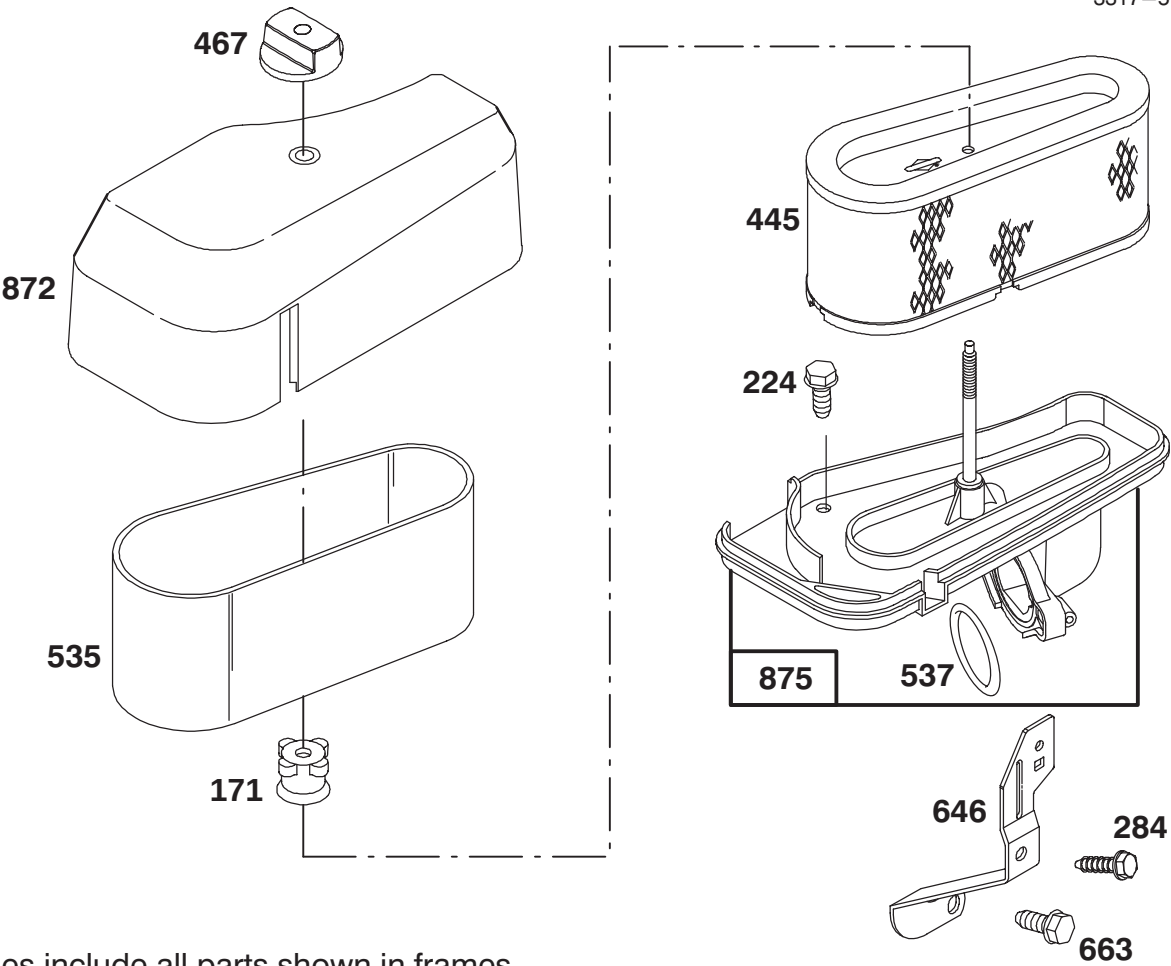


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut—Air Cleaner Mtg.	1
224	94513	Screw—Air Cleaner Sem	1
284	94704	Screw Hex. Head	1
445	493909	Cartridge—Air Cleaner	1
467	493903	Knob—Air Cleaner	1
535	272403	Element—Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
★537	281106	O-Ring—Air Cleaner	1
646	224546	Brace—Air Cleaner	1
663	94620	Screw—Hex. Hd.	1
872	281361	Cover—Air Cleaner	1
875	494237	Body—Air Cleaner	1

 ★ Included in Gasket Set—Part No. 494241.

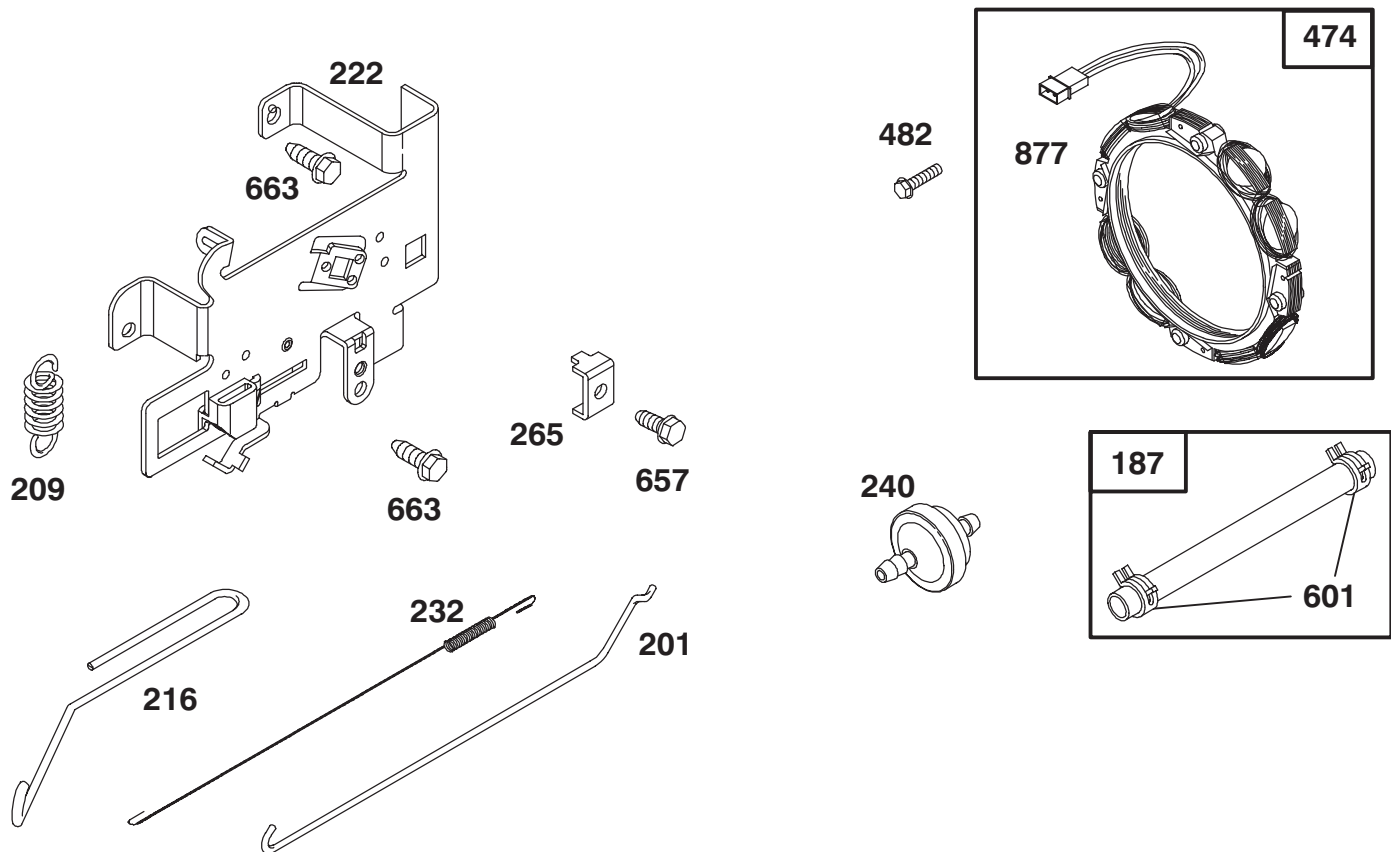


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used
187	393815	Line—Fuel (11" Long, Cut to Suit)	1
201	262767	Link—Governor	1
209	260871	Spring—Governor	1
216	262766	Link—Choke	1
222	495611	Plate—Governor Control	1
232	262785	Spring—Governor Link	1
240	394358	Filter—Fuel	1
265	221535	Clamp—Casing	1

Ref. No.	Part No.	Description	No. Used
474	393474	Stator—Alternator (Dual Circuit)	1
482	93621	Screw—Sem	1
601	93053	Clamp—Fuel Pipe	1
657	93496	Screw—Sem	1
663	94620	Screw—Hex. Hd.	1
877	393456	Diode and Connector Assy (Dual Circuit)	1

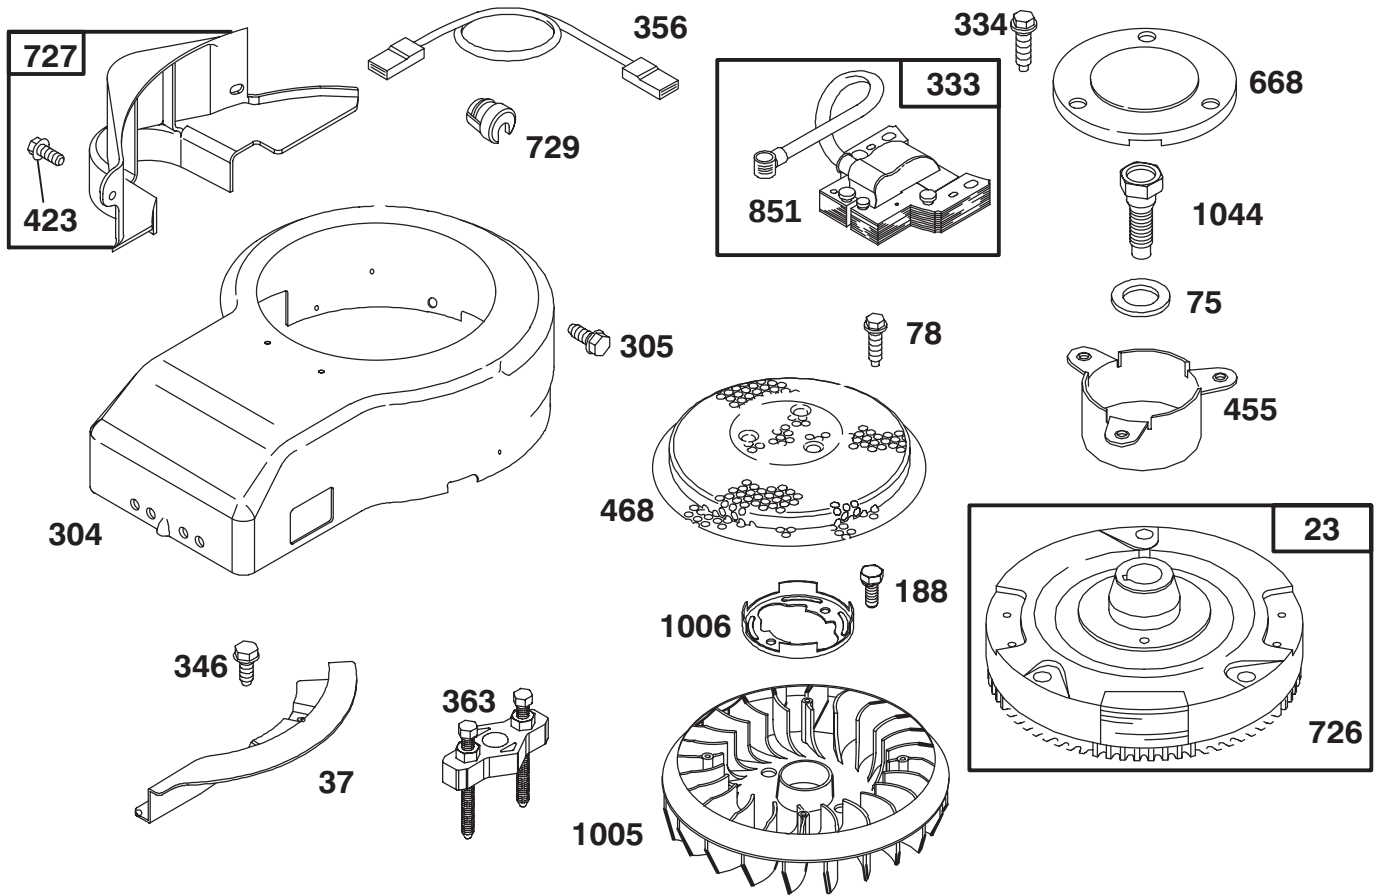 

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel and Ring Gear Assy.—Magneto		363	19203	Puller—Flywheel	
37	224502	Guard—Flywheel		423	94073	Screw—Sem	
75	224061	Washer—Spring		455	222561	Cup—Screen Mounting	
78	93805	Screw—Sem		468	224948	Screen—Flush Rotating	
188	93535	Screw—Sem (3/4" Long)		668	280848	Spacer	
304	496431	Housing—Blower		726	392134	Gear—Ring (Includes Mtg Hardware)	
305	94619	Screw—Blower Housing Mounting		727	490324	Cover—Starter	
333	492341	Armature—Magneto		729	281159	Clip—Lead Wire	
334	93381	Screw—Armature Mtg.		851	221798	Terminal—Ignition Cable	
346	93705	Screw—Hex. Head		1005	281355	Fan—Flywheel	
356	494328	Wire Assembly		1006	224413	Retainer—Fan	
				1044	94673	Screw—Hex. Head	

729A



 728



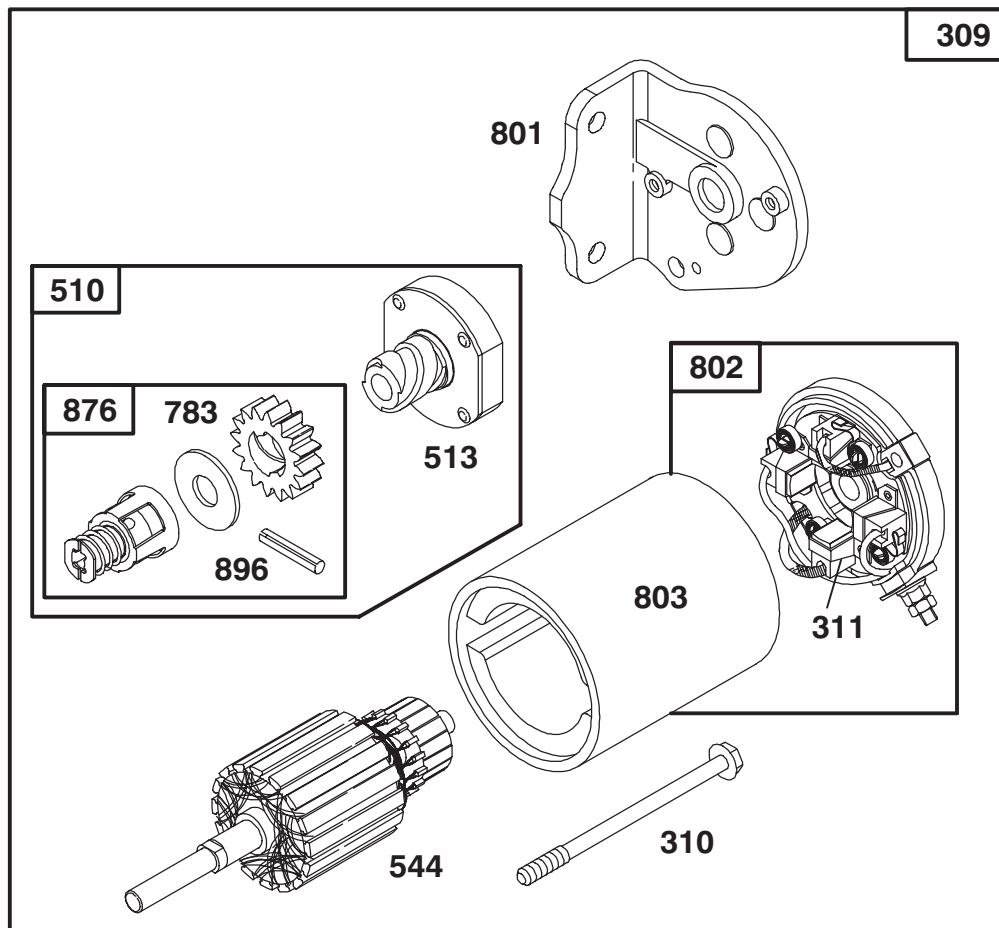


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor and Drive Assy.	1
310	94003	Bolt Hex. Hd.	1
311	395538	Brush Assy.	1
510	495878	Starter Drive Assy.	1
513	398003	Clutch Assy.	1
544	390837	Armature Assy.	1
728	94627	Screw-Hex. Hd.	1
729A	224723	Retainer-Wire	1

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	394856	Drive End Cap Assy.	1
802	395537	End Cap Assy. Commutator	1
803	398159	Housing Assy.	1
876	495877	Retainer And Pin	1
896	94288	Pin-Roll	1

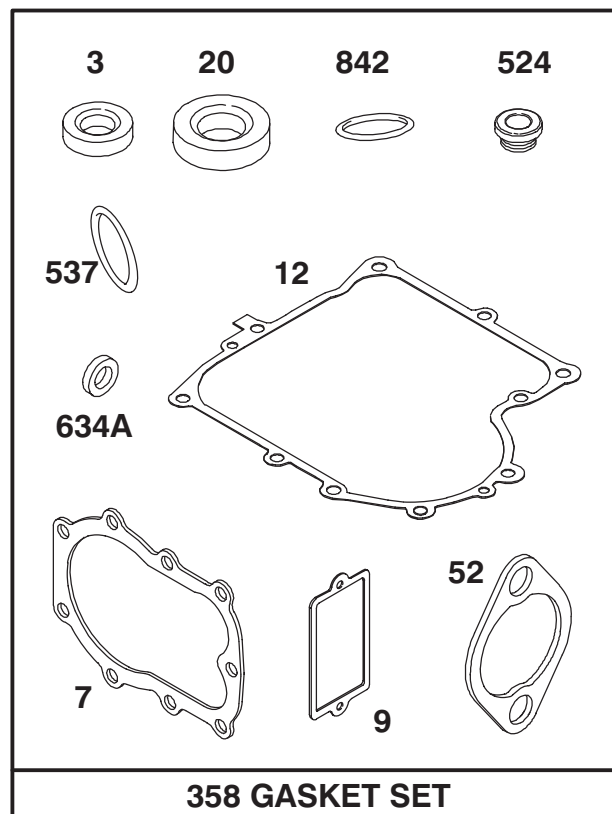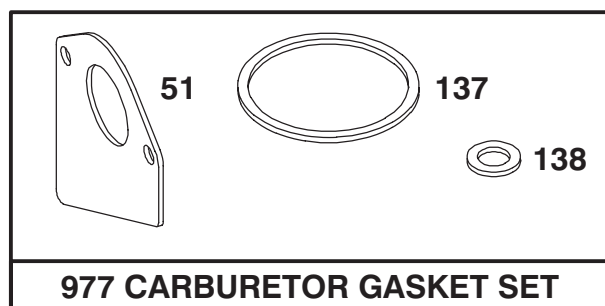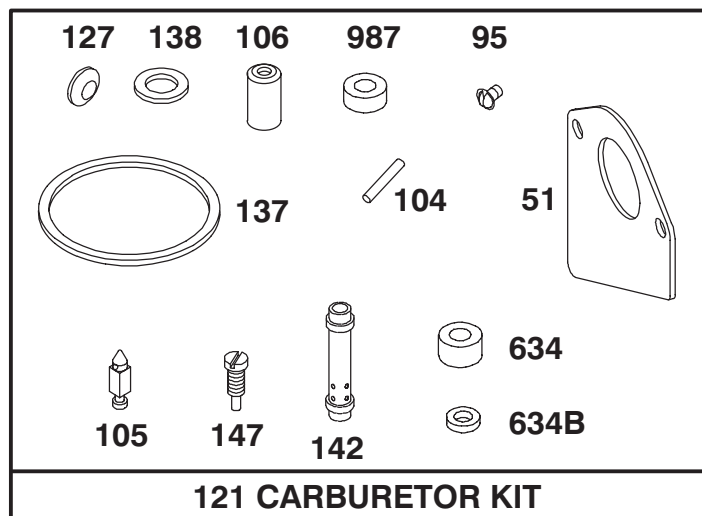   

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01


Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	1
★7	271866	Gasket—Cylinder Head	1
★9	27803	Gasket—Valve Cover	1
★12	271916	Gasket—Crankcase Cover (1/64" Thick)	1
★	271997	Gasket—Crankcase Cover (.005" Thick)	1
★	271996	Gasket—Crankcase Cover (.009" Thick)	1
★20	291675	Seal—Oil	1
◆◆51	272465	Gasket—Carburetor (Carb. to Elbow)	1
★52	272554	Gasket—Carburetor (Elbow to Cylinder)	1
●95	94098	Screw—Throttle	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1

★ Included in Gasket Set—Part No. 494241.

● Included in Carburetor Kit—Part No. 495799.

Ref. No.	Part No.	Description	No. Used
121	495799	Carburetor Kit	1
●127		Plug—Welch (Sold in Kit Only).	1
◆◆137	281165	Gasket—Float Bowl	1
◆◆138	281164	Washer—Float Bowl Screw	1
●142	494537	Nozzle—Carburetor	1
●147	231794	Pilot—Jet	1
358	494241	Gasket Set	1
★524	68838	Seal—Filler Tube	1
★537	281106	O-Ring—Air Cleaner	1
●634	281168	Seal—Choke Shaft	1
★634A	491323	Seal—Governor	1
●634B	394970	Washer—Throttle Shaft	1
★842	270920	Seal—Oil Filler Cap	1
977	494358	Carburetor Gasket Set	1
●987	281166	Seal—Throttle Shaft	1

 
◆ Included in Carburetor Gasket Set—Part No. 494385.

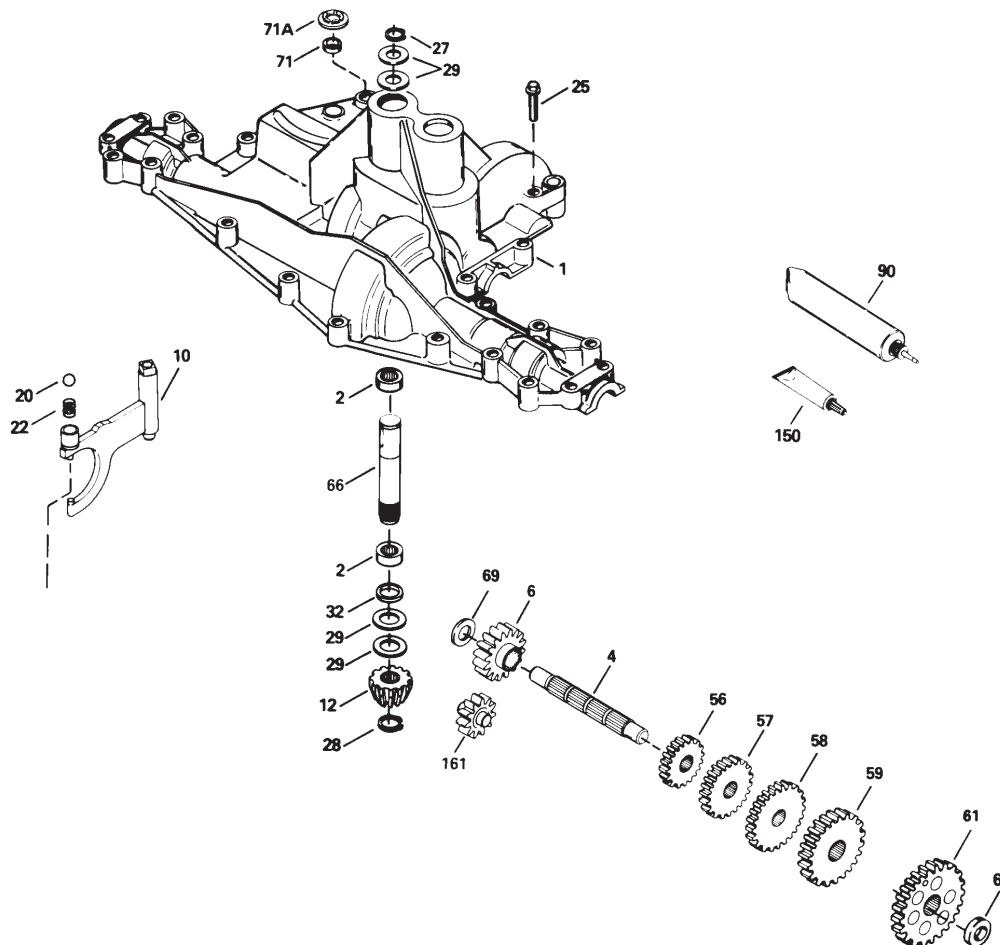

PEERLESS TRANSAXLE MODEL NO. 915-020

Ref. No.	Part No.	Description	No. Used
1	772128	Transaxle Cover	1
4	776300	Countershaft	1
6	778281	Spur Gear (16 Teeth)	1
10	784370	Shift Rod & Fork	1
12	778262	Bevel Pinion (14 Teeth)	1
20	792139	Ball (3/8" dia.)	1
22	792142	Spring	1
25	792073	Screw	17
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	4
32	792001	O-Ring	1
56	778151	Spur Gear (15 Teeth)	1
57	778249	Spur Gear (23 Teeth)	1

Ref. No.	Part No.	Description	No. Used
58	778314	Spur Gear (21 Teeth)	1
59	778129A	Spur Gear (30 Teeth)	1
61	778265	Spur Gear (34 Teeth)	1
65	780162	Washer	1
66	776299	Input Shaft (3.522" lg.)	1
69	780161	Thrust Washer	1
71	788069	Square Cut Ring	1
71A	792145	Pushnut	1
90	788067B	Grease (32 oz. btl. Bentonite grease)	1
150	510334	Gasket Eliminator (Loctite #515)	1
161	776302	Reverse Idler Assembly	1

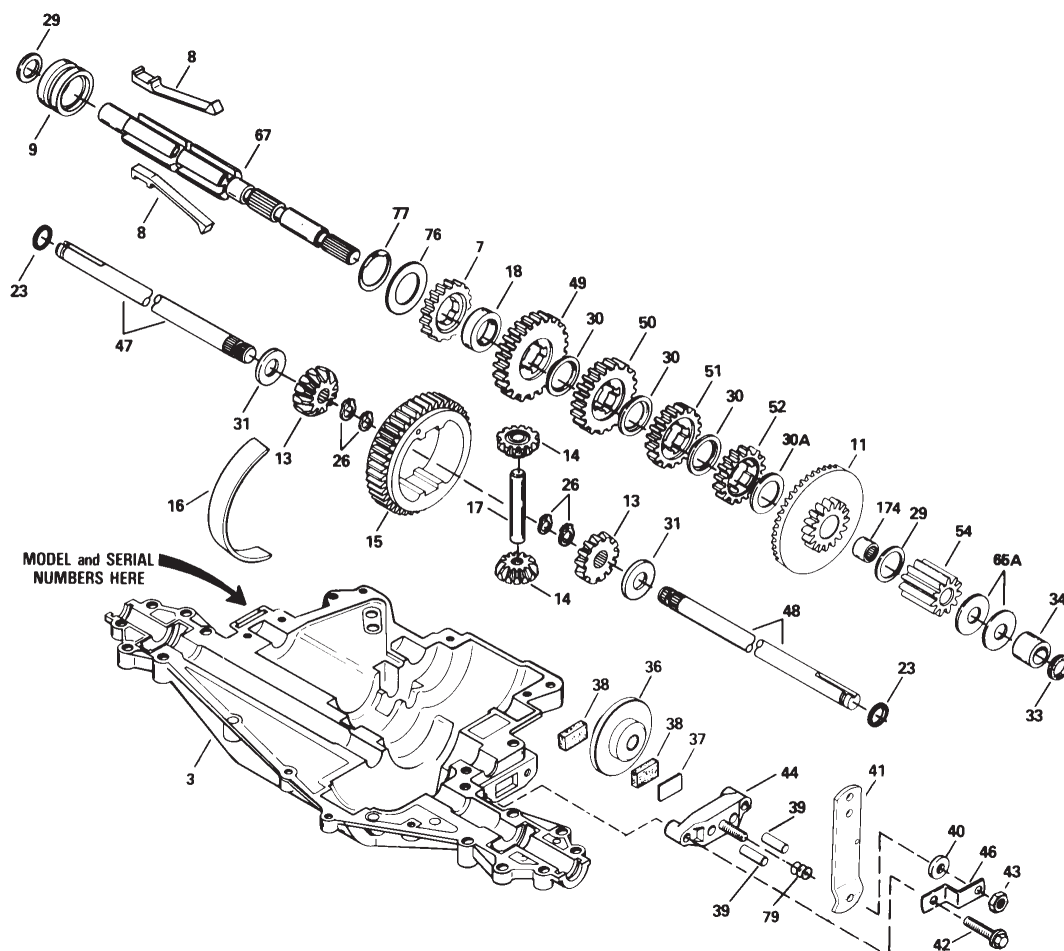 

PEERLESS TRANSAXLE MODEL NO. 915—020 (Cont.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
3	770110	Transaxle Case	1	38	790006	Brake Pad	2
7	778122A	Spur Gear (22 Teeth)	1	39	786026	Dowel Pin	2
8	792133	Shift Key	4	40	792076A	Washer	1
9	784352	Shift Collar	1	41	790045	Brake Lever	1
11	778261	Bevel Gear & Bearing (44/16 Teeth) (Incl. Ref. #174)	1	42	792073	Screw	2
13	778221	Bevel Gear (16 Teeth)	2	43	792075	Locknut	1
14	778068	Differential Pinion	2	44	790025	Brake Pad Holder	1
15	778260	Ring Gear	1	46	786086	Brake Lever Bracket	1
16	786150	Bearing Strip	1	47	774869	Axle (16—13/16" lg.)	1
17	78139	Drive Pin	1	48	774688	Axle (11—5/8" lg.) (Incl. Ref. #26)	1
18	786147	Neutral Spacer	1	49	778125	Spur Gear (35 Teeth)	1
23	788061	Seal Ring	2	50	778250	Spur Gear (17 Teeth)	1
26	792125	Retaining Ring (pkg. of 2)	4	51	778313	Spur Gear (19 Teeth)	1
29	780072	Washer	2	52	778121A	Spur Gear (20 Teeth)	1
30	780108	Washer	3	54	778263	Spur Gear (11 Teeth)	1
30A	789145	Washer	1	65A	780160	Washer	2
31	780001	Washer	2	67	776352	Shifter & Brake Shaft	1
33	788076	O—Ring	1	76	780090	Washer	1
34	780159	Bushing	1	77	788078A	Inverted Retaining Ring (pkg. of 2)	1
36	790071	Brake Disk	1	79	792144	Spring	1
37	790007	Brake Pad Plate	1	174	780085	Needle Bearing	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
111419	Washer – Fender	4 19 1	84-5610	Guide – Cable	8 16 2
114621	Decal – Noise	3 18 1	88-0890	Grip – Brake Rod	4 11 1
116397	Relay	9 16 1	88-3840-01	Body – Rear	1 5 1
701178	Cap – Protector	1 6 2	88-3850	Wheel – Steering	5 3 1
701756	Wheel – Deck	13 26 2	88-3870	Cover – Steering Wheel	5 2 1
702366	Clip – Wire Retainer	9 9 3	88-3880	Tank – Gas	6 6 1
3-6498	Washer – Thrust	5 14 2	88-3930	Shield – Heat	2 14 1
3-6498	Washer – Thrust	4 32 2	88-3940	Panel – Rear Hitch	1 10 1
3-7501	Washer – Curved	5 11 4	88-3950	Seat	3 1 1
5-4015	Bolt – Shoulder	8 2 1	88-3960	Lens – Headlights	9 23 1
5-4460	Washer – Fender	3 3 1	88-3970	Reflector & Lamp	9 25 1
5-4460	Washer – Fender	4 24 1	88-3980	Cap – Gas	6 3 1
5-4460	Washer – Flat	7 9 4	88-4020	Guide – Deck Belt R.H.	15 5 1
7-0030	Bolt – Shoulder	14 2 1	88-4030	Guide – Deck Belt L.H.	15 8 1
7-0030	Bolt – Shoulder	12 3 4	88-4040	Box – Battery	9 11 1
7-0036	Key – Square	11 10 2	88-4050	Duct – Hood Air	2 17 1
7-5461	Washer – Hardened	8 10 1	88-4070	Tire – 13	4 4 2
23-0310	Bolt – Shoulder	15 3 1	88-4090	Tire	11 8 2
26-0671	Bolt – Blade	13 14 2	88-4140	Nut – Wedge	2 23 2
26-0671	Bolt – Blade	6 17 1	88-4160	Clamp – Pivot Rod	2 22 2
26-6700	Spring – Brake Return	11 17 1	88-4170	Rod – Tower Pivot	2 24 1
27-0220	Screw – Plastite	6 5 4	88-4180	Button – Release	5 6 1
27-0220	Screw – Plastite	5 17 2	88-4190	Bushing – Sliding	5 5 1
27-8890	Spring – Pedal Return	7 6 1	88-4210	Bushing – Stationary	5 19 1
28-0540	Bolt – Shoulder	15 10 4	88-4220	Latch – Hood	2 16 1
28-0540	Bolt – Shoulder	2 11 2	88-4230	Trunnion – H.O.C. Rear	12 12 2
28-2480	Washer	4 3 2	88-4280	Wheel & Tire Assembly	4 * 2
28-2480	Washer	11 11 2	88-4300	Wheel & Tire Assembly	11 * 2
28-8080	Boot – Battery Terminal	9 5 1	88-4320	Harness – Wire	9 24 1
37-8770	Bolt – Shoulder	7 2 1	88-4340	Control – Throttle	6 4 1
37-8770	Bolt – Shoulder	3 12 4	88-4350	Cable – Throttle	6 2 1
38-1420	Switch – Seat	9 8 1	88-4370	Rim – Front Wheel	4 5 2
38-7820	Bearing – Spindle	13 21 4	88-4390	Rim	11 9 2
44-8110	Cable – Battery Negative	9 7 1	88-4400	Bearing – Wheel	4 35 4
46-8090	Screw – Plastite	2 15 8	88-4410	Gasket – Muffler	6 22 1
46-8091	Screw – Plastite	2 8 2	88-4460	Axle – Front	4 7 1
47-2963	Line – Fuel	6 10 1	88-4510	Housing – Spindle	13 20 2
52-2891	Bushing – Steering Link	4 20 2	88-4590	Bolt – Shoulder	14 3 3
55-9321	Cable – Shotgo	8 5 1	88-4620	Bracket – Idler Pivot	1 12 1
56-2540	Vent – Tube	9 2 1	88-4630	Plate – Engine Mount	1 3 1
56-6591	Bolt – Shoulder	13 25 2	88-4640	Bracket – Deck	15 12 2
56-9830	Pad – Brake	14 27 2	88-4650	Rail – R.H. Frame	1 4 1
57-4360	Post – Rear Pivot	13 6 1	88-4660	Rail – L.H. Frame	1 13 1
57-4380	Rod – Deflector Hinge	13 1 1	88-4670	Bushing – Eccentric	4 17 1
57-4700	Blade – Side Discharge	13 12 2	88-4700	Pulley – Cable	15 4 1
57-6950	Spring – Torsion	13 2 1	88-4700	Pulley – Cable	7 19 1
61-9780	Cap – Hub	4 1 2	88-4730	Clamp – H.O.C. Pivot	12 13 2
61-9780	Cap – Hub	11 13 2	88-4810	Clamp – Shift Pivot	8 4 2
62-1292	Knob – Engage Lever	2 3 1	88-4810	Clamp – Shift Pivot	7 22 1
62-1292	Knob – Shift	12 6 1	88-4820	Bracket – Seat Hinge	3 13 2
62-1292	Knob – Shift	8 15 1	88-4830	Link – Drag	4 29 1
62-3661	Spacer – Bearing	13 19 2	88-4840	Pulley – Transmission	11 3 1
63-8360	Key – Ignition	9 12 1	88-4850	Pulley – Engine	6 14 1
65-2920	Pad – Pedal	7 25 1	88-4870	Arm – Idler	14 21 1
65-7210	Spacer	12 15 1	88-4880	Spacer – Microswitch	9 21 1
67-0710	Ball – Swivel	14 28 2	88-4890	Spring – Leaf	5 13 1
76-3820	Anchor – Belt Guide	6 13 2	88-4900	Pan – Front Deck	15 11 1
80-2240	Plate – Grille Panel	9 30 1	88-4910	Support – Seat	3 2 1
80-2600	Battery – 7 Plate	9 6 1	88-4960	Shield – Exhaust Pipe	1 14 1
80-4341	Shaft – Spindle	13 16 2	88-4980	Bushing – Idler Arm	14 16 1
80-4360	Shield – Bearing	13 17 2	88-5000	Pedal – Clutch/Brake	7 24 1
80-4380	Spacer – Hardened	13 18 2	88-5010	Spacer – Steering Rack	4 26 1
80-6990	Washer – Hardened	12 16 4	88-5020	Gate – Shift	3 15 1
84-5610	Guide – Cable	7 12 2	88-5030	Gate – H.O.C.	3 8 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3317-515

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
88-5070	Guide - Idler Belt	14 24 1	92-5748	Decal - Air Duct	2 27 1
88-5110	Pivot - H.O.C.	12 14 1	92-5782	Patch - Heat Tape	2 26 1
88-5120	Support - Front Axle	1 17 1	92-5794	Lever - Shift Pivot	8 21 1
88-5130	Bracket - Steering Rack	4 14 1	92-5796	Pivot - Shift	8 6 1
88-5150	Bushing - Flange	5 16 1	92-7889	Spindle - R.H.	4 6 1
88-5180	Bracket - Backup	5 12 1	92-7890	Spindle - L.H.	4 31 1
88-5190	Lever - Deck Engage	2 1 1	92-8650	Hood	2 18 1
88-5200	Rack - Steering	4 18 1	92-8757	Decal - Engine 13 H.P.)	6 9 1
88-5220	Mat - R.H. Foot	3 16 1	92-8875	Switch - Rocker	9 27 1
88-5240	Mat - L.H. Foot	3 9 1	92-8934	Spring - Extension	14 9 1
88-5260	Bracket - Transaxle Mt.	1 11 2	92-9674	Knob - Studded	3 4 1
88-5270	Rod - Clutch/Brake	7 1 1	92-9845	Solenoid	9 17 1
88-5300	Lever - Shift	8 1 1	93-0303	Tower - Steering	2 2 1
88-5330	Pulley - Deck	14 18 2	93-0539	Screw - Phillips Hd.	9 19 4
88-5340	Lever - Trans. Shift	8 9 1	93-3158-01	Deck - 38	13 8 1
88-5350	Strap - Torque	11 16 2	93-3240	Seal - Plunger	9 28 2
88-5380	Rod - Steering Tie	4 8 1	93-3810	Harness - Wire	9 1 1
88-5390	Bellcrank	14 10 1	93-3822	Lever - H.O.C.	12 7 1
88-5450	Rod - Hanger Rear	12 11 2	93-3896	Bracket - L.H.	13 28 1
88-5460	Guide - Trans. Belt	7 10 2	93-4144	Decal - Rear Body	1 18 1
88-5470	Spacer - Front Axle	4 34 2	93-4145	Decal - Tower 1338XL	2 31 2
88-5500	Rod - Pedal Pivot	7 18 1	93-6673	Decal - Deck Engage	2 30 1
88-5510	Rod - Parking Brake	4 9 1	93-6674	Decal - Caution Spring	13 24 2
88-5520	Bracket - Parking Brake	4 10 1	93-6675	Decal - Instruction	1 19 1
88-5530	Rod - Shift Tie	8 7 1	93-6677	Decal - Shield Danger	13 10 1
88-5540	Rod - Deck Brake R.H.	14 22 1	93-6679	Decal - Belt Guide	13 23 1
88-5550	Rod - Deck Brake L.H.	14 5 1	93-7009	Decal - Deflector Danger	13 5 1
88-5560	Guide - Idler Belt	7 3 1	93-7010	Decal - Danger	13 4 3
88-5570	Link - Adjusting H.O.C.	12 1 2	93-7656	Cover - Shift Gate	3 14 1
88-5630	Pulley - Idler	14 23 1	93-7657	Cover - H.O.C.	3 6 1
88-5680	Pulley - Flat Idler	7 4 1	93-7695	Deflector Ass'y	13 3 1
88-5740	Bracket - R.H.	13 27 1	218-461	Nut - Hex	9 13 1
88-5800	Bushing -	4 33 4	232-27	Valve Stem w/Cap	11 18 2
88-5830	Guide - Belt L.H.	6 12 1	232-27	Valve Stem w/Cap	4 36 2
88-5840	Guide - Belt R.H.	6 21 1	232-39	Inner Tube	4 * 2
88-5900	Link - H.O.C.	12 8 1	232-41	Inner Tube (Optional)	11 * 2
88-5910	Spring - Torsion	14 7 2	2412-98	Clamp - Hose	6 11 2
88-5920	Rod - Gas Tank	6 7 1	302-5	Fitting - Grease	4 37 2
88-5930	Keeper - Cable	8 17 1	302-11	Fitting - Grease	11 7 2
88-5970	Hook - Spring Return	14 12 1	302-26	Fitting - Grease	4 16 1
88-6040	Bracket - Hood Pivot R.H.	2 19 1	321-2	Screw - Hex Hd. Cap	2 10 4
88-6050	Bracket - Hood Pivot L.H.	2 12 1	321-4	Screw - Hex Hd. Cap	9 3 2
88-6070	Arm - Idler	7 16 1	321-4	Screw - Hex Hd. Cap	5 8 2
88-6090	Coupling - Steering	5 20 1	321-4	Screw - Hex Hd. Cap	6 26 1
88-6100	Brake - Deck	14 4 2	321-9	Screw - Hex Hd. Cap	5 21 2
88-6130	Spring - Deck Engage	14 8 1	322-3	Screw - Hex Hd. Cap	1 2 22
88-6140	Spring - Brake	7 7 1	322-3	Screw - Hex Hd. Cap	12 4 4
88-6220	Spring - Compression	1 8 2	322-3	Screw - Hex Hd. Cap	2 4 2
88-6240	V-Belt - Traction	11 5 1	322-3	Screw - Hex Hd. Cap	3 11 4
88-6250	V-Belt - Deck	14 17 1	322-3	Screw - Hex Hd. Cap	8 13 3
88-6290	Shield - Muffler	1 15 1	322-3	Screw - Hex Hd. Cap	7 17 2
88-6300	Shaft - Steering Upper	5 9 1	322-3	Screw - Hex Hd. Cap	13 29 6
88-6330	Spring - Extension	7 14 1	322-5	Screw - Hex Hd. Cap	1 7 2
88-6370	Shaft - Steering Short	5 15 1	322-5	Screw - Hex Hd. Cap	7 8 1
88-6410	Cable - Deck Engage	15 6 1	322-5	Screw - Hex Hd. Cap	14 15 2
88-6450	Transaxle	11 6 1	322-7	Screw - Hex Hd. Cap	7 11 1
88-6460	Spring - Extension	12 2 1	322-9	Screw - Hex Hd. Cap	6 18 4
88-6480	Muffler	6 25 1	322-12	Screw - Hex Hd. Cap	15 2 2
88-9830	Switch - Ignition	9 15 1	322-12	Screw - Hex Hd. Cap	11 14 4
88-9932	Switch - Micro	9 20 2	323-11	Screw - Hex Hd. Cap	7 5 1
92-2467	Decal - Hood R.H.	2 25 1	323-12	Screw - Hex Hd. Cap	14 1 1
92-2468	Decal - Hood L.H.	2 * 1	323-13	Screw - Hex Hd. Cap	4 27 2
92-5730	Decal - Throttle	2 29 1	329-23	Screw - Hex Hd. Cap	8 12 1
92-5731	Decal - Ignition/Lights	2 28 1	3219-6	Nut - Lock	14 19 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3230-1	Bolt - Carriage	4 15 4	3296-29	Nut - Lock	8 3 4
3230-3	Bolt - Carriage	8 18 1	3296-29	Nut - Lock	12 5 8
3230-3	Bolt - Carriage	7 21 1	3296-29	Nut - Lock	2 6 2
3230-3	Screw - Carriage	4 28 1	3296-29	Nut - Lock	6 8 3
3231-4	Screw - Carriage	4 13 1	3296-29	Nut - Lock	1 9 24
3253-3	Washer - Lock	8 11 1	3296-29	Nut - Lock	3 10 6
3253-3	Washer - Lock	6 27 1	3296-29	Nut - Lock	4 12 5
3253-4	Washer - Lock	6 23 2	3296-29	Nut - Lock	14 13 6
3253-22	Washer - Lock	6 16 1	3296-29	Nut - Lock	7 13 6
3254-5	Washer - Lock	9 14 1	3296-29	Nut - Lock	13 30 6
3255-7	Washer - Ext. Tooth Lock	9 29 1	3296-39	Nut - Lock	15 9 1
3255-8	Washer - Ext. Tooth Lock	6 19 1	3296-39	Nut - Lock	8 19 1
3256-22	Washer - Flat	5 7 2	3296-39	Nut - Lock	14 20 1
3256-23	Washer - Flat	1 1 4	3296-39	Nut - Lock	4 21 3
3256-23	Washer - Flat	2 5 2	3296-39	Nut - Lock	13 22 3
3256-23	Washer - Flat	14 14 3	3296-42	Nut - Lock	14 6 2
3256-23	Washer - Flat	8 14 2	3296-42	Nut - Lock	2 9 4
3256-23	Washer - Flat	11 15 8	3296-42	Nut - Lock	5 10 4
3256-23	Washer - Flat	7 26 2	3296-59	Nut - Lock	7 15 2
3256-24	Washer - Flat	12 10 4	32103-22	Nut - Wing	9 4 2
3256-24	Washer - Flat	2 20 2	32104-76	Screw - Thread Cutting	15 7 5
3256-24	Washer - Flat	14 25 2	32104-76	Screw - Thread Tapping	1 16 1
3256-24	Washer - Flat	4 25 4	32120-64	Ring - Snap	11 2 1
3256-25	Washer - Flat	6 15 1	32121-78	Pin - Roll	5 4 1
3256-25	Washer - Flat	8 20 1	32128-43	Nut - Flange	2 21 2
3256-25	Washer - Flat	4 22 2	32144-4	Screw - Hex Hd. Thr'd	9 10 3
3256-26	Washer - Flat	7 20 2	32144-32	Screw - Plastite	9 26 2
3256-68	Washer - Fender	14 11 3	32144-41	Screw - Taptite	13 9 8
3257-23	Key - Woodruff	11 4 1	32149-1	Nut - Keps	6 20 2
3269-26	Washer - Backup	3 17 4	32149-2	Nut - Keps	9 18 3
3272-10	Pin - Cotter	4 23 4	32151-48	E-Ring	11 12 2
3272-10	Pin - Cotter	7 23 1	32151-48	E-Ring	5 18 1
3272-12	Pin - Cotter	4 2 2	32151-48	E-Ring	4 30 2
3274-12	Screw - Hex Soc. Hd.	6 24 2	32151-81	Ring - Retaining	5 1 1
3290-282	Rivet - Pop	3 7 4			
3290-282	Rivet - Pop	14 26 4			
3290-299	Nut - Tinnerman	9 31 1			
3290-307	Pin - Cotter	2 7 2			
3290-307	Pin - Hair Cotter	12 9 7			
3290-354	Speednut	9 22 2			
3290-465	Washer - Belleville	13 13 2			
3290-479	Fastener - Panel	3 5 20			
3290-496	Nut - Retained	2 13 2			
3296-3	Nut - Lock	8 8 2			
3296-29	Nut - Lock	11 1 8			
3296-29	Nut - Lock	15 1 6			

OPTIONAL EQUIPMENT

Easy Empty Bagger Kit	Model No. 79116
Twin Bagger	Model No. 79101
Anti-Scalp Kit	Model No. 79181
Recycler Kit (Standard)	Model No. 79170
Wheel Weight Kit	Model No. 59159
42 Snowblade Kit	Model No. 79150
Tire Chains	Part No. 11-0430
Hi-Sail Bagging Blade	Part No. 57-4700
Headlight Kit (Standard)	Model No. 79180