



Count on it.

Parts Catalog

DH 140 Lawn Tractor

Model No. 74560—Serial No. 310000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard


TAP: self tapping

TTH: torx truss head

Contents

Engine, Muffler and Fuel Tank Assembly	4
Front Axle and Wheel Assembly	6
Steering Control Assembly	8
Transmission, Belt, Clutch and Rear Wheel Assembly.....	10
Main Housing and Shaft Transmission Assembly No. 119-5386	12
Center Section Transmission Assembly No. 119-5386	13
Side Housing and Shaft Transmission Assembly No. 119-5386-4	14
Frame Assembly.....	15
Mower Lift Assembly	16
92cm Deck Assembly	18
Operation - Travel Pedal Assembly	20
Operation - Brake Pedal Assembly	22
Electrical Assembly	24
Hood, Seat and Fender Assembly.....	26
Grass Collector Assembly.....	28
Tunnel Assembly	30
Mulch Plug Assembly	31
Attachments and Accessories	32

Engine, Muffler and Fuel Tank Assembly

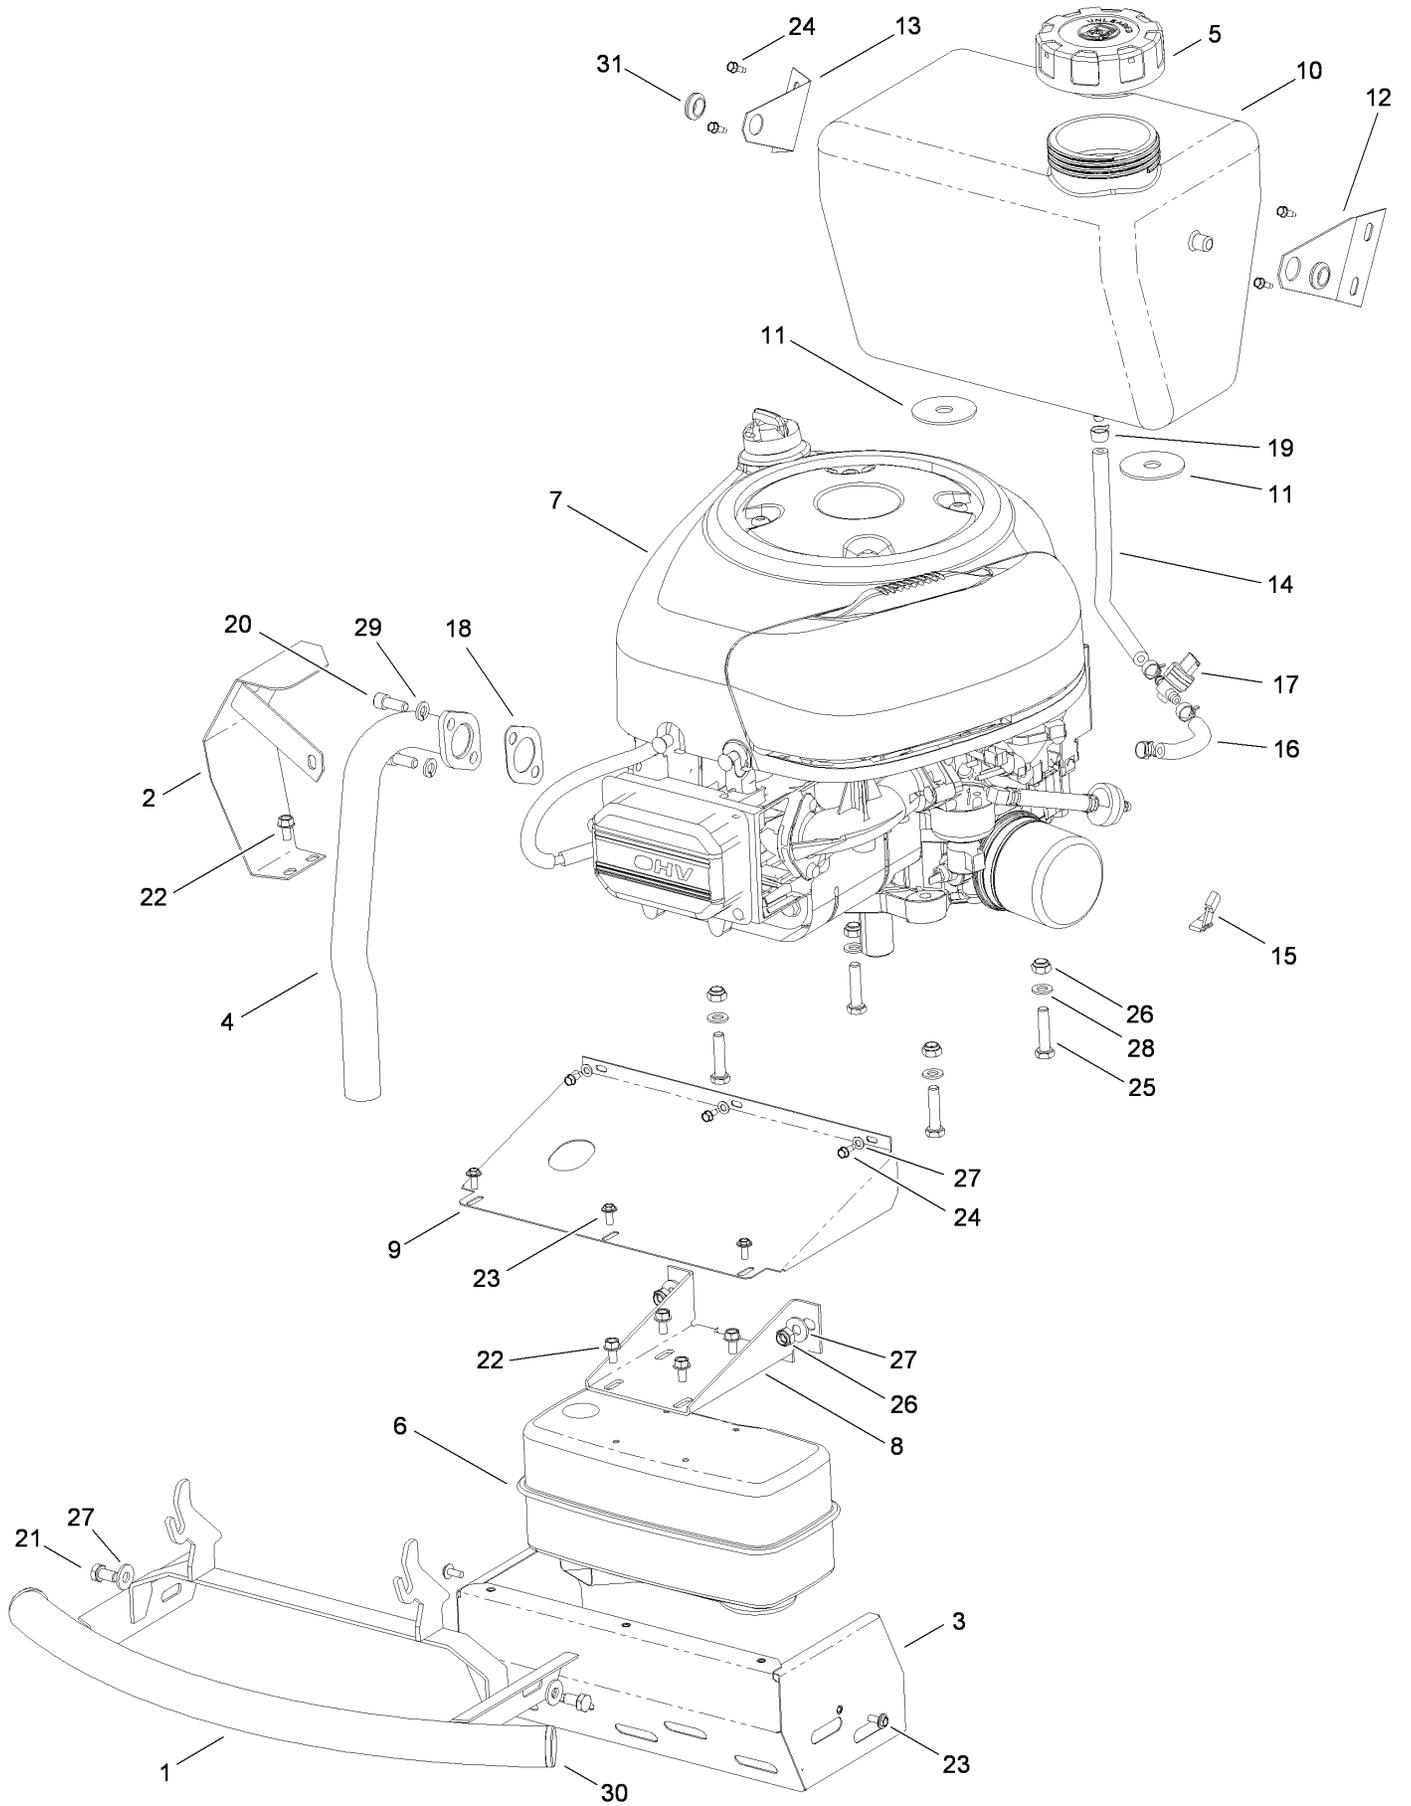


Engine, Muffler and Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5350	1	Bumper	16	104-3213	1	Line-Fuel
2	119-5351	1	Shield-Exhaust Tube	17	104-3224	1	Valve-Tank, Fuel
3	119-5352	1	Shield-Muffler	18	119-5362	1	Gasket
4	119-5353	1	Tube-Exhaust	19	104-3212	4	Clamp-Line, Fuel
5	119-5354	1	Cap-Fuel	20	322-3	2	Screw-HH
6	104-3229	1	Muffler	21	33114-016	2	Screw-HH
7		1	Engine-Briggs, 21B977-0198-B1 ●	22	110-7170	5	Screw-HH
8	119-5356	1	Bracket-Muffler Mount	23	104-2980	5	Screw
9	119-5357	1	Cover-Top	24	104-2977	7	Screw-TAP
10	119-5358	1	Tank-Fuel	25	48-7740	4	Screw
11	119-5500	2	Washer-Rubber	26	33024-00	6	Nut-Lock
12	119-5359	1	Bracket-Fuel Tank, Left	27	104-2946	4	Washer-Plain
13	119-5360	1	Bracket-Fuel Tank, Right	28	106-4756	4	Washer-Plain
14	119-5361	1	Hose-Fuel	29	104-2927	2	Washer-Spring
15	88-4490	1	Reducer-Throttle, Rpm	30	119-5363	2	Cap-Bumper
				31	119-5364	2	Bushing

● Not serviced separately

Front Axle and Wheel Assembly

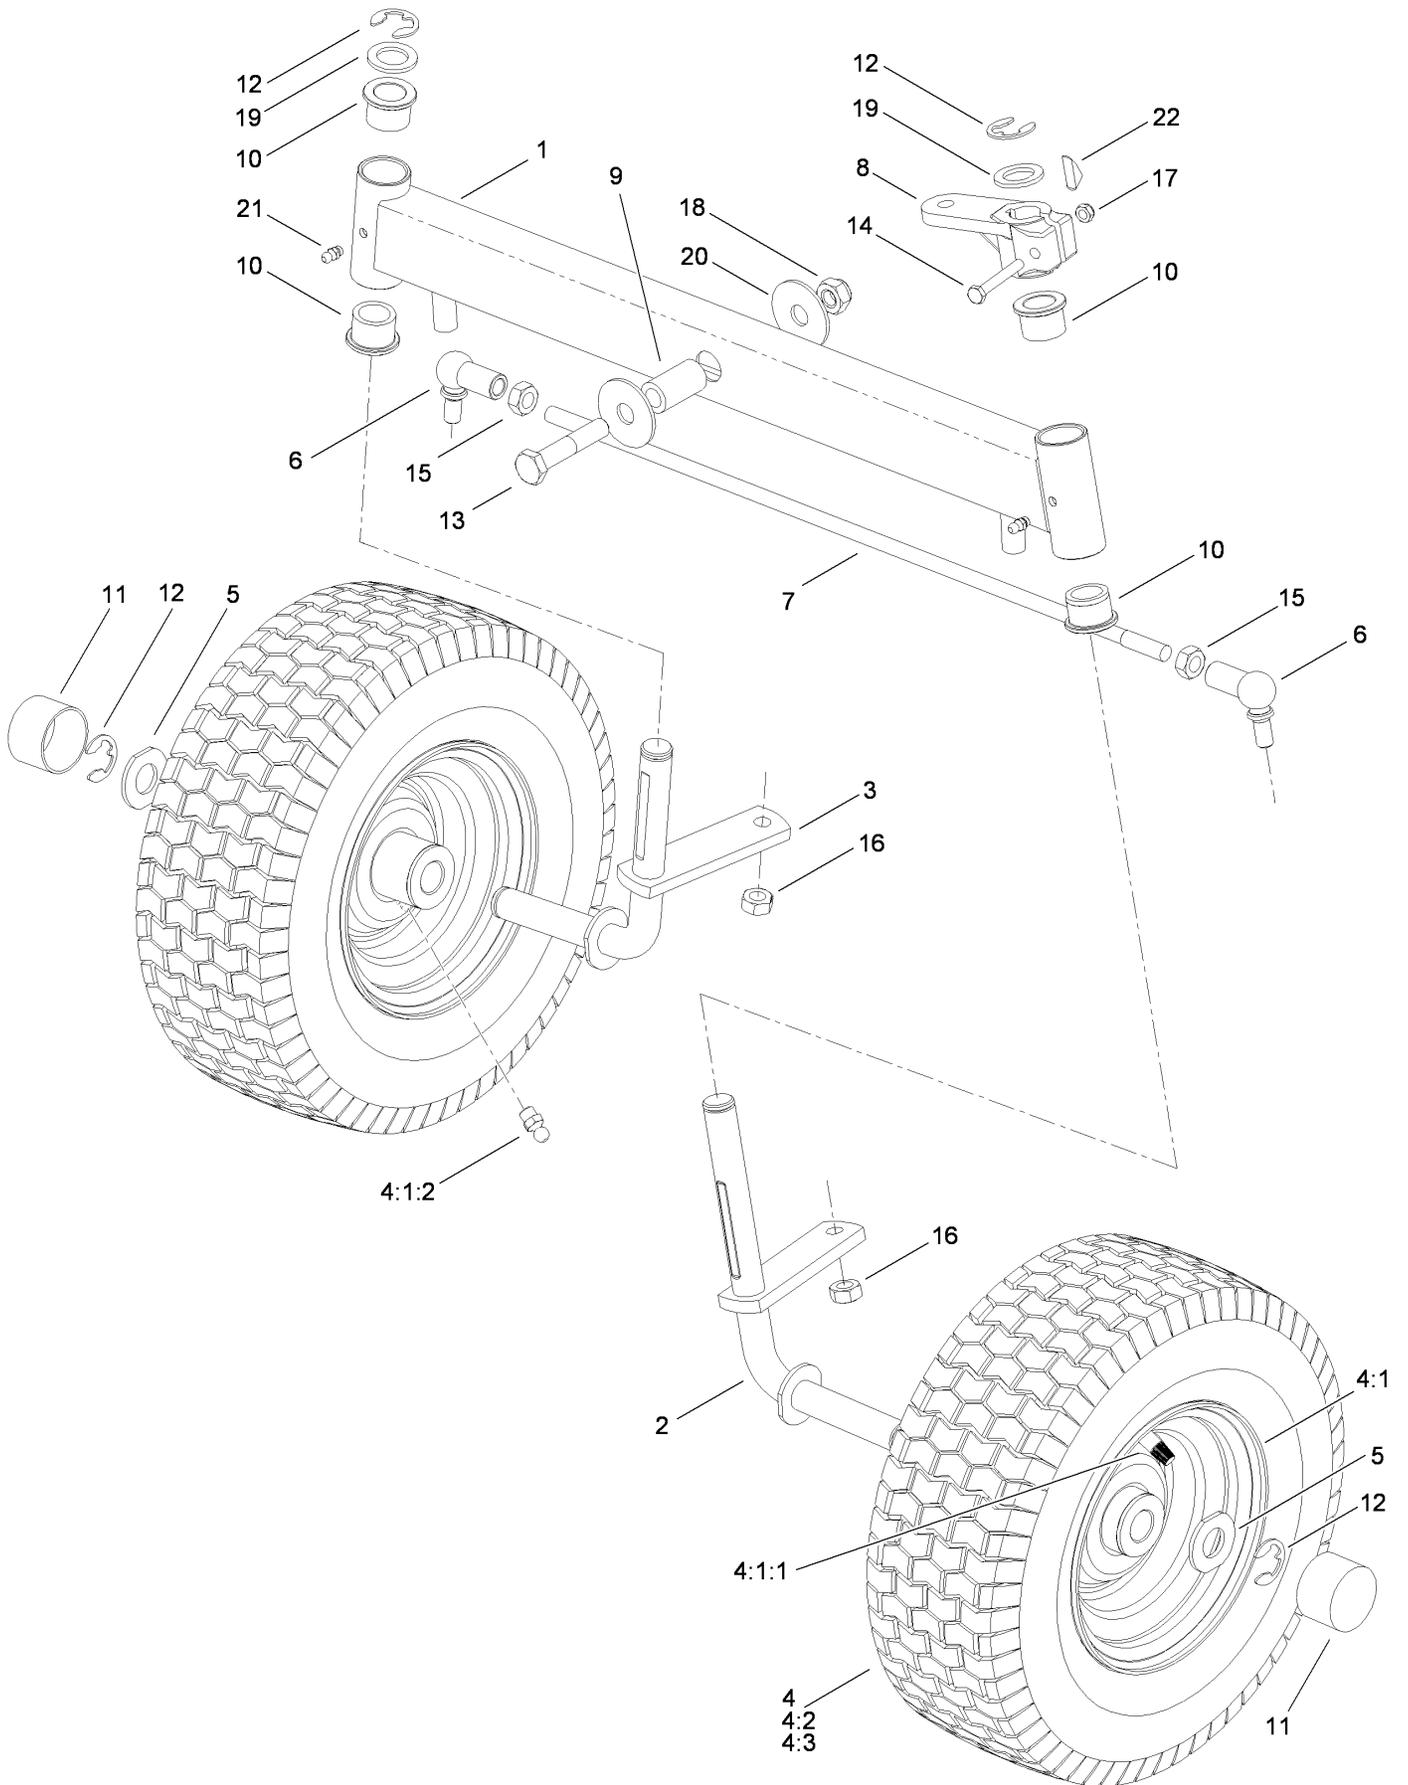


Front Axle and Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5365	1	Front Axle Assembly	10	119-5371	4	Bushing-Swivel
2	119-5366	1	Spindle-LH	11	104-2857	2	Cap-Hub
3	119-5367	1	Spindle-RH	12	104-2891	4	Clip-Spring
4		2	Wheel ASM ●	13	33116-060	1	Screw-HH
4:1	119-5521	1	Front Rim ASM	14	33113-045	1	Screw-HH
4:1:1	106-8596	1	Valve-Tire	15	33015-00	2	Nut-Hex
4:1:2	104-2904	1	Fitting-Grease	16	33025-00	2	Nut-Lock
4:2	119-5522	1	Tire	17	33023-00	1	Nut-Lock
4:3	232-38	1	Tube	18	48-9540	1	Nut-Lock, Hex NI
5	107-8998	2	Retainer-Cap, Hub	19	104-2905	2	Washer-Flat
6	104-2876	2	Joint-Ball, Angle	20	119-5372	2	Washer
7	119-5369	1	Tie Rod-Axle, Front	21	104-2904	2	Fitting-Grease
8	104-2862	1	Lever-Spindle, Steering	22	104-2856	1	Key-Woodruff
9	119-5370	1	Spacer				

● Not serviced separately


Steering Control Assembly

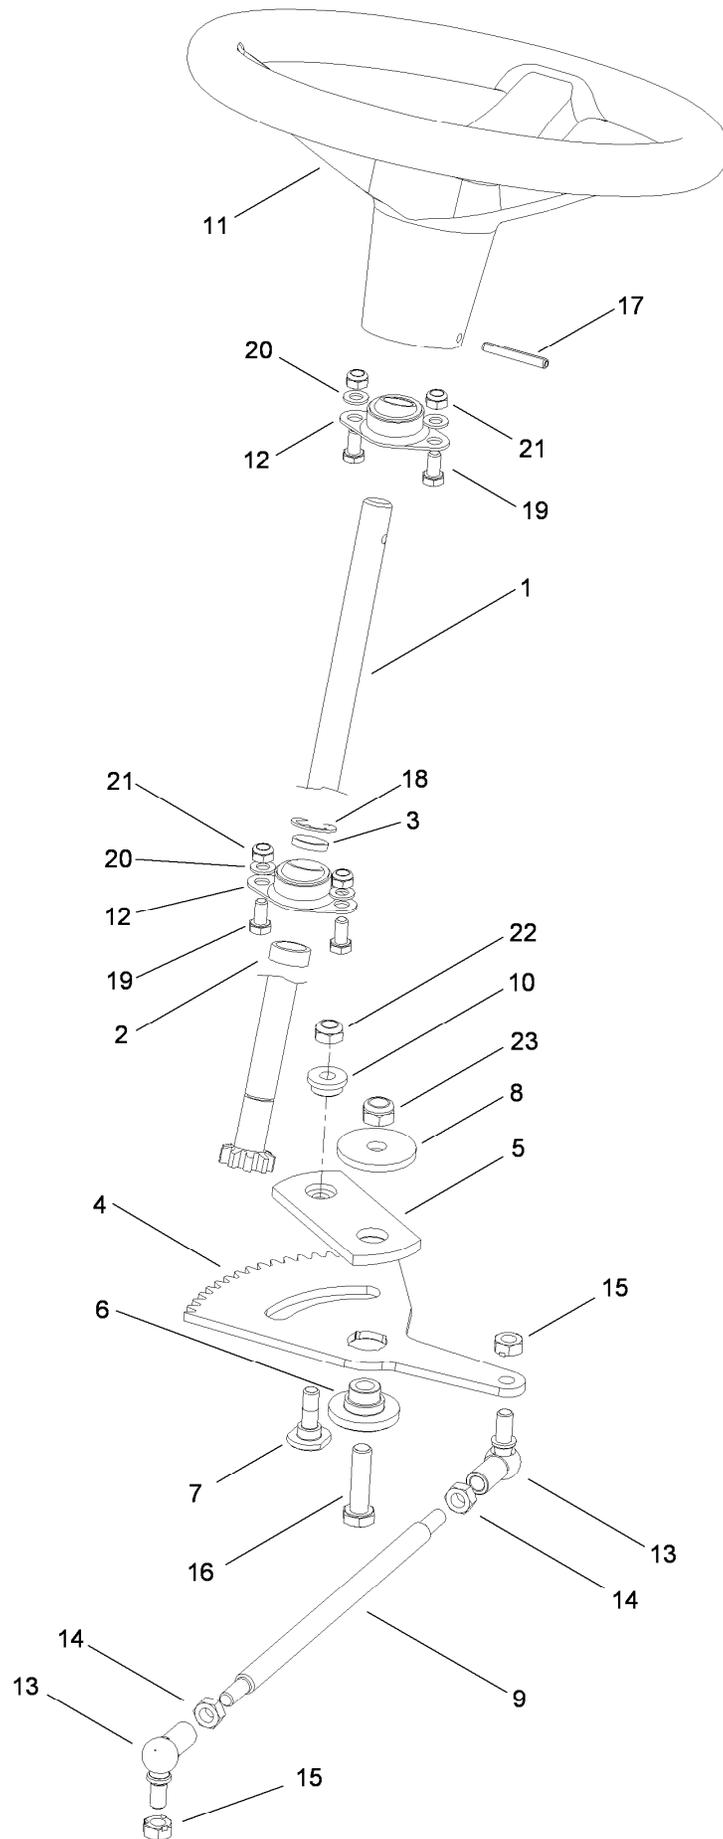

Steering Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5373	1	Shaft-Steering	13	104-2876	2	Joint-Ball, Angle
2	104-2879	1	Spacer-Lower	14	33015-00	2	Nut-Hex
3	104-2877	1	Spacer-Upper	15	33025-00	2	Nut-Lock
4	119-5374	1	Gear-Sector	16	104-2910	1	Screw-Hex
5	105-1238	1	Plate-Steering	17	119-5377	1	Pin-Spirol
6	105-1240	1	Pivot-Steering	18	104-2891	1	Clip-Spring
7	105-1239	1	Bolt-Shoulder	19	33114-016	4	Screw-HH
8	108-8892	1	Washer	20	106-4756	4	Washer-Plain
9	119-5375	1	Link-Drag	21	33024-00	4	Nut-Lock
10	105-1241	1	Bushing	22	33023-00	1	Nut-Lock
11	119-5376	1	Wheel-Steering	23	33016-00	1	Nut-Hex
12	104-2878	2	Bearing-Spherical				


Transmission, Belt, Clutch and Rear Wheel Assembly

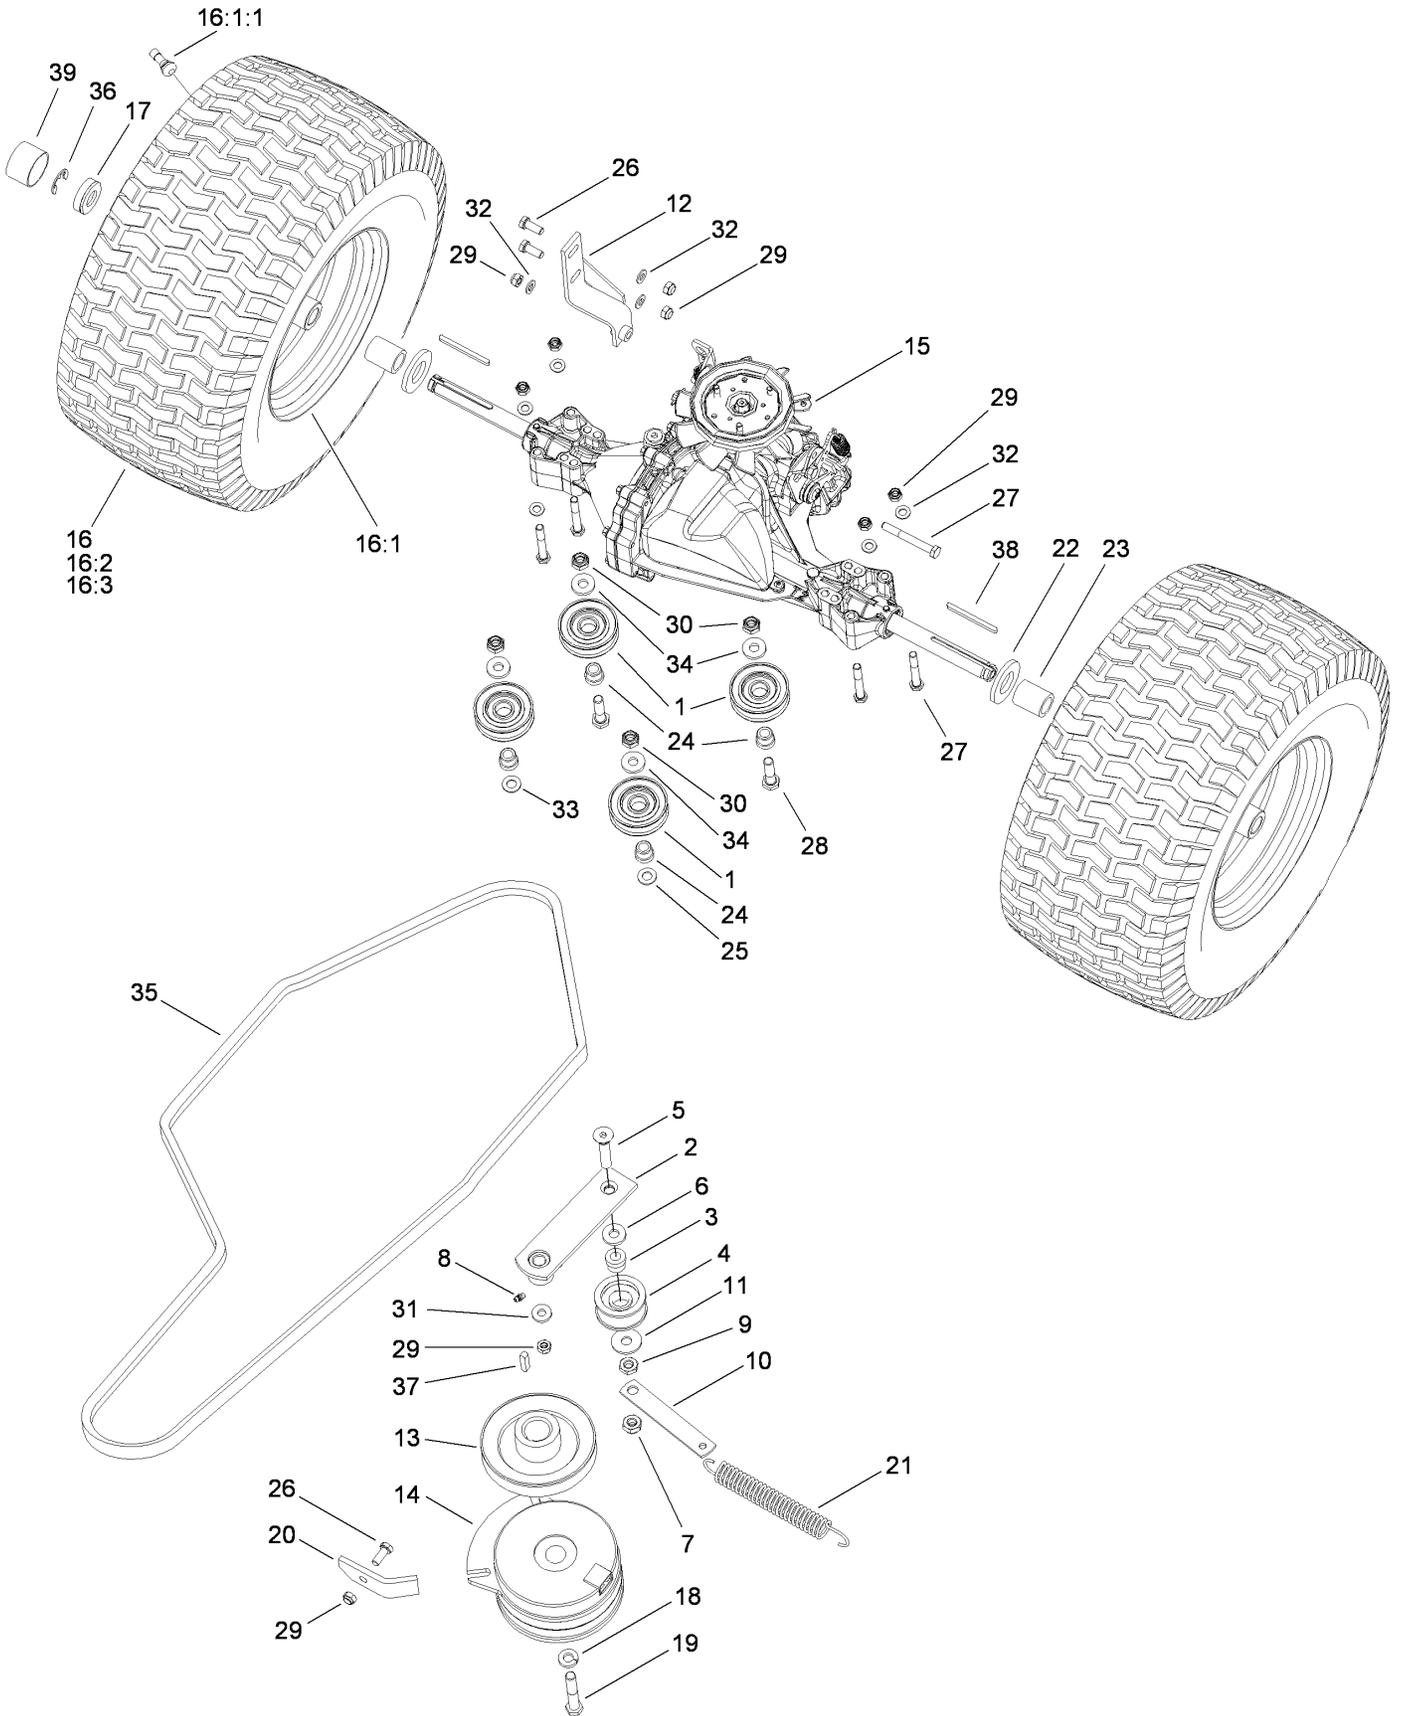

Transmission, Belt, Clutch and Rear Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5378	4	Pulley-Idler	19	3212-10	1	Screw-HH
2	119-5379	1	Arm-Idler	20	119-5502	1	Bracket-Retainer
3	104-2896	1	Bushing-Idler	21	104-2897	1	Spring
4	119-5380	1	Pulley-Idler	22	104-3206	2	Washer
5	119-5381	1	Screw	23	119-5387	2	Spacer-Axle
6	33095-00	1	Washer-Flat	24	119-5388	4	Bushing
7	33023-00	1	Nut-Lock	25	119-5389	1	Spacer
8	104-2904	1	Fitting-Grease	26	33114-020	3	Screw-HH
9	33035-00	1	Nut-Hex	27	60-6690	5	Capscrew
10	119-5382	1	Bracket-Tention	28	117-5664	2	Screw-HH
11	119-5383	1	Washer	29	33024-00	9	Nut-Lock
12	119-5384	1	Bracket	30	33023-00	4	Nut-Lock
13	119-5385	1	Pulley-Engine	31	104-2946	1	Washer-Plain
14	119-5501	1	Clutch-Electric	32	106-4756	11	Washer-Plain
15	119-5386	1	Transmission ASM	33	106-5768	1	Washer
16		2	Wheel ASM ●	34	108-8709	4	Washer-Flat
16:1	119-5523	1	Rim-Rear	35	119-5390	1	V-Belt, Traction
16:1:1	106-8596	1	Valve-Tire	36	104-2891	2	Clip-Spring
16:2	119-5524	1	Tire	37	104-2899	1	Key-Square
16:3	232-41	1	Tube	38	104-2892	2	Key-Square
17	107-8998	1	Retainer-Cap, Hub	39	104-2857	2	Cap-Hub
18	93-9043	1	Washer-Spring, Belleville				

● Not serviced separately

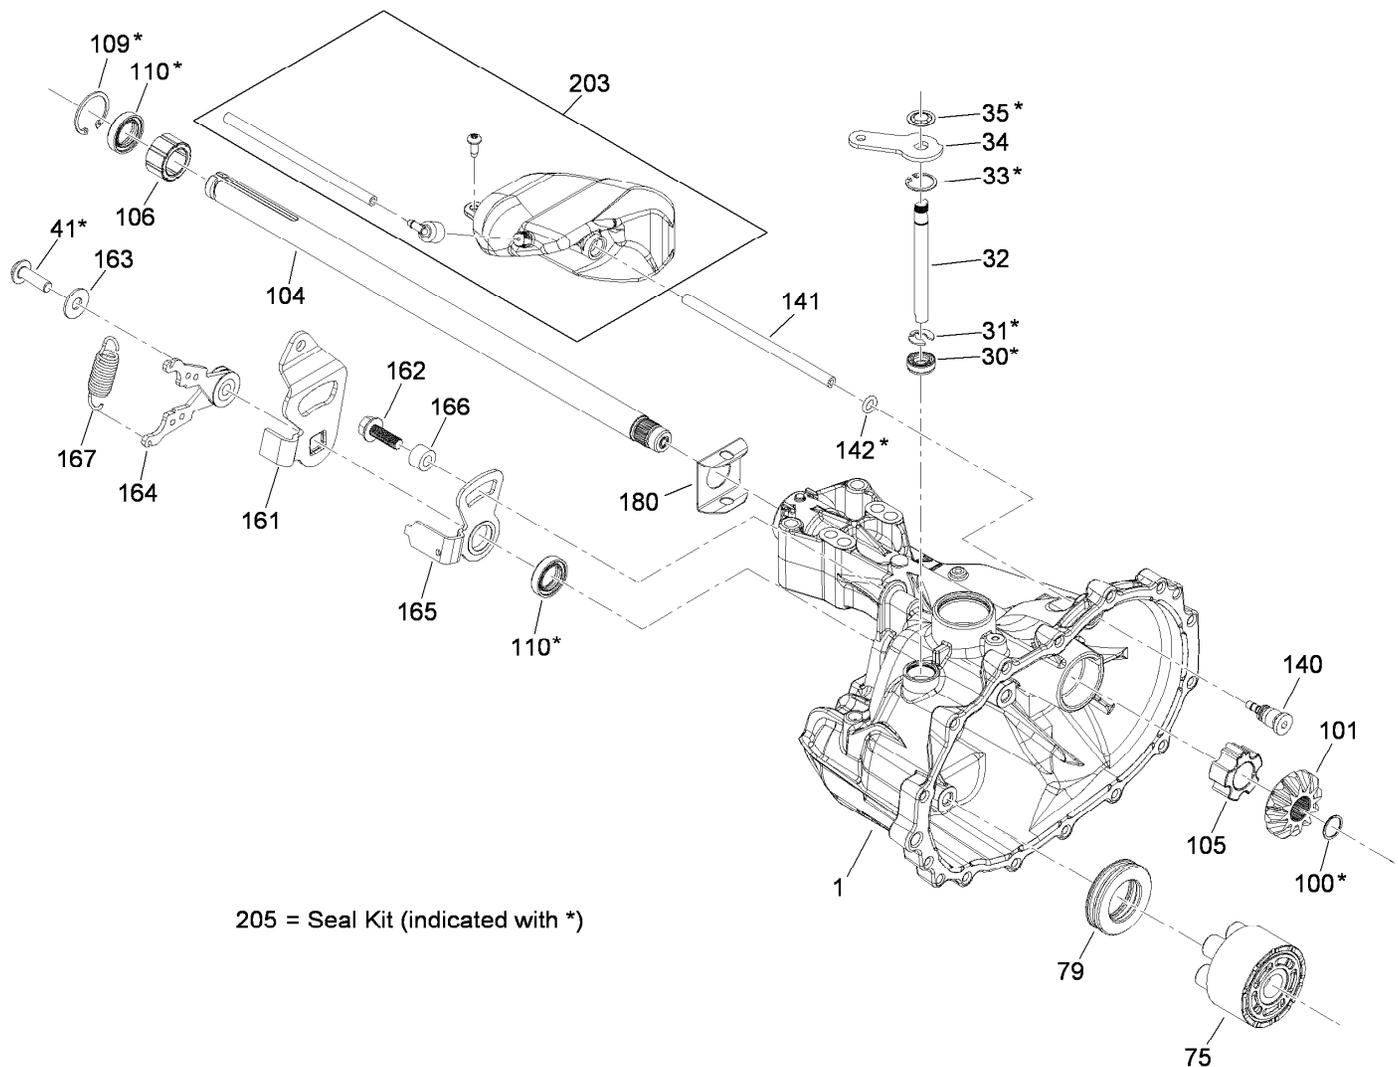


205 = Seal Kit (indicated with *)

Main Housing and Shaft Transmission Assembly No. 119-5386


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	115-8313	1	Main Housing Kit	106	115-8304	1	Bushing-Outboard
10	104-2147	1	Sealant ●	109	115-8303	1	Ring-Retaining, Int
11	104-5342	1	Oil, 20W-50 ●	110	119-5526	2	Seal-Lip
30	106-8676	1	Seal-Lip	140	104-5349	1	Fitting-Sae
31	106-8677	1	Ring-Retaining, EXT	141	115-8302	1	Hose
32	115-8312	1	Rod-Bypass, Actuator	142	104-5361	1	O-Ring
33	106-8679	1	Ring-Retaining, Int	161	115-8308	1	Arm-Control, Return
34	115-8311	1	Arm-Bypass	162	104-5312	1	Screw-HF
35	106-8681	1	Ring-Retaining, EXT	163	114-8491	1	Washer
41	107-2488	1	Screw	164	115-8306	1	Bi Directional Return Kit
75	103-2666	1	Cylinder Block Kit	165	115-8310	1	Arm-Neutral
79	94-6922	1	Bearing-Thrust	166	115-8309	1	Bushing
100	104-5328	1	Ring-Retaining, Spiral	167	115-8307	1	Spring-Extension
101	115-8315	1	Gear-Bevel, 12T (Spline, Id)	180	119-5527	1	Spring Clip-Housing Thrust
104	115-8305	1	Shaft-Axle, Keyed	203	115-8301	1	Expansion Tank Kit
105	115-8314	1	Bushing-Inboard	205	115-8316	1	Seal Kit

● Not illustrated

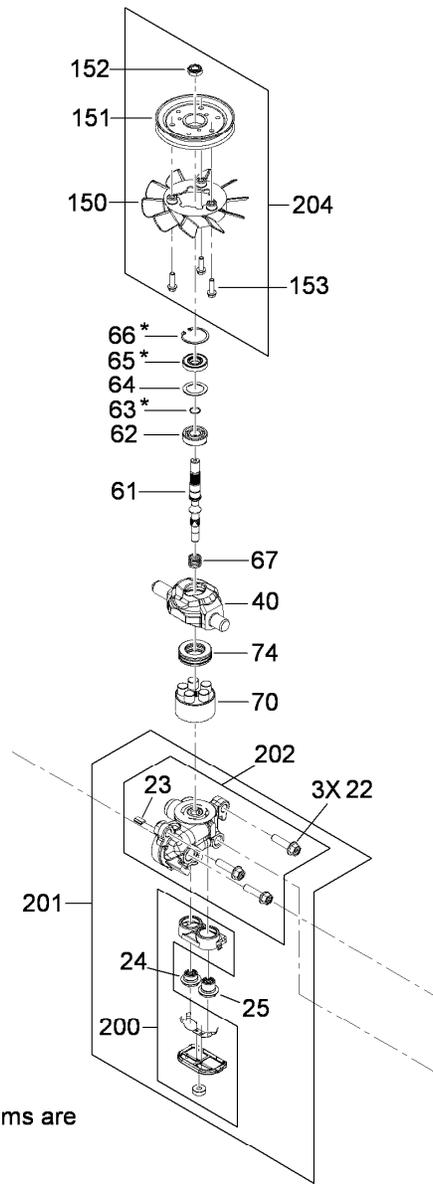


Center Section Transmission Assembly No. 119-5386

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
22	114-1684	3	Screw-Hfhc	67	115-8318	1	Spring-Helical
23	119-5528	1	Plate-Bypass	70	115-8321	1	Cylinder Block Kit
24	104-5348	1	Check Plug ASM	74	115-8320	1	Bearing-Thrust, Ball
25	119-5529	1	Check Plug ASM	150	105-1927	1	Fan
40	115-8319	1	Trunnion-Plate, Swash	151	119-5534	1	Pulley ASM
61	115-8317	1	Shaft-Input	152	105-1875	1	Nut-Lock
62	119-5530	1	Bearing-Ball	153	105-1897	3	Screw
63	119-5531	1	Ring-Retaining, Wire	200	115-8323	1	Filter Kit
64	104-2104	1	Spacer	201	119-5535	1	Center Section Kit
65	119-5532	1	Seal-Lip	202	119-5536	1	Center Section Kit
66	119-5533	1	Ring-Retaining	204	119-5537	1	Fan Pulley Kit

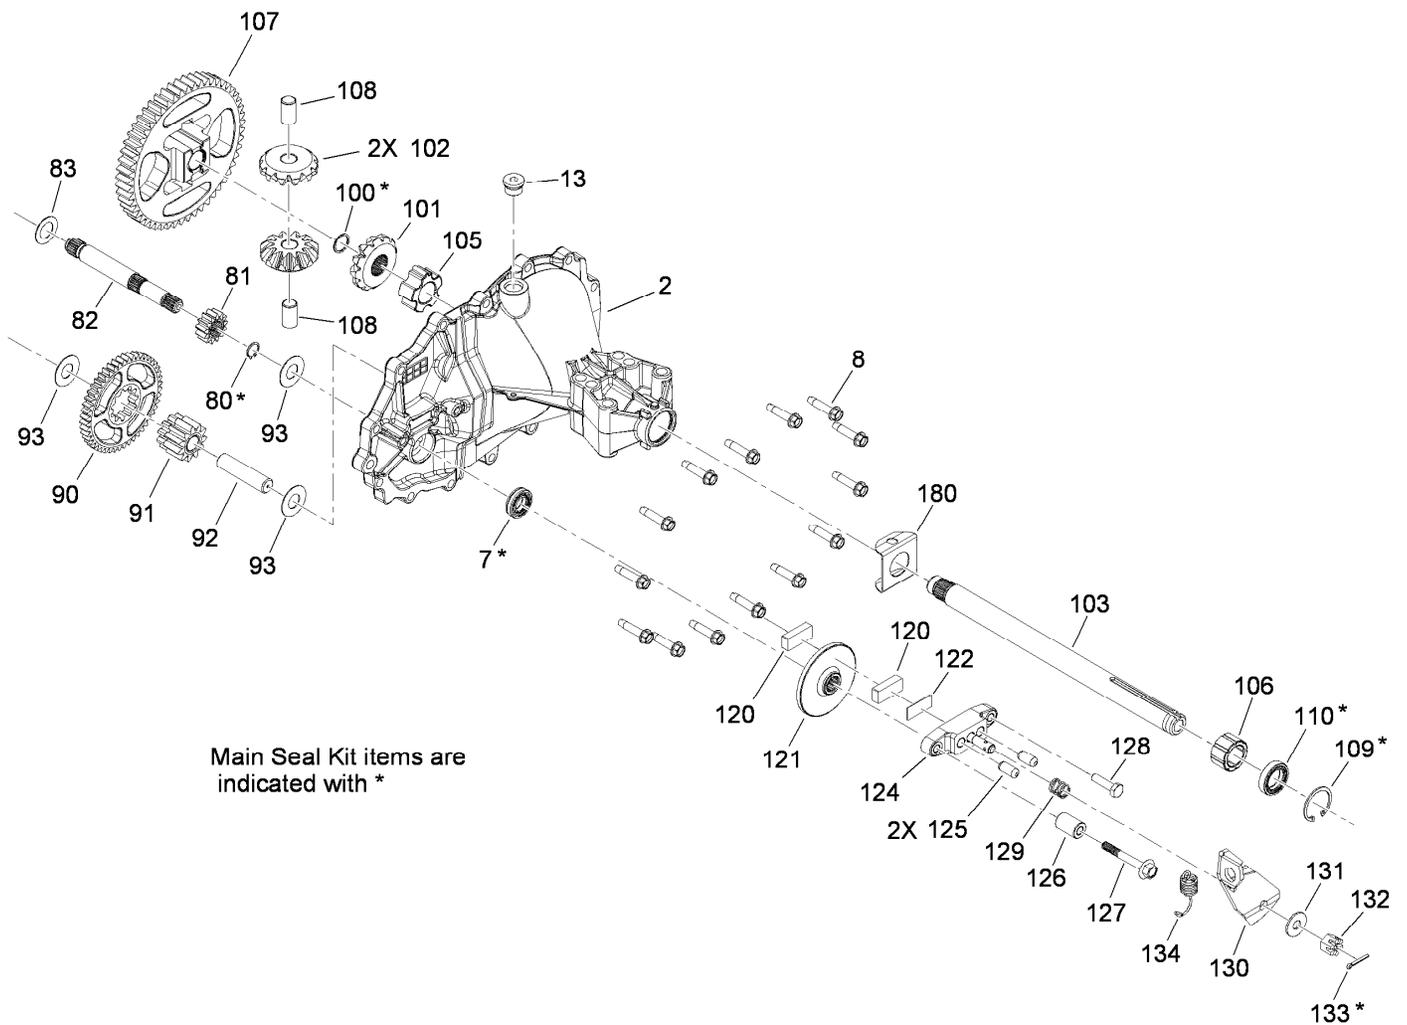

Side Housing and Shaft Transmission Assembly No. 119-5386-4


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
2	119-5538	1	Housing Side Kit	108	115-8326	2	Pin-Differential
7	115-8335	1	Seal-Lip	109	115-8303	1	Ring-Retaining, Int
8	117-5359	14	Screw-Hfhcs	110	119-5526	1	Seal-Lip
13	104-2189	1	Plug-Thread, Straight	120	104-2171	2	Puck-Brake
80	115-8331	1	Ring-Retaining, EXT	121	115-8337	1	Rotor-Brake
81	119-5539	1	Gear-Pinion	122	104-2181	1	Puck-Plate
82	115-8329	1	Shaft-Motor	124	104-5343	1	Yoke-Brake
83	115-8328	1	Washer	125	104-2176	2	Pin-Brake
90	119-5540	1	Gear	126	104-2180	1	Spacer
91	115-8333	1	Gear-Jackshaft, 11T	127	104-5345	1	Screw-HF
92	115-8334	1	Pin-Jackshaft	128	115-8339	1	Screw-Hhcs
93	119-5541	3	Washer	129	104-2188	1	Spring-Brake, Anti Drag
100	104-5328	1	Ring-Retaining, Spiral	130	119-5542	1	Arm-Brake
101	115-8315	1	Gear-Bevel, 12T (Spline, Id)	131	114-8491	1	Washer
102	115-8327	2	Gear-Bevel, 12T (.50 Id)	132	119-5543	1	Nut-Castle
103	115-8336	1	Shaft-Axle, Keyed	133	3272-7	1	Pin-Cotter
105	115-8314	1	Bushing-Inboard	134	115-8338	1	Spring-Brake, Arm
106	115-8304	1	Bushing-Outboard	180	119-5527	1	Spring Clip-Housing Thrust
107	115-8325	1	Gear-53T, Bull				

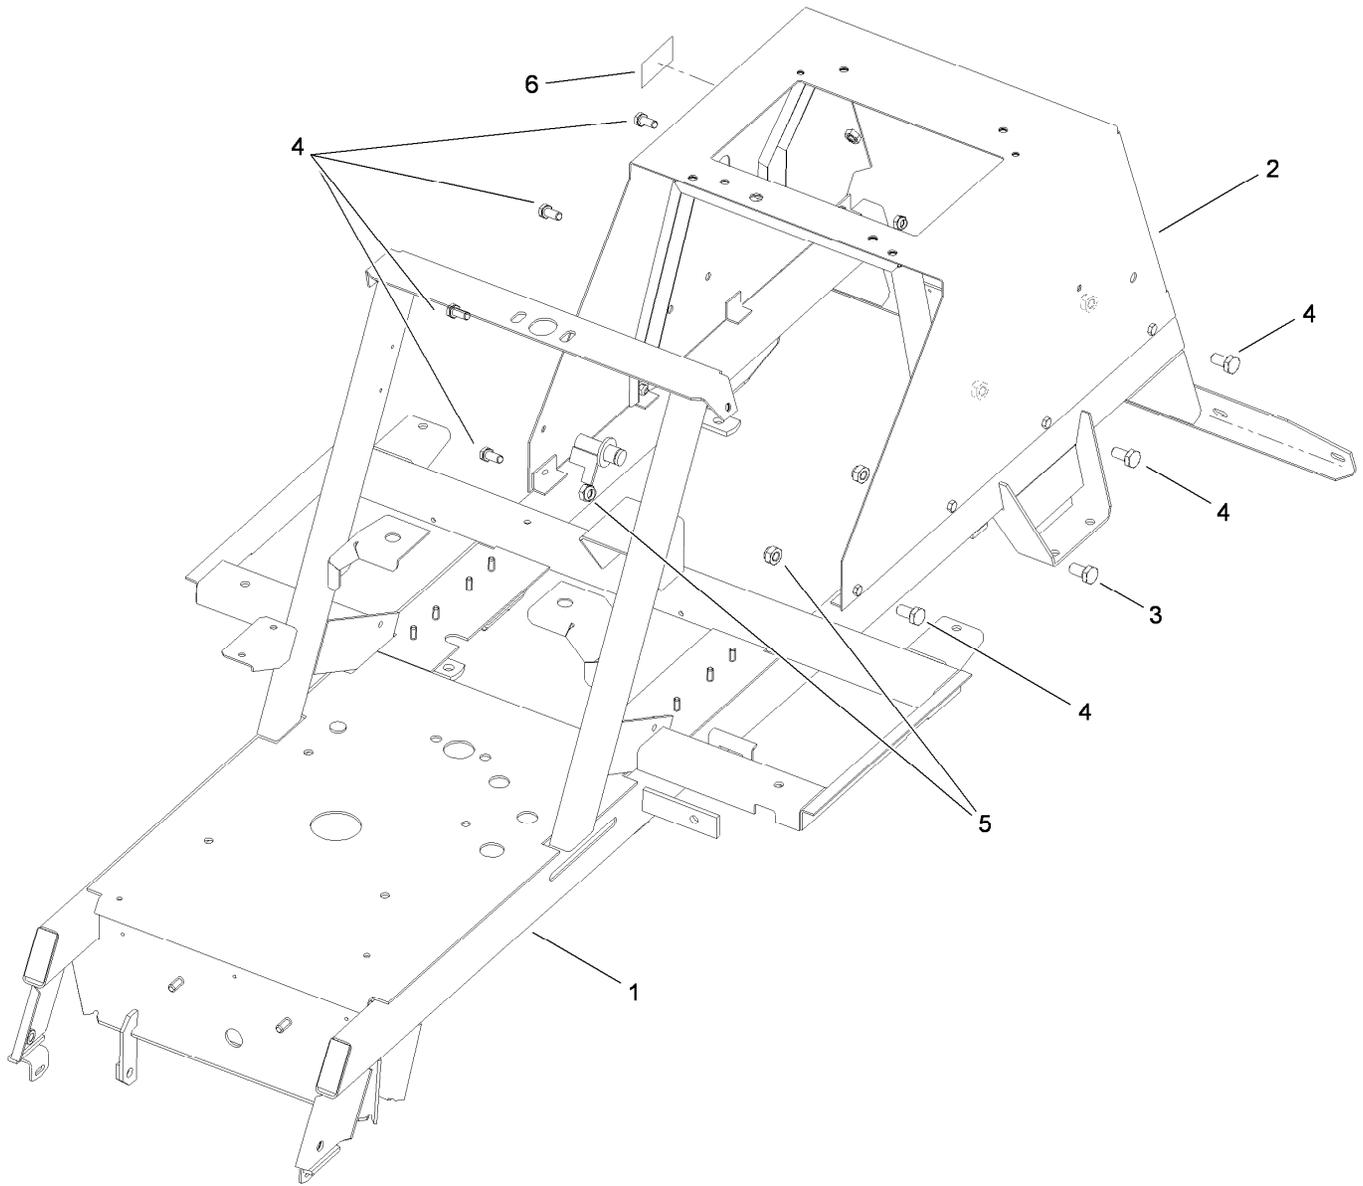

Frame Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5498	1	Frame Assembly
2	119-5499	1	Bracket-Seat
3	33113-016	1	Screw-HH
4	33113-012	7	Screw-HH
5	33023-00	8	Nut-Lock
6	119-5515	1	Decal-Bypass

Mower Lift Assembly

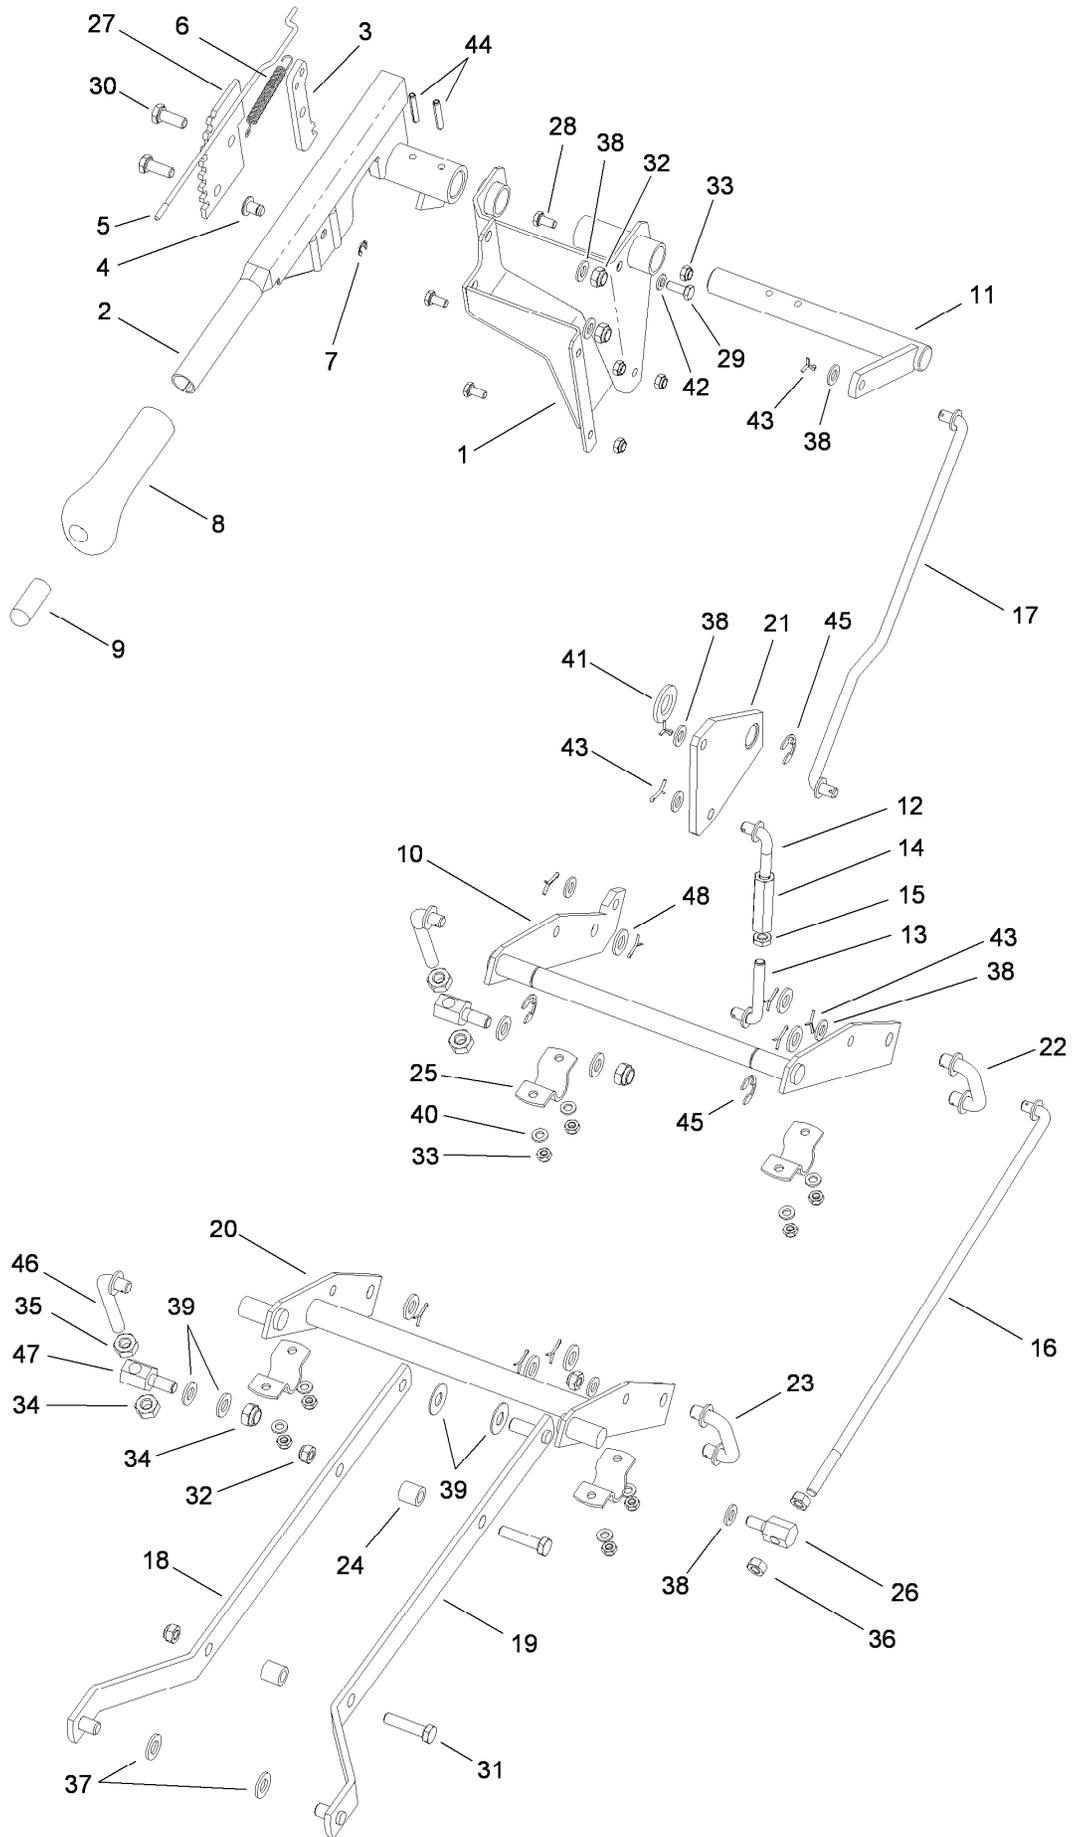


Mower Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5391	1	Bracket	26	119-5407	1	Trunion
2	119-5392	1	Lever Arm	27	119-5408	1	Gear-Sector
3	104-3130	1	Ratchet-Plate, Pivot	28	33113-012	4	Screw-HH
4	104-3135	1	Pin-Lever, Arm	29	33113-016	1	Screw-HH
5	104-3132	1	Rod-Connection	30	33114-020	2	Screw-HH
6	104-3134	1	Spring	31	33114-035	2	Screw-HH
7	104-3137	1	Clip-Pin	32	33024-00	5	Nut-Lock
8	104-3129	1	Grip-Handle	33	33023-00	12	Nut-Lock
9	104-3131	1	Button-Plunger	34	33025-00	8	Nut-Lock
10	119-5393	1	Hanger-Rear	35	33015-00	4	Nut-Hex
11	119-5394	1	Shaft-Adjustment, Height	36	33014-00	2	Nut-Hex
12	119-5395	1	Rod-Top	37	106-5768	2	Washer
13	119-5396	1	Rod-Lower	38	106-4756	9	Washer-Plain
14	119-5504	1	Nut-Turnbuckle	39	104-2906	11	Washer-Flat
15	33014-00	1	Nut-Hex	40	104-3193	8	Washer
16	119-5397	1	Rod-Linkage	41	33098-00	1	Washer-Flat
17	119-5398	1	Rod-Linkage	42	104-3186	1	Washer-Spring
18	119-5399	1	Bracket-Right Deck Support	43	104-3151	11	Pin-Cotter
19	119-5400	1	Bracket-Left Deck Support	44	104-2994	2	Pin-Spring
20	119-5401	1	Hanger-Front	45	119-5503	3	E-Clip
21	119-5402	1	Bracket-Linkage	46	119-5544	2	Link-Deck, L-Shape (Adjustable)
22	119-5403	1	Deck Link, U-Shape, 50	47	119-5545	2	Trunion
23	119-5404	1	Deck Link, U-Shape, 55	48	119-5546	1	Washer-Plain
24	119-5405	2	Spacer				
25	119-5406	4	Clamp				

92cm Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5508	1	Deck ASM	18	104-3092	2	Washer-Belleville
1:2	119-2726	2	Decal-Danger	19	104-3093	4	Pin-Shear, Grooved
2	119-5425	1	Left Spindle ASM	20	119-5415	1	Washer
2:1	119-5426	1	Housing-Spindle	21	104-3104	1	Bushing
2:2	119-5409	1	Shaft-Blade, Left	22	119-5419	1	Guard-Belt, Left
2:3	119-5505	2	Bearing	23	119-5420	1	Guard-Belt, Right
2:4	119-5410	1	Ring-Lock	24	119-5421	1	Spring
3	119-5427	1	Right Spindle ASM	25	119-0369	4	Kicker
3:1	119-5426	1	Housing-Spindle	26	119-5423	4	Screw
3:2	119-5411	1	Shaft-Blade, Right	27	33104-030	6	Screw-HHF
3:3	119-5505	2	Bearing	28	33114-040	1	Screw-HH
3:4	119-5410	1	Ring-Lock	29	104-3190	4	Screw
4	119-5412	1	Arm-Idler	30	33114-025	2	Screw-HH
5	119-5547	1	Spacer	31	104-2984	4	Washer
6	119-5414	2	Pulley-Idler	32	119-5507	2	Washer
7	60-6700	1	Bolt-HH	33	106-8588	2	Washer-Flat
8	104-2946	2	Washer-Plain	34	104-2927	2	Washer-Spring
9	119-5548	1	Washer-Plain	35	106-4756	1	Washer-Plain
10	33024-00	1	Nut-Lock	36	33024-00	1	Nut-Lock
11	119-5525	1	Ring-Lock	37	104-3082	6	Nut-Lock, HF
12	119-5416	2	Pulley-Mowing Belt, 4.5In	38	119-2424	4	Key
13	119-5506	2	Adapter-Mount, Blade	39	119-2425	1	Belt-Wedge, Double
14	117-0035	1	Blade-RH	40	104-3084	2	Support-Ring
15	117-0036	1	Blade-LH	41	119-5549	2	Washer-Plain
16	104-3088	1	Screw-Hex	42	114-3255	1	Decal-Recycler
17	104-3091	1	Screw-HH, Left				


Operation - Travel Pedal Assembly

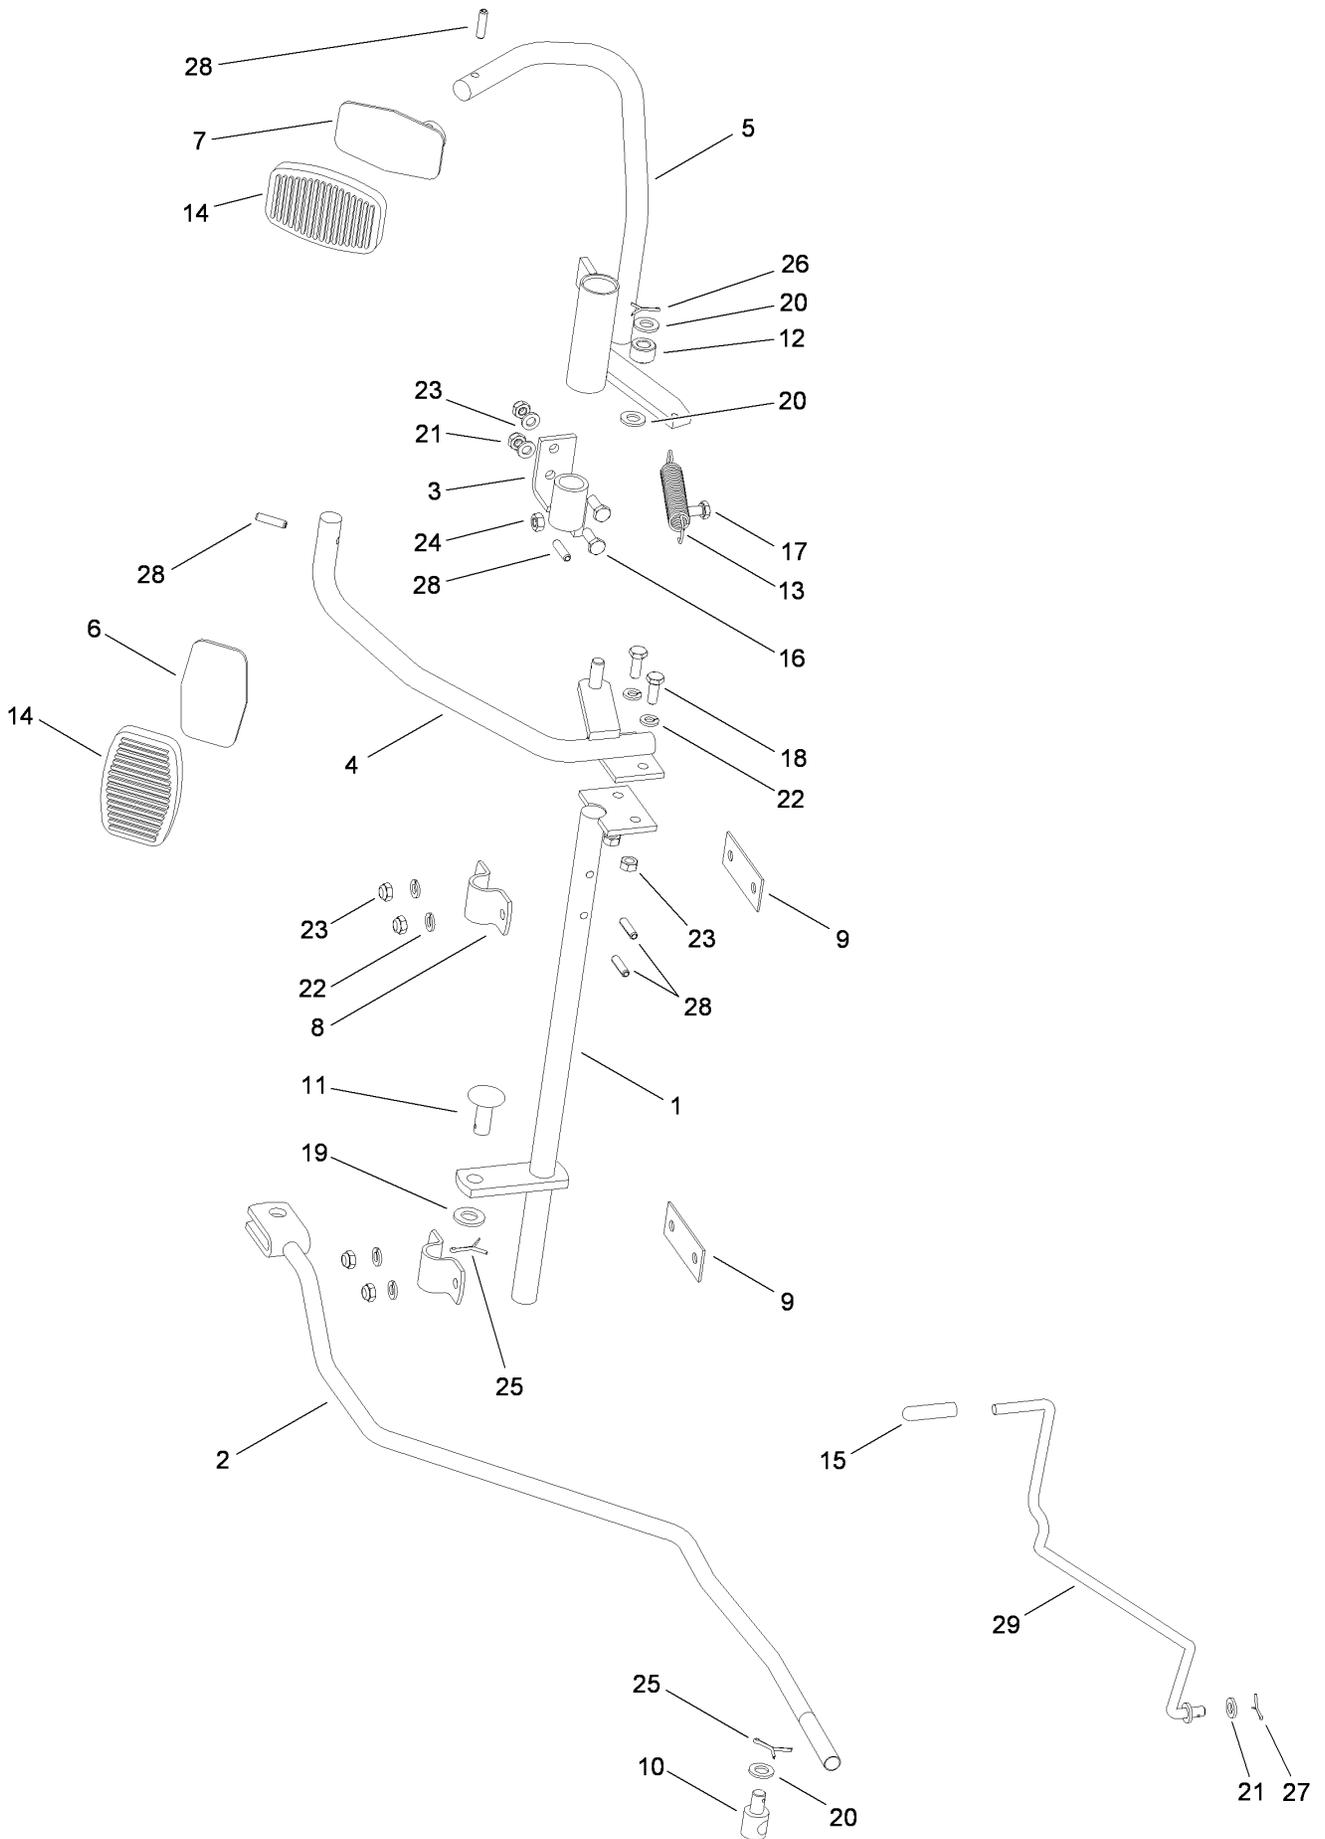

Operation - Travel Pedal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-2426	1	Shaft-Pivot	16	33113-016	2	Screw-HH
2	119-2427	1	Rod-Linkage	17	33113-030	1	Screw-HH
3	119-2428	1	Bracket-Pedal Support	18	105-2409	2	Screw-HSH
4	119-2429	1	Pedal-Travel, Forward	19	104-2906	1	Washer-Flat
5	119-2430	1	Pedal-Travel, Reverse	20	106-4756	3	Washer-Plain
6	119-2431	1	Pedal-Pad, Forward	21	104-3193	3	Washer
7	119-5551	1	Pedal-Pad	22	104-3186	6	Washer-Spring
8	119-2433	2	Clamp	23	33023-00	8	Nut-Lock
9	119-2434	2	Spacer	24	104-2991	1	Nut-Hex
10	119-2435	1	Pin	25	104-3027	2	Pin-Cotter
11	104-3026	1	Pin	26	104-3151	1	Pin-Cotter
12	106-8581	1	Roller	27	104-2997	1	Pin-Cotter
13	119-2436	1	Spring	28	104-3008	3	Pin-Spring
14	104-3018	2	Pad-Pedal	29	119-2432	1	Rod-Lever, Bypass
15	108-8708	1	Cap-Bypass Lever, Hydro				


Operation - Brake Pedal Assembly

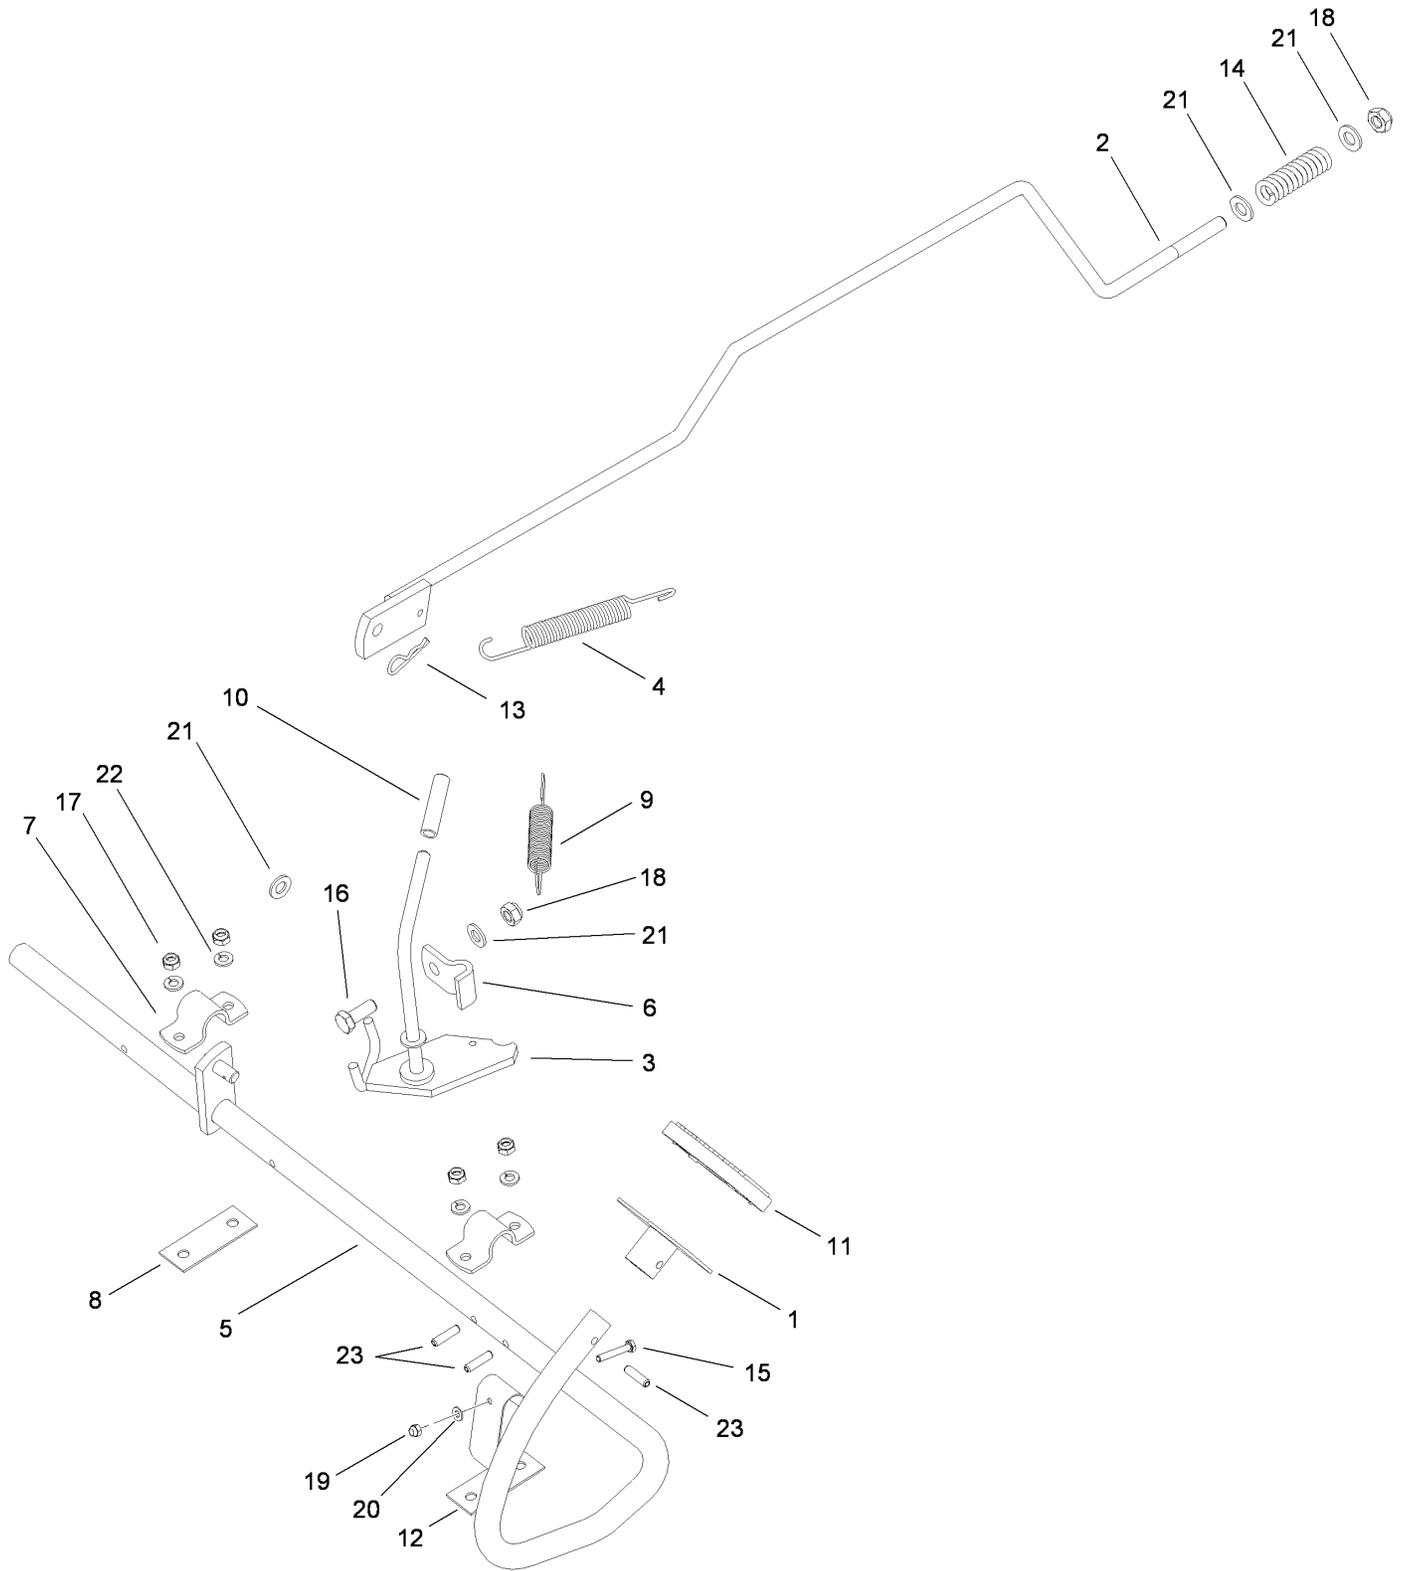

Operation - Brake Pedal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-2437	1	Pedal-Pad,	13	104-3016	1	Pin-Cotter
2	119-2438	1	Rod-Brake Linkage	14	104-3002	1	Spring-Brake
3	119-2439	1	Lever-Parking Brake	15	104-3009	1	Screw-Hex
4	104-3001	1	Spring	16	33114-020	1	Screw-HH
5	119-2440	1	Pedal-Travel, Brake	17	33023-00	4	Nut-Lock
6	104-3007	1	Clamp-Lever, Parking Brake	18	33024-00	2	Nut-Lock
7	119-5406	2	Clamp	19	104-2985	1	Nut-Hex
8	119-2434	1	Spacer	20	106-5766	1	Washer
9	104-3005	1	Spring-Brake, Hand	21	106-4756	4	Washer-Plain
10	104-3247	1	Cap	22	104-3186	4	Washer-Spring
11	104-3018	1	Pad-Pedal	23	104-3008	3	Pin-Spring
12	119-5509	1	Bracket-Parking Brake				


Electrical Assembly

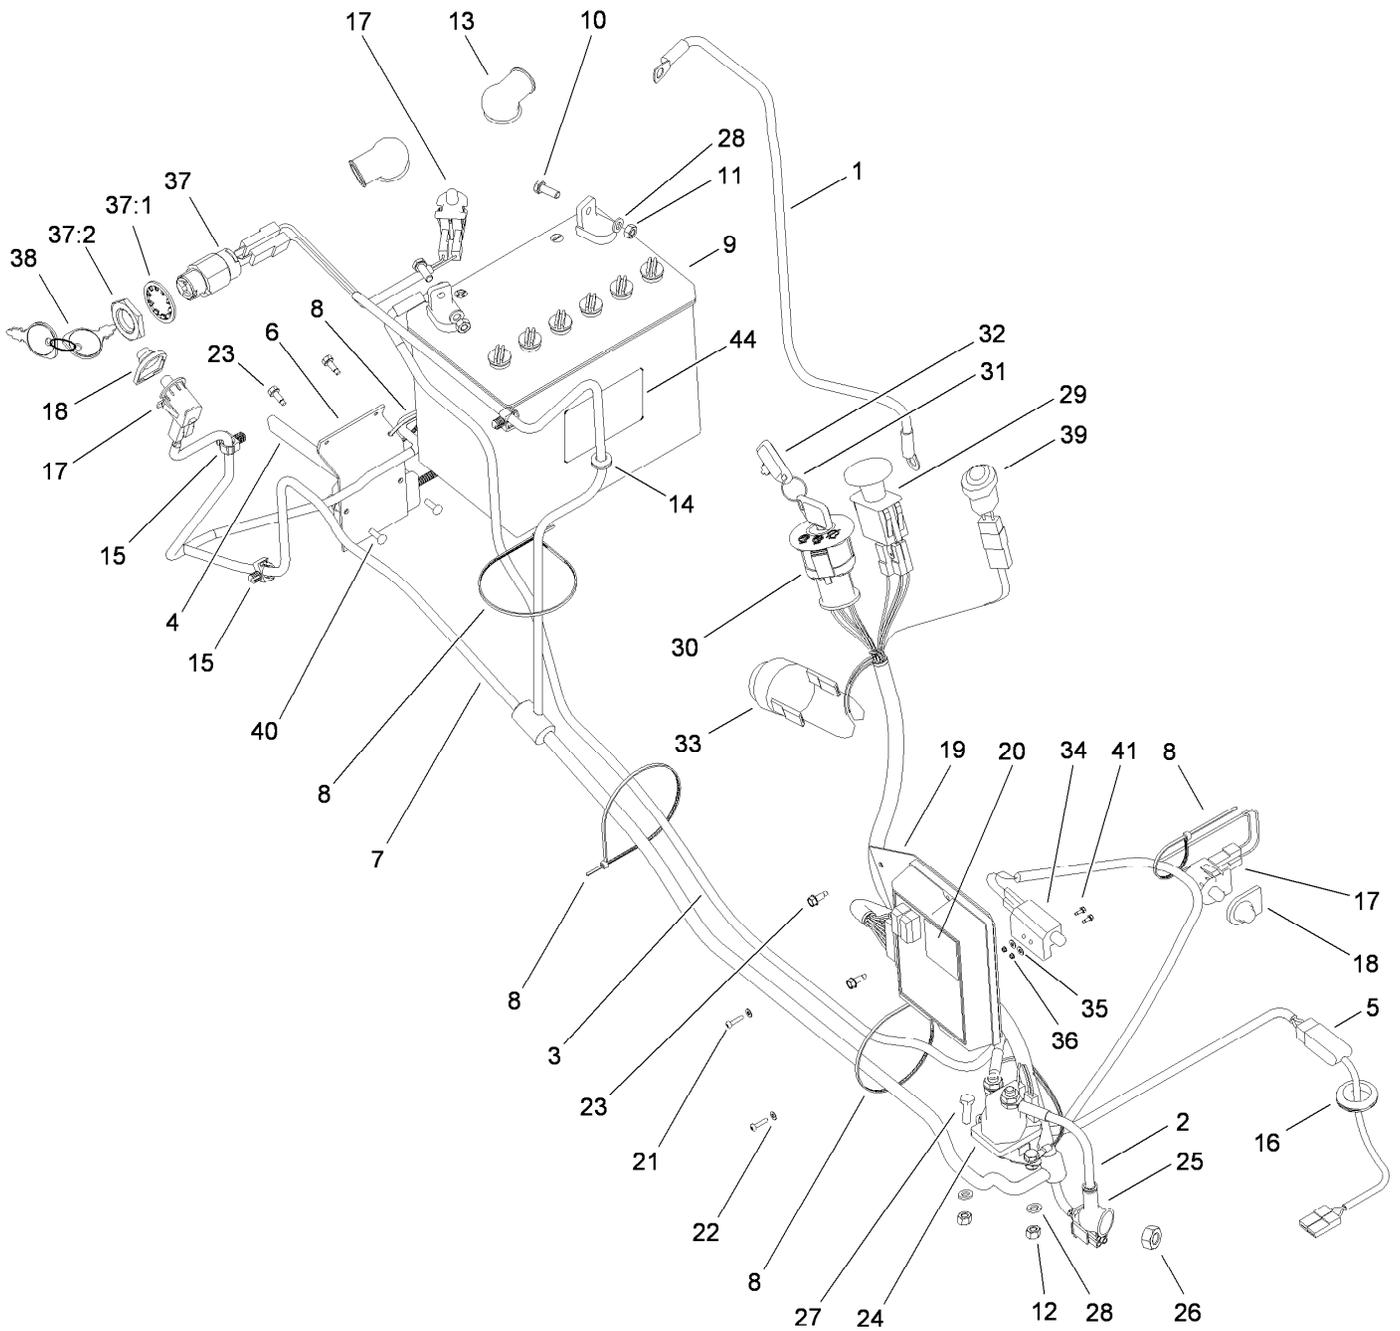

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5417	1	Cable-Battery, Negative	23	104-2977	4	Screw-TAP
2	119-5418	1	Lead-Starter, Electric	24	104-3189	1	Solenoid
3	119-5428	1	Cable-Battery, Positive	25	104-3187	1	Boot-Rubber
4	119-5429	1	Switch-Omron	26	32128-32	1	Nut-HHF
5	119-5430	1	Harness-Clutch	27	33113-012	2	Screw-HH
6	119-5431	1	Bracket-Switch Omron	28	104-3193	4	Washer
7	119-5432	1	Harness-Wiring	29	93-9998	1	Switch-PTO
8	3334-945	9	Tie-Cable	30	119-5438	1	Switch-Ignition
9	104-2491	1	Battery	31	119-5439	1	Ring
10	33113-016	2	Screw-HH	32	119-5510	2	Key-Ignition
11	104-2991	2	Nut-Hex	33	119-5511	1	Buzzer
12	33023-00	2	Nut-Lock	34	119-5440	1	Switch-Delta
13	104-3154	2	Boot-Rubber	35	104-2984	2	Washer
14	104-3164	1	Bushing	36	104-2985	2	Nut-Hex
15	104-3157	5	Clip-Snap	37	46-5780	1	Starter Switch ASM
16	104-2959	1	Bushing	37:1	3254-5	1	Washer-Tooth, Internal
17	104-3179	3	Switch-Delta	37:2	218-461	1	Nut-HH
18	104-3178	2	Cover-Protective	38	62-7770	2	Key-Ignition
19	119-5433	1	Bracket-Module Support	39	119-5441	1	Lamp-Indicator
20	119-5434	1	Module-Control	40	104-3349	2	Screw
21	119-5436	2	Screw	41	104-3331	2	Bolt
22	119-5437	2	Washer	44	93-7276	1	Decal-Danger


Hood, Seat and Fender Assembly

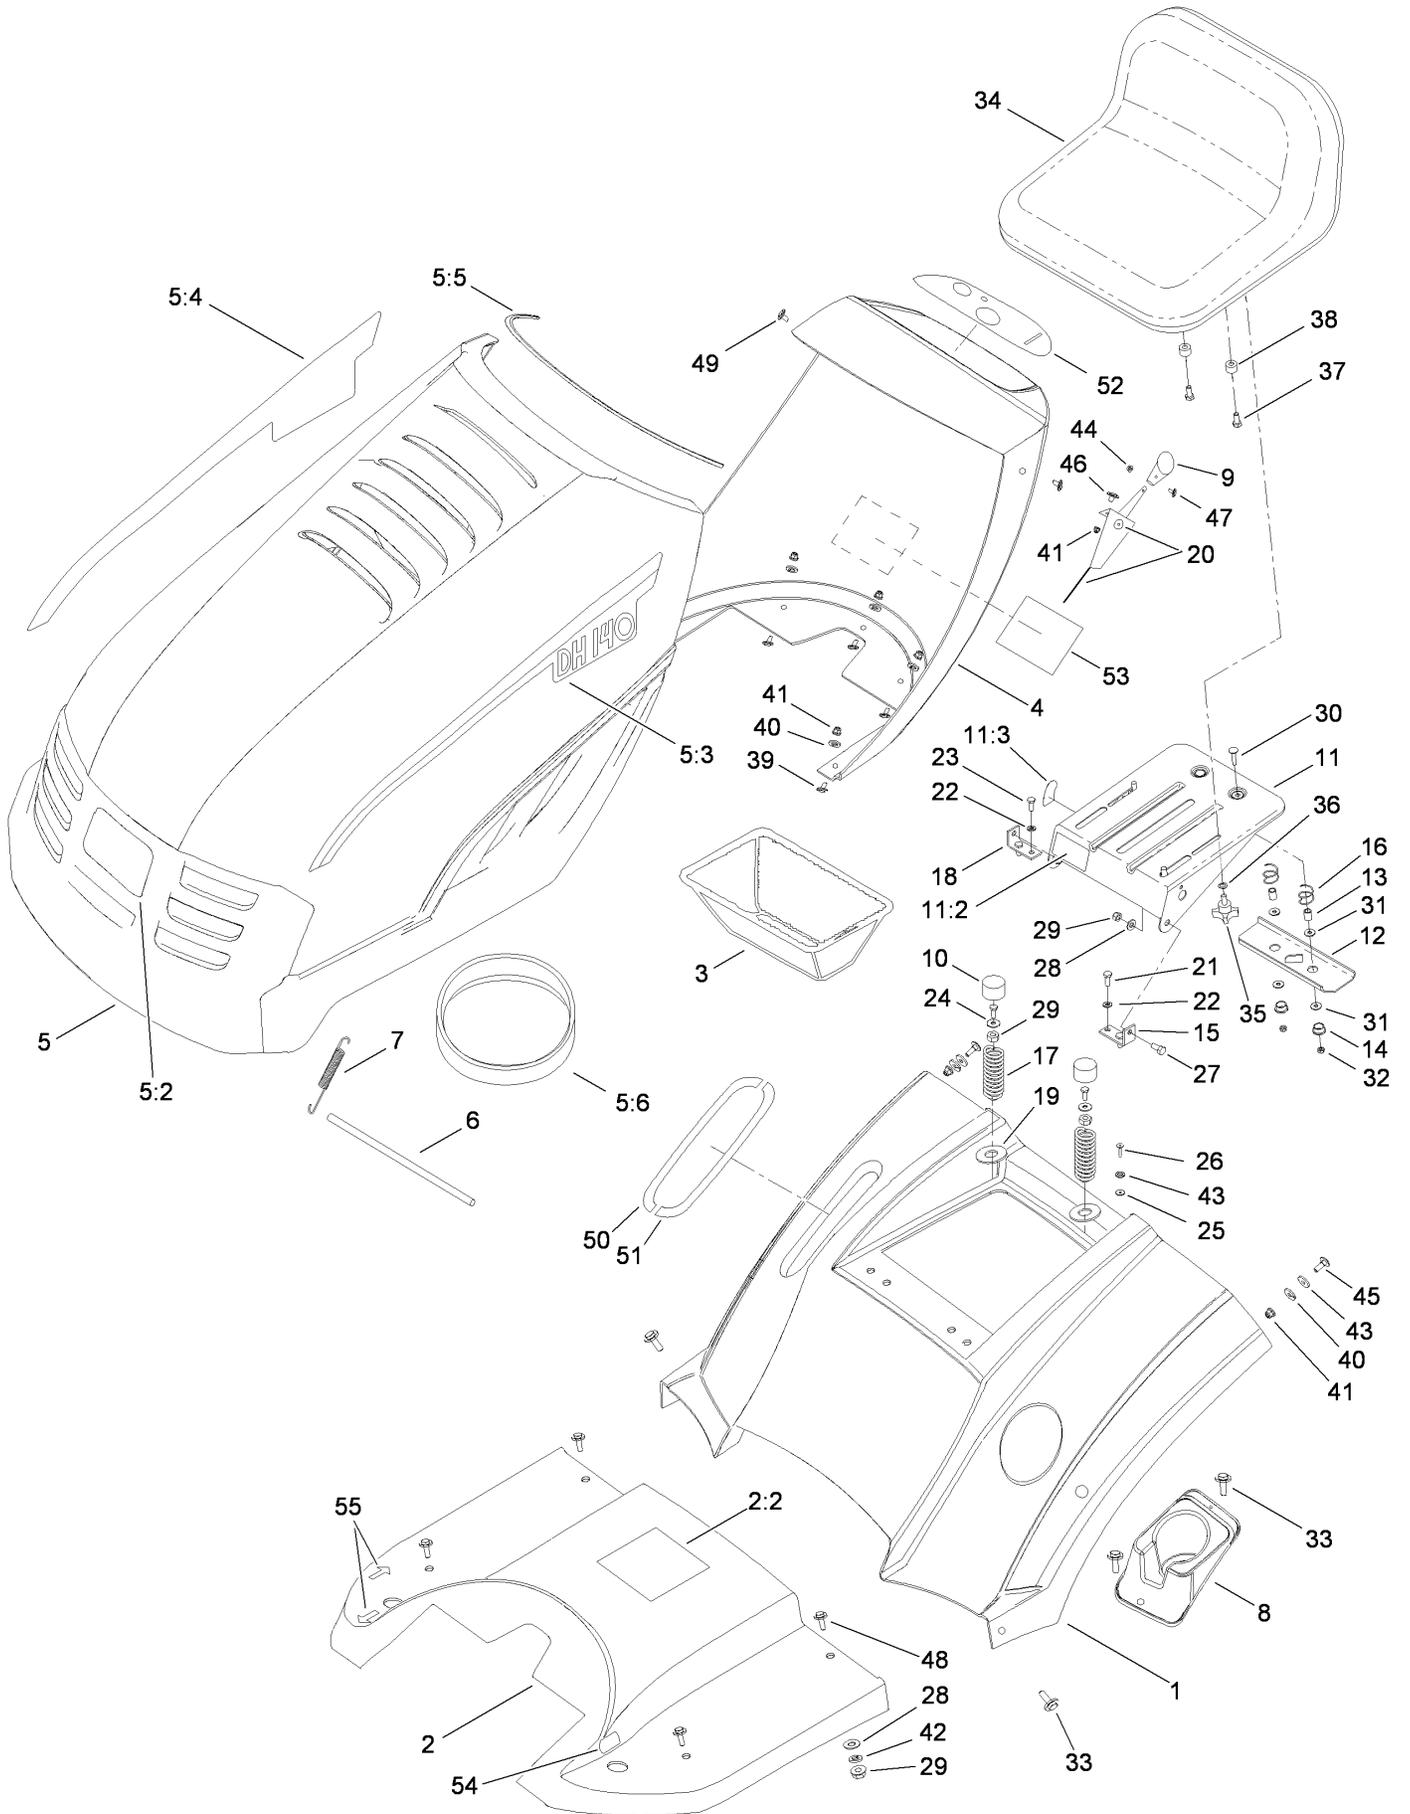

Hood, Seat and Fender Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5422	1	Fender-Rear	25	104-2941	2	Washer-Finish
2	119-2752	1	Foot Rest Assembly	26	119-5454	2	Screw
2:2	119-2725	1	Decal-Danger	27	104-2939	2	Screw-Support, Seat
3	119-5443	1	Box-Battery	28	33094-00	6	Washer-Plain
4	119-5444	1	Panel-Dash	29	33024-00	8	Nut-Lock
5	119-5520	1	Hood Assembly	30	33123-030	2	Screw-CARR
5:2	117-0871	1	Decal-Toro	31	104-2931	2	Washer-Flat
5:3	119-2718	1	Decal-Dh 140 (LH)	32	33023-00	2	Nut-Lock
5:4	119-2719	1	Decal-Dh 140 (RH)	33	119-5550	4	Rivet
5:5	119-5445	1	Rubber-Purl	34	119-5455	1	Seat
5:6	119-5446	1	Gasket-Foam	35	119-5456	2	Knob-Adjust
6	104-2974	1	Bar-Safety	36	104-2936	2	Washer-Spring
7	104-2975	1	Spring-Hood	37	33104-020	2	Screw-HHF
8	119-5447	1	Box-Drink	38	119-5457	2	Spacer
9	119-5448	1	Knob-Throttle/Choke	39	104-2978	5	Screw-Hex
10	104-2857	2	Cap-Hub	40	104-2943	12	Washer-Flat
11	119-5513	1	Bracket-Support, Seat	41	87-5140	7	Nut-Lock
11:2	119-2730	1	Decal-Danger	42	104-2949	4	Washer-Rubber
11:3	99-5340	1	Decal-Switch	43	104-2952	4	Washer-Rubber
12	104-2934	1	Bracket	44	104-2985	1	Nut-Hex
13	104-2933	2	Spacer-Split	45	104-2980	2	Screw
14	104-2935	2	Bushing	46	104-2966	2	Screw-Flat Head
15	119-5450	1	Holder-Support, Left	47	119-5458	1	Screw
16	119-5514	2	Seat-Spring	48	119-5459	4	Screw
17	104-2945	2	Spring-Seat	49	119-5460	2	Screw
18	119-5451	1	Holder-Support, Right	50	119-5484	1	Decal-Mowing Lift, Right
19	119-5452	2	Washer-Seat Spring	51	119-5485	1	Decal-Mowing Lift, Left
20	119-5453	1	Cable-Throttle And Choke	52	119-5486	1	Decal-Panel
21	33114-025	1	Screw-HH	53	119-5517	1	Decal-Operating Instructions
22	104-2927	4	Washer-Spring	54	104-3237	1	Decal-Brake, Parking
23	33114-020	5	Screw-HH	55	119-5487	1	Decal-Travel
24	104-2946	2	Washer-Plain				

Grass Collector Assembly

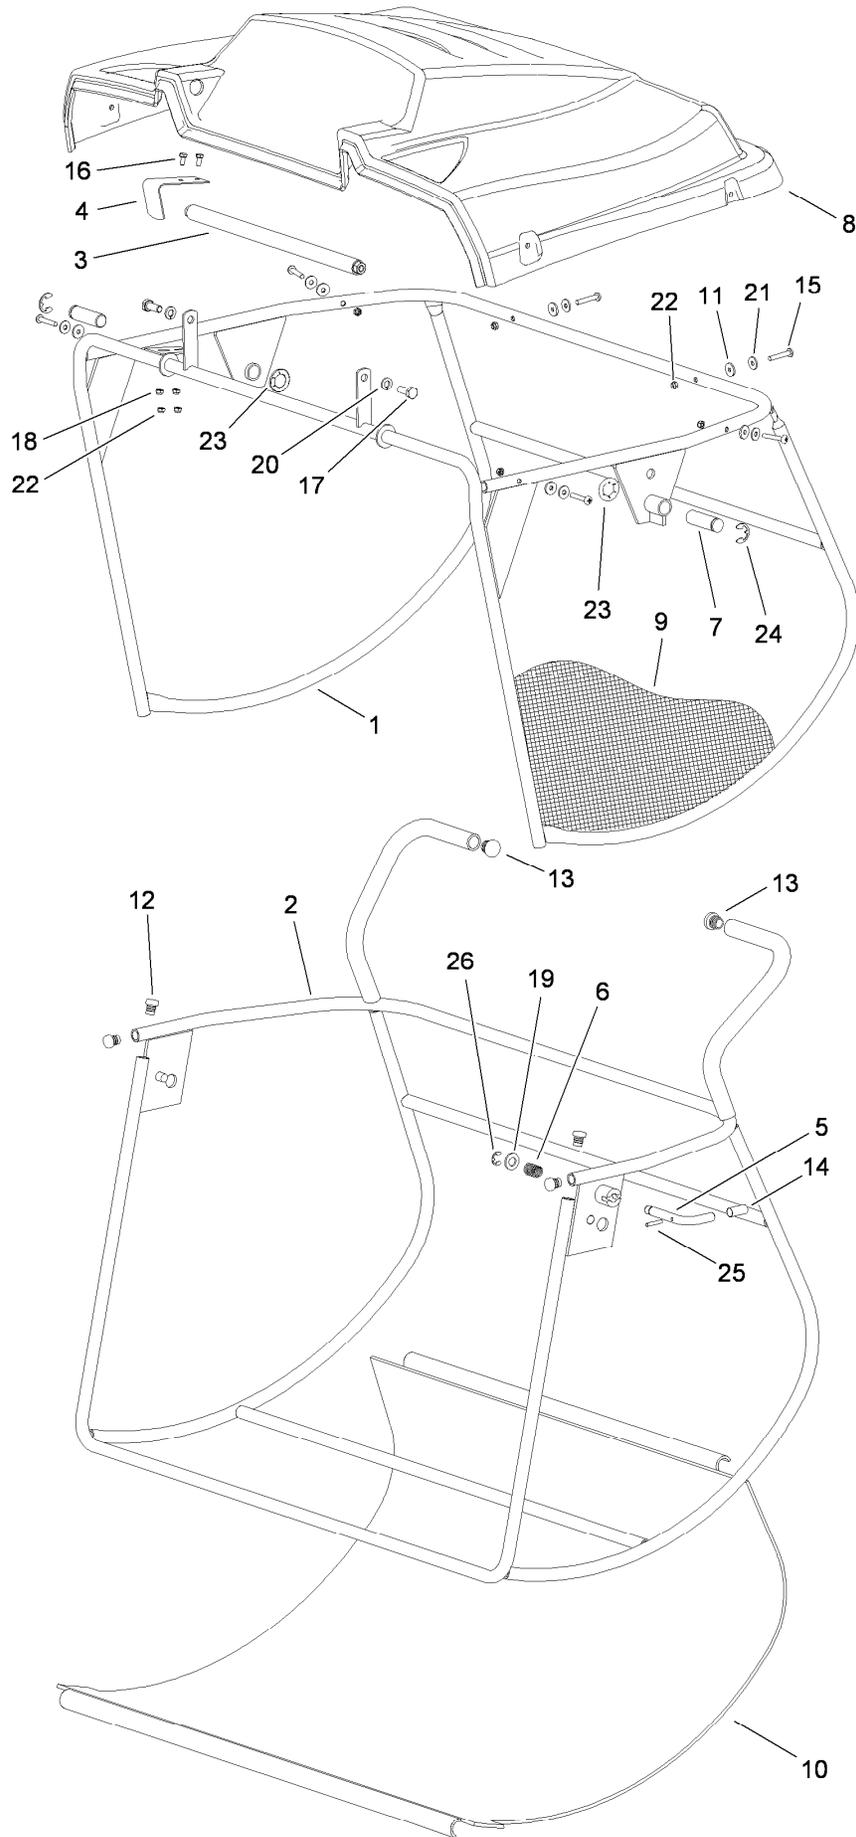


Grass Collector Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5463	1	Upper Frame ASM	14	119-5473	1	Cap
2	119-5464	1	Frame Assembly - Lower	15	119-5476	6	Screw
3	119-5465	1	Handle-Lift	16	119-5477	2	Screw
4	119-5466	1	Bracket-Collector, Interlock	17	33114-020	2	Screw-HH
5	119-5467	1	Lever-Collector Lock	18	52-6430	2	Washer
6	119-5468	1	Spring	19	33095-00	1	Washer-Flat
7	119-5469	2	Pin	20	104-2927	2	Washer-Spring
8	119-5470	1	Cover-Collector	21	104-2943	2	Washer-Flat
9	119-5471	1	Bag-Grass	22	87-5140	8	Nut-Lock
10	119-5472	1	Bag-Lower	23	119-5478	2	Ring-Lock, 16
11	104-2952	6	Washer-Rubber	24	119-5503	2	E-Clip
12	119-5475	4	Cap	25	119-5479	1	Pin
13	119-5474	2	Cap	26	104-3015	1	E-Clip

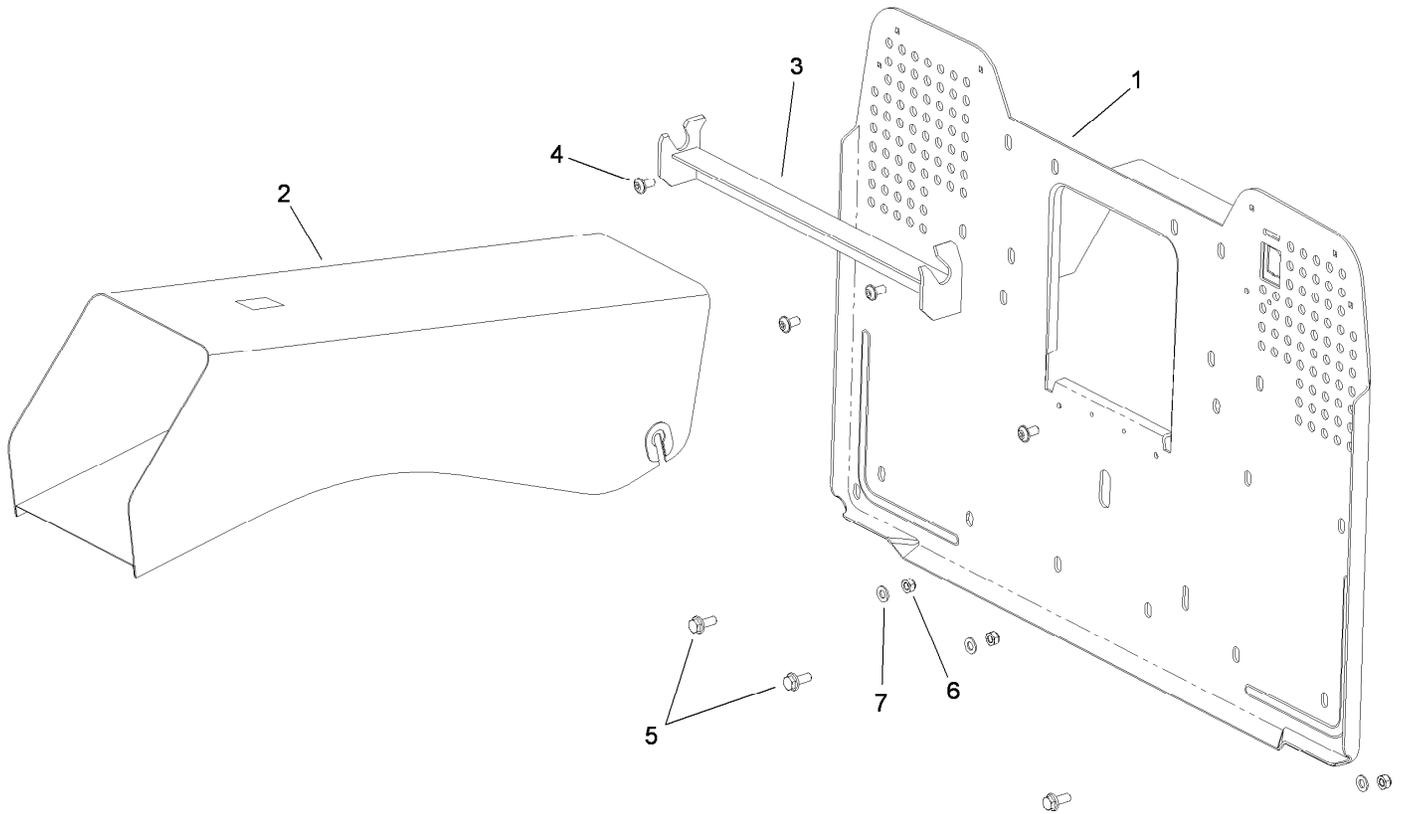

Tunnel Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5480	1	Collector Plate Assembly
2	119-5481	1	Tunnel
3	119-5482	1	Support-Collector
4	104-3060	4	Bolt-Carriage
5	119-5483	4	Screw
6	33024-00	4	Nut-Lock
7	33094-00	4	Washer-Plain

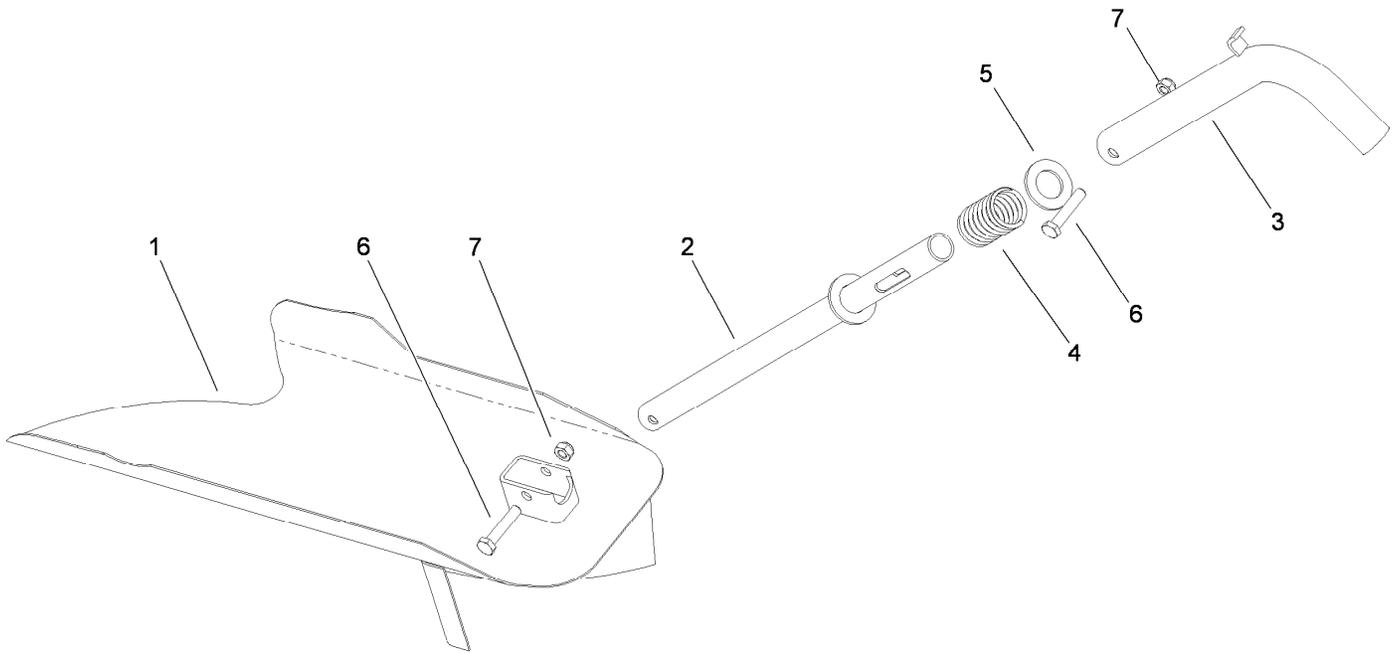

Mulch Plug Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5488	1	Shield-Mulching
2	119-5490	1	Tube-Bottom
3	119-5491	1	Tube-Top
4	119-5492	1	Spring
5	119-5493	1	Washer
6	33114-040	2	Screw-HH
7	33024-00	2	Nut-Lock

Attachments and Accessories

For 74560 DH 140 Lawn Tractor

Product Name	Model/Part
Rear Discharge Chute Kit	117-0054
Towing Hitch Kit	119-5555

Notes:

Notes:

Notes:



Count on it.