



Count on it.

Form No. 3364-132 Rev A

Parts Catalog

DH 200 Lawn Tractor

Model No. 74573—Serial No. 310000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

 
AR: as required
ASM: assembly
BBC: blade brake clutch
CARR: carriage
CCW: counter clock wise
CW: clockwise
DEG: degrees
ECM: electronic control module
EXT: external
FH: flat head
GA: gauge
HD: heavy-duty
HF: hex flange
HH: hex head
HHF: hex head flange
HHFTF: hex head flange thread forming
HJ: hex jam
HLH: hex lag head
HOC: height-of-cut

HSBH: hex socket button head
HSFH: hex socket flat head
HSH: hex socket head
HWH: hex washer head
HWHTF: hex washer head thread forming
HYD: hydraulic
LH: left hand
NI: nylon insert
NPTF: national pipe thread fine
PFH: phillips flat head
PPH: phillips pan head
PPHTF: phillips pan head thread forming
PRH: phillips round head
PTH: phillips truss head
PTO: power-take-off
RH: right hand
ROPS: roll-over protection system
RRB: rear roller brush

SFH: slotted fillister head
SHH: slotted hex head
SHWH: slotted hex washer head
SPH: slotted pan head
SQH: square head
SRH: slotted round head
STD: standard
TAP: self tapping
TTH: torx truss head

Contents


Frame Assembly.....	4
Front Axle Assembly	6
Steering Assembly.....	7
Hood Assembly.....	8
Engine Assembly	9
Operation - Brake and Bypass Assembly	10
Operation - Travel Pedal Assembly	11
Transmission Drive Assembly	12
Control Shaft Assembly Transmission Assembly No. 114-3155.....	14
Differential Gear Assembly Transmission Assembly No. 114-3155	15
Final Pinion Assembly Transmission Assembly No. 114-3155	16
Axle Shaft Assembly Transmission Assembly No. 114-3155	17
Brake Assembly Transmission Assembly No. 114-3155	18
Fan Pulley Assembly Transmission Assembly No. 114-3155	19
Range Shift Assembly Transmission Assembly No. 114-3155	20
Center Case Assembly Transmission Assembly No. 114-3155	21
Pump Shaft Assembly Transmission Assembly No. 114-3155	22
Motor Shaft Assembly Transmission Assembly No. 114-3155	23
Transaxle Case Assembly Transmission Assembly No. 114-3155.....	24
Grass Collector Assembly.....	25
Tunnel Assembly	26
Cutting Pan and Mower Housing Assembly	27
Cutting Pan and Drive System Assembly	28
Cutting Pan and Bag on Demand Assembly	30
Mower Lift Assembly	31
Harness Assembly	32
Electrical Switch No. 1 Assembly	33
Electrical Switch No. 2 Assembly	34
Electrical Switch No. 3 Assembly	35
Attachments and Accessories	36

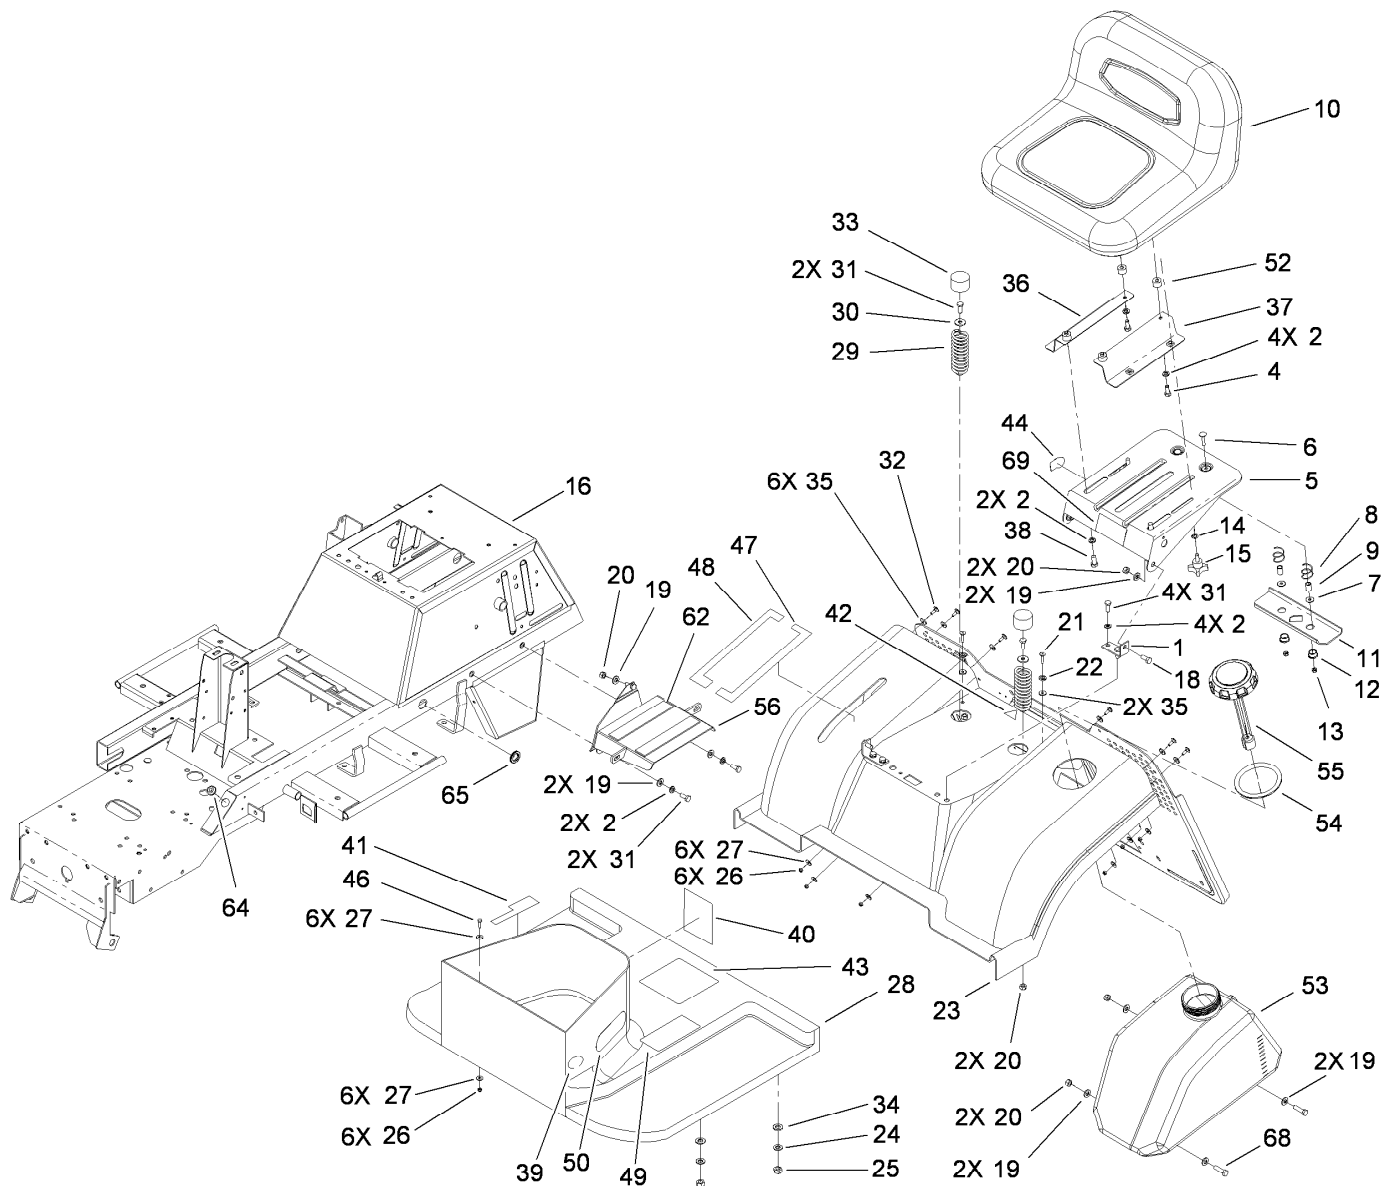

Frame Assembly

Ref.	Part Number	Qty.	Description
1	104-2926	2	Bracket-Support, Seat
2	3253-4	12	Washer-Lock
4	322-3	4	Screw-HH
5	104-2929	1	Support-Seat
6	104-2930	2	Bolt-Carriage
7	104-2931	2	Washer-Flat
8	104-2932	2	Spring-Seat
9	104-2933	2	Spacer-Split
10	107-2214	1	Seat ASM
11	104-2934	1	Bracket
12	104-2935	2	Bushing
13	33023-00	2	Nut-Lock
14	104-2936	2	Washer-Spring
15	104-2937	2	Knob-Adjustment
16	107-8948	1	Chassis-Frame
18	104-2939	2	Screw-Support, Seat
19	33094-00	9	Washer-Plain
20	33024-00	7	Nut-Lock
21	104-2940	2	Screw-HSFH
22	104-2941	2	Washer-Finish
23	114-3247	1	Fender-Body, Rear


Ref.	Part Number	Qty.	Description
24	33095-00	4	Washer-Flat
25	33025-00	4	Nut-Lock
26	87-5140	12	Nut-Lock
27	104-2943	18	Washer-Flat
28	104-2944	1	Footrest ASM
29	104-2945	2	Spring-Seat
30	104-2946	2	Washer-Plain
31	33114-020	8	Screw-HH
32	104-2948	6	Bolt-Carriage
33	104-2857	2	Cap-Hub
34	104-2951	4	Washer-Rubber
35	104-2952	8	Washer-Rubber
36	107-8915	1	Bracket-Seat, RH
37	107-8916	1	Bracket-Seat, LH
38	104-3195	2	Screw
39	104-3237	1	Decal-Brake, Parking
40	104-3238	1	Decal-Starting
41	104-3241	1	Decal-Operation, Hydro
42	104-3242	1	Decal-Bag To Frame
43	119-2725	1	Decal-Danger, Tractor
44	99-5340	1	Decal-Switch

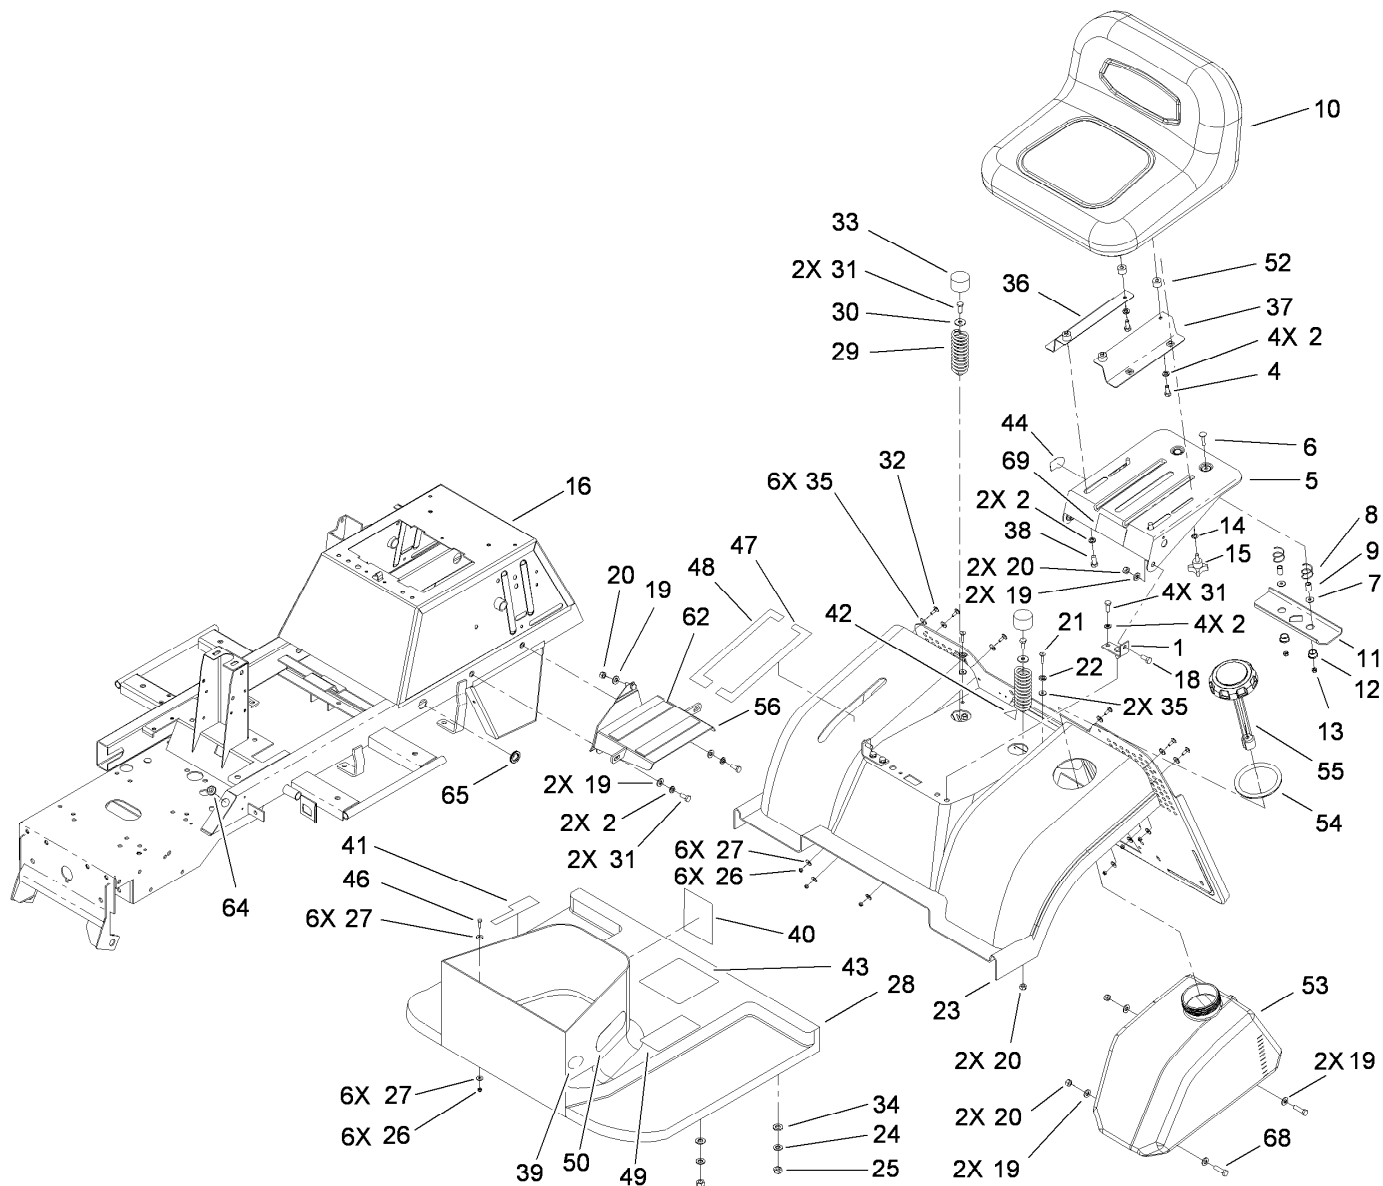 

Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
46	60-6910	6	Screw
47	104-3239	1	Decal-HOC, LH
48	104-3240	1	Decal-HOC, RH
49	106-8552	1	Decal-Operation
50	107-8974	2	Decal-Tower
52	107-8924	2	Shim-Seat
53	110-8689	1	Tank-Fuel
54	110-8691	1	Protector-Neck, Filler


Ref.	Part Number	Qty.	Description
55	110-8697	1	Cap-Fuel
56	110-8684	1	Bracket-Fuel, Tank
62	110-8690	2	Strip-Rubber, Fuel Tank
64	107-8950	1	Grommet
65	110-8683	1	Grommet
68	33114-030	2	Screw-HH
69	119-2730	1	Decal-Danger, Tractor

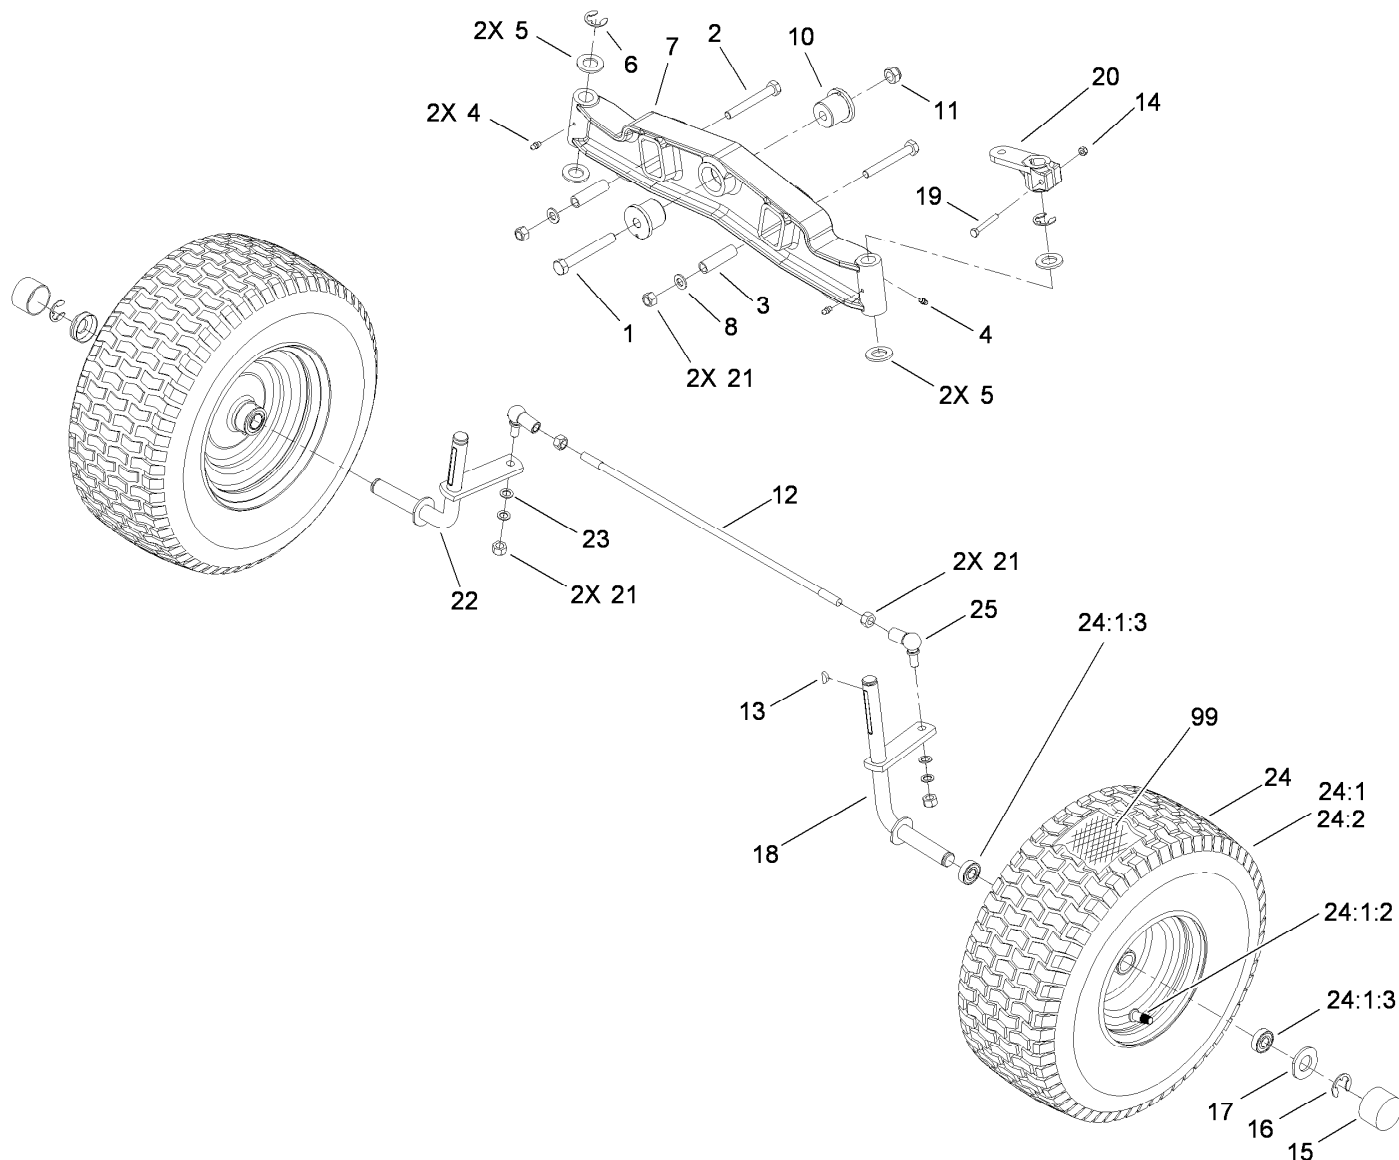 

Front Axle Assembly

Ref.	Part Number	Qty.	Description
1	33116-090	1	Screw-HH
2	33115-080	2	Screw-HH
3	107-8949	2	Spacer
4	104-2904	3	Fitting-Grease
5	104-2905	4	Washer-Flat
6	104-2891	2	Clip-Spring
7	104-2852	1	Axle-Front
8	104-2906	2	Washer-Flat
10	104-2890	2	Bushing-Axle, Front
11	104-2907	1	Nut-Locking, Self
12	104-2855	1	Rod-Tie, Front Axle
13	104-2856	1	Key-Woodruff
14	33023-00	1	Nut-Lock
15	104-2857	2	Cap-Hub
16	104-2891	2	Clip-Spring


Ref.	Part Number	Qty.	Description
17	107-8998	2	Retainer-Cap, Hub
18	108-8776	1	Spindle-LH
19	33113-045	1	Screw-HH
20	104-2862	1	Lever-Spindle, Steering
21	33025-00	6	Nut-Lock
22	107-8926	1	RH Spindle ASM
23	106-5757	4	Washer
24	110-9087	2	Wheel And Tire ASM
24:1	110-9088	1	Wheel ASM
24:1:2	106-8596	1	Valve-Tire
24:1:3	110513	2	Bearing-Wheel
24:2	99-2988	1	Tire
25	104-2876	2	Joint-Ball, Angle
99	232-39	1	Tube-Inner

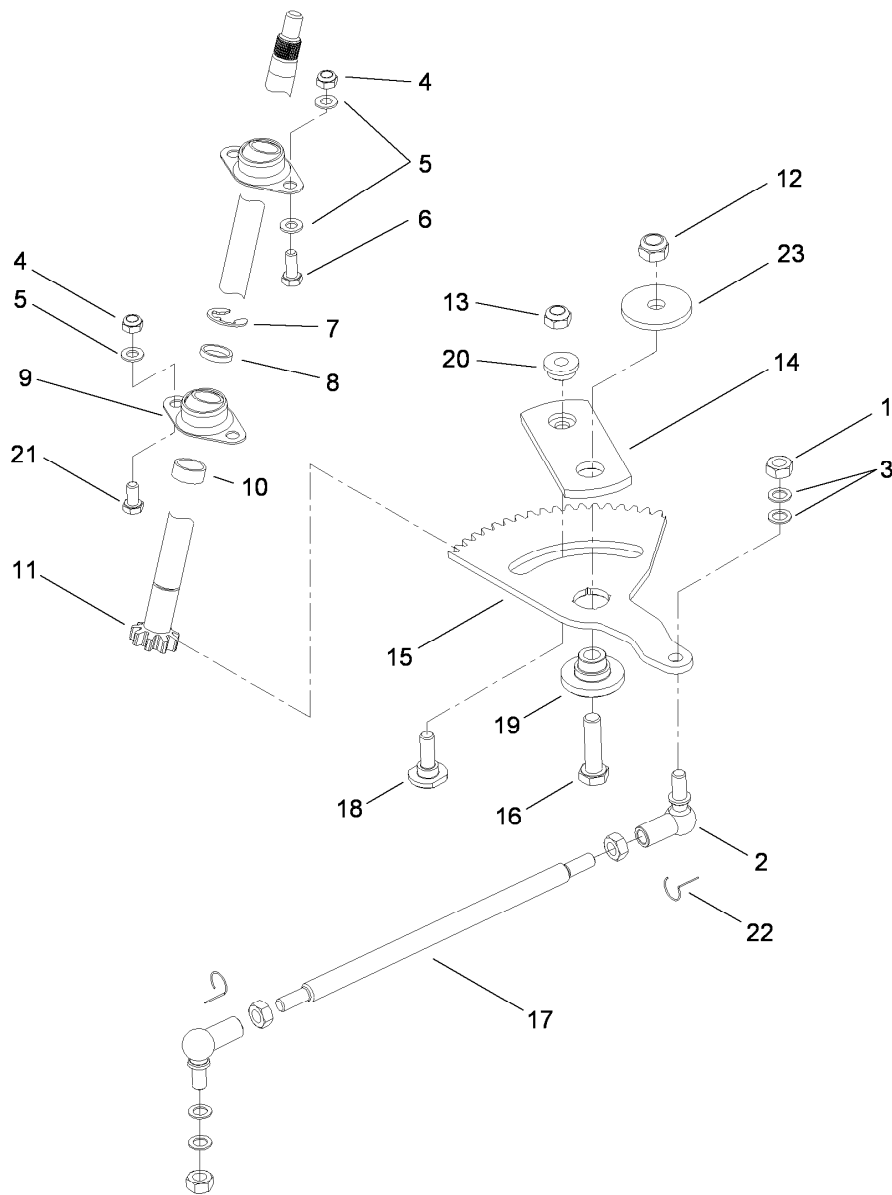 

Steering Assembly

Ref.	Part Number	Qty.	Description
1	33025-00	4	Nut-Lock
2	104-2876	2	Joint-Ball, Angle
3	106-5757	4	Washer
4	33024-00	4	Nut-Lock
5	33094-00	6	Washer-Plain
6	33114-020	2	Screw-HH
7	104-2891	1	Clip-Spring
8	104-2877	1	Spacer-Upper
9	104-2878	2	Bearing-Spherical
10	104-2879	1	Spacer-Lower
11	106-5773	1	Shaft-Steering
12	33026-00	1	Nut-Lock


Ref.	Part Number	Qty.	Description
13	33025-00	1	Nut-Lock
14	105-1238	1	Plate-Steering
15	104-2883	1	Gear-Sector
16	104-2910	1	Screw-Hex
17	104-2886	1	Link-Drag
18	105-1239	1	Bolt-Shoulder
19	105-1240	1	Pivot-Steering
20	105-1241	1	Bushing
21	33114-016	2	Screw-HH
22	104-2865	2	Stirrups-Locking
23	108-8892	1	Washer

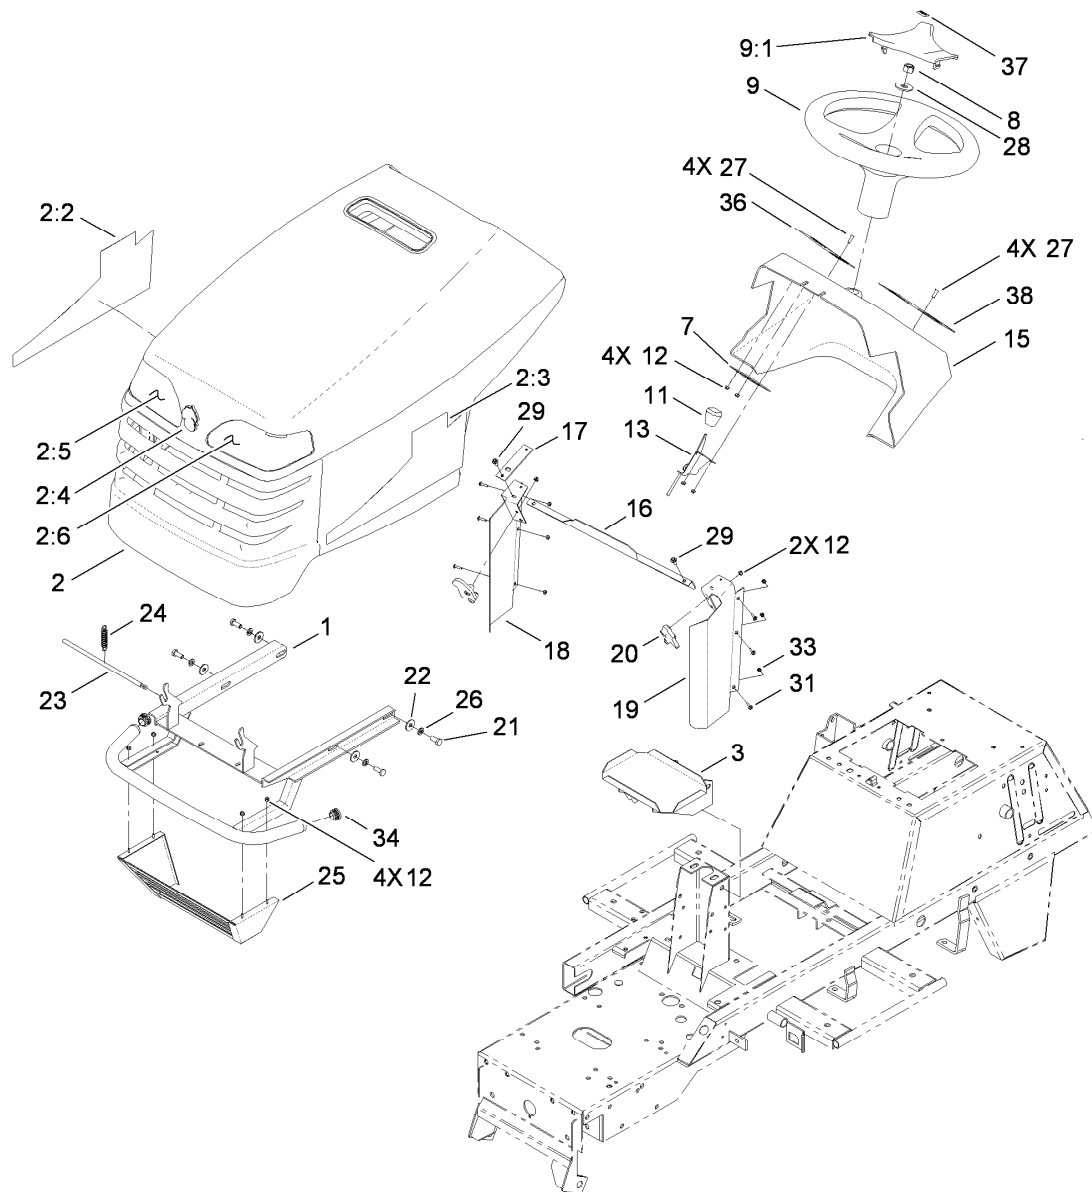 

Hood Assembly

Ref.	Part Number	Qty.	Description
1	107-2216	1	Support-Bumper
2	107-8986	1	Hood-Assembly
2:2	107-8913	1	Decal-Hood, RH
2:3	107-8902	1	Decal-Hood, LH
2:4	95-4248	1	Emblem
2:5	107-8983	1	Lens-Headlamp, RH
2:6	107-8984	1	Lens-Headlamp, LH
3	110-8679	1	Tray-Battery
7	104-2962	1	Brace
8	33026-00	1	Nut-Lock
9	98-1471	1	Wheel-Steering
9:1	98-1468	1	Cover-Wheel, Steering
11	66-0120	1	Knob
12	87-5140	10	Nut-Lock
13	106-4166	1	Cable-Throttle And Choke
15	104-2968	1	Panel-Dash
16	114-3132	1	Brace
17	104-2971	1	Bracket
18	104-2972	1	Panel-Right

Ref.	Part Number	Qty.	Description
19	104-2973	1	Panel-Left
20	92-6960	2	Latch-Hood
21	33114-020	4	Screw-HH
22	104-2946	4	Washer-Plain
23	104-2974	1	Bar-Safety
24	104-2975	1	Spring-Hood
25	107-2218	1	Guard-Muffler
26	3253-4	4	Washer-Lock
27	106-5759	4	Screw
28	106-5758	1	Washer
29	104-2980	2	Screw
31	107-8918	6	Screw
33	104-2985	6	Nut-Hex
34	107-8943	2	Plug-End, Tube
36	107-8920	1	Decal-Dash Throttle And Ignition
37	98-1459	1	Decal
38	104-3235	1	Decal-PTO

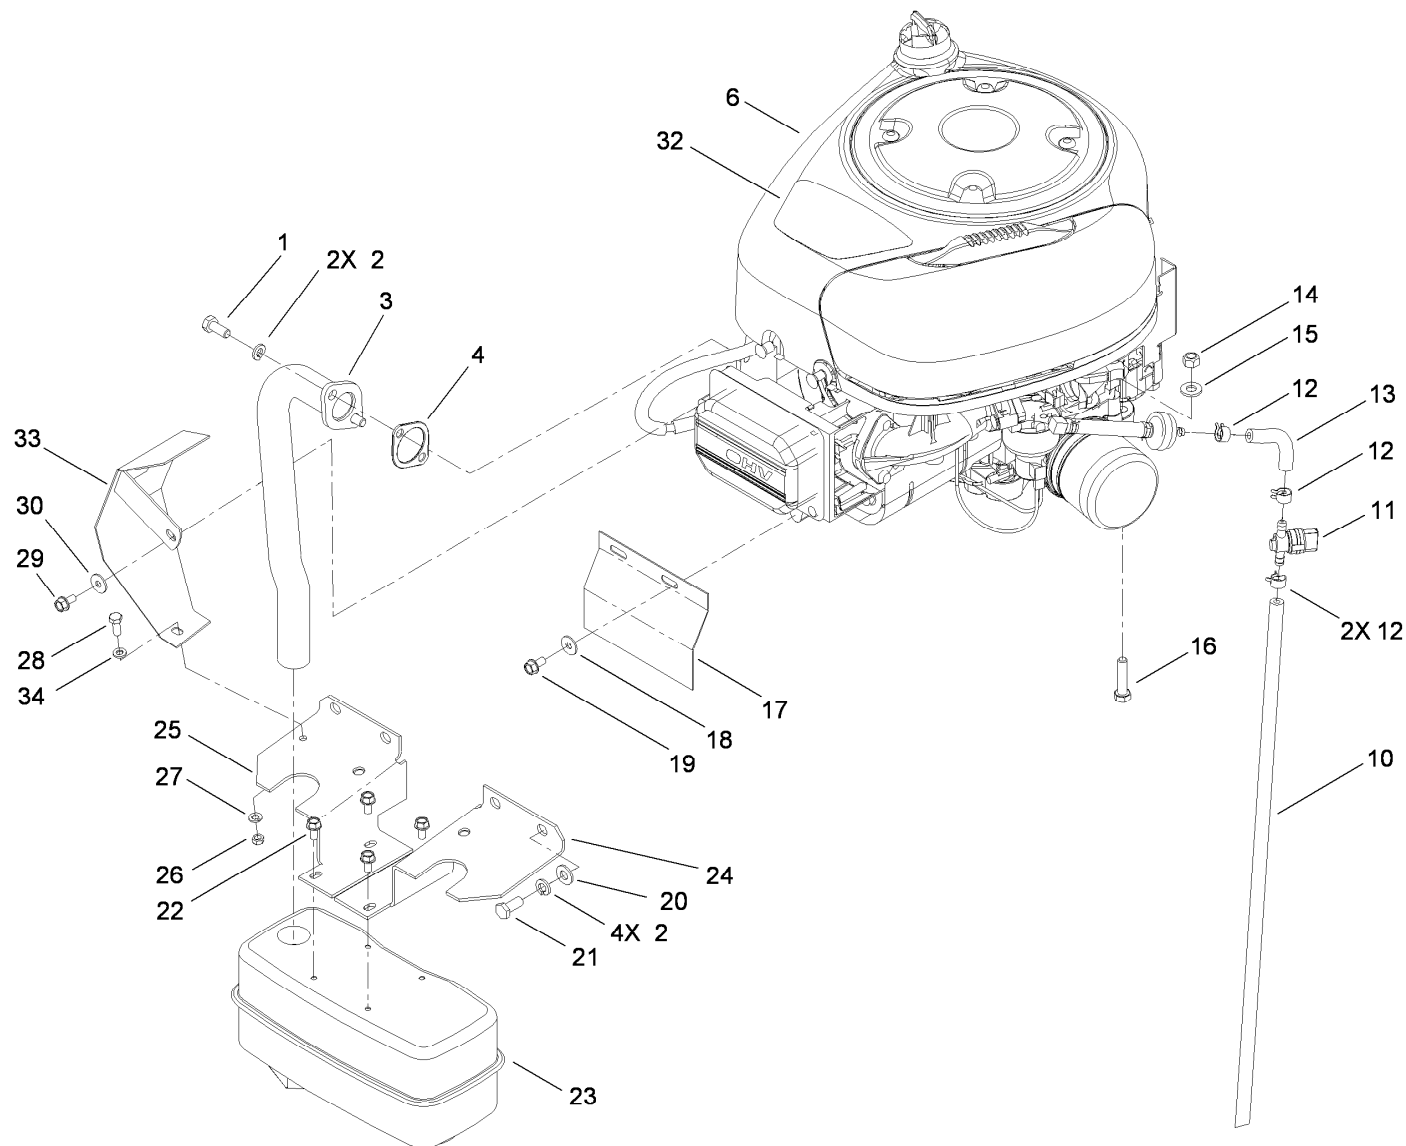 


Engine Assembly

Ref.	Part Number	Qty.	Description
1	322-3	2	Screw-HH
2	42-9850	6	Washer-Lock, Spring
3	104-3221	1	Tube-Exhaust
4	88-4410	1	Gasket-Exhaust
6		1	Engine-Briggs & Stratton, 31A6070117B1 ●■
10	110-8692	1	Line-Fuel
11	104-3224	1	Valve-Tank, Fuel
12	104-3212	4	Clamp-Line, Fuel
13	104-3213	1	Line-Fuel
14	33024-00	4	Nut-Lock
15	33094-00	4	Washer-Plain
16	33114-035	4	Screw-HH
17	104-3222	1	Cover-Front
18	104-2931	2	Washer-Flat

Ref.	Part Number	Qty.	Description
19	106-5763	2	Screw
20	33094-00	4	Washer-Plain
21	33114-020	4	Screw-HH
22	106-5763	4	Screw
23	104-3229	1	Muffler
24	104-3214	1	Guard-Muffler, LH
25	104-3215	1	Guard-Muffler, RH
26	33013-00	1	Nut-Hex
27	104-3186	1	Washer-Spring
28	33113-016	1	Screw-HH
29	106-5763	1	Screw
30	104-2931	1	Washer-Flat
32	107-4924	1	Decal-Engine, I/C
33	105-1242	1	Cover-Manifold, Exhaust
34	33093-00	1	Washer-Flat

● Not serviced separately

 
■ Obtain parts from www.briggsandstratton.com

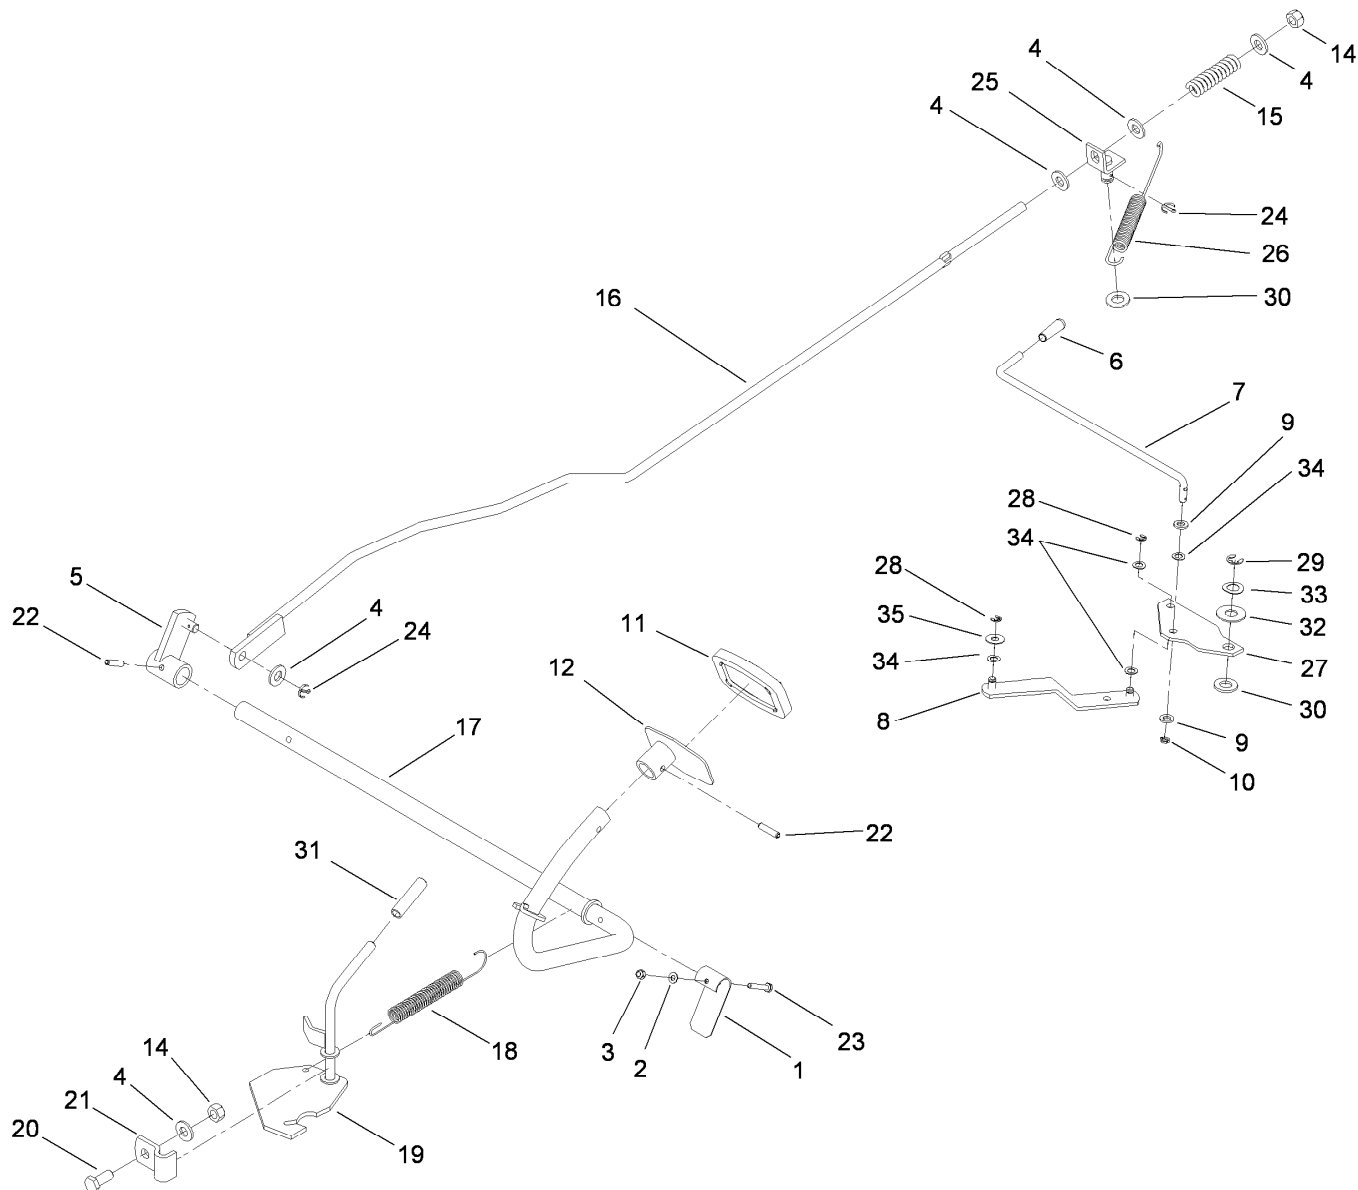

Operation - Brake and Bypass Assembly

Ref.	Part Number	Qty.	Description
1	104-2992	1	Lever-Spring
2	104-2984	1	Washer
3	104-2985	1	Nut-Hex
4	33094-00	5	Washer-Plain
5	104-2993	1	Bracket-Rod, Brake
6	108-8708	1	Cap-Bypass Lever, Hydro
7	104-2995	1	Rod-Lever, Bypass
8	107-8944	1	Lever-Bypass
9	104-3193	2	Washer
10	104-2997	1	Pin-Cotter
11	104-3018	1	Pad-Pedal
12	114-3246	1	Pedal-Brake
14	33024-00	2	Nut-Lock
15	104-3002	1	Spring-Brake
16	104-3003	1	Rod-Connecting, Brake
17	104-3004	1	Shaft-Brake
18	104-3005	1	Spring-Brake, Hand


Ref.	Part Number	Qty.	Description
19	104-3006	1	Lever-Brake, Hand
20	33114-020	1	Screw-HH
21	104-3007	1	Clamp-Lever, Parking Brake
22	104-3008	2	Pin-Spring
23	104-3009	1	Screw-Hex
24	104-3016	2	Pin-Cotter
25	104-3011	1	Bracket-Rod, Brake
26	104-3012	1	Spring
27	104-3323	1	Plate-Bypass
28	104-3014	2	Stirrup
29	104-3015	1	Stirrup
30	33095-00	2	Washer-Flat
31	104-3247	1	Cap
32	106-5768	1	Washer
33	106-5769	1	Washer
34	106-5770	4	Washer
35	106-5771	1	Washer

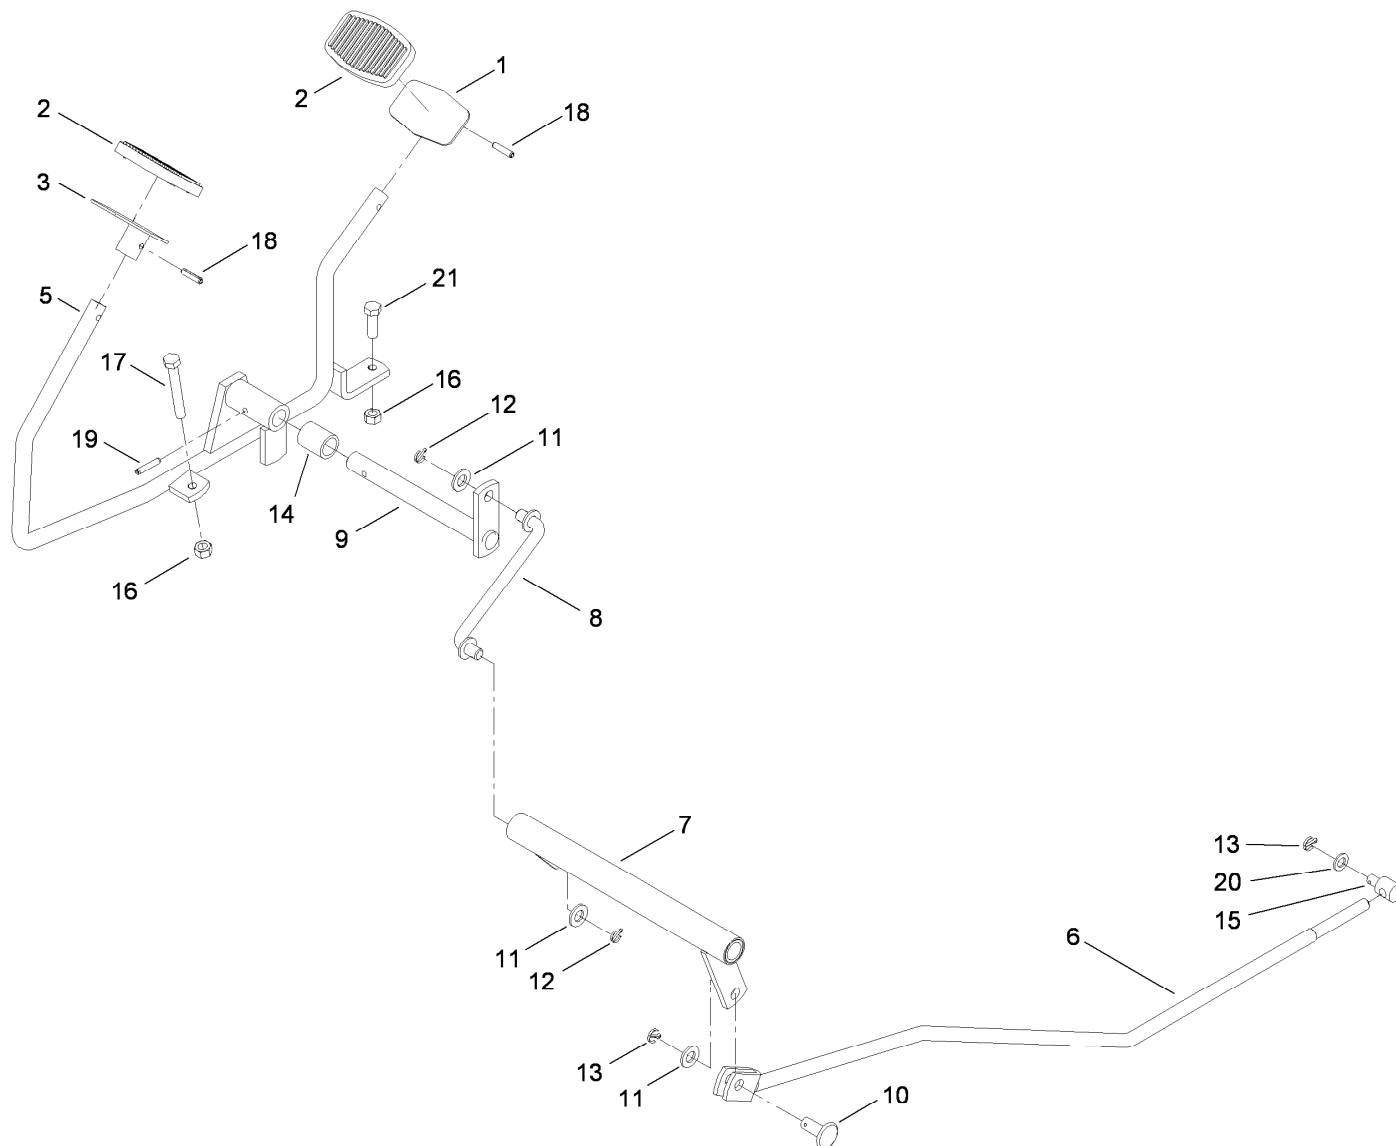 

Operation - Travel Pedal Assembly

Ref.	Part Number	Qty.	Description
1	104-3017	1	Pedal-Rear, Travel
2	104-3018	2	Pad-Pedal
3	114-3248	1	Pedal-Travel, Forward
5	104-3021	1	Rod-Travel
6	104-3022	1	Rod-Tie
7	104-3023	1	Shaft-Diagonal
8	104-3024	1	Link-Formed
9	104-3025	1	Shaft-Diagonal
10	104-3026	1	Pin
11	33095-00	3	Washer-Flat

Ref.	Part Number	Qty.	Description
12	104-3016	2	Pin-Cotter
13	104-3027	2	Pin-Cotter
14	104-3028	1	Spacer
15	104-3029	1	Pin
16	33014-00	2	Nut-Hex
17	33114-060	1	Screw-HH
18	104-3008	2	Pin-Spring
19	104-3030	1	Pin-Spring
20	104-3031	1	Washer
21	33114-025	1	Screw-HH

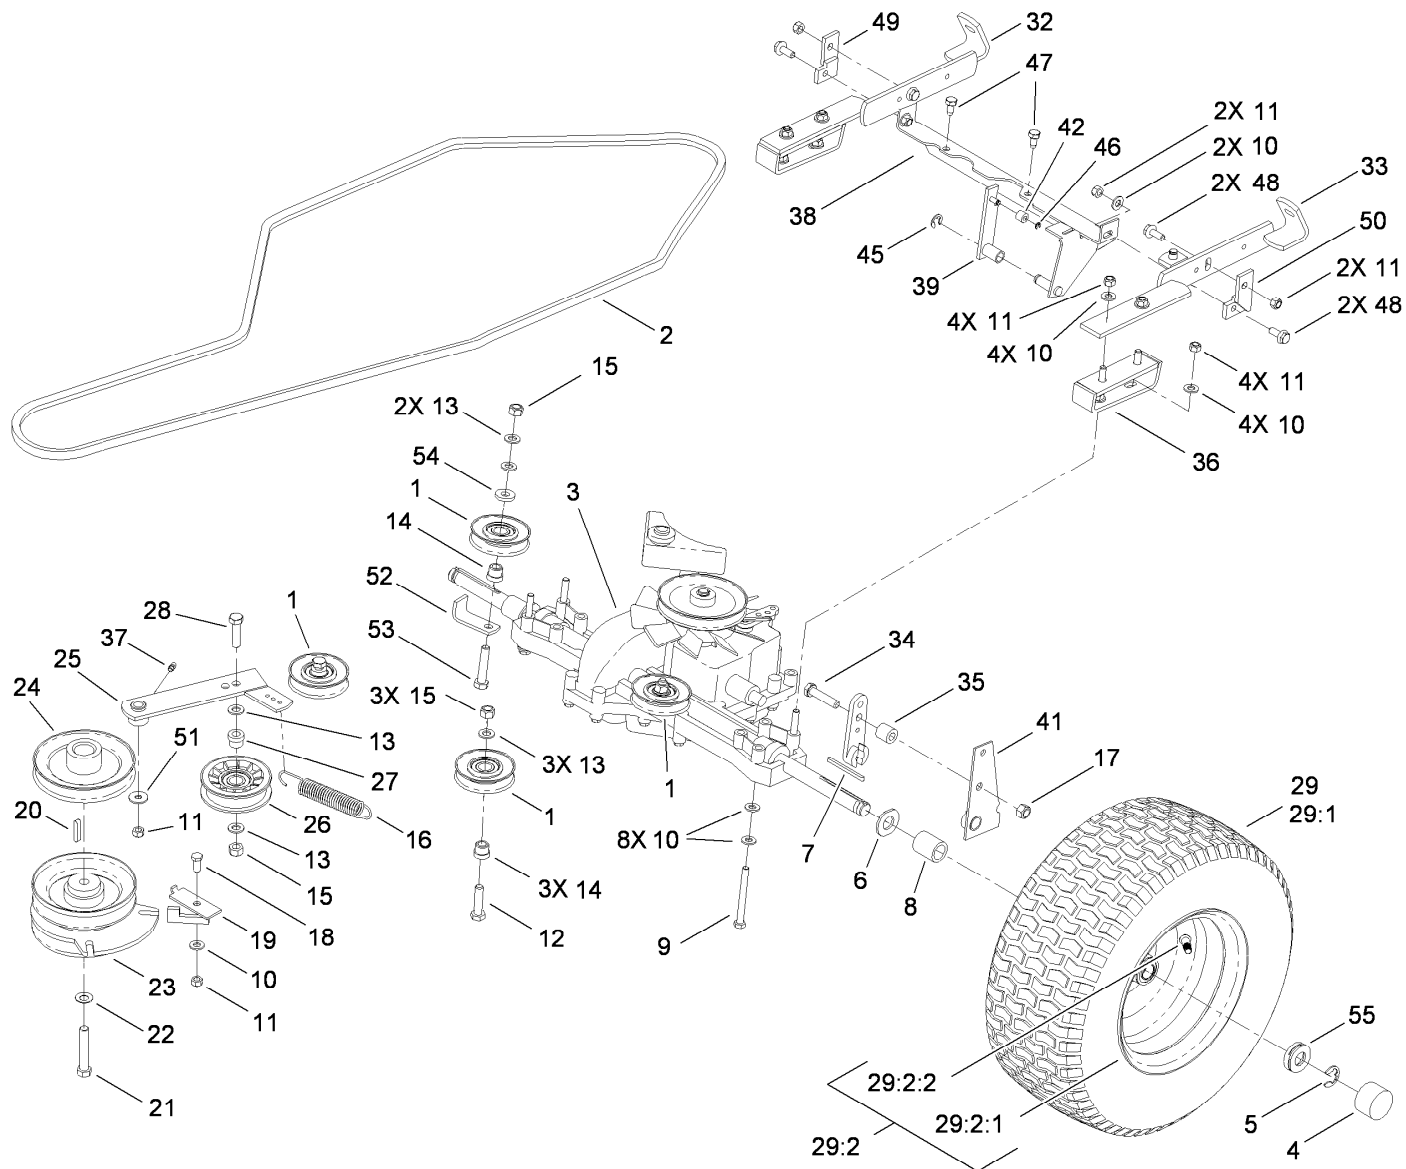 


Transmission Drive Assembly

Ref.	Part Number	Qty.	Description
1	104-2887	4	Pulley-Idler
2	104-2888	1	V-Belt-Traction
3	114-3155	1	Transmission
4	104-2857	2	Cap-Hub
5	104-2891	2	Clip-Spring
6	104-3206	2	Washer
7	104-2892	2	Key-Square
8	104-2895	2	Spacer-Axle
9	33114-080	4	Screw-HH
10	33094-00	19	Washer-Plain
11	33024-00	14	Nut-Lock
12	33115-040	3	Screw-HH
13	33095-00	7	Washer-Flat
14	104-2896	4	Bushing-Idler
15	33025-00	5	Nut-Lock
16	104-2897	1	Spring
17	33025-00	1	Nut-Lock
18	33114-020	1	Screw-HH
19	104-2898	1	Retainer

Ref.	Part Number	Qty.	Description
20	104-2899	1	Key-Square
21	3212-10	1	Screw-HH
22	93-9043	1	Washer-Spring, Belleville
23	104-3334	1	Clutch-Electric
24	104-2911	1	Pulley-Engine
25	104-2912	1	Arm-Idler
26	104-2913	1	Pulley-Idler
27	104-2896	1	Bushing-Idler
28	33115-040	1	Screw-HH
29		2	Wheel And Tire ASM ●
29:1	99-2996	1	Tire
29:2	107-8928	1	Wheel ASM
29:2:1		1	Rim (18X9.5X8) ●
29:2:2	106-8596	1	Valve-Tire
32	106-8594	1	Bracket-Right
33	106-8593	1	Bracket-Left
34	33115-045	1	Screw-HH
35	104-2925	1	Sleeve
36	107-8947	2	Bracket-Support

 ● Not serviced separately

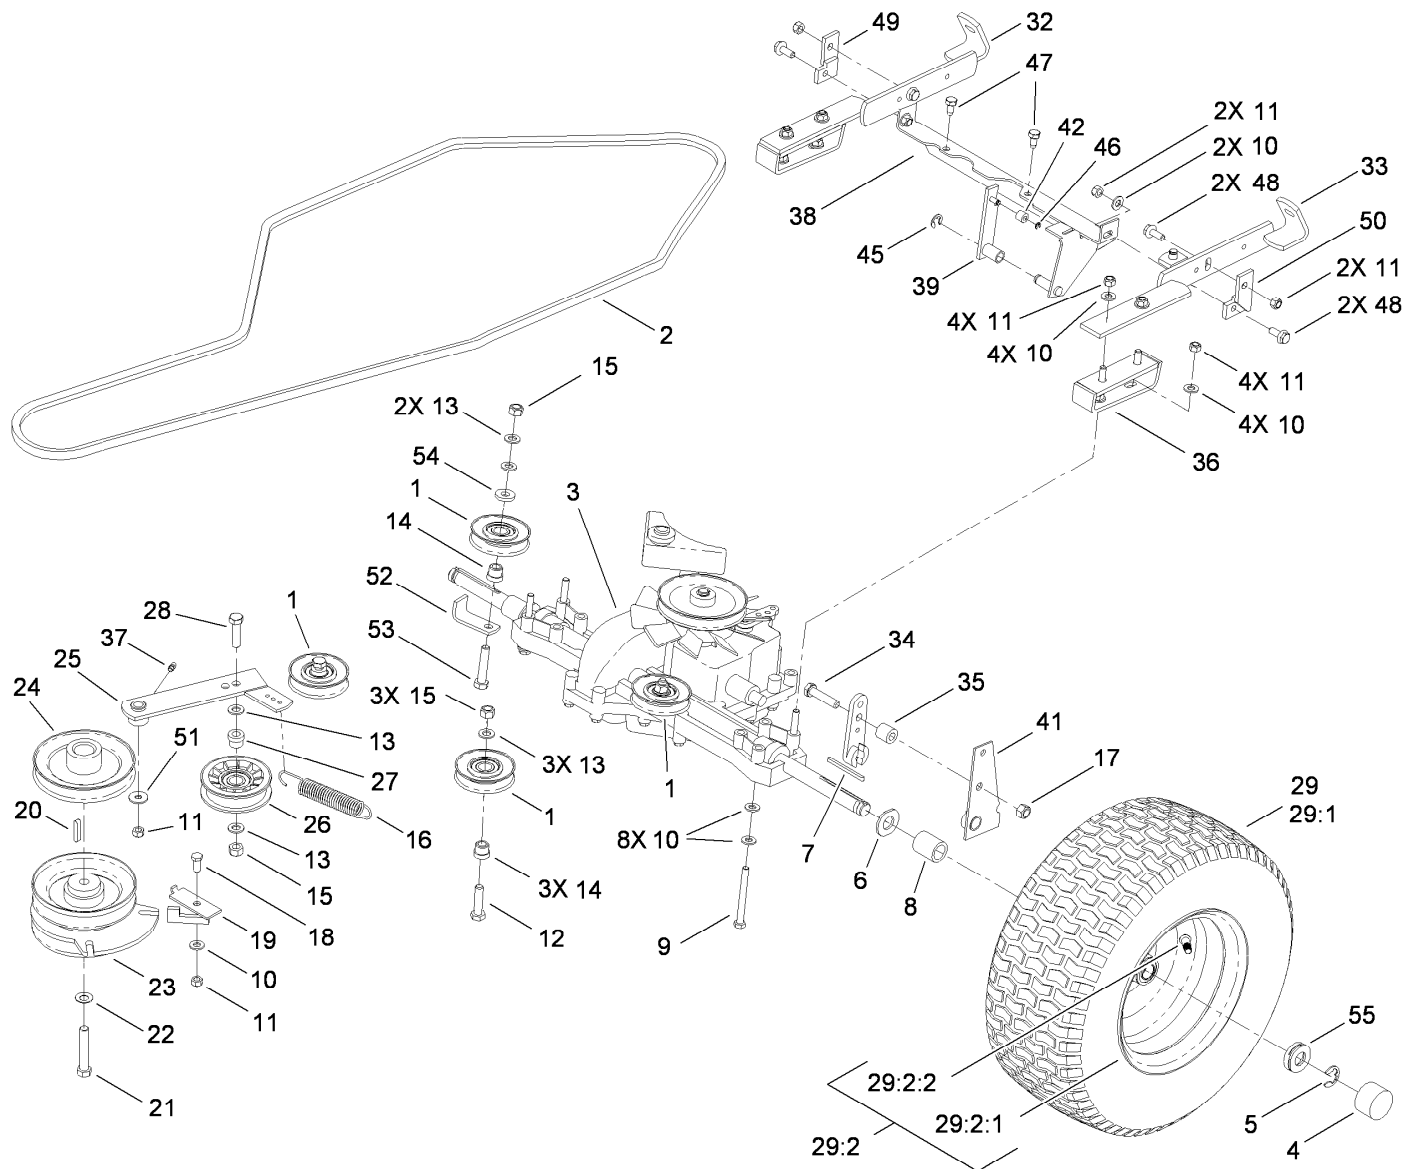


Transmission Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
37	104-2904	1	Fitting-Grease
38	104-3327	1	Bar ASM
39	104-3328	1	Arm-Switch
41	104-3326	1	Tenon
42	104-3329	1	Roller
45	104-3341	1	Stirrup
46	104-3014	1	Stirrup
47	104-3344	2	Screw-Thread Forming


Ref.	Part Number	Qty.	Description
48	104-3065	4	Screw-Hex
49	107-8945	1	Bracket-Right
50	107-8946	1	Bracket-Left
51	104-2946	2	Washer-Plain
52	108-8732	1	Retainer-Belt
53	33115-050	1	Screw-HH
54	108-8709	1	Washer-Flat
55	107-8998	2	Retainer-Cap, Hub

 ● Not serviced separately

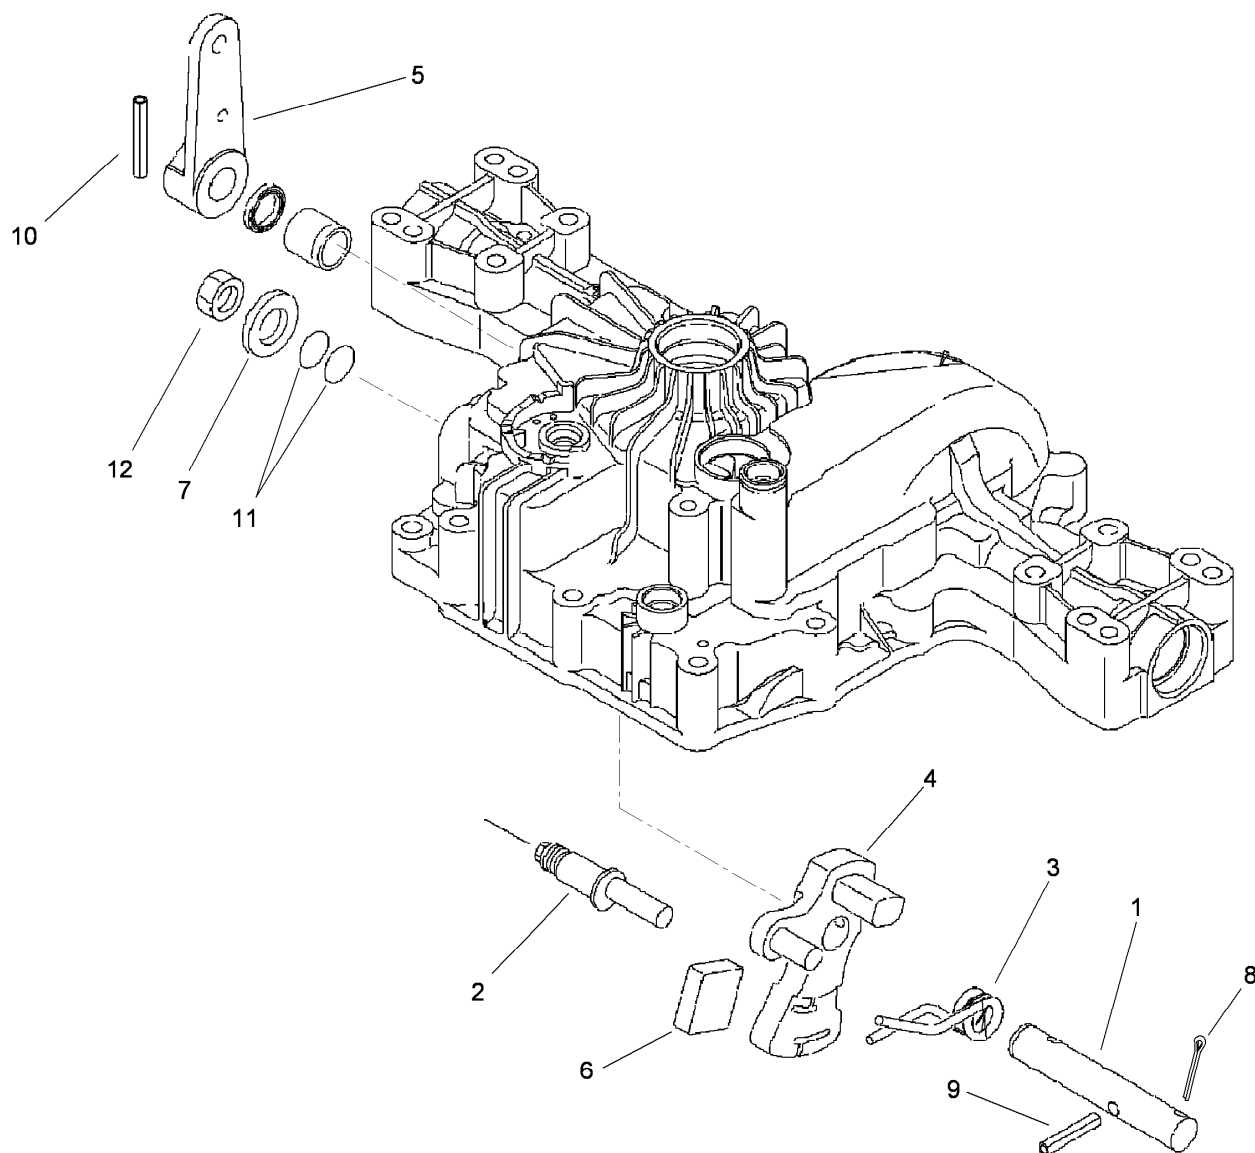


Control Shaft Assembly Transmission Assembly No. 114-3155

Ref.	Part Number	Qty.	Description
1	114-3181	1	Shaft-Control
2	104-3292	1	Fulcrum-Eccentricity
3	114-3217	1	Spring-Torsion
4	114-3180	1	Arm-Control
5	104-3342	1	Arm-Transaxle
6	104-3296	1	Plate-Jerky
7	93-0417	1	Washer
8	114-3182	1	Pin-Cotter
9	104-3297	1	Pin
10	93-0411	1	Pin-Roll
11	104-3298	2	Packing
12	93-0420	1	Nut

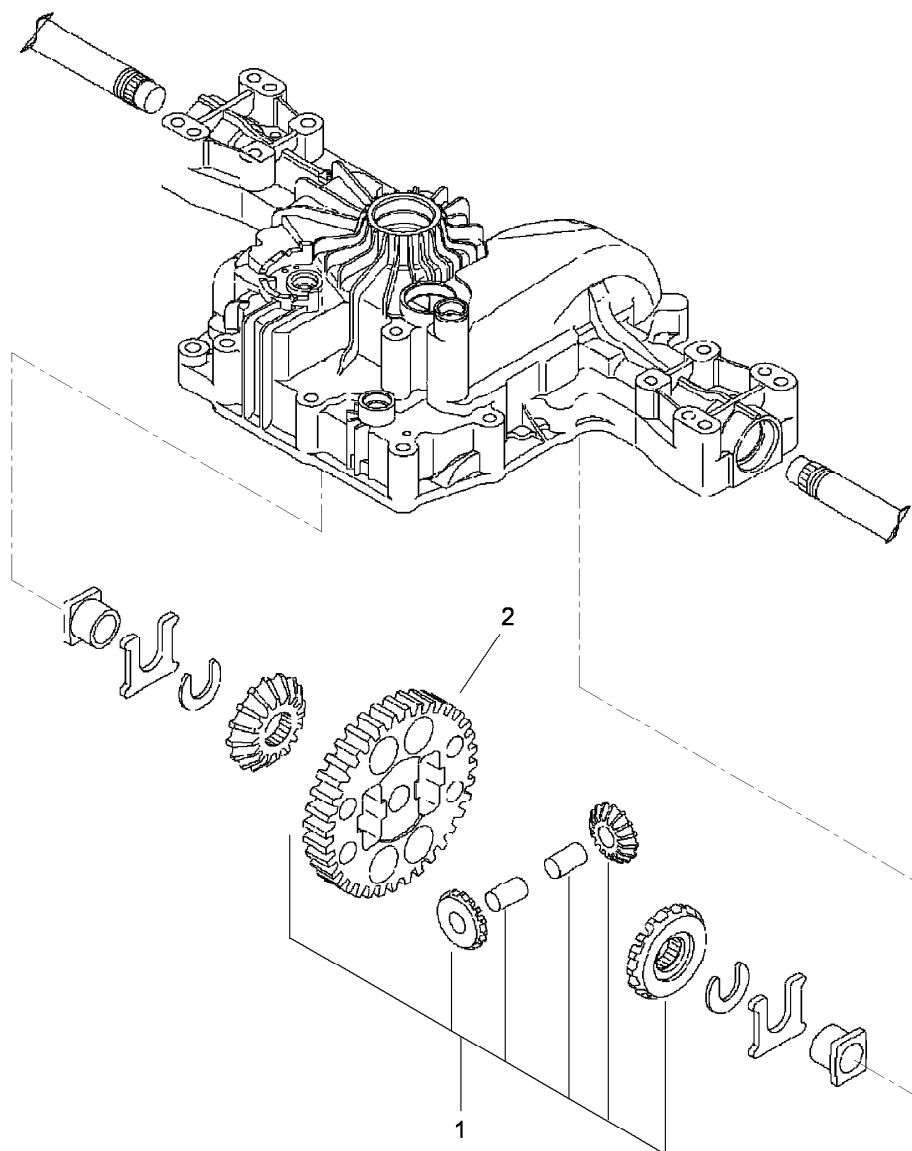 


Differential Gear Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3299	1	Differential Gear Kit
2	104-3301	1	Gear-Final

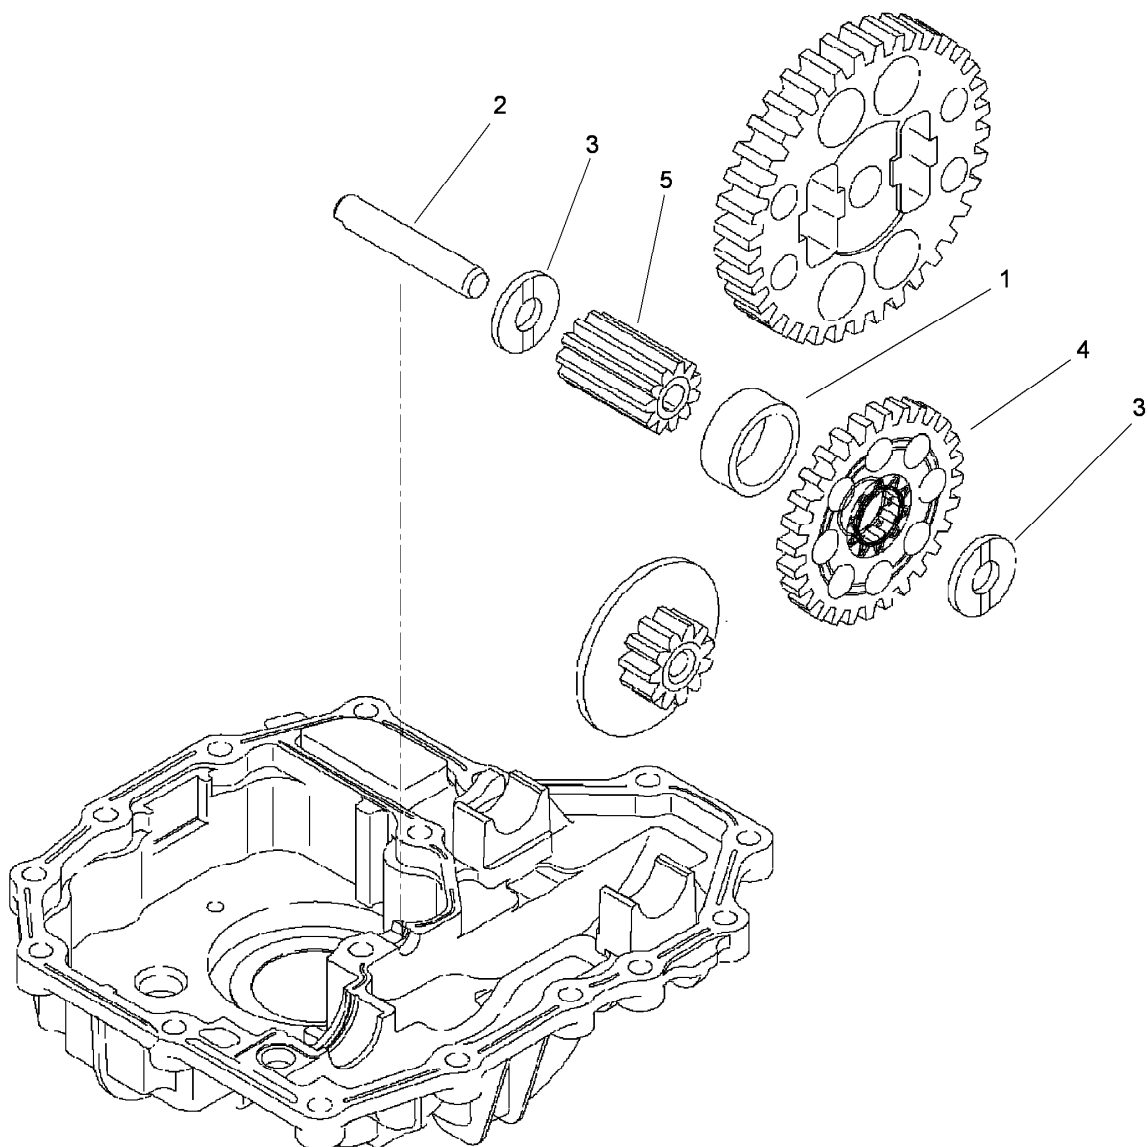 


Final Pinion Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3302	1	Collar-Final Pinion
2	104-3303	1	Shaft-Reduction
3	104-3304	2	Washer
4	104-3305	1	Gear-Reduction
5	104-3306	1	Pinion-Final

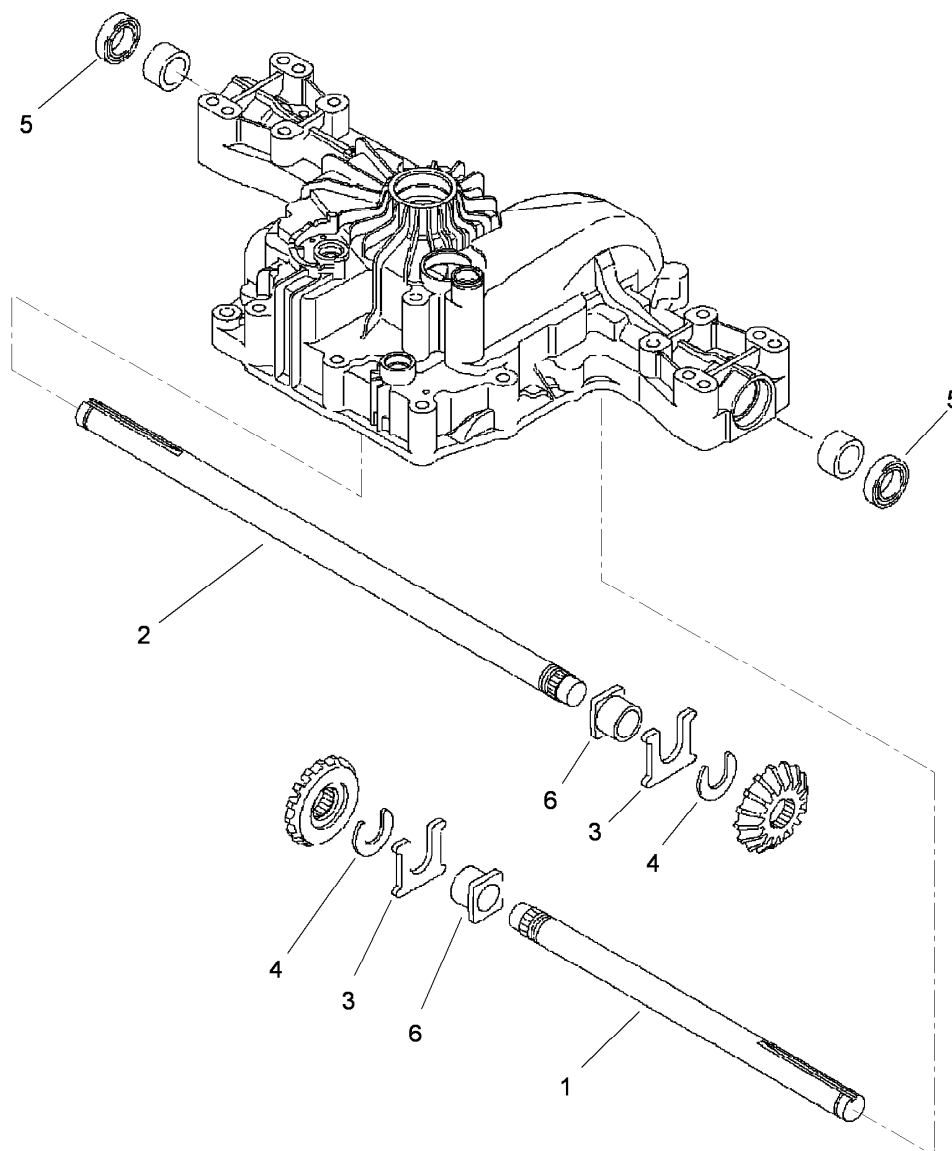 


Axle Shaft Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3307	1	Shaft-Axle, LH
2	104-3308	1	Shaft-Axle, RH
3	104-3309	2	Washer-Thrust
4	104-3310	2	Ring
5	104-3311	2	Seal
6	104-3312	2	Bushing

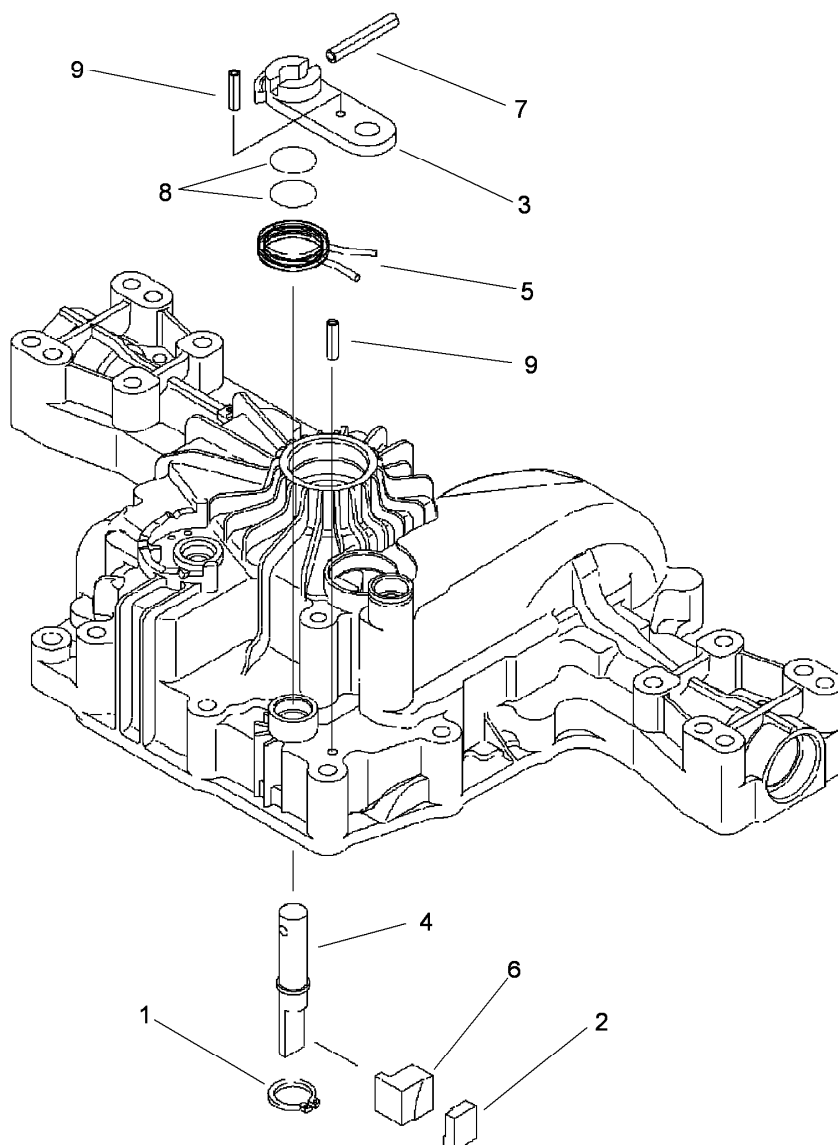 


Brake Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3313	1	Ring
2	104-3314	1	Shoe-Brake
3	104-3315	1	Arm-Brake
4	104-3316	1	Shaft-Brake
5	104-3317	1	Spring-Return, Brake
6	104-3318	1	Actuator-Brake
7	92-0767	1	Pin
8	93-0418	2	O-Ring
9	104-3319	2	Pin

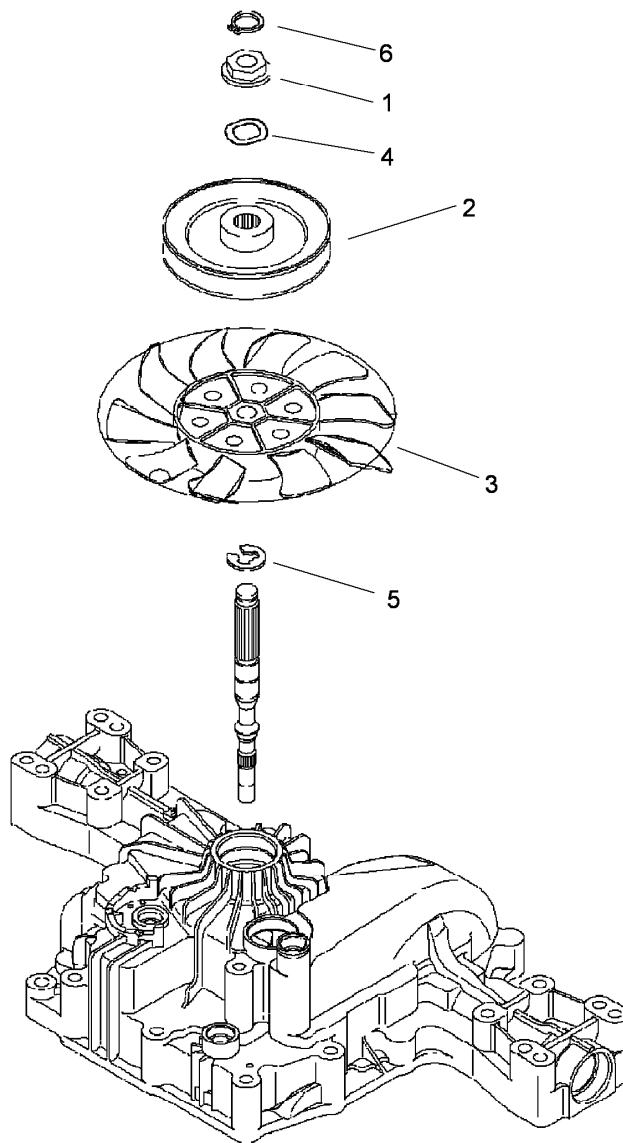 


Fan Pulley Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3320	1	Collar-Spline
2	104-3197	1	Pulley-Transmission
3	104-3199	1	Fan- Transmission
4	104-3321	1	Washer-Lock
5	93-0387	1	E-Ring
6	104-3198	1	E-Ring

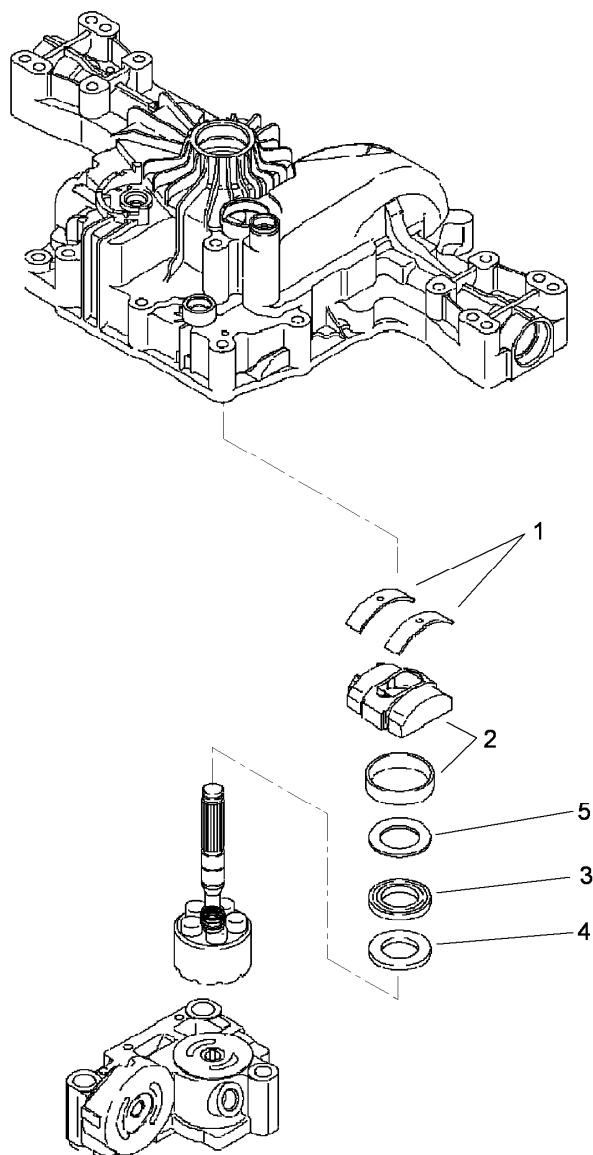 


Range Shift Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3286	2	Metal-Thrust
2	104-3287	1	Plate-Swash
3	104-3288	1	Bearing
4	104-3289	1	Plate-Thrust, A
5	104-3290	1	Plate-Thrust, B

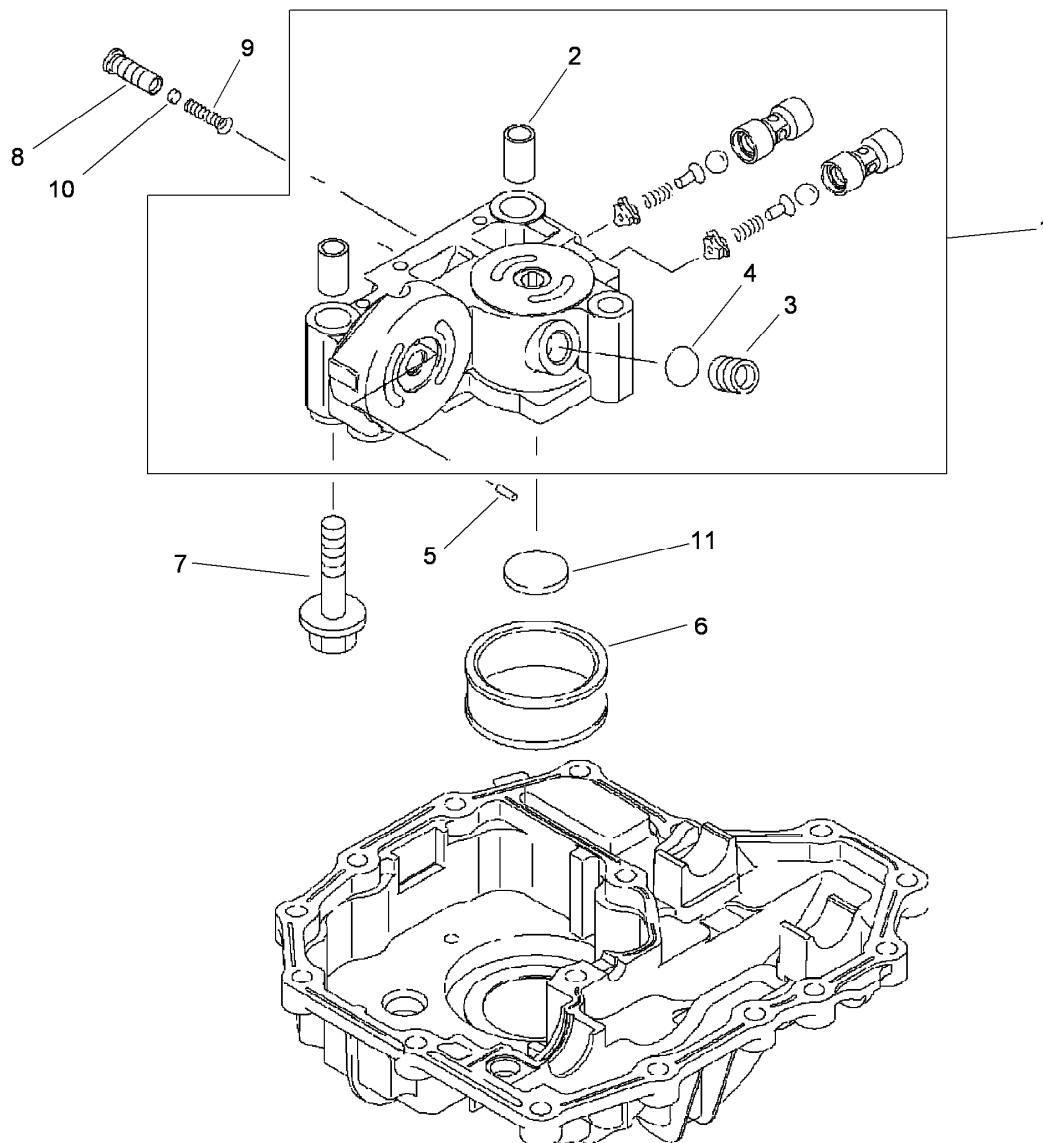 


Center Case Assembly Transmission Assembly No. 114-3155

Ref.	Part Number	Qty.	Description
1	104-3267	1	Case-Center
2	104-3268	2	Pin-Knock
3	104-3269	1	Plug
4	93-0419	1	Packing
5	104-3270	1	Pin
6	104-3271	1	Filter
7	104-3272	3	Bolt
8	104-3273	2	Valve
9	104-3274	2	Spring
10	104-3275	2	Filter
11	104-3257	1	Magnet

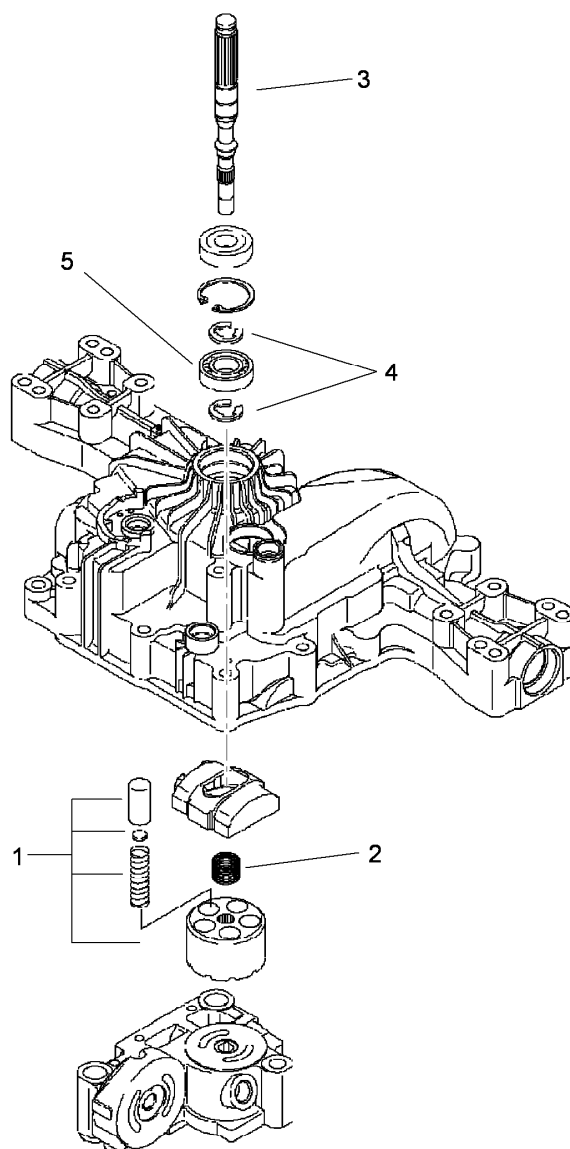 


Pump Shaft Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3276	1	Block-Cylinder
2	104-3277	1	Spring-Pump
3	104-3278	1	Shaft-Pump
4	93-0387	2	E-Ring
5	93-0374	1	Bearing-Ball

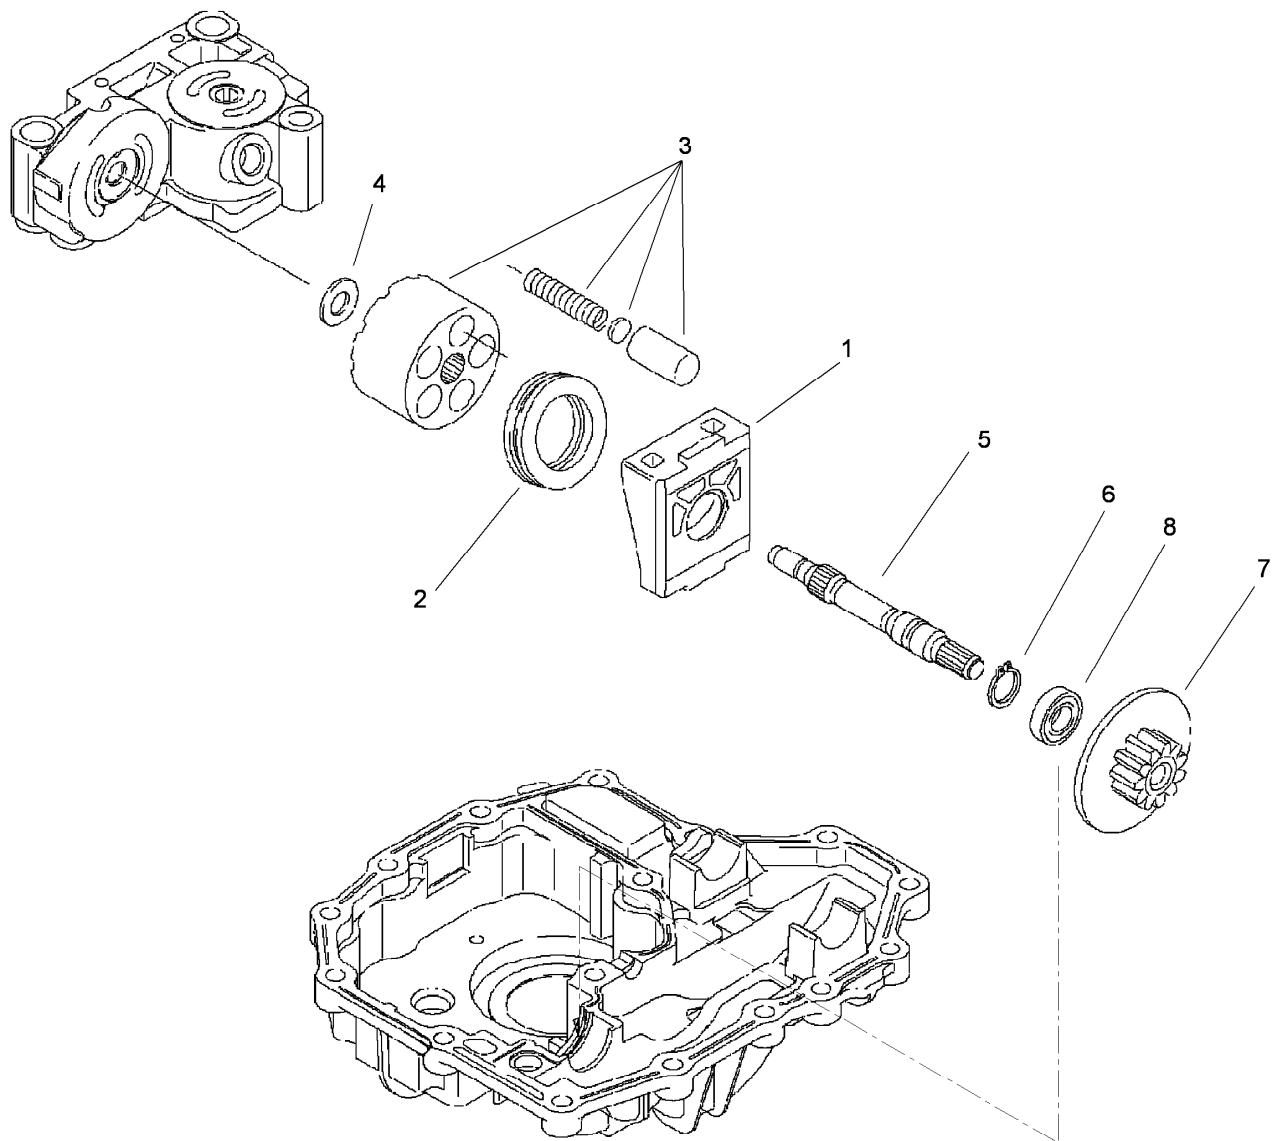 

Motor Shaft Assembly Transmission Assembly No. 114-3155


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3279	1	Housing
2	104-3280	1	Bearing
3	104-3281	1	Block-Cylinder
4	104-3282	1	Washer
5	104-3283	1	Shaft-Motor
6	93-0373	1	Ring-Snap
7	104-3284	1	Motor-Gear
8	104-3285	1	Bearing

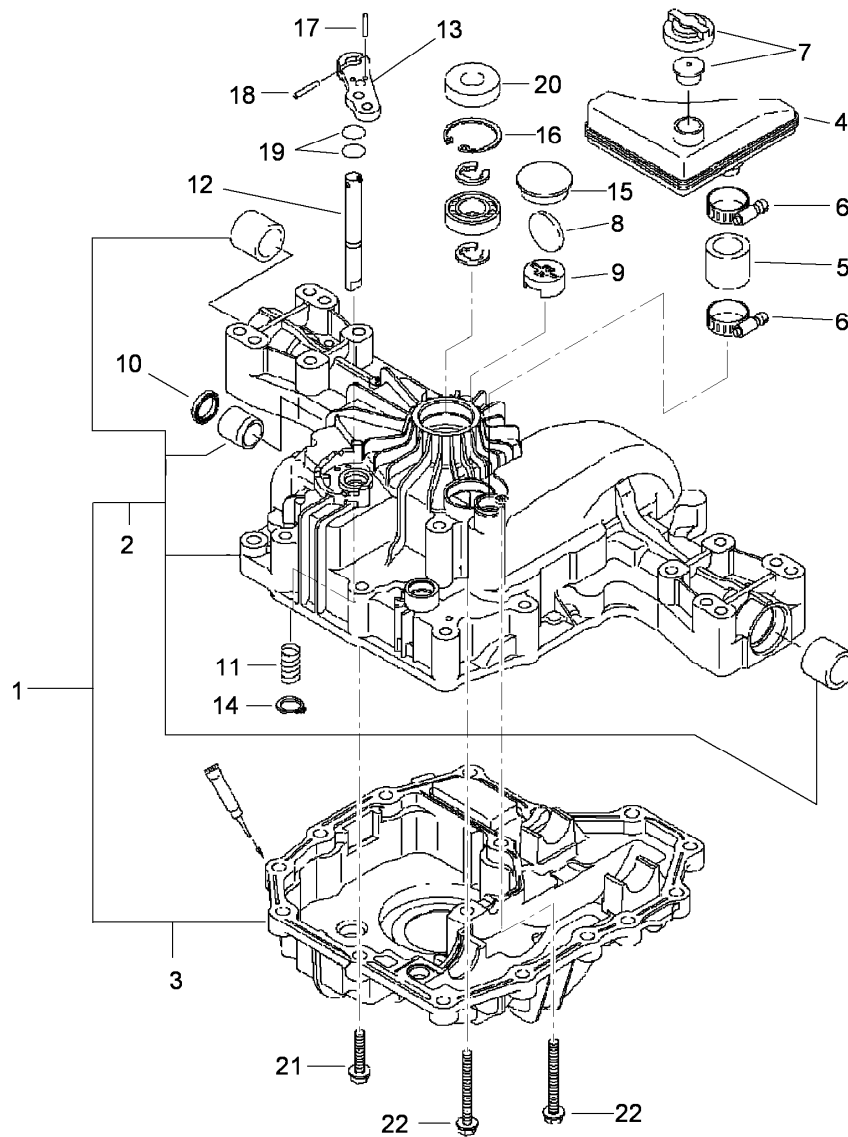 

Transaxle Case Assembly Transmission Assembly No. 114-3155

Ref.	Part Number	Qty.	Description
1	104-3251	1	Transaxle Case Set
2	104-3252	1	Housing-Upper
3	104-3253	1	Housing-Lower
4	104-2914	1	Tank-Reservoir, With Cap
5	104-3254	1	Tube
6	104-3255	2	Clamp-Miniature
7	104-3256	1	Valve-Vent, 15
8	104-3257	1	Magnet
9	104-3258	1	Holder-Magnet
10	104-3259	1	Seal-Oil
11	93-0396	1	Spring


Ref.	Part Number	Qty.	Description
12	104-3260	1	Shaft-Bypass
13	104-3261	1	Lever-Bypass
14	104-3262	1	Ring
15	104-3263	1	Plug-Bore
16	93-0360	1	Ring
17	104-3264	1	Pin
18	104-3265	1	Pin
19	93-0419	2	Packing
20	93-0361	1	Seal
21	93-0363	14	Screw-TAP
22	104-3266	2	Screw-Tap

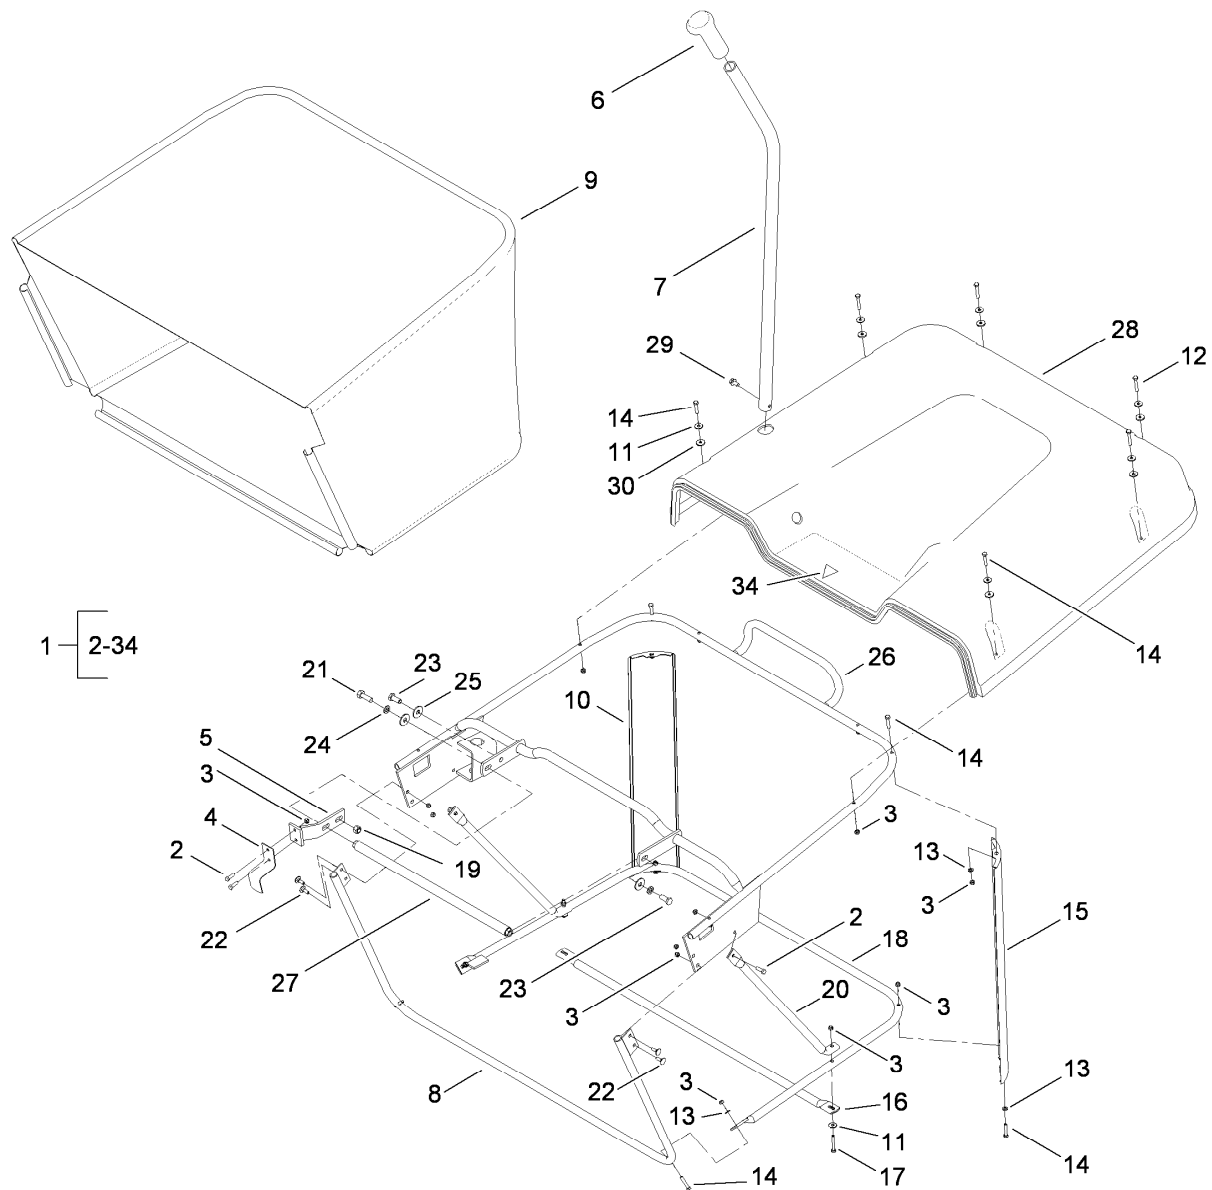 

Grass Collector Assembly

Ref.	Part Number	Qty.	Description
1	106-5760	1	Collector ASM
2	60-6910	2	Screw
3	87-5140	22	Nut-Lock
4	104-3033	1	Spring-Coll, Interlock Switch
5	106-5761	1	Bracket-Spring
6	104-3035	1	Grip-Handle
7	107-8917	1	Lever-Dump
8	104-3037	1	Front Frame ASM
9	104-3038	1	Bag-Grass
10	104-3039	1	Support-Corner, Right
11	104-2943	8	Washer-Flat
12	87-5150	4	Bolt
13	52-6430	14	Washer
14	104-3041	10	Screw-Hex
15	104-3042	1	Support-Corner, Left
16	104-3043	1	Brace-Connecting


Ref.	Part Number	Qty.	Description
17	104-3044	2	Screw-Hex
18	104-3045	1	Bottom Frame ASM
19	33024-00	1	Nut-Lock
20	104-3046	2	Brace
21	33114-025	1	Screw-HH
22	104-2948	4	Bolt-Carriage
23	33114-020	2	Screw-HH
24	3253-4	2	Washer-Lock
25	104-2946	4	Washer-Plain
26	104-3047	1	Top Frame ASM
27	104-3048	1	Handle-Lift
28	106-5762	1	Cover-Collector
29	106-5763	1	Screw
30	104-2952	6	Washer-Rubber
34	104-3242	1	Decal-Bag To Frame

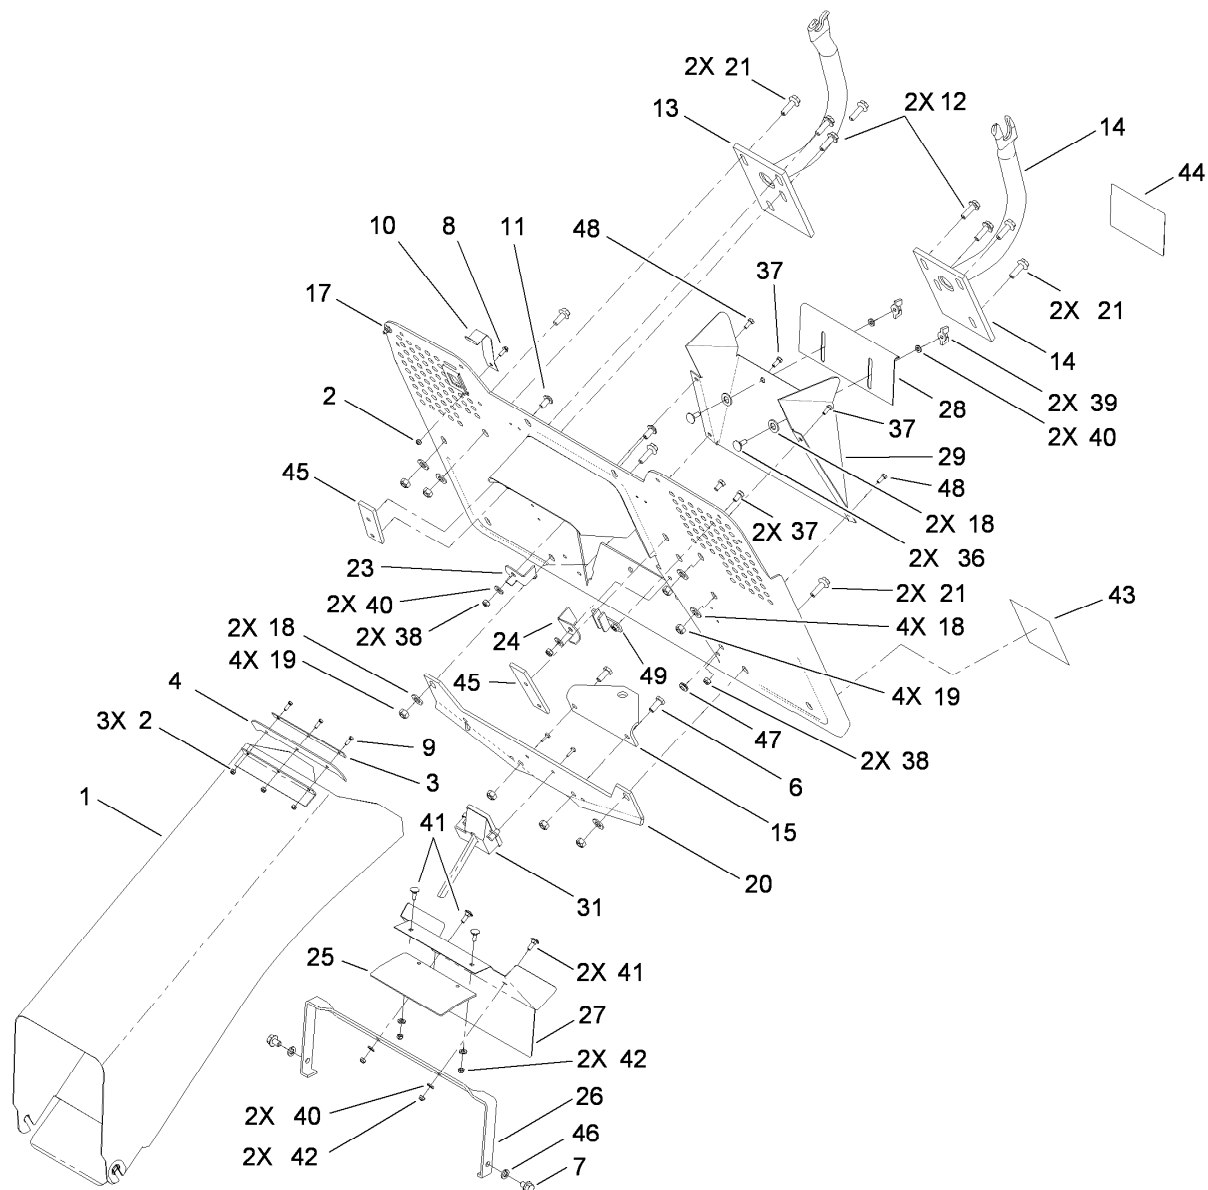 

Tunnel Assembly

Ref.	Part Number	Qty.	Description
1	106-8562	1	Tunnel
2	104-2985	4	Nut-Hex
3	104-3055	1	Plate-Support
4	104-3056	1	Seal-Rubber
6	33114-020	2	Screw-HH
7	68-9410	2	Screw-Flange
8	104-2983	1	Screw
9	104-3058	3	Screw-SFH
10	119-2741	1	Bracket-Bag Present Switch
11	104-3060	2	Bolt-Carriage
12	104-3061	4	Screw
13	104-3062	1	Support-Collector, Right
14	104-3063	1	Support-Collector, Left
15	104-3064	1	Hitch-Tow
17	104-3066	1	Collector Plate ASM
18	33095-00	8	Washer-Flat
19	33024-00	8	Nut-Lock
20	104-3067	1	Support-Hitch, Tow
21	104-3068	6	Screw-Hex
23	106-8597	1	Support-Tunnel, Left
24	106-8598	1	Support-Tunnel, Right

Ref.	Part Number	Qty.	Description
25	106-8599	1	Shield-Rubber
26	104-3069	1	Bracket-Shield, Protective
27	104-3070	1	Shield-Protective
28	104-3336	1	Shield-Adjustable
29	104-3335	1	Hopper-Receiving
31	104-3074	1	Overload Switch ASM
36	104-2961	2	Screw
37	33113-012	4	Screw-HH
38	33023-00	4	Nut-Lock
39	32103-28	2	Nut-Wing
40	33093-00	6	Washer-Flat
41	104-2948	4	Bolt-Carriage
42	87-5140	4	Nut-Lock
43	104-3243	1	Decal-Bypass, Hydro
44	104-2853	1	Decal-Position, Bagging
45	104-3347	2	Plate-Reinforcing
46	104-3348	2	Washer-Spring
47	106-5772	1	Bushing
48	106-8575	2	Screw-HH
49	110-8688	1	Bracket-Support, Fuel Tank

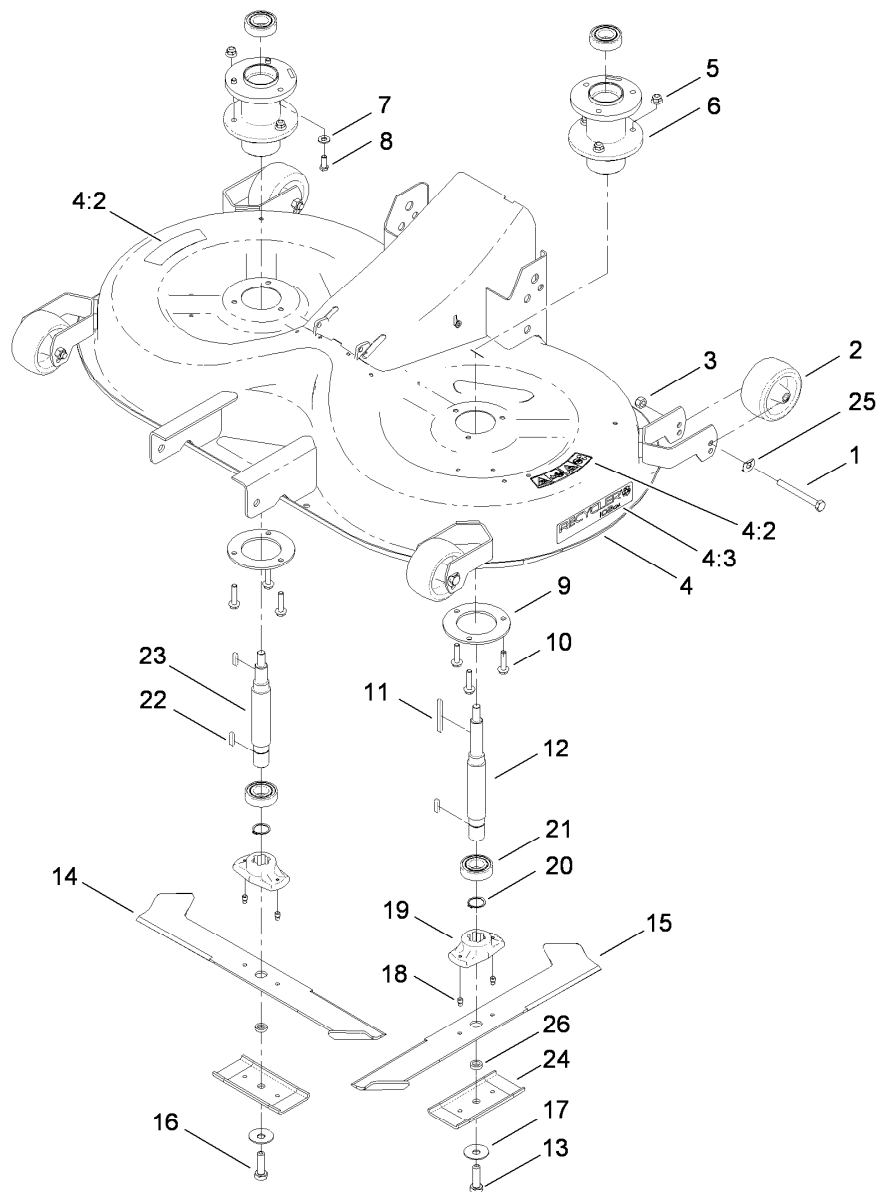 


Cutting Pan and Mower Housing Assembly

Ref.	Part Number	Qty.	Description
1	33115-090	4	Screw-HH
2	104-3080	4	Wheel-Gauge
3	33025-00	4	Nut-Lock
4	110-9071	1	Deck ASM
4:2	119-2726	2	Decal-Danger, Tractor
4:3	119-2727	1	Decal-Recycler
5	104-3082	6	Nut-Lock, HF
6	107-8992	2	Housing-Spindle
7	33094-00	6	Washer-Plain
8	33114-020	6	Screw-HH
9	104-3084	2	Support-Ring
10	104-3085	6	Bolt-HHF
11	104-3086	1	Key
12	106-8565	1	Shaft-Blade, Left


Ref.	Part Number	Qty.	Description
13	106-5797	1	Bolt-HH, Blade
14	106-8557	1	Blade-RH
15	106-8558	1	Blade-LH
16	106-5798	1	Bolt-Blade, HH
17	106-6532	2	Washer-Blade
18	104-3093	4	Pin-Shear, Grooved
19	106-4185	2	Adapter-Blade
20	104-3095	2	Ring-Locking
21	104-6325	4	Bearing-Ball
22	104-3097	3	Key-Square
23	106-8566	1	Shaft-Blade, Right
24	106-6533	2	Stiffener-Blade
25	106-5767	4	Washer
26	106-6530	2	Spacer

 Cutting Pan and Drive System Assembly

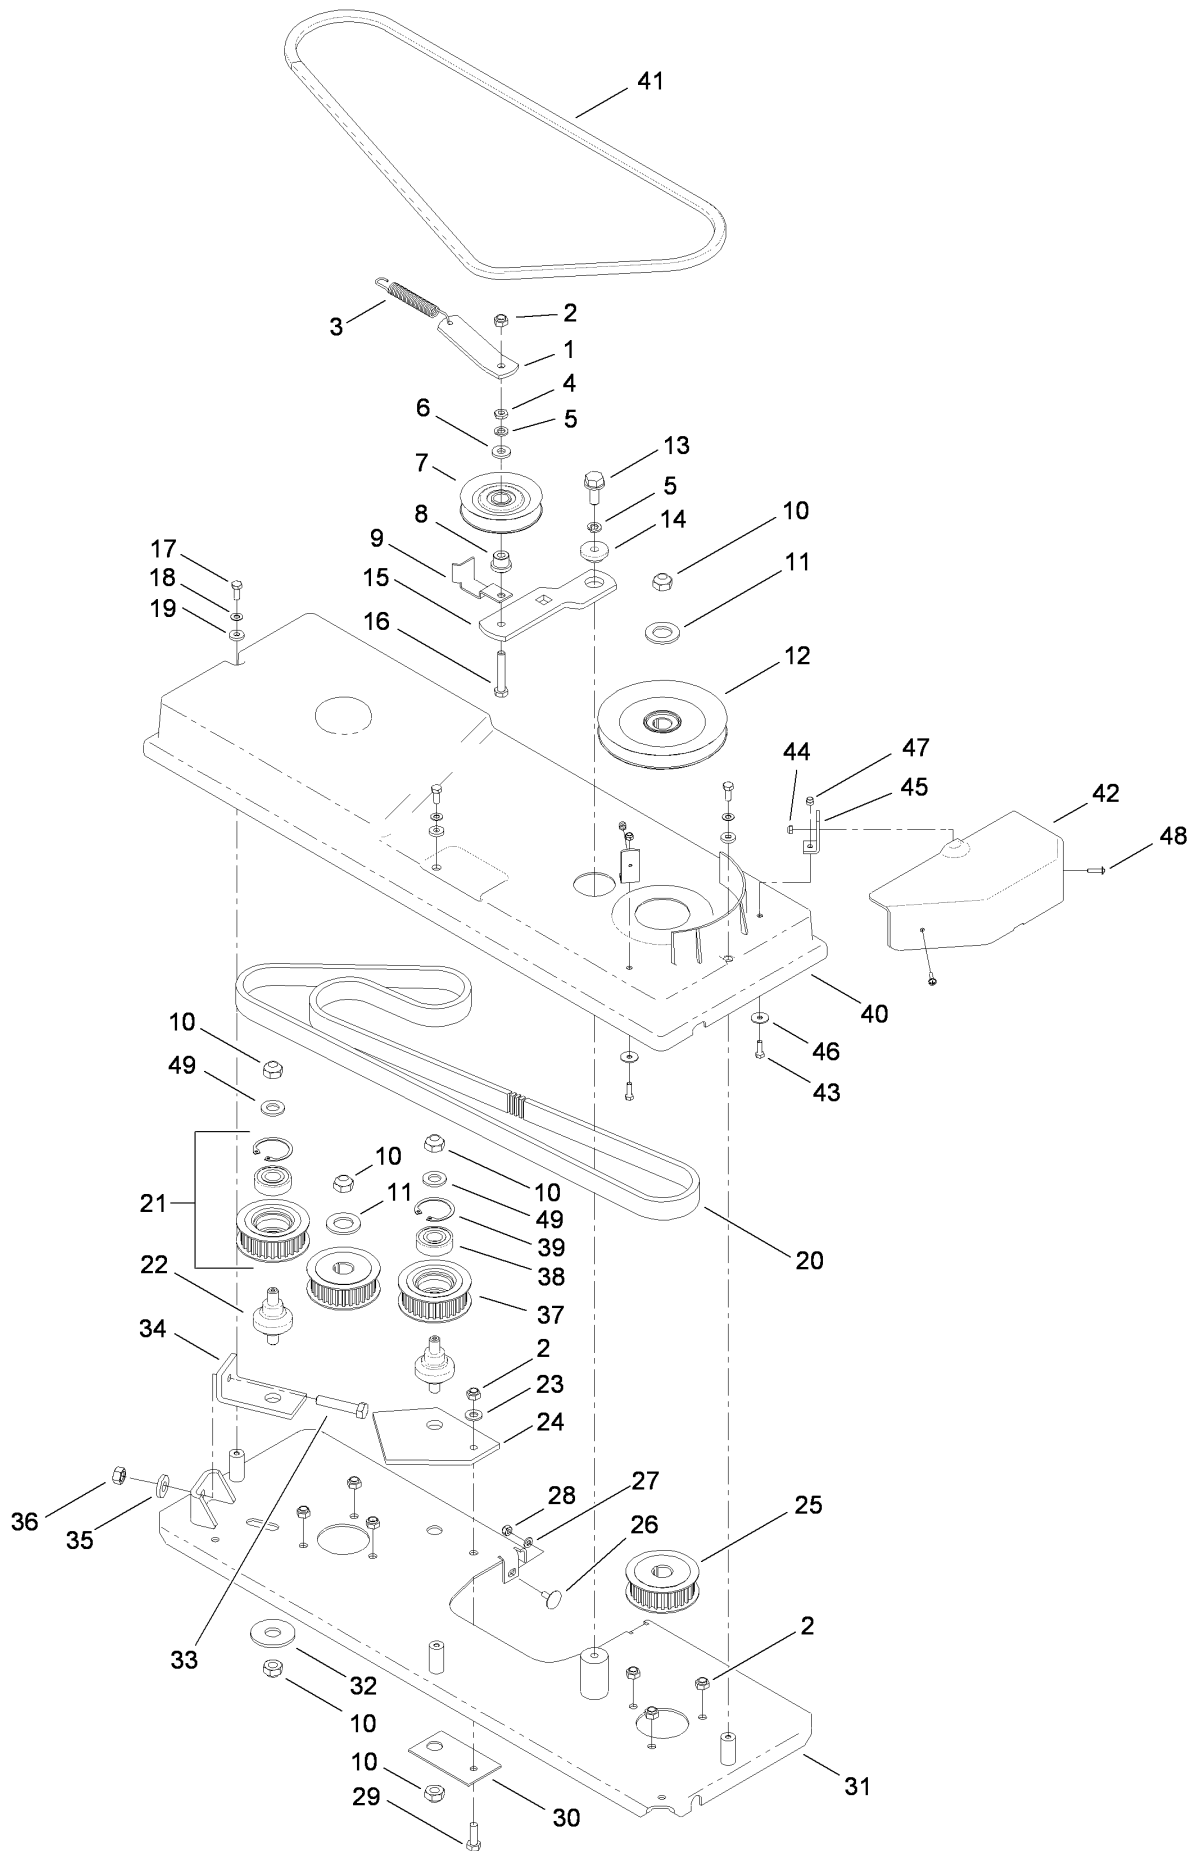

Cutting Pan and Drive System Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3099	1	Lever-Engagement	26	33123-016	2	Screw-CARR
2	48-9510	8	Nut	27	33093-00	2	Washer-Flat
3	104-3101	1	Spring	28	33023-00	2	Nut-Lock
4	57-6390	1	Nut-Jam	29	33114-025	3	Screw-HH
5	3253-4	1	Washer-Lock	30	104-3117	1	Plate-Anchor
6	106-8588	1	Washer-Flat	31	107-8996	1	Plate-Drive, Blade
7	104-3103	1	Pulley-Idler	32	104-2909	1	Washer
8	104-3104	1	Bushing	33	33115-050	1	Screw-HH
9	104-3105	1	Retainer-Belt	34	104-3120	1	Bracket-Idler
10	48-9540	6	Nut-Lock, Hex NI	35	108-8709	1	Washer-Flat
11	33099-00	4	Washer-Flat	36	48-9520	1	Nut
12	104-3107	1	Pulley-Drive	37	104-3121	1	Pulley-Cog
13	33105-025	1	Screw-HHF	38	100-1048	1	Bearing-Ball
14	107-8995	1	Shim-Arm, Idler	39	104-3123	1	Ring-Locking
15	104-3109	1	Arm-Idler	40	106-8589	1	Belt-Cover
16	33114-050	1	Screw-HH	41	104-3127	1	V-Belt
17	33113-016	3	Screw-HH	42	107-8941	1	Guard-Belt
18	106-8568	3	Washer-Flat	43	60-6910	2	Screw
19	83-7420	3	Washer-Rubber	44	87-5140	2	Nut-Lock
20	106-8591	1	Belt-Cog	45	107-8940	2	Bracket
21	104-3113	2	Cog Pulley ASM	46	3256-61	4	Washer-Flat
22	104-3114	2	Pin-Pulley, Cog	47	46-0430	2	Nut-Lock
23	33094-00	1	Washer-Plain	48	107-8918	2	Screw
24	104-3115	1	Support-Pulley	49	33096-00	2	Washer-Flat
25	104-3116	2	Pulley-Cog, Drive				

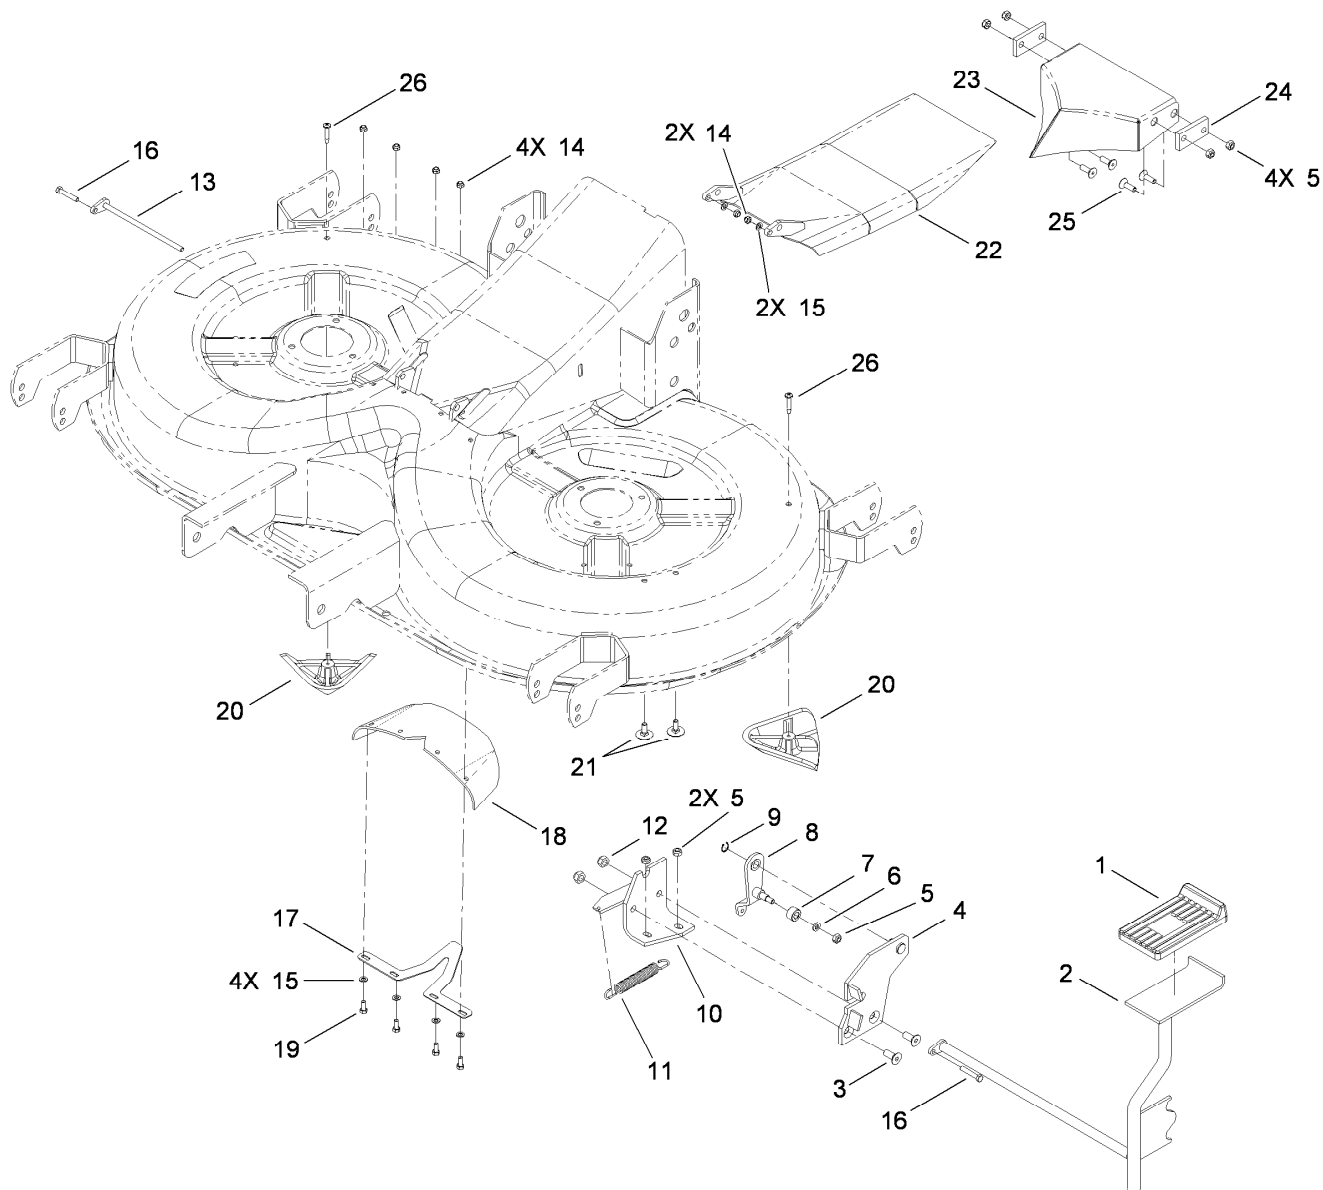 

Cutting Pan and Bag on Demand Assembly

Ref.	Part Number	Qty.	Description
1	106-8583	1	Cover-Lever, Foot
2	106-8582	1	Lever-Foot
3	100-8159	2	Screw-HSFH
4	106-8578	1	Plate-Stop
5	33023-00	7	Nut-Lock
6	33093-00	1	Washer-Flat
7	106-8581	1	Roller
8	106-8579	1	Lever-Spring
9	106-8592	1	Ring-Locking
10	106-8577	1	Bracket-Mounting
11	106-8580	1	Spring
12	48-9510	2	Nut
13	106-8585	1	Rod-Door, Mulch


Ref.	Part Number	Qty.	Description
14	87-5140	6	Nut-Lock
15	52-6430	6	Washer
16	87-5150	2	Bolt
17	106-8567	2	Guide
18	106-8586	1	Gasket-Door, Mulch
19	106-8575	4	Screw-HH
20	106-8587	2	Kicker
21	33123-016	2	Screw-CARR
22	107-8968	1	Door-Mulch
23	106-8573	1	Baffle-Center
24	106-8572	2	Plate-Baffel, Center
25	106-8574	4	Screw
26	104-1451	2	Screw-TAP, PPH

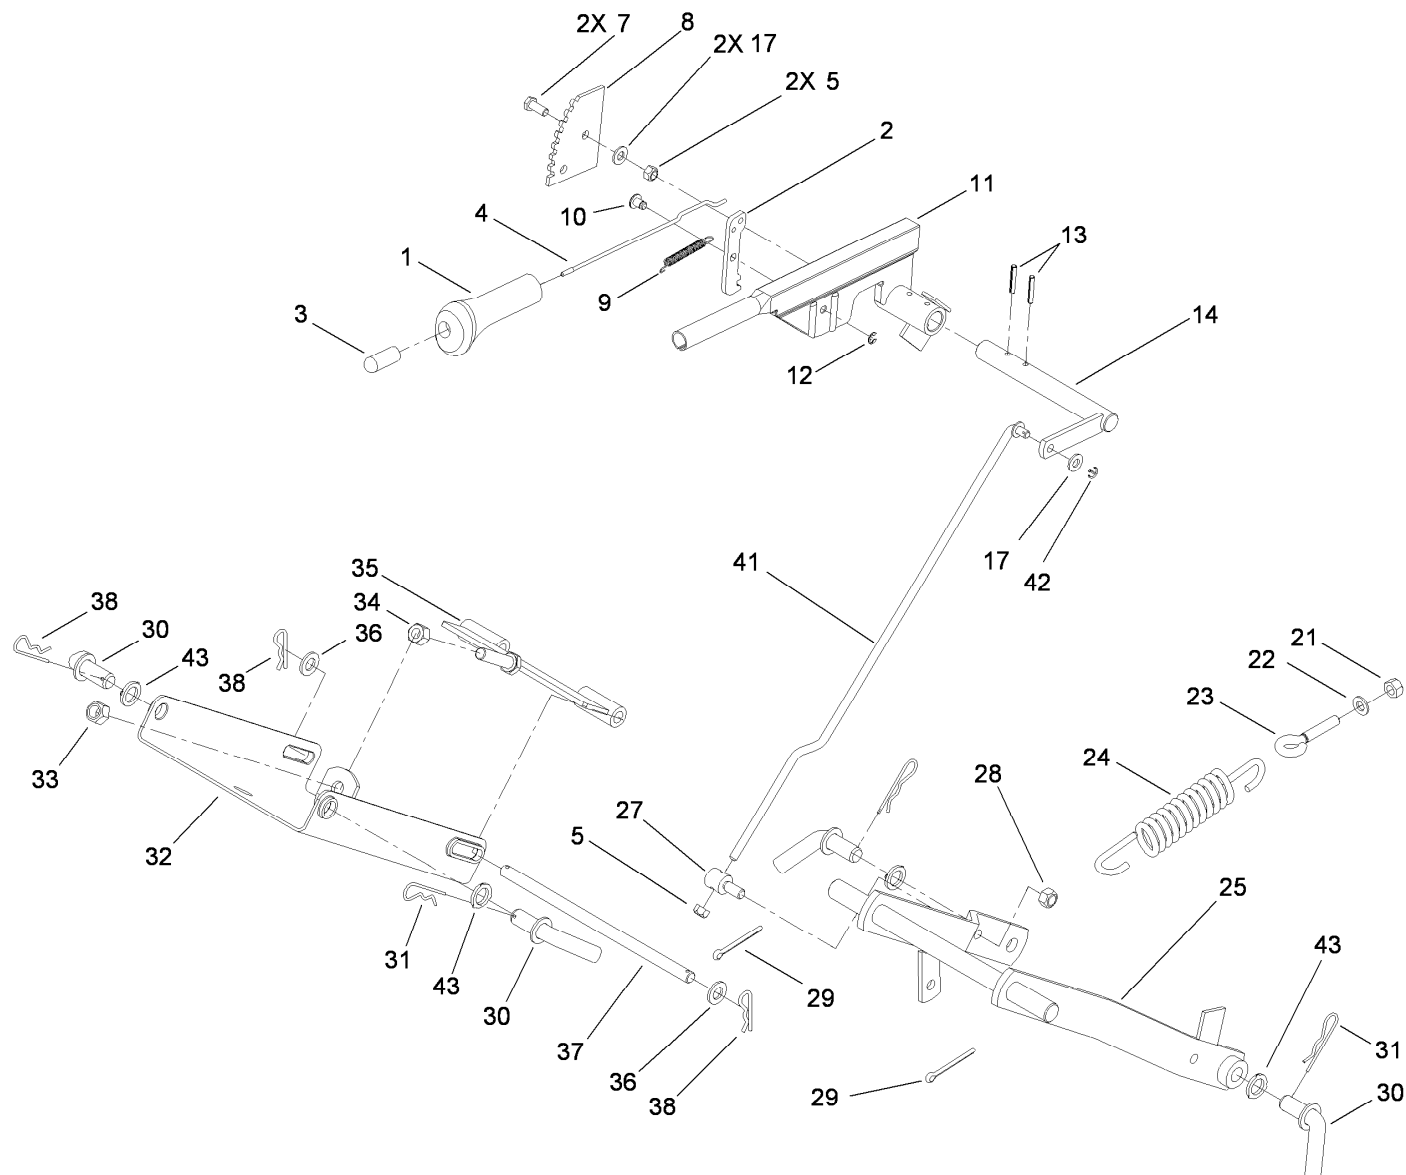 

Mower Lift Assembly

Ref.	Part Number	Qty.	Description
1	104-3129	1	Grip-Handle
2	104-3130	1	Ratchet-Plate, Pivot
3	104-3131	1	Button-Plunger
4	104-3132	1	Rod-Connection
5	33024-00	3	Nut-Lock
7	33114-020	2	Screw-HH
8	114-3244	1	Gear-Segment, Deck Lift
9	104-3134	1	Spring
10	104-3135	1	Pin-Arm Lever
11	104-3136	1	Lever-Arm, Height Adj.
12	104-3137	1	Clip-Pin
13	104-2994	2	Pin-Spring
14	114-3245	1	Shaft-Lift, Deck
17	33094-00	3	Washer-Plain
21	33025-00	1	Nut-Lock
22	33095-00	1	Washer-Flat
23	104-3139	1	Bolt-Eye
24	104-3140	1	Spring-Lift






Ref.	Part Number	Qty.	Description
25	104-3141	1	Pivot Arm ASM
27	104-3142	1	Pin-Lifting
28	33025-00	1	Nut-Lock
29	104-3016	2	Pin-Cotter
30	104-3143	4	Pin-Bent
31	104-3144	4	Pin-Hair
32	104-3145	1	Suspension-Mower Deck, Front
33	33026-00	1	Nut-Lock
34	33016-00	1	Nut-Hex
35	104-3146	1	Holder-Front
36	104-3124	2	Washer-Flat
37	104-3147	1	Pin
38	104-3148	2	Pin-Hair
41	104-3149	1	Rod-Height, Adj.
42	104-3151	1	Pin-Cotter
43	34-9270	4	Washer-Hose

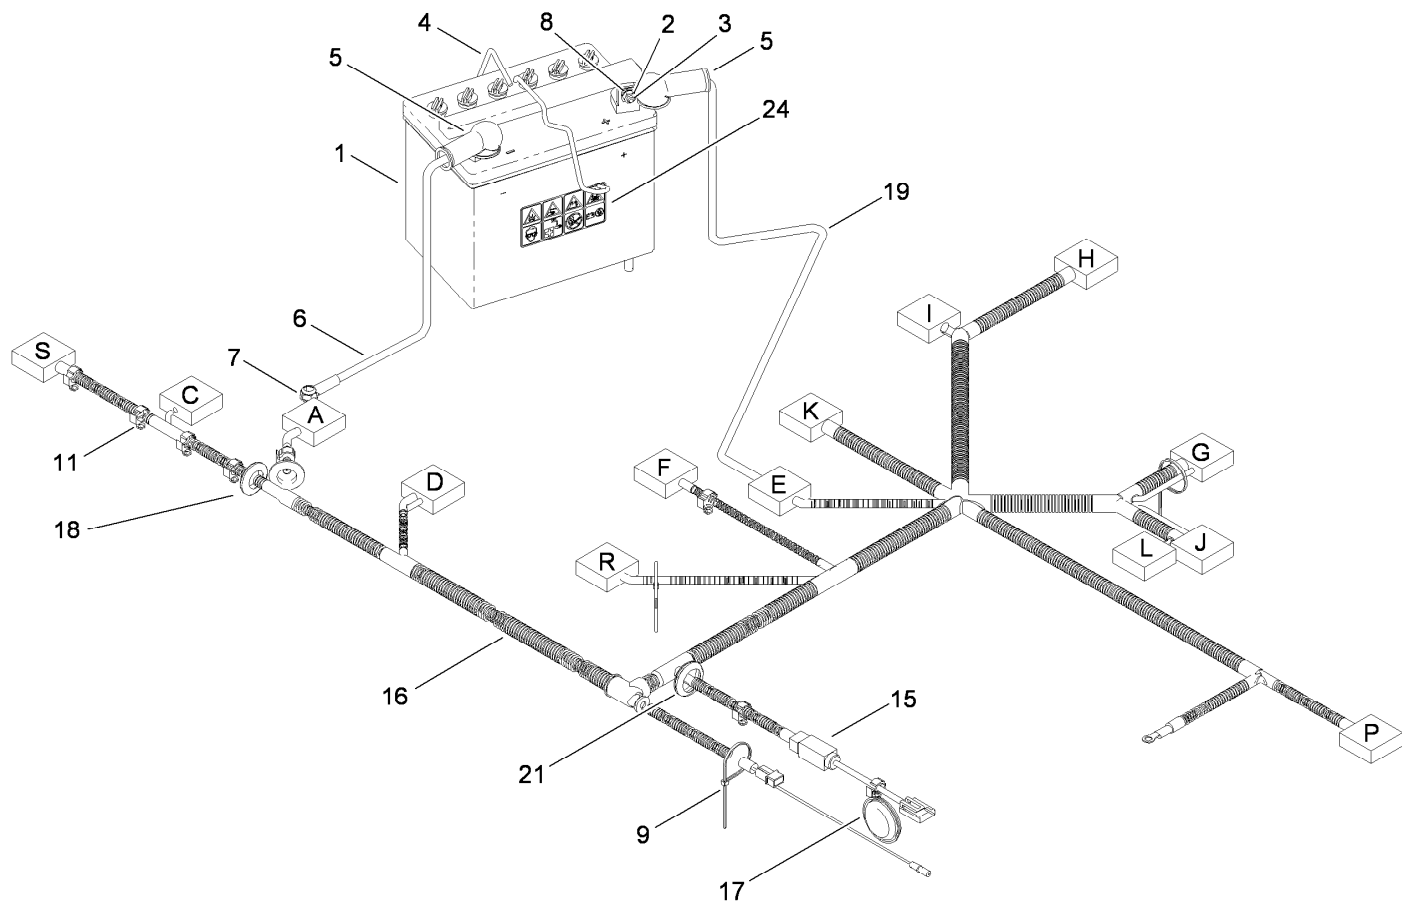 

Harness Assembly


Ref.	Part Number	Qty.	Description
1	104-2491	1	Battery
2	33013-00	2	Nut-Hex
3	33113-016	2	Screw-HH
4	114-3131	1	Clamp-Battery
5	104-3154	2	Boot-Rubber
6	110-8678	1	Cable-Battery, Negative
7	33024-00	1	Nut-Lock
8	33093-00	2	Washer-Flat
9	3334-945	3	Tie-Cable

Ref.	Part Number	Qty.	Description
11	104-3157	8	Clip-Snap
15	104-3160	1	Harness-Clutch
16	108-8754	1	Harness-Wiring
17	104-3163	1	Cap
18	104-3165	2	Bushing
19	110-8677	1	Cable-Battery, Positive
21	104-3168	1	Bushing
24	93-7276	1	Decal-Danger

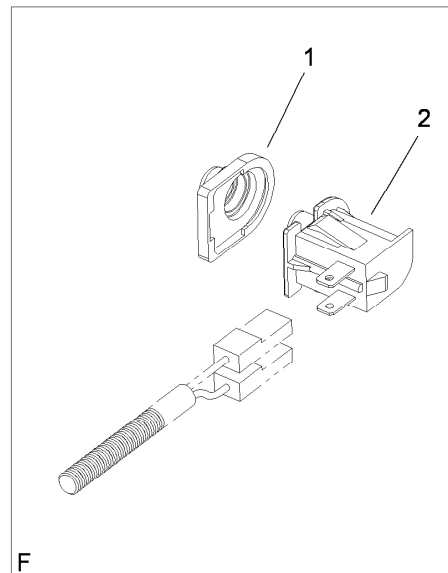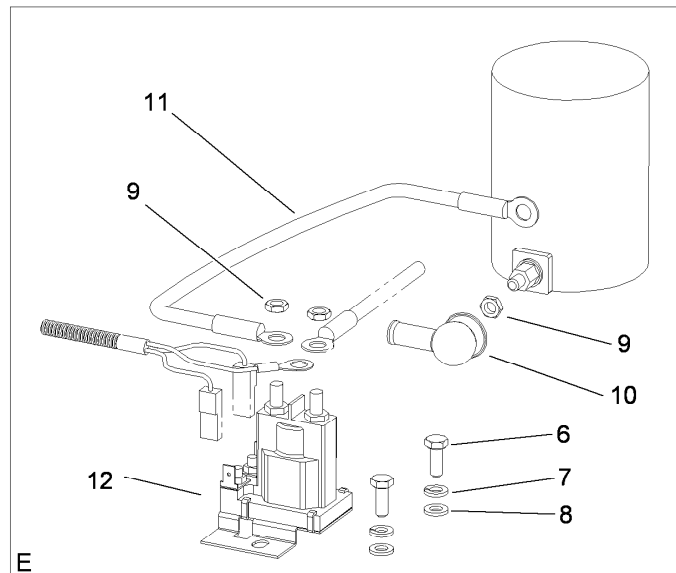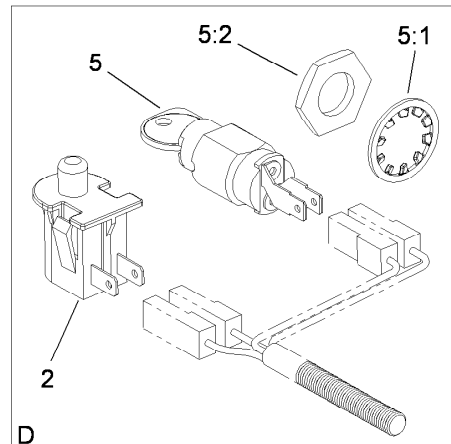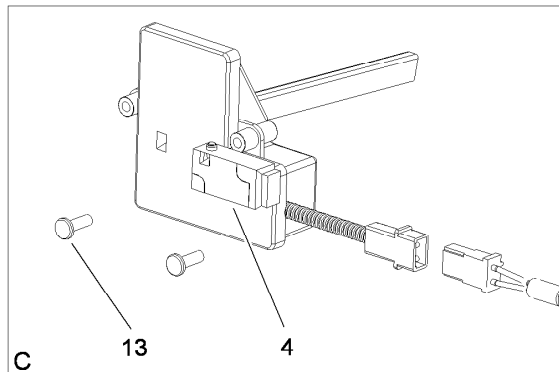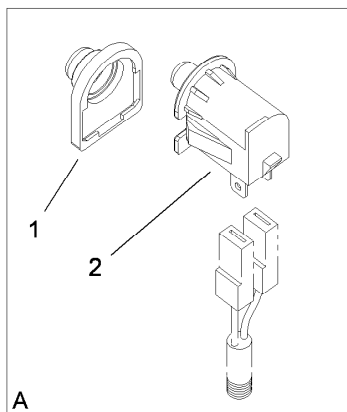     

Electrical Switch No. 1 Assembly






Ref.	Part Number	Qty.	Description
1	104-3178	2	Cover-Protective
2	104-3179	3	Switch-Delta
4	104-3074	1	Overload Switch ASM
5	46-5780	1	Starter Switch ASM
5:1	3254-5	1	Washer-Tooth, Internal
5:2	218-461	1	Nut-HH
6	33113-012	2	Screw-HH
7	104-3186	2	Washer-Spring
8	33093-00	2	Washer-Flat
9	32128-32	3	Nut-HHF
10	104-3187	1	Boot-Rubber
11	104-3188	1	Lead-Starter, Electric
12	47-1910	1	Solenoid
13	104-3349	2	Screw

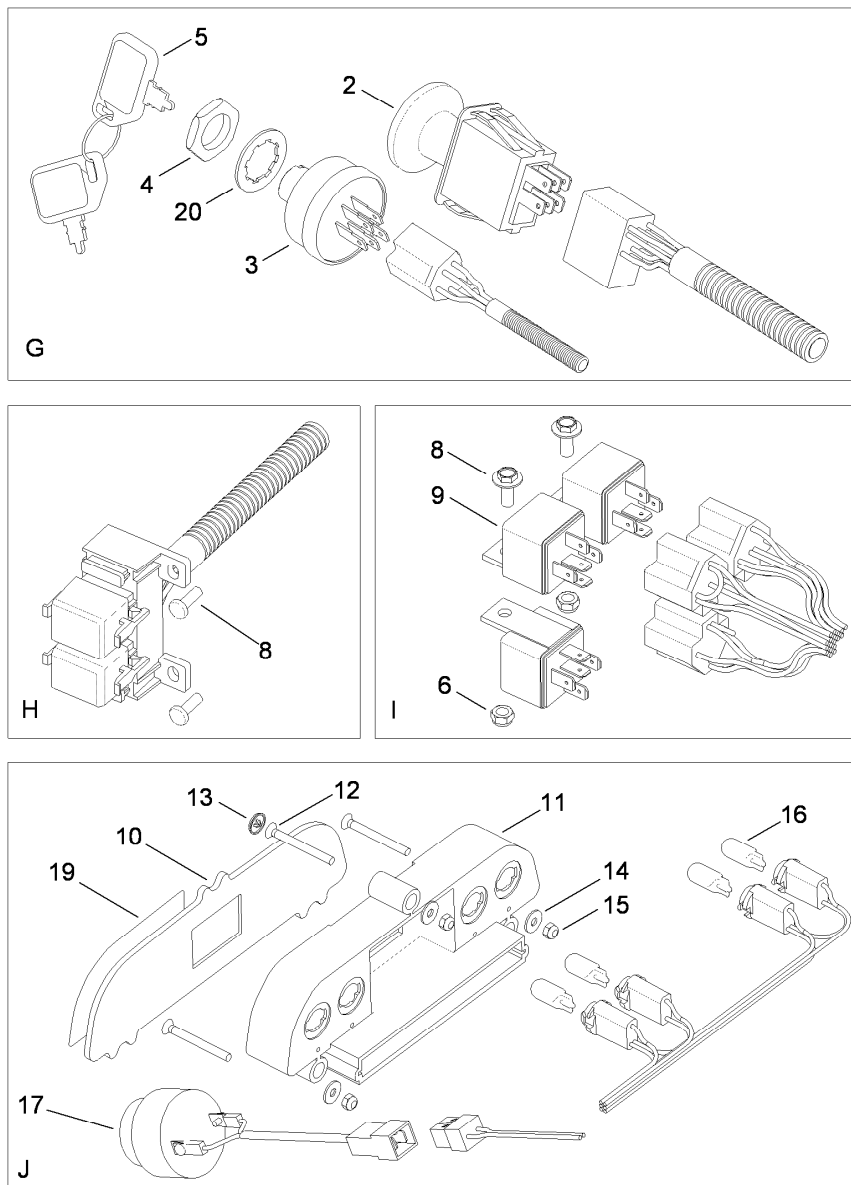 

Electrical Switch No. 2 Assembly

Ref.	Part Number	Qty.	Description
2	93-9998	1	Switch-PTO
3	92-6785	1	Switch-Ignition
4	218-461	1	Nut-HH
5	62-7770	2	Key-Ignition
6	87-5140	2	Nut-Lock
8	104-2978	4	Screw-Hex
9	104-3173	2	Relay
10	92-6707	1	Lens-Dash Lights
11	92-6732	1	Housing-Light, Indicator

Ref.	Part Number	Qty.	Description
12	104-3191	3	Screw
13	104-3174	3	Screw-Cap
14	104-3175	3	Washer
15	104-2985	3	Nut-Hex
16	104-3176	3	Bulb
17	104-3177	1	Buzzer
19	107-2220	1	Decal-Dash
20	3254-5	1	Washer-Tooth, Internal

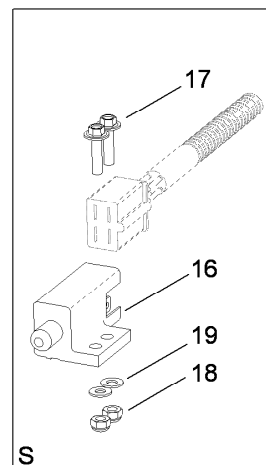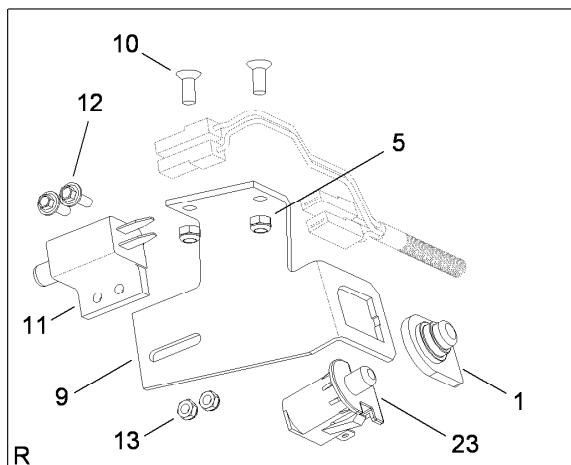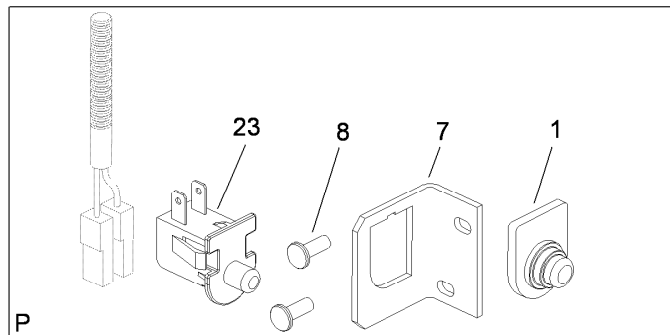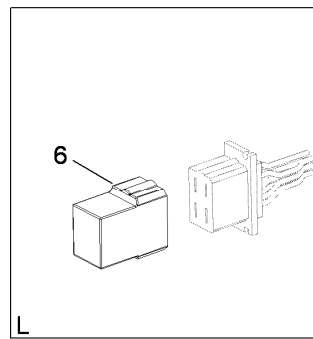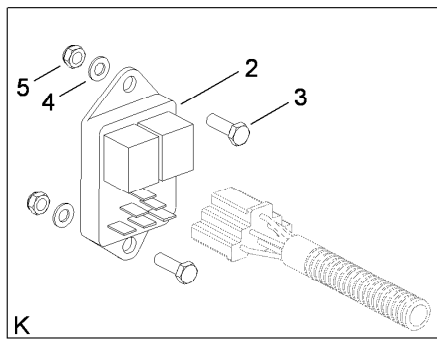     

Electrical Switch No. 3 Assembly

Ref.	Part Number	Qty.	Description
1	104-3178	1	Cover-Protective
2	99-3701	1	Module-Clutch
3	60-6910	2	Screw
4	52-6430	2	Washer
5	87-5140	4	Nut-Lock
6	104-3169	1	Circuit-Memory
7	107-8954	1	Holder-Switch
8	104-3190	2	Screw
9	107-8955	1	Holder-Switch

Ref.	Part Number	Qty.	Description
10	104-2980	2	Screw
11	95-1653	1	Switch-Pole, Single
12	104-2983	2	Screw
13	104-2985	2	Nut-Hex
16	104-3330	1	Switch-Delta
17	104-3331	2	Bolt
18	46-0430	2	Nut-Lock
19	52-6430	2	Washer
23	104-3180	1	Switch-Delta

Attachments and Accessories

For 74573 DH 200 Lawn Tractor

Product Name	Model/Part
Bagging Blade Kit, 2003 and After DH Series Lawn Tractors	106-8559
Rear Discharge Kit.....	79471

Notes:

Notes:

Notes:



Count on it.