



Count on it.

Parts Catalog

66cm Heavy-Duty Rear Bagger Lawn Mower

Model No. 22200TE—Serial No. 310000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

 
STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Housing Assembly	4
Bag and Door Assembly	5
Handle Assembly	6
Gear Case and Pinion Assembly	7
Gear Case Assembly No. 116-0786	8
Engine Assembly	9
Blade Drive Assembly	10
Cutter Housing Assembly No. 107-4065	11
Rear Wheel Assembly	12
Wheel Assembly No. 112-8707	13
Front Wheel Assembly	14
Cylinder and Crankcase Assembly Kawasaki FJ180V-AS64	15
Piston and Crankshaft Assembly Kawasaki FJ180V-AS64	16
Valve and Camshaft Assembly Kawasaki FJ180V-AS64	17
Lubrication Equipment Assembly Kawasaki FJ180V-AS64	18
Cooling Equipment Assembly Kawasaki FJ180V-AS64	19
Electric Equipment Assembly Kawasaki FJ180V-AS64	20
Control Equipment Assembly Kawasaki FJ180V-AS64	21
Carburetor Assembly Kawasaki FJ180V-AS64	22
Air Filter and Muffler Assembly Kawasaki FJ180V-AS64	23
Starter Assembly Kawasaki FJ180V-AS64	24
Label Assembly Kawasaki FJ180V-AS64	25
Attachments and Accessories	26

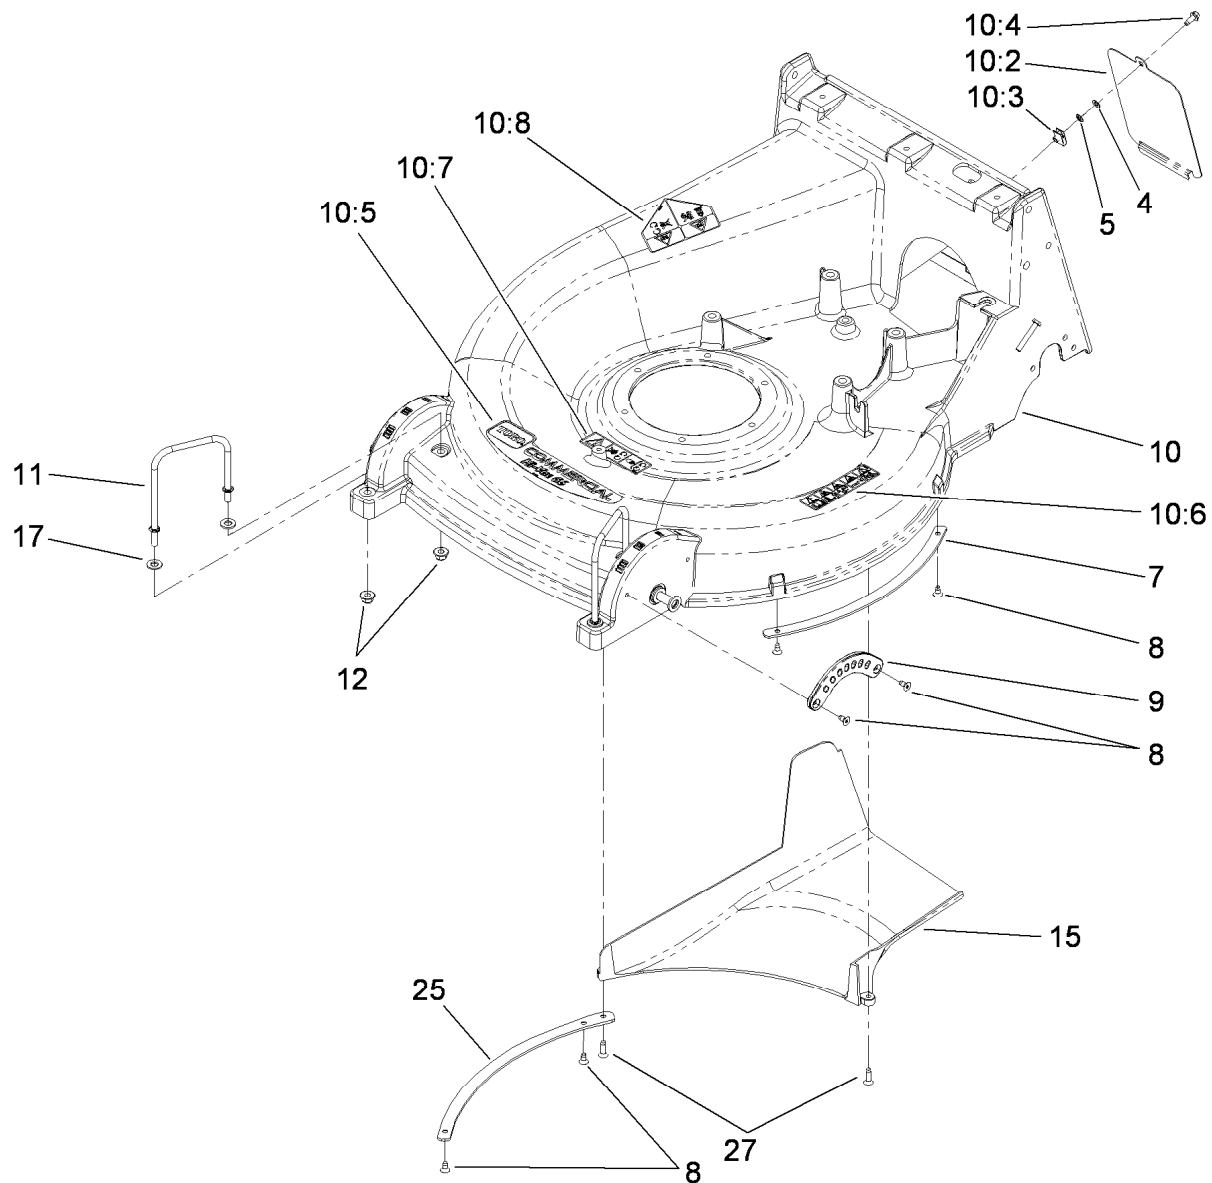

Housing Assembly


Ref.	Part Number	Qty.	Description
4	3256-60	1	Washer-Flat
5	106-8737	1	Nut-Retainer
7	116-0059-03	1	Plate-Skid, 10 Gage
8	103-6145	8	Screw
9	103-6460	2	Quadrant-Front
10	115-4240	1	Deck ASM
10:2	116-0336	1	Cover-Access, Axle
10:3	107069	1	Clip
10:4	32144-10	1	Screw-HWH
10:5	112-8709	1	Decal

Ref.	Part Number	Qty.	Description
10:6	110-4978	1	Decal-Danger
10:7	112-9028	1	Decal-Cover Missing
10:8	112-8760	1	Decal-Danger
11	103-8875	2	Handle-Deck
12	104-8301	4	Nut-Flange, NI
15	116-1405	1	Plastic Chute Kit (W/Screws)
17	3256-24	4	Washer-Flat
25	116-1273-03	1	Plate-Skid
27	116-0606	2	Screw-Torx

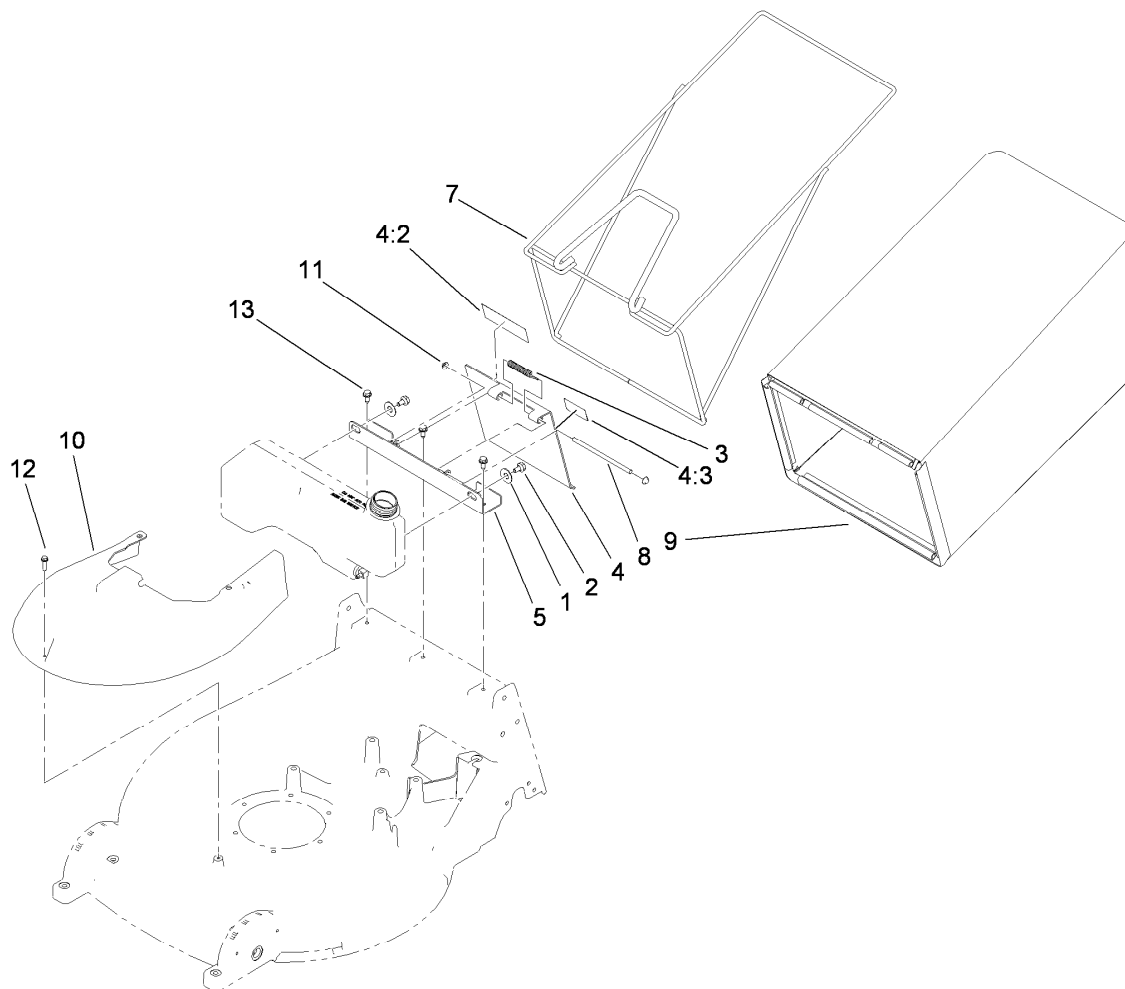 

Bag and Door Assembly


Ref.	Part Number	Qty.	Description
1	28-2450	2	Washer-Plastic
2	37-8771	2	Bolt-Shoulder
3	99-5293	1	Spring-Torsion
4	112-9741	1	Door ASM
4:2	110-4977	1	Decal-Danger
4:3	115-4207	1	Decal-Grease
5	103-8223-03	1	Bracket-Mount, Bag/Door
7	109-2445-03	1	Frame-Bag
8	109-2453	1	Rod-Pivot, Door
9	110-5029	1	Grass Bag ASM
10	114-3413	1	Cover-Spindle
11	32112-11	2	Nut-Push
12	32144-86	1	Screw-HWHTF
13	32144-70	3	Screw-HWHTF

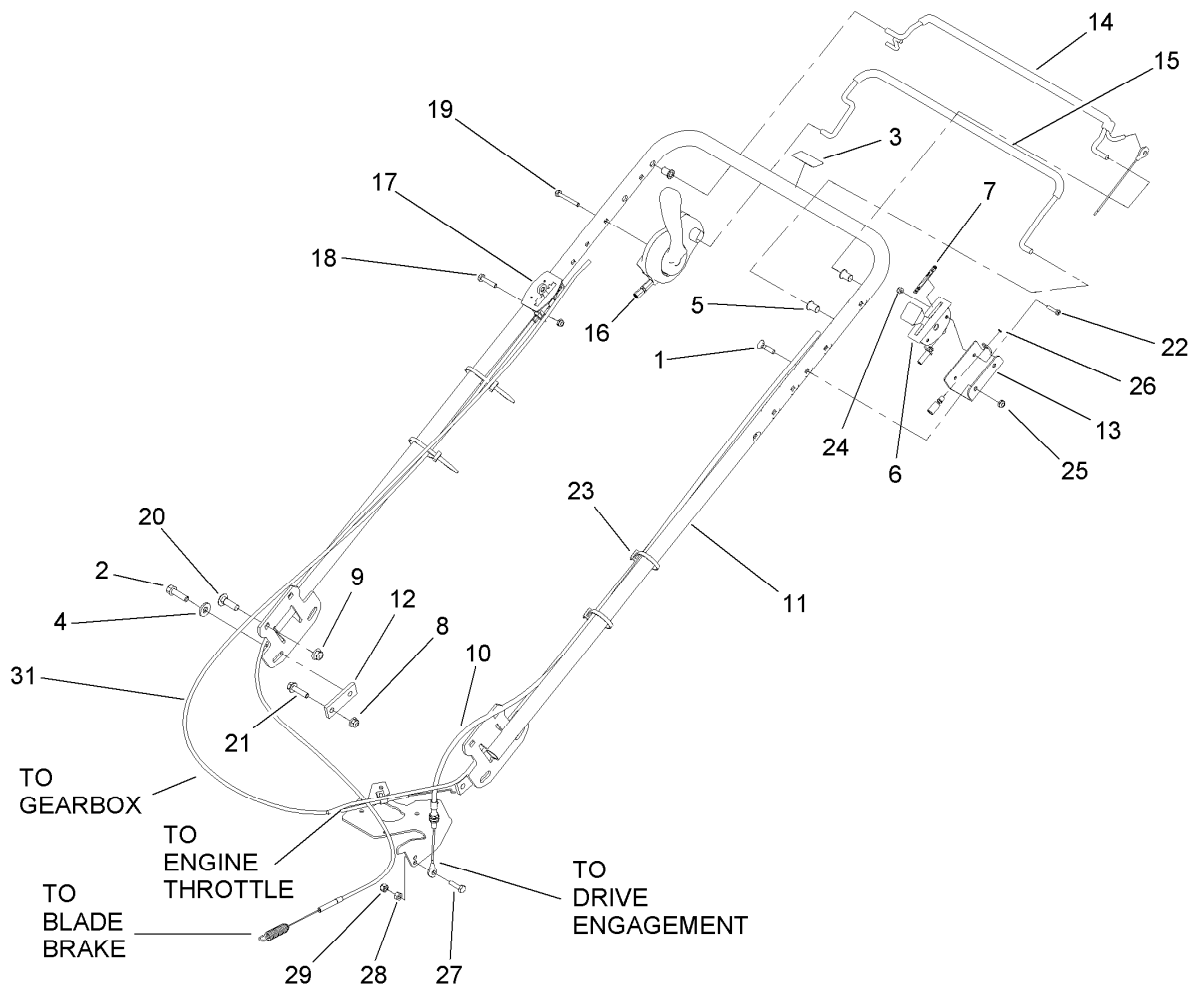 

Handle Assembly


Ref.	Part Number	Qty.	Description
1	109-8144	2	Bolt-Handle
2	95-1727	2	Screw-Taptite
3	98-4387	1	Decal-Protection, Ear
4	98-5975	2	Washer-Belleville
5	109-2713	3	Bushing
6	103-6123	1	Control-Throttle
7	103-6328	1	Decal-Throttle / Choke
8	104-8300	2	Nut-Flange, NI
9	104-8301	2	Nut-Flange, NI
10	109-2212	1	Cable-Traction
11	109-2441-03	1	Handle
12	109-2643-03	2	Nut-Handle
13	109-2821-03	1	Bracket-Control
14	116-0389	1	Traction Bail With Grip ASM
15	109-2826	1	Bail-BBC (With Grip)

Ref.	Part Number	Qty.	Description
16	116-1079	1	Control-BBC
17	116-0504	1	Control-Shift
18	321-8	2	Screw-HH
19	33113-045	1	Screw-HH
20	3231-25	2	Screw-CARR
21	3234-36	2	Screw-HHF
22	3250-27	2	Screw-PPH
23	3290-378	4	Tie-Cable
24	3296-2	2	Nut-Lock, NI
25	3296-56	2	Nut-Lock, NI
26	32151-86	1	E-Ring
27	321-6	1	Screw-HH
28	3217-5	1	Nut-Hex
29	3296-42	1	Nut-Lock, NI
31	109-4115	1	Cable-Shifter

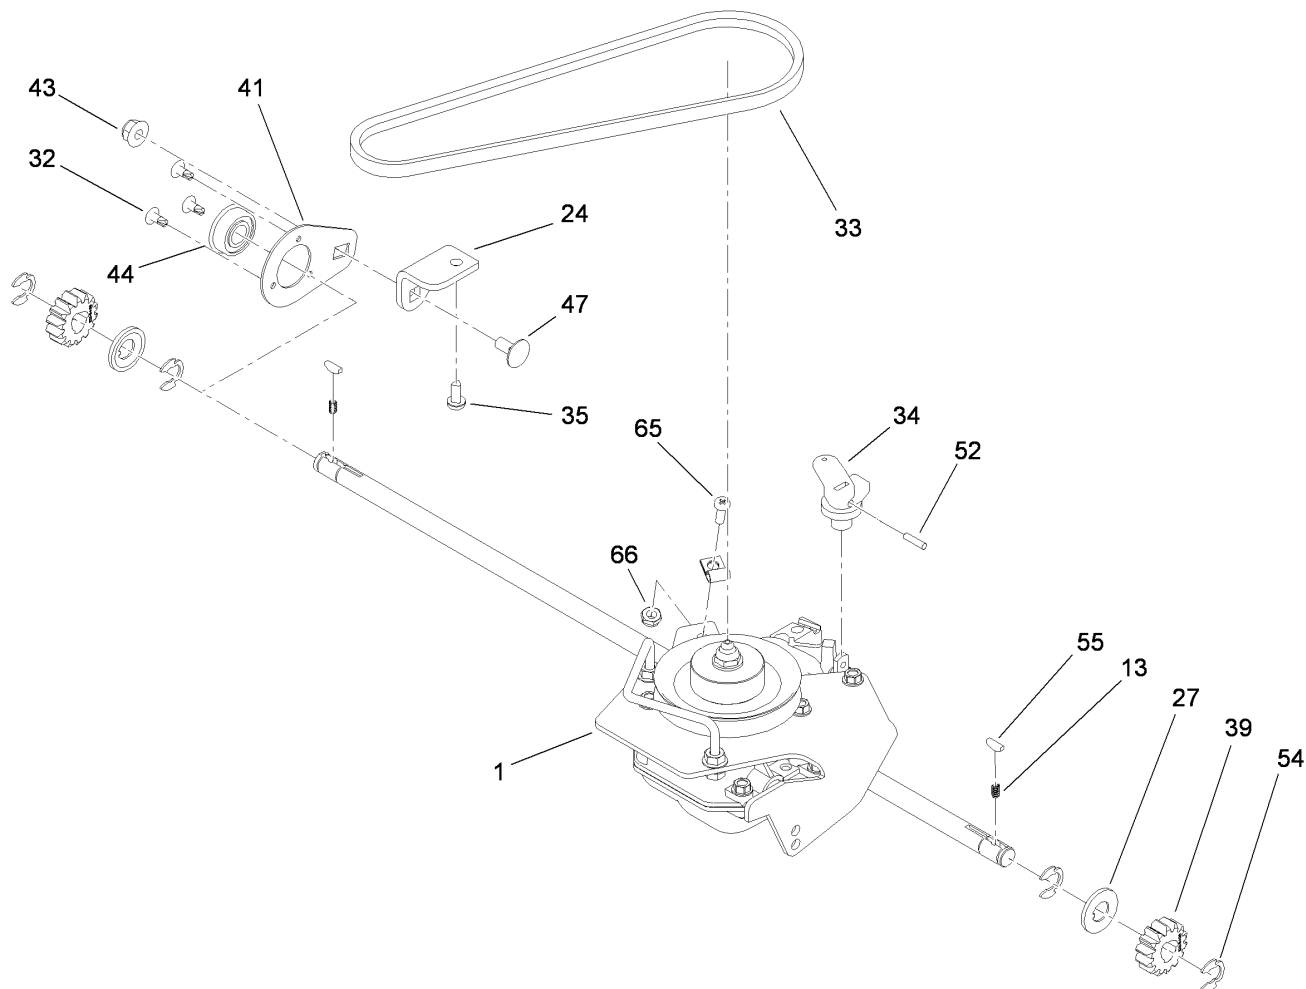 

Gear Case and Pinion Assembly


Ref.	Part Number	Qty.	Description
1	116-0786	1	Gear Case ASM
13	39-9650	2	Spring-Compression
24	116-0222	1	Bracket-Bearing, Plated
27	62-3830	2	Washer-Thrust, Outer
32	92-9665	3	Screw-TAP
33	103-6114	1	Belt-V, Traction
34	103-6138	1	Lever-Shift
35	32144-85	1	Screw-HWH
39	103-6436	2	Gear-Pinion, 14 Tooth
41	109-6612	1	Plate-Bearing
43	104-8300	1	Nut-Flange, NI
44	251-180	1	Bearing-Ball
47	3230-23	1	Screw-CARR
52	32121-99	1	Pin-Coil
54	32151-68	4	Ring-Retaining
55	612066	2	Key
65	3274-31	1	Screw-HSBH
66	3296-56	1	Nut-Lock, NI

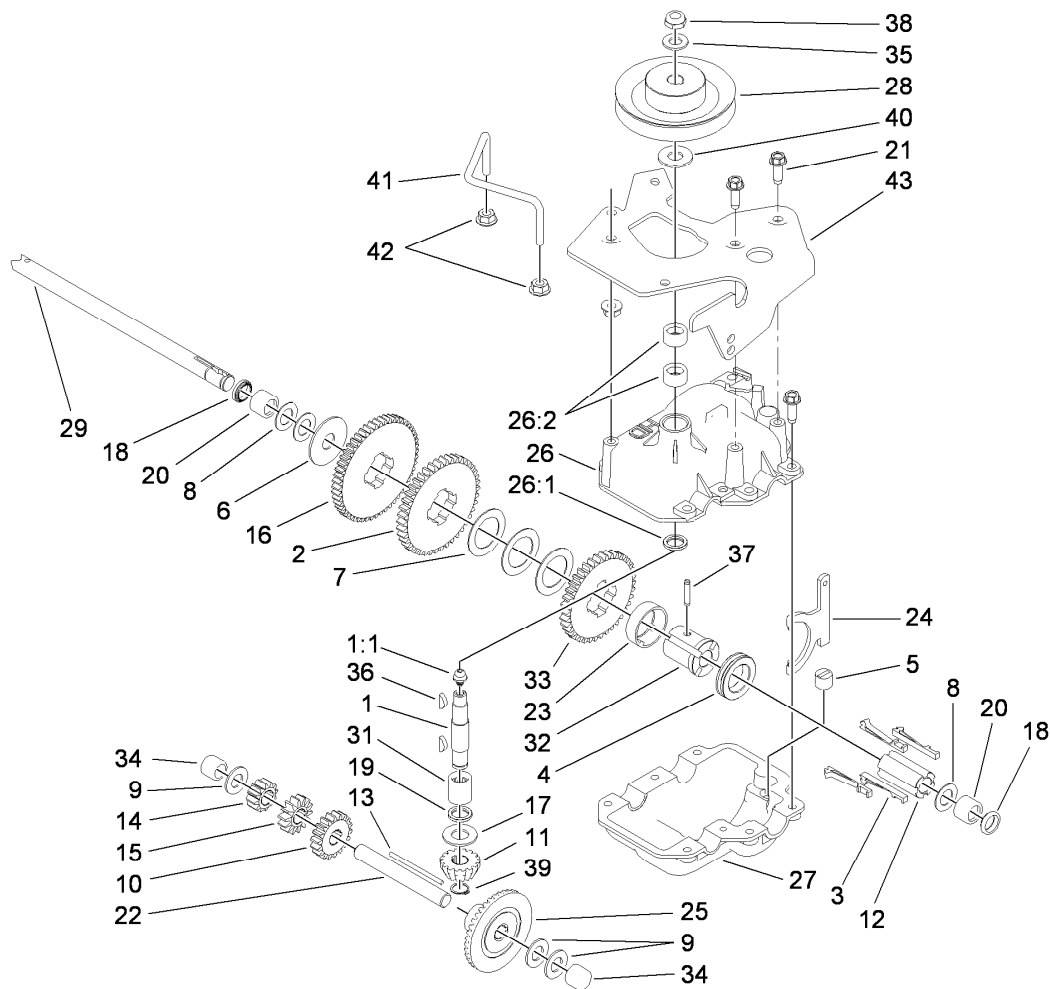 

Gear Case Assembly No. 116-0786

Ref.	Part Number	Qty.	Description
1	13-5149	1	Input Shaft ASM
1:1	302-63	1	Zerk
2	29-9271	1	Gear-42T
3	29-9330	4	Key-Shift
4	29-9340	1	Collar-Shift
5	29-9570	1	Bushing-Yoke
6	29-9690	1	Washer
7	36-4770	3	Washer
8	36-4780	3	Washer-Plain
9	36-4792	3	Washer-Thrust
10	39-6650	1	Gear-18T
11	39-6660	1	Pinion-Bevel
12	39-6720	1	Sleeve
13	39-7842	1	Key
14	46-3540	1	Gear-12T
15	46-3550	1	Gear-14T
16	46-3560	1	Gear
17	47-2910	1	Washer-Thrust
18	47-6730	2	Seal-Oil
19	47-7260	1	Seal
20	117-3500	2	Bearing-Caged Needle Roller
21	49-2040	9	Screw-HWHTF


Ref.	Part Number	Qty.	Description
22	53-7950	1	Shaft-Intermediate
23	55-8020	1	Retainer-Key
24	60-8870	1	Yoke-Shift
25	74-1760	1	Gear-Bevel
26	13-9739	1	Upper Gearcase ASM
26:1	47-7260	1	Seal
26:2	47-7270	2	Bearing
27	74-1920	1	Case-Gear, Lower
28	103-6429	1	Sheave
29	103-6435	1	Shaft-Axle
31	103-9773	1	Bearing-Roller, Caged
32	109-2642	1	Sleeve-4 Dog
33	109-3130	1	Gear-38T (High Strength)
34	252-103	2	Bearing-Closed
35	3256-45	1	Washer-Flat
36	3257-1	2	Key-Woodruff
37	3285-19	1	Pin-Groove
38	3296-5	1	Nut-Lock
39	32151-57	1	Ring-Retaining
40	109-3614	1	Washer
41	103-8224	1	Guide-Belt
42	32128-33	4	Nut-HF
43	116-0339-03	1	Bracket-Guide, Belt

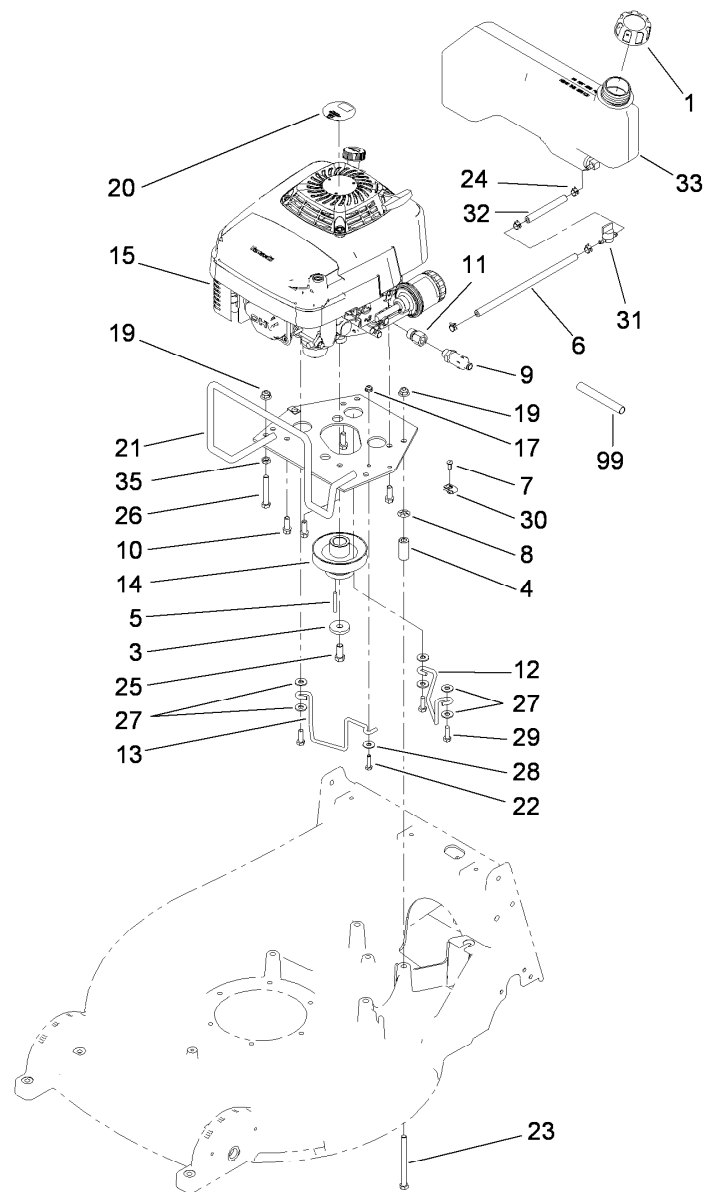 

Engine Assembly

Ref.	Part Number	Qty.	Description
1	93-7198	1	Gas Cap ASM
3	1-543610	1	Washer-Clutch
4	116-1182	4	Spacer
5	7-0036	1	Key-Square
6	109-0294	1	Hose-Fuel
7	63-8590	2	Screw
8	78-7170	4	Ring-Retaining
9	92-6877	1	Valve-Drain, Oil
10	95-1726	4	Screw-Taptite
11	103-1966	1	Adapter
12	116-0860	1	Guide-Belt, Rear
13	116-0859	1	Guide-Belt, Front
14	116-0822	1	Sheave-Drive
15	110-5045	1	Engine-Kawasaki, Fj180V-As64
17	104-7201	1	Nut-HF
19	104-8301	5	Nut-Flange, NI


Ref.	Part Number	Qty.	Description
20	110-0520	1	Decal
21	116-0972-03	1	Plate-Engine
22	321-6	1	Screw-HH
23	323-23	4	Screw-HH
24	2412-98	4	Clamp
25	3212-4	1	Screw-HH
26	323-12	1	Screw-HH
27	3256-3	6	Washer-Flat
28	3290-456	1	Washer-Belleville
29	33114-025	3	Screw-HH
30	107069	2	Clip
31	1-603770	1	Valve-Fuel
32	109-0295	1	Hose-Fuel
33	109-3851	1	Fuel Tank ASM
35	3218-3	1	Nut-Jam
99	103-1964	1	Hose-Drain, Oil

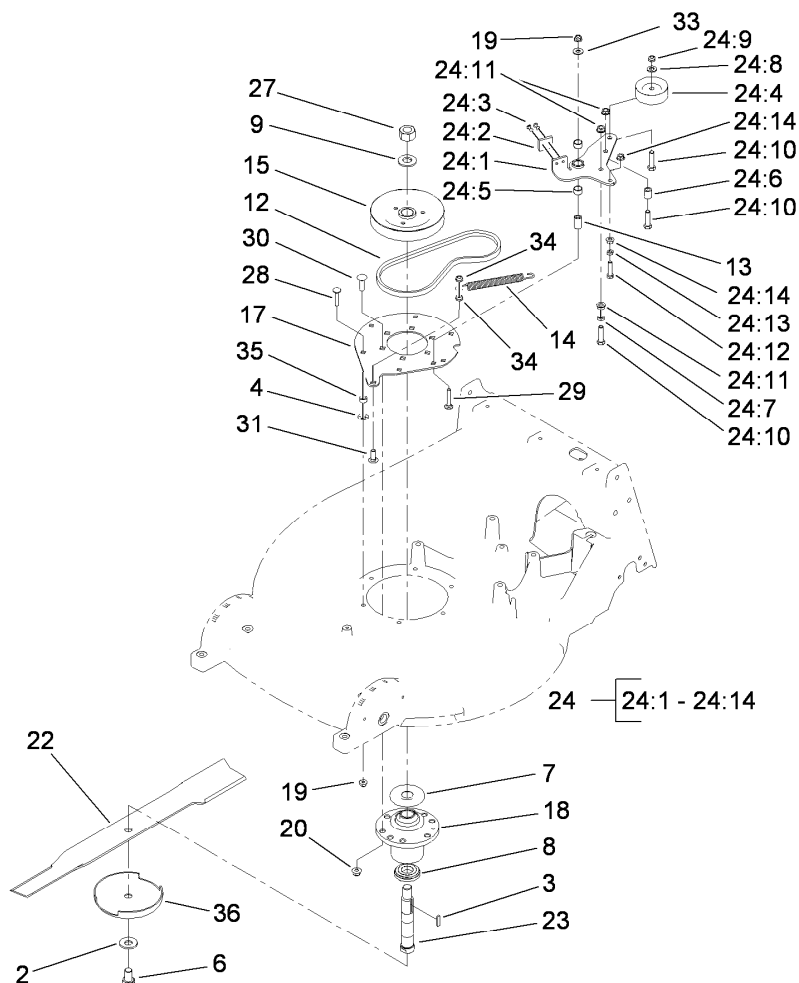 

Blade Drive Assembly

Ref.	Part Number	Qty.	Description
2	1-513208	1	Washer-Spring
3	1-807268	1	Key-Rectangle
4	78-7170	6	Ring-Retaining
6	103-1026	1	Screw-Cap
7	103-1330	1	Guard-Bearing, Top
8	103-2535	1	Spacer-Guard, Bottom
9	103-2802	1	Washer
12	116-0823	1	Belt
13	103-7108	1	Bushing-Arm, Idler
14	103-7896	1	Spring-Brake
15	116-0821	1	Sheave-Split, Steel (W/Hub)
17	116-0092-03	1	Plate-Adapter, Housing
18	107-4065	1	Cutter Housing Service ASM
19	104-8300	7	Nut-Flange, NI
20	104-8301	6	Nut-Flange, NI
22	109-0343	1	Blade
23	109-2650	1	Shaft-Spindle
24	116-0096	1	Idler Arm ASM
24:1	116-0085-03	1	Arm-Idler
24:2	116-0959	1	Pad-Brake


Ref.	Part Number	Qty.	Description
24:3	103-0138	2	Rivet-Pop
24:4	109-3546	1	Pulley-Idler
24:5	103-6111	2	Bearing
24:6	1-633080	1	Bushing-Lever, Lift
24:7	3218-3	2	Nut-Jam
24:8	3256-24	1	Washer-Flat
24:9	3296-59	1	Nut-Lock, NI
24:10	323-8	3	Screw-HH
24:11	3290-357	3	Nut-HHF, Whiz
24:12	1-403180	1	Screw-HH
24:13	3218-2	1	Nut-Jam
24:14	32128-20	2	Nut-HF
27	3217-46	1	Nut-HH
28	3230-4	6	Screw-CARR
29	116-0629	1	Screw-CARR
30	3231-28	6	Screw-CARR
31	3231-22	1	Screw-CARR
33	3256-3	1	Washer-Flat
34	3296-59	3	Nut-Lock, NI
35	111044	6	Spacer
36	67-7561	1	Cup-Scalp, Anti

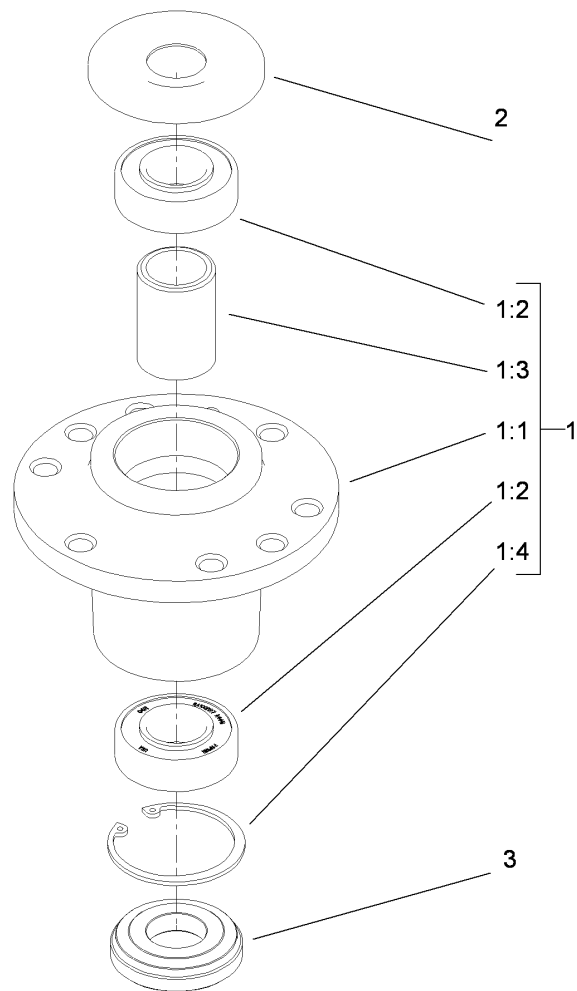 

Cutter Housing Assembly No. 107-4065

Ref.	Part Number	Qty.	Description
1		1	Cutter Housing ASM ●
1:1	103-7975	1	Housing-Spindle
1:2	103-2477	2	Bearing-Jackshaft
1:3	103-2534	1	Spacer-Bearing
1:4	32120-8	1	Ring-Snap
2	103-1330	1	Guard-Bearing, Top
3	103-2535	1	Spacer-Guard, Bottom

 
● Not serviced separately

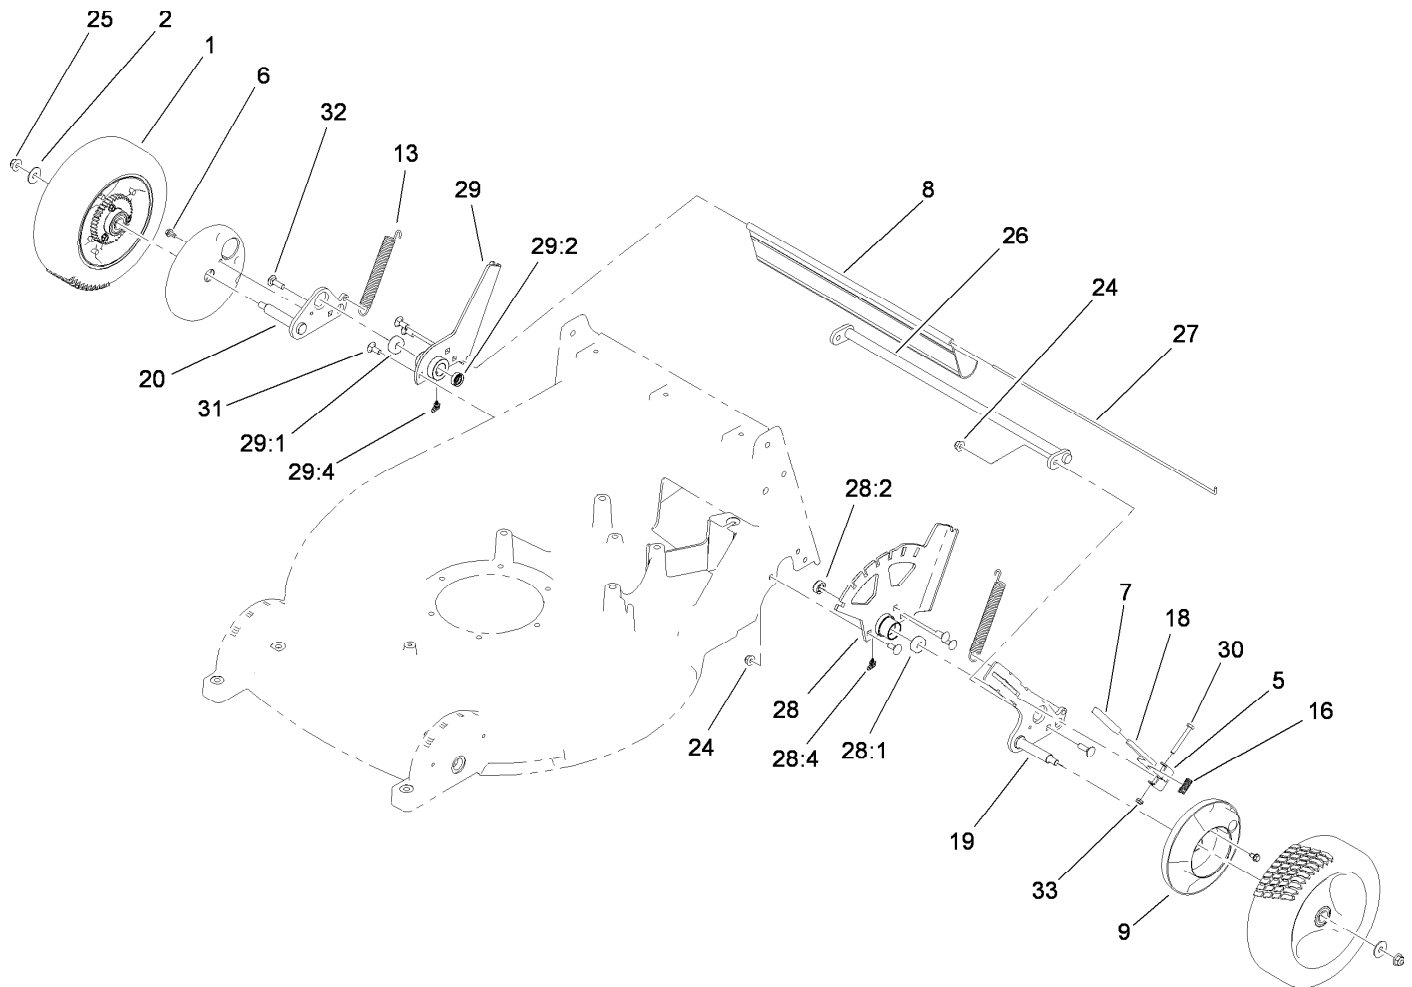

Rear Wheel Assembly


Ref.	Part Number	Qty.	Description
1	112-8707	2	10 Inch Wheel ASM
2	52-2860	2	Washer
5	103-6158	1	Bracket-Pivot, Lift
6	12-3270	2	Screw
7	103-6165	1	Cover-Handle
8	109-5974	1	Shield-Rear
9	103-6441	2	Cover-Gear
13	103-7659	2	Spring-Assist, Lift
16	103-7897	1	Spring-Latch
18	103-8226	1	Lever-Lift
19	103-8227	1	Arm-Axle, LH
20	103-8229	1	Arm-Axle, RH
24	104-8300	8	Nut-Flange, NI
25	104-8301	2	Nut-Flange, NI

Ref.	Part Number	Qty.	Description
26	109-2456-03	1	Rod-Torque
27	109-2458	1	Rod-Shield
28	109-2833	1	LH Bearing Support ASM
28:1	103-6110	1	Bearing-Axle, Rear
28:2	103-7654	1	Seal-Axle
28:4	103-8864	1	Fitting-Grease
29	109-2834	1	RH Bearing Support ASM
29:1	103-6110	1	Bearing-Axle, Rear
29:2	103-7654	1	Seal-Axle
29:4	103-8864	1	Fitting-Grease
30	321-10	1	Screw-HH
31	3230-1	6	Bolt-CARR
32	3230-2	2	Bolt-CARR
33	3296-56	1	Nut-Lock, NI

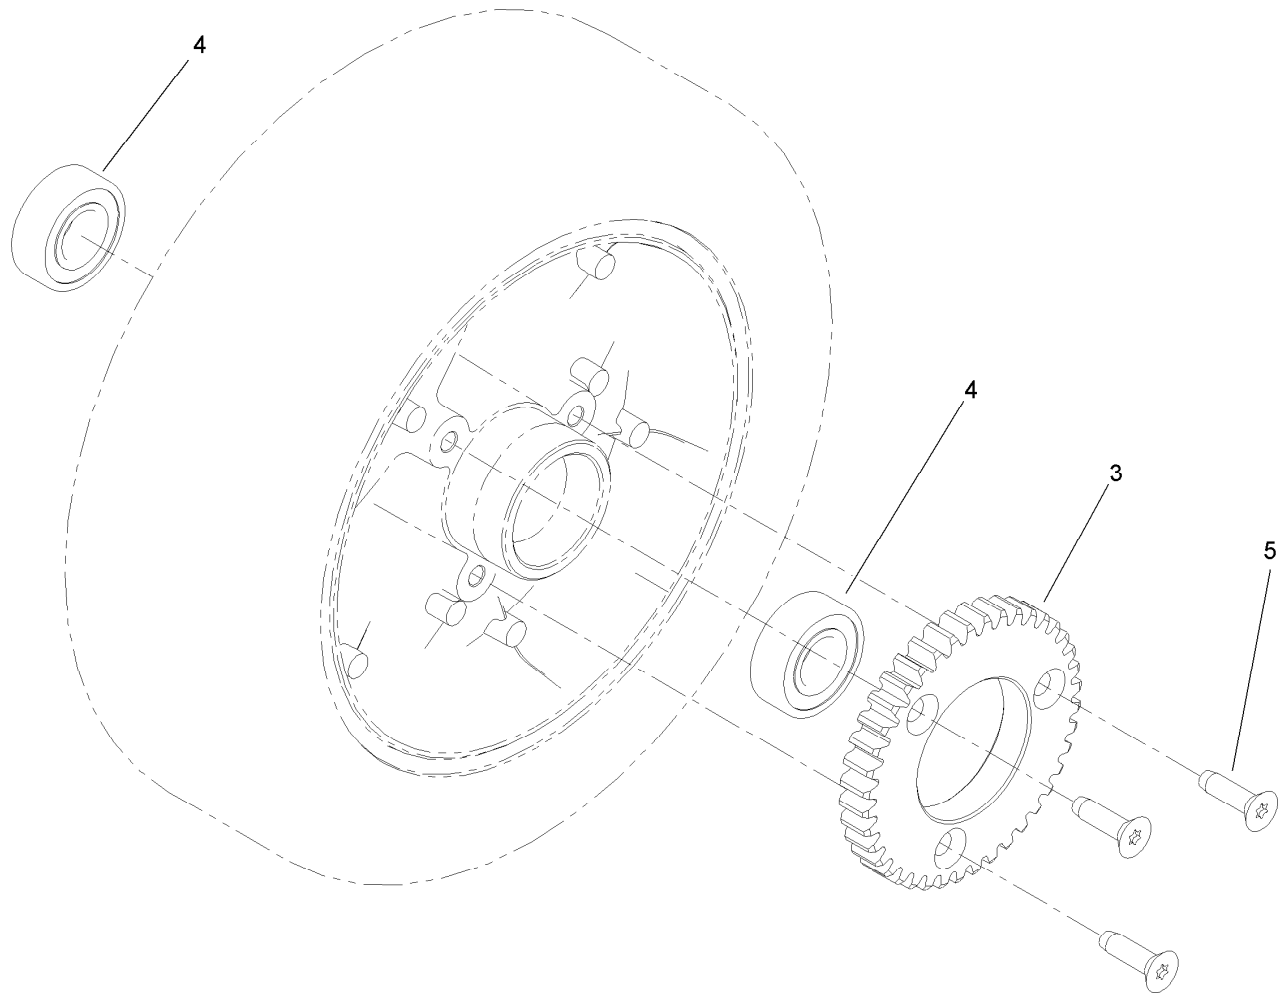 


Wheel Assembly No. 112-8707

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	103-6445	1	Gear-Driven
4	103-6103	2	Bearing-Ball
5	116-0606	3	Screw-Torx

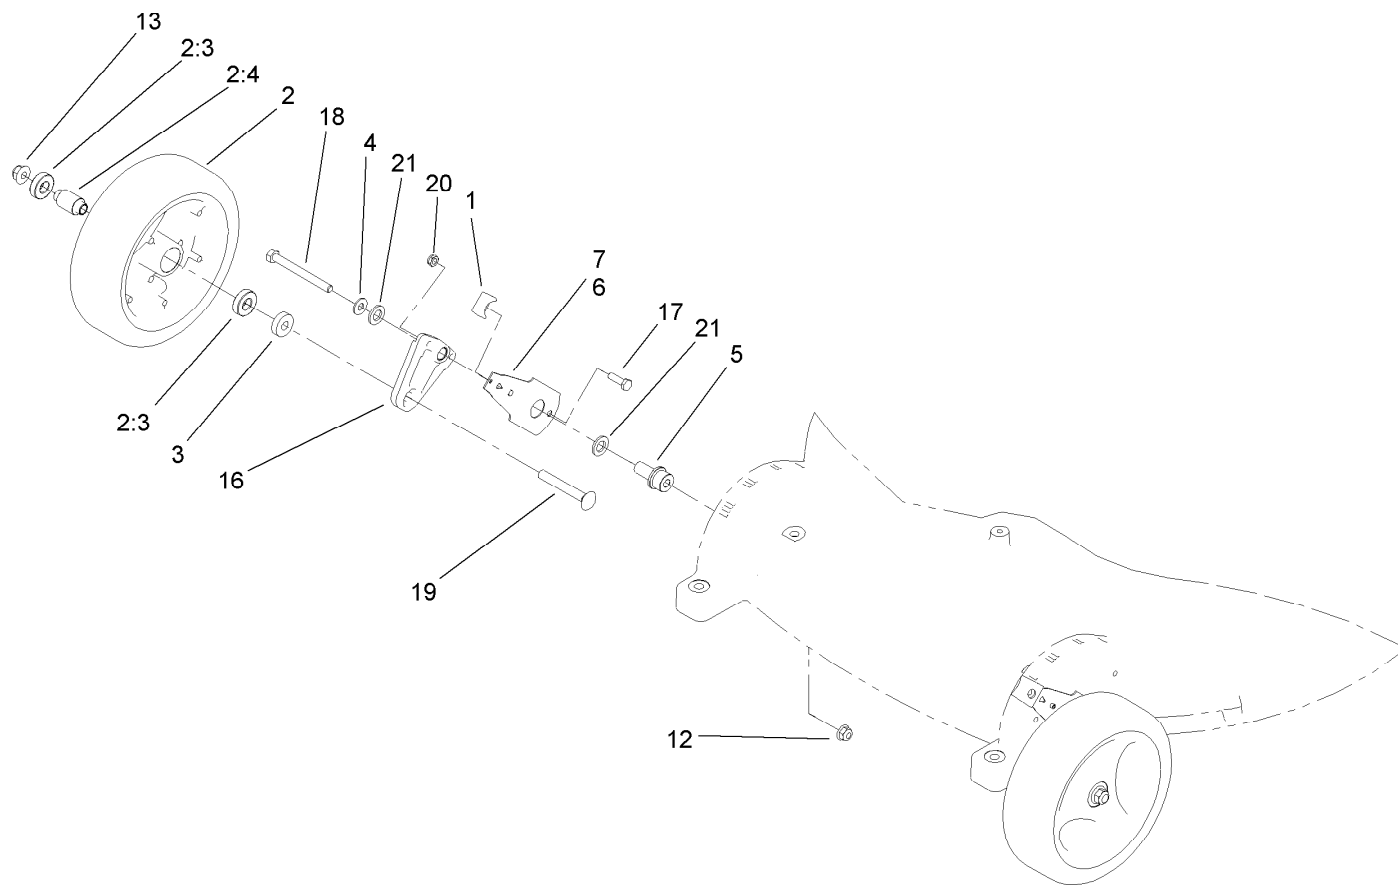 

Front Wheel Assembly


Ref.	Part Number	Qty.	Description
1	25-7740	2	Knob-Arm
2	112-8706	2	8 Inch Wheel ASM
2:3	52-2450	2	Bearing-Wheel
2:4	103-7649	1	Spacer-Wheel, Front
3	62-6660	2	Spacer
4	98-3499	2	Washer-Flat
5	109-6041	2	Bushing-Pivot, Wheel
6	103-5847	1	LH Front Spring Arm ASM
7	103-5848	1	RH Front Spring Arm ASM
12	104-8300	2	Nut-Flange, NI
13	104-8301	2	Nut-Flange, NI
16	109-2843	2	Front Pivot Arm ASM
17	321-5	2	Screw-HH
18	322-20	2	Screw-HH
19	3231-9	2	Screw-CARR
20	3296-56	2	Nut-Lock, NI
21	77-0350	4	Washer-Thrust, Nylon

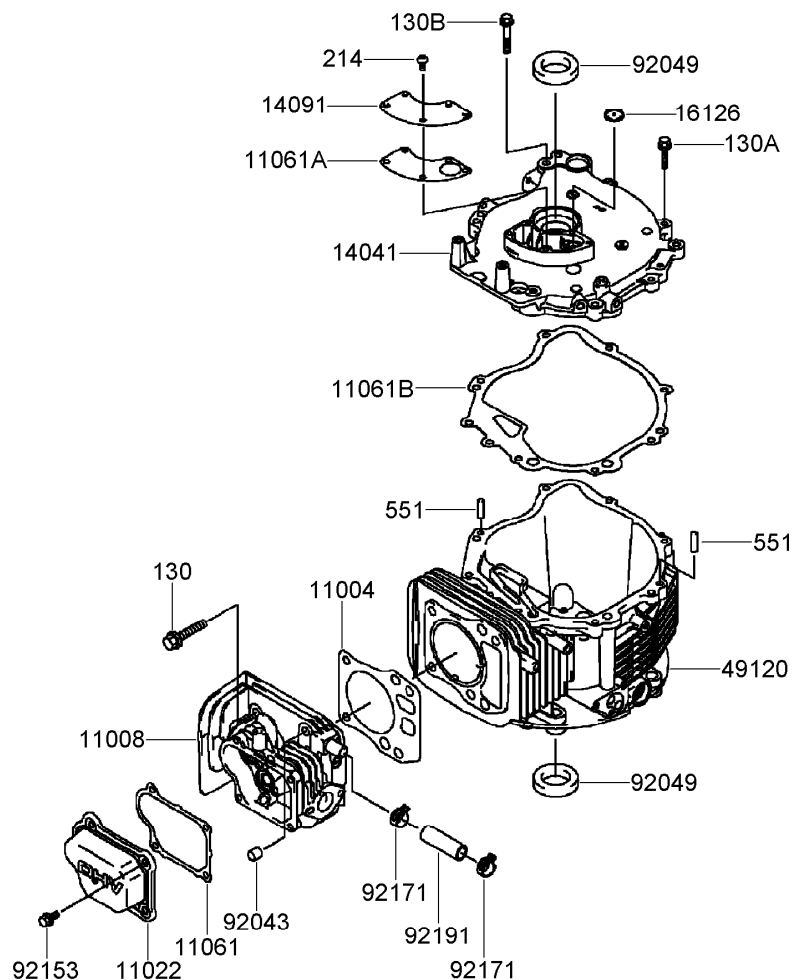 

Cylinder and Crankcase Assembly Kawasaki FJ180V-AS64

Ref.	Part Number	Qty.	Description
11004	11004-7020	1	Gasket-Head ●
11008	11008-7025	1	Head-Cylinder ●
11022	11022-7005	1	Case-Rocker ●
11061	11061-7023	1	Gasket-Case, Rocker ●
11061A	11061-7031	1	Gasket-Breather ●
11061B	11061-7060	1	Gasket-Cover, Crankcase ●
14041	14041-7009	1	Cover ASM ●
14091	14091-7010	1	Cover-Breather ●
16126	16126-7014	1	Valve-Breather ●
49120	49120-7082	1	Crankcase ●
92043	92043-7001	2	Pin ●
92049	92049-7008	2	Seal-Oil (28-44-9 T C) ●
92153	92153-7043	4	Bolt (6X12) ●
92171	92171-7024	2	Clamp ●
92191	92191-7025	1	Tube (12X16X49) ●
130	130CA0840	4	Bolt-Flanged (8X40) ●
130A	130G0625	7	Bolt-Flanged (6X25) ●
130B	130G0635	1	Bolt-Flanged (6X35) ●
214	214B0510	5	Screw-Pan (5X10) ●
551	551A0612	2	Pin-Dowel (6X12) ●

 
● Obtain parts from www.kawpowerepc.com

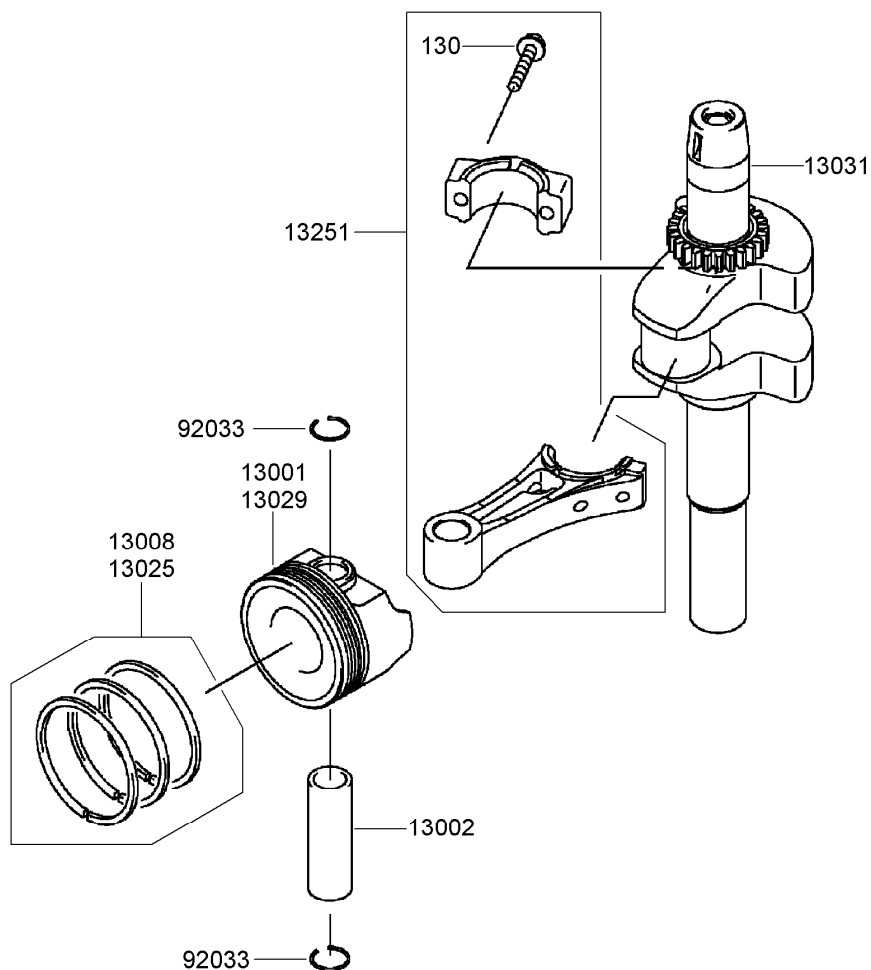

Piston and Crankshaft Assembly Kawasaki FJ180V-AS64

Ref.	Part Number	Qty.	Description
13001	13001-7022	1	Piston-Engine ●
13002	13002-7001	1	Pin-Piston ●
13008	13008-7002	1	Piston Ring Set ●
13025	13025-7006	1	Piston Ring Set (L 0.50) ●
13029	13029-7005	1	Piston-Engine (L 0.50) ●
13031	13031-7064	1	Crankshaft ●
13251	13251-7011	1	Connecting Rod ASM ●
92033	92033-7002	2	Ring-Snap ●
130	130G0630	2	Bolt-Flanged (6X30) ●

 
● Obtain parts from www.kawpowerepc.com

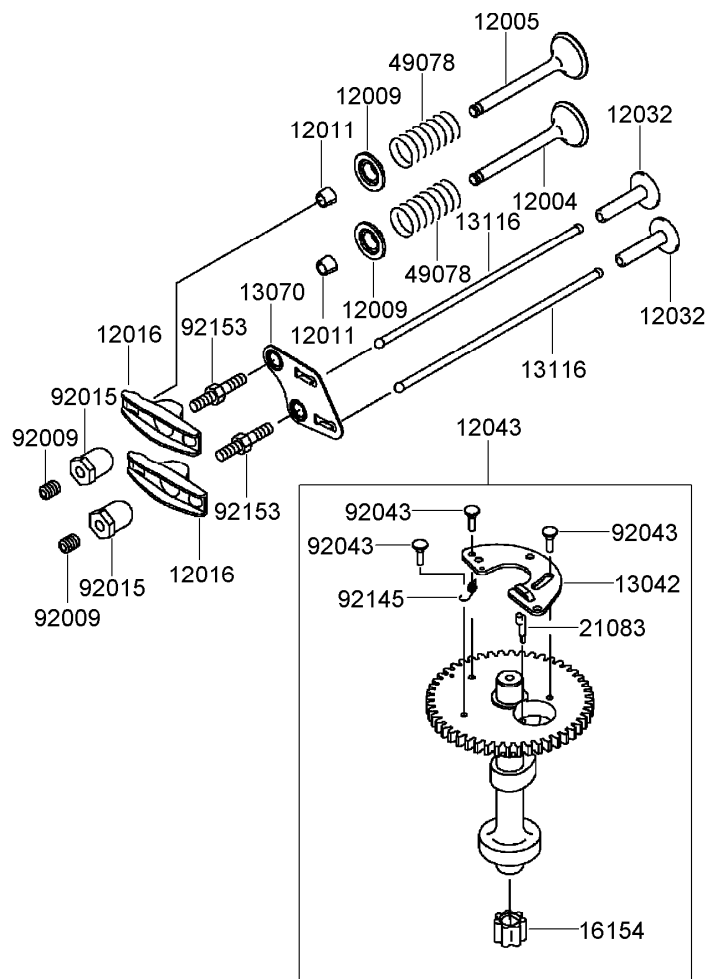

Valve and Camshaft Assembly Kawasaki FJ180V-AS64

Ref.	Part Number	Qty.	Description
12004	12004-7005	1	Valve-Intake ●
12005	12005-7006	1	Valve-Exhaust ●
12009	12009-7001	2	Retainer-Spring, Valve ●
12011	12011-2056	4	Collet ●
12016	12016-7008	2	Arm-Rocker ●
12032	12032-7001	2	Tappet ●
12043	12043-7005	1	Camshaft Valve ASM ●
13042	13042-7006	1	Weight ●
13070	13070-7009	1	Guide ●
13116	13116-7003	2	Rod-Push ●
16154	16154-7004	1	Rotor-Pump ●
21083	21083-7009	1	Arm ●
49078	49078-7001	2	Spring-Valve, Engine ●
92009	92009-2341	2	Screw ●
92015	92015-2253	2	Nut ●
92043	92043-7006	3	Pin ●
92145	92145-7016	1	Spring ●
92153	92153-7019	2	Bolt ●

 
● Obtain parts from www.kawpowerepc.com

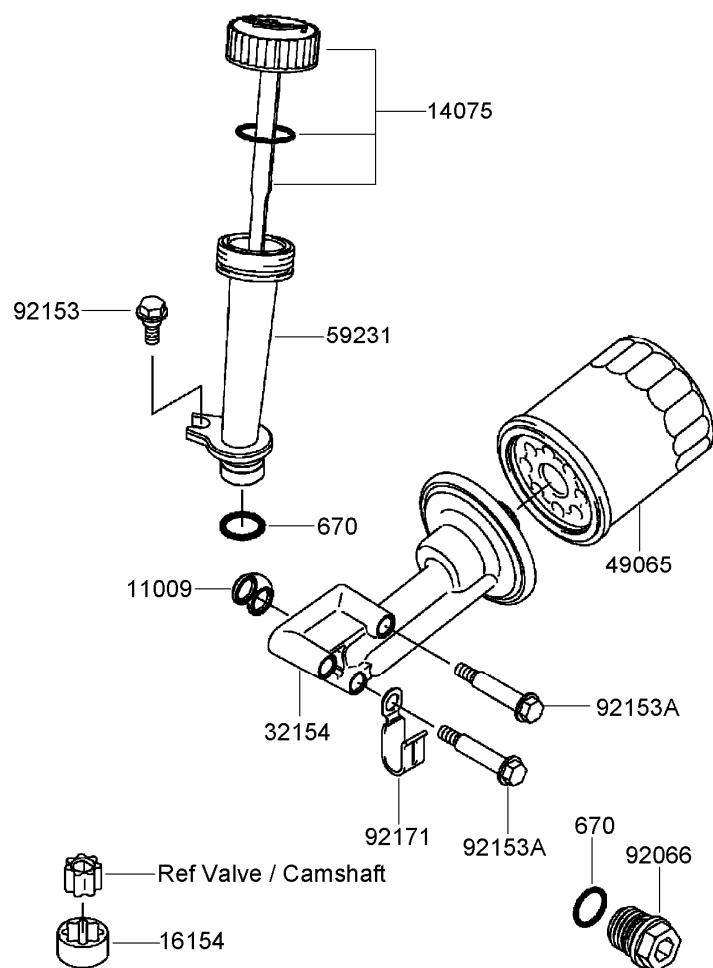

Lubrication Equipment Assembly Kawasaki FJ180V-AS64

Ref.	Part Number	Qty.	Description
11009	11009-2860	1	Gasket ●
14075	14075-7007	1	Cap ASM ●
16154	16154-7002	1	Rotor-Pump ●
32154	32154-7018	1	Pipe ●
49065	49065-2078	1	Filter-Oil ●
59231	59231-7004	1	Filler ●
92066	92066-7003	1	Plug ●
92153	92153-7007	1	Bolt ●
92153A	92153-7028	3	Bolt ●
92171	92171-7008	1	Clamp ●
670	670D2016	2	O-Ring (16Mm) ●

 
● Obtain parts from www.kawpowerepc.com

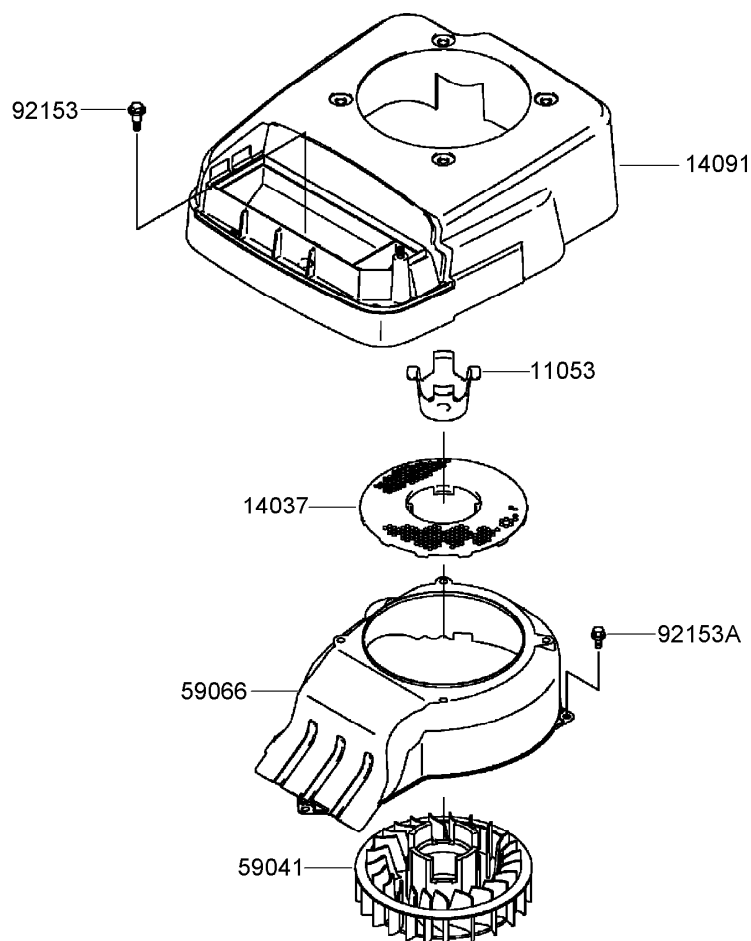

Cooling Equipment Assembly Kawasaki FJ180V-AS64


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11053	11053-7009	1	Bracket-Fan ●
14037	14037-7017	1	Screen ●
14091	14091-7046	1	Cover ●
59041	59041-7009	1	Fan ●
59066	59066-7016	1	Housing-Fan ●
92153	92153-7008	1	Bolt ●
92153A	92153-7043	1	Bolt (6X12) ●

 ● Obtain parts from www.kawpowerepc.com

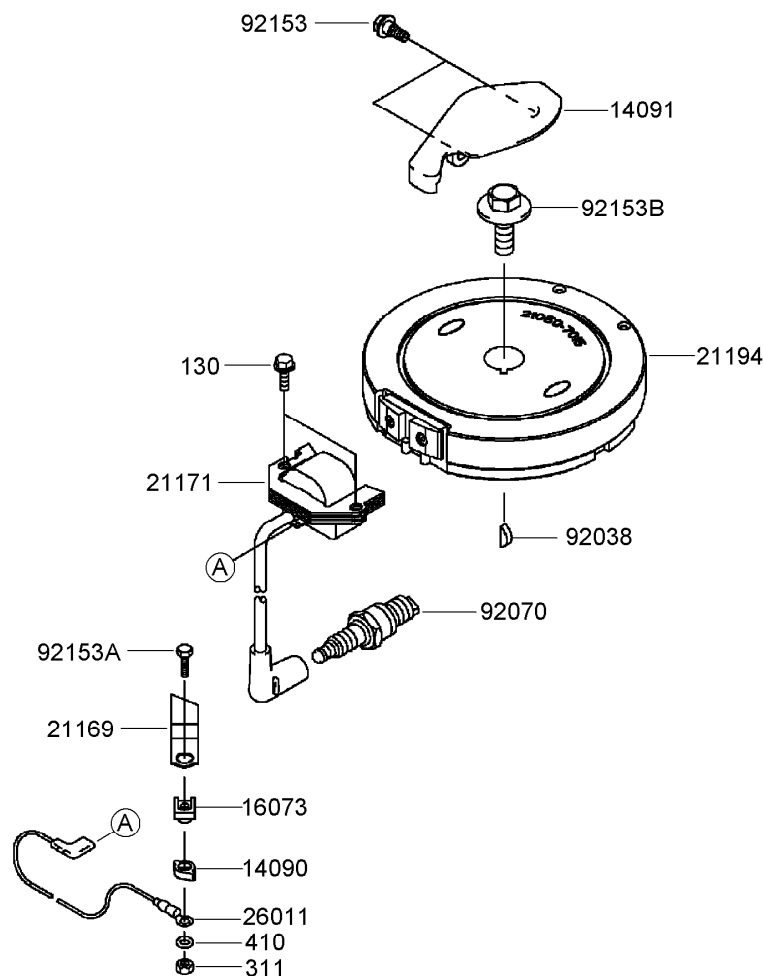

Electric Equipment Assembly Kawasaki FJ180V-AS64

Ref.	Part Number	Qty.	Description
14090	14090-2108	1	Cover ●
14091	14091-7036	1	Cover ●
16073	16073-2192	1	Insulator ●
21169	21169-2071	1	Terminal ●
21171	21171-7030	1	Ignition Coil ASM ●
21194	21194-7024	1	Flywheel ●
26011	26011-7013	1	Wire-Lead ●
92038	92038-2077	1	Key ●
92070	92070-2088	1	Spark Plug, B P R 5E S (N G K) Solid ●
92153	92153-7007	2	Bolt ●
92153A	92153-7012	1	Bolt (4X16) ●
92153B	92153-7030	1	Bolt (12X30) ●
130	130B0620	2	Bolt-Flanged (6X20) ●
311	311B0400	1	Nut-Hex (4Mm) ●
410	410B0400	1	Washer-Plain, S (4Mm) ●

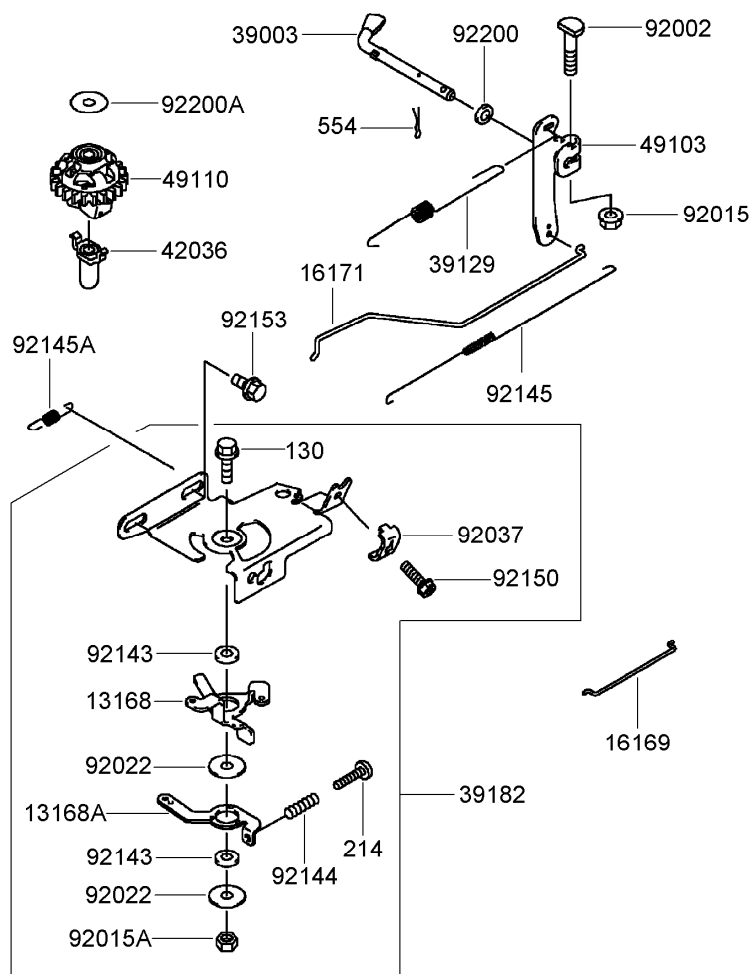 


Control Equipment Assembly Kawasaki FJ180V-AS64

Ref.	Part Number	Qty.	Description
13168	13168-7020	1	Lever ●
13168A	13168-7022	1	Lever ●
16169	16169-7011	1	Link-Choke ●
16171	16171-7015	1	Link-Throttle ●
39003	39003-7002	1	Arm-Pivot ●
39129	39129-7014	1	Spring-Governor ●
39182	39182-7005	1	Control Panel ASM ●
42036	42036-2051	1	Sleeve ●
49103	49103-7005	1	Arm-Governor ●
49110	49110-7002	1	Governor ASM ●
92002	92002-2269	1	Bolt (6X28) ●
92015	92015-1193	1	Nut ●
92015A	92015-2051	1	Nut ●
92022	92022-2372	2	Washer (6X19X1.2) ●

Ref.	Part Number	Qty.	Description
92037	92037-2209	1	Clamp ●
92143	92143-2135	2	Collar (6X13X2.3) ●
92144	92144-2266	1	Spring ●
92145	92145-7025	1	Spring-Throttle ●
92145A	92145-7032	1	Spring ●
92150	92150-2182	1	Bolt (5X18) ●
92153	92153-7043	2	Bolt (6X12) ●
92200	92200-2029	1	Washer (6.5X11.5X2.0) ●
92200A	92200-2036	1	Washer (6.2X20X0.5) ●
130	130B0618	1	Bolt-Flanged ●
214	214B0420	1	Screw-Pan +-(4X20) ●
554	554A0600	1	Pin-Snap (1.2X21.2) ●

 
● Obtain parts from www.kawpowerepc.com

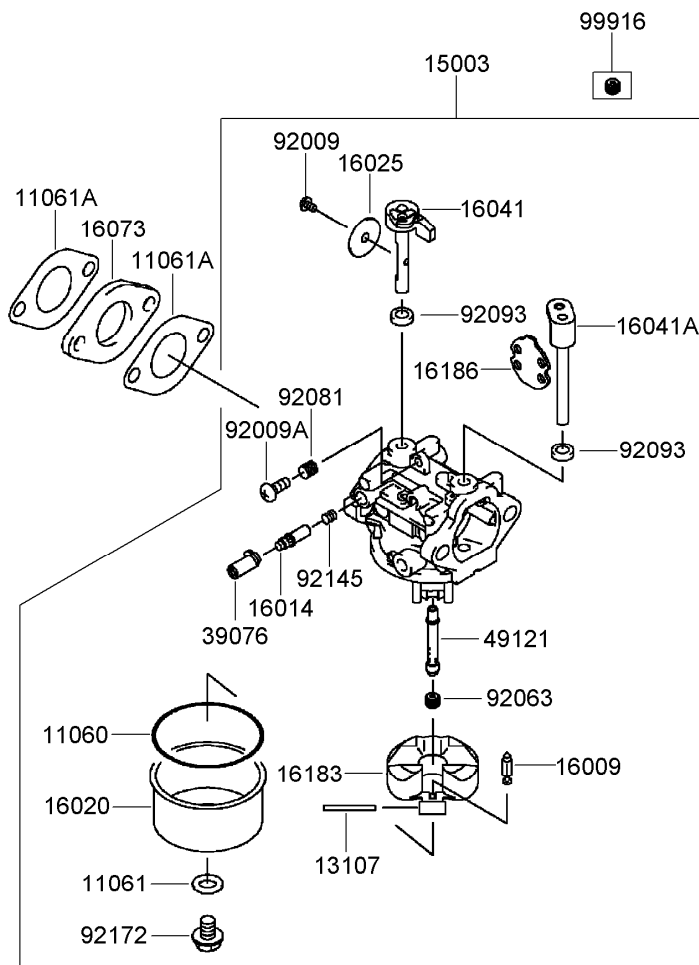

Carburetor Assembly Kawasaki FJ180V-AS64


Ref.	Part Number	Qty.	Description
11060	11060-2190	1	Gasket ●
11061	11061-7010	1	Gasket-Screw ●
11061A	11061-7015	2	Gasket-Insulator ●
13107	13107-7024	1	Shaft ●
15003	15003-7132	1	Carburetor ASM ●
16009	16009-2136	1	Needle-Jet ●
16014	16014-7008	1	Screw-Air, Pilot ●
16020	16020-7004	1	Chamber-Float ●
16025	16025-7007	1	Valve-Throttle ●
16041	16041-7019	1	Shaft-Carburetor ●
16041A	16041-7020	1	Shaft-Carburetor ●
16073	16073-7006	1	Insulator ●
16183	16183-2002	1	Float ASM ●
16186	16186-7003	1	Choke Valve ASM ●
39076	39076-7001	1	Limiter ●
49121	49121-7008	1	Nozzle-Main ●
92009	92009-2083	1	Screw ●
92009A	92009-2349	1	Screw ●
92063	92063-7049	1	Jet-Main, No. 74 (6560 Ft) ●
92081	92081-2234	1	Spring ●
92093	92093-2100	2	Seal ●
92145	92145-7015	1	Spring ●
92172	92172-7002	1	Screw ●
99916	99916-7007	1	Main Jet K H I Parts Kit ●

 ● Obtain parts from www.kawpowerepc.com

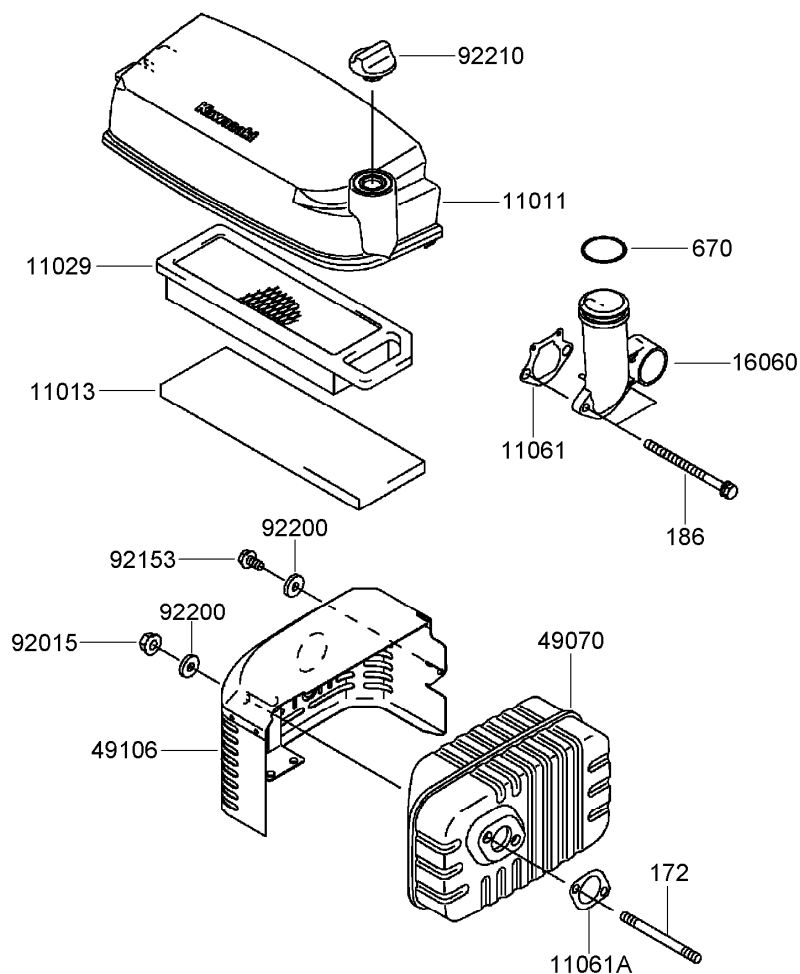

Air Filter and Muffler Assembly Kawasaki FJ180V-AS64


Ref.	Part Number	Qty.	Description
11011	11011-7028	1	Case-Filter, Air ●
11013	11013-7032	1	Element-Filter, Air ●
11029	11029-7021	1	Air Filter Element ASM ●
11061	11061-7012	1	Gasket-Pipe, Intake ●
11061A	11061-7029	1	Gasket-Muffler ●
16060	16060-7012	1	Pipe-Intake ●
49070	49070-7022	1	Muffler ●
49106	49106-7019	1	Cover-Muffler ●
92015	92015-1193	2	Nut ●
92153	92153-7022	1	Bolt (6X12) ●
92200	92200-7043	3	Washer (6.4X17X3) ●
92210	92210-7019	1	Nut ●
172	172G0680	2	Bolt-Stud (6X80) ●
186	186B0680	2	Bolt-Upset, Wp (6X80) ●
670	670B3032	1	O-Ring (32Mm) ●

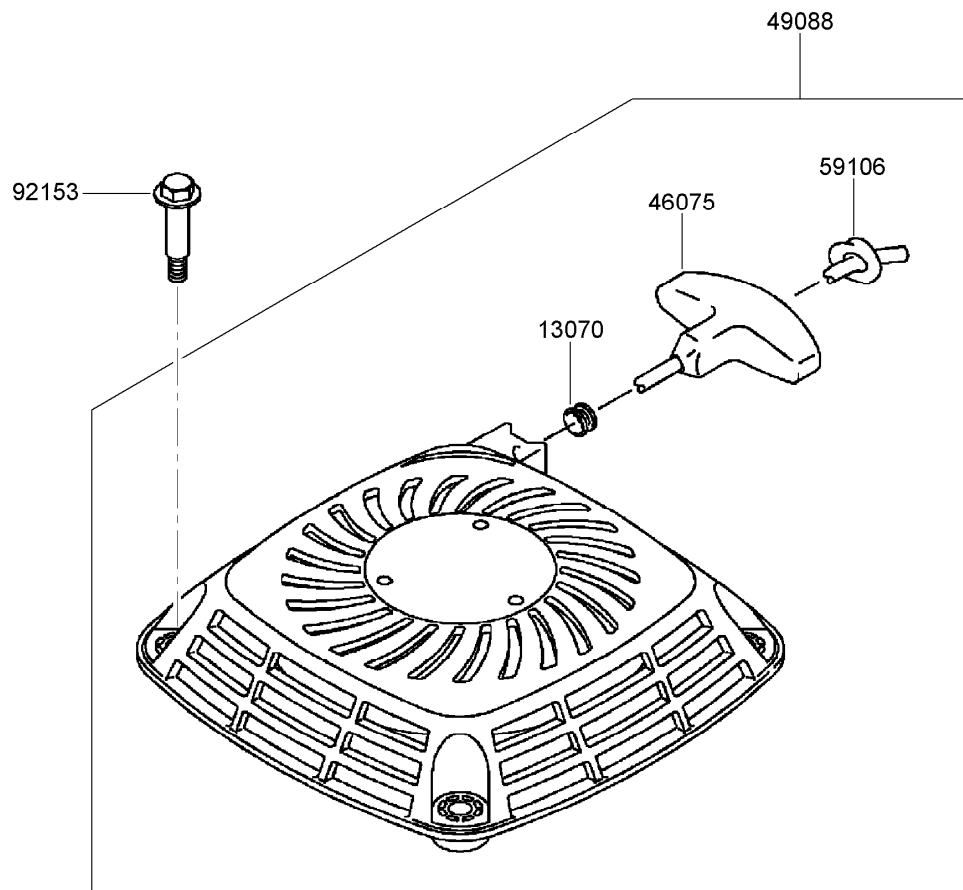 

Starter Assembly Kawasaki FJ180V-AS64

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13070	13070-7015	1	Guide ●
46075	46075-7002	1	Grip ●
49088	49088-7022	1	Starter-Recoil ●
59106	59106-7006	1	Rope (1500Mm) ●
92153	92153-7021	4	Bolt (M6) ●

 ● Obtain parts from www.kawpowerepc.com

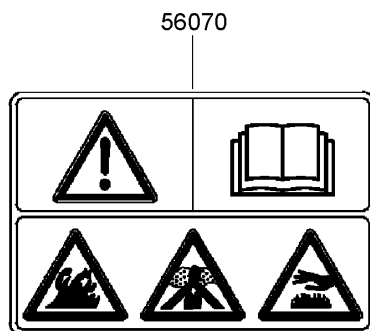

Label Assembly Kawasaki FJ180V-AS64

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
56070	56070-2021	1	Label-Warning ●

Attachments and Accessories

For 22200TE 66cm Heavy-Duty Rear Bagger Lawn Mower

Product Name	Model/Part
Mulch Kit.....	22201
Side-Discharge Kit.....	22202

Notes:



Count on it.