



Count on it.

Parts Catalog

Commercial Walk-Behind Mower
Fixed Deck, Pistol Grip, Hydro Drive with
36in TURBO FORCE® Cutting Unit
Model No. 30934—Serial No. 310000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Engine and Exhaust Assembly.....	4
Fuel System Assembly	5
Pump Drive and Engine Pulley Assembly	6
Parking Brake Assembly	8
Deck Engagement Assembly	9
Hydraulic System Assembly	10
Lower Control Assembly	11
Upper Control Assembly	13
Handle Assembly No. 119-6538	15
Drive Lever Assembly	16
Deck Assembly	17
Deck Assembly No. 110-4907	18
Deflector Assembly No. 119-6530.....	19
Sheave, Spindle and Blade Assembly	20
Idler Assembly	21
Caster Assembly	22
Attachments and Accessories	23

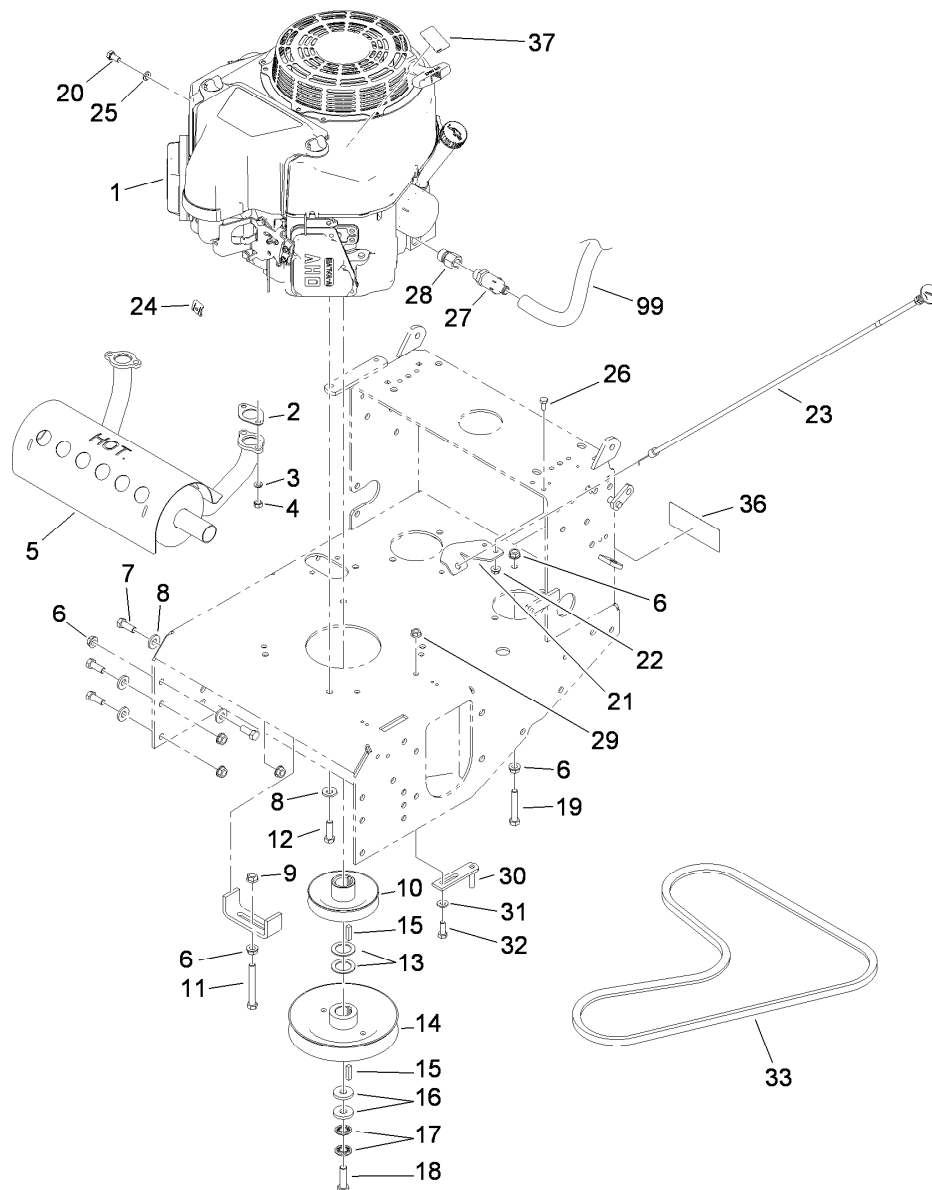


Engine and Exhaust Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fs481V-As05 ●■
2	1-653313	2	Gasket-Exhaust
3	114-3550	4	Washer-Lock, Spring
4	114-3549	4	Nut
5	116-2970	1	Muffler-Horizontal, Offset
6	3290-357	11	Nut-HHF, Whiz
7	323-6	8	Screw-HH
8	98-5975	12	Washer-Belleville
9	32128-21	1	Nut-HF
10	1-653035	1	Pulley
11	323-14	1	Screw-HH
12	323-7	4	Screw-HH
13	1-523157	2	Washer-Spacer
14	110-4891	1	Pulley ASM
15	1-807259	2	Key
16	1-373034	2	Washer
17	1-603610	2	Washer-Spring
18	3212-6	1	Screw-HH

Ref.	Part Number	Qty.	Description
19	323-11	1	Screw-HH
20	33114-016	1	Screw-HH
21	103-1797-01	1	Bracket-Cable, Choke
22	32128-33	2	Nut-HF
23	103-1796	1	Cable-Choke
24	81-1690	1	Clamp-Cable
25	3253-4	1	Washer-Lock
26	321-3	2	Screw-HH
27	92-6877	1	Valve-Drain, Oil
28	103-1966	1	Adapter
29	32128-20	1	Nut-HF
30	1-322110	1	Guide-Belt
31	1-303334	1	Washer-Spring
32	322-4	1	Screw-HH
33	108-6644	1	Belt-V
36	98-0776	1	Decal-Caution
37	106-0699	1	Decal-Warning
99	103-1964	1	Hose-Drain, Oil


● Not serviced separately

■ Obtain parts from www.kawpowerepc.com

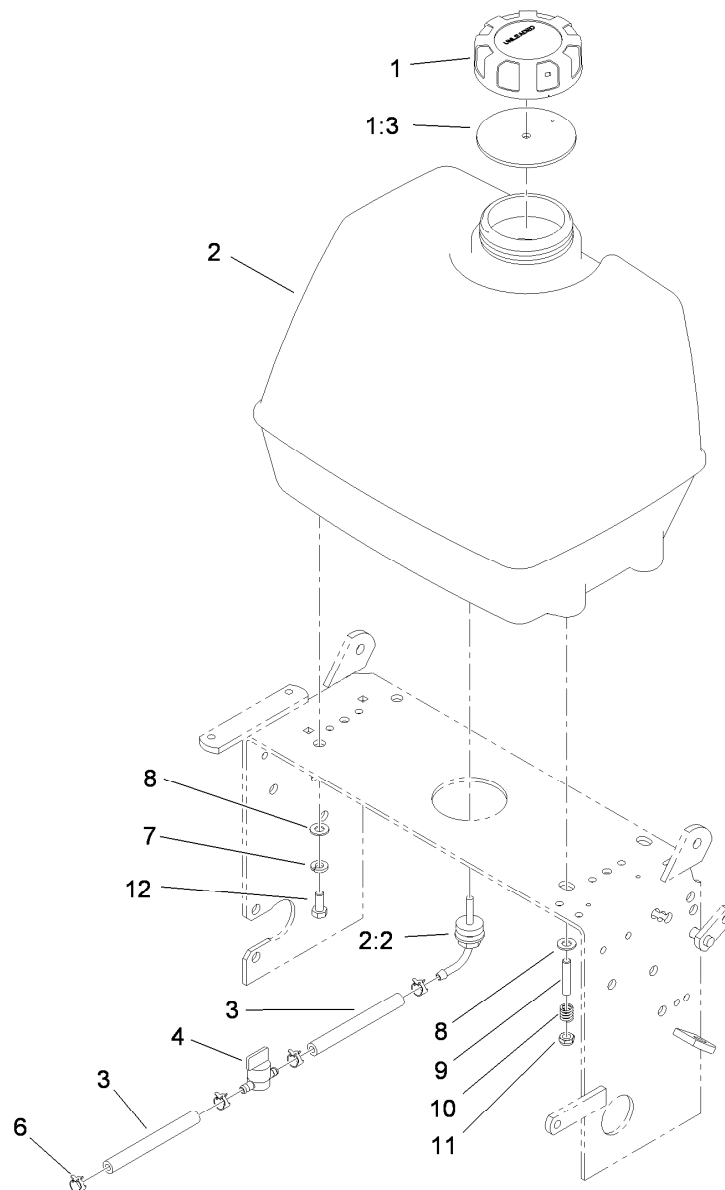

Fuel System Assembly

Ref.	Part Number	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	109-0650	2	Hose-Fuel
4	1-603770	1	Valve-Fuel
6	2412-98	4	Clamp
7	1-805005	2	Washer-Lock
8	3256-23	4	Washer-Flat
9	1-633023	2	Stud
10	1-633349	2	Spring-Tank, Fuel
11	3296-47	2	Nut-Lock, NI
12	322-3	2	Screw-HH

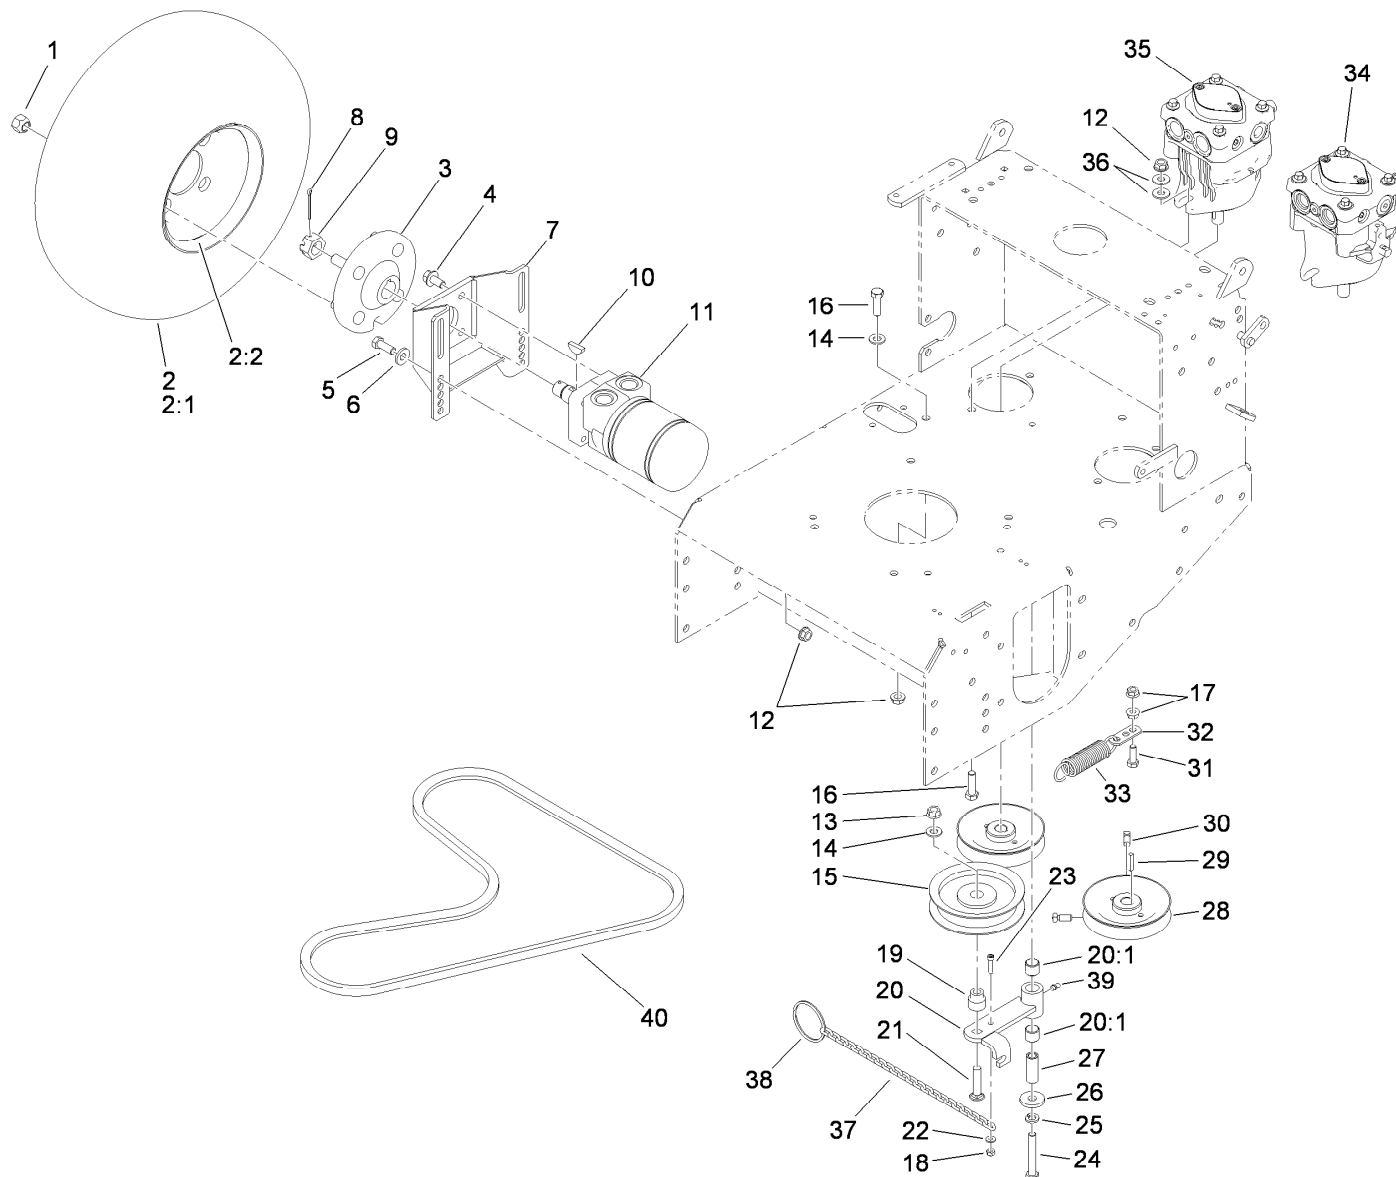


Pump Drive and Engine Pulley Assembly

Ref.	Part Number	Qty.	Description
1	242-50	8	Nut-Lug
2	1-413473	2	Wheel And Tire ASM
2:1	1-413474	1	Tire-Turfmaster
2:2	1-603715	1	Wheel-Rim
3	112-9049	2	Hub-Wheel, (W/Studs)
4	3234-12	8	Screw-HHF
5	323-6	8	Screw-HH
6	98-5975	8	Washer-Belleville
7	103-2289-01	2	Mount-Motor
8	1-806800	2	Pin-Cotter
9	32136-5	2	Nut-Hex, Slotted
10	1-807019	2	Key-Woodruff
11	1-603718	2	Motor-Wheel
11:1	1-000119	1	Seal Kit ●
12	3290-357	13	Nut-HHF, Whiz
13	32128-21	1	Nut-HF
14	3256-24	2	Washer-Flat
15	1-603843	1	Pulley-Idler
16	323-7	5	Screw-HH

Ref.	Part Number	Qty.	Description
17	32128-20	2	Nut-HF
18	3296-2	1	Nut-Lock, NI
19	1-603496	1	Bushing-Idler
20	1-602521	1	Idler Arm ASM
20:1	103-4681	2	Sleeve-Bearing
21	3231-29	1	Screw-CARR
22	3256-14	1	Washer-Flat
23	1-809069	1	Screw-HSH
24	323-12	1	Screw-HH
25	3253-21	1	Washer-Lock
26	1-373034	1	Washer
27	1-603044	1	Bushing
28	1-413010	2	Sheave ASM
29	1-807272	2	Key
30	1-803050	4	Screw-Set
31	322-5	1	Screw-HH
32	1-603801	1	Anchor-Spring
33	1-603402	1	Spring-Extension
34	116-0942	1	Pump-HYD, LH

● Not illustrated

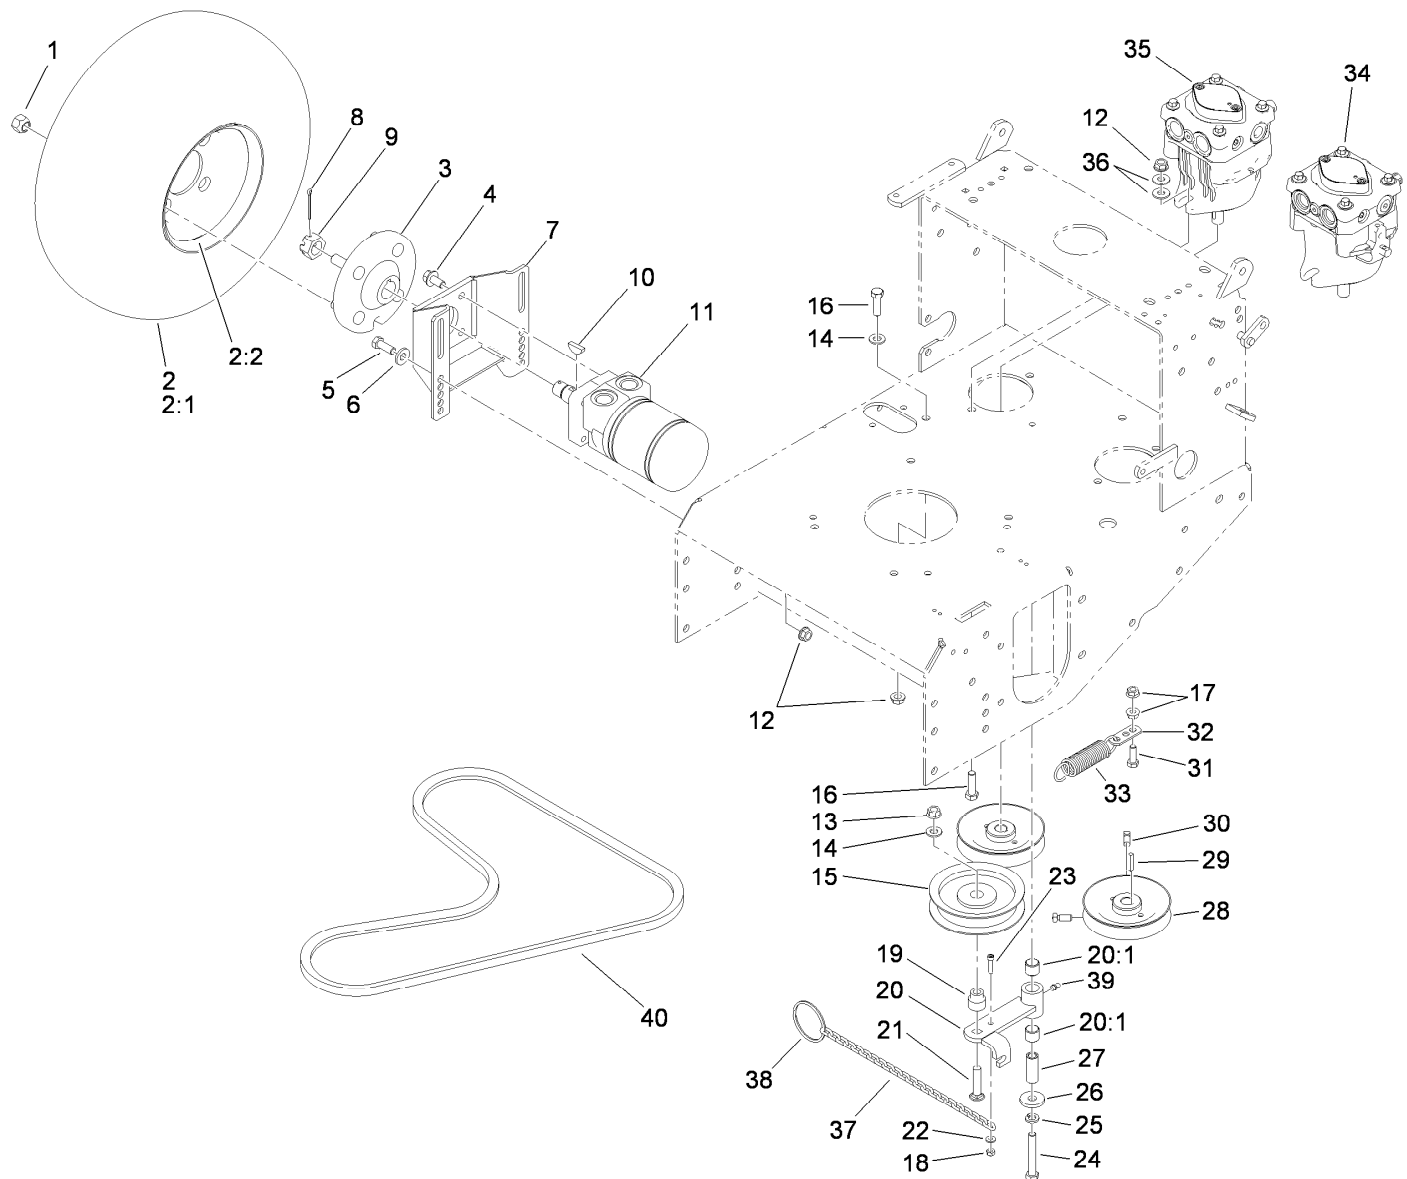


Pump Drive and Engine Pulley Assembly (continued)

Ref.	Part Number	Qty.	Description
35	116-0943	1	Pump-HYD, RH
36	3256-3	8	Washer-Flat
37	1-323365	1	Chain-Link, Twist

Ref.	Part Number	Qty.	Description
38	1-323366	1	Ring-Split
39	302-19	1	Fitting-Grease
40	106-2740	1	V-Belt


● Not illustrated

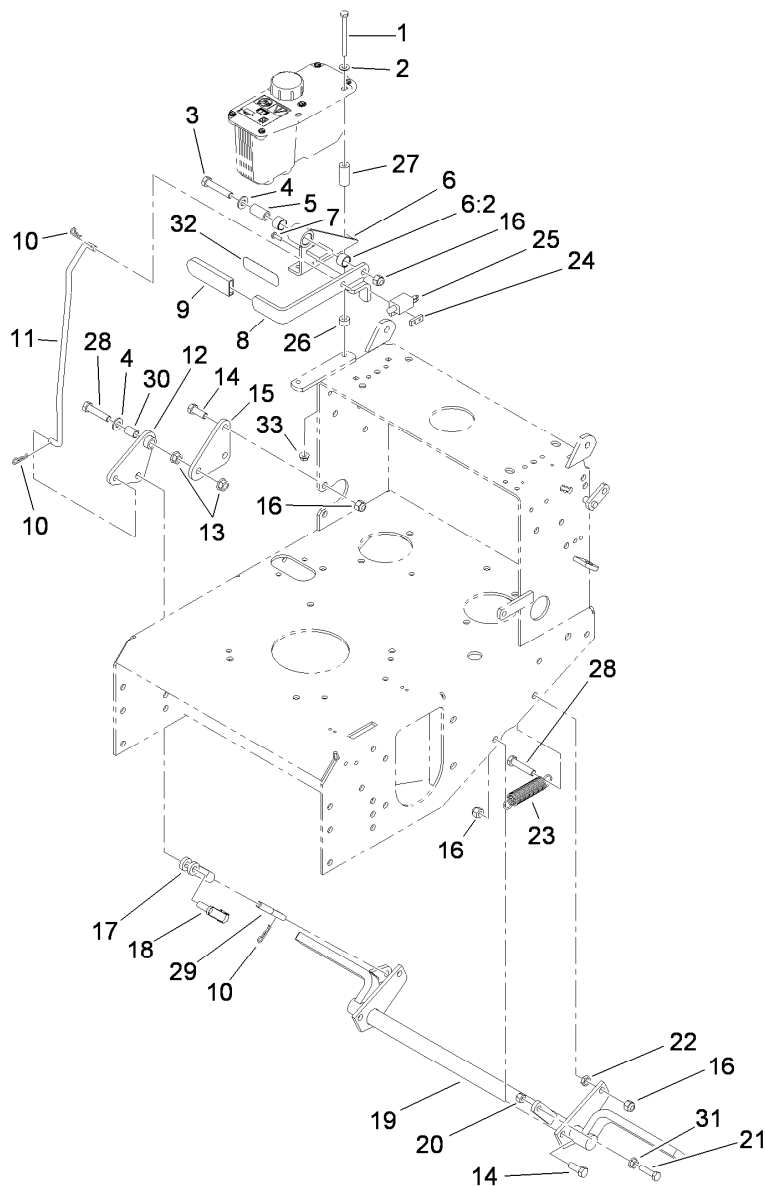

Parking Brake Assembly

Ref.	Part Number	Qty.	Description
1	321-23	2	Screw-HH
2	3256-22	2	Washer-Flat
3	323-10	1	Screw-HH
4	3256-24	2	Washer-Flat
5	1-413344	1	Bushing-Pivot
6	1-414504	1	Bracket ASM
6:2	1-413347	2	Sleeve-Bushing
7	3290-500	2	Screw-PPH
8	1-412501-03	1	Lever-Parkbrake
9	1-303020	1	Grip-Lever
10	1-806003	3	Pin-Cotter, Hair
11	1-413496	1	Linkage-Upper
12	1-414508	1	Bellcrank ASM
13	32128-21	2	Nut-HF
14	323-6	5	Screw-HH
15	1-413497	1	Bellcrank
16	3296-39	7	Nut-Lock, NI


Ref.	Part Number	Qty.	Description
17	1-633131	1	Yoke-Linkage, Brake
18	103-2399	1	Pin-Spring, Clevis
19	103-2085-03	1	Brake ASM
20	3296-29	1	Nut-Lock, NI
21	322-6	1	Screw-HH
22	3218-3	1	Nut-Jam
23	1-323161	1	Spring-Idler
24	1-633181	1	Plate-Tapped
25	1-513051	1	Switch-Open, Normally
26	1-323549	2	Spacer
27	103-2191	2	Spacer
28	323-9	2	Screw-HH
29	1-413489	1	Linkage-Lower
30	1-303548	1	Bushing-Plastic
31	32128-20	1	Nut-HF
32	103-2103	1	Decal-Brake, Park
33	32128-33	2	Nut-HF

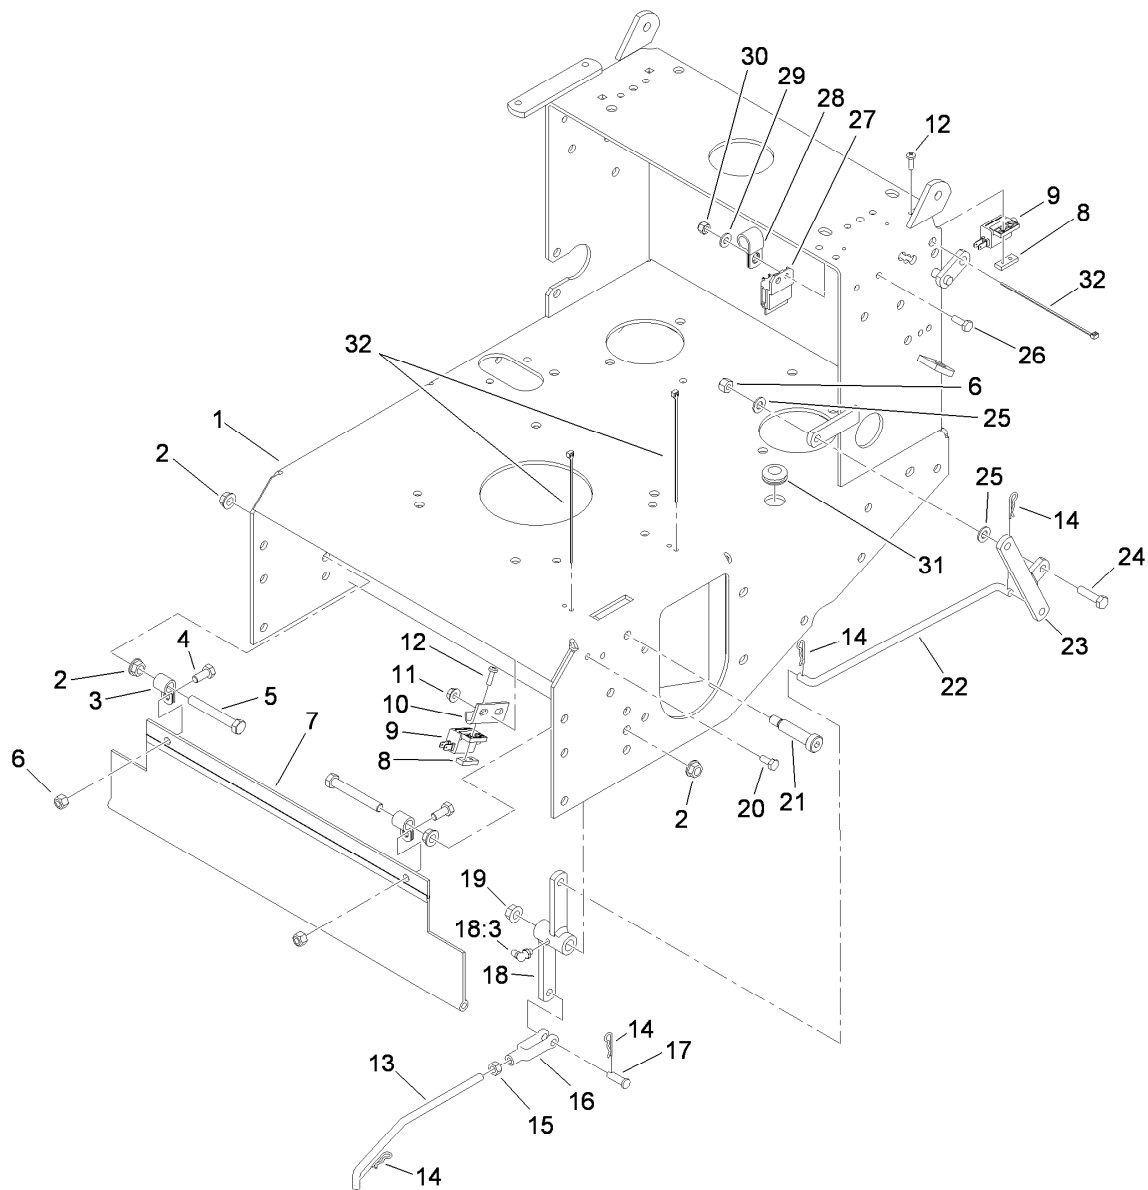

Deck Engagement Assembly

Ref.	Part Number	Qty.	Description
1	117-3523-01	1	Hydro Frame ASM
2	3290-357	4	Nut-HHF, Whiz
3	1-413510	2	Clip-Loom
4	322-3	2	Screw-HH
5	323-13	2	Screw-HH
6	3296-29	3	Nut-Lock, NI
7	103-2056	1	Shield-Drag
8	1-633181	2	Plate-Tapped
9	1-513051	2	Switch-Open, Normally
10	1-323213	1	Bracket-Switch, Blade
11	32128-33	2	Nut-HF
12	3290-500	4	Screw-PPH
13	1-323174	1	Arm-Linkage, Assist
14	1-806003	4	Pin-Cotter, Hair
15	3219-2	1	Nut-Hex
16	1-303105	1	Yoke-Adjustable
17	1-808280	1	Pin-Clevis

Ref.	Part Number	Qty.	Description
18	1-322108	1	Bellcrank ASM
18:3	302-40	1	Fitting-Grease
19	32128-21	1	Nut-HF
20	321-3	2	Screw-HH
21	1-809062	1	Screw
22	1-323172	1	Linkage-Engage, Blade
23	1-322090-01	1	Bellcrank ASM
24	322-6	1	Screw-HH
25	3256-23	2	Washer-Flat
26	321-4	1	Screw-HH
27	1-323430	1	Module-Interlock
28	1-603727	1	Clip-Loom
29	3256-22	1	Washer-Flat
30	3296-42	1	Nut-Lock, NI
31	1-543296	1	Grommet
32	1-303287	3	Tie-Plastic

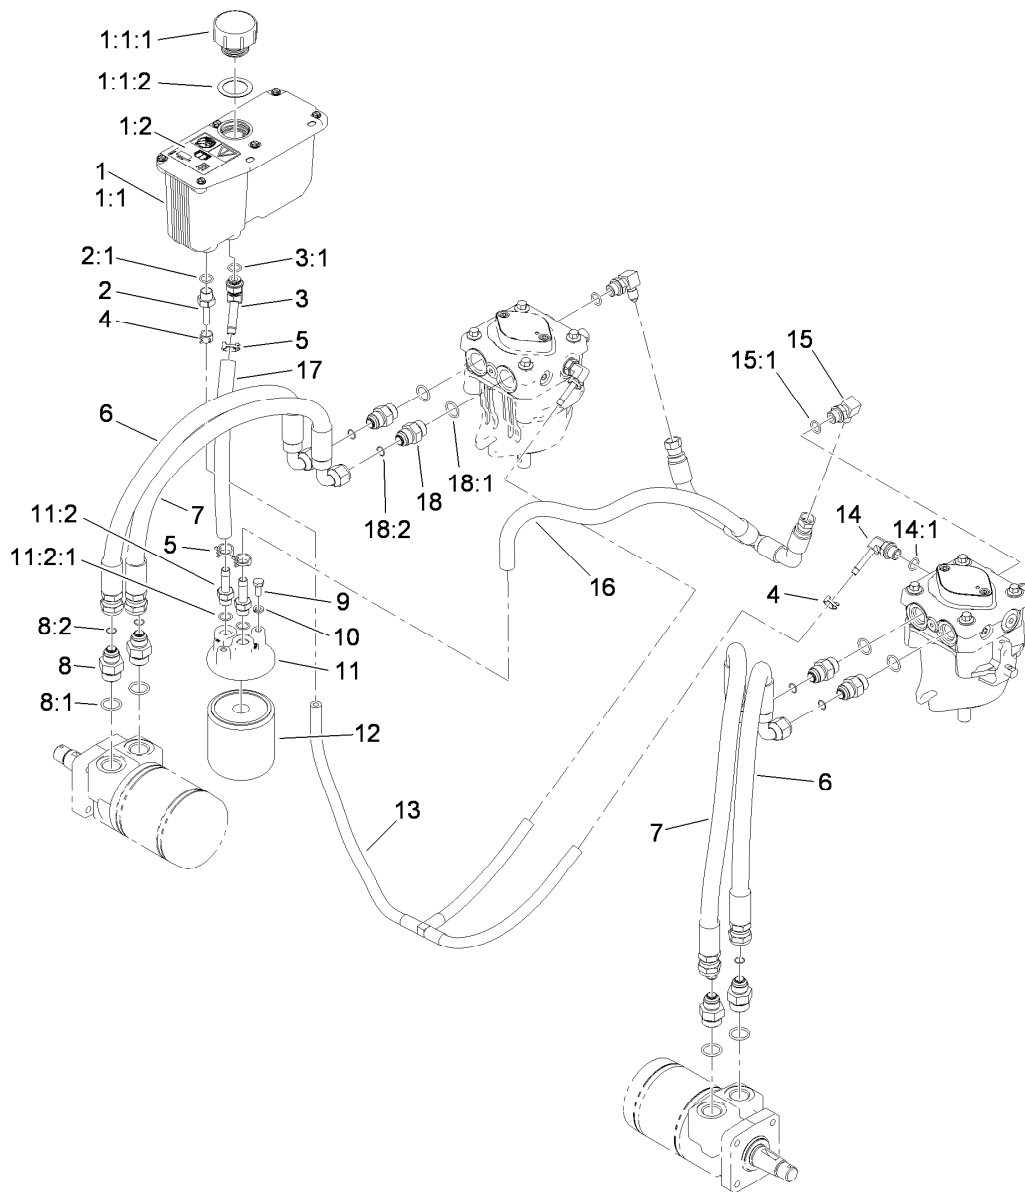


Hydraulic System Assembly

Ref.	Part Number	Qty.	Description
1	107-8433	1	HYD Reservoir ASM
1:1		1	Reservoir-HYD ●
1:1:1	103-1948	1	Cap-Reservoir, HYD
1:1:2	103-1949	1	Gasket-Cap
1:2	115-4212	1	Decal-Warning
2	103-1801	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	103-1807	1	Fitting-Barbed, 45 DEG
3:1	237-42	1	O-Ring
4	103-1716	3	Clamp-Hose
5	103-1988	3	Clamp-Hose
6	1-613034	2	Hose-Pressure, High
7	1-323241	2	Hose-Pressure, High
8	1-603991	4	Fitting-Straight
8:1	237-80	1	O-Ring
8:2	1-603992	1	O-Ring

Ref.	Part Number	Qty.	Description
9	321-3	2	Screw-HH
10	1-805004	2	Washer-Lock
11	103-2889	1	Filter Head ASM
11:2	103-1912	2	Adapter-Straight
11:2:1	237-42	1	O-Ring
12	1-633750	1	Filter-Oil, HYD
13	116-0918	1	Case Drain Hose ASM
14	103-1799	2	Elbow-90 DEG
14:1	237-42	1	O-Ring
15	103-1802	2	Fitting-HYD, 90 DEG
15:1	1-603921	1	O-Ring
16	116-2123	1	Charge Hose ASM
17	103-2959	1	Hose-Charge
18	1-603990	4	Fitting-Straight
18:1	1-603920	1	O-Ring
18:2	1-603992	1	O-Ring


● Not serviced separately

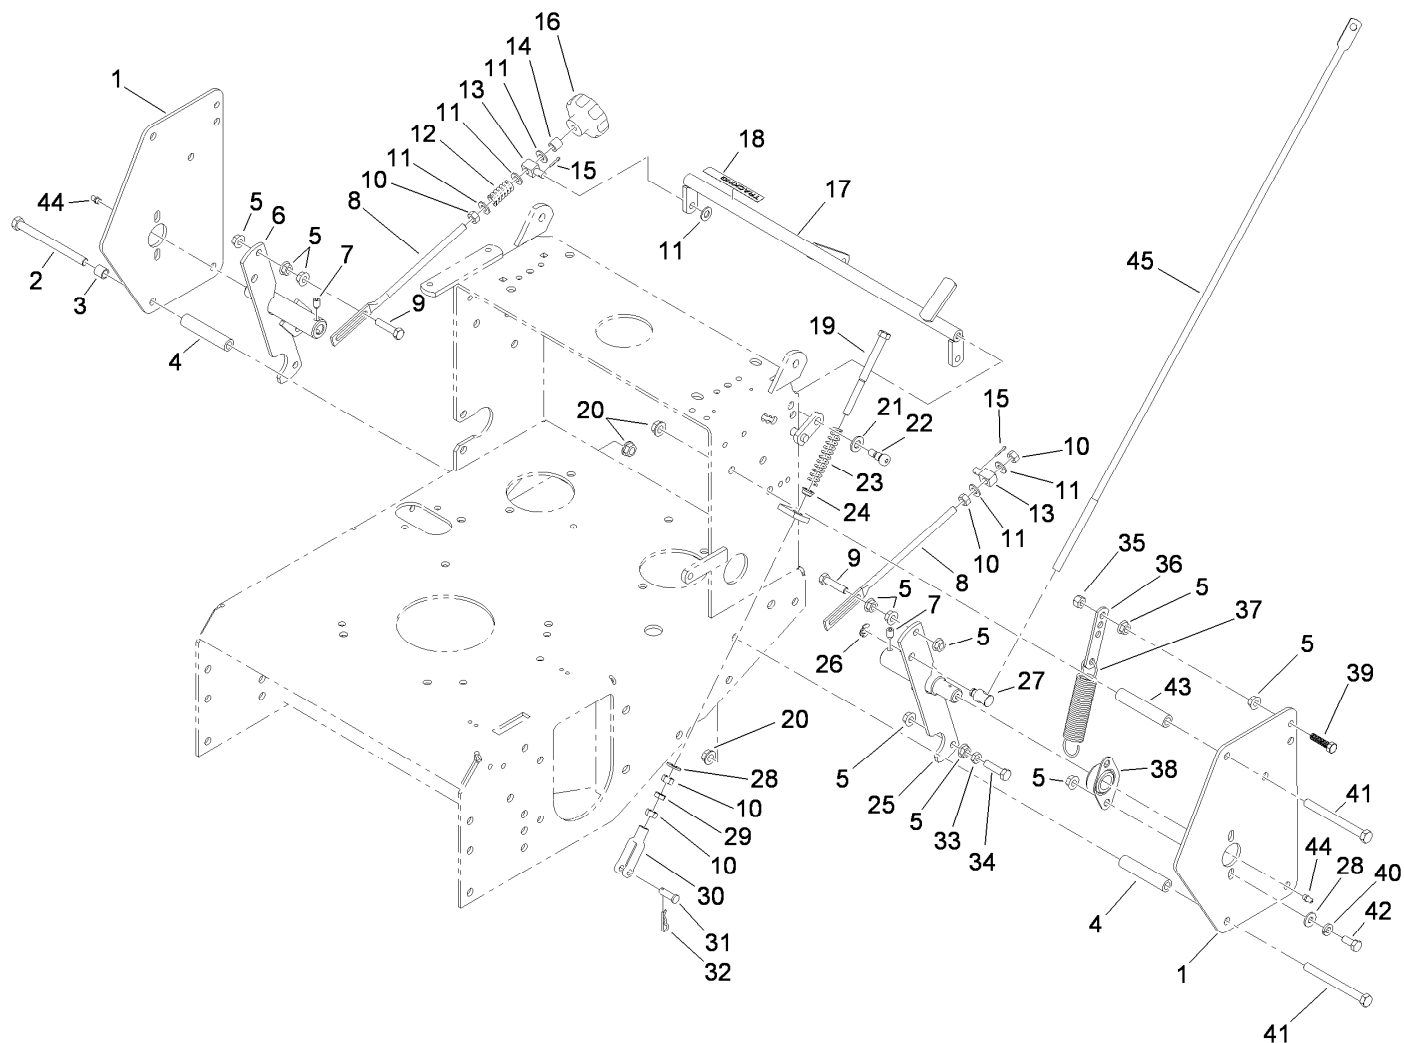

Lower Control Assembly

Ref.	Part Number	Qty.	Description
1	110-4897-01	2	Shield-Control
2	323-23	1	Screw-HH
3	105-4820	1	Spacer-Short
4	1-323197-01	4	Spacer-Shield
5	32128-20	18	Nut-HF
6	103-4796-01	1	Shaft-Control, RH
7	3246-4	2	Screw-Set
8	1-413350	2	Link-Control, Speed
9	1-403180	2	Screw-HH
10	3219-2	7	Nut-Hex
11	3256-23	7	Washer-Flat
12	1-323245	1	Spring-Compression
13	1-603676	2	Swivel-Adjustable, Short
14	1-603903	1	Spacer
15	3272-5	2	Pin-Cotter
16	1-413151	1	Knob-Tracking
17	1-412203-01	1	Crank-Control, Speed
18	105-4109	1	Decal-Tracking
19	1-603737	2	Bolt-Return, Neutral
20	3290-357	8	Nut-HHF, Whiz
21	3256-24	2	Washer-Flat


Ref.	Part Number	Qty.	Description
22	1-809056	2	Screw
23	1-603807	2	Spring-Return, Neutral
24	109-3769	2	Bushing-Nylon, Flanged
25	103-1190-01	1	Shaft-Control, LH
26	32151-47	2	Ring-Retaining
27	103-1235	2	Swivel-Lever, Drive
28	3256-2	6	Washer-Flat
29	3220-2	2	Nut-Jam
30	1-303105	2	Yoke-Adjustable
31	1-808280	2	Pin-Clevis
32	1-806003	2	Pin-Cotter, Hair
33	3218-2	2	Nut-Jam
34	322-6	2	Screw-HH
35	3296-29	2	Nut-Lock, NI
36	1-613089	2	Tab-Spring, Extension
37	1-603693	2	Spring-Extension
38	1-633102	2	Bearing-Flange, Side
39	1-800016	2	Bolt-TAP, HH
40	1-805005	4	Washer-Lock
41	323-16	7	Screw-HH
42	322-3	4	Screw-HH

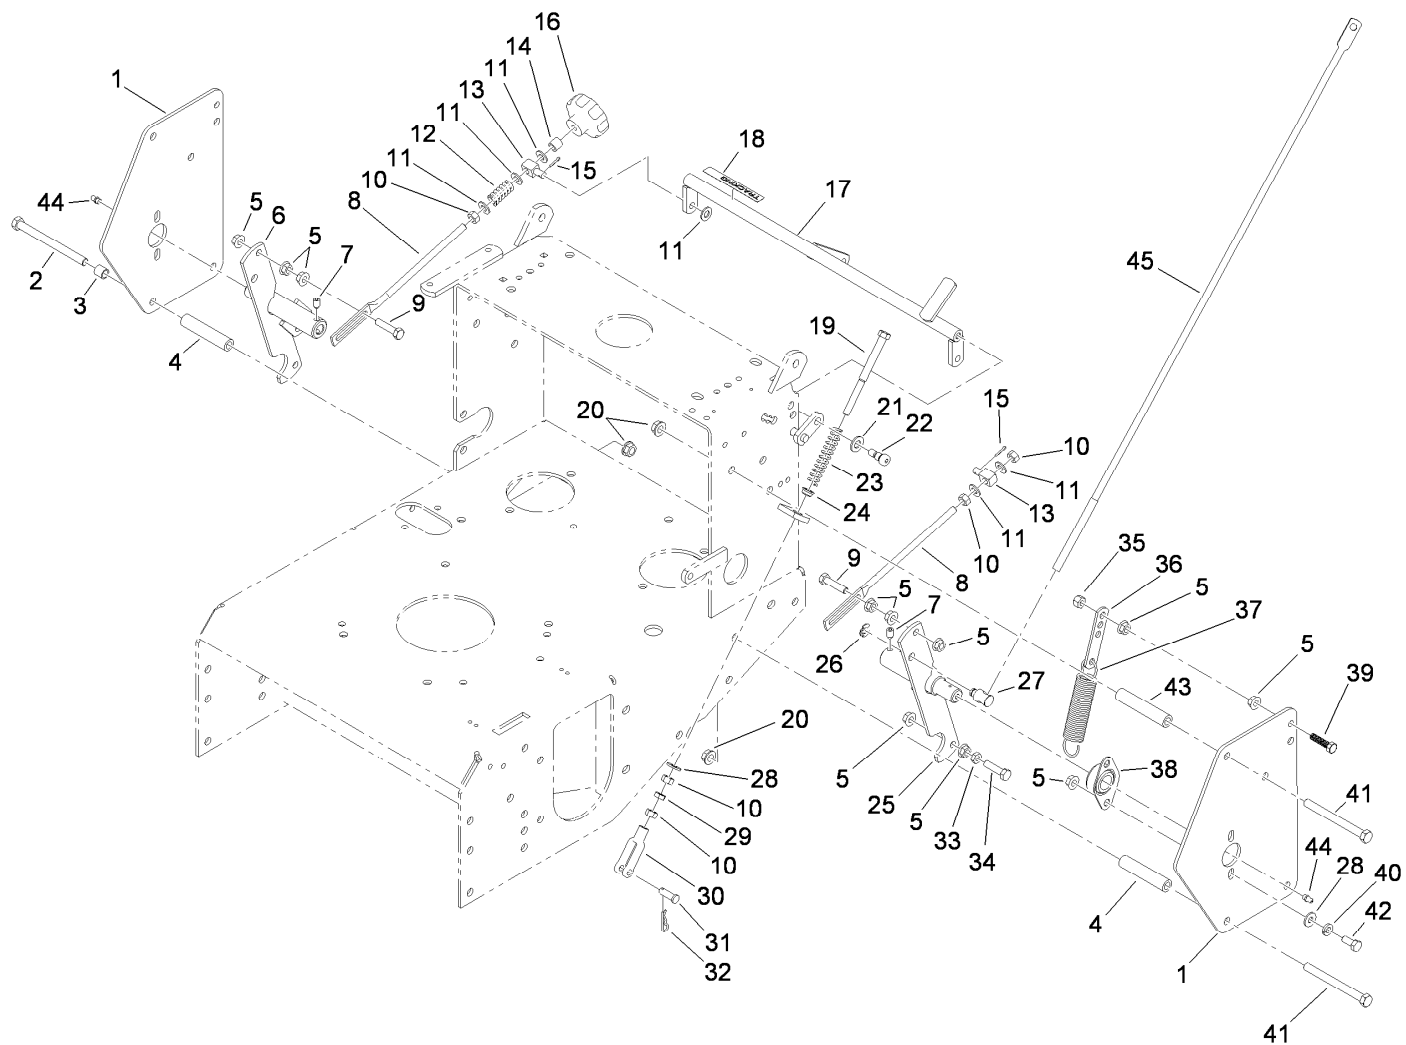

Lower Control Assembly (continued)

Ref.	Part Number	Qty.	Description
43	1-323195-01	4	Spacer-Shield


Ref.	Part Number	Qty.	Description
44	302-19	2	Fitting-Grease
45	1-413219	2	Rod-Lever, Drive

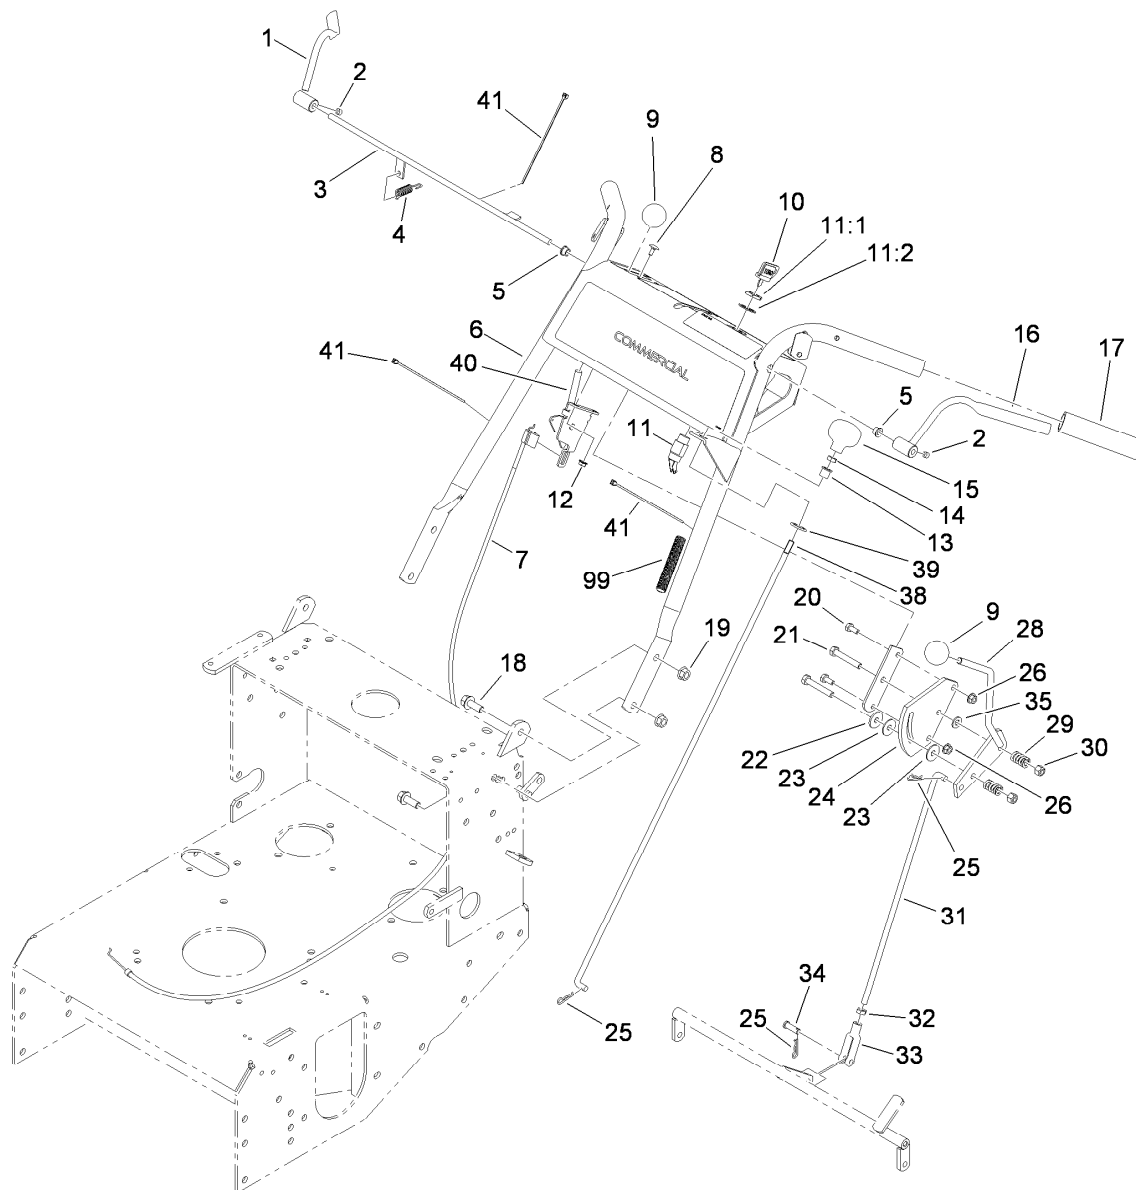

Upper Control Assembly


Ref.	Part Number	Qty.	Description
1	106-5486	1	RH Operator Presence Control Lever ASM
2	1-803322	2	Screw-Set
3	106-2717-03	1	Rod-Control, Operator Presence
4	1-303363	1	Spring-Extension
5	1-303365	2	Bushing-Nylon
6	119-6538	1	Handle ASM
7	119-1823	1	Cable-Control, Throttle
8	1-807513	2	Bolt-CARR
9	1-603175	2	Knob-Ball
10	63-8360	1	Key-Ignition
11	29-5560	1	Switch-On / Off
11:1	218-461	1	Nut-HH
11:2	3254-5	1	Washer-Tooth, Internal
12	32128-17	2	Nut-Lock, Flange
13	1-323143	1	Bearing-Nylon
14	3218-2	1	Nut-Jam
15	1-323134	1	Knob-Push / Pull
16	106-5485	1	LH Operator Presence Control Lever ASM

Ref.	Part Number	Qty.	Description
17	104-9838	2	Grip-Foam
18	3234-11	4	Screw-HHF
19	32128-21	4	Nut-HF
20	321-3	2	Screw-HH
21	322-10	2	Screw-HH
22	1-603716	1	Washer-Friction
23	1-323244	2	Washer-Friction
24	1-603730	1	Plate-Lever, Shifter
25	1-806003	3	Pin-Cotter, Hair
26	32128-33	2	Nut-HF
28	106-2748	1	Lever-Shift
29	1-323245	2	Spring-Compression
30	3296-29	2	Nut-Lock, NI
31	1-323522	1	Rod-Control, Speed
32	3220-2	1	Nut-Jam
33	1-303105	1	Yoke-Adjustable
34	1-808280	1	Pin-Clevis
35	3256-23	1	Washer-Flat
38	1-323181	1	Linkage-Blade
39	1-323142	1	Nut-Push
40	110-5547	1	Control Lever ASM

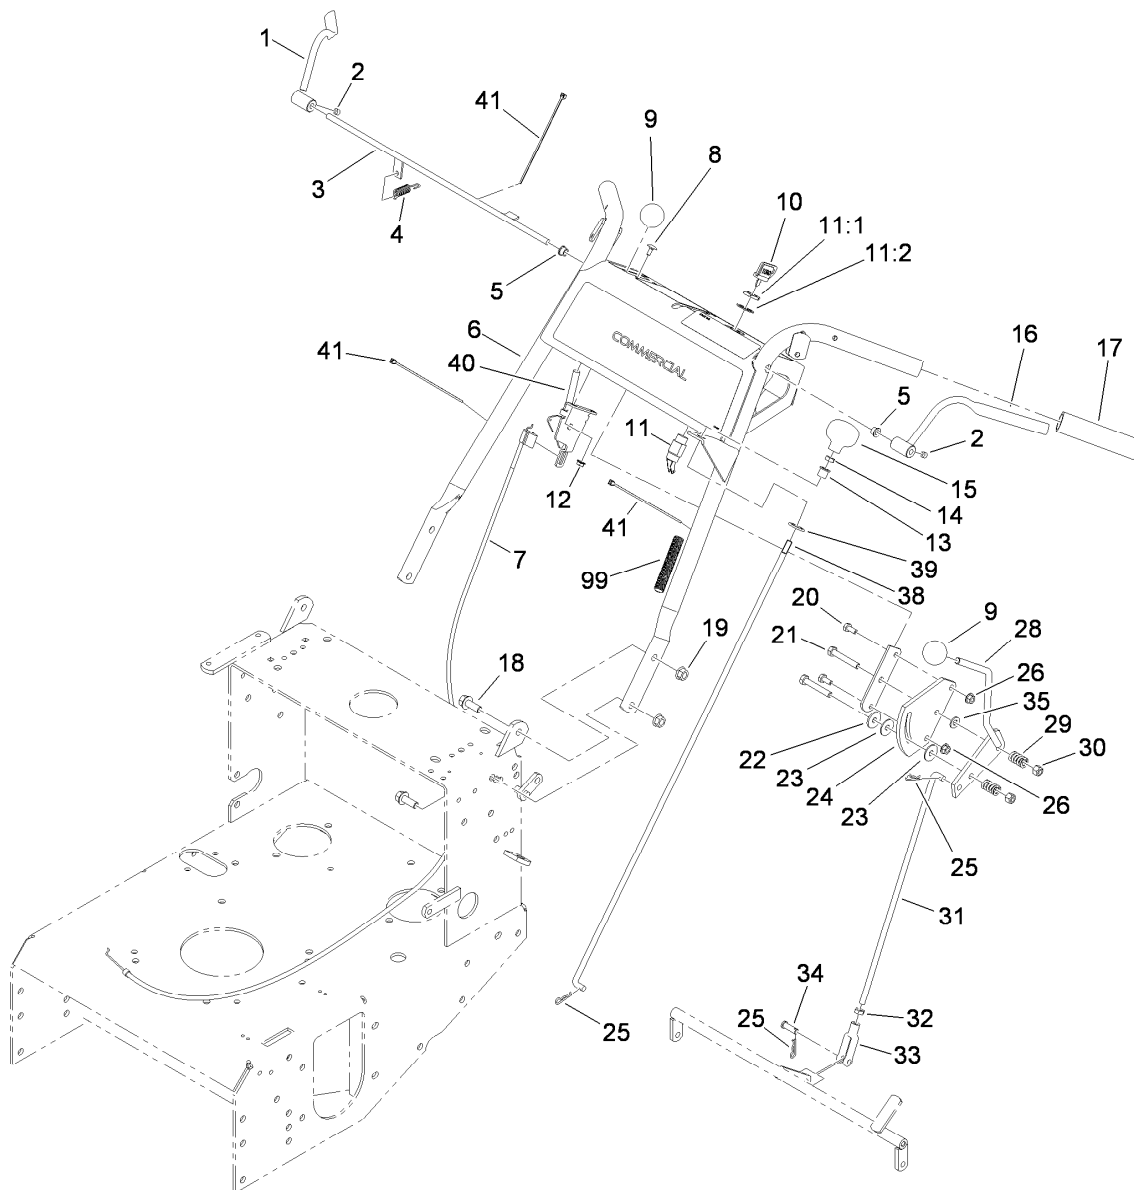


Upper Control Assembly (continued)

Ref.	Part Number	Qty.	Description
41	1-303287	3	Tie-Plastic
99	116-2611	1	Harness-Wiring

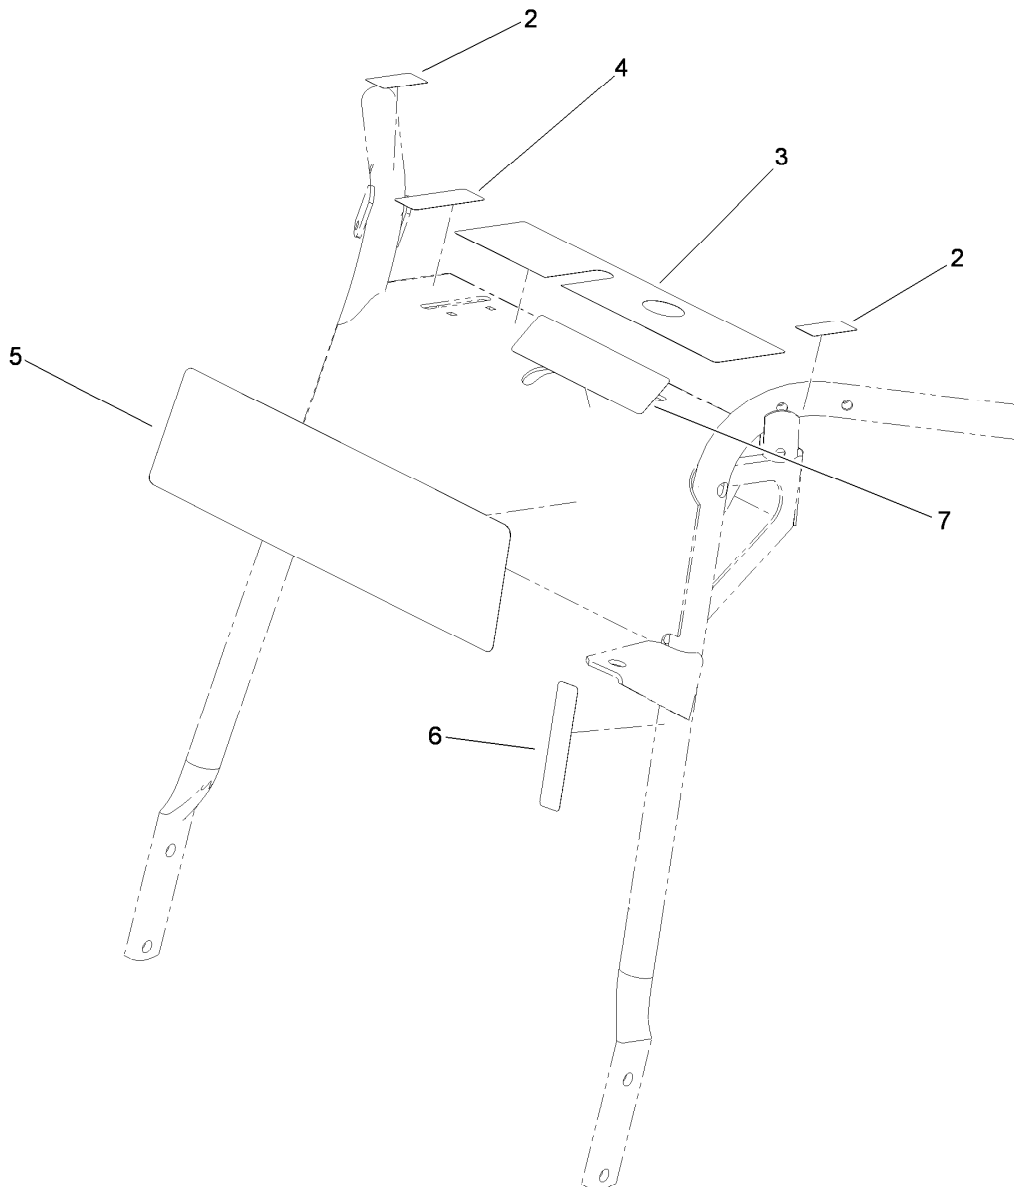

Handle Assembly No. 119-6538


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	105-4110	2	Decal-Lock, Neutral
3	106-2738	1	Decal-Warning
4	106-2733	1	Decal-Throttle
5	110-6917	1	Decal
6	95-5537	1	Decal-Engage, Deck
7	106-2743	1	Decal-Caution, Brake

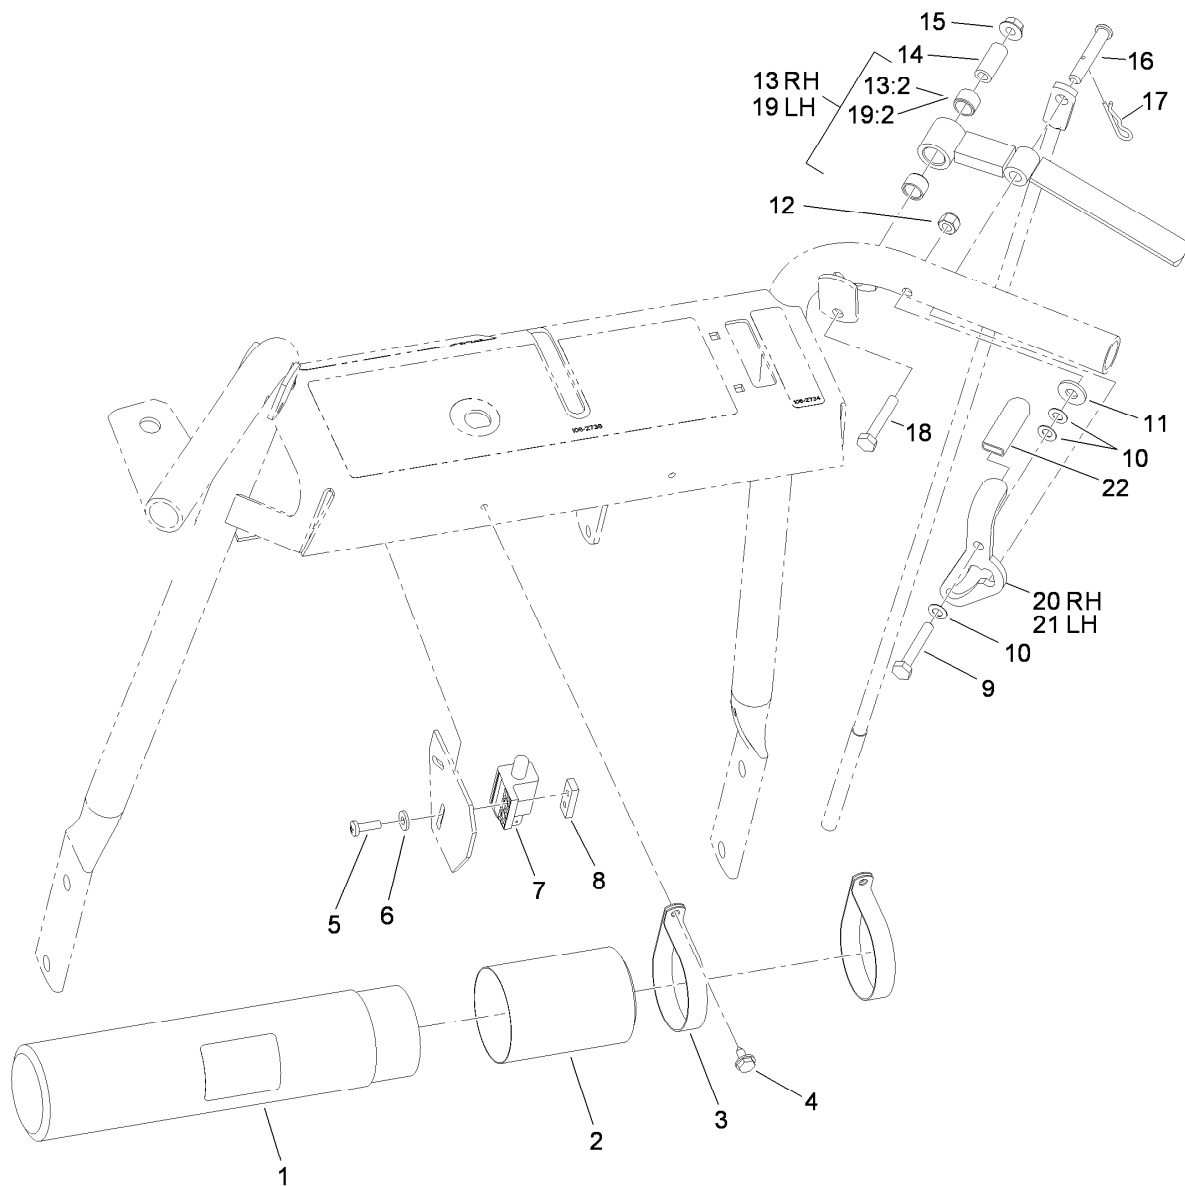

Drive Lever Assembly

Ref.	Part Number	Qty.	Description
1	104-7050	1	Tube-Manual
2	104-7048	1	Cap-Housing
3	2412-120	2	R-Clamp
4	32104-76	2	Screw
5	3290-500	2	Screw-PPH
6	3256-14	2	Washer-Flat
7	1-513051	1	Switch-Open, Normally
8	1-633181	1	Plate-Tapped
9	321-10	2	Screw-HH
10	1-303435	6	Washer-Spring
11	3256-2	2	Washer-Flat
12	3296-42	2	Nut-Lock, NI


Ref.	Part Number	Qty.	Description
13	103-0219	1	RH Drive Lever ASM
13:2	1-413152	2	Bushing-Sleeve
14	1-603749	2	Bushing-Lever, Drive
15	32128-33	2	Nut-HF
16	1-613055	2	Pin-Clevis
17	1-806003	2	Pin-Cotter, Hair
18	321-9	2	Screw-HH
19	103-0218	1	LH Drive Lever ASM
19:2	1-413152	2	Bushing-Sleeve
20	1-612168	1	RH Grip / Latch ASM
21	1-612167	1	LH Grip / Latch ASM
22	1-303019	2	Grip-Latch

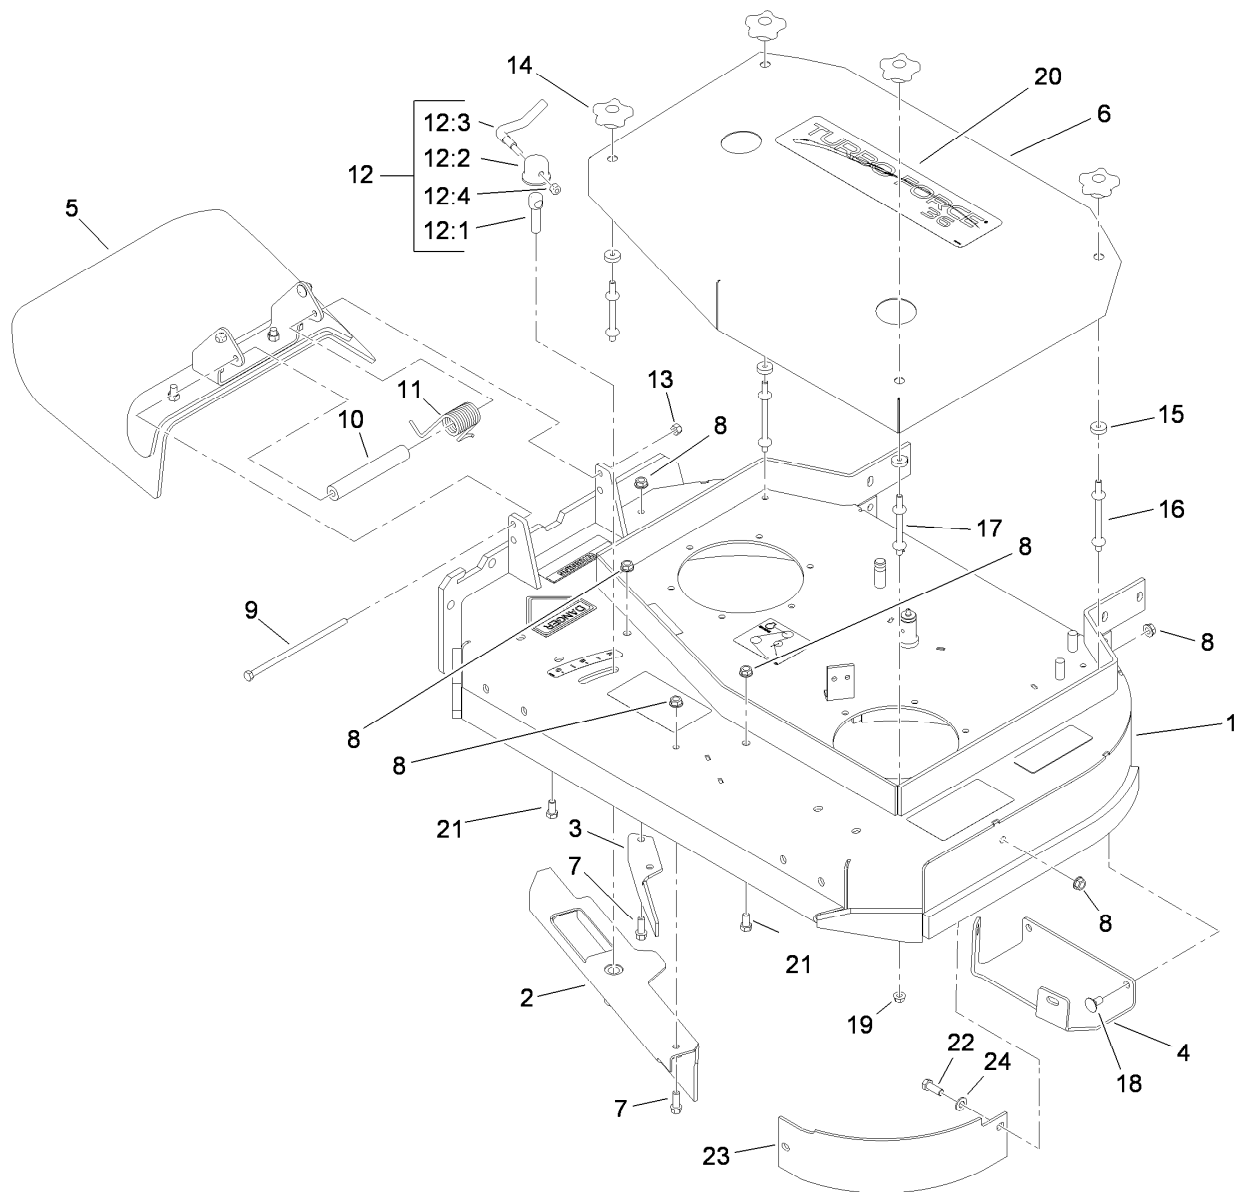

Deck Assembly

Ref.	Part Number	Qty.	Description
1	110-4907	1	Deck ASM
2	110-2031-03	1	Baffle-Adjustable
3	110-0754-01	1	Baffle-Discharge
4	110-2037-01	1	Plate-Skid
5	119-6530	1	Deflector ASM
6	110-2036-01	1	Cover-Deck
7	92-1624	3	Screw-HWH
8	3290-357	10	Nut-HHF, Whiz
9	322-50	1	Screw-HH
10	105-4622	1	Spacer
11	104-8554	1	Spring-Torsion
12	107-1664	1	Lever ASM
12:1	106-3239	1	Screw-Lock
12:2	107-1644	1	Cap-Lock


Ref.	Part Number	Qty.	Description
12:3	106-3241	1	Lever-Lock
12:4	3296-29	1	Nut-Lock, NI
13	3296-29	1	Nut-Lock, NI
14	106-4161	4	Knob-Handle
15	1-323417	4	Washer
16	1-303536	2	Stud-Shield, Belt (Long)
17	1-303537	2	Stud-Shield, Belt (Short)
18	3231-1	4	Screw-CARR
19	32128-20	4	Nut-HF
20	112-9710	1	Decal
21	323-4	2	Screw-HH
22	323-6	1	Screw-HH
23	110-6903-03	1	Baffle-Front, LH
24	3256-24	1	Washer-Flat

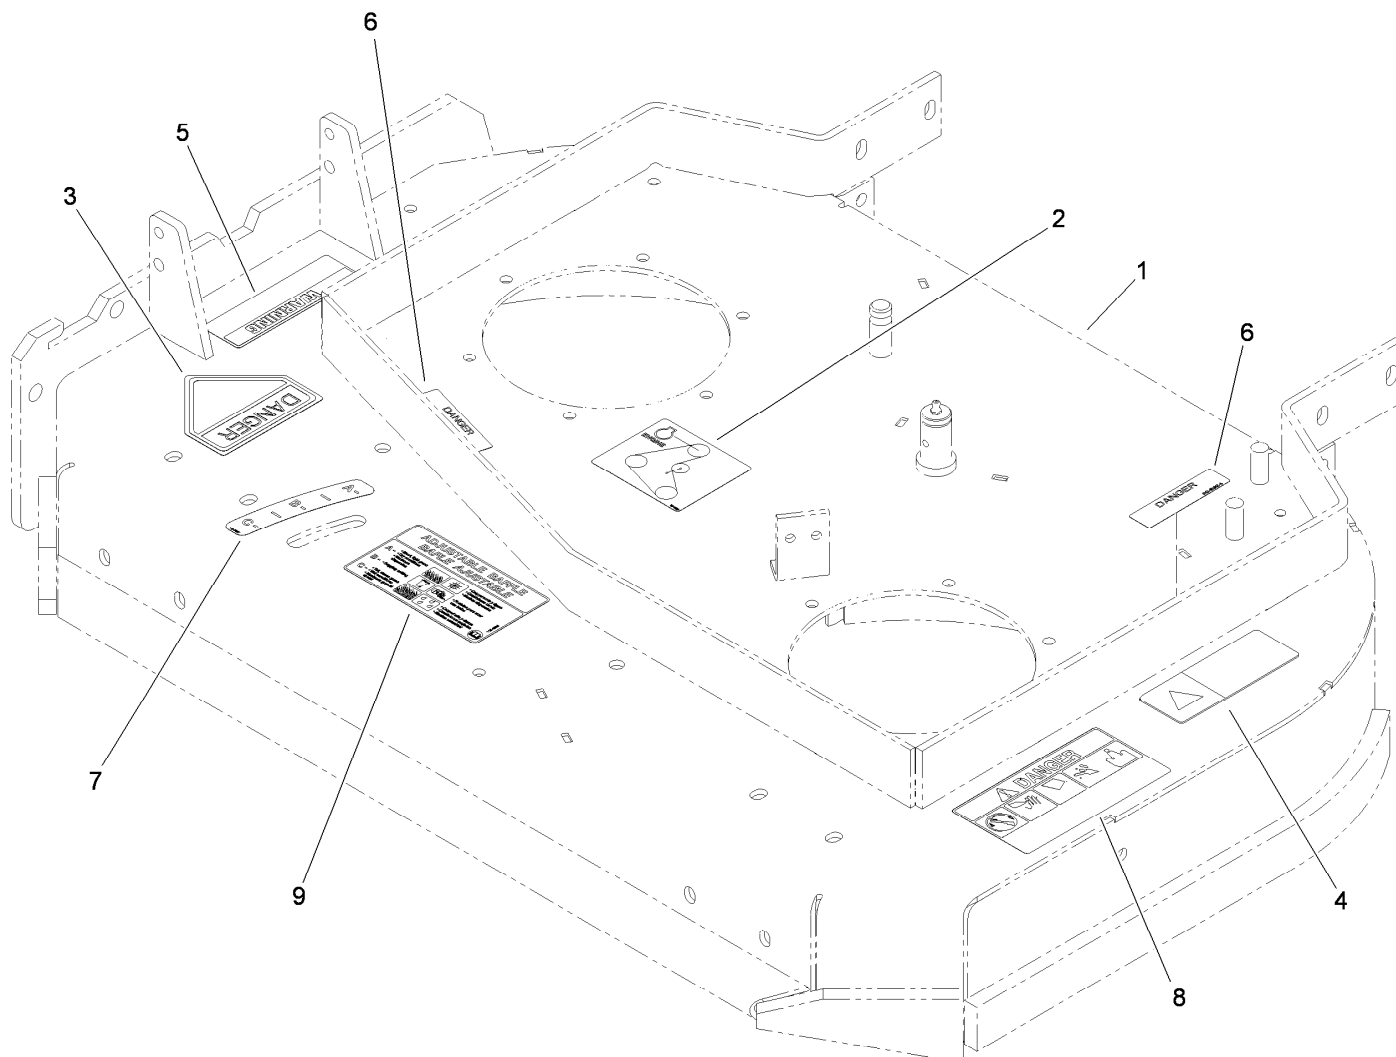

Deck Assembly No. 110-4907


Ref.	Part Number	Qty.	Description
1		1	36 Inch Deck ASM ●
2	98-3296	1	Decal-Routing, Belt
3	43-8480	1	Decal-Danger
4	98-5130	1	Decal-Torque, Bolt
5	104-8569	1	Decal-Warning
6	98-5954	2	Decal-Cover, Missing
7	110-2067	1	Decal-Setting, Baffle
8	66-1340	1	Decal-Danger, Thrown Object
9	110-2068	1	Decal-Adjustment, Baffle

● Not serviced separately

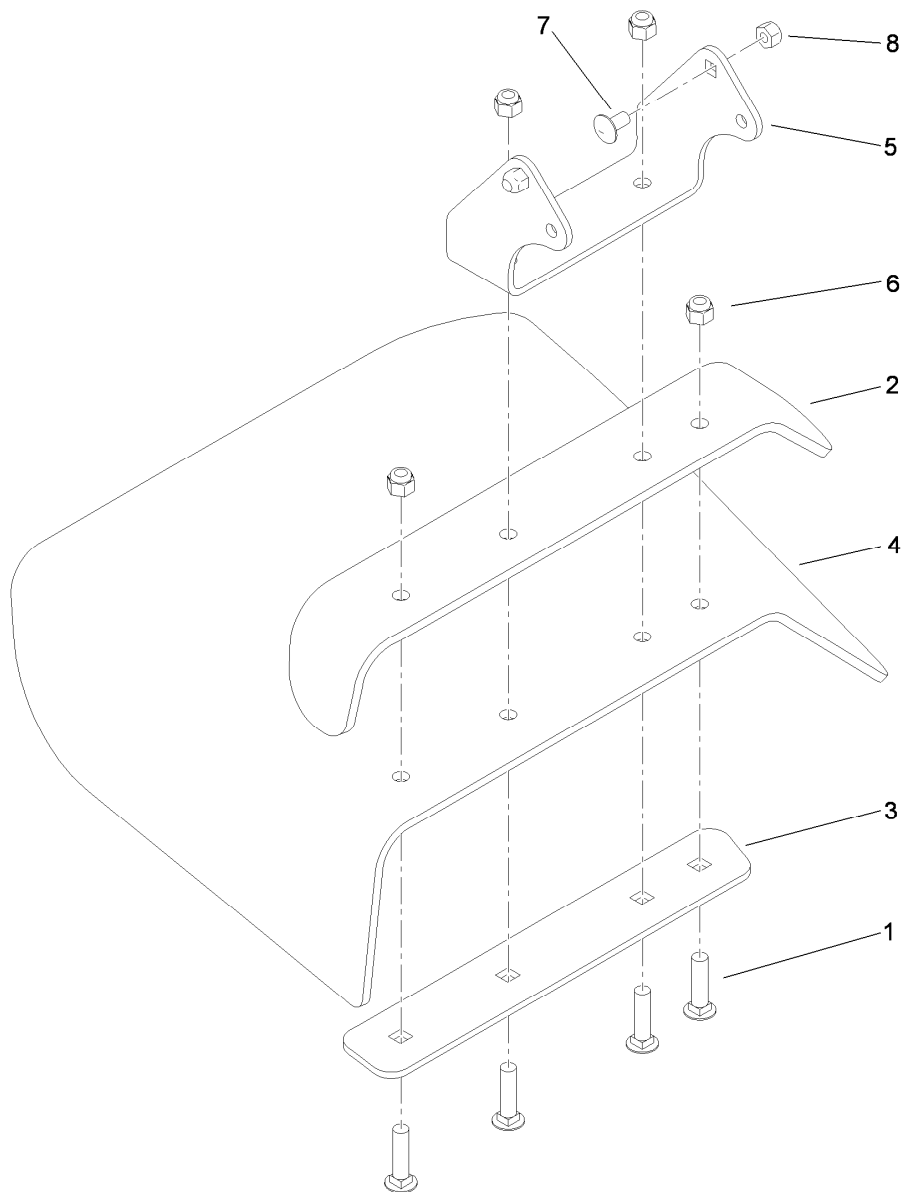

Deflector Assembly No. 119-6530


Ref.	Part Number	Qty.	Description
1	3231-4	4	Screw-CARR
2	110-0792-01	1	Deflector
3	110-0793-03	1	Strap-Discharge
4	110-0791	1	Deflector-Rubber
5	119-6532-01	1	Bracket-Mounting, Deflector
6	3296-39	4	Nut-Lock, NI
7	3230-18	2	Screw-CARR
8	3296-29	2	Nut-Lock, NI

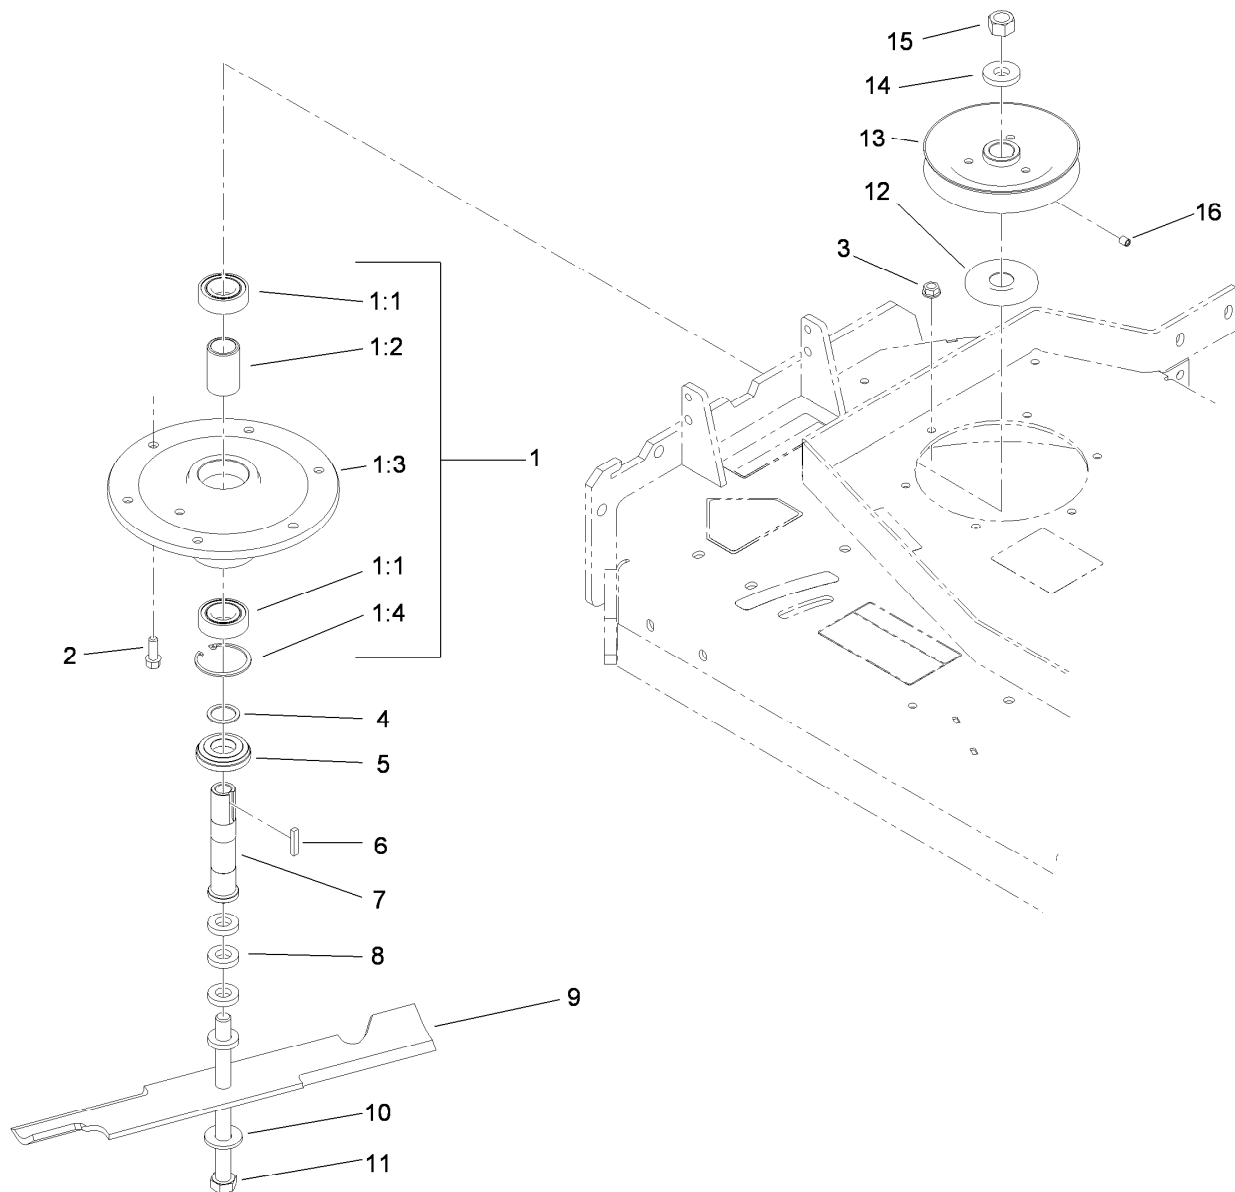

Sheave, Spindle and Blade Assembly

Ref.	Part Number	Qty.	Description
1	108-6697	2	Spindle Housing ASM
1:1	110-2118	2	Bearing
1:2	110-2116	1	Spacer-Bearing
1:3	108-6694	1	Housing-Spindle
1:4	32120-8	1	Ring-Snap
2	92-1624	12	Screw-HWH
3	3290-357	12	Nut-HHF, Whiz
4	110-4888	2	Washer-Spacer
5	103-2535	2	Spacer-Guard, Bottom
6	1-807267	2	Key


Ref.	Part Number	Qty.	Description
7	1-323529	2	Tube-Spindle, Short
8	1-323539	8	Spacer
9	105-7781-03	2	Blade-18 Inch (Hi Flow)
10	1-513208	2	Washer-Spring
11	1-800861	2	Screw-Cap, HH
12	103-1330	2	Guard-Bearing, Top
13	1-403183	2	Sheave
14	1-323339	2	Washer-Retainer, Sheave
15	3219-6	2	Nut-Hex
16	1-803310	2	Screw-Set

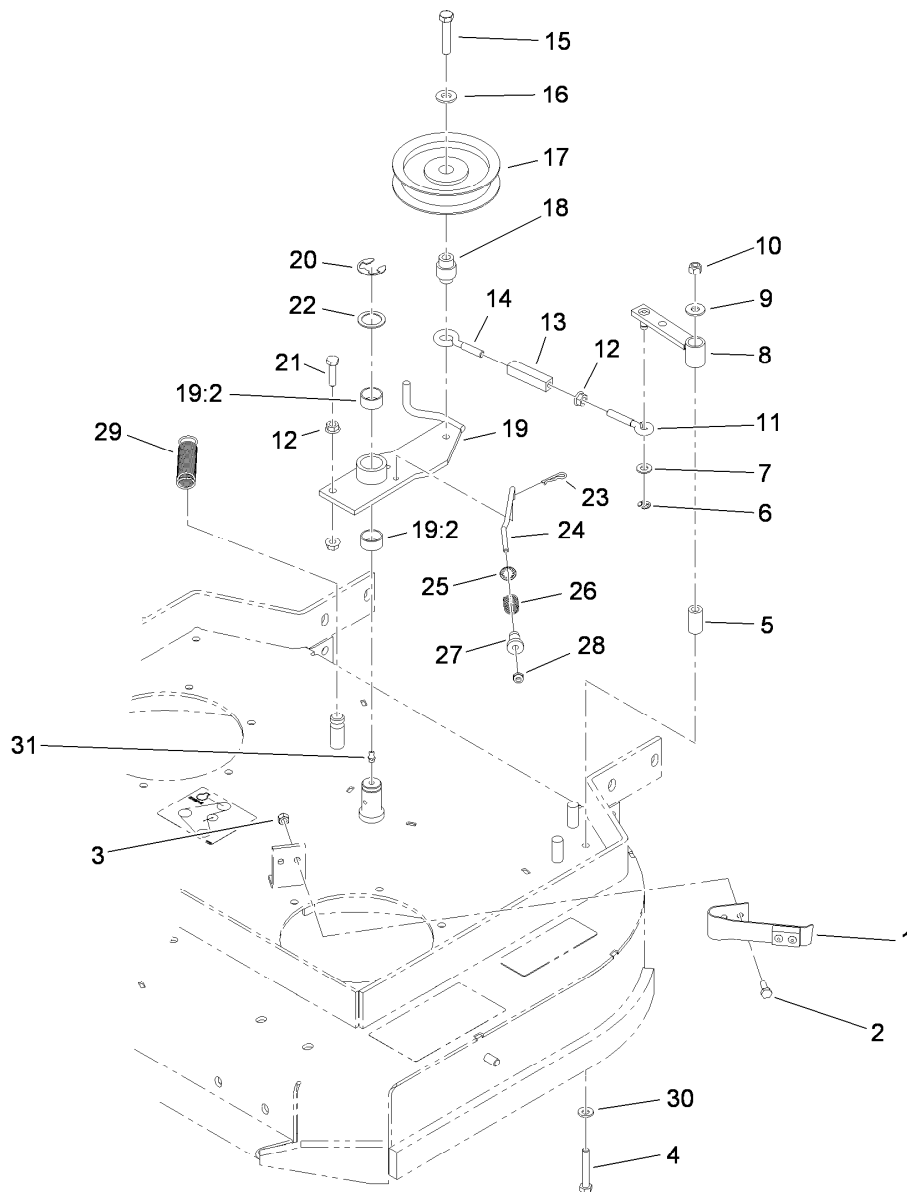

Idler Assembly

Ref.	Part Number	Qty.	Description
1	1-324372	1	Pad And Spring ASM
2	321-4	2	Screw-HH
3	3296-42	2	Nut-Lock, NI
4	322-10	1	Screw-HH
5	1-403179	1	Tube-Pivot
6	32120-35	1	Ring-Retaining, EXT
7	3256-23	1	Washer-Flat
8	1-322235	1	Arm-Assist
9	3256-3	1	Washer-Flat
10	3296-29	1	Nut-Lock, NI
11	1-303238	1	Eyebolt-Thread, RH
12	32128-20	3	Nut-HF
13	1-303236	1	Body-Turnbuckle
14	1-303348	1	Eyebolt-Thread, LH
15	702809	1	Screw-HH
16	98-5975	1	Washer-Belleville

Ref.	Part Number	Qty.	Description
17	1-603843	1	Pulley-Idler
18	1-303434	1	Bushing-Engagement
19	103-3600	1	Idler Arm ASM
19:2	1-323729	2	Sleeve-Bearing
20	32151-103	1	Ring-Retaining, EXT
21	322-6	1	Screw-HH
22	1-303352	1	Washer-Spindle
23	1-806003	1	Pin-Cotter, Hair
24	1-323715	1	Rod-Brake
25	1-323748	1	Ring-Push On
26	1-323747	1	Spring-Compression
27	1-323746	1	Spacer-Flanged
28	3296-56	1	Nut-Lock, NI
29	1-323071	1	Spring-Extension
30	1-303334	1	Washer-Spring
31	302-19	2	Fitting-Grease

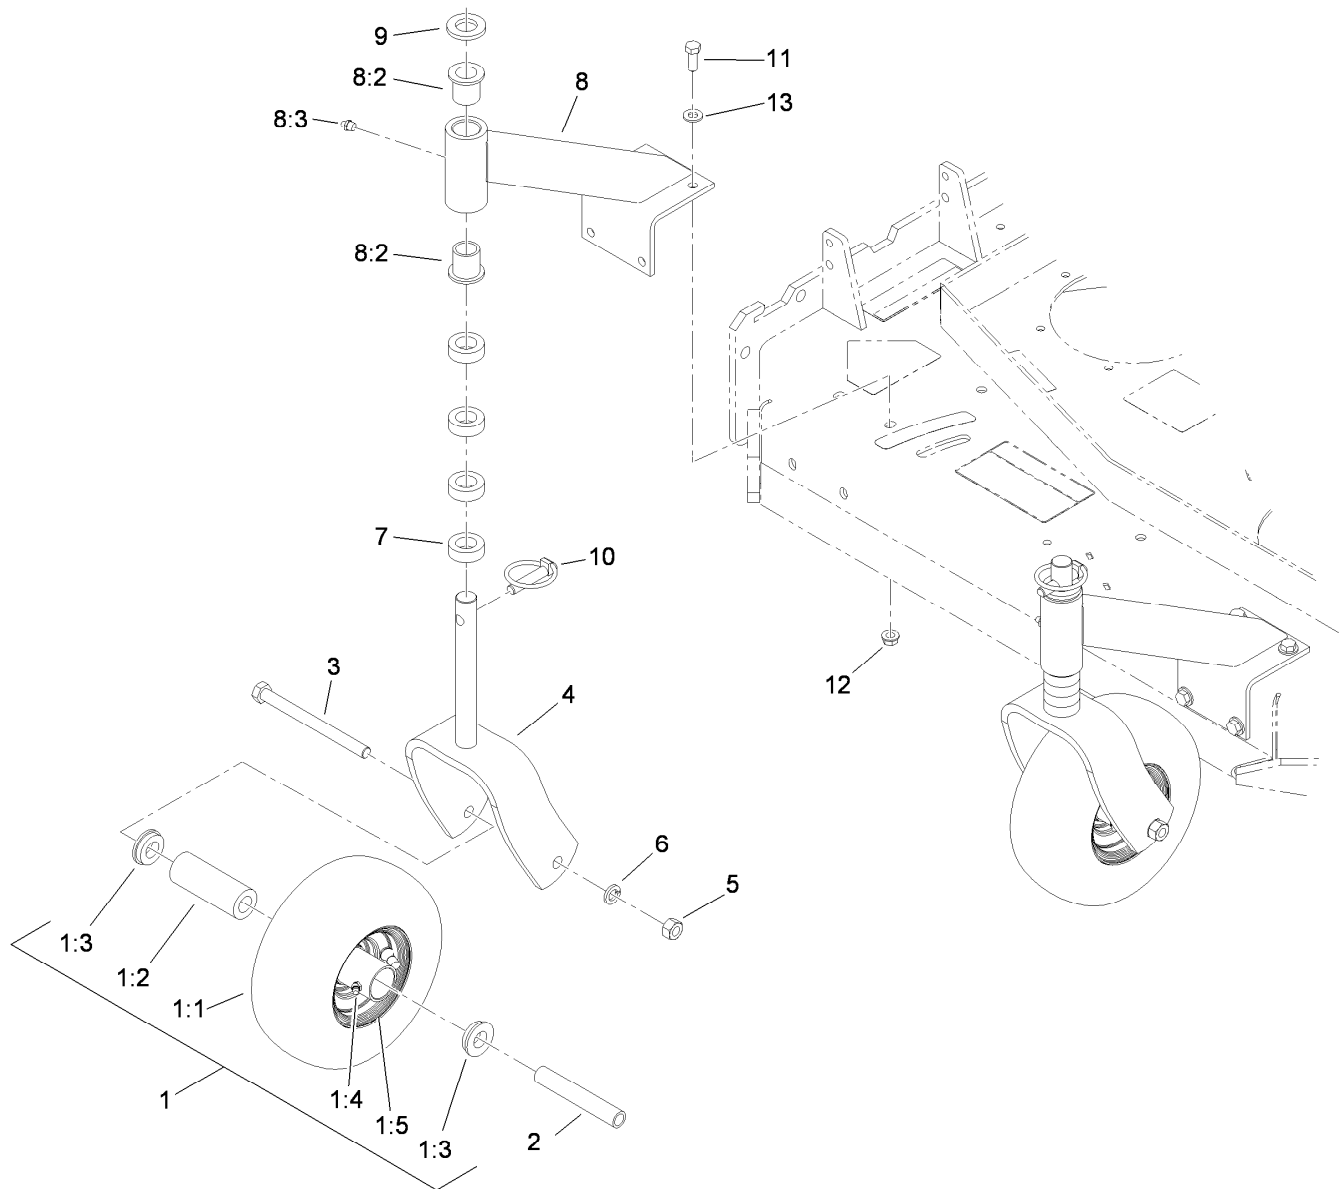

Caster Assembly

Ref.	Part Number	Qty.	Description
1	110-5023	2	Wheel And Tire ASM
1:1		1	Tire ●
1:2	1-513809	1	Bearing
1:3	1-513810	2	Bushing
1:4	302-61	1	Zerk
1:5		1	Wheel ●
2	1-513547	2	Spacer
3	325-20	2	Screw-HH
4	1-322145-01	2	Fork
5	3217-9	2	Nut-HH

Ref.	Part Number	Qty.	Description
6	3253-7	2	Washer-Lock
7	1-303314	8	Spacer-Caster
8	110-2130	2	Support ASM
8:2	1-303514	2	Bearing-Flanged
8:3	302-52	1	Fitting-Grease
9	1-513338	2	Washer-Flat
10	1-809020	2	Pin
11	323-6	8	Screw-HH
12	3290-357	8	Nut-HHF, Whiz
13	3256-24	8	Washer-Flat

● Not serviced separately

Attachments and Accessories

For 30934 Commercial Walk-Behind Mower, Fixed Deck, Pistol Grip, Hydro Drive with 36in TURBO FORCE Cutting Unit

Product Name	Model/Part
Blade-Recycler, 18 inch	105-7779-03
Blade-Med Flow, 18 inch.....	105-7794-03
Blade-Low Flow, 18 inch	105-7795-03
Blade-Atomic, 18 inch.....	105-7796-03
Blade-Hi Flow, 18 inch (6 Pack)	108-1117
Blade-Atomic, 18 inch (6 Pack).....	108-1118
Blade-Lo Flow, 18 inch (6 Pack)	110-0406
Blade-Recycler, 18 inch (6 Pack)	110-0408
Blade-Med Flow, 18 inch (6 Pack)	110-0409
36 inch Bagger Enhancement Kit.....	110-2026
36 inch Recycler Kit	110-2080
Weight Kit	110-2085
Operator-Controlled Discharge Chute Kit	115-4190
Soft Bag (3 Bushel).....	30104
Sulky.....	30109



Count on it.