



HAYTER
MAKERS OF THE FINEST MOWERS

Parts Catalogue

21in Heavy-Duty Walk Behind Rotary Mower

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required
ASM: assembly
BBC: blade brake clutch
CARR: carriage
CCW: counter clock wise
CW: clockwise
DEG: degrees
ECM: electronic control module
EXT: external
FH: flat head
GA: gauge
HD: heavy-duty
HF: hex flange
HH: hex head
HHF: hex head flange
HHFTF: hex head flange thread forming
HJ: hex jam
HLH: hex lag head
HOC: height-of-cut

HSBH: hex socket button head
HSFH: hex socket flat head
HSH: hex socket head
HWH: hex washer head
HWHTF: hex washer head thread forming
HYD: hydraulic
LH: left hand
NI: nylon insert
NPTF: national pipe thread fine
PFH: phillips flat head
PPH: phillips pan head
PPHTF: phillips pan head thread forming
PRH: phillips round head
PTH: phillips truss head
PTO: power-take-off
RH: right hand
ROPS: roll-over protection system
RRB: rear roller brush

SFH: slotted fillister head
SHH: slotted hex head
SHWH: slotted hex washer head
SPH: slotted pan head
SQH: square head
SRH: slotted round head
STD: standard
TAP: self tapping
TTH: torx truss head

Contents

Housing and Front Wheel Assembly 4

Wheel and Tire Assembly No. 115-3849 5

Gear Case Assembly No. 110-2100 6

Blade Brake Clutch Assembly 7


Engine and Fuel Tank Assembly 8

Handle Assembly 9

Height-of-Cut and Rear Wheel Assembly 10

Rear Wheel Assembly No. 115-3813 11

Grass Bag Assembly 12

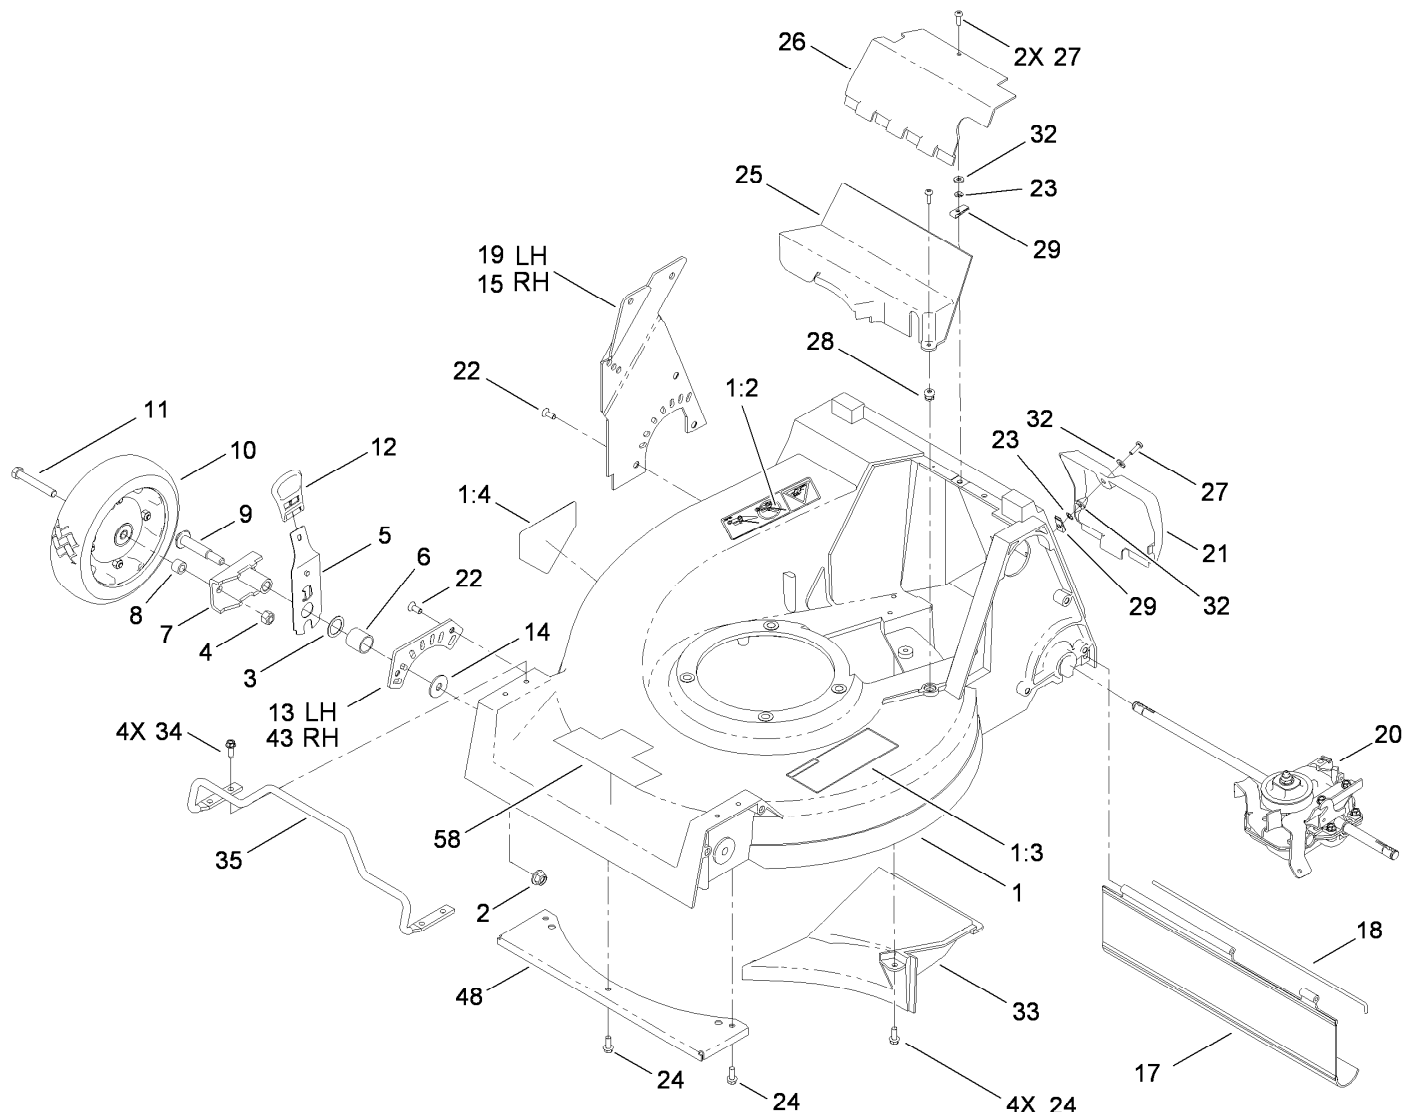


Housing and Front Wheel Assembly

Ref.	Part Number	Qty.	Description
1	115-3810	1	Deck ASM
1:2	110-4977	1	Decal-Danger
1:3	110-4978	1	Decal-Danger
1:4	112-8760	1	Decal-Danger
2	54-9190	2	Nut-Lock
3	115-0972	2	Washer
4	32152-2	2	Nut-Lock, Cone
5	119-2323	2	Front Spring Arm ASM
6	75-5310	2	Spacer-Bearing
7	61-8300	2	Arm-Pivot, Front
8	52-2480	2	Spacer-Wheel
9	114-3468	2	Screw-Shoulder
10	115-3849	2	Wheel And Tire ASM
11	323-12	2	Screw-HH
12	110-0549	2	Knob-HOC
13	115-4495	1	Plate-Front HOC, LH ●
14	115-0956	2	Washer
15	115-4498-08	1	Plate-Rear HOC, RH
17	110-0509	1	Shield-Trailing

Ref.	Part Number	Qty.	Description
18	33-3202	1	Rod-Shield
19	115-4497-08	1	Plate-Rear HOC, LH ●
20	110-2100	1	Gear Case ASM
21	107-4288	1	Door-Access, Rear
22	32144-17	10	Screw-HH
23	119-0350	2	Nut-Push
24	32144-85	7	Screw-HWH
25	107-4297	1	Cover-Belt, Lower
26	107-4298	1	Cover-Belt, Upper
27	32144-32	3	Screw
28	611380	1	Nut-Clip
29	3290-171	2	Nut-Type J
32	3256-14	3	Washer-Flat
33	115-0973	1	Baffle-Chute, Floor
34	49-2040	4	Screw-HWHTF
35	110-4876	1	Guard-Engine
43	115-4496	1	Plate-Front HOC, RH
48	115-4476-03	1	Shield-Front, Hi-Vac
58	410087	1	Decal


● Not illustrated

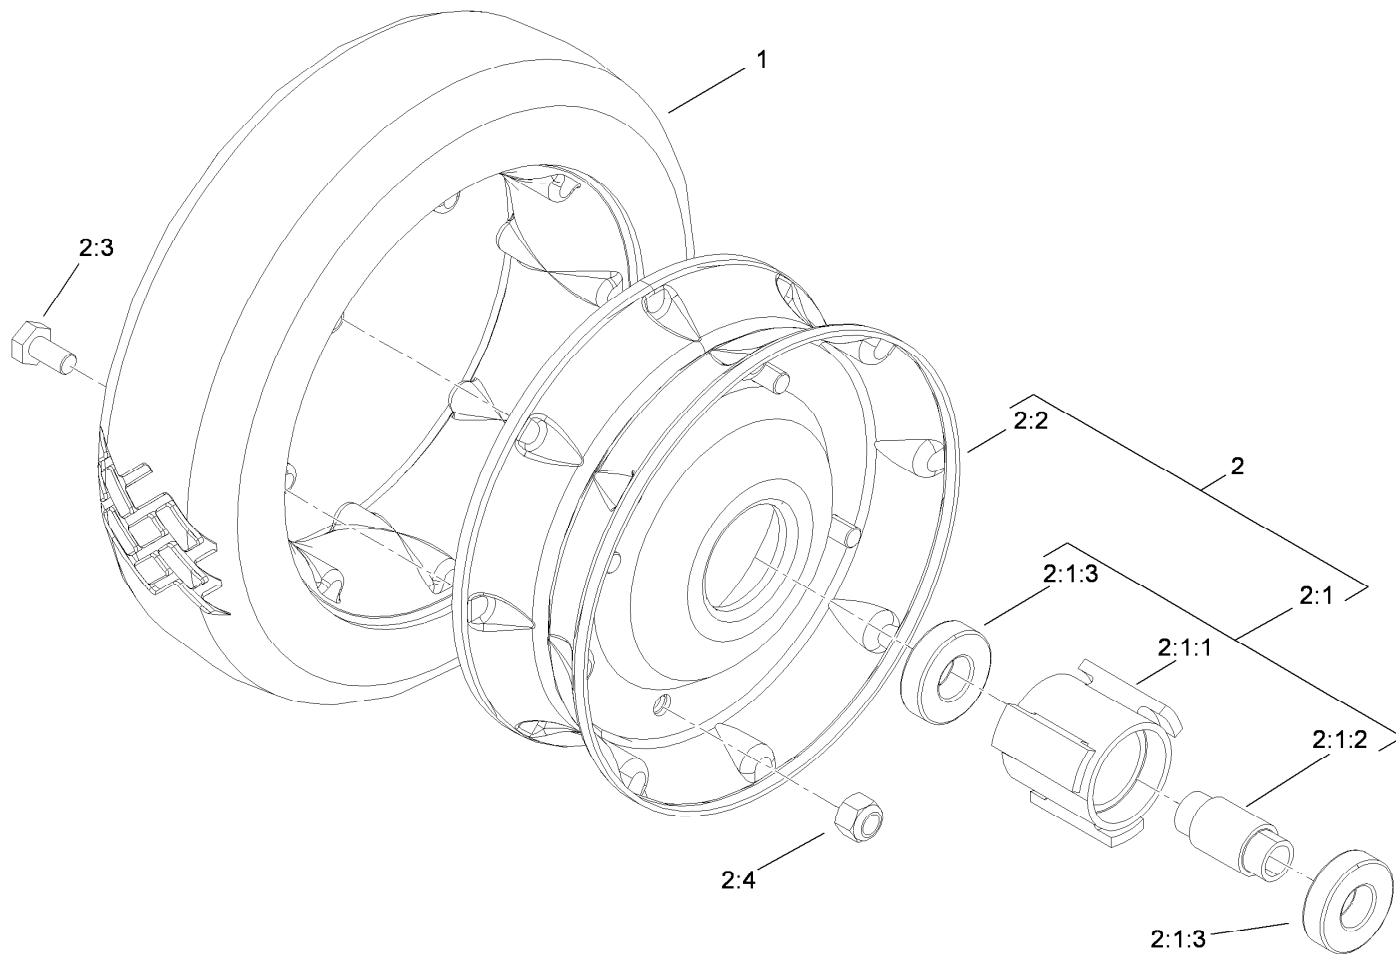

Wheel and Tire Assembly No. 115-3849


Ref.	Part Number	Qty.	Description
1	53-7740	1	Tire
2		1	Wheel ASM ●
2:1		1	Hub And Bearing ASM ●
2:1:1	52-2410	1	Hub-Bearing
2:1:2	52-2440	1	Spacer-Bearing
2:1:3	52-2450	2	Bearing-Wheel
2:2	115-3806	2	Plate-Wheel, Half
2:3	321-2	4	Screw-HH
2:4	3296-42	4	Nut-Lock, NI

● Not serviced separately

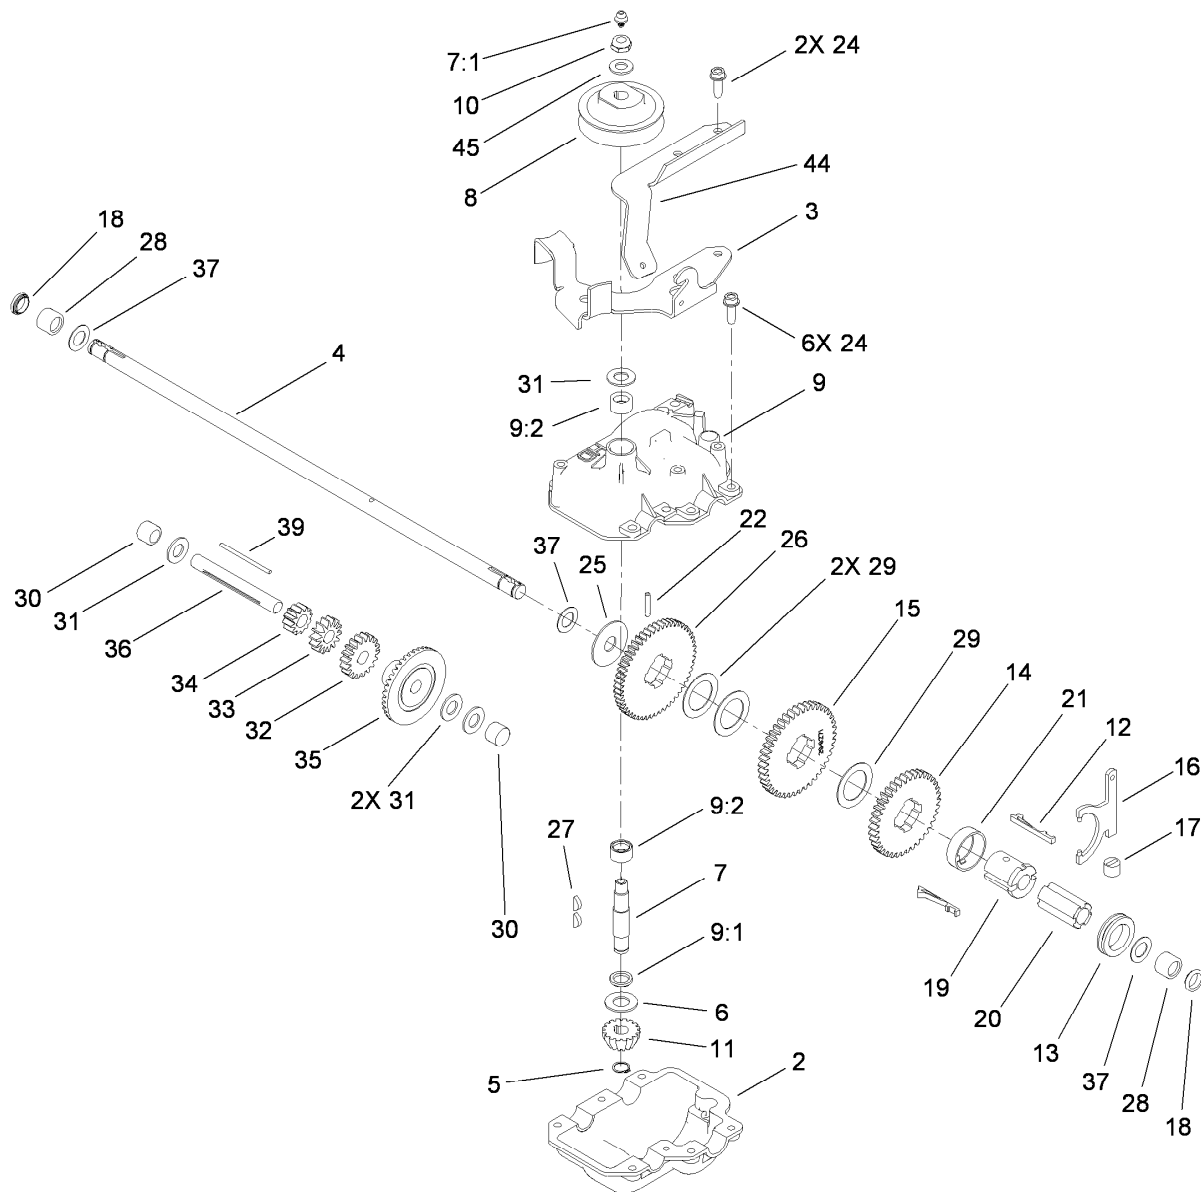

Gear Case Assembly No. 110-2100


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
2	74-1920	1	Case-Gear, Lower	20	39-6720	1	Sleeve
3	49-8461-03	1	Bracket-Guide, Belt	21	55-8020	1	Retainer-Key
4	74-1890	1	Shaft-Output	22	3285-19	1	Pin-Groove
5	32151-57	1	Ring-Retaining	24	49-2040	8	Screw-HWHTF
6	47-2910	1	Washer-Thrust	25	29-9690	1	Washer
7	13-5149	1	Input Shaft ASM	26	46-3560	1	Gear
7:1	302-63	1	Zerk	27	3257-1	2	Key-Woodruff
8	39-6740	1	Pulley	28	117-3500	2	Bearing-Caged Needle Roller
9	13-9739	1	Upper Gearcase ASM	29	36-4770	3	Washer
9:1	47-7260	1	Seal	30	252-103	2	Bearing-Closed
9:2	47-7270	2	Bearing	31	36-4792	4	Washer-Thrust
10	3296-5	1	Nut-Lock	32	39-6650	1	Gear-18T
11	39-6660	1	Pinion-Bevel	33	46-3550	1	Gear-14T
12	29-9330	2	Key-Shift	34	46-3540	1	Gear-12T
13	29-9340	1	Collar-Shift	35	74-1760	1	Gear-Bevel
14	42-4740	1	Gear-38T	36	53-7950	1	Shaft-Intermediate
15	29-9271	1	Gear-42T	37	36-4780	3	Washer-Plain
16	60-8870	1	Yoke-Shift	39	39-7842	1	Key
17	29-9570	1	Bushing-Yoke	44	108-2648-03	1	Arm-Actuating, Gear Case
18	47-6730	2	Seal-Oil	45	3256-45	1	Washer-Flat
19	55-8010	1	Sleeve-Gear				

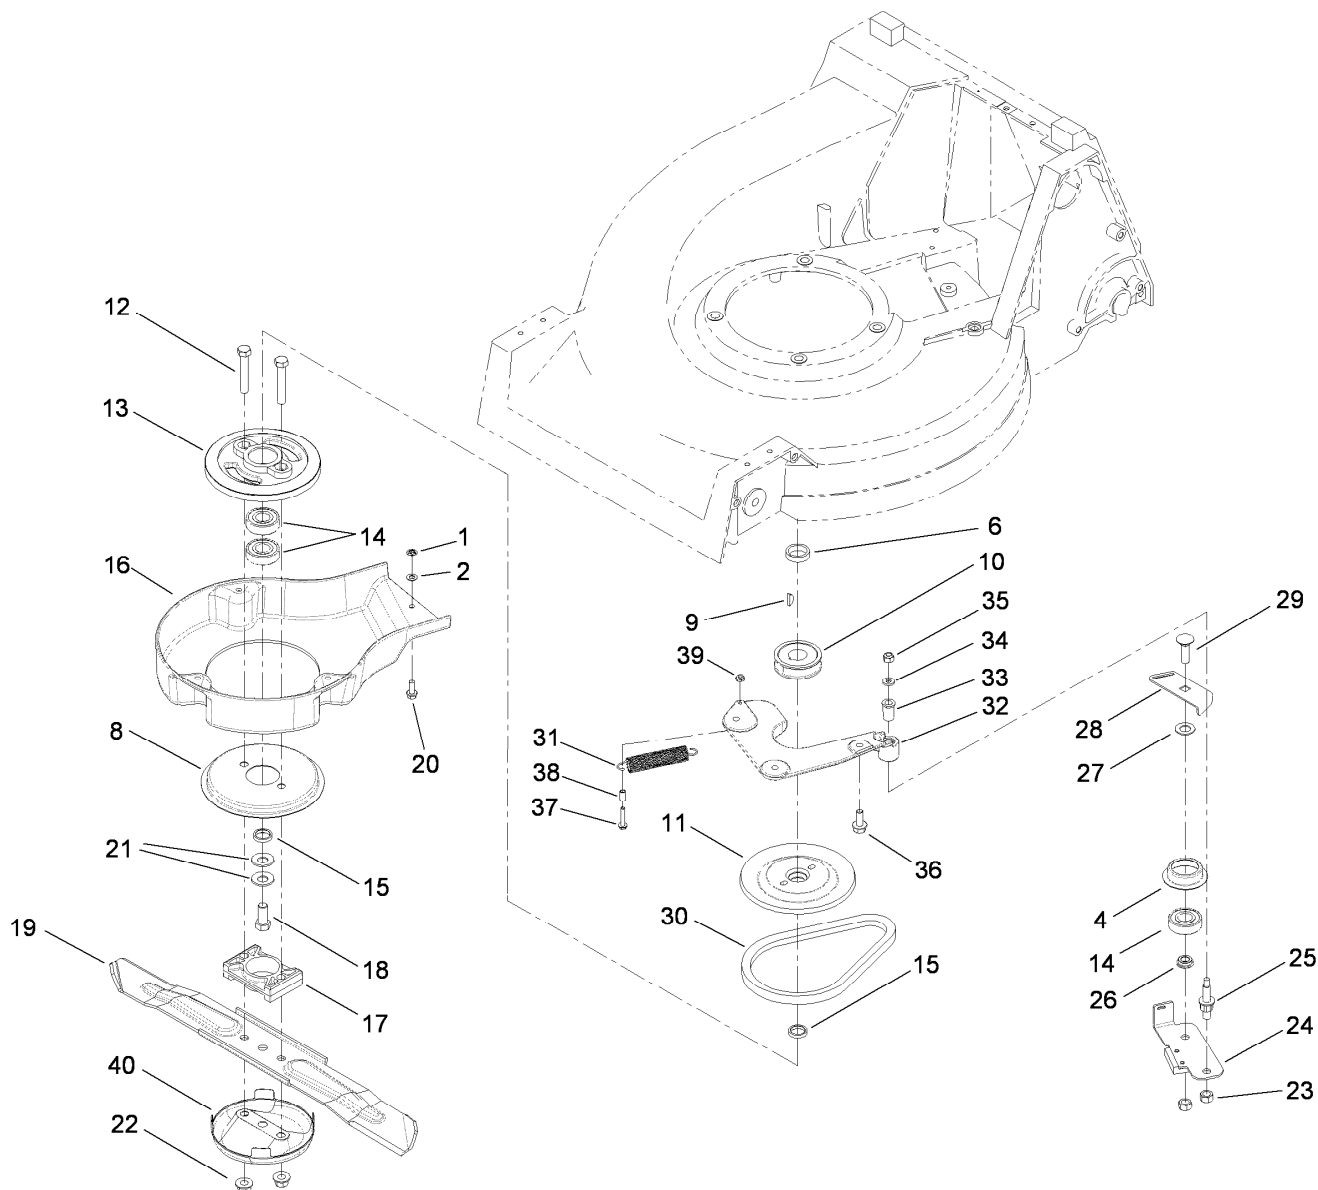

Blade Brake Clutch Assembly


Ref.	Part Number	Qty.	Description
1	106-8737	4	Nut-Retainer
2	3256-60	4	Washer-Flat
4	108-3790	1	Retainer-Belt
6	110-2142	1	Spacer-Pulley
8	108-3787	1	Disc
9	3257-17	1	Key-Woodruff
10	56-6180	1	Pulley-Driver
11	107-4277-03	1	Pulley-Driver, Upper
12	104-5936	2	Screw-HH
13	107-0754	1	Drum
14	100-1048	3	Bearing-Ball
15	107-4293	2	Spacer-Plate, BBC
16	110-0508	1	Shield-BBC
17	107-4275	1	Spacer-Blade
18	3212-4	1	Screw-HH
19	91-2256-03	1	Blade-21 Inch
20	32144-85	4	Screw-HWH
21	1-603610	2	Washer-Spring
22	54-9190	2	Nut-Lock

Ref.	Part Number	Qty.	Description
23	603773	2	Nut
24	107-7477	1	Brake Arm ASM
25	107-0759	1	Bolt-Shoulder
26	107-0758	1	Spacer-Bearing
27	605256	1	Washer
28	107-7471	1	Plate-Guide
29	3231-25	1	Screw-CARR
30	110-1790	1	Belt-BBC
31	115-4471	1	Spring-Extension
32	107-4280	1	Plate-Mounting, BBC
33	107-0797	1	Bushing
34	3256-16	1	Washer-Flat
35	3296-42	1	Nut-Lock, NI
36	33104-020	3	Screw-HHF
37	32144-9	1	Screw-TAP
38	107-4292	1	Spacer-BBC
39	3296-27	1	Nut-Lock, NI
40	80-2770	1	Cup-Scalp, Anti

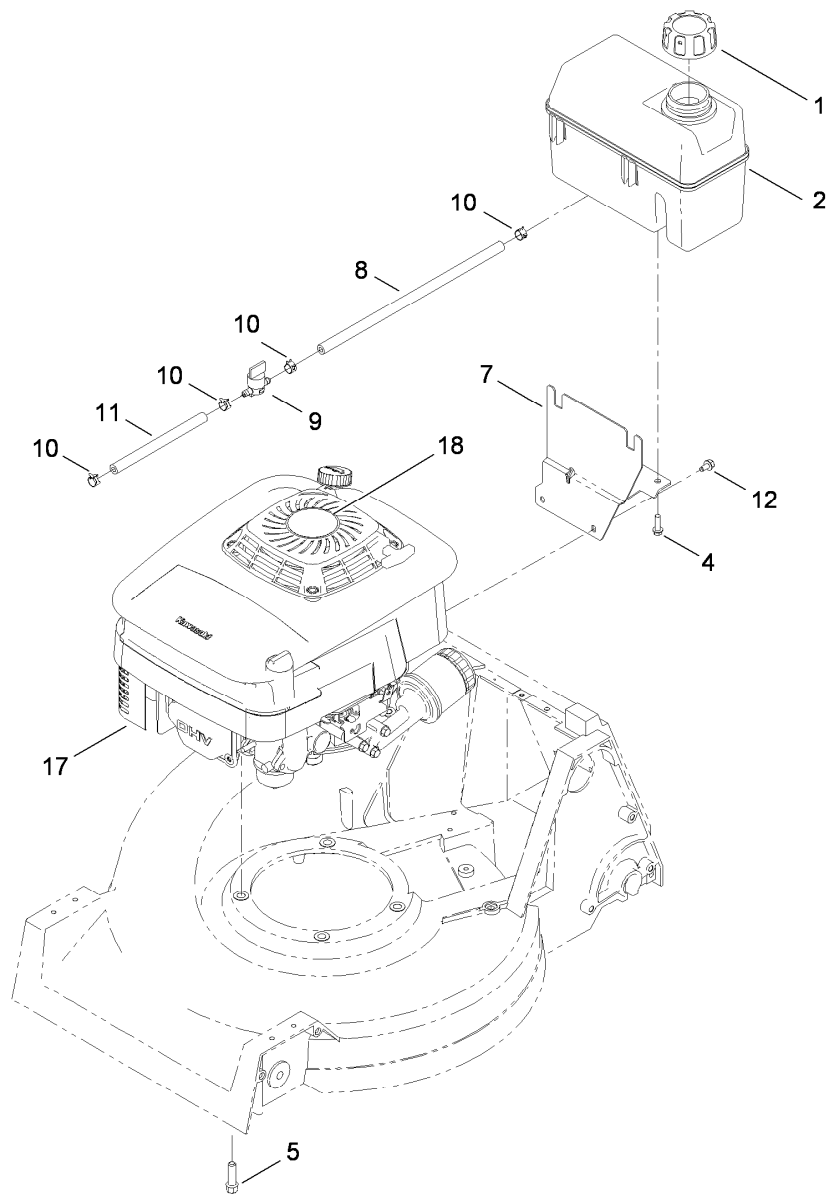

Engine and Fuel Tank Assembly


Ref.	Part Number	Qty.	Description
1	93-7198	1	Gas Cap ASM
2	117-3510	1	Fuel Tank ASM
4	46-8091	2	Screw-HWH
5	95-1727	4	Screw-Taptite
7	115-0954-03	1	Tank Mount ASM
8	114-3766	1	Hose-Fuel
9	1-603770	1	Valve-Fuel
10	2412-98	4	Clamp
11	107-0588	1	Hose-Fuel
12	104-2628	3	Screw-HWH
17	106-0845	1	Engine ASM
18	111-3205	1	Decal

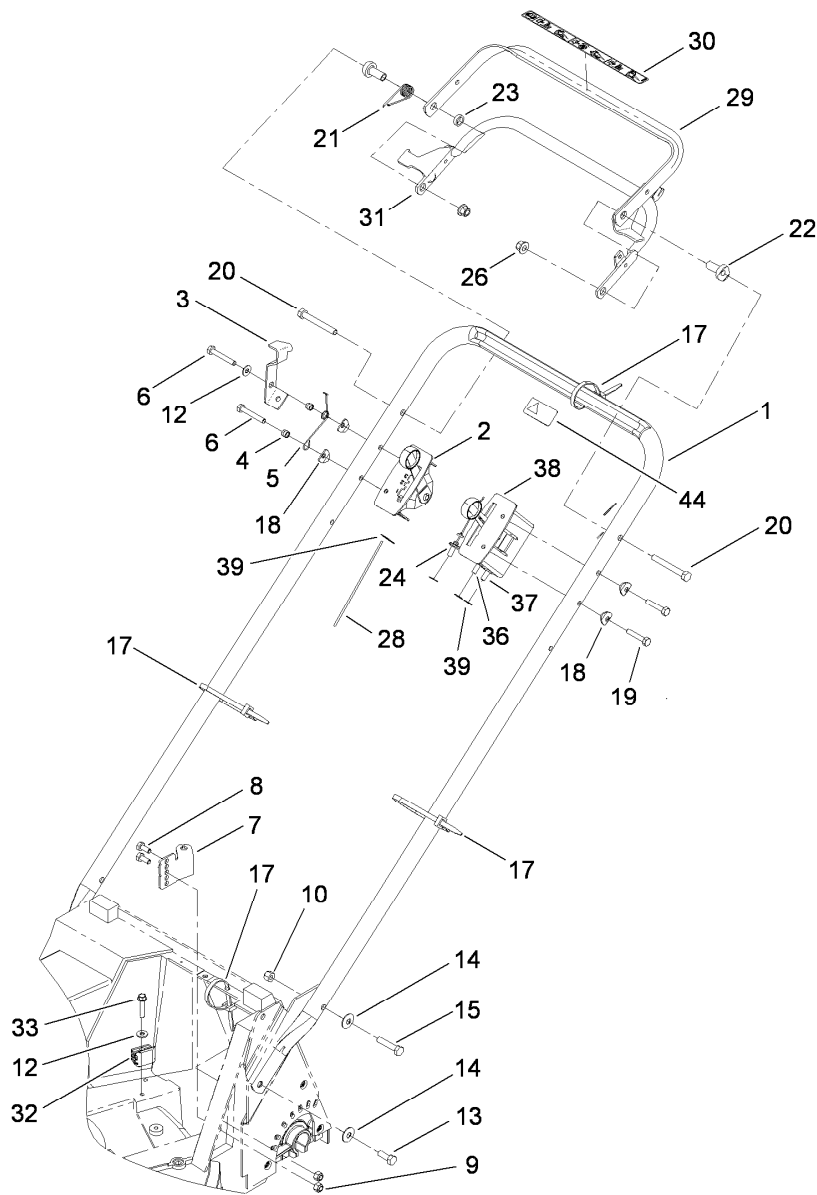

Handle Assembly

Ref.	Part Number	Qty.	Description
1	107-4162-03	1	Handle
2	116-0504	1	Control-Shift
3	115-0999-01	1	Latch-Lever, BBC
4	110-0542	2	Spacer-Flange
5	115-0996	1	Spring-Torsion, Latch
6	321-10	2	Screw-HH
7	115-4453	1	Anchor-Cable
8	321-3	2	Screw-HH
9	3296-42	2	Nut-Lock, NI
10	3296-29	4	Nut-Lock, NI
12	3256-1	2	Washer-Flat
13	322-4	2	Screw-HH
14	3290-456	4	Washer-Belleville
15	322-7	2	Screw-HH
17	3290-378	4	Tie-Cable
18	115-0995	4	Washer
19	321-13	2	Screw-HH


Ref.	Part Number	Qty.	Description
20	322-12	2	Screw-HH
21	115-0993	1	Spring-Torsion
22	49-1631	2	Spacer-Support
23	59-4310	1	Spacer
24	107-4296	1	Cable-BBC
26	3296-58	2	Nut-Lock, NI
28	107-4295	1	Cable-Shift
29	115-4454-03	1	Traction Bail ASM
30	110-2115	1	Decal-Control
31	115-4452-03	1	BBC Bail ASM
32	92-7729	1	Anchor-Cable, Upper
33	32144-110	1	Screw-HWH
36	107-4294	1	Cable-Traction
37	110-4923	1	Throttle Cable ASM
38	117-3544	1	Control Head
39	32151-86	4	E-Ring
44	98-4387	1	Decal-Protection, Ear

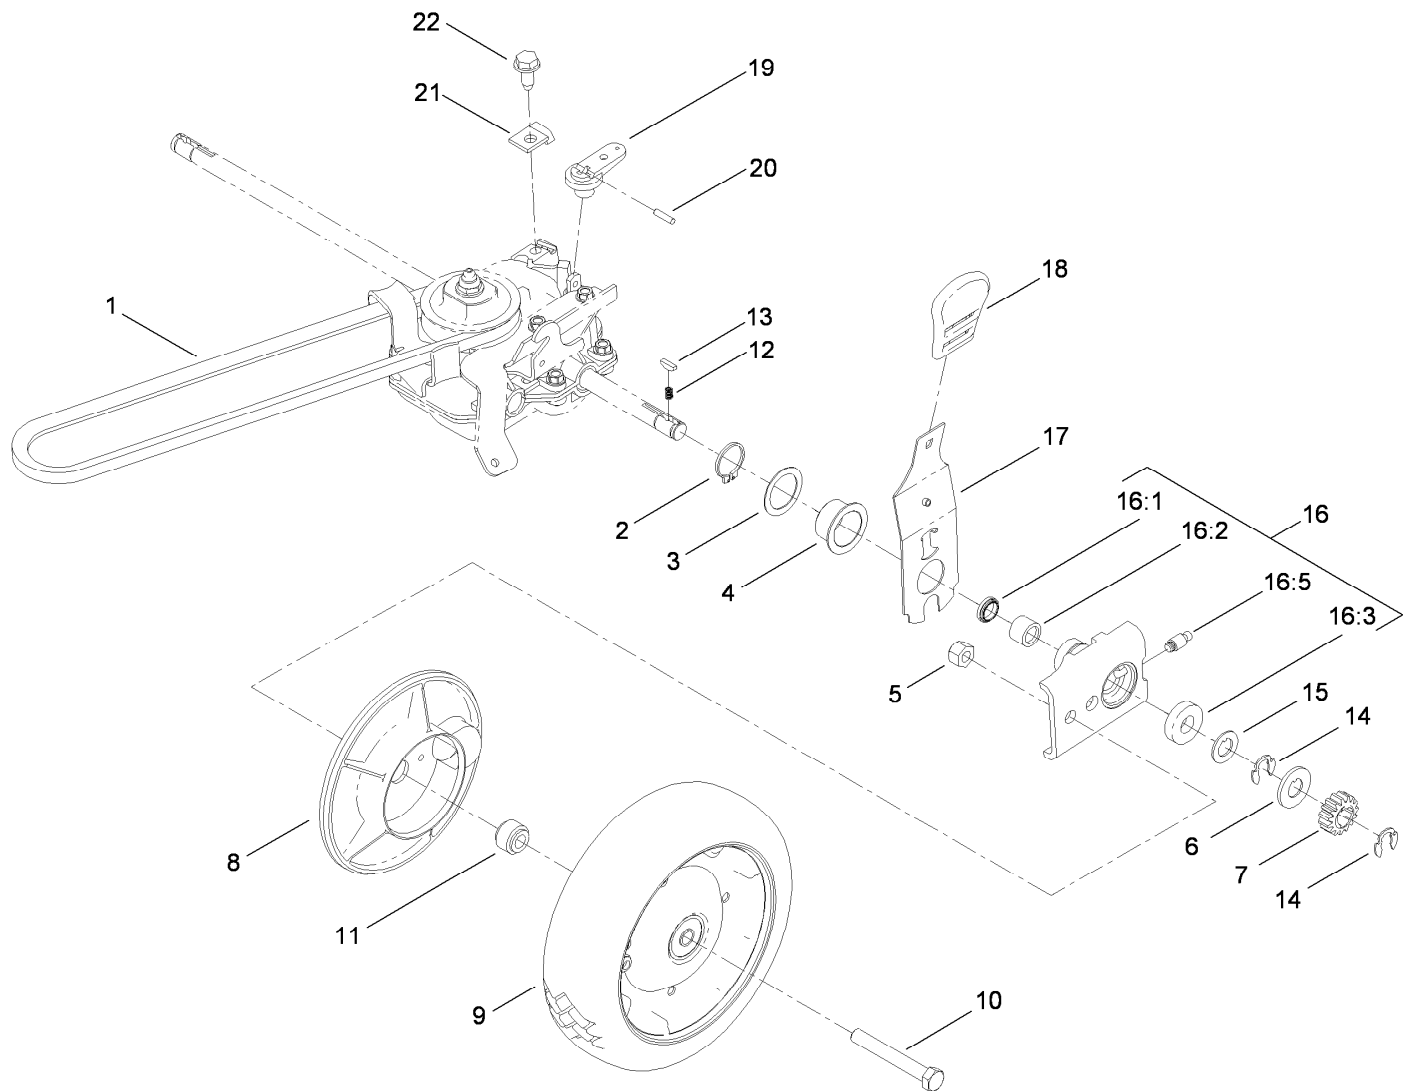

Height-of-Cut and Rear Wheel Assembly

Ref.	Part Number	Qty.	Description
1	612652	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	115-0966	2	Bushing-Flange
5	32152-2	2	Nut-Lock, Cone
6	62-3830	2	Washer-Thrust, Outer
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	115-3813	2	Wheel And Tire ASM
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Cover, Wheel
12	39-9650	2	Spring-Compression
13	612066	2	Key
14	32151-68	4	Ring-Retaining


Ref.	Part Number	Qty.	Description
15	49-7700	2	Washer-Thrust, Outer
16	74-1851	2	Pivot Arm ASM
16:1	47-6730	1	Seal-Oil
16:2	117-3500	1	Bearing-Caged Needle Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92-6316	1	Zerk
17	119-2322	2	Rear Spring Arm ASM
18	110-0549	2	Knob-HOC
19	29-9560	1	Lever-Shift
20	32121-99	1	Pin-Coil
21	62-3720	1	Clamp-Cable
22	32144-70	1	Screw-HWHTF

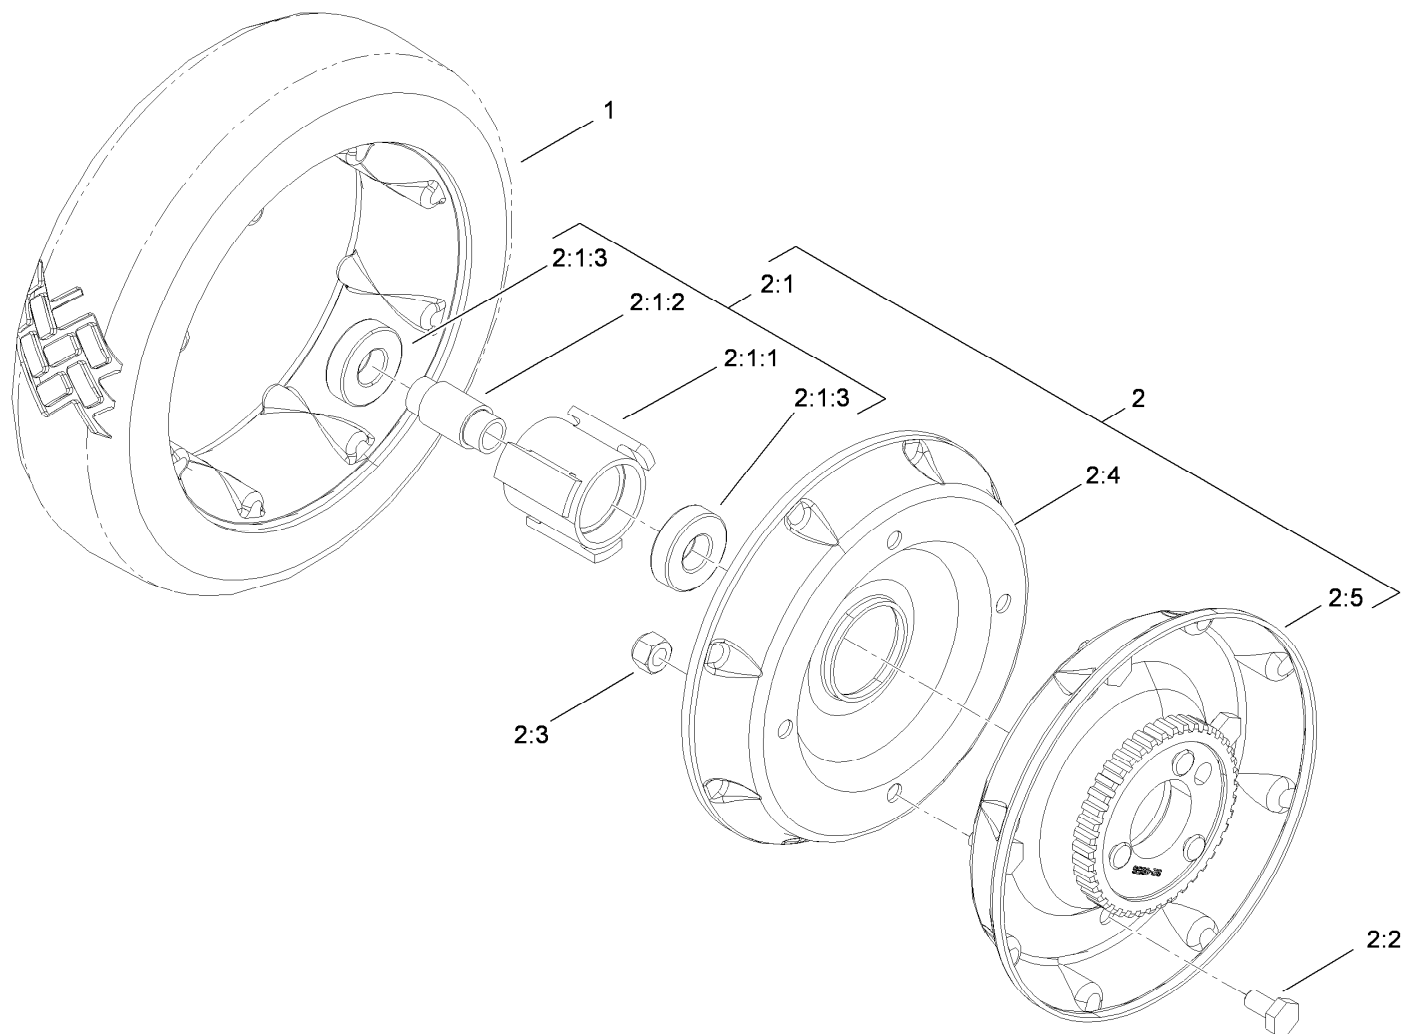

Rear Wheel Assembly No. 115-3813

Ref.	Part Number	Qty.	Description
1	53-7740	1	Tire
2		1	Wheel ASM ●
2:1		1	Hub And Bearing ASM ●
2:1:1	52-2410	1	Hub-Bearing
2:1:2	52-2440	1	Spacer-Bearing
2:1:3	52-2450	2	Bearing-Wheel
2:2	321-2	4	Screw-HH
2:3	3296-42	4	Nut-Lock, NI
2:4	115-3806	1	Plate-Wheel, Half
2:5	115-3848	1	Wheel Half And Gear ASM

● Not serviced separately

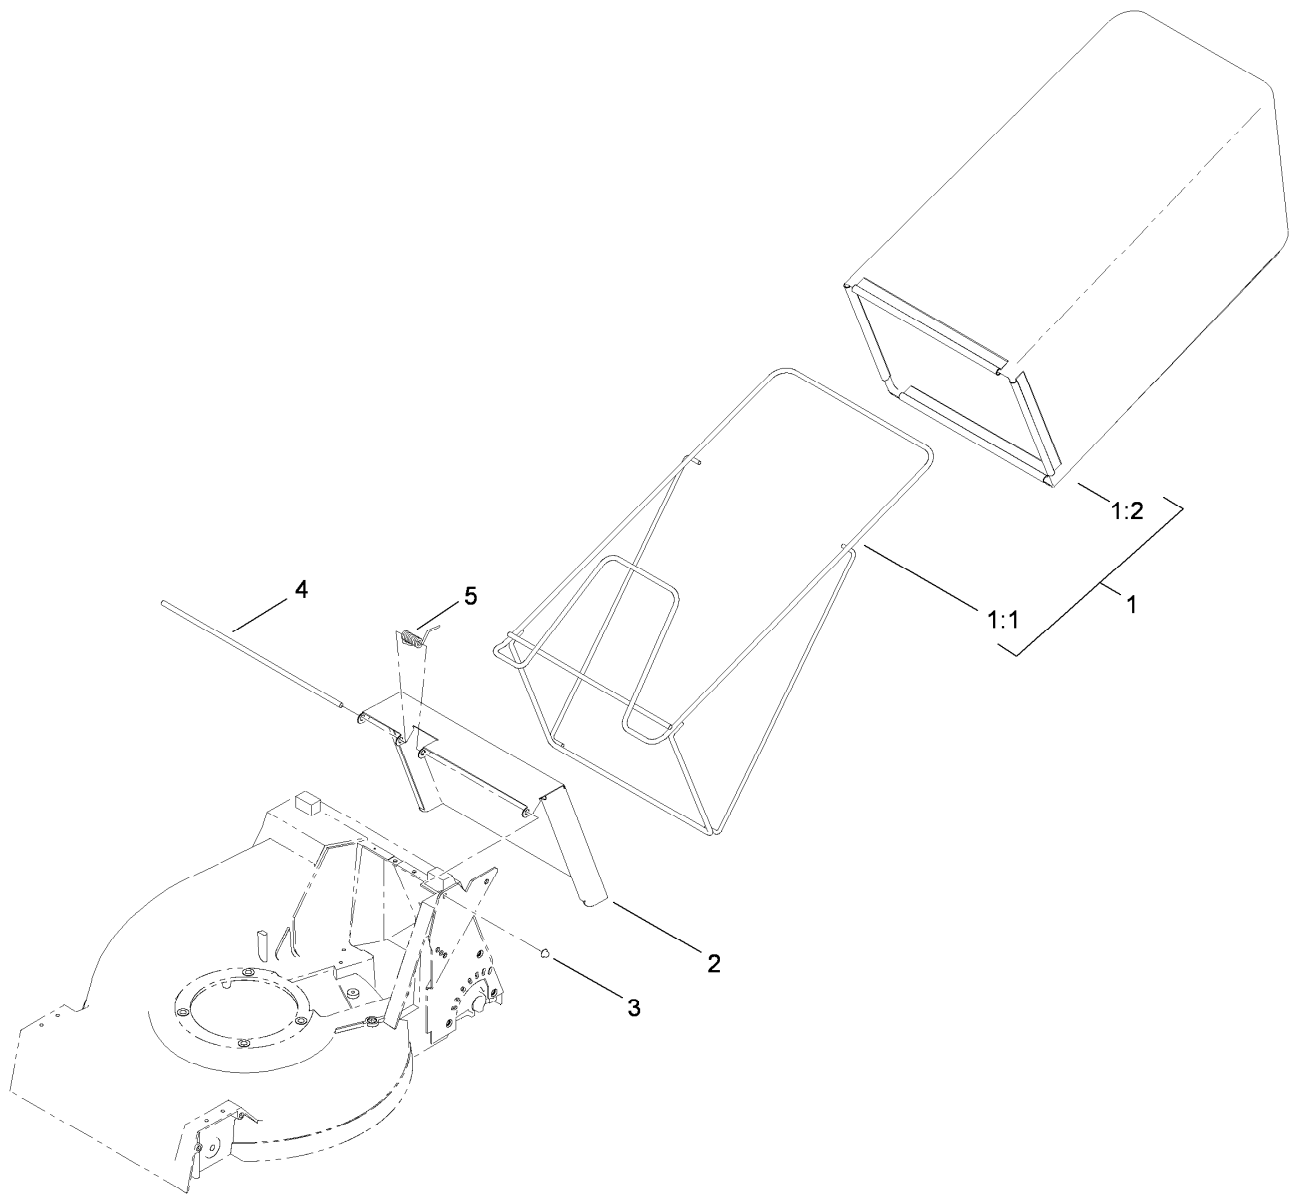

Grass Bag Assembly

Ref.	Part Number	Qty.	Description
1	115-3815	1	Grass Bag ASM
1:1	110-0510-03	1	Frame ASM
1:2	115-3817	1	Grass Bag ASM
2	114-3445-03	1	Door-Discharge, Rear
3	32112-1	2	Pushnut-Cap, Washer
4	107-4286	1	Rod-Door
5	110-5005	1	Spring-Torsion, Door

Notes:

Notes:

Notes:

