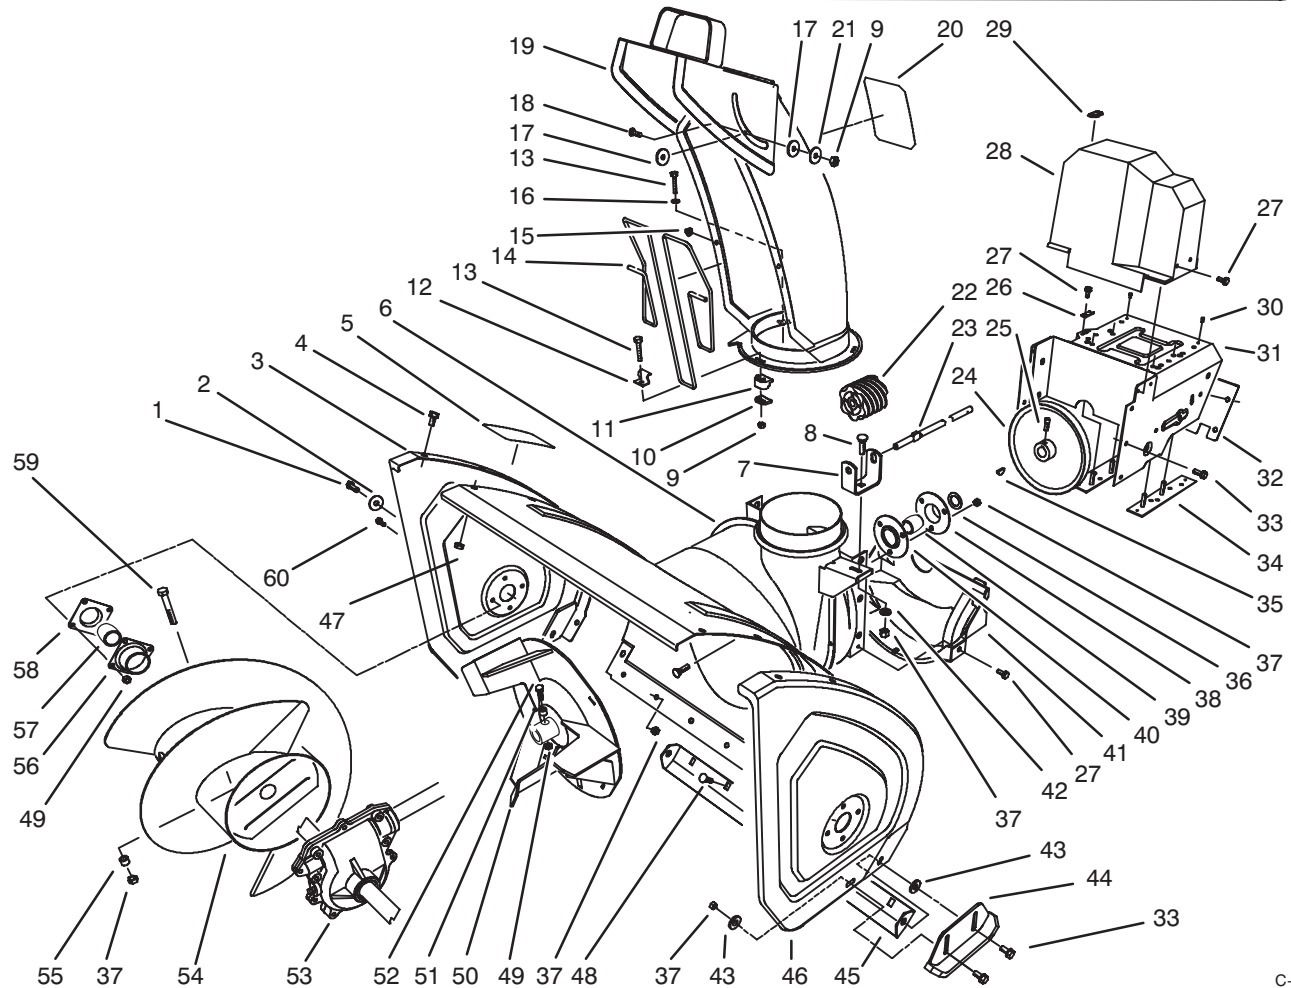


TORO®
MODEL NO. 38540-6900001 & UP
MODEL NO. 38543-6900001 & UP
PARTS
CATALOG
824 SNOWTHROWER


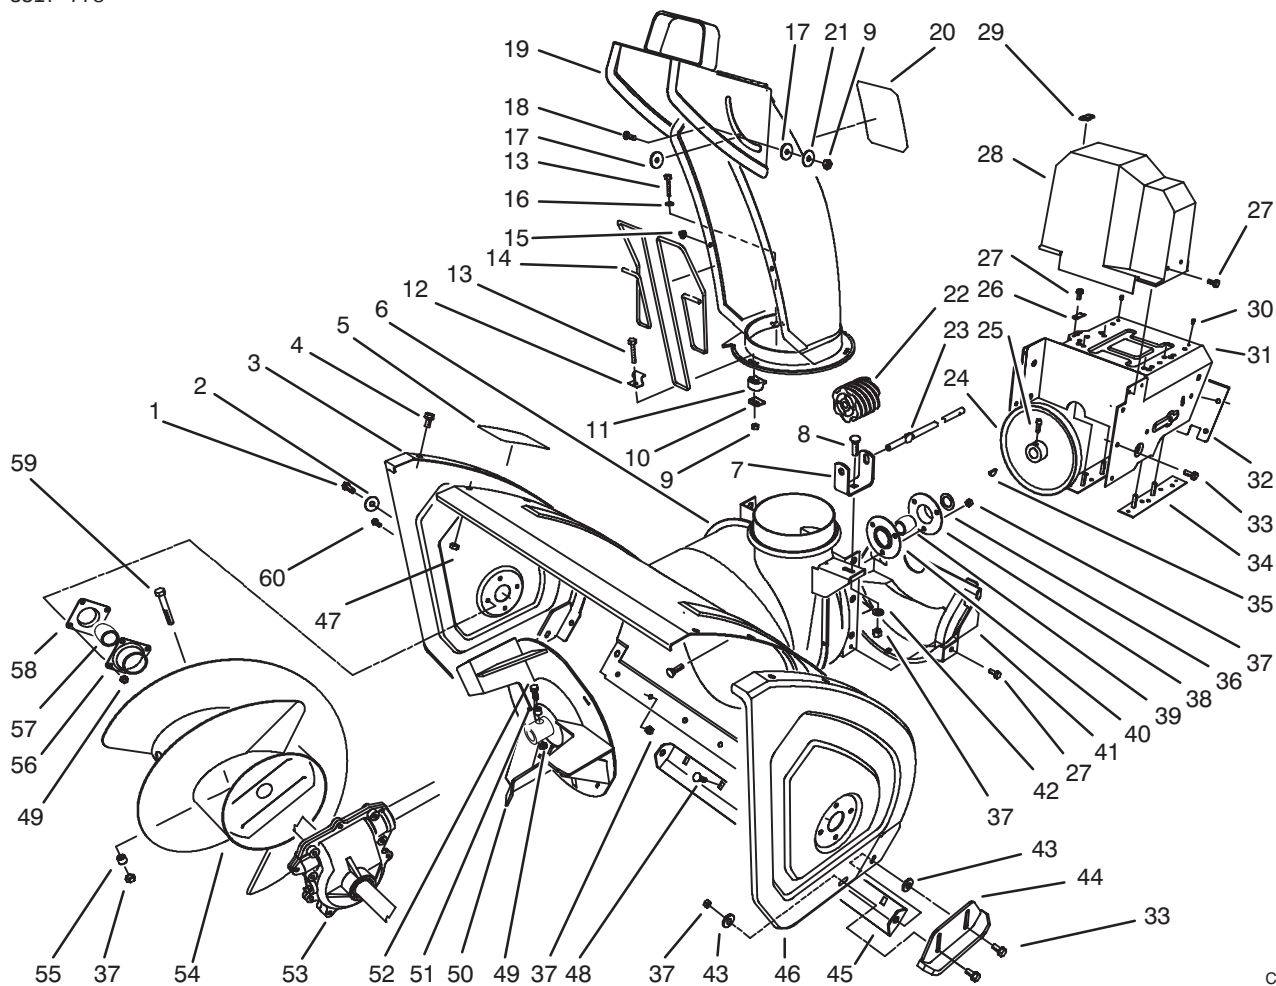
C-0045

HOUSING & CHUTE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw - Hex. Hd.	2
2	3-0750	Washer - Retaining	2
3	66-7821	Plate - Side R.H.	1
4	3234-28	Screw - Hex. Flange Hd.	12
5	53-7670	Decal - Danger Auger	1
*	94-2568	Decal - Danger Auger Model No. 38540	1
6	62-0720	Housing - 24"	1
7	63-2180	Bracket - Gear	1
8	3230-2	Bolt - Carriage	1
9	3296-2	Nut - Lock	4
10	63-2670	Plate - Chute Retainer	3
11	62-1430	Retainer - Chute	3
12	63-3130	Clip - Chute Guard	1
13	3274-13	Screw - Machine	3
14	63-3020	Guard - Chute	1
15	3290-326	Nut - Push	2

Ref. No.	Part No.	Description	No. Used
16	3256-14	Washer - Flat	3
17	63-2900	Washer - Plastic	2
18	32122-32	Screw	1
19	62-0840	Chute Assembly	1
20	63-3740	Decal - Danger Chute	1
*	94-2559	Decal - Danger Chute Model 38543	1
21	3256-61	Washer - Flat	1
22	62-0820	Gear - Worm	1
23	62-1720	Rod - Chute Gear	1
24	62-1300	Pulley - Impeller	1
25	3242-4	Screw - Set Sq. Hd.	2
26	63-2300	Retainer - Cable	1
27	32144-4	Screw - Hex. Flange Hd.	6
28	63-2080	Cover - Belt (Upper)	1
29	63-3290	Cover - Cable	1
30	3269-23	Rivet	4

*Not Illustrated




C-0045

HOUSING & CHUTE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
31	66-6980	Frame -- Engine	1
32	62-1440	Cover -- Engine Frame	1
33	3234-5	Screw -- Hex.. Washer Hd.	10
34	68-4110	Plate -- Engine Stud L.H.	1
*	68-4100	Plate -- Engine Stud R.H.	1
35	3257-23	Key -- Woodruff	1
36	252-80	Washer -- Thrust	1
37	3296-29	Nut -- Lock	14
38		Flange -- Bearing (Front)	1
39	63-3450	Bearing -- Impeller	1
40		Flange -- Bearing ((Rear)	1
41	68-8410	Cover -- Belt (Lower)	1
42	3256-23	Washer -- Flat	1
43	52-2861	Washer	4
44	74-1440	Skid Assembly	2
45	66-7762	Blade -- Scraper	1
46	66-7831	Plate -- Side L.H.	1

Ref. No.	Part No.	Description	No. Used
47	3296-47	Nut -- Lock	12
48	3230-23	Screw -- Carriage	9
49	3296-42	Nut -- Lock	10
50	66-7910	Impeller	1
51	66-8010	Spacer	2
52	321-44	Screw -- Hex. Hd.	2
53	74-1560	Auger Gearbox Assembly	1
54	68-7450	Auger -- R.H.	1
*	68-7460	Auger -- L.H.	1
55	25-5090	Spacer -- Auger Hub	2
56	20-0990	Flange -- Bearing (Inner)	2
57	20-0980	Bearing -- Auger	2
58	20-1000	Flange -- Bearing (Outer)	2
59	322-12	Bolt -- Auger	2
60	321-3	Screw -- Hex. Hd.	8
*	12-8789	Impeller Bearing Assembly (Incl. Ref. #38-40)	1

*Not Illustrated

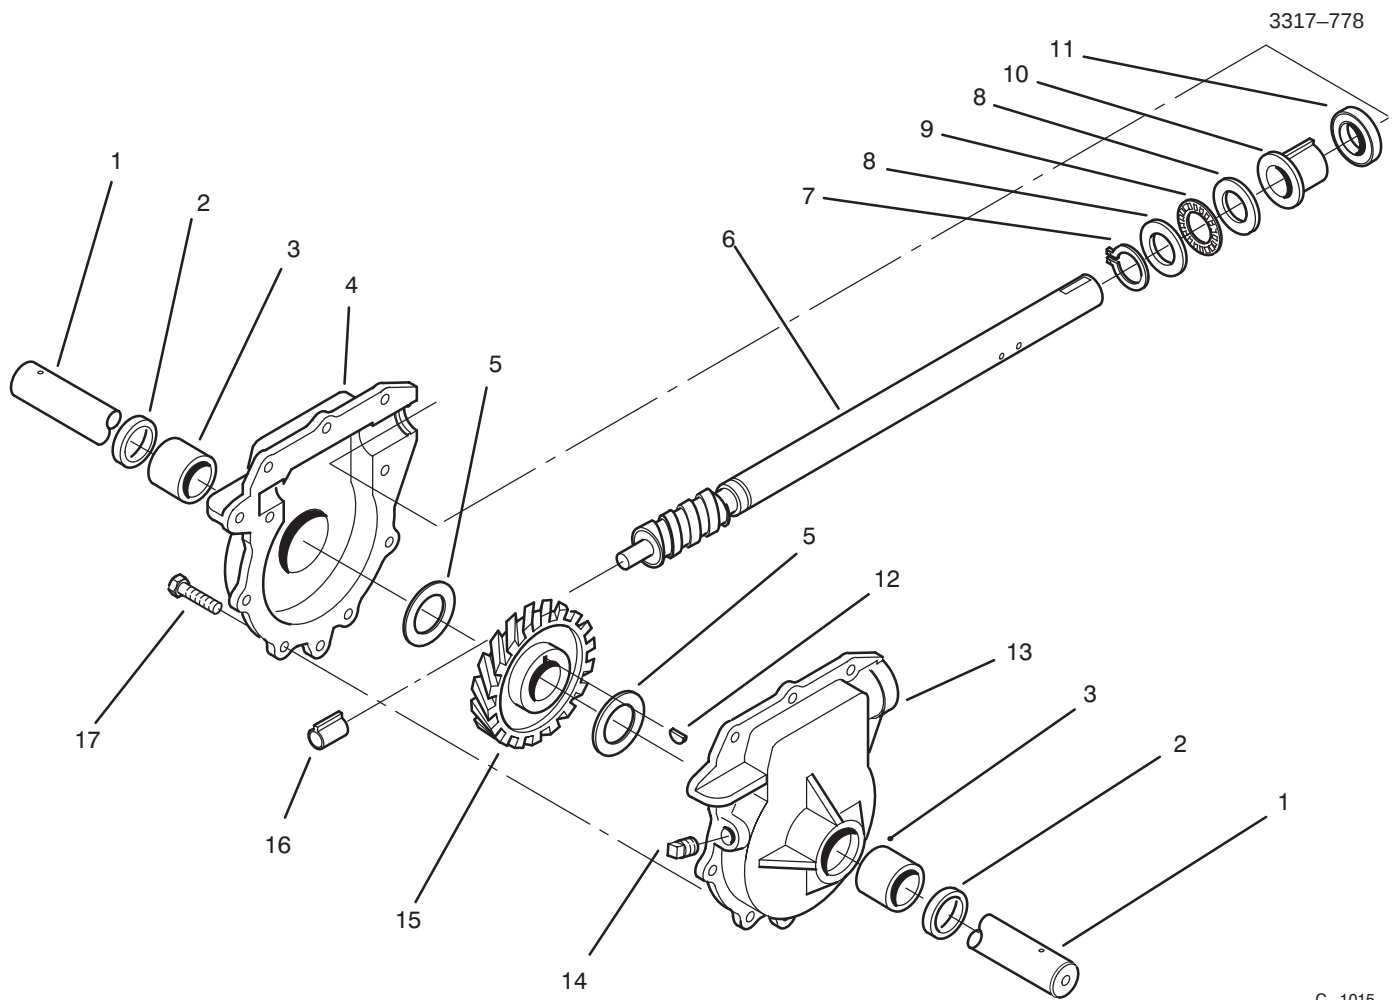


C-1015

24" AUGER GEARCASE ASSEMBLY NO. 74-1560

Ref. No.	Part No.	Description	No. Used
1	62-1530	Shaft - Auger 24"	1
2	7-0045	Seal - Oil	2
3	256-237	Bushing - Sleeve	2
4	74-1580	Gearcase Assembly - R.H. (Incl. Ref. # 2-3)	1
5	252-71	Bearing - Thrust	2
6	66-7811	Shaft - Impeller	1
7	32151-33	Ring - Snap	1
8	252-78	Washer - Thrust	2
9	252-76	Bearing - Thrust	1

Ref. No.	Part No.	Description	No. Used
10	37-6560	Bushing - Input	1
11	253-149	Seal - Input	1
12	3257-10	Key - Woodruff	1
13	74-1570	Gearcase Assembly - L.H. (Incl. Ref. # 2-3, & 17)	1
14	281-1	Plug - Pipe Sq. Hd.	1
15	62-0120	Gear - Helical	1
16	62-1150	Bushing - Worm	1
17	32144-110	Screw - Hex. Washer Hd.	9
*	505-129	Sealant - 100g Tube	1

*Not Illustrated

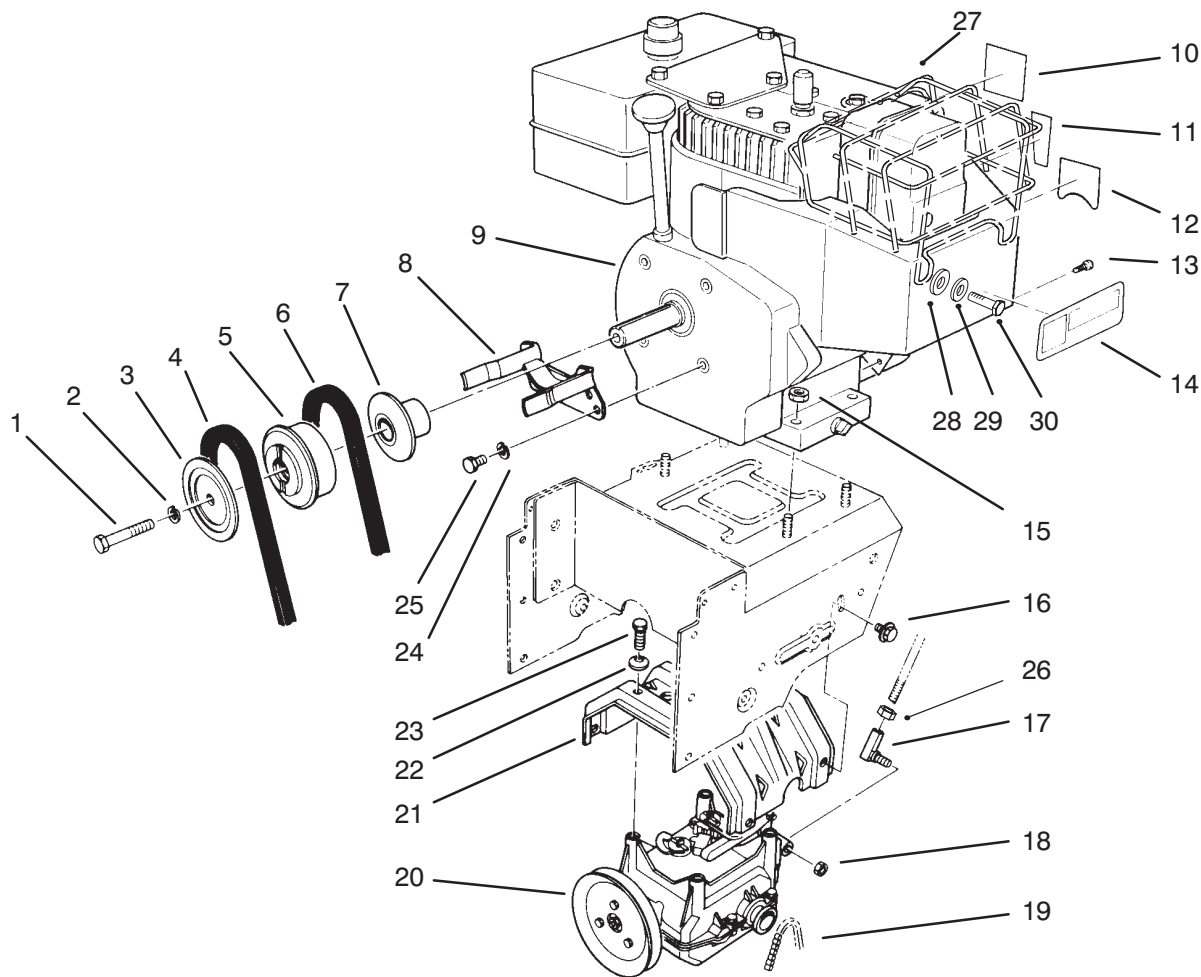

C-1727


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3212-8	Screw — Hex. Hd.	1
2	3253-6	Washer — Lock	1
3	62-0940	Sheave Half — Impeller	1
4	63-2961	Belt — Impeller	1
5	62-0930	Hub — Sheave	1
6	63-2951	Belt — Traction	1
7	62-0920	Sheave Half — Traction	1
8	68-7510	Guide — Belt	1
†9		Engine	1
10	94-2572	Decal — Primer	1
11	63-3190	Decal — Throttle	1
12	63-2400	Decal — Choke (Model No. 38540 Only)	1
*	63-2410	Decal — Choke (Model No. 38543 Only)	1
13	32144-4	Screw	1
14	66-6840	Decal — Hot Surface (Model No. 38540 Only)	1

Ref. No.	Part No.	Description	No. Used
14	94-2576	Decal — Hot Surface (Model No. 38543 Only)	1
15	32128-20	Nut — Lock	4
16	3234-7	Screw — Hex. Flange Hd.	4
17	63-2640	Joint— Ball	1
18	3296-39	Nut — Lock	1
19	63-2940	Chain — Drive	1
20	66-8030	Transmission Assembly	1
21	63-2990	Frame — Transmission	1
22	3290-461	Washer — Belleville	4
23	11-0590	Screw — Hex. Hd.	4
24	3253-4	Washer — Lock	2
25	3210-1	Screw — Hex. Hd.	2
26	3220-3	Nut — Jam	1
27	94-2764	Guard — Muffler	1
28	93-8038	Washer — Flat	2
29	93-8039	Washer — Lock	2
30	93-8048	Screw — Self Tapping	2

*Not Illustrated

†Obtain from your local Tecumseh Dealer.

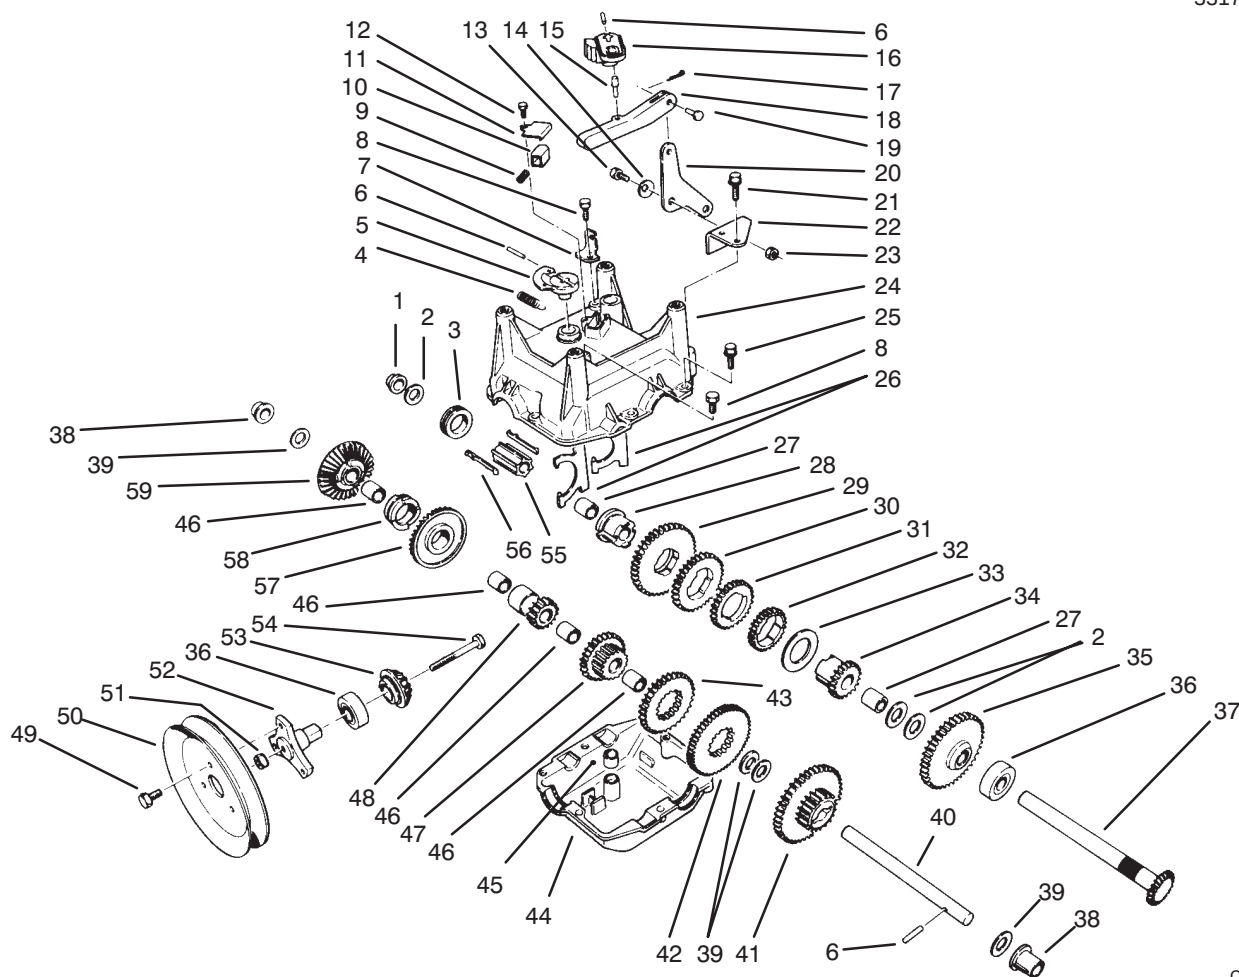


C-1736

TRANSMISSION ASSEMBLY NO. 66-8030

Ref. No.	Part No.	Description	No. Used
1	62-1180	Bushing - Output (Flange)	1
2	252-59	Washer - Thrust	3
3	62-0430	Collar - Shift (Speed)	1
4	63-2920	Spring - Extension (F/R Return)	1
5	62-0880	Lever - Direction Shift	1
6	32121-106	Pin - Coil	3
7	62-1740	Bracket - Cable	1
8	32144-4	Screw - Self Tapping	2
9	63-2890	Spring - Compression (Detent)	1
10	62-1020	Button - Detent	1
11	62-1690	Cover - Detent	1
12	32104-71	Screw - Pan Hd.	1
13	63-3410	Bolt - Shoulder	1
14	3290-477	Washer - Curved	1
15	63-2190	Pin - Gearshift Link	1
16	62-0870	Lever - Gear Shift	1
17	3272-1	Pin - Cotter	1
18	62-0860	Link - Gearshift	1
19	283-3	Pin - Clevis	1
20	63-2600	Bellcrank	1
21	32104-95	Screw - Hex. Washer Hd.	2

Ref. No.	Part No.	Description	No. Used
22	62-1190	Bracket - Bellcrank	1
23	3296-42	Nut - Lock	1
24	62-0490	Gear Case - Upper	1
25	32144-86	Screw - Hex. Washer Hd.	6
26	62-1040	Yoke-Shift	2
27	62-1350	Bushing - Output	2
28	62-0320	Sleeve	1
29	62-0240	Gear - 45T	1
30	62-0220	Gear - 34T	1
31	62-0200	Gear - 27T	1
32	62-0250	Gear - 29T	1
33	63-2280	Washer - Thrust	1
34	62-0340	Sleeve - Gear 19T	1
35	62-0370	Gear - 41T	1
36	38-7820	Bearing - Ball	2
37	62-1080	Shaft - Output	1
38	62-1170	Bushing - Flange	2
39	257-10	Washer - Thrust	4
40	62-0330	Shaft - Intermediate	1
41	62-0360	Gear - Compound 19T/41T	1
42	62-0260	Gear - 51T	1
43	62-0210	Gear - 33T	1
44	62-0480	Gear Case - Lower	1

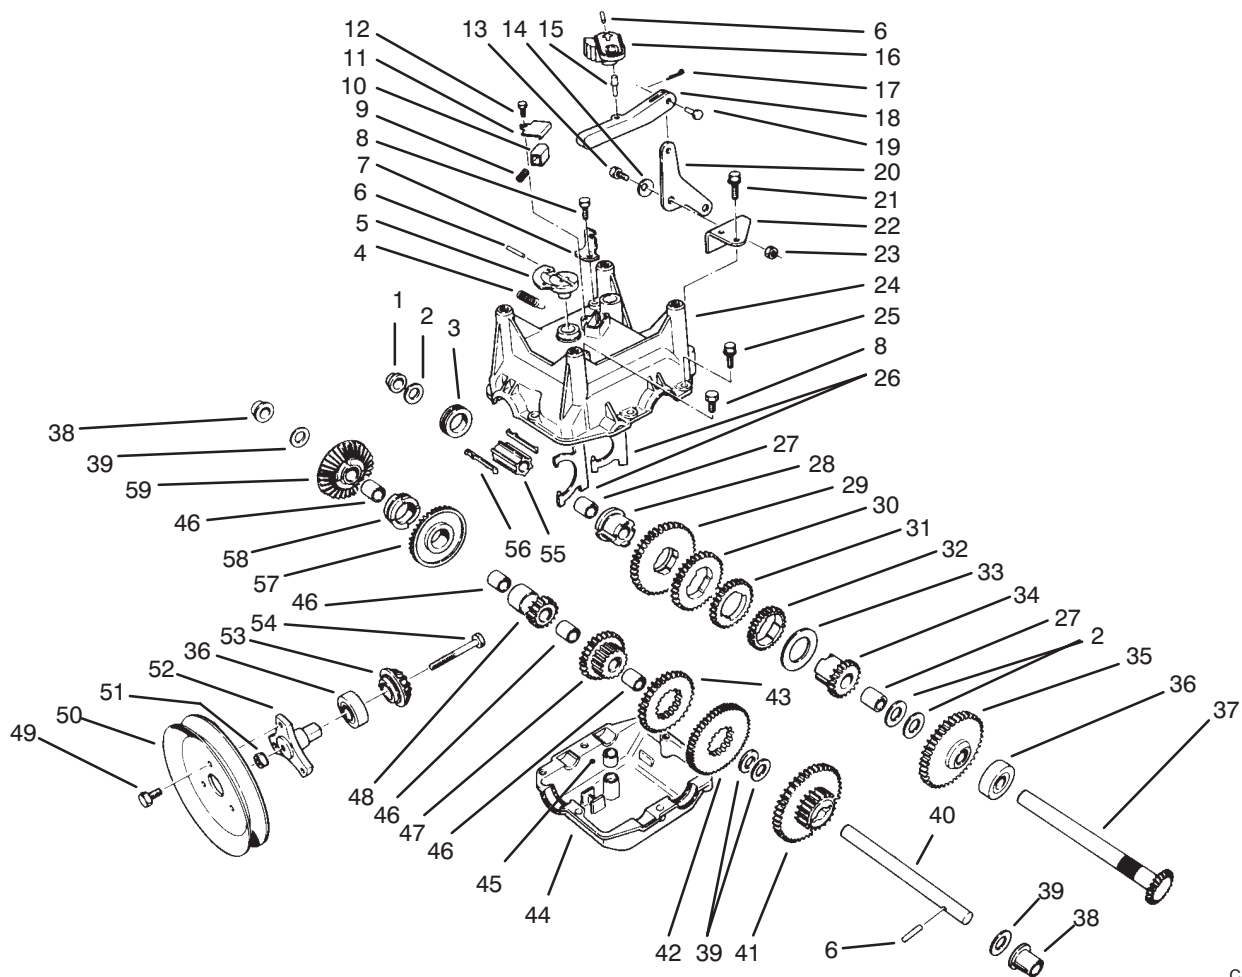


C-1736

TRANSMISSION ASSEMBLY NO. 66-8030 (Continued)

Ref. No.	Part No.	Description	No. Used
45	29-9570	Bushing - Yoke	1
46	62-1160	Bushing - Intermediate	4
47	68-4310	Gear - 26T	1
48	62-0500	Gear - 15T	1
49	12-3270	Screw	3
50	62-1310	Pulley - Traction	1
51	32128-32	Nut - Flange Lock	1
52	62-0380	Hub - Pulley	1
53	62-0350	Pinion - Bevel 19T	1

Ref. No.	Part No.	Description	No. Used
54	321-15	Screw - Hex. Hd.	1
55	68-4320	Sleeve - Shift	1
56	62-0310	Key - Shift	2
57	67-5870	Gear - Bevel 36T	1
58	67-5880	Collar - Shift	1
59	13-3559	Gear - Bevel Reverse 36T (Incl. Ref. #46)	1
*	505-101	Grease - 14.5 oz. Cartridge	1

*Not Illustrated

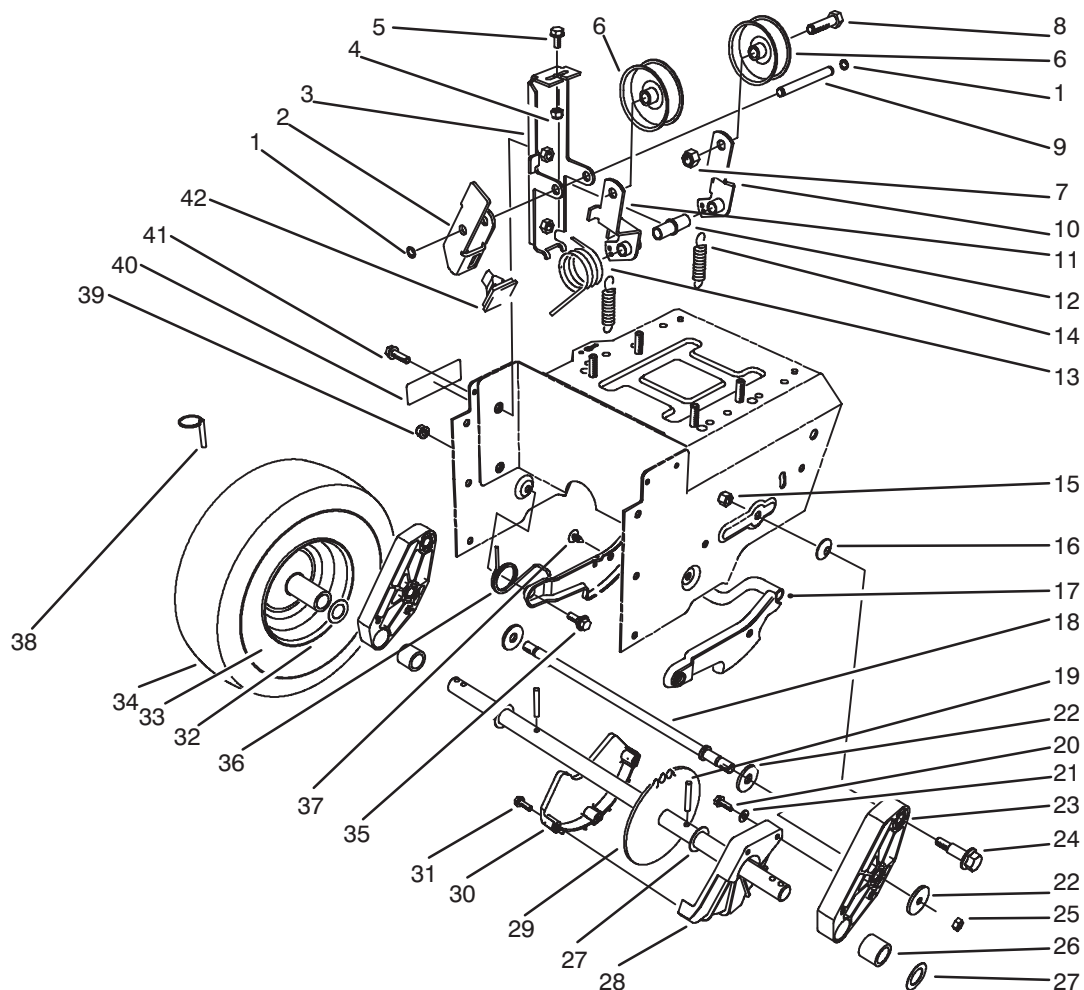


C-0053

TRACTION DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32120-46	Ring – Retaining	2
2	63-2810	Arm – Brake	1
3	63-2850	Bracket – Idler Arm	1
4	3296-42	Nut – Lock	1
5	3234-13	Screw – Hex. Washer Hd.	1
6	3-4244	Pulley – Idler	2
7	3296-59	Nut – Lock	2
8	323-7	Screw – Hex. Hd.	2
9	62-0970	Pin – Idler	1
10	93-8045	Arm – Traction Idler	1
11	93-8046	Arm – Impeller Idler	1
12	3256-38	Bushing – Idler	1
13	63-2880	Spring – Torsion	1
14	63-2870	Spring – Extension	2
15	3296-39	Nut – Lock	2
16	3290-461	Washer – Belleville	2
17	62-0470	Latch – Arm	1
18	66-7720	Rod – Latch	1
19	32121-9	Pin – Roll	2
20	32144-4	Screw – Hex. Flange Hd.	2
21	3256-1	Washer – Flat	2
22	63-3340	Washer	4
23	66-7740	Pivot Arm Assembly (Incl. Ref. # 26)	2

Ref. No.	Part No.	Description	No. Used
24	62-1330	Bolt – Shoulder	2
25	3296-23	Nut – Lock	2
26	63-2250	Bushing – Axle	2
27	252-80	Washer – Thrust	4
28	62-1010	Guard – Chain L.H.	1
29	63-2111	Axle Assembly	1
30	62-1000	Guard – Chain R.H.	1
31	32104-121	Screw – Hex. Flange Hd.	3
32	241-128	Rim – Wheel	2
33	232-46	Tube – Inner	2
34	231-120	Tire	2
35	5-2490	Bolt – Shoulder	2
36	63-2740	Spring – Torsion	1
37	3290-476	Fastener – Panel	1
38	3290-243	Pin – Klik	2
39	3296-47	Nut – Lock	2
40	66-6860	Decal – Warning (Model No. 38540 Only)	1
*	94-2575	Decal – Warning (Model No. 38543 Only)	1
41	3234-7	Screw – Hex. Flange Hd.	2
42	66-8060	Pad – Brake	1
*		Wheel & Tire Assembly (Incl. Ref. #32-34)	1

*Not Illustrated

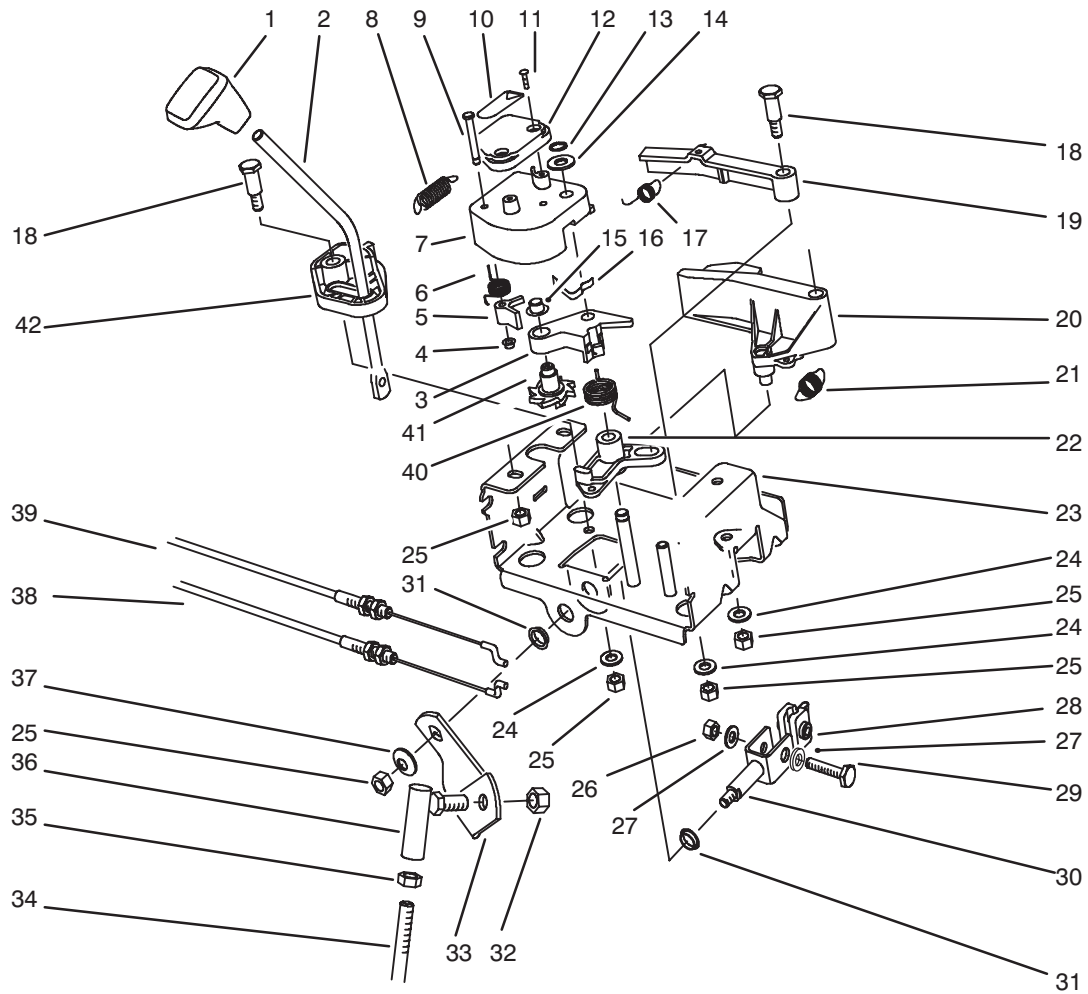


C-0054

TRACTION LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62-1290	Knob - Shift	1
2	67-9240	Rod - Shift (Upper)	1
3	62-1110	Lever - Index Wheel	1
4	3290-422	Nut - Push	1
5	62-0180	Tang - Index	1
6	62-1650	Spring - Torsion	1
7	62-1100	Lever - Latch	1
8	63-2220	Spring - Extension	1
9	63-2610	Pin - Tang	1
10	63-2480	Decal - #2	1
11	32104-118	Screw - Pan Hd.	2
12	62-1140	Cover - Latch	1
13	32120-46	Ring - Retaining	1
14	257-9	Washer - Thrust	1
15	3290-320	Nut - Push	1
16	62-1710	Spring - Flat	1
17	63-2240	Spring - Extension	1
18	63-2650	Screw - Shoulder	2
19	62-1700	Lever - Lockout	1
20	62-1130	Lever - Reverse	1
21	63-2230	Spring - Extension	1

Ref. No.	Part No.	Description	No. Used
22	62-1120	Lever - Reverse	1
23	63-2150	Frame - Control	1
24	3256-23	Washer - Flat	3
25	3296-29	Nut - Lock	7
26	3296-42	Nut - Lock	1
27	3256-1	Washer - Flat	2
28	67-9250	Retainer - Shift Rod	1
29	321-9	Screw - Hex. Hd.	1
30	66-7730	Clevis	1
31	256-296	Bushing - Nylon	2
32	3296-39	Nut - Lock	1
33	63-2630	Bracket - Shift	1
34	63-2830	Rod - Shift (Lower)	1
35	3220-3	Nut - Jam	1
36	63-2640	Joint - Ball	1
37	3290-456	Washer - Belleville	1
38	63-2210	Cable - Gearbox	1
39	63-2200	Cable - Latch	1
40	63-2270	Spring - Torsion	1
41	62-0170	Wheel - Index	1
42	62-1470	Base - Lockout	1

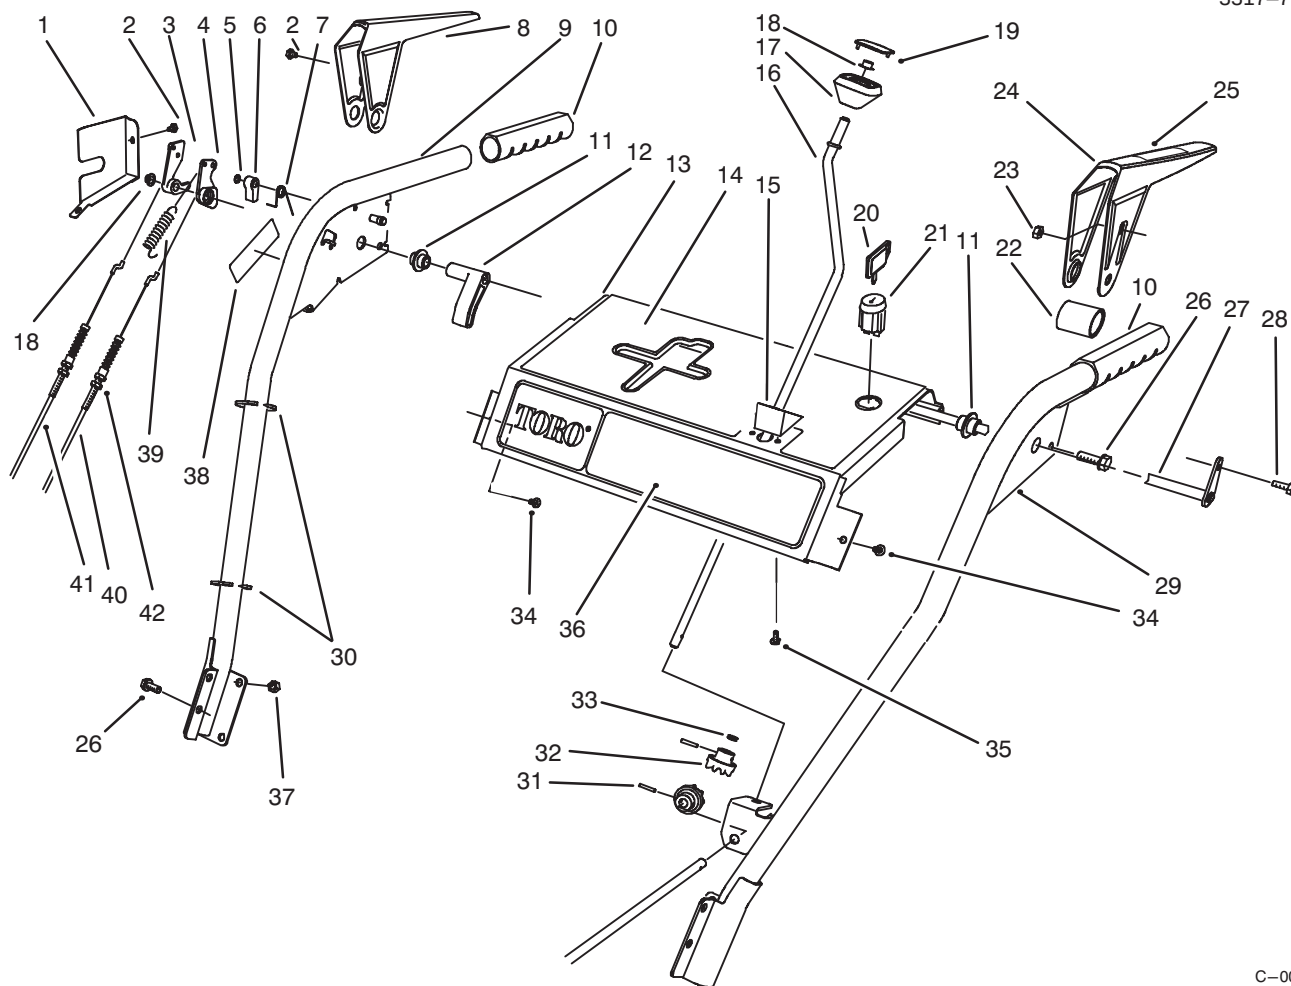


C-0055

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	63-2170	Cover — Lever Lock	1
2	2210-250	Screw	3
3	62-0300	Tang — Locking	1
4	62-0290	Cam — Release	1
5	32151-66	Ring — Retaining	1
6	62-0280	Latch — Lock	1
7	63-2910	Spring — Torsion	1
8	62-1050	Lever — Impeller	1
9	62-1380	Handle — R.H.	1
10	66-7850	Handlegrip	2
11	62-1070	Bushing — Lever	2
12	62-1640	Lever — Trip	1
13	66-8100	Panel — Control	1
14	66-6850	Decal — Panel Top (Model No. 38540 Only)	1
*	94-2578	Decal — Panel Top (Model No. 38543 Only)	1
15	62-1490	Plate — Guide	1
16	63-2160	Rod — Chute Crank	1
17	62-1320	Knob — Chute Control	1
18	3290-320	Nut — Push	2
19	62-1520	Cover — Knob	1
20	63-8360	Key — Switch	1
21	40-5940	Switch — On/Off	1
22	63-3380	Spacer — Traction Lever	1
23	3296-2	Nut — Lock	1

Ref. No.	Part No.	Description	No. Used
24	62-1060	Lever — Traction	1
25	63-3050	Decal — Lever (Model No. 38540 Only)	1
26	3234-7	Screw — Hex. Flange Hd.	6
27	63-2030	Rod — Cross	1
28	3290-359	Screw	1
29	66-8090	Handle — L.H.	1
30	3290-378	Tie — Cable	3
31	32121-50	Pin — Roll	2
32	62-1460	Gear — Universal	2
33	62-1230	Washer — Rubber	1
34	32104-76	Screw — Self Tapping	2
35	32104-118	Screw — Pan Hd.	2
36	63-2510	Decal — Panel Front	1
37	3296-47	Nut — Lock	4
38	66-6860	Decal — Warning (Model No. 38540 Only)	1
*	94-2575	Decal — Warning (Model No. 38543 Only)	1
39	88-0810	Spring — Extension	1
40	63-2710	Cable — Traction	1
41	63-2700	Cable — Impeller	1
42	3296-42	Nut — Lock	4
*	63-3420	Harness — Wire	1
*	12-8949	Loose Parts	1

*Not Illustrated

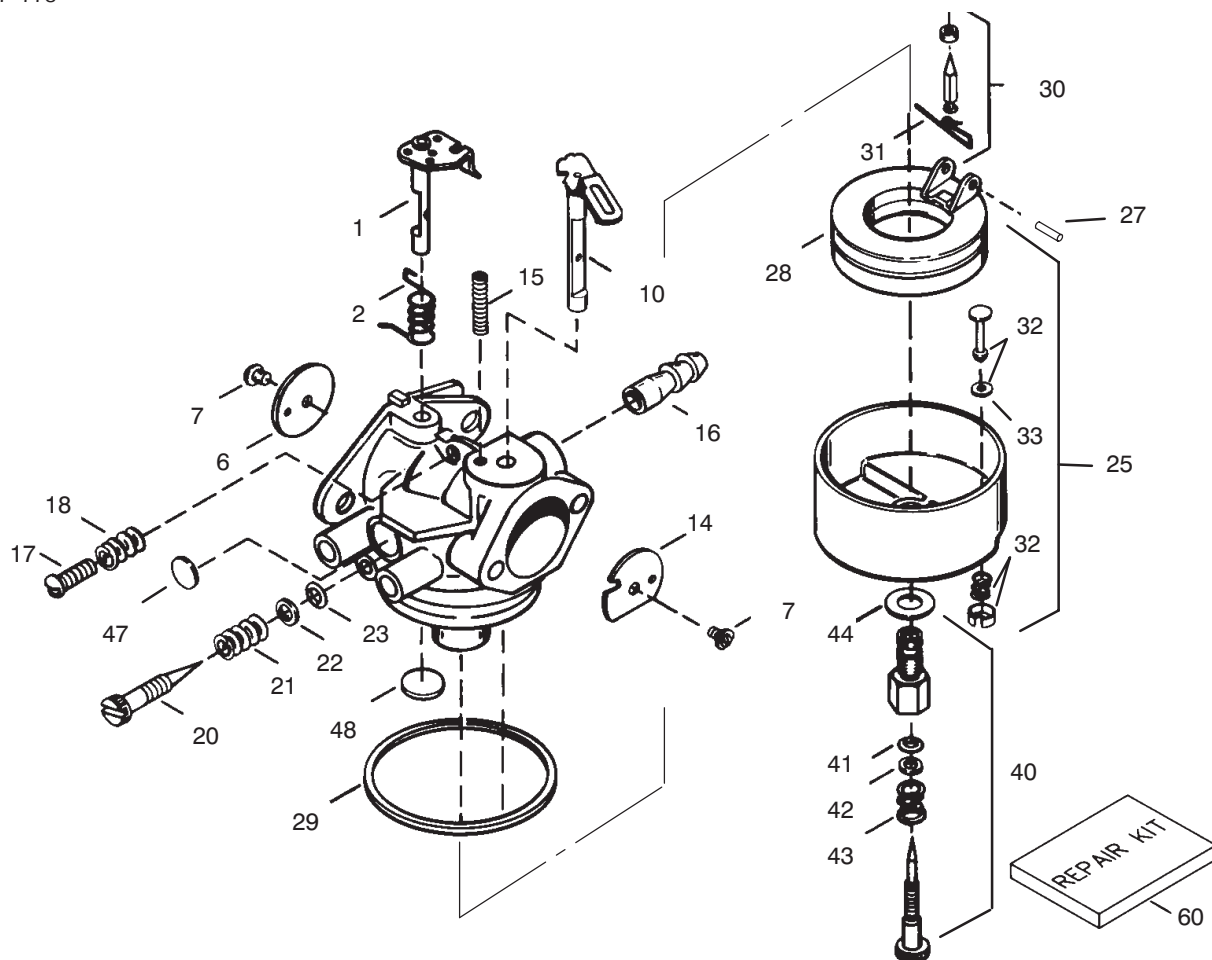


C-1744

CARBURETOR TECUMSEH NO. 632334A

Ref. No.	Part No.	Description	No. Used
1	631776A	Shaft/Lever – Throttle	1
2	631970	Spring – Throttle Return	1
6	631778	Shutter – Throttle	1
7	650506	Screw – Shutter	2
10	632112	Shaft/Lever – Choke	1
14	632174	Shutter – Choke	1
15	630735	Spring – Choke Positioning	1
16	632164	Fitting – Fuel Inlet	1
17	650417	Screw – Idle Regulating	1
18	630766	Spring – Tension	1
*20	632281	Screw – Idle Adjustment	1
21	630766	Spring – Regulating Screw	1
22	630739	Washer – Flat	1
*23	630740	O-Ring – Adj. Screw	1
25	631951	Float Bowl Assembly (Incl. Ref. #32 & 33)	1
*27	631024	Shaft – Float	1

Ref. No.	Part No.	Description	No. Used
28	632019	Float – Carburetor	1
*29	631028	Gasket – Bowl to Body	1
*30	631021	Inlet Needle, Seat & Clip Asm (Incl. Ref. #31)	1
31	631022	Clip – Inlet Needle	1
32	27136A	Drain Assembly (Incl. Ref. #33)	1
33	27554	Gasket – Bowl Drain	1
*40	632239	Adjustment Screw Asm (Incl. Ref. #43, 44, 41 & 42)	1
41	630740	O-Ring – Adj. Screw	1
42	630739	Washer – Adj. Screw	1
43	630738	Spring – Adjustment Screw	1
44	27110	Gasket – Bowl to Body	1
*47	630748	Plug – Welch	1
*48	631027	Plug – Welch	1
60	632347	Kit – Repair	1

*Included in Repair Kit Ref. #60.

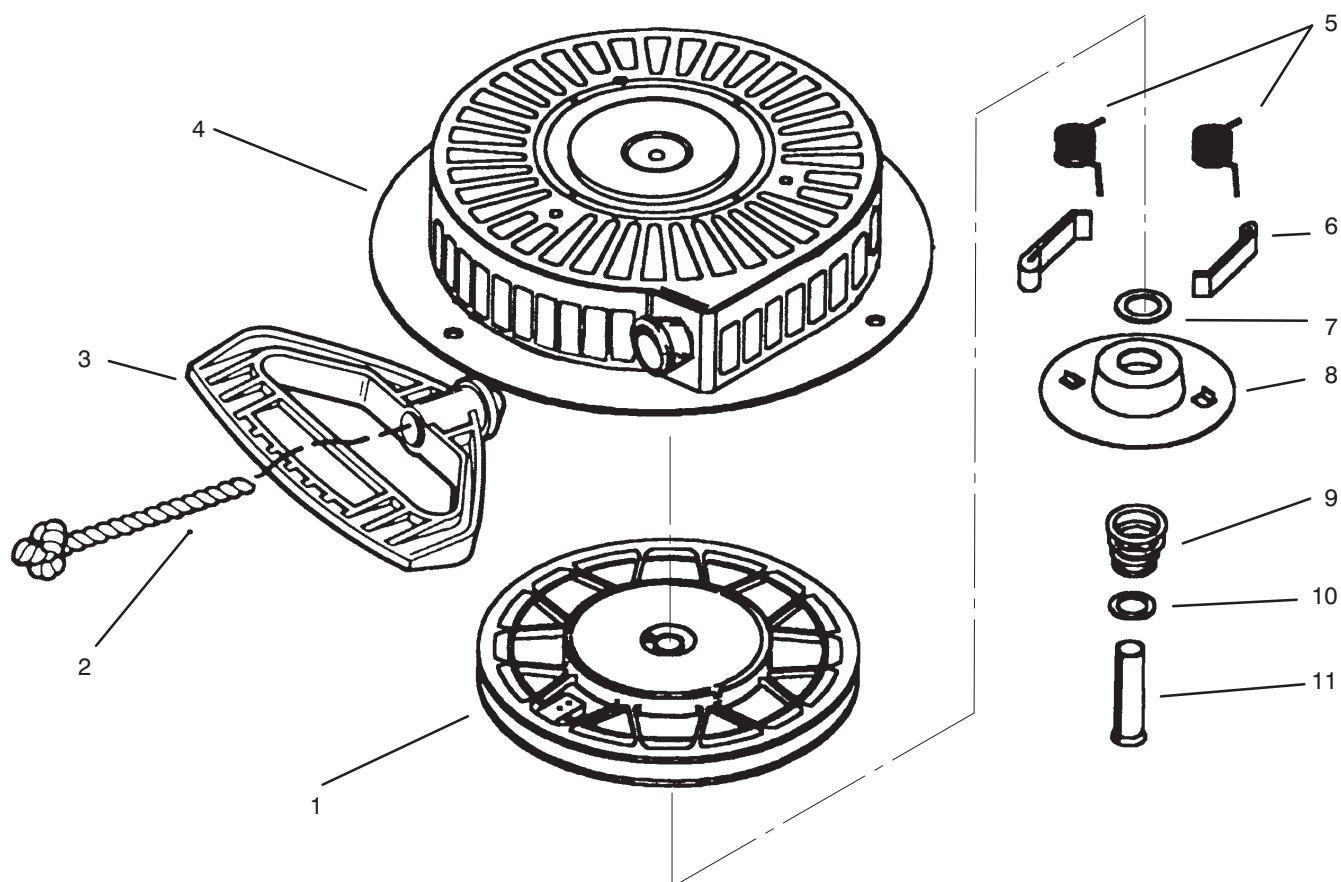


C-

REWIND STARTER TECUMSEH NO. 590733

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	590709	Pulley & Rewind Spring Assembly	1	7	590601	Washer	1
2	590535	Rope – Starter	1	8	590676	Retainer	1
‡3	590574	Handle – Mitten Grip	1	9	590697	Spring – Brake	1
4	590534	Starter Housing Asm	1	10	590600	Washer	1
5	590699	Spring – Dog	2	11	590599A	Pin – Spring (Incl. Ref. #7)	1
6	590698	Dog – Starter	2				

‡Not Included in Starter Assembly.

ENGINE TECUMSEH MODEL NO. HMSK80-155386T

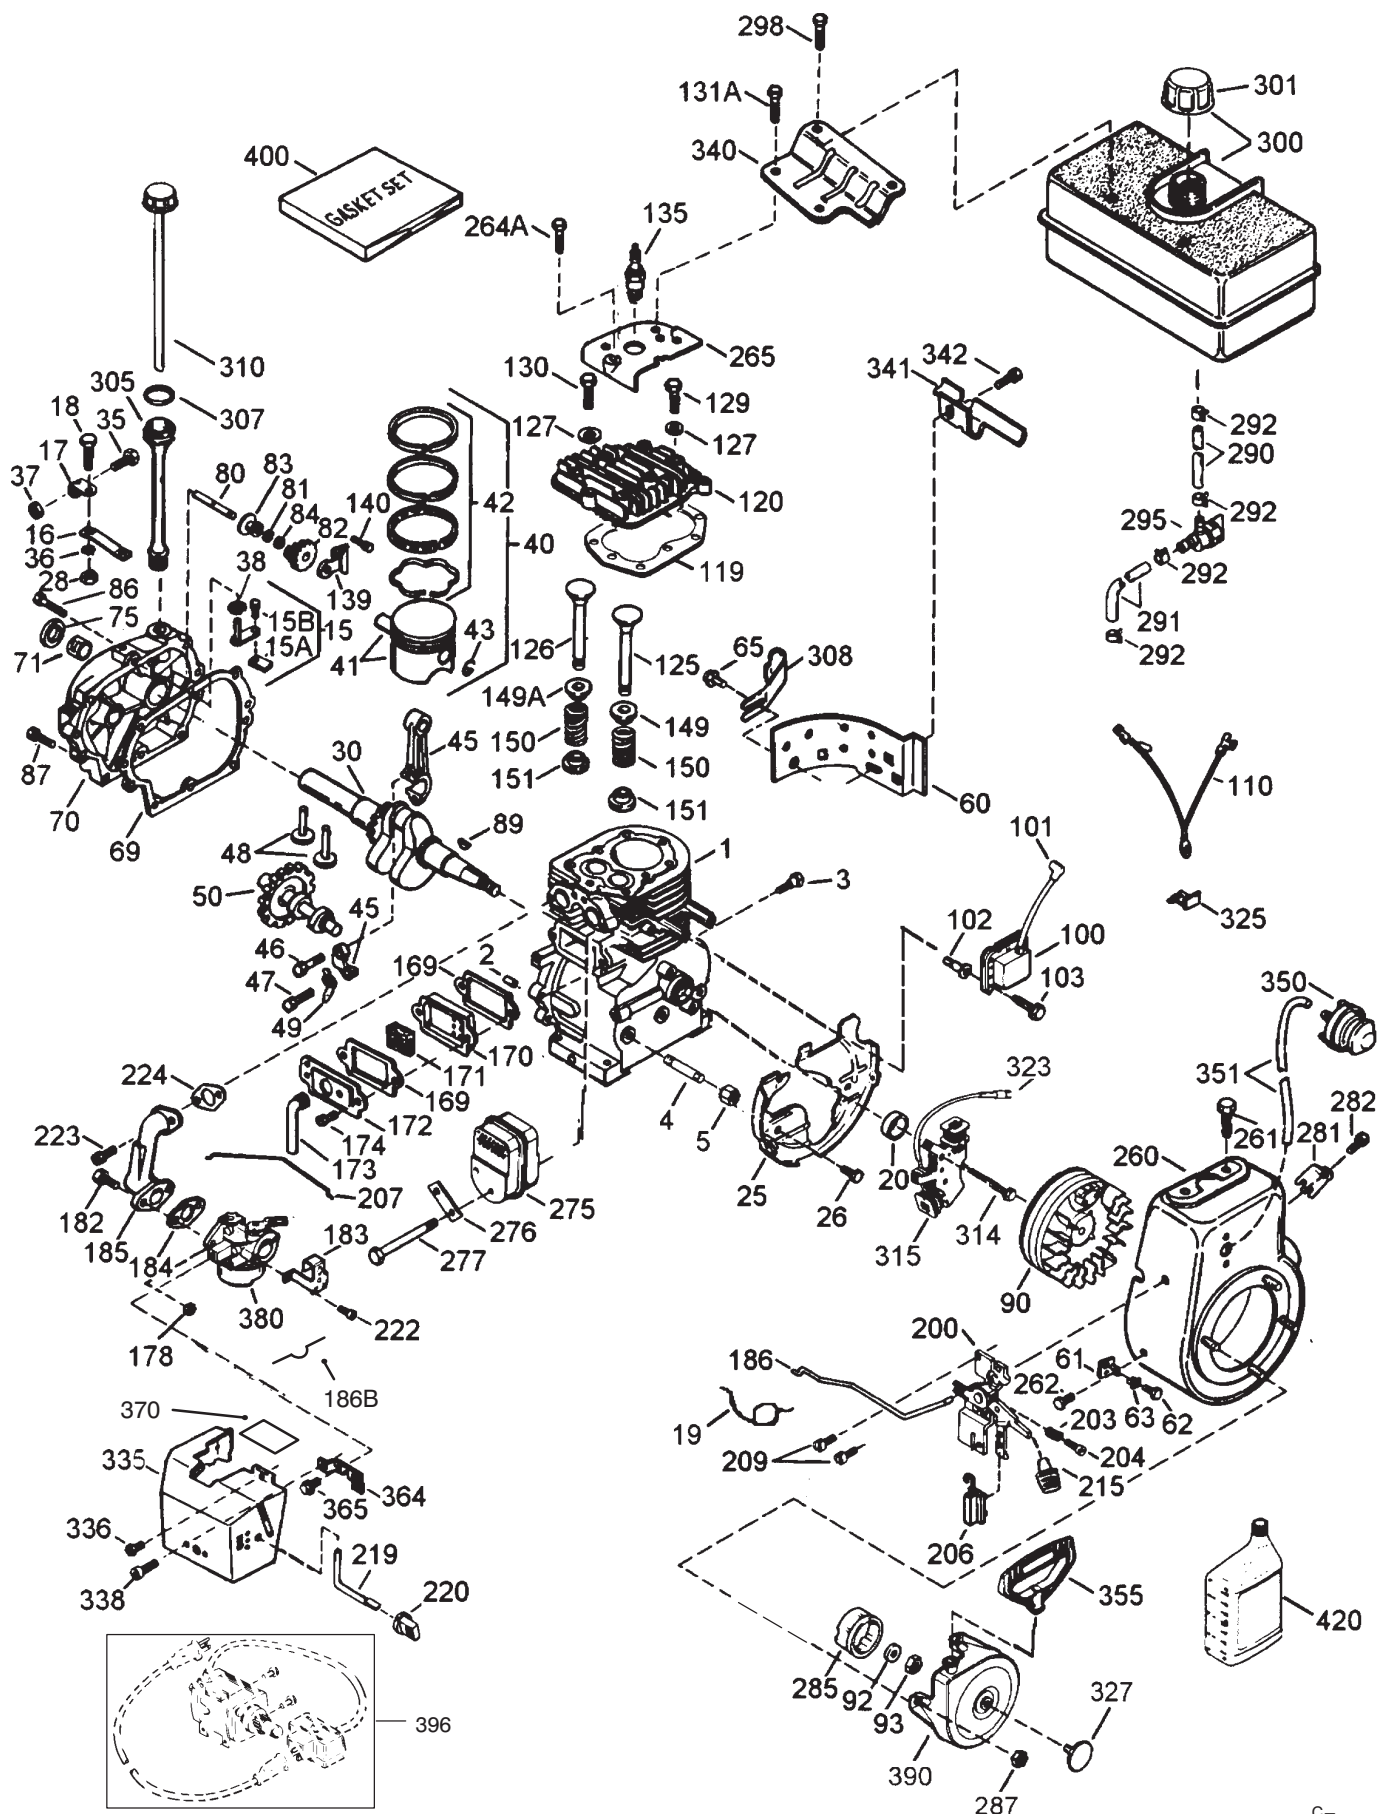

ENGINE TECUMSEH MODEL NO. HMSK80-155386T

Ref. No.	Part No.	Description	No. Used
1	35385	Cylinder Asm (Incl. Ref. #2, 20, & 72)	1
2	27652	Dowel Pin	2
3	650820	Screw	2
4	XXXXX	Oil Drain Extension	1
5	30969	Extension Cap	1
15	30699C	Governor (Incl. Ref. #15A & 15B)	1
15A	30700	Governor Yoke	1
15B	650494	Screw	1
16	33454	Governor Lever	1
17	29916	Governor Lever Clamp	1
18	650548	Screw	1
19	34663	Spring - Speed Control	1
20	35319	Oil Seal	1
25	36460	Blower Housing Baffle	1
26	650561	Screw	2
28	30322	Lock Nut	1
30	35571A	Crankshaft	1
35	29826	Screw	1
36	29918	Lock Washer	1
37	29216	Lock Nut	1
38	29642	Retaining Ring	1
40	34552	Piston, Pin & Ring Set (Std.)	1
40	34553	Piston, Pin & Ring Set (.010" OS)	1
40	34554	Piston, Pin & Ring Set (.020" OS)	1
41	34329A	Piston & Pin Asm (Std.) (Incl. Ref. #43)	1
41	34330A	Piston & Pin Asm (.010" OS) (Incl. Ref. #43)	1
41	34331A	Piston & Pin Asm (.020" OS) (Incl. Ref. #43)	1
42	34332	Ring Set (Std.)	1
42	34333	Ring Set (.010" OS)	1
42	34334	Ring Set (.020" OS)	1
43	27888	Piston Pin Retaining Ring	2
45	35373A	Connecting Rod Asm (Incl. Ref. #46, 47, & 49)	1
46	650908	Connecting Rod Bolt	1
47	650882	Connecting Rod Bolt	1
48	34034	Valve Lifter	2
49	35374	Oil Dipper	1
50	35375	Camshaft (MCR)	1
60	33273A	Blower Housing Extension	1
61	34126	Grommet Mounting Bracket	1
62	650760	Screw	1
63	28545	Grommet	1
65	650128	Screw	1
*69	35262A	Cylinder Cover Gasket	1
70	35376	Cylinder Cover (Incl. Ref. #71, 75, & 80)	1
71	35377	Crankshaft Bushing	1

Ref. No.	Part No.	Description	No. Used
75	35319	Oil Seal	1
80	31845	Governor shaft	1
81	30590A	Washer	1
82	35378	Governor Gear Asm (Incl. Ref. #81)	1
83	30588A	Governor Spool	1
84	29193	Retaining Ring	1
86	650833	Screw	7
87	650832	Screw	1
89	32589	Flywheel Key	1
90	611093	Flywheel (W/Ring Gear)	1
92	650880	Lock Washer	1
93	650881	Flywheel Nut	1
100	35135	Solid State Ignition	1
101	610118	Spark Plug Cover	1
102	650872	Solid State Mounting Stud	2
103	651007	Screw, Torx T-15	2
110	35253	Ground Wire	1
*119	36448	Cylinder Head Gasket	1
120	36449	Cylinder Head	1
125	27878A	Exhaust Valve (Std.) (Incl. Ref. #151)	1
125	27880A	Exhaust valve (1/32" OS) (Incl. Ref. #151)	1
126	34035	Intake Valve (Std.) (Incl. Ref. #151)	1
126	34036	Intake Valve (1/32" OS) (Incl. Ref. #151)	1
127	650691	Washer	2
129	650727	Screw	2
130B	6021A	Screw	7
131A	650713	Screw	2
135	35395	Resistor Spark Plug (RJ19LM)	1
139	33369	Governor Gear Bracket	1
140	650836	Screw	2
149	27882	Valve Spring Cap	1
149A	35862	Valve Spring Cap	1
150	27881	Valve Spring	2
151	32581	Valve Spring Keeper	2
*169	27896A	Valve Cover Gasket	2
170	28423	Breather Body	1
171	28424	Breather Element	1
172	28425	Valve Cover	1
173	35350	Breather Tube	1
174	650128	Screw	2
178	29752	Nut & Lock Washer	2
182	30088A	Screw	2
183A	34587	Choke Bracket	1
*184	33263	Carburetor To Intake Pipe Gasket	1
185	33877	Intake Pipe	1
186	34667	Governor Link	1
186A	36652	Spring - Choke	1

*Included in Gasket Set 36450

ENGINE TECUMSEH MODEL HMSK80—155386T (Cont.)

Ref. No.	Part No.	Description	No. Used
200	34677	Control Bracket (Incl. Ref.#19, 203, 204 & 206)	1
203	31342	Compression Spring	1
204	650549	Screw	1
206	610973	Terminal	1
207	33878	Throttle Link	1
209	650821	Screw	2
215	35440	Control Knob	1
219	34586	Choke rod	1
220	35438	Choke Knob	1
222	28820	Screw	2
223	650378	Screw, Torx T—30	2
*224	27915A	Intake Pipe Gasket	1
260	35447A	Blower Housing	1
261	650788	Screw	2
262	29747B	Screw, Torx T—40	2
264A	650802	Screw	1
265	33272B	Cylinder Head Cover	1
275	35056	Muffler	1
276	31588	Locking Plate	1
277	651007	Screw	2
281	33013	Starter bubble Cover	1
282	650760	Screw	1
285	35985B	Starter Cup	1
287	29752	Nut & Lock Washer	4
290	29774	Fuel Line	1
291	30705	Fuel Line	1
292	26460	Fuel Line Clamp	4
295	35857	Fuel shut—Off Valve	1
298	650665	Screw	2

Ref. No.	Part No.	Description	No. Used
300	34156A	Fuel Tank (Incl. Ref. #292 & 301)	1
301	35355	Fuel Cap	1
305	35554	Oil fill Tube	1
307	35499	"O" Ring	1
308	35540	Fill Tube Clip	1
310	36205	Dipstick	1
314	650873	Screw	1
315	611111	Alternator Coil (18 Watt) (Incl. Ref. #323)	1
323	611118	Terminal	1
325	29443	Wire Clip	1
327	35392	Starter Plug	1
335	35057A	Carburetor Cover	1
336	650765	Screw	1
338	28942	Screw	2
340	34155	Fuel Tank Bracket	1
341	34154	Fuel Tank Bracket	1
342	650561	Screw	1
350	570682	Primer Bulb	1
351	32180C	Primer Line	1
355	590574	Starter Handle	1
364	33377	Carburetor Cover Bracket	1
365	650767	Screw	2
380	632334A	Carburetor (Incl. Ref. #184)	1
390	590733	Rewind Starter	1
396	33329D	Electric Starter Motor, 120 Volt (Optional)	1
400	36450A	Gasket Set	1
420	730226	SAE 5W30 4—Cyc. Eng. Oil	1

*Included in Gasket Set 36450

[illegible]

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]