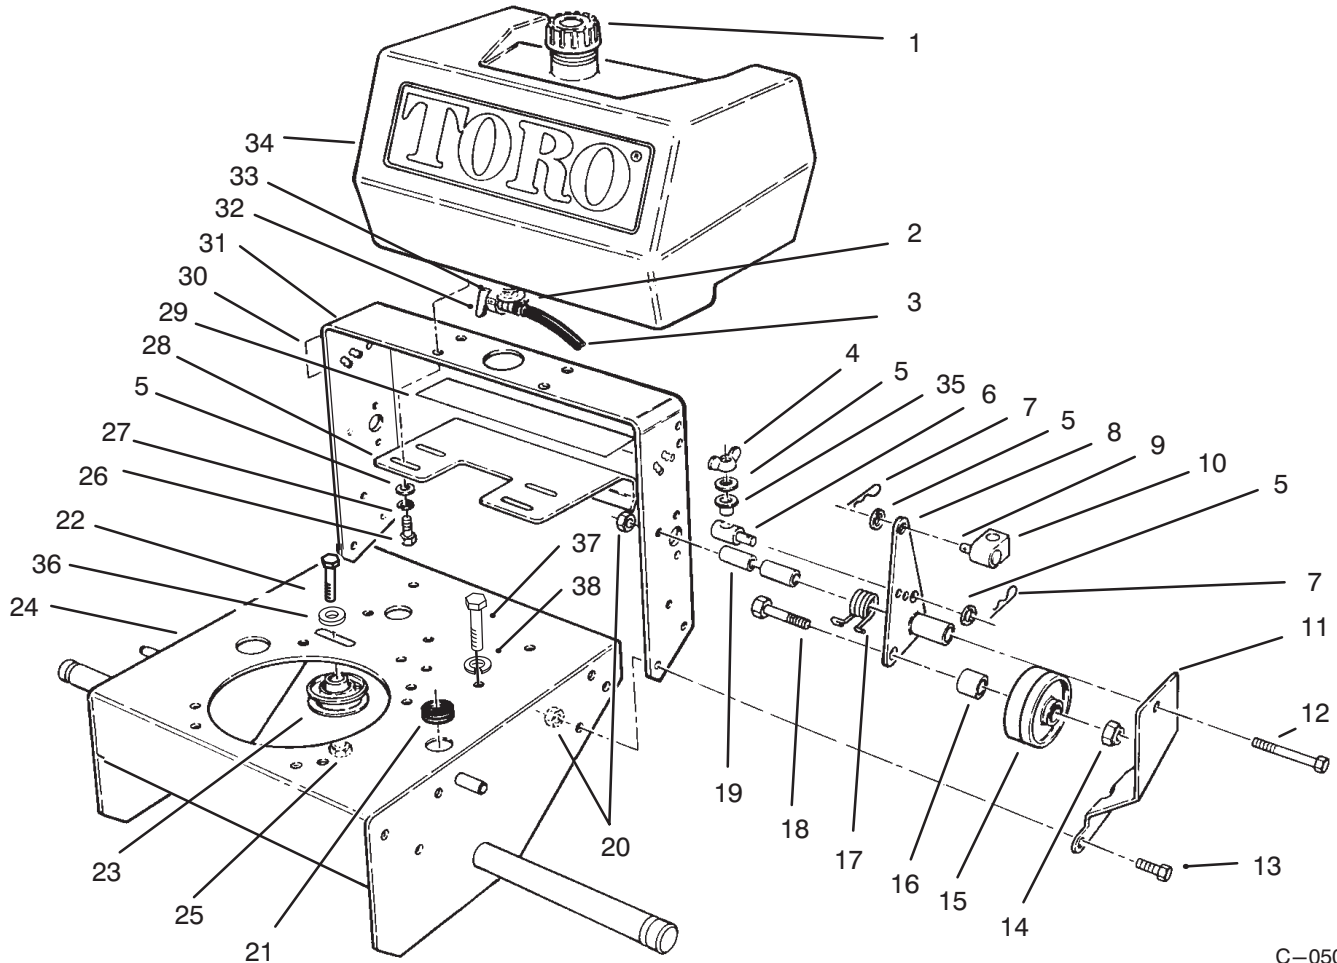


TORO[®]

MODEL NO. 30157- 690001 & UP

**PARTS
CATALOG****PROLINE MID-SIZE TRACTION UNIT
12.5HP KOHLER GEAR DRIVE**

C-0505A

FRAME ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	55-3570	Cap - Fuel Tank	1
2	2412-98	Clamp - Fuel line	1
3	47-2982	Hose - Fuel	1
4	32103-25	Nut - Wing	2
5	3256-23	Washer - Flat	10
6	68-9690	Fitting - Rod	2
7	3290-307	Pin - Cotter	4
8	74-0220	Idler - Bracket L.H.	1
*	74-0230	Idler - Bracket R.H.	1
9	283-6	Pin - Clevis	2
10	74-0521	Fitting - Rod	2
11	67-6380	Bracket - Support L.H.	1
*	67-6370	Bracket - Support R.H.	1
12	323-16	Screw - Hex. Hd.	2
13	323-6	Screw - Hex. Hd.	6
14	3296-23	Nut - Lock	2
15	51-4480	Idler - Wheel	2

Ref. No.	Part No.	Description	No. Used
16	51-4490	Spacer - Idler Wheel	2
17	51-4380	Spring - Torsion L.H.	1
*	51-4370	Spring - Torsion R.H.	1
18	51-4450	Screw - Leveler	2
19	74-0040	Spacer - Pivot Idler	4
20	3296-39	Nut - Lock	8
21	237-124	Grommet	1
22	323-9	Screw - Hex. Hd.	1
23	51-4810	Pulley - Idler	1
24	93-1161	Frame	1
25	32128-21	Nut - Hex. Flange	1
26	322-4	Screw - Hex. Hd.	4
27	3253-4	Washer - Lock	4
28	66-7400	Plate - Control	1
29	82-7750	Decal - Ground Speed	1
30	74-0490	Decal - Fuel Shut Off	1
31	74-0360	Frame - Rear	1

*Not Illustrated

© The TORO Company -1995
All Rights Reserved

TPS

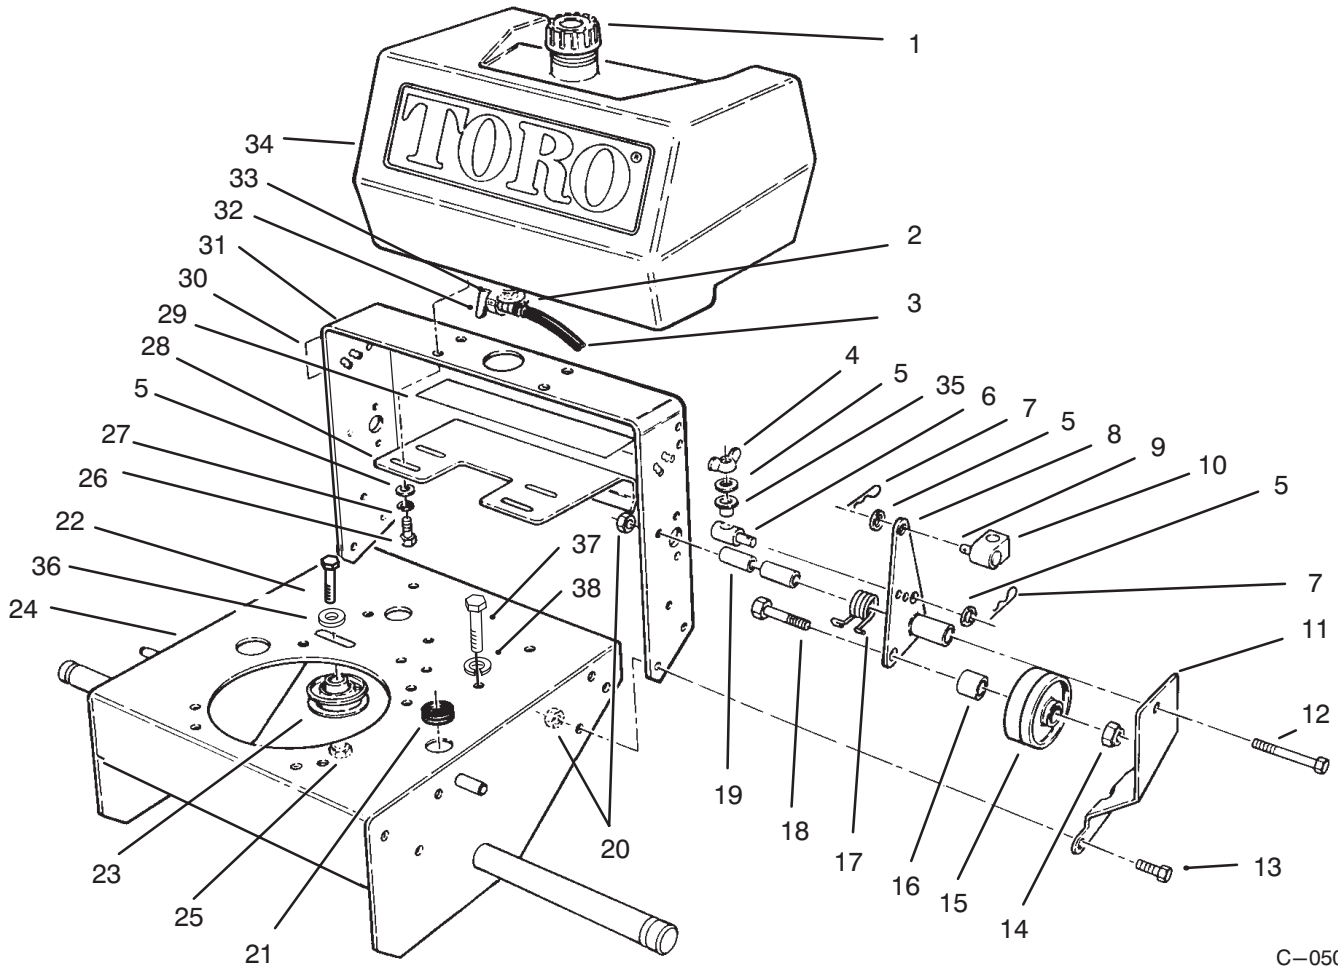


C-0505A

FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
32	74-0510	Valve - Fuel	1
33	237-7	"O"Ring	1
34	82-8440	Fuel Tank Assembly (Incl. Ref. # 32 & 33)	1

Ref. No.	Part No.	Description	No. Used
35	52-2890	Bushing	2
36	3256-24	Washer - Flat	1
37	12-3270	Screw - Hex Head	1
38	3255-7	Washer - Lock	2


*Not Illustrated

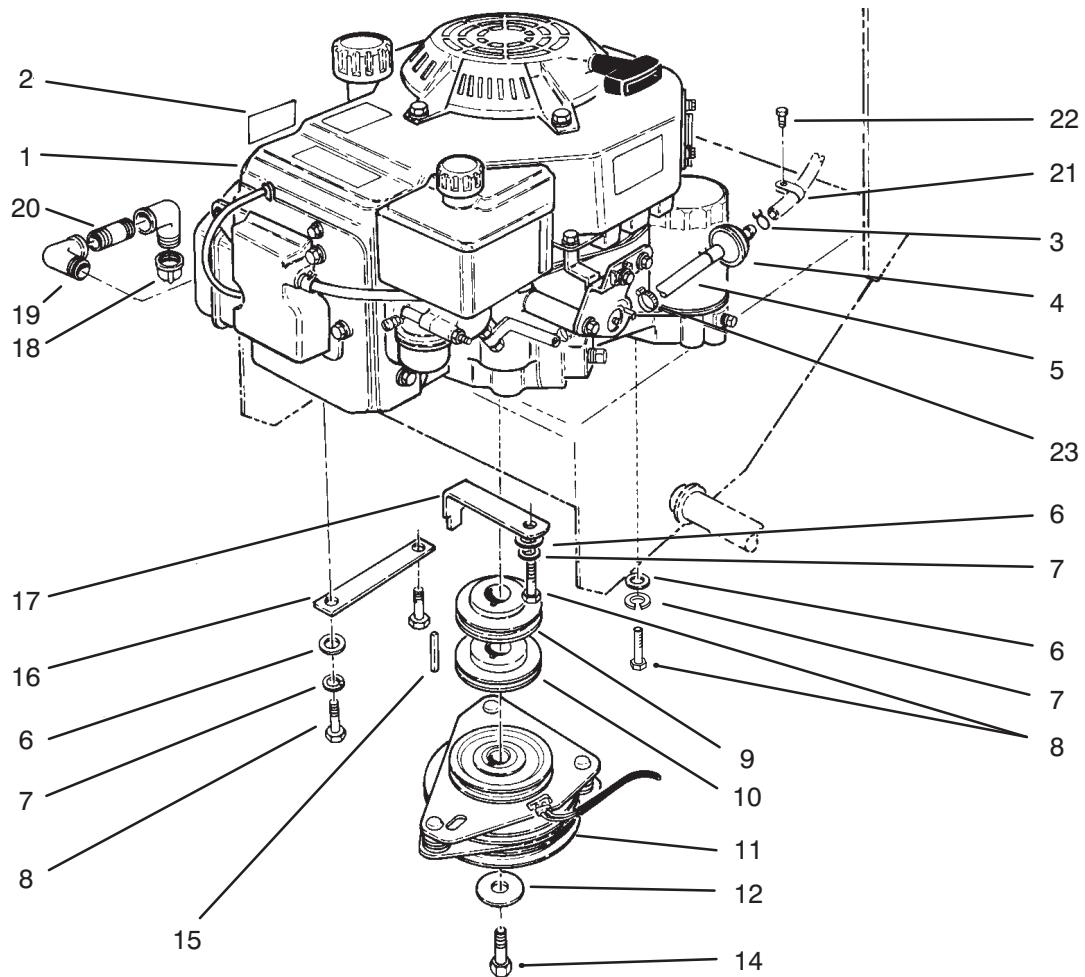

C-0501A

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Engine (Kohler 12.5 Hp Model CV12.5T-PS1254)	1	12	112843	Washer - PTO	1
2	63-8440	Decal - Hot	1	14	57-6360	Screw - Hex. Hd.	1
3	2412-98	Clamp - Fuel Filter	2	15	608006	Key - Crankshaft	1
4	56-6360	Filter - Fuel	1	16	74-0930	Guard - Pulley	1
5	47-2964	Line - Fuel	1	17	51-4540	Retainer - Clutch	1
6	3256-23	Washer - Flat	6	18	288-4	Cap - Pipe	1
7	3253-4	Washer - Lock	4	19	74-0950	Elbow	2
8	57-6380	Screw - Hex. Hd.	4	20	289-51	Nipple	1
9	74-0060	Sheave - Upper Half	1	21	2412-87	Clamp	1
10	74-0050	Sheave - Lower Half	1	22	32144-19	Screw	1
11	54-3200	Clutch Assembly	1	23	2412-108	Clamp	1

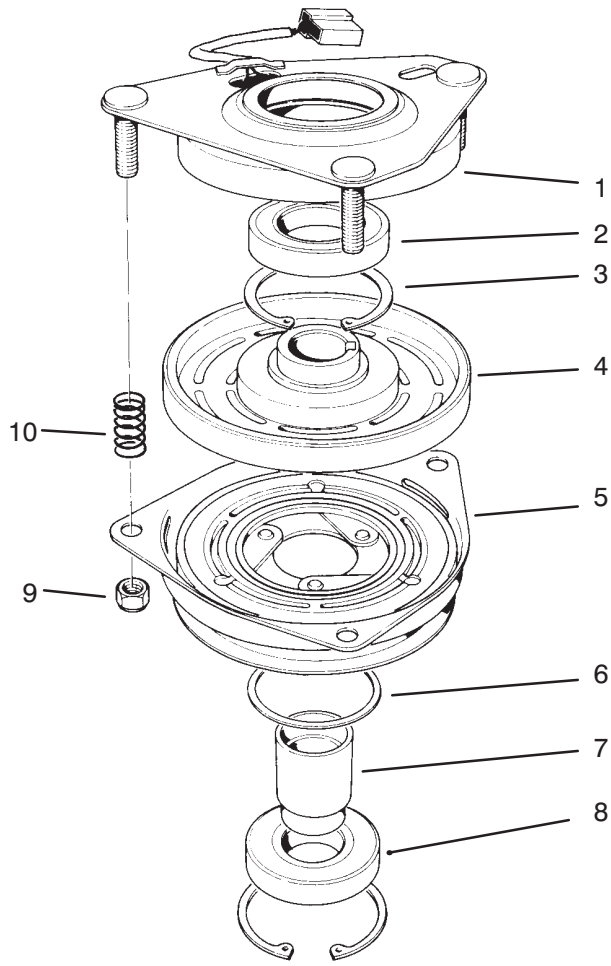


T-0080

CLUTCH ASSEMBLY NO. 54-3200

Ref. No.	Part No.	Description	No. Used
1	54-0230	Field Assembly (Incl. Ref. #2 & 3)	1
2	251-292	Bearing - Field	1
3	44-8310	Ring - Retaining	2
4	44-8360	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)	1
5	55-7410	Armature & Pulley Assembly (Incl. Ref. #3, 6, 7, & 8)	1

Ref. No.	Part No.	Description	No. Used
6	44-8330	Spacer - Pulley Bearing	1
7	44-8340	Collar - Bearing	1
8	251-291	Bearing - Pulley	1
9	3296-5	Nut - Lock	3
10	44-8320	Spring	3

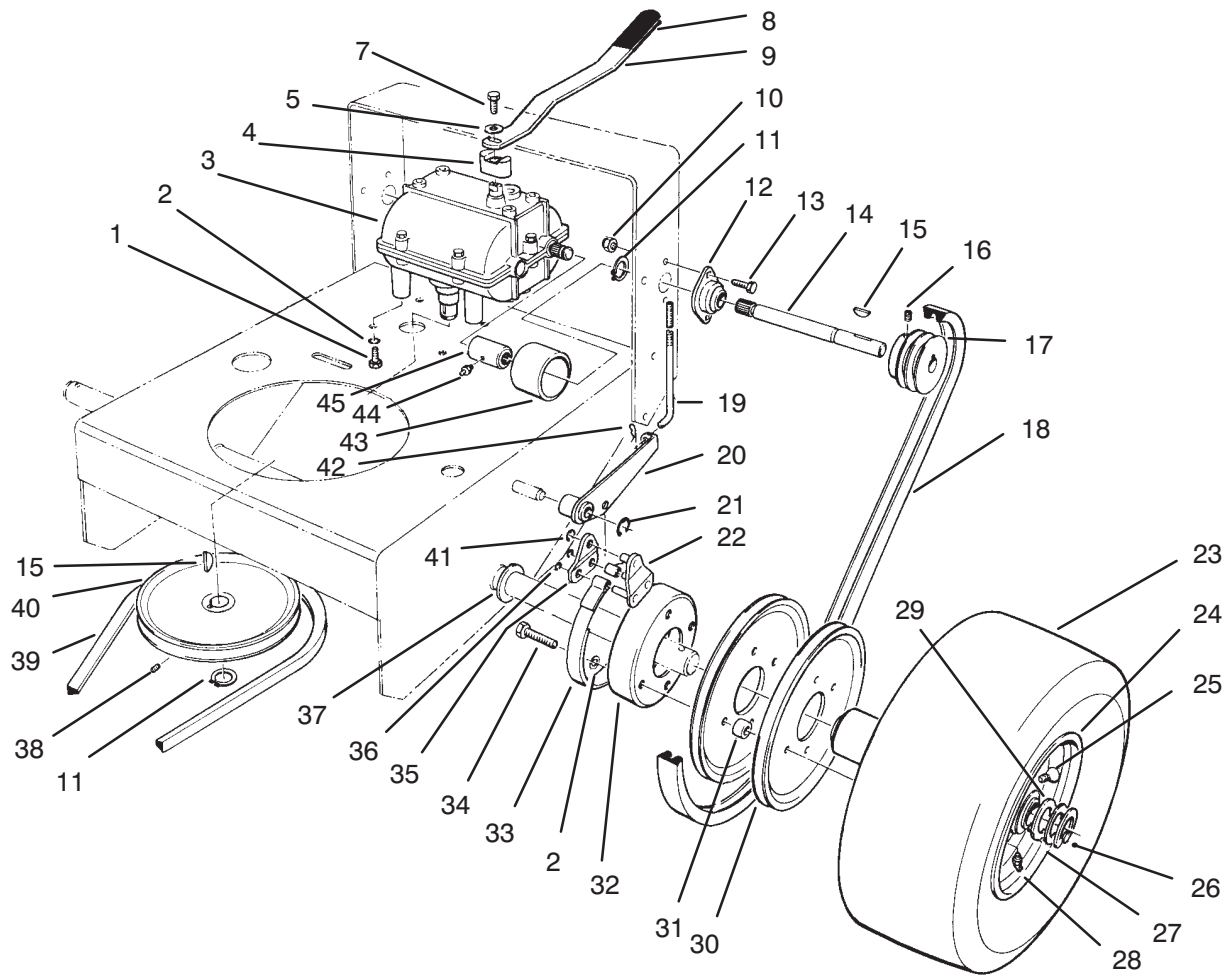


C-0502

AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-2	Screw - Hex. Hd.	4
2	3253-4	Washer - Lock	12
3	74-0610	Transmission	1
4	72-2190	Mount - Shift Lever	1
5	7-5461	Spacer	1
7	329-10	Screw - Hex. Hd.	1
8	47-1970	Grip - Engagement	1
9	74-0320	Lever - Shift	1
10	3296-42	Nut - Lock	4
11	32120-64	Ring - Retaining	3
12	51-4270	Bearing - Shaft Extension	2
13	321-4	Screw - Hex. Hd.	4
14	51-4240	Shaft - Extension R.H.	1
*	51-4250	Shaft - Extension L.H.	1
15	3257-5	Key - Woodruff	3
16	3245-3	Screw - Socket Hd. Set	2
17	74-0480	Pulley - Drive	2
18	51-4291	Belt - Drive	2
19	51-4580	Rod - Brake	2
20	67-6420	Brake Arm L.H.	1
*	67-6400	Brake Arm R.H.	1
21	32151-40	Ring - Retaining	2
22	51-4650	Link - Brake	2

Ref. No.	Part No.	Description	No. Used
23	231-94	Tire	2
24	93-1181	Rim	2
25	232-27	Valve Stem	2
26	32151-91	Ring - Retaining	2
27	92-1746	Bearing	4
28	302-57	Fitting - Grease	2
29	10-8110	Washer - Flat	A/R
30	51-4160	Pulley - Wheel	4
31	51-4170	Spacer - Pulley	8
32	51-4180	Drum - Brake	2
33	51-4700	Brake Band Assembly	2
34	322-7	Screw - Hex. Hd.	8
35	51-4660	Plate - Link Brake	2
36	32151-72	Ring - Retaining	4
37	51-4230	Washer - Wheel	2
38	3245-1	Screw - Socket Hd. Set	1
39	26-9671	Belt - Traction	1
40	51-4190	Pulley - Driven	1
41	32151-56	Ring - Retaining	2
42	3290-307	Pin - Cotter	2
43	51-4220	Guard - Coupler	2
44	302-5	Fitting - Grease	2
45	51-4260	Coupler	2

*Not Illustrated

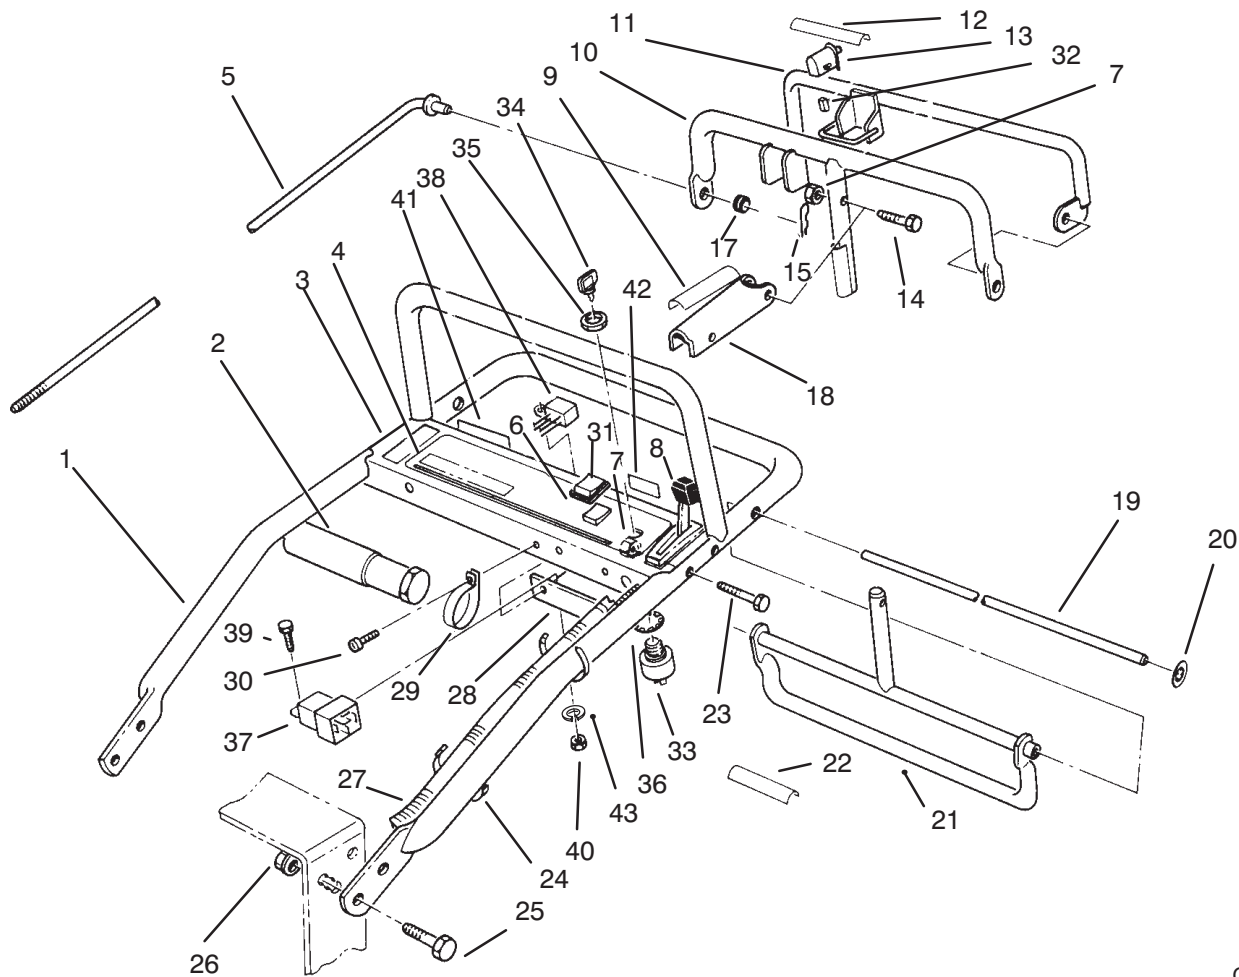


C-0686

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-6440	Handle - Upper	1
2	74-0720	Tube - Manual	1
3	82-2180	Panel - Control	1
4	82-7730	Decal - Proline	1
5	82-7632	Rod - Control	2
6	82-2300	Switch - Clutch	1
7	3296-2	Nut - Lock	5
8	74-0630	Control - Throttle	1
9	52-2010	Decal - Parking Brake	1
10	82-7690	Bar - Control	1
11	82-7680	Bail - Handle	1
12	82-2290	Decal - Control Bar	1
13	82-2190	Switch - Bail	1
14	32105-1	Screw - Hex. Hd. Machine	1
15	3290-307	Pin - Cotter	2
17	237-141	Grommet - Rubber	2
18	51-4850	Lever - Brake, Parking	1
19	74-0470	Rod - Pivot	1
20	32151-80	Ring - Push On	2
21	74-0380	Control - Pivot	1
22	82-2280	Decal - Reverse Handle	1
23	32105-14	Screw - Hex. Hd. Machine	4

Ref. No.	Part No.	Description	No. Used
24	3290-378	Cable Tie	2
25	3234-11	Screw - Hex. Hd.	4
26	32128-21	Nut - Hex. Flange	4
27	82-2260	Wire Harness	1
28	57-5811	Panel - Bottom	1
29	2412-120	"R" Clamp	2
30	32144-19	Screw - Self Tapping	4
31	82-3820	Boot - Switch	1
32	218-595	Connector - Body	1
33	29-5560	Switch - On/Off (Incl. Ref. #34-36)	1
34	63-8360	Key	2
35	218-461	Nut	1
36	3254-5	Washer - Lock	1
37	63-7590	Relay	1
38	86-7910	Module - Interlock	1
39	321-2	Screw - Hex. Hd.	2
40	3296-42	Nut - Lock	2
41	71-1280	Decal - Danger	1
42	65-3090	Decal - Instructions	1
43	3255-7	Washer - Lock	2

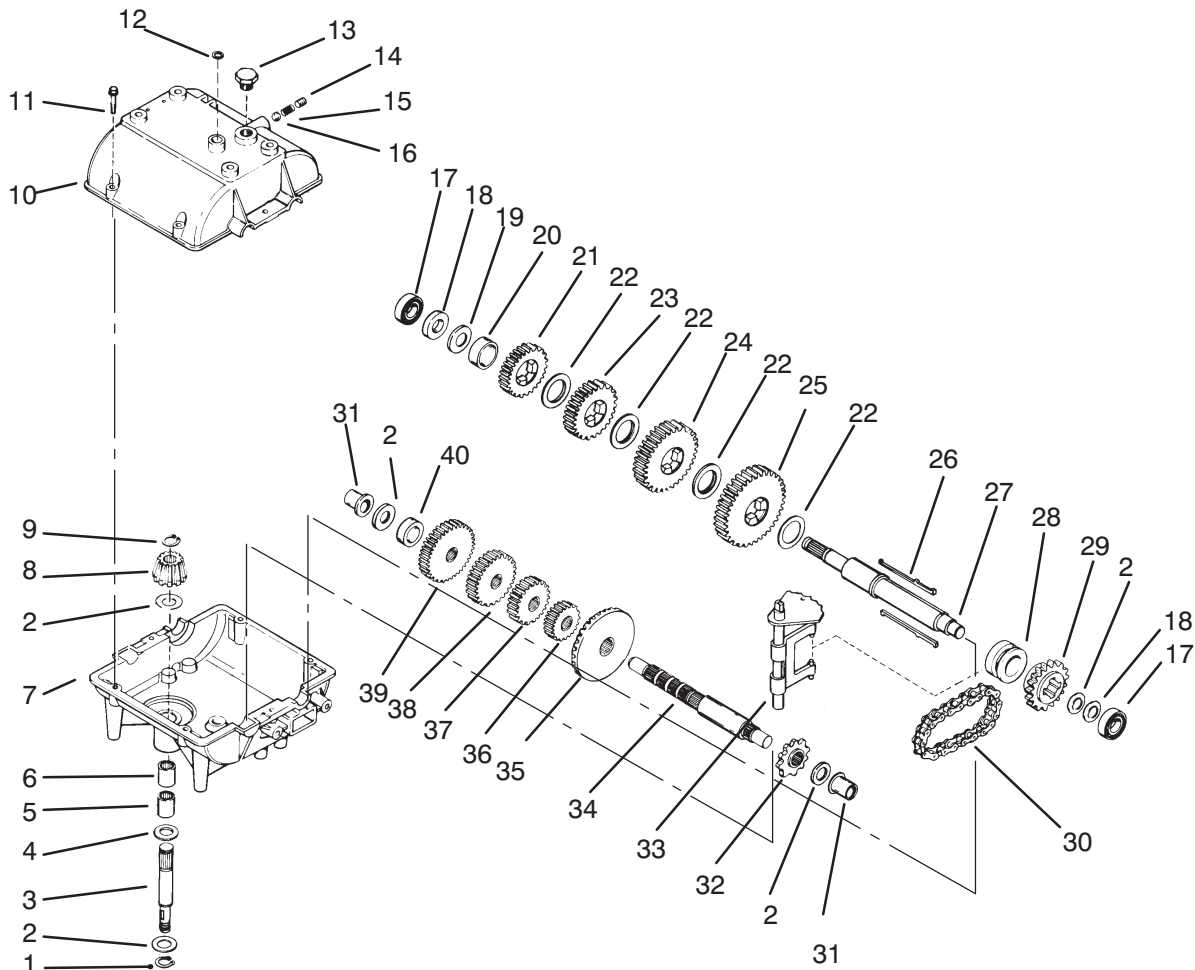


C-1776

PEERLESS TRANSMISSION MODEL NO. 700-039

Ref. No.	Part No.	Description	No. Used
1	792035	Ring – Retaining	1
2	780072	Washer – Thrust	5
3	776135	Shaft – Input	1
4	792001	”O”Ring	2
5	780142	Bearing – Needle	1
6	780086	Bearing – Needle	1
7	770090A	Case – Transmission	1
8	778153	Bevel Pinion – Input	1
9	788040	Ring – Retaining	1
10	772099A	Cover – Transmission	1
11	792073	Screw – Self Tapping	6
12	788069	Seal – Square Cut	1
13	792074	Plug – Threaded	1
14	792078	Screw – Set	1
15	792079	Spring	1
16	792077	Ball – Steel	1
17	780092	Bearing – Ball	2
18	780065	Washer – Thrust	2
19	780139	Washer – Thrust	1
20	786072	Spacer	1
21	778123A	Gear – Spur (25 Teeth)	1

Ref. No.	Part No.	Description	No. Used
22	780108	Washer – Thrust	4
23	778250	Gear – Spur (27 Teeth)	1
24	778124A	Gear – Spur (30 Teeth)	1
25	778125	Gear – Spur (35 Teeth)	1
26	792089A	Key	4
27	776289A	Shaft – Output & Brake	1
28	784266	Collar – Shift	1
29	786083	Sprocket (18 Teeth)	1
30	786081	Chain – Roller (No. 41 Chain 24 Links)	1
31	780105A	Bushing – Flanged	2
32	786082	Sprocket (9 Teeth)	1
33	784267	Rod & Fork Ass’y – Shift	1
34	776134	Shaft – Counter	1
35	778154	Gear – Bevel (42Teeth)	1
36	778136	Gear – Spur (15 Teeth)	1
37	778126A	Gear – Spur (20 Teeth)	1
38	778249	Gear – Spur (23 Teeth)	1
39	778127A	Gear – Spur (25 Teeth)	1
40	786071	Spacer	1

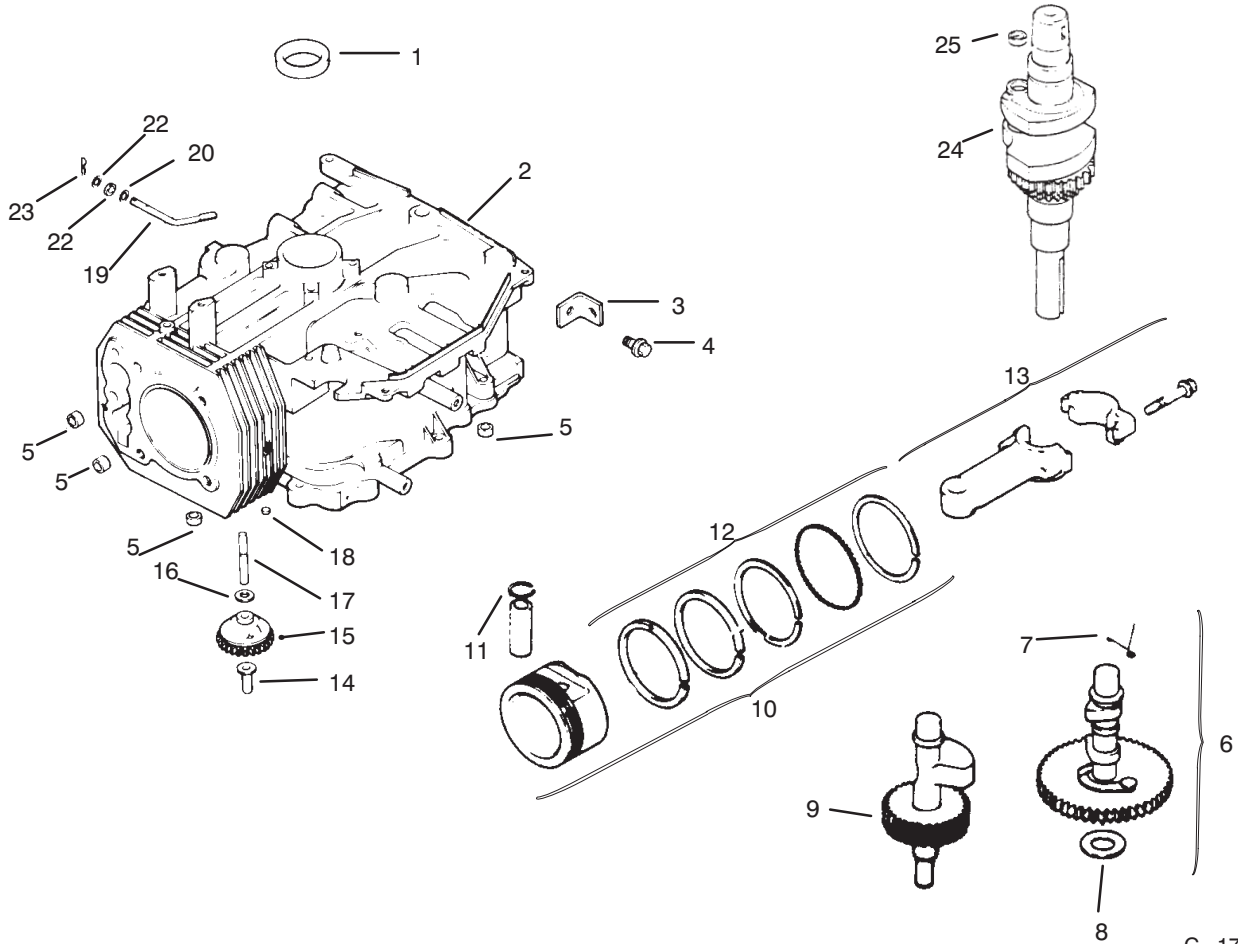


C-1792

CRANKCASE

Ref. No.	Part No.	Description	No. Used
1	12 032 03	Seal - Crankshaft	1
2	12 522 22	Short Block	1
3	12 445 02	Strap - Lifting	1
4	M-0839025	Screw - Lifting Strap	1
5	12 380 03	Dowel - Locating	4
6	12 755 50	Camshaft Assembly	1
7	12 089 18	Spring - Actuating	1
8	12 422 08	Shim - Camshaft	1
*	12 422 09	Shim - Camshaft	A/R
*	12 422 10	Shim - Camshaft	A/R
*	12 422 11	Shim - Camshaft	A/R
*	12 422 12	Shim - Camshaft	A/R
*	12 422 13	Shim - Camshaft	A/R
*	12 422 07	Shim - Camshaft	A/R
9	12 144 19	Shaft - Balance	1
10	12 847 01	Piston W/Ring Set (Std.)	1
*	12 847 02	Piston W/Ring Set (.25)	1
*	12 847 03	Piston W/Ring Set (.50)	1
11	12 018 02	Retainer - Piston Pin	2

Ref. No.	Part No.	Description	No. Used
12	12 108 01	Ring Set (Std.)	1
*	12 108 02	Ring Set (.25)	1
*	12 108 03	Ring Set (.50)	1
13	12 067 05	Connecting Rod (Std.)	1
*	12 067 06	Connecting Rod (.25)	1
14	12 380 01	Pin - Governor Regulating	1
15	12 043 05	Gear - Governor Ass'y	1
16	M-0631005	Washer - Governor Gear	1
17	12 144 02	Shaft - Governor Gear	1
18	52 139 09	Plug - Cap	1
19	12 144 01	Shaft - Governor Cross	1
20	X-25-102	Washer	1
21	12 032 01	Seal - Cross Shaft	1
22	SM-0631015	Washer - Governor Shaft	1
23	12 380 04	Pin - Governor Hitch	1
		Crankshaft Group 1	
24	12 014 29	Crankshaft Assembly	1
25	12 139 01	Plug - Cup	1

*Not Illustrated

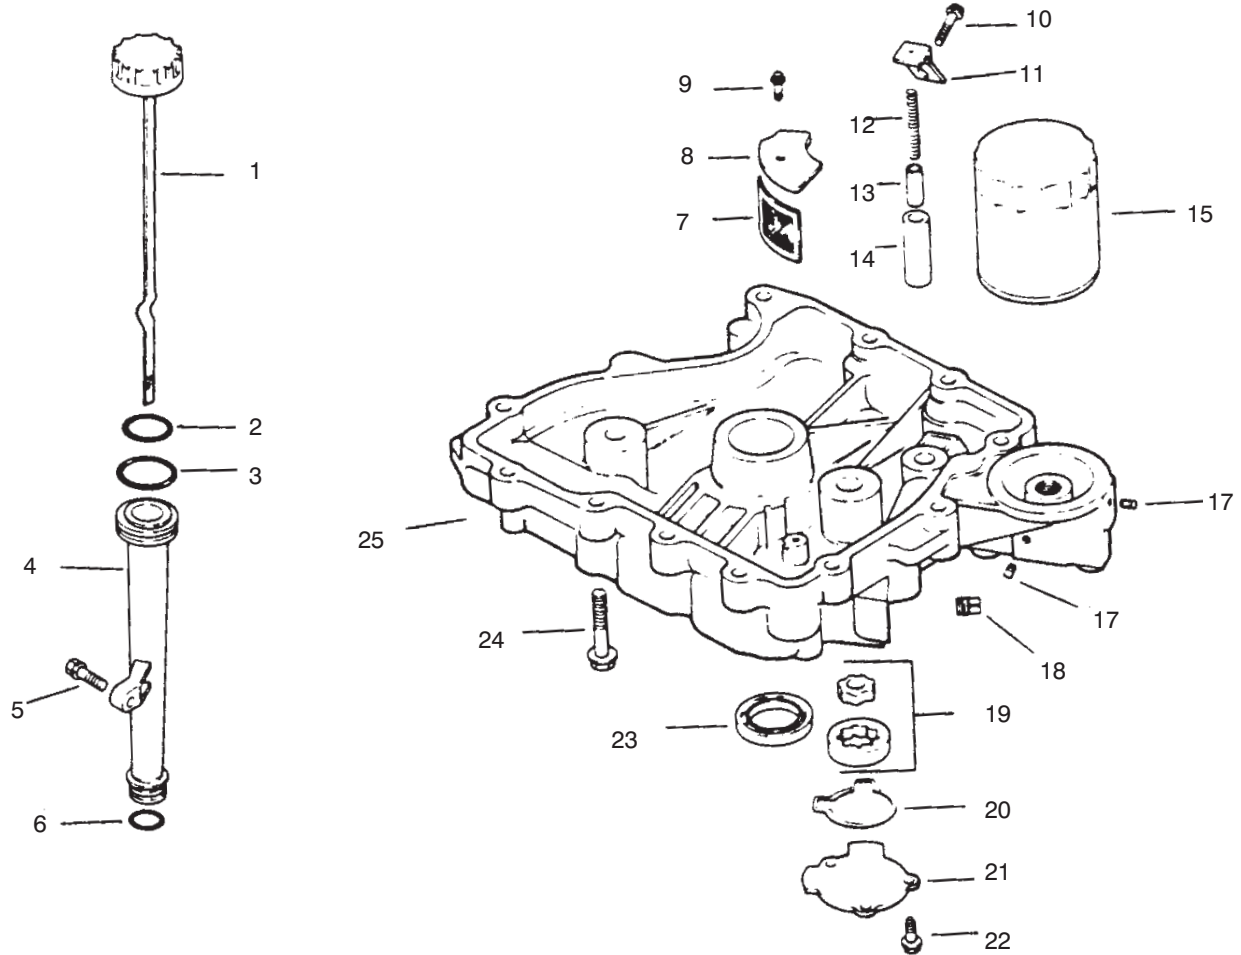


C-1794

OIL PAN / LUBRICATION

Ref. No.	Part No.	Description	No. Used
1	12 038 01	Dipstick Assembly	1
2	12 153 03	"O"Ring - Dipstick	1
3	12 153 02	"O"Ring - Upper Tube	1
4	12 123 04	Tube - Oil Fill	1
5	SM-0545020	Screw - Oil Fill Tube	1
6	12 153 01	"O"Ring - Lower Tube	2
7	25 162 07	Screen - Oil Pick Up	1
8	12 096 03	Cover - Oil Screen	1
9	SM-0545016	Screw	1
10	M-1039025	Screw	1
11	12 126 02	Bracket - Oil Pump Relief Valve	1
12	12 089 03	Spring - Oil Pump Relief Valve	1
13	12 462 01	Piston - Oil Pump	1

Ref. No.	Part No.	Description	No. Used
14	12 208 01	Relief Valve Body - Oil Pump Relief Valve	1
15	52 050 02	Filter - Oil	1
17	X-75-1	Plug - 1/8 N.P.T.F.	2
18	X-75-10	Plug - 3/8 N.P.T.F.	2
19	12 393 01	Pump - Oil Assembly	1
20	12 032 04	"O"Ring - Pump Cover	1
21	12 096 02	Cover - Oil Pump	1
22	SM-0545016	Screw	3
23	12 032 03	Seal - Oil (P.T.O.End)	1
24	SM-0839045	Screw - Oil Pan	11
25	12 199 21	Pan - Oil	1
*	25 755 13	Kit - Oil Fill Cap	1


*Not Illustrated

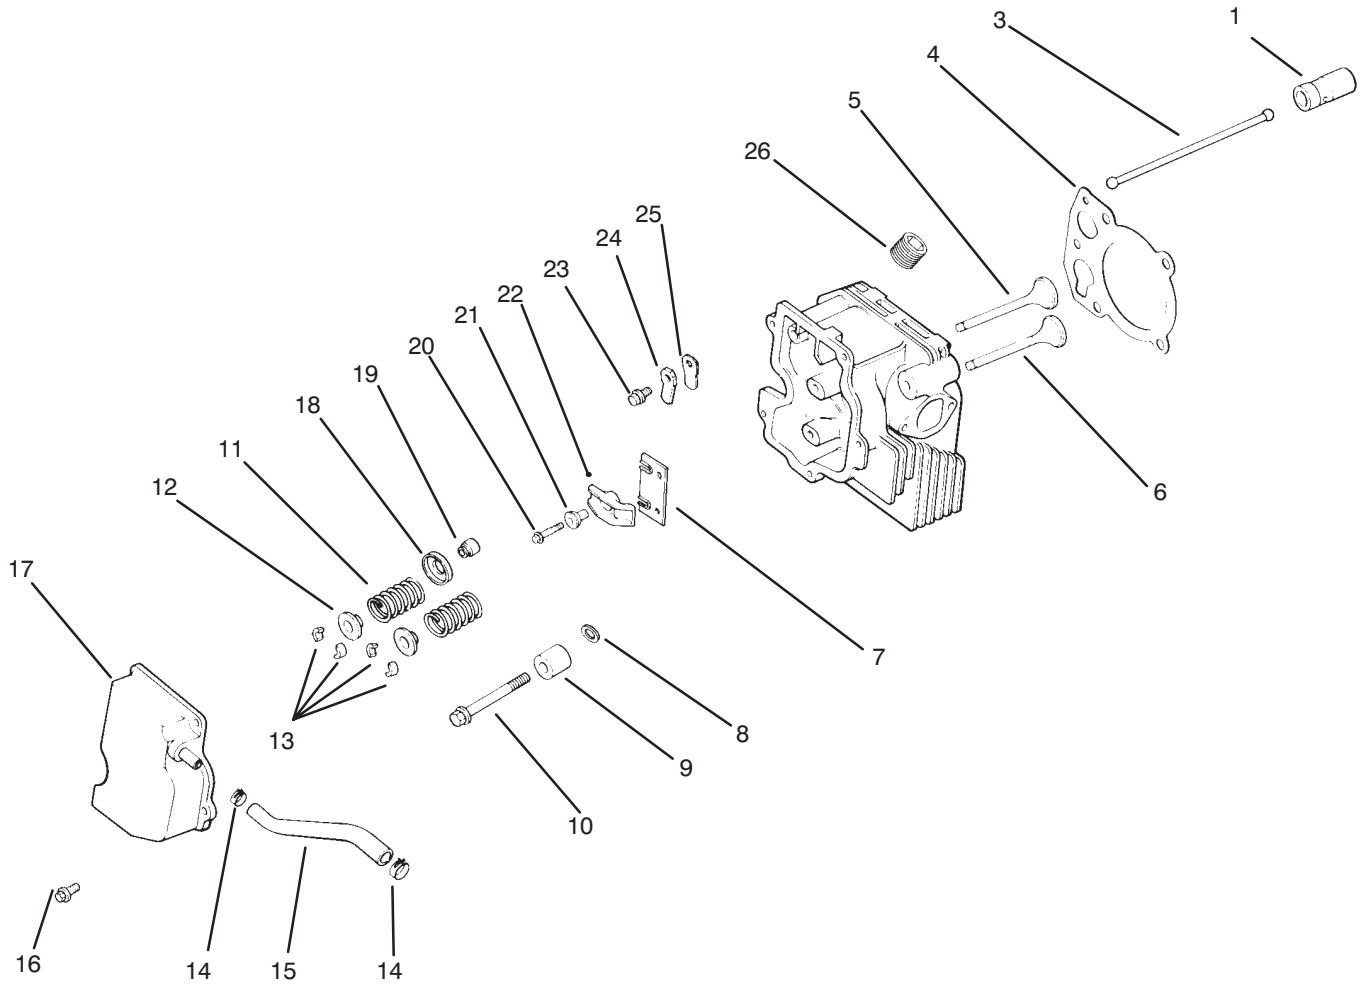

CYLINDER HEAD, VALVE & BREATHER

Ref. No.	Part No.	Description	No. Used
1	12 351 01	Lifter – Valve	2
3	12 411 01	Rod – Push	2
4	12 041 08	Gasket – Cylinder Head	1
5	12 017 01	Valve – Intake (Std.)	1
*	12 017 02	Valve – Intake (.25)	1
6	12 016 01	Valve – Exhaust (Std)	1
*	12 016 02	Valve – Exhaust (.25)	1
7	12 146 13	Plate – Guide	1
8	12 468 05	Washer – Flat	1
9	12 112 13	Spacer – Head Bolt	1
10	12 086 15	Screw – Cylinder Head	5
11	12 089 01	Spring – Valve	1
12	12 173 01	Cap – Valve Spring	2
13	12 755 03	Kit – Retainer	2
14	X-426-9	Clamp – Hose	2

Ref. No.	Part No.	Description	No. Used
15	12 326 03	Hose – Breather	1
16	M-0645020	Screw – Valve Cover	3
17	12 096 07	Cover – Valve W/Nipple	1
18	235011	Retainer – Spring	2
19	24 032 05	Seal – Valve Stem	1
20	M-0640034	Screw – Rocker Bridge	2
21	24 194 01	Pivot – Rocker Arm	2
22	24 186 03	Arm – Rocker	2
23	M-0545010	Screw – Breather Reed	1
24	12 018 01	Retainer – Breather Reed	1
25	12 402 02	Reed – Breather	1
26	X-75-23	Plug	1
*	12 755 58	Kit – Cylinder Head (Incl. Ref.#3-13, 18-22 & 26)	1

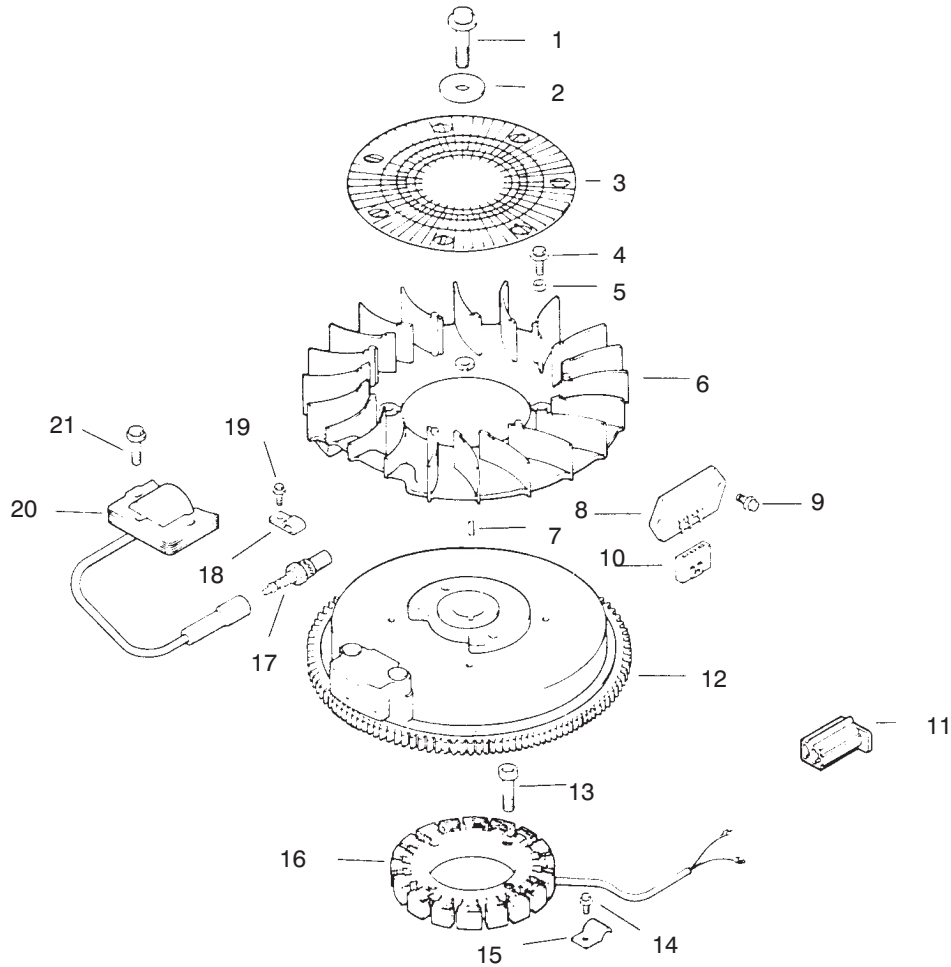


C-1796

IGNITION / ELECTRICAL

Ref. No.	Part No.	Description	No. Used
1	12 086 14	Screw - Flywheel	1
2	12 486 03	Washer - Flywheel	1
3	12 162 03	Screen - Grass	1
4	M-0639016	Screw - Fan	4
5	12 112 01	Spacer - Fan	4
6	12 157 01	Fan	1
7	X-42-15	Key	1
8	12 403 01	Rectifier - Unregulated	1
9	M-0639016	Screw - Regulator	2
10	236602	Connector - Regulator	1
11	41 155 03	Connector	1
12	12 025 16	Flywheel Assembly	1
13	M-0548025	Screw - Stator	4

Ref. No.	Part No.	Description	No. Used
14	M-0545010	Screw - Stator Harness	1
15	12 154 02	Clip - Stator Harness	1
16	24 085 01	Stator - 15 Amp.	1
17	12 132 02	Spark Plug	1
18	X-728-1	Clip - Kill Lead	1
19	M-0545010	Screw - Lead Clip	1
20	12 584 02	Module - Ignition	1
21	SM-0545020	Screw - Ignition Module	2
*	25 518 05	Lead - Black, Rectifier to Connector(5"-14 Gauge)	1
*	12 518 01	Lead - White, Ground to Kill (9.5"-18 Gauge)	1

*Not Illustrated

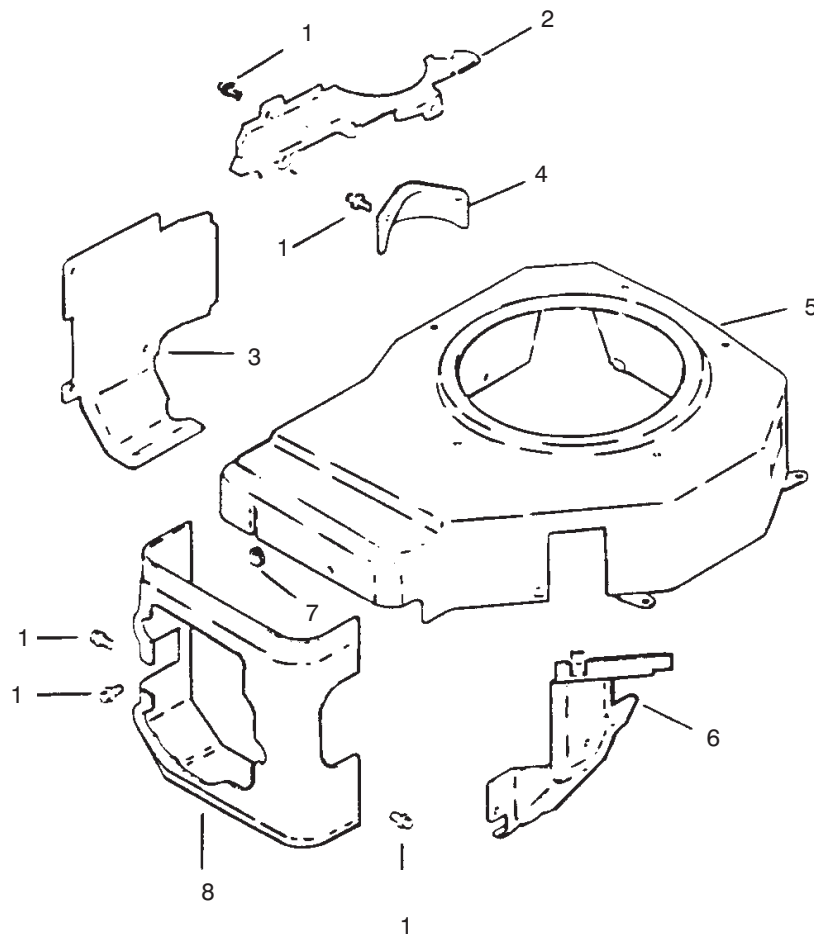


C-1797

BLOWER HOUSING & BAFFLES

Ref. No.	Part No.	Description	No. Used
1	M-0545010	Screw	15
2	12 146 07	Plate - Blower Housing	1
3	12 063 01	Baffle - Cylinder Barrel	1
4	12 096 23	Cover - Starter	1
5	12 027 11	Housing - Blower	1

Ref. No.	Part No.	Description	No. Used
6	12 063 05	Baffle - Carburetor	1
7	12 313 03	Grommet - Blower Hsg	1
8	12 063 03	Baffle - Cylinder Head	1
*	12 133 30	Decal - H.P.	1

*Not Illustrated

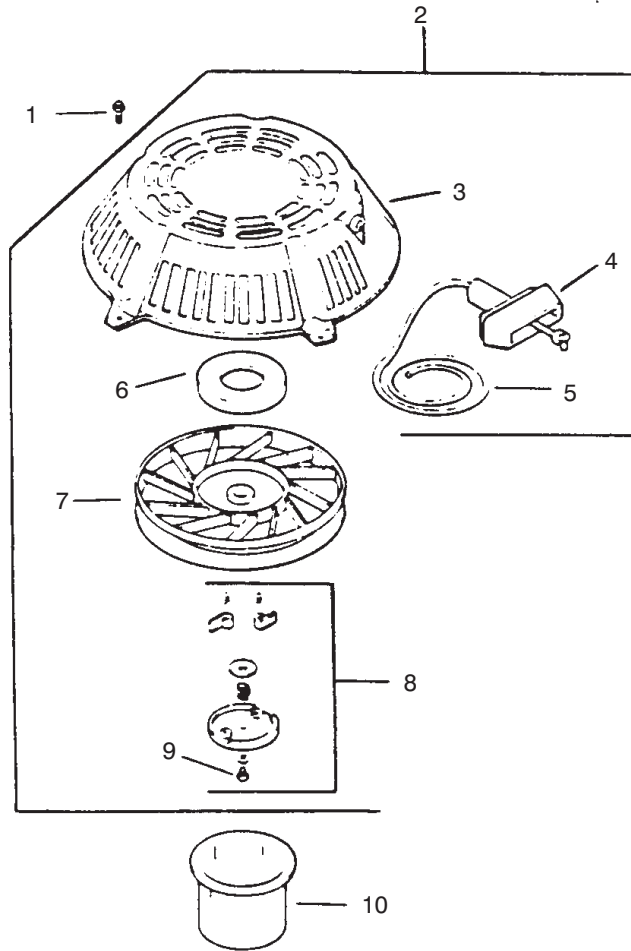


C-1798

STARTER SYSTEM

Ref. No.	Part No.	Description	No. Used
1	M-0545010	Screw	5
2	12 165 01	Starter (Incl.Ref.#3-9)	1
3	12 081 01	Housing - Starter	1
4	234452	Handle - Recoil	1
5	12 160 01	Rope - Starter	1
6	12 089 06	Spring & Keeper	1


Ref. No.	Part No.	Description	No. Used
7	12 093 01	Pulley	1
8	12 757 06	Kit - Dog Replacement (Incl Ref. #9)	1
9	41 086 09	Screw - Pozidrive	1
10	15 109 01	Cup - Driver	1
*	12 113 07	Decal - Starting	1

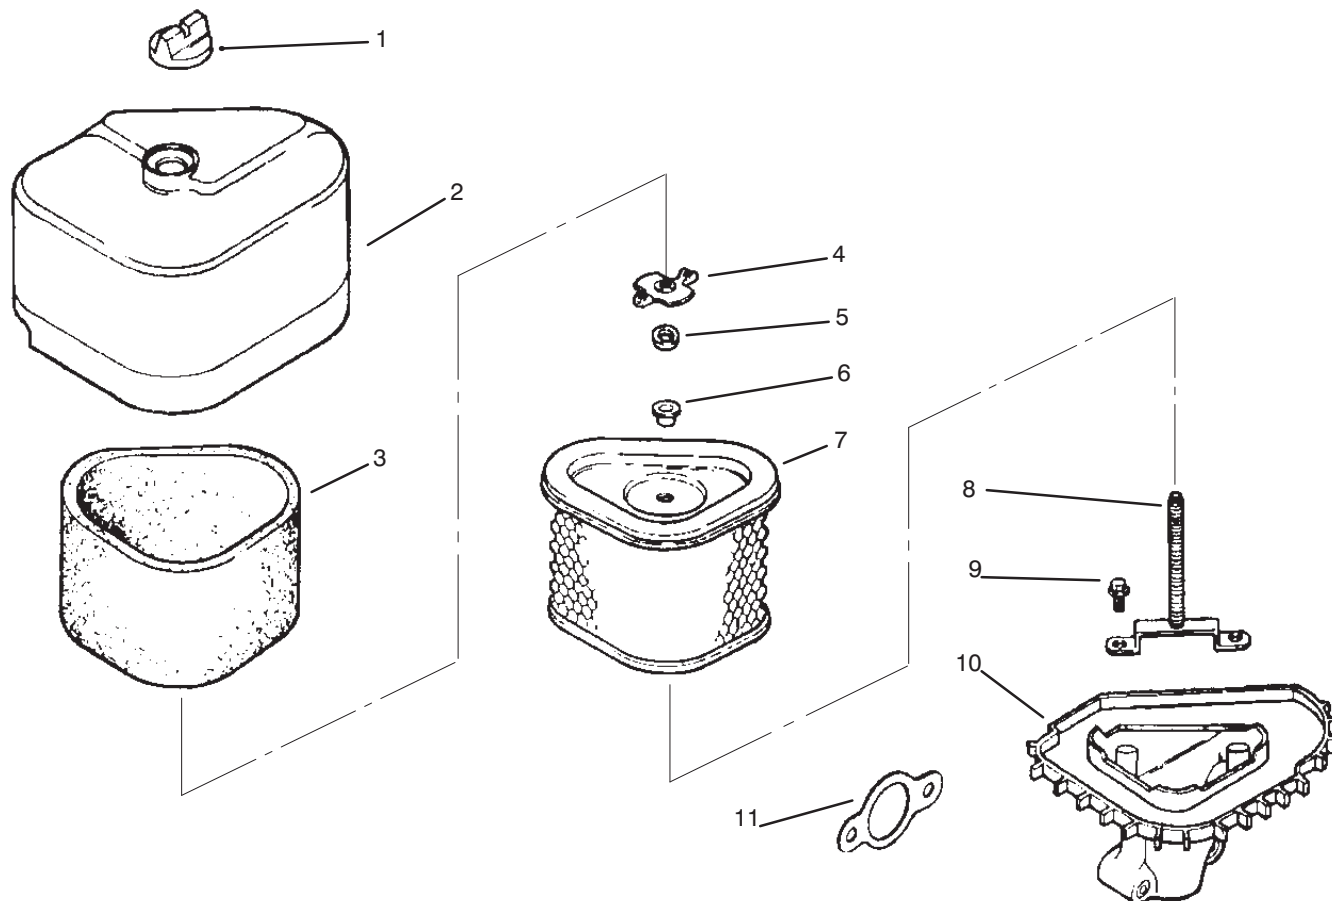

AIR CLEANER

Ref. No.	Part No.	Description	No. Used
1	25 341 02	Knob – Air Cleaner Cover	1
2	12 096 16	Cover – Air Cleaner	1
3	12 083 12	Precleaner – Element	1
4	12 100 01	Nut – Wing	1
5	X-25-63	Washer – Flat	1
6	12 313 04	Grommet	1
7	12 083 10	Element – Air Cleaner	1


Ref. No.	Part No.	Description	No. Used
8	12 072 04	Stud – Mounting Plate	1
9	12 086 01	Screw – Mounting Plate	1
10	12 094 07	Base – Air Cleaner	1
11	12 041 02	Gasket – Air Cleaner	1
*	12 734 02	Kit – Air Cleaner (Incl. Ref. #1-11)	1
*	12 113 04	Decal – Air Cleaner	1

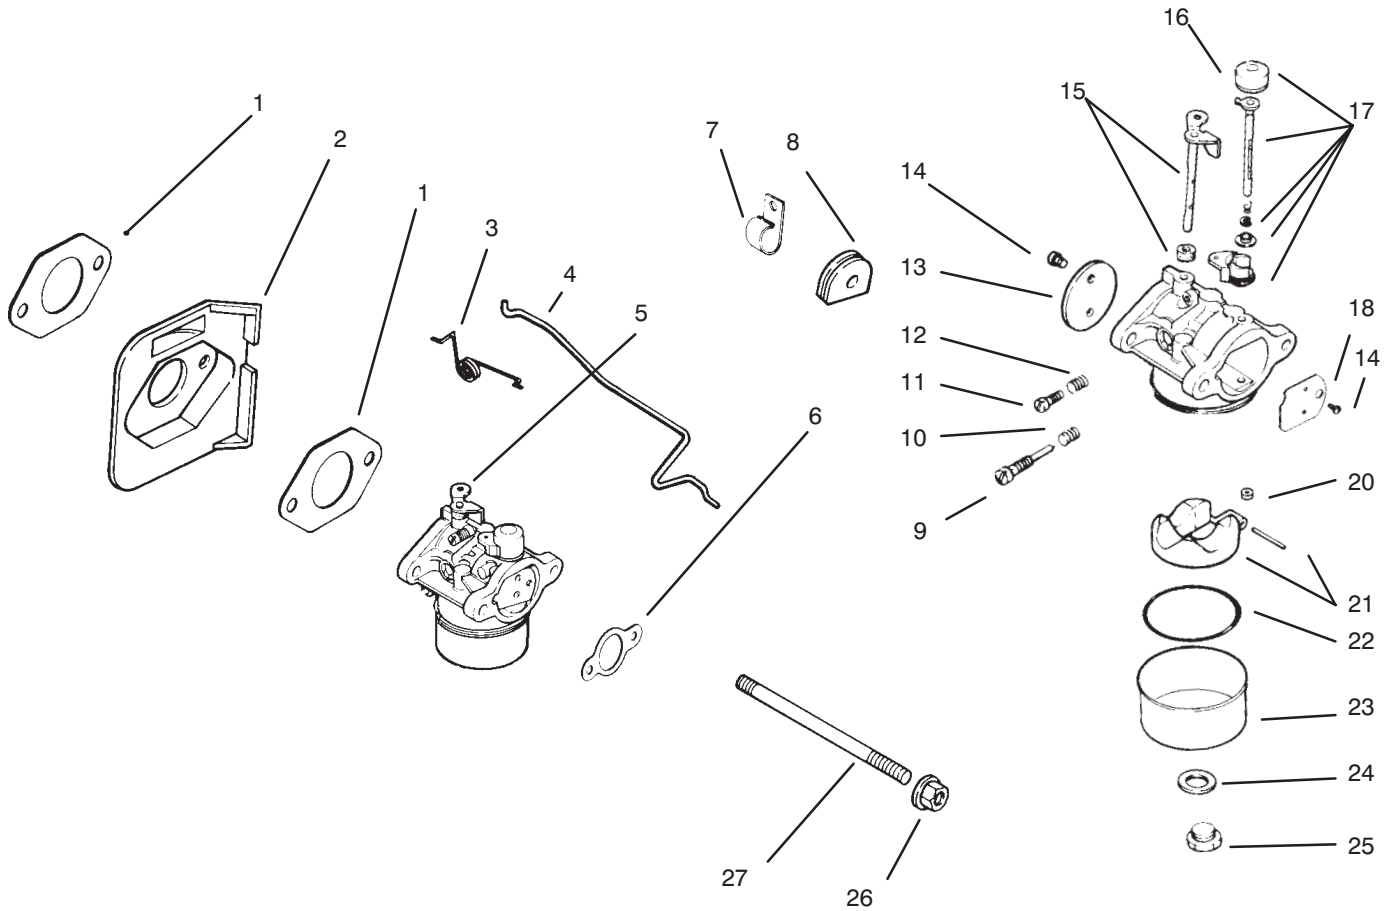

CARBURETOR

Ref. No.	Part No.	Description	No. Used
1	12 041 01	Gasket – Carburetor	2
2	12 265 01	Deflector – Heat	1
3	12 089 23	Spring – Choke Return	1
4	12 079 07	Linkage – Choke	1
5	12 053 43	Carburetor Assembly (Incl Ref. #9-25)	1
6	12 041 02	Gasket – Air Cleaner	1
7	47 154 01	Clamp – Fuel Line	1
8	12 313 01	Grommet	1
9	12 368 05	Needle – Idle	1
10	12 089 09	Spring – Idle	1
11	12 086 04	Screw – Idle	1
12	12 089 09	Spring – Idle	1
13	12 146 12	Plate – Throttle	1
14	25 086 27	Screw – Throttle Plate	2
15	12 144 09	Shaft Assembly–Throttle	1


Ref. No.	Part No.	Description	No. Used
16	12 173 06	Cap – Choke Lever	1
17	12 757 08	Kit – Choke Repair (Incl. Ref.#16)	1
18	12 146 03	Plate – Choke	1
20	12 337 04	Jet – Main	1
21	12 757 02	Kit – Float	1
22	12 041 05	Gasket – Bowl	1
23	12 104 01	Bowl – Fuel	1
24	12 041 06	Gasket – Bowl	1
25	12 086 05	Screw – Bowl	1
26	M-0641060	Nut – Carburetor	2
27	M-0629122	Stud – Carburetor	2
*	12 757 01	Kit – Carburetor Repair	1
*	12 853 43	Kit – Carburetor (Incl Ref. #2-6)	1

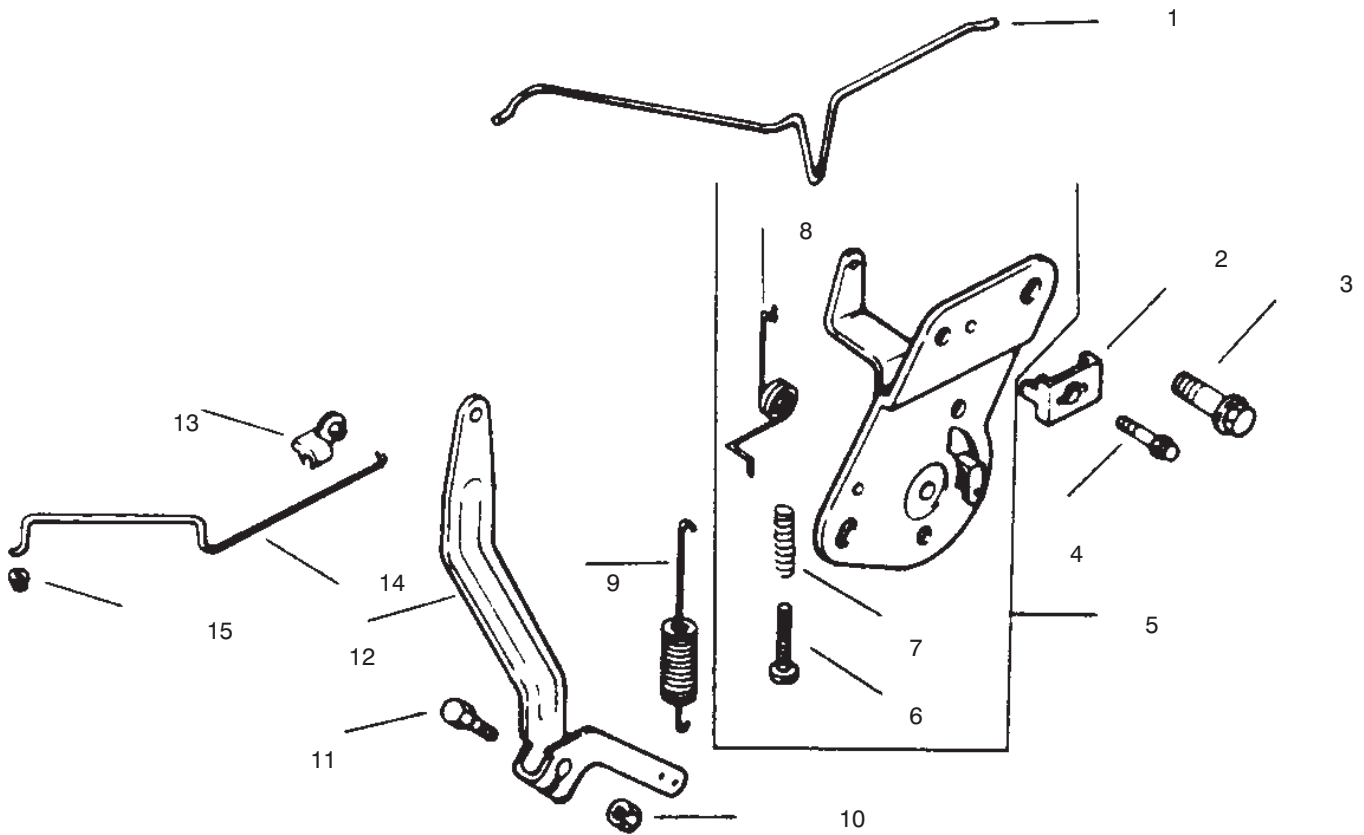

ENGINE CONTROLS

Ref. No.	Part No.	Description	No. Used
1	12 079 07	Linkage - Choke	1
2	12 237 01	Clamp - Cable	1
3	M-0645016	Screw - Hex. Hd.	2
4	SM-0545016	Screw - Cable Clamp	1
5	12 536 01	Control - Speed	1
		((incl Ref.#6-8)	1
6	SM-0443025	Screw	1
7	12 089 11	Spring	1

Ref. No.	Part No.	Description	No. Used
8	12 089 23	Spring - Choke	1
9	12 089 19	Spring - Governor	1
10	M-0641060	Nut - Governor	1
11	SM-0642025	Screw - Governor	1
12	12 090 05	Lever - Governor	1
13	25 158 11	Bushing - Black Retainer	1
14	12 079 01	Linkage - Throttle	1
15	25 158 08	Bushing - Natural, Linkage	1

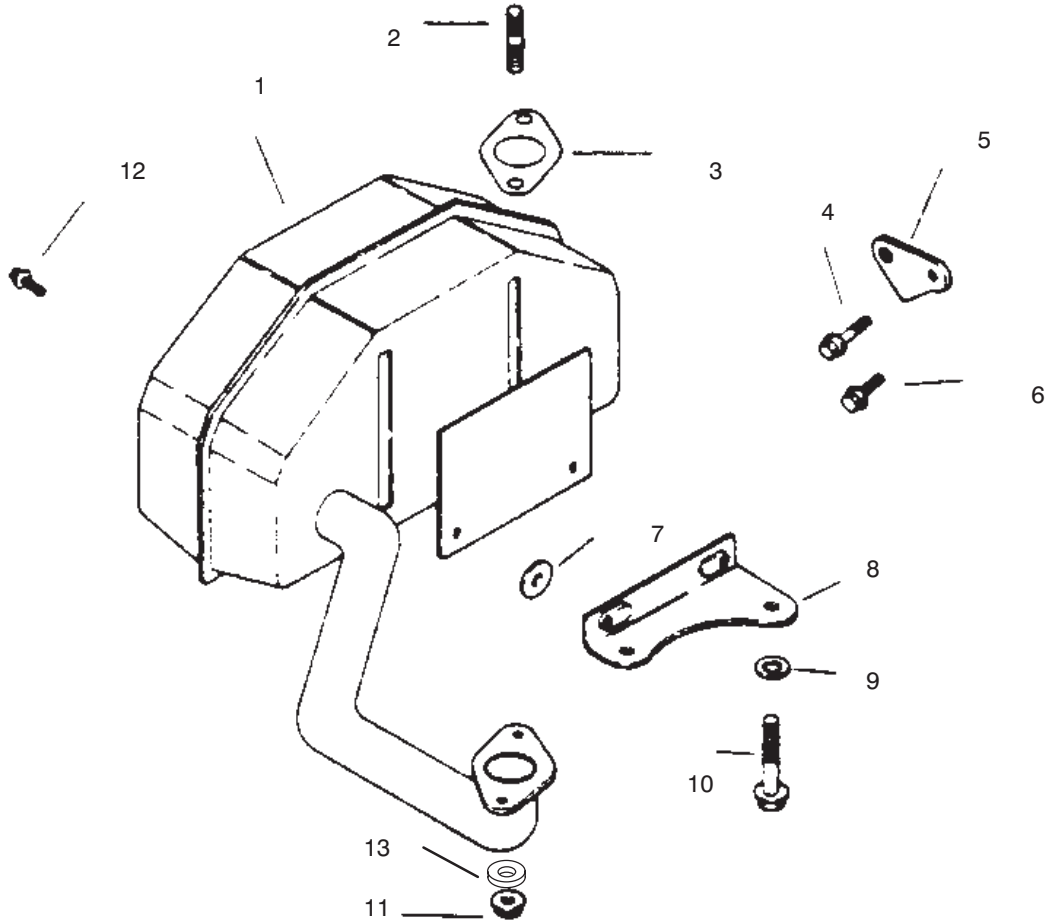

EXHAUST

Ref. No.	Part No.	Description	No. Used
1	12 068 03	Muffler	1
2	M-0829033	Stud - Exhaust Manifold	2
3	12 041 03	Gasket - Exhaust	1
4	M-0645025	Screw - Lifting Strap	1
5	12 445 06	Strap - Lifting	1
6	M-0645020	Screw - Valve Cover	1
7	X-25-52	Washer	2
8	12 126 39	Bracket - Muffler	1

Ref. No.	Part No.	Description	No. Used
9	12 468 01	Washer - Flat	1
10	12 086 13	Screw - Oil Pan	1
11	M-0841080	Nut - Muffler	2
12	M-0650012	Screw - Muffler	2
13	3253-4	Washer	2
*	12 755 01	Gasket Set	1
	12 755 30	Kit - Bracket	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
112843	Washer – PTO	3	12	1	71-1280	Decal – Danger	6	41	1
608006	Key – Crankshaft	3	15	1	71-3040	Kit – Axle Replacement	2	*	1
7-5461	Spacer	5	5	1	72-2190	Mount – Shift Lever	5	4	1
10-8110	Washer – Flat	5	29A/R		74-0040	Spacer – Pivot Idler	1	19	4
12-3270	Screw – Hex Head	2	37	1	74-0050	Sheave – Lower Half	3	10	1
26-9671	Belt – Traction	5	39	1	74-0060	Sheave – Upper Half	3	9	1
29-5560	Switch – On/Off	6	33	1	74-0220	Idler – Bracket L.H.	1	8	1
44-8310	Ring – Retaining	4	3	2	74-0230	Idler – Bracket R.H.	1	*	1
44-8320	Spring	4	10	3	74-0320	Lever – Shift	5	9	1
44-8330	Spacer – Pulley Bearing	4	6	1	74-0360	Frame – Rear	1	31	1
44-8340	Collar – Bearing	4	7	1	74-0380	Control – Pivot	6	21	1
44-8360	Field Coil, Rotor & Bearing	4	4	1	74-0470	Rod – Pivot	6	19	1
47-1970	Grip – Engagement	5	8	1	74-0480	Pulley – Drive	5	17	2
47-2964	Line – Fuel	3	5	1	74-0490	Decal – Fuel Shut Off	1	30	1
47-2982	Hose – Fuel	1	3	1	74-0510	Valve – Fuel	2	32	1
51-4160	Pulley – Wheel	5	30	4	74-0521	Fitting – Rod	1	10	2
51-4170	Spacer – Pulley	5	31	8	74-0610	Transmission	5	3	1
51-4180	Drum – Brake	5	32	2	74-0630	Control – Throttle	6	8	1
51-4190	Pulley – Driven	5	40	1	74-0720	Tube – Manual	6	2	1
51-4220	Guard – Coupler	5	43	2	74-0930	Guard – Pulley	3	16	1
51-4230	Washer – Wheel	5	37	2	74-0950	Elbow	3	19	2
51-4240	Shaft – Extension R.H.	5	14	1	82-2180	Panel – Control	6	3	1
51-4250	Shaft – Extension L.H.	5	*	1	82-2190	Switch – Bail	6	13	1
51-4260	Coupler	5	45	2	82-2260	Wire Harness	7	1	1
51-4270	Bearing – Shaft Extension	5	12	2	82-2260	Wire Harness	6	27	1
51-4291	Belt – Drive	5	18	2	82-2280	Decal – Reverse Handle	6	22	1
51-4370	Spring – Torsion R.H.	1	*	1	82-2290	Decal – Bar Control	6	12	1
51-4380	Spring – Torsion L.H.	1	17	1	82-2300	Switch – Clutch	6	6	1
51-4450	Screw – Leveler	1	18	2	82-3820	Boot – Switch	6	31	1
51-4480	Idler – Wheel	1	15	2	82-7632	Rod – Control	6	5	2
51-4490	Spacer – Idler Wheel	1	16	2	82-7680	Bail – Handle	6	11	1
51-4540	Retainer – Clutch	3	17	1	82-7690	Bar – Control	6	10	1
51-4580	Rod – Brake	5	19	2	82-7730	Decal – Proline	6	4	1
51-4650	Link – Brake	5	22	2	82-7750	Decal – Ground Speed	1	29	1
51-4660	Plate – Link Brake	5	35	2	82-8440	Fuel Tank Assembly	2	34	1
51-4700	Brake Band Assembly	5	33	2	86-7910	Module – Interlock	7	3	1
51-4810	Pulley – Idler	1	23	1	86-7910	Module – Interlock	6	38	1
51-4850	Lever – Brake, Parking	6	18	1	92-1746	Bearing	5	27	4
52-2010	Decal – Parking Brake	6	9	1	93-1161	Frame	1	24	1
52-2890	Bushing	2	35	2	93-1163	Wheel & Tire Assembly	5	*	2
54-0230	Field Assembly	4	1	1	93-1181	Rim	5	24	2
54-3200	Clutch Assembly	3	11	1	218-461	Nut	6	35	1
55-3570	Cap – Fuel Tank	1	1	1	218-595	Connector – Body	6	32	1
55-7410	Armature & Pulley Assembly	4	5	1	231-94	Tire	5	23	2
56-6360	Filter – Fuel	3	4	1	232-27	Valve Stem	5	25	2
57-5811	Panel – Bottom	6	28	1	237-7	"O"Ring	2	33	1
57-6360	Screw – Hex. Hd.	3	14	1	237-124	Grommet	1	21	1
57-6380	Screw – Hex. Hd.	3	8	4	237-141	Grommet – Rubber	6	17	2
63-7590	Relay	7	2	1	2412-87	Clamp	3	21	1
63-7590	Relay	6	37	1	2412-98	Clamp – Fuel Filter	3	3	2
63-8360	Key	6	34	2	2412-98	Clamp – Fuel line	1	2	1
63-8440	Decal – Hot	3	2	1	2412-108	Clamp	3	23	1
65-3090	Decal – Instructions	6	42	1	2412-120	"R"Clamp	6	29	2
66-7400	Plate – Control	1	28	1	251-291	Bearing – Pulley	4	8	1
67-6370	Bracket – Support R.H.	1	*	1	251-292	Bearing – Field	4	2	1
67-6380	Bracket – Support L.H.	1	11	1	283-6	Pin – Clevis	1	9	2
67-6400	Brake Arm R.H.	5	*	1	288-4	Cap – Pipe	3	18	1
67-6420	Brake Arm L.H.	5	20	1	289-51	Nipple	3	20	1
67-6440	Handle – Upper	6	1	1	302-5	Fitting – Grease	5	44	2
68-9690	Fitting – Rod	1	6	2	302-57	Fitting – Grease	5	28	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
321-2	Screw	3 22 1	3290-307	Pin - Cotter	1 7 4
321-2	Screw - Hex. Hd.	6 39 2	3290-307	Pin - Cotter	6 15 2
321-4	Screw - Hex. Hd.	5 13 5	3290-307	Pin - Cotter	5 42 2
322-2	Screw - Hex. Hd.	5 1 4	3290-378	Cable Tie	6 24 2
322-4	Screw - Hex. Hd.	1 26 4	3296-2	Nut - Lock	6 7 5
322-7	Screw - Hex. Hd.	5 34 8	3296-5	Nut - Lock	4 9 3
323-6	Screw - Hex. Hd.	1 13 6	3296-23	Nut - Lock	1 14 2
323-9	Screw - Hex. Hd.	1 22 1	3296-39	Nut - Lock	1 20 8
323-16	Screw - Hex. Hd.	1 12 2	3296-42	Nut - Lock	6 40 2
329-10	Screw - Hex. Hd.	5 7 1	3296-42	Nut - Lock	5 10 4
3234-11	Screw - Hex. Hd.	6 25 4	32103-25	Nut - Wing	1 4 2
3245-1	Screw - Socket Hd. Set	5 38 1	32105-1	Screw - Hex. Hd. Machine	6 14 1
3245-3	Screw - Socket Hd. Set	5 16 2	32105-14	Screw - Hex. Hd. Machine	6 23 4
3253-4	Washer - Lock	5 2 12	32120-64	Ring - Retaining	5 11 3
3253-4	Washer - Lock	3 7 3	32128-21	Nut - Hex. Flange	1 25 1
3253-4	Washer - Lock	1 27 4	32128-21	Nut - Hex. Flange	6 26 4
3254-5	Washer - Lock	6 36 1	32144-19	Screw - Self Tapping	6 30 5
3255-7	Washer - Lock	2 38 2	32151-40	Ring - Retaining	5 21 2
3256-23	Washer - Flat	1 5 10	32151-56	Ring - Retaining	5 41 2
3256-23	Washer - Flat	3 6 6	32151-72	Ring - Retaining	5 36 4
3256-24	Washer	2 36 1	32151-80	Ring - Push On	6 20 2
3257-5	Key - Woodruff	5 15 3	32151-91	Ring - Retaining	5 26 2

TABLE OF CONTENTS

Description	Page	Description	Page
Frame Assembly	1	Cylinder Head, Valve / Breather	11
Engine Assembly	3	Ignition / Electrical	12
Clutch Assembly	4	Blower Housing & Baffles	13
Axle Assemble	5	Starting System	14
Handle Assembly	6	Air Cleaner	15
Electric Schematic	7	Carburetor	16
Transmission, Peerless	8	Engine Controls	17
Engine Kohler		Exhaust	18
Crankcase & Crankshaft	9	Numeric Index	19
Oil Pan / Lubrication	10		

OPTIONAL EQUIPMENT

Description	Model / Part No.	Description	Model / Part No.
Optional Equipment		Steerable Sulky	Model No. 30123
32" Cutting Unit	Model No. 30133	Kits	
36" Cutting Unit	Model No. 30136	Bagging For 32" Deck	Model No. 30124
37" Cutting Unit	Model No. 30737	Bagging For 36" Deck	Model No. 30125
44" Cutting Unit	Model No. 30144	Bagging For 37" Deck	Model No. 30129
48" Cutting Unit	Model No. 30148	Bagging For 44 & 52" Deck	Model No. 30128
52" Cutting Unit	Model No. 30152	Front Weight	Part No. 80-3350
Standard Sulky	Model No. 30122		