




MODEL NO. 30136-690001 & UP

PARTS CATALOG


36" SIDE DISCHARGE CUTTING UNIT for ProLine Mid Size Traction Units

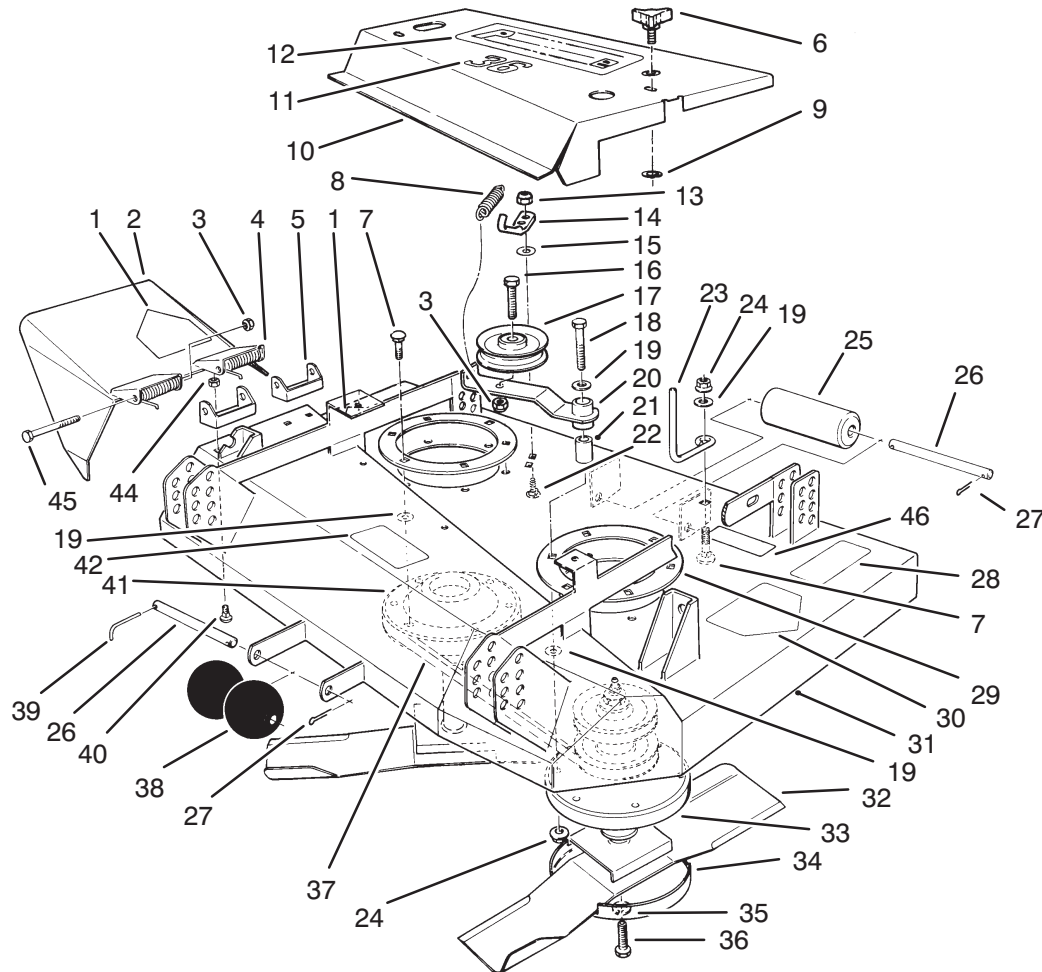

T-0216

CUTTING UNIT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	54-9220	Decal - Caution	2	15	3256-2	Washer - Flat	A/R
2	13-3879	Deflector - Grass (Incl. Ref. #1)	1	16	3211-5	Screw - Hex. Hd. Cap	1
3	3296-5	Nut - Lock	3	17	51-3660	Idler - Flat	1
4	40-6230	Spring - Torsion	2	18	323-12	Screw - Hex. Hd. Cap	1
5	29-5590	Bracket - Pivot, Deflector	2	19	3256-24	Washer - Flat	A/R
6	62-6520	Knob	2	20	56-4341	Arm - Idler	1
7	3231-22	Bolt - Carriage	13	21	51-3641	Sleeve - Pivot Idler	1
8	51-3650	Spring - Idler	1	22	3230-22	Bolt - Carriage	2
9	32151-72	Ring - Retaining	2	23	52-4780	Rod - Belt	2
10	82-5460	Cover - Deck	1	24	32128-21	Nut - Lock	14
11	51-3730	Decal - 36"	1	25	36-1740	Roller - Deck	1
12	74-2080	Decal - Proline	1	26	40-6400	Shaft - Roller	2
13	3296-29	Nut - Lock	2	27	3272-11	Pin - Cotter	3
14	56-4360	Rod - Spring	1	28	68-8340	Decal - Blade Torque	1
				29	27-7680	Ring - Deck Support	2

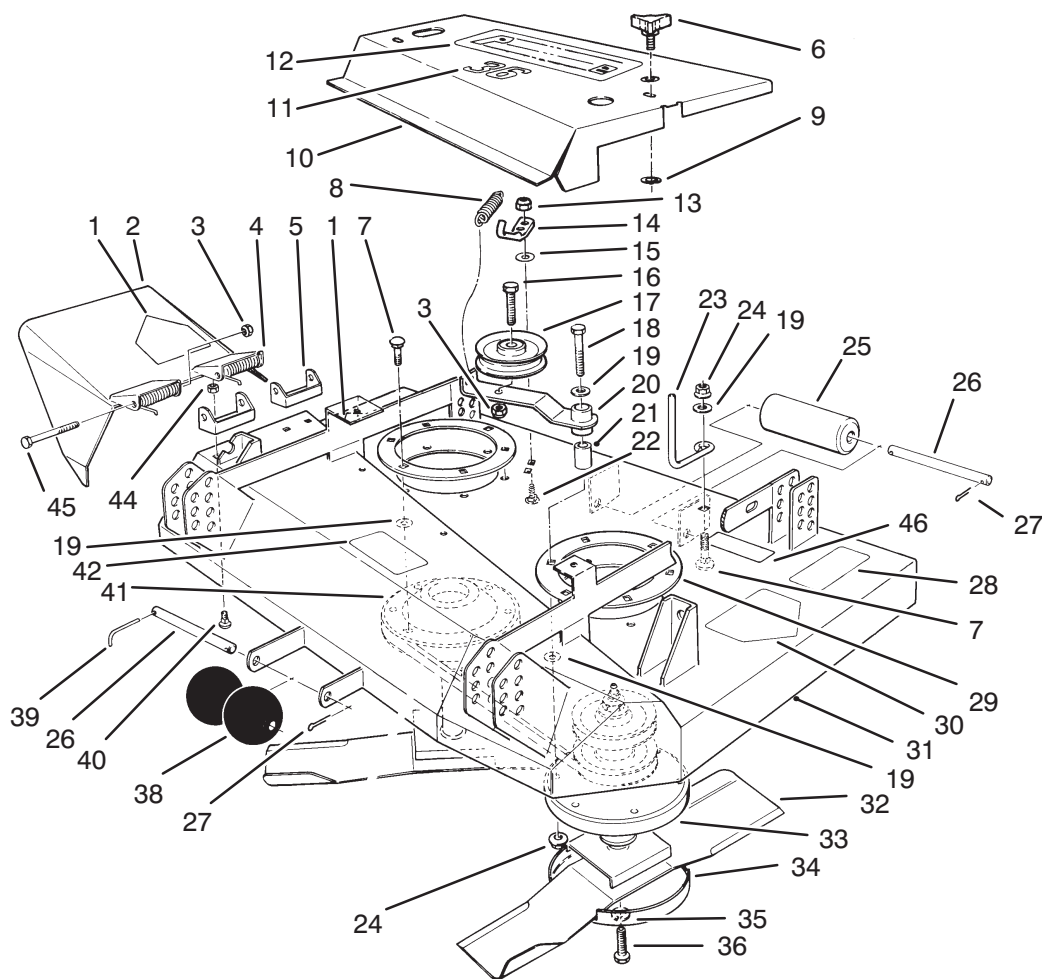


T-0216

CUTTING UNIT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
30	43-8480	Decal – Danger	1	38	29-4820	Roller – Deck	2
31	14-2369	Deck Assembly (Incl. Ref.#28,30,42 & 46)	1	39	57-0690	Pin – Special	1
32	56-2390	Blade – High Sail (Std.)	2	40	3230-18	Bolt – Carriage	4
*	27-0990	Blade – Low Sail (Optional)	2	41	27-0870	Spindle Assembly	1
33	54-7781	Spindle Assembly – Drive	1	42	66-1340	Decal – Caution	1
34	72-9361	Cup – Scalp	2	44	32152-1	Nut	4
35	3253-27	Washer – Lock	2	45	3211-15	Screw – Hex. Hd.	2
36	44-2200	Screw – Blade Bolt	2	46	67-5360	Decal – Danger	1

*Not Illustrated

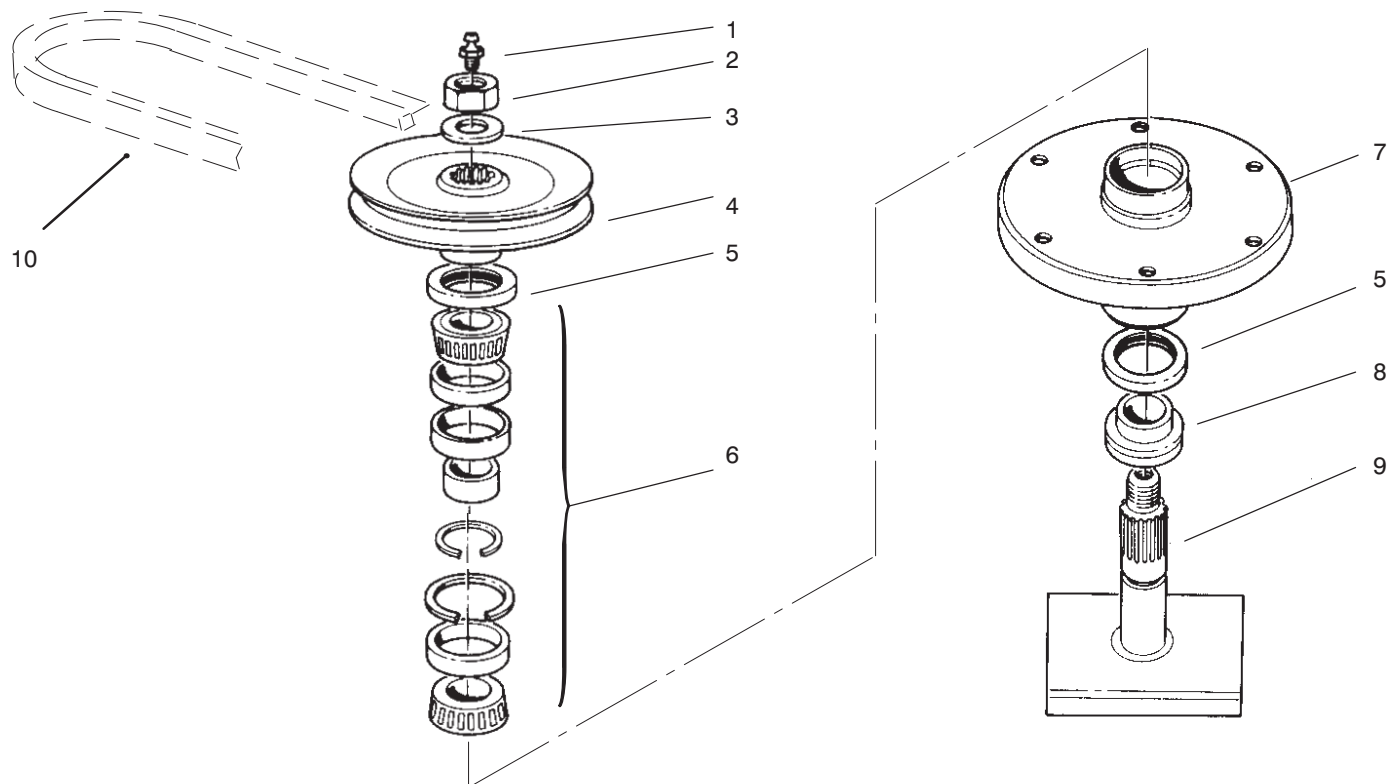


T-0111

DRIVE SPINDLE NO. 27-0870

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-2	Fitting - Grease	1	7	61-4160	Spindle Housing	1
2	32146-20	Nut - Lock	1	8	27-0950	Spacer - Spindle Bearing	1
3	7-4150	Washer	1	9	27-0920	Shaft - Spindle	1
4	27-0970	Pulley & Hub Assembly	1	10	51-3530	Belt - Deck Drive	1
5	253-139	Seal - Wave	2				
6	46-8530	Bearing Assembly	1				


* Not Illustrated.

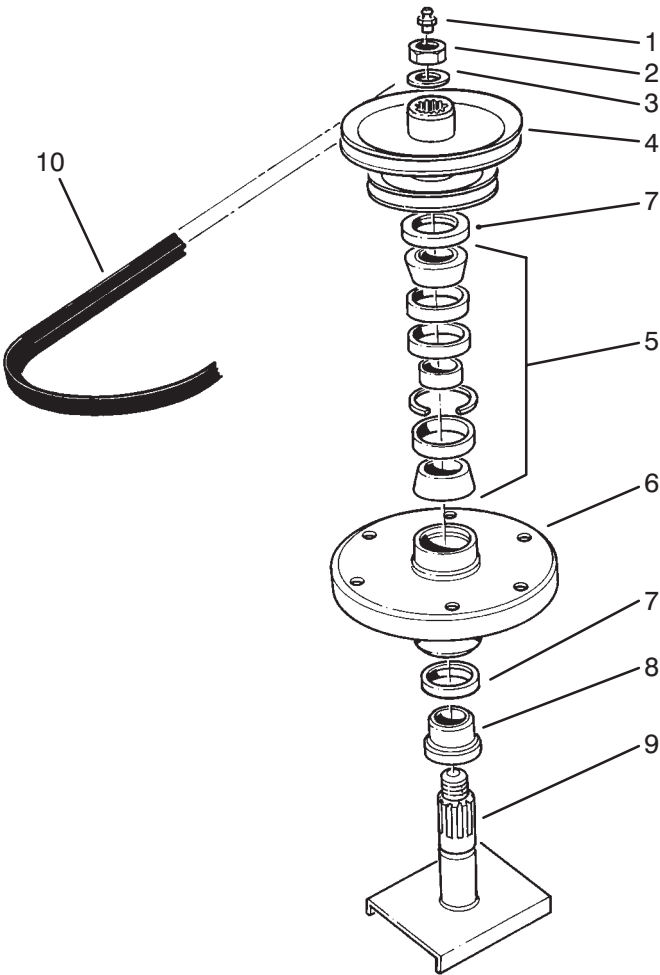

T-0218

DRIVE SPINDLE NO. 54-7781

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-2	Fitting - Grease	1	6	61-4160	Housing - Spindle	1
2	32146-20	Nut - Lock	1	7	253-139	Seal - Wave	2
3	7-4150	Washer	1	8	27-0950	Spacer - Spindle Bearing	1
4	55-7610	Pulley Assembly	1	9	51-3551	Spindle - Shaft	1
5	46-8530	Bearing Assembly	1	10	54-2750	"V" Belt - Engine to Deck	1

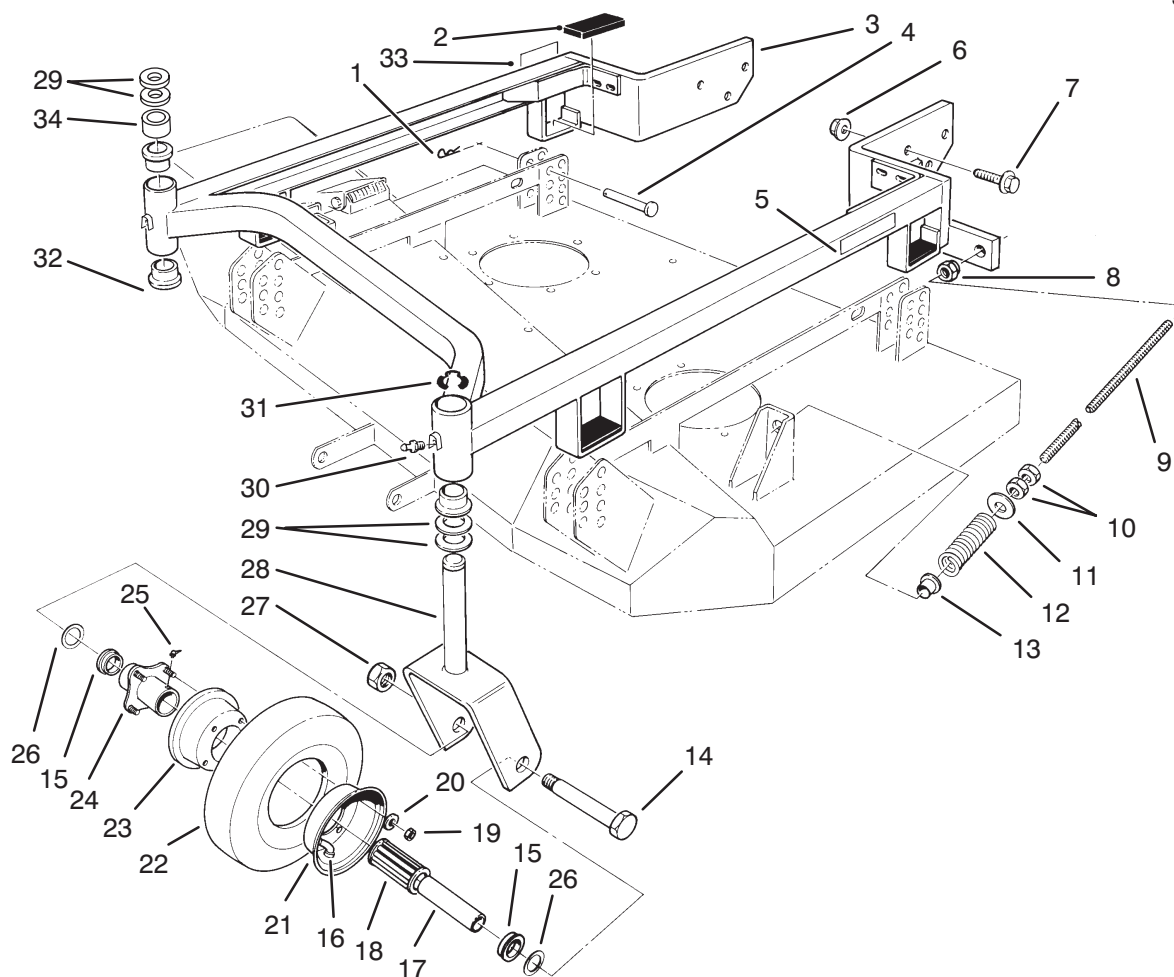

T-0219

CARRIER FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3290-355	Pin - Cotter	4	18	62-5570	Bearing - Roller	2
2	74-0350	Cushion - Rubber	4	19	3217-6	Nut	8
3	94-4155	Frame - Carrier (Incl. Ref. #32)	1	20	3253-4	Washer - Lock	8
4	283-55	Pin - Clevis	4	21	68-8930	Wheel Half - Male	2
5	85-7450	Decal - H.O.C., L.H. 2-5"	1	22	68-8960	Tire	2
*	68-8360	Decal - H.O.C., L.H. 1-4"	1	23	68-8920	Wheel Half - Female	2
6	32128-23	Nut - Lock	6	24	68-8940	Hub - Center	2
7	3234-6	Screw - Flange Lock	6	25	302-61	Fitting - Grease	2
8	3296-45	Nut - Lock	2	26	3256-6	Washer	4
9	74-0310	Shaft - Adjusting	2	27	32153-5	Nut - Lock	2
10	3218-5	Nut	4	28	74-0251	Castor - Fork	2
11	41-8440	Washer	2	29	3-6781	Washer - Thrust	8
12	74-0290	Spring - Compression	2	30	302-5	Fitting - Grease	2
13	256-156	Bushing	2	31	32151-91	Ring - Retaining	2
14	325-19	Screw - Hex. Hd. Cap	2	32	94-1291	Bushing - Special	4
15	62-5580	Bushing	4	33	85-7460	Decal - H.O.C., R.H. 2-5"	1
16	68-8950	Tube w/Valve	2	*	74-0940	Decal - H.O.C., R.H. 1-4"	1
17	68-8980	Spanner - Bushing	2	34	93-1167	Spacer - Castor	2
				*	68-8970	Castor Wheel Assembly	1

*Not Illustrated

TORO PART NUMBER INDEX

3317-805

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-6781	Washer - Thrust	5 29 8	68-8960	Tire	5 22 2
7-4150	Washer	3 3 1	68-8970	Castor Wheel Assembly	5 * 1
7-4150	Washer	4 3 1	68-8980	Spanner - Bushing	5 17 2
13-3879	Deflector - Grass	1 2 1	72-9361	Cup - Scalp	2 34 2
14-2369	Deck Assembly	2 31 1	74-0130	Frame - Carrier	5 3 1
27-0870	Spindle Assembly	2 41 1	74-0251	Castor - Fork	5 28 2
27-0920	Shaft - Spindle	3 9 1	74-0290	Spring - Compression	5 12 2
27-0950	Spacer - Spindle Bearing	3 8 1	74-0310	Shaft - Adjusting	5 9 2
27-0950	Spacer - Spindle Bearing	4 8 1	74-0350	Cushion - Rubber	5 2 4
27-0970	Pulley & Hub Assembly	3 4 1	74-0940	Decal - H.O.C., R.H. 1-4"	5 33 1
27-0990	Blade - Low Sail (Optional)	2 * 2	74-2080	Decal - Proline	1 12 1
27-7680	Ring - Deck Support	1 29 2	82-5460	Cover - Deck	1 10 1
28-9290	Bushing - Special	5 32 4	85-7450	Decal - H.O.C., L.H. 2-5"	5 * 1
29-4820	Roller - Deck	2 38 2	85-7460	Decal - H.O.C., R.H. 2-5"	5 * 1
29-5590	Bracket - Pivot, Deflector	1 5 2	93-1167	Spacer - Castor	5 34 2
36-1740	Roller - Deck	1 25 1	253-139	Seal - Wave	3 5 2
40-6230	Spring - Torsion	1 4 2	253-139	Seal - Wave	4 7 2
40-6400	Shaft - Roller	1 26 2	256-156	Bushing	5 13 2
41-8440	Washer	5 11 2	283-55	Pin - Clevis	5 4 4
43-8480	Decal - Danger	2 30 1	302-2	Fitting - Grease	3 1 1
44-2200	Screw - Blade Bolt	2 36 2	302-2	Fitting - Grease	4 1 1
46-8530	Bearing Assembly	4 5 1	302-5	Fitting - Grease	5 30 2
46-8530	Bearing Assembly	3 6 1	302-61	Fitting - Grease	5 25 2
51-3530	Belt - Deck Drive	2 37 1	323-12	Screw - Hex. Hd. Cap	1 18 1
51-3551	Spindle - Shaft	4 9 1	325-19	Screw - Hex. Hd. Cap	5 14 2
51-3641	Sleeve - Pivot Idler	1 21 1	3211-5	Screw - Hex. Hd. Cap	1 16 1
51-3650	Spring - Idler	1 8 1	3211-15	Screw - Hex. Hd.	2 45 2
51-3660	Idler - Flat	1 17 1	3217-6	Nut	5 19 8
51-3730	Decal - 36"	1 11 1	3218-5	Nut	5 10 4
52-4780	Rod - Belt	1 23 2	3230-18	Bolt - Carriage	2 40 4
54-2750	VBelt - Engine to Deck	4 10 1	3230-22	Bolt - Carriage	1 22 2
54-7780	Spindle Assembly - Drive	2 33 1	3231-22	Bolt - Carriage	1 7 13
54-9220	Decal - Caution	1 1 2	3234-6	Screw - Flange Lock	5 7 6
55-7610	Pulley Assembly	4 4 1	3253-4	Washer - Lock	5 20 8
56-2390	Blade - High Sail (Std.)	2 32 2	3253-27	Washer - Lock	2 35 2
56-4341	Arm - Idler	1 20 1	3256-2	Washer - Flat	1 15A/R
56-4360	Rod - Spring	1 14 1	3256-6	Washer	5 26 4
57-0690	Pin - Special	2 39 1	3256-24	Washer - Flat	1 19A/R
61-4160	Housing - Spindle	4 6 1	3272-11	Pin - Cotter	1 27 3
61-4160	Spindle Housing	3 7 1	3290-355	Pin - Cotter	5 1 4
62-5570	Bearing - Roller	5 18 2	3296-5	Nut - Lock	1 3 3
62-5580	Bushing	5 15 4	3296-29	Nut - Lock	1 13 2
62-6520	Knob	1 6 2	3296-45	Nut - Lock	5 8 2
66-1340	Decal - Caution	2 42 1	32128-21	Nut - Lock	1 24 14
67-5360	Decal - Danger	2 46 1	32128-23	Nut - Lock	5 6 6
68-8340	Decal - Blade Torque	1 28 1	32146-20	Nut - Lock	3 2 1
68-8360	Decal - H.O.C., L.H. 1-4"	5 5 1	32146-20	Nut - Lock	4 2 1
68-8920	Wheel Half - Female	5 23 2	32151-72	Ring - Retaining	1 9 2
68-8930	Wheel Half - Male	5 21 2	32151-91	Ring - Retaining	5 31 2
68-8940	Hub - Center	5 24 2	32152-1	Nut	2 44 4
68-8950	Tube w/Valve	5 16 2	32153-5	Nut - Lock	5 27 2

*Not Illustrated

MAINTENANCE RECORD

[illegible]

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]