


TORO®

MODEL NO. 30162 – 492001 & UP

PARTS CATALOG

62" SIDE DISCHARGE DECK ProLine Cutting Unit

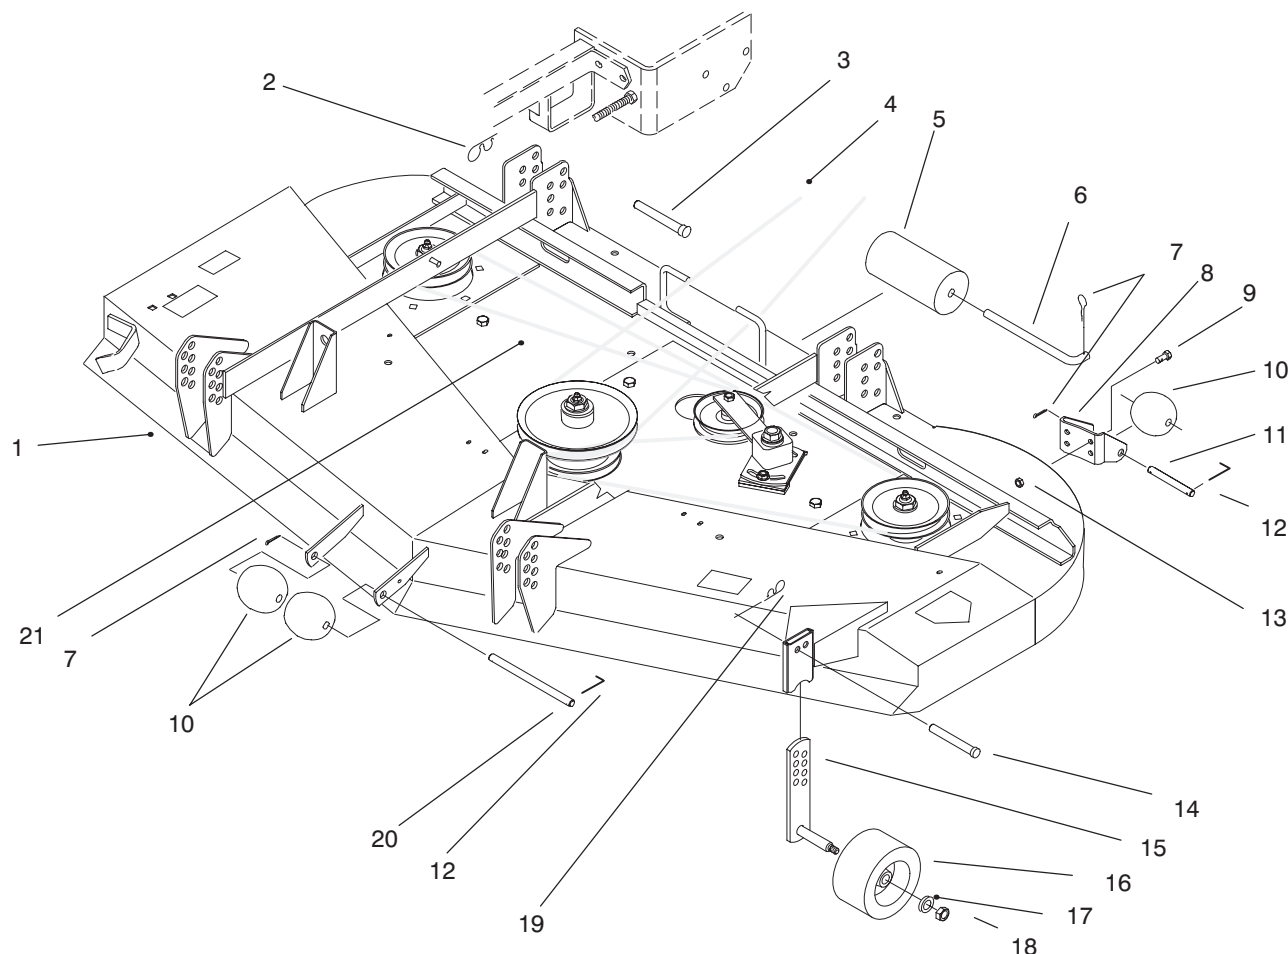


C-1357

BELTS, ROLLERS AND GAGE WHEEL

Ref. No.	Part No.	Description	No. Used
1	14-1519	Deck Assembly (Incl. Decals on page 2)	1
2	3290-355	Pin - Cotter	4
3	283-55	Pin - Clevis	4
4	74-1330	"V" Belt - Deck Drive	1
5	36-1740	Roller - Deck, Rear	2
6	40-0340	Shaft - Roller	2
7	3272-11	Pin - Cotter	4
8	57-0580	Bracket - Roller	1
9	323-6	Screw - Hex. Hd.	2
10	29-4820	Roller	3
11	57-0680	Shaft - Roller	1

Ref. No.	Part No.	Description	No. Used
12	57-0690	Pin - Special	2
13	3290-357	Nut - Flange Lock	2
14	283-2	Pin - Clevis	1
15	68-2350	Plate - Gauge Wheel	1
16	68-2730	Wheel - Gauge	1
17	3256-24	Washer - Flat	1
18	3296-39	Nut - Lock	1
19	3290-467	Pin - Cotter	1
20	40-6400	Shaft - Roller	1
21	44-6260	"V" Belt - Deck	1
*	16-2159	Gage Wheel Channel W/A	1

*Not Illustrated

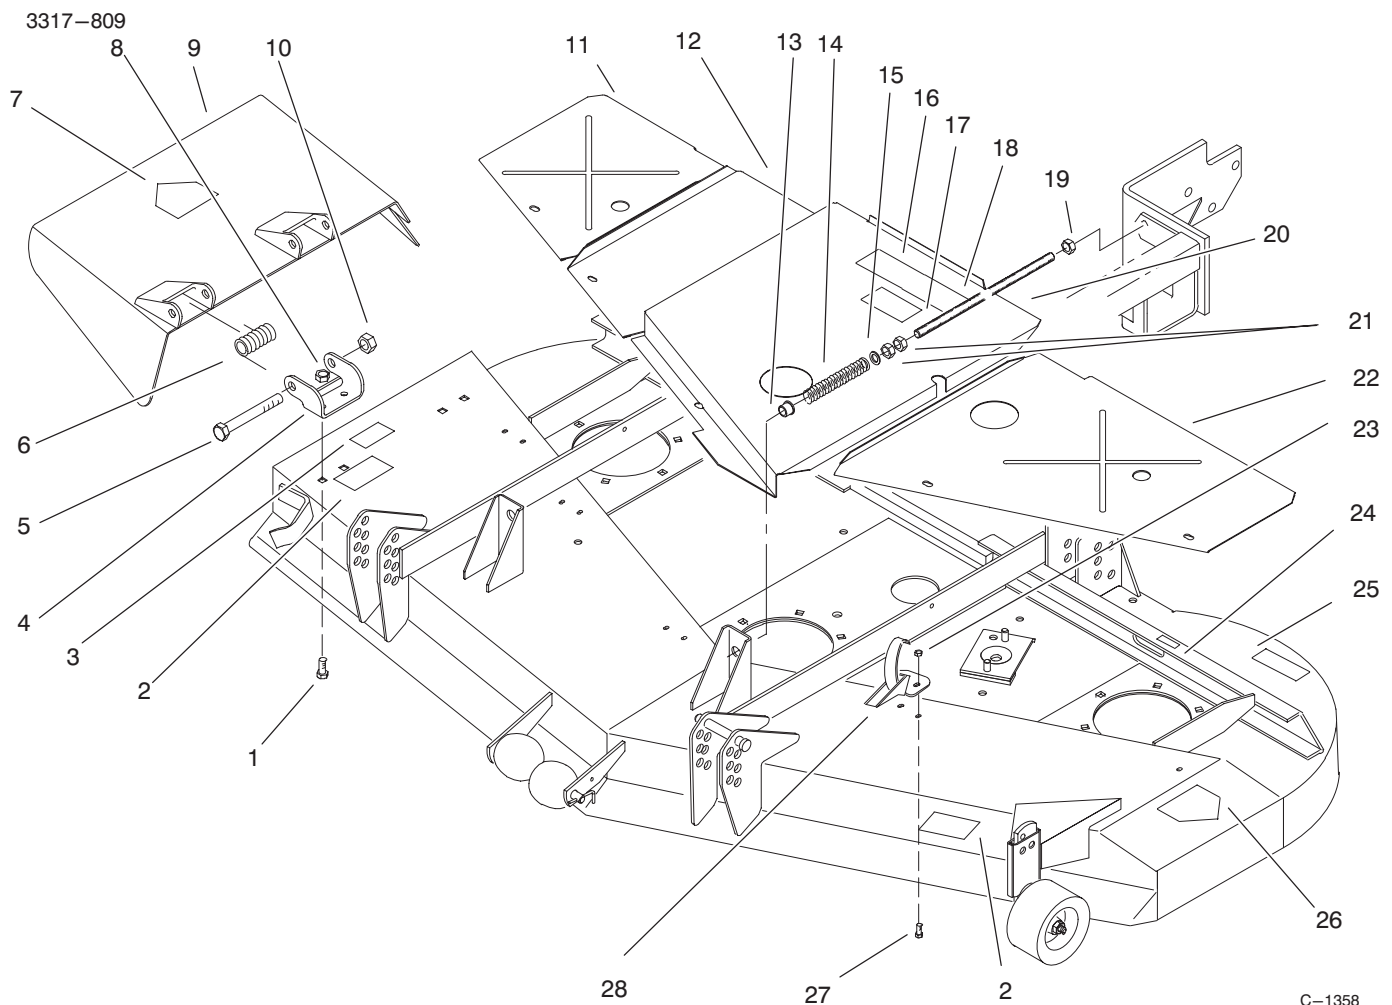


C-1358

GRASS DEFLECTOR, BELT COVERS & DECALS

Ref. No.	Part No.	Description	No. Used
1	3231-27	Bolt - Carriage	4
2	66-1340	Decal - Danger	2
3	66-6380	Decal - Deflector Missing	1
4	51-1530	Bracket - Hinge	2
5	325-17	Screw - Hex. Hd.	2
6	51-1550	Spring	1
7	93-1122	Decal	1
8	3290-357	Nut - Flange Lock	4
9	14-0909	Deflector Assembly (Incl. Ref.#7)	1
10	32153-5	Nut - Lock	2
11	63-9830	Cover - Deck R.H.	1
12	74-1310	Cover - Deck, Center R.H.	1
13	256-156	Bushing	2
14	74-0290	Spring - Compression	2

Ref. No.	Part No.	Description	No. Used
15	41-8440	Spacer - Hardened	2
16	74-2080	Decal - Proline	1
17	66-1630	Decal - 62"	1
18	74-0311	Shaft - Adjusting	2
19	3296-45	Nut - Lock	2
20	74-1320	Cover - Deck, Center L.H.	1
21	3218-5	Nut - Lock	4
22	44-6291	Cover - Deck L.H.	1
23	32128-17	Nut - Lock	10
24	67-5360	Decal - Shield Missing	4
25	68-8340	Decal - Blade Torque	1
26	43-8480	Decal - Danger	2
27	3290-321	Screw - Hex. Hd. Mach.	10
28	249-21	Latch - Draw	5

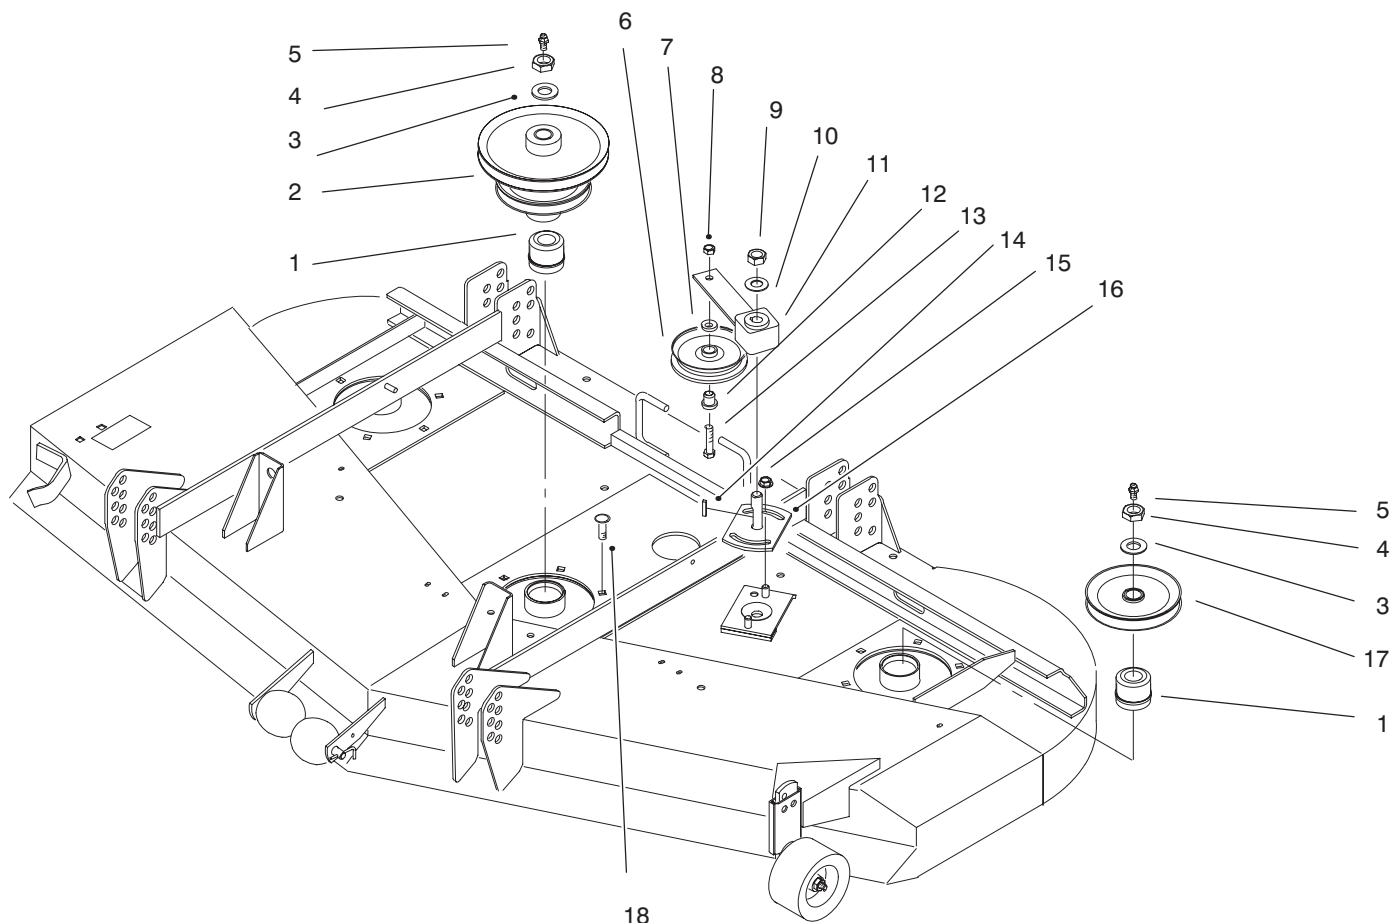


C-1361

PULLEYS AND IDLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-8530	Bearing Assembly	3
2	74-1230	Pulley & Hub Assembly	1
3	7-4150	Washer - Thrust	3
4	32146-20	Nut - Lock	1
5	302-2	Fitting - Grease	3
6	65-5940	Pulley - Idler	1
7	7-0081	Washer - Special	1
8	3296-5	Nut - Lock	1
9	3296-71	Nut - Lock	1

Ref. No.	Part No.	Description	No. Used
10	3256-27	Washer - Flat	1
11	27-8580	Idler Socket Assembly	1
12	65-5950	Bushing - Pulley	1
13	3211-8	Screw - Hex. Hd.	1
14	5-1077	Key - Square	1
15	3290-357	Nut - Flange Lock	6
16	44-6301	Plate Assembly Idler	1
17	44-6340	Pulley Hub Assembly	2
18	3231-22	Bolt - Carriage	18

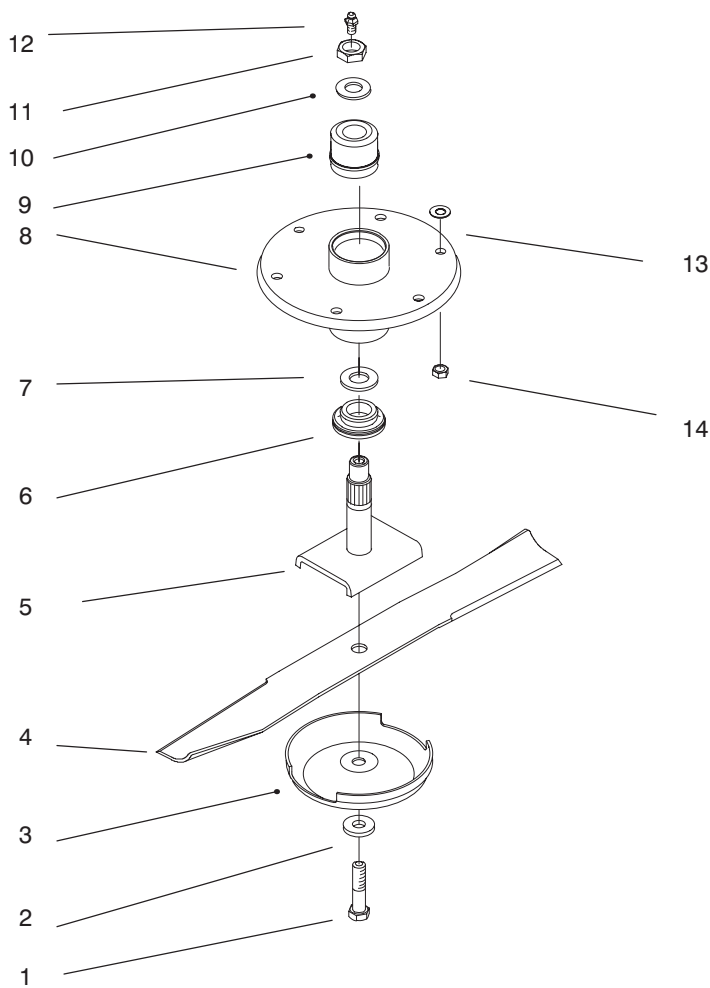


C-1362

SPINDLE ASSEMBLY & BLADE

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	44-2200	Screw - Blade	3	9	46-8530	Bearing Assembly	3
2	67-5770	Washer - Flat	3	10	7-4150	Washer - Thrust	3
3	72-9361	Cup - Anti Scalp	3	11	32146-20	Nut - Lock	1
4	44-6250	Blade	3	12	302-2	Fitting - Grease	3
5	51-3551	Shaft - Spindle (Center)	1	13	3256-24	Washer - Flat	A/R
*	27-0920	Shaft - Spindle (Outer)	2	14	32128-21	Nut - Lock	18
6	27-0950	Spacer - Spindle Bearing	3	*	44-6370	Spindle Housing Assembly (Incl. Ref.# 6-8, 9 & 11-13)	2
7	253-139	Seal - Wave	6				
8	61-4160	Spindle	3				

*Not Illustrated

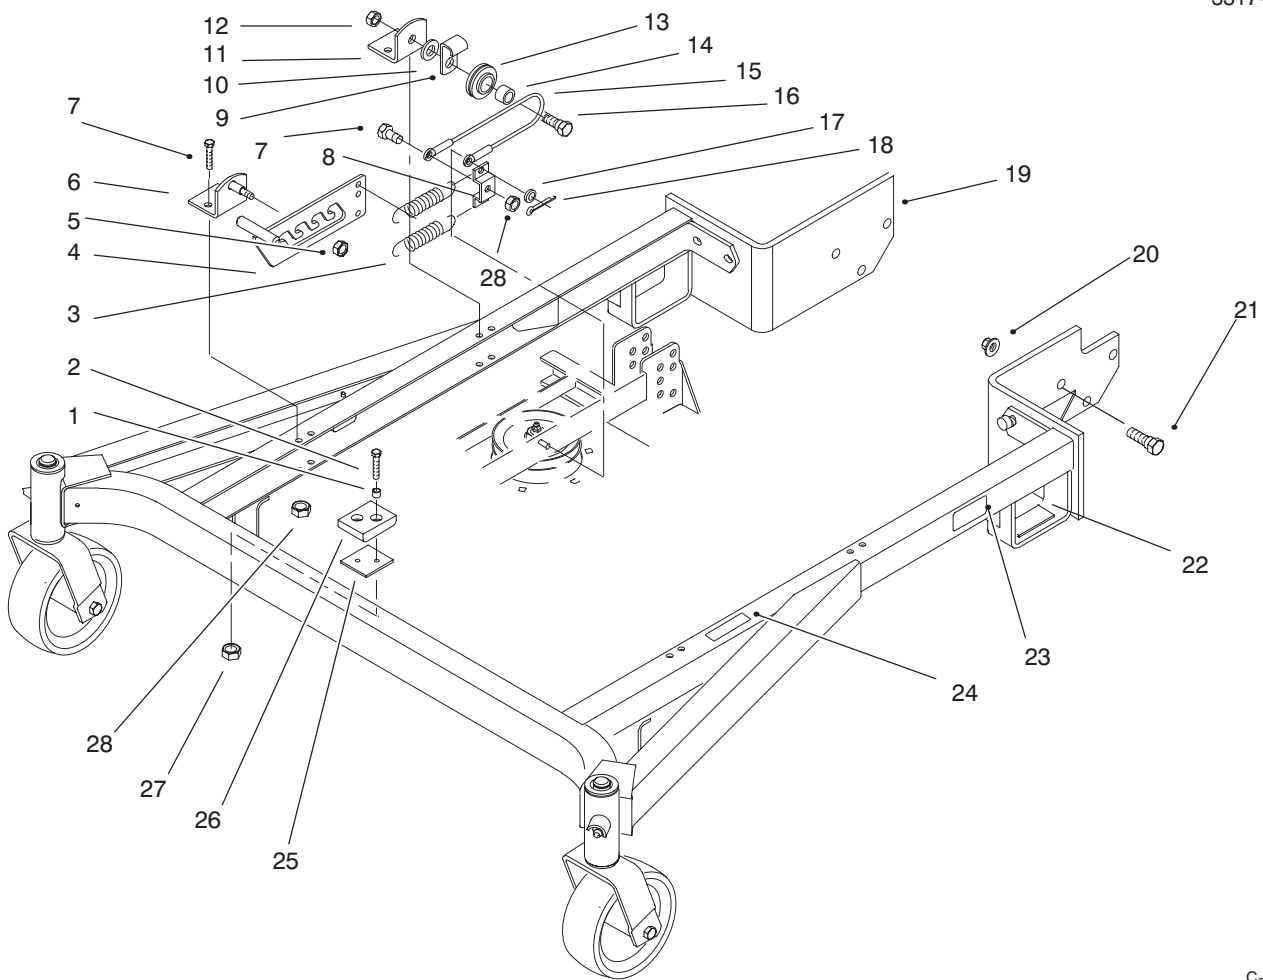


C-1363

CARRIER FRAME

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	40-9520	Spacer	4	17	3256-1	Washer - Flat	2
2	32122-28	Screw - Hex. Hd. Mach.	4	18	3290-307	Pin - Cotter	2
3	56-2770	Spring - Extension	3	19	16-2009	Carrier Frame Assembly (Incl. Ref. #23, 24)	1
4	56-3330	Tension Adjusting Control	2	20	32128-23	Nut - Lock	8
5	32128-13	Nut - Lock	2	21	3234-22	Screw - Hex. Flange Hd.	6
6	56-3340	Bracket - Tension Adjusting	2	22	92-5416	Pad - Rubber	2
7	321-4	Screw - Hex	9	23	68-8360	Decal - H.O.C. L. H. 1-4"	1
8	59-5390	Bracket - Spring	1	*	74-0940	Decal - H.O.C. R. H. 1-4"	1
9	56-2780	Retainer - Cable	2	*	85-7450	Decal - H.O.C. L. H. 2-5"	1
10	252-98	Washer - Thrust	2	*	85-7460	Decal - H.O.C. R. H. 2-5"	1
11	56-3360	Bracket - Pulley	2	24	55-4300	Decal - Warning	2
12	3296-47	Nut - Lock	2	25	92-5418	Shim - Front Cushion	3
13	3-8775	Pulley Assembly (Incl. Ref. #14)	2	26	92-5417	Cushion - Rubber, Front	2
14	256-159	Bushing	2	27	3296-42	Nut - Lock	9
15	56-3350	Cable	2	28	3296-2	Nut - Lock	4
16	59-5400	Bolt - Shoulder	2				

*Not Illustrated

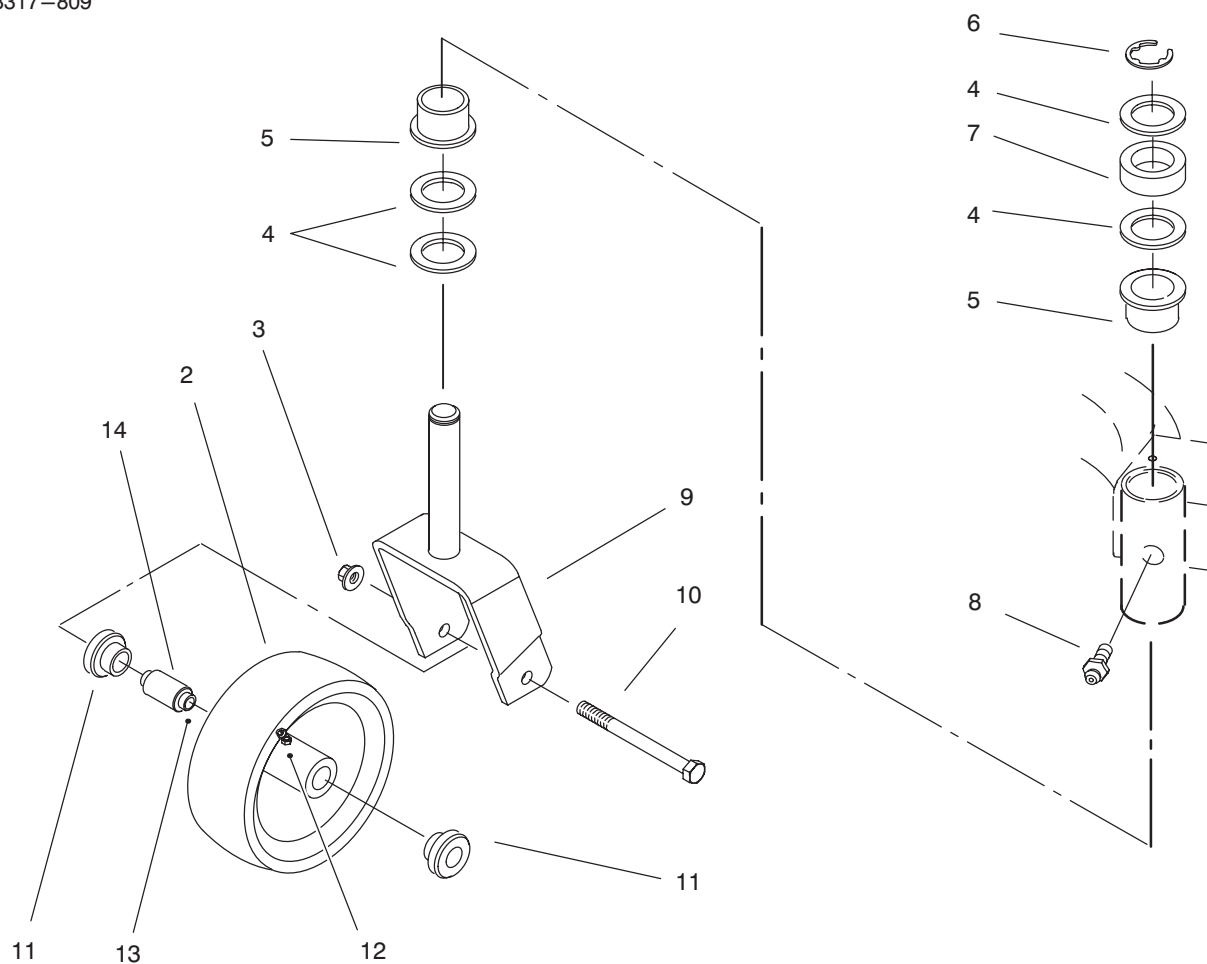

C-1364

CASTER FORK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
22	85-5760	Wheel & Tire Assembly (Incl. Ref. #1 & 11-13)	2
3	32153-5	Nut - Lock	2
4	3-6781	Washer - Thrust	8
5	94-1291	Bushing	4
6	32151-91	Ring - Retaining	2
7	93-1167	Spacer	2

Ref. No.	Part No.	Description	No. Used
8	302-5	Fitting – Grease	2
9	92-5408	Fork – Castor	2
10	325-22	Bolt – Wheel	2
11	62-5580	Bushing	2
12	302-40	Fitting – Grease	2
13	62-4340	Bushing – Spanner	2
14	62-4740	Bearing – Roller	2

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

TORO PART NUMBER INDEX

3317-809

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-6781	Washer - Thrust	6 4 8	74-1310	Cover - Deck, Center R.H.	2 12 1
3-8775	Pulley Assembly	5 13 2	74-1320	Cover - Deck, Center L.H.	2 20 1
5-1077	Key - Square	3 14 1	74-1330	VBelt - Deck Drive	1 4 1
7-0081	Washer - Special	3 7 1	74-2080	Decal - Proline	2 16 1
7-4150	Washer - Thrust	3 3 3	85-5760	Wheel & Tire Assembly	6 22 2
7-4150	Washer - Thrust	4 10 3	85-7450	Decal - H.O.C. L. H. 2-5	5 * 1
14-0909	Deflector Assembly	2 9 1	85-7460	Decal - H.O.C. R. H. 2-5	5 * 1
14-1519	Deck Assembly	1 1 1	92-5408	Fork - Castor	6 9 2
16-2009	Carrier Frame Assembly	5 19 1	92-5416	Pad - Rubber	5 22 2
16-2159	Gage Wheel Channel W/A	1 * 1	92-5417	Cushion - Rubber, Front	5 26 2
27-0920	Shaft - Spindle (Outer)	4 * 2	92-5418	Shim - Front Cushion	5 25 3
27-0950	Spacer - Spindle Bearing	4 6 3	93-1122	Decal	2 7 1
27-8580	Idler Socket Assembly	3 11 1	93-1167	Spacer	6 7 2
29-4820	Roller	1 10 3	94-1291	Bushing	6 5 4
36-1740	Roller - Deck, Rear	1 5 2	249-21	Latch - Draw	2 28 5
40-0340	Shaft - Roller	1 6 2	252-98	Washer - Thrust	5 10 2
40-6400	Shaft - Roller	1 20 1	253-139	Seal - Wave	4 7 6
40-9520	Spacer	5 1 4	256-156	Bushing	2 13 2
41-8440	Spacer - Hardened	2 15 2	256-159	Bushing	5 14 2
43-8480	Decal - Danger	2 26 2	283-2	Pin - Clevis	1 14 1
44-2200	Screw - Blade	4 1 3	283-55	Pin - Clevis	1 3 4
44-6250	Blade	4 4 3	302-2	Fitting - Grease	3 5 3
44-6260	VBelt - Deck	1 21 1	302-2	Fitting - Grease	4 12 3
44-6291	Cover - Deck L.H.	2 22 1	302-5	Fitting - Grease	6 8 2
44-6301	Plate Assembly Idler	3 16 1	302-40	Fitting - Grease	6 12 2
44-6340	Pulley Hub Assembly	3 17 2	321-4	Screw - Hex	5 7 9
44-6370	Spindle Housing Assembly	4 * 2	323-6	Screw - Hex. Hd.	1 9 2
46-8530	Bearing Assembly	3 1 3	325-17	Screw - Hex. Hd.	2 5 2
46-8530	Bearing Assembly	4 9 3	325-22	Bolt - Wheel	6 10 2
51-1530	Bracket - Hinge	2 4 2	3211-8	Screw - Hex. Hd.	3 13 1
51-1550	Spring	2 6 1	3218-5	Nut - Lock	2 21 4
51-3551	Shaft - Spindle (Center)	4 5 1	3231-22	Bolt - Carriage	3 18 18
55-4300	Decal - Warning	5 24 2	3231-27	Bolt - Carriage	2 1 4
56-2770	Spring - Extension	5 3 3	3234-22	Screw - Hex. Flange Hd.	5 21 6
56-2780	Retainer - Cable	5 9 2	3256-1	Washer - Flat	5 17 2
56-3330	Tension Adjusting Control	5 4 2	3256-24	Washer - Flat	4 13 A/R
56-3340	Bracket - Tension Adjusting	5 6 2	3256-24	Washer - Flat	1 17 1
56-3350	Cable	5 15 2	3256-27	Washer - Flat	3 10 1
56-3360	Bracket - Pulley	5 11 2	3272-11	Pin - Cotter	1 7 4
57-0580	Bracket - Roller	1 8 1	3290-307	Pin - Cotter	5 18 2
57-0680	Shaft - Roller	1 11 1	3290-321	Screw - Hex. Hd. Mach.	2 27 10
57-0690	Pin - Special	1 12 2	3290-355	Pin - Cotter	1 2 4
59-5390	Bracket - Spring	5 8 1	3290-357	Nut - Flange Lock	2 8 4
59-5400	Bolt - Shoulder	5 16 2	3290-357	Nut - Flange Lock	1 13 2
61-4160	Spindle	4 8 3	3290-357	Nut - Flange Lock	3 15 6
62-4340	Bushing - Spanner	6 13 2	3290-467	Pin - Cotter	1 19 1
62-4740	Bearing - Roller	6 14 2	3296-2	Nut - Lock	5 28 4
62-5580	Bushing	6 11 2	3296-5	Nut - Lock	3 8 1
63-9830	Cover - Deck R.H.	2 11 1	3296-39	Nut - Lock	1 18 1
65-5940	Pulley - Idler	3 6 1	3296-42	Nut - Lock	5 27 9
65-5950	Bushing - Pulley	3 12 1	3296-45	Nut - Lock	2 19 2
66-1340	Decal - Danger	2 2 2	3296-47	Nut - Lock	5 12 2
66-1630	Decal - 62"	2 17 1	3296-71	Nut - Lock	3 9 1
66-6380	Decal - Deflector Missing	2 3 1	32122-28	Screw - Hex. Hd. Mach.	5 2 4
67-5360	Decal - Shield Missing	2 24 4	32128-13	Nut - Lock	5 5 2
67-5770	Washer - Flat	4 2 3	32128-17	Nut - Lock	2 23 10
68-2350	Plate - Gauge Wheel	1 15 1	32128-21	Nut - Lock	4 14 18
68-2730	Wheel - Gauge	1 16 1	32128-23	Nut - Lock	5 20 8
68-8340	Decal - Blade Torque	2 25 1	32146-20	Nut - Lock	3 4 1
68-8360	Decal - H.O.C. L. H. 1-4	5 23 1	32146-20	Nut - Lock	4 11 1
72-9361	Cup - Anti Scalp	4 3 3	32151-91	Ring - Retaining	6 6 2
74-0290	Spring - Compression	2 14 2	32153-5	Nut - Lock	6 3 2
74-0311	Shaft - Adjusting	2 18 2	32153-5	Nut - Lock	2 10 2
74-0940	Decal - H.O.C. R. H. 1-4	5 * 1			
74-1230	Pulley & Hub Assembly	3 2 1			

*Not Illustrated