




MODEL NO. 22026-6900001 & UP

PARTS CATALOG

PROLINE 21" Side Discharge Mower

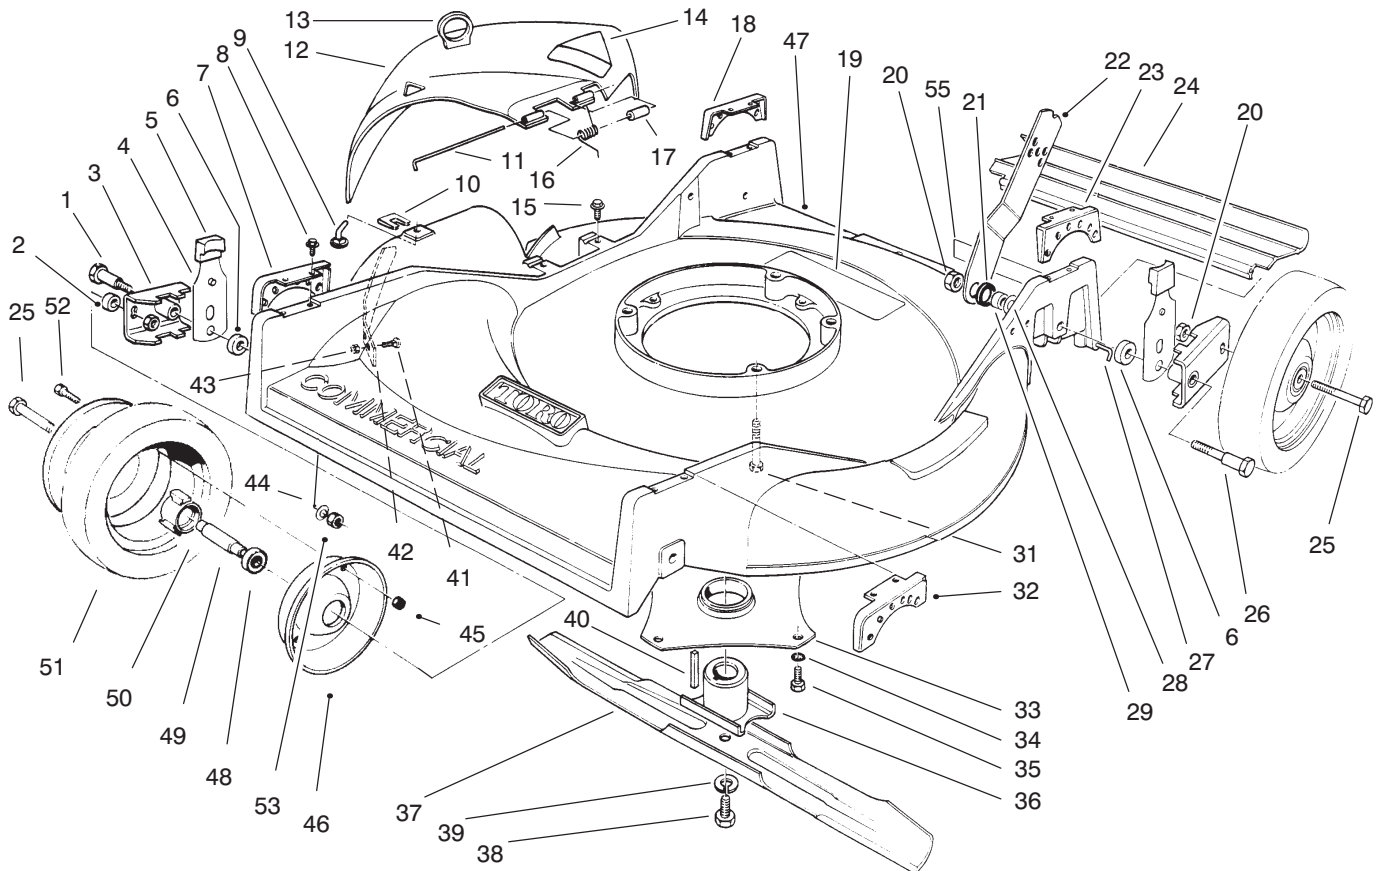


C-1012B

HOUSING & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49-9180	Screw - Pivot	2
2	52-2480	Spacer - Wheel	4
3	49-9160	Pivot Arm Assembly	4
4	49-8800	Spring Arm Assembly	4
5	25-7740	Knob - Arm	4
6	53-7930	Spacer - Pivot Arm	4
7	52-2510	Quadrant - Front R.H.	1
8	49-2040	Screw - Thread Forming	8
9	28-3260	Pin - Chute	1
10	28-3250	Clip - Pin	1
11	52-2570	Pin - Deflector Hinge	1
12	12-4739	Deflector (Incl. Ref. #14)	1
13	28-1430	Loop - Lift	1
14	39-5770	Decal - Danger	1
15	46-6811	Screw/Washer Assembly	2
16	52-2560	Spring - Deflector	1
17	28-3270	Sleeve - Spring	1

Ref. No.	Part No.	Description	No. Used
18	52-2530	Quadrant - Rear R.H.	1
19	71-1280	Decal - Safety Instructions	1
20	3296-39	Nut - Lock	6
21	27-6510	Spacer - Latch, Handle	2
22	27-7071	Latch - Handle	2
23	52-2540	Quadrant - Rear L.H.	1
24	52-2640	Shield - Rear, Safety	1
25	323-12	Screw - Cap, Hex Hd.	4
26	52-2260	Screw - Pivot, Rear	2
27	33-3201	Rod - Shield	1
28	3290-340	Washer - Belleville	2
29	52-2360	Spacer - Handle, Brace	2
31	66-9303	Screw - Hex. Washer Hd.	4
32	52-2520	Quadrant - Front L.H.	1
33	52-2500	Crankshaft Protector	1
34	3254-6	Washer - Lock, Int. Tooth	4
35	32144-70	Screw - Thread Forming	4

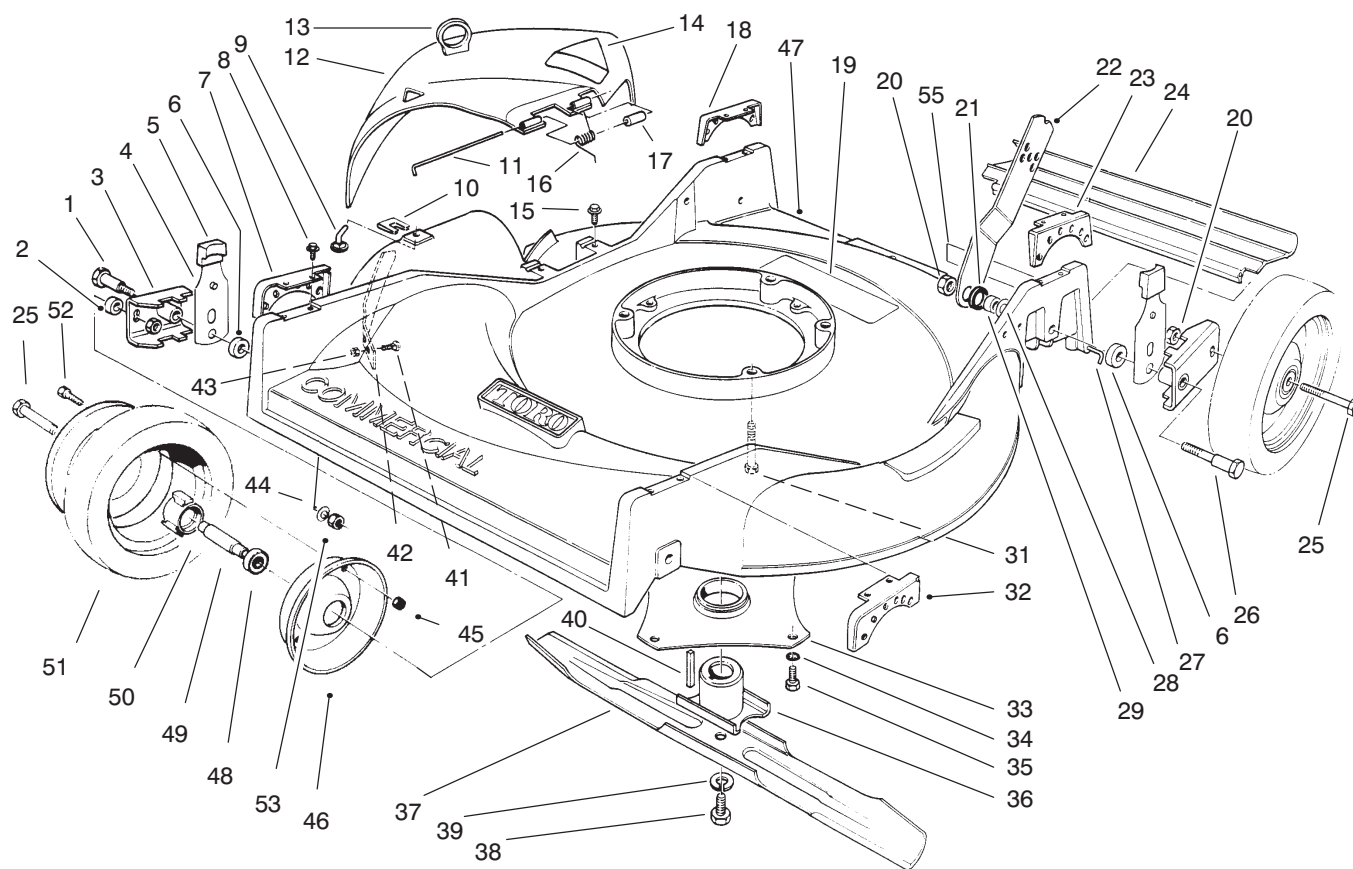


C-1012B

HOUSING & WHEEL ASSEMBLY (Cont.)

Ref. No.	Part No.	Description	No. Used
36	52-2170	Retainer, Blade	1
37	8-5230	Blade 21"	1
38	26-0671	Screw — Blade	1
39	3253-22	Washer — Lock	1
40	27-8590	Key — Square	1
41	3230-16	Bolt — Carriage	2
42	52-2650	Bar — Safety	1
43	3296-29	Nut — Lock	2
44	3290-455	Washer — Belleville	2
45	3296-42	Nut — Lock	16
46	53-7780	Plate — Wheel Half	8

Ref. No.	Part No.	Description	No. Used
47	12-4729	Housing (Incl. Ref. #19, 54 & 55)	1
48	52-2450	Bearing — Wheel	8
49	52-2440	Spacer — Bearing	4
50	52-2410	Hub	4
51	53-7740	Tire	4
52	321-2	Screw — Cap, Hex. Hd.	16
53	32152-2	Nut — Lock	2
55	92-1779	Decal — Warning	1
*	53-7720	Tire & Wheel Assembly (Incl. Ref. #45, 46 & 48-52)	4

*Not Illustrated

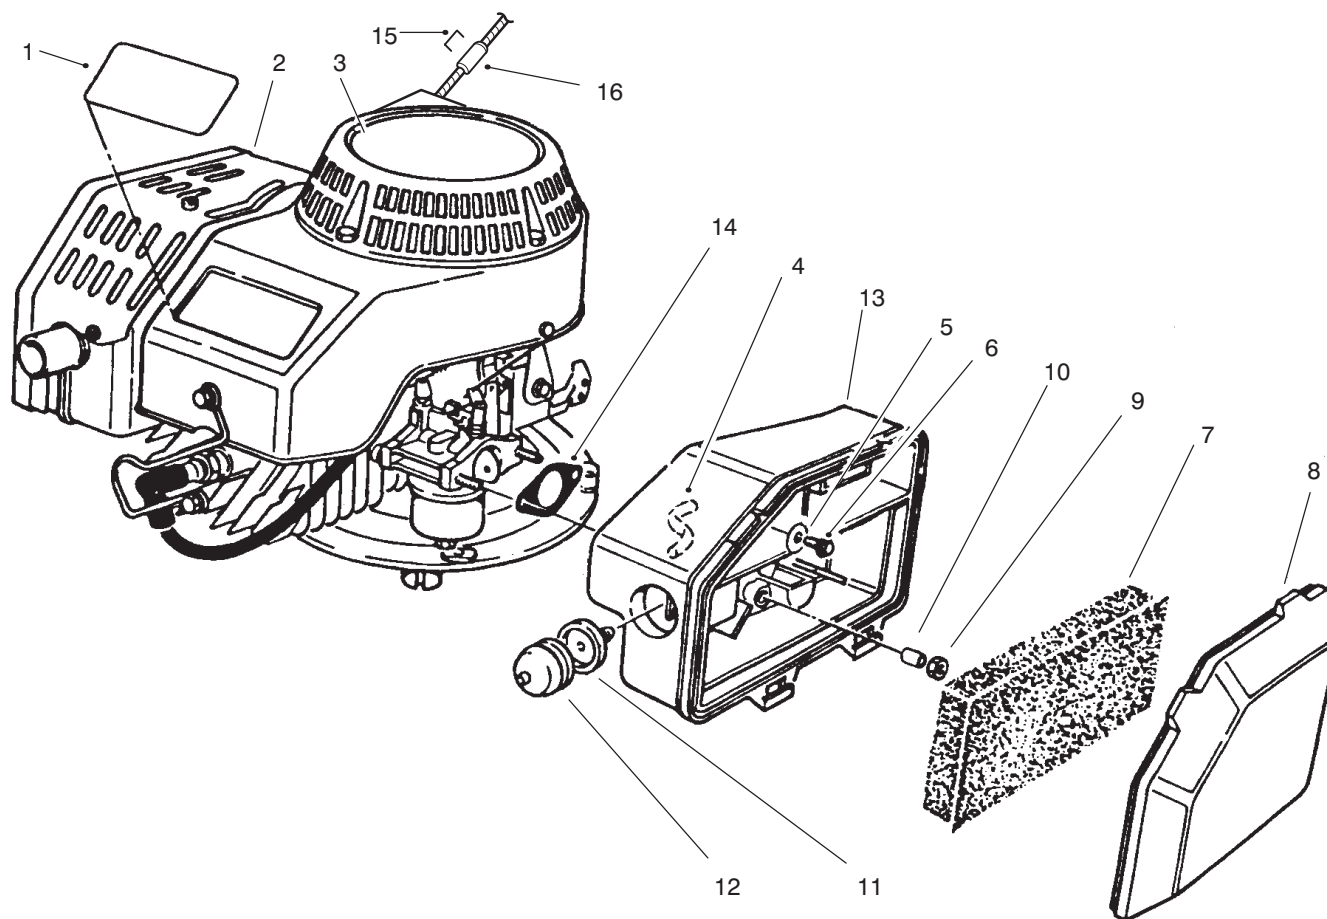


C-1013

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-1260	Decal - Pro Line	1
2	61-8062	Engine - Complete	1
3	77-0040	Decal - Recoil	1
4	44-3172	Hose - Primer	1
5	3256-16	Washer	1
6	51-2690	Screw - Hex. Flange Hd.	1
7	63-9380	Filter - Foam	1
8	63-9340	Cover - Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
9	50-7180	Nut	2
10	62-3980	Sleeve	2
11	44-2750	Body - Primer	1
12	66-7460	Bulb - Primer	1
13	63-9330	Body - Air Cleaner	1
14	81-0090	Gasket - Air Cleaner	1
†15		Staple	1
16	47-2480	Stop - Recoil	1

† Obtain Locally

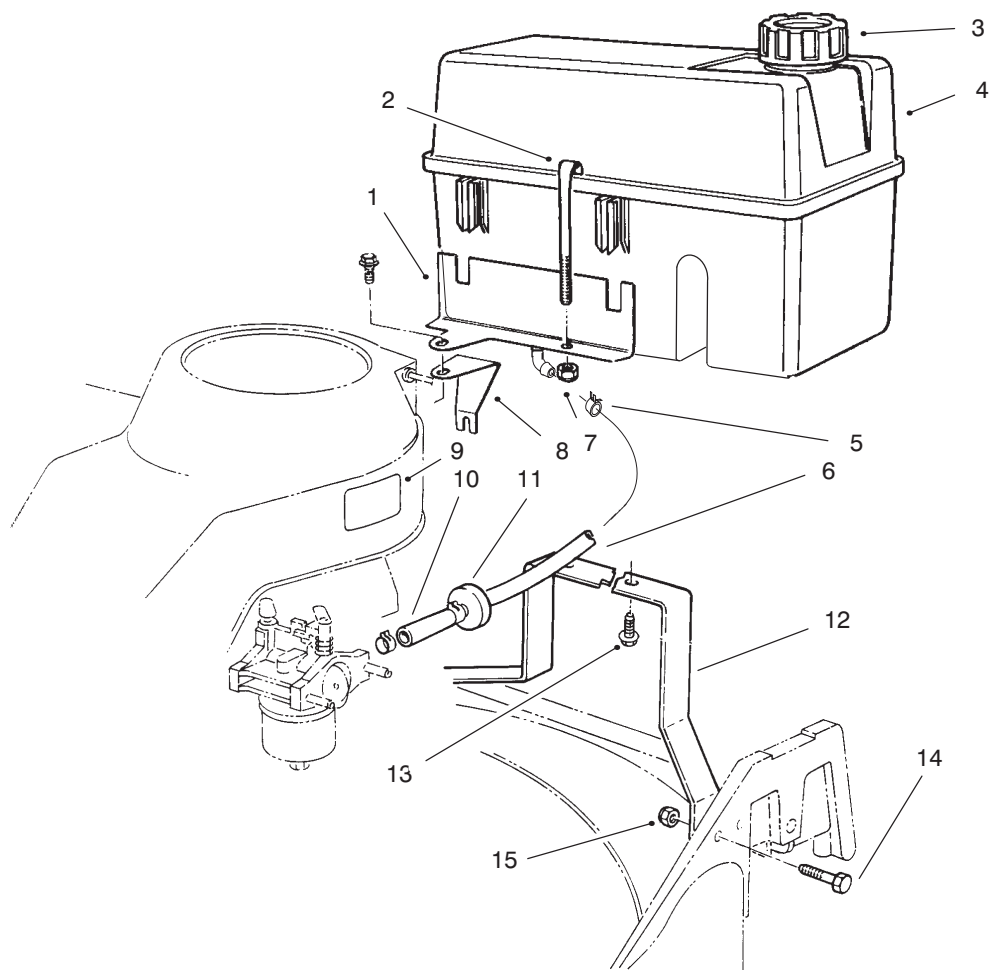


C-2421

FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-2110	Bracket – Tank	1
2	77-2840	Retainer – Fuel Tank	1
3	55-3545	Gas Cap Assembly	1
4	94-5827	Fuel Tank Assembly	1
5	2412-95	Clamp – Fuel Line	4
6	68-3633	Hose – Fuel	1
7	3296-42	Nut – Lock	1
8	77-0520	Support – Bracket	1

Ref. No.	Part No.	Description	No. Used
9	62-7600	Decal – Fuel Mix	1
10	51-3211	Hose – Fuel	1
11	71-9280	Filter – Fuel	1
12	74-2020	Base – Tank, Fuel	1
13	46-8091	Screw – Hex. Washer Hd.	2
14	322-6	Screw – Cap, Hex. Hd.	2
15	3296-29	Nut – Lock	2

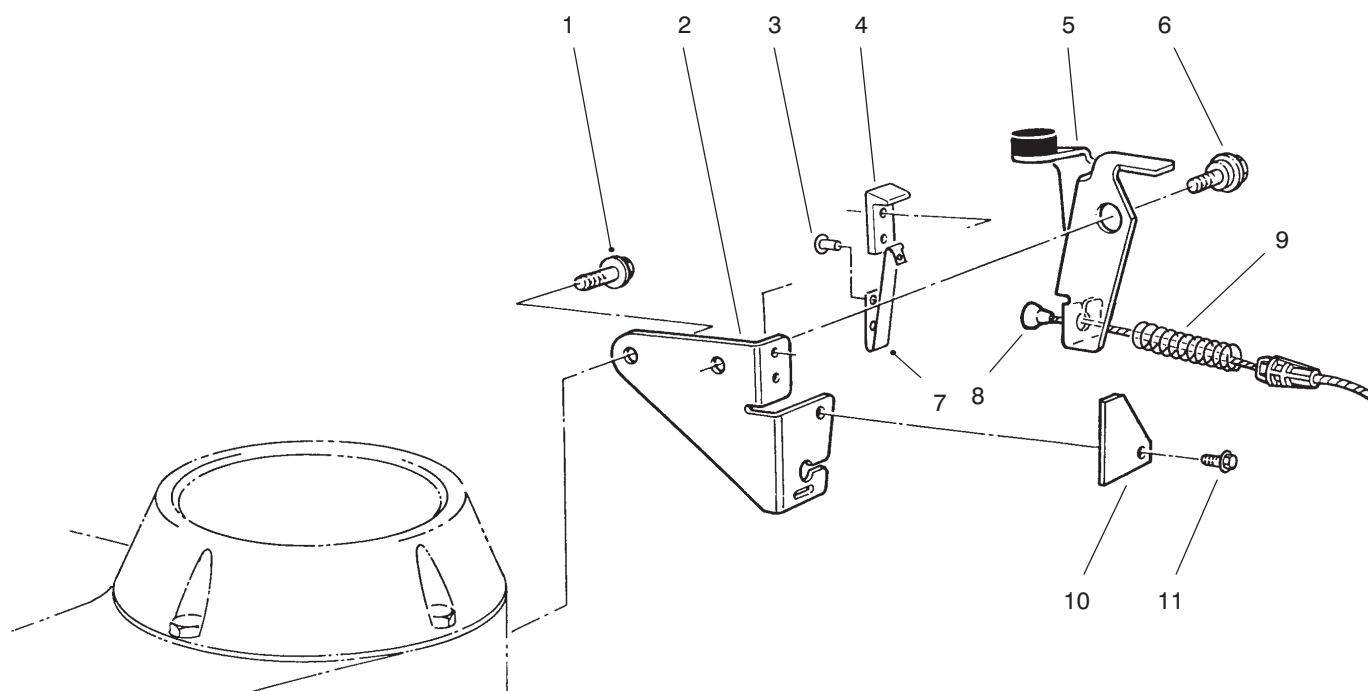


C-0531

BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-10	Screw — Self Tapping	1
2	84-7820	Plate — Mounting	1
3	3290-459	Rivet	2
4	77-5260	Strap — Insulation	1
5	66-5380	Brake Plate Assembly	1
6	92-9698	Screw — Shoulder, Metric	1
7	60-9010	Strap — Ground	1

Ref. No.	Part No.	Description	No. Used
8	85-6870	Cable — Brake	1
9	66-5370	Spring — Compression	1
10	53-4690	Stop — Ground Strap	1
11	32144-112	Screw — Self Tapping	1
*	14-6009	Mounting Plate Assembly (Incl. Ref. #2-4, & 7)	1

* Not Illustrated

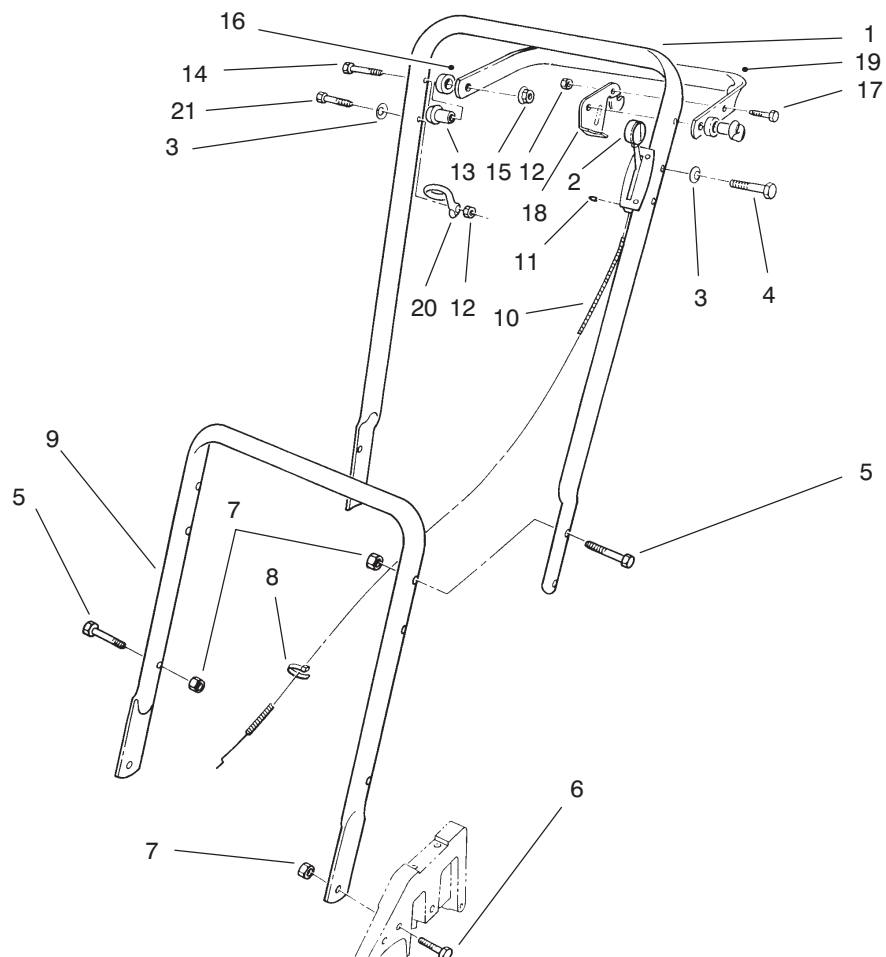


C-1015

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-2150	Handle – Upper	1
2	82-9950	Bracket – Throttle	1
3	3-7501	Washer – Curved	4
4	321-13	Screw – Cap, Hex. Hd.	2
5	322-7	Screw – Cap, Hex. Hd.	6
6	322-6	Screw – Cap, Hex. Hd.	2
7	3296-29	Nut – Lock	8
8	3290-378	Tie – Cable	1
9	52-2370	Handle – Lower	1
10	70-1062	Cable – Throttle	1
11	32151-86	Clip – Throttle	2

Ref. No.	Part No.	Description	No. Used
12	3296-42	Nut – Lock	2
13	49-1630	Support – Spacer	2
14	322-10	Screw – Hex Hd. Cap	2
15	3296-58	Nut – Lock	2
16	256-276	Spacer	1
17	321-4	Screw – Hex Hd. Cap	1
18	66-5350	Lever – Control	1
19	61-8270	Bar – Control	1
20	46-8081	Guide – Rope	1
21	321-9	Screw – Hex Hd. Cap	1

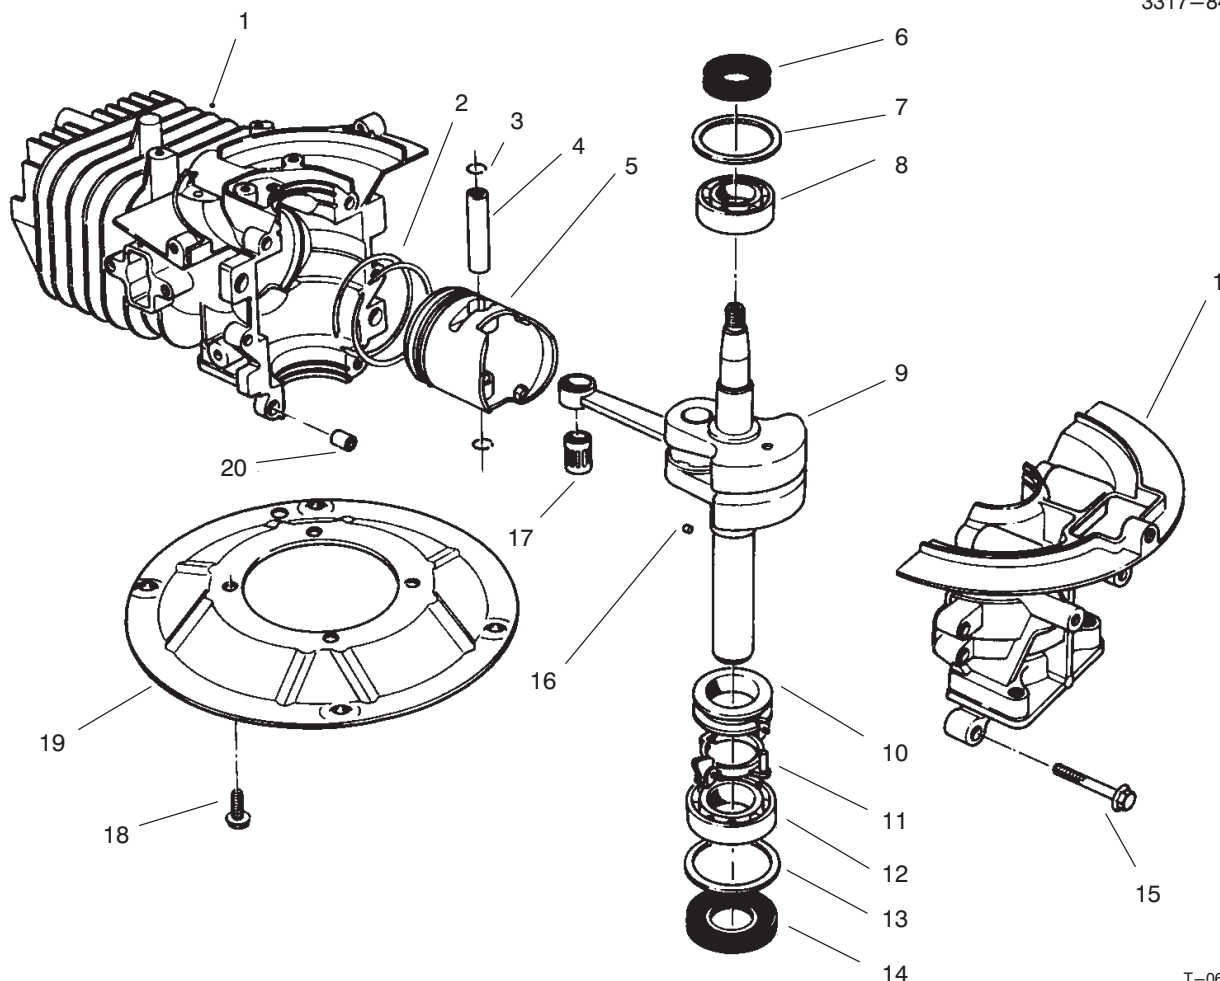


T-0663

CRANKSHAFT ASSEMBLY (Model No. 47PS5-3)

Ref. No.	Part No.	Description	No. Used
1	81-2800	Crankcase/Cylinder Assy.	1
2	81-0590	Piston Ring Set	1
3	81-0620	Circlip	2
4	81-0600	Pin - Wrist	1
5	81-2140	Piston - 58mm	1
6	81-0720	Seal - Oil, Upper	1
7	81-0710	Washer - Thrust, Upper	1
8	81-0690	Bearing - Upper 20mm	1
9	81-4680	Crankshaft/Connecting Rod Assembly	1
10	81-0770	Spacer - Governor	1

Ref. No.	Part No.	Description	No. Used
11	81-0750	Bracket - Arm, Governor	1
12	81-0700	Bearing - Lower 25mm	1
13	81-0730	Washer - Thrust, Lower	1
14	81-0740	Seal - Oil, Lower	1
15	81-0540	Bolt 30mm Lg.	5
16	81-0760	Pin - Crankshaft	1
17	81-0610	Bearing - Wrist Pin	1
18	81-0570	Bolt	4
19	81-0560	Plate - Mounting	1
20	81-0520	Pin - Crankcase	2
*	12-8099	Short Block	1

*Not Illustrated

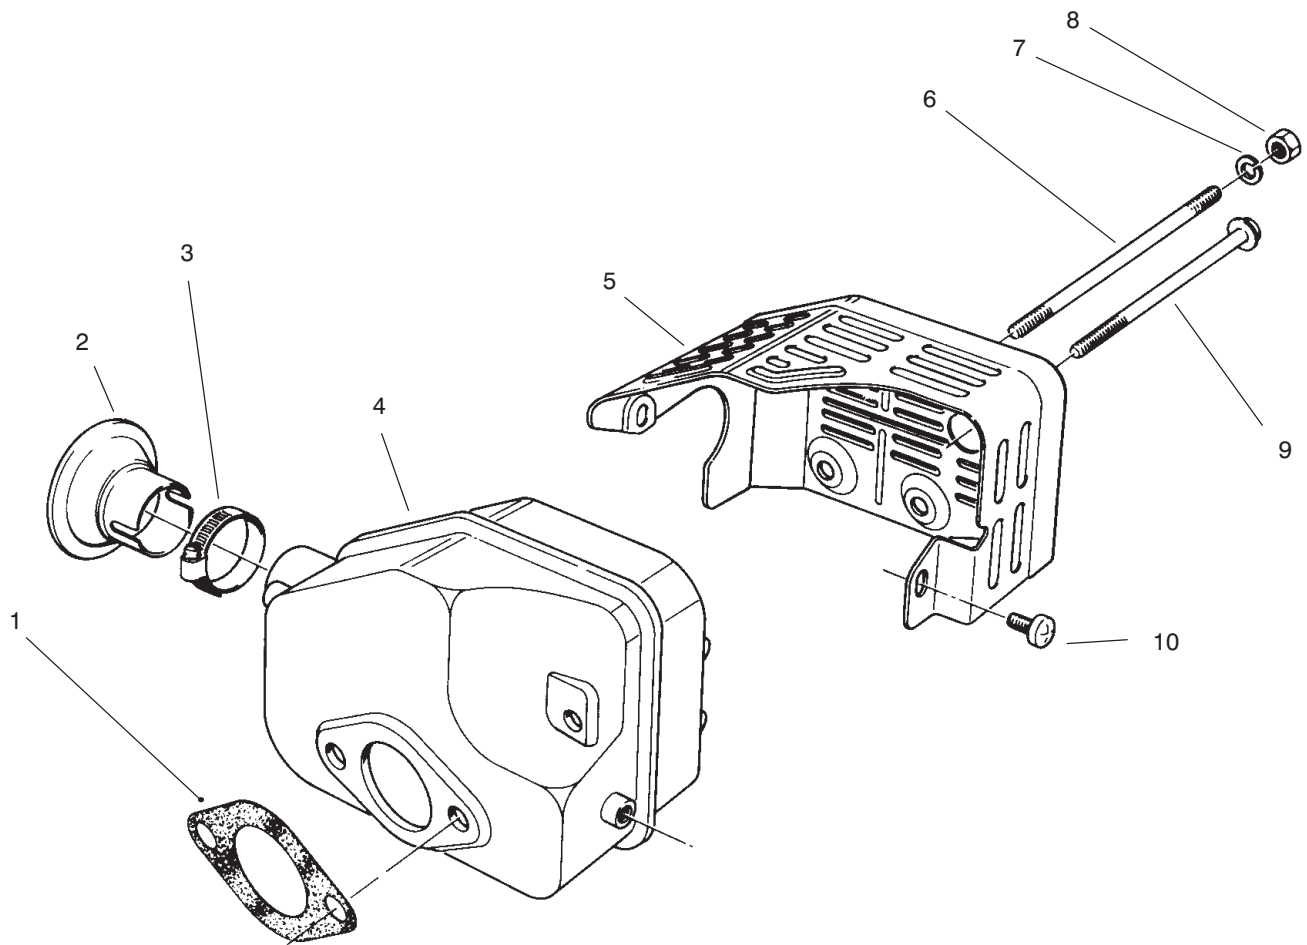


T-0667

**MUFFLER ASSEMBLY
(Model No. 47PS5-3)**

Ref. No.	Part No.	Description	No. Used
1	81-1080	Gasket - Muffler	1
2	81-0200	Spark Arrester (Optional)	1
†3		Clamp	1
4	81-5690	Muffler	1
5	81-2450	Cover - Muffler	1

Ref. No.	Part No.	Description	No. Used
6	81-1100	Bolt	2
7	81-1120	Washer - Lock	2
8	81-1110	Nut	2
9	81-1150	Bolt - Self Tapping	1
10	81-1140	Screw - Phillips Hd.	2

†Obtain Locally

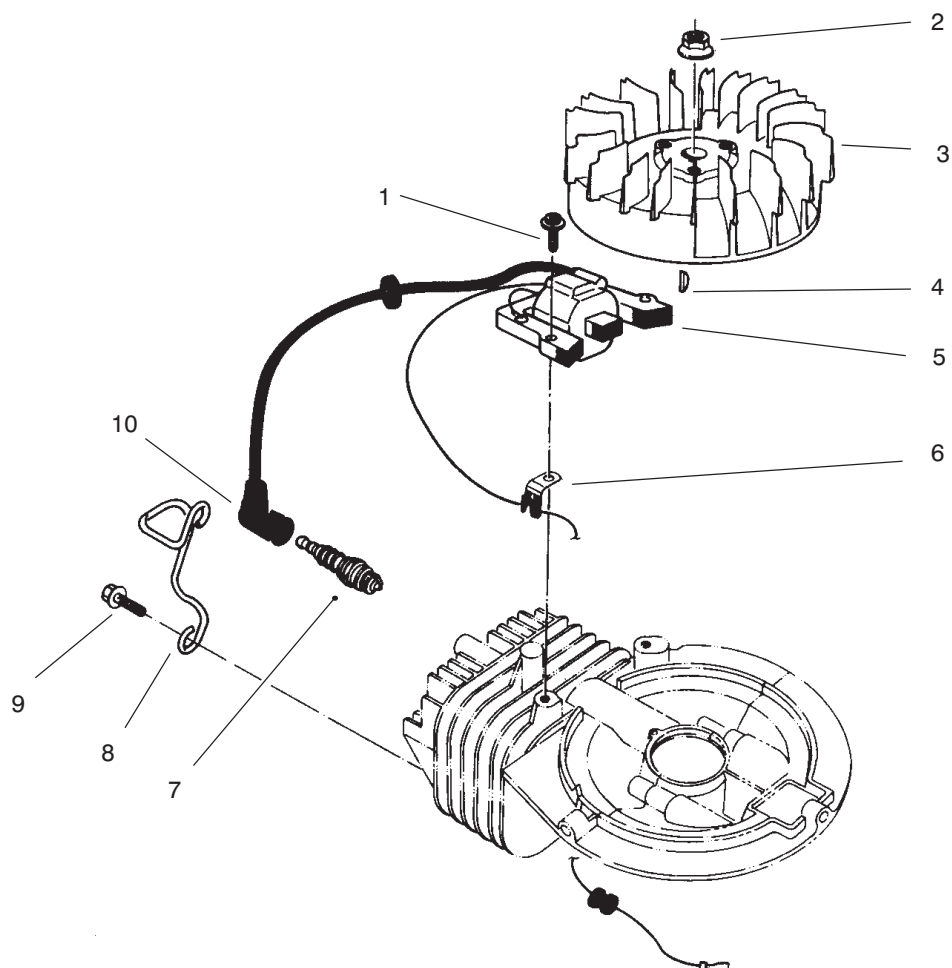


T-0664

IGNITION ASSEMBLY (Model No. 47PS5-3)

Ref. No.	Part No.	Description	No. Used
1	81-5680	Screw - Cap, Hex Hd.	2
2	81-1330	Nut	1
3	81-2810	Flywheel - Magneto	1
4	81-2370	Key - Flywheel	1
5	81-2820	Coil/Ignition Assembly	1
6	81-1480	Clamp	1

Ref. No.	Part No.	Description	No. Used
7	81-0181	Spark Plug	1
8	81-2120	Guard - Spark Plug	1
9	81-2350	Bolt - Self Tapping (20mm Lg.)	2
10	81-1500	Cap Assembly - Spark Plug	1
*	41-7650	Puller - Flywheel	1

*Not Illustrated

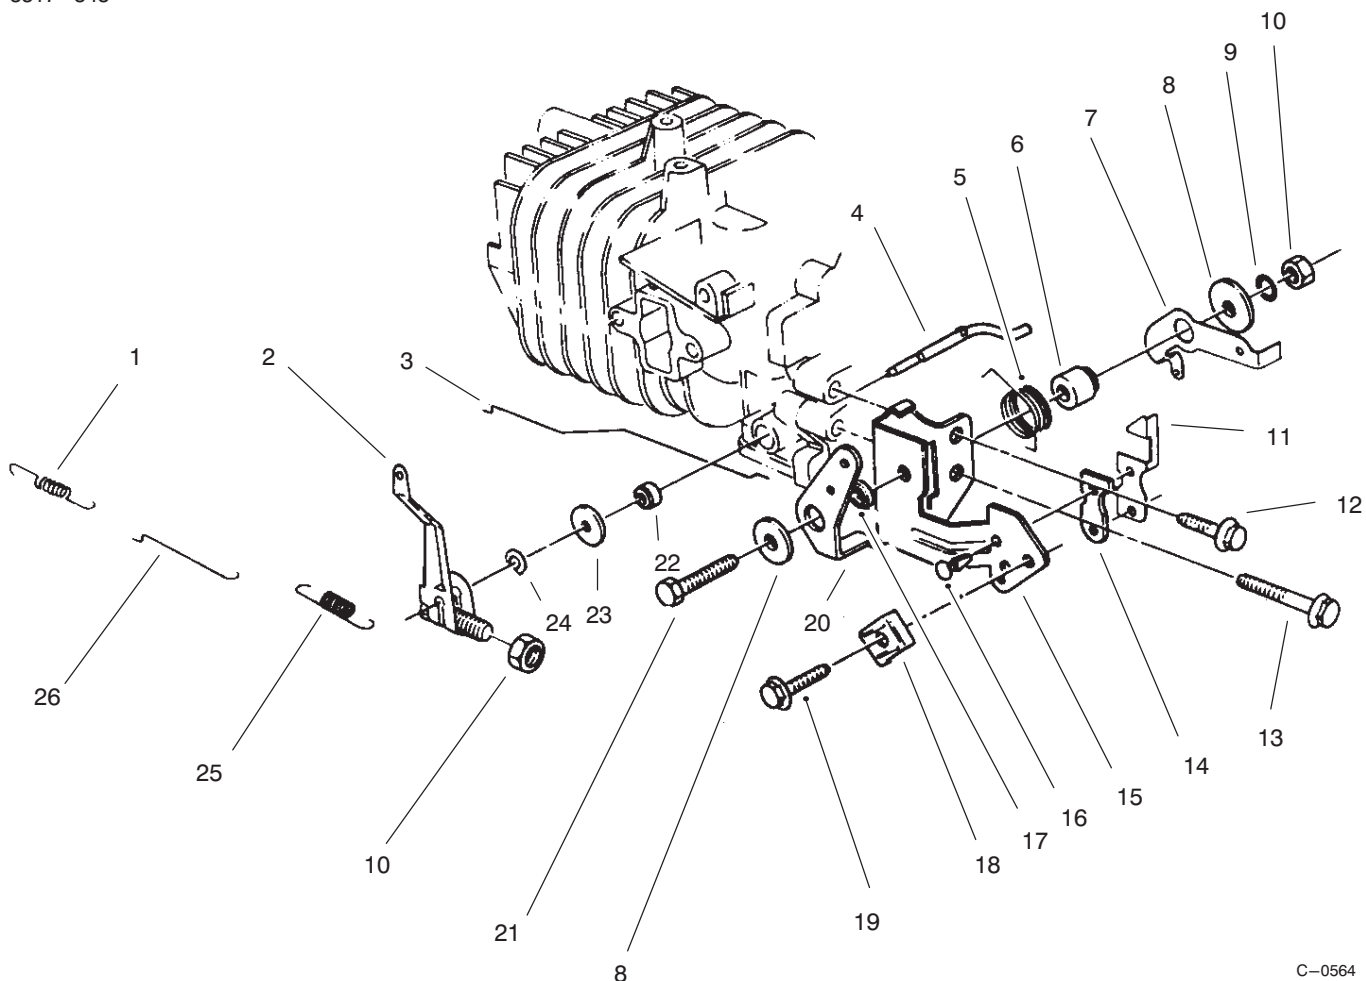


C-0564

GOVERNOR ASSEMBLY (Model No. 47PS5-3)

Ref. No.	Part No.	Description	No. Used
1	81-0920	Spring - Carburetor Rod	1
2	81-5420	Governor Arm/Bolt Assy.	1
3	81-5410	Rod - Choke	1
4	81-2880	Shaft - Governor	1
5	81-2460	Spring - Lever, Choke	1
6	81-1770	Spacer - Lever, Governor	1
7	81-2850	Lever - Governor	1
8	81-1750	Washer - Lever, Choke	2
9	81-1450	Washer - Lock	1
10	81-0900	Nut	2
11	81-1840	Terminal - Kill Switch	1
12	81-1170	Bolt - Self Tapping	1
13	81-0540	Bolt	1

Ref. No.	Part No.	Description	No. Used
14	81-1830	Insulator - Kill Switch	1
15	81-2420	Bracket - Throttle	1
16	81-4530	Rivet - Kill Switch	2
17	81-2470	Spacer - Lever, Choke	1
18	81-2430	Clamp - Cable	1
19	50-0130	Bolt - Clamp, Cable	1
20	81-1710	Lever - Choke	1
21	81-1730	Bolt - Bracket, Throttle	1
22	81-0850	Seal - Shaft, Governor	1
23	81-0860	Washer	1
24	81-0870	Ring - Retaining	1
25	81-2830	Spring - Governor	1
26	81-0910	Rod - Carburetor	1

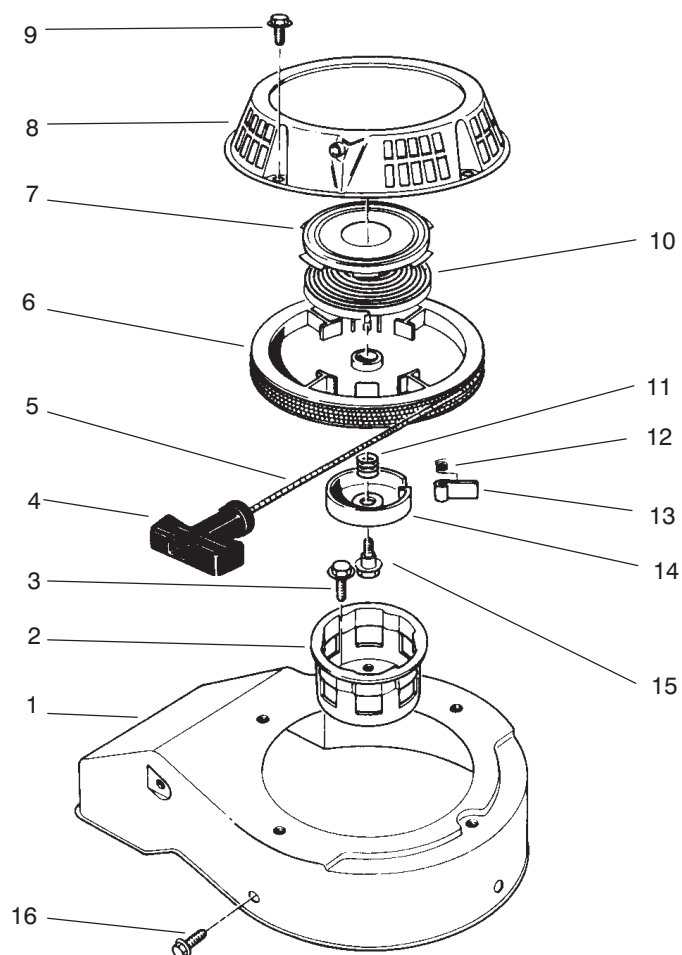


T-1102

RECOIL ASSEMBLY (Model No. 47PS5-3)

Ref. No.	Part No.	Description	No. Used
1	81-2080	Cover - Fan, Cooling	1
2	81-2170	Cup - Pulley, Starter	1
3	81-1300	Bolt	3
4	81-1630	Handle - Recoil	1
5	81-1270	Rope	1
6	81-1210	Pulley - Rope	1
7		Retainer - Spring, Recoil	1
8	81-2100	Case - Starter	1
9	81-1280	Bolt	4
10		Spring - Recoil	1
11	81-1240	Spring - Compression	1

Ref. No.	Part No.	Description	No. Used
12	81-1220	Spring - Dog	1
13	81-1230	Dog - Starter	1
14	81-1250	Retainer - Dog	1
15	81-1260	Bolt - Shoulder	1
16	53-1340	Bolt - Self Tapping (15mm Lg.)	3
*	81-5940	Starter Assembly (Incl. Ref. #4-15)	1
*	81-2300	Spring & Retainer Assembly (Incl. Ref. #7 & 10)	1

*Not Illustrated

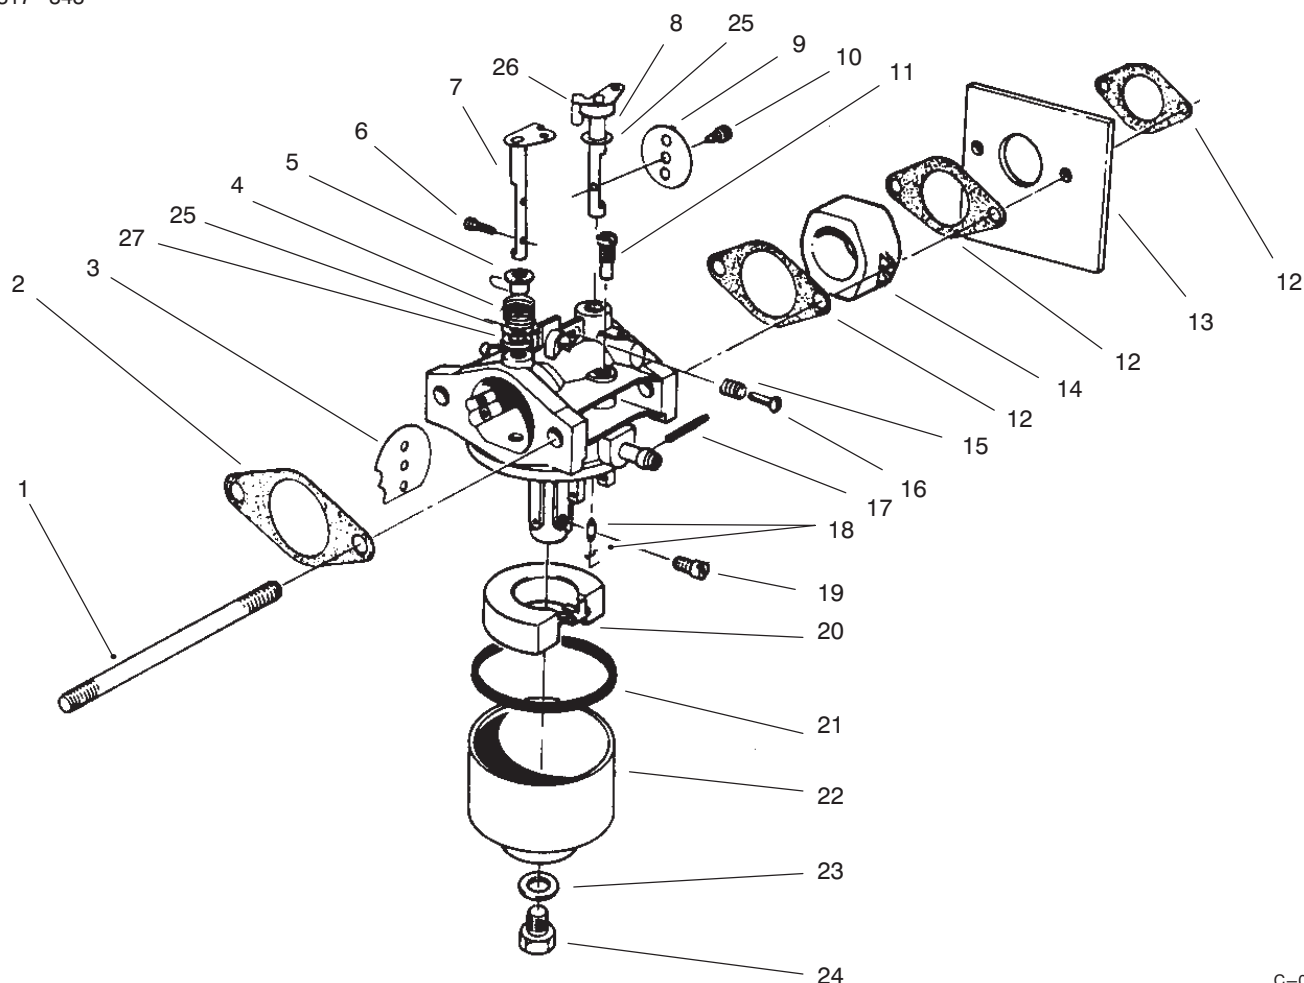

C-0563

CARBURETOR ASSEMBLY (Model No. 47PS5-3)

Ref. No.	Part No.	Description	No. Used
1	81-5450	Stud Bolt, Carburetor	2
2	81-0090	Gasket	1
3	81-0240	Valve - Choke	1
4	81-0230	Spring - Choke	1
5	81-0220	Bushing - Choke	1
6	81-2160	Screw - Choke Plate	2
7	81-1950	Shaft - Choke	1
8	81-0250	Shaft - Throttle	1
9	81-0260	Valve - Throttle	1
10	81-0270	Screw - Throttle	1
11	81-1030	Jet - Pilot #40	1
12	81-0780	Gasket - Carburetor	3
13	81-5490	Shield - Carburetor	1
14	81-5440	Insulator - Carburetor	1
15	81-2580	Spring - Idle Stop	1
16	50-0250	Screw - Idle Stop	1
17	81-2600	Pin - Float	1

Ref. No.	Part No.	Description	No. Used
18	81-4910	Needle Valve	1
19	81-1060	Jet - Main #75	1
*	81-2340	Jet - Main #72.5 High Alt. Above 6,000 Ft. (Optional)	A/R
20	81-0970	Float	1
21	81-1010	Gasket - Bowl, Float	1
22	81-5660	Bowl - Float	1
23	81-1020	Gasket - Capscrew, Bowl	1
24	81-5670	Capscrew - Bowl	1
25	81-2530	Seal	2
26	81-2540	Ring	1
27	81-2550	Packing	1
*	12-6379	Carburetor Kit (Incl. Ref. #2, 12, 18, 21 & 23)	1
*	81-2520	Carburetor Assy. Complete	1
*	81-5810	Seat Kit (Incl. Valve Seat & Ref. #18)	1

*Not Illustrated

TORO PART NUMBER INDEX

3317-848

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-7501	Washer - Curved	6 3 4	63-9380	Filter - Foam	3 7 1
8-5230	Blade 21	2 37 1	66-5350	Lever - Control	6 18 1
12-4729	Housing	2 47 1	66-5370	Spring - Compression	5 9 1
12-4739	Deflector	1 12 1	66-5380	Brake Plate Assembly	5 5 1
12-6379	Carburetor Kit	12 * 1	66-7460	Bulb - Primer	3 12 1
12-8099	Short Block	7 * 1	66-9303	Screw - Hex. Washer Hd.	1 31 4
14-6009	Mounting Plate Assembly	5 * 1	68-3633	Hose - Fuel	4 6 1
25-7740	Knob - Arm	1 5 4	70-1062	Cable - Throttle	6 10 1
26-0671	Screw - Blade	2 38 1	71-1260	Decal - Pro Line	3 1 1
27-6510	Spacer - Latch, Handle	1 21 2	71-1280	Decal - Safety Instructions	1 19 1
27-7071	Latch - Handle	1 22 2	71-9280	Filter - Fuel	4 11 1
27-8590	Key - Square	2 40 1	74-2020	Base - Tank, Fuel	4 12 1
28-1430	Loop - Lift	1 13 1	74-2110	Bracket - Tank	4 1 1
28-3250	Clip - Pin	1 10 1	74-2150	Handle - Upper	6 1 1
28-3260	Pin - Chute	1 9 1	77-0040	Decal - Recoil	3 3 1
28-3270	Sleeve - Spring	1 17 1	77-0520	Support - Bracket	4 8 1
33-3201	Rod - Shield	1 27 1	77-2840	Retainer - Fuel Tank	4 2 1
39-5770	Decal - Danger	1 14 1	77-5260	Strap - Insulation	5 4 1
41-7650	Puller - Flywheel	9 * 1	81-0090	Gasket	12 2 1
44-2750	Body - Primer	3 11 1	81-0090	Gasket - Air Cleaner	3 14 1
44-3172	Hose - Primer	3 4 1	81-0181	Spark Plug	9 7 1
46-6811	Screw/Washer Assembly	1 15 2	81-0200	Spark Arrester (Optional)	8 2 1
46-8081	Guide - Rope	6 20 1	81-0220	Bushing - Choke	12 5 1
46-8091	Screw - Hex. Washer Hd.	4 13 2	81-0230	Spring - Choke	12 4 1
47-2480	Stop - Recoil	3 16 1	81-0240	Valve - Choke	12 3 1
49-1630	Support - Spacer	6 13 2	81-0250	Shaft - Throttle	12 8 1
49-2040	Screw - Thread Forming	1 8 8	81-0260	Valve - Throttle	12 9 1
49-8800	Spring Arm Assembly	1 4 4	81-0270	Screw - Throttle	12 10 1
49-9160	Pivot Arm Assembly	1 3 4	81-0520	Pin - Crankcase	7 20 2
49-9180	Screw - Pivot	1 1 2	81-0540	Bolt	10 13 1
50-0130	Bolt - Clamp, Cable	10 19 1	81-0540	Bolt 30mm Lg.	7 15 5
50-0250	Screw - Idle Stop	12 16 1	81-0560	Plate - Mounting	7 19 1
50-7180	Nut	3 9 2	81-0570	Bolt	7 18 4
51-2690	Screw - Hex. Flange Hd.	3 6 1	81-0590	Piston Ring Set	7 2 1
51-3211	Hose - Fuel	4 10 1	81-0600	Pin - Wrist	7 4 1
52-2170	Retainer, Blade	2 36 1	81-0610	Bearing - Wrist Pin	7 17 1
52-2260	Screw - Pivot, Rear	1 26 2	81-0620	Circlip	7 3 2
52-2360	Spacer - Handle, Brace	1 29 2	81-0690	Bearing - Upper 20mm	7 8 1
52-2370	Handle - Lower	6 9 1	81-0700	Bearing - Lower 25mm	7 12 1
52-2410	Hub	2 50 4	81-0710	Washer - Thrust, Upper	7 7 1
52-2440	Spacer - Bearing	2 49 4	81-0720	Seal - Oil, Upper	7 6 1
52-2450	Bearing - Wheel	2 48 8	81-0730	Washer - Thrust, Lower	7 13 1
52-2480	Spacer - Wheel	1 2 4	81-0740	Seal - Oil, Lower	7 14 1
52-2500	Crankshaft Protector	1 33 1	81-0750	Bracket - Arm, Governor	7 11 1
52-2510	Quadrant - Front R.H.	1 7 1	81-0760	Pin - Crankshaft	7 16 1
52-2520	Quadrant - Front L.H.	1 32 1	81-0770	Spacer - Governor	7 10 1
52-2530	Quadrant - Rear R.H.	1 18 1	81-0780	Gasket - Carburetor	12 12 3
52-2540	Quadrant - Rear L.H.	1 23 1	81-0850	Seal - Shaft, Governor	10 22 1
52-2560	Spring - Deflector	1 16 1	81-0860	Washer	10 23 1
52-2570	Pin - Deflector Hinge	1 11 1	81-0870	Ring - Retaining	10 24 1
52-2640	Shield - Rear, Safety	1 24 1	81-0900	Nut	10 10 2
52-2650	Bar - Safety	2 42 1	81-0910	Rod - Carburetor	10 26 1
53-1340	Bolt - Self Tapping	11 16 3	81-0920	Spring - Carburetor Rod	10 1 1
53-4690	Stop - Ground Strap	5 10 1	81-0970	Float	12 20 1
53-7720	Tire & Wheel Assembly	2 * 4	81-1010	Gasket - Bowl, Float	12 21 1
53-7740	Tire	2 51 4	81-1020	Gasket - Capscrew, Bowl	12 23 1
53-7780	Plate - Wheel Half	2 46 8	81-1030	Jet - Pilot #40	12 11 1
53-7930	Spacer - Pivot Arm	1 6 4	81-1060	Jet - Main #75	12 19 1
55-3545	Gas Cap Assembly	4 3 1	81-1080	Gasket - Muffler	8 1 1
60-9010	Strap - Ground	5 7 1	81-1100	Bolt	8 6 2
61-8062	Engine - Complete	3 2 1	81-1110	Nut	8 8 2
61-8270	Bar - Control	6 19 1	81-1120	Washer - Lock	8 7 2
62-3980	Sleeve	3 10 2	81-1140	Screw - Phillips Hd.	8 10 2
62-7600	Decal - Fuel Mix	4 9 1	81-1150	Bolt - Self Tapping	8 9 1
63-9330	Body - Air Cleaner	3 13 1	81-1170	Bolt - Self Tapping	10 12 1
63-9340	Cover - Air Cleaner	3 8 1	81-1210	Pulley - Rope	11 6 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
81-1220	Spring - Dog	11 12 1	81-5450	Stud Bolt, Carburetor	12 1 2
81-1230	Dog - Starter	11 13 1	81-5490	Shield - Carburetor	12 13 1
81-1240	Spring - Compression	11 11 1	81-5660	Bowl - Float	12 22 1
81-1250	Retainer - Dog	11 14 1	81-5670	Capscrew - Bowl	12 24 1
81-1260	Bolt - Shoulder	11 15 1	81-5680	Screw - Cap, Hex Hd.	9 1 2
81-1270	Rope	11 5 1	81-5690	Muffler	8 4 1
81-1280	Bolt	11 9 4	81-5810	Seat Kit	12 * 1
81-1300	Bolt	11 3 3	81-5940	Starter Assembly	11 * 1
81-1330	Nut	9 2 1	82-9950	Bracket - Throttle	6 2 1
81-1450	Washer - Lock	10 9 1	84-7820	Plate - Mounting	5 2 1
81-1480	Clamp	9 6 1	85-6870	Cable - Brake	5 8 1
81-1500	Cap Assembly - Spark Plug	9 10 1	92-1779	Decal - Warning	2 55 1
81-1630	Handle - Recoil	11 4 1	92-9698	Screw - Shoulder, Metric	5 6 1
81-1710	Lever - Choke	10 20 1	94-5827	Fuel Tank Assembly	4 4 1
81-1730	Bolt - Bracket, Throttle	10 21 1	2412-95	Clamp - Fuel Line	4 5 4
81-1750	Washer - Lever, Choke	10 8 2	256-276	Spacer	6 16 1
81-1770	Spacer - Lever, Governor	10 6 1	321-2	Screw - Cap, Hex. Hd.	2 52 16
81-1830	Insulator - Kill Switch	10 14 1	321-4	Screw - Hex Hd. Cap	6 17 1
81-1840	Terminal - Kill Switch	10 11 1	321-9	Screw - Hex Hd. Cap	6 21 1
81-1950	Shaft - Choke	12 7 1	321-13	Screw - Cap, Hex. Hd.	6 4 2
81-2080	Cover - Fan, Cooling	11 1 1	322-6	Screw - Cap, Hex. Hd.	6 6 2
81-2100	Case - Starter	11 8 1	322-6	Screw - Cap, Hex. Hd.	4 14 2
81-2120	Guard - Spark Plug	9 8 1	322-7	Screw - Cap, Hex. Hd.	6 5 6
81-2140	Piston - 58mm	7 5 1	322-10	Screw - Hex Hd. Cap	6 14 2
81-2160	Screw - Choke Plate	12 6 2	323-12	Screw - Cap, Hex Hd.	1 25 4
81-2170	Cup - Pulley, Starter	11 2 1	3230-16	Bolt - Carriage	2 41 2
81-2300	Spring & Retainer Assembly	11 * 1	3253-22	Washer - Lock	2 39 1
81-2340	Jet - Main #72.5 High Alt.	12 * A/R	3254-6	Washer - Lock, Int. Tooth	1 34 4
81-2350	Bolt - Self Tapping	9 9 2	3256-16	Washer	3 5 1
81-2370	Key - Flywheel	9 4 1	3290-340	Washer - Belleville	1 28 2
81-2420	Bracket - Throttle	10 15 1	3290-378	Tie - Cable	6 8 2
81-2430	Clamp - Cable	10 18 1	3290-455	Washer - Belleville	2 44 2
81-2450	Cover - Muffler	8 5 1	3290-459	Rivet	5 3 2
81-2460	Spring - Lever, Choke	10 5 1	3296-29	Nut - Lock	6 7 8
81-2470	Spacer - Lever, Choke	10 17 1	3296-29	Nut - Lock	4 15 2
81-2520	Carburetor Assy. Complete	12 * 1	3296-29	Nut - Lock	2 43 2
81-2530	Seal	12 25 2	3296-39	Nut - Lock	1 20 6
81-2540	Ring	12 26 1	3296-42	Nut - Lock	4 7 1
81-2550	Packing	12 27 1	3296-42	Nut - Lock	6 12 2
81-2580	Spring - Idle Stop	12 15 1	3296-42	Nut - Lock	2 45 16
81-2600	Pin - Float	12 17 1	3296-58	Nut - Lock	6 15 2
81-2800	Crankcase/Cylinder Assy.	7 1 1	32144-10	Screw - Self Tapping	5 1 1
81-2810	Flywheel - Magneto	9 3 1	32144-70	Screw - Thread Forming	1 35 4
81-2820	Coil/Ignition Assembly	9 5 1	32144-112	Screw - Self Tapping	5 11 1
81-2830	Spring - Governor	10 25 1	32151-86	Clip - Throttle	6 11 2
81-2850	Lever - Governor	10 7 1	32152-2	Nut - Lock	2 53 2
81-2880	Shaft - Governor	10 4 1			
81-4530	Rivet - Kill Switch	10 16 2			
81-4680	Crankshaft/Connecting Rod	7 9			
81-4910	Needle Valve	12 18 1			
81-5410	Rod - Choke	10 3 1			
81-5420	Governor Arm/Bolt Assy.	10 2 1			
81-5440	Insulator - Carburetor	12 14 1			

OPTIONAL EQUIPMENT

Bagging Kit Part No. 38-0050
 Spark Arrestor Muffler Part No. 81-0200

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

Date								

MAINTENANCE RECORD

[illegible]