


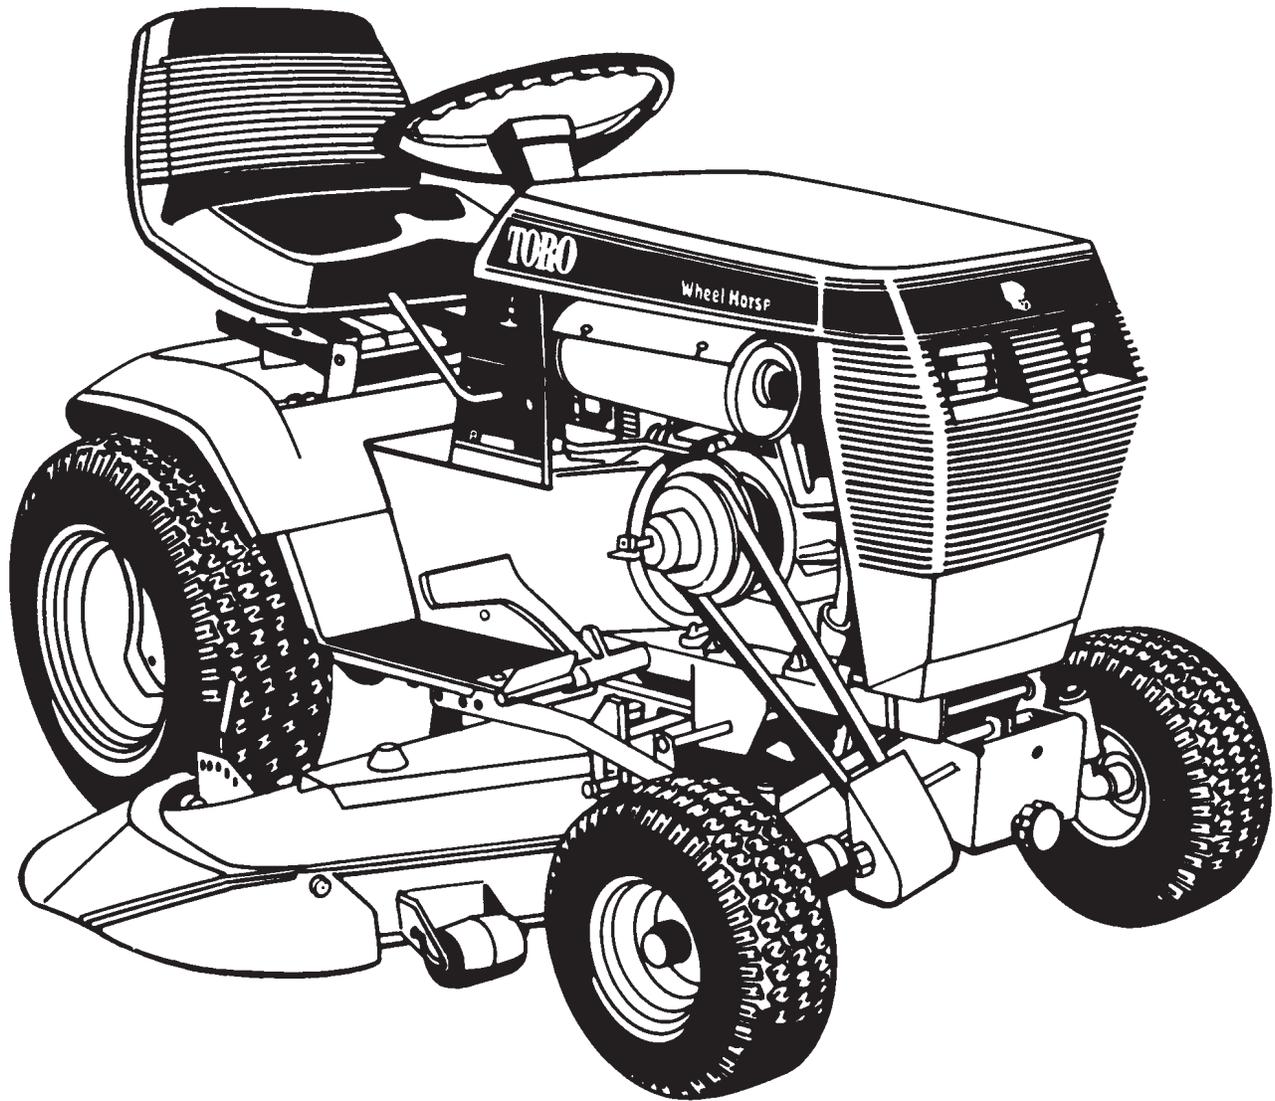


MODEL NO. 73401-590261 & UP

PARTS
CATALOG

WHEEL HORSE[®]
314-H Garden Tractor



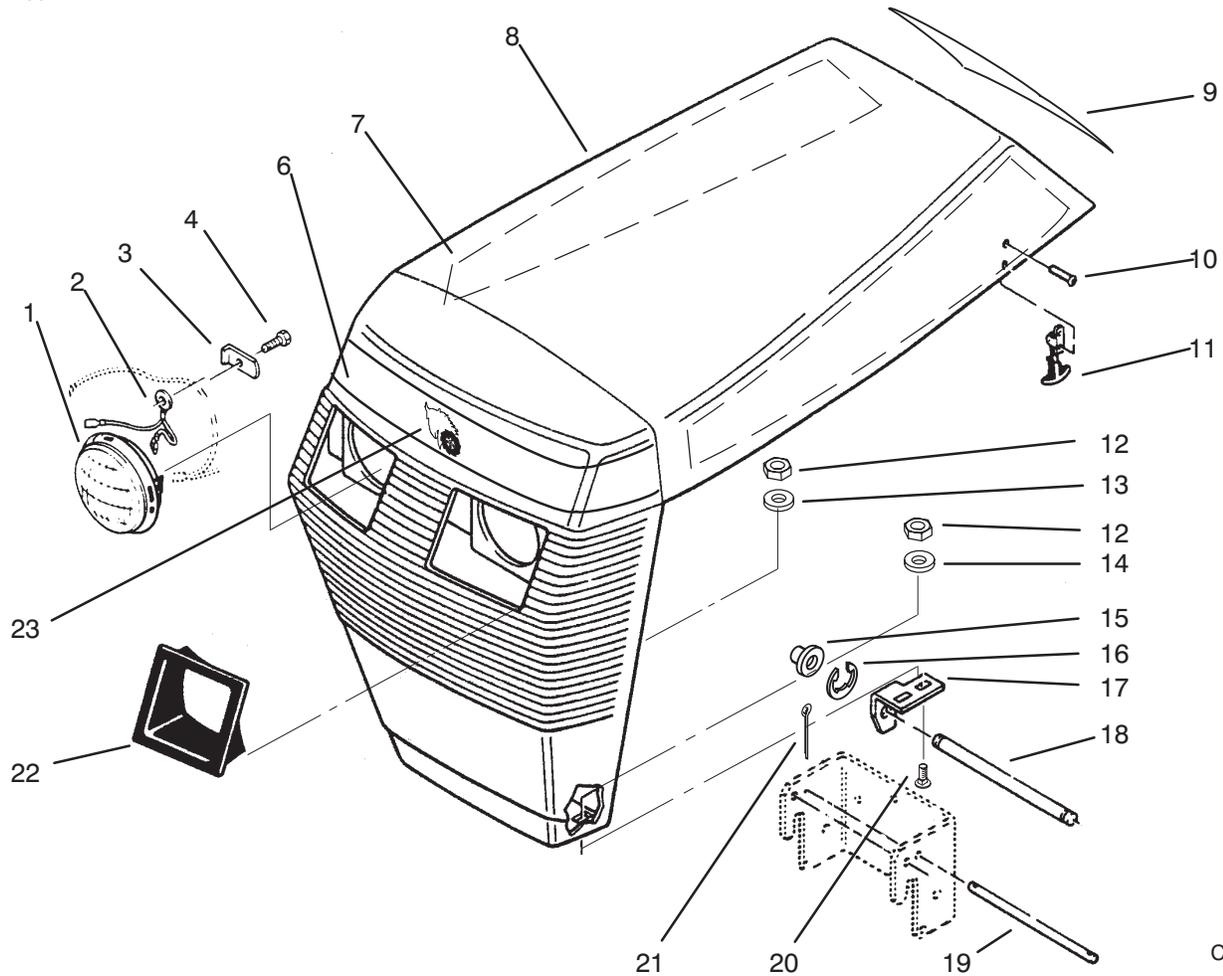


C-1481

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	102881	Headlight	2
2	108130	Wire - Headlight Ground	1
3	109459	Clamp	2
4	926671	Bolt	2
6	92-9826	Decal - Hood, Front	1
7	92-9825	Decal - Hood RH	1
*	92-9824	Decal - Hood LH	1
8	88-2782	Hood (Incl. Ref. # 9)	1
9	92-9837	Decal - Danger	1
10	117432	Rivet - Pop	4
11	117344	Handle Assembly	2
12	3296-42	Nut	4

Ref. No.	Part No.	Description	No. Used
13	3254-2	Washer - Intl. T	1
14	3256-22	Washer	3
15	5979	Bushing - Hood Pivot	2
16	105797	Ring - Retaining	2
17	116747	Bracket - LH	1
*	116746	Bracket - RH	1
18	116745	Rod - Pivot	1
19	101850	Rod - Hood Stop	1
20	3229-25	Bolt - Carriage	4
21	3272-1	Pin - Cotter	2
22	109495	Retainer - Headlight LH	1
*	109494	Retainer - Headlight RH	1
23	92-9836	Decal - Logo	1


*Not Illustrated

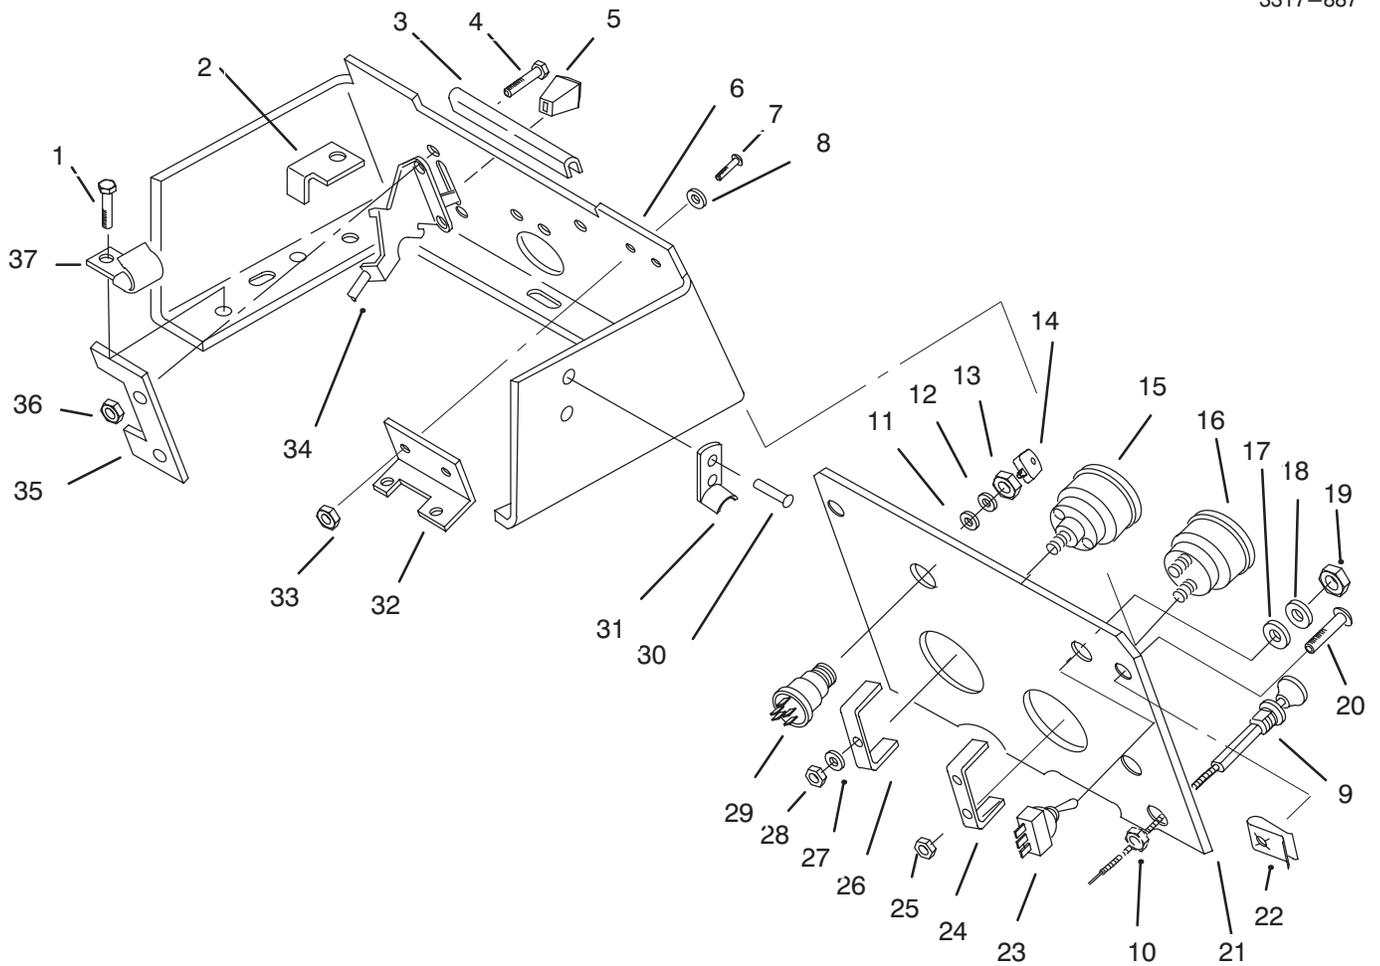

CONTROL PANEL

Ref. No.	Part No.	Description	No. Used
1	9266944	Screw – Hex. Washer Hd.	3
2	112415	Stop – PTO	1
3	111757	Edging – Console	1
4	910792	Screw	6
5	66-0120	Knob – Control	1
6	78-5610	Console	1
7	910762	Screw	2
8	920150	Washer – Lock	2
9	112214	Control – Choke	1
10	109530	Nut	1
11	920262	Washer – Special	1
12	920160	Washer – IntL. T	1
13	101884	Nut – Special	1
14	62-7770	Key – Ignition, Padded	1
15	78-0020	Meter – Hour (Incl. Ref.# 27-28)	1
16	79-0060	Meter – Volt (Incl. Ref.# 24-25)	1
17	9202594	Washer – Special	1
18	102950	Ring – Retaining	1
19	113179	Nut	1

Ref. No.	Part No.	Description	No. Used
20	910837	Screw	7
21	78-5620	Plate – Hood Stand	1
22	8830	"J"Clip	2
23	102138	Switch – Light (Incl. Ref. #17-19)	1
24	78-0080	Clamp – Volt Meter	1
25	5924	Nut	2
26	78-3320	Clamp – Steel	1
27	3255-25	Washer – Lock	1
28	3217-27	Nut – Hex	1
29	116338	Switch – Ignition (Incl. Ref.#11-13)	1
30	117431	Rivet – Pop	4
31	117343	Latch – Hood	2
32	112506	Bracket – Indicator Lights	1
33	915960	Nut	2
34	115854	Control – Throttle	1
35	120590	Stop – Throttle	1
36	915740	Nut – Lock	2
37	111392	"J"Clip	1

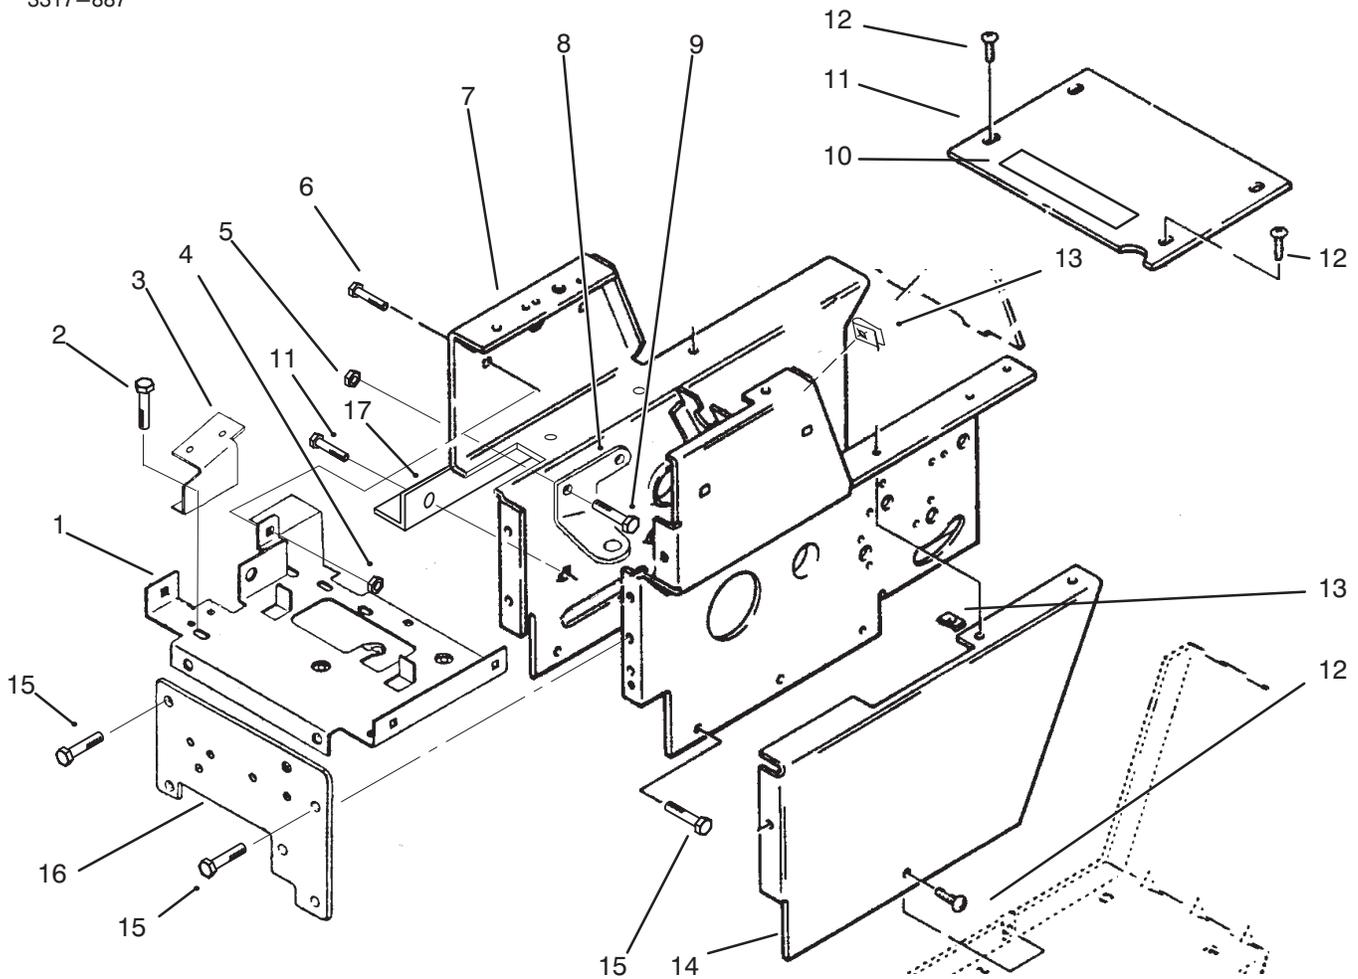


HOOD STAND AND SUPPORTS

Ref. No.	Part No.	Description	No. Used
1	78-3010	Bracket - Battery Support	1
2	9266714	Screw - Hex. Hd..	13
3	115411	Support - Switch	1
4	9151126	Nut	4
5	3296-29	Nut - Lock	2
6	117371	Bolt - Carriage	4
7	92-1525	Hoodstand	1
8	78-1540	Bracket - Lower Control	1
9	322-3	Screw - Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
10	92-8946	Decal - Danger	1
11	92-7296	Plate - Shift Cover (Incl. Ref.#10)	1
12	910837	Screw	7
13	107069	Nut - Speed	7
14	79-5130	Cover - Side, LH	1
15	9266944	Screw - Hex. Hd.	11
16	78-3020	Plate - Front	1
17	106209	Angle - Belt Guard	1


*Not Illustrated

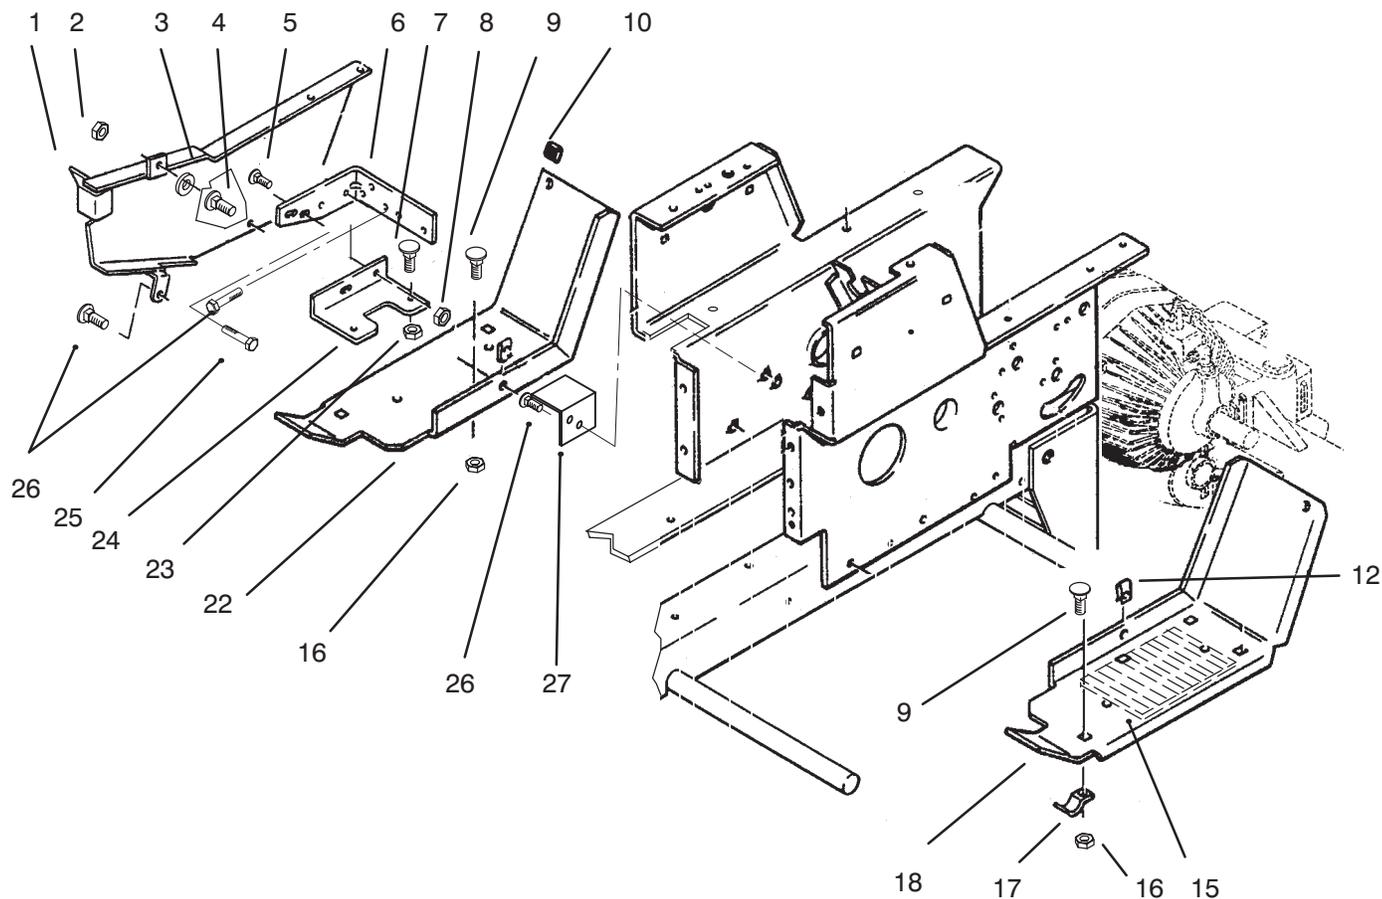

BELT GUARD & FOOTRESTS

Ref. No.	Part No.	Description	No. Used
1	107975	Belt Guard Asm	1
2	3296-29	Nut - Lock	7
3	108457	Nut - Push	1
4	910837	Bolt - Carriage	9
5	321-4	Bolt	2
6	109554	Bracket - Belt Guard	1
7	910794	Screw - Machine	2
8	3296-42	Nut	1
9	116000	Bolt - Carriage	4
10	518211	Bumper	2
12	107069	Clip	3

Ref. No.	Part No.	Description	No. Used
15	110636	Pad - Footrest	2
16	3296-29	Nut	11
17	7456	Clamp	4
18	106223	Footrest - LH	1
22	106222	Footrest - RH	1
23	915740	Nut	4
24	117331	Bracket - Fuse Holder	1
25	3230-1	Bolt	1
26	9266944	Bolt	6
27	108537	Bracket Belt	1

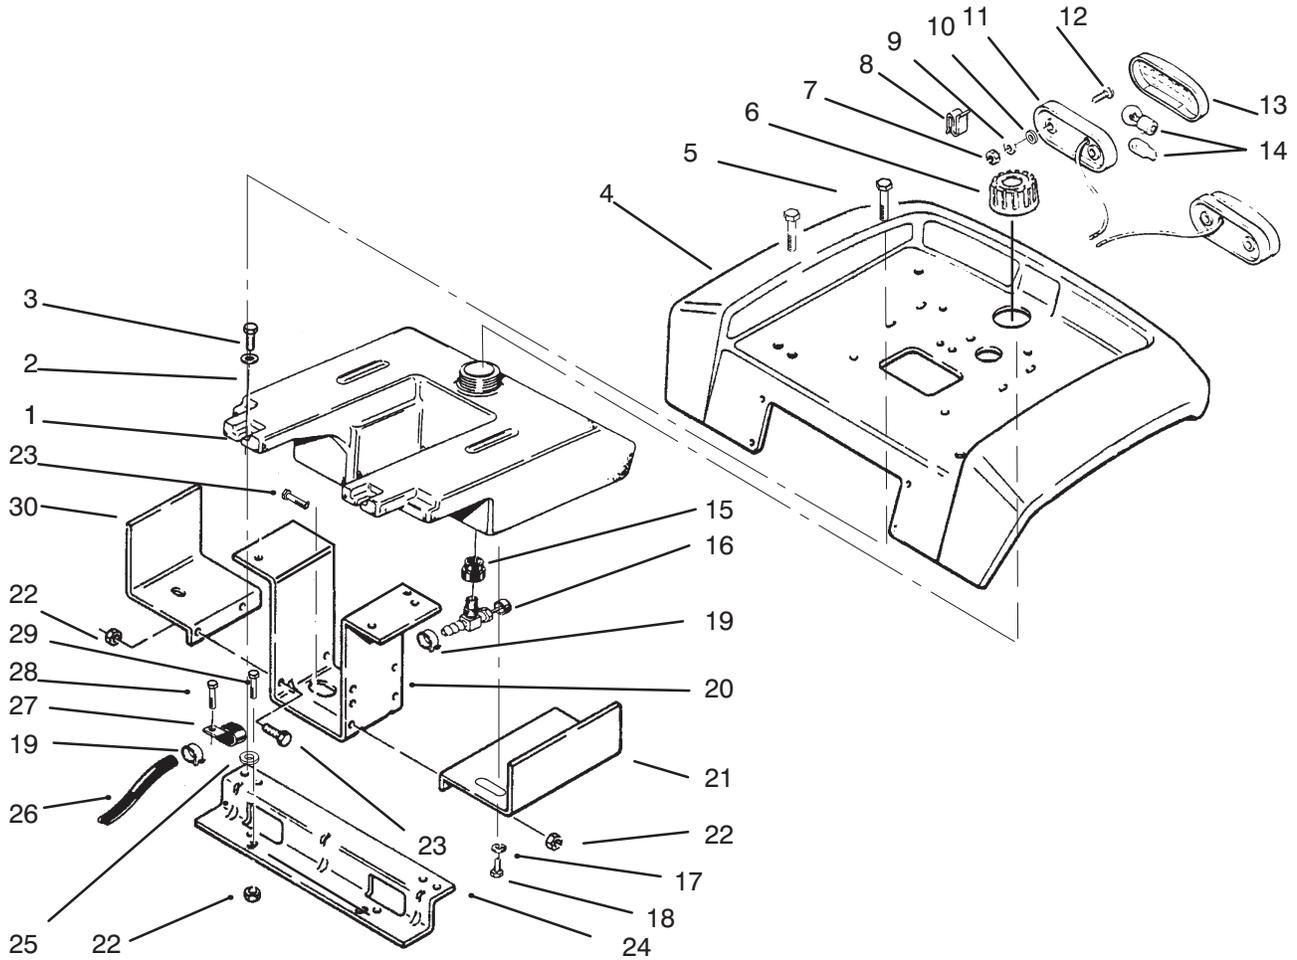


FENDER, FENDER SUPPORTS AND FUEL TANK

Ref. No.	Part No.	Description	No. Used
1	106234	Tank – Fuel	1
2	3256-4	Washer	2
3	926697	Bolt	2
4	110960	Fender	1
5	9266944	Bolt	2
6	55-3570	Fuel Cap	1
7	3296-27	Nut	4
8	3023	Clip – Small	1
9	3256-21	Washer	4
10	3254-1	Washer – Lock	4
11	105202	Base – Taillight, w/Bulb	2
12	910808	Screw	4
13	112564	Lens – Taillight	2
14	8043	Bulb – Light, Metal Base	2
*	109045	Bulb – Light, All Glass	2
15	104047	Bushing	1

Ref. No.	Part No.	Description	No. Used
16	104048	Valve – Fuel Shut-Off	1
17	3253-4	Washer – Lock	2
18	322-2	Bolt	2
19	2412-98	Clamp	2
20	79-4990	Bracket – Fender Support	1
21	108464	Support – Fuel Tank, LH	1
22	3296-29	Nut	6
23	322-3	Bolt	6
24	107951	Bracket – Fender Front	1
25	3256-23	Washer	2
26	92-9511	Line – Fuel 62”	1
27	8830	”J”Clip	1
28	3235-22	Screw – Hex. Hd.	1
29	322-5	Screw – Hex. Hd.	2
30	106236	Support – Fuel Tank, RH	1

*Not Illustrated

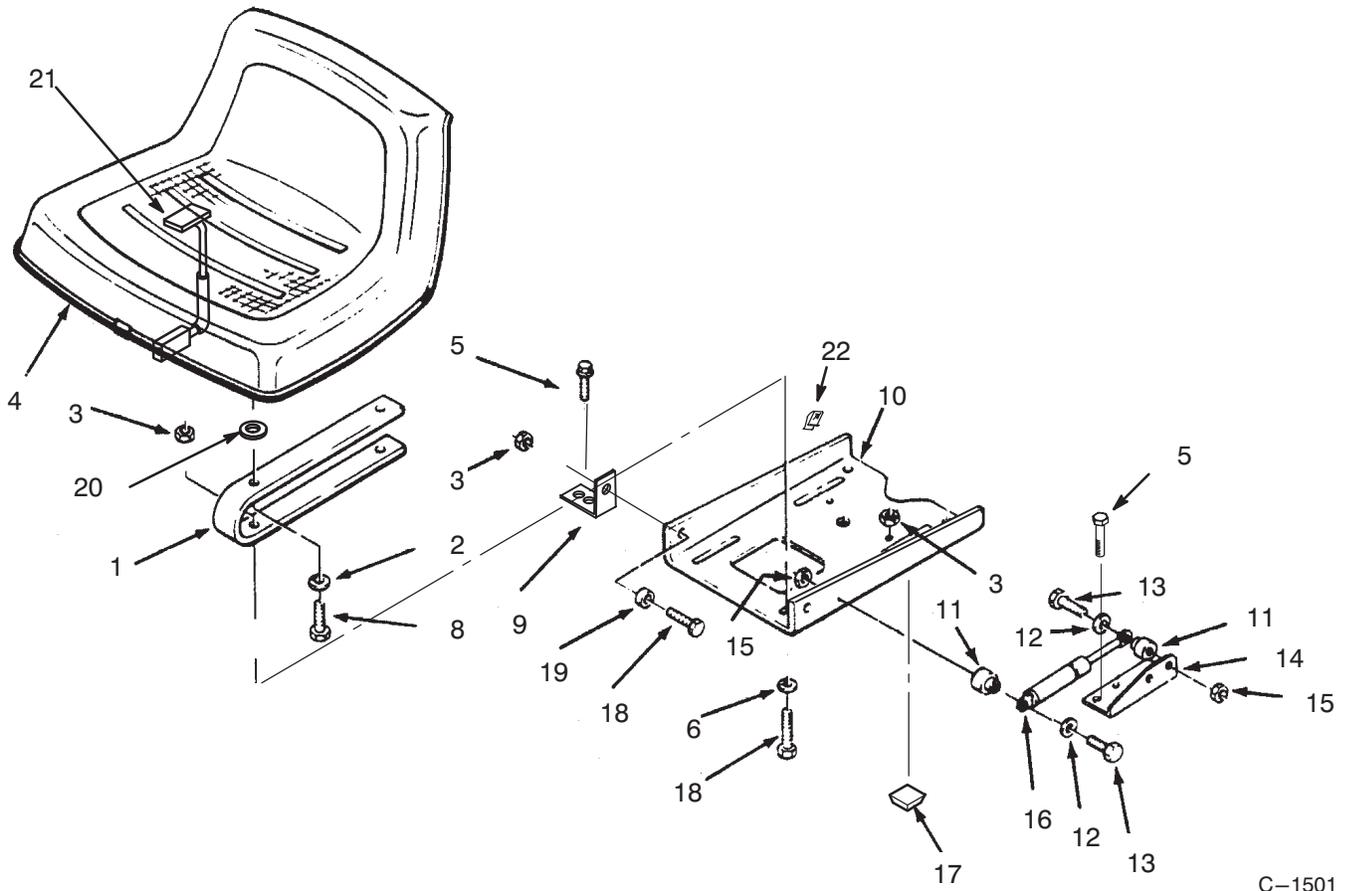

C-1501


SEAT

Ref. No.	Part No.	Description	No. Used
1	110920	Spring – Seat	2
2	3253-4	Washer – Lock	4
3	3296-29	Nut – Lock	6
4	79-0670	Seat	1
5	92-6697	Screw	4
6	3256-23	Washer	4
8	322-5	Screw – Hex. Hd.	4
9	105524	Bracket – Pivot	2
10	78-2990	Plate – Seat Pivot	1
11	114344	Spacer	2
12	3256-22	Washer	2

Ref. No.	Part No.	Description	No. Used
13	321-8	Screw – Hex. Hd.	2
14	114345	Bracket	1
15	3296-42	Nut – Lock	2
16	114343	Spring – Gas	1
17	111071	Bumper	2
18	322-4	Screw – Hex. Hd.	6
19	105503	Bushing	2
20	109989	Spacer	4
21	38-1420	Switch – Seat	1
22	3023	Clip – Speed	1

*Not Illustrated


FRONT AXLE AND STEERING

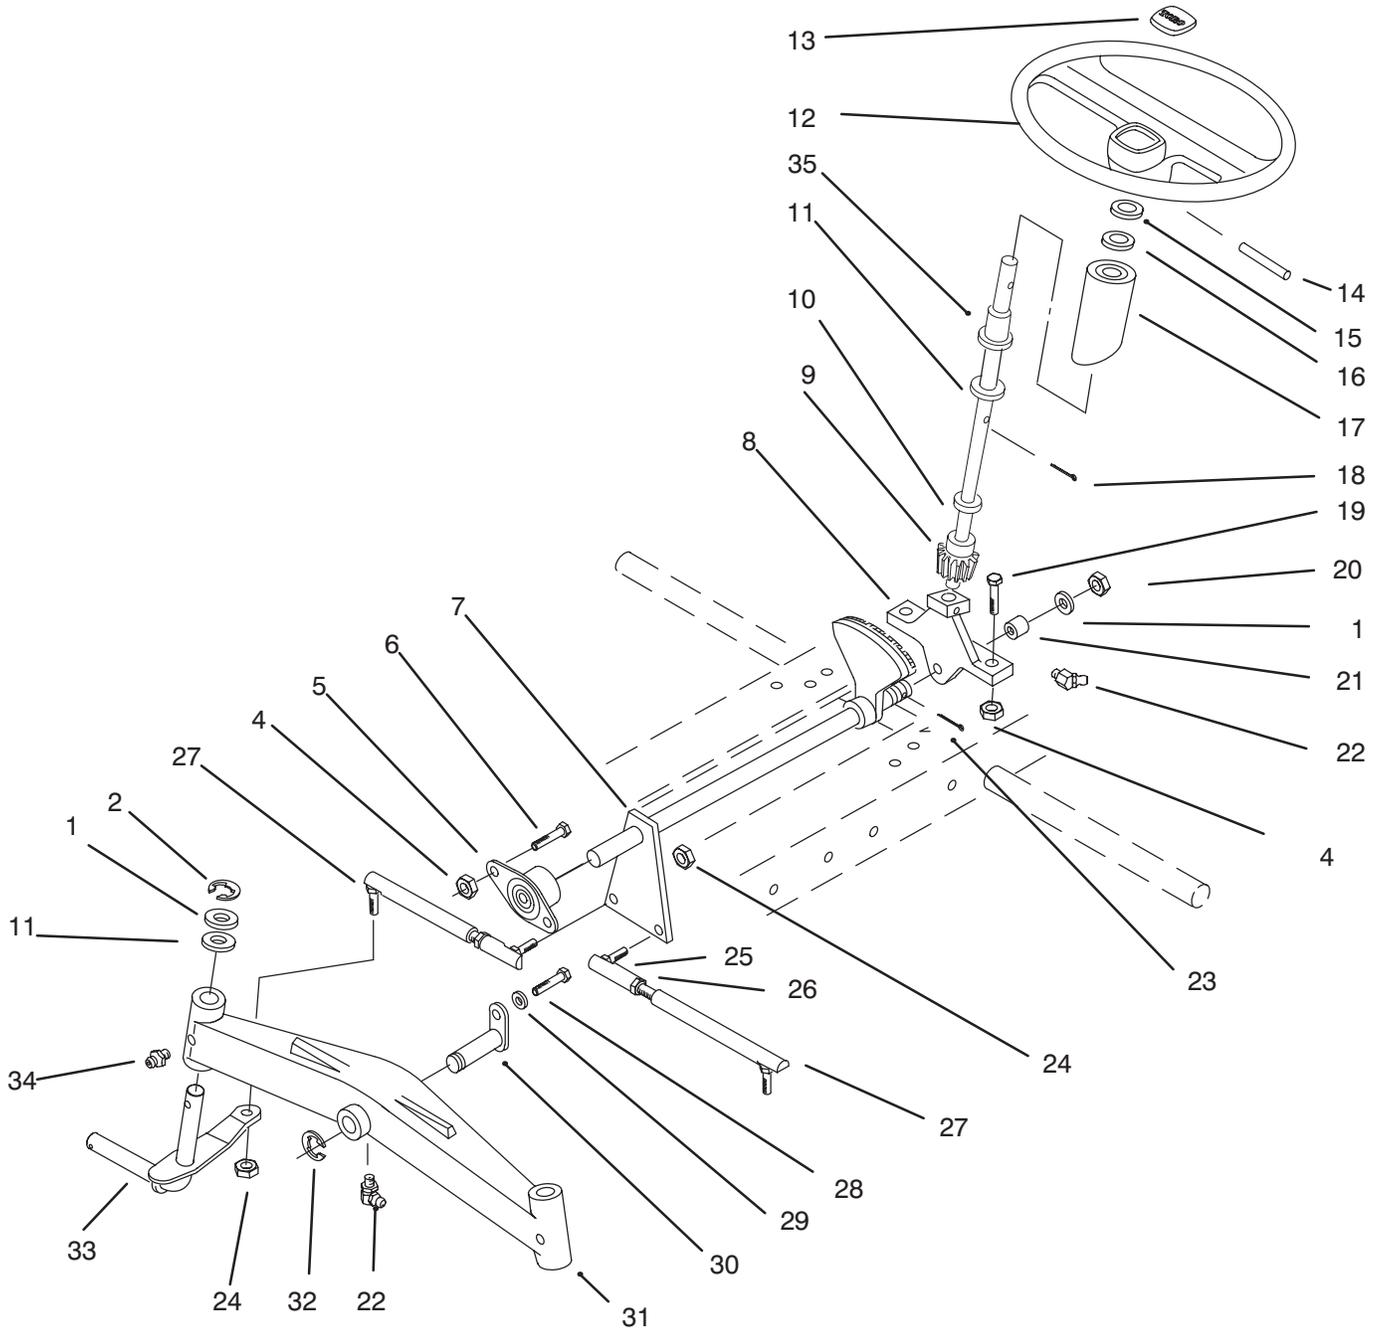

FRONT AXLE AND STEERING

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	1278	Washer – Shim	3	20	32136-5	Nut – Slotted	1
2	32120-93	Ring – Retaining	2	21	6397	Bearing	1
4	3296-39	Nut – Lock	4	22	1481	Fitting – Grease, 45°	2
5	6472	Bearing – Flanged	1	23	3272-19	Pin – Cotter	1
6	323-6	Bolt	2	24	3296-6	Nut	4
7	78-2880	Shaft – Lower	1	25	78-2920	Tie Rod End	2
8	88-2710	Support – Steering Shaft	1	26	3219-3	Nut	2
9	92-4987	Shaft – Upper	1	27	78-2900	Tie Rod Assembly (Incl. Ref. # 25 & 26)	2
10	237-69	"O"Ring	1	28	322-1	Bolt	1
11	5210	Washer – Shim	A/R	29	3253-4	Washer – Lock	1
12	76-1420	Steering Wheel (Incl. Ref. #13)	1	30	6216	Pin & Plate	1
13	78-0370	Insert	1	31	5638	Axle	1
14	32121-111	Pin – Spirol	1	32	5618	Ring – Retaining	1
15	7896	Washer – Bowed	1	33	113381	Spindle – LH	1
16	109262	Washer – Special	2	*	113382	Spindle – RH	1
17	113443	Tube – Steering	1	34	302-5	Fitting – Grease, Straight	2
18	3272-21	Pin – Cotter	1	35	109189	Bearing	1
19	323-8	Bolt	2				

*Not Illustrated

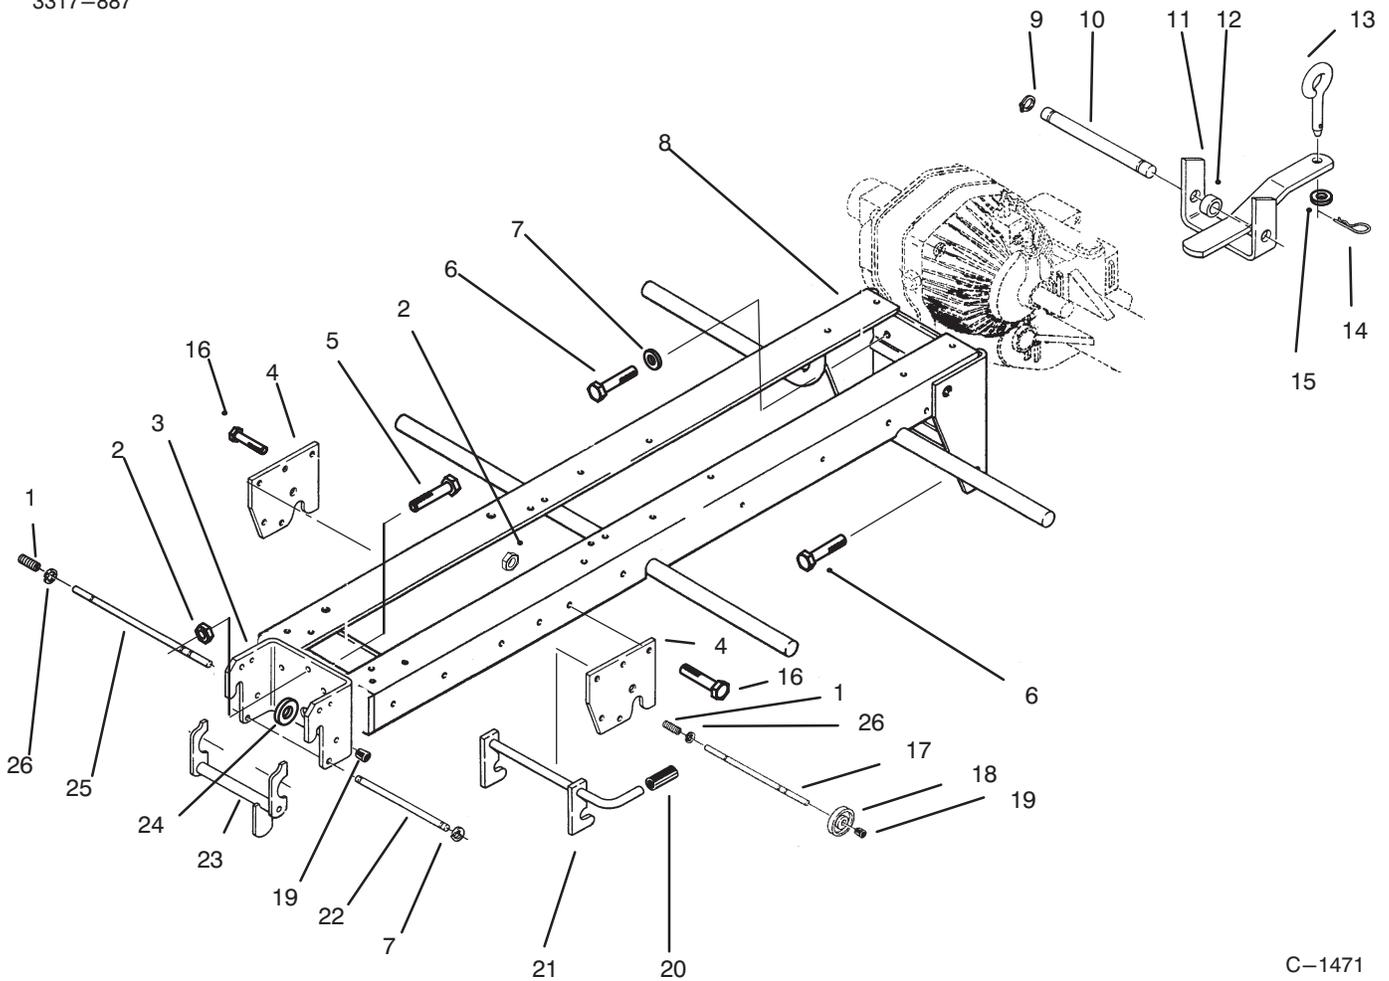


C-1471

FRAME & HITCHES

Ref. No.	Part No.	Description	No. Used
1	8616	Spring	2
2	3296-39	Nut	9
3	101711	Housing - Front Hitch	1
4	102644	Plate - Mid Hitch	2
5	3231-25	Bolt - Carriage	3
6	323-5	Bolt	4
7	3253-21	Washer - Lock	4
8	78-2680	Frame	1
9	5618	Ring - Retaining	2
10	105269	Shaft - Drawbar Hitch	1
11	1644	Hitch - Drawbar	1
12	9791204	Spacer	2
13	106634	Pin - Hitch	1


Ref. No.	Part No.	Description	No. Used
14	9335054	Pin - Cotter	1
15	3256-26	Washer - Flat	1
16	323-44	Screw - Hex. Hd..	6
17	101017	Rod - Mid Hitch Lock	1
18	83-6520	Rod - Lock	1
19	105316	Cap - Lock Rod	2
20	9038	Grip	1
21	117930	Latch - Mid Hitch	1
22	101750	Rod - Pivot Latch	1
23	93-1613	Latch - Front Hitch	1
24	101707	Lock - Attachment	1
25	101751	Rod - Lock	1
26	105797	Ring - Retaining	6

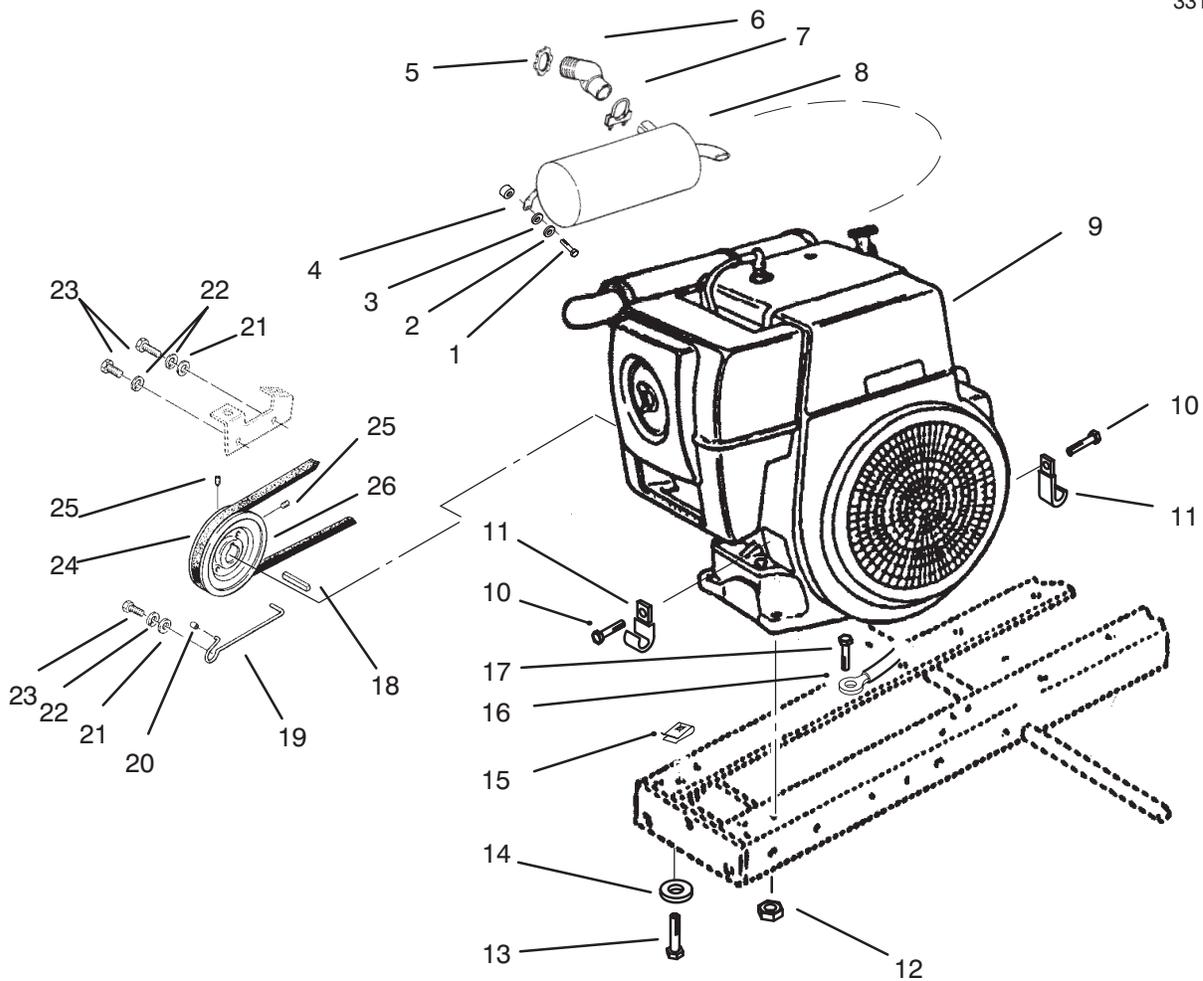

ENGINE, MUFFLER, PULLEY & DRIVE BELT

Ref. No.	Part No.	Description	No. Used
1	322-7	Bolt	1
2	3253-4	Washer	1
3	3256-23	Washer	1
4	6876	Spacer	1
5	KH10535	Nut - Lock	1
6	KH10278	Elbow	1
7	106858	Clamp	1
8	112213	Muffler	1
9	92-1532	Engine - 14HP Kohler	1
10		Screw (Engine) Ref	
11	8830	"J" Clip	1
12	3296-39	Nut	2
13	323-6	Bolt	2

Ref. No.	Part No.	Description	No. Used
14	3253-21	Washer - Lock	2
15	3023	Clip - Wire	1
16	109910	Wire - Ground	1
17	323-8	Bolt	2
18	105453	Key	1
19	111242	Guide - Belt, Bottom	1
20	112841	Cap	1
21	3256-25	Washer	3
22	3253-6	Washer - Lock	3
23	324-5	Bolt	3
24	108501	Belt - Drive	1
25	3246-2	Screw - Set	2
26	7443	Pulley - Engine Drive	1

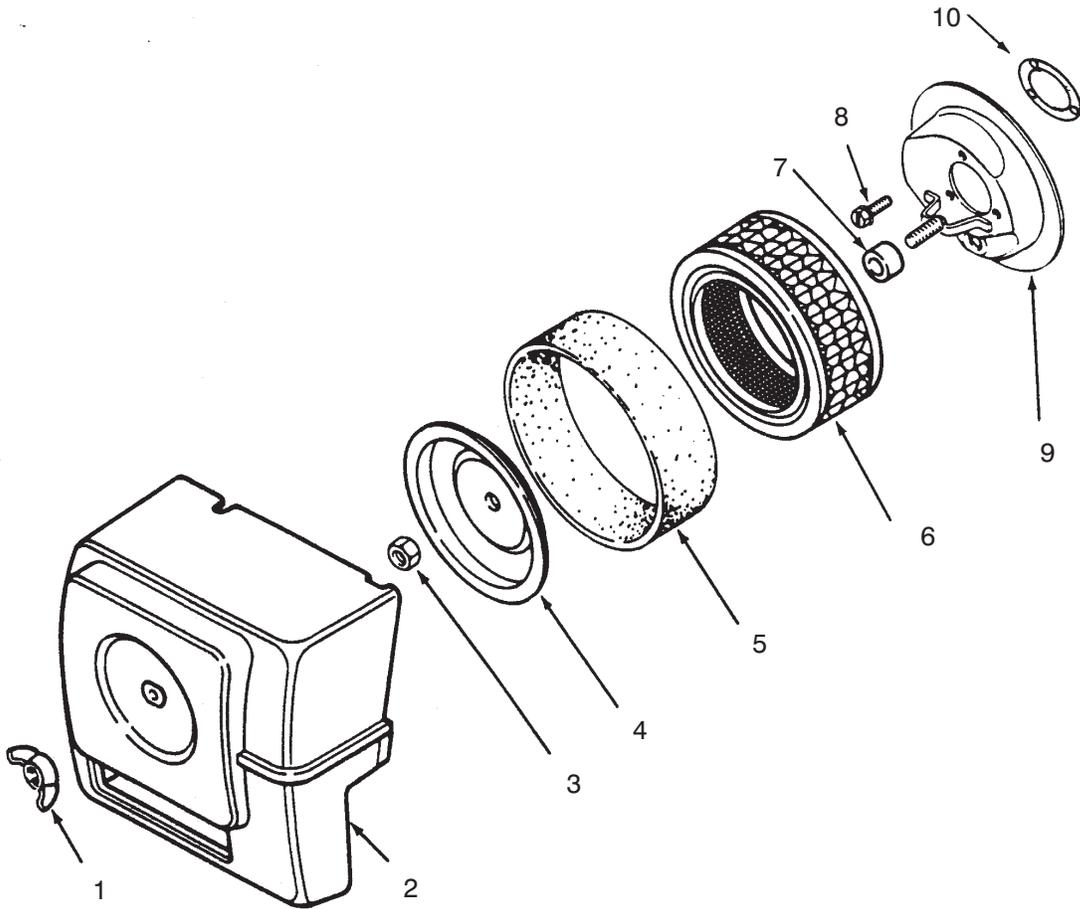


C-1482

AIR INTAKE

Ref. No.	Part No.	Description	No. Used
1	KH10576	Nut – Wing	1
2	KH10299	Cover	1
3	KH10189	Nut	1
4	KH10412	Cover – Air Cleaner Element	1
5	KH10235	Element – Precleaner	1
6	KH10236	Element	1

Ref. No.	Part No.	Description	No. Used
7	KH10034	Seal	1
8	KH10609	Screw	3
9	KH10297	Base – Air Cleaner	1
10	KH10697	Gasket	1
*	KH10191	Decal – Air Cleaner	1

*Not Illustrated

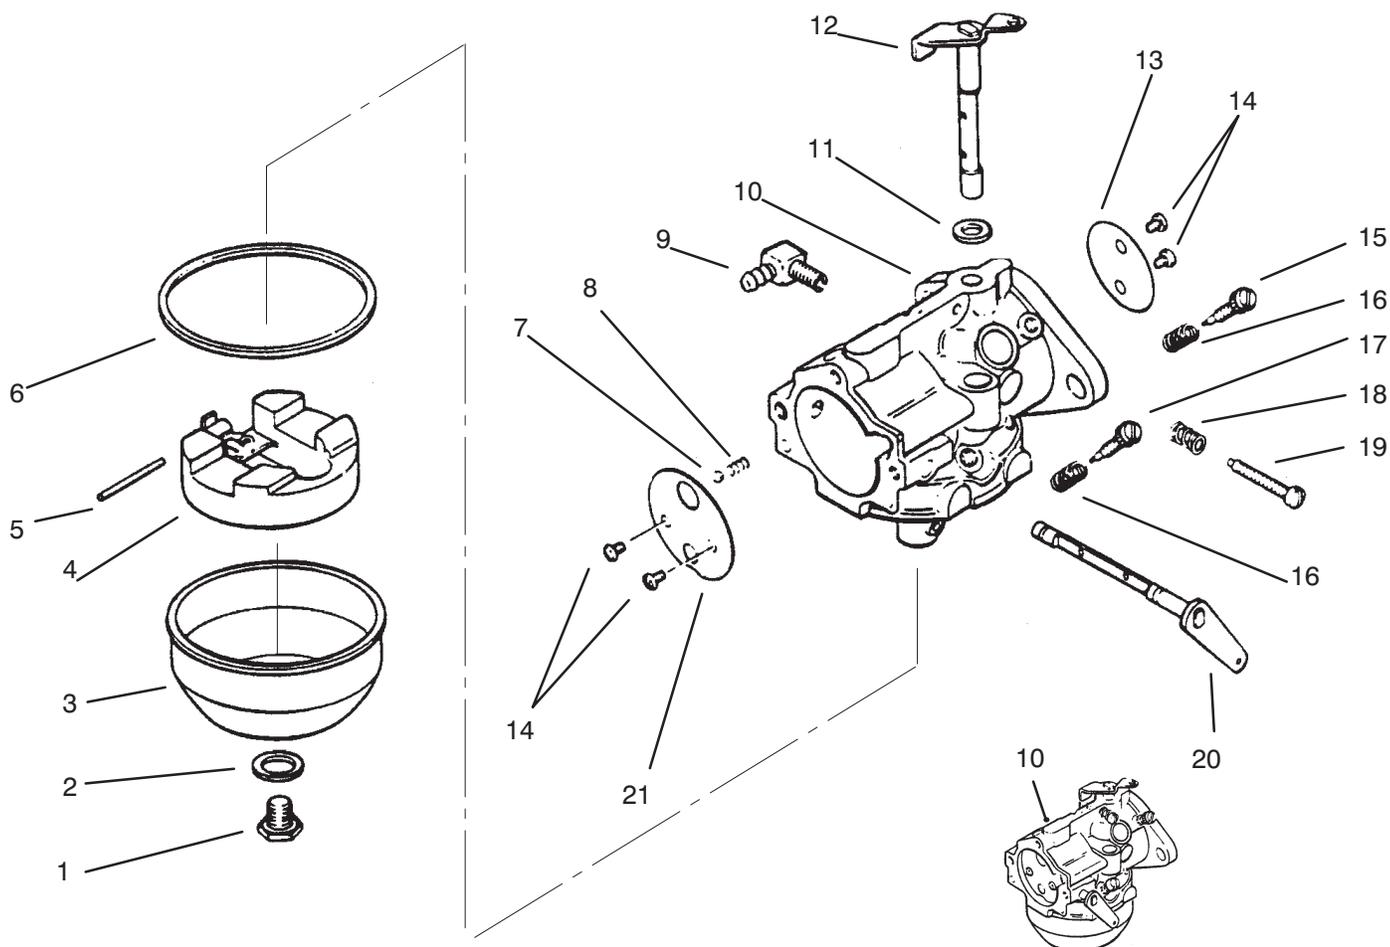


CARBURETOR

Ref. No.	Part No.	Description	No. Used
1	KH10116	Screw	1
2	KH10093	Gasket	1
3	KH10117	Bowl – Fuel	1
4	KH10663	Kit – Float (Incl. Ref.#5)	1
5		Pin – Float	1
6	KH10094	Gasket	1
7	KH10128	Ball	1
8	KH10113	Spring	1
9		Connector 90°	1
10	92-7252	Carburetor Assembly (Complete)	1
11		Seal	1
12	92-7256	Shaft w/Lever & Seal (Incl. Ref# 11)	1
13	92-7257	Plate – Throttle	1
14	KH10110	Screw	4
15	KH10132	Needle – Idle Fuel Adj.	1
16	KH10112	Spring – Idle Fuel	1
17	KH10694	Main – Needle	1
18	KH10114	Spring – Adj.	1
19	KH10109	Screw – Idle Speed Adj.	1
20	KH10702	Shaft – Choke	1
21	92-7255	Plate – Choke	1
*	KH10696	Kit – Carburetor Repair (Includes	
	KH10009	Gasket – Flange	

Ref. No.	Part No.	Description	No. Used
	KH10146	Gasket – Carburetor	
	KH10733	Gasket	
	KH10093	Gasket – Bowl Screen	
	KH10094	Gasket– Bowl	
	KH10677	Gasket – Air Cleaner	
	KH10697	Gasket	
	KH10274	Gasket – Carburetor	
*	KH10358	Kit – Choke & Throttle Repair	1
*	KH10710	Kit – High Altitude Jet (Includes	
	KH10682	Bushing	
	KH10709	Jet – Main	
*	92-7251	Kit – Carburetor w/Linkage (Includes	1
	KH10682	Bushing &	
	KH10709	Main Jet	
*	KH10693	Kit – Adjustable Jet w/Linkage (Includes	1
	KH10701	Carburetor Linkage	
	KH10682	Bushing – Linkage Natural	
	KH10686	Bushing Linkage Black	
	KH10697	Gasket – Air Cleaner	
	KH10693	Carburetor Assembly	
	KH10146	Gasket	
	KH10274	Gasket	1


*Not Illustrated

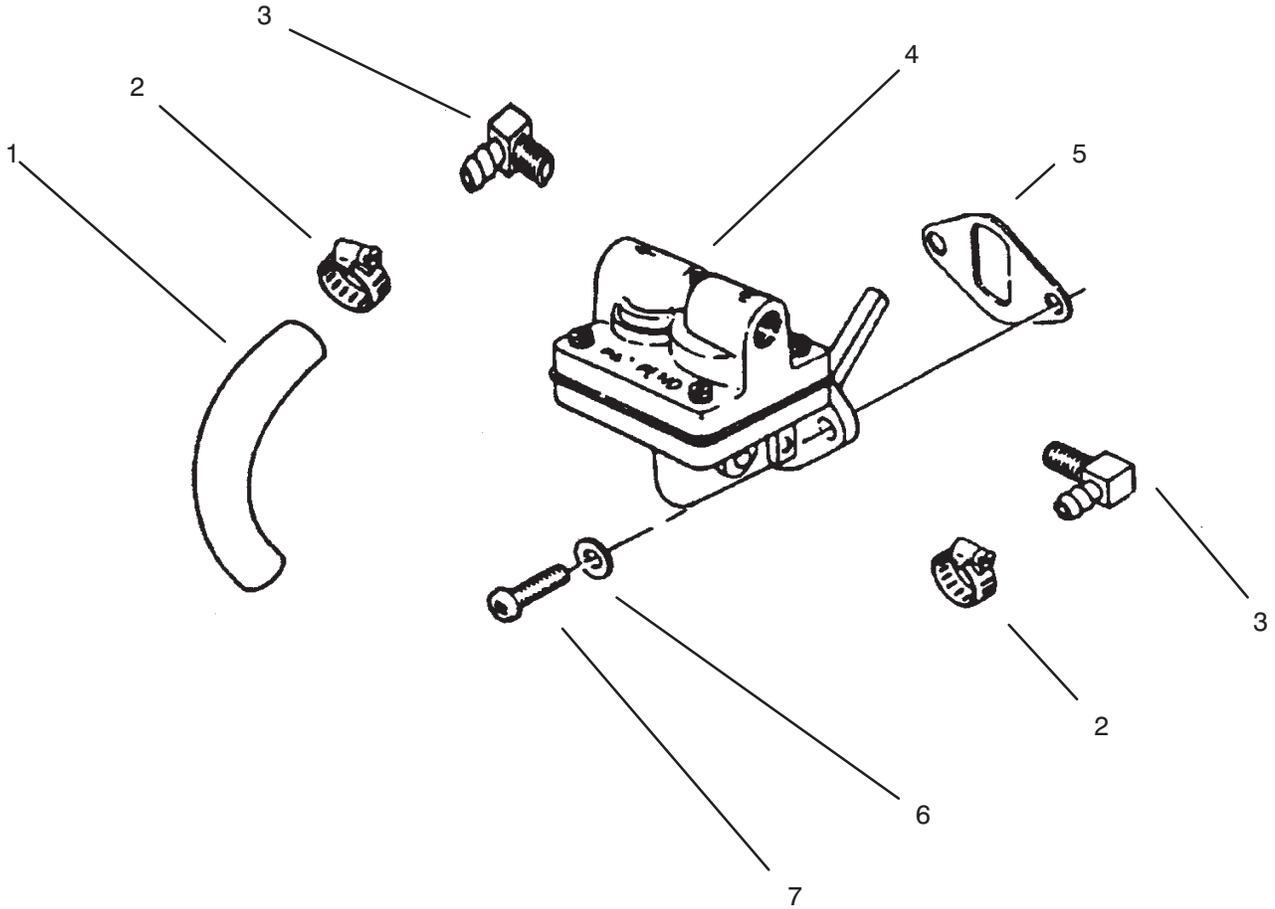

FUEL PUMP

Ref. No.	Part No.	Description	No. Used
1	KH10130	Line – Fuel	1
2	KH10586	Clamp	2
3	KH10123	Connector – 90°	2
4	KH10319	Pump Assy – Fuel (Incl. Ref.#5 &7)	1


Ref. No.	Part No.	Description	No. Used
5	KH10095	Gasket	1
6	KH10569	Washer	2
7	KH10552	Screw – Pozidrive	2

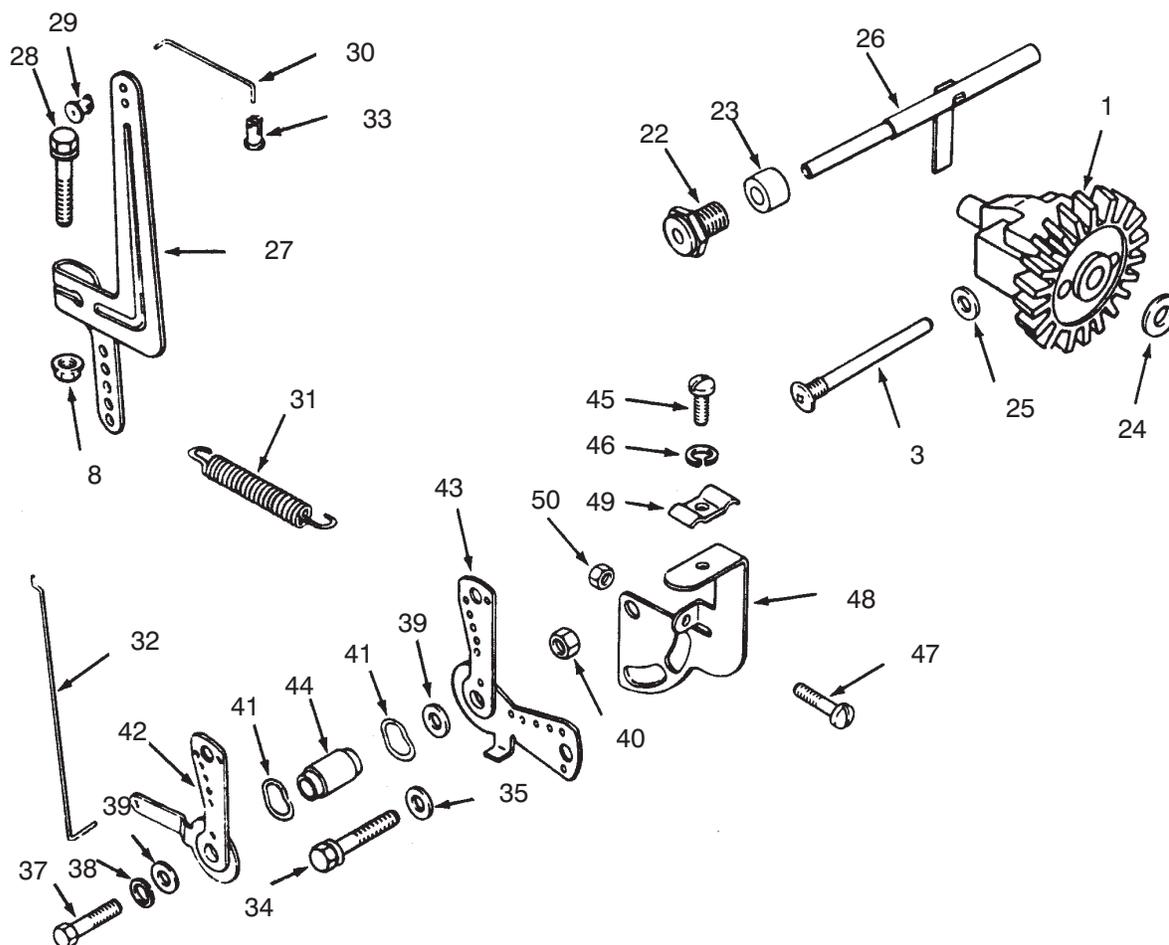

C-1492

GOVERNOR LINKAGE

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	KH10660	Kit – Governor Gear (Includes 24)	1	35	KH10570	Washer	1
3	KH10035	Pin – Governor Stop	1	37	KH10600	Screw	1
8	KH10629	Nut – Pal	1	38	KH10556	Washer – Lock	1
22	KH10070	Bushing	1	39	KH10569	Washer	1
23	KH10585	Spacer	1	40	KH10624	Nut	1
24	KH10087	Washer	1	41	KH10152	Washer	2
25	KH10136	Washer	1	42	KH10293	Lever – Choke Control	1
26	92-7262	Kit – Governor Cross Shaft	1	43	KH10294	Lever – Throttle Control	1
27	KH10295	Lever – Governor	1	44	KH10302	Space	1
28	KH10626	Screw	1	45	KH10605	Screw	1
29	92-7254	Bushing	1	46	KH10695	Washer	1
30	KH10701	Linkage (Governor to Carb.)	1	47	KH10040	Screw	1
31	KH10296	Spring (Governor to Carb.)	1	48	KH10303	Bracket – Clutch Control	1
32	KH10287	Linkage – Choke (Carb. to Choke Shaft)	1	49	KH10308	Clamp	1
33	92-7253	Bushing	1	50	KH10619	Nut	1
34	KH10545	Screw	1	*	92-7263	Choke Lever Assembly (Incl. Ref. #37 thru 44)	1

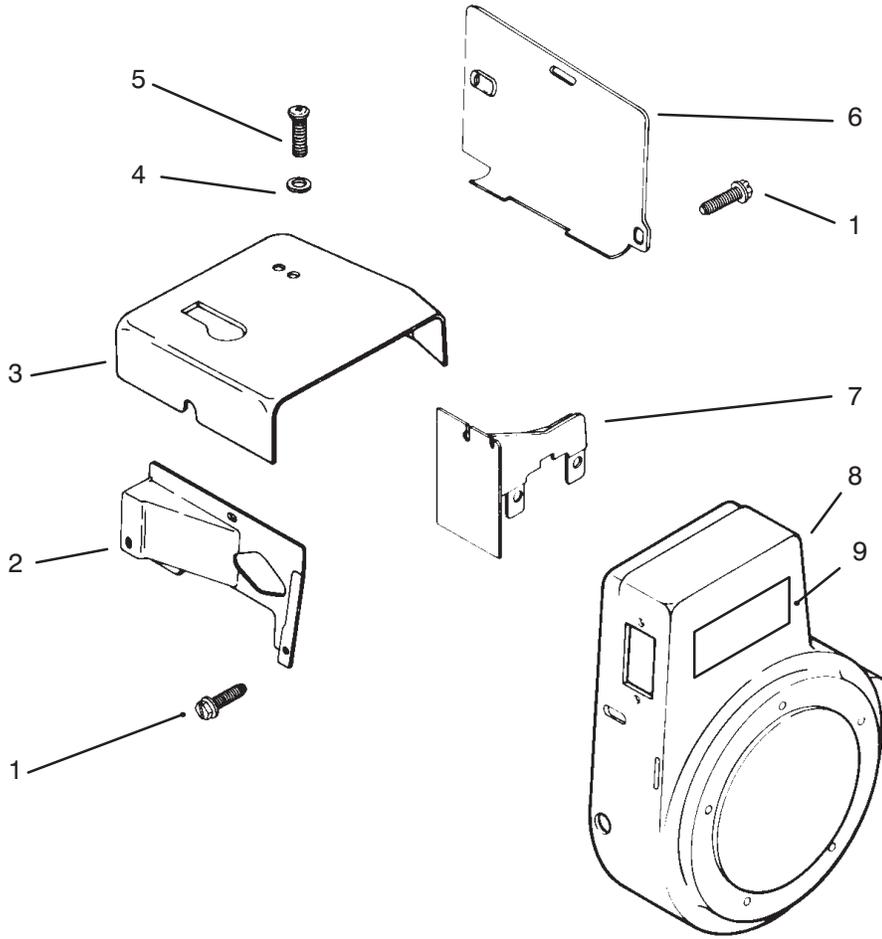


C-1559

BAFFLES AND SHROUDS

Ref. No.	Part No.	Description	No. Used
1	KH10413	Screw – Hex .Hd.	6
2	KH10279	Baffle – Side Air	1
3	KH10231	Baffle – Head	1
4	KH10567	Washer	1
5	KH10289	Screw – Pozidrive T.H.	3

Ref. No.	Part No.	Description	No. Used
6	KH10282	Baffle – Cylinder	1
7	KH10280	Baffle – Inner	1
8	KH10265	Housing – Blower	1
9	92-7281	Decal – HP	1

*Not Illustrated

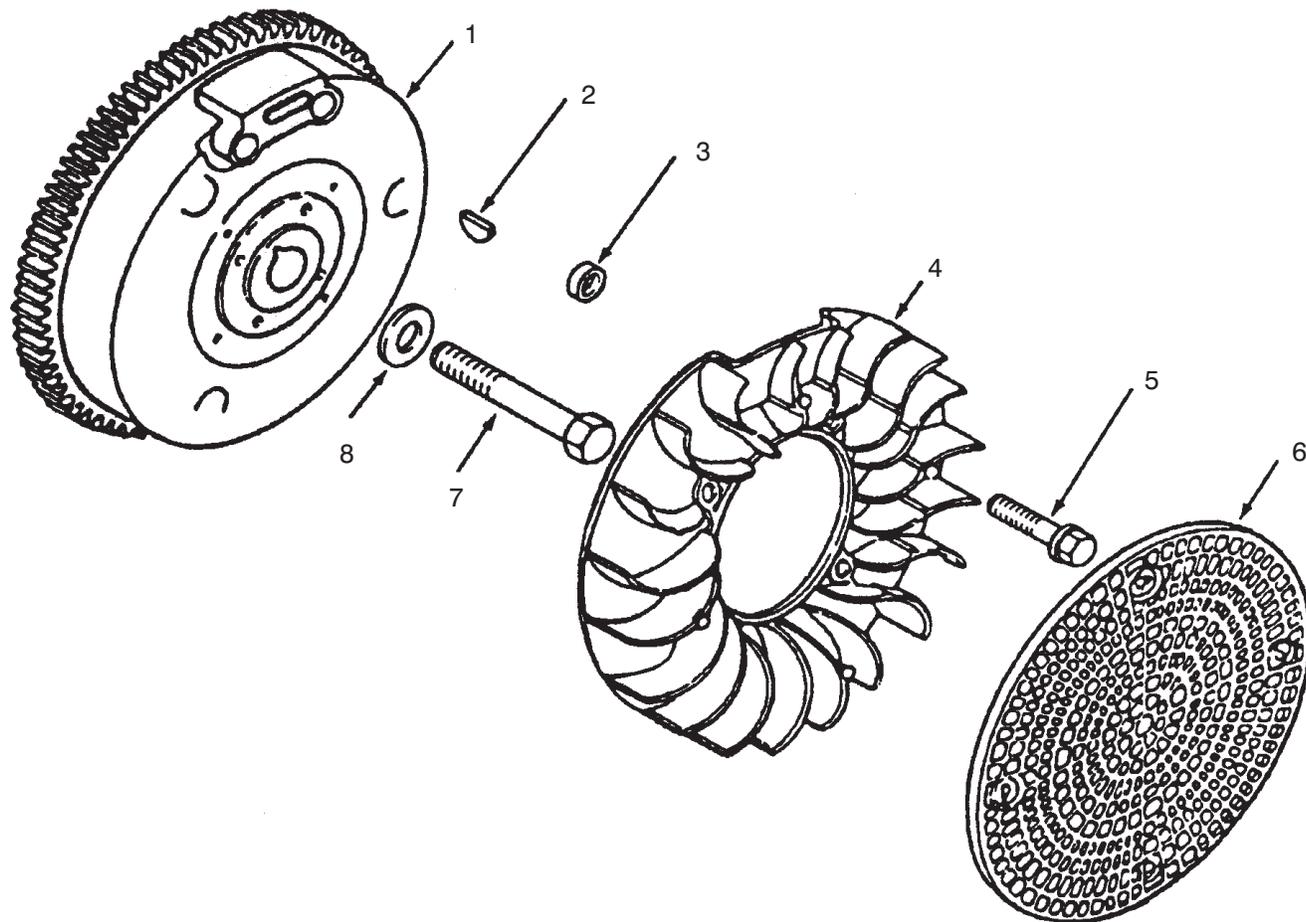


C-1491

FLYWHEEL

Ref. No.	Part No.	Description	No. Used
1	KH10263	Flywheel	1
2	KH10588	Key - Woodruff	1
3	KH10188	Spacer	4
4	KH10124	Fan	1

Ref. No.	Part No.	Description	No. Used
5	KH10107	Screw - Hex. Hd.	4
6	KH10126	Screen	1
7	KH10108	Screw	1
8	KH10666	Washer	1

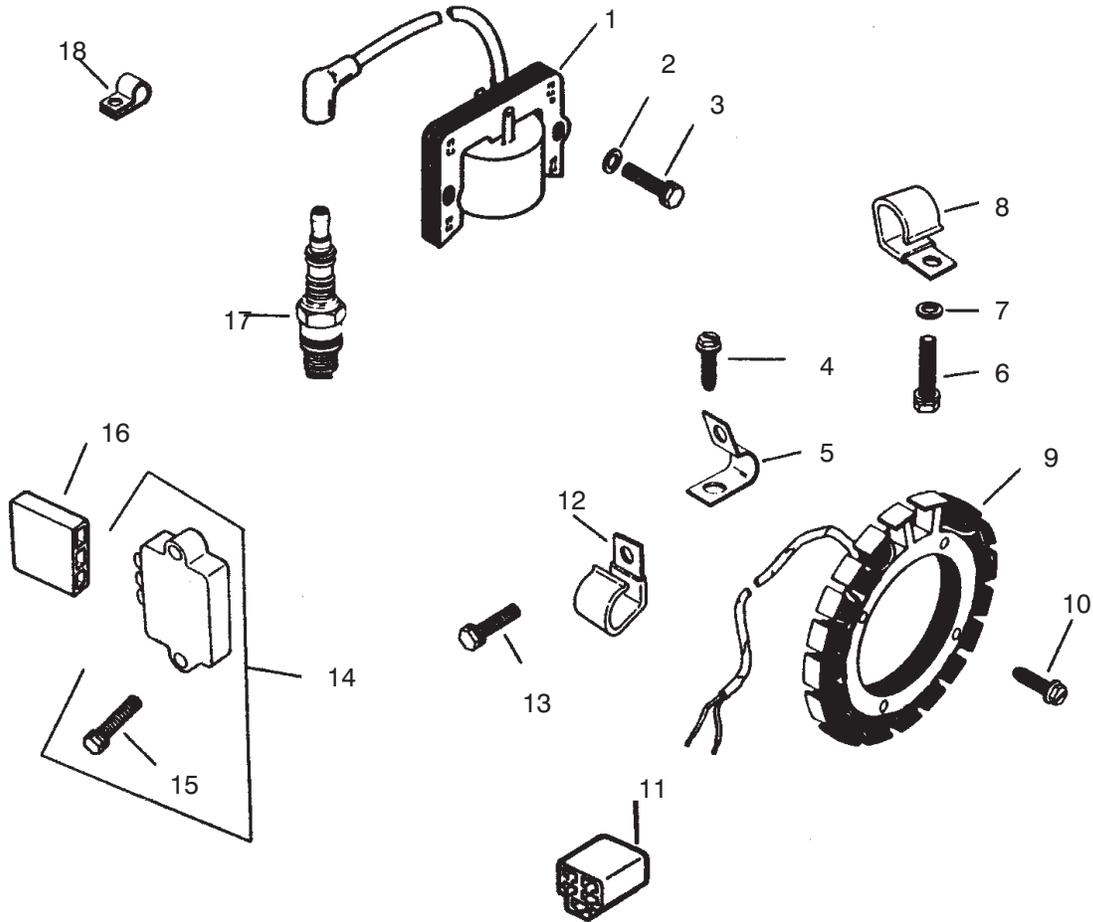


C-1493

IGNITION SYSTEM

Ref. No.	Part No.	Description	No. Used
1	KH10321	Module – Ignition	1
2	KH10570	Washer	2
3	KH10548	Screw	2
4	KH10606	Screw – Hex. Hd.	1
5	KH10618	Clip	1
6	KH10610	Screw	1
7	KH10570	Washer – Flat	1
8	92-7264	Clip	1
9	KH10091	Kit – Stator 15 am (Incl. Ref.#8)	1
10	KH10605	Screw – Pozidrive	4
11	KH10345	Connector	1

Ref. No.	Part No.	Description	No. Used
12	8830	”J”Clip	1
13	321-2	Screw	1
14	KH10673	Regulator – Rectifier	2
15	92-7266	Screw	2
16	KH10082	Connector	1
17	92-7265	Plug – Spark	1
18	KH10010	Clip – Hi-Tension	1
*	KH10313	Lead –Violet, Regulator– Rectifier to Connector (23”)	1
*	KH10315	Lead – Wire, Module to Connector	1

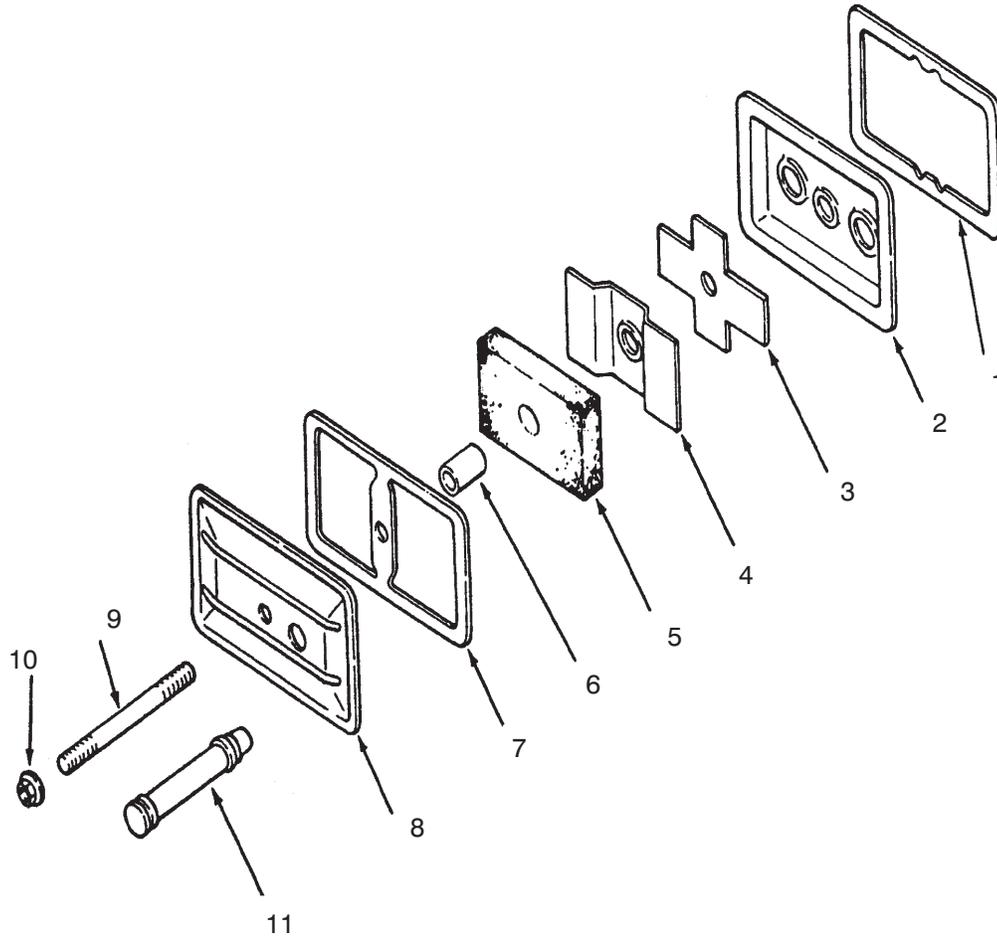


C-1485

BREATHER AND VENT

Ref. No.	Part No.	Description	No. Used
1	KH10058	Gasket	1
2	KH10072	Plate	1
3	KH10057	Reed	1
4	KH10143	Baffle	1
5	KH10275	Filter	1
6	KH10034	Seal	1

Ref. No.	Part No.	Description	No. Used
7	KH10149	Gasket	1
8	KH10298	Cover	1
9	KH10150	Stud	1
10	KH10629	Palnut	1
11	KH10309	Hose	1

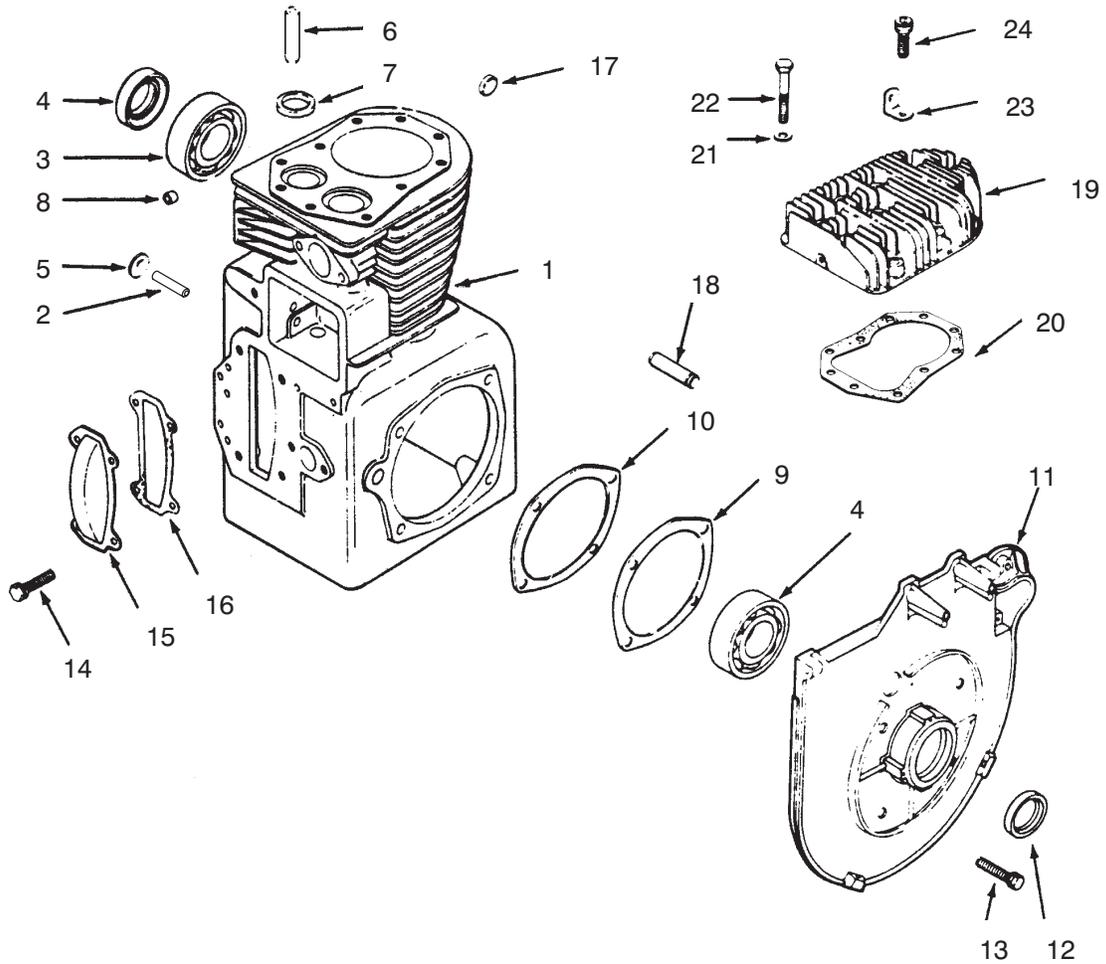


C-1561

CRANKCASE AND CYLINDER HEAD

Ref. No.	Part No.	Description	No. Used
1	92-7279	Short Block (Includes Crankshaft)	1
	92-7280	Miniblock (w/Out Crankshaft)	1
2	92-7258	Shaft - Governor Gear	1
3	KH10067	Ball Bearing	2
4	KH10269	Seal	1
5	KH10562	Plug	1
6	92-7259	Guide - Valve	2
7	KH10029	Insert - Exhaust Valve	1
8	KH10049	Bearing	1
9	KH10272	Gasket	1
10	KH10311	Gasket	1
11	KH10687	Plate - Bearing	1
12	KH10268	Seal	1


Ref. No.	Part No.	Description	No. Used
13	KH10549	Screw	4
14	KH10545	Screw	4
15	KH10661	Cover	1
16	KH10055	Gasket	1
18	KH10081	Shaft - Balance Gear	1
19	KH10261	Head - Cylinder	1
20	KH10700	Gasket	1
21	KH10145	Washer	9
22	KH10144	Screw	8
23	KH10312	Strap - Lifting	1
24	KH10290	Screw	1
*	KH10325	Set - Gasket w/ Seals	1
*	KH10258	Set - Gasket w/o Seals	1

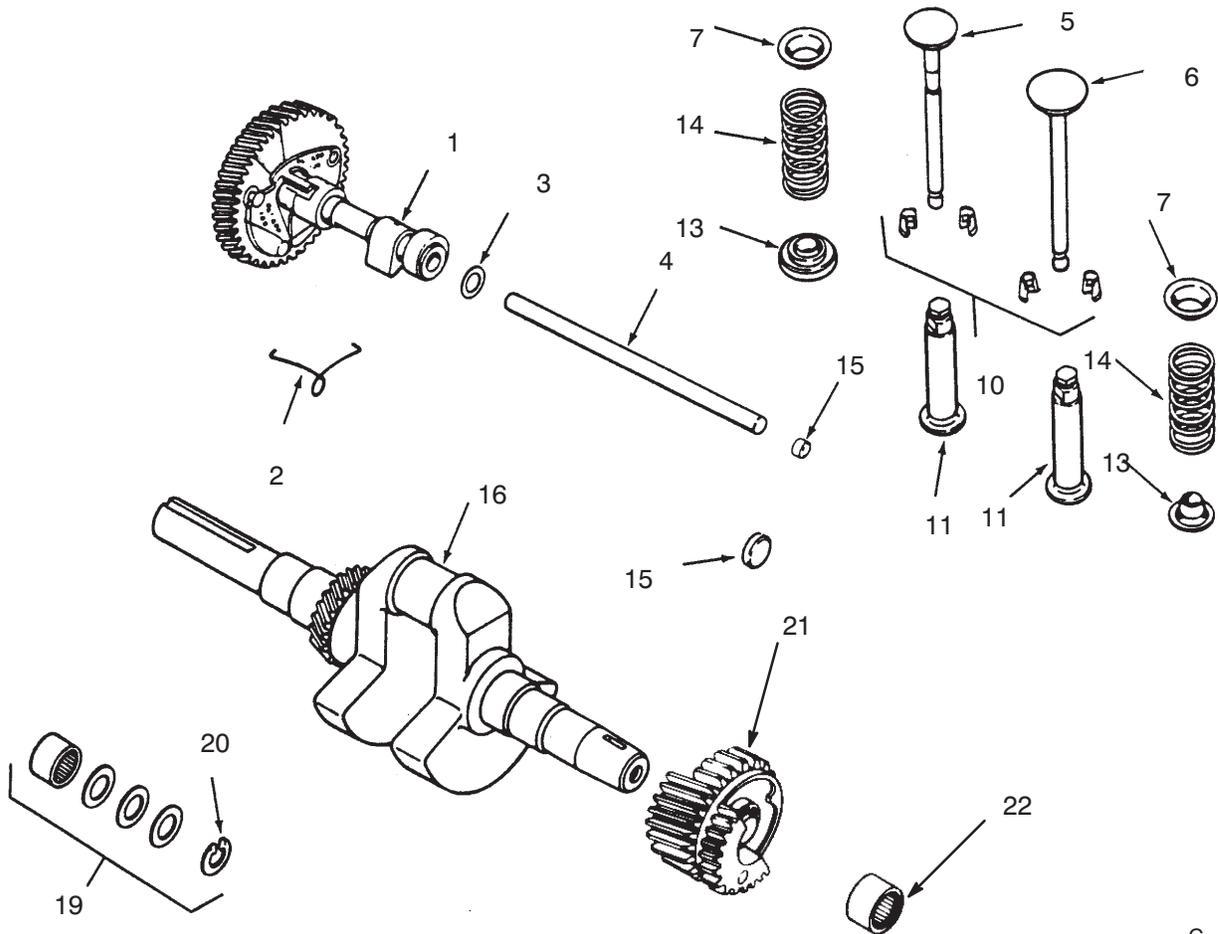

C-1560

CAMSHAFT, CRANKSHAFT AND VALVES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	KH10259	Camshaft Assy (Incl. Ref.# 2)	1	13	KH10496	Rotator – Valve	2
2	KH10292	Spring	1	14	KH10062	Spring	2
3	KH10147	Spacer .005	1	15	KH10617	Plug – Cup	1
*	KH10148	Spacer .010	1	16	KH10245	Kit – Crankshaft (Includes Flywheel Hdwr.)	1
4	KH10310	Pin – Camshaft	1	19	KH10322	Kit – Spacer (Incl. Ref.#20)	2
5	KH10090	Valve – Exhaust	1	20	KH10574	Retainer	1
6	KH10071	Valve – Intake	1	21	KH10228	Gear Assembly (Incl. Ref. #22)	2
7	KH10054	Retainer – Upper Spring	2	22	KH10267	Bearing – Needle	2
10	KH10221	Kit – Retainer	2				
11	KH10539	Tappet – Intake Valve	2				

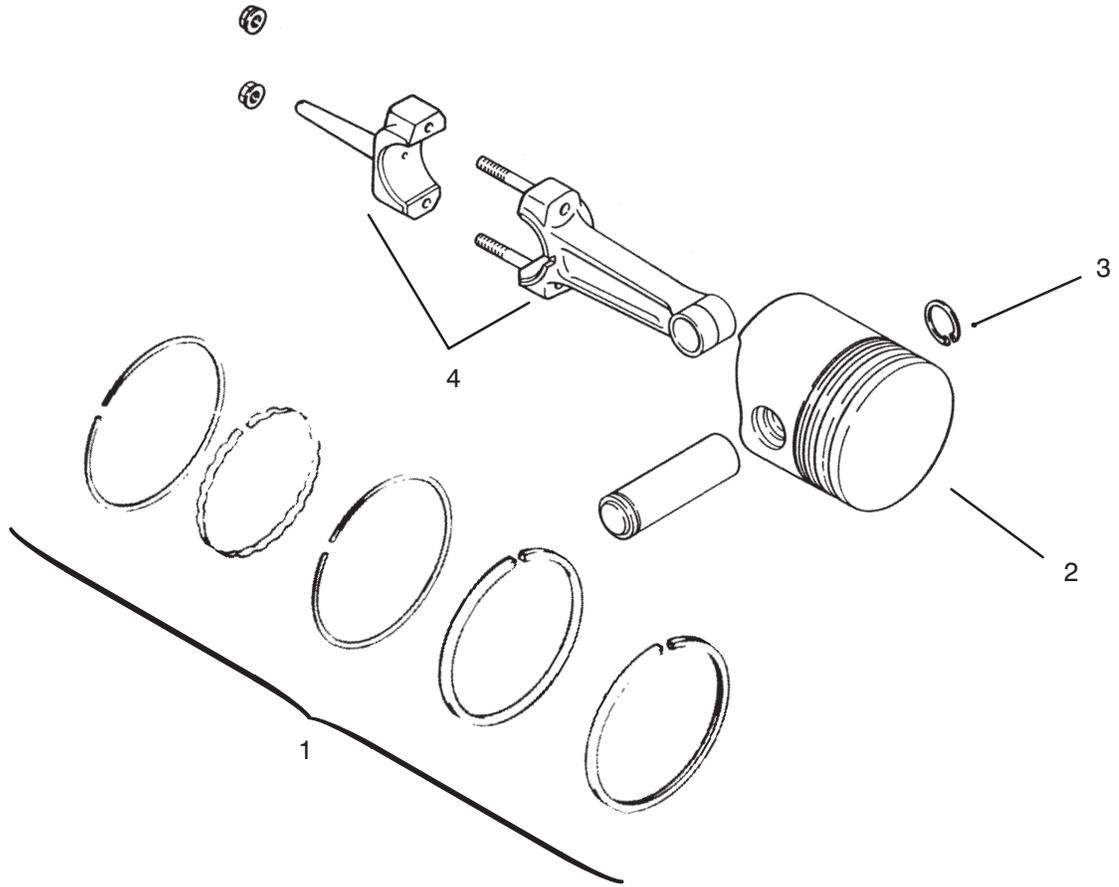


C-1563

PISTON AND RINGS

Ref. No.	Part No.	Description	No. Used
1	92-7273	Set - Ring, Std. & .003	1
*	92-7274	Set - Ring .010	1
*	92-7275	Set - Ring .020	1
*	92-7276	Set - Ring .030	1
2	92-7268	Piston w/Ring Set Std.	1
*	92-7269	Piston w/Ring Set .003	1

Ref. No.	Part No.	Description	No. Used
*	92-7270	Piston w/Ring Set .010	1
*	92-7271	Piston w/Ring Set .020	1
*	92-7272	Piston w/Ring Set .030	1
3	KH10262	Retainer - Piston Pin	2
4	92-7267	Rod - Connecting Std.	1
*	KH10695	Rod - Connecting .010	1

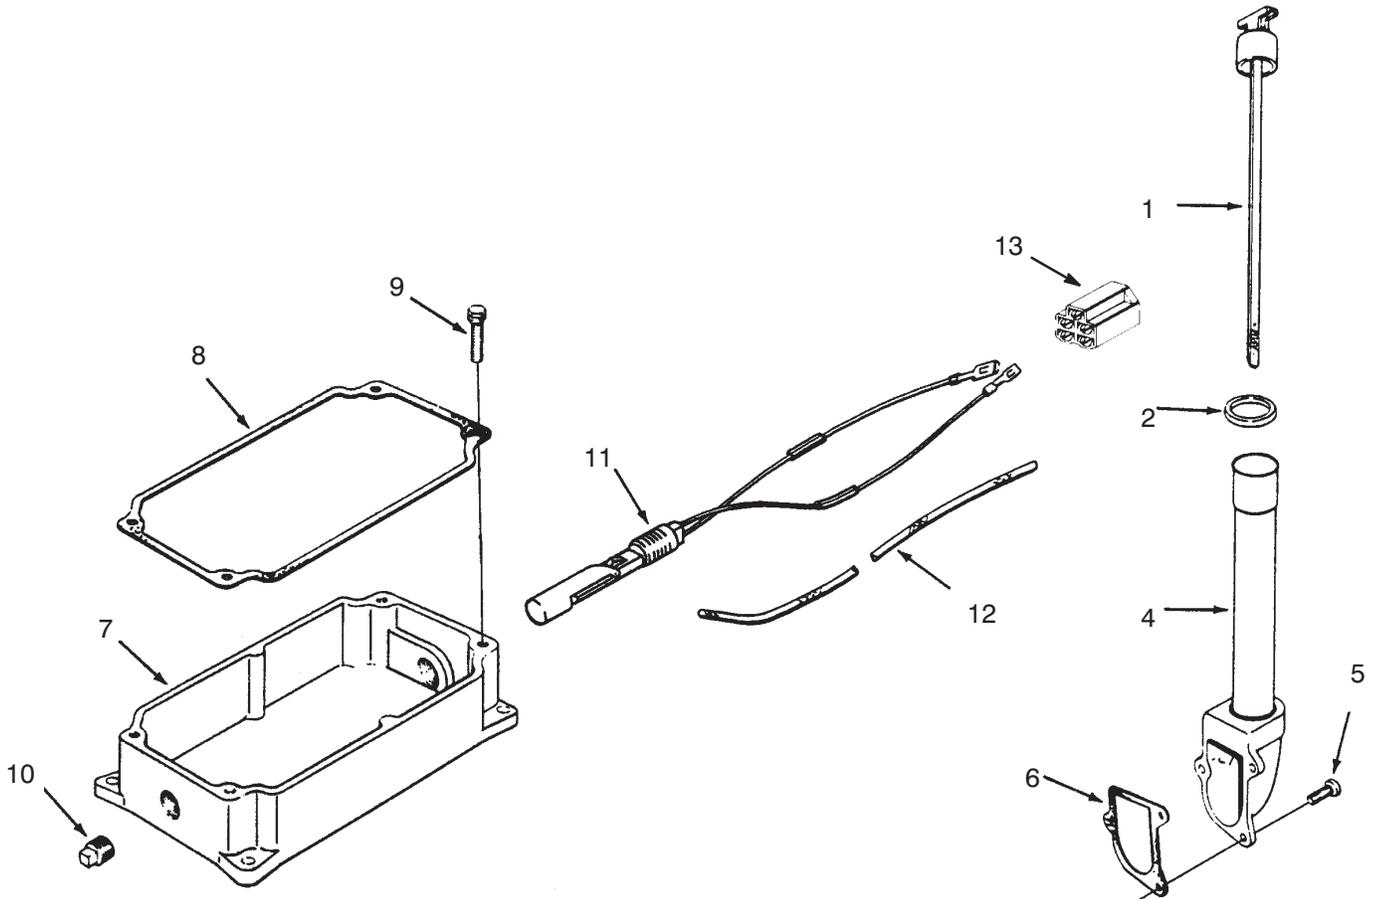


C-1562

OIL PAN AND DIPSTICK

Ref. No.	Part No.	Description	No. Used
1	KH10270	Dipstick	1
2	KH10201	"O"Ring	1
4	KH10266	Adapter - Oil Fill	1
5	KH10541	Screw	3
6	KH10088	Gasket	1
7	KH10248	Pan - Oil	1
8	KH10059	Gasket	1
9	KH10550	Screw	4

Ref. No.	Part No.	Description	No. Used
10	KH10620	Plug	4
11	92-7278	Kit - Float Switch (Incl. Ref.#12 & Decal)	1
12	KH10134	Sleeve	1
13	KH10345	Connector - Female (5-Contact)	1
*	KH10119	Decal - Float Switch	1

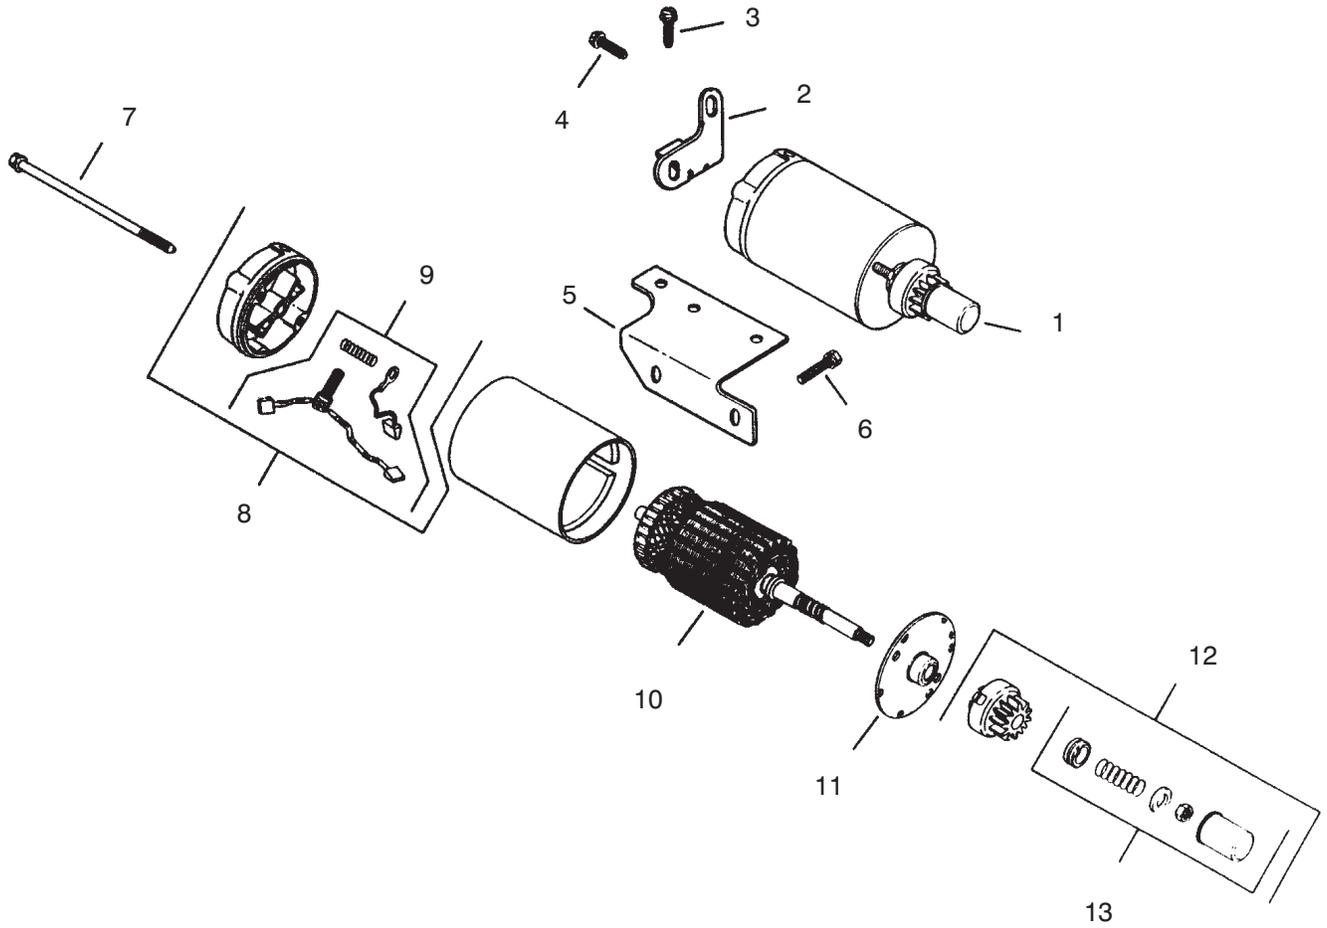


C-1490

STARTER

Ref. No.	Part No.	Description	No. Used
1	92-7260	Starter Assembly (Includes Items 9 thru 15)	1
2	KH10244	Brace - Starter Tail	1
3	KH10607	Screw - Hex. Hd.	1
4	KH10610	Screw - Hex. Hd.	1
5	KH10304	Bracket - Starter	1
6	KH10549	Screw	2
7	KH10181	Bolt	2
8	KH10210	End Cap Ass'Y (Incl. Ref.#9)	1


Ref. No.	Part No.	Description	No. Used
9	KH10515	Kit - Brush	1
10	KH10247	Armature	1
11	KH10209	Cap - Drive End	1
12	KH10323	Kit - Drive (Incl. Ref. #15)	1
13	KH10324	Kit - Drive Parts	1
*	KH10135	Tag - Caution	1
*	KH10304	Bracket - Solenoid	1
*	KH10549	Screw	1

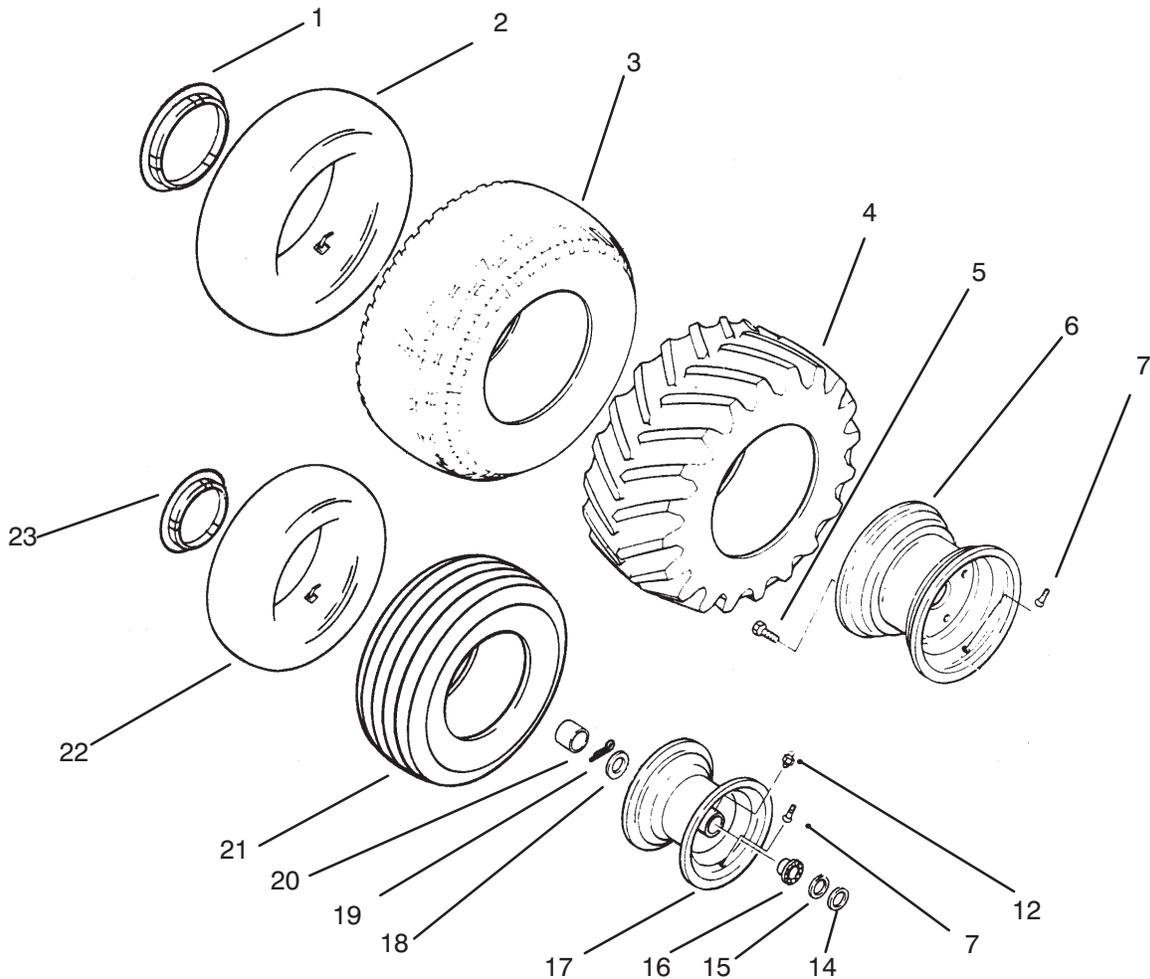

WHEELS AND TIRES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	114428	Logo – Hub Cap 12" (Opt.)	2	16	110513	Bearing – Ball	4
2	7007	Tube – Rear	2	17	93-9801	Rim – Front (Incl. Ref. #12)	2
3	116744	Tire – Turf Trac, Rear	2	18	11952	Washer – Special Hub Cap	2
4	7607	Tire – Cleat, (Opt.)	2	19	3272-17	Pin – Cotter	2
5	83-2720	Bolt – Lug	10	20	111951	Hubcap	2
6	111516	Wheel – Rear	2	21	117127	Tire – Turf Trac, Front	2
*	110677	Wheel – Cleat (Opt.)	2	22	100079	Tube – Front" (Opt.)	2
7	5108	Stem – Valve	4	23	114427	Logo – Hub Cap 8" (Opt.)	2
12	109500	Fitting – Grease	2	*	93-9800	Wheel Assembly – Front (Incl. Ref.# 7,12, 16 & 21)	2
14	5210	Washer – Shim .015	2				
15	1278	Washer – Shim .050	4				

*Not Illustrated

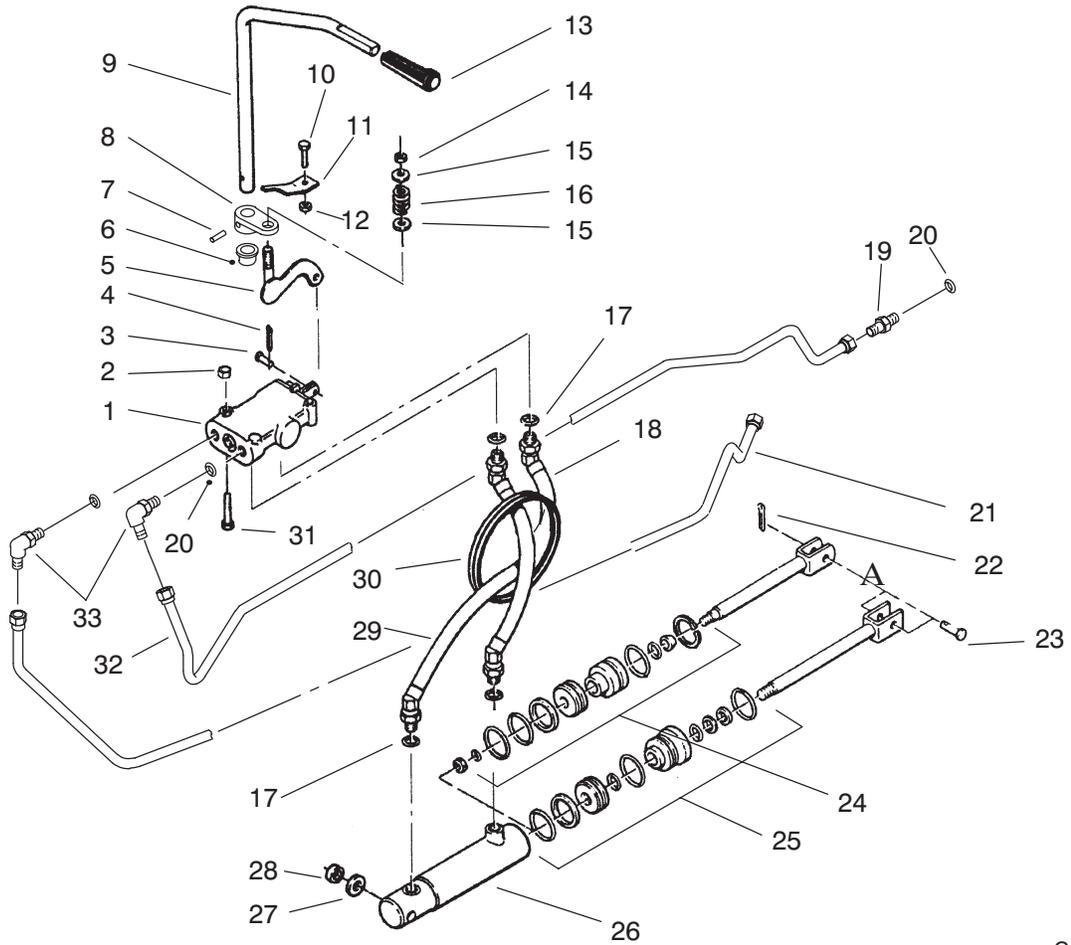

C-2051


HYDRAULIC CONTROL SYSTEM

Ref. No.	Part No.	Description	No. Used
1	114000	Valve – Hydraulic (Incl. Ref.#3-4)	1
2	3296-42	Nut	2
3	9321204	Pin – Clevis	1
4	3272-1	Pin – Cotter	1
5	78-5640	Bar – Lift	1
6	5983	Bushing	1
7	933198	Pin – Spirol	1
8	116302	Arm – Control	1
9	78-5670	Rod – Lift Control	1
10	321-4	Screw	1
11	116305	Bracket – Control Rod	1
12	3296-42	Nut	1
13	116634	Knob – Hydraulic Lift	1
14	3296-29	Nut	1
15	3256-23	Washer – Flat	2
16	104841	Spring	1
17	973310	"O"Ring	4
18	110125	Hose – Valve To Cylinder	1
19	102628	Fitting – Straight Adapter (Incl. Ref. #20)	1

Ref. No.	Part No.	Description	No. Used
20	973370	"O"Ring	4
21	86-9280	Tube – Hydraulic (Pressure)	1
22	3272-11	Pin – Cotter	1
23	9329974	Pin – Clevis	1
24	101699	Kit – Service, Cylinder Repair	1
25	109088	Kit – Service, Cylinder Repair	1
26	119340	Cylinder – Hydraulic (Incl. Ref.#24-25)	1
27	9202324	Washer	1
28	101757	Spacer	1
29	110124	Hose – Valve To Cylinder	1
30	106267	Grommet – Rubber	1
31	321-11	Bolt	2
32	94-1802	Tube – Hydraulic (Return)	1
33	108365	Fitting – 90° (Incl. Ref. #20)	2
*	109081	Kit – Service, Valve Repair	1
*	100571	Tie – Cable	1

*Not Illustrated


Note : In Illustration Center lines A Continue on next page

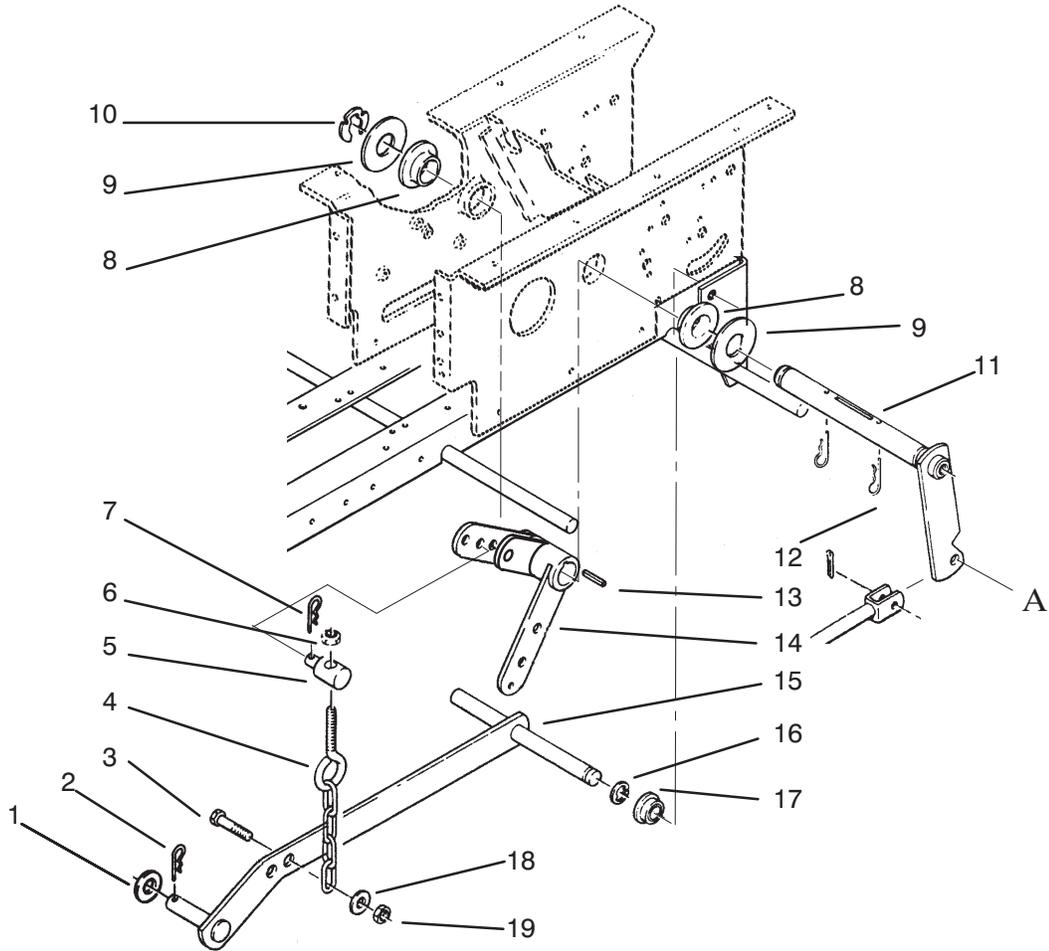

HYDROSTATIC LIFT LINKAGE

Ref. No.	Part No.	Description	No. Used
1	3256-26	Washer	1
2	9335054	Pin - Cotter	1
3	322-5	Bolt	1
4	106522	Chain - Lift	1
5	6739	Trunnion	1
6	3296-39	Nut	1
7	9335054	Pin - Cotter	1
8	106269	Bearing - Flanged	2
9	3256-62	Washer	2
10	32151-91	Retainer	2

Ref. No.	Part No.	Description	No. Used
11	121100	Lever - Lift	1
12	9335074	Pin - Cotter	2
13	1121	Key - Sq.	1
14	78-1550	Bellcrank	1
15	113445	Bar - Lift	1
16	32120-47	Ring - Retaining	1
17	6229	Bearing	1
18	3256-23	Washer	1
19	3296-29	Nut	1

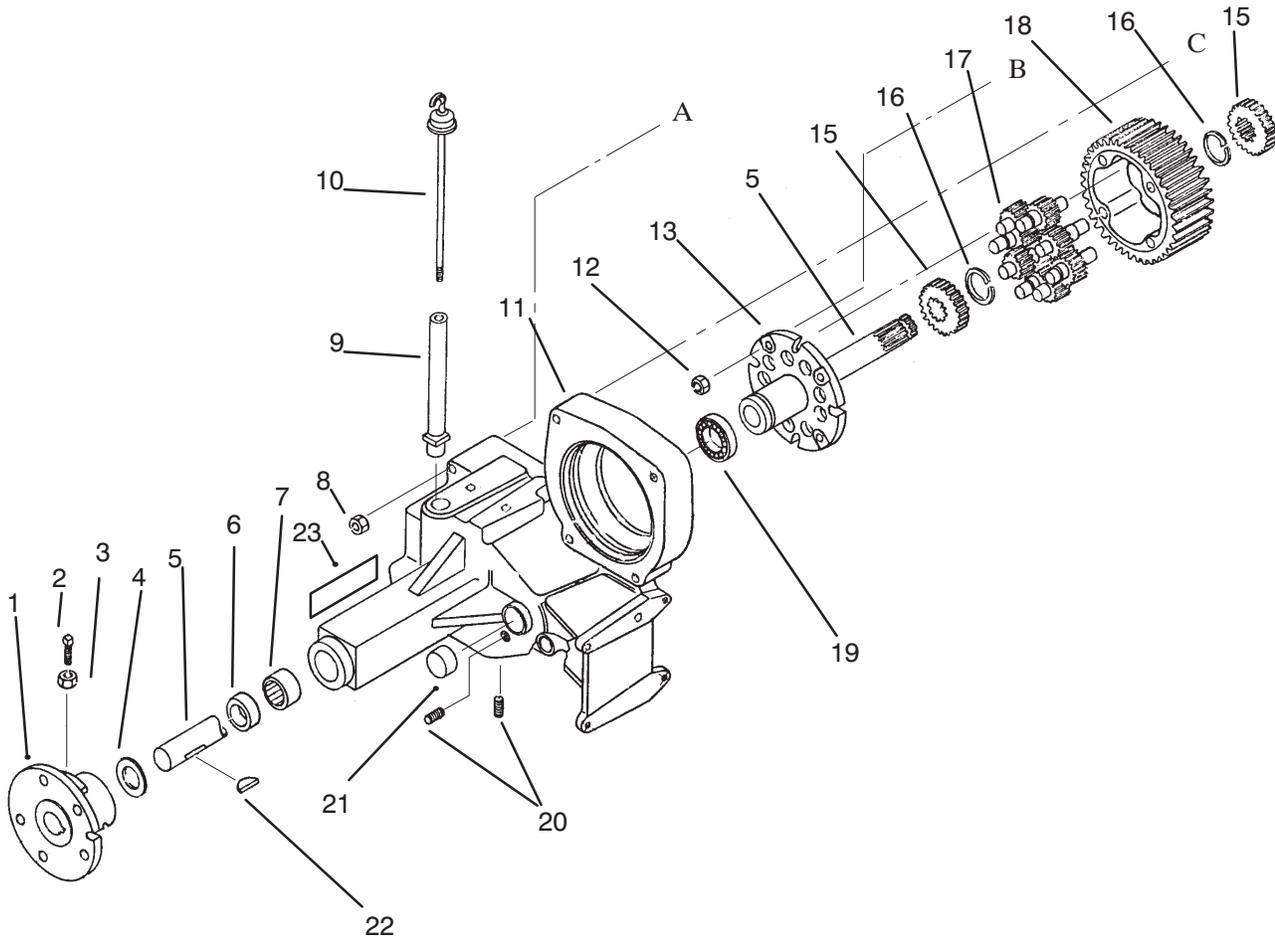


TRANSAXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	105763	Hub – Rear	1
2	3243-5	Screw – Set	2
3	3218-3	Nut	2
4	106826	Washer – Thrust	1
5	108362	Axle – Rear, RH Long 13-1/8 in./33 cm	1
6	6449	Axle – Seal	1
7	9416	Bearing – Needle	1
8	3296-39	Nut	6
9	106448	Tube – Filler	1
10	110768	Dipstick	1
11	92-7298	Case – Transaxle, RH (Incl. Ref.#23)	1
12	108881	Nut	4


Ref. No.	Part No.	Description	No. Used
13	111196	Cap – Differential End	1
15	101889	Gear – Differential Axle 24 Tooth	2
16	105876	Ring – Retaining	2
17	101623	Gear – Differential Pinion 11 Tooth	8
18	105061	Gear – Differential Ring 43 Tooth	1
19	111199	Bearing – Ball	1
20	281-10	Plug – Pipe	2
21	1532	Bearing – Needle	1
22	937108	Key – Woodruff	1
*	93-9814	Transaxle (Incl. Ref. #23)	1
23	88-2790	Decal – Danger	1

Note : In Illustration Center lines A,B and C
Continue on next page

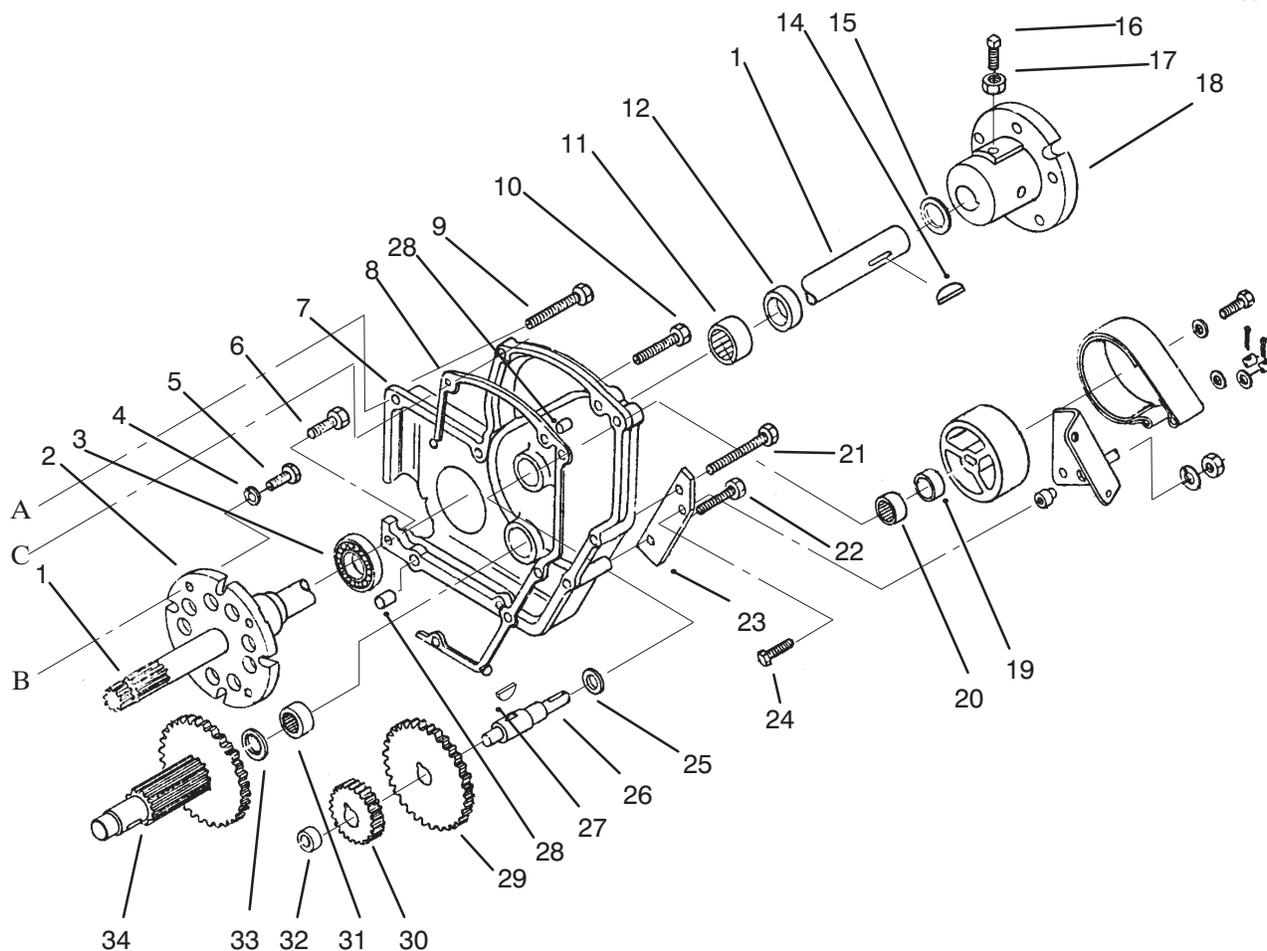

TRANSAXLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	108361	Axle – Rear, LH Short 10–1/8 in./26 cm	1	18	105763	Hub – Rear	1
2	111196	Cap – Differential End	1	19	108357	Seal – Oil	1
3	111199	Bearing – Ball	1	20	1538	Bearing – Needle	1
4	107374	Washer – Special	4	21	323–26	Screw – Hex. Hd.	1
5	911423	Bolt	4	22	323–25	Screw – Hex. Hd.	3
6	9080356	Bolt	1	23	109367	Bracket – Brake	1
7	111201	Case – Transaxle, LH	1	24	323–9	Screw – Hex. Hd.	1
8	108312	Gasket – Case	1	25	7956	Washer – Thrust	1
9	323–15	Bolt	2	26	109370	Shaft	1
10	9080406	Bolt	1	27	937099	Key – Woodruff	1
11	9416	Bearing – Needle	1	28	108363	Pin – Dowel	2
12	6449	Axle – Seal	1	29	109752	Gear 46 Tooth	1
14	937108	Key – Woodruff	1	30	109742	Gear 20 Tooth	1
15	106826	Washer – Thrust	1	31	1532	Bearing – Needle	1
16	3243–5	Screw – Set	2	32	1518	Bearing – Needle	1
17	3218–3	Nut	2	33	9547	Washer – Thrust	1
				34	109703	Gear Assembly	1

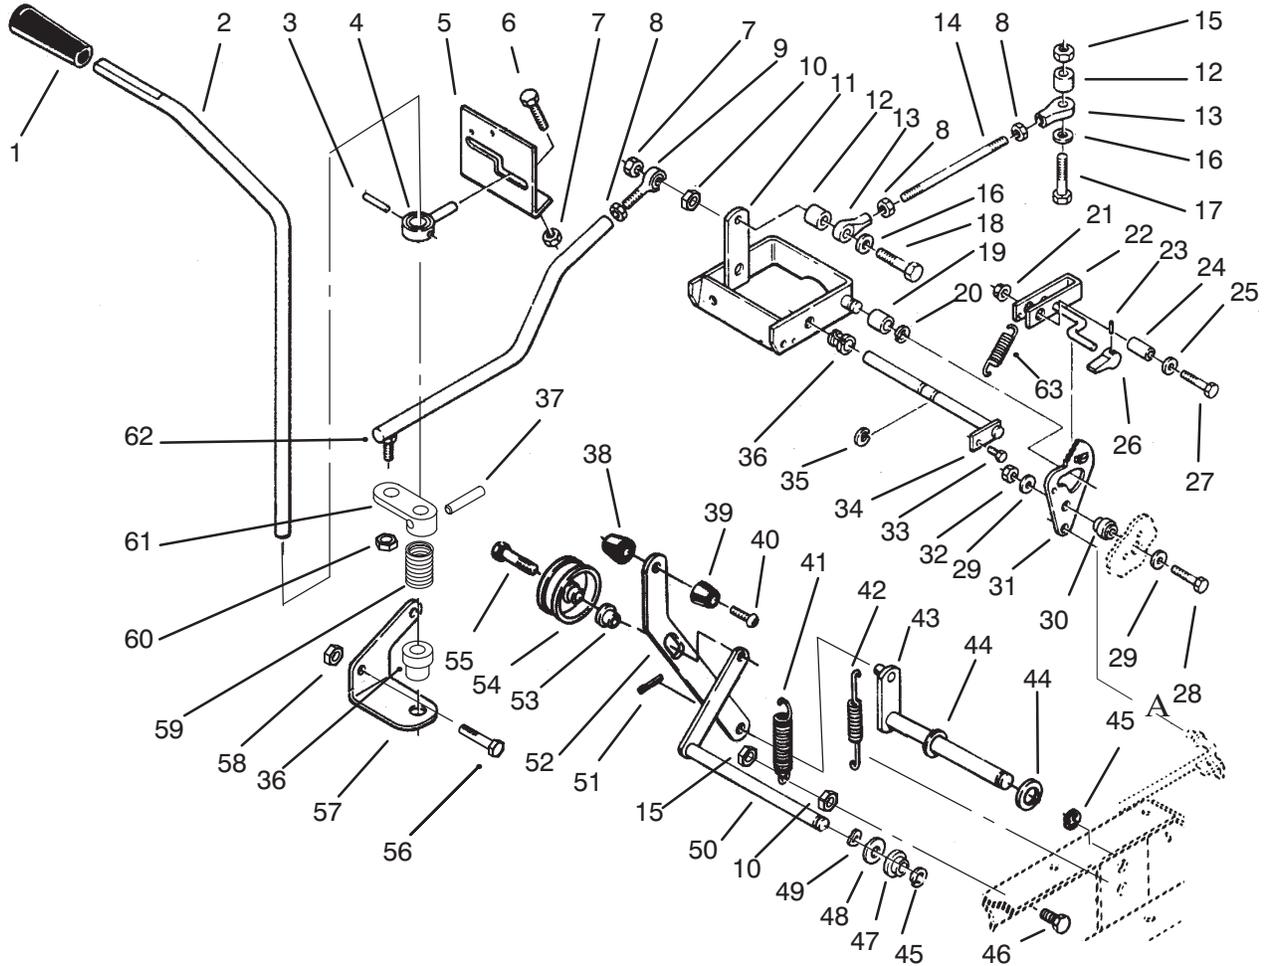


CLUTCH, BRAKE MOTION CONTROL LINKAGE

Ref. No.	Part No.	Description	No. Used
1	116635	Knob – Motion Control	1
2	78-5660	Lever – Motion Control	1
3	933198	Pin – Spirol	1
4	118660	Guide – Control	1
5	78-5631	Bracket – Control	1
6	321-4	Bolt	2
7	3296-42	Nut	4
8	3220-1	Nut	3
9	116407	Rod End	1
10	3217-5	Nut	2
11	113454	Control – Cam	1
12	100304	Spacer	2
13	110189	Rod End Asm	2
14	108904	Rod Control 9" Long	1
15	32146-17	Nut	1
16	3256-22	Washer	2

Ref. No.	Part No.	Description	No. Used
17	321-9	Screw – Hex. Hd.	1
18	9114584	Bolt	1
19	100656	Bearing – Cam	1
20	32120-47	Ring – Retaining	4
21	102809	Nut – Special, Flanged	1
22	78-8500	Lever – Parking Brake	1
23	933135	Pin – Spirol	1
24	102025	Spacer	1
25	9202414	Washer	1
26	118860	Knob – Parking Brake Lever	1
27	323-9	Bolt	1
28	323-8	Bolt	1
29	3256-4	Washer	2
30	108717	Spacer	1
31	108716	Plate – Cam	1
32	3296-39	Nut	1


* Not Illustrated

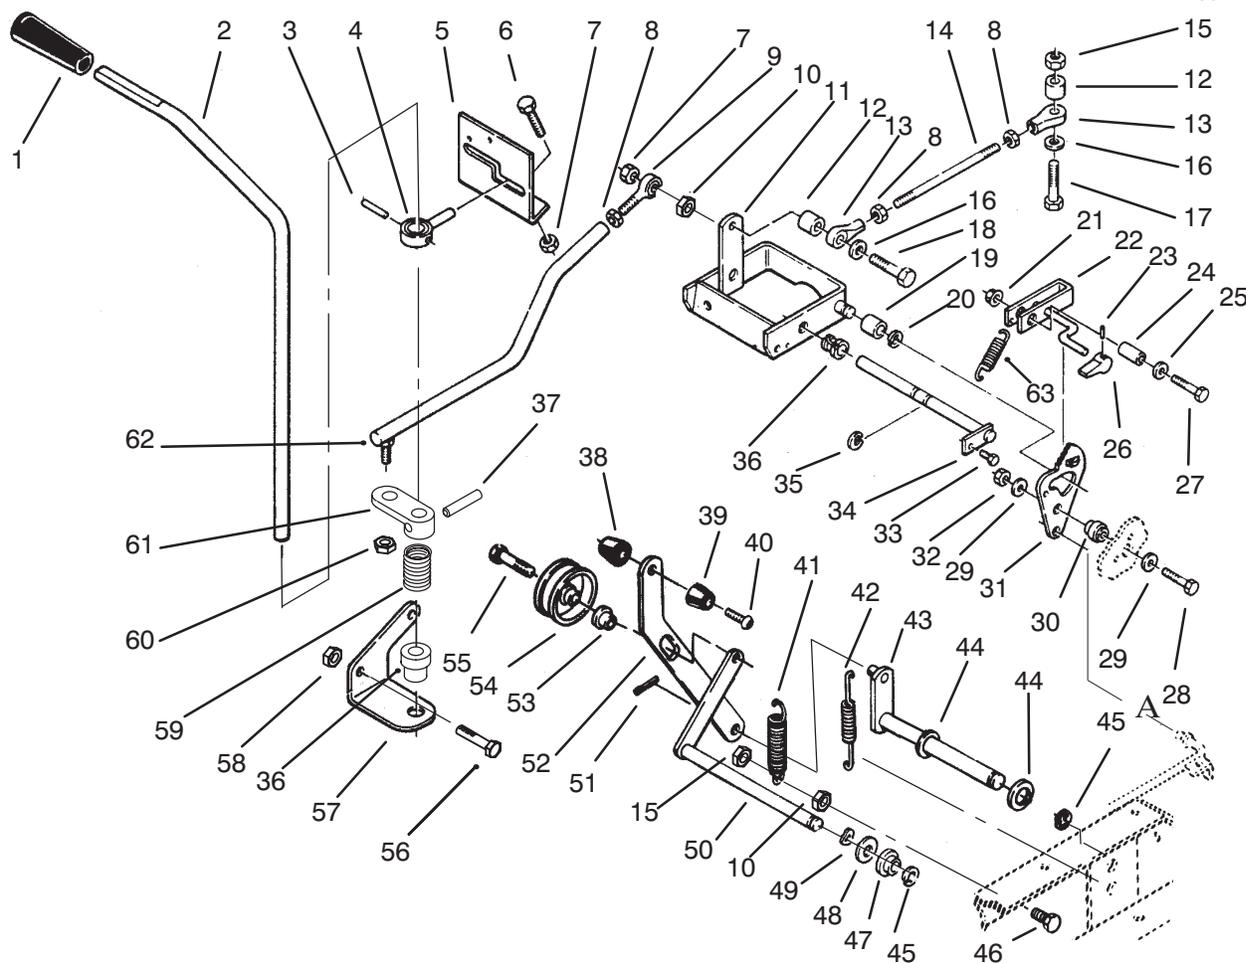

CLUTCH, BRAKE MOTION CONTROL LINKAGE

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
33	9266944	Bolt	1	49	114823	Washer - Wave	1
34	108496	Rod - Pivot	1	50	78-6020	Rod - Pivot	1
35	32120-47	Ring - Retaining	1	51	3272-2	Pin - Cotter	1
36	5983	Bushing	3	52	110780	Handle	1
37	32121-94	Pin - Spirol	1	53	106368	Rod - Pivot	1
38	8722	Knob	1	54	106450	Spacer	1
39	8693	Knob	1	55	112426	Pulley - Idler	1
40	9117474	Screw	1	56	106193	Bolt - Special	1
41	107938	Spring	1	57	322-3	Bolt	2
42	110769	Spring	1	58	78-1540	Bracket - Control, Lower	1
43	106369	Shaft	1	59	3296-29	Nut	2
44	9202634	Washer	4	60	101853	Spring	1
45	5701	Ring - Retaining	4	61	3296-4	Nut	1
46	321-6	Bolt	1	62	116321	Arm - Control	1
47	7879	Bushing	1	63	116324	Rod Assembly	1
48	3765	Washer - Shim	1		83-2820	Spring	1

* Not Illustrated

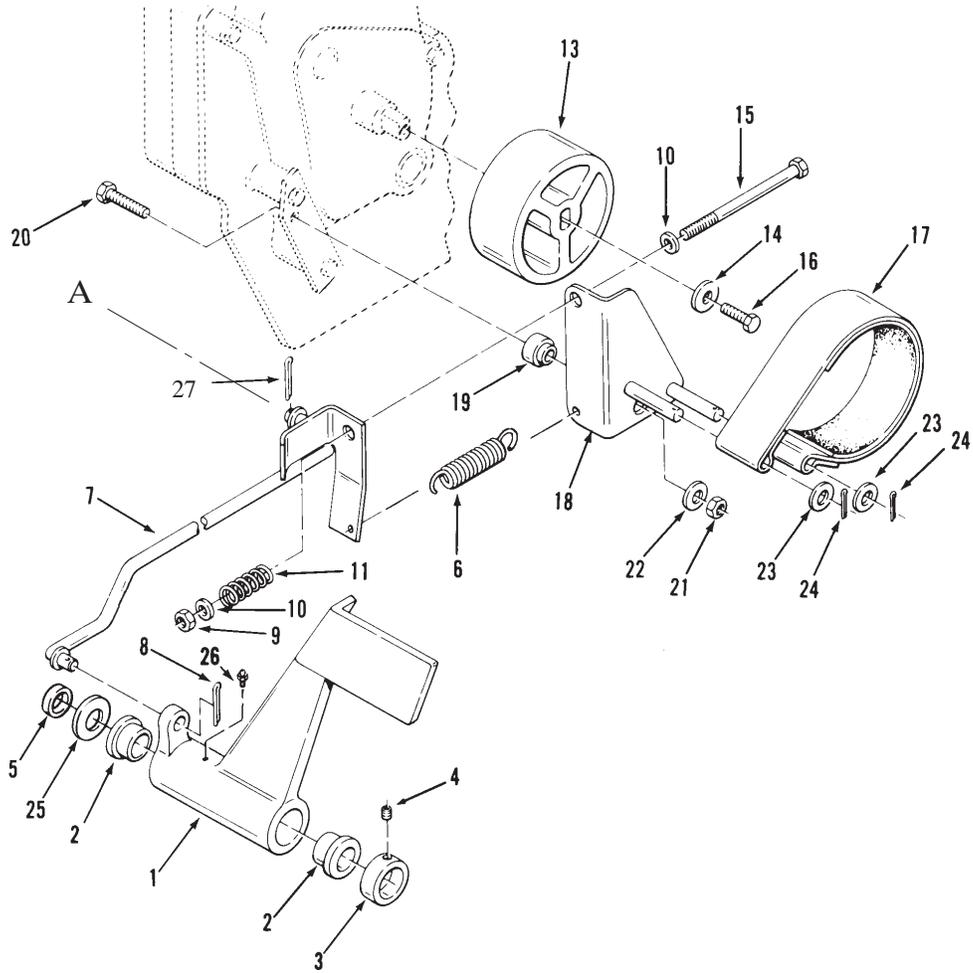


CLUTCH, BRAKE AND SPEED CONTROL LINKAGE

Ref. No.	Part No.	Description	No. Used
1	79-1350	Pedal - Brake/Return To Neutral	1
2	6254	Bushing	2
3	111383	Collar	2
4	3245-32	Screw - Set	2
5	107691	Spacer	1
6	103125	Spring - Brake Return	1
7	109372	Rod - Brake, Front	1
8	3272-11	Pin - Cotter	2
9	3296-39	Nut	1
10	3256-24	Washer	2
11	108680	Spring	1
13	106719	Drum - Brake	1
14	2844	Special Washer	1

Ref. No.	Part No.	Description	No. Used
15	323-23	Bolt	1
16	3235-22	Bolt	1
17	109371	Band - Brake	1
18	78-7740	Arm - Brake Pivot	1
19	109356	Bushing	1
20	323-9	Bolt	1
21	3296-39	Nut	1
22	3256-4	Washer	1
23	3256-6	Washer	2
24	3272-6	Pin - Cotter	2
25	1278	Washer - Shim	1
26	302-5	Fitting - Grease	1
27	9335044	Pin - Cotter	1

Note : In Illustration Center lines A Continue on next page

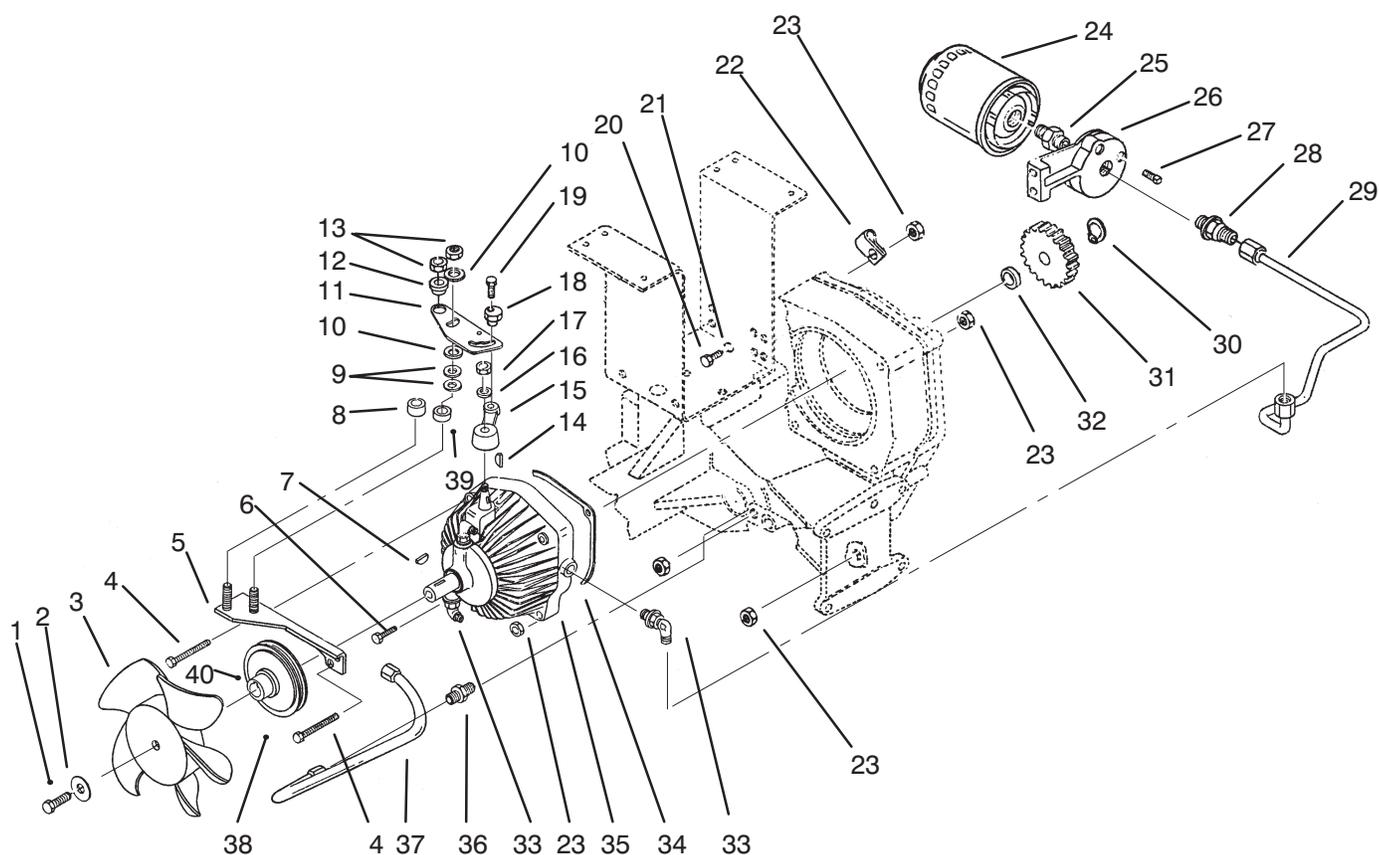


HYDROSTATIC TRANSMISSION

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	9080-26	Bolt	1	22	8830	"J"Clip	1
2	103995	Washer - Special	1	23	3296-39	Nut - Lock	4
3	108393	Fan	1	24	79-5270	Filter - Oil	1
4	323-25	Screw - Hex. Hd.	2	25	5991	Fitting - Filter	1
5	108329	Assembly - Plate, Control	1	26	108323	Base - Filter	1
6	9080406	Screw - Hex. Hd.	1	27	281-10	Plug - Pipe	3
7	937089	Key - Hi-Pro	1	28	102628	Fitting - Hyd., Straight (Incl. "O"Ring)	1
8	108326	Spacer - Pivot, Long	1	*	973370	"O"Ring	1
9	100365	Washer - Spring, Disc	2	29	79-5020	Tube - Filter to Pump	1
10	100305	Washer - Friction	2	30	32120-64	Ring - Retaining	1
11	108333	Plate - Control, Speed	1	31	109751	Gear - 20 Teeth	1
12	100309	Bushing - Pivot, Cam	1	32	108366	Spacer - Drive, Gear	1
13	108881	Nut	2	33	108365	Fitting - Hydraulic 90°	2
14	3257-24	Key - Woodruff	1	34	108319	Gasket - Pump	1
15	108325	Arm - Control, Speed	1	35	108368	Assembly - Pump & Motor	1
16	3256-26	Washer - Flat	1	36	108364	Fitting - Hyd., Straight	1
17	3296-45	Nut - Lock	1	37	111217	Tube - Suction	1
18	106661	Cam - Eccentric	1	38	108316	Pulley - Transmission Drive	1
19	9080196	Screw - Hex. Hd.	1	39	108327	Spacer - Pivot, Short	1
20	322-3	Screw - Hex. Hd.	2	*40	3242-2	Screw - Set	2
21	3253-4	Washer - Lock	2				

* Not Illustrated


EATON HYDROSTATIC TRANSMISSION # 1100-062

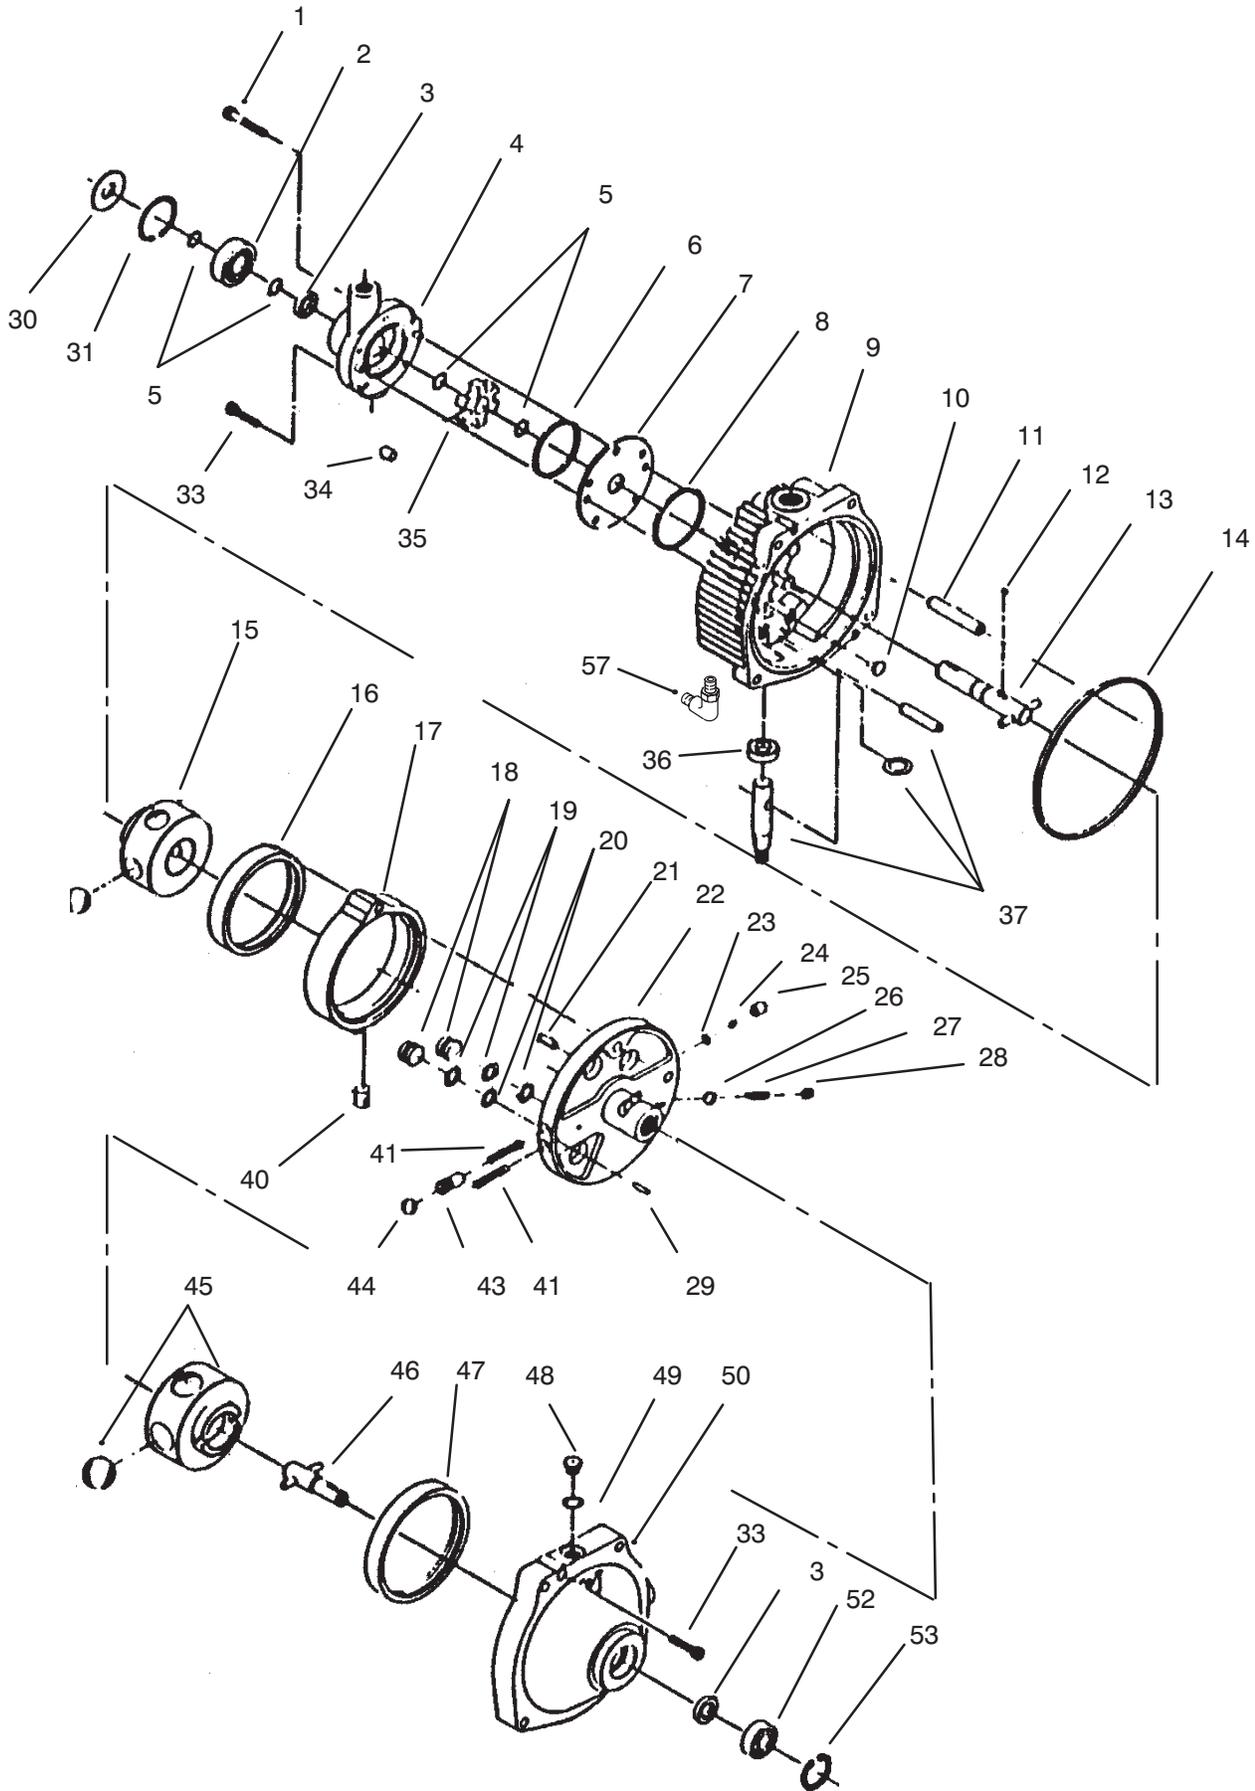

EATON HYDROSTATIC TRANSMISSION # 1100-062

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	56-2800	Screw – Hex. Hd. Soc.	1	30	112652	Shield – Grass	1
2	56-2810	Bearing – Ball	1	31	112653	Ring – Retaining	1
3	56-2820	Seal	2	33	56-3100	Screw – Soc. Hd.	6
4	112637	Housing – Pump Assembly (Incl. Ref.# 3)	1	34	56-3110	Roller	6
5	56-3090	Ring – Retaining	4	35	56-3120	Carrier	1
6	56-2850	Ring – Seal	1	36	56-3130	Seal – Oil	1
7	56-2860	Plate – Pump	1	37	56-3140	Kit – Control Shaft	1
8	56-2870	Ring – Seal	1	40	56-3170	Insert – Cam Ring	1
9	112641	Cover Assembly (Incl. Ref. #11, 36 & 37)	1	41	56-3180	Spring	2
10	56-2880	Button	2	43	56-3200	Body – Acc. Valve	2
11	56-2890	Pin – Dowel	1	44	56-3210	Ball	2
12	56-2900	Pin – Drive	1	45	56-3220	Rotor / Ball – Motor	1
13	56-2910	Shaft – Input	1	46	56-3230	Shaft – Output	1
14	56-2920	Ring – Seal	1	47	56-3240	Race – Motor	1
15	56-2930	Rotor / Ball – Pump	1	48	56-3250	Plug – Asm (Incl. Ref. #49)	1
16	113136	Race – Pump	1	49	56-3260	"O"Ring	1
17	93-9810	Ring – Cam	1	50	93-9811	Body Assembly	1
18	56-2950	Piston	2	52	112666	Bearing – Output Before Serial No. 5901261	1
19	56-2960	Ring – Back Up	2	*	112602	Bearing – Output After Serial No. 5901260	1
20	56-2970	"O"Ring	2	53	56-3290	Ring – Retaining	1
21	56-2980	Pin – Coil	1	56	56-2940	Ring – Cam (Incl. Ref.#16-17)	1
22	56-2990	Pintle Assembly (Incl. Ref. #1, 18-21, 23-29 41, 43 & 44)	1	57	93-9813	Fitting – 90°	1
23	56-3000	Ring – Retaining	2	*	56-3310	Kit – Seal, Overhaul (Incl. Ref.# 3, 6, 8, 14, 19, 20, 36, & 49)	1
24	56-3010	Ball	2	*	93-9812	Body Assembly (Incl. Ref. # 3, 33, 46-50. 52, 53 & 57)	1
25	56-3020	Body – Check Valve	2				
26	56-3030	Ball	1				
27	56-3040	Spring – Relief Valve	1				
28	56-3050	Plug – Relief Valve	1				
29	56-3060	Pin – Dowel	1				


ELECTRICAL SYSTEM

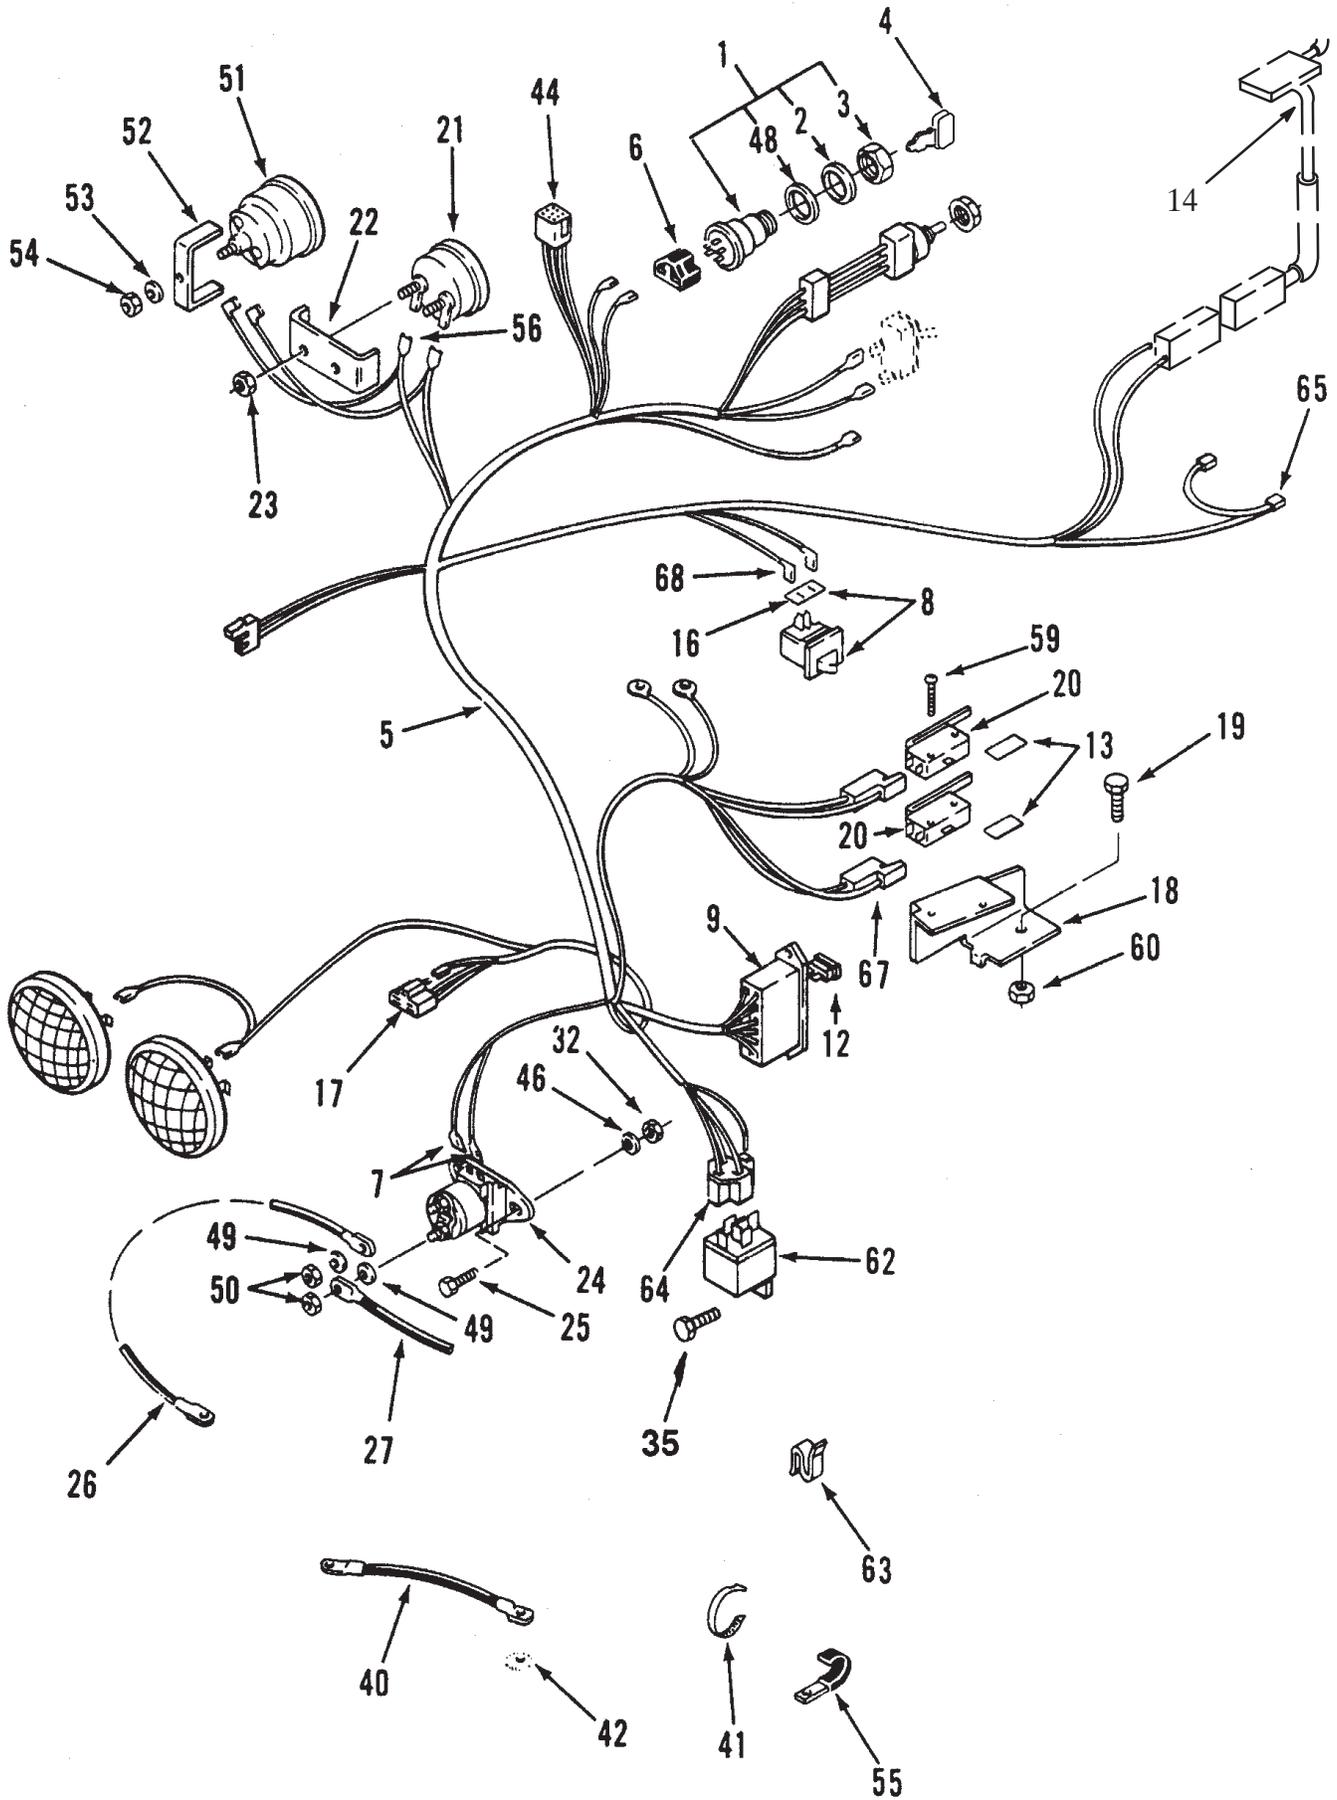


ELECTRICAL SYSTEM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	116338	Switch – Ignition	1	25	9601524	Bolt – Whizlock	2
	111216	Switch – Ignition	1	26	111069	Cable – Solenoid To Starter	1
2	920160	Washer – Intl. T	1	27	111074	Cable – Battery, Positive	1
3	101884	Nut – Special	1	32	116497	Nut	4
4	62-7770	Key – Ignition, Padded	1	35	910794	Screw	1
5	79-3610	Harness Assy – Wiring (Incl. Ref.#6,7,9,44 & 64-68)	1	40	109910	Cable – Ground	1
6	104926	Switch – Connector Body Ignition	1	41	100571	Tie – Cable	1
7	518105	Terminal	1	42	3254-2	Washer – Intl. T	1
8	115230	Switch – Clutch Interlock	1	44	102651	Terminal – Female	8
9	120930	Body – Fuse	1	48	920262	Washer – Special	1
12	109355	Fuse 15 Amp ATO or ATC	1	49	3253-3	Washer – Lock	2
	109102	Fuse 25 Amp ATO or ATC	1	50	3218-1	Nut	2
	NN10277	Fuse 30 Amp ATO or ATC	1	51	78-0020	Meter – Hour (Incl. Ref.# 52-54)	1
13	111642	Barrier – Switch Insulator	2	52	114017	Clamp – Steel	1
14	38-1420	Switch – Seat	1	53	920120	Washer – Lock	1
17	112185	Body – Connector	1	54	915962	Nut – Hex	1
18	115411	Support – Switch	1	55	8830	"J"Clip	1
19	926671	Bolt	1	59	9104784	Screw	2
20	111332	Switch – PTO Interlock	3	60	915732	Nut	2
21	79-0060	Voltmeter	1	62	116397	Relay	2
22	78-0080	Clamp – Voltmeter, Back	1	63	519337	Clip – Cable	1
23	5924	Nut	2	64	518105	Terminal	1
24	92-9845	Solenoid	1	65	6921	Terminal	1
				68	518077	Terminal	2

ELECTRICAL SCHEMATIC

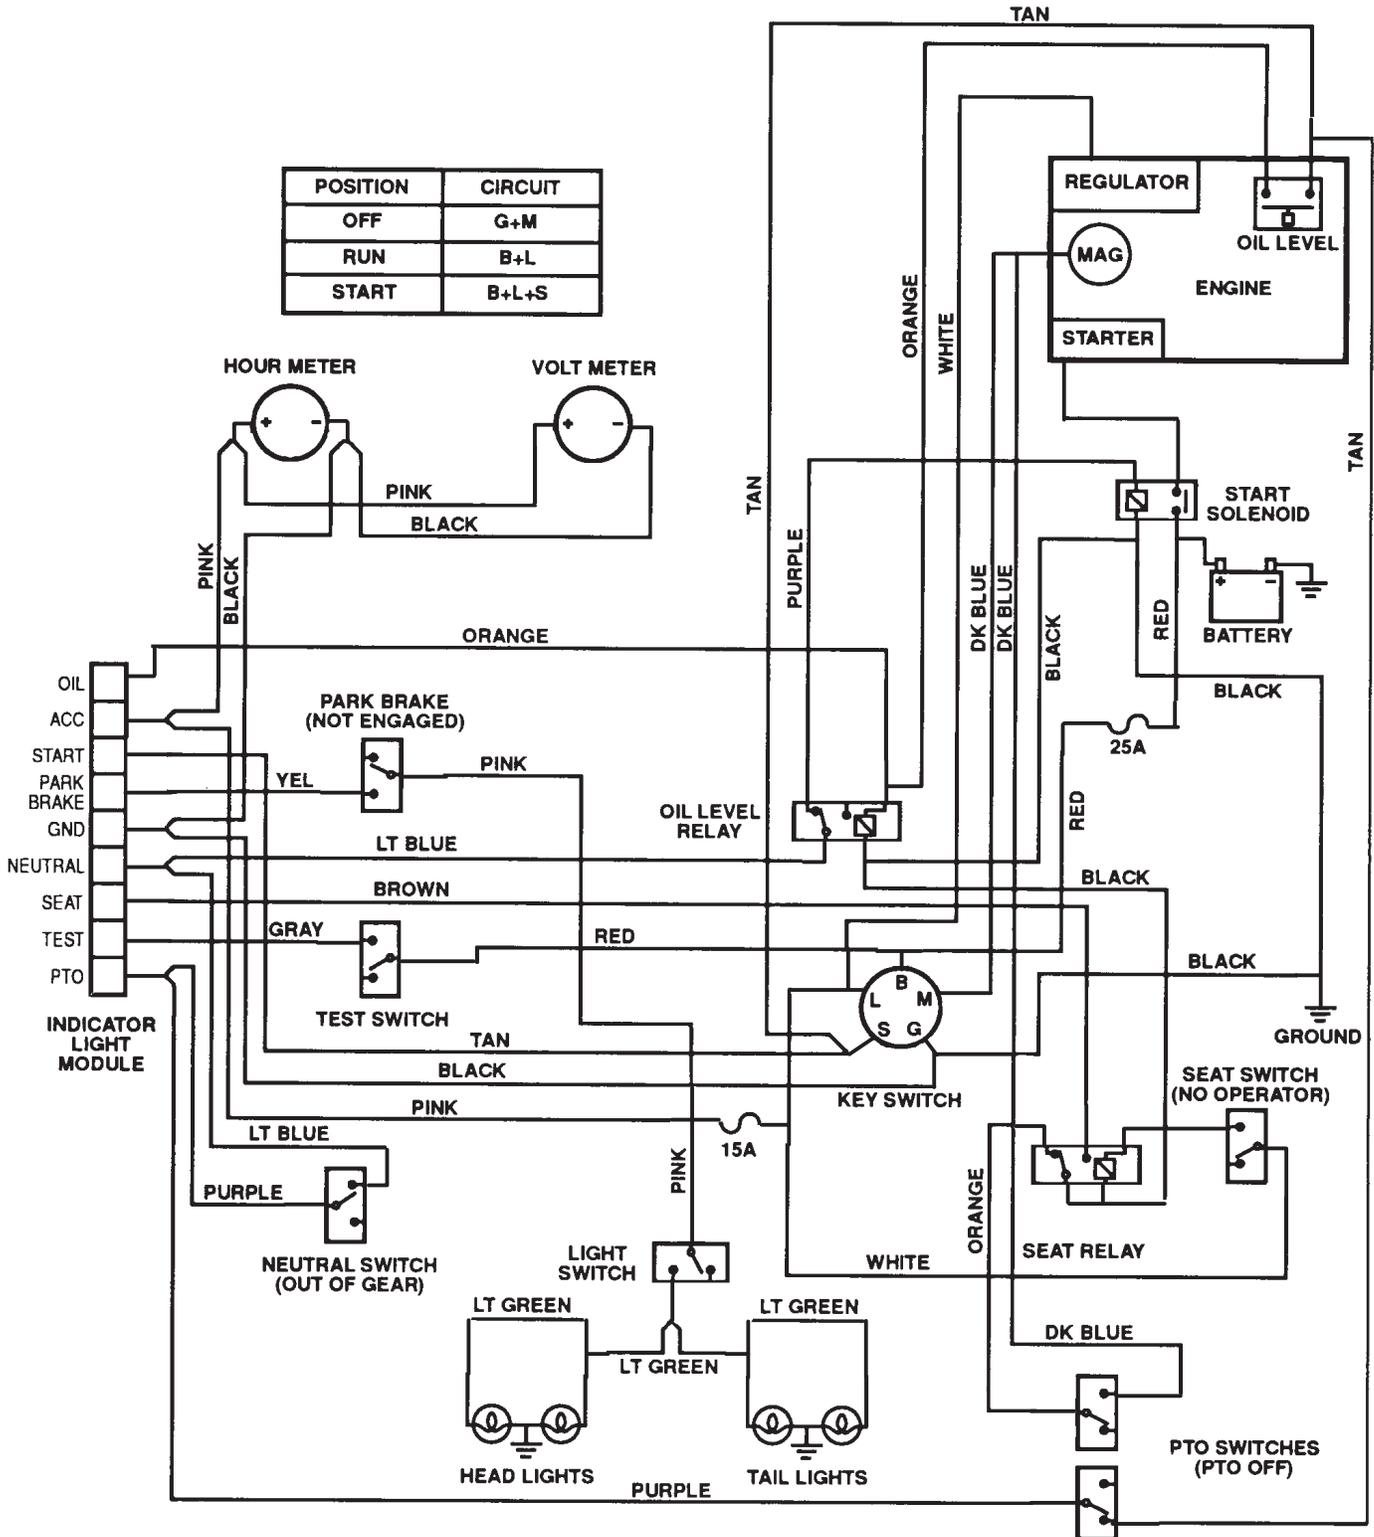

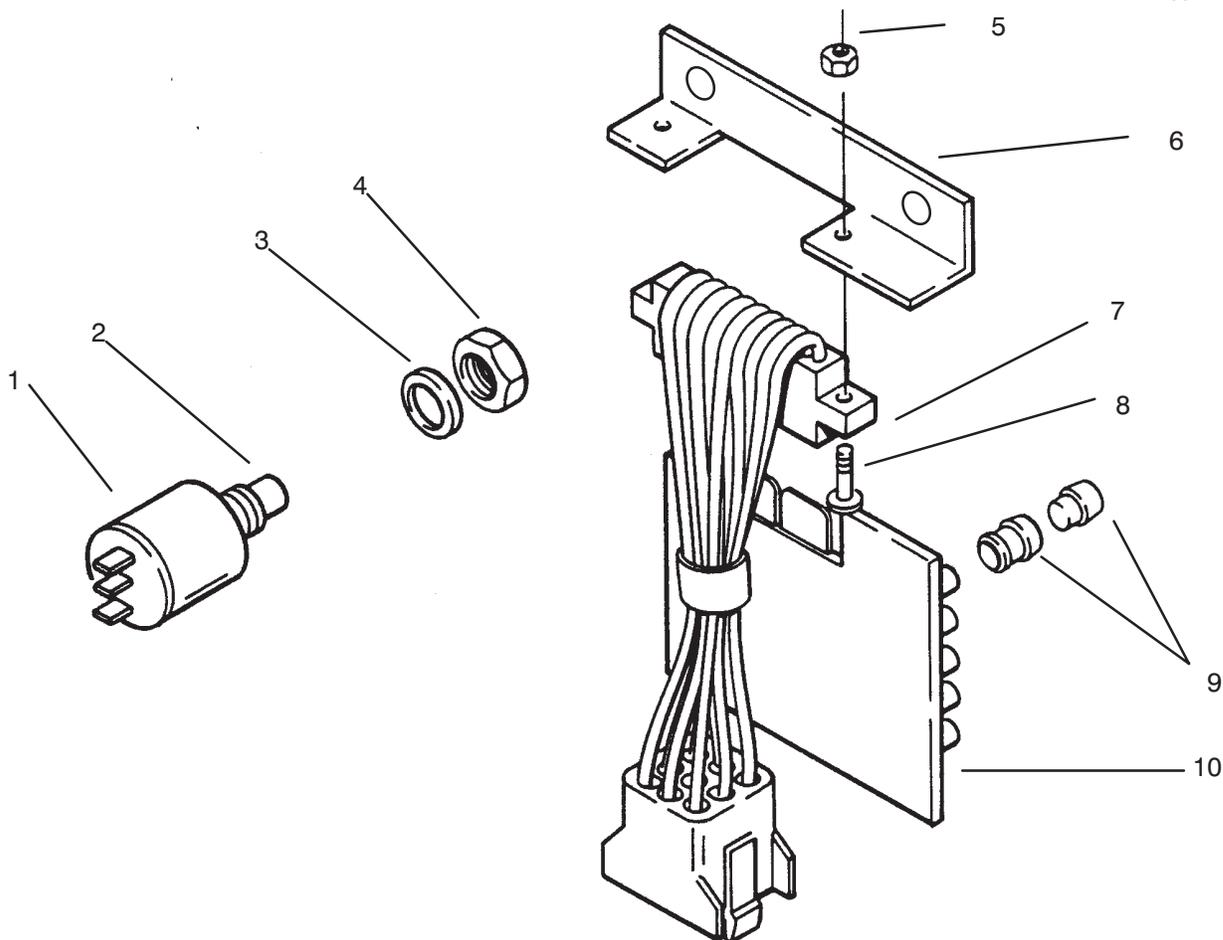


C-1497

ELECTRICAL SYSTEM

Ref. No.	Part No.	Description	No. Used
1	116796	Test Switch	1
2	117217	Switch – Button (Incl. Ref. #2-4)	1
3	111767	Washer	1
4	111359	Nut – Hex	4
5	915732	Nut – Lock	2


Ref. No.	Part No.	Description	No. Used
6	112506	Bracket	1
7	116723	Harness – Wiring	1
8	9107562	Screw	2
9	111343	Bushing Assembly & Indicator Lens	5
10	114825	PC Board w/Lights	1

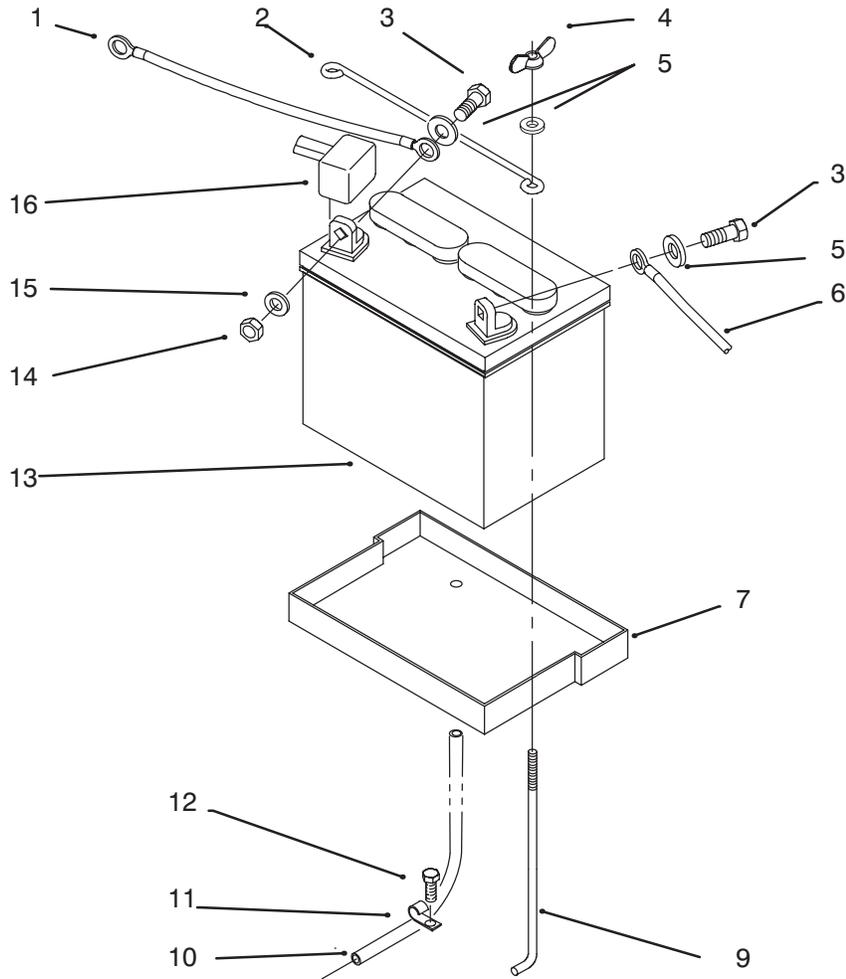

BATTERY

Ref. No.	Part No.	Description	No. Used
1	111074	Cable – Battery	1
2	113010	Rod – Battery Hold Down	1
3	321-3	Screw – Hex. Hd.	2
4	32103-22	Nut – Wing	2
5	3256-22	Washer	4
6	111069	Cable – Battery	1
7	106948	Tray – Battery	1
9	113969	Hook – Battery	2


Ref. No.	Part No.	Description	No. Used
10	114720	Tube – Battery	1
11	8830	"J"Clip	1
12	322-2	Screw – Hex. Hd.	1
13	93-4134	Battery	1
14	3296-42	Nut	2
15	3253-3	Washer – Lock	2
16	109553	Boot – Battery Cable	1

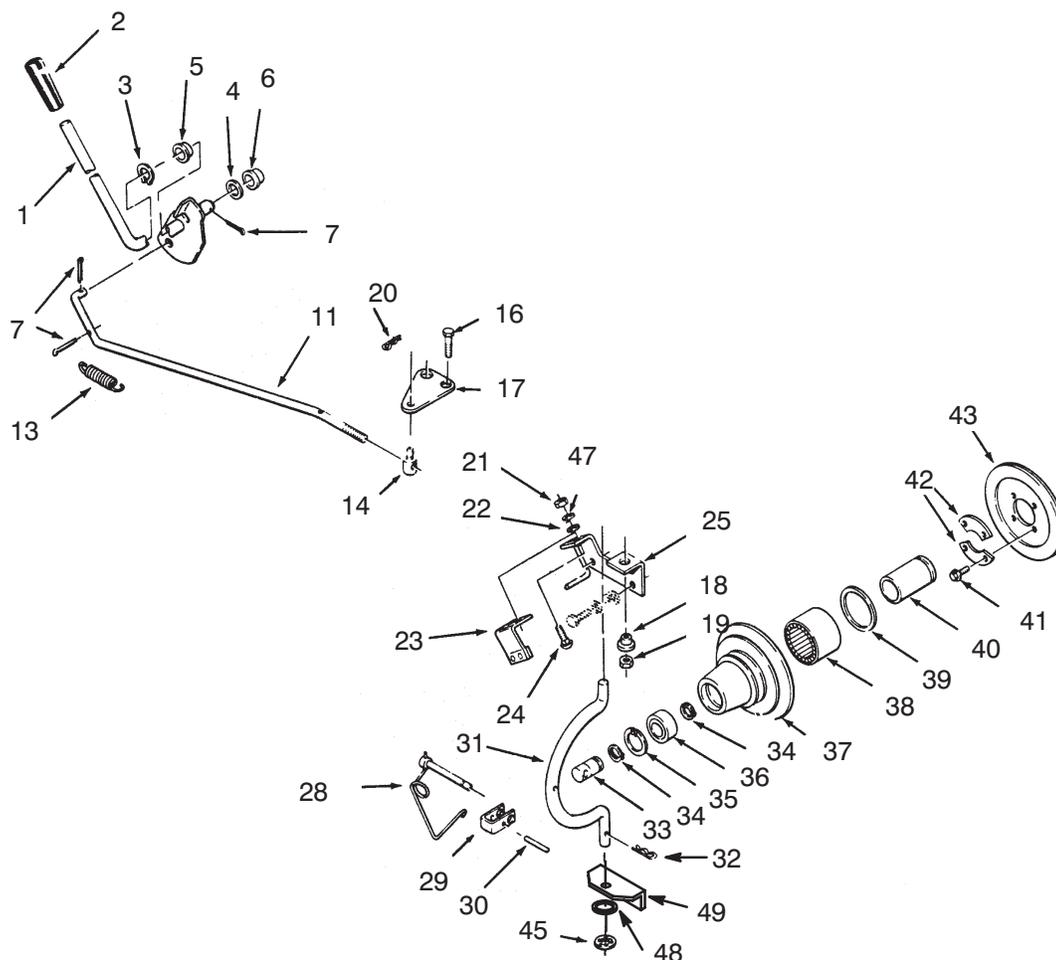

C-1500

PTO CLUTCH AND CONTROL

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111234	Lever - PTO Clutch	1	28	111314	Pin - Locking	1
2	9038	Grip	1	29	113107	Clevis	1
3	32151-11	Ring - Grip	1	30	933274	Pin - Spirol	1
4	3765	Washer - Shim	1	31	113108	Rod - PTO Housing	1
5	5666	Bushing - Nyliner	1	32	9335064	Pin - Cotter	1
6	5983	Bushing	1	33	102872	Shaft - Stub	1
7	3272-10	Pin - Cotter	3	34	32120-72	Ring - Retaining	2
11	111052	Rod - PTO Clutch	1	35	32120-62	Ring - Retaining	1
13	103125	Spring	1	36	109842	Bearing - Ball	1
14	110656	Trunnion	1	37	103478	Housing - Pulley	1
16	323-7	Screw - Hex. Hd.	1	38	6662	Bearing - Needle	1
17	110669	Plate - PTO	1	39	6663	Seal	1
18	104859	Spacer	1	40	6658	Race - Bearing	1
19	3296-39	Nut	1	41	321-8	Bolt - Nylok	4
20	9335054	Pin - Cotter	1	42	6659	Retainer	2
21	3218-1	Nut	2	43	114881	Facing - Clutch Plate	1
22	3256-22	Washer	2	45	106695	Push-On Ring	2
23	110665	Brake Assembly - PTO	1	47	3253-3	Washer - Lock	1
24	3229-25	Bolt - Carriage	2	48	3256-27	Washer	1
25	111241	Bracket - Engine	1	49	102870	Bracket Support	1

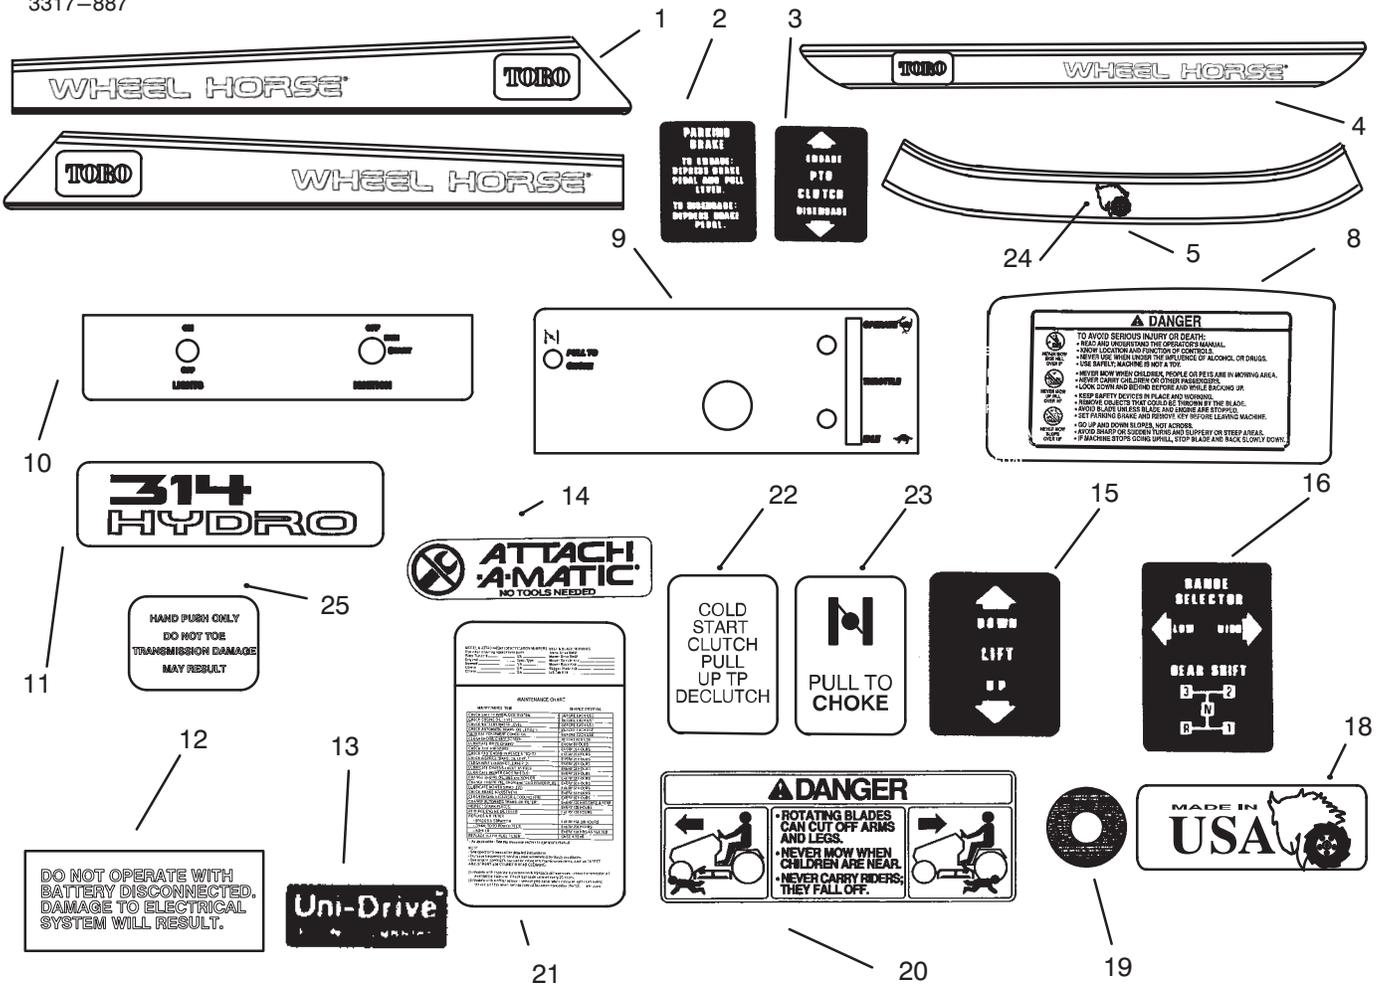

DECALS

Ref. No.	Part No.	Description	No. Used
1	92-9825	Decal - Hood RH	1
	92-9824	Decal - Hood LH	1
2	116445	Decal - Parking Brake	1
3	111960	Decal - PTO Clutch	1
4	92-9827	Decal - Rear Fender	1
5	92-9826	Decal - Front Hood	1
8	92-9837	Decal - Rear Hood Danger	1
9	78-7190	Decal - Lower Dash	1
10	79-2470	Decal - Switch Plate	1
11	92-9830	Decal - 314-Hydro	2
12	111926	Decal - Electrical System	1
13	92-8749	Decal - Unidrive	1

Ref. No.	Part No.	Description	No. Used
14	92-8747	Decal - Attach-A-Matic	2
15	112168	Decal - Lift	1
16	111534	Decal - Hi-Low Shift	1
18	76-1340	Decal - Made in U.S.A.	1
19	KH10191	Decal - Air Cleaner/Lub	1
20	92-8946	Decal - Danger	1
21	88-3200	Decal - Maintenance	1
22	78-9130	Decal - Cold Start	1
23	78-7300	Decal - Choke	1
24	92-9836	Plate - Logo, Wheel Horse	1
25	116446	Decal - Do Not Tow	1
*	92-1536	Loose Parts Package	1

TORO PART NUMBER INDEX

3317-887

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
1121	Key – Sq.	27	13	1	8830	"J"Clip	6	27	1
1278	Washer – Shim	32	25	1	8830	"J"Clip	37	55	1
1278	Washer – Shim .050	25	15	4	9038	Grip	41	2	1
1481	Fitting – Grease, 45°	9	22	2	9038	Grip	10	20	1
1518	Bearing – Needle	29	32	1	9416	Bearing – Needle	28	7	1
1532	Bearing – Needle	28	21	1	9416	Bearing – Needle	29	11	1
1532	Bearing – Needle	29	31	1	9547	Washer – Thrust	29	33	1
1538	Bearing – Needle	29	20	1	11952	Washer – Special Hub Cap	25	18	2
1644	Hitch – Drawbar	10	11	1	100079	Tube – Front (Opt.)	25	22	2
2844	Special Washer	32	14	1	100304	Spacer	30	12	2
3023	Clip – Small	6	8	1	100305	Washer – Friction	33	10	2
3023	Clip – Speed	7	22	1	100309	Bushing – Pivot, Cam	33	12	1
3023	Clip – Wire	11	15	1	100365	Washer – Spring, Disc	33	9	2
3765	Washer – Shim	41	4	1	100571	Tie – Cable	26	*	1
3765	Washer – Shim	31	48	1	100571	Tie – Cable	37	41	1
5108	Stem – Valve	25	7	4	100656	Bearing – Cam	30	19	1
5210	Washer – Shim	9	11A/R		101017	Rod – Mid Hitch Lock	10	17	1
5210	Washer – Shim .015	25	14	2	101623	Gear – Differential Pinion	28	17	8
5618	Ring – Retaining	10	9	2	101699	Kit – Service, Cylinder	26	24	1
5618	Ring – Retaining	9	32	1	101707	Lock – Attachment	10	24	1
5638	Axle	9	31	1	101711	Housing – Front Hitch	10	3	1
5666	Bushing – Nyliner	41	5	1	101750	Rod – Pivot Latch	10	22	1
5701	Ring – Retaining	31	45	4	101751	Rod – Lock	10	25	1
5924	Nut	37	23	2	101757	Spacer	26	28	1
5924	Nut	3	25	2	101850	Rod – Hood Stop	2	19	1
5979	Bushing – Hood Pivot	2	15	2	101853	Spring	31	59	1
5983	Bushing	26	6	1	101884	Nut – Special	37	3	1
5983	Bushing	41	6	1	101884	Nut – Special	3	13	1
5983	Bushing	31	36	3	101889	Gear – Differential Axle	28	15	2
5991	Fitting – Filter	33	25	1	102025	Spacer	30	24	1
6216	Pin & Plate	9	30	1	102138	Switch – Light	3	23	1
6229	Bearing	27	17	1	102628	Fitting – Hyd., Straight	33	28	1
6254	Bushing	32	2	2	102628	Fitting – Straight Adapter	26	19	1
6397	Bearing	9	21	1	102644	Plate – Mid Hitch	10	4	2
6449	Axle – Seal	28	6	1	102651	Terminal – Female	37	44	8
6449	Axle – Seal	29	12	1	102809	Nut – Special, Flanged	30	21	1
6472	Bearing – Flanged	9	5	1	102870	Bracket Support	41	49	1
6658	Race – Bearing	41	40	1	102872	Shaft – Stub	41	33	1
6659	Retainer	41	42	2	102950	Ring – Retaining	3	18	1
6662	Bearing – Needle	41	38	1	103125	Spring	41	13	1
6663	Seal	41	39	1	103125	Spring – Brake Return	32	6	1
6739	Trunnion	27	5	1	103478	Housing – Pulley	41	37	1
6876	Spacer	11	4	1	103995	Washer – Special	33	2	1
6921	Terminal	37	65	1	104047	Bushing	6	15	1
7007	Tube – Rear	25	2	2	104048	Valve – Fuel Shut-Off	6	16	1
7443	Pulley – Engine Drive	11	26	1	104841	Spring	26	16	1
7456	Clamp	5	17	4	104859	Spacer	41	18	1
7607	Tire – Cleat, (Opt.)	25	4	2	104926	Switch – Connector Body	37	6	1
7879	Bushing	31	47	1	105061	Gear – Differential Ring	28	18	1
7896	Washer – Bowed	9	15	1	105202	Base – Taillight, w/Bulb	6	11	2
7956	Washer – Thrust	29	25	1	105269	Shaft – Drawbar Hitch	10	10	1
8043	Bulb – Light, Metal Base	6	14	2	105316	Cap – Lock Rod	10	19	2
8616	Spring	10	1	2	105453	Key	11	18	1
8693	Knob	31	39	1	105503	Bushing	7	19	2
8722	Knob	31	38	1	105524	Bracket – Pivot	7	9	2
8830	"J"Clip	11	11	1	105763	Hub – Rear	28	1	1
8830	"J"Clip	40	11	1	105763	Hub – Rear	29	18	1
8830	"J"Clip	18	12	1	105797	Ring – Retaining	2	16	2
8830	"J"Clip	3	22	2	105797	Ring – Retaining	10	26	6
8830	"J"Clip	33	22	1	105876	Ring – Retaining	28	16	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
106193	Bolt – Special	31	55	1	109088	Kit – Service, Cylinder	26	25	1
106209	Angle – Belt Guard	4	17	1	109102	Fuse 25 Amp ATO or ATC	37		1
106222	Footrest – RH	5	22	1	109189	Bearing	9	35	1
106223	Footrest – LH	5	18	1	109262	Washer – Special	9	16	2
106234	Tank – Fuel	6	1	1	109355	Fuse 15 Amp ATO or ATC	37	12	1
106236	Support – Fuel Tank, RH	6	30	1	109356	Bushing	32	19	1
106267	Grommet – Rubber	26	30	1	109367	Bracket – Brake	29	23	1
106269	Bearing – Flanged	27	8	2	109370	Shaft	29	26	1
106368	Rod – Pivot	31	52	1	109371	Band – Brake	32	17	1
106369	Shaft	31	43	1	109372	Rod – Brake, Front	32	7	1
106448	Tube – Filler	28	9	1	109459	Clamp	2	3	2
106450	Spacer	31	53	1	109494	Retainer – Headlight RH	2	*	1
106522	Chain – Lift	27	4	1	109495	Retainer – Headlight LH	2	22	1
106634	Pin – Hitch	10	13	1	109500	Fitting – Grease	25	12	2
106661	Cam – Eccentric	33	18	1	109530	Nut	3	10	1
106695	Push-On Ring	41	45	2	109553	Boot – Battery Cable	40	16	1
106719	Drum – Brake	32	13	1	109554	Bracket – Belt Guard	5	6	1
106826	Washer – Thrust	28	4	1	109703	Gear Assembly	29	34	1
106826	Washer – Thrust	29	15	1	109742	Gear 20 Tooth	29	30	1
106858	Clamp	11	7	1	109751	Gear – 20 Teeth	33	31	1
106948	Tray – Battery	40	7	1	109752	Gear 46 Tooth	29	29	1
107069	Clip	5	12	3	109842	Bearing – Ball	41	36	1
107069	Nut – Speed	4	13	7	109910	Cable – Ground	37	40	1
107374	Washer – Special	29	4	4	109910	Wire – Ground	11	16	1
107691	Spacer	32	5	1	109989	Spacer	7	20	4
107938	Spring	31	41	1	110124	Hose – Valve To Cylinder	26	29	1
107951	Bracket – Fender Front	6	24	1	110125	Hose – Valve To Cylinder	26	18	1
107975	Belt Guard Asm	5	1	1	110189	Rod End Asm	30	13	2
108130	Wire – Headlight Ground	2	2	1	110513	Bearing – Ball	25	16	4
108312	Gasket – Case	29	8	1	110636	Pad – Footrest	5	15	2
108316	Pulley – Transmission Drive	33	38	1	110656	Trunnion	41	14	1
108319	Gasket – Pump	33	34	1	110665	Brake Assembly – PTO	41	23	1
108323	Base – Filter	33	26	1	110669	Plate – PTO	41	17	1
108325	Arm – Control, Speed	33	15	1	110677	Wheel – Cleat (Opt.)	25	*	2
108326	Spacer – Pivot, Long	33	8	1	110768	Dipstick	28	10	1
108327	Spacer – Pivot, Short	33	39	1	110769	Spring	31	42	1
108329	Assembly – Plate, Control	33	5	1	110780	Handle	31	52	1
108333	Plate – Control, Speed	33	11	1	110920	Spring – Seat	7	1	2
108357	Seal – Oil	29	19	1	110960	Fender	6	4	1
108361	Axle – Rear, LH Short	29	1	1	111052	Rod – PTO Clutch	41	11	1
108362	Axle – Rear, RH Long	28	5	1	111069	Cable – Battery	40	6	1
108363	Pin – Dowel	29	28	2	111069	Cable – Solenoid To Starter	37	26	1
108364	Fitting – Hyd., Straight	33	36	1	111071	Bumper	7	17	2
108365	Fitting – Hydraulic 90°	33	33	2	111074	Cable – Battery	40	1	1
108366	Spacer – Drive, Gear	33	32	1	111074	Cable – Battery, Positive	37	27	1
108368	Assembly – Pump & Motor	33	35	1	111196	Cap – Differential End	29	2	1
108393	Fan	33	3	1	111196	Cap – Differential End	28	13	1
108457	Nut – Push	5	3	1	111199	Bearing – Ball	29	3	1
108464	Support – Fuel Tank, LH	6	21	1	111199	Bearing – Ball	28	19	1
108496	Rod – Pivot	31	34	1	111201	Case – Transaxle, LH	29	7	1
108501	Belt – Drive	11	24	1	111216	Switch – Ignition	37		1
108537	Bracket Belt	5	27	1	111217	Tube – Suction	33	37	1
108680	Spring	32	11	1	111234	Lever – PTO Clutch	41	1	1
108716	Plate – Cam	30	31	1	111241	Bracket – Engine	41	25	1
108717	Spacer	30	30	1	111242	Guide – Belt, Bottom	11	19	1
108881	Nut	28	12	4	111314	Pin – Locking	41	28	1
108881	Nut	33	13	2	111332	Switch – PTO Interlock	37	20	3
108904	Rod Control 9 Long	30	14	1	111343	Bushing Assembly	39	9	5
109045	Bulb – Light, All Glass	6	*	2	111359	Nut – Hex	39	4	4
109081	Kit – Service, Valve	26	*	1	111383	Collar	32	3	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
111392	"J"Clip	3	37	1	116445	Decal – Parking Brake	42	2	1
111516	Wheel – Rear	25	6	2	116446	Decal – Do Not Tow	42	25	1
111534	Decal – Hi–Low Shift	42	16	1	116497	Nut	37	32	4
111642	Barrier – Switch Insulator	37	13	2	116634	Knob – Hydraulic Lift	26	13	1
111757	Edging – Console	3	3	1	116635	Knob – Motion Control	30	1	1
111767	Washer	39	3	1	116723	Harness – Wiring	39	7	1
111926	Decal – Electrical System	42	12	1	116744	Tire – Turf Trac, Rear	25	3	2
111951	Hubcap	25	20	2	116745	Rod – Pivot	2	18	1
111960	Decal – PTO Clutch	42	3	1	116746	Bracket – RH	2	*	1
112168	Decal – Lift	42	15	1	116747	Bracket – LH	2	17	1
112185	Body – Connector	37	17	1	116796	Test Switch	39	1	1
112213	Muffler	11	8	1	117127	Tire – Turf Trac, Front	25	21	2
112214	Control – Choke	3	9	1	117217	Switch – Button	39	2	1
112415	Stop – PTO	3	2	1	117331	Bracket – Fuse Holder	5	24	1
112426	Pulley – Idler	31	54	1	117343	Latch – Hood	3	31	2
112506	Bracket	39	6	1	117344	Handle Assembly	2	11	2
112506	Bracket – Indicator Lights	3	32	1	117371	Bolt – Carriage	4	6	4
112564	Lens – Taillight	6	13	2	117431	Rivet – Pop	3	30	4
112602	Bearing – Output After	35	*	1	117432	Rivet – Pop	2	10	4
112637	Housing – Pump Assembly	35	4	1	117930	Latch – Mid Hitch	10	21	1
112641	Cover Assembly	35	9	1	118660	Guide – Control	30	4	1
112652	Shield – Grass	35	30	1	118860	Knob – Parking Brake Lever	30	26	1
112653	Ring – Retaining	35	31	1	119340	Cylinder – Hydraulic	26	26	1
112666	Bearing – Output Before	35	52	1	120590	Stop – Throttle	3	35	1
112841	Cap	11	20	1	120930	Body – Fuse	37	9	1
113010	Rod – Battery Hold Down	40	2	1	121100	Lever – Lift	27	11	1
113107	Clevis	41	29	1	518077	Terminal	37	68	2
113108	Rod – PTO Housing	41	31	1	518105	Terminal	37	7	1
113136	Race – Pump	35	16	1	518105	Terminal	37	64	1
113179	Nut	3	19	1	518211	Bumper	5	10	2
113381	Spindle – LH	9	33	1	519337	Clip – Cable	37	63	1
113382	Spindle – RH	9	*	1	910762	Screw	3	7	2
113443	Tube – Steering	9	17	1	910792	Screw	3	4	6
113445	Bar – Lift	27	15	1	910794	Screw	37	35	1
113454	Control – Cam	30	11	1	910794	Screw – Machine	5	7	2
113969	Hook – Battery	40	9	2	910808	Screw	6	12	4
114000	Valve – Hydraulic	261		1	910837	Bolt – Carriage	5	4	9
114017	Clamp – Steel	37	52	1	910837	Screw	4	12	7
114343	Spring – Gas	7	16	1	910837	Screw	3	20	7
114344	Spacer	7	11	2	911423	Bolt	29	5	4
114345	Bracket	7	14	1	915732	Nut	37	60	2
114427	Logo – Hub Cap 8 (Opt.)	25	23	2	915732	Nut – Lock	39	5	2
114428	Logo – Hub Cap 12 (Opt.)	25	1	2	915740	Nut	5	23	4
114720	Tube – Battery	40	10	1	915740	Nut – Lock	3	36	2
114823	Washer – Wave	31	49	1	915960	Nut	3	33	2
114825	PC Board w/Lights	39	10	1	915962	Nut – Hex	37	54	1
114881	Facing – Clutch Plate	41	43	1	920120	Washer – Lock	37	53	1
115230	Switch – Clutch Interlock	37	8	1	920150	Washer – Lock	3	8	2
115411	Support – Switch	4	3	1	920160	Washer – IntL. T	37	2	1
115411	Support – Switch	37	18	1	920160	Washer – IntL. T	3	12	1
115854	Control – Throttle	3	34	1	920262	Washer – Special	3	11	1
116000	Bolt – Carriage	5	9	4	920262	Washer – Special	37	48	1
116302	Arm – Control	26	8	1	926671	Bolt	2	4	2
116305	Bracket – Control Rod	26	11	1	926671	Bolt	37	19	1
116321	Arm – Control	31	61	1	926697	Bolt	6	3	2
116324	Rod Assembly	31	62	1	933135	Pin – Spirol	30	23	1
116338	Switch – Ignition	3	29	1	933198	Pin – Spirol	30	3	1
116338	Switch – Ignition	37	1	1	933198	Pin – Spirol	26	7	1
116397	Relay	37	62	2	933274	Pin – Spirol	41	30	1
116407	Rod End	30	9	1	937089	Key – Hi–Pro	33	7	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
937099	Key – Woodruff	29	27	1	KH10093	Gasket	13	2	1
937108	Key – Woodruff	29	14	1	KH10093	Gasket – Bowl Screen	13		
937108	Key – Woodruff	28	22	1	KH10094	Gasket	13	6	1
973310	"O"Ring	26	17	4	KH10094	Gasket– Bowl	13		
973370	"O"Ring	33	*	1	KH10095	Gasket	14	5	1
973370	"O"Ring	26	20	4	KH10107	Screw – Hex. Hd.	17	5	4
9080196	Screw – Hex. Hd,	33	19	1	KH10108	Screw	17	7	1
9080356	Bolt	29	6	1	KH10109	Screw – Idle Speed Adj.	13	19	1
9080406	Bolt	29	10	1	KH10110	Screw	13	14	4
9080406	Screw – Hex. Hd.,	33	6	1	KH10112	Spring – Idle Fuel	13	16	1
9104784	Screw	37	59	2	KH10113	Spring	13	8	1
9107562	Screw	39	8	2	KH10114	Spring – Adj.	13	18	1
9114584	Bolt	30	18	1	KH10116	Screw	13	1	1
9117474	Screw	31	40	1	KH10117	Bowl – Fuel	13	3	1
9151126	Nut	4	4	4	KH10119	Decal – Float Switch	23	*	1
9202324	Washer	26	27	1	KH10123	Connector – 90°	14	3	2
9202414	Washer	30	25	1	KH10124	Fan	17	4	1
9202594	Washer – Special	3	17	1	KH10126	Screen	17	6	1
9202634	Washer	31	44	4	KH10128	Ball	13	7	1
9266714	Screw – Hex. Hd..	4	2	13	KH10130	Line – Fuel	14	1	1
9266944	Bolt	6	5	2	KH10132	Needle – Idle Fuel Adj.	13	15	1
9266944	Bolt	5	26	6	KH10134	Sleeve	23	12	1
9266944	Bolt	31	33	1	KH10135	Tag – Caution	24	*	1
9266944	Screw – Hex. Hd.	4	15	11	KH10136	Washer	15	25	1
9266944	Screw – Hex. Washer Hd.	3	1	3	KH10143	Baffle	19	4	1
9321204	Pin – Clevis	26	3	1	KH10144	Screw	20	22	8
9329974	Pin – Clevis	26	23	1	KH10145	Washer	20	21	9
9335044	Pin – Cotter	32	27	1	KH10146	Gasket	13		
9335054	Pin – Cotter	27	2	1	KH10146	Gasket – Carburetor	13		
9335054	Pin – Cotter	27	7	1	KH10147	Spacer .005	21	3	1
9335054	Pin – Cotter	10	14	1	KH10148	Spacer .010	21	*	1
9335054	Pin – Cotter	41	20	1	KH10149	Gasket	19	7	1
9335064	Pin – Cotter	41	32	1	KH10150	Stud	19	9	1
9335074	Pin – Cotter	27	12	2	KH10152	Washer	15	41	2
9601524	Bolt – Whizlock	37	25	2	KH10181	Bolt	24	7	2
9791204	Spacer	10	12	2	KH10188	Spacer	17	3	4
KH10009	Gasket – Flange	13			KH10189	Nut	12	3	1
KH10010	Clip – Hi–Tension	18	18	1	KH10191	Decal – Air Cleaner	12	*	1
KH10029	Insert – Exhaust Valve	20	7	1	KH10191	Decal – Air Cleaner/Lub	42	19	1
KH10034	Seal	19	6	1	KH10201	"O"Ring	23	2	1
KH10034	Seal	12	7	1	KH10209	Cap – Drive End	24	11	1
KH10035	Pin – Governor Stop	15	3	1	KH10210	End Cap Ass'Y	24	8	1
KH10040	Screw	15	47	1	KH10221	Kit – Retainer	21	10	2
KH10049	Bearing	20	8	1	KH10228	Gear Assembly	21	21	2
KH10054	Retainer – Upper Spring	21	7	2	KH10231	Baffle – Head	16	3	1
KH10055	Gasket	20	16	1	KH10235	Element – Precleaner	12	5	1
KH10057	Reed	19	3	1	KH10236	Element	12	6	1
KH10058	Gasket	19	1	1	KH10244	Brace – Starter Tail	24	2	1
KH10059	Gasket	23	8	1	KH10245	Kit – Crankshaft	21	16	1
KH10062	Spring	21	14	2	KH10247	Armature	24	10	1
KH10067	Ball Bearing	20	3	2	KH10248	Pan – Oil	23	7	1
KH10070	Bushing	15	22	1	KH10258	Set – Gasket w/o Seals	20	*	1
KH10071	Valve – Intake	21	6	1	KH10259	Camshaft Assy	21	1	1
KH10072	Plate	19	2	1	KH10261	Head – Cylinder	20	19	1
KH10081	Shaft – Balance Gear	20	18	1	KH10262	Retainer – Piston Pin	22	3	2
KH10082	Connector	18	16	1	KH10263	Flywheel	17	1	1
KH10087	Washer	15	24	1	KH10265	Housing – Blower	16	8	1
KH10088	Gasket	23	6	1	KH10266	Adapter – Oil Fill	23	4	1
KH10090	Valve – Exhaust	21	5	1	KH10267	Bearing – Needle	21	22	2
KH10091	Kit – Stator 15 am	18	9	1	KH10268	Seal	20	12	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
KH10269	Seal	20	4	1	KH10569	Washer	15	39	1
KH10270	Dipstick	23	1	1	KH10570	Washer	18	2	2
KH10272	Gasket	20	9	1	KH10570	Washer	15	35	1
KH10274	Gasket	13		1	KH10570	Washer – Flat	18	7	1
KH10274	Gasket – Carburetor	13			KH10574	Retainer	21	20	1
KH10275	Filter	19	5	1	KH10576	Nut – Wing	12	1	1
KH10278	Elbow	11	6	1	KH10585	Spacer	15	23	1
KH10279	Baffle – Side Air	16	2	1	KH10586	Clamp	14	2	2
KH10280	Baffle – Inner	16	7	1	KH10588	Key – Woodruff	17	2	1
KH10282	Baffle – Cylinder	16	6	1	KH10600	Screw	15	37	1
KH10287	Linkage – Choke (Carb. to	15	32	1	KH10605	Screw	15	45	1
KH10289	Screw – Pozidrive T.H.	16	5	3	KH10605	Screw – Pozidrive	18	10	4
KH10290	Screw	20	24	1	KH10606	Screw – Hex. Hd.	18	4	1
KH10292	Spring	21	2	1	KH10607	Screw – Hex. Hd.	24	3	1
KH10293	Lever – Choke Control	15	42	1	KH10609	Screw	12	8	3
KH10294	Lever – Throttle Control	15	43	1	KH10610	Screw	18	6	1
KH10295	Lever – Governor	15	27	1	KH10610	Screw – Hex. Hd.	24	4	1
KH10296	Spring (Governor to Carb.)	15	31	1	KH10617	Plug – Cup	21	15	1
KH10297	Base – Air Cleaner	12	9	1	KH10618	Clip	18	5	1
KH10298	Cover	19	8	1	KH10619	Nut	15	50	1
KH10299	Cover	12	2	1	KH10620	Plug	23	10	4
KH10302	Space	15	44	1	KH10624	Nut	15	40	1
KH10303	Bracket – Clutch Control	15	48	1	KH10626	Screw	15	28	1
KH10304	Bracket – Solenoid	24	*	1	KH10629	Nut – Pal	15	8	1
KH10304	Bracket – Starter	24	5	1	KH10629	Palnut	19	10	1
KH10308	Clamp	15	49	1	KH10660	Kit – Governor Gear	15	1	1
KH10309	Hose	19	11	1	KH10661	Cover	20	15	1
KH10310	Pin – Camshaft	21	4	1	KH10663	Kit – Float	13	4	1
KH10311	Gasket	20	10	1	KH10666	Washer	17	8	1
KH10312	Strap – Lifting	20	23	1	KH10673	Regulator – Rectifier	18	14	2
KH10313	Lead – Violet, Regulator–	18	*	1	KH10677	Gasket – Air Cleaner	13		
KH10315	Lead – Wire, Module	18	*	1	KH10682	Bushing &	13		
KH10319	Pump Assy – Fuel	14	4	1	KH10682	Bushing	13		
KH10321	Module – Ignition	18	1	1	KH10682	Bushing – Linkage Natural	13		
KH10322	Kit – Spacer	21	19	2	KH10686	Bushing Linkage Black	13		
KH10323	Kit – Drive	24	12	1	KH10687	Plate – Bearing	20	11	1
KH10324	Kit – Drive Parts	24	13	1	KH10693	Carburetor Assembly	13		
KH10325	Set – Gasket w/ Seals	20	*	1	KH10693	Kit – Adjustable Jet	13	*	
KH10345	Connector	18	11	1	KH10694	Main – Needle	13	17	1
KH10345	Connector – Female	23	13	1	KH10695	Rod – Connecting .010	22	*	1
KH10358	Kit – Choke & Throttle	13	*	1	KH10695	Washer	15	46	1
KH10412	Cover – Air Cleaner Element	12	4	1	KH10696	Kit – Carburetor Repair	13	*	
KH10413	Screw – Hex .Hd.	16	1	6	KH10697	Gasket	12	10	1
KH10496	Rotator – Valve	21	13	2	KH10697	Gasket	13		
KH10515	Kit – Brush	24	9	1	KH10697	Gasket – Air Cleaner	13		
KH10535	Nut – Lock	11	5	1	KH10700	Gasket	20	20	1
KH10539	Tappet – Intake Valve	21	11	2	KH10701	Carburetor Linkage	13		
KH10541	Screw	23	5	3	KH10701	Linkage (Governor to Carb.)	15	30	1
KH10545	Screw	20	14	4	KH10702	Shaft – Choke	13	20	1
KH10545	Screw	15	34	1	KH10709	Jet – Main	13		1
KH10548	Screw	18	3	2	KH10709	Main Jet	13		1
KH10549	Screw	24	*	1	KH10710	Kit – High Altitude Jet	13	*	
KH10549	Screw	24	6	2	KH10733	Gasket	13		
KH10549	Screw	20	13	4	NN10277	Fuse 30 Amp ATO or ATC	37		1
KH10550	Screw	23	9	4	38-1420	Switch – Seat	7	21	1
KH10552	Screw – Pozidrive	14	7	2	38-1420	Switch – Seat	37	14	1
KH10556	Washer – Lock	15	38	1	55-3570	Fuel Cap	6	6	1
KH10562	Plug	20	5	1	56-2800	Screw – Hex. Hd. Soc.	35	1	1
KH10567	Washer	16	4	1	56-2810	Bearing – Ball	35	2	1
KH10569	Washer	14	6	2	56-2820	Seal	35	3	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
56-2850	Ring - Seal	35 6 1	78-5610	Console	3 6 1
56-2860	Plate - Pump	35 7 1	78-5620	Plate - Hood Stand	3 21 1
56-2870	Ring - Seal	35 8 1	78-5631	Bracket - Control	30 5 1
56-2880	Button	35 10 2	78-5640	Bar - Lift	26 5 1
56-2890	Pin - Dowel	35 11 1	78-5660	Lever - Motion Control	30 2 1
56-2900	Pin - Drive	35 12 1	78-5670	Rod - Lift Control	26 9 1
56-2910	Shaft - Input	35 13 1	78-6020	Rod - Pivot	31 50 1
56-2920	Ring - Seal	35 14 1	78-7190	Decal - Lower Dash	42 9 1
56-2930	Rotor / Ball - Pump	35 15 1	78-7300	Decal - Choke	42 23 1
56-2940	Ring - Cam	35 56 1	78-7740	Arm - Brake Pivot	32 18 1
56-2950	Piston	35 18 2	78-8500	Lever - Parking Brake	30 22 1
56-2960	Ring - Back Up	35 19 2	78-9130	Decal - Cold Start	42 22 1
56-2970	"O"Ring	35 20 2	79-0060	Meter - Volt	3 16 1
56-2980	Pin - Coil	35 21 1	79-0060	Voltmeter	37 21 1
56-2990	Pintle Assembly (Inc. Ref. #1,3522	1,3522 1	79-0670	Seat	7 4 1
56-3000	Ring - Retaining	35 23 2	79-1350	Pedal - Brake/Return	32 1 1
56-3010	Ball	35 24 2	79-2470	Decal - Switch Plate	42 10 1
56-3020	Body - Check Valve	35 25 2	79-3610	Harness Assy - Wiring	37 5 1
56-3030	Ball	35 26 1	79-4990	Bracket - Fender Support	6 20 1
56-3040	Spring - Relief Valve	35 27 1	79-5020	Tube - Filter to Pump	33 29 1
56-3050	Plug - Relief Valve	35 28 1	79-5130	Cover - Side, LH	4 14 1
56-3060	Pin - Dowel	35 29 1	79-5270	Filter - Oil	33 24 1
56-3090	Ring - Retaining	35 5 4	83-2720	Bolt - Lug	25 5 10
56-3100	Screw - Soc. Hd.	35 33 6	83-2820	Spring	31 63 1
56-3110	Roller	35 34 6	83-6520	Rod - Lock	10 18 1
56-3120	Carrier	35 35 1	86-9280	Tube - Hydraulic (Pressure)	26 21 1
56-3130	Seal - Oil	35 36 1	88-2710	Support - Steering Shaft	9 8 1
56-3140	Kit - Control Shaft	35 37 1	88-2782	Hood	2 8 1
56-3170	Insert - Cam Ring	35 40 1	88-2790	Decal - Danger	28 23 1
56-3180	Spring	35 41 2	88-3200	Decal - Maintenance	42 21 1
56-3200	Body - Acc. Valve	35 43 2	92-1525	Hoodstand	4 7 1
56-3210	Ball	35 44 2	92-1532	Engine - 14HP Kohler	11 9 1
56-3220	Rotor / Ball - Motor	35 45 1	92-1536	Loose Parts Package	42 * 1
56-3230	Shaft - Output	35 46 1	92-4987	Shaft - Upper	9 9 1
56-3240	Race - Motor	35 47 1	92-6697	Screw	7 5 4
56-3250	Plug - Asm	35 48 1	92-7251	Kit - Carburetor w/Linkage	13 * 1
56-3260	"O"Ring	35 49 1	92-7252	Carburetor Assembly	13 10 1
56-3290	Ring - Retaining	35 53 1	92-7253	Bushing	15 33 1
56-3310	Kit - Seal, Overhaul	35 * 1	92-7254	Bushing	15 29 1
62-7770	Key - Ignition, Padded	37 4 1	92-7255	Plate - Choke	13 21 1
62-7770	Key - Ignition, Padded	3 14 1	92-7256	Shaft w/Lever & Seal	13 12 1
66-0120	Knob - Control	3 5 1	92-7257	Plate - Throttle	13 13 1
76-1340	Decal - Made in U.S.A.	42' 18 1	92-7258	Shaft - Governor Gear	20 2 1
76-1420	Steering Wheel	9 12 1	92-7259	Guide - Valve	20 6 2
78-0020	Meter - Hour	3 15 1	92-7260	Starter Assembly	24 1 1
78-0020	Meter - Hour	37 51 1	92-7262	Kit - Governor Cross Shaft	15 26 1
78-0080	Clamp - Volt Meter	3 24 1	92-7263	Choke Lever Assembly	15 * 1
78-0080	Clamp - Voltmeter, Back	37 22 1	92-7264	Clip	18 8 1
78-0370	Insert	9 13 1	92-7265	Plug - Spark	18 17 1
78-1540	Bracket - Control, Lower	31 57 1	92-7266	Screw	18 15 2
78-1540	Bracket - Lower Control	4 8 1	92-7267	Rod - Connecting Std.	22 4 1
78-1550	Bellcrank	27 14 1	92-7268	Piston w/Ring Set Std.	22 2 1
78-2680	Frame	10 8 1	92-7269	Piston w/Ring Set .003	22 * 1
78-2880	Shaft - Lower	9 7 1	92-7270	Piston w/Ring Set .010	22 * 1
78-2900	Tie Rod Assembly	9 27 2	92-7271	Piston w/Ring Set .020	22 * 1
78-2920	Tie Rod End	9 25 2	92-7272	Piston w/Ring Set .030	22 * 1
78-2990	Plate - Seat Pivot	7 10 1	92-7273	Set - Ring, Std. & .003	22 1 1
78-3010	Bracket - Battery Support	4 1 1	92-7274	Set - Ring .010	22 * 1
78-3020	Plate - Front	4 16 1	92-7275	Set - Ring .020	22 * 1
78-3320	Clamp - Steel	3 26 1	92-7276	Set - Ring .030	22 * 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-7278	Kit - Float Switch	23 11 1	322-5	Screw - Hex. Hd.	6 29 2
92-7279	Short Block	20 1 1	323-5	Bolt	10 6 4
92-7280	Miniblock (w/Out Crankshaft)	20 1	323-6	Bolt	9 6 2
92-7281	Decal - HP	16 9 1	323-6	Bolt	11 13 2
92-7296	Plate - Shift Cover	4 11 1	323-7	Screw - Hex. Hd.	41 16 1
92-7298	Case - Transaxle, RH	28 11 1	323-8	Bolt	11 17 2
92-8747	Decal - Attach-A-Matic	42 14 2	323-8	Bolt	9 19 2
92-8749	Decal - Unidrive	42 13 1	323-8	Bolt	30 28 1
92-8946	Decal - Danger	4 10 1	323-9	Bolt	32 20 1
92-8946	Decal - Danger	42 20 1	323-9	Bolt	30 27 1
92-9511	Line - Fuel 62"	6 26 1	323-9	Screw - Hex. Hd.	29 24 1
92-9824	Decal - Hood LH	2 * 1	323-15	Bolt	29 9 2
92-9824	Decal - Hood LH	42 1	323-23	Bolt	32 15 1
92-9825	Decal - Hood RH	42 1 1	323-25	Screw - Hex. Hd.	33 4 2
92-9825	Decal - Hood RH	2 7 1	323-25	Screw - Hex. Hd.	29 22 3
92-9826	Decal - Front Hood	42 5 1	323-26	Screw - Hex. Hd.	29 21 1
92-9826	Decal - Hood, Front	2 6 1	323-44	Screw - Hex. Hd.	10 16 6
92-9827	Decal - Rear Fender	42 4 1	324-5	Bolt	11 23 3
92-9830	Decal - 314-Hydro	42 11 2	3217-5	Nut	30 10 2
92-9836	Decal - Logo	2 23 1	3217-27	Nut - Hex	3 28 1
92-9836	Plate - Logo, Wheel Horse	42 24 1	3218-1	Nut	41 21 2
92-9837	Decal - Danger	2 9 1	3218-1	Nut	37 50 2
92-9837	Decal - Rear Hood Danger	42 8 1	3218-3	Nut	28 3 2
92-9845	Solenoid	37 24 1	3218-3	Nut	29 17 2
93-1613	Latch - Front Hitch	10 23 1	3219-3	Nut	9 26 2
93-4134	Battery	40 13 1	3220-1	Nut	30 8 3
93-9800	Wheel Assembly - Front	25 * 2	3229-25	Bolt - Carriage	2 20 4
93-9801	Rim - Front	25 17 2	3229-25	Bolt - Carriage	41 24 2
93-9810	Ring - Cam	35 17 1	3230-1	Bolt	5 25 1
93-9811	Body Assembly	35 50 1	3231-25	Bolt - Carriage	10 5 3
93-9812	Body Assembly	35 * 1	3235-22	Bolt	32 16 1
93-9813	Fitting - 90°	35 57 1	3235-22	Screw - Hex. Hd.	6 28 1
93-9814	Transaxle	28 * 1	3242-2	Screw - Set	33*40 2
94-1802	Tube - Hydraulic (Return)	26 32 1	3243-5	Screw - Set	28 2 2
237-69	"O" Ring	9 10 1	3243-5	Screw - Set	29 16 2
2412-98	Clamp	6 19 2	3245-32	Screw - Set	32 4 2
281-10	Plug - Pipe	28 20 2	3246-2	Screw - Set	11 25 2
281-10	Plug - Pipe	33 27 3	3253-3	Washer - Lock	40 15 2
302-5	Fitting - Grease	32 26 1	3253-3	Washer - Lock	41 47 1
302-5	Fitting - Grease, Straight	9 34 2	3253-3	Washer - Lock	37 49 2
321-2	Screw	18 13 1	3253-4	Washer	11 2 1
321-3	Screw - Hex. Hd.	40 3 2	3253-4	Washer - Lock	7 2 4
321-4	Bolt	5 5 2	3253-4	Washer - Lock	6 17 2
321-4	Bolt	30 6 2	3253-4	Washer - Lock	33 21 2
321-4	Screw	26 10 1	3253-4	Washer - Lock	9 29 1
321-6	Bolt	31 46 1	3253-6	Washer - Lock	11 22 3
321-8	Bolt - Nylok	41 41 4	3253-21	Washer - Lock	10 7 4
321-8	Screw - Hex. Hd.	7 13 2	3253-21	Washer - Lock	11 14 2
321-9	Screw - Hex. Hd.	30 17 1	3254-1	Washer - Lock	6 10 4
321-11	Bolt	26 31 2	3254-2	Washer - Intl. T	2 13 1
322-1	Bolt	9 28 1	3254-2	Washer - Intl. T	37 42 1
322-2	Bolt	6 18 2	3255-25	Washer - Lock	3 27 1
322-2	Screw - Hex. Hd.	40 12 1	3256-4	Washer	6 2 2
322-3	Bolt	6 23 6	3256-4	Washer	32 22 1
322-3	Bolt	31 56 2	3256-4	Washer	30 29 2
322-3	Screw - Hex. Hd.	33 20 2	3256-6	Washer	32 23 2
322-3	Screw - Hex. Hd.	4 9 2	3256-21	Washer	6 9 4
322-4	Screw - Hex. Hd.	7 18 6	3256-22	Washer	40 5 4
322-5	Bolt	27 3 1	3256-22	Washer	7 12 2
322-5	Screw - Hex. Hd.	7 8 4	3256-22	Washer	2 14 3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3256-22	Washer	30	16	2	3296-29	Nut - Lock	4	5	2
3256-22	Washer	41	22	2	3296-39	Nut	10	2	9
3256-23	Washer	11	3	1	3296-39	Nut	27	6	1
3256-23	Washer	7	6	4	3296-39	Nut	28	8	6
3256-23	Washer	27	18	1	3296-39	Nut	32	9	1
3256-23	Washer	6	25	2	3296-39	Nut	41	19	1
3256-23	Washer - Flat	26	15	2	3296-39	Nut	32	21	1
3256-24	Washer	32	10	2	3296-39	Nut	30	32	1
3256-25	Washer	11	21	3	3296-39	Nut	11	12	2
3256-26	Washer	27	1	1	3296-39	Nut - Lock	9	4	4
3256-26	Washer - Flat	10	15	1	3296-39	Nut - Lock	33	23	4
3256-26	Washer - Flat	33	16	1	3296-42	Nut	26	2	2
3256-27	Washer	41	48	1	3296-42	Nut	30	7	4
3256-62	Washer	27	9	2	3296-42	Nut	5	8	1
3257-24	Key - Woodruff	33	14	1	3296-42	Nut	2	12	4
3272-1	Pin - Cotter	2	21	2	3296-42	Nut	40	14	2
3272-1	Pin - Cotter	26	4	1	3296-42	Nut	26	12	1
3272-2	Pin - Cotter	31	51	1	3296-42	Nut - Lock	7	15	2
3272-6	Pin - Cotter	32	24	2	3296-45	Nut - Lock	33	17	1
3272-10	Pin - Cotter	41	7	3	32103-22	Nut - Wing	40	4	2
3272-11	Pin - Cotter	32	8	2	32120-47	Ring - Retaining	27	16	1
3272-11	Pin - Cotter	26	22	1	32120-47	Ring - Retaining	31	35	1
3272-17	Pin - Cotter	25	19	2	32120-47	Ring - Retaining	30	20	4
3272-19	Pin - Cotter	9	23	1	32120-62	Ring - Retaining	41	35	1
3272-21	Pin - Cotter	9	18	1	32120-64	Ring - Retaining	33	30	1
3296-4	Nut	31	60	1	32120-72	Ring - Retaining	41	34	2
3296-6	Nut	9	24	4	32120-93	Ring - Retaining	9	2	2
3296-27	Nut	6	7	4	32121-94	Pin - Spirol	31	37	1
3296-29	Nut	5	16	11	32121-111	Pin - Spirol	9	14	1
3296-29	Nut	27	19	1	32136-5	Nut - Slotted	9	20	1
3296-29	Nut	6	22	6	32146-17	Nut	30	15	1
3296-29	Nut	31	58	2	32151-11	Ring - Grip	41	3	1
3296-29	Nut	26	14	1	32151-91	Retainer	27	10	2
3296-29	Nut - Lock	5	2	7	9080-26	Bolt	33	1	1
3296-29	Nut - Lock	7	3	6					

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number .
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Hood Assembly	2	Camshaft, Crankshaft And Valves	21
Control Panel	3	Piston And Rings	22
Hood Stand And Supports	4	Oil Pan And Dipstick	23
Belt Guard & Footrest	5	Starter	24
Fender, Fender Supports And Fuel Tank	6	Wheel And Tires	25
Seat	7	Hydraulic Control System	26
Front Axle and Steering	8	Hydrostatic Lift Linkage	27
Frame & Hitches	10	Transaxle Assembly	28
Engine, Muffler, Pulley And Drive Belt	11	Clutch, Brake Motion Control Linkage	30
Air Intake	12	Clutch, Brake and Speed Control Linkage	32
Carburetors	13	Hydrostatic Transmission	33
Fuel Pump	14	Transmission Assembly	34
Governor Linkage	15	Electrical System & Schematic	36-39
Baffles And Shrouds	16	Battery	40
Flywheel	17	P.T.O. Clutch And Control	41
Ignition System	18	Decals	42
Breather And Vent	19	Numerical Parts List	43
Crankcase And Cylinder Head	20		

Optional Equipment

Description	Model / Part No.	Description	Model / Part No.
36" Rear Discharge Deck	78305	Wheel Weight, Rear Flush	81117
42" Side Discharge Deck	78345	Tire Chains	82522
42" Rear Discharge Deck	78350	Clevis Hitch	85518
42" Recycler	78355	Chrome Front LoGo Hub Cap	111427
36" Tiller	79370	Chrome Rear LoGo Hub Cap	114428
48" Dozer Blade	79350	Auxiliary Fuel Tank	*83300
50" Grader Blade	79351	Kits	
42" Single Stage Snowthrower	79360	H.D. Spindles, Wheels & Tires	80494
11 cu. ft. Twin Bagger (42" Mower)	79301	Recycler (42" R.D. Mower)	86001
Wheel Weight, Rear	81115	Leaf Baffle (42" S.D. Mower)	85501

* CAN NOT BE USED WITH CLEVIS HITCH OR REAR BAGGER

