



Count on it.

Form No. 3363-426 Rev B

Parts Catalog

Greensmaster® Flex™ 21 Traction Unit

Model No. 04025—Serial No. 310000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CCW: counter clock wise

CW: clockwise

CW: clockwise

DEG: degrees

ECM: electronic control module

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Frame Assembly	4
Reel Drive Assembly	5
Drum Drive and Basket Assembly	6
Gearbox and Engine Assembly	7
Gearbox Assembly	8
Differential Assembly No. 99-2038	10
Handle Assembly	11
Cylinder and Crankcase Assembly	13
Piston and Crankshaft Assembly	14
Valve and Camshaft Assembly	15
Lubrication Equipment Assembly	16
Cooling Equipment Assembly	17
Electric Equipment Assembly	18
Control Equipment Assembly	19
Carburetor Assembly	20
Air Filter and Muffler Assembly	21
Fuel Tank and Fuel Valve Assembly	22
Starter Assembly	23
Label Set	24
Attachments and Accessories	25

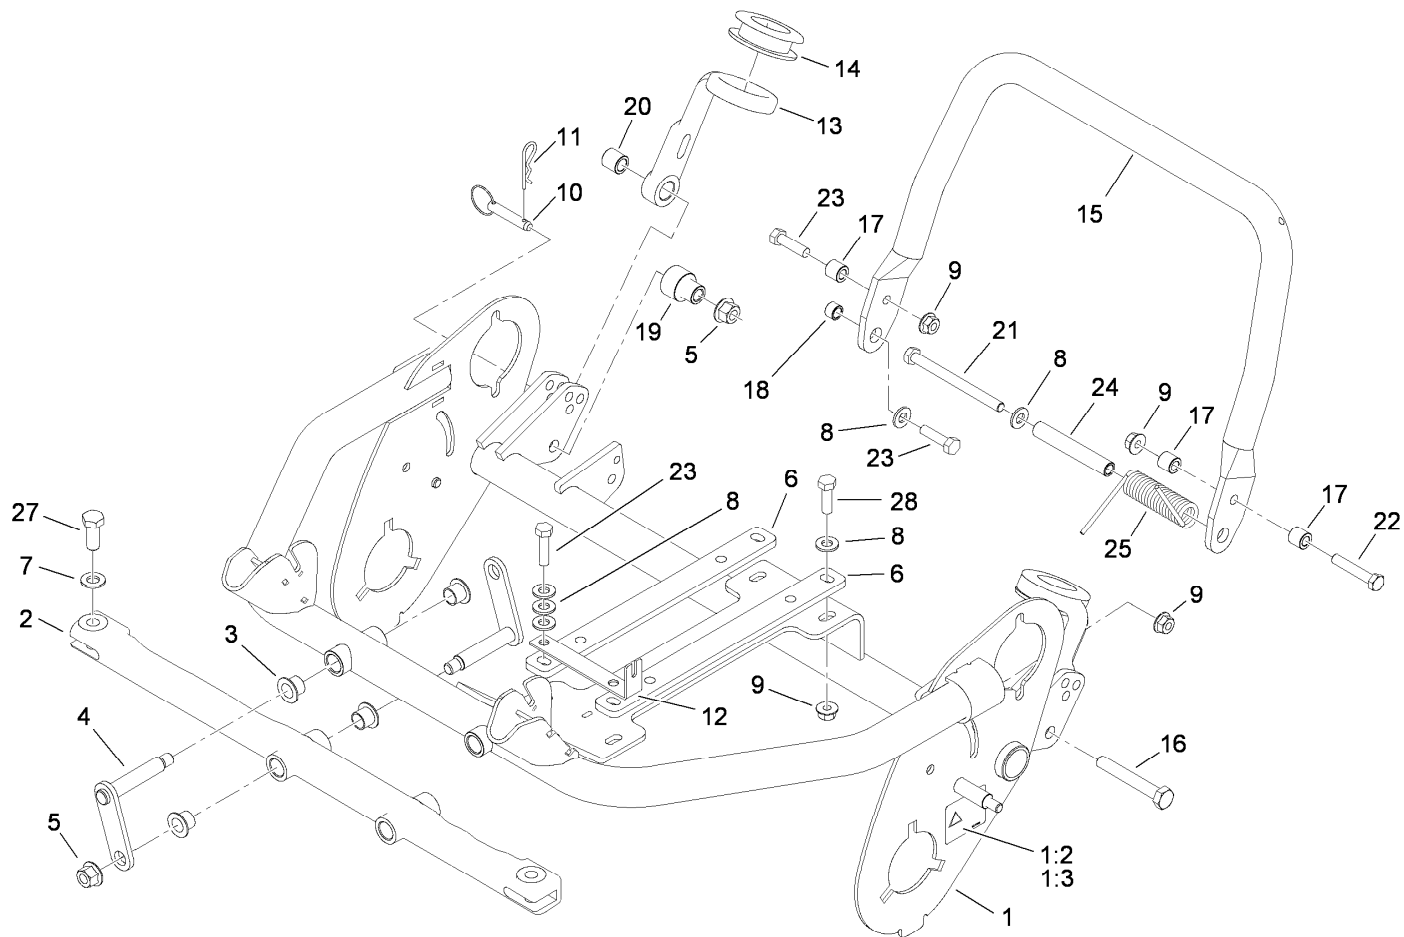

Frame Assembly


Ref.	Part Number	Qty.	Description
1	110-2401	1	Frame ASM
1:2	93-9356	2	Decal-Warning, Belt
1:3	93-9389	2	Decal-Warning, Belt (Japan)
2	104-9798-01	1	Front Frame ASM
3	93-2561	8	Bushing-Flange
4	99-2063	4	Link ASM
5	104-2611	6	Nut-HF
6	99-2070-01	2	Base-Engine
7	33095-00	2	Washer-Flat
8	33094-00	8	Washer-Plain
9	117-1350	8	Nut-HF, Lock
10	93-6029	2	Pin-Clevis, Ring
11	3290-467	2	Pin-Hair
12	105-9939	1	Strap-Support, Cable
13	99-3774-03	2	Arm-Handle

Ref.	Part Number	Qty.	Description
14	65-7510	2	Grommet-Handle
15	99-3778-03	1	Kickstand
16	33115-070	2	Screw-HH
17	93-6024	3	Bushing-Support, Handle
18	65-7910	1	Spacer
19	108-3177	2	Spacer-Hub
20	99-2058	2	Spacer-Support, Handle
21	33114-100	1	Screw-HH
22	33114-045	1	Screw-HH
23	33114-030	3	Screw-HH
24	104-0502	1	Spacer-Kickstand, Long
25	99-2011	1	Spring-Torsion
27	33115-025	2	Screw-HH
28	33114-025	3	Screw-HH

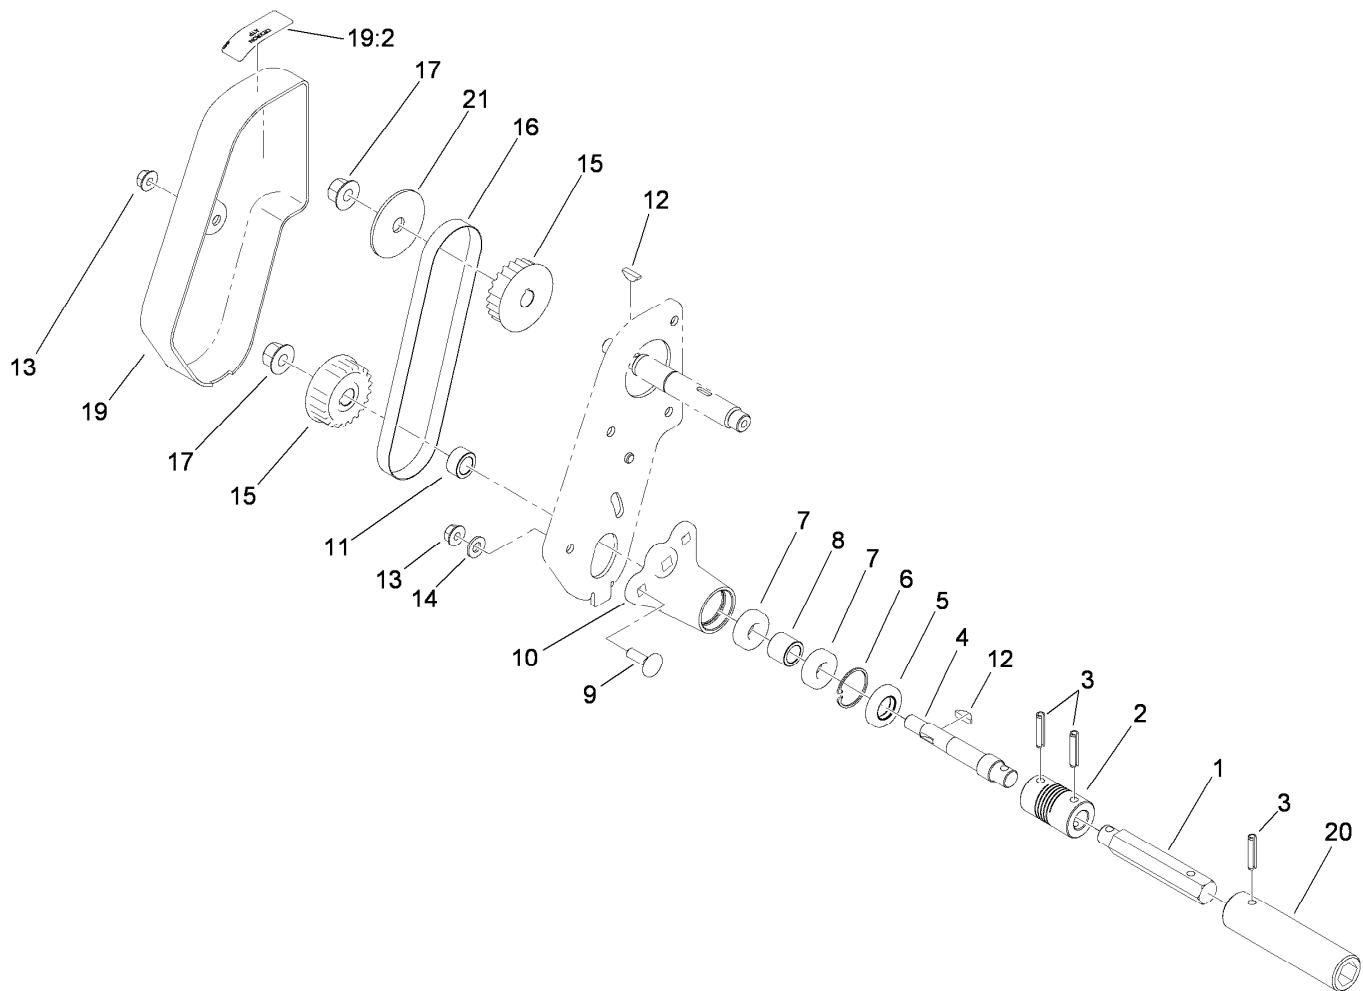

Reel Drive Assembly


Ref.	Part Number	Qty.	Description
1	110-2389	1	Shaft-Hex
2	99-3757	1	Coupling-Flex
3	32121-69	3	Pin-Spring
4	110-2382	1	Shaft-Drive, Reel
5	107-3205	1	Seal-Oil
6	32151-51	1	Ring-Retaining
7	251-336	2	Bearing-Ball
8	99-2079	1	Spacer
9	33124-025	2	Screw-CARR
10	99-2083	1	Housing-Bearing
11	110-2381	1	Spacer
12	3257-30	2	Key-Woodruff
13	117-1350	3	Nut-HF, Lock
14	33094-00	2	Washer-Plain
15	107-9044	2	Pulley-22 Tooth
16	99-2022	1	Belt
17	115-1115	2	Nut-HHF, Lock
19	110-2286	1	Belt Cover ASM
19:2	105-2411	1	Decal-Oil, HYD
20	110-2390	1	Tube-Hex
21	104-0532	1	Washer-Pulley

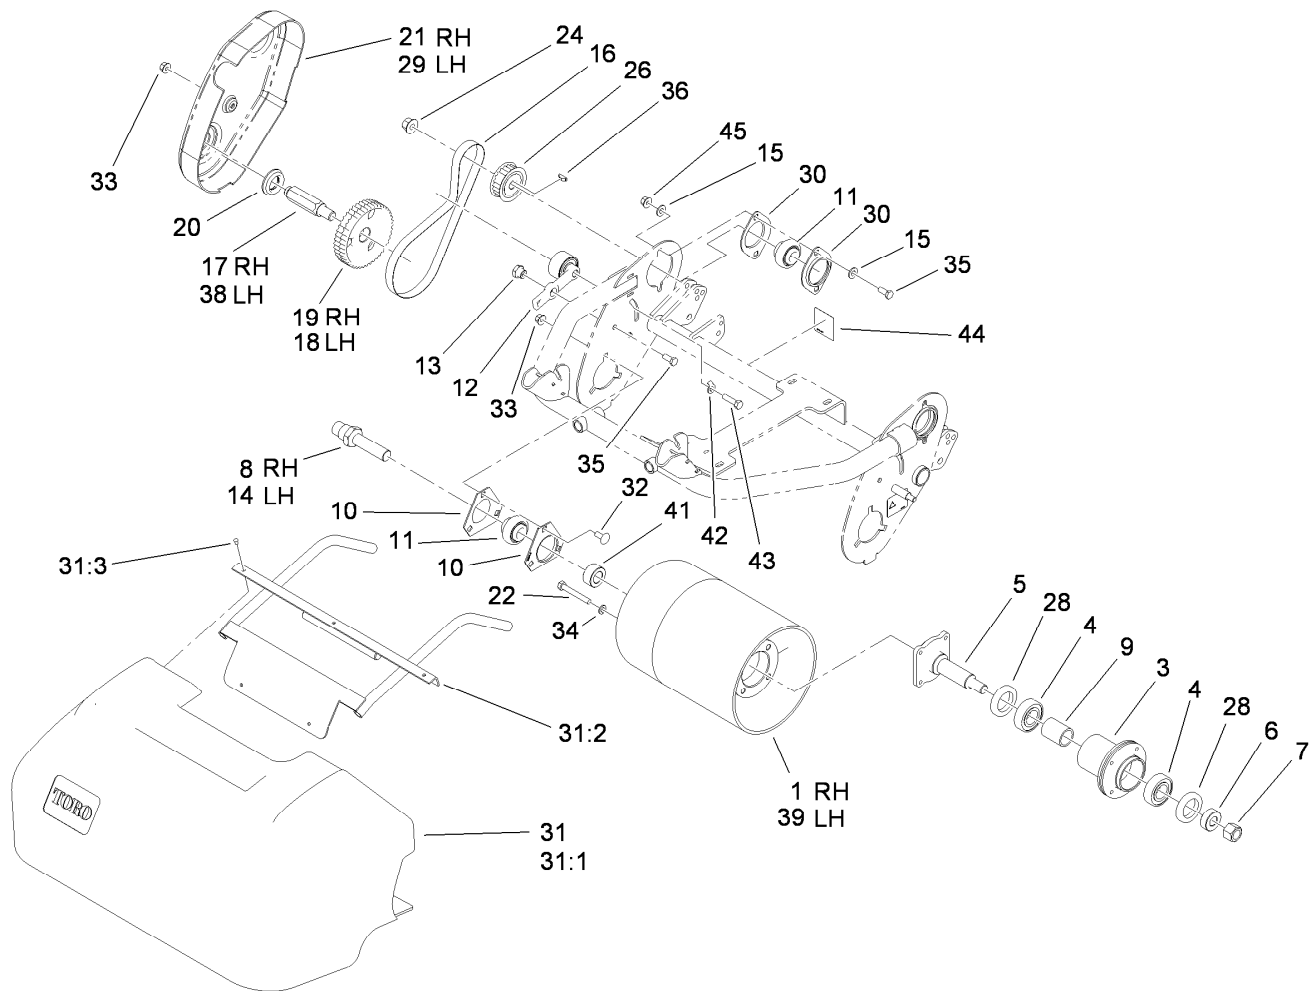

Drum Drive and Basket Assembly

Ref.	Part Number	Qty.	Description
1	107-3210	1	Drum-Traction, RH
3	107-3214	1	Hub-Drum
4	251-82	2	Bearing-Ball
5	107-3215	1	Spindle-Drum
6	65-6530	1	Spacer
7	33028-00	1	Nut-Lock, NI
8	107-3206	1	Shaft-Drum, RH
9	65-6520	1	Spacer
10	108-8626	4	Flange-Triangular
11	106-8448	4	Bearing-Race, Extended
12	117-1434	2	Idler ASM
13	105-5770	2	Nut-Shoulder
14	107-3207	1	Shaft-Drum, LH
15	33094-00	8	Washer-Plain
16	117-1353	2	Belt-Traction
17	107-3216	1	Shaft-Wheel, Transport (RH)
18	110-2290	1	Pulley-Driven, Traction (LH)
19	110-2289	1	Pulley-Driven, Traction (RH)
20	104-0533	2	Seal-Cover, Drum
21	105-5326	1	Cover-Drum, RH
22	33114-060	8	Screw-HH

Ref.	Part Number	Qty.	Description
24	115-1115	2	Nut-HHF, Lock
26	110-2315	2	Pulley-Driver, 22 Tooth
28	253-159	2	Seal
29	105-5327	1	Cover-Drum, LH
30	700083	4	Flangette-Bearing
31	110-2380	1	Basket With Frame ASM
31:1	105-2439	1	Basket-Grass
31:2	112-9462-03	1	Basket Frame ASM
31:3	3269-28	5	Rivet-Pop
32	33124-020	6	Screw-CARR
33	117-1350	8	Nut-HF, Lock
34	3253-4	8	Washer-Lock
35	33114-020	6	Screw-HH
36	3257-30	2	Key-Woodruff
38	107-3224	1	Shaft-Wheel, Transport (LH)
39	107-3211	1	Drum-Traction, LH
41	106-8417	2	Spacer-Shaft, Drum
42	107-8180	2	Washer-Tab
43	33114-030	2	Screw-HH
44	117-1406	1	Decal-Europe Noise, 97Db
45	98-0668	4	Nut

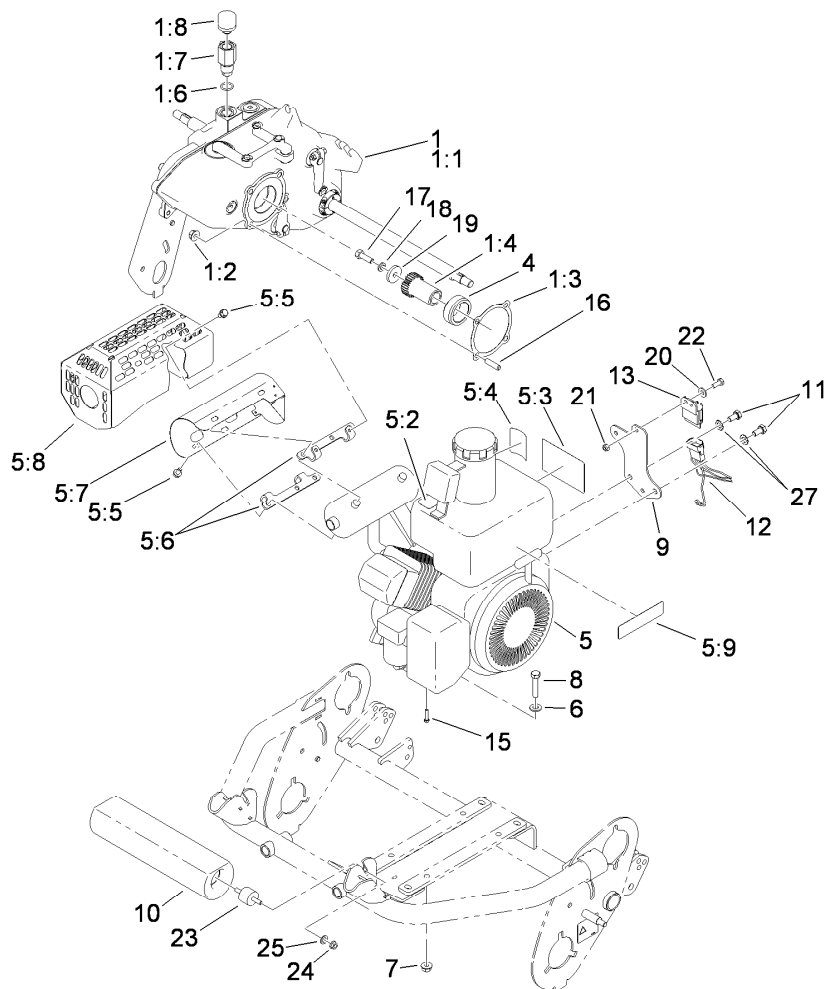


Gearbox and Engine Assembly

Ref.	Part Number	Qty.	Description
1	117-1457	1	Gearbox Service ASM
1:1		1	Gearbox ASM ●
1:2	117-1350	4	Nut-HF, Lock
1:3	99-2052	1	Gasket-Flange
1:4	110-2445	1	Gear-Engine, 28 Tooth
1:6	237-79	1	O-Ring
1:7	117-1453	1	Adapter-Vent
1:8	117-1446	1	Vent-Breather
4	99-2001	1	Adapter-Engine
5	117-1464	1	Engine ASM
5:2	115-1615	1	Decal-Surface, Hot
5:3	115-1613	1	Decal-Danger
5:4	93-9886	1	Decal-Fuel
5:5	104-2628	8	Screw-HWH
5:6	104-9771	2	Bracket-Guard, Muffler
5:7	112-9360	1	Shield-Muffler, Inner
5:8	112-9361-03	1	Guard-Muffler
5:9	117-2718	1	Decal-Arrester, Spark
6	33094-00	4	Washer-Plain


Ref.	Part Number	Qty.	Description
7	117-1350	8	Nut-HF, Lock
8	33114-040	4	Screw-HH
9	117-1365-03	1	Plate-Harness, Wire
10	107-8191-01	1	Damper-13Lbs
11	33114-016	2	Screw-HH
12	117-1410	1	Harness-Wire
13	1-323430	1	Module-Interlock
15	94-9015	1	Screw-HH
16	108-9446	4	Screw-Set
17	3210-5	1	Screw-HH
18	3253-4	1	Washer-Lock
19	65-8270	1	Washer
20	3256-22	1	Washer-Flat
21	33023-00	1	Nut-Lock
22	33113-016	1	Screw-HH
23	110-2259	2	Mount-Isolator
24	33003-00	2	Nut-HF
25	107-7601	2	Washer-Tab
27	3255-9	2	Washer-Lock

● Not serviced separately

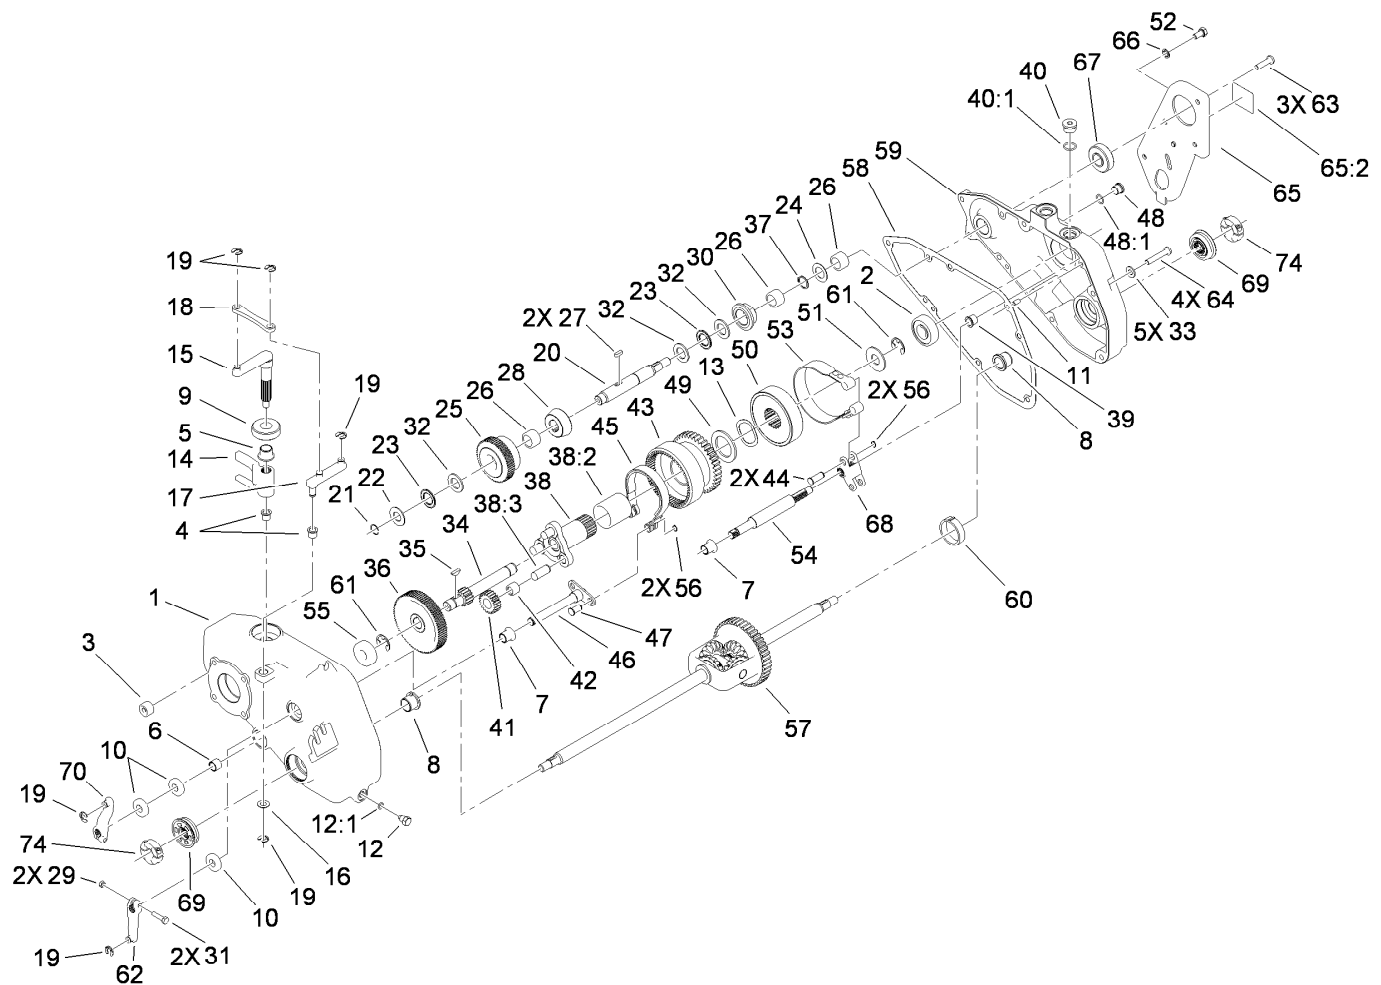

Gearbox Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	117-1450	1	Housing-Gearbox	27	99-2059	2	Key
2	110-7339	1	Bearing-Ball	28	107-3232	1	Cone ASM
3	98-4194	1	Bearing-Needle, Caged	29	33023-00	2	Nut-Lock
4	256-316	2	Bushing	30	110-2459	1	Hub-Plunger
5	256-287	1	Bushing	31	33113-025	2	Screw-HH
6	256-1	1	Bushing	32	99-3807	3	Washer-Thrust
7	256-219	2	Bushing	33	33094-00	5	Washer-Plain
8	99-2062	2	Bushing-Keyed, Flanged	34	107-8128	1	Shaft-Sun
9	99-3842	1	Seal-Oil	35	3257-30	1	Key-Woodruff
10	99-2056	3	Seal-Oil	36	110-2442	1	Gear-Traction, 78 Tooth (Crowned)
11	95-0715	2	Pin-Dowel	37	32120-72	1	Ring-Snap
12	110-2455	1	Fitting-Plug, Magnetic	38	110-2439	1	Carrier ASM
12:1	237-118	1	O-Ring	38:2	104-0524	1	Bushing-Carrier
13	105-9944	1	Washer-Wave, Spring	38:3	107-9031	3	Pin-Dowel
14	99-2014	1	Fork-Clutch	39	104-9776	1	Bushing-Flanged
15	99-2015	1	Shaft-Fork	40	353-988	1	Plug-Hex
16	37-8080	1	Washer-Thrust	40:1	237-79	1	O-Ring
17	110-2450	1	Lever-Bellcrank	41	106-4694	3	Gear-Spur
18	99-3780	1	Link	42	48-2060	3	Bearing-Roller
19	32151-47	6	Ring-Retaining	43	110-2451	1	Gear-Ring, Planetary
20	115-1117	1	Shaft-Clutch, Reel	44	106-8444	2	Pin-Clevis, Long
21	99-3805	1	Ring-Retaining	45	99-2049	1	Band-Brake
22	99-3806	1	Washer-Thrust	46	99-2020	1	Shaft-Brake
23	99-3836	2	Bearing-Thrust	47	106-8445	2	Pin-Clevis, Short
24	99-3837	1	Washer-Thrust	48	353-989	1	Plug-Hex, Hollow
25	110-2444	1	Gear-Clutch, 55 Tooth (Reel Crowned)	48:1	237-42	1	O-Ring
26	1523	3	Bearing-Needle	49	99-2054	1	Washer-Thrust

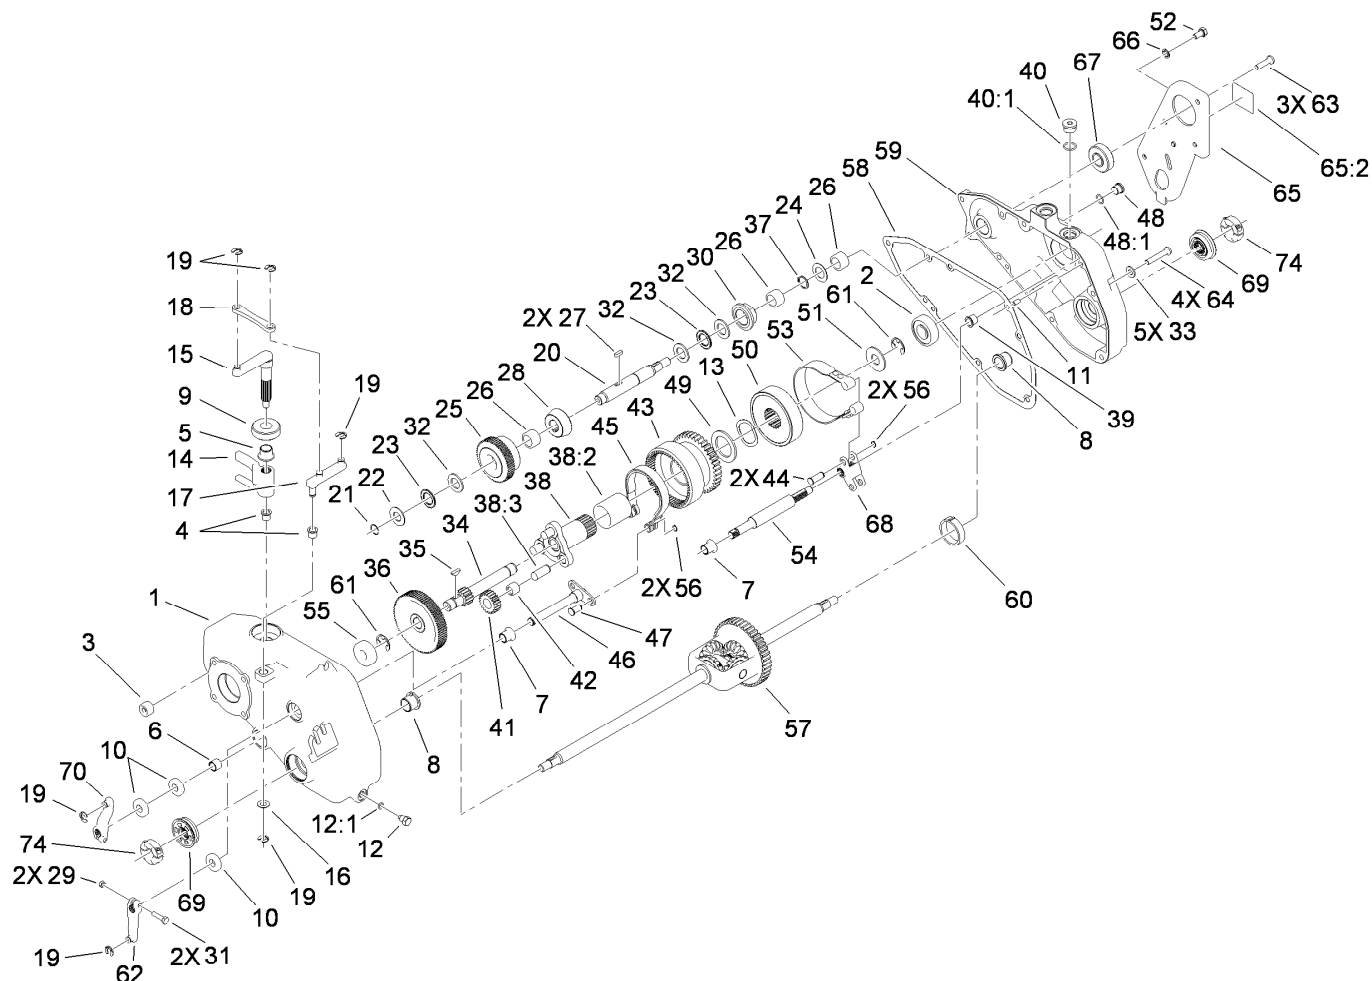

Gearbox Assembly (continued)


Ref.	Part Number	Qty.	Description
50	110-2452	1	Drum-Clutch, Traction
51	99-2055	1	Washer-Thrust
52	33114-016	1	Screw-HH
53	107-9042	1	Clutch Band ASM
54	105-9937	1	Shaft-Clutch, Traction
55	251-6	1	Bearing-Ball
56	32120-46	4	Ring-Retaining
57	99-2038	1	Differential ASM
58	117-1452	1	Gasket-Gearbox
59	117-1451	1	Cover-Gearbox
60	99-2061	1	Bushing-Keyed
61	32151-48	2	E-Ring

Ref.	Part Number	Qty.	Description
62	99-3761	1	Lever-Gearbox
63	99-6208	3	Screw-HSH
64	99-6207	4	Screw-HSBH
65	110-2293	1	Drive Plate ASM
65:2	93-9389	1	Decal-Warning, Belt (Japan)
65:2	93-9356	1	Decal-Warning, Belt
66	3254-2	1	Washer-Lock, Internal
67	105-2429	1	Seal-Oil
68	105-9938	1	Hub-Clutch, Traction
69	117-1443	2	Seal-Oil, Vented Gearbox
70	110-3451	1	Lever-Gearbox
74	117-1388	2	Collar Assembly

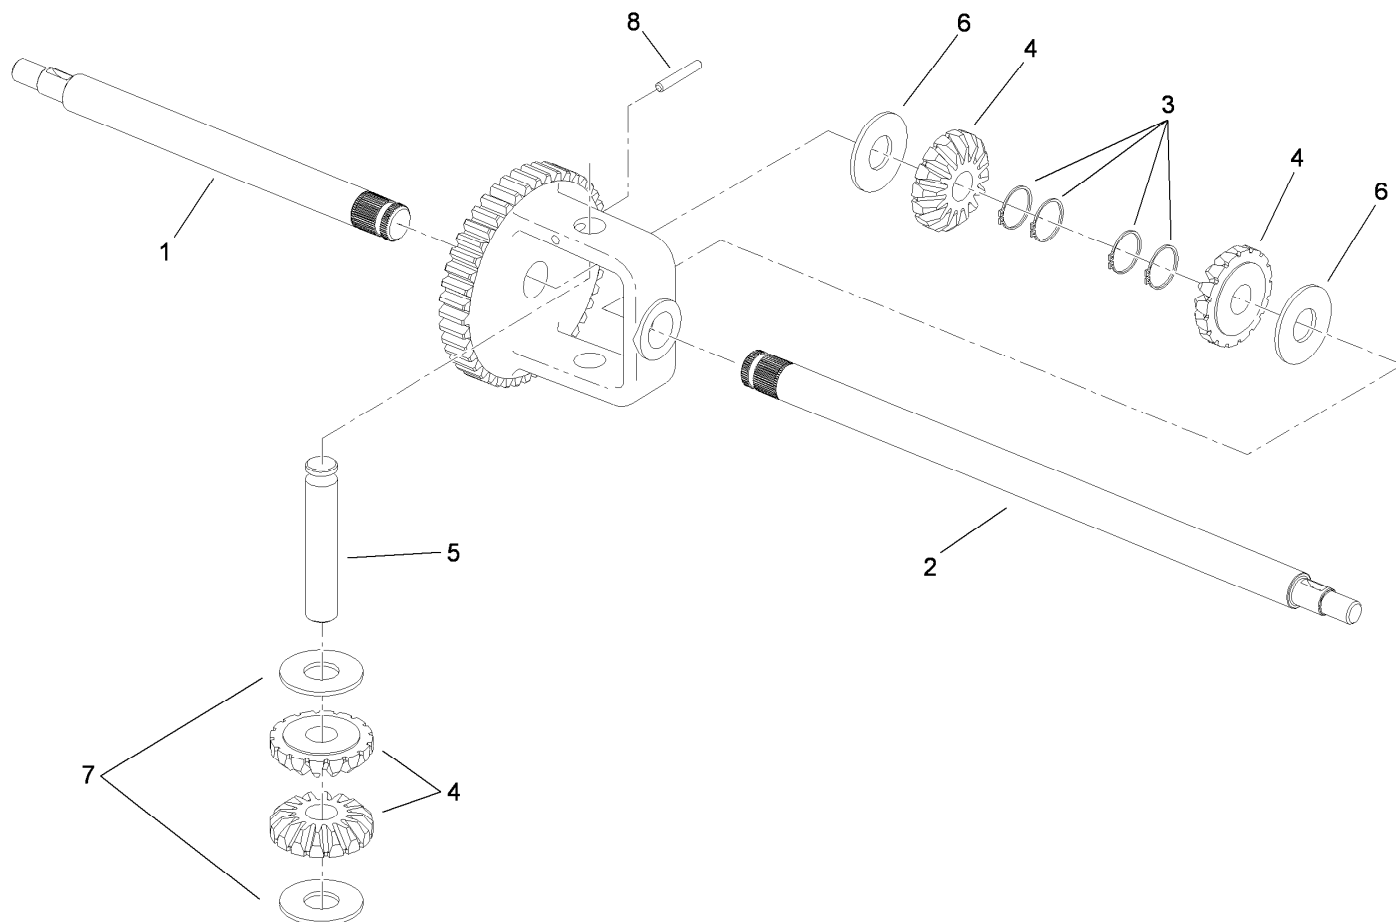


Differential Assembly No. 99-2038

Ref.	Part Number	Qty.	Description
1	105-2402	1	Axle (Short)
2	105-2403	1	Axle (Long)
3	95-5746	2	Ring-Retaining
4	105-2405	1	Gear Set-Differential
5	105-2404	1	Pin-Drive
6	95-5745	2	Washer
7	105-2406	2	Washer-Thrust
8	32121-79	1	Pin-Roll

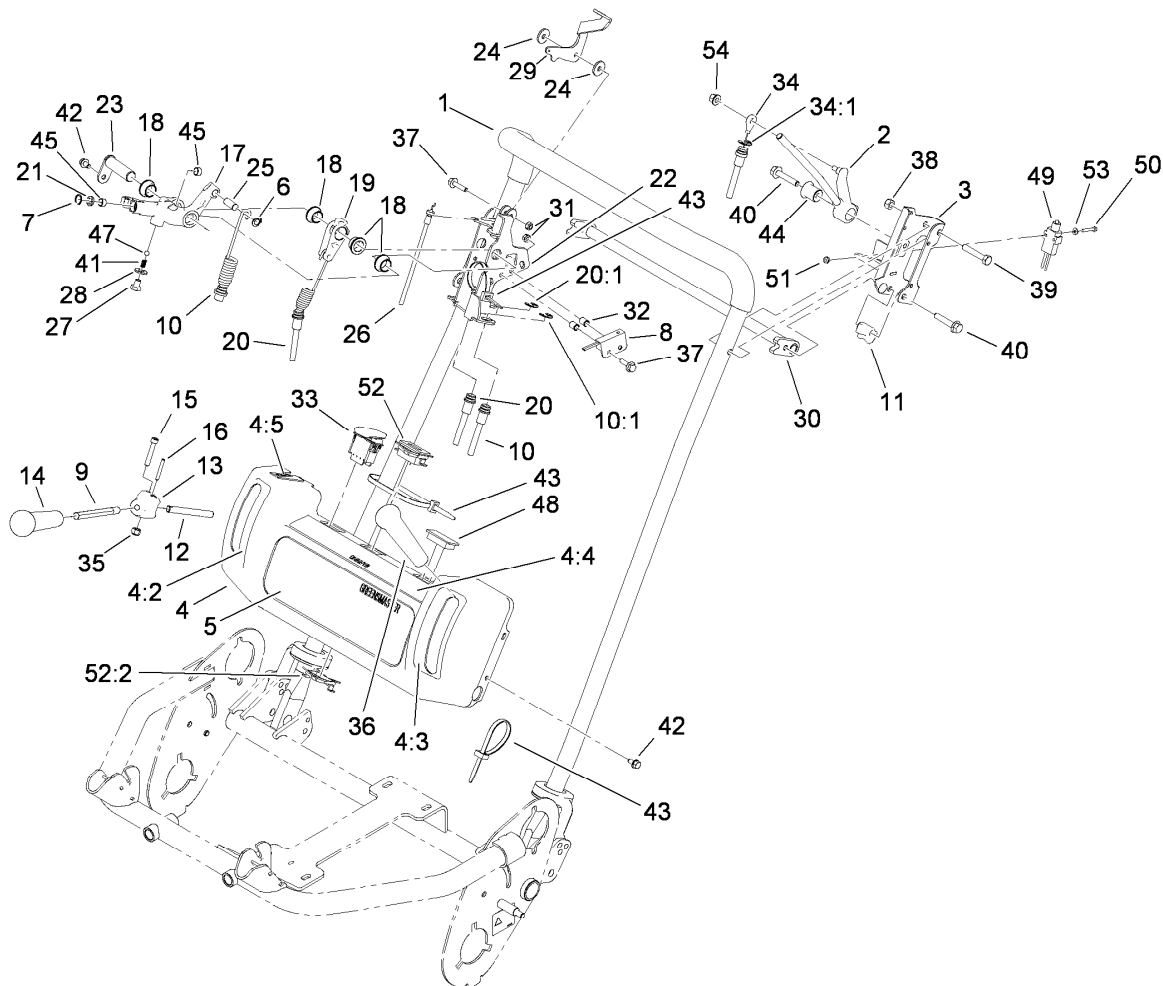

Handle Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	110-2414	1	Handle	23	99-3833	1	Pin-Lever, Reel
2	117-1361	1	Lever-Brake, Console	24	66-2921	2	Washer-Friction
3	117-1363-03	1	Brake Bracket ASM	25	104-9782	1	Pin-Dowel
4	115-1123	1	Console ASM	26	104-2620	1	Cable-Throttle
4:2	104-2617	1	Decal-Lever, Traction	27	108-8646	1	Screw-HH, Lock
4:3	104-2618	1	Decal-Lever, Brake	28	33094-00	1	Washer-Plain
4:4	115-1614	1	Decal-Warning	29	108-3179	1	Lever-Throttle
4:5	93-6085	1	Decal-Throttle	30	112-9425	1	Handle-Crossmember
5	105-9916	1	Decal-Console, Main	31	33023-00	3	Nut-Lock
6	105-2410	1	Ring-Retaining	32	105-2401	2	Spacer-Cable, Brake
7	105-5324	1	Ring-Retaining	33	112-9420	1	Switch-Engine
8	100-1270	1	Switch-Proximity	34	99-6214	1	Cable-Brake
9	105-5319	1	Rod-Handle	34:1	32120-47	1	Ring-Retaining, External
10	105-5328	1	Cable-Clutch, Traction	35	3296-42	1	Nut-Lock, NI
10:1	32120-47	1	Ring-Retaining, External	36	104-9774	1	Knob-Red
11	110-2415	2	Clamp-Handle	37	33103-025	3	Screw-HHF
12	99-3835	1	Pin	38	33024-00	2	Nut-Lock
13	104-9761	1	Hub-Mount, Handle	39	33114-045	2	Screw-HH
14	104-9760	1	Knob-Black	40	112-9419	3	Screw-HHF, W/Lock
15	105-5349	1	Screw-HSH, Special	41	105-2443	1	Spring-Detent
16	32121-51	1	Pin-Roll	42	104-2628	5	Screw-HWH
17	104-9758	1	Lever-Control, Traction	43	3290-378	5	Tie-Cable
18	80-1290	4	Bushing	44	112-9317	1	Bushing-Flanged
19	99-3830	1	Lever-Reel	45	99-6247	2	Bushing-Bronze
20	99-3765	1	Cable-Clutch, Reel	47	105-2442	1	Ball-Detent
20:1	32120-47	1	Ring-Retaining, External	48	99-7420	1	Plug-Hole
21	105-2407	1	Wiper	49	95-8900	1	Switch
22	110-7334-03	1	Control Bracket ASM	50	32105-9	2	Screw

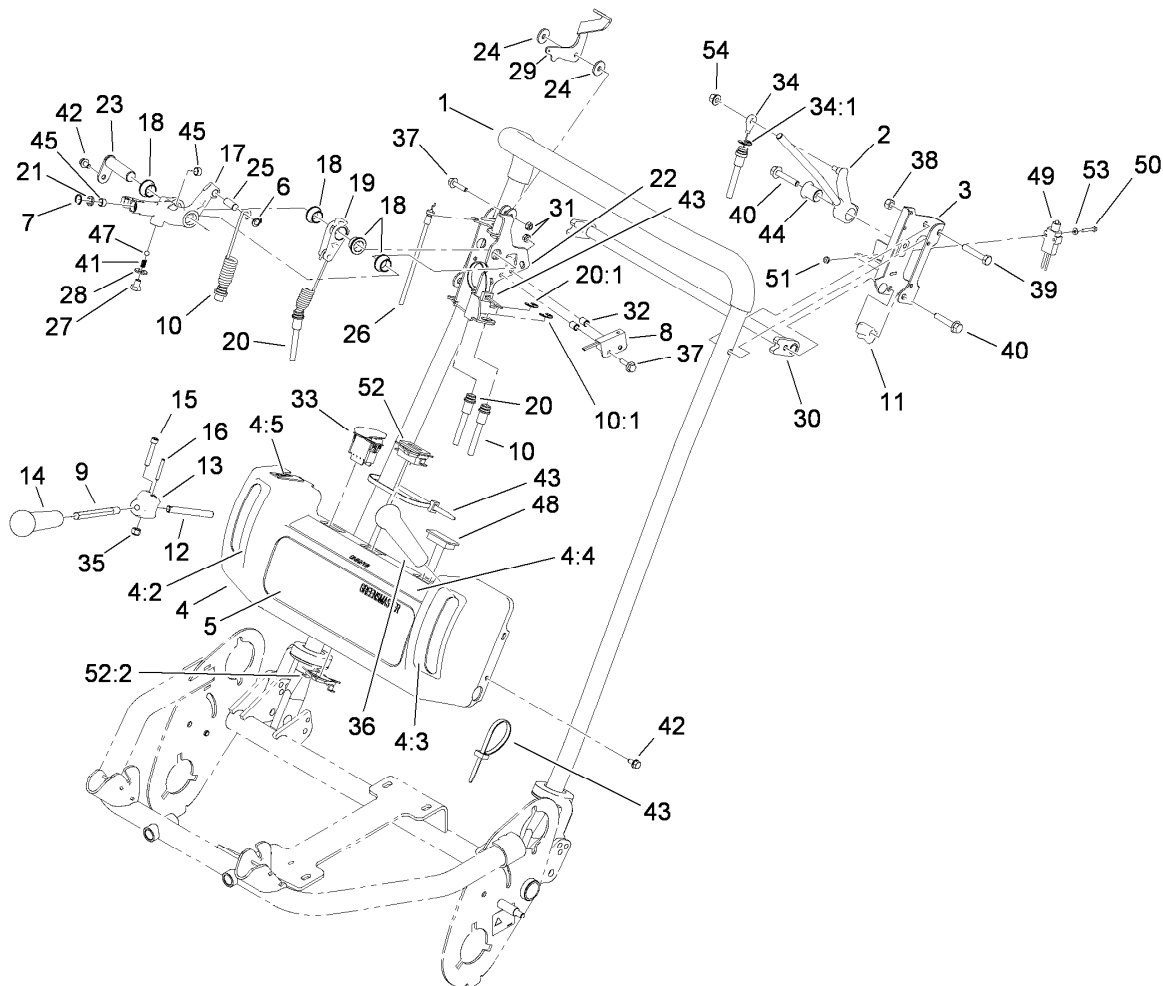

Handle Assembly (continued)

Ref.	Part Number	Qty.	Description
51	3296-9	2	Nut-Lock
52	104-4233	1	Meter-Hour
52:2	104-4234	1	Clip-Mounting


Ref.	Part Number	Qty.	Description
53	3269-6	2	Washer-Flat
54	81-0130	1	Nut-Flange, NI

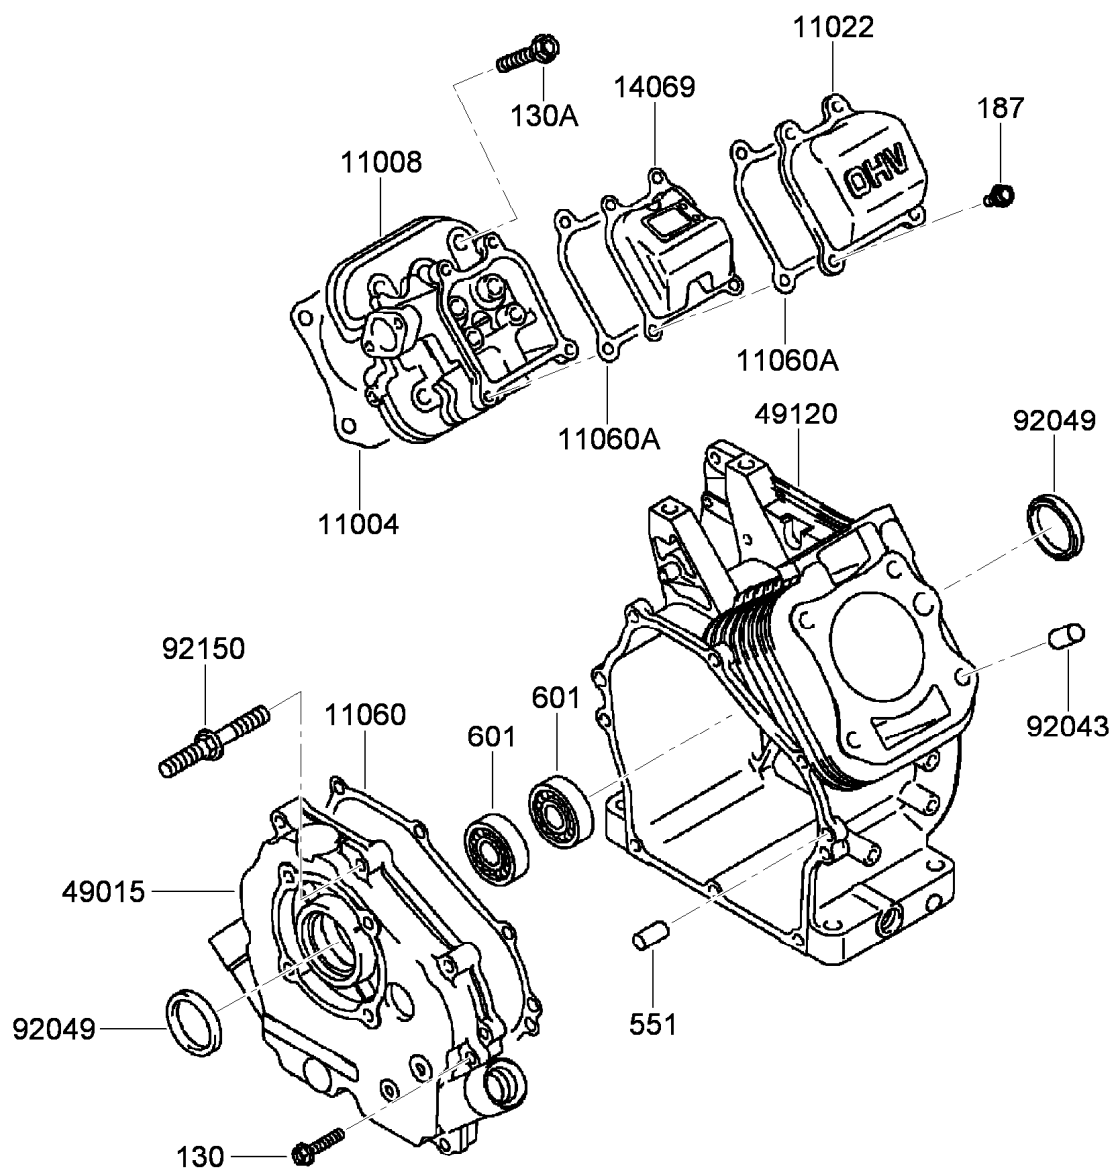

Cylinder and Crankcase Assembly


Ref.	Part Number	Qty.	Description
130	108-2522	7	Bolt-Flanged (6X30)
130A	115-1759	4	Bolt-Flanged (8X45)
187	115-1760	4	Bolt-Upset, Wsp (6X16)
551	93-8516	2	Pin-Dowel (6X12)
601	93-8517	2	Bearing-Ball
11004	93-8504	1	Gasket-Head
11008	115-1757	1	Head-Cylinder
11022	93-8508	1	Case-Rocker

Ref.	Part Number	Qty.	Description
11060	93-8525	1	Gasket-Cover, Crankcase
11060A	93-8509	2	Gasket-Case, Rocker
14069	93-8510	1	Breather
49015	93-8697	1	Cover-Crankcase
49120	93-8515	1	Crankcase
92043	93-8512	2	Pin
92049	93-8511	2	Seal-Oil
92150	93-8524	1	Stud

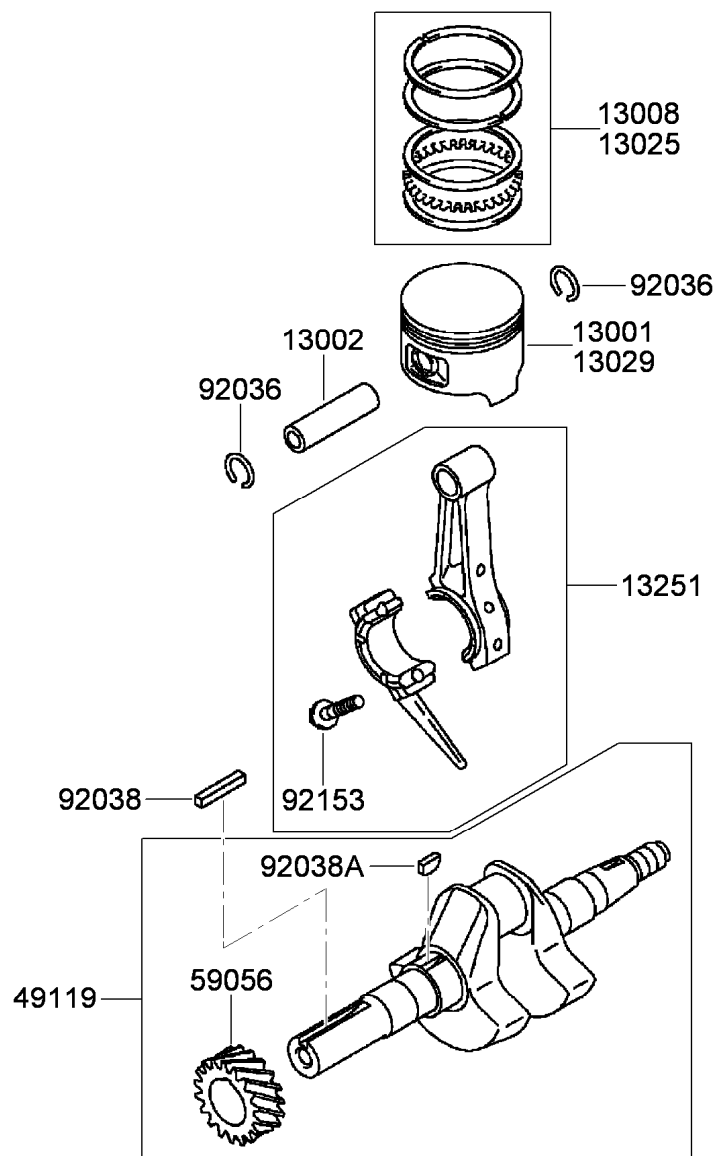

Piston and Crankshaft Assembly


Ref.	Part Number	Qty.	Description
13001	93-8502	1	Piston
13002	93-8501	1	Pin-Piston
13008	93-8503	1	Set-Ring, Piston
13025	94-6837	1	Piston Ring Set (.05Mm)
13029	94-6836	1	Piston (0.5 O S)
13251	93-8528	1	Connecting Rod ASM
49119	93-8696	1	Crankshaft ASM
59056	94-9043	1	Gear-Helical
92036	93-8500	2	Ring-Retaining
92038	93-8526	1	Key
92038A	93-8698	1	Key
92153	115-1805	2	Bolt (6X30)

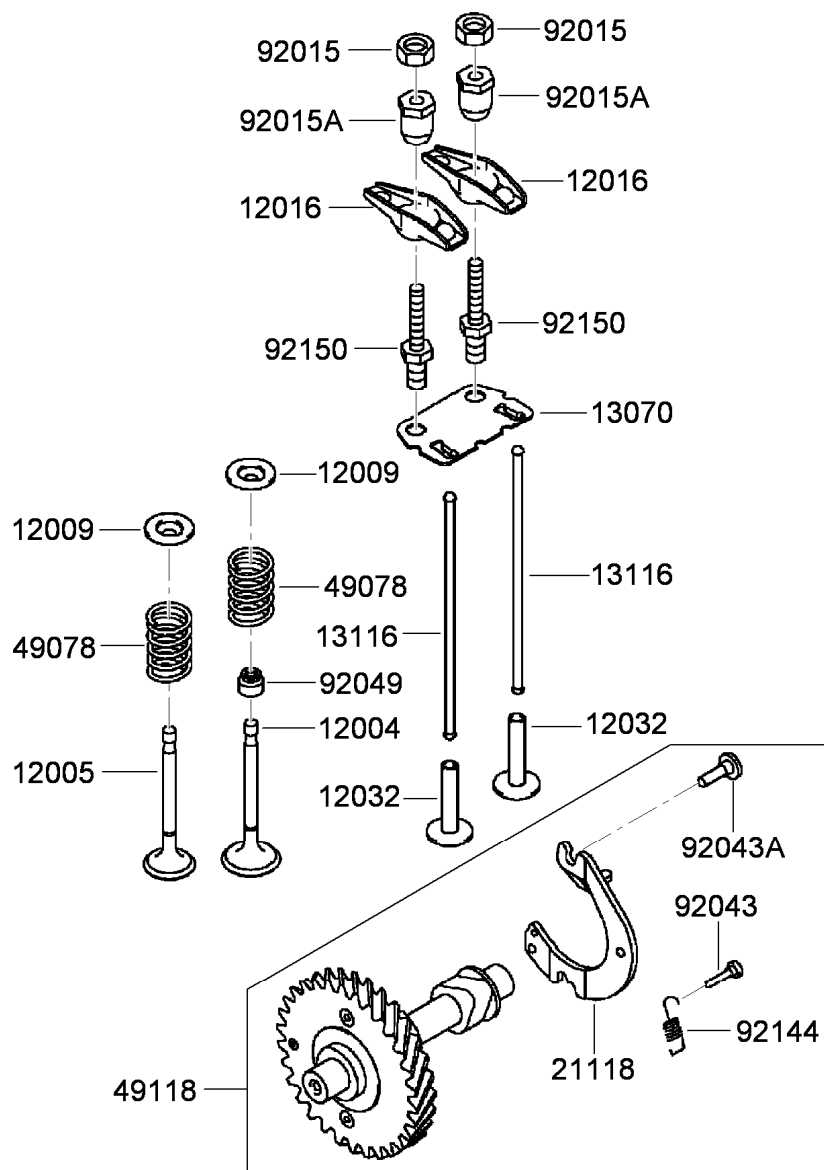

Valve and Camshaft Assembly


Ref.	Part Number	Qty.	Description
12004	93-8532	1	Valve-Intake
12005	93-8529	1	Valve-Exhaust
12009	93-8531	2	Retainer-Spring, Valve
12016	93-8535	2	Arm-Rocker
12032	93-8539	2	Tappet
13070	115-1758	1	Guide
13116	93-8538	2	Rod-Push
21118	93-8543	1	Decompressor
49078	108-2533	2	Spring-Valve, Engine

Ref.	Part Number	Qty.	Description
49118	93-8699	1	Camshaft ASM
92015	93-8533	2	Nut
92015A	93-8534	2	Nut
92043	93-8542	1	Pin
92043A	93-8540	2	Pin
92049	115-1762	1	Seal-Oil
92144	93-8541	1	Spring
92150	93-8536	2	Bolt

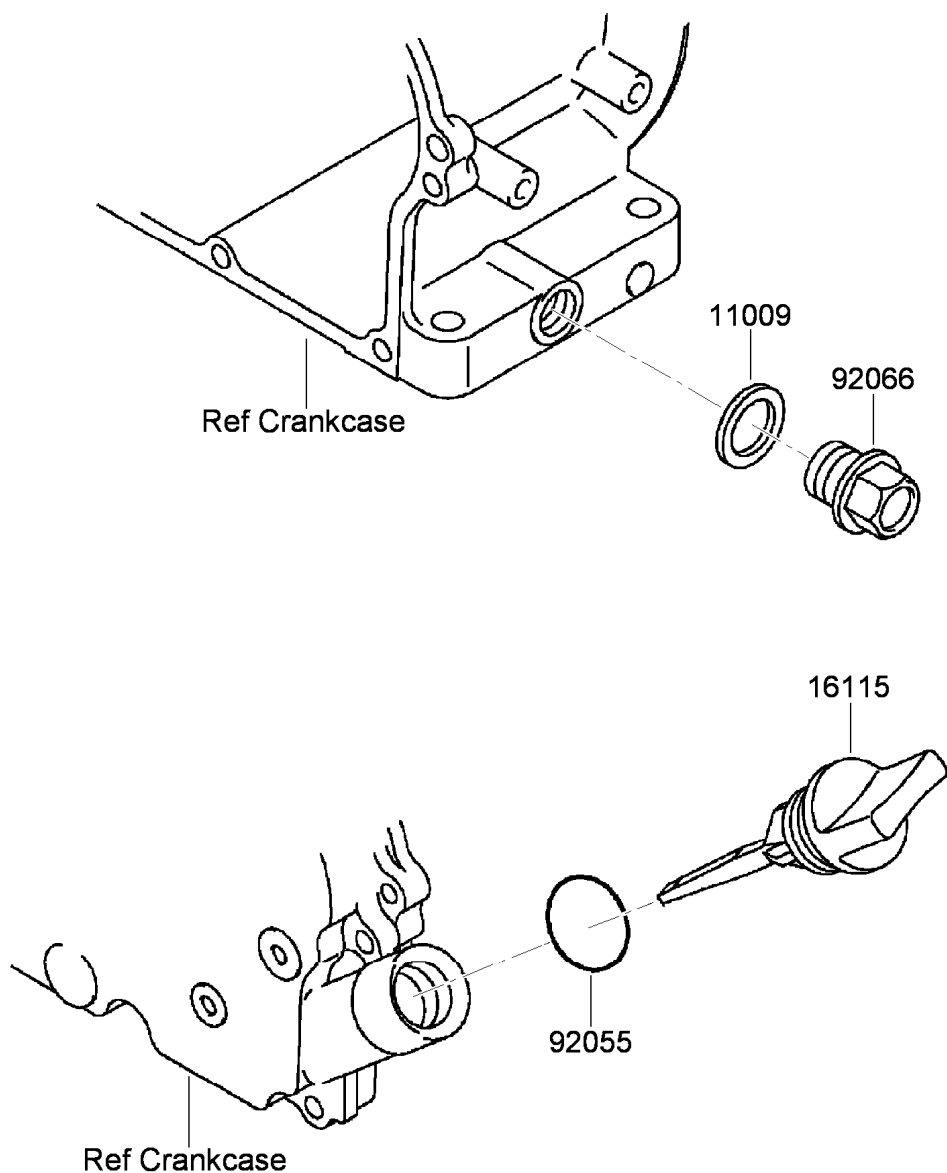


Lubrication Equipment Assembly

Ref.	Part Number	Qty.	Description
11009	93-8514	2	Gasket-Plug, Drain (14.2X19X2)
16115	93-8523	2	Cap-Filler, Oil
92055	94-9041	2	O-Ring (20Mm)
92066	115-1761	2	Plug (14X12)

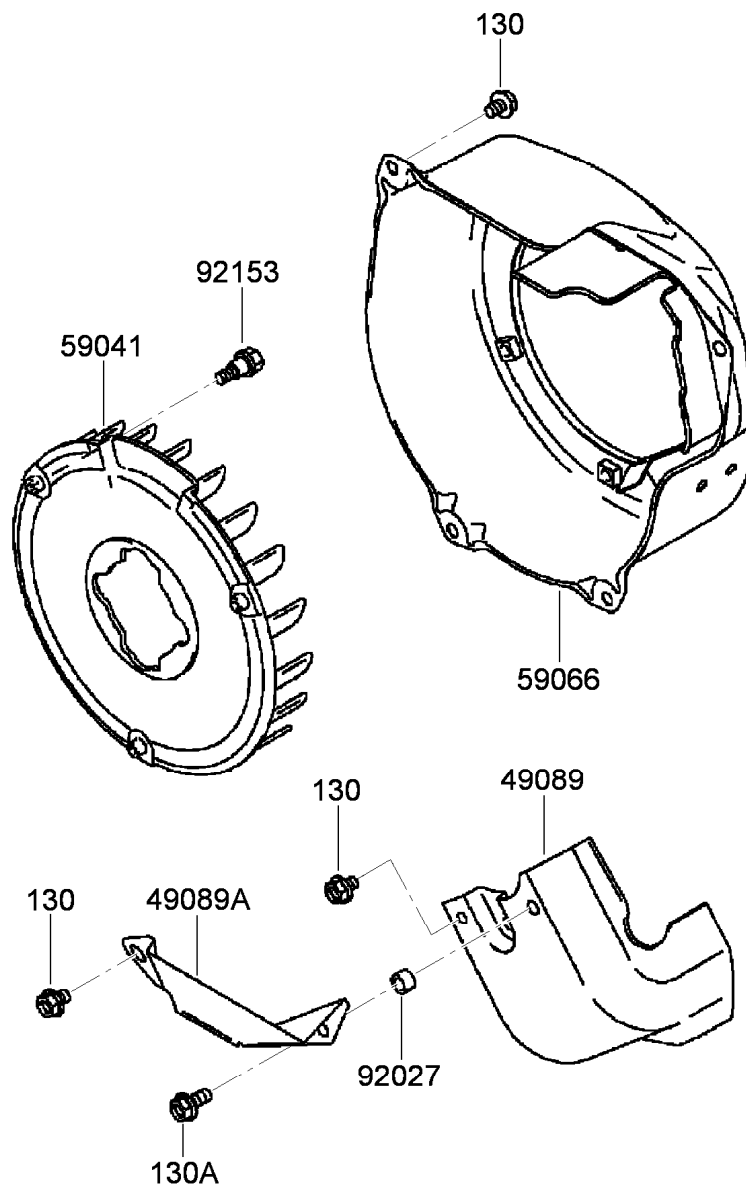


Cooling Equipment Assembly

Ref.	Part Number	Qty.	Description
130	115-1765	7	Bolt-Flanged (6X8)
130A	115-1764	1	Bolt-Flanged (6X14)
49089	93-8563	1	Shroud-Engine
49089A	93-8565	1	Shroud-Engine
59041	93-8572	1	Fan
59066	115-1804	1	Housing-Fan
92027	93-8564	1	Collar (6.8X10X6)
92153	94-6840	3	Bolt-Flanged

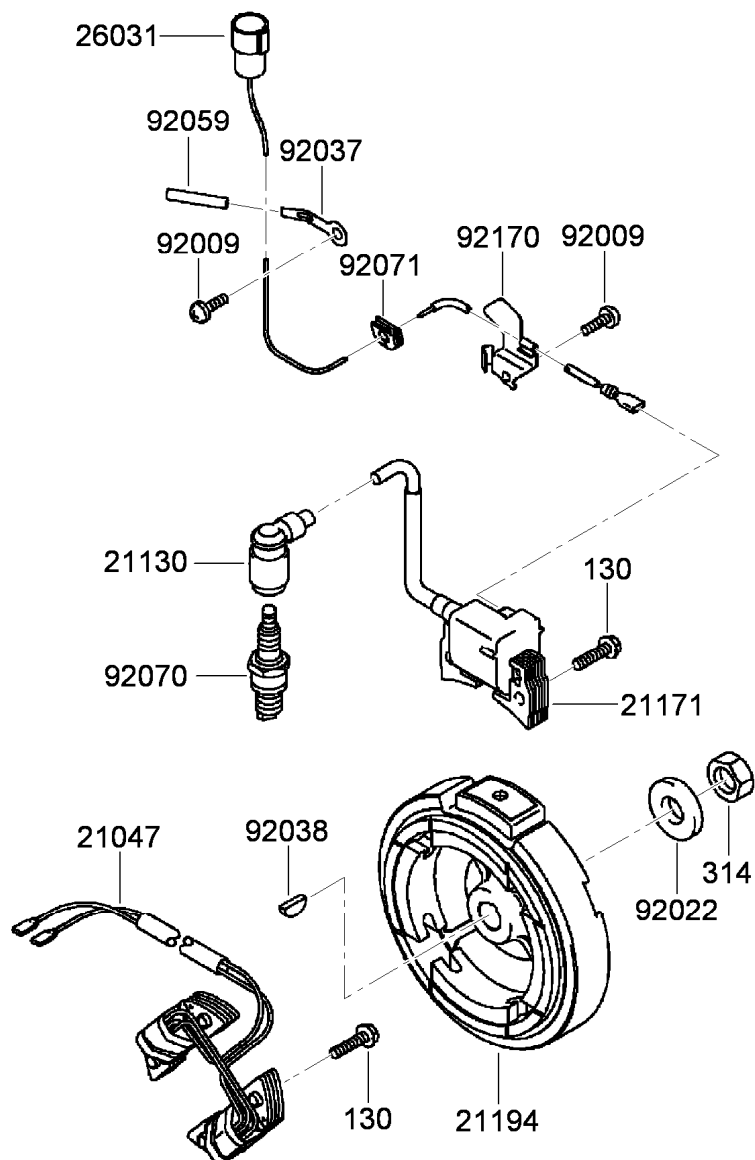

Electric Equipment Assembly


Ref.	Part Number	Qty.	Description
130	100-2610	6	Bolt-Flanged (6X25)
314	115-1845	1	Nut-Hex, Fine
21047	99-4267	1	Coil-Lighting
21130	KW10087	1	Cap-Sparkplug
21171	94-9031	1	Ignition Coil ASM
21194	99-6237	1	Flywheel ASM
26031	115-1767	1	Harness
92009	95-9716	2	Screw
92022	93-8569	1	Washer
92037	93-8576	1	Clamp
92038	93-8571	1	Key
92059	115-1768	1	Tube (5X6X75)
92070	108-2557	1	Sparkplug (Bpr5Es) (Ngk) Solid
92071	115-1772	1	Grommet
92170	93-8583	1	Clamp

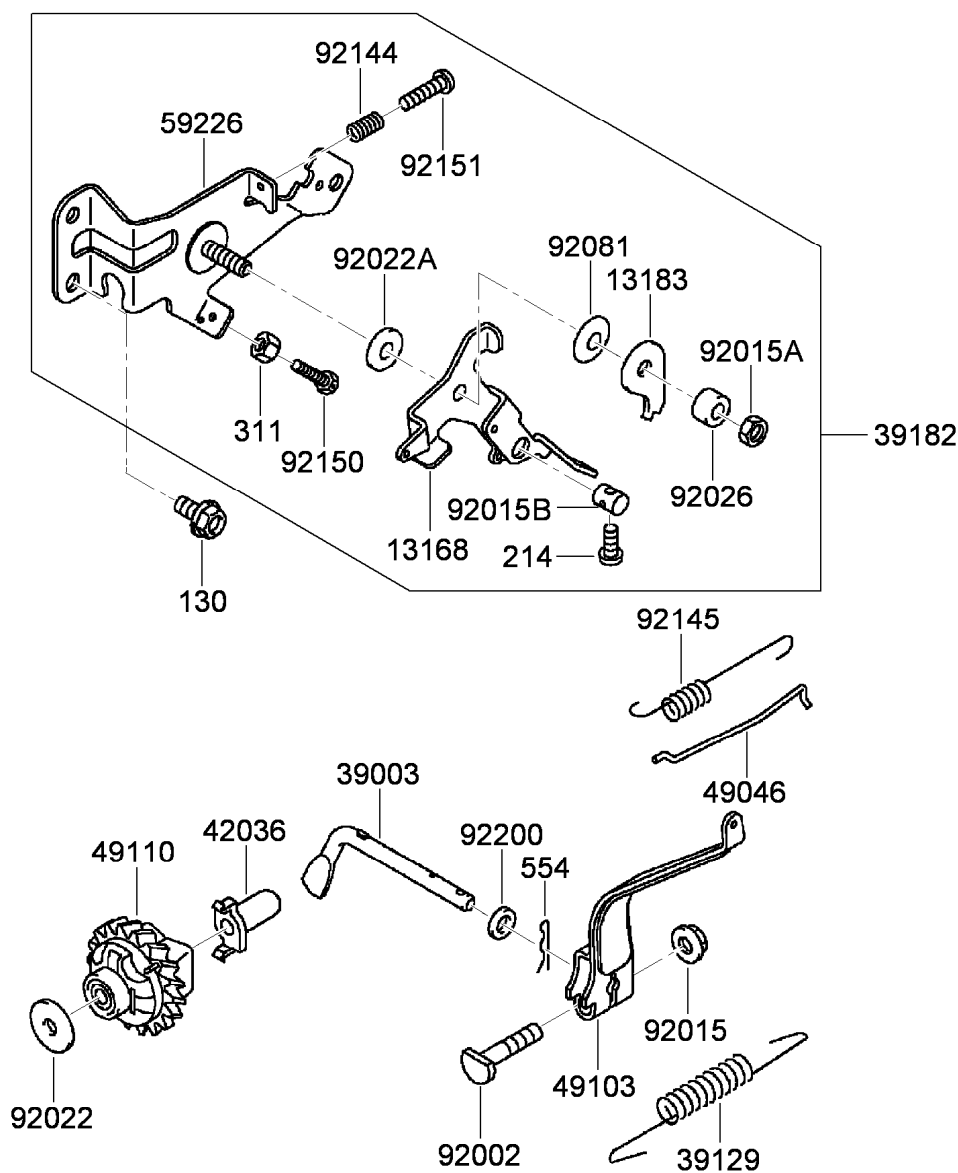

Control Equipment Assembly

Ref.	Part Number	Qty.	Description
130	115-1809	2	Bolt-Flanged (6X12)
214	115-1778	1	Screw-Pan (4X14)
311	115-6495	1	Nut-Hex
554	115-8671	1	Pin-Snap (1.2X21.2)
13168	93-8598	1	Lever
13183	93-8592	1	Plate
39003	93-8609	1	Arm-Pivot
39129	115-1803	1	Spring-Governor
39182	115-1754	1	Control Panel ASM
42036	108-2567	1	Sleeve
49046	115-1811	1	Rod-Governor
49103	93-8603	1	Arm-Governor
49110	93-8611	1	Governor ASM
59226	115-1773	1	Panel-Control


Ref.	Part Number	Qty.	Description
92002	93-8606	1	Bolt (6X28)
92015	93-8631	1	Nut
92015A	93-8595	1	Nut
92015B	93-8597	1	Nut
92022	94-6842	1	Washer (6.2X20X0.5)
92022A	93-8590	1	Washer
92026	115-1776	1	Spacer
92081	115-1775	1	Spring
92144	93-8588	1	Spring
92145	115-1810	1	Spring
92150	115-1813	1	Bolt
92151	115-1774	1	Bolt (4X22)
92200	93-8608	1	Washer (6.5X11.5X2.0)

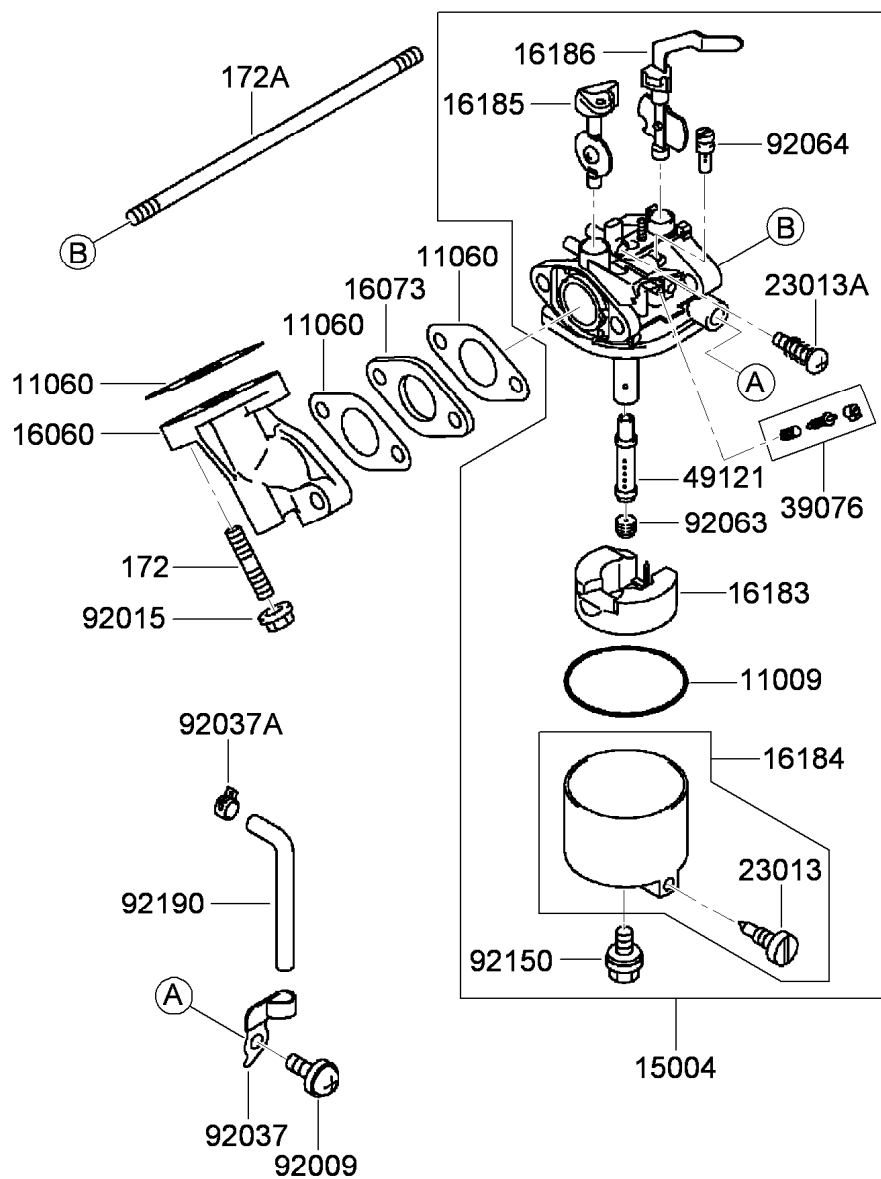

Carburetor Assembly

Ref.	Part Number	Qty.	Description
172	93-8632	2	Bolt-Stud (6X18)
172A	115-1814	1	Bolt-Stud (6X73)
11009	93-8624	1	Gasket
11060	93-8613	3	Gasket
15004	115-1869	1	Carburetor ASM
16060	93-8633	1	Pipe-Intake
16073	94-9048	1	Insulator
16183	94-6844	1	Float ASM
16184	93-8625	1	Float Chamber ASM
16185	94-9033	1	Throttle Valve ASM
16186	115-1870	1	Choke Valve ASM
23013	93-8626	1	Screw ASM


Ref.	Part Number	Qty.	Description
23013A	93-8619	1	Screw ASM
39076	94-9034	1	Limiter
49121	115-1871	1	Nozzle-Main
92009	94-6845	1	Screw
92015	93-8631	2	Nut
92037	94-6846	1	Clamp
92037A	93-8629	1	Clamp
92063	94-9036	1	Jet-Main (No.65)
92064	94-9037	1	Jet-Pilot (No.40)
92150	93-8627	1	Bolt
92190	93-8630	1	Tube

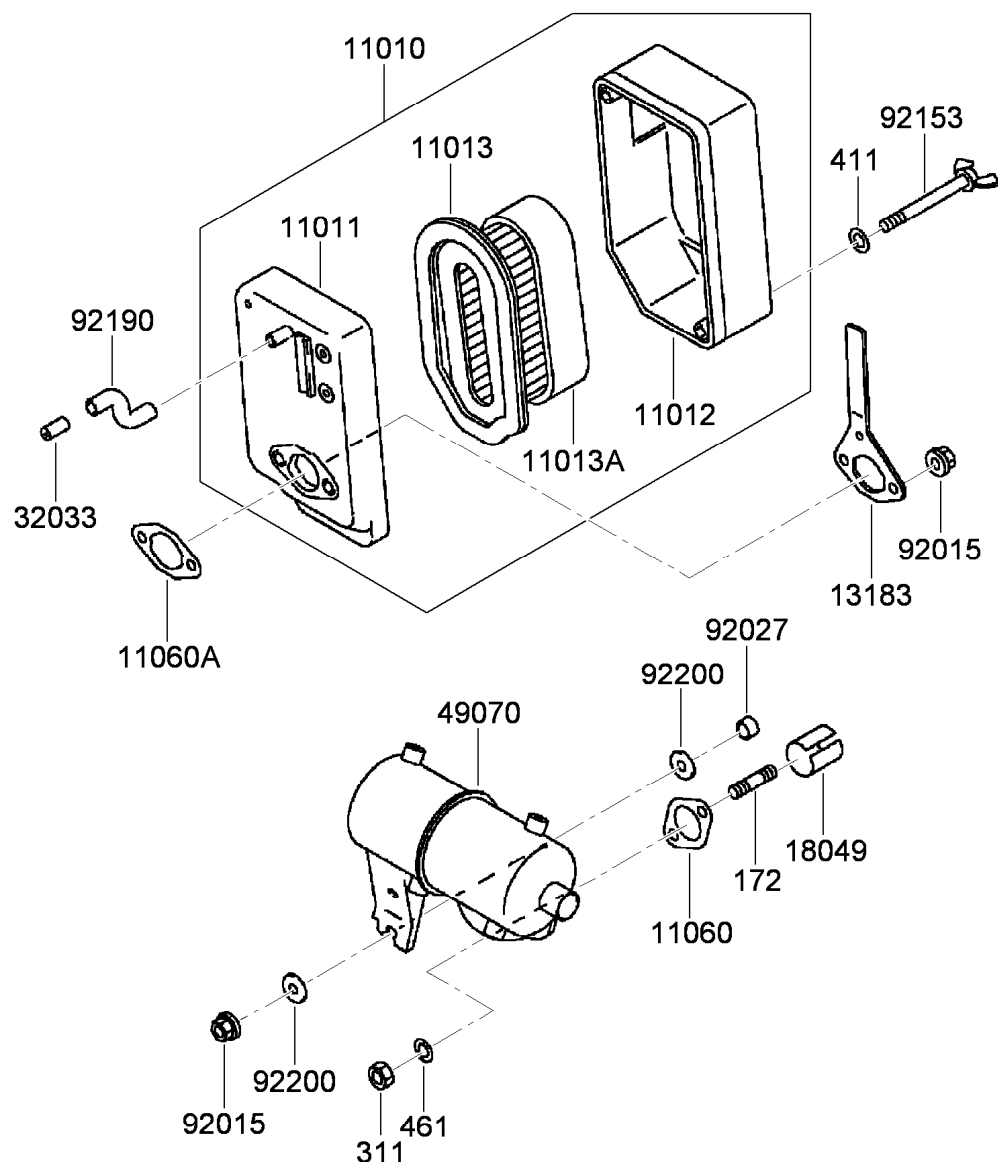

Air Filter and Muffler Assembly

Ref.	Part Number	Qty.	Description
172	115-1819	2	Bolt-Stud (6X16)
311	93-8656	2	Nut-Hex (6Mm)
411	115-1802	2	Washer-Plain
461	115-1801	2	Washer-Spring
11010	115-1872	1	Air Filter ASM
11011	115-1873	1	Case-Filter, Air
11012	93-8638	1	Cap-Filter, Air
11013	93-8636	1	Element-Filter, Air
11013A	93-8637	1	Element-Filter, Air
11060	93-8654	1	Gasket-Muffler


Ref.	Part Number	Qty.	Description
11060A	93-8657	1	Gasket-Filter, Air
13183	93-8642	1	Plate-Filter, Air
18049	93-8652	1	Pipe-Exhaust
32033	93-8658	1	Pipe
49070	115-1874	1	Muffler
92015	93-8631	3	Nut
92027	93-8651	1	Collar
92153	93-8640	2	Bolt
92190	93-8659	1	Tube
92200	93-8650	2	Washer (.5X18X2.0)

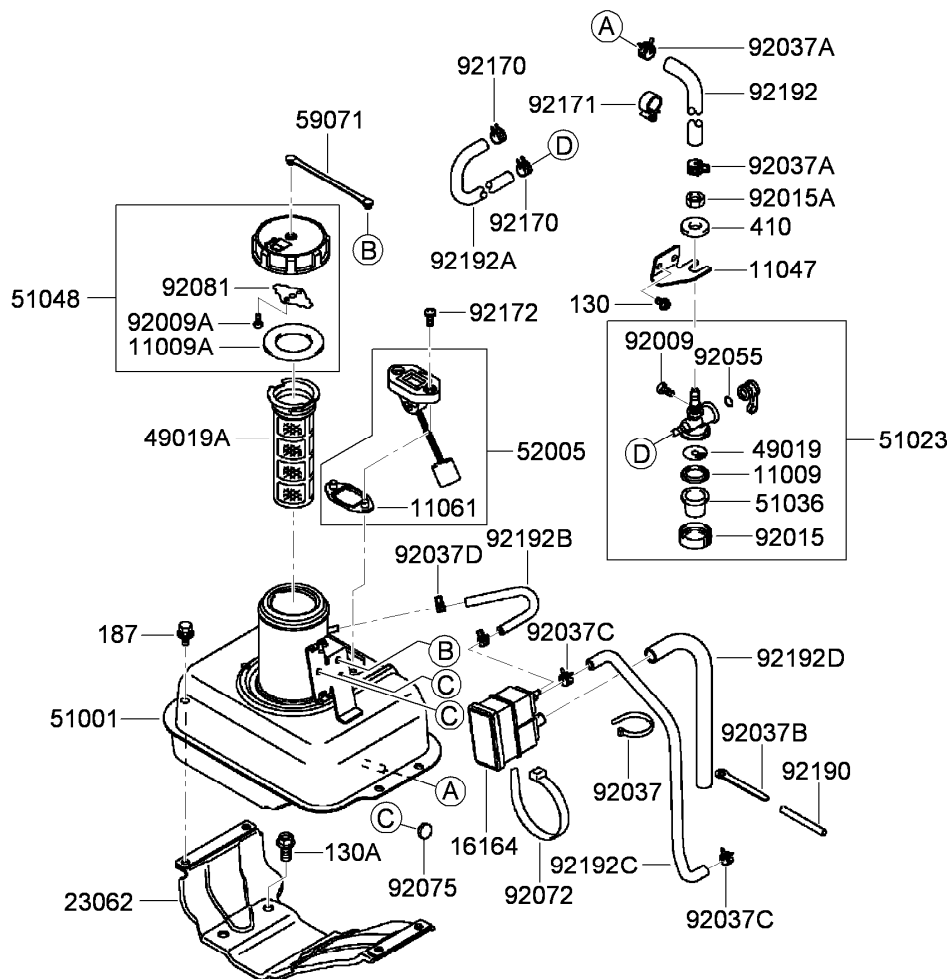

Fuel Tank and Fuel Valve Assembly


Ref.	Part Number	Qty.	Description
130	115-1864	2	Bolt-Flanged (5X8)
130A	115-1867	4	Bolt-Flanged (8X18)
187	115-1760	4	Bolt-Upset, Wsp (6X16)
410	115-1885	1	Washer-Plain, Small
11009	93-8673	1	Gasket
11009A	93-8662	1	Gasket
11047	93-8681	1	Bracket
11061	104-2384	1	Gasket-Gauge, Fuel
16164	115-1859	1	Canister
23062	104-2383	1	Bracket-Tank
49019	94-6849	1	Filter-Tapper, Fuel
49019A	94-6826	1	Filter-Fuel
51001	115-1858	1	Fuel Tank ASM
51023	93-8669	1	Fuel Tapper ASM
51036	93-8674	1	Cup-Tapper, Fuel
51048	115-1857	1	Tank Cap ASM
52005	93-8685	1	Gauge-Fuel
59071	115-1856	1	Joint
92009	93-8670	1	Screw
92009A	93-8661	2	Screw

Ref.	Part Number	Qty.	Description
92015	93-8675	1	Nut
92015A	94-9042	1	Nut
92037	115-1855	1	Clamp
92037A	115-1861	2	Clamp-Clip, Hose
92037B	115-1854	1	Clamp
92037C	93-8664	2	Clamp
92037D	93-8676	2	Clamp
92055	93-8671	1	O-Ring
92072	115-1853	1	Band
92075	115-1852	2	Damper
92081	93-8663	1	Spring
92170	115-1865	2	Clamp
92171	115-1862	1	Clamp
92172	115-1860	2	Screw (5X12)
92190	115-1851	1	Tube
92192	115-1863	1	Tube (6.2X13.2X200)
92192A	115-1866	1	Tube (4X11X160)
92192B	115-1889	1	Tube
92192C	115-1890	1	Tube
92192D	115-1891	1	Tube

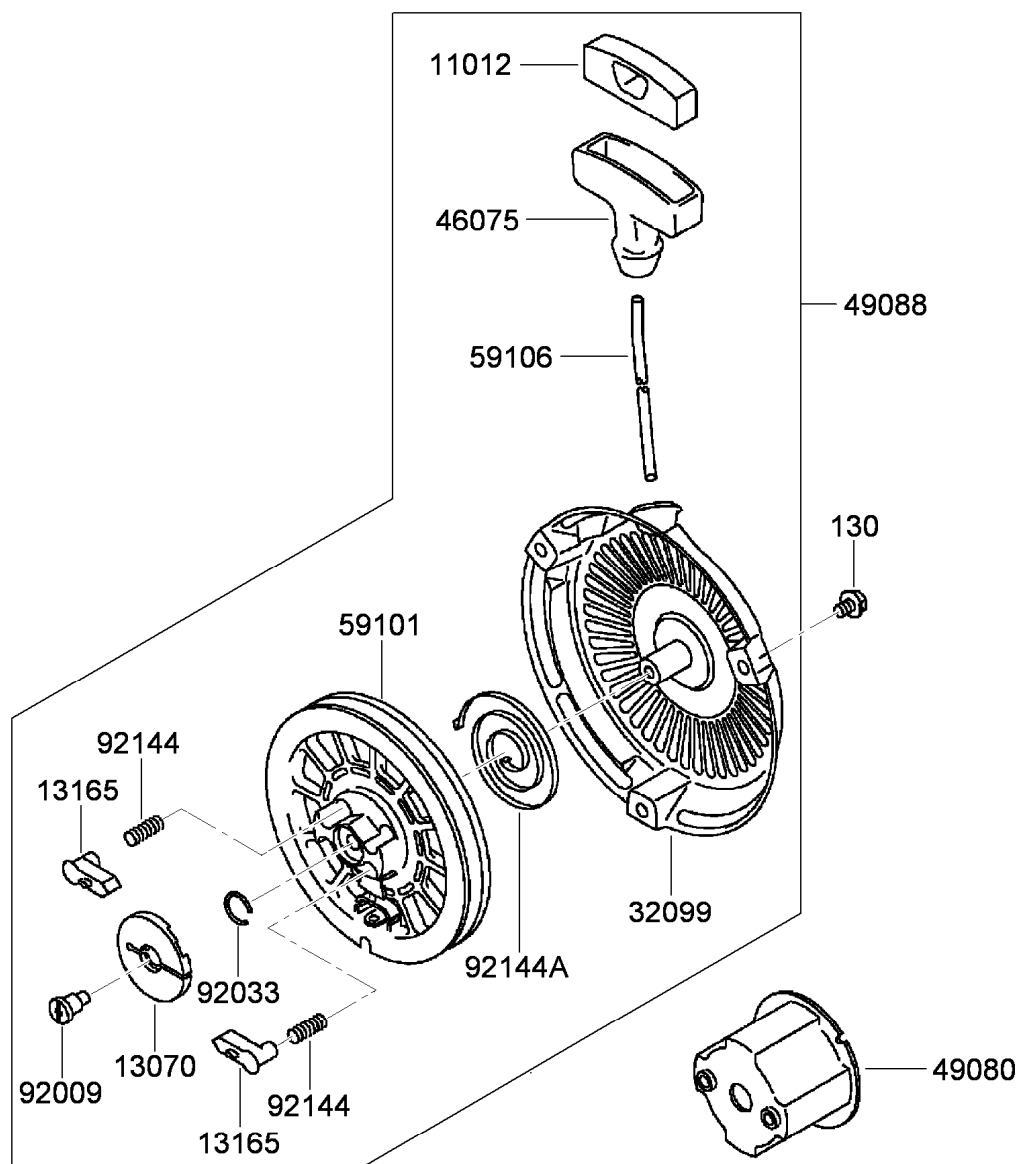

Starter Assembly

Ref.	Part Number	Qty.	Description
130	115-1765	3	Bolt-Flanged (6X8)
11012	94-9044	1	Cap-Grip
13070	93-8562	1	Guide-Pawl
13165	93-8554	2	Pawl-Starter, Recoil
32099	94-9046	1	Case-Starter, Recoil
46075	94-9045	1	Grip-Starter, Recoil
49080	93-8567	1	Pulley-Recoil
49088	93-8552	1	Recoil Starter ASM
59101	93-8556	1	Reel-Starter, Recoil
59106	93-8560	1	Rope (4X1500)
92009	93-8553	1	Screw
92033	93-8561	1	Ring-Retaining
92144	93-8555	2	Spring-Return
92144A	93-8557	1	Spring

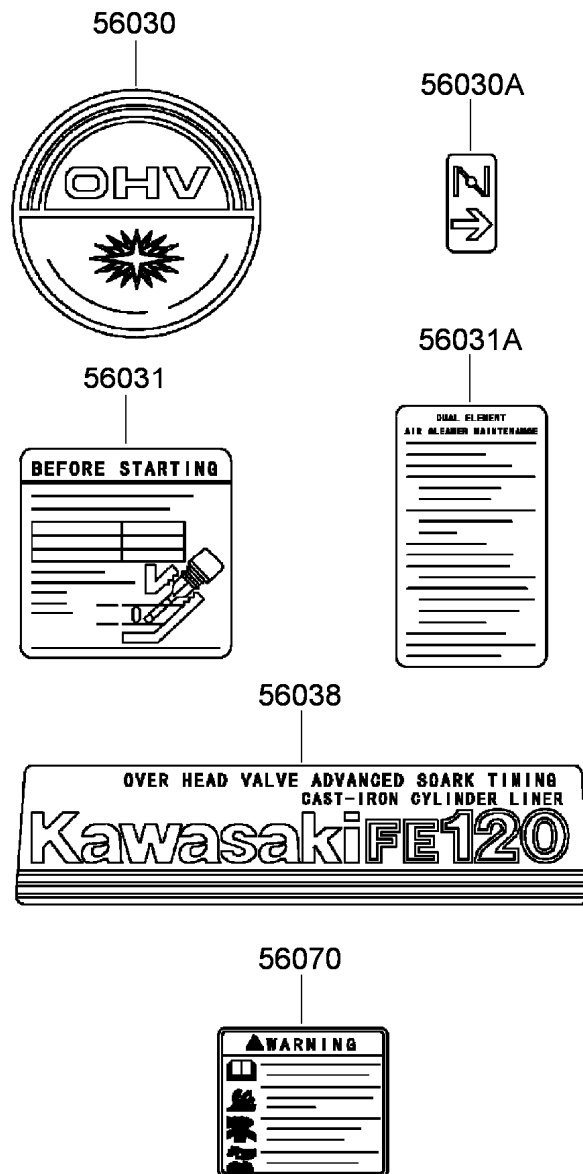

Label Set

Ref.	Part Number	Qty.	Description
56030	94-9027	1	Label-Recoil
56030A	93-8687	1	Decal-Choke
56031	93-8689	1	Decal-Instructions
56031A	93-8690	1	Decal-Maintenance
56038	94-9028	1	Label-Kawasaki
56070	93-8692	1	Decal-Warning

Attachments and Accessories

For 04025 Greensmaster Flex 21 Traction Unit

Product Name	Model/Part
Light Kit.....	04061
Out Front Brush Kit.....	04119
Wheel Kit	04123
11-Blade Cutting Unit.....	04202
14-Blade Cutting Unit.....	04208
Operator Presence Kit	112-9282
Spark Arrestor Kit	117-1441
MVP Filter and Spark Plug Kit.....	30065
Jet-Main, No. 62 (High Altitude)	98-8735
Jet-Main, No. 60 (High Altitude)	98-8736

Notes:

Notes:



Count on it.