


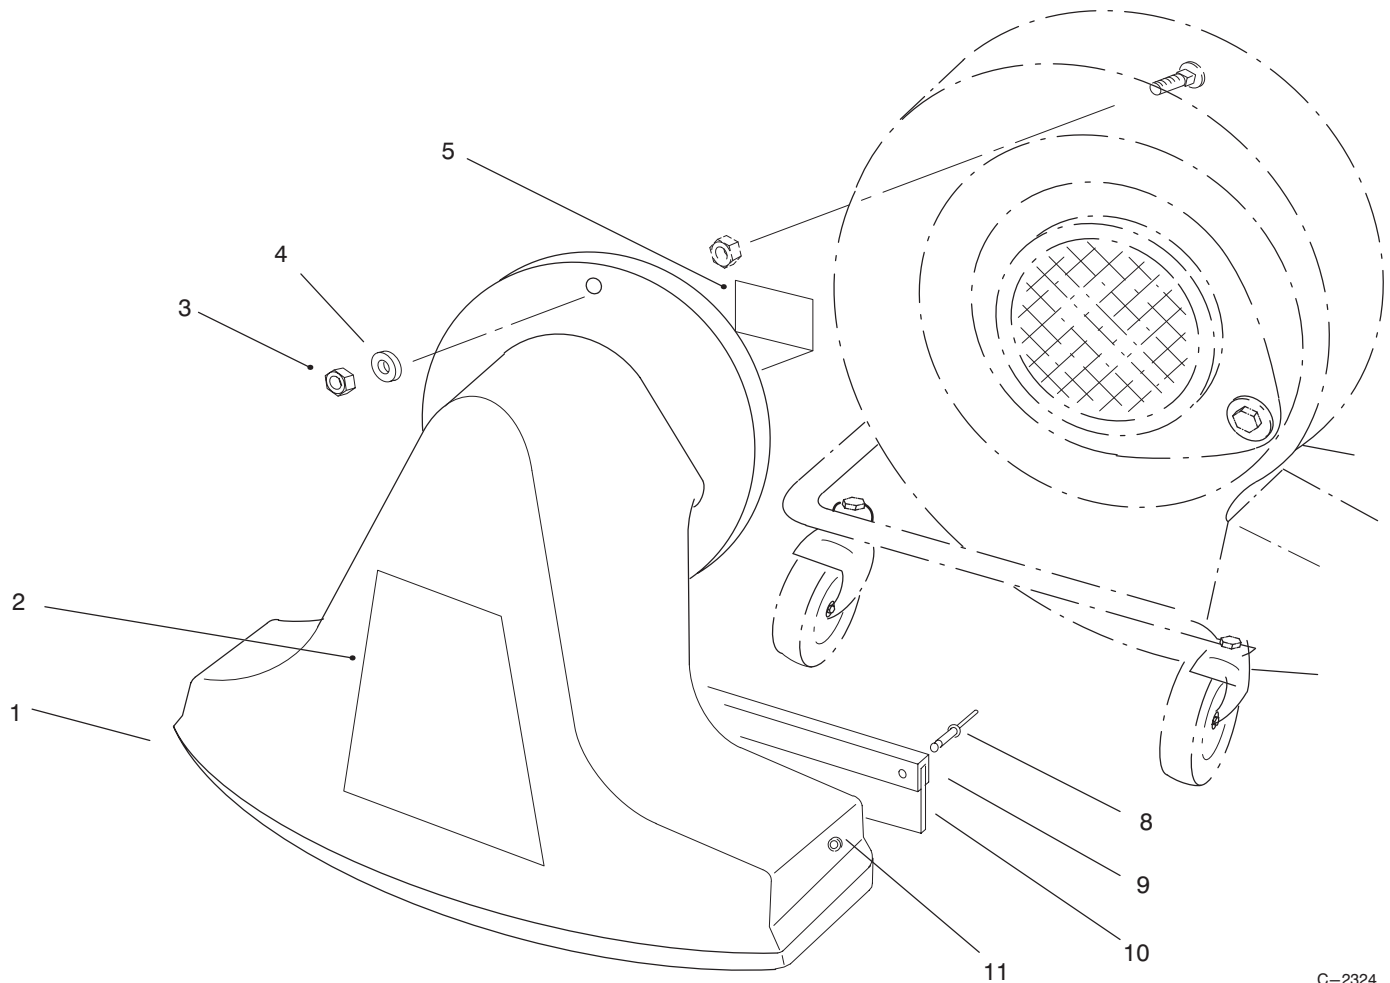

MODEL NO. 62924—6900001 & UP

**PARTS
CATALOG**
5 H.P. LAWN VACUUM, S.P.


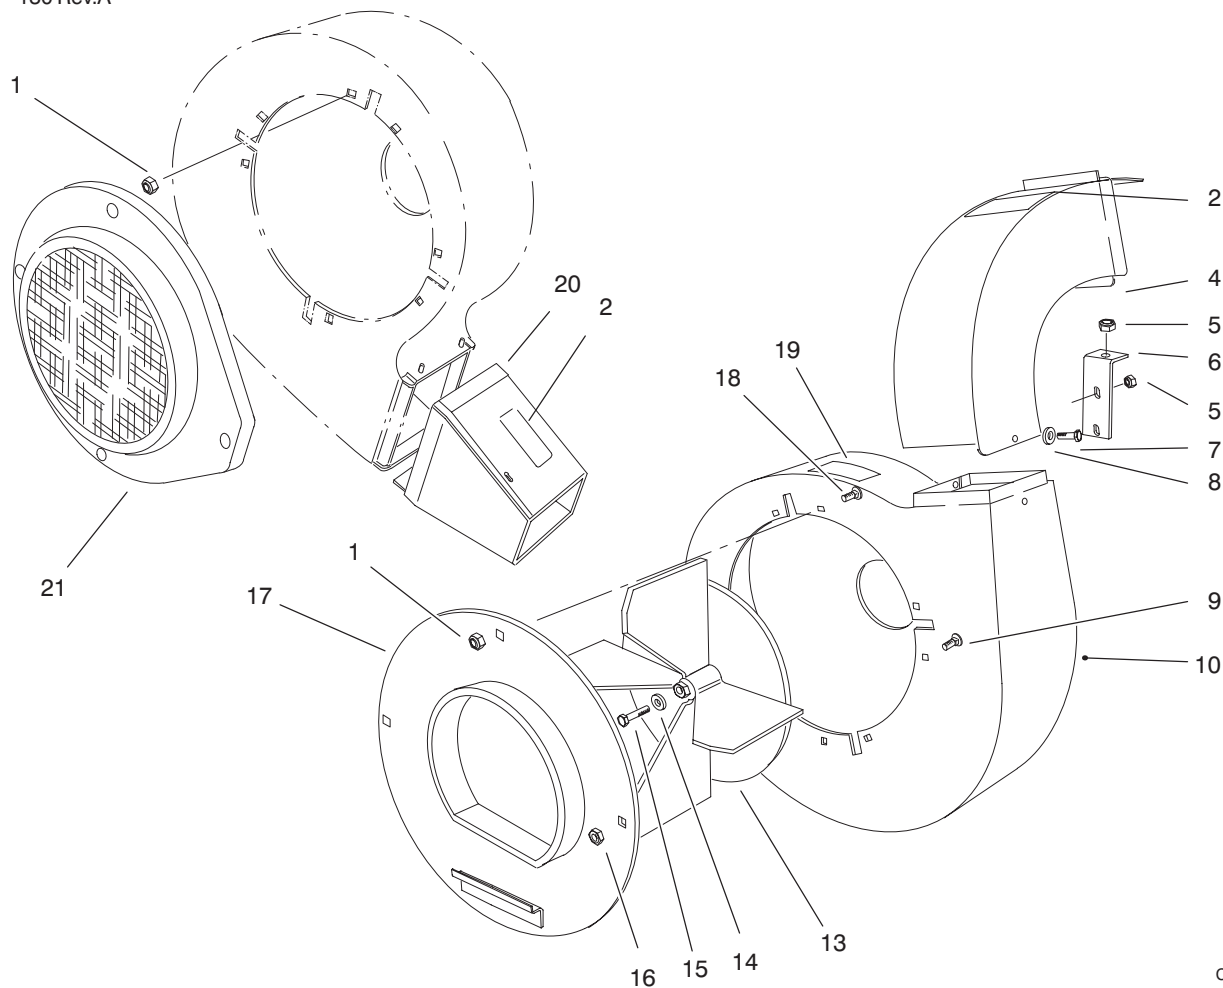
C-2324

SNOUT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	40-7000	Snout Assembly (Incl. Ref.. #1,8-10)	1
2	67-7720	Decal - Toro Vacuum	1
3	3296-58	Nut - Flange Hd.	1
4	3-3391	Washer	1

Ref. No.	Part No.	Description	No. Used
5	93-4139	Decal - Caution	1
8	3290-417	Rivet - Pop	5
9	20-6840	Clamp - Flap	1
10	20-6830	Flap - Rubber	1
11	3256-51	Washer	5

*Not Illustrated




C-2325

BLOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-26	Nut - Flange	1
2	93-4139	Decal - Caution	3
4	20-6130	Chute - Vacuum	1
5	3296-58	Nut - Flange Lock	3
6	39-4660	Bracket - Housing	1
7	321-4	Screw	1
8	3290-436	Washer - Lock	1
9	3230-18	Bolt - Carriage	3
10	20-5890	Housing - Blower	1


Ref. No.	Part No.	Description	No. Used
13	93-3677	Fan Assembly	1
14	3290-340	Washer - Lock	1
15	3211-5	Screw	1
16	3296-29	Nut - Lock	3
17	20-5450	Cover - Blower	1
18	57-3220	Bolt - Carriage	1
19	93-4138	Decal - Warning	1
20	93-4124	Blower - Exhaust	1
21	20-5780	Blower - Intake	1

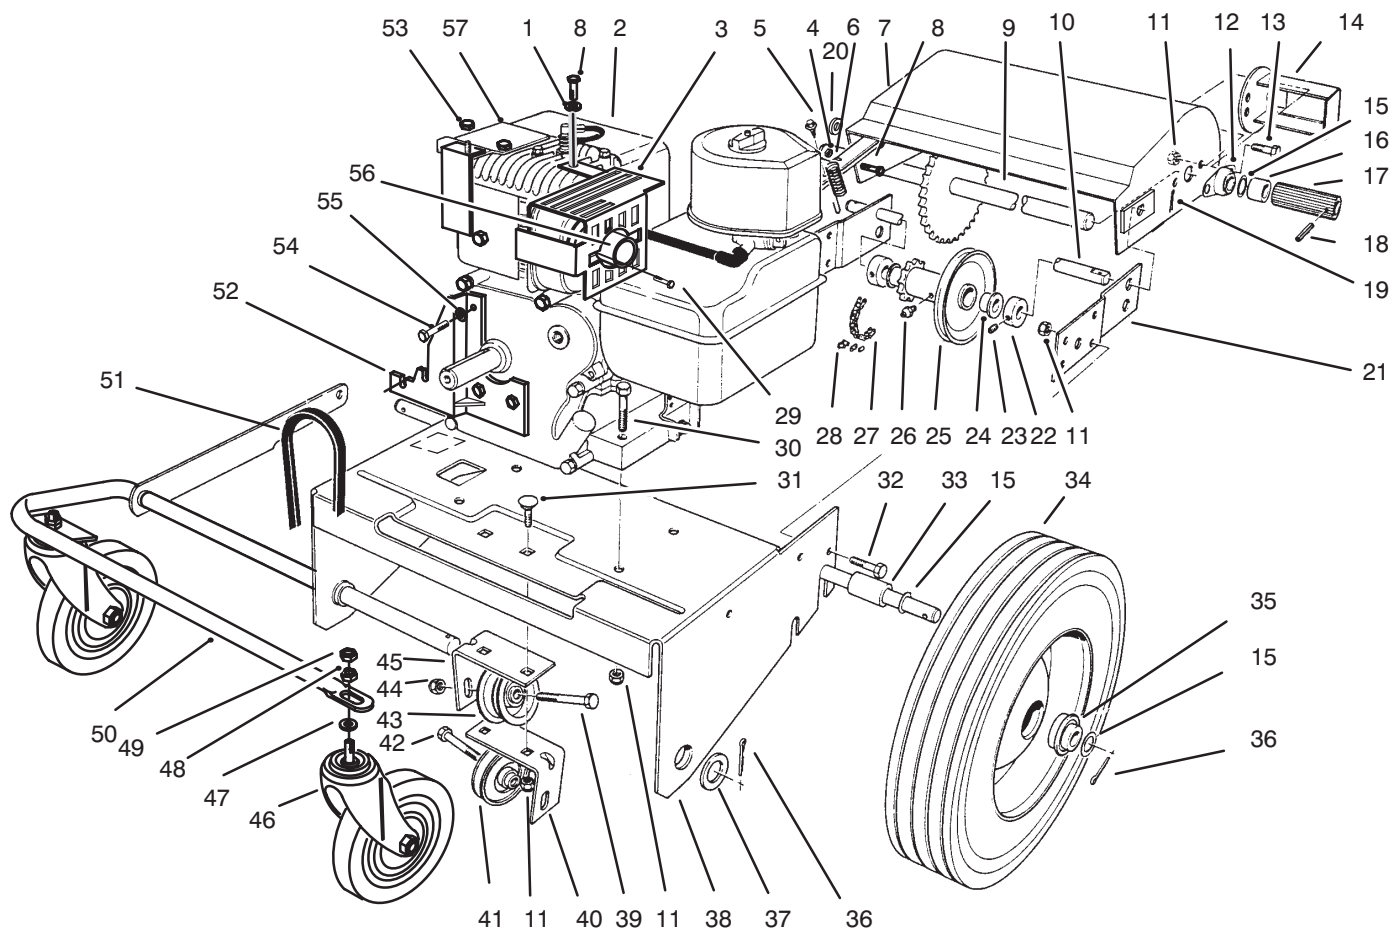

C-2326A

ENGINE & BASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3290-436	Washer - Belleville	1	21	43-6830	Bracket - Mounting	2
2		Engine	1	22	20-5950	Collar (Incl. Ref.. #23)	2
3	93-7692	Shield - Muffler	1	23	3245-38	Screw - Set	2
4	3296-42	Nut	1	24	256-105	Bushing - Flange	2
5	32140-32	Screw - Self Tapping	1	25	20-6000	Idler Assembly (Incl. Ref.. #24 & 26)	1
6	23-3520	Spring	1	26	302-5	Fitting - Grease	1
7	93-8461	Guard	1	27	3-3434	Chain (Incl. Ref.. #28)	1
8	321-4	Screw	2	28	2710-31	Link - Connecting	1
9	20-7270	Shaft - Friction	1	29	93-9841	Screw	4
10	20-5870	Shaft	1	30	322-8	Screw	4
11	3296-29	Nut	14	31	3230-16	Bolt - Carriage	2
12	256-236	Bearing	2	32	322-5	Screw	6
13	322-2	Screw - Hex. Hd.	4	33	20-5410	Spacer - Axle	2
14	37-9210	Guard	2	34	20-6100	Wheel (Incl. Ref.. #35)	2
15	7-3590	Washer	7	35	251-258	Bearing	4
16	20-5460	Spacer	2	36	3272-17	Pin - Cotter	3
17	20-5960	Wheel - Friction	2	37	3256-29	Washer - Flat	1
18	32121-4	Pin - Roll	2	38	20-5560	Plate - Engine	1
19	3272-7	Pin - Cotter	2	39	323-10	Screw	1
20	3256-26	Washer	1				

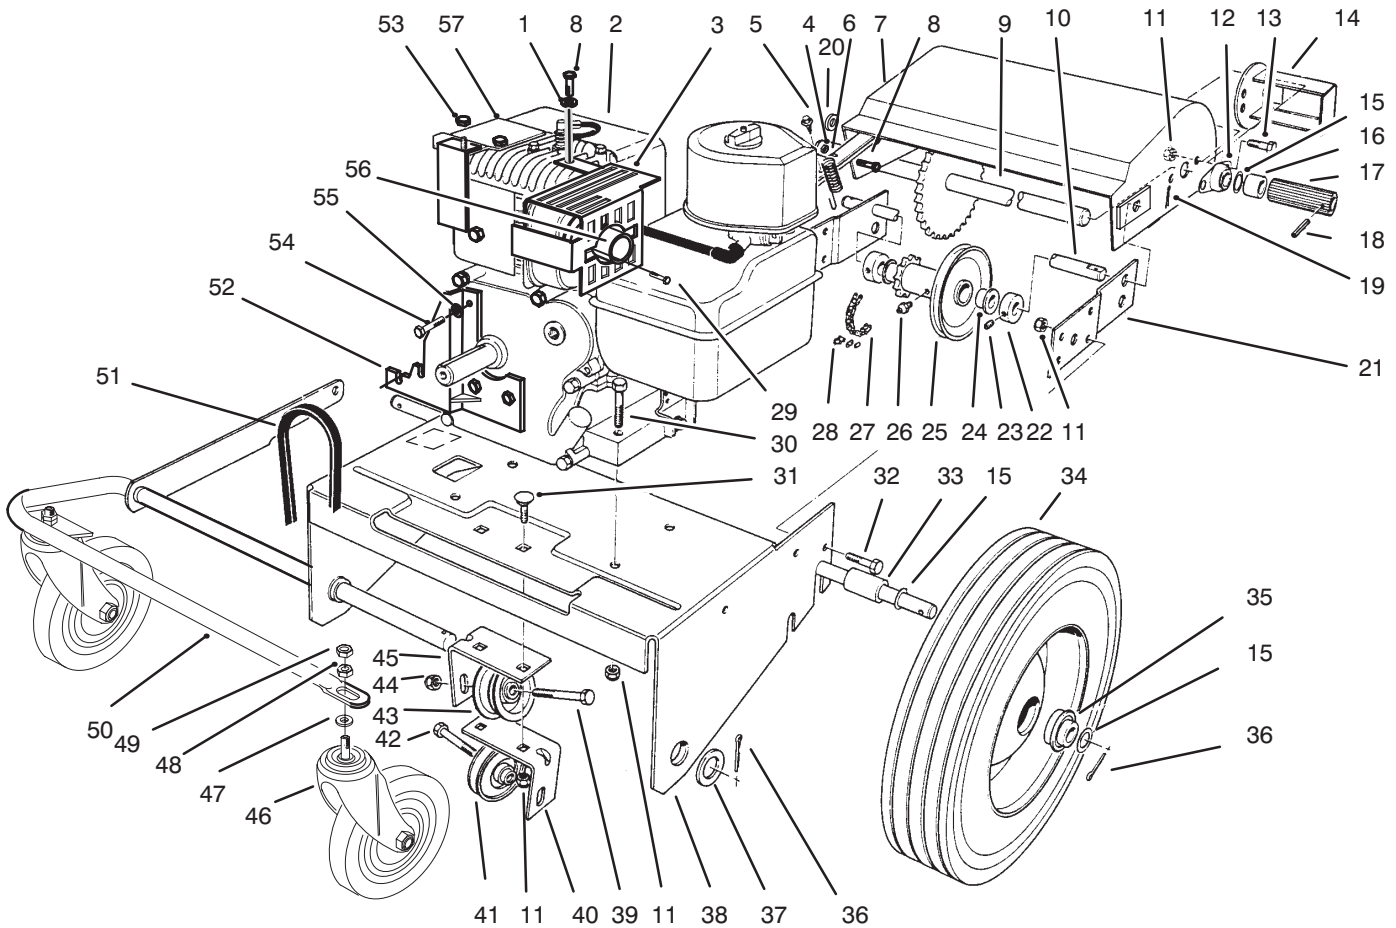


C-2326A

ENGINE & BASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
40	20-8690	Bracket — Idler Mount L.H.	1
41	12-5820	Pulley — Idler	1
42	323-19	Screw	1
43	12-6700	Pulley — Idler	1
44	3296-39	Nut	2
45	20-8680	Bracket — Idler Mount R.H.	1
46	23-3320	Caster	2
47	3254-4	Washer — Lock	2
48	3217-9	Nut	2

Ref. No.	Part No.	Description	No. Used
49	3296-23	Nut — Lock	2
50	93-4146	Support — Front Wheel	1
51	20-5990	"V" Belt	1
52	93-7414	Guard	1
53	3296-58	Nut	1
54	3210-2	Screw	3
55	3253-4	Washer — Lock	3
56	93-8721	Extension — Exhaust	1
57	39-4680	Bracket — Mounting	1

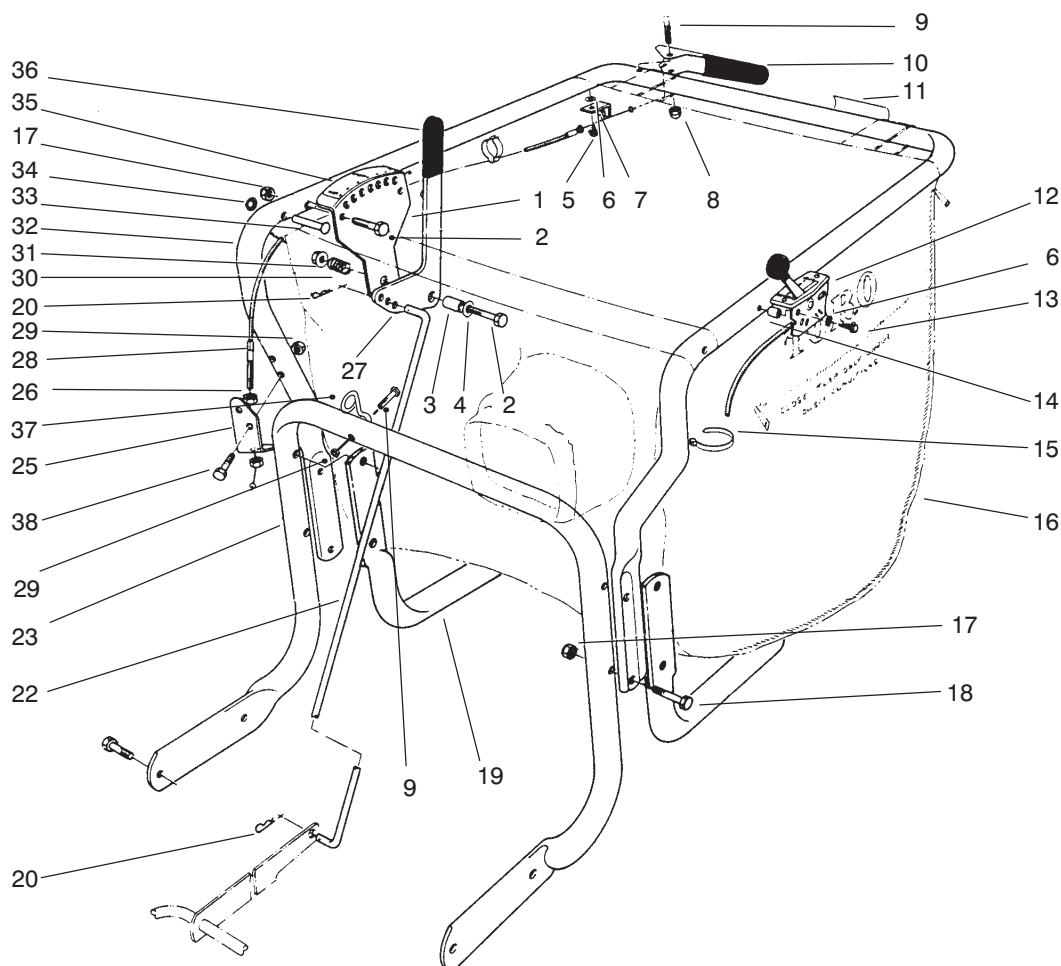


C-2327A

CONTROL & HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	20-5820	Bracket - Adjustment	1
2	322-8	Screw	3
3	20-5650	Spacer	1
4	3256-3	Washer - Flat	1
5	32144-112	Screw - Special	1
6	3255-17	Washer - Lock	3
7	20-8780	Ring - Retaining	1
8	32111-7	Nut	1
9	321-10	Screw	2
10	93-8464	Lever	1
11	93-4141	Decal - Traction Control	1
12	23-3610	Throttle Control	1
13	32104-72	Screw - Self Tapping	2
14	23-3620	Spacer	2
15	3290-378	Cable Tie	2
16	71-3540	Bag - Vacuum	1
17	3296-29	Nut - Lock	6
18	322-9	Screw - Hex. Hd.	4

Ref. No.	Part No.	Description	No. Used
19	66-1640	Support - Bag	1
20	3290-250	Pin - Cotter	2
22	33-2410	Rod - Connecting	1
23	93-9331	Handle - Lower	1
25	33-2830	Mount - Bodine	1
26	32149-5	Nut	2
27	23-3410	Handle - Adjustment	1
28	93-8463	Cable - Forward	1
29	3296-42	Nut - Lock	3
30	83-9690	Spring	1
31	32128-13	Nut - Flange	1
32	23-3570	Handle - Upper	1
33	3263-9	Rivet	2
34	3290-418	Nut - Push On	2
35	93-4137	Decal - Adjustment	1
36	3-7877	Grip - Handle	1
37	46-8082	Guide - Rope	1
38	321-9	Screw - Hex Hd. Cap	2

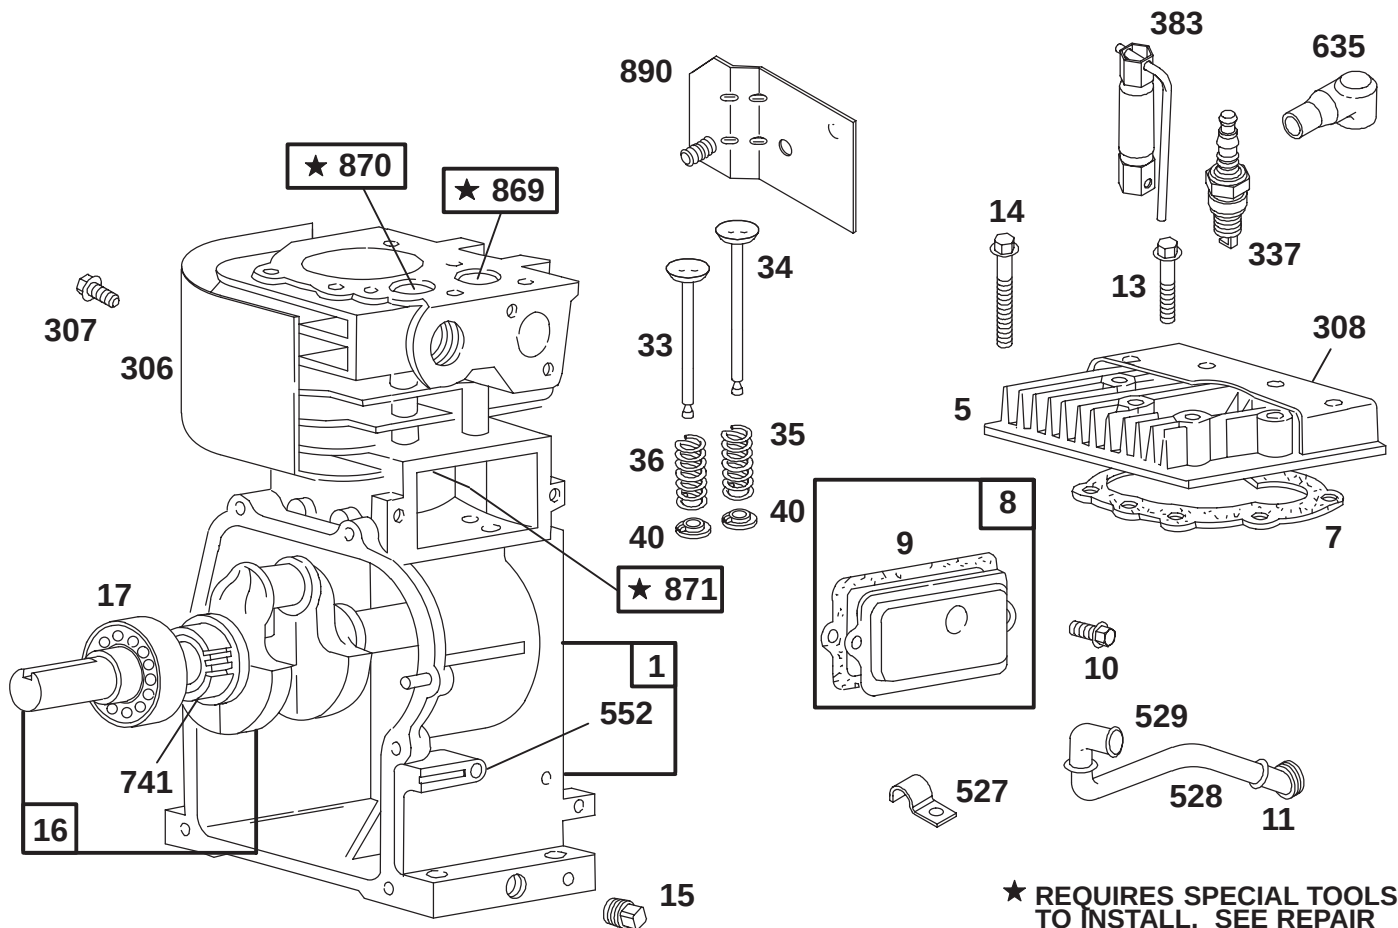

Assemblies include all parts shown in frames.

★ REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.


ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used
1	395990	Cylinder Assembly	1
5	214040	Head—Cylinder	1
★7	272157	Gasket—Cylinder Head	1
8	495774	Breather Assy.	1
★9	27549	Gasket—Breather	1
10	94621	Screw—Breather Mtg.	1
11	66578	Grommet	1
13	94221	Screw—Cylinder Head	1
14	94679	Screw—Cylinder Head	1
15	94387	Plug—Oil Drain	1
16	495845	Crankshaft	1
17	494874	Bearing—Ball	1
33	211119	Valve—Exhaust	1
34	261044	Valve—Intake	1
35	260552	Spring—Valve (Intake)	1
36	26478	Spring—Valve (Ex.)	1
40	93312	Retainer—Valve	1

Ref. No.	Part No.	Description	No. Used
307	94680	Screw—Hex. Hd.	1
306	221511	Shield—Cylinder	1
308	224738	Cover—Cylinder Head	1
308A	224740	Cover—Cylinder Head	1
337	802592	Plug—Spark	1
383	89838	Wrench—Spark Plug	1
527	223786	Clamp—Tube	1
528	231550	Tube—Breather	1
529	67838	Grommet	1
552	231079	Bushing—Gov. Crank	1
635	66538	Elbow—Spark Plug	1
741	262992	Gear—Timing	1
869	211787	Seat—Int. Valve	1
870	211172	Seat—Ex. Valve	1
871	262001	Guide—Exhaust Valve	1
890	496783	Bracket—Mounting	1

★ Included in Gasket Set—Part No. 495603.

● Included in Carburetor Overhaul Kit—Part No. 495606.

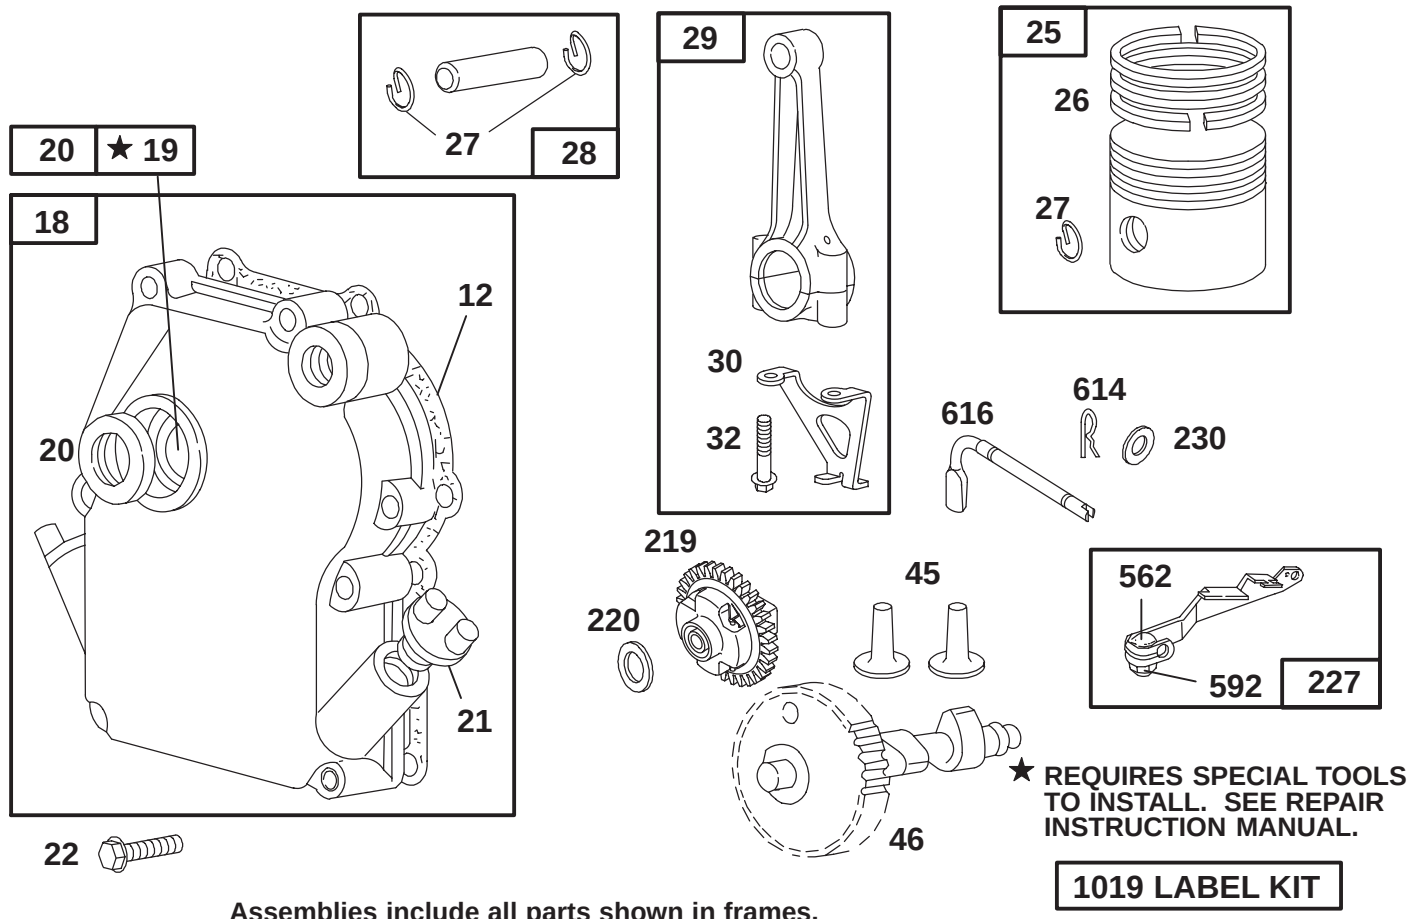


ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★12	270080	Gasket—Crankcase (.015" Thick, Std.)	1	28	298909	Pin Assy.—Piston (Std.)	1
★	270125	Gasket—Crankcase (.005" Thick)	1		298908	Pin Assy.—Piston (.005" O.S.)	1
★	270126	Gasket—Crankcase (.009" Thick)	1	29	299430	Rod Assy.—Connecting	1
18	494044	Cover Assy.—Crkcase.	1		390985	Rod Conn. (.020" U.S.)	1
19	495660	Bushing—Crankcase Cover	1			Pin Bore	1
★20	294606	Seal—Oil	1	30	221890	Dipper—Conn. Rod	1
21	66768	Plug—Oil Filler	1	32	94745	Screw—Conn. Rod	1
22	94682	Screw—Cover Mtg.	1	45	260642	Tappet—Valve	1
25	298904	Piston Assy. (Std.)	1	46	212733	Gear—Cam	1
	298905	Piston Assy. (.010" O.S.)	1	219	494845	Gear—Governor	1
	298906	Piston Assy. (.020" O.S.)	1	220	221551	Washer—Thrust	1
	298907	Piston Assy. (.030" O.S.)	1	227	490374	Lever Assy.—Governor	1
26	298982	Ring Set—Piston Std.	1	230	222450	Washer—Gov. Lever	1
	298983	Ring Set—Piston (.010" O.S.)	1	562	92613	Bolt—Governor Lever	1
	298984	Ring Set—Piston (.020" O.S.)	1	592	231082	Nut—Hex.	1
	298985	Ring Set—Piston (.030" O.S.)	1	614	93306	Pin—Cotter	1
27	26026	Lock—Piston Pin	1	615	93307	Retainer—E-Ring	1
		Note: For Chrome Ring Set (Std. Size) Order No. 299742		616	231077	Crank—Governor	1
				1019	491102	Label Kit	1

★ Included in Gasket Set—Part No. 495603.

● Included in Carburetor Overhaul Kit—Part No. 495606.

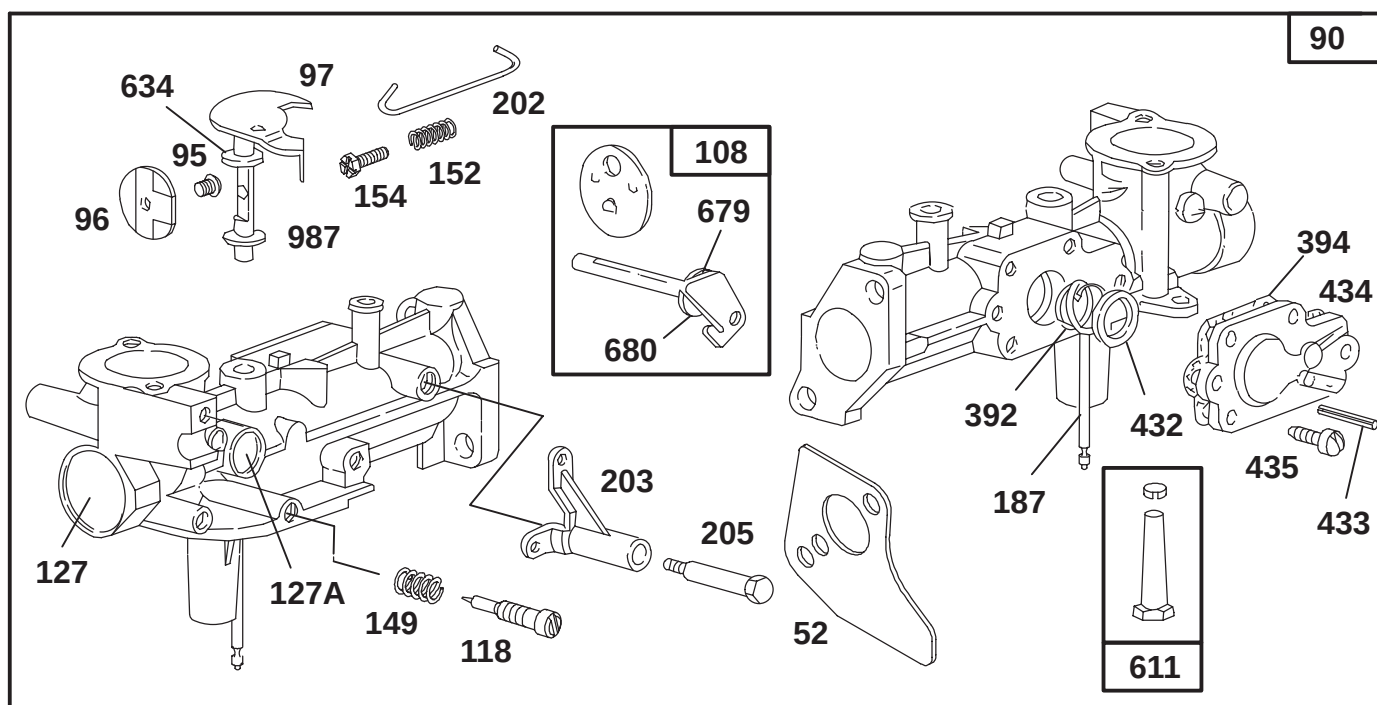

124

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used
★● 52	272585	Gasket-Carb. Mtg.	1
90	495951	Carburetor	1
95	93499	Screw-Sem	1
96	223793	Valve-Throttle	1
97	490048	Shaft-Throttle	1
108	495949	Valve-Choke	1
●118	231533	Valve-Needle	1
124	94616	Screw-Hex. Head	1
127	220352	Plug-Welch	1
127A	223789	Plug-Welch	1
149	26336	Spring-Needle Valve	1
152	260575	Spring-Adjustment	1
154	93527	Screw-Rd. Hd.	1
187	231068	Pipe-Fuel Pick-up	1

Ref. No.	Part No.	Description	No. Used
202	262270	Link-Throttle	1
203	280720	Crank-Bell	1
205	231520	Screw-Shoulder	1
392	262328	Spring-Diaphragm	1
●394	272538	Diaphragm-Carburetor	1
432	221377	Cap-Spring	1
433	93265	Pin-Diaphragm Cover	1
434	214021	Cover-Diaphragm	1
435	93141	Screw-Sem	1
611	391813	Tube-Pick-Up	1
634	271853	Washer-Throttle Shaft	1
679	270382	Washer-Foam	1
680	221839	Washer-Brass	1
987	398970	Seal-Throttle Shaft	1

★ Included in Gasket Set-Part No. 495603.

● Included in Carburetor Overhaul Kit-Part No. 495606.

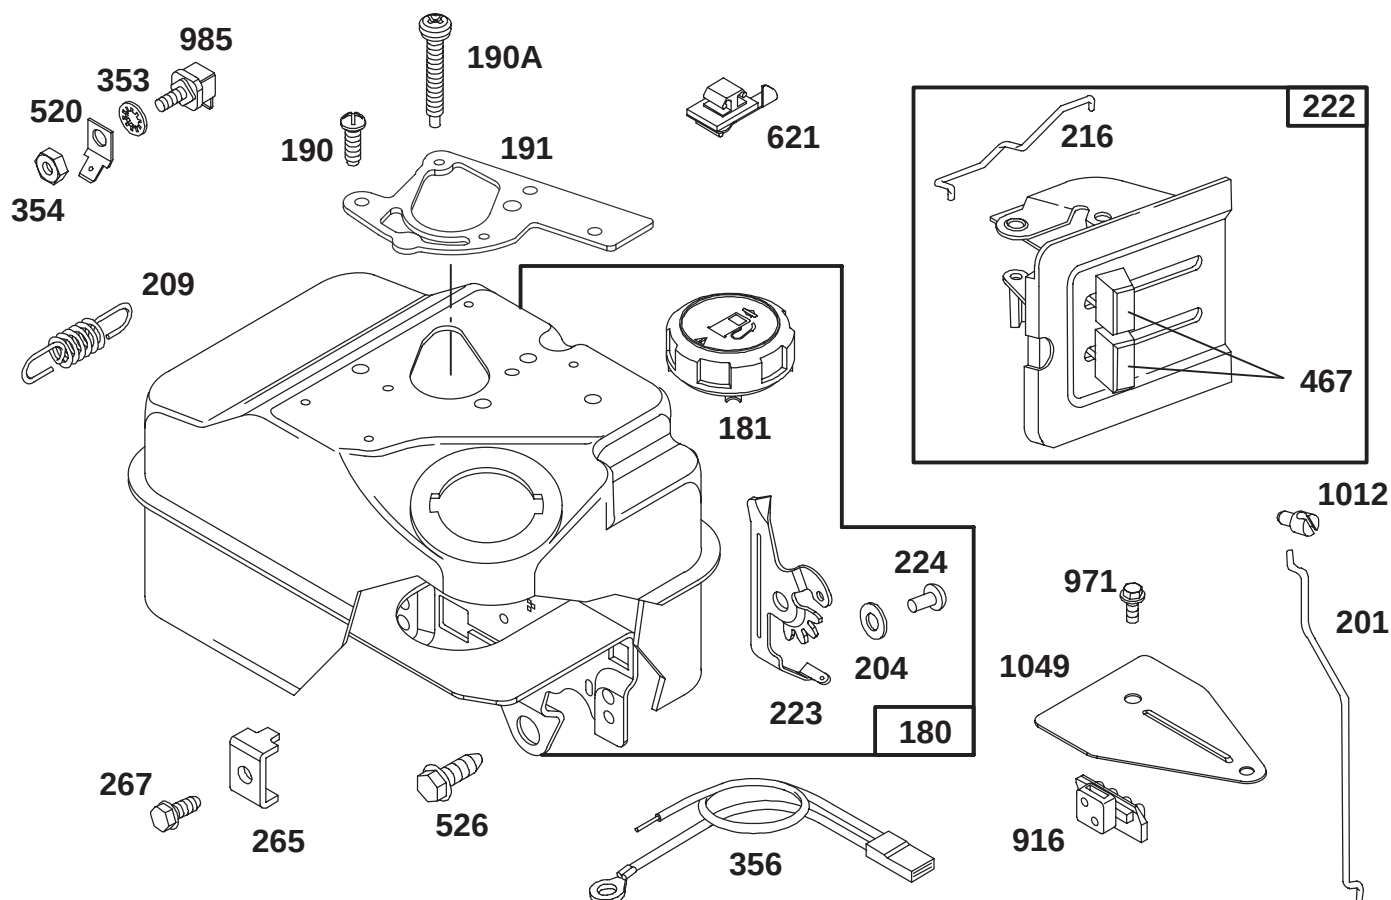

Assemblies include all parts shown in frames.





ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used
180	495405	Tank—Fuel	1
181	494559	Cap—Fuel Tank	1
190	94712	Screw—Sem	1
190A	94677	Screw—Sem	1
★●191	272489	Gasket—Tank Mtg.	1
201	262280	Link—Governor	1
204	222962	Bushing—Lever	1
209	262283	Spring—Governor	1
216	262359	Link—Choke	1
222	490649	Bracket—Control	1
223	223455	Lever—Gov. Control	1
224	93491	Rivet—Tubular	1
265	221535	Clamp—Casing	1
267	93496	Screw—Sem	1
353	92791	Washer—Lock	1
354	90576	Nut—Hex.	1
356	398808	Wire—Ground	1
467	280715	Knob	1
520	93722	Terminal	1
526	94659	Screw—Sem	1
621	396847	Switch—Stop	1
916	280324	Rack—Gov. Gear	1

Ref. No.	Part No.	Description	No. Used
971	93572	Screw	1
985	398525	Insulator	1
1012	490507	Retainer—Link	1
1049	224728	Support—Control	1
414	220982	Washer	1
414A	221198	Washer	1
971	94018	Screw—Hex. Hd.	1
995	223814	Bracket—Link	1
1012	490507	Retainer—Link	1
1049	224728	Support—Control	1
224	93491	Rivet—Gov. Control Lever	1
265	221535	Clamp—Casing	1
267	93496	Screw—Sem	1
353	92791	Washer—Lock	1
354	90576	Nut—Hex.	1
356A	398808	Wire—Ground	1
520	93722	Terminal—Spade	1
526	94659	Screw—Tank Bracket Mtg.	1
621	396847	Switch—Stop	1
916	280324	Rack—Gear Control	1
985	398525	Insulator Assy.	1

★ Included in Gasket Set—Part No. 495603.

- Included in Carburetor Overhaul Kit—Part No. 495606.

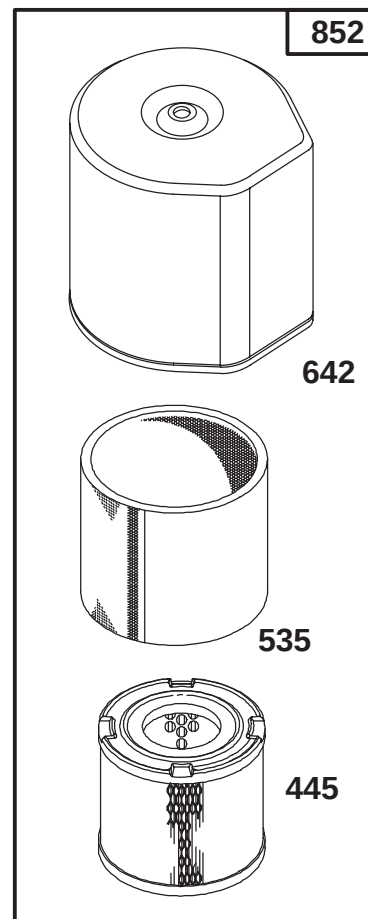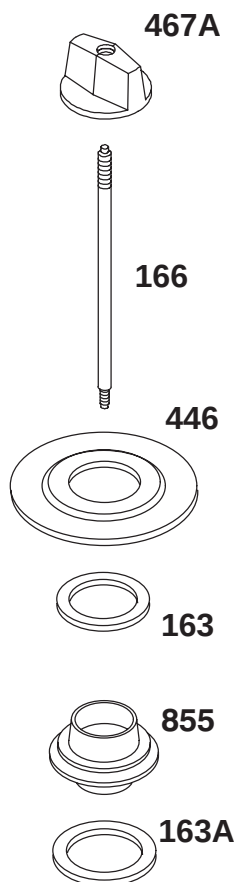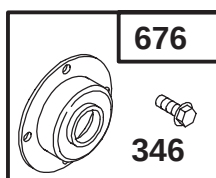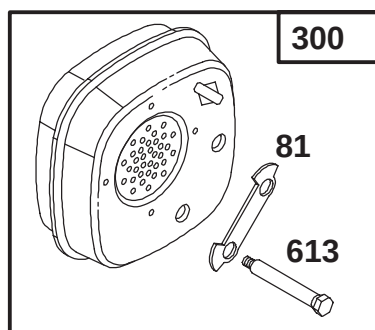

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used
81	222263	Lock—Screw	1
★●163	271139	Gasket—Air Cleaner	1
★163A	272631	Gasket—Air Cleaner	1
166	231819	Stud—Air Cleaner	1
300	393615	Muffler—Exhaust	1
346	93705	Screw—Sem	1
445	396424	Filter—Air	1
446	222844	Base—Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
467A	493903	Knob	1
535	271466	Filter—Air	1
613	93935	Screw—Hex. Head	1
642	493822	Cover—Air Cleaner	1
676	395700	Deflector—Exhaust	1
852	396397	Air Cleaner Assembly	1
855	281189	Adapter—Air Cleaner	1

★ Included in Gasket Set—Part No. 495603.

● Included in Carburetor Overhaul Kit—Part No. 495606.

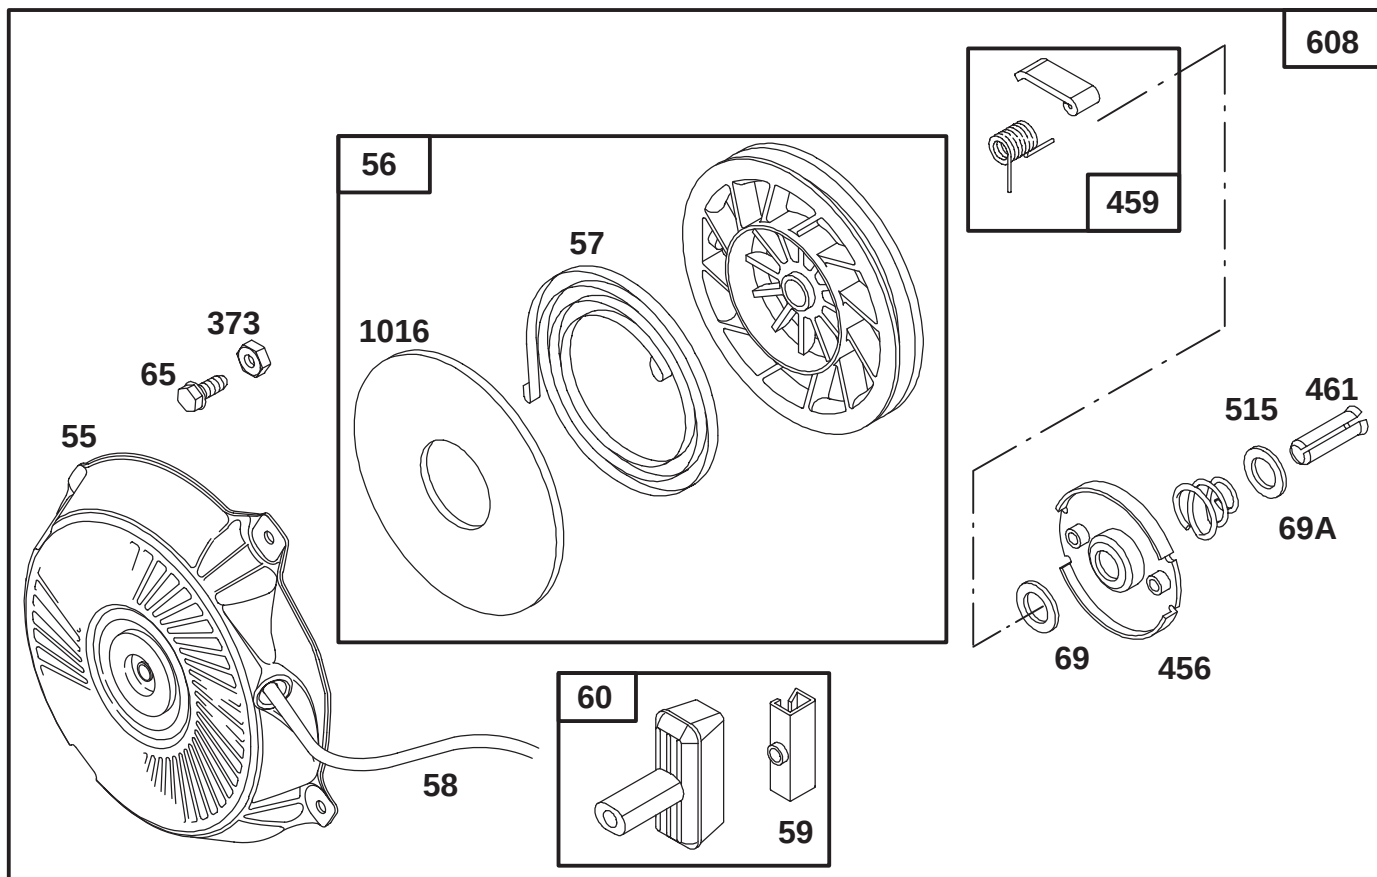


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used
55	494846	Housing—Rewind Starter	1
56	493824	Pulley—Starter	1
57	262594	Spring—Rewind Starter	1
58	280406	Rope—Starter (Cut to Length)	1
59	224467	Insert—Starter Handle	1
60	494212	Handle—Rewind Starter	1
65	94686	Screw—Housing Mtg.	1
69	280973	Washer	1

Ref. No.	Part No.	Description	No. Used
69A	224322	Washer	1
373	92987	Nut—Hex.	1
456	224321	Retainer—Spring	1
459	492833	Pawl—Ratchet	1
461	262626	Pin—Spring	1
515	262625	Spring	1
608	495766	Starter—Rewind	1
1016	224278	Spacer	1

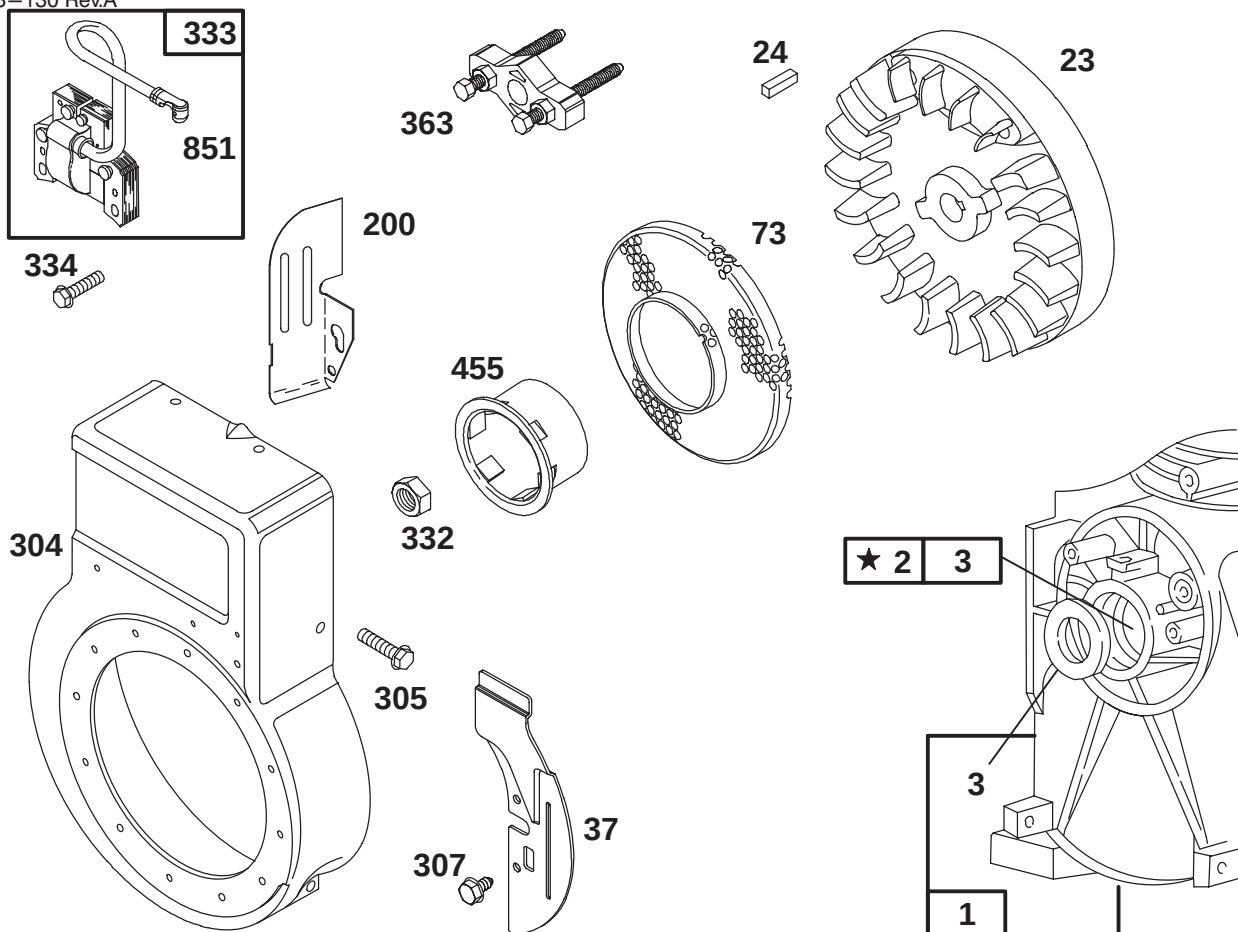



Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used
1	395990	Cylinder Assembly	1
2	399268	Bushing	1
★3	299819	Seal-Oil	1
23	297229	Flywheel	1
24	222698	Key-Flywheel	1
37	222443	Guard-Flywheel	1
73	224632	Screen-Rotating	1
200	223886	Guide-Air	1
304	495759	Housing-Blower	1

Ref. No.	Part No.	Description	No. Used
305	94786	Screw-Sem	1
307	94680	Screw-Sem	1
332	92284	Nut-Flywheel	1
333	397358	Armature Group	1
334	93414	Screw-Sem	1
363	19069	Flywheel Puller	1
455	224250	Cup-Flywheel	1
851	221798	Terminal-Cable	1

★ Included in Gasket Set-Part No. 495603.

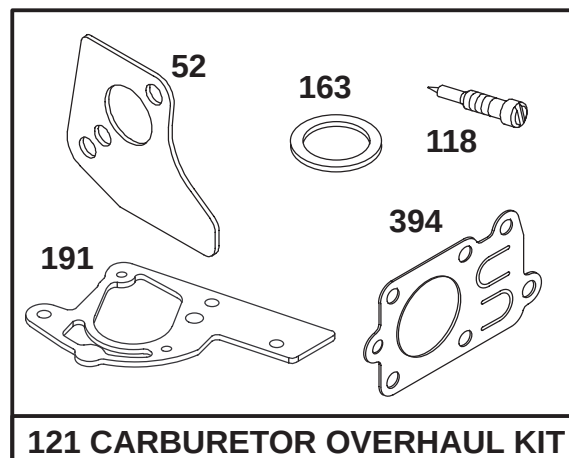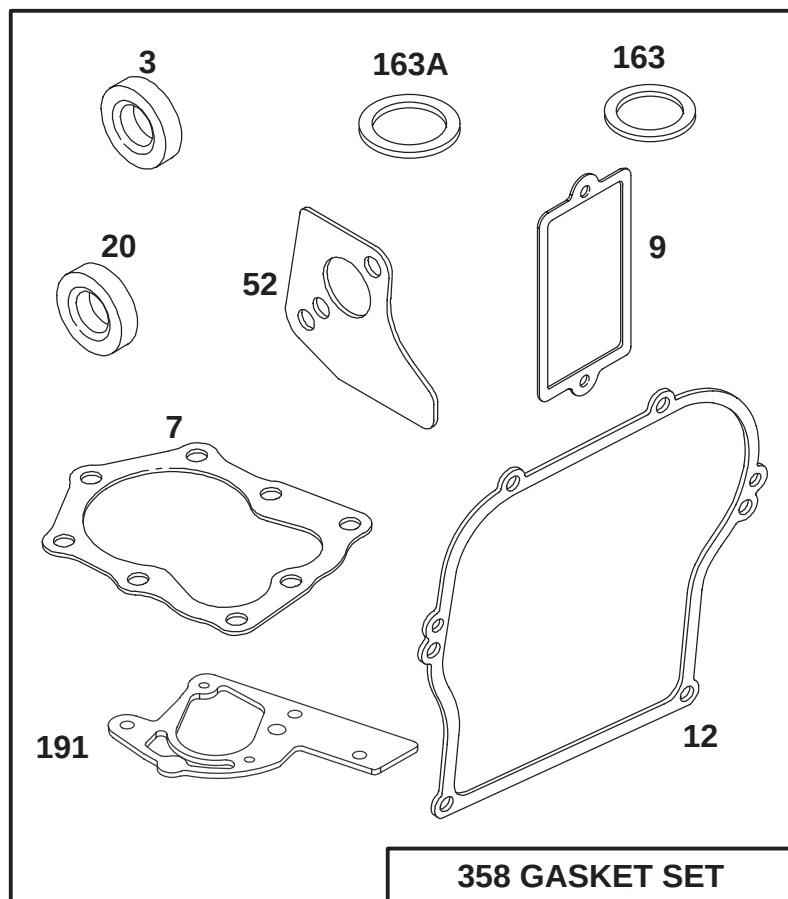

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal—Oil	1
★7	272157	Gasket—Cylinder Head	1
★9	27549	Gasket—Breather	1
★12	270080	Gasket—Crankcase (.015" Thick, Std.)	1
★	270125	Gasket—Crankcase (.005" Thick)	1
★	270126	Gasket—Crankcase (.009" Thick)	1

Ref. No.	Part No.	Description	No. Used
★20	294606	Seal—Oil	1
★●52	272585	Gasket—Carburetor Mtg.	1
●118	231533	Valve—Needle	1
121	495606	Carburetor Overhaul Kit	1
★●163	271139	Gasket—Air Cleaner	1
★163A	272631	Gasket—Air Cleaner	1
★●191	272489	Gasket—Tank	1
358	495603	Gasket Set	1
●394	272538	Diaphragm—Carburetor	1

★ Included in Gasket Set—Part No. 495603.

● Included in Carburetor Overhaul Kit—Part No. 495606.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.

[illegible]

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3—3391	Washer	1 4 1	93—9841	Screw	3 29 4
3—3434	Chain	3 27 1	251—258	Bearing	3 35 4
3—7877	Grip — Handle	5 36 1	256—105	Bushing — Flange	3 24 2
7—3590	Washer	3 15 7	256—236	Bearing	3 12 2
12—5820	Pulley — Idler	4 41 1	2710—31	Link — Connecting	3 28 1
12—6700	Pulley — Idler	4 43 1	302—5	Fitting — Grease	3 26 1
20—5410	Spacer — Axle	3 33 2	321—4	Screw	3 8 2
20—5450	Cover — Blower	2 17 1	321—4	Screw	2 7 1
20—5460	Spacer	3 16 2	321—9	Screw — Hex Hd. Cap	5 38 2
20—5560	Plate — Engine	3 38 1	321—10	Screw	5 9 2
20—5650	Spacer	5 3 1	322—2	Screw — Hex. Hd.	3 13 4
20—5780	Blower — Intake	2 21 1	322—5	Screw	3 32 6
20—5820	Bracket — Adjustment	5 1 1	322—8	Screw	5 2 3
20—5870	Shaft	3 10 1	322—8	Screw	3 30 4
20—5890	Housing — Blower	2 10 1	322—9	Screw — Hex. Hd.	5 18 4
20—5950	Collar	3 22 2	323—10	Screw	3 39 1
20—5960	Wheel — Friction	3 17 2	323—19	Screw	4 42 1
20—5990	VBelt	4 51 1	3210—2	Screw	4 54 3
20—6000	Idler Assembly	3 25 1	3211—5	Screw	2 15 1
20—6100	Wheel	3 34 2	3217—9	Nut	4 48 2
83—9690	Spring	5 30 1	3230—16	Bolt — Carriage	3 31 2
20—6130	Chute — Vacuum	2 4 1	3230—18	Bolt — Carriage	2 9 3
20—6830	Flap — Rubber	1 10 1	3245—38	Screw — Set	3 23 2
20—6840	Clamp — Flap	1 9 1	3253—4	Washer — Lock	4 55 3
20—7270	Shaft — Friction	3 9 1	3254—4	Washer — Lock	4 47 2
20—8680	Bracket — Idler Mount R.H.	4 45 1	3255—17	Washer — Lock	5 6 3
20—8690	Bracket — Idler Mount L.H.	4 40 1	3256—3	Washer — Flat	5 4 1
20—8780	Ring — Retaining	5 7 1	3256—26	Washer	3 20 1
23—3320	Caster	4 46 2	3256—29	Washer — Flat	3 37 1
23—3410	Handle — Adjustment	5 27 1	3256—51	Washer	1 11 5
23—3520	Spring	3 6 1	3263—9	Rivet	5 33 2
23—3570	Handle — Upper	5 32 1	3272—7	Pin — Cotter	3 19 2
23—3610	Throttle Control	5 12 1	3272—17	Pin — Cotter	3 36 3
23—3620	Spacer	5 14 2	3290—250	Pin — Cotter	5 20 2
33—2410	Rod — Connecting	5 22 1	3290—340	Washer — Lock	2 14 1
33—2830	Mount — Bodine	5 25 1	3290—378	Cable Tie	5 15 2
37—9210	Guard	3 14 2	3290—417	Rivet — Pop	1 8 5
39—4660	Bracket — Housing	2 6 1	3290—418	Nut — Push On	5 34 2
39—4680	Bracket — Mounting	4 57 1	3290—436	Washer — Belleville	3 1 1
40—7000	Snout Assembly	1 1 1	3290—436	Washer — Lock	2 8 1
43—6830	Bracket — Mounting	3 21 2	3296—23	Nut — Lock	4 49 2
46—8082	Guide — Rope	5 37 1	3296—29	Nut	3 11 14
57—3220	Bolt — Carriage	2 18 1	3296—29	Nut — Lock	2 16 3
66—1640	Support — Bag	5 19 1	3296—29	Nut — Lock	5 17 6
71—3540	Bag — Vacuum	5 16 1	3296—39	Nut	4 44 2
93—3677	Fan Assembly	2 13 1	3296—42	Nut	3 4 1
93—4124	Blower — Exhaust	2 20 1	3296—42	Nut — Lock	5 29 3
93—4137	Decal — Adjustment	5 35 1	3296—58	Nut	4 53 1
93—4138	Decal — Warning	2 19 1	3296—58	Nut — Flange Hd.	1 3 1
93—4139	Decal — Caution	2 2 3	3296—58	Nut — Flange Lock	2 5 3
93—4139	Decal — Caution	1 5 1	32104—72	Screw — Self Tapping	5 13 2
93—4141	Decal — Traction Control	5 11 1	32111—7	Nut	5 8 1
93—4146	Support — Front Wheel	4 50 1	32121—4	Pin — Roll	3 18 2
93—7414	Guard	4 52 1	32128—13	Nut — Flange	5 31 1
93—7692	Shield — Muffler	3 3 1	32128—26	Nut — Flange	2 1 1
93—8461	Guard	3 7 1	32140—32	Screw — Self Tapping	3 5 1
93—8463	Cable — Forward	5 28 1	32144—112	Screw — Special	5 5 1
93—8464	Lever	5 10 1	32149—5	Nut	5 26 2
93—8721	Extension — Exhaust	4 56 1			
93—9331	Handle — Lower	5 23 1			

*Not Illustrated