



Count on it.

Parts Catalog

Reelmaster® 3500-D

4 Wheel Drive Traction Unit

Model No. 03603—Serial No. 60001 and Up

Model No. 03603TE—Serial No. 60001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CCW: counter clock wise

CW: clockwise

CW: clockwise

DEG: degrees

ECM: electronic control module

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Frame and Body Assembly	5
Front Transaxle Installation Assembly	7
Transaxle Assembly No. 88-1260	9
Hydraulic Motor No. 92-2556	11
Front Axle Assembly	12
Brake Linkage Assembly	13
Traction and Brake Pedal Assembly	15
Steering Tower Assembly	16
Power Steering Valve No. 92-9729	18
Seat Plate Assembly	19
Electrical Schematic	20
Control Console Assembly	21
Gage Panel Assembly	23
Lift Valve Installation Assembly	24
Lift Valve Assembly No. 92-1398	25
Fuel Tank Assembly	26
Fuel Filter Assembly No. 76-5300	27
Front Hydraulic Assembly	28
Hydraulic Reservoir Assembly	30
Hydraulic Pump Installation Assembly	32
Gear Pump Assembly No. 92-5824	33
Tandem Pump Assembly No. 82-5100	34
Hydraulic Pump Fittings Assembly	35
Engine and Battery Installation Assembly	36
Engine Plumbing Assembly	37
Muffler and Air Cleaner Installation Assembly	38
PCV Valve Plumbing Assembly	39
Crankcase Assembly	40
Crankshaft Assembly	41
Cylinder Head Assembly	42
Camshaft and Fan Support Assembly	45
Belt Cover Assembly	46
Intake and Exhaust Manifold Assembly	47
Oil Pump Assembly	48
Collector Assembly	49
Water Pump Assembly	50
Fuel Injection Pump Assembly	51
Fuel Injector Assembly	52
Alternator Assembly	53
Starter Assembly	54
Glow Plug and Glow Relay Assembly	55
Air Cleaner No. 74-6000	56
Radiator Assembly	57
Additional Weight Assembly	58
Rear Axle Assembly (Unit Serial No. 60001-60151)	59
Rear Axle Assembly (Unit Serial No. 60152 and Up)	61
Solenoid Valve Assembly No. 76-9970	64
Hydraulic Cylinder No. 92-6584	65
Hydraulic Motor No. 76-6580	66
Sleeve Assembly	67
Axle Housing Assembly Axle No. 74-5621 (Unit Serial No. 60001-60151)	68
Axle Housing Assembly Axle No. 93-7780 (Unit Serial No. 60152 and Up)	69
Differential and Shaft Assembly	70
Steering Gear Case Assembly	71

Steering Arm Linkage Assembly 72

Lift Arm Assembly 73


Hydraulic Cylinder No. 74-3440..... 74

Hydraulic Cylinder No. 74-3460..... 75

Reel Motor Assembly No. 74-3390 76

Low Seat Assembly (optional) 77

Roll-Over Protection System Assembly 78

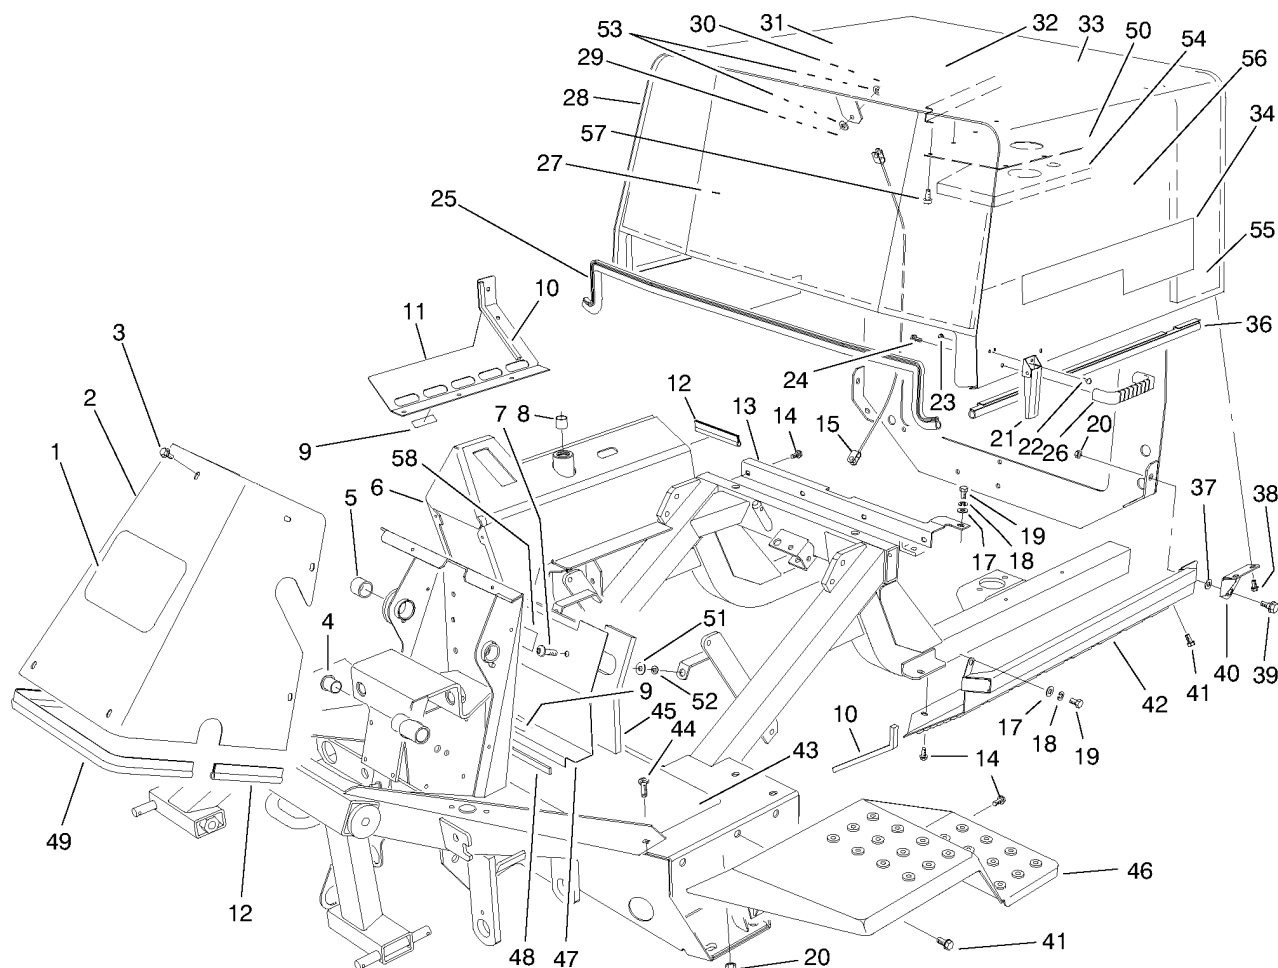


Frame and Body Assembly

Ref.	Part Number	Qty.	Description
1	62-7400	1	Decal
2	76-9700	1	Cover-Tower
3	46-6810	9	Screw And Washer ASM
4	256-10	2	Bushing-Flange
5	256-237	1	Bushing
6	92-6570	1	Frame Assembly (Incl. Ref #4, 5, 8 & 52)
7	3250-36	2	Screw-PPH
8	256-32	2	Bushing
9	70-2560	2	Decal-Oil
9	93-6697	2	Decal-Lube
10	68-7573	2	Strip-Sealing
11	76-8290	1	Support - Tank, Low *b
12	76-6360	2	Strip-Sealing
13	76-8430	1	Front Hood Supt *b
14	32144-11	10	Screw-HWHTF
15	66-2871	1	Cable-Stop, Hood
17	3256-24	2	Washer-Flat
18	3253-21	2	Washer-Lock
19	323-4	2	Screw-HH
20	3290-357	4	Nut-HHF, Whiz
21	69-3020	1	Latch-Camloc
22	3290-359	2	Screw-HWH
23	3296-2	2	Nut-Lock, NI
24	46-8091	2	Screw-HWH
25	76-6470	1	Seal Strip - Firewall

Ref.	Part Number	Qty.	Description
26	65-5100	1	Handle-Door
27	88-1500	1	Foam-Firewall
28	14-7479	1	Hood-Gm 455D
29	3272-10	1	Pin-Cotter
30	283-58	1	Pin-Clevis
31	86-2210	1	Foam-Hood, Top RH
32	86-2220	1	Foam-Hood, Top LH
33	86-2520	1	Foam-Hood, Rear RH
34	92-5823	2	Decal - Rm 3500D
36	76-6460	1	Seal Strip Hood LH
	76-6450	1	Seal Strip Hood RH ●
37	3256-3	4	Washer-Flat
38	3234-14	4	Screw-HHF
39	67-0870	2	Bolt-Shoulder
40	76-9160	1	L/H Hood Pivot Wa *b
	76-9170	1	R/H Hood Pivot Wa *b ●
41	3234-12	9	Screw-HHF
42	82-3600	1	Lower Hood Cover Wa *b
43	74-4090	1	Tread-Rest, Foot
44	3231-22	2	Screw-CARR
45	88-1310	1	Strip-Foam, Cover
46	76-9300	1	Fender L.H.
	76-9340	1	Fender R.H. ●
47	88-1300	1	Panel-Access
48	76-6380	1	Seal-Cover, Front
49	76-6361	1	Strip-Sealing

● Not illustrated

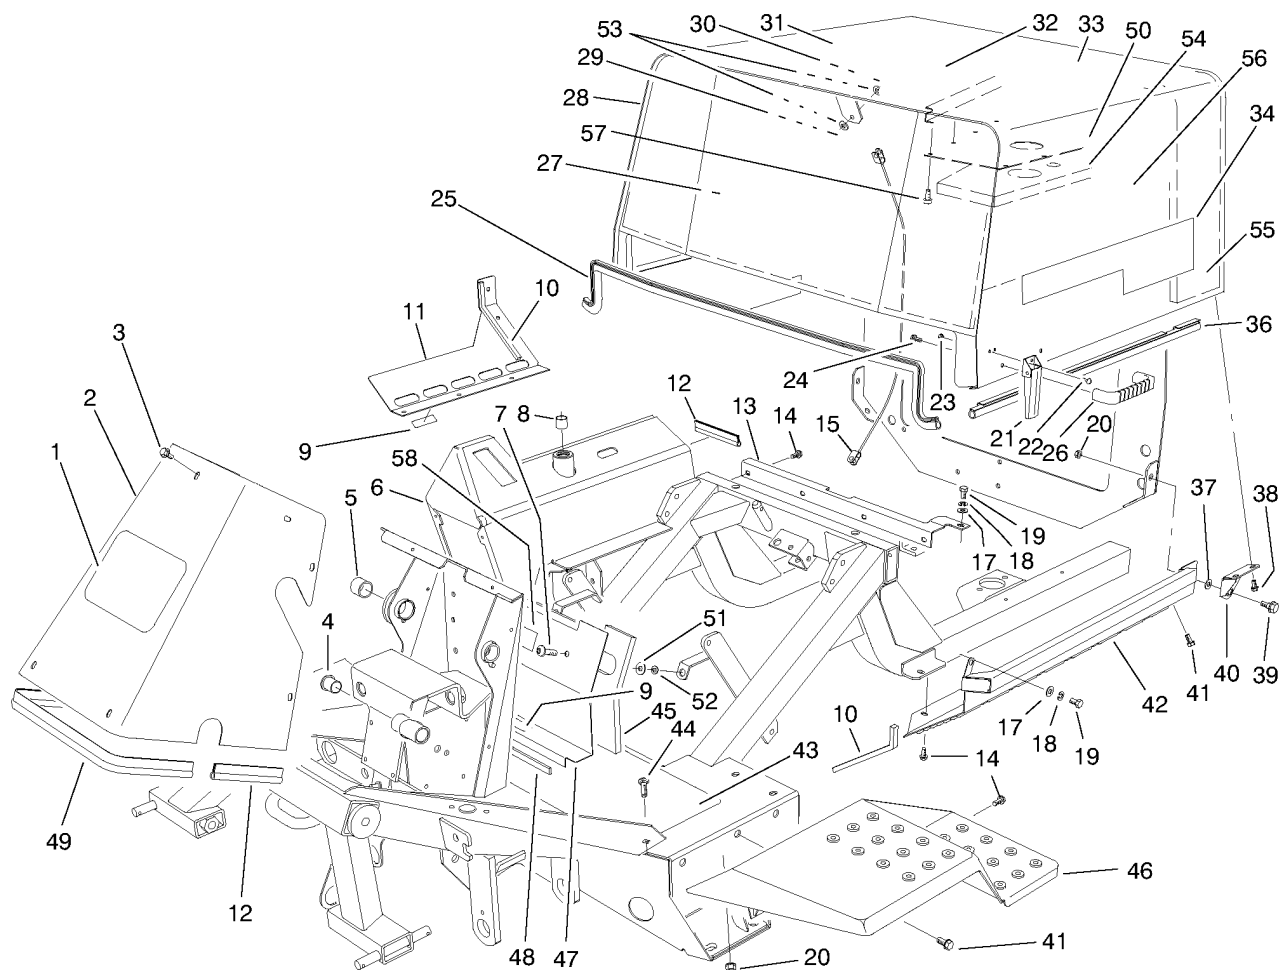


Frame and Body Assembly (continued)

Ref.	Part Number	Qty.	Description
50	86-1650	1	Plate-Air Duct
51	32151-72	2	Ring-Retaining
52	32148-10	10	Insert-Nut
53	62-1230	2	Washer-Rubber
54	86-1690	1	Foam-In Take

Ref.	Part Number	Qty.	Description
55	86-2530	1	Foam-Hood, Rear LH
56	86-2200	1	Foam-Hood, Rear
57	32104-76	17	Screw
58	93-9426	1	Decal-Danger
58	93-9425	1	Decal-Danger


● Not illustrated

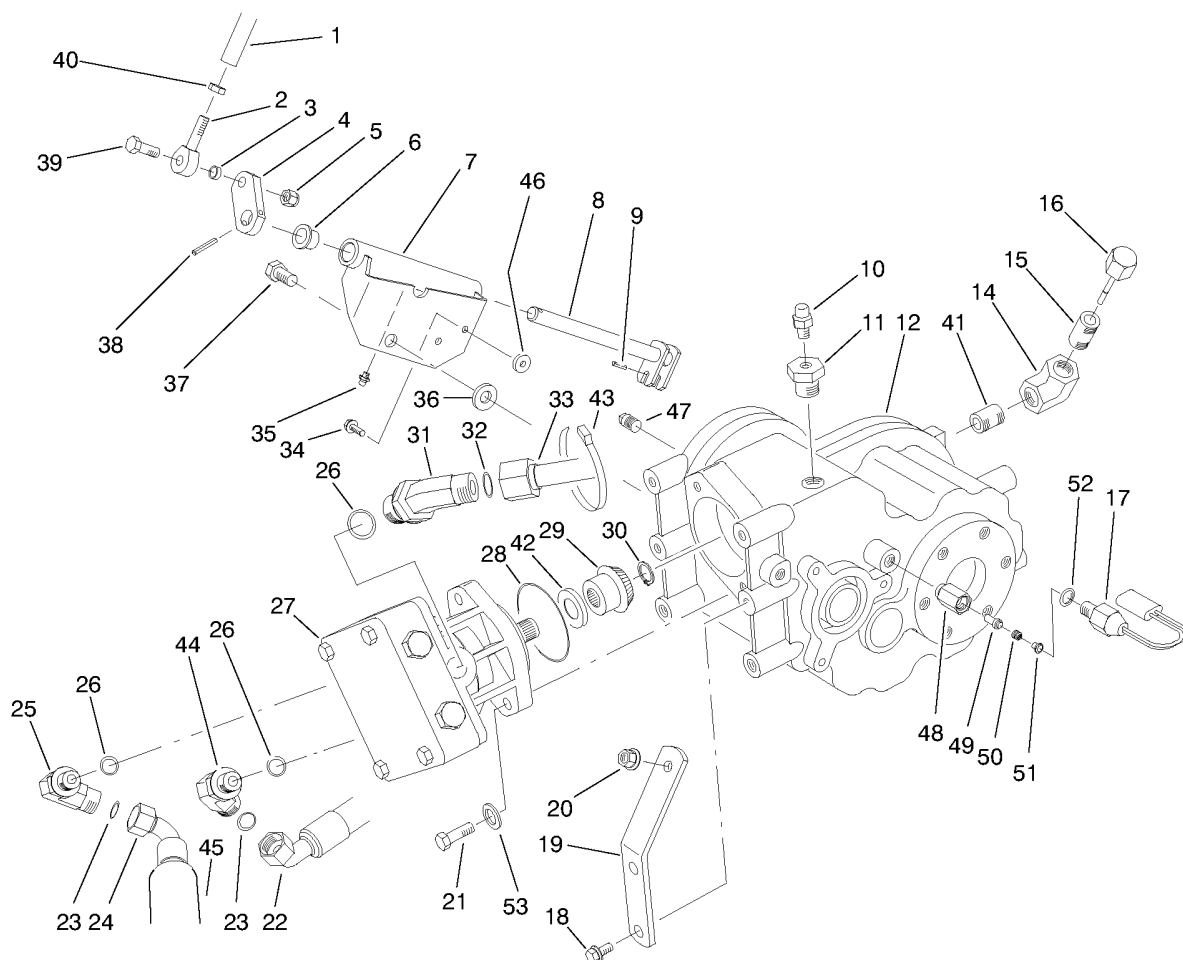

Front Transaxle Installation Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	92-5819	1	Rod - Shift	25	340-153	1	Fitting-Hydraulic 90Ø (Incl. Ref. #23 & 26)
2	2411-36	1	Bearing-End, Rod	26	237-79	3	O-Ring
3	76-9100	1	Spacer-Speed, Reel	27	92-2556	1	Hydraulic Motor Assembly
4	84-0190	1	Shift Link	28	237-167	1	O-Ring
5	3296-59	1	Nut-Lock, NI	29		1	Gear-Spiral Bevel
6	3-1506	2	Bushing	30	32151-62	1	Ring-Retaining
7	74-5710	1	Shift Linkage Bracket Assy. (Incl. Ref. #6 & 35)	31	340-101	1	Fitting-Hydraulic 45Ø (Incl. Ref. #26 & 32)
8	74-5730	1	Shift Rod Wa	32	237-30	1	O-Ring
9	32121-24	1	Pin-Spring	33	92-6573	1	Tube Assy - Motor Drain
10	302-14	1	Vent	34	3234-4	2	Screw-HHF
11	2812-11	1	Bushing-Reducer	35	302-5	1	Fitting-Grease
12	88-1260	1	Front Transaxle Assembly (Incl. Ref. #29 & 47)	36	65-6390	1	Washer-Thrust, Plain
14	2813-14	1	Pipe-Elbow, 90	37	325-2	1	Screw-HH
15	289-44	1	Nipple-Pipe	38	32121-6	1	Pin-Roll, Slotted
16	27-3710	1	Dipstick	39	323-8	1	Screw-HH
17	72-4320	1	Switch-Ball	40	3220-3	1	Nut-HJ
18	3234-12	2	Screw-HHF	41	289-50	1	Nipple-Pipe
19	84-1600	1	Arm-Lever, Front Axle	42	82-5380	0	Shim-Pinion, .045
20	3290-357	1	Nut-HHF, Whiz		82-5390	0	Shim-Pinion, .038 ●
21	323-7	2	Screw-HH		82-5400	0	Shim-Pinion, .052 ●
22	86-2720	1	Hose Assy - RH Traction	43	3290-378	1	Tie-Cable
23	237-65	2	O-Ring	44	340-55	1	Fitting-Hydraulic 45Ø (Incl. Ref. #23 & 26)
24	86-2750	1	Hose Assy - LH Traction	45	56-7985	1	Sleeve-Protective

● Not illustrated

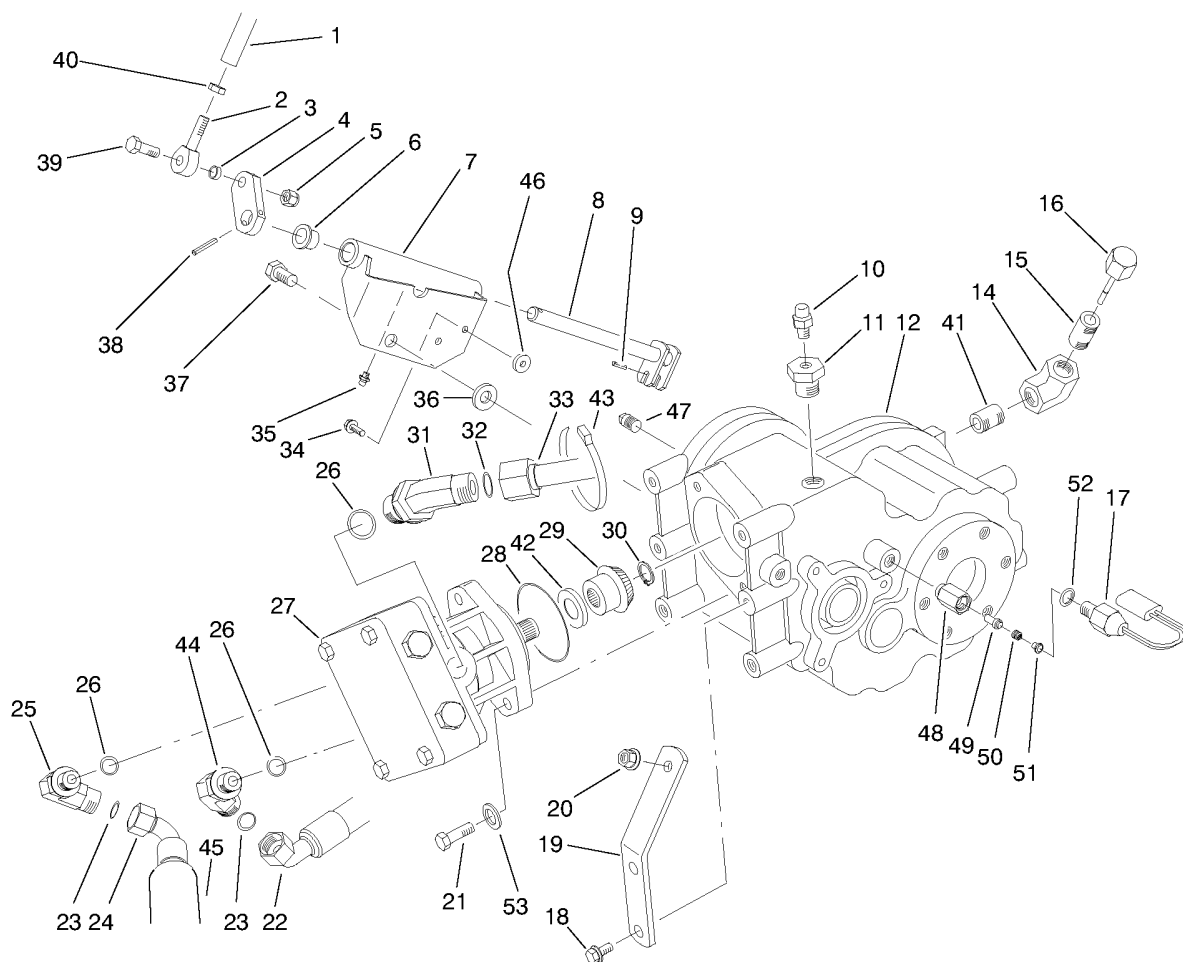


Front Transaxle Installation Assembly (continued)

Ref.	Part Number	Qty.	Description
46	73-3580	2	Washer
47	76-6040	1	Plug-Pipe
48	92-1364	1	Guide-Pin, Switch
49	92-1365	1	Plunger-Switch

Ref.	Part Number	Qty.	Description
50	92-1366	1	Spring - Compression
51	43-8610	1	Guide
52	237-30	1	O-Ring
53	3256-24	2	Washer-Flat

● Not illustrated

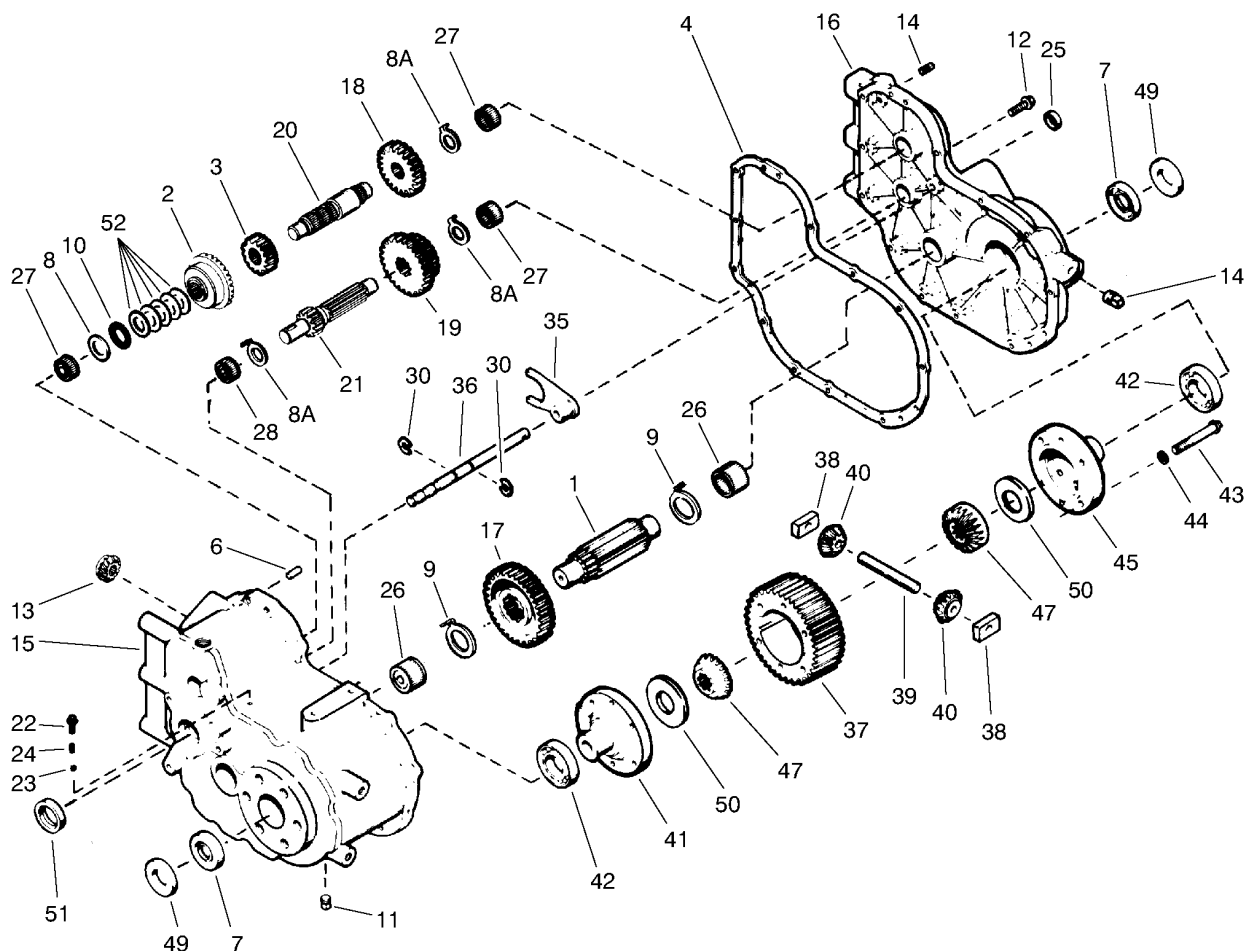


Transaxle Assembly No. 88-1260

Ref.	Part Number	Qty.	Description
1	76-5610	1	Pinion-Output
2		1	Gear-Spiral Bevel
3	76-5630	1	Gear-Spur
4	76-5640	1	Gasket-Case & Cover
6	76-5660	2	Pin-Dowel
7	76-5670	2	Seal-Oil
8	76-5680	1	Washer-Thrust
8A	76-5650	3	Washer-Thrust
9	76-5690	2	Washer-Thrust
10	76-5700	1	Bearing-Thrust
11	76-5710	1	Plug-Drain, Magnetic
12	76-5720	13	Screw-HWHTF
13		1	Pinion-Spiral Bevel
14	76-6040	2	Plug-Pipe
15	92-0639	1	Case Assembly (Incl. Ref. #26-28)
16	76-5760	1	Cover Assembly (Incl. Ref. #26-27)
17	92-0642	1	Gear-Output
18	76-5780	1	Gear-Spur
19	92-0644	1	Gear-Cluster
20	92-0641	1	Shaft-Counter
21	92-0645	1	Shifter-Gear & Shaft
22	76-5820	1	Screw-HHF
23	76-5830	1	Ball-Steel
24	76-5840	1	Spring-Shifter Fork

Ref.	Part Number	Qty.	Description
25	76-5850	1	Seal-Oil
26	76-5860	2	Bearing-Needle
27	76-5870	3	Bearing-Needle
28	92-0640	1	Bearing-Needle
30	76-5890	2	Ring-Retaining
35	76-5900	1	Fork-Shift
36	92-0647	1	Rod-Shift, Hi-Low
37	92-0643	1	Gear - Ring
38	76-5930	2	Drive Block
39	76-5940	1	Drive Pin
40	76-5950	2	Bevel Pinion
41	76-5960	1	Carrier (Incl. Ref. #50)
42	92-0646	2	Bearing-Ball
43	76-5980	6	Screw - HHF
44	3253-21	6	Washer-Lock
45	76-5990	1	Carrier-Differential
47	76-6000	2	Bevel Gear
49	76-6010	2	Spacer
50	76-6020	2	Thrust Washer
51	76-6030	1	Seal-Oil
52	76-5680	0	Washer-Thrust
	76-5740	0	Washer-Thrust ●
	84-0090	0	Washer-Thrust ●
	84-0130	0	Washer-Thrust ●


● Not illustrated

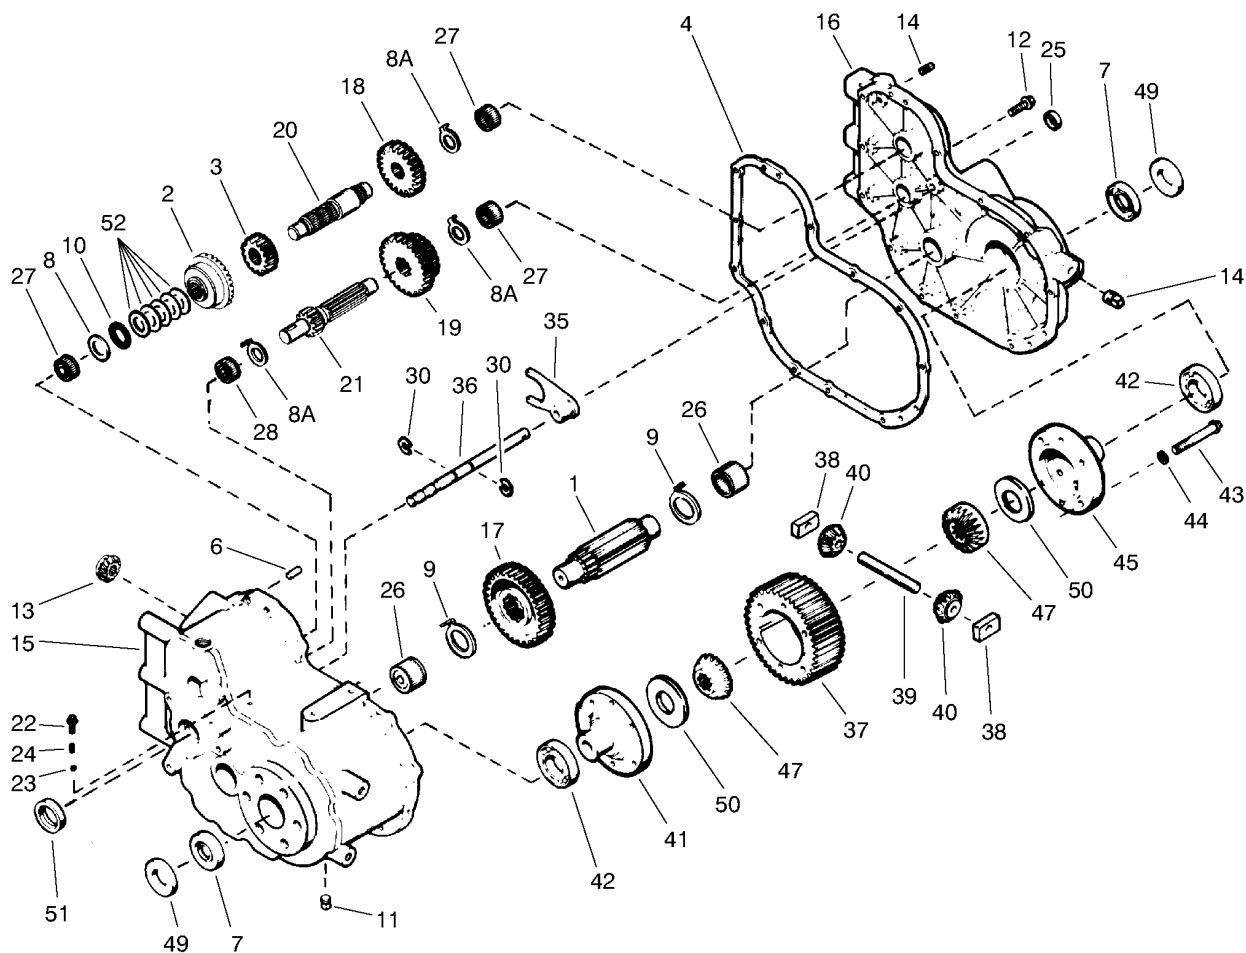

Transaxle Assembly No. 88-1260 (continued)


Ref.	Part Number	Qty.	Description
	84-0140	0	Washer-Thrust ●
	84-0080	1	Spiral Gear Set (Matched) (Incl. Ref. #2 & 13) ●

● Not illustrated

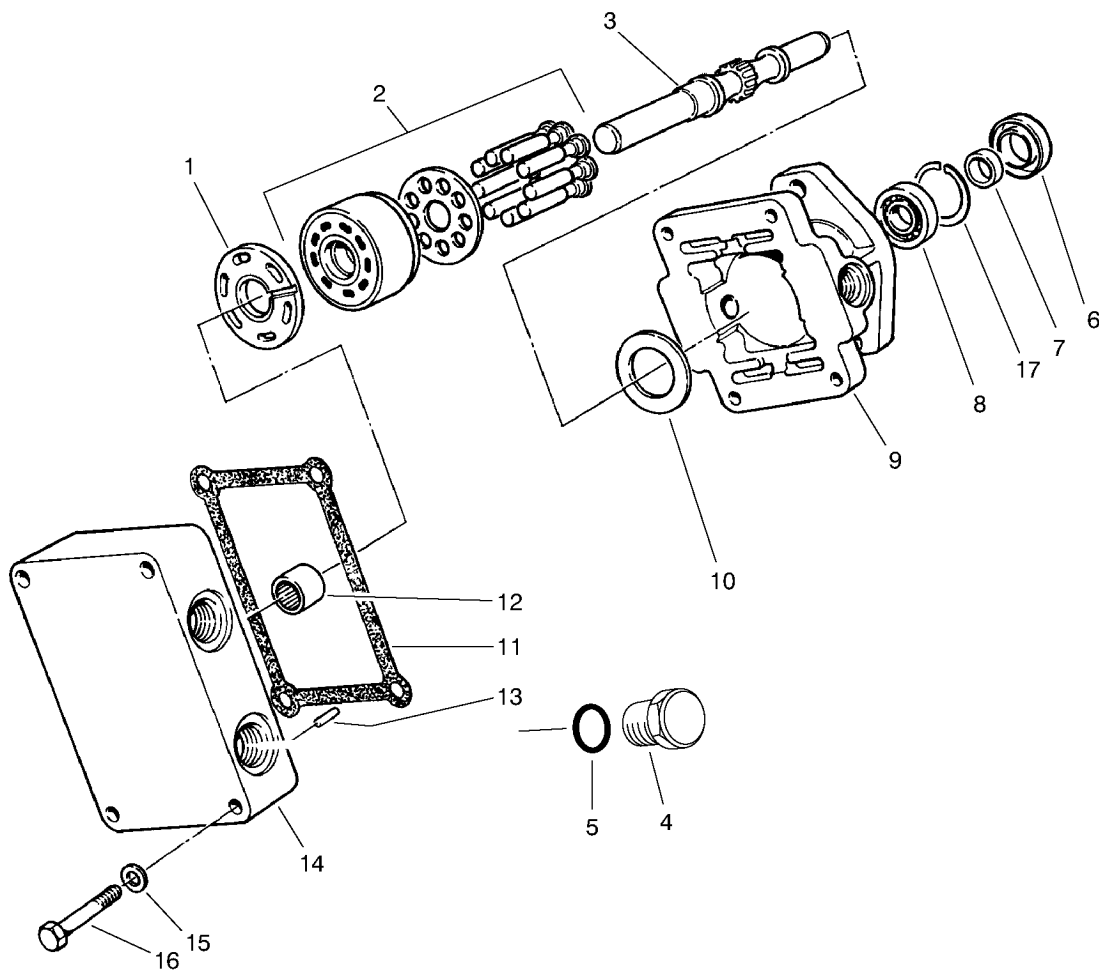

Hydraulic Motor No. 92-2556

Ref.	Part Number	Qty.	Description
1	28-3380	1	Plate-Valve, Motor
2	48-1800	1	Cylinder Block Kit
3	92-0636	1	Shaft Assembly (Incl. Ref. #7 & 8)
4	92-2571	2	Plug
5	237-65	2	O-Ring
6	74-9480	1	Seal-Lip
7		1	Sleeve
8		1	Bearing-Roller
9	82-4990	1	Housing-Fixed
10	25-2380	1	Plate-Thrust
11	67-9100	1	Gasket
12	77-3640	1	Bearing-Ball
13	25-2430	1	Pin-Dowel
14	92-2572	1	End Cap Assembly (Incl. Ref. #12)
15	74-9510	1	Washer-Plain
16	74-9500	4	Screw-HH
17	82-4970	1	Ring-Retaining

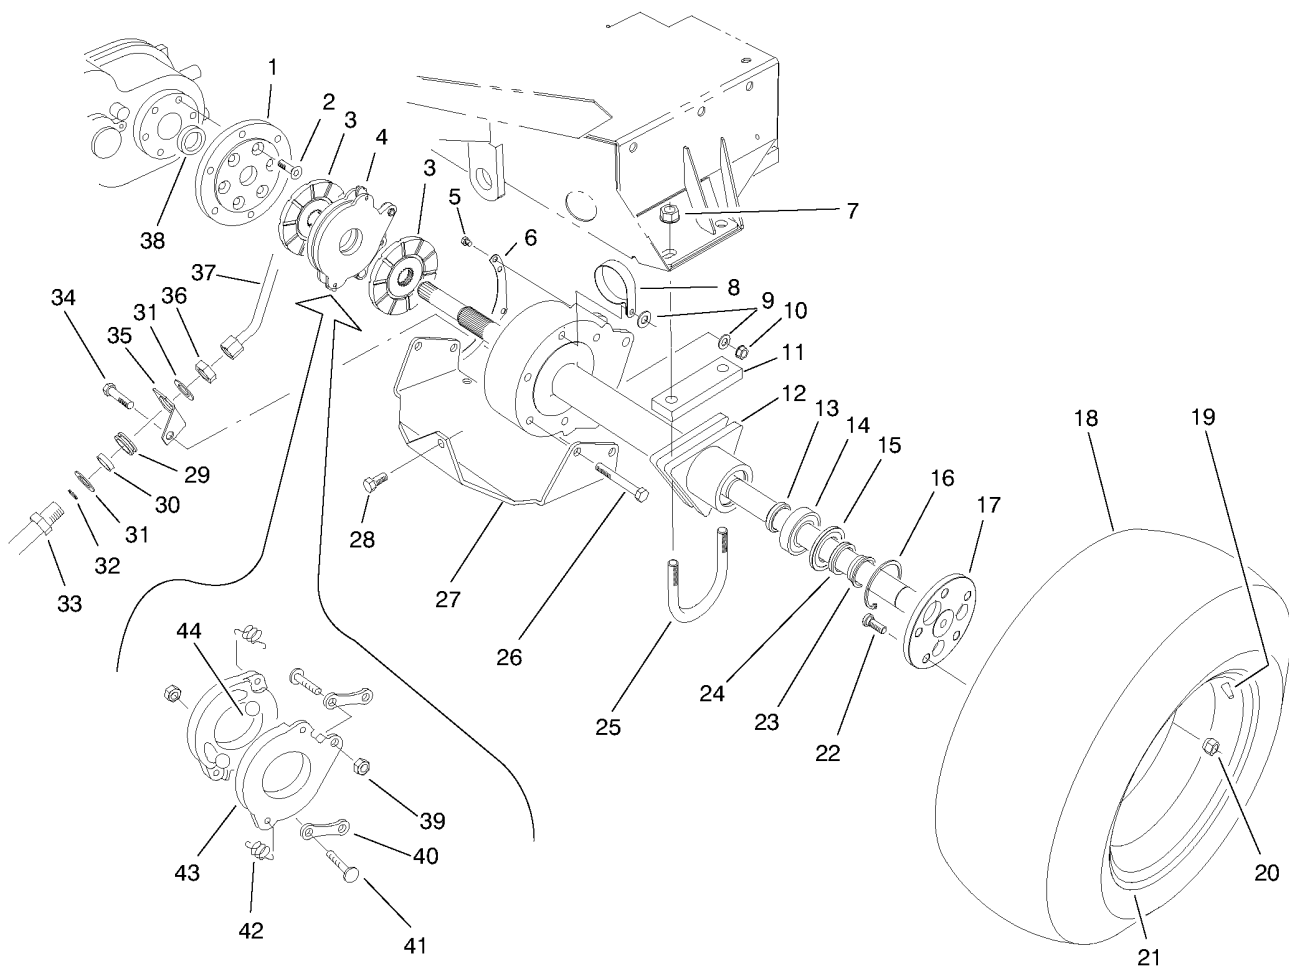


Front Axle Assembly

Ref.	Part Number	Qty.	Description
1	76-4240	2	Plate-Adapter
2	3274-87	12	Screw-HSFH
3	74-3640	4	Disc-Middle
4	74-3630	2	Disc-Actuating
5	3234-30	6	Screw-HHF
6	76-8300	2	Cover-Axle Housing
7	32128-50	4	Nut-Flange
8	2412-102	1	Clamp-R
9	3256-26	3	Washer-Flat
10	32128-23	4	Nut-HF
11	84-1620	2	Plate-Support Axle
12	92-9704	2	Housing-Axle
13	92-9708	2	Collar-Bearing
14	92-9710	2	Bearing
15	92-9709	2	Spacer-Bearing
16	32121-76	2	Ring-Retaining
17	92-9714	2	Axle Assembly (Incl. Ref. #13-16&22-24)
18	86-5900	2	Tire
19	232-27	2	Stem-Valve
20	23-7270	10	Nut-Wheel
21	217-124	2	Wheel ASM
22	242-34	10	Stud-Drive
23	92-9706	2	Spacer-Axle, Flanged
24	92-9712	2	Seal, V-Ring


Ref.	Part Number	Qty.	Description
25	84-1590	2	U-Bolt, Front Axle
26	325-15	10	Screw-HH
27	86-5430	1	Plate-Skid
28	325-4	1	Screw-HH
29	240-3	2	Grommet-Rubber
30	69-9000	2	Spacer
31	69-9010	4	Washer
32	237-65	2	O-Ring
33	92-6571	1	Tube-Hydraulic L.H. (Incl. Ref. #32)
	74-6340	1	Tube-Hydraulic R.H. (Incl. Ref. #32) ●
34	325-5	2	Screw-HH
35	74-6420	1	L/H Bulkhead Brkt *plt
	74-6430	1	R/H Bulkhead Brkt *plt ●
36	340-74	2	Nut-Lock, Bulkhead
37	92-6572	1	Tube Assy - Reel
	92-7769	1	Hose Assy ●
38	76-6010	2	Spacer
39	69-9940	4	Nut-HJ
40	92-7775	4	Link
41	92-7774	4	Stud
42	92-7776	4	Spring-Extension
43	92-7777	4	Disc-Actuating
44	92-7773	6	Ball

● Not illustrated

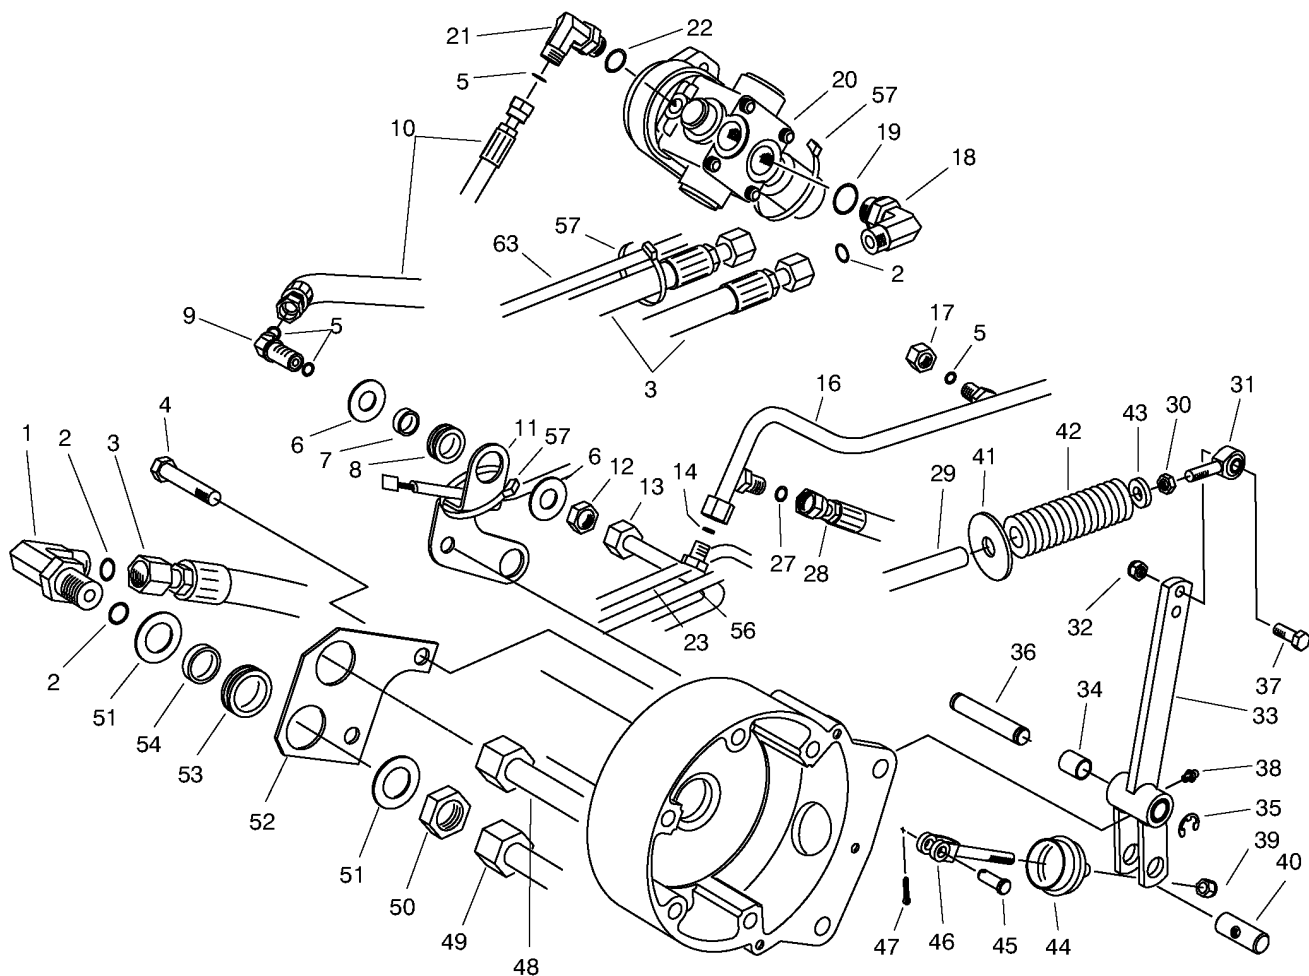

Brake Linkage Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	340-72	2	Fitting-Hydraulic 90Ø (Incl. Ref. #2)	27	237-21	1	O-Ring
2	237-65	6	O-Ring	28	76-9410	1	Hose Assy
3	76-9400	2	Hose Assy	29	76-9690	2	Rod-Brake
4	325-15	10	Screw-HH	30	3220-3	2	Nut-HJ
5	237-22	4	O-Ring	31	2411-36	2	Bearing-End, Rod
6	69-8940	2	Washer	32	3296-59	2	Nut-Lock, NI
7	69-8970	1	Spacer	33	84-0970	2	Brake Linkage Arm Assy. (Incl. Ref. #34 & 38)
8	240-4	1	Grommet-Rubber	34	5-2512	2	Bushing
9	340-69	1	Fitting-Hydraulic 45Ø (Incl. Ref. #5)	35	32120-19	4	E-Ring
10	76-6880	1	Hose Assy	36	84-0990	2	Pin-Pivot
11	92-5843	1	Brkt-Bulkhead,Frt Drain	37	323-7	2	Screw-HH
12	340-70	1	Nut-Lock	38	302-5	2	Fitting-Grease
13	74-6360	1	Tube-Hydraulic (Incl. Ref. #14)	39	3296-39	2	Nut-Lock, NI
14	237-30	2	O-Ring	40	76-8270	2	Pin-Brake
16	74-6370	1	Tube-Hydraulic (Incl. Ref. #5 & 27)	41	86-5840	2	Plate-Spring
17	340-117	1	Cap	42	86-5830	2	Spring-Compression
18	340-139	2	Fitting-Hydraulic 90Ø (Incl. Ref. #2 & 19)	43	66-6480	2	Washer
19	237-81	2	O-Ring	44	76-4180	2	Boot-Rod, Brake
20	74-3390	1	Gear Motor Assy	45	283-2	2	Pin-Clevis
21	340-77	1	Fitting-Hydraulic 90Ø (Incl. Ref. #5 & 22)	46	76-6610	2	Clevis
22	237-42	1	O-Ring	47	3272-6	2	Pin-Cotter
23	74-6250	1	Tube - Assy Str RH	48	92-6574	1	Tube Assy - Reel,Frt,RH
				49	74-6340	1	Tube Assy-Reel Pressure
				50	340-74	2	Nut-Lock, Bulkhead
				51	69-9010	4	Washer
				52	76-9710	1	Block Bracket *b
				53	240-3	2	Grommet-Rubber

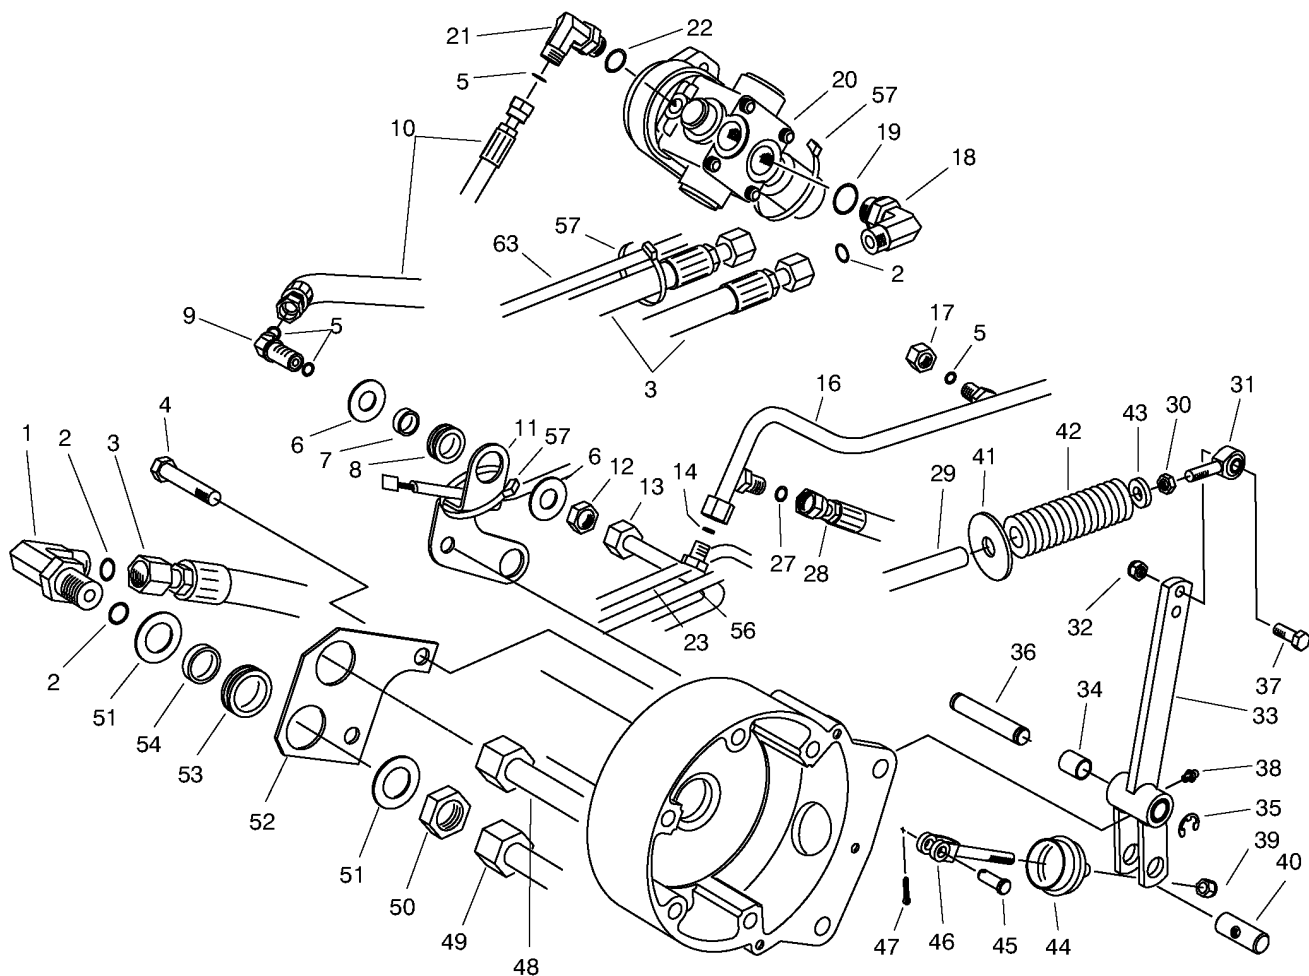

Brake Linkage Assembly (continued)

Ref.	Part Number	Qty.	Description
54	69-9000	2	Spacer
56	74-6240	1	Tube - Assy Str LH


Ref.	Part Number	Qty.	Description
57	3290-378	3	Tie-Cable
63	76-8970	1	Wire Harness

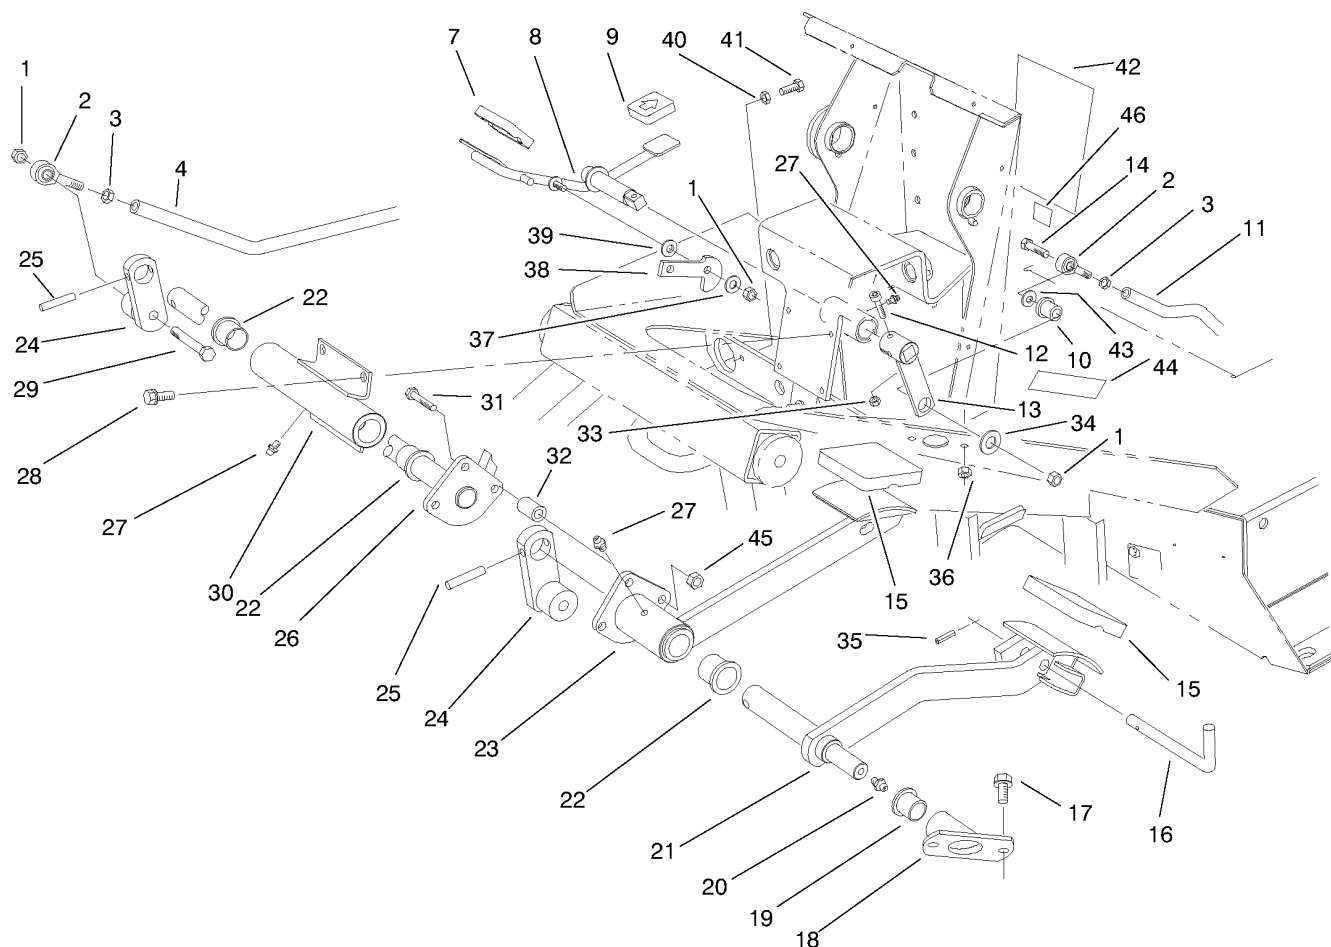

Traction and Brake Pedal Assembly

Ref.	Part Number	Qty.	Description
1	3296-59	4	Nut-Lock, NI
2	2411-36	3	Bearing-End, Rod
3	3220-3	3	Nut-HJ
4	76-9690	2	Rod-Brake
7	74-9100	1	Pad-Pedal, Forward
8	82-5190	1	Shaft-Traction Pedal
9	74-9110	1	Pad-Pedal, Reverse
10	63-9751	4	Mount
11	82-5290	1	Control Rod *b
12	3274-19	1	Screw-HSH
13	92-1367	1	Lever-Traction
14	323-9	1	Screw-HH
15	82-4960	2	Pad-Foot, Brake
16	63-7880	1	Pin-Latch, Brake
17	3234-14	2	Screw-HHF
18	76-9680	1	Bearing Housing Assembly (Incl. Ref. #19)
19	256-90	1	Bushing-Flange
20	302-2	1	Fitting-Grease
21	92-5804	1	Pedal-Brake L.H.
22	256-10	4	Bushing-Flange
23	92-5805	1	Brake Pedalassembly R.H. (Incl. Ref. #22 & 27)
24	92-2586	2	Arm-Brake Linkage
25	32121-25	2	Pin-Roll


Ref.	Part Number	Qty.	Description
26	92-5806	1	Shaft-Brake
27	302-5	3	Fitting-Grease
28	32144-11	4	Screw-HWHTF
29	323-12	2	Screw-HH
30	76-9030	1	Bearing Housing Assembly (Incl. Ref. #22 & 27)
31	322-21	3	Screw-HH
32	66-1140	3	Hub-Adjustment
33	3296-42	1	Nut-Lock, NI
34	63-8410	1	Washer
35	32121-50	1	Pin-Spring
36	32128-20	2	Nut-HF
37	3256-24	1	Washer-Flat
38	74-6110	1	Stop-Traction
39	66-2920	1	Washer-Friction
40	3218-2	2	Nut-Jam
41	322-4	2	Screw-HH
42	76-8810	1	Decal - General Safe
42	93-9424	1	Decal - General Safety
43	3256-3	1	Washer-Flat
44	92-1370	1	Decal-Warning
44	93-9414	1	Decal - Warning
45	32152-1	3	Nut-Lock, Cone
46	93-7252	1	Decal-Ce Mark

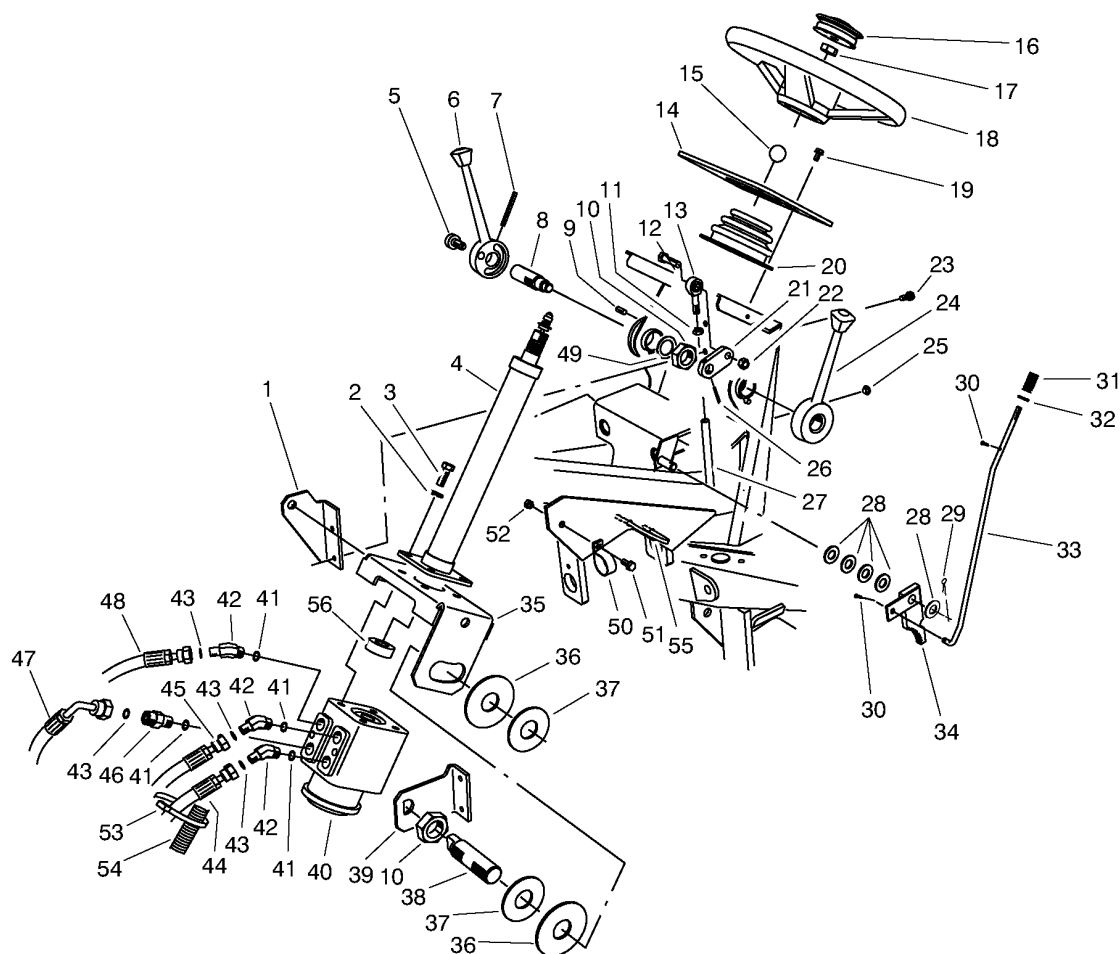

Steering Tower Assembly


Ref.	Part Number	Qty.	Description
1	76-8160	1	Support-Steering
2	3253-21	4	Washer-Lock
3	323-6	4	Screw-HH
4	74-3670	1	Steering Column ASM
5	82-4950	1	Plunger-Spring
6	74-5770	1	Lever-Shift
7	32121-10	1	Pin-Roll
8	74-5790	1	Shaft-Pivot
9	32121-123	2	Pin-Roll
10	3296-49	2	Nut-Lock, NI
11	3220-3	1	Nut-HJ
12	3296-59	1	Nut-Lock, NI
13	2411-36	1	Bearing-End, Rod
14	93-9415	1	Panel-Control, Tower
15	233-17	1	Knob
16	72-0130	1	Kit-Horn
17	47-6990	1	Nut
18	68-8080	1	Wheel-Steering
19	32144-4	4	Screw-HWH
20	76-9450	1	Boot-Column, Steering
21	77-4260	1	Link-Shift
22	323-8	1	Screw-HH
23	32144-11	4	Screw-HWHTF
24	69-1560	1	Lever-Lock
25	2410-64	2	Plug-Button
26	32121-6	1	Pin-Roll, Slotted
27	92-5819	1	Rod - Shift
28	3256-26	5	Washer-Flat

Ref.	Part Number	Qty.	Description
29	3272-10	1	Pin-Cotter
30	3272-5	2	Pin-Cotter
31	95-1821	1	Spring-Compression
32	3256-22	1	Washer-Flat
33	76-9050	1	Rod-Brake, Park
34	63-7900	1	Rack
35	76-8140	1	Bracket-Steering
36	31-0390	2	Disc-Friction
37	20-9500	2	Washer
38	76-8340	1	Shaft-Pivot, Steering
39	76-8150	1	Support-Steering Shaft
40	92-9729	1	Steering Control ASM
41	237-79	4	O-Ring
42	340-138	3	Fitting-Hydraulic 45Ø (Incl. Ref. #40 & 42)
43	237-22	4	O-Ring
44	76-9570	1	HYD Hose ASM
45	76-9560	1	Hose Assy
46	59-6430	1	Valve-Check (Incl. Ref. #40 & 42)
47	86-5570	1	Hose ASM
48	76-9530	1	Hose Assy
49	10-8110	1	Washer-Thrust
50	2412-74	1	R-Clamp
51	3234-17	1	Screw-HHF
52	32128-20	1	Nut-HF
53	3290-378	1	Tie-Cable
54	76-8960	1	Wire Harness

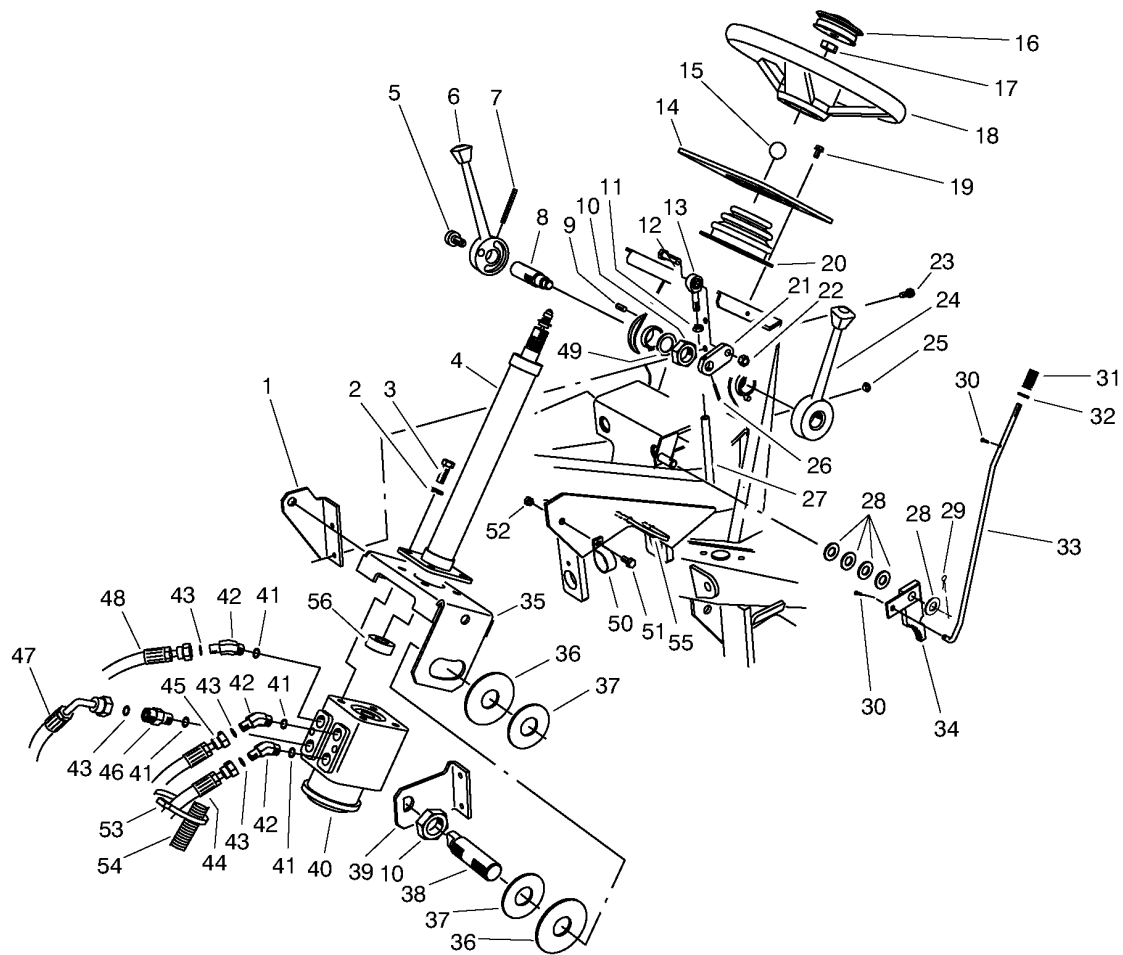

Steering Tower Assembly (continued)

Ref.	Part Number	Qty.	Description
55	3333-975	1	Cable Tie
56	21-9260	1	Cover-Dust

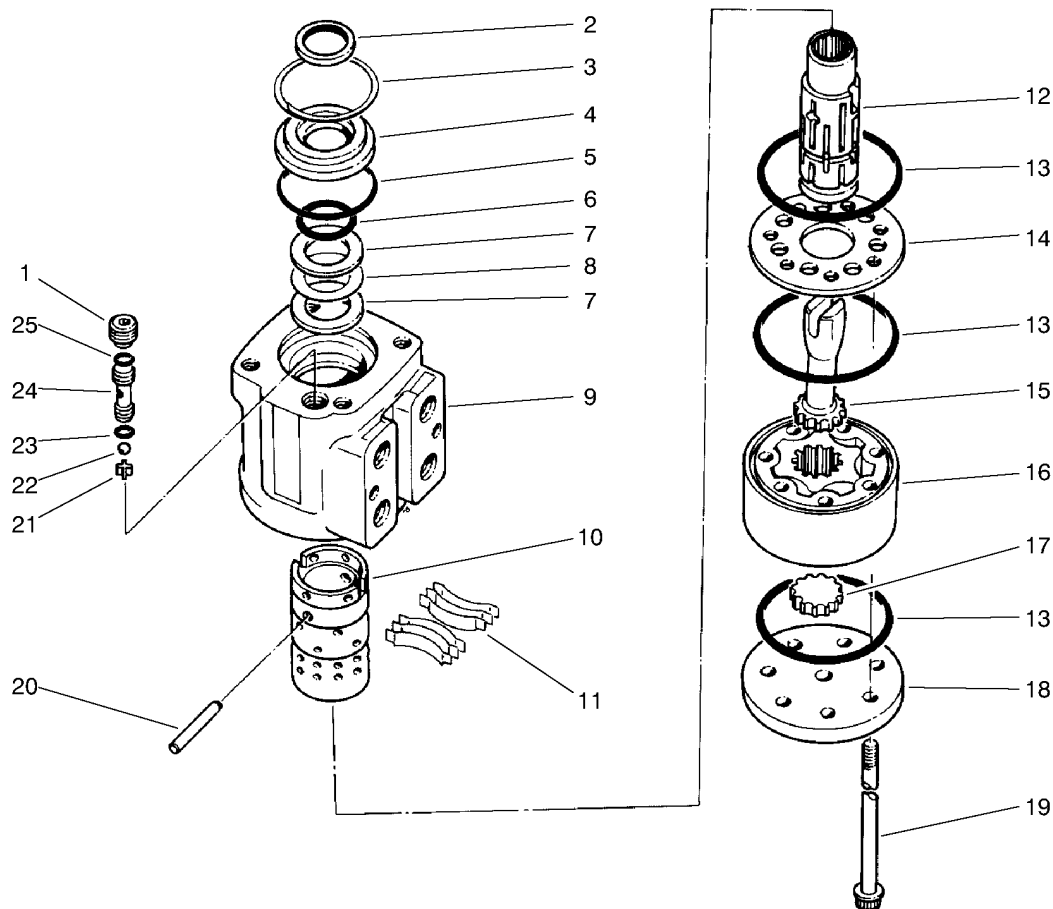


Power Steering Valve No. 92-9729

Ref.	Part Number	Qty.	Description
1	52-9260	1	Screw-Set
3	52-9230	1	Ring-Retaining
4	52-9240	1	Bushing
5		1	Seal ASM ■
6		1	Seal-Ring, Quad ■
7	59-6730	2	Race
8	59-6740	1	Bearing
10		1	Sleeve-Control ■
11	59-6820	1	Centering Spring Kit
12		1	Spool-Control ■
13		3	Seal ASM ■
14	92-9732	1	Plate-Wear
15	92-9320	1	Cover - Lower Drive
16	76-6300	1	Gerotor ASM
17	76-6320	1	Spacer

Ref.	Part Number	Qty.	Description
18	92-9730	1	Cap-End
19	92-9736	7	Screw-Cap
20	59-6830	1	Centering Pin Kit
21	52-9290	1	Retainer-Checkball
22	52-9280	1	Checkball
23		1	Seal ASM ■
24	52-9270	1	Seat-Checkball
25		1	Seal ASM ■
	52-9250	1	Needle Bearing Kit (Incl. Ref. #7-8) ●
	92-9749	1	Seal Kit (Incl. Ref. #2, 5-6, 13, 23 & 25) ●
	92-9745	1	End Cap Kit (Incl. Ref. #14 & 18-19) ●

● Not illustrated

■ Not Serviceable Separately

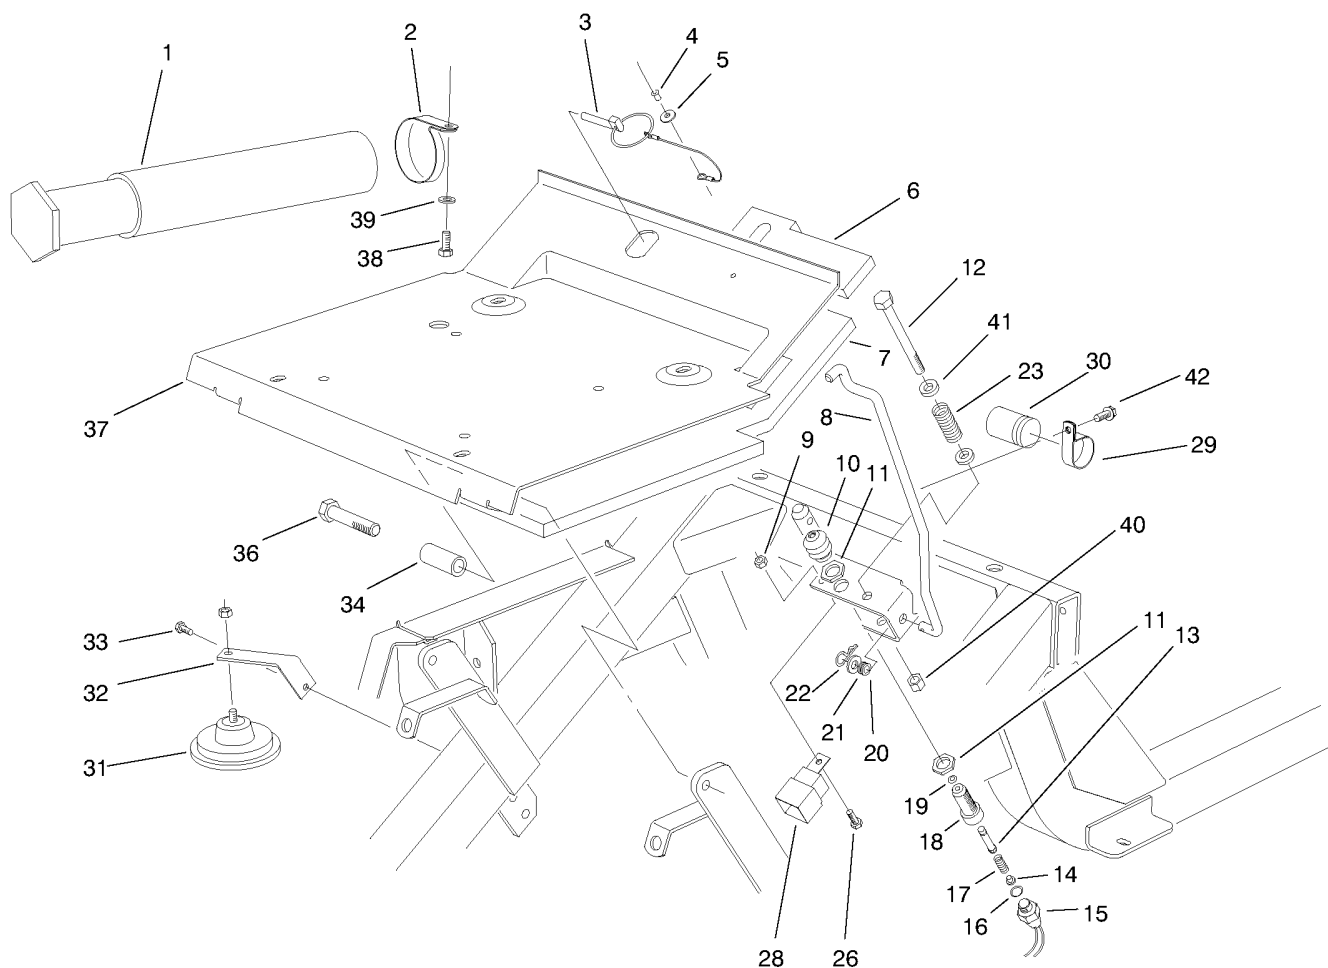


Seat Plate Assembly

Ref.	Part Number	Qty.	Description
1	74-0720	1	Tube-Manual
2	2412-133	2	R-Clamp
3	77-3780	1	Pin ASM
4	3290-282	1	Rivet-Blind
5	3256-49	1	Washer-Flat
6	76-9930	1	Foam-Center
7	82-4900	1	Foam-Seat, Rear
8	76-9440	1	Rod-Prop, Seat
9	32128-33	1	Nut-HF
10	43-8870	1	Boot-Switch
11	218-461	2	Nut-HH
12	323-17	1	Screw-HH
13	43-8860	1	Plunger-Switch
14	43-8610	1	Guide
15	72-4320	1	Switch-Ball
16	237-30	1	O-Ring
17	43-8600	1	Spring-Compression
18	43-8620	1	Pin-Guide, Switch
19	237-7	1	O-Ring
21	3256-3	1	Washer-Flat


Ref.	Part Number	Qty.	Description
22	3290-307	1	Pin-Hair
23	88-1420	1	Spring -Seat;compress.
26	321-4	1	Screw-HH
28	63-7590	1	Relay
29	2412-74	1	R-Clamp
30	37-2690	1	Capacitor
31	48-4590	1	Disc-Horn
32	74-8910	1	Bracket-Horn
33	32144-11	1	Screw-HWHTF
34	76-9480	2	Sleeve-Pivot, Seat
36	325-9	2	Screw-HH
37	76-9460	1	Plate-Seat
38	322-2	2	Screw-HH
39	3256-23	2	Washer-Flat
40	3296-39	1	Nut-Lock, NI
41	80-7730	2	Spacer
42	32104-82	1	Screw-HHF
	43-9071	1	Seat Switch Assembly (Incl. Ref. #10, 11 & 13-19)●
	66-9290	4	Spacer-Suspension●

● Not illustrated

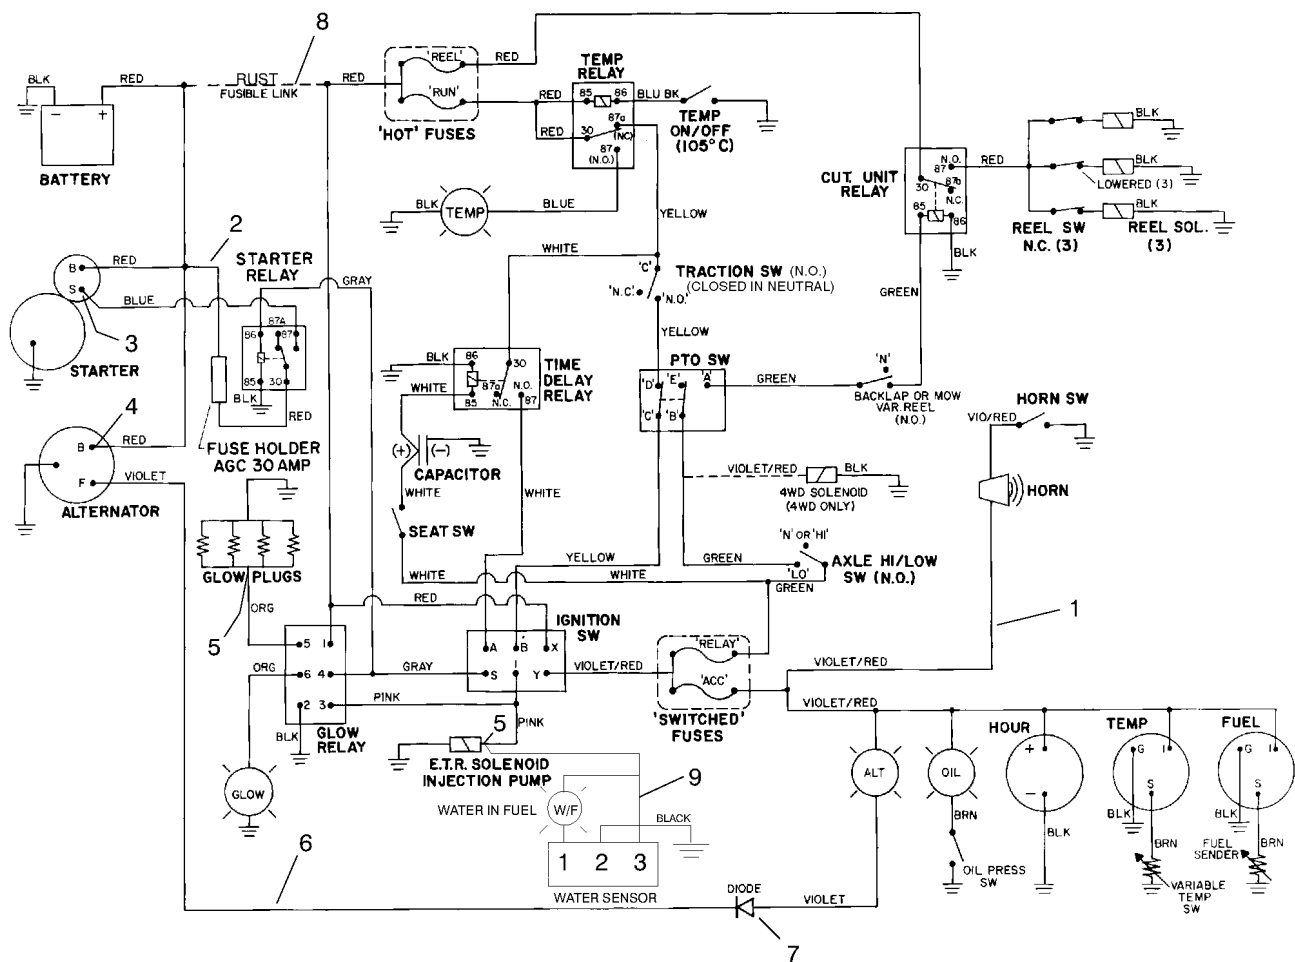

Electrical Schematic

Ref.	Part Number	Qty.	Description
1	76-8960	1	Wire Harness
2	77-4200	1	Wire Harness/Relay
3	48-7930	1	Nut
4	48-7890	1	Nut-Hex
5	48-7880	3	Nut-Hex
6	86-5820	1	Harness-Wire Main (Incl. Ref. #7)
7	86-7470	1	Diode ASM
8	67-7120	1	Fusible Link
9	92-9740	1	Wire Harness

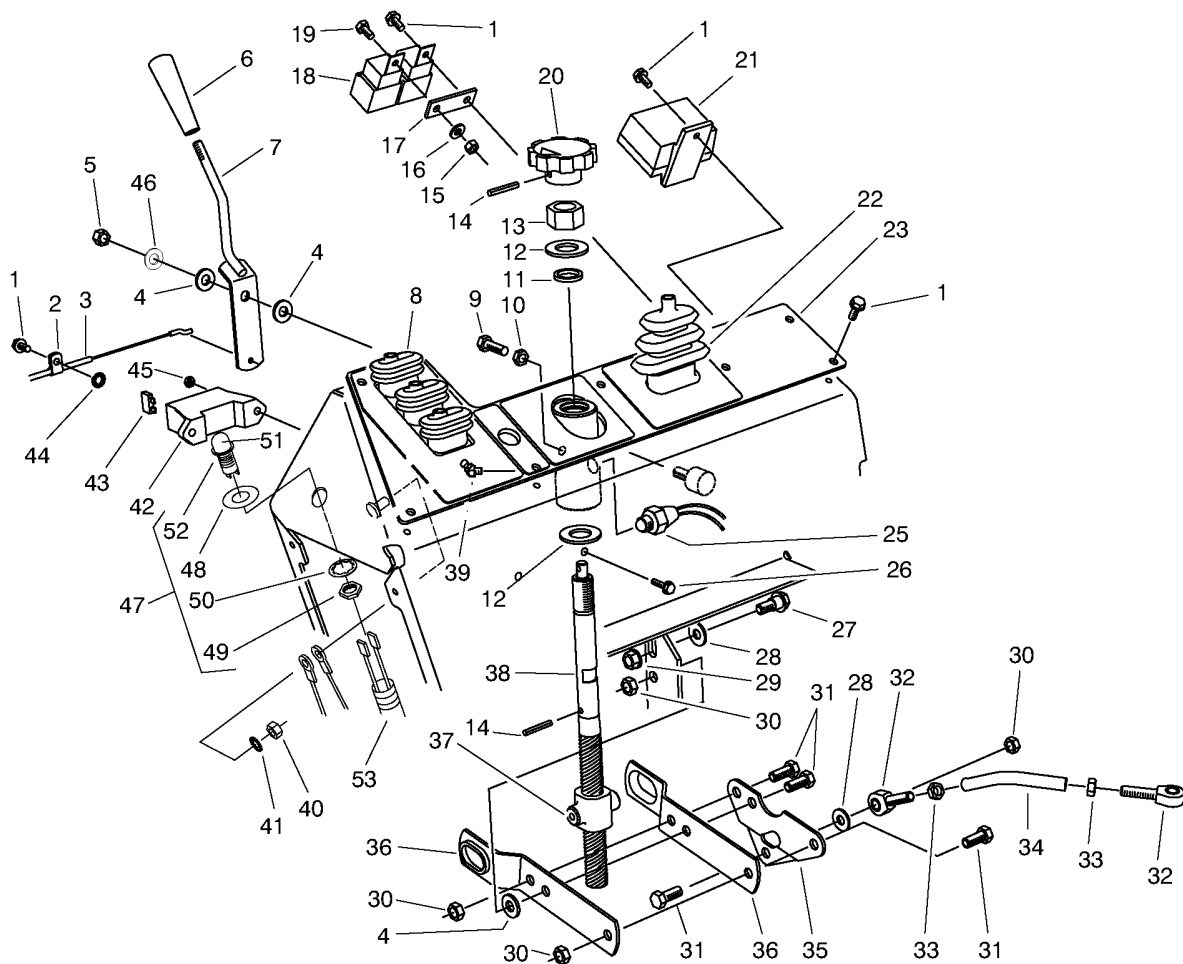


Control Console Assembly

Ref.	Part Number	Qty.	Description
1	32144-4	11	Screw-HWH
2	2412-31	1	Clamp-Boden
3	74-5480	1	Cable-Throttle
4	66-2920	3	Washer-Friction
5	3296-41	1	Nut-Lock NI
6	233-39	1	Knob-Control
7	76-4300	1	Lever-Throttle
8	76-8450	1	Boot-Lever, Lift
9	322-5	1	Screw-HH
10	3218-2	1	Nut-Jam
11	253-84	1	3/4 X .125 Oil Seal
12	3256-28	2	Washer-Flat
13	3296-51	1	Nut-Lock, NI
14	32121-6	2	Pin-Roll, Slotted
15	3296-42	1	Nut-Lock, NI
16	3256-78	1	Washer-Flat
17	77-3970	1	Spacer - Relay
18	63-7590	2	Relay
19	321-2	1	Screw-HH
20	59-7130	1	Knob-Control, Speed
21	76-5260	1	Relay-Plug, Glow
22	76-8440	1	Boot-Throttle
23	76-8710	1	Panel Console
25	72-4320	1	Switch-Ball
26	3290-126	2	Screw-HWH
27	67-0870	1	Bolt-Shoulder

Ref.	Part Number	Qty.	Description
28	3256-3	2	Washer-Flat
29	3290-357	1	Nut-HHF, Whiz
30	3296-59	4	Nut-Lock, NI
31	323-6	4	Screw-HH
32	2411-36	2	Bearing-End, Rod
33	3220-3	2	Nut-HJ
34	82-5160	1	Rod - Reel Lever
35	82-5250	1	Plate-Adapter, Reel *b
36	76-9090	2	Arm - Pivot Reel Sp Plt
37	37-0500	1	Follower Steer Shaft
38	76-4100	1	Shaft - Reel Speed
39	302-11	1	Fitting-Lube, 45 DEG
40	3296-47	1	Nut-Lock, NI
41	3255-8	1	Washer-Lock
42	67-7160	1	Block-Fuse
43	218-573	2	Fuse-5 Amp
	218-581	1	Fuse-15 Amp
	218-593	1	Fuse-30 Amps
44	3255-7	1	Washer-Lock/EXT
45	3296-12	2	Nut-Lock, NI
46	3256-24	1	Washer-Flat
47	44-2212	1	Light-Warning (Incl. Ref. #49-52)
48	92-9741	1	Decal-Water In Fuel
48	93-9417	1	Decal-Water In Fuel
49	218-535	1	Nut-Hex

● Obtain locally.

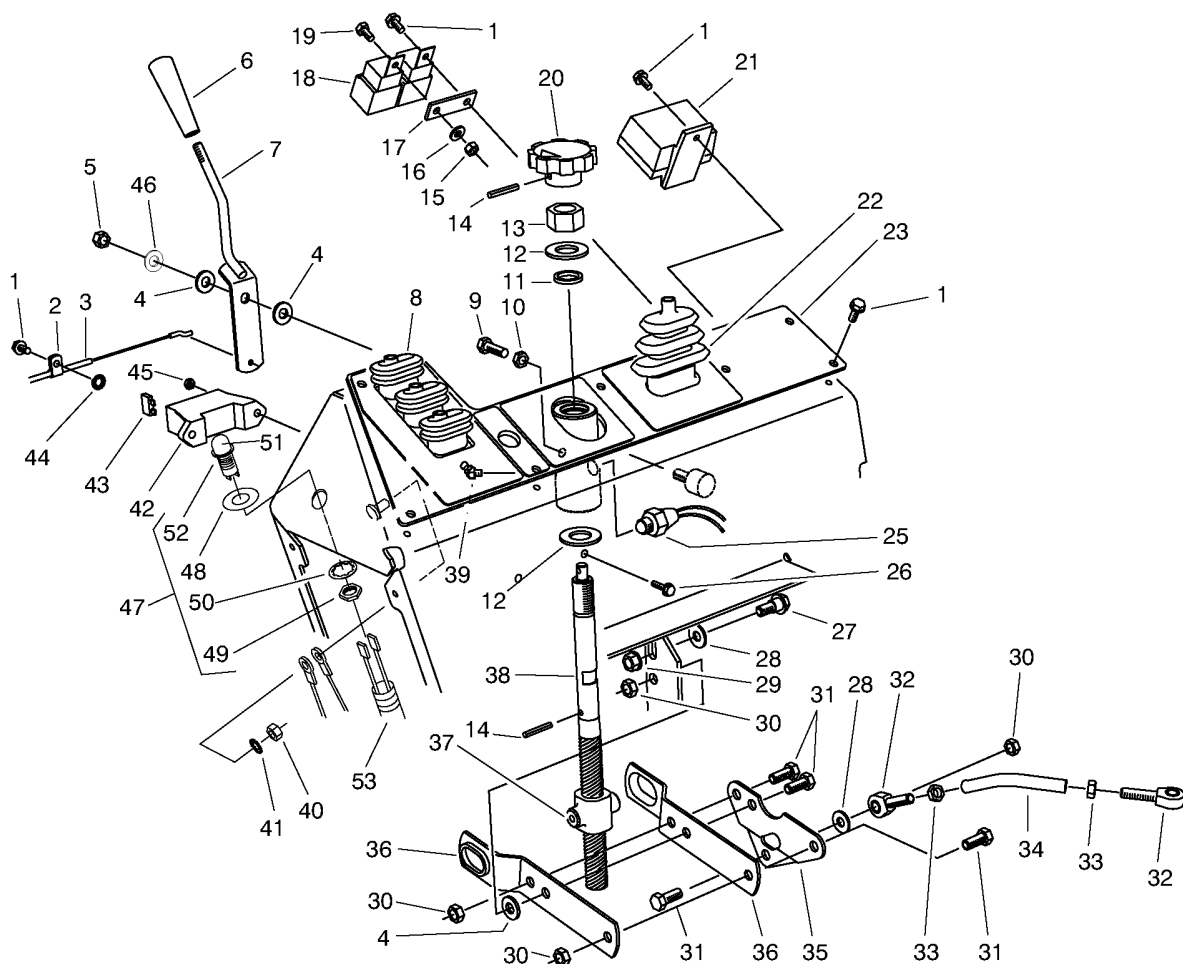


Control Console Assembly (continued)

Ref.	Part Number	Qty.	Description
50	218-536	1	Washer-Lock
51	218-562	1	Lens

Ref.	Part Number	Qty.	Description
52		1	Bulb ●
53	92-9740	1	Wire Harness

● Obtain locally.

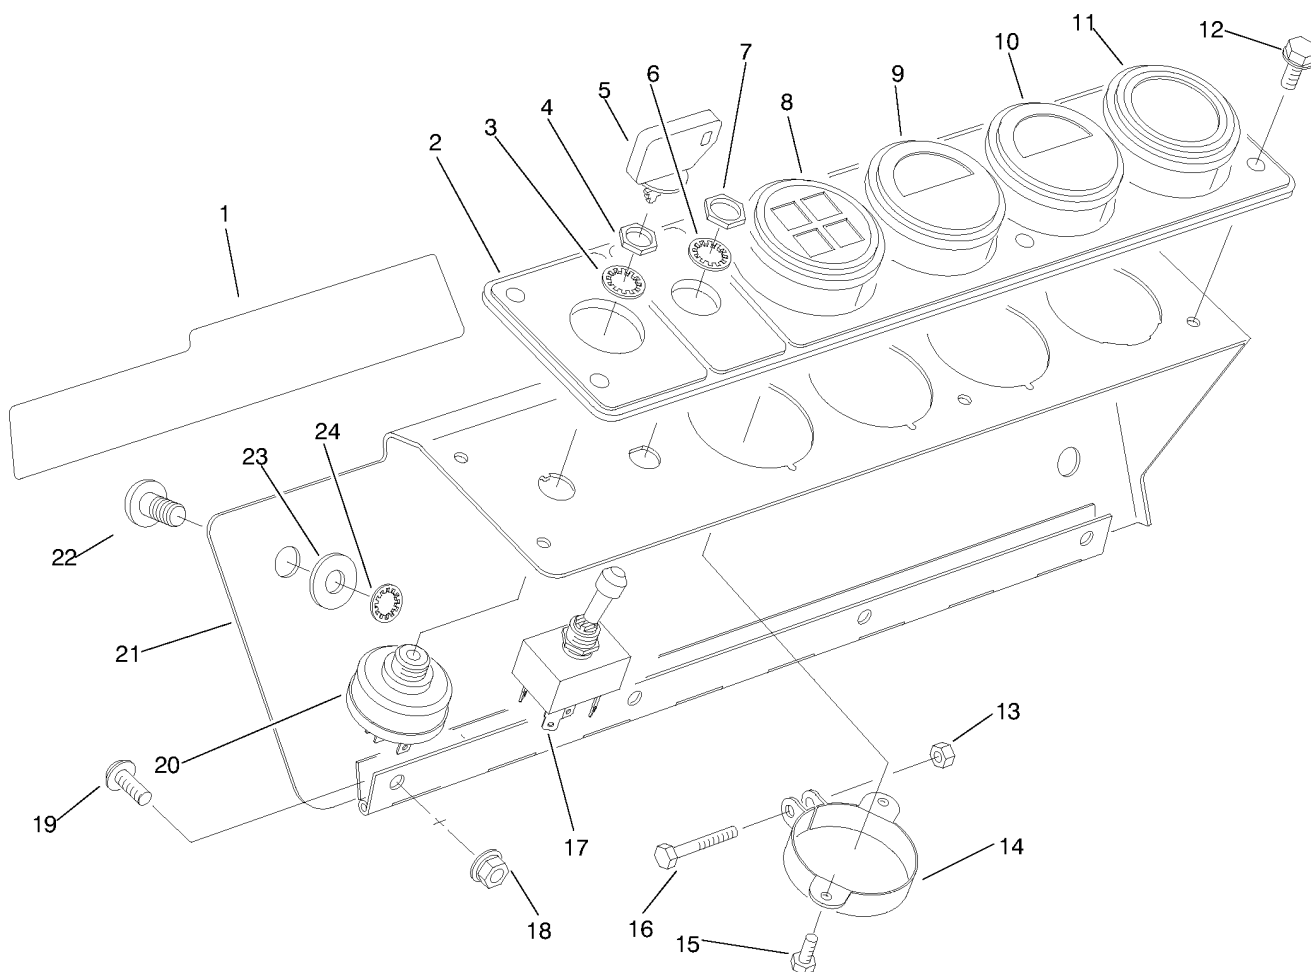


Gage Panel Assembly

Ref.	Part Number	Qty.	Description
1	92-6564	1	Decal-4 Matic
2	76-8700	1	Panel - Console Gage
3	218-447	1	Washer-Lock
4	218-446	1	Nut-Hex
5	62-7770	1	Key-Ignition
6	3254-20	1	Washer-Lock, Int
7	218-500	1	Nut F/W Switch
8	66-2960	1	Warning Lamp Cluster
	76-8950	1	Harness Lamp ●
	219-17	4	Bulb ●
9	76-9060	1	Gauge-Temperature
10	66-2940	1	Gauge-Fuel
11	66-2950	1	Gauge-Hourmeter

Ref.	Part Number	Qty.	Description
12	32144-4	6	Screw-HWH
13	3296-2	1	Nut-Lock, NI
14	69-4780	1	Clamp-Gauge
15	32144-19	2	Screw-SHWH
16	32105-12	1	Screw
17	85-4980	1	Switch-PTO
18	32128-33	4	Nut-HF
19	3274-68	4	Screw-HSBH
20	27-2360	1	Switch
21	82-3750	1	Cover-Console
22	3250-36	2	Screw-PPH
23	3256-3	2	Washer-Flat
24	32151-72	2	Ring-Retaining

● Not illustrated

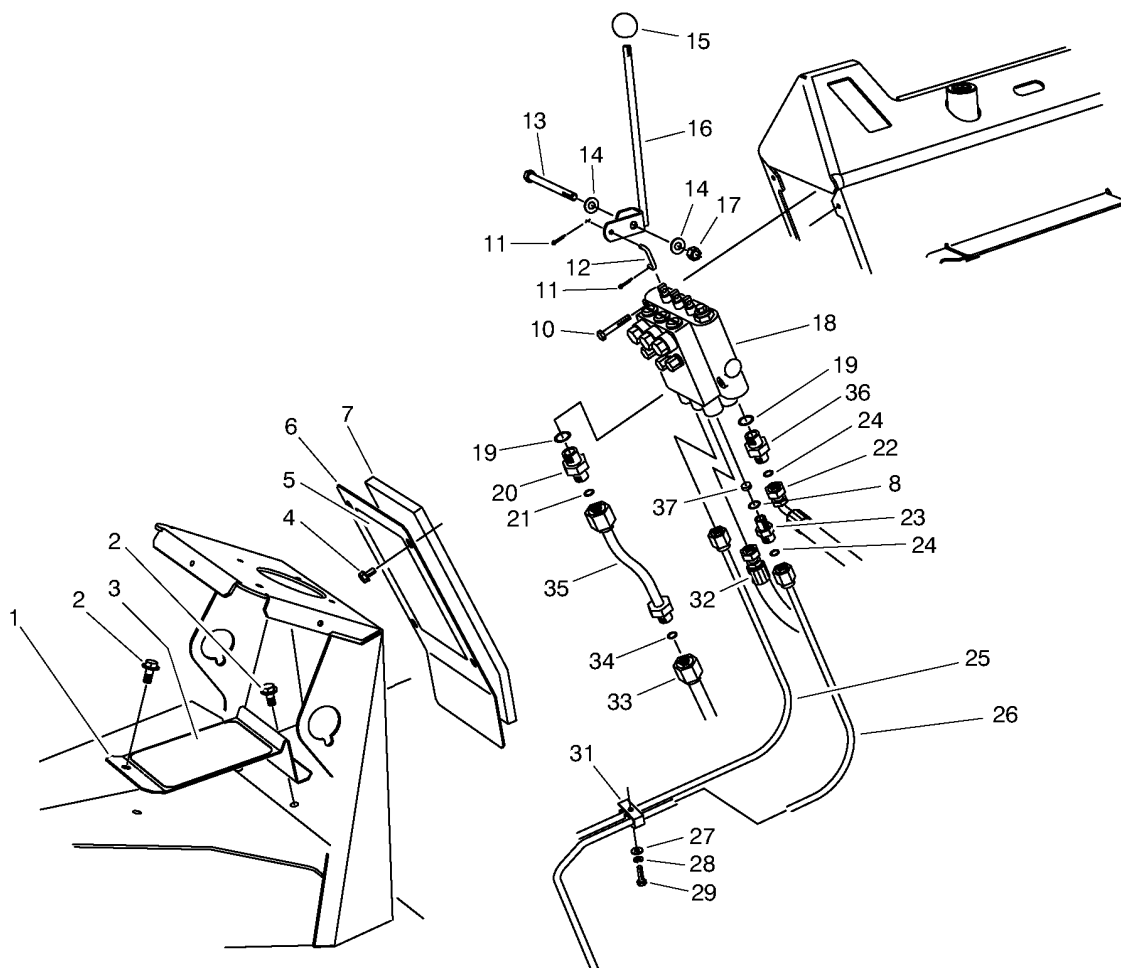

Lift Valve Installation Assembly


Ref.	Part Number	Qty.	Description
1	82-5300	1	Support-Heel
2	32144-11	2	Screw-HWHTF
3	76-7040	1	Pad-Foot
4	46-6810	4	Screw And Washer ASM
5	92-5845	1	Decal - Service,4Wd
5	93-9419	1	Decal - Service, Blank
6	76-7090	1	Cover-Console
7	76-6270	1	Strip-Foam, Panel
8	237-42	5	O-Ring
9	353-508	2	Fitting-Hydraulic Plug (Incl. Ref. #8)
10	321-10	2	Screw-HH
11	3272-1	6	Pin-Cotter
12	69-9140	3	Link-Lever, Valve
13	323-17	1	Screw-HH
14	3256-24	2	Washer-Flat
15	233-42	3	Knob
16	74-6060	1	Lever-Valve, RH
	74-6050	1	Lever-Valve, Center
	69-7010	1	Lever-Valve, LH
17	3296-39	1	Nut-Lock, NI
18	92-1398	1	Lift Valve Assy

Ref.	Part Number	Qty.	Description
19	237-79	2	O-Ring
20	340-4	1	Fitting-Hydraulic Straight (Incl. Ref. #19 & 21)
21	237-30	1	O-Ring
22	84-0850	1	Hose Assy
23	340-2	3	Fitting-Hydraulic Straight (Incl. Ref. #8 & 24)
24	237-22	4	O-Ring
25	74-6310	1	Tube Assy-Lift Cyl RH
26	74-6300	1	Tube Assy-Lift Cyl LH
27	3256-22	1	Washer-Flat
28	3253-3	1	Washer-Lock
29	321-8	1	Screw-HH
31	58-3880	1	Clamp-Double
32	76-9900	1	Hose Assy
33	74-6380	1	Counter Balance Tube ASM
34	237-65	1	O-Ring
35	82-3680	1	Tube Assy - Counter Bal
36	340-3	1	Fitting-Hydraulic Straight (Incl. Ref. #19 & 24)
37	84-6400	3	Disc-Orifice



Ref.	Part Number	Qty.	Description
21	92-2567	1	Spring
22	92-2568	1	Poppet
23		1	Seat ■
24	58-6320	3	Wiper
25	58-6400	3	Bushing
26	58-6700	3	Washer
27	58-6730	3	Spring
28	58-6310	3	Spacer
29	58-6460	3	Ring-Retaining
30	58-6420	3	Cap
31	84-6430	1	Plunger
32	69-1800	3	Plug Assembly (Inc. Ref. #9-10)
33	69-1810	3	Spring
34	58-6290	3	Poppet
35	58-6330	3	Seat Assy. (Incl. Ref. #36)
36	58-6340	3	O-Ring
37	84-6420	2	Plunger
	60-3780	1	Seal Kit (Incl. Ref. #5, 7, 9, 10, 12, 12, 17, 24, 29, 34, & 36) ●


■ Not Serviceable Separately

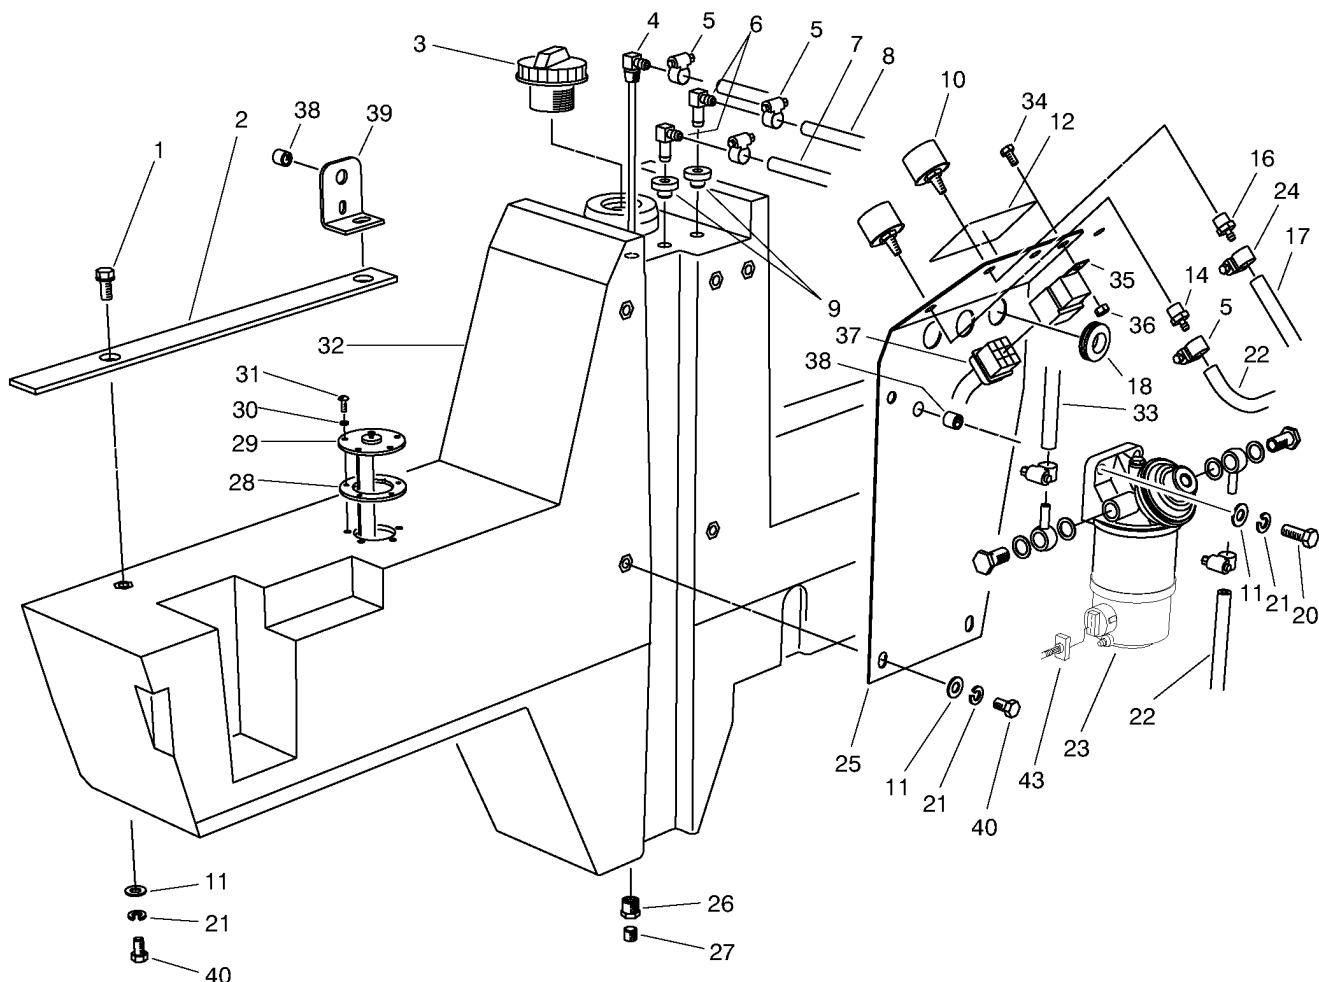

Fuel Tank Assembly


Ref.	Part Number	Qty.	Description
1	3234-12	2	Screw-HHF
2	76-9790	1	Foam-Tank, Fuel
3	93-3102	1	Cap-Fuel
4	76-6600	1	Pipe-Stand
5	2412-108	6	Clamp-Worm
6	46-6550	2	Fitting-Elbow, 90 DEG
7	63-7626	1	Hose-Fuel
8	63-7627	1	Hose-Fuel
9	46-6560	2	Bushing
10	68-6150	2	Breather
11	3256-24	9	Washer-Flat
12	76-8780	1	Decal-Caution, Fuel
12	93-9420	1	Decal - Caution Fuel
14	354-95	1	Fitting-Straight
16	354-94	1	Fitting-Female, Barbed
17	74-9122	1	Hose-Overflow, Radiator
18	240-6	3	Grommet-Rubber
20	323-7	2	Screw-HH
21	3253-21	9	Washer-Lock
22	63-7622	2	Hose-Fuel

Ref.	Part Number	Qty.	Description
23	76-5300	1	Fuel Filter ASM
24	2412-36	1	Clamp-Hose
25	14-0859	1	Fuel Tank Plate Assembly (Incl. Ref. #38)
26	2812-1	1	Bushing-Pipe
27	285-22	1	Plug-Pipe
28	62-7650	1	Gasket
29	74-5860	1	Sender-Fuel
30	3253-15	5	Washer-Lock
31	32122-24	5	Screw-PTH
32	74-5580	1	Tank-Fuel
34	321-2	1	Screw-HH
35	70-1480	1	Relay
36	3296-42	1	Nut-Lock, NI
37	77-4200	1	Wire Harness/Relay
38	32148-10	3	Insert-Nut
39	82-3660	1	Bracket-Cover
40	323-4	7	Screw-HH
43	92-9740	1	Wire Harness

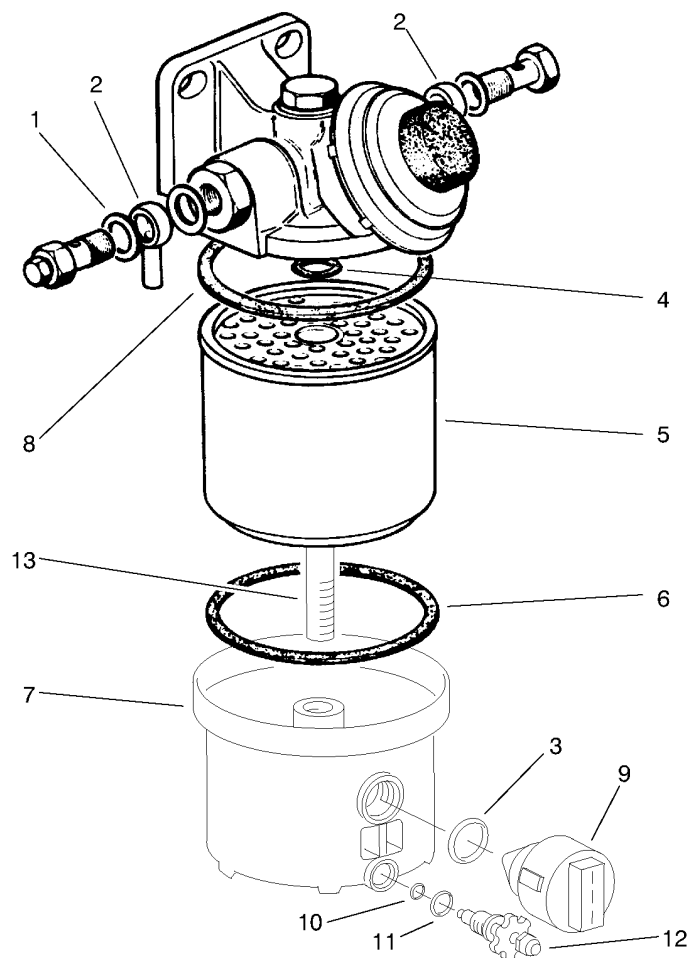


Fuel Filter Assembly No. 76-5300

Ref.	Part Number	Qty.	Description
1	76-5180	4	Washer-Copper
2	76-5190	2	Fitting-Adjustable
3	94-8025	1	O-Ring
4		1	Seal-O-Ring
5	76-5220	1	Element-Filter (Incl. Ref. #4, 6 & 8)
6		1	Seal-Gasket
7		1	Cap-Fuel Filter
8		1	Seal-Gasket
9	76-5320	1	Water Sensor Assembly (Incl. Ref. #3)
10	94-8027	1	O-Ring
11	94-8028	1	O-Ring
12	94-8026	1	Vent Assembly (Incl. Ref. #10 & 11)
13		1	Bolt

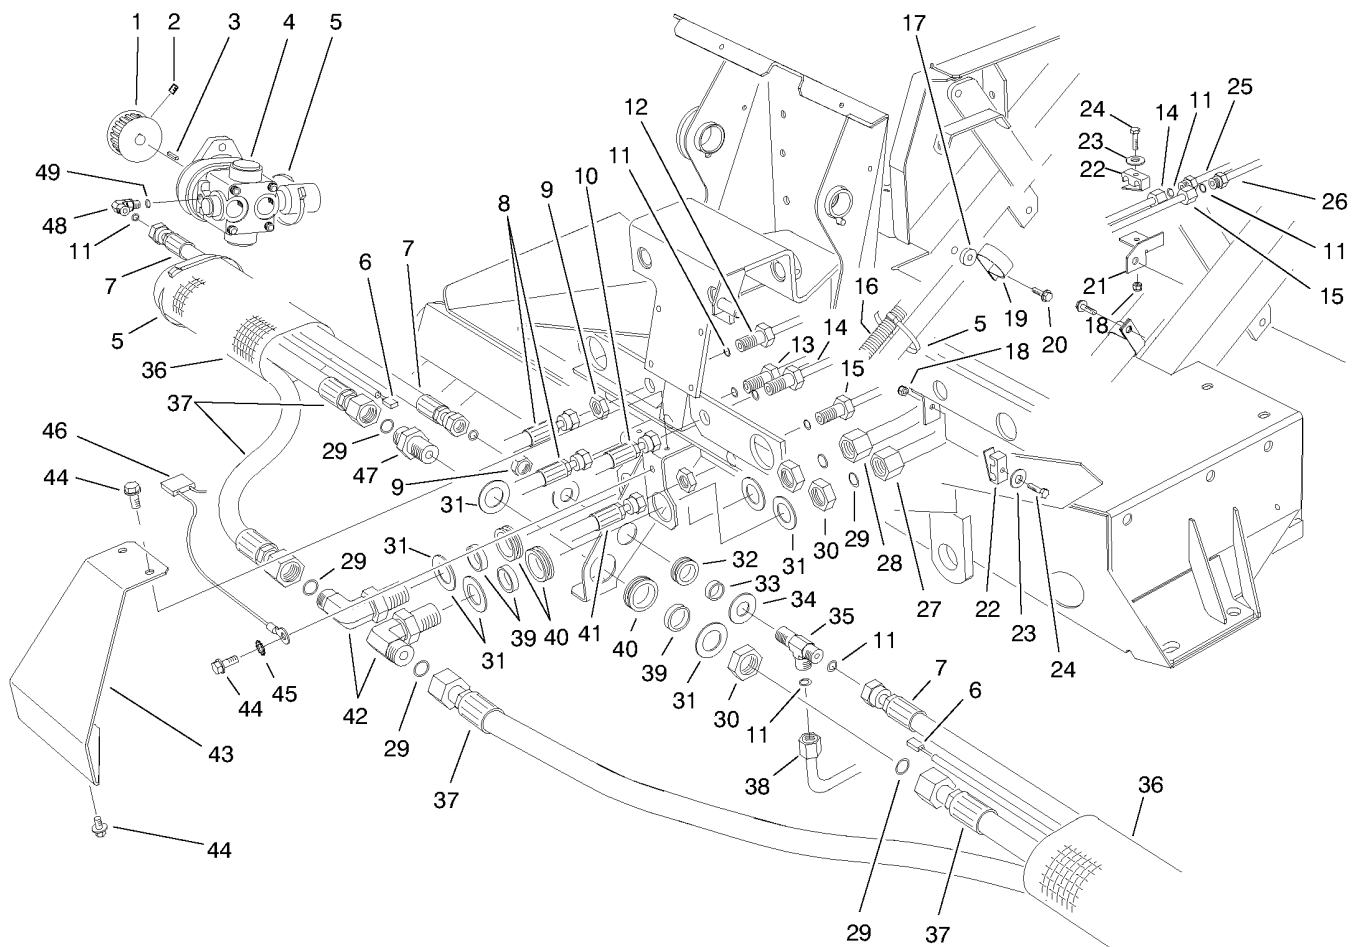


Front Hydraulic Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	47-7150	2	Pulley-Drive	25	74-6270	1	Tube-Hydraulic (Incl. Ref. #11)
2	3246-17	4	Setscrew-HSH	26	92-2595	1	Tube-Hydraulic (Incl. Ref. #11)
3	47-2380	2	Key-Square	27	92-6571	1	Tube Assy - Reel Return
4	74-3390	2	Gear Motor Assy	28	92-6574	1	Tube Assy - Reel,Frt,RH
5	3290-378	5	Tie-Cable	29	237-65	6	O-Ring
6	76-8980	2	Wire Harness	30	340-74	3	Nut-Lock, Bulkhead
7	76-8210	2	Hose Assy	31	69-9010	6	Washer
8	76-8220	2	Hose Assy	32	240-4	1	Grommet-Rubber
9	340-70	5	Nut-Lock	33	69-8970	1	Spacer
10	76-9570	1	HYD Hose ASM	34	69-8940	2	Washer
11	237-22	11	O-Ring	35	340-120	1	Fitting-Hydraulic Tee (Incl. Ref. #11)
12	74-6300	1	Tube-Hydraulic (Incl. Ref. #11)	36	71-4021	2	Protective Sleeve
13	74-6310	1	Tube-Hydraulic (Incl. Ref. #11)	37	76-8170	4	Hose Assy
14	74-6250	1	Tube-Hydraulic (Incl. Ref. #11)	38	74-6360	1	Tube Assy-Case Drain,Fr
15	74-6240	1	Tube-Hydraulic (Incl. Ref. #11)	39	69-9000	3	Spacer
16	76-8860	1	Main Harness	40	240-3	3	Grommet-Rubber
17	77-4060	2	Spacer	41	76-9560	1	Hose Assy
18	3296-42	2	Nut-Lock, NI	42	340-72	2	Fitting-Hydraulic 90Ø (Incl. Ref. #29)
19	2412-126	2	R-Clamp	43	74-4970	1	Bulkhead Cover *b
20	32144-26	2	Screw-Flow, Taptite	44	46-6810	4	Screw And Washer ASM
21	74-6470	1	Brkt-Clamp,Strg Line	45	3255-7	1	Washer-Lock/EXT
22	58-3880	2	Clamp-Double	46	76-8960	1	Wire Harness
23	3256-22	2	Washer-Flat	47	340-76	1	Fitting-Hydraulic Straight (Incl. Ref. #29)
24	321-8	2	Screw-HH				

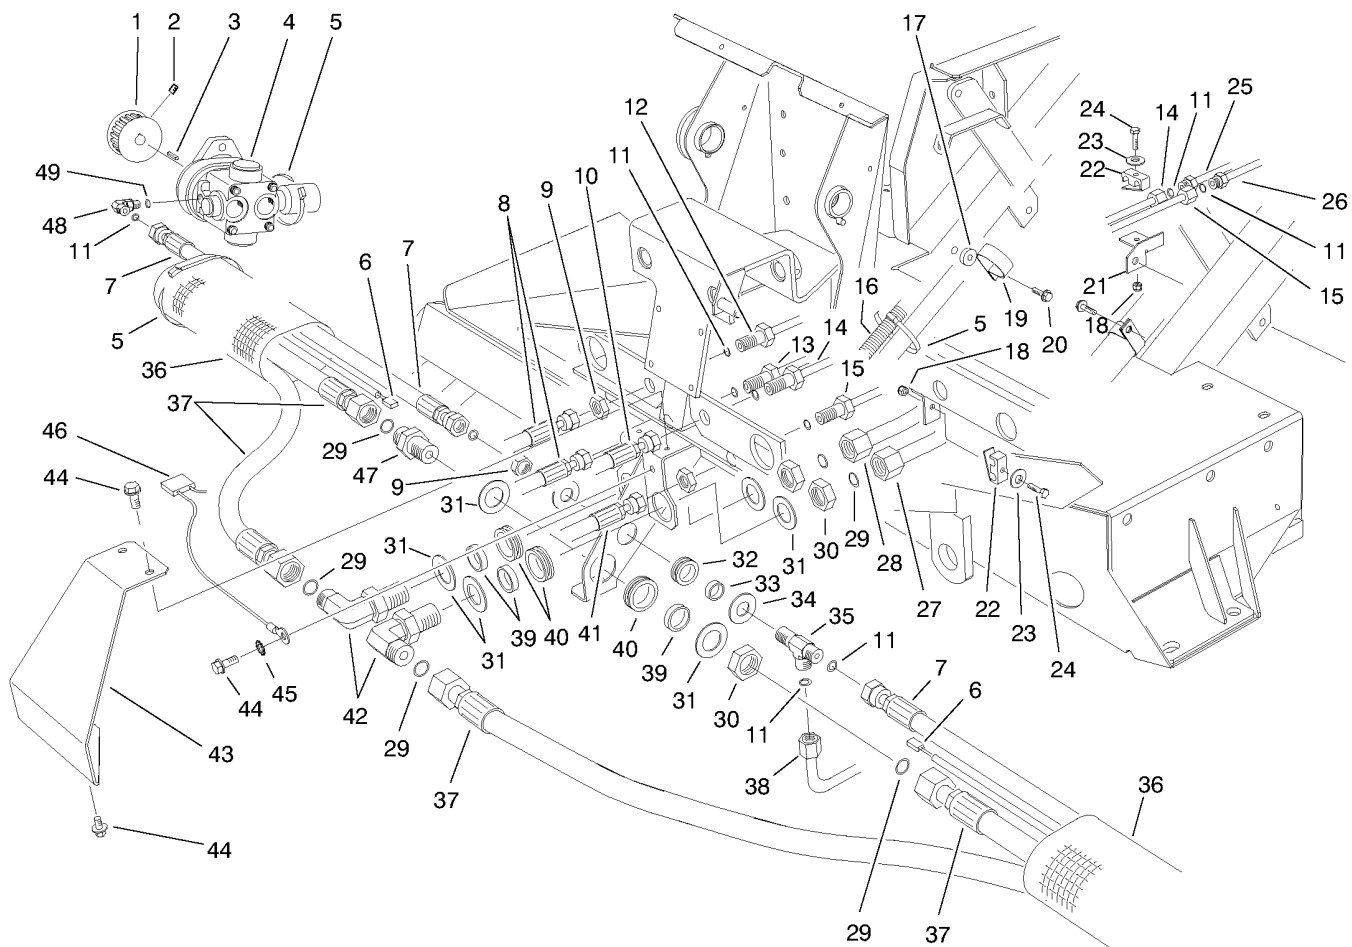

Front Hydraulic Assembly (continued)


Ref.	Part Number	Qty.	Description
48	340-77	2	Fitting-Hydraulic 90Ø (Incl. Ref. #11 & 49)
49	237-42	2	O-Ring

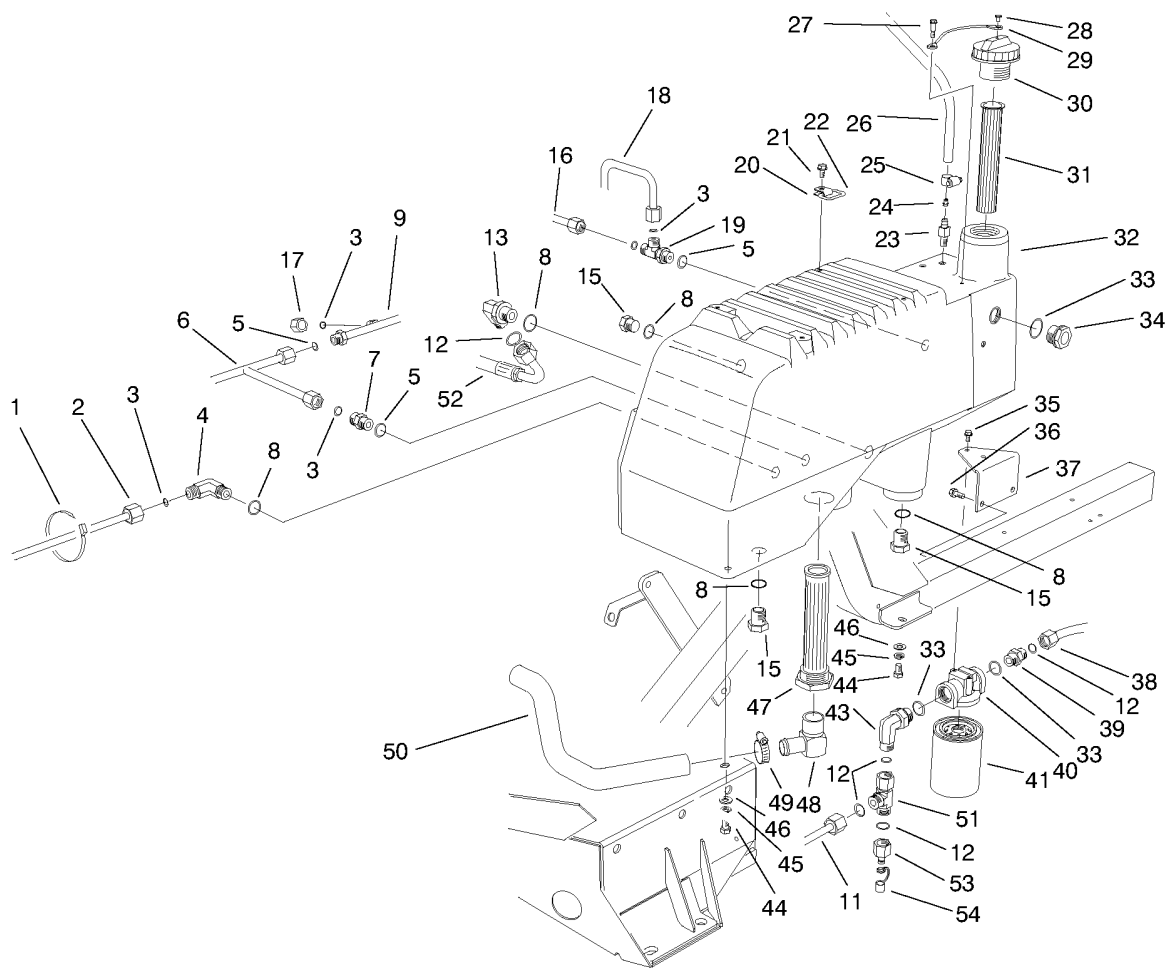

Hydraulic Reservoir Assembly

Ref.	Part Number	Qty.	Description
1	3290-378	1	Tie-Cable
2	92-6573	1	Tube Assy - Motor Drain
3	237-30	5	O-Ring
4	340-105	1	Fitting-Hydraulic 90Ø (Incl. Ref. #3 & 8)
5	237-79	2	O-Ring
6	74-6380	1	Counter Balance Tube ASM
7	75-9550	1	Valve-Check (Incl. Ref. #3 & 5)
8	237-80	5	O-Ring
9	94-5605	1	Tube-Hydraulic (Incl. Ref. #3 & 5)
11	92-6575	1	Hose Assy
12	237-65	5	O-Ring
13	340-17	1	Fitting-Hydraulic 90Ø (Incl. Ref. #8 & 12)
15	353-551	3	Plug (Incl. Ref. #8)
16	92-6576	1	Tube Assy-Rr Case Drain
17	340-152	1	Cap-HYD
18	74-6370	1	Tube Assy-Drain, Middle
19	340-109	1	Fitting-Hydraulic Tee (Incl. Ref. #3 & 5)
20	76-9950	4	Bracket-Ring
21	32144-4	2	Screw-HWH
22	249-49	4	D-Ring
23	354-103	1	Hose-Male, Barbed
24	74-4080	1	Orifice
25	2412-36	1	Clamp-Hose


Ref.	Part Number	Qty.	Description
26	74-9122	1	Hose-Overflow, Radiator
27	57-5420	1	Screw-Shoulder
28	2410-73	1	Pin-Tether
29	75-0540	1	Tether And Button Kit
30	93-7160	1	Cap-Oil, HYD
31	61-2790	1	Filter-Screen
32	82-3700	1	Reservoir, HYD
33	237-81	3	O-Ring
34	69-1170	1	Gauge-Sight (Incl. Ref. #33)
35	3234-13	2	Screw-HHF
36	32144-11	2	Screw-HWHTF
37	92-5840	1	Bracket-Oil Filter
38	74-6400	1	Filter Line Tube ASM
39	340-8	1	Fitting-Hydraulic Straight (Incl. Ref. #12 & 33)
40	92-5821	1	Filter Head ASM
41	86-3010	1	Filter-Oil
43	340-139	1	Fitting-Hydraulic 90Ø (Incl. Ref. #12 & 33)
44	323-5	3	Screw-HH
45	63-8410	3	Washer
46	240-11	3	Bushing-Flange
47	75-0550	1	Suction-Strainer
48	354-87	1	Fitting-HYD, 90
49	2412-34	1	Clamp-Hose
50	82-5110	1	Hose - Suction

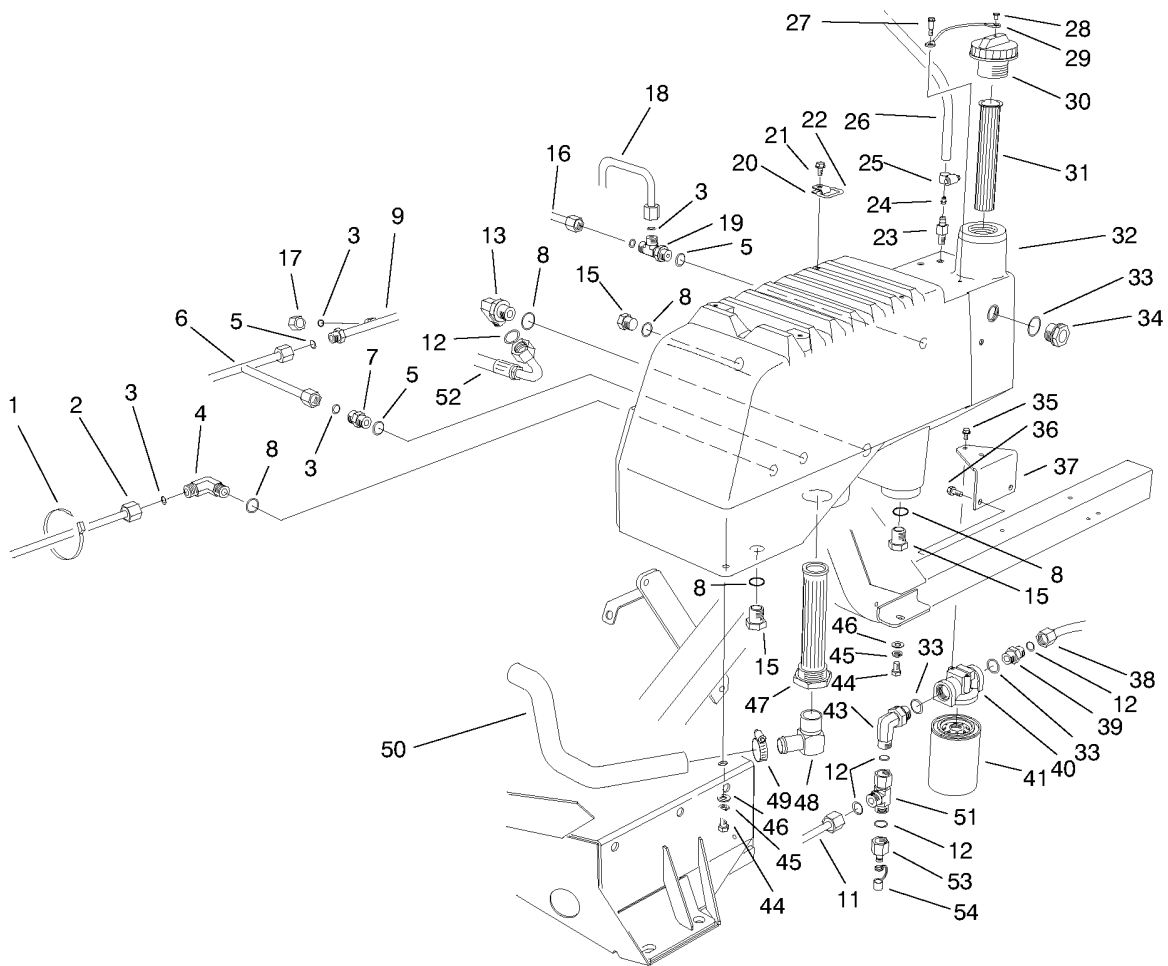

Hydraulic Reservoir Assembly (continued)

Ref.	Part Number	Qty.	Description
51	340-147	1	Fitting-Hydraulic (Incl. Ref. #12)
52	92-9715	1	Hose Assy


Ref.	Part Number	Qty.	Description
53	86-5860	1	Nipple
54	353-947	1	Cap-Dust, Rubber

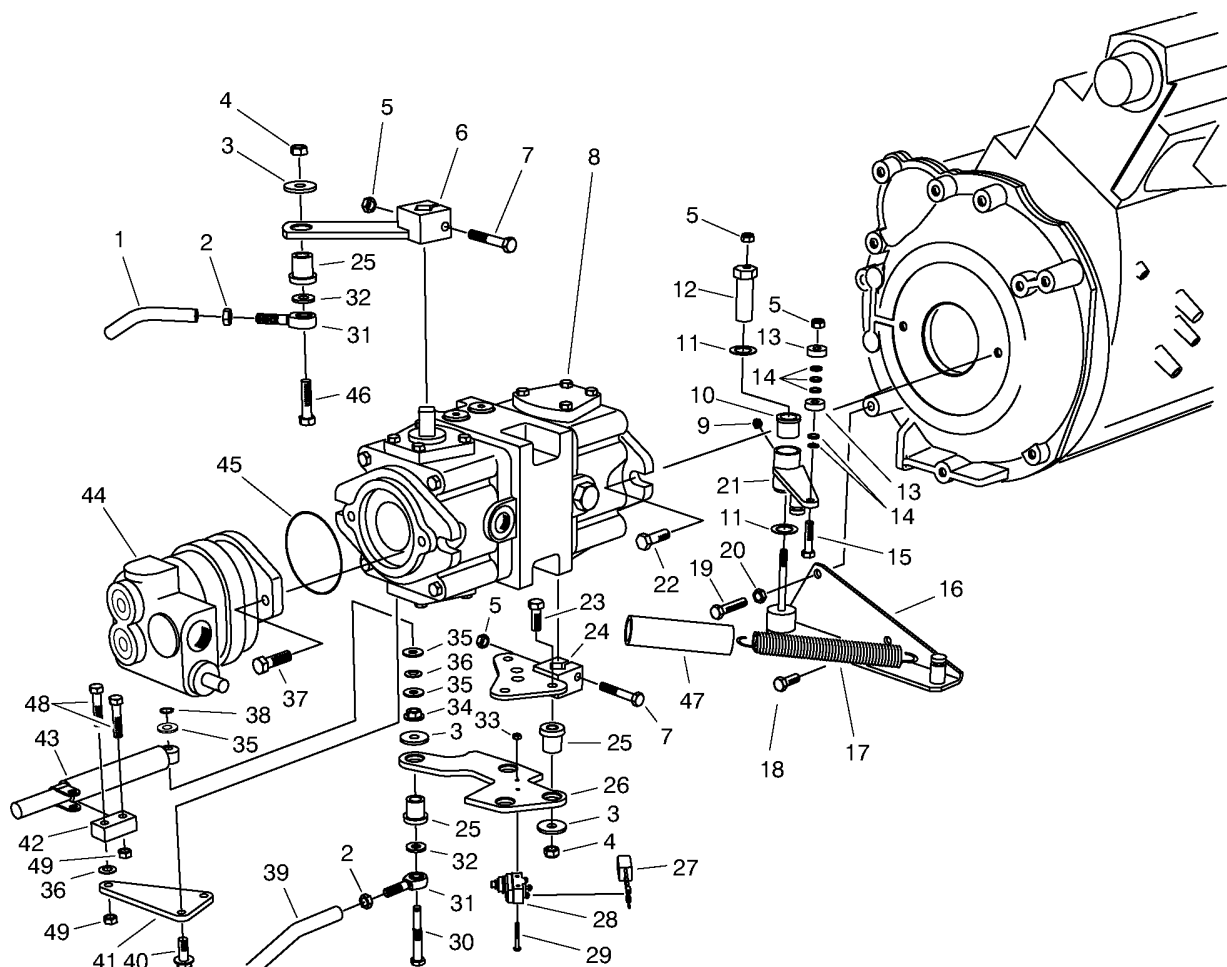

Hydraulic Pump Installation Assembly

Ref.	Part Number	Qty.	Description
1	82-5160	1	Rod - Reel Lever
2	3220-3	2	Nut-HJ
3	63-8410	5	Washer
4	3296-59	4	Nut-Lock, NI
5	3296-29	4	Nut-Lock, NI
6	82-5130	1	Reel Lever Wa*b
7	322-10	2	Screw-HH
8	82-5100	1	Tandem Pump Assy
9	302-5	1	Fitting-Grease
10	256-113	2	Bushing-Flange
11	3-6498	2	Washer-Thrust
12	76-8640	1	Stud-Traction
13	251-259	2	Bearing-Ball
14	75-5470	5	Spacer-Bearing
15	322-7	1	Screw-HH
16	82-5270	1	Bracket Spring Wa *b
17	76-9430	1	Spring-Extension
18	323-6	1	Screw-HH
19	57-3210	1	Screw
20	3217-7	1	Nut-Hex
21	92-2581	1	Neutral Switch Arm ASM
22	82-5050	2	Screw-HH
23	323-29	3	Screw-HH
24	82-5180	1	Control-Pump
25	63-9751	5	Mount

Ref.	Part Number	Qty.	Description
26	82-5170	1	Plate-Pump Control
27	86-3020	1	Wire-Switch, Neutral
28	29-6163	1	Switch-Micro
29	3249-11	2	Screw-Machine
30	82-5280	1	Shaft-Pivot
31	2411-36	2	Bearing-End, Rod
32	3256-3	2	Washer-Flat
33	3296-9	2	Nut-Lock
34	3290-357	1	Nut-HHF, Whiz
35	3256-71	3	Washer-Flat
36	3290-477	2	Washer-Curved
37	323-7	2	Screw-HH
38	32151-73	1	Ring-Clip
39	82-5290	1	Control Rod *b
40	32144-26	2	Screw-Flow, Taptite
41	82-5240	1	Plate-Pivot
42	76-9760	1	Damper-Pivot
43	76-8870	1	Lever Damper ASM
44	92-5824	1	Gear Pump Assy
45	237-161	1	O-Ring
46	323-8	1	Screw-HH
47	84-1480	1	Hose-Dampener
48	322-6	2	Screw-HH
49	3296-47	2	Nut-Lock, NI

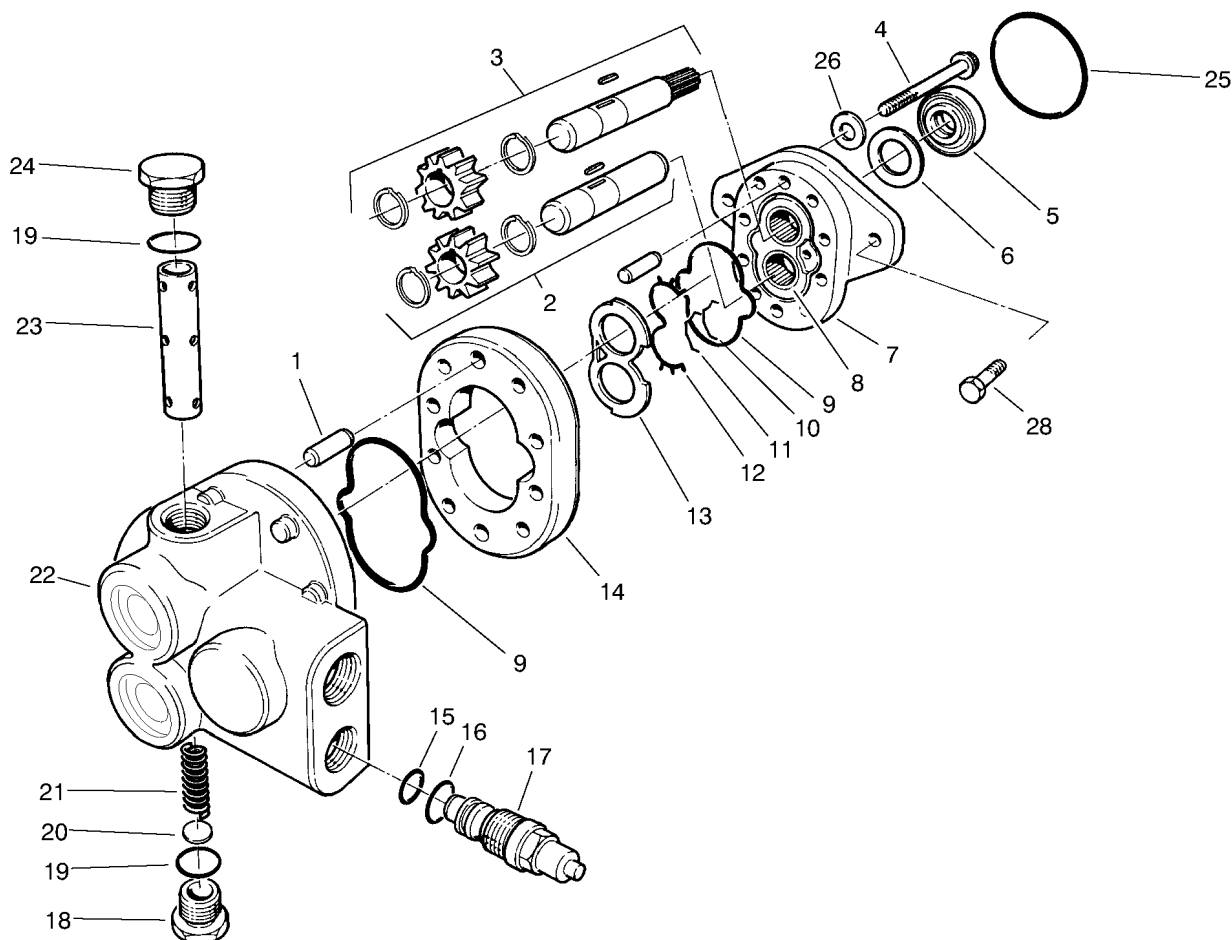


Gear Pump Assembly No. 92-5824

Ref.	Part Number	Qty.	Description
1		4	Pin-Dowel ■
2	74-8960	1	Idler Gear Assy
3	74-8970	1	Drive Gear Assy
4	42-3150	8	Capscrew
5	49-2640	1	Seal-Shaft
6	60-5890	1	Washer
7	49-2660	1	Frontplate Assembly (Incl. Ref. #8)
8		2	Bearing-Needle ■
9	56-6710	2	O-Ring
10	49-2680	1	Molded O-Ring
11	49-2700	1	Bearing Seal
12	49-2690	1	Gasket - Backup
13	49-2670	1	Wear Plate
14	74-8950	1	Body Assembly (Incl. Ref. #1)
15		1	Seal-O-Ring ■

Ref.	Part Number	Qty.	Description
16		1	Seal-O-Ring ■
17	74-9000	1	Relief Valve Assy. (Incl. Ref. #15 & 16)
18	60-5710	1	Plug Assembly (Incl Ref. #19)
20	60-5730	0	Disc
21	60-5820	1	Spring
22	92-7783	1	Backplate Assembly ■
23	74-8990	1	Spool Assy ■
24	60-5860	1	Plug Assembly (Incl. Ref. #19)
25	237-161	1	O-Ring
26	74-8920	4	Washer-Copper
28	323-7	2	Screw-HH
	74-9020	1	Backplate Repair Kit ●
	74-9010	1	Seal Kit ●

● Not illustrated


■ Not serviced separately

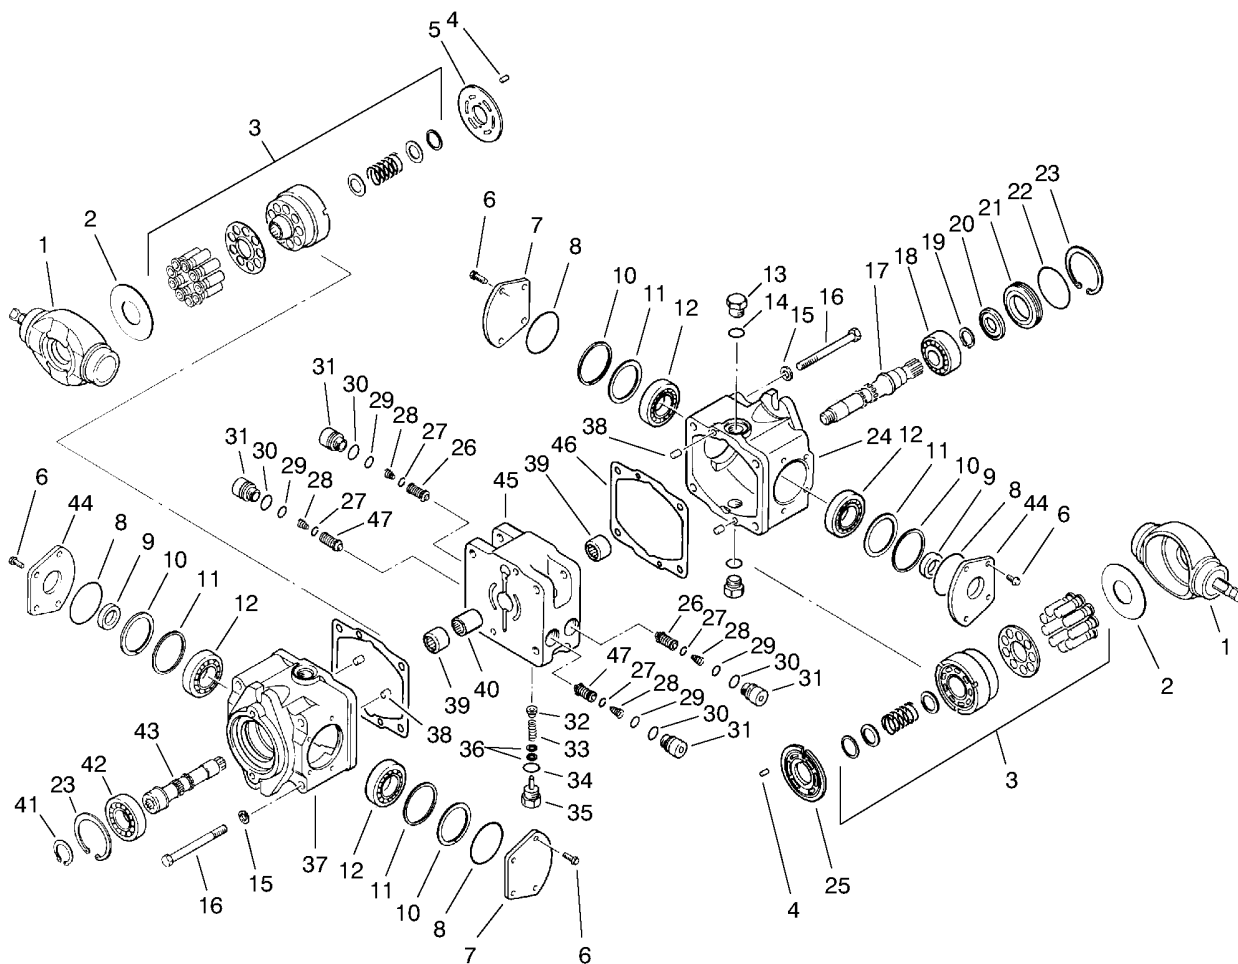

Tandem Pump Assembly No. 82-5100

Ref.	Part Number	Qty.	Description
1	84-0250	2	Swashplate-Variable
2	75-0400	2	Plate-Thrust
3	75-0470	2	Cylinder Block Kit
4	75-0510	2	Pin
5	84-0290	1	Plate - Valve, LH
6	84-0460	16	Screw-HWHTF
7	84-0440	2	Cover-Trunnion
8	84-0430	4	O-Ring
9	84-0470	2	Seal-Lip
10	84-0270	4	Spacer-Trunnion
11	84-0570	4	Shim-Trunnion, Composite
12	84-0260	4	Bearing-Roller, Tapered
13	353-551	3	Plug Assembly (Incl. Ref. #14)
14	237-80	3	O-Ring
15	84-0360	8	Washer
16	84-0330	8	Screw-HH
17	84-0300	1	Shaft - Pump
18	84-0310	1	Bearing-Ball
19	84-0320	1	Ring-Retaining
20	84-0400	1	Seal-Lip
21	84-0410	1	Carrier-Seal
22	28-3520	1	O-Ring
23	84-0380	2	Ring-Retaining, Internal


Ref.	Part Number	Qty.	Description
24	84-0240	1	Housing-Pump
25	84-0280	1	Plate-Valve, RH
26	84-0540	2	Valve
27	84-0550	4	Ring-Retaining
28	75-0140	4	Spring-Conical
29	75-0240	4	O-Ring
30	84-0560	4	O-Ring
31	84-0520	4	Plug - Special
32	84-0480	1	Poppet-Relief, Charge
33	84-0490	1	Spring-Compression
34	28-3570	1	O-Ring
35	84-0500	1	Charge Relief Plug ASM
36	84-0580	1	Shim-Charge Relief
37	84-0340	1	Housing - Pump
38	75-0480	4	Pin
39	75-0500	2	Bearing-Needle
40	84-0230	1	Coupling
41	84-0390	1	Ring - Retaining
42	84-0370	1	Bearing - Ball
43	84-0350	1	Shaft - Pump
44	84-0450	2	Cover-Trunnion
45	84-0220	1	Center Section
46	84-0210	2	Gasket-Cap, End
47	84-0530	2	Valve - Scr, 175 Bar

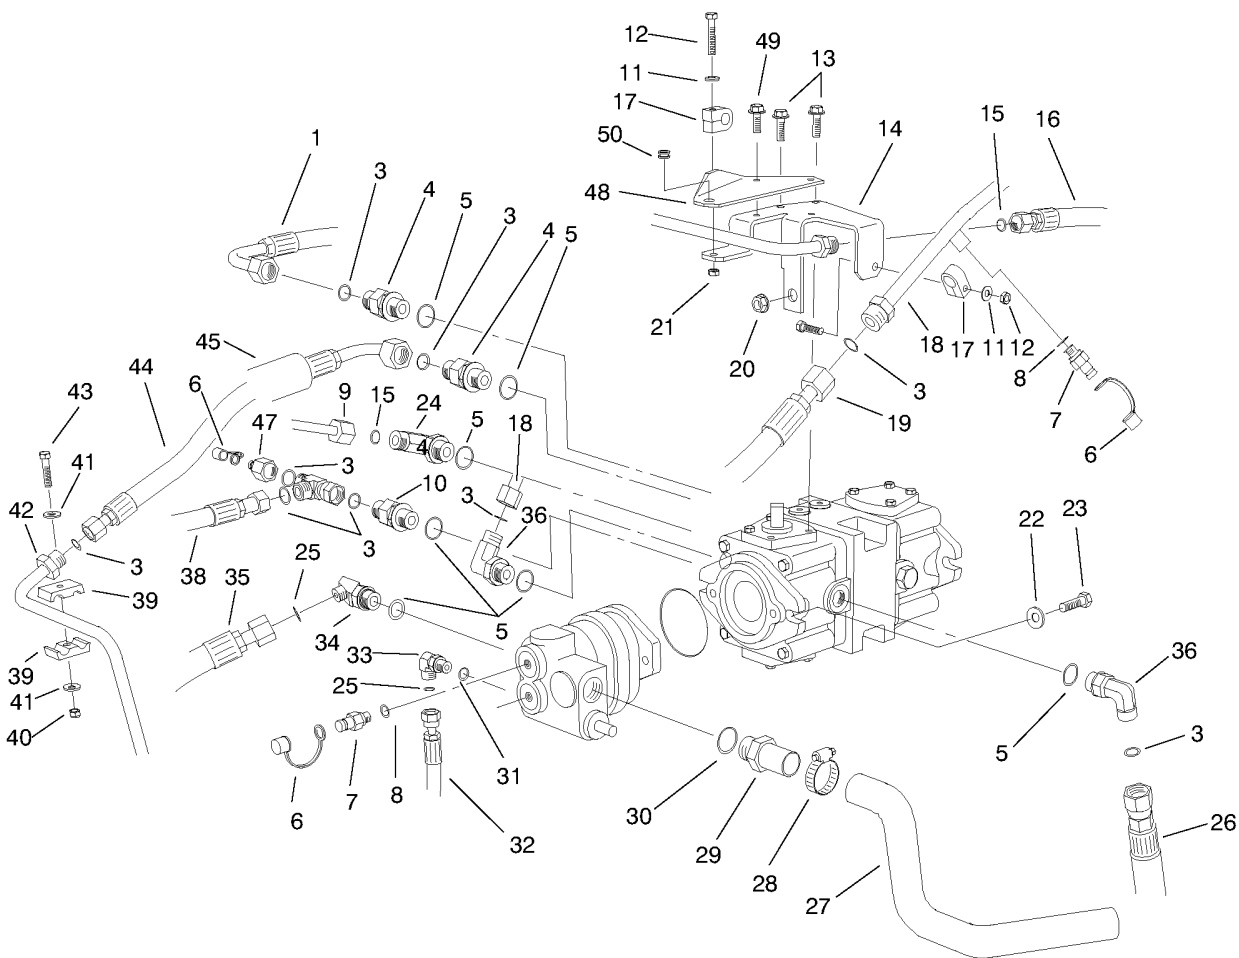

Hydraulic Pump Fittings Assembly

Ref.	Part Number	Qty.	Description
1	86-2740	1	Hose ASM
3	237-65	7	O-Ring
4	340-7	3	Fitting-Hydraulic Straight (Incl. Ref. #3 & 5)
5	237-80	6	O-Ring
6	353-947	4	Cap-Dust, Rubber
7	354-77	5	Fitting-Test Port (Incl. Ref. #8)
8	237-78	5	O-Ring
9	82-5320	1	Hydraulic Tube Assembly (Incl. Ref. #15)
10	340-147	1	Fitting-HYD, Tee
11	3256-22	2	Washer-Flat
12	321-9	2	Screw-HH
13	32144-26	2	Screw-Flow, Taptite
14	82-5340	1	Pump Bracket *b
15	237-30	2	O-Ring
16	92-6575	1	Hose Assy
17	82-5361	2	Clamp -Pipe, Single
18	82-5310	1	Hydraulic Tube Assembly (Incl. Ref. #3)
19	86-2750	1	Hose Assy - LH Traction
20	32128-37	1	Nut-HF
21	3296-42	2	Nut-Lock, NI
22	3256-4	1	Washer-Flat
23	324-6	1	Screw-HH
25	237-22	2	O-Ring
26	92-9715	1	Hose Assy

Ref.	Part Number	Qty.	Description
27	82-5110	1	Hose - Suction
28	2412-34	1	Clamp-Hose
29	354-78	1	Fitting-Hydraulic Hose (Incl. Ref. #30)
30	237-146	1	O-Ring
31	237-79	1	O-Ring
32	86-5570	1	Hose ASM
33	340-18	1	Fitting-Hydraulic 90° (Incl. Ref. #25 & 31)
34	340-138	1	Fitting-Hydraulic 45° (Incl. Ref. #5 & 25)
35	84-0850	1	Hose Assy
36	340-17	2	Fitting-Hydraulic 90° (Incl. Ref. #3 & 5)
38	92-7769	1	Hose Assy
39	56-7977	2	Clamp-Tube
40	3296-29	1	Nut-Lock, NI
41	3256-3	2	Washer-Flat
42	92-6572	1	Hydraulic Tube Assembly (Incl. Ref. #3)
43	322-7	1	Screw-HH
44	82-5350	1	Hose Assy - LH Reel
45	56-7985	1	Sleeve-Protective
47	86-5860	1	Nipple
48	92-5842	1	Brkt-Prop Rod *b
49	32144-11	2	Screw-HWHTF
50	237-136	1	Grommet

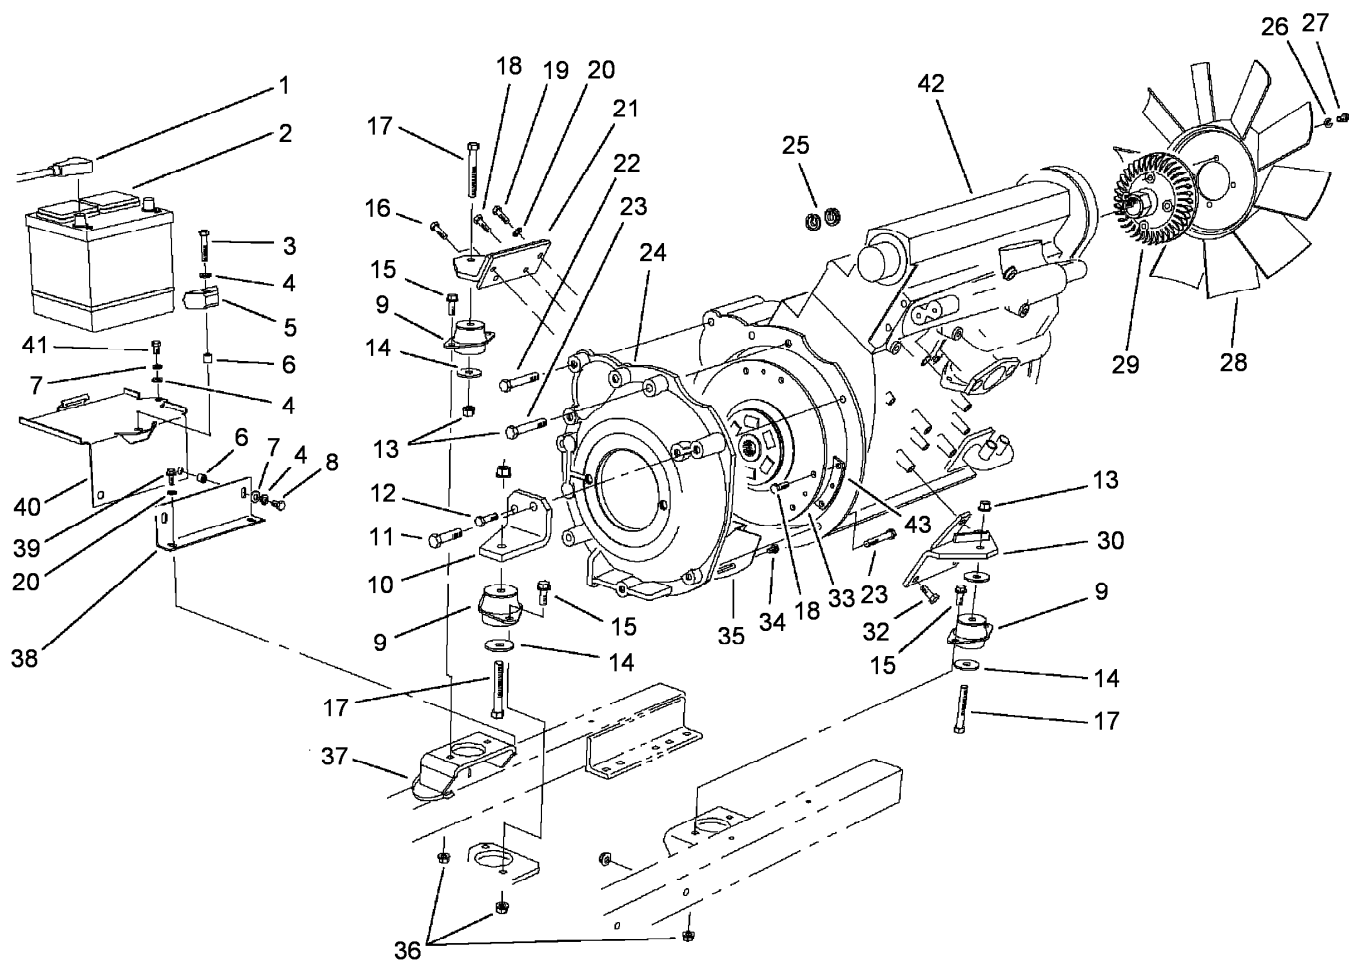


Engine and Battery Installation Assembly

Ref.	Part Number	Qty.	Description
1	74-9080	1	Cable-Battery, Positive
	74-9090	1	Cable-Battery, Negative ●
2		1	Battery ■
3	323-9	1	Screw-HH
4	3256-24	4	Washer-Flat
5	66-2490	1	Retainer-Battery
6	32148-9	3	Insert-Nut
7	3253-21	3	Washer-Lock
8	323-33	2	Capscrew
9	53-9681	3	Mount-Engine-Yellow
10	74-5470	1	Mount-Engine
11	48-7840	1	Bolt
12	48-9470	1	Screw
13	32128-37	3	Nut-HF
14	87-5100	3	Washer-Snubbing
15	3234-11	8	Screw-HHF
16	48-9460	1	Screw-HH
17	324-12	3	Screw-HH
18	48-7700	8	Screw-HH
19	48-7730	1	Screw-HH
20	3255-8	2	Washer-Lock
21	76-4120	1	Mount-Engine

Ref.	Part Number	Qty.	Description
22	48-7810	3	Screw
23	48-7570	3	Screw-HH
24	82-5120	1	Plate-Adaptor
25	86-2990	2	Mount-Cable, Throttle
26	3253-4	4	Washer-Lock
27	322-3	8	Screw-HH
28	74-3650	1	Fan
29	74-5520	1	Clutch-Fan
30	76-4220	1	Mount-Engine
32	48-7780	3	Screw
33	94-1421	1	Coupling-Center Spring
34	48-7610	3	Screw
35	77-3600	1	Shield-Adapter
36	3290-357	6	Nut-HHF, Whiz
37	3290-378	1	Tie-Cable
38	76-4310	1	Bracket-Battery Base
39	32144-11	2	Screw-HWHTF
40	14-0949	1	Battery Base Assembly (Incl. Ref. #6)
41	323-4	1	Screw-HH
42	74-5511	1	Engine Assembly
43	94-1422	3	Spacer - Coupling

● Not illustrated


■ Not serviced separately

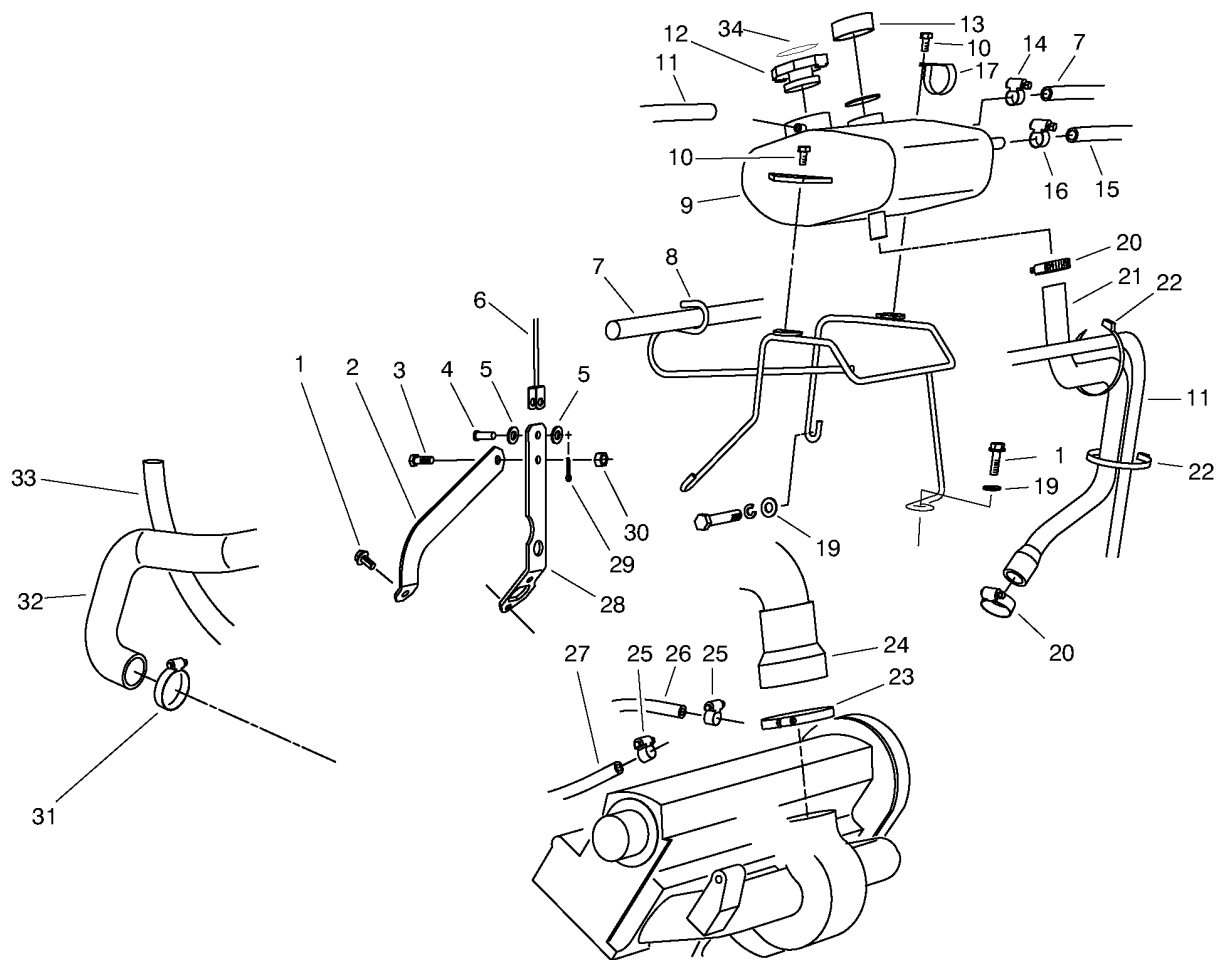

Engine Plumbing Assembly

Ref.	Part Number	Qty.	Description
1	77-3900	2	Screw - Hex Head,Metric
2	74-4050	1	Bracket - Hood Stop*b
3	3234-5	1	Screw-HHF
4	283-58	1	Pin-Clevis
5	62-1230	2	Washer-Rubber
6	66-2871	1	Cable-Stop, Hood
7	74-6040	1	Hose Return
8	92-6579	1	Wire Form Wa
9	77-3550	1	Degassing Box F/W
10	46-6810	2	Screw And Washer ASM
11	55-4130	1	Hose-Fuel
12	66-3240	1	Cap-Radiator
13	77-3560	1	Plug & Gasket F/W
14	2412-119	3	Clamp-Worm
15	74-9120	1	Hose-Overflow, Radiator
16	2412-36	1	Clamp-Hose
17	2412-96	1	Clamp-R

Ref.	Part Number	Qty.	Description
19	3256-3	1	Washer-Flat
20	2412-129	2	Clamp-Hose
21	74-6010	1	Hose - Over Flow
22	3290-378	2	Tie-Cable
23	2412-125	1	Clamp-Hose
24	74-6030	1	Hose - Air Cleaner
25	2412-108	2	Clamp-Worm
26	63-7627	1	Hose-Fuel
27	63-7622	1	Hose-Fuel
28	77-3890	1	Bracket - Hood Stop *b
29	3272-10	1	Pin-Cotter
30	32128-20	1	Nut-HF
31	2412-3	2	Clamp-Hose
32	74-5930	1	Hose - Rad Upper
33	74-9122	1	Hose-Overflow, Radiator
34	93-7840	1	Decal-Cap, Radiator

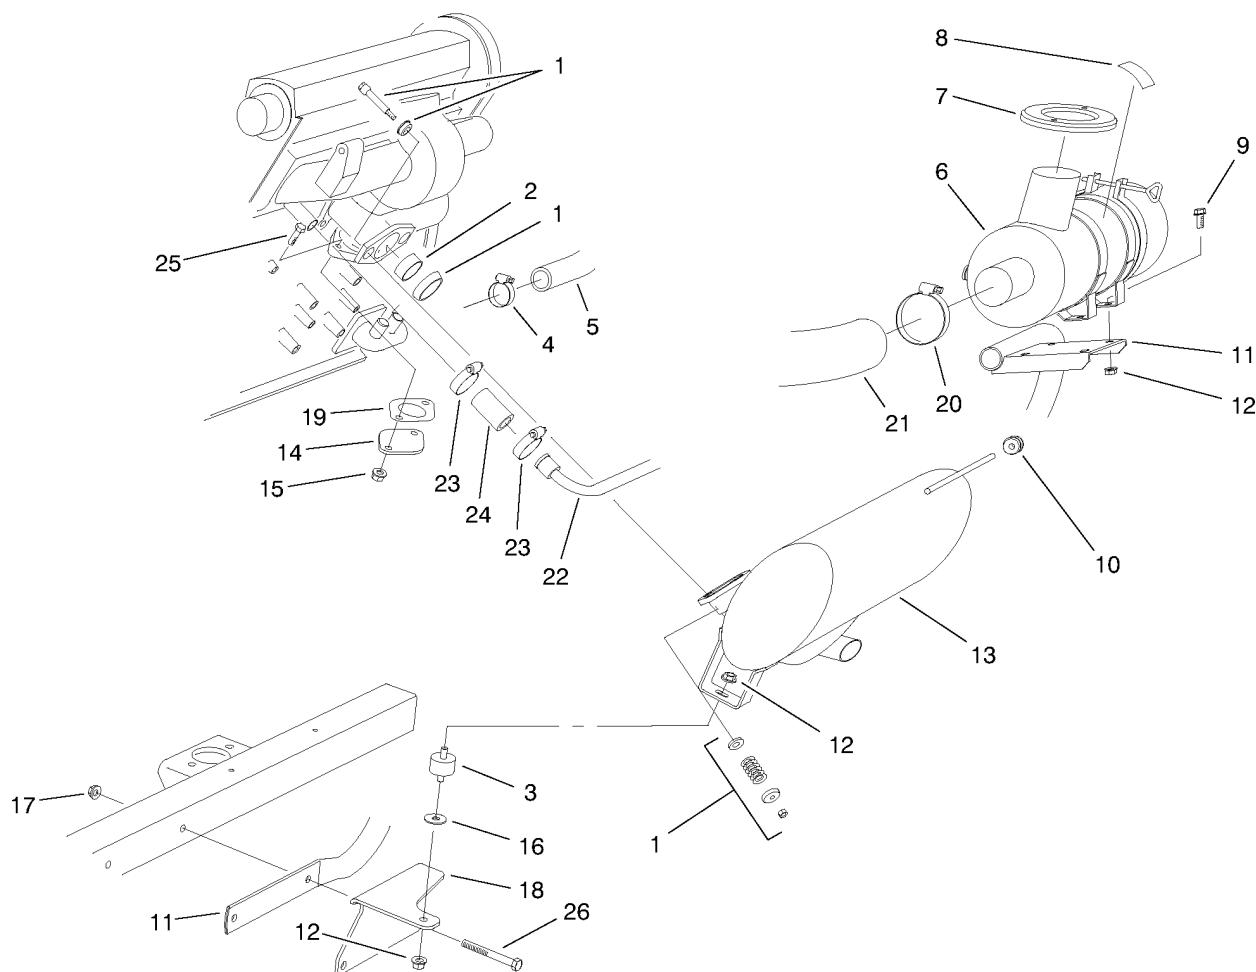


Muffler and Air Cleaner Installation Assembly

Ref.	Part Number	Qty.	Description
1	94-2814	1	Kit-Coupler, Exhaust
2	94-2815	1	Sleeve - Exhaust Flange
3	94-5608	1	Mount-Rubber
4	2412-3	2	Clamp-Hose
5	74-6020	1	Hose-Radiator, Lower
6	74-6000	1	Air Cleaner
7	88-1490	1	Holder-Foam
8	83-9150	1	Decal-Fluid, Starting
8	93-7275	1	Decal-Fluid, Starting
9	322-3	4	Screw-HH
10	94-2812	1	Grommet
11	92-6578	1	Bracket-Air Cleaner
12	32128-20	6	Nut-HF
13	94-8012	1	Muffler ASM


Ref.	Part Number	Qty.	Description
	94-5637	1	Muffler - Spark Arrest ●
14	92-7382	1	Cover-Manifold
15	33004-00	2	Nut-HF
16	62-9510	1	Washer-Lever, Brake
17	32128-19	2	Nut-HF
18	93-7245	1	Bracket-Support
19	77-3700	1	Gasket-Muffler, Exhaust
20	2412-130	1	Clamp-Hose
21	74-6030	1	Hose - Air Cleaner
22	92-7381	1	Tube-Return, Water
23	2412-129	2	Clamp-Hose
24	74-6490	2	Hose-Line, Water
25	33104-02	2	Screw-Hex. Hd. Flange
26	323-20	2	Screw-HH

● Not illustrated

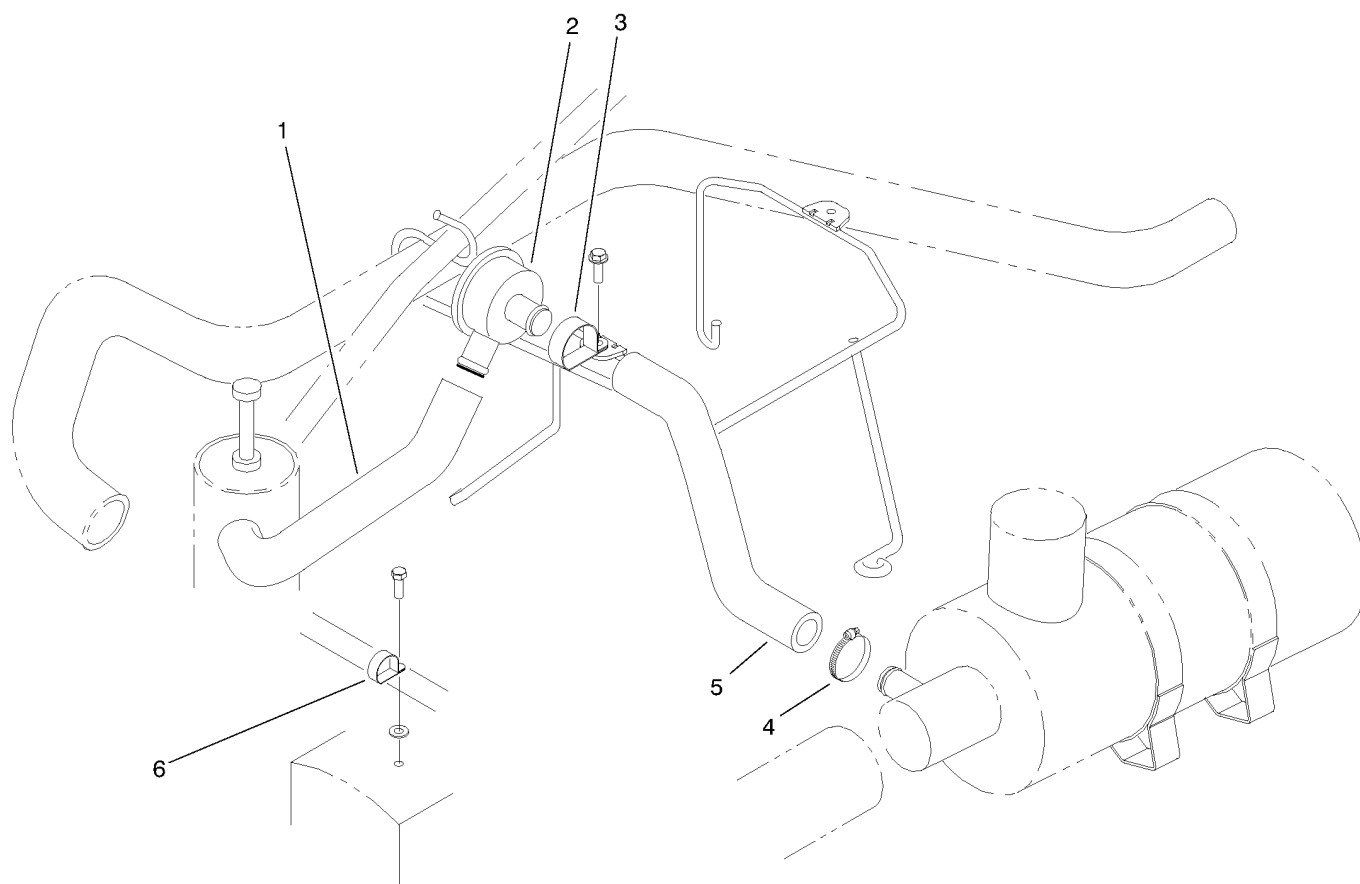

PCV Valve Plumbing Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-5847	1	Hose - Pcv Valve
2	74-5760	1	Valve Pvc F/W
3	2412-104	1	R-Clamp
4	2412-129	4	Clamp-Hose
5	92-2588	1	Hose - Air Cleaner, Pcv
6	2412-134	1	Clamp-R

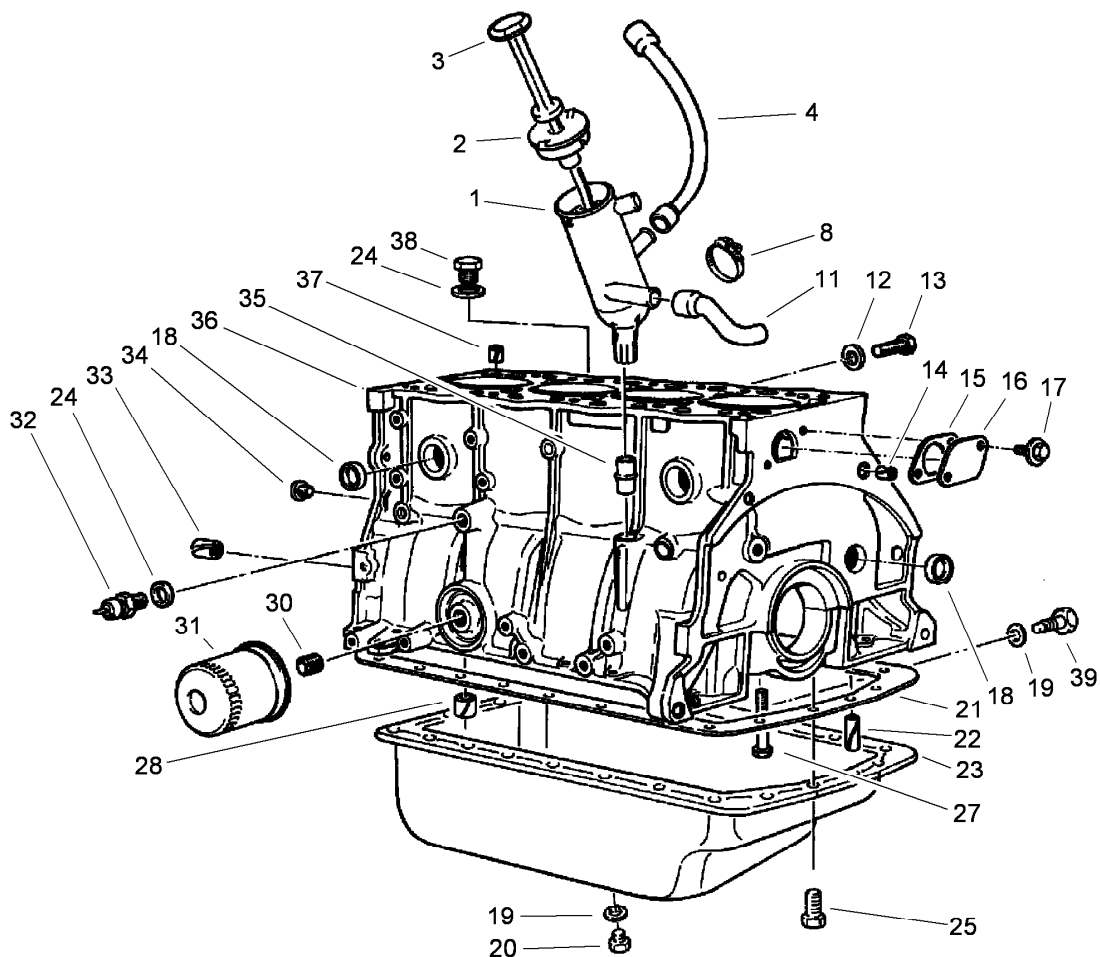

Crankcase Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	74-8050	1	Oil Decanter	24	74-7850	2	Gasket
2	74-7690	1	Filler Cap	25	74-7330	23	Screw-HH
3	74-7700	1	Oil Dipstick	27	74-7930	10	Capscrew-Bearing
4	74-7710	1	Breather Hose	28	74-7940	1	Spring Bushing
8	2412-129	4	Clamp-Hose	30	74-7960	1	Filter Stud
11	74-7770	1	Hose - Crank Case	31	74-7970	1	Oil Filter
12	74-7780	1	Gasket	32	74-7980	1	Pressure Switch
13	74-7790	1	Screw	33	74-7990	4	Pin
14	74-7800	2	Spring Pin	34	74-8000	2	Plug
15	74-7810	1	Gasket-Plate	35	74-8010	1	Tube
16	74-7820	1	Plate	36	74-8020	1	Shortblock Assembly (Incl. Pistons)
17	74-7830	2	Screw - Washer HD	37	74-8030	1	Spring Pin
18	74-7840	8	Plug	38	74-8040	1	Plug
19	74-7320	2	Gasket-Oil Drain Plug	39	100-1389	1	Plug-Drain
20	74-7310	1	Plug		74-7860	1	Gasket Set ●
21	74-7380	1	Oil Sump Gasket		92-7786	1	Cylinder Block/Head ASM ●
22	74-7880	2	Groove Pin				
23	74-7300	1	Oil Sump Assy				

● Not illustrated

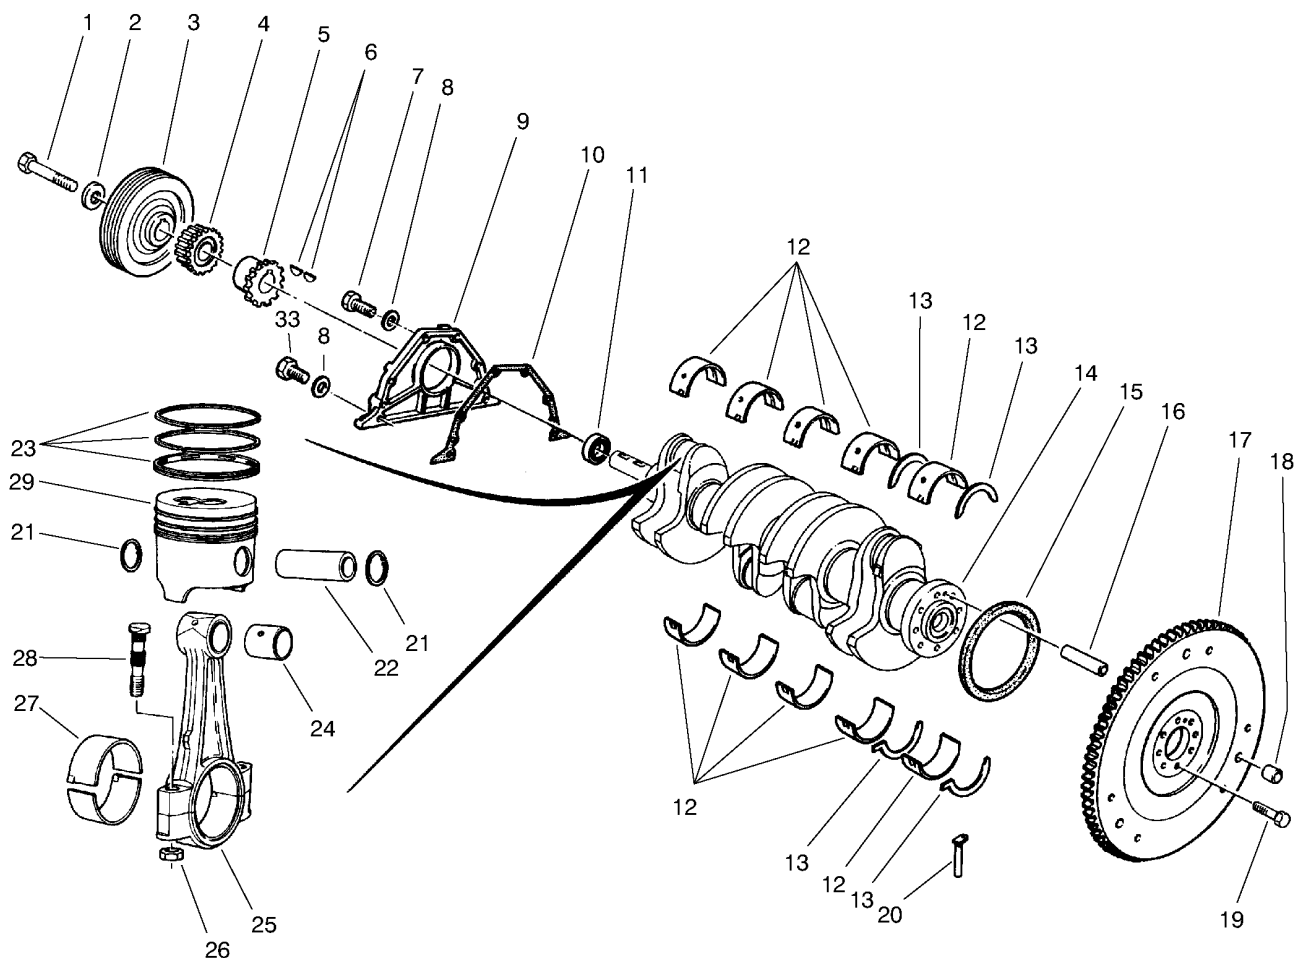


Crankshaft Assembly

Ref.	Part Number	Qty.	Description
1	74-8070	1	Screw Hex HD
2	74-8080	1	Washer
3	74-8090	1	Pulley
4	74-8100	1	Pinion Gear
5	74-8110	1	Oil Pump Sprocket
6	74-8120	2	Key - Woodruff
7	74-8130	4	Screw - Hex HD
8	74-7560	6	Lockwasher
9	74-8140	1	Cover
10	74-8150	1	Cover Gasket
11	74-8160	1	Seal-Shaft
12	74-8170	1	Bearing Set (STD)
	74-8180	1	Bearing Set (.30Mm Os) ●
13	74-8190	2	Thrust Bearing Set (Std.)
	74-8200	2	Thrust Bearing Set ●
	74-8210	2	Thrust Bearing Set ●
	74-8220	2	Thrust Bearing Set ●
14	74-8230	1	Crank Shaft
15	74-8240	1	Seal
16	74-8250	1	Pin
17	74-8260	1	Flywheel
18	74-8270	3	Pin
19	74-8280	8	Screw Hex HD
20	74-8290	2	Cap-Bearing

Ref.	Part Number	Qty.	Description
21	74-8300	8	Piston Pin Clip
22	74-8310	4	Piston Pin
23	74-8320	4	Piston Ring Set
	74-8330	4	Piston Ring Set ●
	74-8340	4	Piston Ring Set ●
	94-3158	4	Piston Ring Set ●
24	74-8350	4	Bushing-Sleeve
25	74-8360	1	Connecting Rod
26	74-8370	8	Hex Nut
27	74-8380	1	Bearing-Connecting Rod
	74-8390	1	Brg - Connecting Rod ●
28	74-8400	4	Bolt - Connecting Rod
29	74-8420	1	Piston Set-Stage #1 (83.13Mm Od) (Incl. Ref. #21-23)
	74-8430	1	Piston Set-Stage #2 (83.43Mm Od) (Incl. Ref. #21-23)
	74-8440	1	Piston Set-Stage #3 (83.73Mm Od) (Incl. Ref. #21-23) ●
	94-3157	1	Piston Set ●
33	74-8570	2	Screw - Cap Hex HD

● Not illustrated

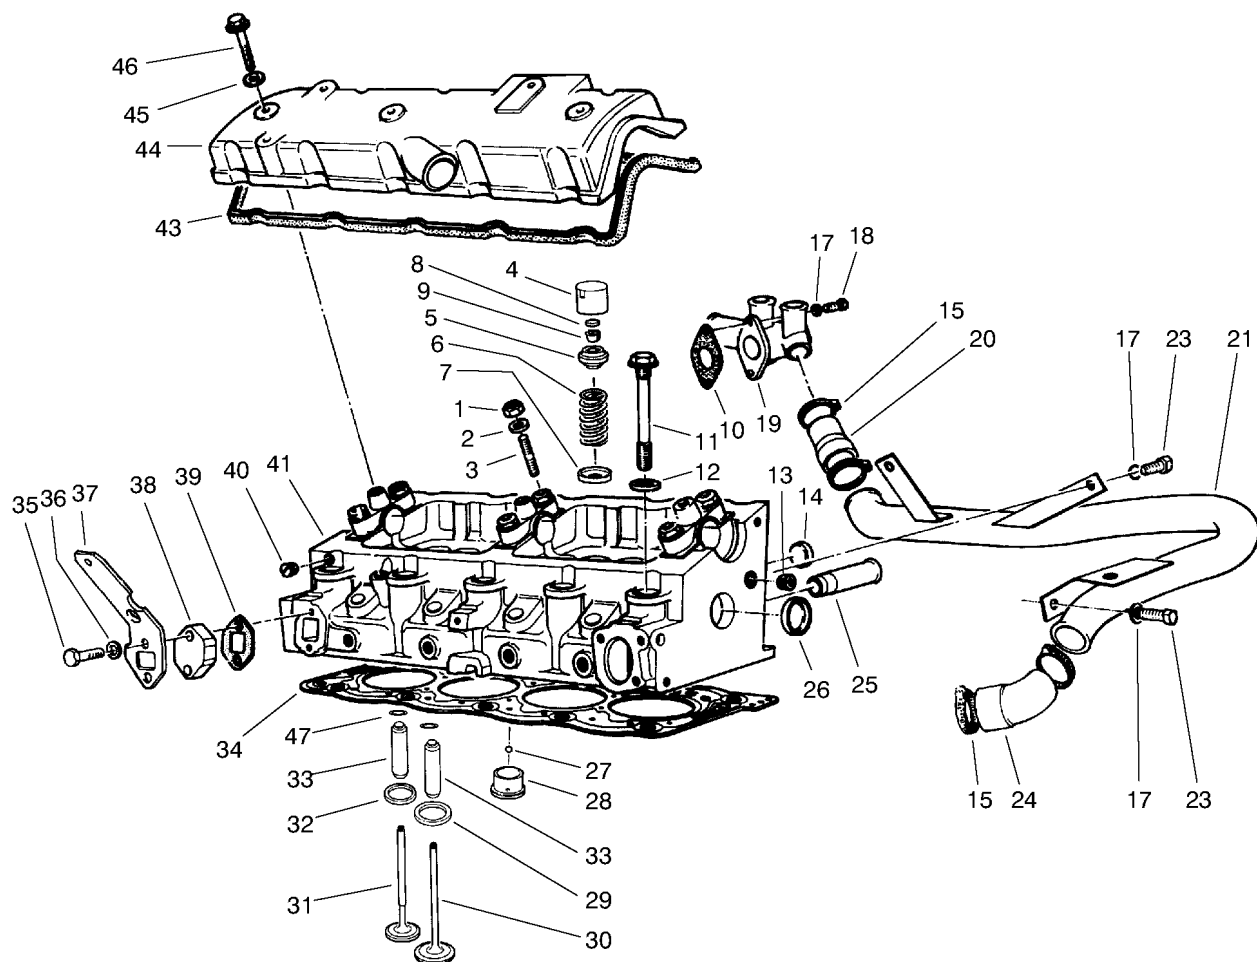


Cylinder Head Assembly

Ref.	Part Number	Qty.	Description
1	46-0330	6	Nut-Lock
2	74-6520	6	Flat Washer
3	76-5130	6	Stud
4	74-6540	8	Tappet - Valve
5	74-6550	8	Cup
6	74-6560	8	Valve Spring
7	74-6570	8	Cup-Lower Valve Spring
8	74-6580	8	Insert - Valve (1.65Mm)
	74-6600	8	Insert -Valve (1.800Mm) ●
	74-6610	8	Insert -Valve (1.900Mm) ●
	74-6620	8	Insert -Valve (1.975Mm) ●
	74-6630	8	Insert -Valve (2.050Mm) ●
	74-6640	8	Insert -Valve (2.125Mm) ●
	74-6650	8	Insert -Valve (2.225Mm) ●
	74-6660	8	Insert -Valve (2.250Mm) ●
	74-6670	8	Insert -Valve (2.275Mm) ●
	74-6680	8	Insert -Valve (2.300Mm) ●
	74-6690	8	Insert -Valve (2.325Mm) ●
	74-6700	8	Insert -Valve (2.350Mm) ●
	74-6710	8	Insert -Valve (2.375Mm) ●
	74-6720	8	Insert -Valve (2.400Mm) ●
	74-6730	8	Insert -Valve (2.425Mm) ●
	74-6740	8	Insert -Valve (2.450Mm) ●
	74-6750	8	Insert -Valve (2.475Mm) ●
	74-6760	8	Insert -Valve (2.500Mm) ●

Ref.	Part Number	Qty.	Description
	74-6770	8	Insert -Valve (2.525Mm) ●
8	74-6780	8	Insert -Valve (2.550Mm)
	74-6790	8	Insert -Valve (2.575Mm) ●
	74-6800	8	Insert -Valve (2.600Mm) ●
	74-6810	8	Insert -Valve (2.625Mm) ●
	74-6820	8	Insert -Valve (2.650Mm) ●
	74-6830	8	Insert -Valve (2.675Mm) ●
	74-6840	8	Insert -Valve (2.700Mm) ●
	74-6850	8	Insert -Valve (2.725Mm) ●
	74-6860	8	Insert -Valve (2.750Mm) ●
	74-6870	8	Insert -Valve (2.775Mm) ●
	74-6880	8	Insert -Valve (2.800Mm) ●
	74-6890	8	Insert -Valve (2.825Mm) ●
	74-6900	8	Insert -Valve (2.850Mm) ●
	74-6910	8	Insert -Valve (2.875Mm) ●
	74-6920	8	Insert -Valve (2.900Mm) ●
	74-6930	8	Insert -Valve (2.925Mm) ●
	74-6940	8	Insert -Valve (2.950Mm) ●
	74-6950	8	Insert -Valve (2.975Mm) ●
	74-6960	8	Insert -Valve (3.000Mm) ●
	74-6970	8	Insert -Valve (3.025Mm) ●
	74-6980	8	Insert -Valve (3.050Mm) ●
	74-6990	8	Insert -Valve (3.075Mm) ●
	74-7000	8	Insert -Valve (3.100Mm) ●
	74-7010	8	Insert -Valve (3.125Mm) ●

● Not illustrated

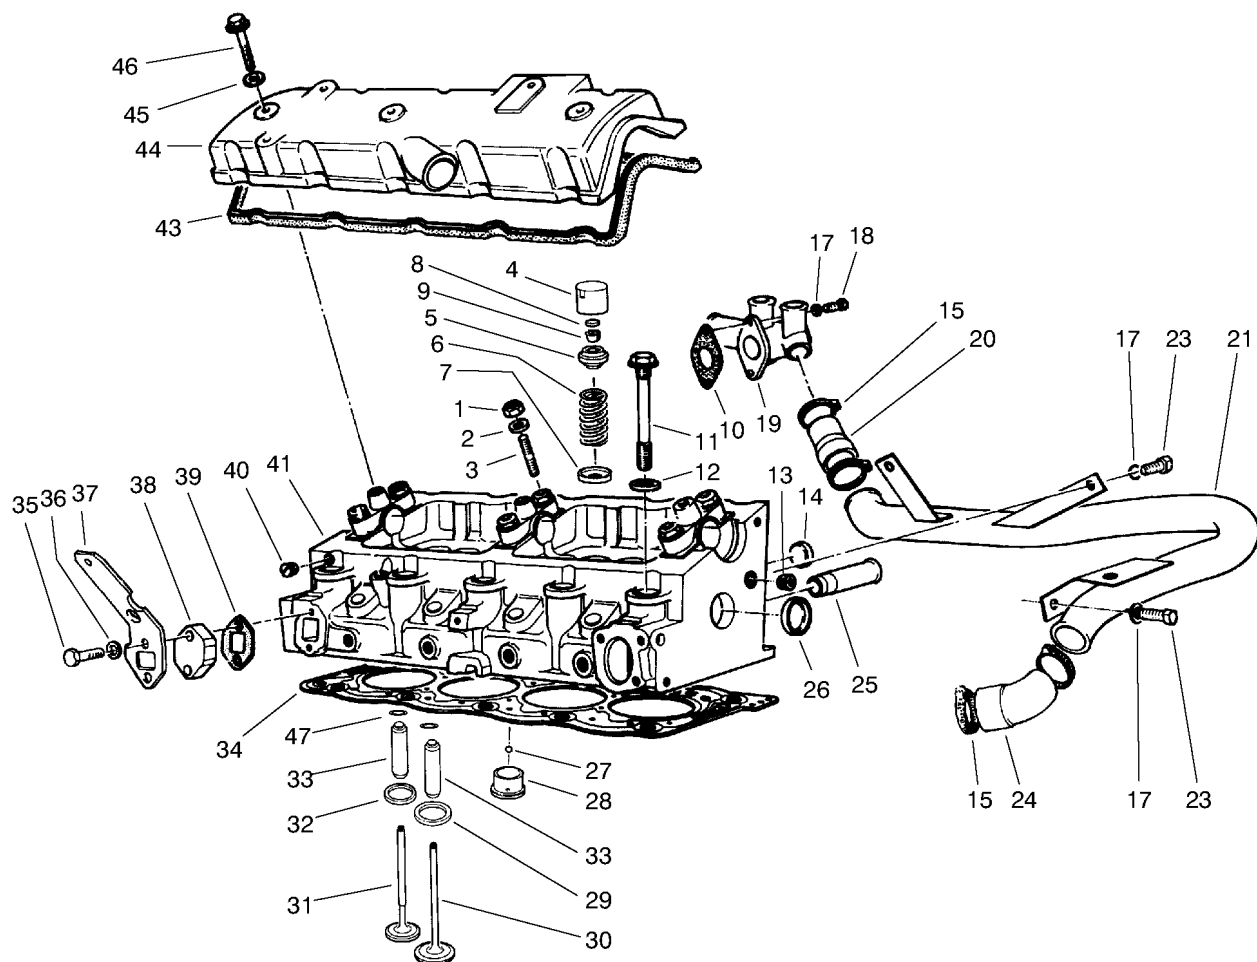


Cylinder Head Assembly (continued)

Ref.	Part Number	Qty.	Description
8	74-7020	8	Insert -Valve (3.150Mm) ●
	74-7030	8	Insert -Valve (3.175Mm) ●
	74-7040	8	Insert -Valve (3.200Mm) ●
	74-7050	8	Insert -Valve (3.225Mm) ●
	74-7060	8	Insert -Valve (3.250Mm) ●
	74-7070	8	Insert -Valve (3.275Mm) ●
	74-7080	8	Insert -Valve (3.300Mm) ●
	74-7090	8	Insert -Valve (3.325Mm) ●
	74-7100	8	Insert -Valve (3.350Mm) ●
	74-7110	8	Insert -Valve (3.375Mm) ●
	74-7120	8	Insert -Valve (3.400Mm) ●
	74-7130	8	Insert -Valve (3.425Mm) ●
	74-7140	8	Insert -Valve (3.450Mm) ●
	74-7150	8	Insert -Valve (3.475Mm) ●
	74-7160	8	Insert -Valve (3.500Mm) ●
	74-7170	8	Insert -Valve (3.550Mm) ●
	74-7180	8	Insert -Valve (3.625Mm) ●
	74-7190	8	Insert -Valve (3.700Mm) ●
	74-7200	8	Insert -Valve (3.775Mm) ●
	74-7210	8	Insert -Valve (3.850Mm) ●
	74-7220	8	Insert -Valve (3.925Mm) ●
	74-7230	8	Insert -Valve (4.000Mm) ●
9	74-7240	16	Split Collar
10	74-7250	1	Fitting Gasket
11	74-7260	10	Head Bolt

Ref.	Part Number	Qty.	Description
12	74-7270	10	Washer-Flat
13	74-7280	2	Plug
14	74-7840	2	Plug
15	2412-119	4	Clamp-Worm
17	68-9420	5	Washer-Lock
18	48-9460	2	Screw-HH
19	74-7340	1	Coolant Fitting
20	74-7350	1	Hose
21	74-7360	1	Collector Tube
23	48-7700	3	Screw-HH
24	74-7390	1	Elbow Hose
25	74-7400	1	Tube
26	74-7410	2	Plug
27	74-7420	4	Ball
28	74-7430	4	Chamber-Turbulence
	74-7440	4	Chamber - Turbulence ●
29	76-5240	4	Intake Valve Seat
30	74-7480	4	Intake Valve
31	92-7794	4	Valve - Exhaust
32	92-7795	4	Valve Seat
33	92-7792	8	Valve Guide (14.29 Mm)
	92-7793	8	Valve Guide (14.59 Mm) ●
34	94-8132	1	Gasket - Head, 1.48
	94-8133	1	Gasket - Head, 1.52 ●
	94-8134	1	Gasket - Head, 1.58 ●
	94-8135	1	Gasket - Head, 1.62 ●

● Not illustrated

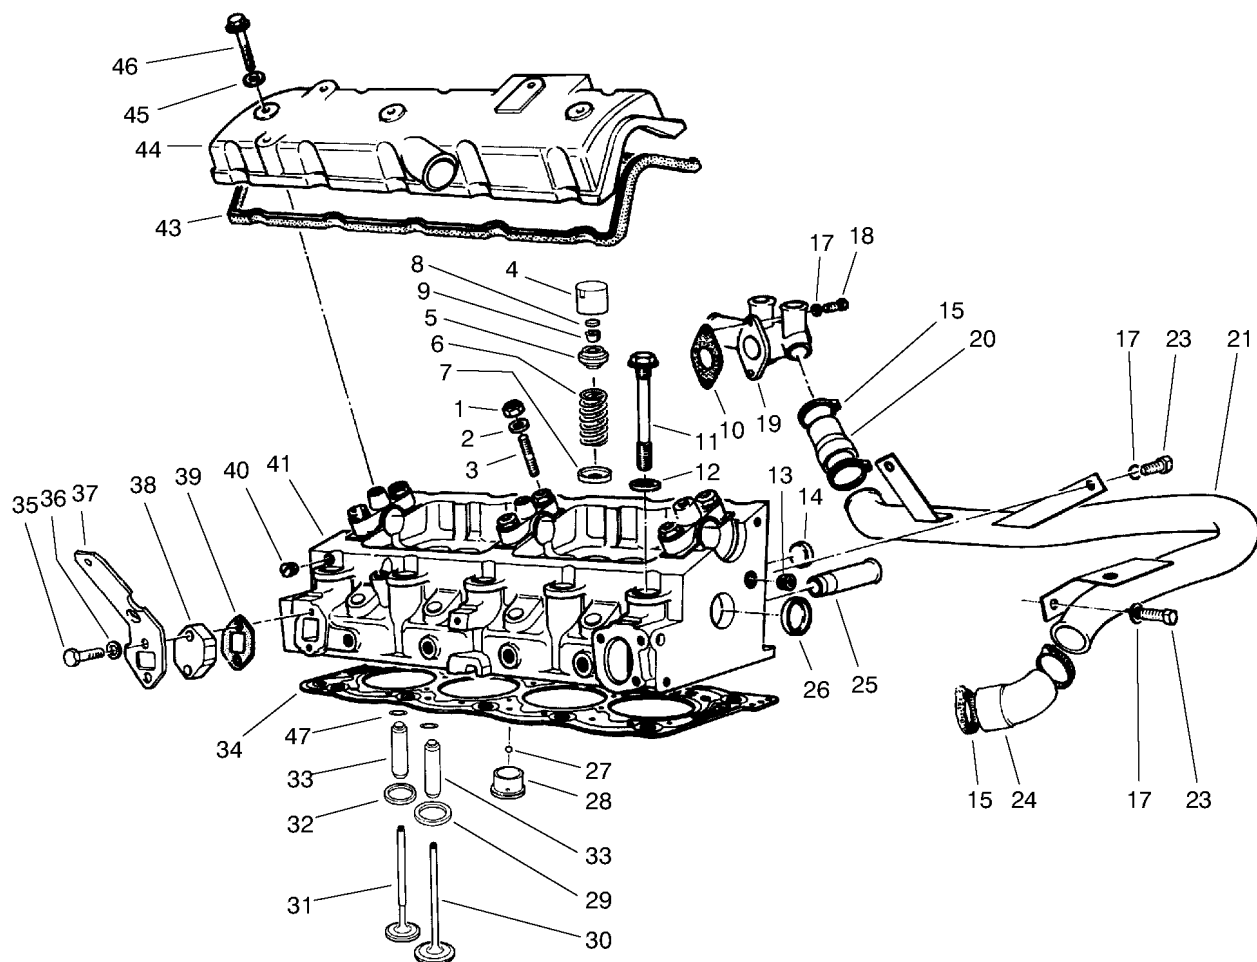


Cylinder Head Assembly (continued)

Ref.	Part Number	Qty.	Description
35	74-7550	2	Screw - Cap Hex HD
36	74-7560	2	Lockwasher
37	77-3890	1	Bracket - Hood Stop *b
38	74-7580	1	Plate
39	74-7590	1	Gasket
40	74-7600	4	Plug
41	76-5140	1	Cylinder Head Assembly (Incl. Ref. #32 & 33)


Ref.	Part Number	Qty.	Description
43	74-7630	1	Gasket - Valve Cover
44	74-7640	1	Valve Cover
45	74-7650	3	Washer - Flat
46	48-7640	3	Screw
47	92-7791	8	Valve - Stem Seal
	74-7670	1	Head Bolt & Washer Set (Incl. Ref. #11 & 12) ●
	94-9966	1	Cylinder Head ASM ●

● Not illustrated

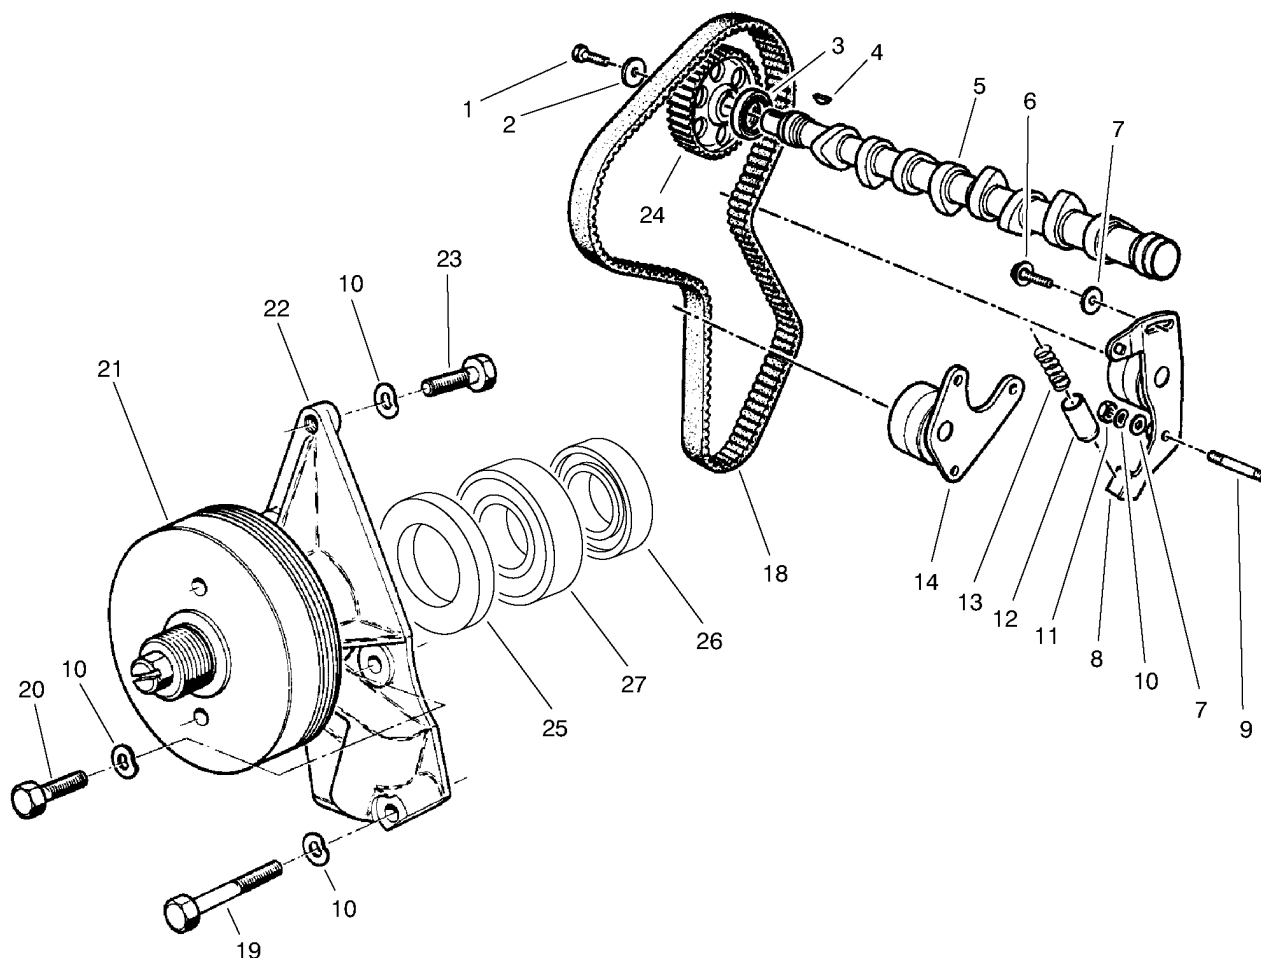


Camshaft and Fan Support Assembly

Ref.	Part Number	Qty.	Description
1	77-3440	2	Screw
2	77-3450	2	Washer
3	77-3420	2	Gasket
4	77-3410	1	Key
5	77-3400	1	Cam Shaft
6	77-3460	1	Screw
7	74-8900	2	Washer - Flat
8	77-3540	1	Roller ASM
9	74-6530	1	Stud
10	68-9420	6	Washer-Lock
11	46-0330	1	Nut-Lock
12	77-3520	1	Cup
13	77-3510	1	Spring
14	77-3500	1	Roller ASM
18	74-8830	1	Belt - Timing
19	60-6700	1	Bolt Hex HD
20	77-3360	3	Screw
21	77-3380	1	Pulley
22	92-7798	1	Support (Incl. Ref. #25-27)
23	77-3370	1	Screw
24	92-7787	1	Pulley-Camshaft
25	253-163	1	Seal
26	38-7820	1	Bearing-Ball
27	251-349	1	Ball Bearing

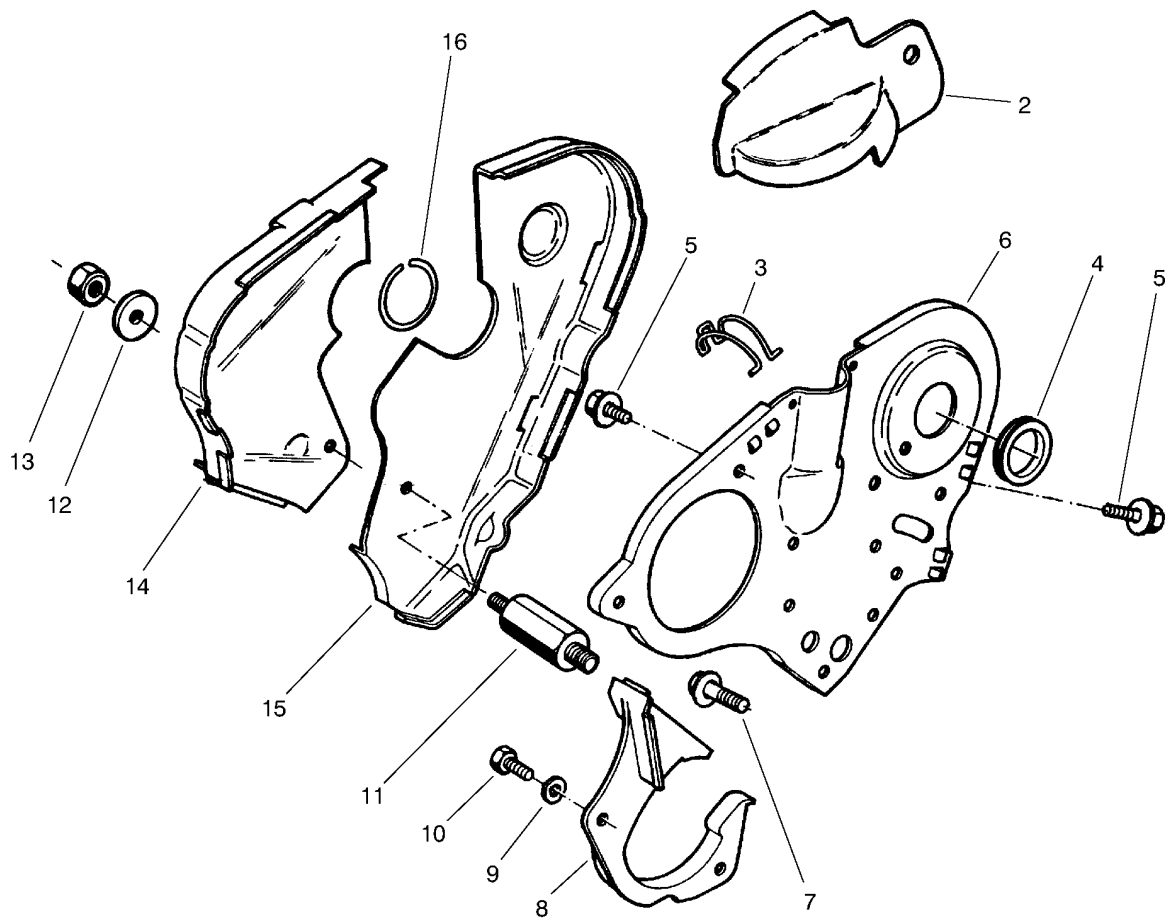


Belt Cover Assembly

Ref.	Part Number	Qty.	Description
2	77-3590	1	Shield
3	77-3830	4	Clip
4	77-3840	1	Grommet
5	48-7700	2	Screw-HH
6	92-7799	1	Shield
7	48-9460	2	Screw-HH
8	77-3810	1	Shield
9	74-7560	2	Lockwasher
10	74-7910	2	Screw - Hex HD
11	77-3820	1	Support - Shield
12	77-3870	1	Washer
13	77-3860	1	Locknut
14	77-3580	1	Shield
15	77-3570	1	Shield
16	77-3850	1	Ring-Snap

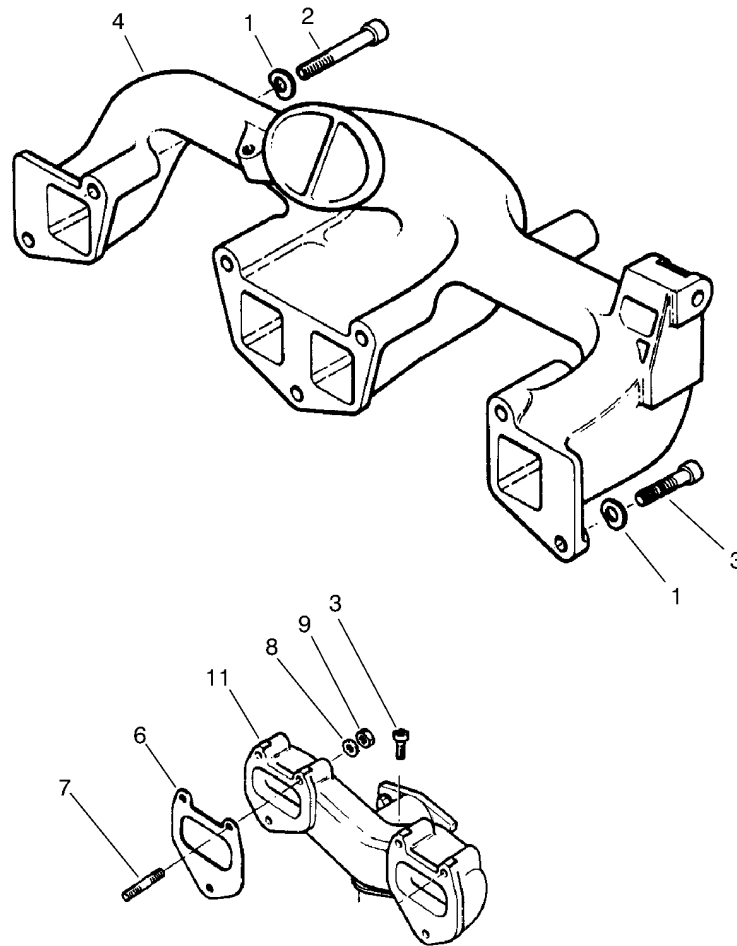


Intake and Exhaust Manifold Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	68-9420	7	Washer-Lock
2	77-3280	5	Screw
3	77-3290	4	Screw
4	77-3270	1	Manifold - Intake
6	77-3310	2	Gasket
7	77-3300	6	Stud
8	68-9420	6	Washer-Lock
9	77-3320	6	Nut - Hex
11	77-3340	1	Manifold - Exhaust

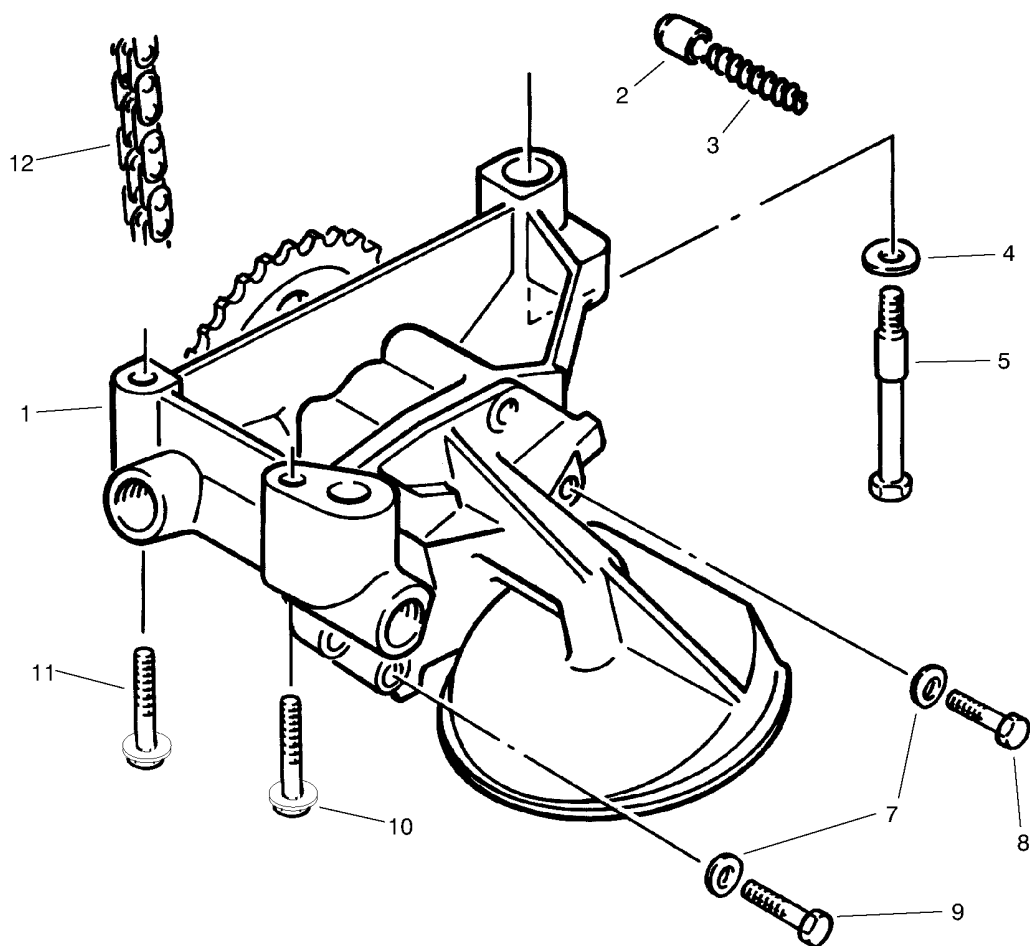


Oil Pump Assembly

Ref.	Part Number	Qty.	Description
1	76-5070	1	Oil Pump ASM
2	76-5080	1	Piston
3	76-5090	1	Piston Spring
4	68-9420	1	Washer-Lock
5	76-5100	1	Bolt-Shoulder
7	74-7560	5	Lockwasher
8	74-7910	2	Screw - Hex HD
9	48-7640	3	Screw
10	77-3470	1	Screw
11	77-3490	1	Screw
12	76-5170	1	Chain-Drive, Pump

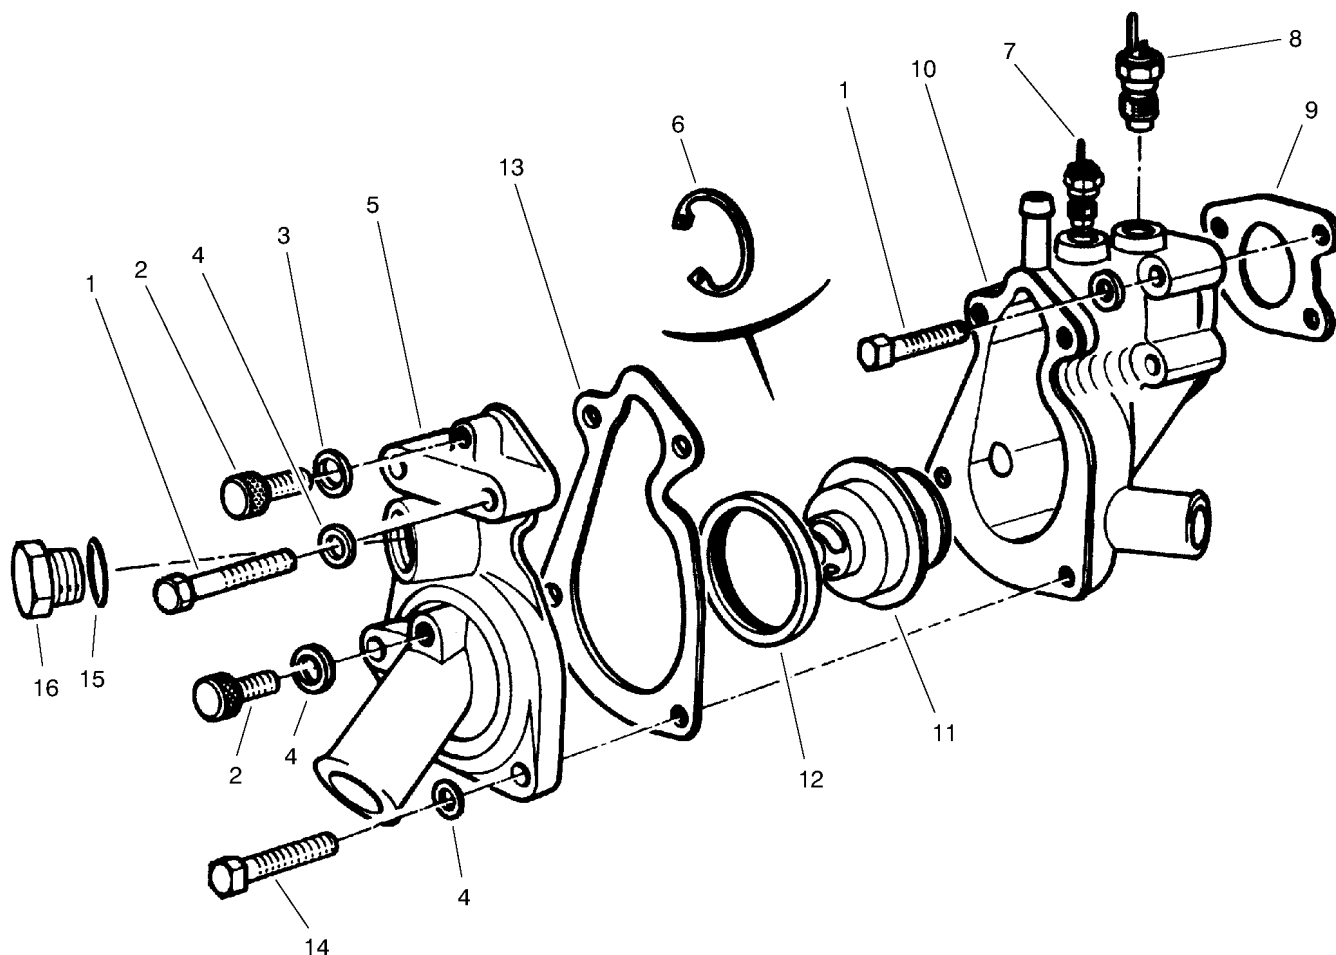


Collector Assembly

Ref.	Part Number	Qty.	Description
1	76-5330	2	Capscrew - Hex HD
2	76-5340	2	Drain Plug
3	76-5350	2	Drain Plug Gasket
4	74-7560	4	Lockwasher
5	76-5360	1	Collector Cover
6	76-5370	1	Retaining Ring
7	76-5380	1	Temp Sending Unit
8	76-5400	1	Switch - Temp 105 DEG C
9	76-5410	1	Collector Gasket
10	76-5420	1	Collector Housing
11	74-8860	1	Thermostat
12	76-5450	1	Gasket - Thermostat
13	76-5460	1	Collector Hsg Gasket
14	76-5440	2	Screw
15	94-3122	1	Gasket
16	94-3121	1	Plug Assembly (Incl. Ref. , #15)

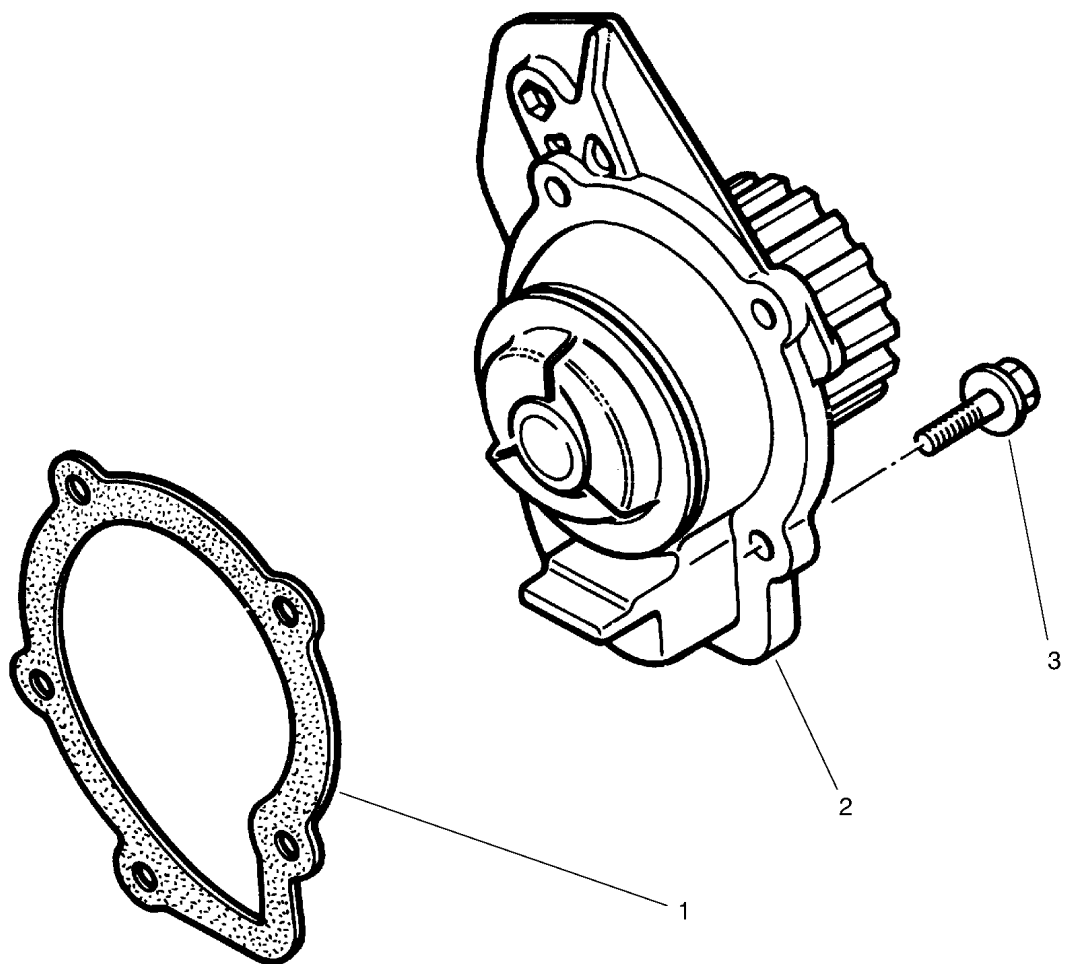

Water Pump Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	76-5480	1	Gasket-Water Pump
2	74-8840	1	Water Pump Assy
3	76-5500	5	Capscrew Hex HD

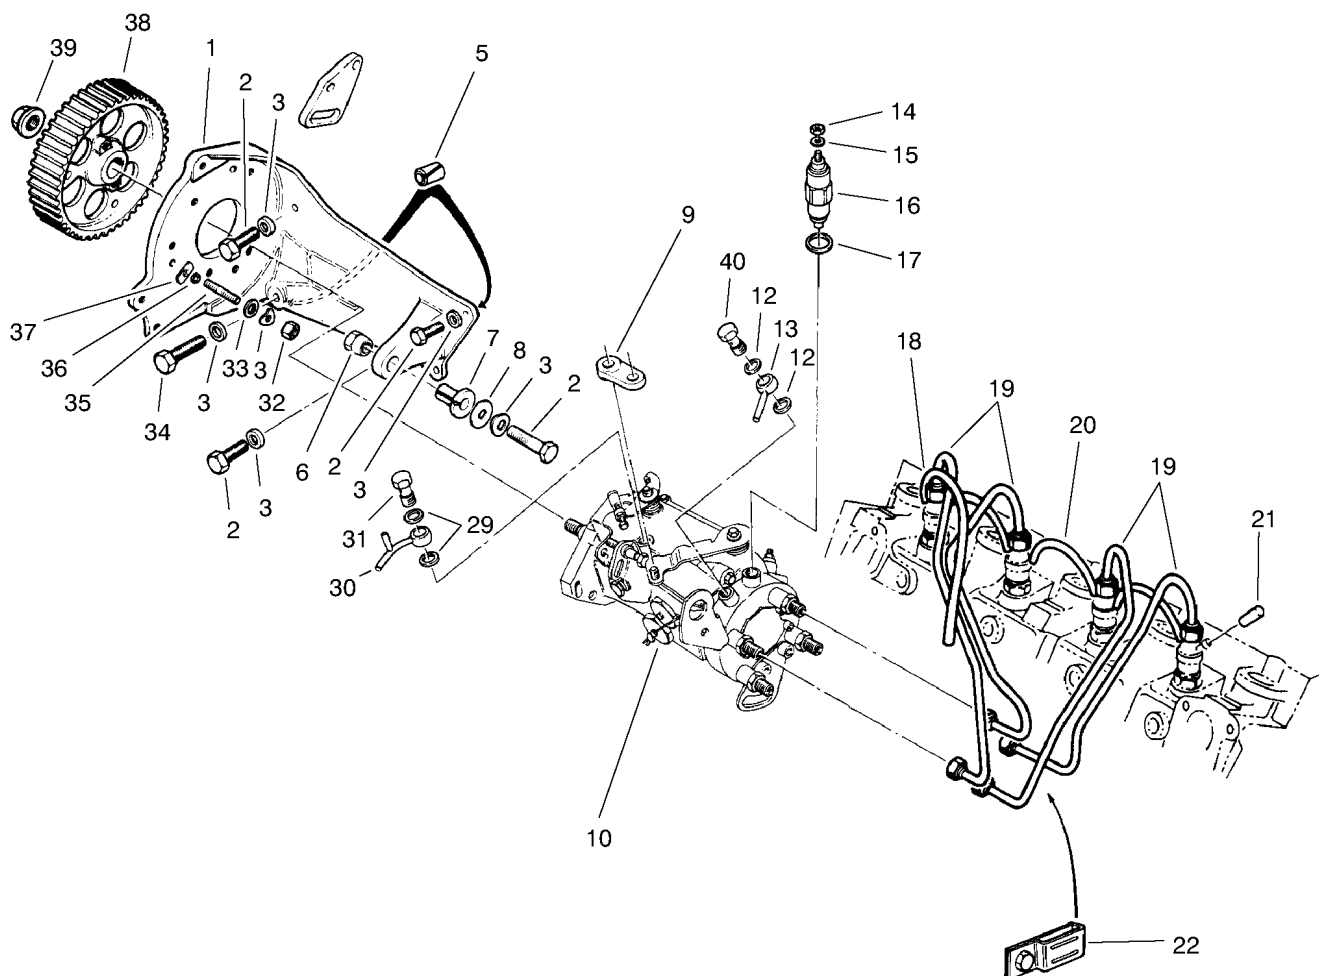


Fuel Injection Pump Assembly

Ref.	Part Number	Qty.	Description
1	74-8700	1	Pump - Supt Bracket
2	60-6760	4	Bolt Hex HD
3	68-9420	8	Washer-Lock
5	74-8610	1	Spring Pin
6	74-8620	1	Nut - Conical
7	74-8630	1	Flange Bushing
8	74-8640	1	Flat Washer
9	74-8650	1	Pacer
10	74-8800	1	Injection Pump Assembly
12	74-8680	2	Gasket
13		1	Banjo-Fuel Inlet
14	48-7880	1	Nut-Hex
15	74-8710	1	Washer
16	74-8720	1	Valve-Solenoid
17	74-8730	1	Seal Ring
18	74-8740	1	Pump Return Tube
19	74-8750	1	Injection Tube Set
20	74-8760	3	Hose - Rubber


Ref.	Part Number	Qty.	Description
21	74-8770	1	Plug
22	74-8780	1	Plastic Clamp
	74-8790	1	Metal Clamp ●
29	74-8870	2	Gasket
30		1	Banjo-Fuel Outlet
31	74-8880	1	Fuel Outlet Assembly (Incl. Ref. #30)
32	46-0330	3	Nut-Lock
33	74-8900	1	Washer - Flat
34	60-6700	1	Bolt Hex HD
35	76-4910	3	Stud
36	68-9420	3	Washer-Lock
37	76-4930	3	Washer
38	76-4940	1	Pump Pulley
39	76-4950	1	Flange Nut
40	74-8690	1	Assy.-Inlet, Fuel (Incl. Ref. #13)

● Not illustrated

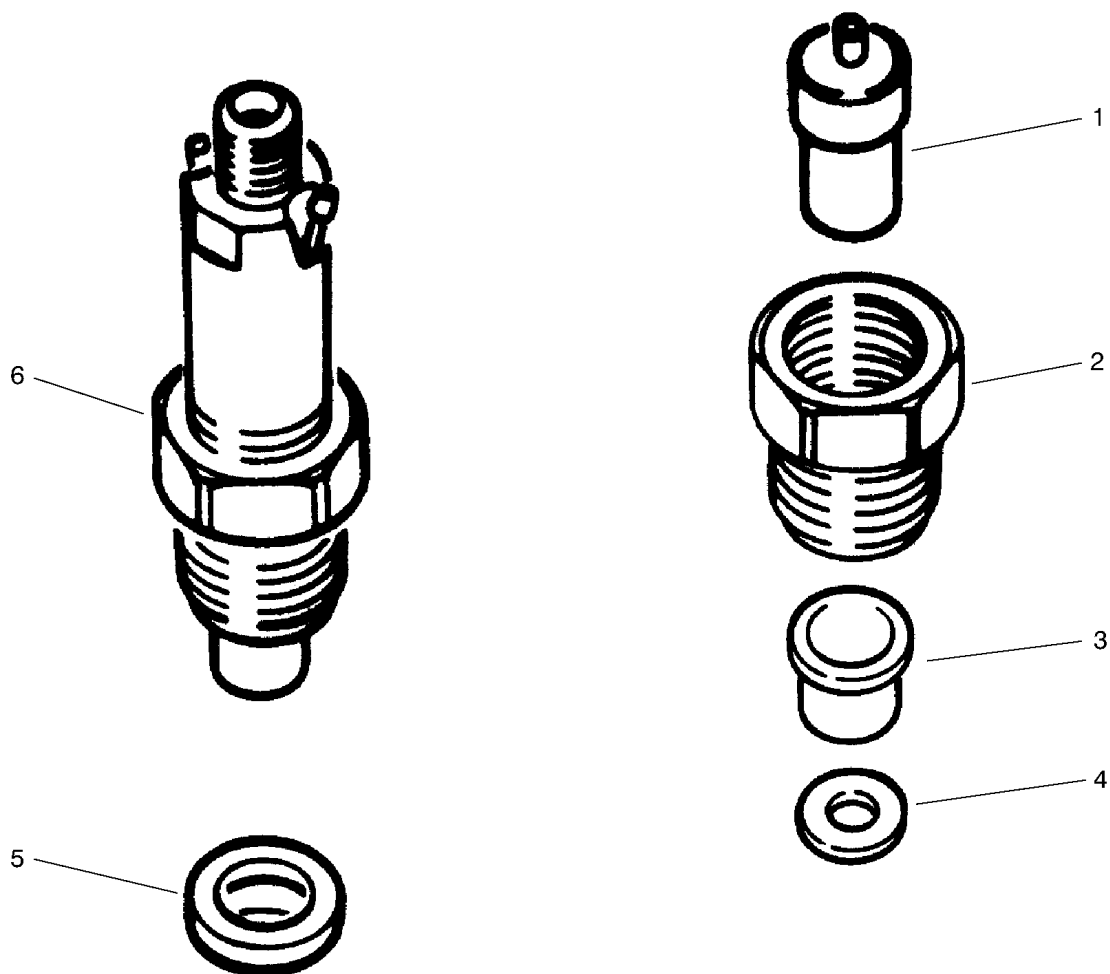


Fuel Injector Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	76-5510	4	Fuel Injector
2	76-5520	4	Fuel Injector Holder
3	76-5530	4	Washer-Flame Trap
4	76-5540	4	Injector Bushing
5	76-5550	4	Fuel Injector Gasket
6	76-5600	4	Fuel Injector Assembly (Incl. Ref. #1 & 2)

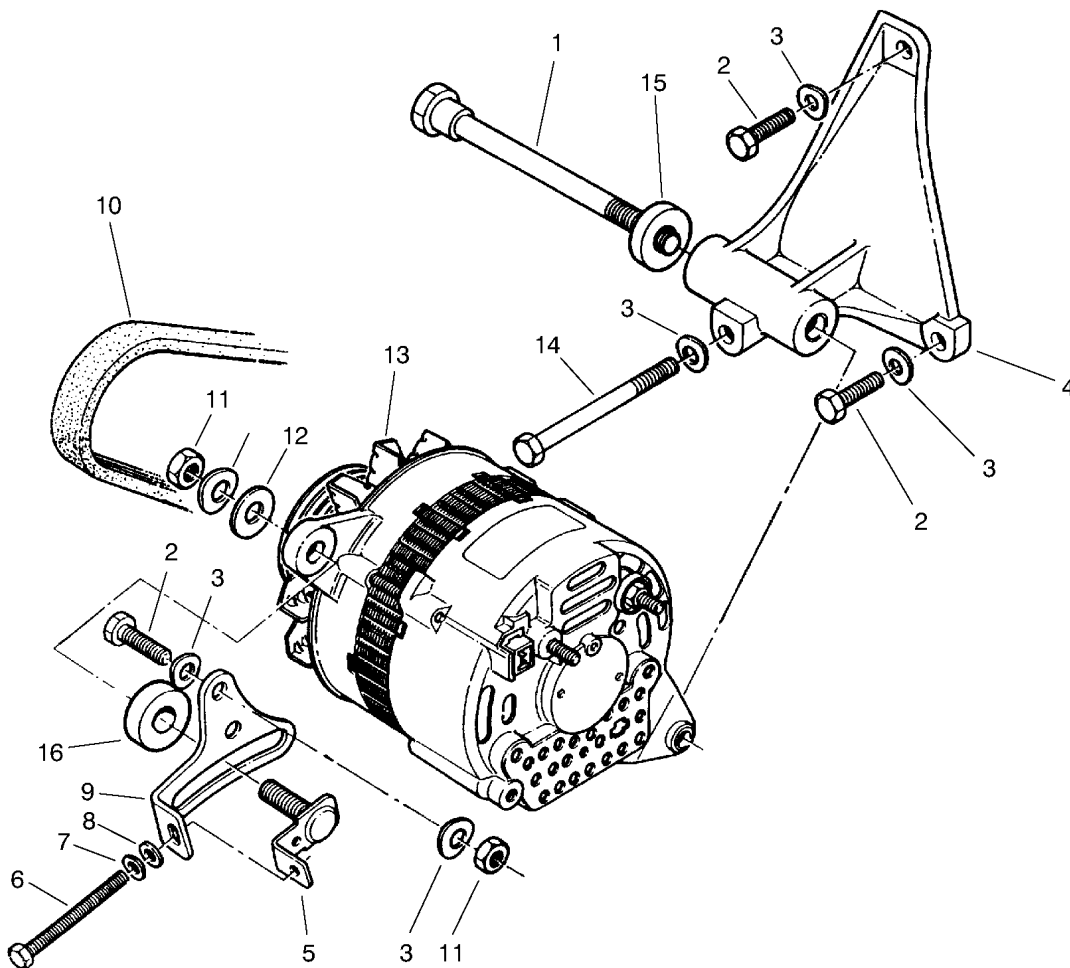

Alternator Assembly


Ref.	Part Number	Qty.	Description
1	76-4970	1	Shoulder Screw
2	48-9460	3	Screw-HH
3	68-9420	6	Washer-Lock
4	76-4980	1	Mounting Bracket
5	76-4990	1	Bolt-Slide
6	76-5000	1	Adj Bolt
7	76-5010	1	Washer-Spring
8	76-5020	1	Flat Washer
9	76-5030	1	Slide Bracket
10	76-5040	1	V-Belt
11	46-0330	2	Nut-Lock
12	74-8640	1	Flat Washer
13	76-5050	1	Alternator
14	76-5060	1	Screw-HH
15	77-3260	1	Washer
16	77-3250	1	Washer

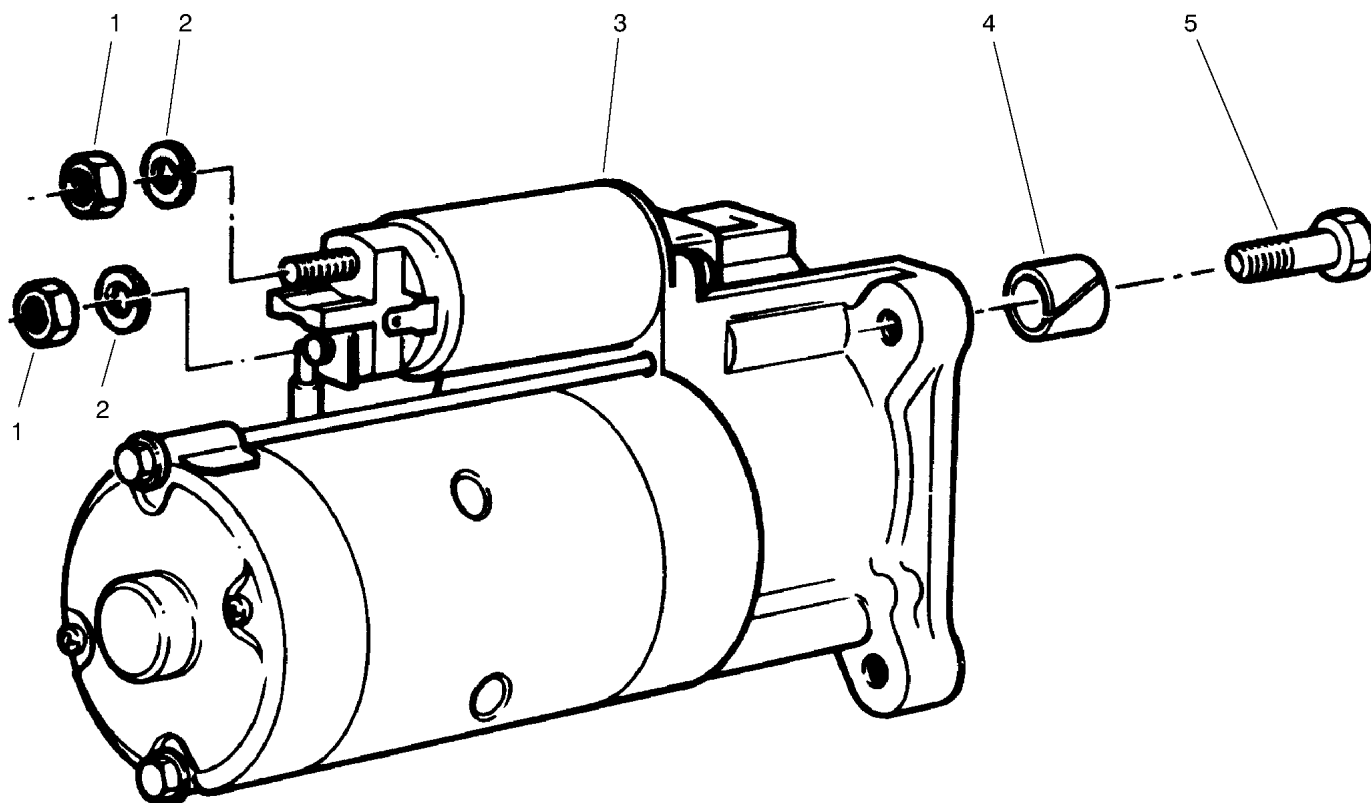

Starter Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	46-0330	2	Nut-Lock
2	76-5570	2	Lockwasher
3	76-5580	1	Starter F/W
4	76-5590	1	Sleeve-Spring
5	48-7810	3	Screw
	92-7789	1	Solenoid-Starter •

• Not illustrated

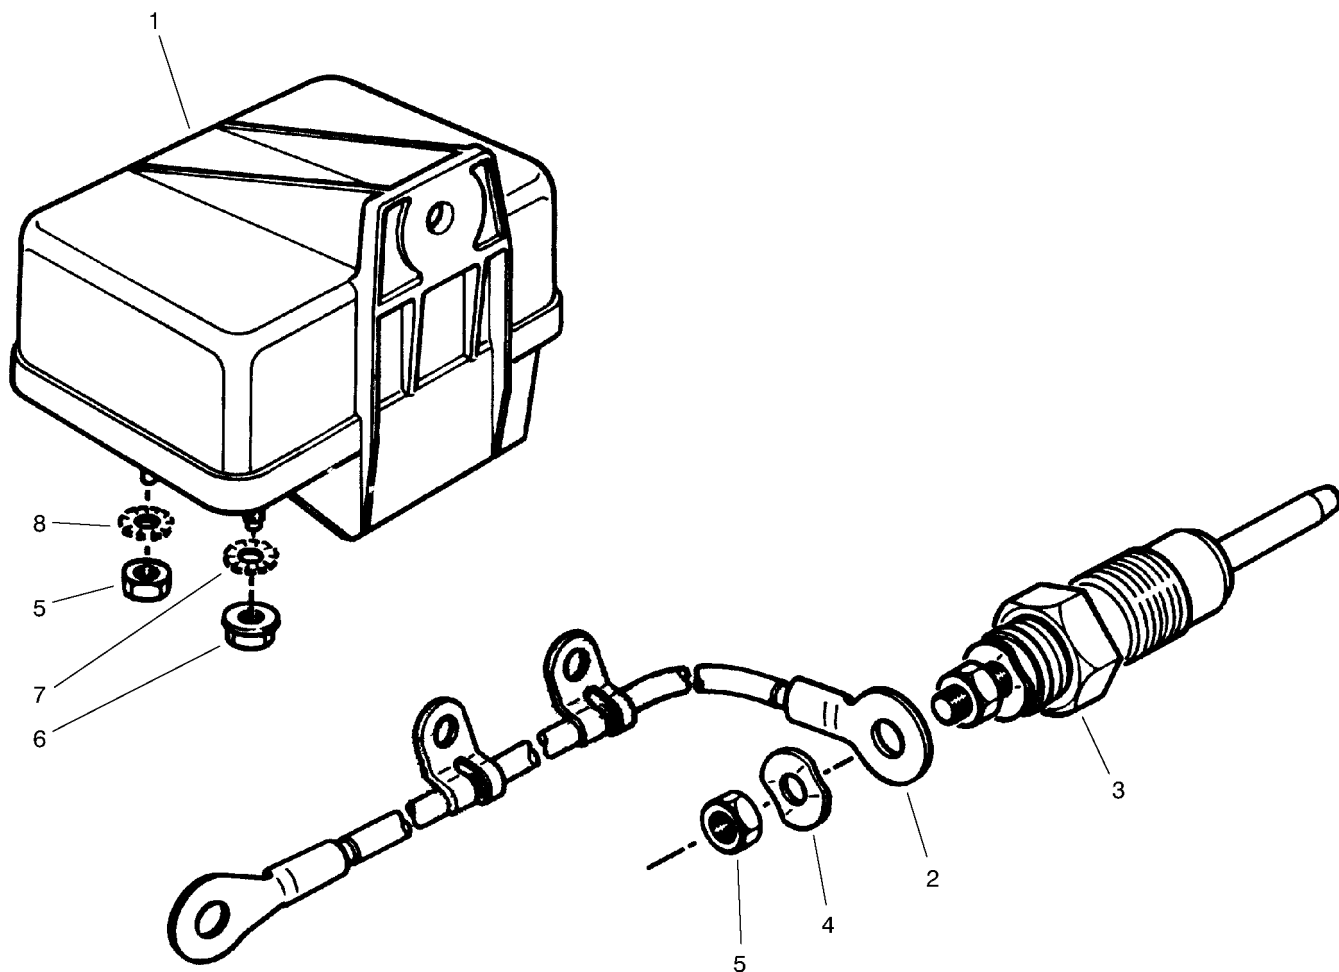


Glow Plug and Glow Relay Assembly

Ref.	Part Number	Qty.	Description
1	76-5260	1	Relay-Plug, Glow
2	76-5270	4	Cable-Glow Plug
3	76-5280	4	Plug-Glow
4	76-5290	4	Spring Washer
5	48-7880	5	Nut-Hex
6	65-7980	1	Nut-Flange
7	76-5310	1	Washer
8	74-8710	1	Washer

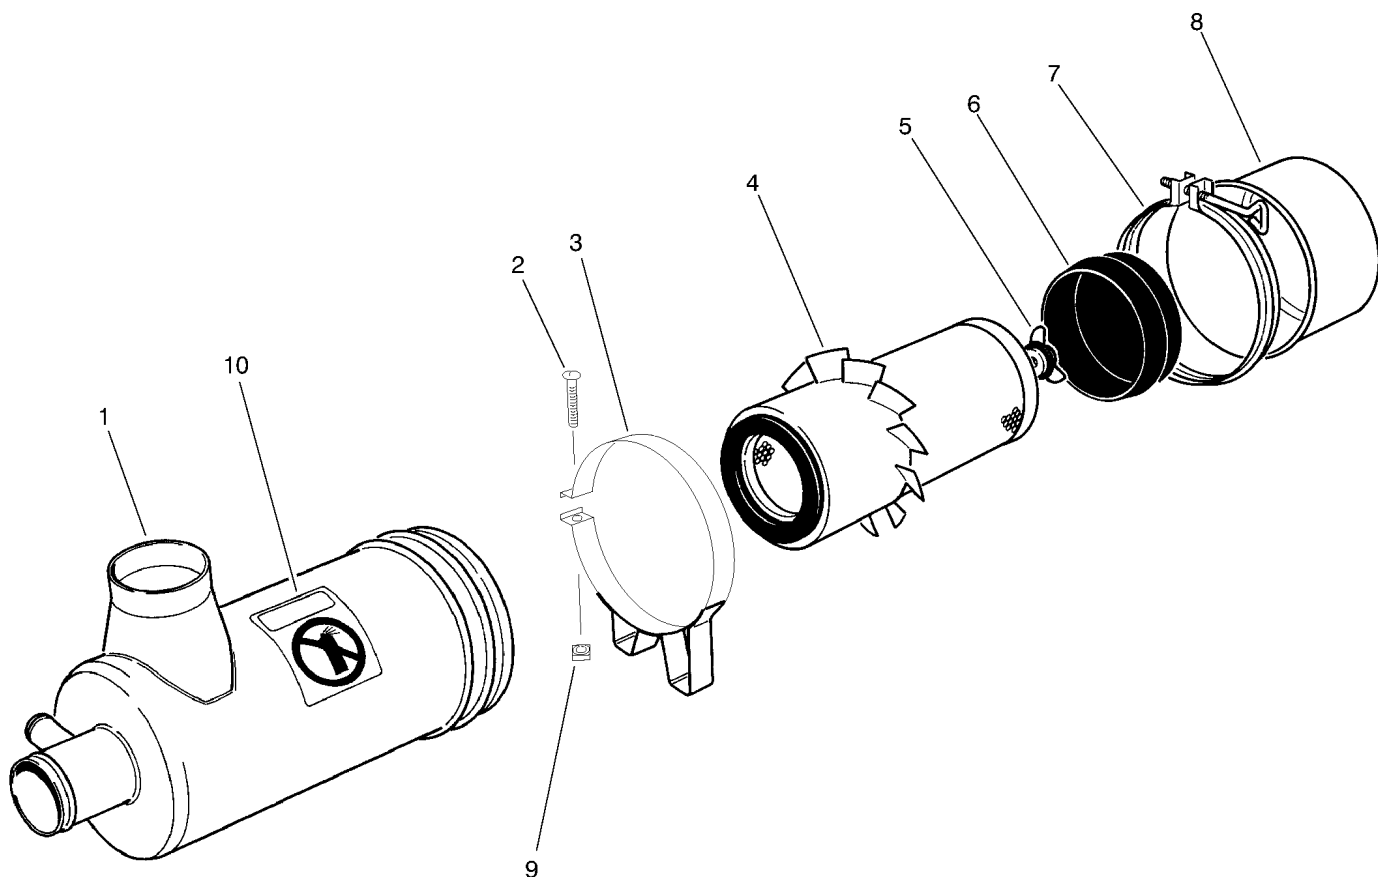

Air Cleaner No. 74-6000


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	74-6000	1	Air Cleaner Assembly (Incl. Ref. #4-8)
2	3258-19	2	Screw
3	27-7170	1	Band Assembly (Incl. Ref. 2 & 9)
4	27-7110	1	Element ASM
5	27-7120	1	Nut And Gasket ASM
6	27-7140	1	Skirt-Baffle
7	27-7130	1	Clamp ASM
8	27-7150	1	A/C Cup ASM
9	32107-11	2	Nut-Square
10	76-8770	1	Decal - Caution, Strt

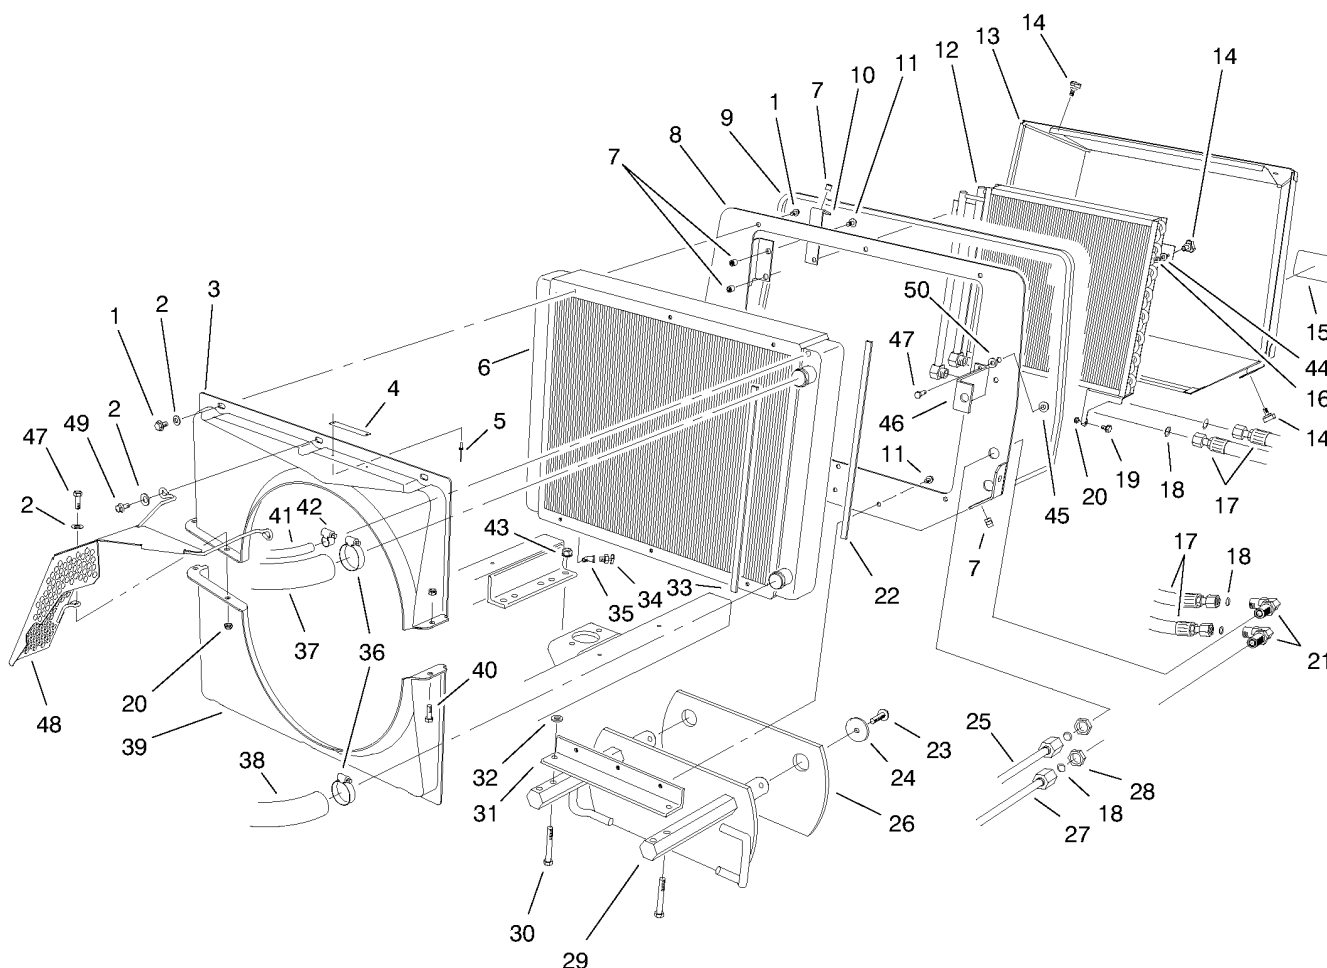

Radiator Assembly


Ref.	Part Number	Qty.	Description
1	3234-30	12	Screw-HHF
2	3256-23	7	Washer-Flat
3	74-4980	1	Shroud-Top
4	76-8750	1	Plate-Warning
4	93-6681	1	Decal-Warning, Fan
5	3290-271	2	Rivet-Pop
6	74-3410	1	Radiator ASM
7	32148-10	10	Insert-Nut
8	14-0939	1	Radiator Mount Assembly (Incl. Ref. #7)
9	92-1394	1	Seal Strip - Screen
10	92-1385	1	Screen Brkt - RH *b
	92-1386	1	Screen Brkt - LH *b
11	3234-11	5	Screw-HHF
12	82-3740	1	Cooler-Oil
13	92-1395	1	Rad Screen Kit-Gm455D
14	27-4570	6	Knob-Seat
15	67-1300	1	Decal
16	32151-72	2	Ring-Retaining
17	94-8010	2	Hose ASM
18	237-65	6	O-Ring
19	37-8771	2	Bolt-Shoulder
20	3296-47	5	Nut-Lock, NI
21	340-72	2	Fitting-Hydraulic 90Ø (Incl. Ref. #18)
22	76-6381	2	Strip-Sealing, Radiator
23	3234-32	2	Screw-HHF
24	88-1360	2	Washer-Weight, Rear

Ref.	Part Number	Qty.	Description
25	74-6400	1	Filter Line Tube ASM
26	88-1220	5	Plate
27	86-5800	1	Tube Assy-Oil Cooler
28	340-74	2	Nut-Lock, Bulkhead
29	92-7781	1	Bumper
30	325-35	2	Screw-HH
31	74-5460	1	Angle Radiator Support
32	3256-26	2	Washer-Flat
33	76-6382	2	Strip-Sealing, Fan Shroud
32	3234-27	2	Screw-HHF
33	74-4990	1	Shroud-Bottom
34	304-46	1	Draincock
35	2811-1	1	Elbow-Street, 45 DEG
36	2412-3	2	Clamp-Hose
37	74-5930	1	Hose - Rad Upper
38	74-6020	1	Hose-Radiator, Lower
39	74-4990	1	Shroud-Bottom
40	322-3	2	Screw-HH
41	74-9120	1	Hose-Overflow, Radiator
42	2412-36	1	Clamp-Hose
43	32128-49	2	Nut-HHF
44	3256-3	2	Washer-Flat
45	32128-20	2	Nut-HF
46	93-7244	1	Bracket-Support
47	322-4	3	Screw-HH
48	93-9003	1	Guard-Fan
49	3234-5	2	Screw-HHF
50	71-5320	2	Washer-Support, Engine

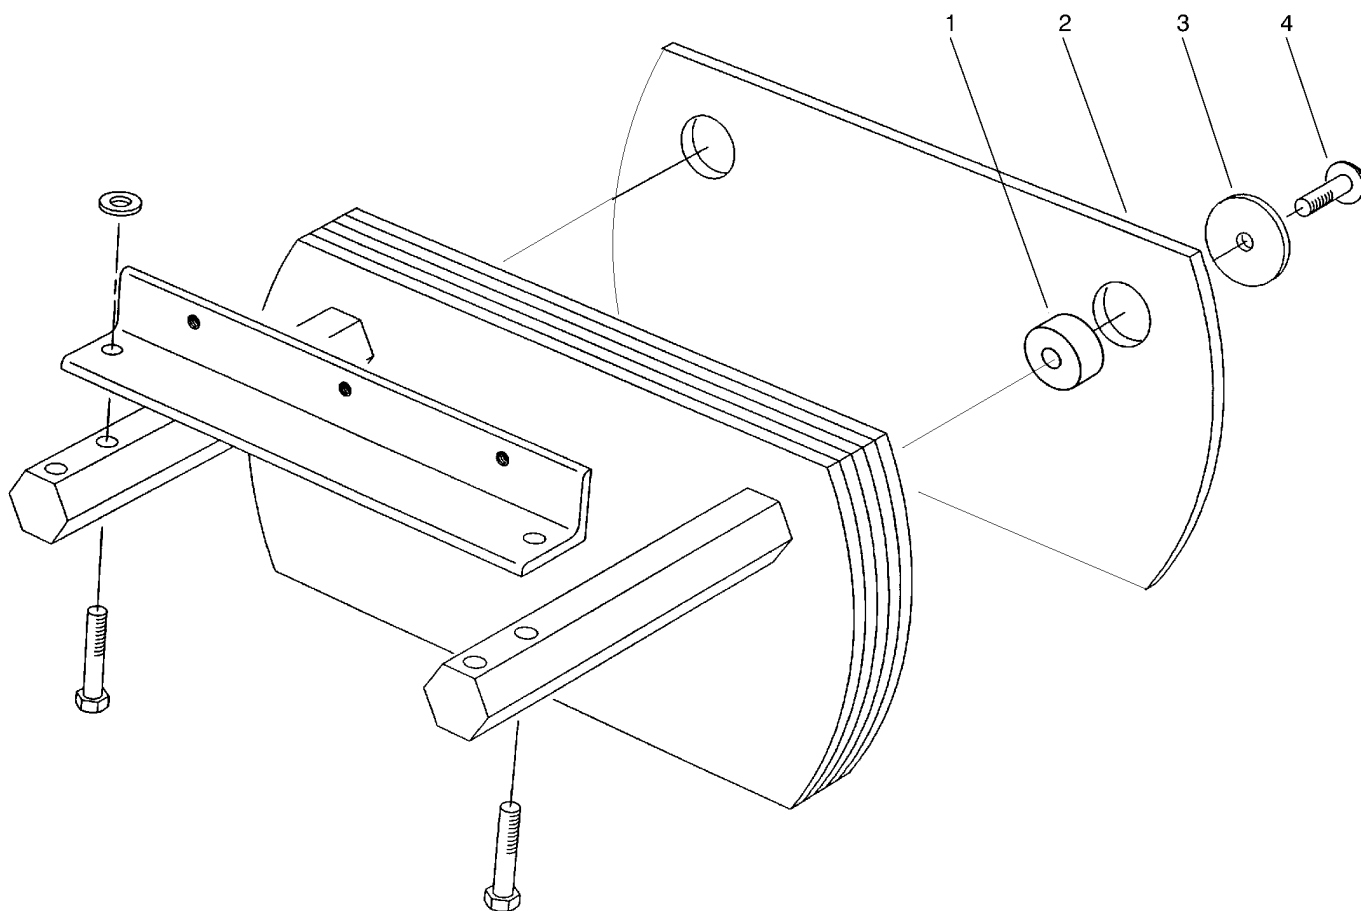

Additional Weight Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	84-1570	2	Spacer-Plate
2	88-1220	2	Plate
3	88-1360	2	Washer-Weight, Rear
4	3234-27	2	Screw-HHF

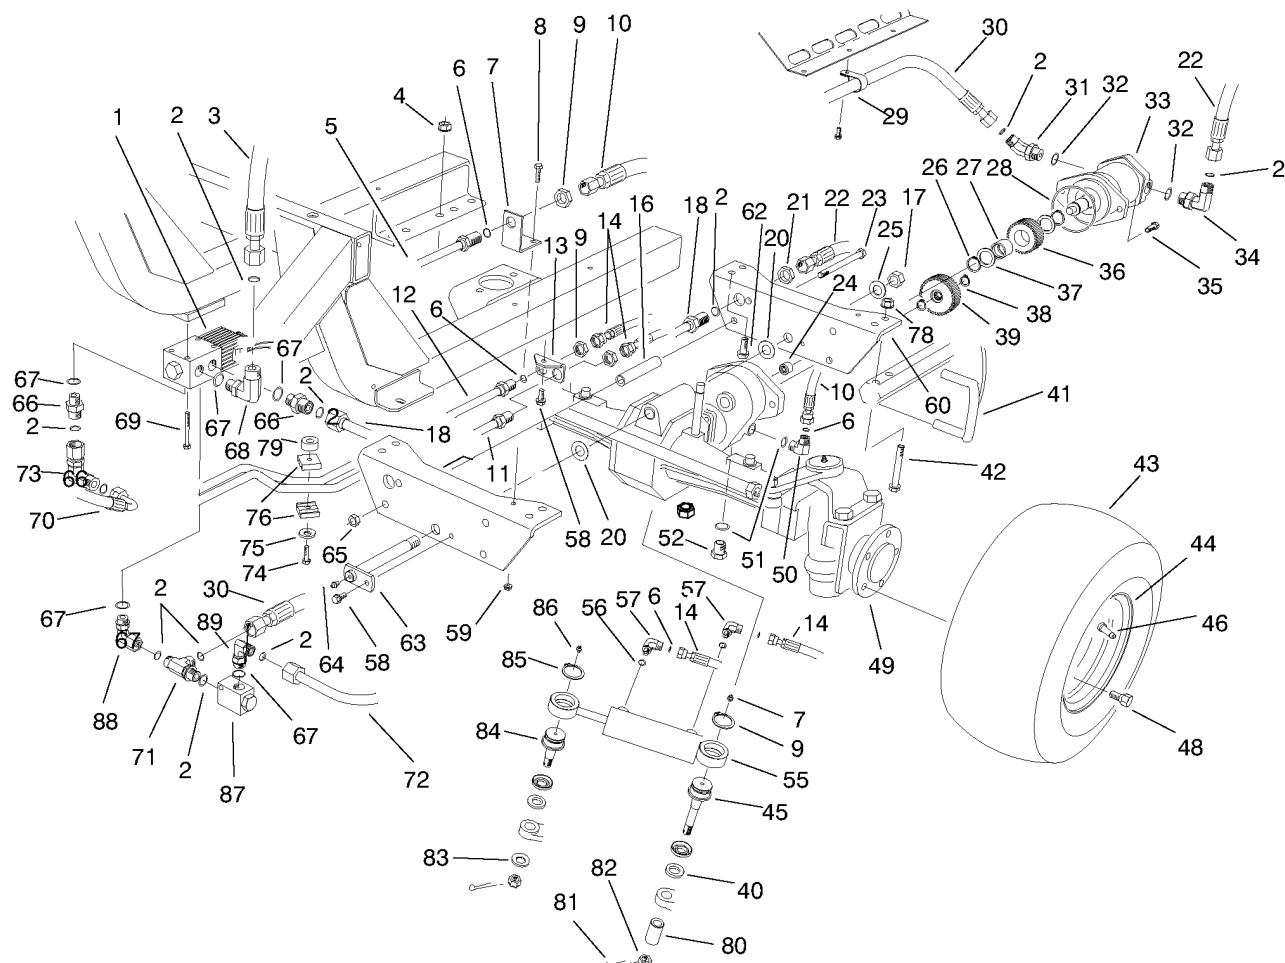

Rear Axle Assembly (Unit Serial No. 60001-60151)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	76-9970	1	Four Wheel Drive Valve ASM	22	86-2730	1	Hose ASM
2	237-65	9	O-Ring	23	325-20	2	Screw-HH
3	86-2740	1	Hose ASM	24	74-5700	1	Bearing-Needle, Roller
4	32128-23	8	Nut-HF	25	3256-28	1	Washer-Flat
5	92-6576	1	Tube-Hydraulic (Incl. Ref. #6)	26	32151-96	2	Ring-Retaining
6	237-22	5	O-Ring	27	71-4580	1	Bearing
7	76-9290	1	Bracket-Drain, Case	28	237-166	1	O-Ring
8	3234-4	1	Screw-HHF	29	2412-74	1	R-Clamp
9	340-70	3	Nut-Lock	30	86-2710	1	Hose ASM
10	86-3140	1	Hose ASM	31	340-156	1	Fitting-Hydraulic 45 DEG (Incl. Ref. #2 & 32)
11	92-2565	1	Tube-Hydraulic L.H. (Incl. Ref. #6)	32	237-81	2	O-Ring
12	74-6270	1	Tube-Hydraulic R.H. (Incl. Ref. #6)	33	76-6580	1	Piston Motor ASM
13	74-6450	1	Bracket-Bulkhead, Steering	34	340-139	1	Fitting-Hydraulic 90 DEG (Incl. Ref. #2 & 32)
14	76-9590	2	Cylinder Rod Hose ASM	35	325-4	2	Screw-HH
16	76-8350	2	Stop-Axle	36	92-5825	1	Gear - Driver, 12 Pitch
17	3296-51	3	Nut-Lock, NI	37	71-4590	2	Washer-Thrust
18	86-2770	1	Tube-Hydraulic (Incl. Ref. #2)	38	32120-15	2	Ring-Snap, EXT
20	76-6570	2	Thrust Washer	39	92-5826	1	Gear - Driven, 12 Pitch
21	340-74	1	Nut-Lock, Bulkhead	40	92-5833	2	Spacer-Joint, Ball
				41	92-7781	1	Bumper
				42	325-35	2	Screw-HH
				43	86-5910	2	Tire-6 Ply


● Not illustrated

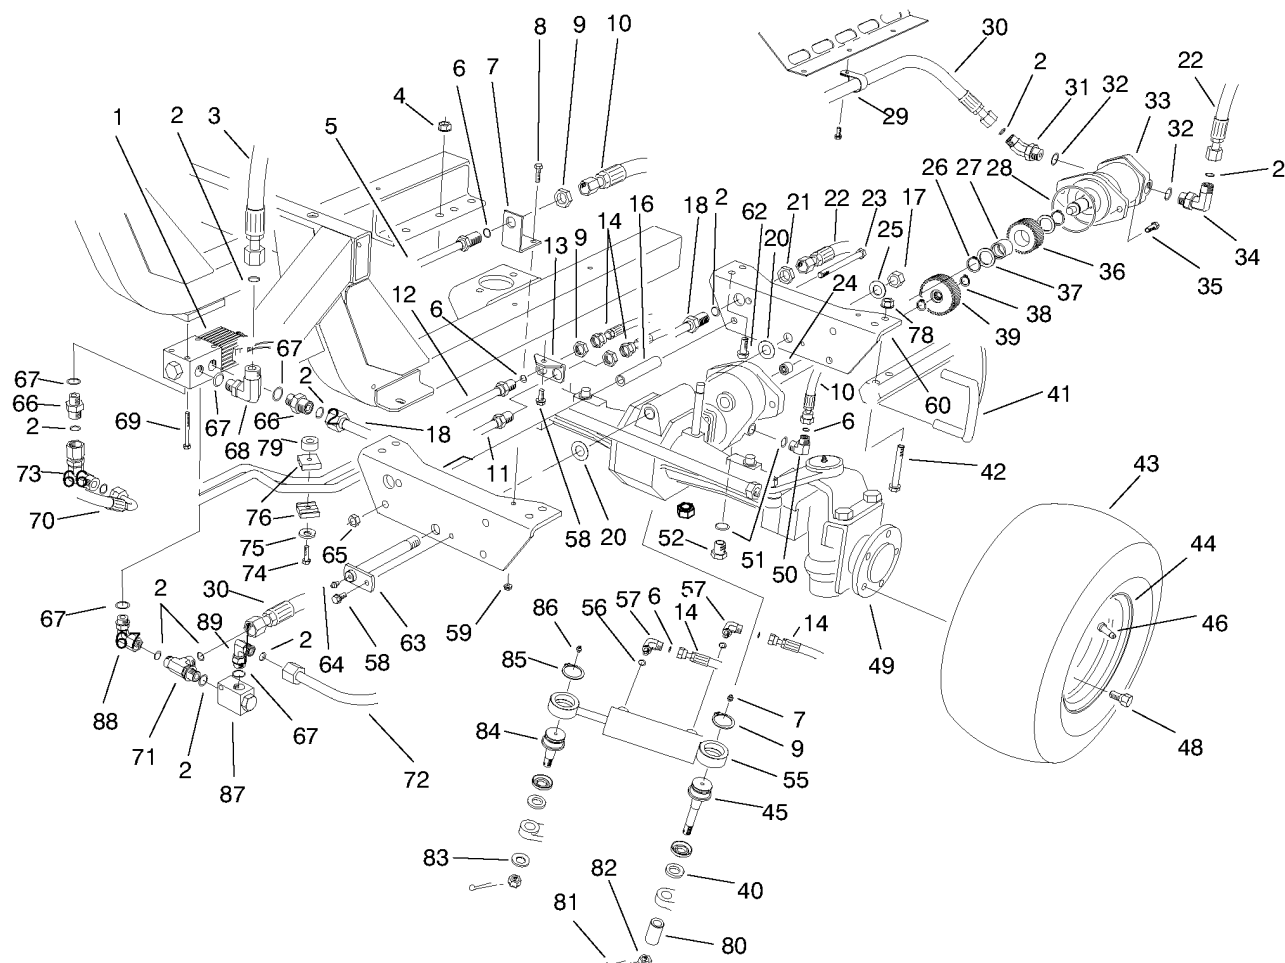

Rear Axle Assembly (Unit Serial No. 60001-60151) (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
44	217-125	2	Rim	67	237-79	4	O-Ring
45	92-5839	1	Joint-Ball	68	340-153	1	Fitting-Hydraulic 90 DEG (Incl. Ref. #2 & 67)
46	232-27	2	Stem-Valve	69	321-15	2	Screw-HH
48	74-5500	10	Bolt - Wheel	70	86-2720	1	Hose Assy - RH Traction
49	74-5621	1	Axle-4Wd	71	340-109	1	Fitting-Hydraulic Tee (Incl. Ref. #2 & 67)
50	340-77	1	Fitting-Hydraulic 90 DEG (Incl. Ref. #6 & 51)	72	92-6583	1	Tube Assy - Rear Drain
51	237-42	2	O-Ring	73	340-160	1	Fitting-HYD, 90 DEG
52	353-508	1	Plug-Hydraulic (Incl. Ref. #51)	74	32104-37	1	Screw-HWH,Thd Cut
53	67-9410	5	Washer ●	75	3256-71	1	Washer-Flat
55	92-6584	1	53-9682Lnder Assy - 4Wd	76	56-7973	2	Clamp-Tube
56	237-78	2	O-Ring	78	32128-49	2	Nut-HHF
57	340-97	2	Fitting-Hydraulic 90 DEG (Incl. Ref. #6 & 56)	79	80-8660	1	Spacer-Coupler
58	32144-11	2	Screw-HWHTF	80	92-5844	1	Spacer-Joint, Ball
59	32128-33	1	Nut-HF	81	3272-12	2	Pin-Cotter
60	84-1170	2	Plate-Axle Pivot	82	32136-14	2	Nut-SHH
62	3234-32	6	Screw-HHF	83	92-5836	1	Washer
63	74-5250	1	Pivot Pin - Axle	84	92-5838	1	Joint-Ball
64	302-2	1	Fitting-Grease	85	32151-104	2	Ring-Retaining, External
65	3296-45	2	Nut-Lock, NI	86	302-5	2	Fitting-Grease
66	340-155	2	Fitting-Hydraulic Straight (Incl. Ref. #2 & 67)	87	84-0720	1	Valve-Fuse, Velocity
				88	340-165	1	Fitting-HYD, Elbow
				89	340-98	1	Fitting-HYD, 90 DEG


● Not illustrated

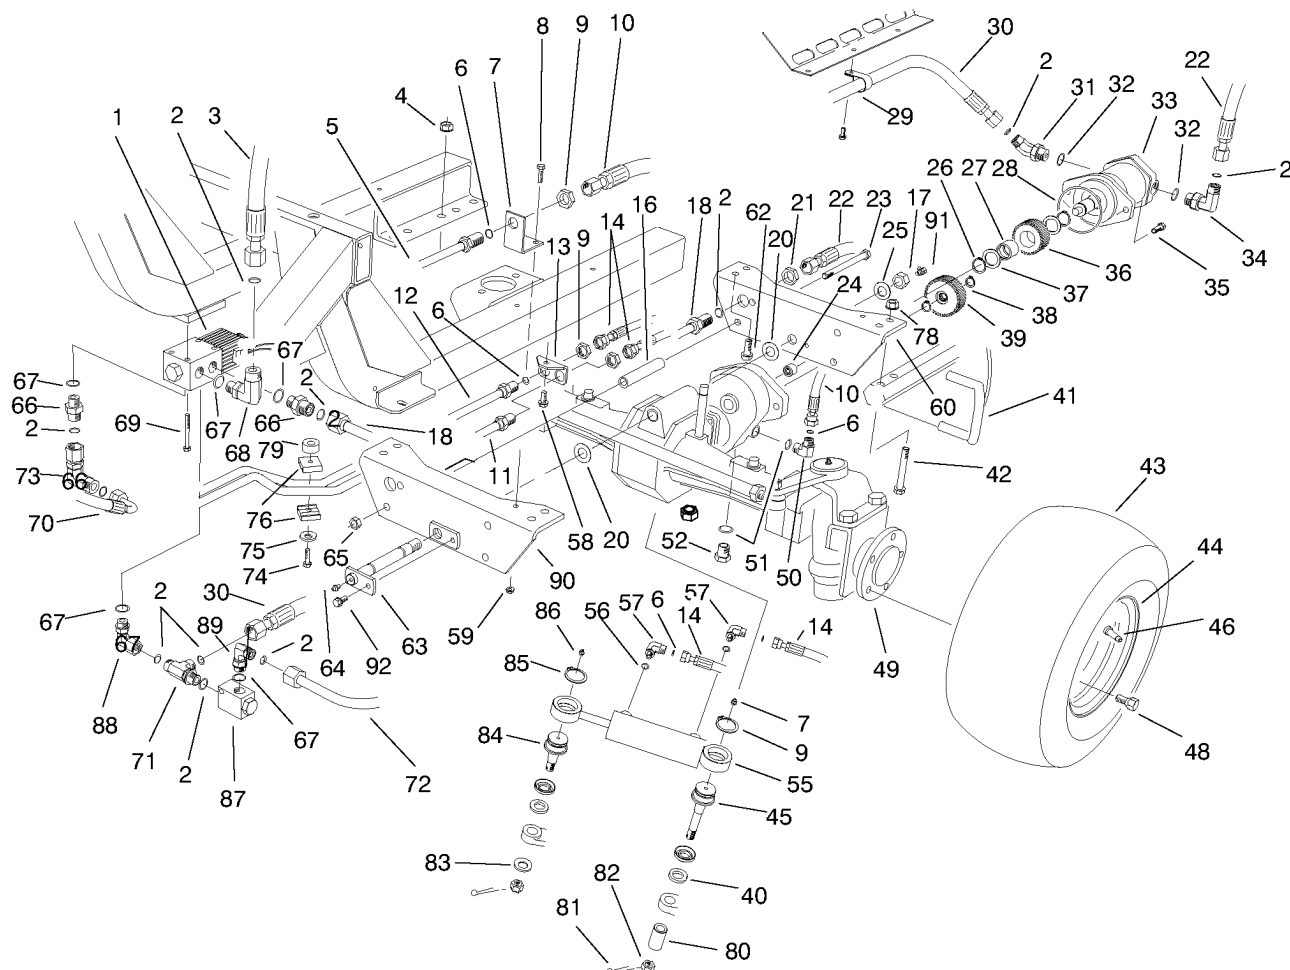

Rear Axle Assembly (Unit Serial No. 60152 and Up)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	76-9970	1	Four Wheel Drive Valve ASM	22	86-2730	1	Hose ASM
2	237-65	9	O-Ring	23	325-20	2	Screw-HH
3	86-2740	1	Hose ASM	24	74-5700	1	Bearing-Needle, Roller
4	32128-23	8	Nut-HF	25	3256-29	1	Washer-Flat
5	92-6576	1	Tube-Hydraulic (Incl. Ref. #6)	26	32151-96	2	Ring-Retaining
6	237-22	5	O-Ring	27	71-4580	1	Bearing
7	76-9290	1	Bracket-Drain, Case	28	237-166	1	O-Ring
8	3234-4	1	Screw-HHF	29	2412-74	1	R-Clamp
9	340-70	3	Nut-Lock	30	86-2710	1	Hose ASM
10	86-3140	1	Hose ASM	31	340-156	1	Fitting-Hydraulic 45Ø (Incl. Ref. #2 & 32)
11	92-2565	1	Tube-Hydraulic L.H. (Incl. Ref. #6)	32	237-81	2	O-Ring
12	74-6270	1	Tube-Hydraulic R.H. (Incl. Ref. #6)	33	76-6580	1	Piston Motor ASM
13	74-6450	1	Bracket-Bulkhead, Steering	34	340-139	1	Fitting-Hydraulic 90Ø (Incl. Ref. #2 & 32)
14	76-9590	2	Cylinder Rod Hose ASM	35	325-4	2	Screw-HH
16	76-8350	2	Stop-Axle	36	92-5825	1	Gear - Driver, 12 Pitch
17	94-8000	2	Nut-Hex	37	71-4590	2	Washer-Thrust
18	86-2770	1	Tube-Hydraulic (Incl. Ref. #2)	38	32120-15	2	Ring-Snap, EXT
20	93-7247	2	Washer - Thrust	39	92-5826	1	Gear - Driven, 12 Pitch
21	340-74	1	Nut-Lock, Bulkhead	40	92-5833	2	Spacer-Joint, Ball
				41	92-7781	1	Bumper
				42	325-35	2	Screw-HH
				43	86-5910	2	Tire-6 Ply


● Not illustrated

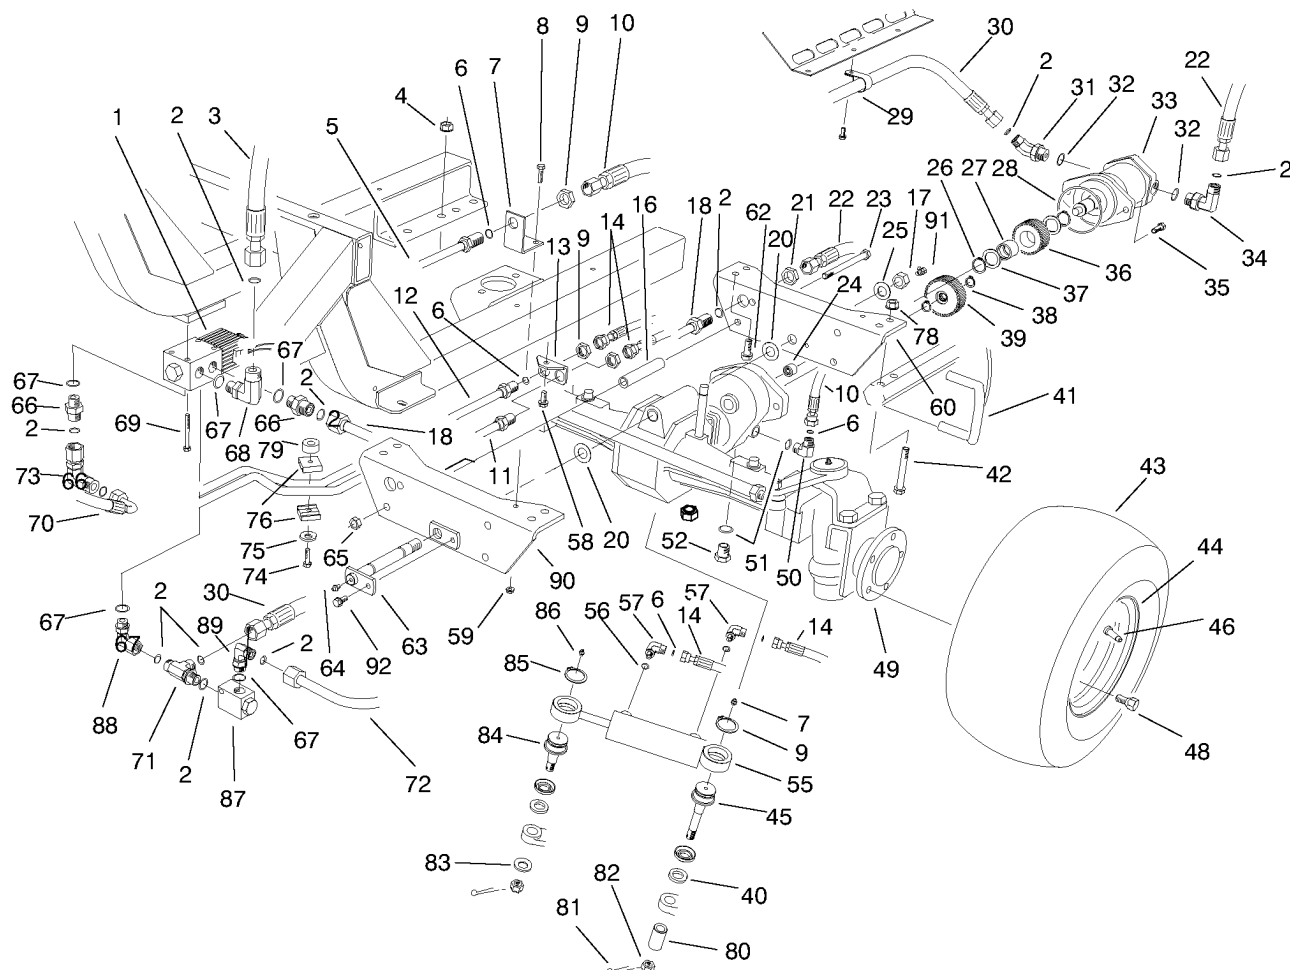

Rear Axle Assembly (Unit Serial No. 60152 and Up) (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
44	217-125	2	Rim	67	237-79	4	O-Ring
45	92-5839	1	Joint-Ball	68	340-153	1	Fitting-Hydraulic 90Ø (Incl. Ref. #2 & 67)
46	232-27	2	Stem-Valve	69	321-15	2	Screw-HH
48	74-5500	10	Bolt - Wheel	70	86-2720	1	Hose Assy - RH Traction
49	93-7780	1	Axle-4Wd	71	340-109	1	Fitting-Hydraulic Tee (Incl. Ref. #2 & 67)
50	340-77	1	Fitting-Hydraulic 90Ø (Incl. Ref. #6 & 51)	72	92-6583	1	Tube Assy - Rear Drain
51	237-42	2	O-Ring	73	340-160	1	Fitting-HYD, 90 DEG
52	353-508	1	Plug-Hydraulic (Incl. Ref. #51)	74	32104-37	1	Screw-HWH,Thd Cut
53	67-9410	5	Washer●	75	3256-71	1	Washer-Flat
55	92-6584	1	53-9682Inder Assy - 4Wd	76	56-7973	2	Clamp-Tube
56	237-78	2	O-Ring	78	32128-49	2	Nut-HHF
57	340-97	2	Fitting-Hydraulic 90Ø (Incl. Ref. #6 & 56)	79	80-8660	1	Spacer-Coupler
58	32144-11	2	Screw-HWHTF	80	92-5844	1	Spacer-Joint, Ball
59	32128-33	1	Nut-HF	81	3272-12	2	Pin-Cotter
60	93-7240	1	Plate-Axle Pivot Rear	82	32136-14	2	Nut-SHH
62	3234-32	6	Screw-HHF	83	92-5836	1	Washer
63	93-7249	1	Pin-Pivot, Axle	84	92-5838	1	Joint-Ball
64	302-2	1	Fitting-Grease	85	32151-104	2	Ring-Retaining, External
65	3296-45	2	Nut-Lock, NI	86	302-5	2	Fitting-Grease
66	340-155	2	Fitting-Hydraulic Straight (Incl. Ref. #2 & 67)	87	84-0720	1	Valve-Fuse, Velocity
				88	340-165	1	Fitting-HYD, Elbow
				89	340-98	1	Fitting-HYD, 90 DEG

● Not illustrated

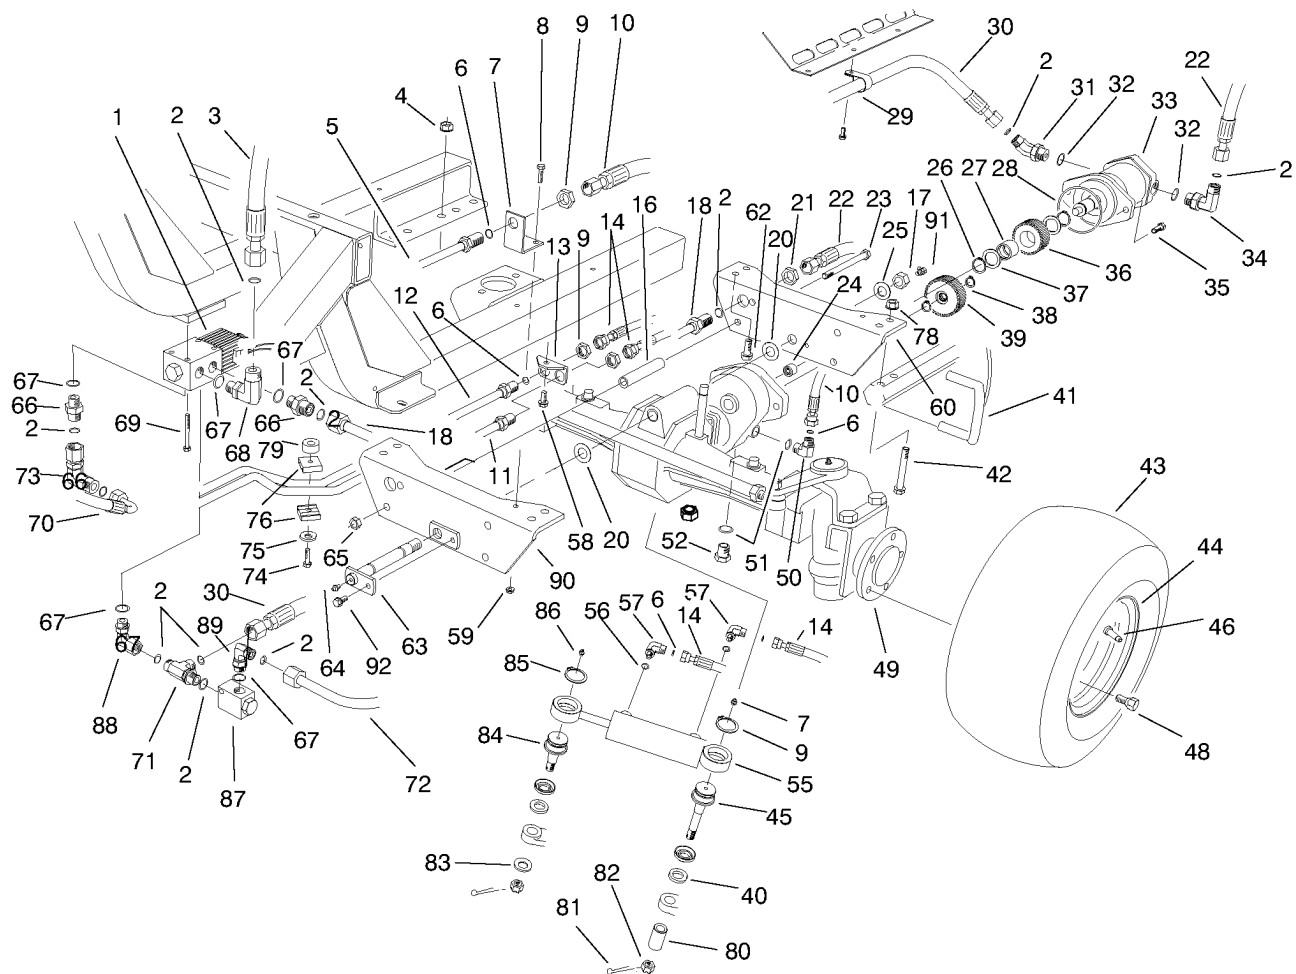


Rear Axle Assembly (Unit Serial No. 60152 and Up) (continued)

Ref.	Part Number	Qty.	Description
90	93-7241	1	Axle Pivot Plate Wa-Front


Ref.	Part Number	Qty.	Description
91	302-33	1	Fitting-Grease
92	32144-41	1	Screw-Tapite

● Not illustrated

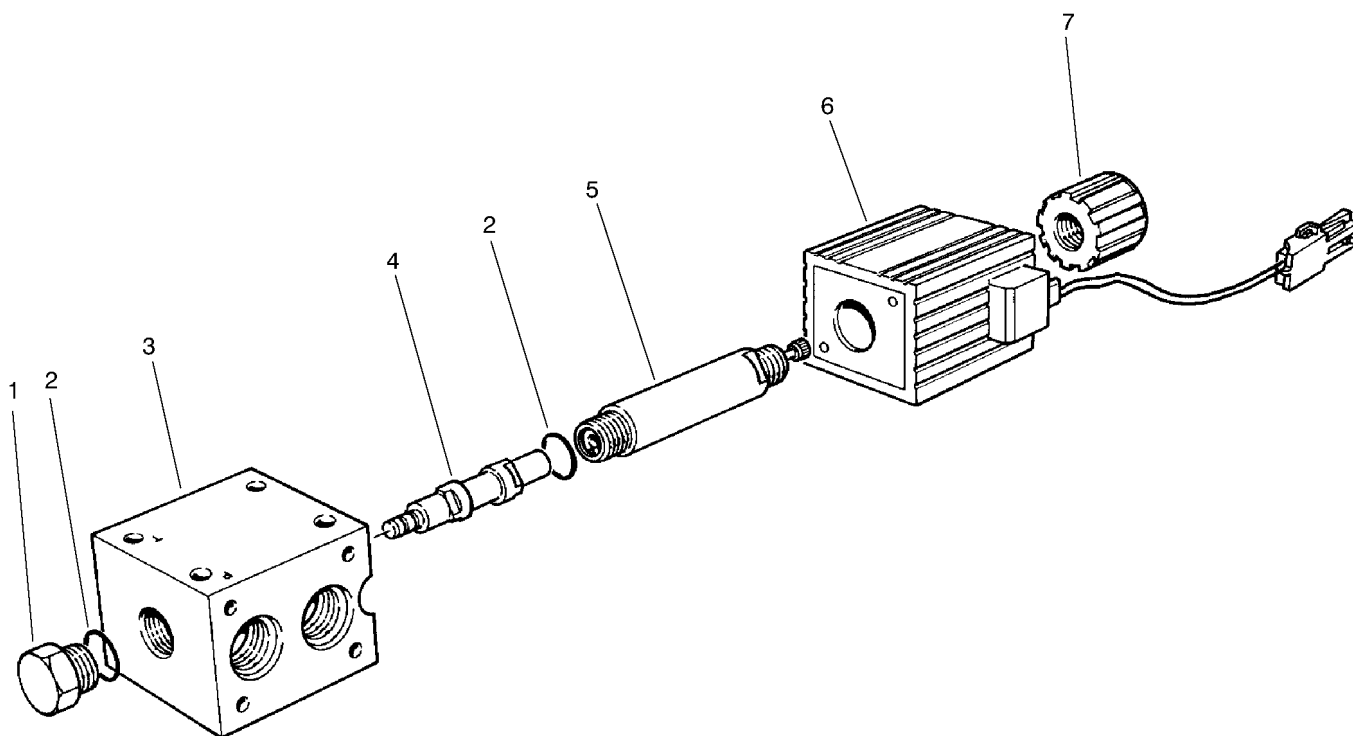

Solenoid Valve Assembly No. 76-9970


Ref.	Part Number	Qty.	Description
1		1	Adapter Assembly (Incl. Ref. #2)
2	237-80	2	O-Ring
3		1	Valve-Directional
4		1	Spool
5		1	Tube Assembly (Incl. Ref. #2)
6	218-591	1	Coil ASM
7	218-592	1	Nut-Coil

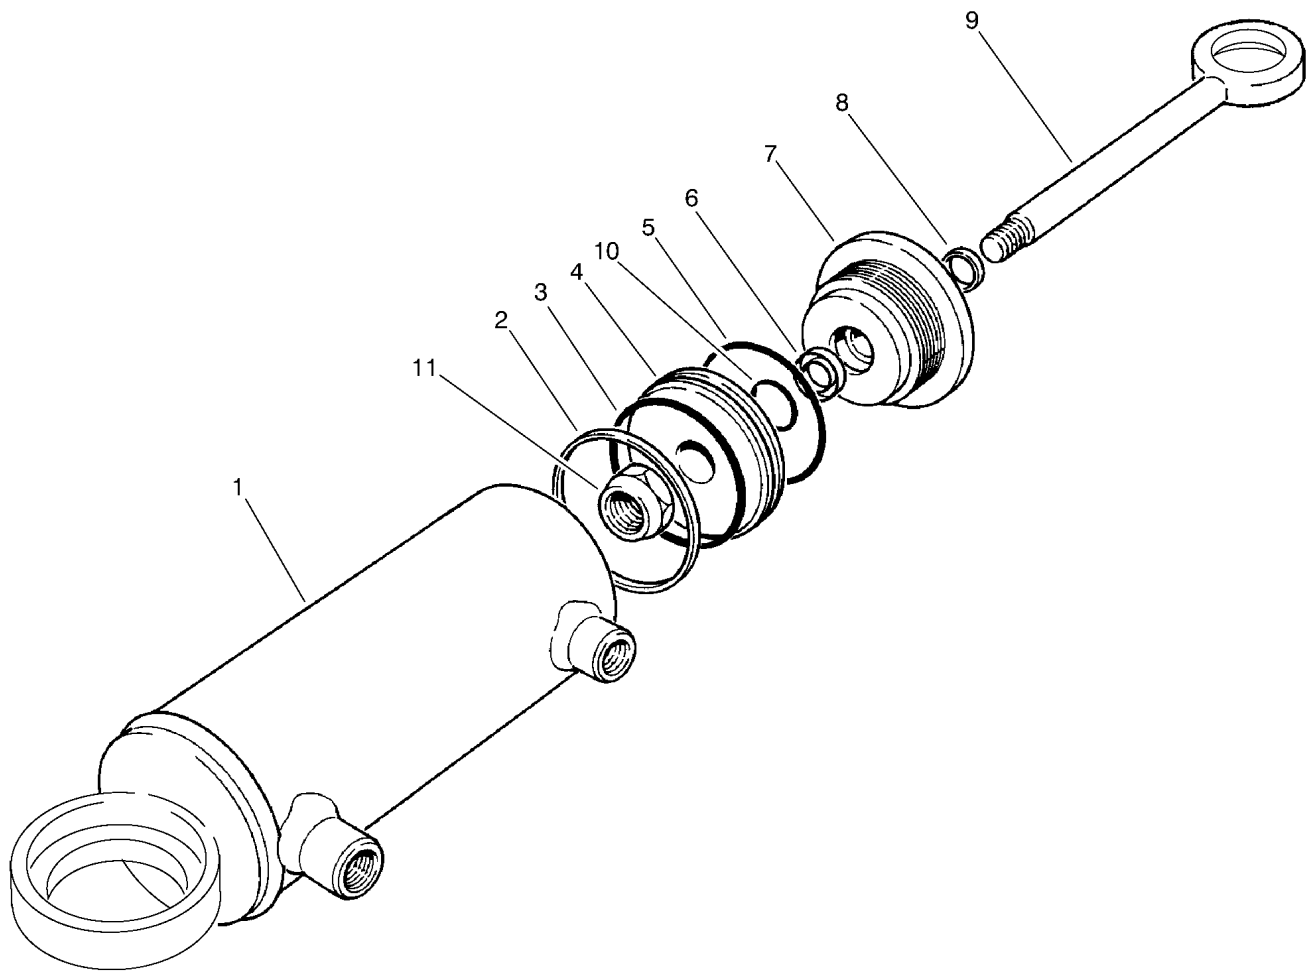

Hydraulic Cylinder No. 92-6584


Ref.	Part Number	Qty.	Description
1	92-6586	1	Butt & Tube Assy
2		1	Seal-Teflon
4	66-1940	1	Piston
6		1	U-Cup
7	92-6588	1	Gland
8		1	Wiper
9	92-6587	1	Piston Rod Assy
11	66-1930	1	Locknut
	92-6593	1	Kit-Seal (Incl. Ref. #2, 3, 5, 6, 8,& 10) ●

● Not illustrated

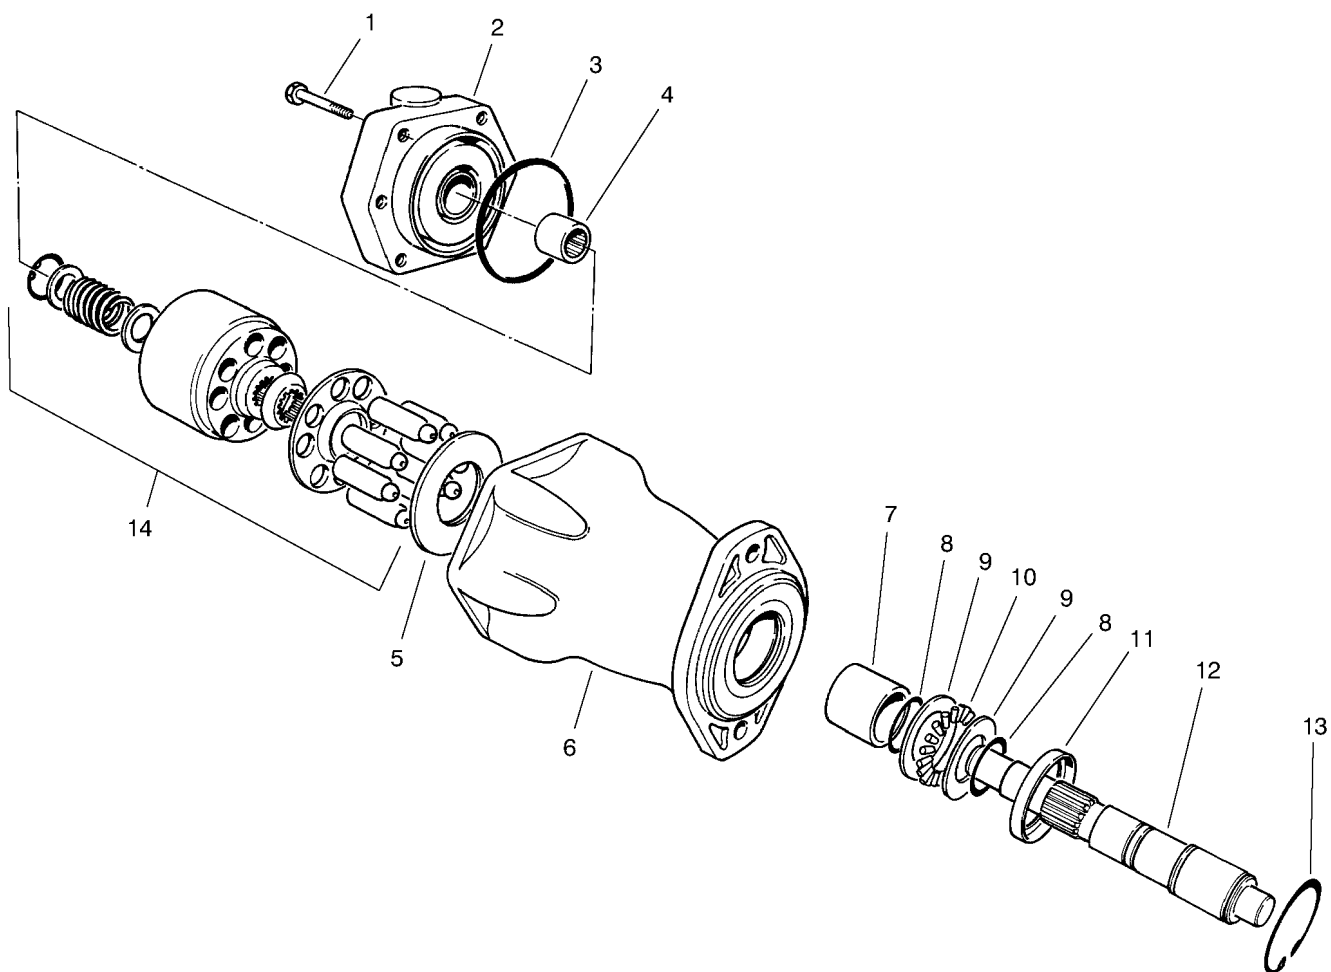

Hydraulic Motor No. 76-6580


Ref.	Part Number	Qty.	Description
1	76-6990	6	Capscrew
2	76-6920	1	Back Plate Assembly (Incl. Ref. #4)
3	76-6980	1	O-Ring
5	76-6970	1	Insert-Plate, Cam
6	76-6940	1	Housing Assembly (Incl. Ref. #7)
8	76-7000	2	Ring-Retaining
9	76-6950	1	Race-Thrust
10	76-6960	1	Bearing-Thrust
11	76-7020	1	Spacer
12	76-6930	1	Shaft-Drive
13	76-7010	1	Ring-Retaining
14	76-6910	1	Rotating Kit

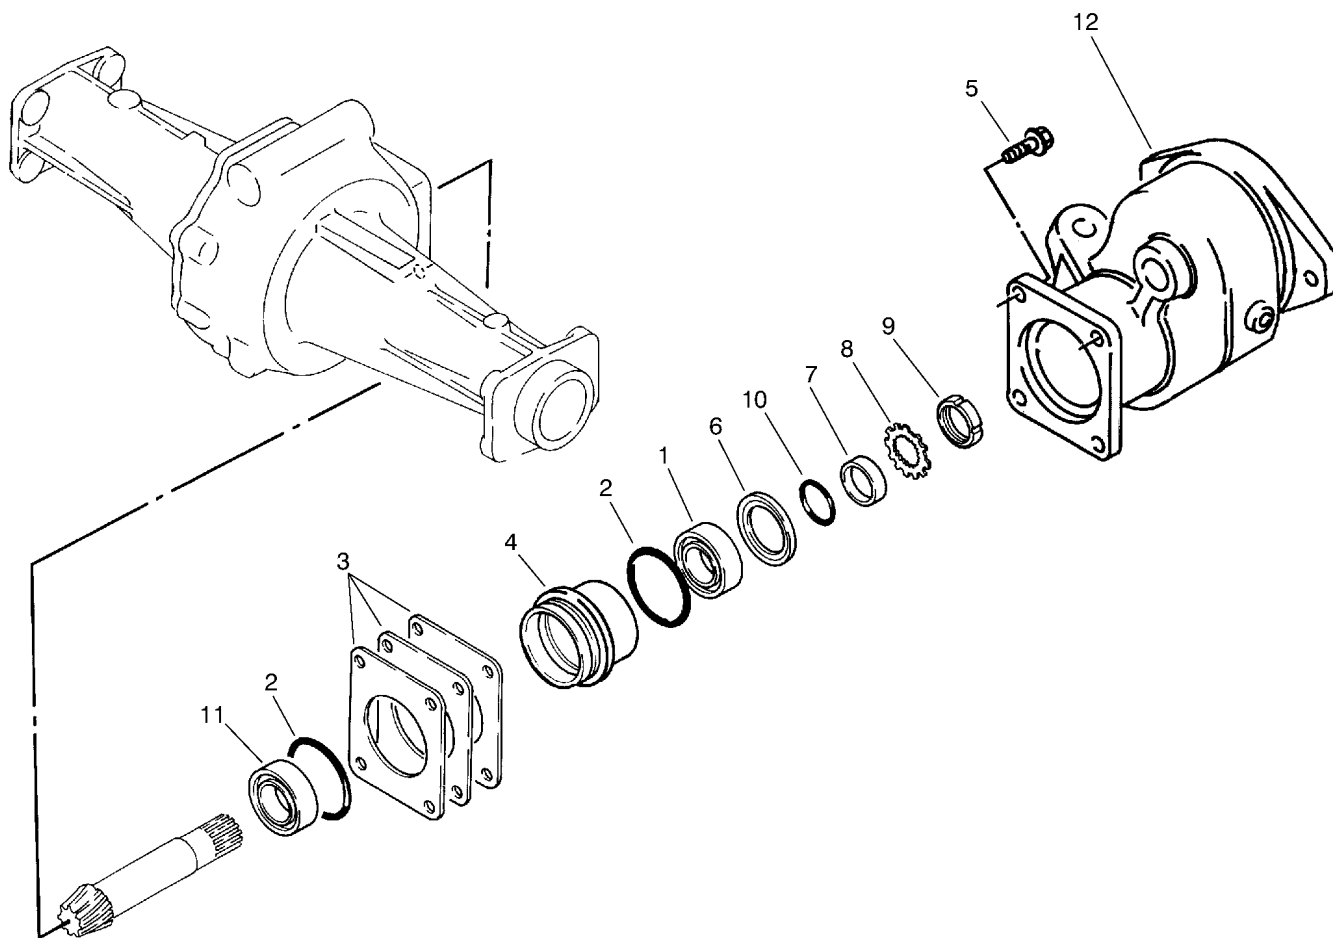

Sleeve Assembly


Ref.	Part Number	Qty.	Description
1	76-7330	1	Bearing
2	76-7400	2	O-Ring
3	76-7410	0	Shim
	76-7420	0	Shim ●
	76-7430	0	Shim ●
4	76-7320	1	Sleeve
5	93-7773	4	Screw-HHF
6	76-7340	1	Seal-Oil
7	76-7350	1	Bushing
8	76-7380	1	Washer
9	76-7390	1	Locknut
10	76-7360	1	O-Ring
11	76-7370	1	Bearing
12	76-8070	1	Adaptor
	77-4010	1	Shim Set (Incl. Ref. #3) ●

● Not illustrated

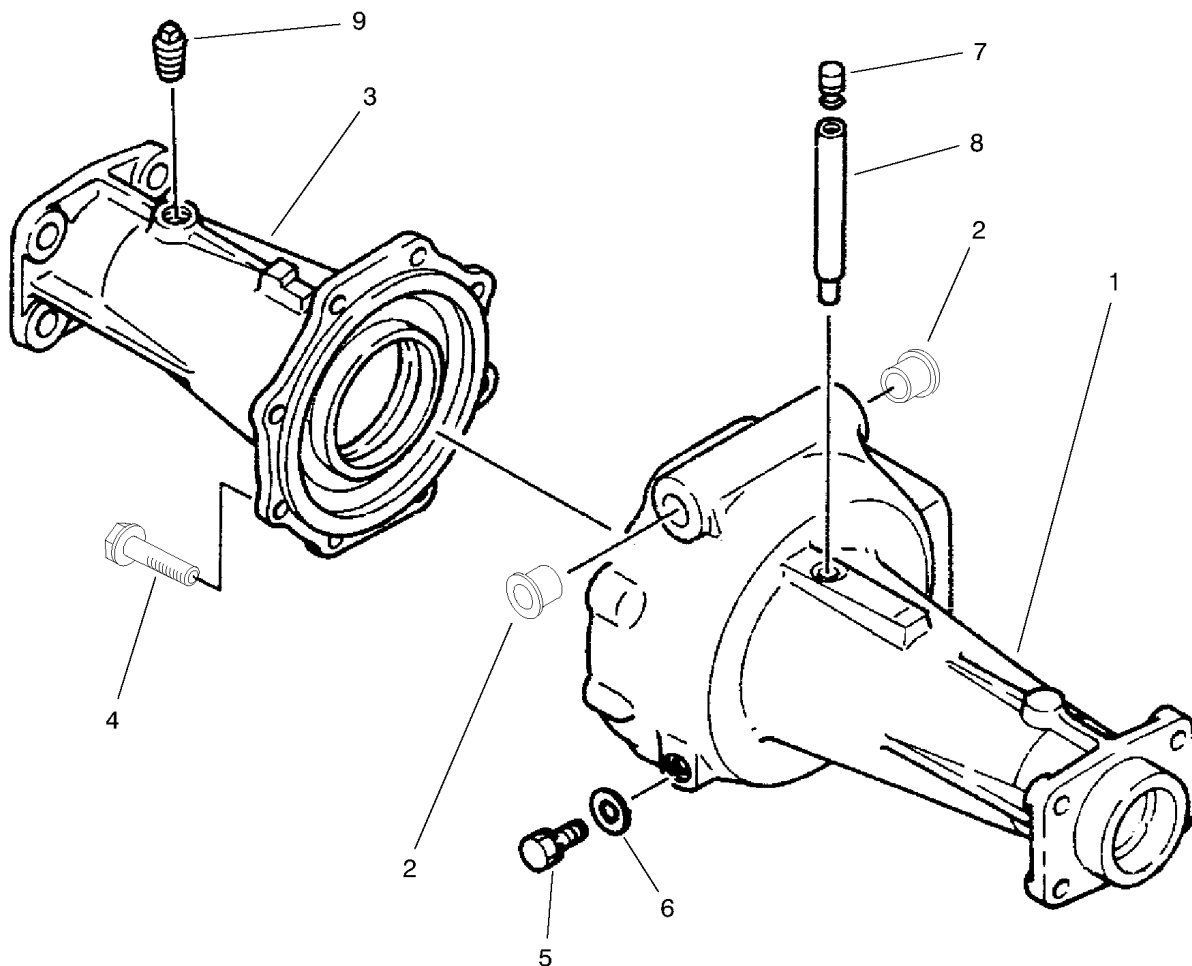


Axle Housing Assembly Axle No. 74-5621 (Unit Serial No. 60001-60151)

Ref.	Part Number	Qty.	Description
1	76-7100	1	Housing Axle A
2	92-9738	2	Bushing - Flange
3	76-7130	1	Housing Axle B
4	93-7773	8	Screw-HHF
5	76-7110	1	Plug
6	76-7120	1	Seal-Washer
7	76-7480	1	Plug - Vent
8	76-7470	1	Pipe
9	76-7140	1	Plug

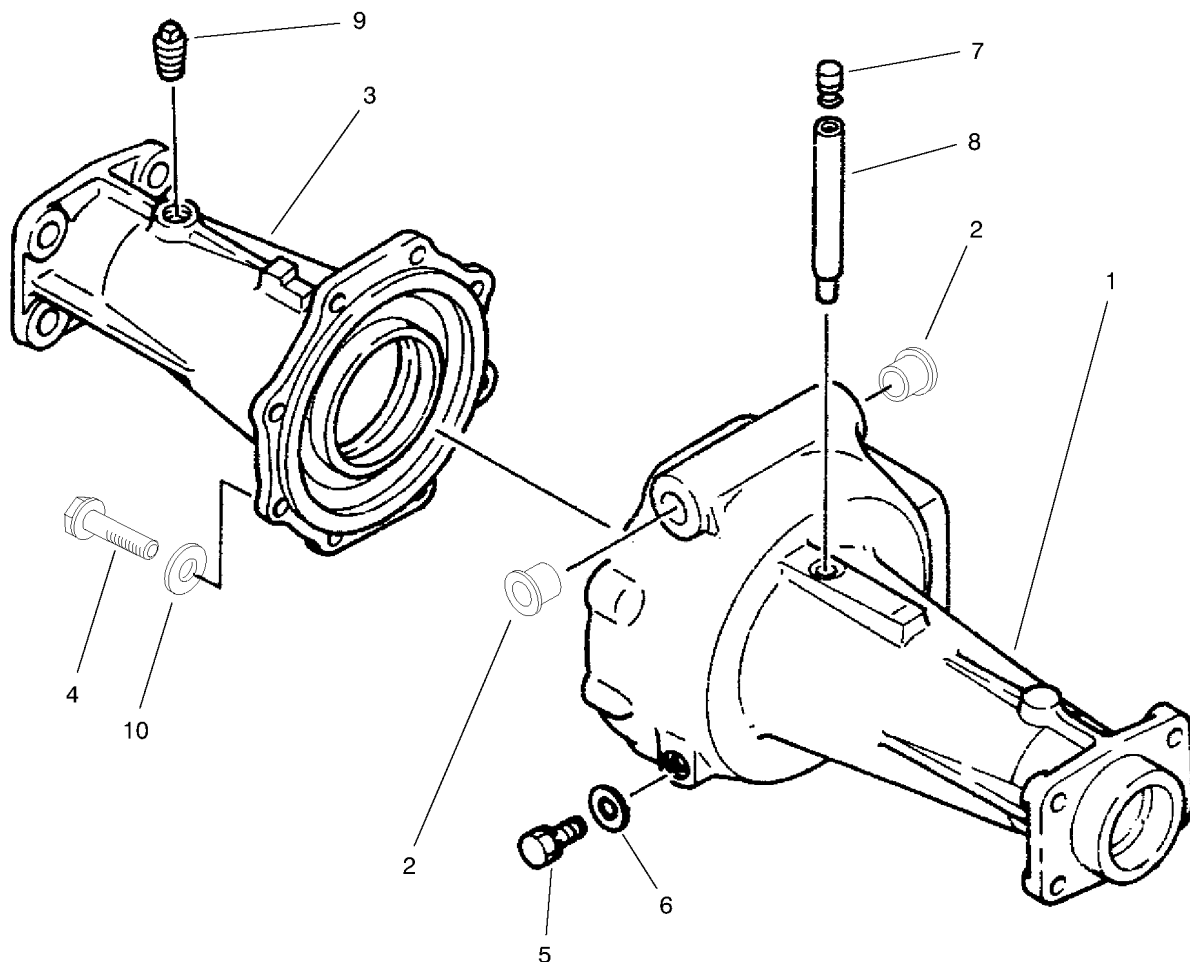

Axle Housing Assembly Axle No. 93-7780 (Unit Serial No. 60152 and Up)

Ref.	Part Number	Qty.	Description
1	93-7778	1	Housing-Axle A
2	93-7787	2	Bushing-Flange, Metric
3	93-7779	1	Housing-Axle B
4	93-7782	8	Bolt
5	76-7110	1	Plug
6	76-7120	1	Seal-Washer
7	76-7480	1	Plug - Vent
8	76-7470	1	Pipe
9	76-7140	1	Plug
10	93-7781	8	Washer

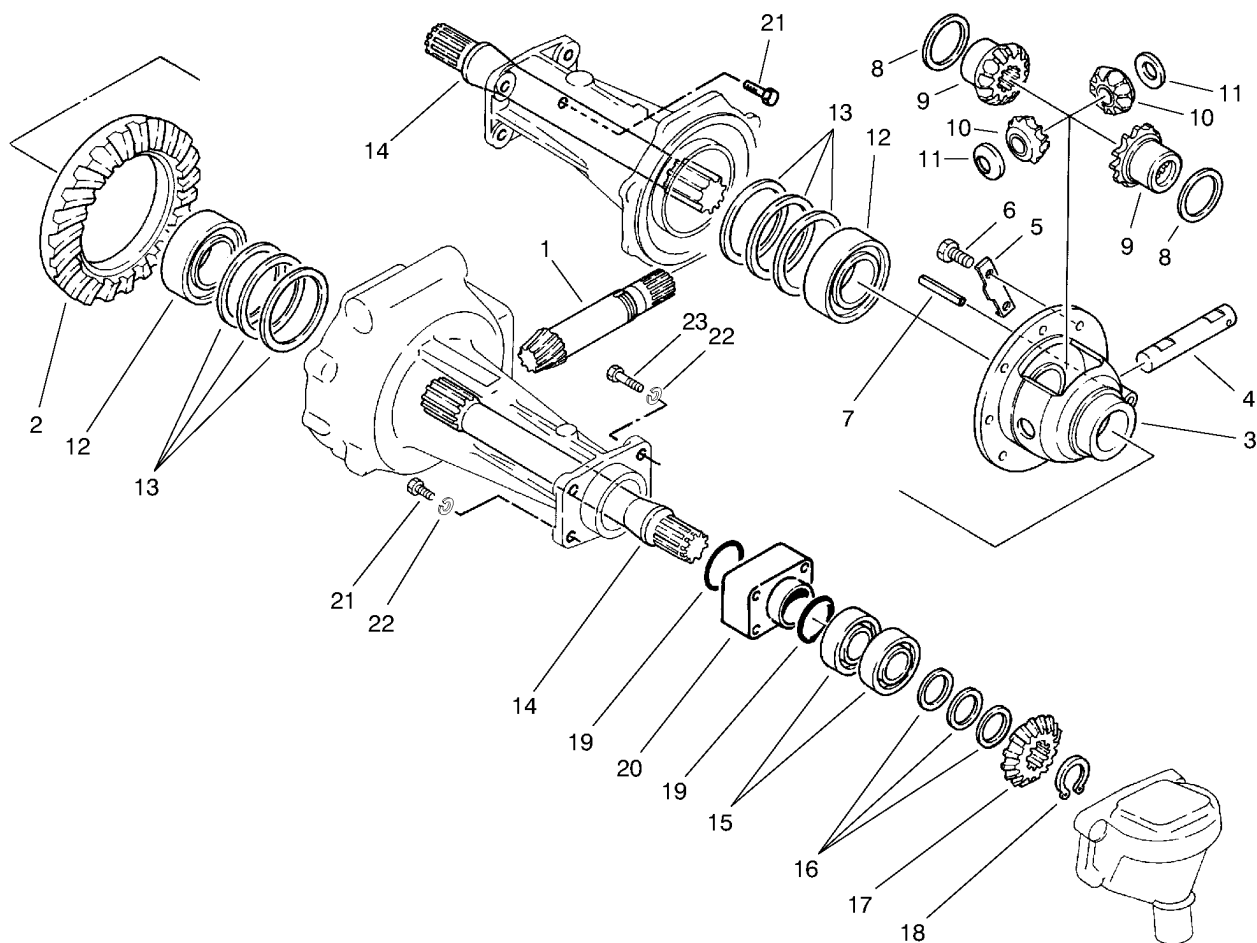


Differential and Shaft Assembly

Ref.	Part Number	Qty.	Description
1	76-7250	1	Drive - Pinion
2	76-7240	1	Gear - Ring
3	76-7170	1	Case, Diff
4	76-7200	1	Shaft - Pinion
5	76-7230	4	Washer - Lock
6	76-7260	8	Bolt
7	76-7270	1	Pin - Spring
8	76-7220	2	Washer - Thrust
9	76-7190	2	Gear-Side
10	76-7180	2	Pinion-Mate
11	76-7210	2	Washer - Thrust
12	76-7280	2	Bearing
13	76-7290	0	Liner
	76-7300	0	Shim ●
	76-7310	0	Liner ●
14	76-7490	2	Shaft-Differential

Ref.	Part Number	Qty.	Description
15	76-7500	4	Bearing-Ball
16	76-7520	0	Shim
	76-7530	0	Shim ●
	76-7540	0	Liner ●
17	76-7510	2	Pinion - 14T
18	76-7550	2	Ring
19	76-7580	4	O-Ring
20	76-7590	2	Spacer
21	76-7600	2	Bolt - Reamer
22	76-7620	8	Washer
23	76-7610	6	Bolt
	76-7160	1	Gear Case Assembly (Incl. Ref. #2-11) ●
	77-4000	1	Shim Set (Incl. Ref. #13) ●
	77-4020	1	Shim Set (Incl. Ref. #16) ●

● Not illustrated

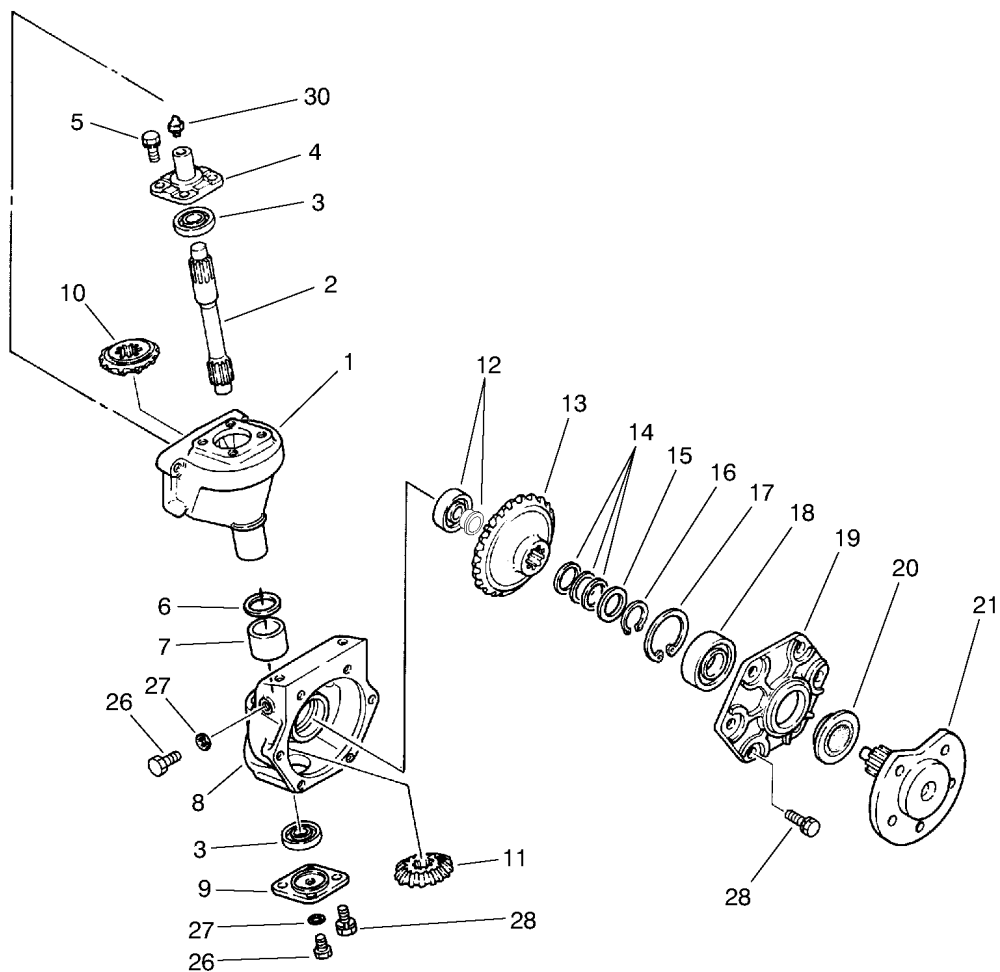


Steering Gear Case Assembly

Ref.	Part Number	Qty.	Description
1	76-7560	2	Case - Gear
2	76-7650	2	Shaft
3	76-7670	4	Bearing
4	76-7660	1	Holder
	76-7630	1	Holder ●
5	76-7640	8	Bolt
6	76-7740	2	Seal-Oil
7	76-7730	2	Bushing
8	76-7680	2	Case - Final
9	76-7770	2	Cover
10	76-7510	2	Pinion - 14T
11	76-7750	2	Pinion - 15T
12	94-5643	2	Bearing
13	76-7840	2	Gear - Bevel 29
14	76-7890	0	Spacer

Ref.	Part Number	Qty.	Description
	76-7900	0	Shim ●
	76-7910	0	Shim ●
15	76-7880	2	Shim
16	76-7920	2	Ring
17	76-7930	2	Ring
18	93-7775	2	Bearing
19	76-7810	2	Holder - Bearing
20	76-7870	2	Seal-Oil
21	76-7830	2	Hub-Wheel
26	76-7110	4	Plug
27	76-7120	4	Seal-Washer
28	76-7640	20	Bolt
30	76-7960	2	Nipple - Grease
	77-4030	1	Shim Set (Incl. Ref. #14) ●

● Not illustrated

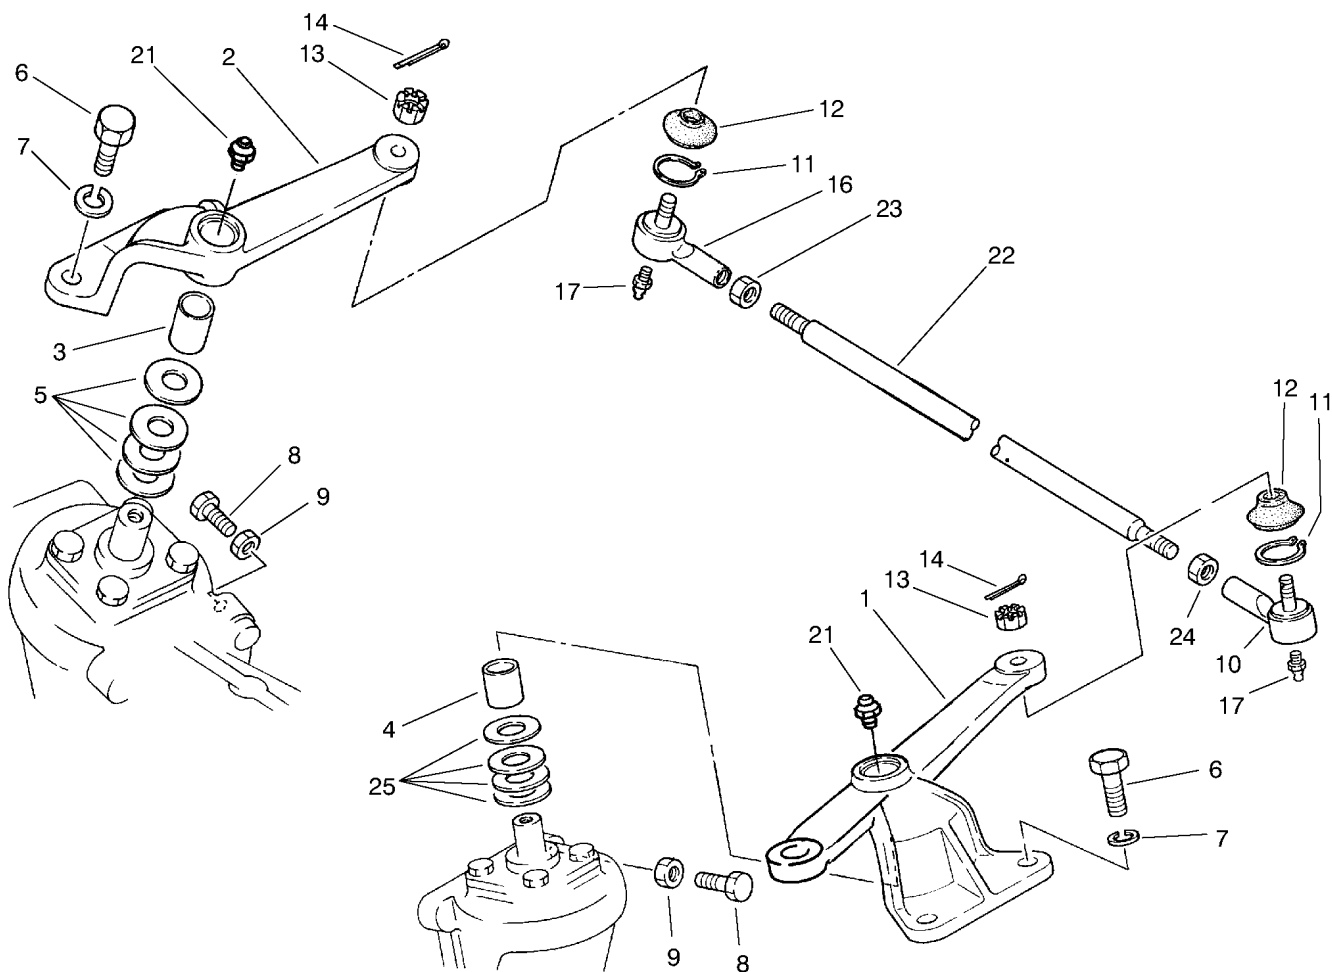


Steering Arm Linkage Assembly

Ref.	Part Number	Qty.	Description
1	94-8018	1	Arm-Link, Drag
2	94-8019	1	Arm-Rod, Tie
3	76-4260	1	Bushing
4	76-7950	1	Bushing
5	76-7820	0	Shim - Thrust B
	76-7970	0	Shim - Thrust C ●
	76-7980	0	Shim - Thrust D ●
	76-7990	0	Shim - Thrust E ●
6	76-8000	4	Bolt - Reamer
7	76-8010	2	Washer
8	76-7710	2	Bolt
9	76-7720	4	Nut
10	76-8030	1	Rod End Assembly L.H. (Incl. Ref. #11-14 & 17)
11	93-7783	2	Ring - Retaining
12	93-7784	2	Boot

Ref.	Part Number	Qty.	Description
13	93-7785	2	Nut
14	3272-7	2	Pin-Cotter
16	76-8050	1	Rod End Assembly R.H. (Incl. Ref. #11-14 & 17)
17	93-7786	2	Fitting - Grease
21	76-7960	2	Nipple - Grease
22	76-8020	1	Rod-Tie
23	76-8060	1	Nut
24	76-8040	1	Nut
25	76-7700	0	Shim - Thrust J
	76-7760	0	Shim - Thrust H ●
	76-7780	0	Shim - Thrust G ●
	76-7790	0	Shim - Thrust F ●
	77-4050	1	Shim Set (Incl. Ref. #5) ●
	77-4040	1	Shim Set (Incl. Ref. #25) ●

● Not illustrated

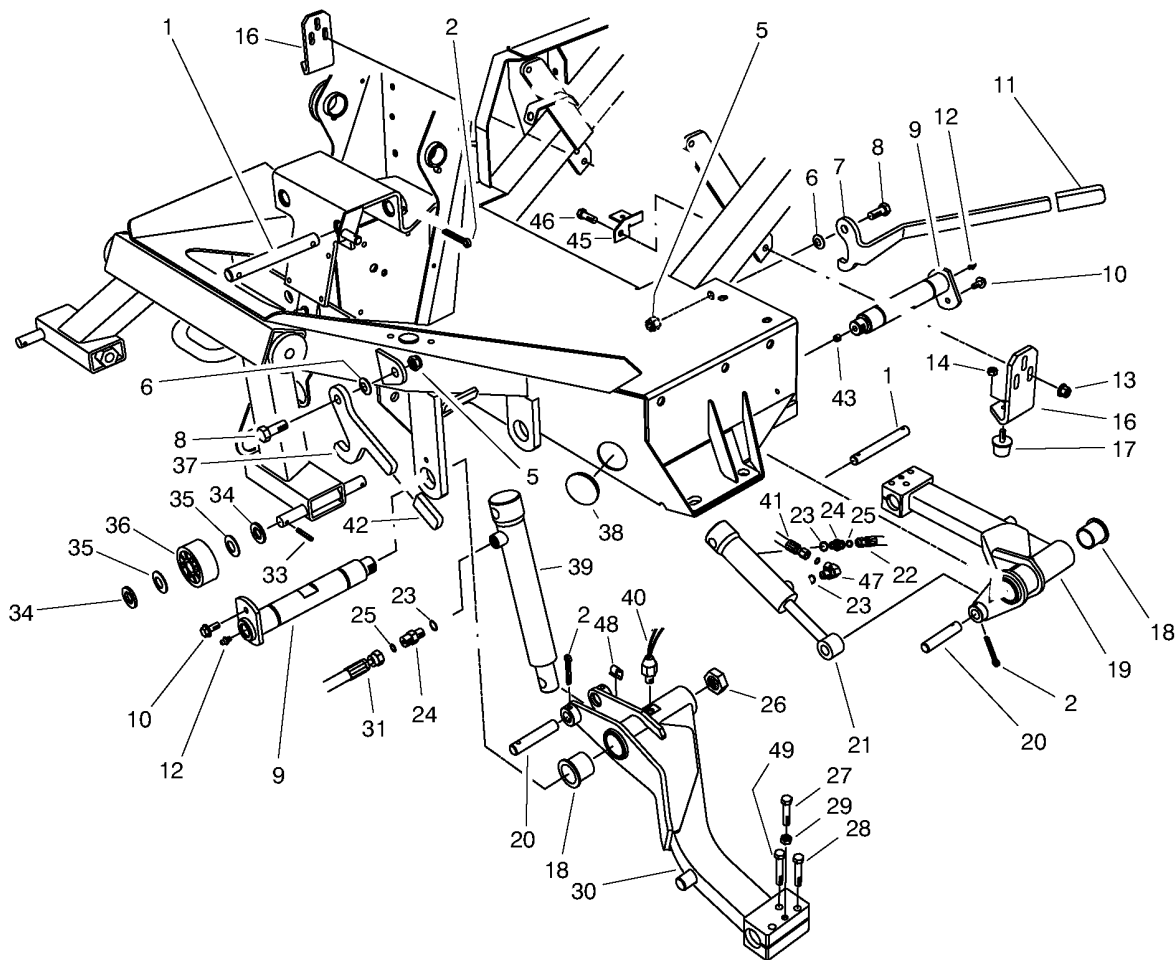


Lift Arm Assembly

Ref.	Part Number	Qty.	Description
1	76-6850	3	Pivot Pin
2	3272-50	6	Pin-Cotter
5	3296-25	3	Nut-Lock, NI
6	3290-483	3	Washer-Conical
7	76-9360	1	Rear Lock Latch *b
8	325-5	3	Screw-HH
9	74-5280	3	Pivot Pin Wa
10	32144-11	3	Screw-HWHTF
11	48-7080	1	Grip-Plastic
12	302-2	3	Fitting-Grease
13	3290-357	4	Nut-HHF, Whiz
14	32128-20	2	Nut-HF
16	84-0660	2	Stabilizer Brkt *b
17	68-3270	2	Bumper-Rubber
18	69-6470	6	Bushing-Caster
19	74-5100	1	Lift Arm Assembly Center (Incl. Ref. #18)
20	76-6860	3	Pin - Cylinder Pivot
21	74-3440	1	HYD Cylinder Assy
22	76-9410	1	Hose Assy
23	237-42	4	O-Ring
24	340-2	3	Fitting-Hydraulic Straight (Incl. Ref. #23 & 25)
25	237-22	4	O-Ring
26	3296-49	3	Nut-Lock, NI
27	323-50	3	Bolt-TAP

Ref.	Part Number	Qty.	Description
28	323-10	6	Screw-HH
29	3218-3	3	Nut-Jam
30	74-5200	1	Lift Arm Assembly L.H. (Incl. Ref. #18)
	74-5300	1	Lift Arm Assembly R.H. (Incl. Ref. #18)●
31	76-8220	2	Hose Assy
33	32121-6	4	Pin-Roll, Slotted
34	51-2060	8	Washer
35	3290-317	8	Washer-Spring
36	82-4910	4	Roller
37	76-9350	2	Frt Lockup Latch *b
38	2410-69	1	Dome Plug
39	74-3460	2	Hydraulic Cylinder Assy
40	92-1368	3	Switch - Ball N.C.
41	76-9900	1	Hose Assy
42	48-7081	2	Grip-Plastic
43	285-17	3	Plug-Pipe
45	74-6470	1	Brkt-Clamp, Strg Line
46	323-7	4	Screw-HH
47	340-77	1	Fitting-Hydraulic 90Ø (Incl. Ref. #23 & 25)
48	249-50	3	Clip - Special
49	323-11	3	Screw-HH
	93-9398	3	Decal - Danger●
	93-7814	3	Decal-Danger●


● Not Illustrated.

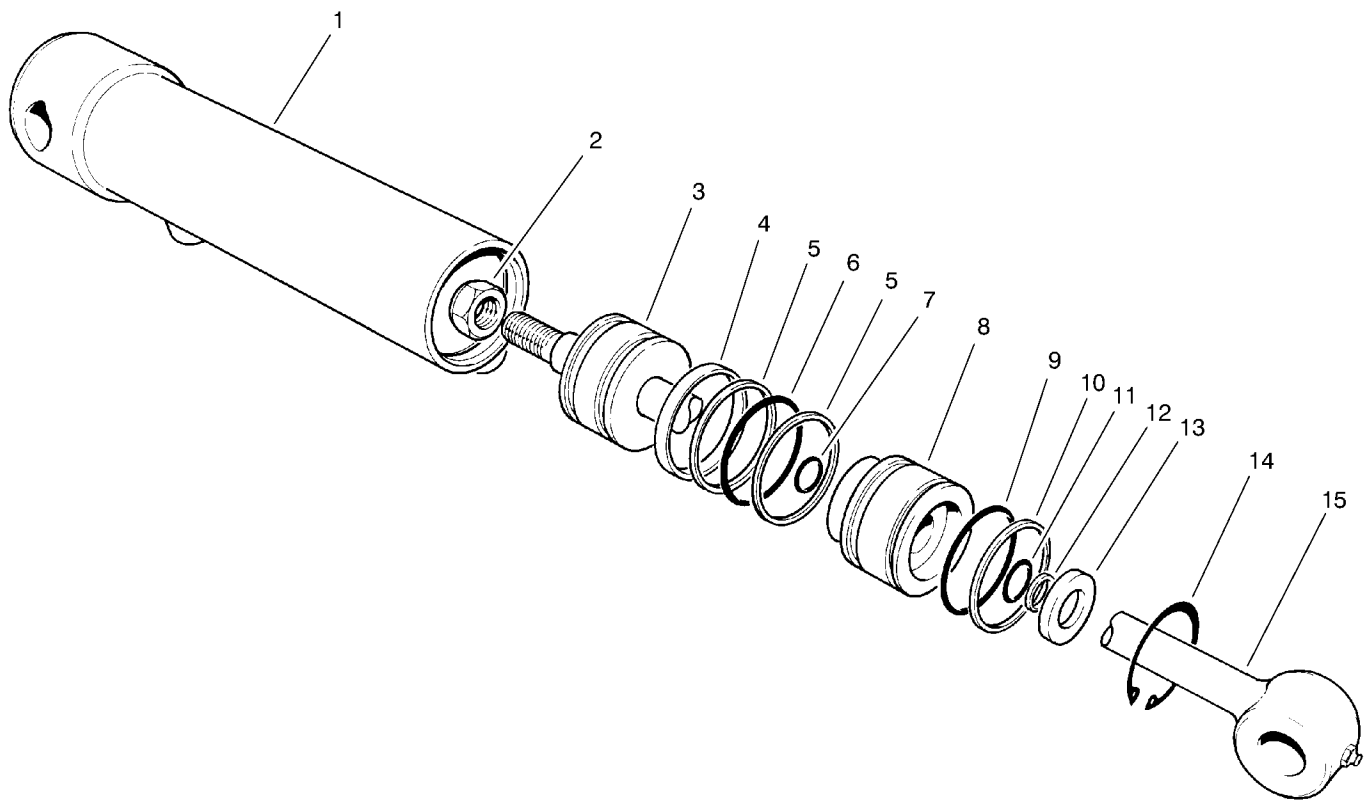

Hydraulic Cylinder No. 74-3440

Ref.	Part Number	Qty.	Description
1	74-9960	1	Barrel Assy
2	74-9940	1	Locknut
3	74-9950	1	Piston
4		1	Ring-Wear
5		2	Back-Up
8	74-9980	1	Snap Ring-Special Head
10		1	Back-U P
12		1	Back-U P
13		1	Wiper
14	32120-42	1	Ring-Retaining
15	74-9970	1	Rod Assy
	74-9990	1	Seal Kit (Incl. Ref. #4-7, & 9-13)●


● Not illustrated

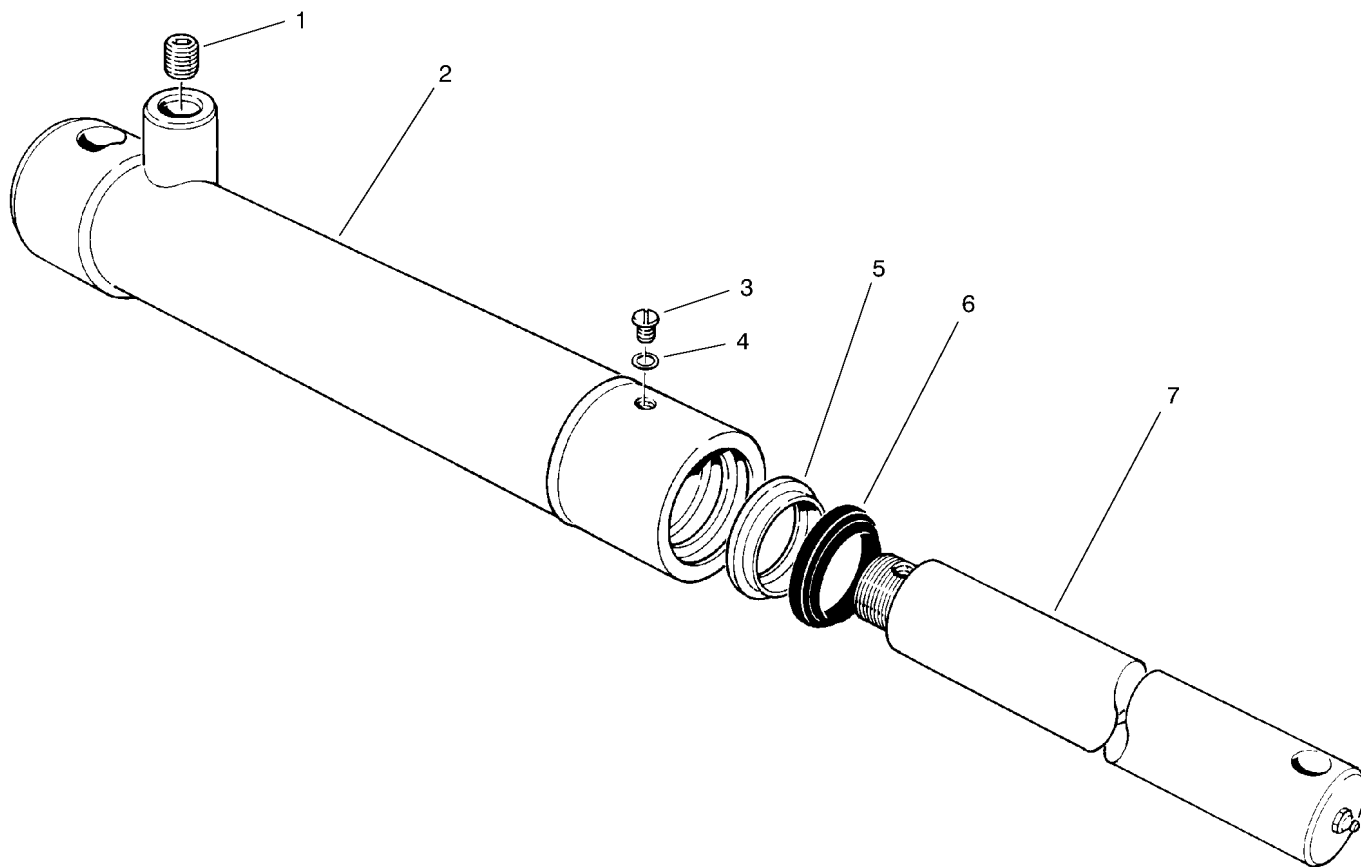

Hydraulic Cylinder No. 74-3460

Ref.	Part Number	Qty.	Description
1	74-9550	1	3/8" Set Screw
2	74-9560	1	Barrelassy. (Incl. Piston)
3	74-9580	1	10-24Uncx1/4 But.HD. C.S.
4	77-3960	1	Washer & O-Ring
5		1	U-Cup
6		1	Wiper-Rod
7	74-9570	1	Rod
	74-9590	1	Seal Kit (Incl. Ref. #5 & 6)●

● Not illustrated

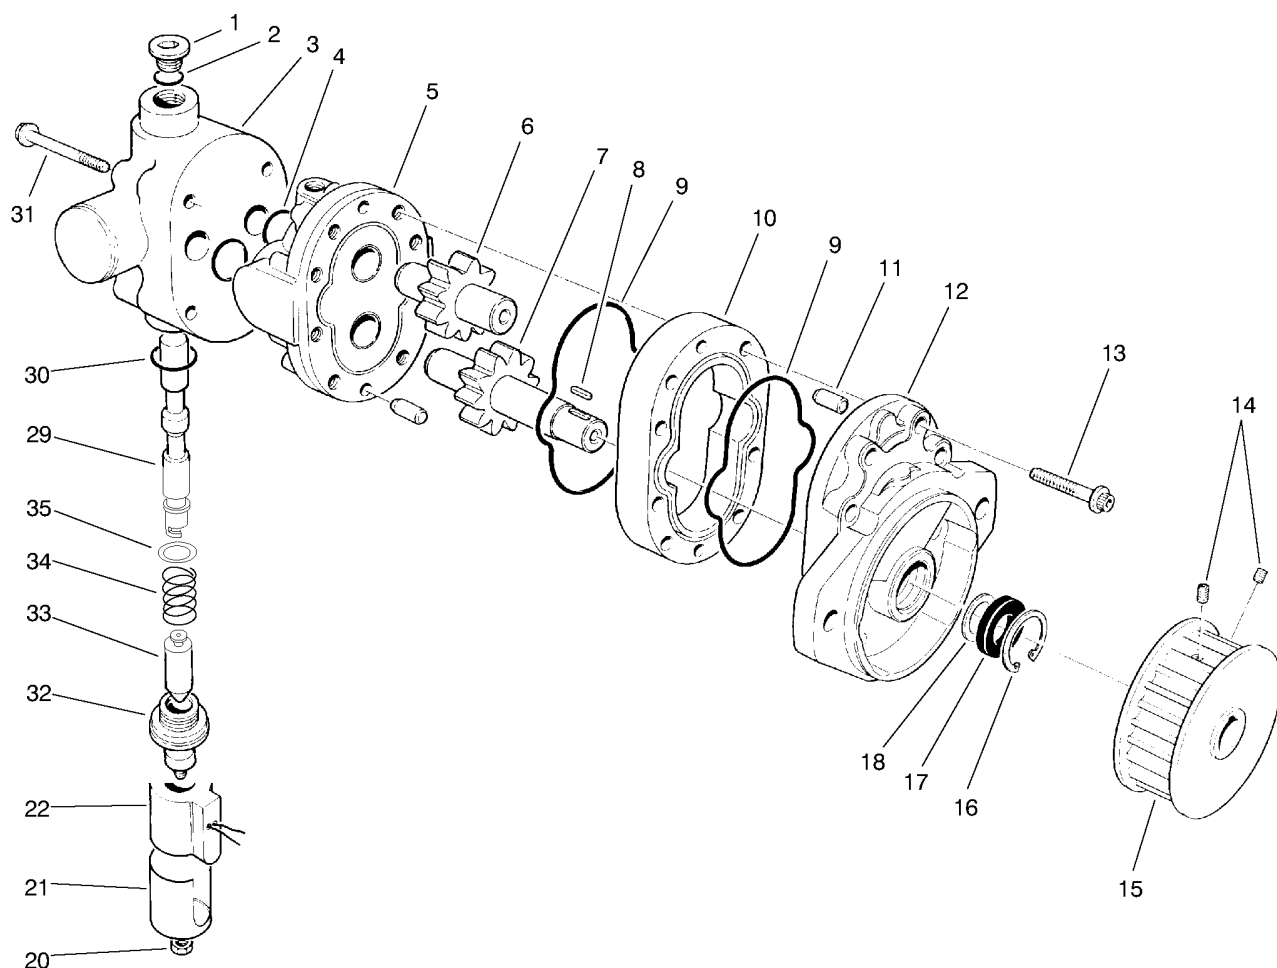


Reel Motor Assembly No. 74-3390

Ref.	Part Number	Qty.	Description
1	74-9280	1	Plug Assembly (Incl. Ref. #2)
3		1	Spool-Body
4	74-9290	2	O-Ring
5	74-9190	1	Backplate Assy
6	74-9170	1	Idler Gear Assy
7	74-9210	1	Drive Gear Assy
8	47-2380	1	Key-Square
9	56-6710	2	O-Ring
10	74-9160	1	Body Assy
11	42-2010	2	Pin-Dowel
12	66-5730	1	Front Plate ASM
13	74-9370	8	Capscrew
14	3246-17	2	Setscrew-HSH
15	47-7150	1	Pulley-Drive
16	59-8320	1	Ring-Retaining
17	66-5710	1	Seal-Shaft


Ref.	Part Number	Qty.	Description
18	60-5890	1	Washer
20	74-9300	1	Nut
21	74-9270	1	Solenoid Case
22	74-9260	1	Solenoid Coil Assy
29		1	Spool
30	74-9380	1	O-Ring
31	42-3140	4	Capscrew
32	74-9320	1	Solenoid Core Sub-Assy
33	74-9350	1	Solenoid Spool Plunger
34	74-9340	1	Spring
35	74-9360	1	Washer
	74-9410	1	Kit-Seal (Incl. Ref. #4, 9, 16 & 17) ●
	74-3390	3	Reel Motor Assembly (Incl. Ref. #1-13 & 16-31) ●
	74-9400	1	By-Pass Valve Assembly (Incl. Ref. #1-3 & 19-30) ●

● Not illustrated

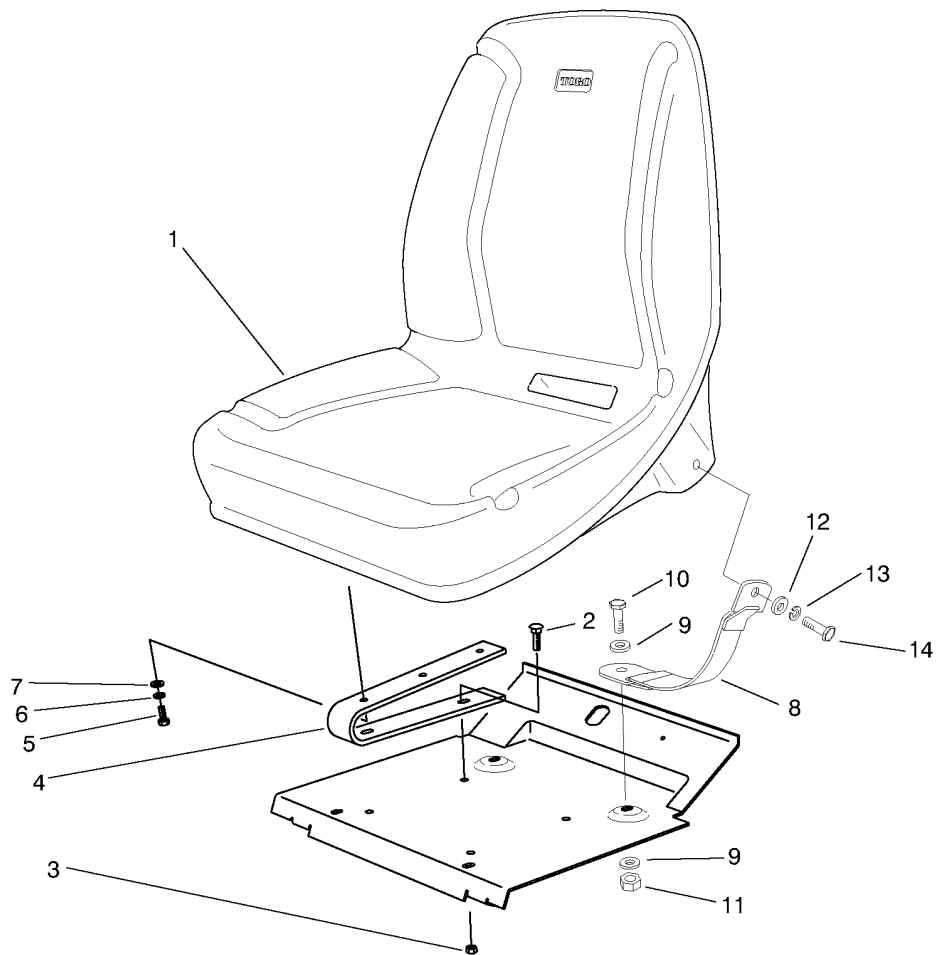

Low Seat Assembly (optional)

Ref.	Part Number	Qty.	Description
1	92-1180	1	Seat
2	3230-16	4	Screw-CARR
3	3296-29	4	Nut-Lock, NI
4	68-3280	2	Spring Seat
5	322-4	4	Screw-HH
6	3253-4	4	Washer-Lock
7	3256-2	4	Washer-Flat
8	92-5521	2	Strap-Tether
9	3256-24	4	Washer-Flat
10	323-6	2	Screw-HH
11	3296-39	2	Nut-Lock, NI
12	3256-5	2	Washer-Flat
13	3253-6	2	Washer-Lock
14	3212-5	2	Screw-HH

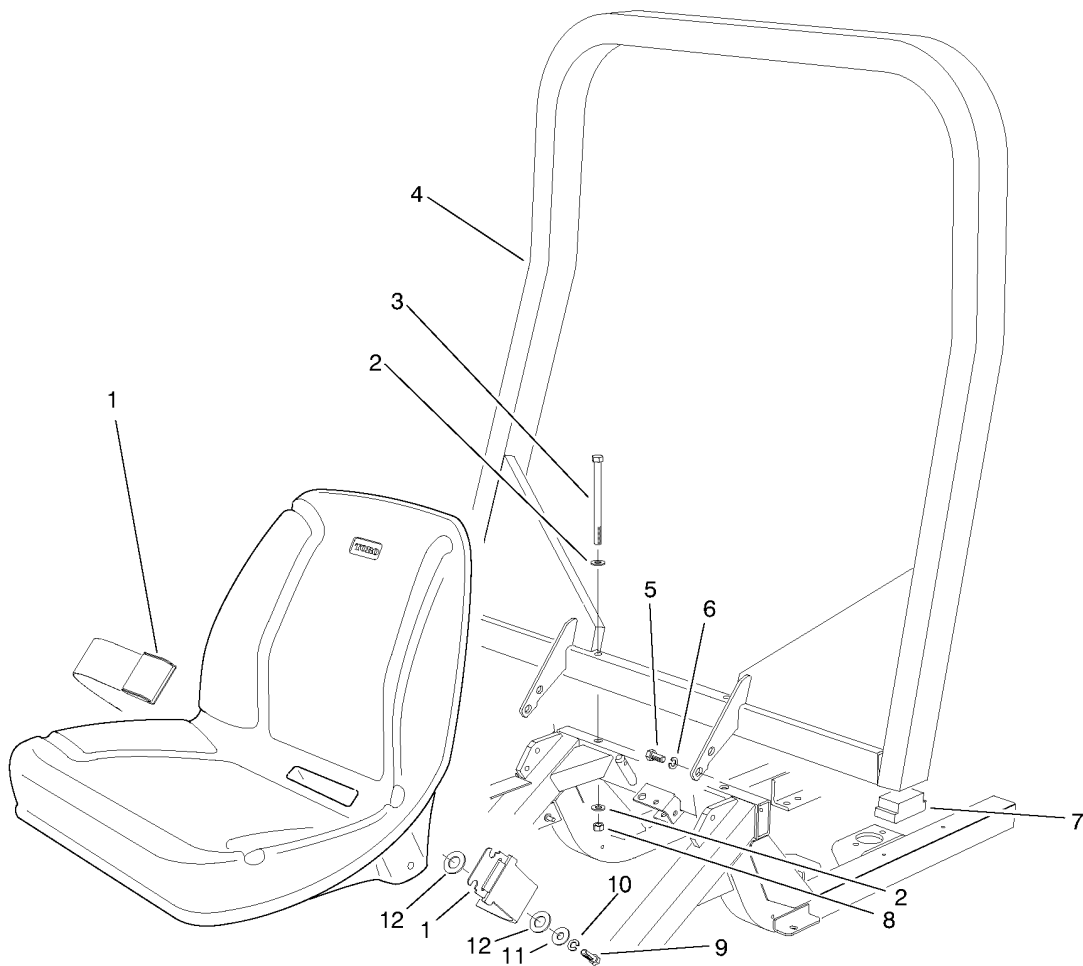

Roll-Over Protection System Assembly

Ref.	Part Number	Qty.	Description
1	21-4191	1	Seat Belt ASM
2	3256-26	4	Washer-Flat
3	325-33	2	Screw-HH
4	76-9370	1	Bar-R.O.Rs.
5	325-2	4	Screw-HH
6	3253-7	4	Washer-Lock
7	82-5370	2	Foam-ROPS
8	3296-25	2	Nut-Lock, NI
9	3212-5	2	Screw-HH
10	3253-6	2	Washer-Lock
11	3256-5	2	Washer-Flat
12	3256-28	2	Washer-Flat

Notes:



Count on it.