




<p>MODEL NO. 70040-6900001 thru 7900578</p>	<p>PARTS CATALOG</p>
<p>WHEEL HORSE® 825 Recycler® Riding Mower</p>	

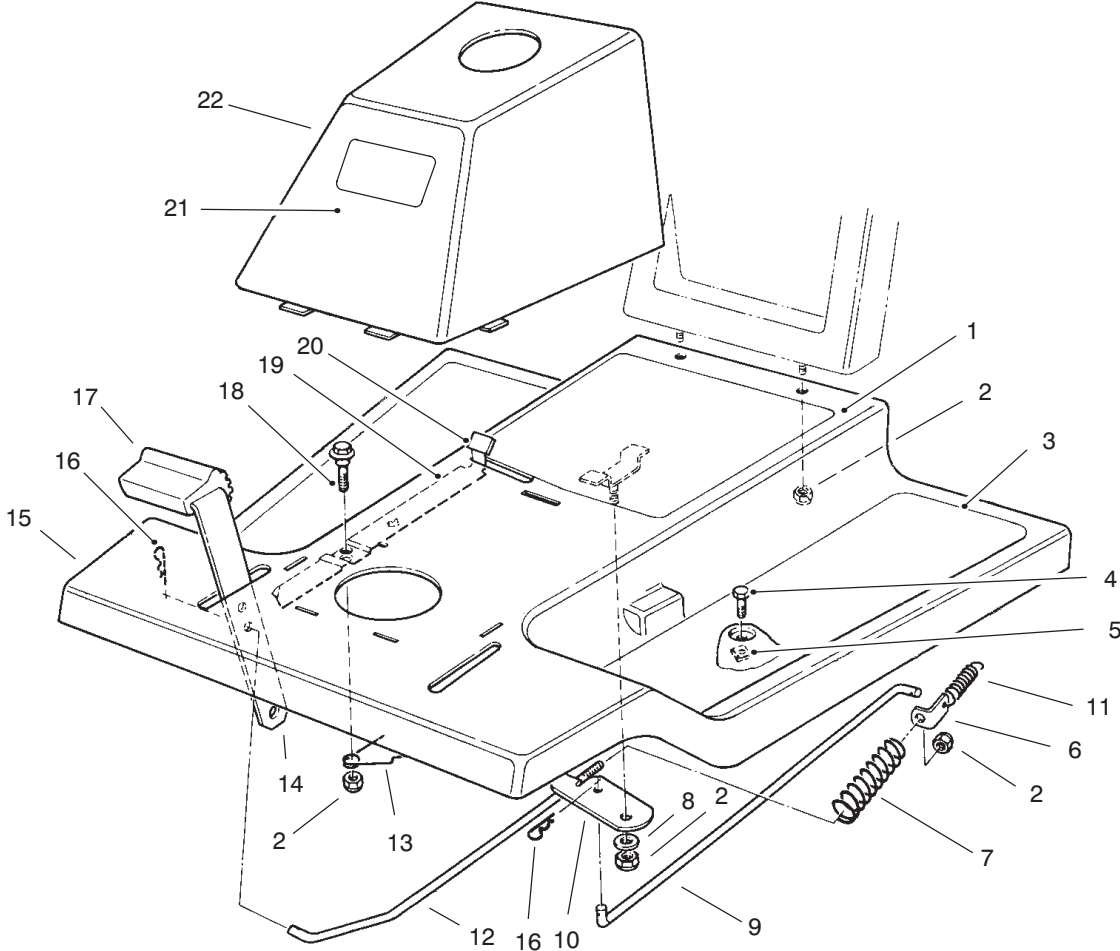


C-1940

FRONT BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-9499	Decal - Instruction	1
2	3296-29	Nut - Lock	5
3	44-7030	Tread - Foot Rest	2
4	32104-110	Screw - Cap Hex. Hd.	4
5	3290-347	Nut - U-Type	4
6	67-1590	Bracket - Brake Return	1
7	67-1430	Spring - Compression	1
8	26-9530	Washer - Pivot	1
9	67-1340	Rod - Brake, Transmission	1
10	67-1330-03	Lever - Brake, Bellcrank	1
11	67-1450	Spring - Extension	1
12	67-1350	Rod - Front, Brake	1

Ref. No.	Part No.	Description	No. Used
13	19-1970	Spring - Brake, Parking	1
14	67-1130-03	Pedal - Brake & Clutch	2
15	67-1070-01	Body W.A. - Front	1
16	3290-250	Pin - Hair, Cotter	2
17	65-2920	Pad - Pedal	2
18	19-1470	Bolt - Shoulder	1
19	19-1610-03	Lever - Brake, Parking	1
20	19-2200	Tip - Brake, Parking	1
21	92-7981	Decal - Toro	1
22	55-7103	Tower (Incl. Ref. #21)	1

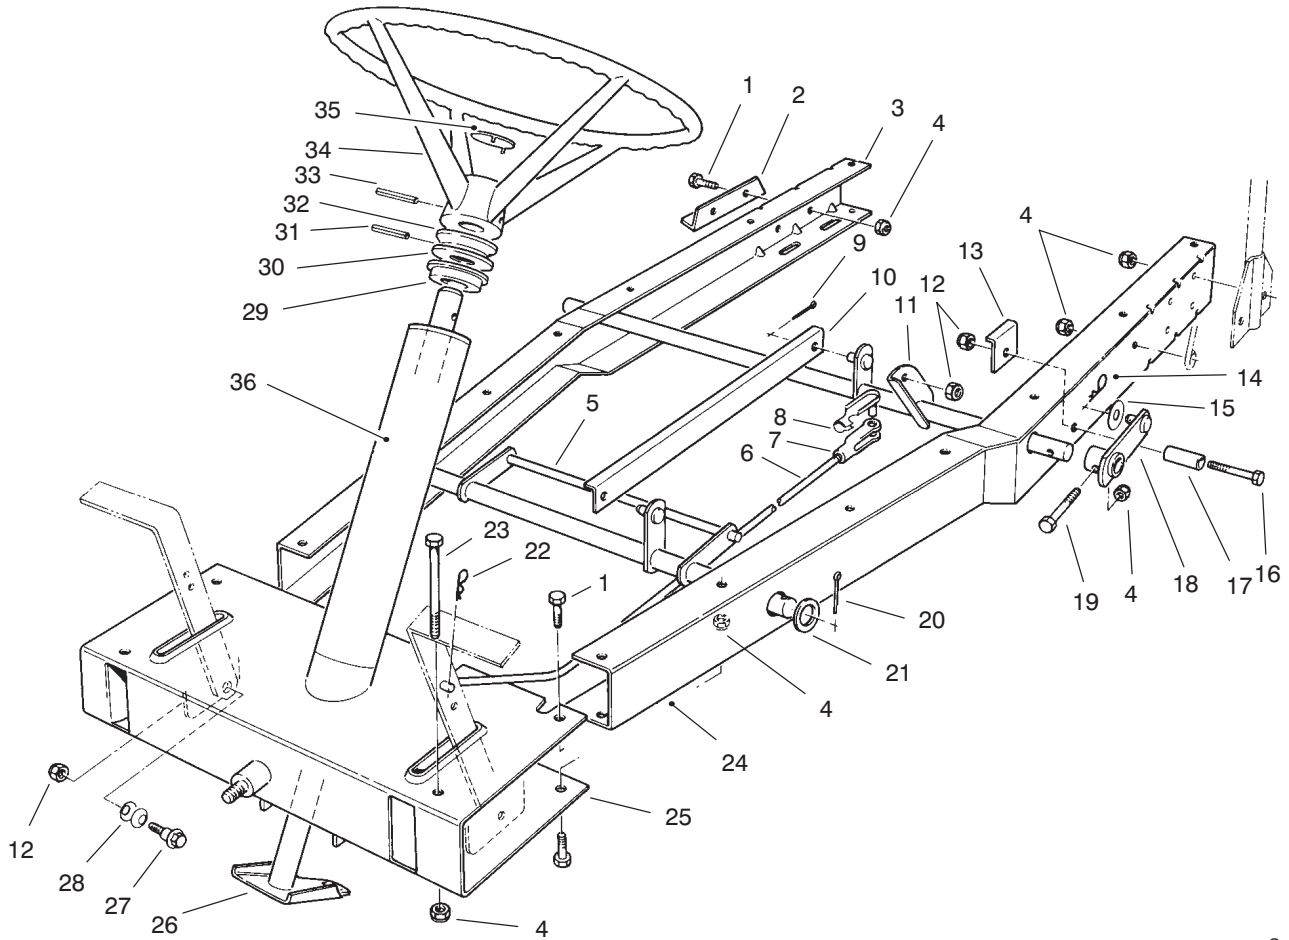


C-0005

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-3	Screw - Cap Hex. Hd.	6
2	44-7140-01	Mount - Bearing, Axle	1
3	67-0520-01	Channel - R.H.	1
4	3296-29	Nut - Lock	16
5	67-0010-03	Lift W.A. - Front, Deck	1
6	67-0430	Rod - Clutch	1
7	282-27	Clevis	1
8	67-1530	Pin - Clevis	1
9	3272-6	Pin - Cotter	2
10	67-0090-03	Bracket - Link, H.O.C.	1
11	67-0050-01	Tube W.A. - Support, Rear	1
12	3296-39	Nut - Lock	5
13	67-1510-03	Brace - Stop, Deck	2
14	3290-355	Pin - Hair, Cotter	2
15	67-1460	Washer - Flat	2
16	323-10	Screw - Cap Hex. Hd.	2
17	68-8380	Spacer - Stop, Deck	2
18	67-0300-01	Lever W.A. - H.O.C.	2
19	46-2511	Bolt - Mounting, Axle	2

Ref. No.	Part No.	Description	No. Used
20	3272-23	Pin - Cotter	2
21	3256-29	Washer - Flat	2
22	3290-250	Pin - Hair, Cotter	1
23	322-14	Screw - Cap Hex. Hd.	2
24	67-0530-01	Channel - L.H.	1
25	67-0450-01	Frame W.A. - Front	1
26	67-0830-03	Shaft W.A. - Steering	1
27	67-0870	Bolt - Shoulder	2
28	3290-413	Washer - Belleville	4
29	67-0850	Bushing - Steering	2
30	67-0860	Washer - Steering	1
31	32121-32	Pin - Roll	1
32	67-0440	Spacer - Steering	1
33	32121-78	Pin - Roll	1
34	49-3242	Wheel - Steering	1
35	92-7990	Insert - Wheel, Steering	1
36	76-4080	Decal	1
*	13-6049	Kit - Loose parts	1


*Not Illustrated

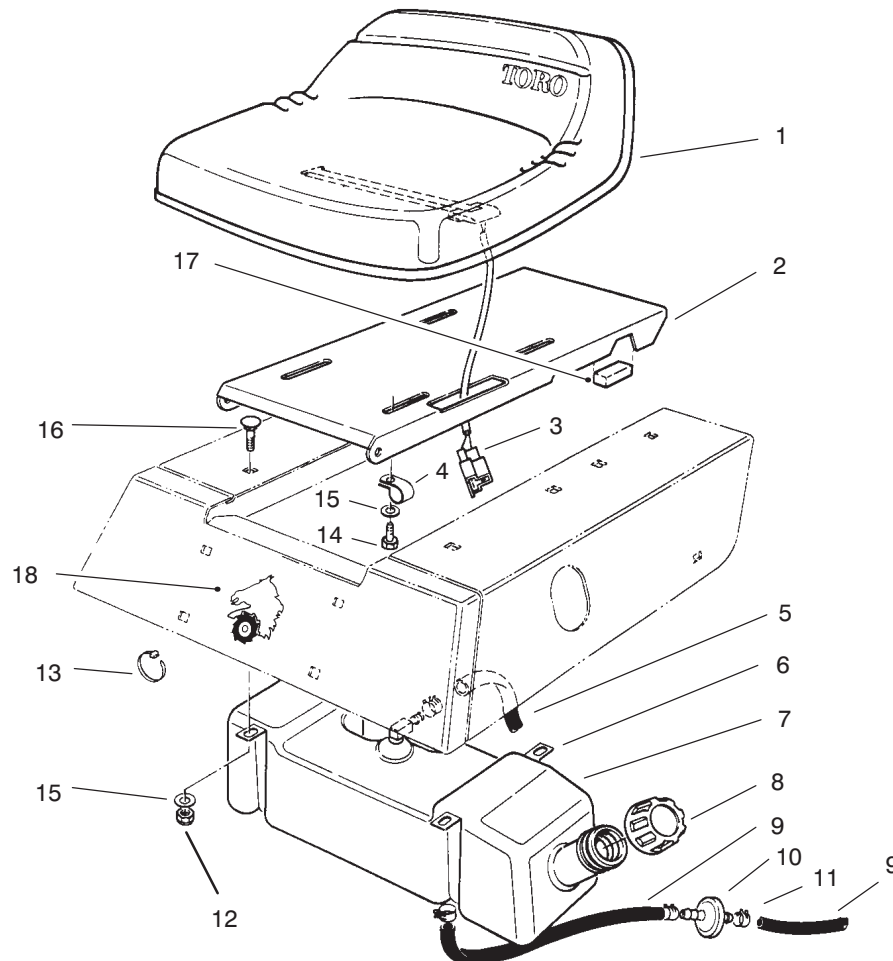

C-1941

SEAT & GAS TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-4330	Seat	1	10	56-6360	Filter	1
2	67-1242-01	Base - Seat	1	11	2412-98	Clamp - Hose	5
3	38-1420	Switch - Seat	1	12	3296-29	Nut - Lock	4
4	18-2970	R-Clamp	1	13	3290-378	Tie - Cable	1
5	47-2986	Hose - Gas	1	14	322-3	Screw - Cap Hex. Hd.	4
6	67-0950	Strap - Tank, Gas	2	15	3256-23	Washer - Flat	8
7	80-4580	Tank - Gas	1	16	3230-20	Bolt - Carriage	4
8	55-3576	Assembly - Cap, Gas	1	17	66-6920	Pad - Isolator	2
9	47-2964	Hose - Gas	2	18	92-7978	Decal - Horsehead	1

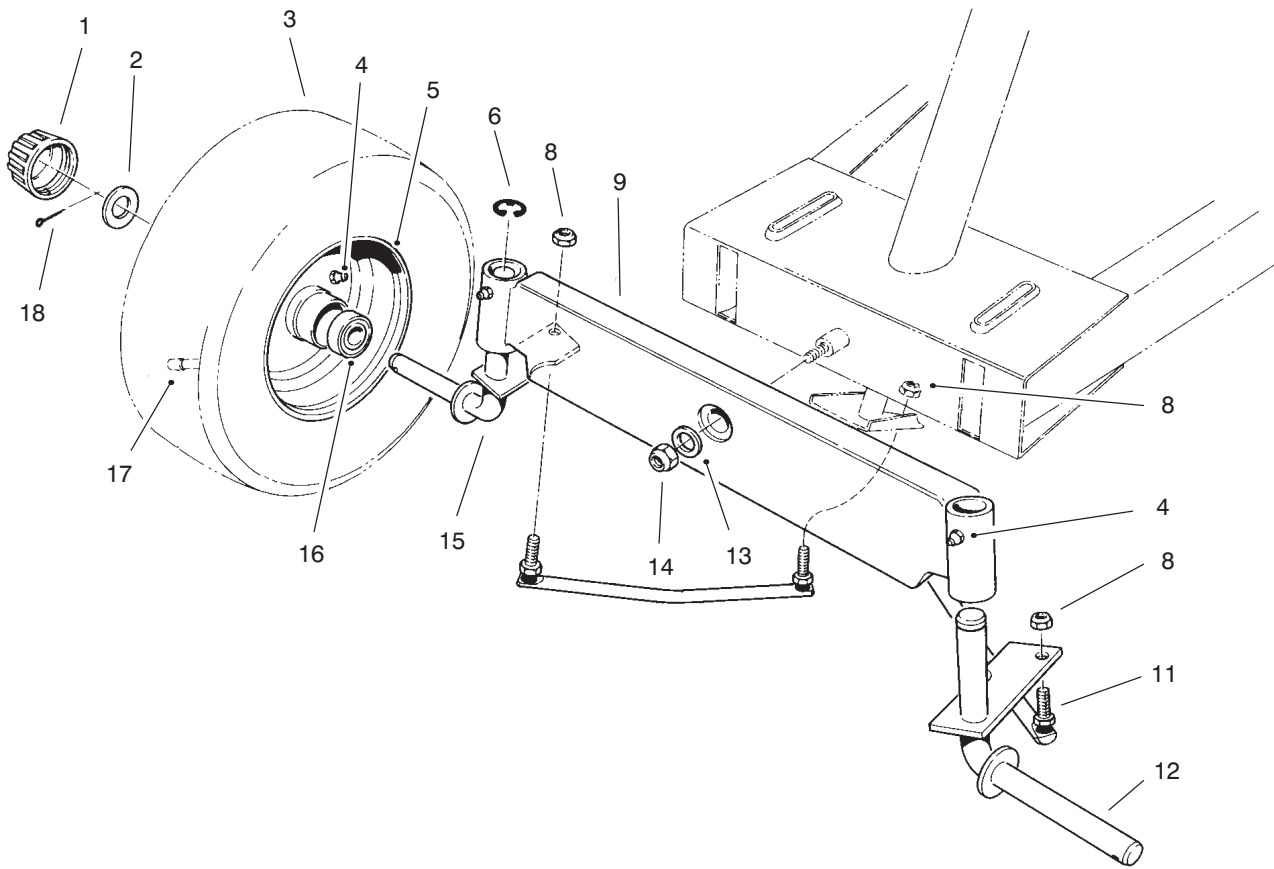


C-0003A

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9780	Cap - Hub	2
2	28-2480	Washer - Flat	2
3	231-116	Tire	2
4	302-5	Fitting - Grease	4
5	217-80	Rim	2
6	32151-48	Ring - Retaining	2
8	3296-4	Nut - Lock	4
9	67-0990	Axle - Front	1
11	67-0880	Assembly - Tie Rod	2

Ref. No.	Part No.	Description	No. Used
12	67-0810-01	Spindle - L.H.	1
13	3256-26	Washer - Flat	1
14	3296-25	Nut - Lock	1
15	67-0800-01	Spindle - R.H.	1
16	110513	Bearing	4
17	232-27	Valve Stem w/Cap	2
18	3272-12	Pin - Cotter	2
*	232-44	Tube - Inner	2

*Not Illustrated

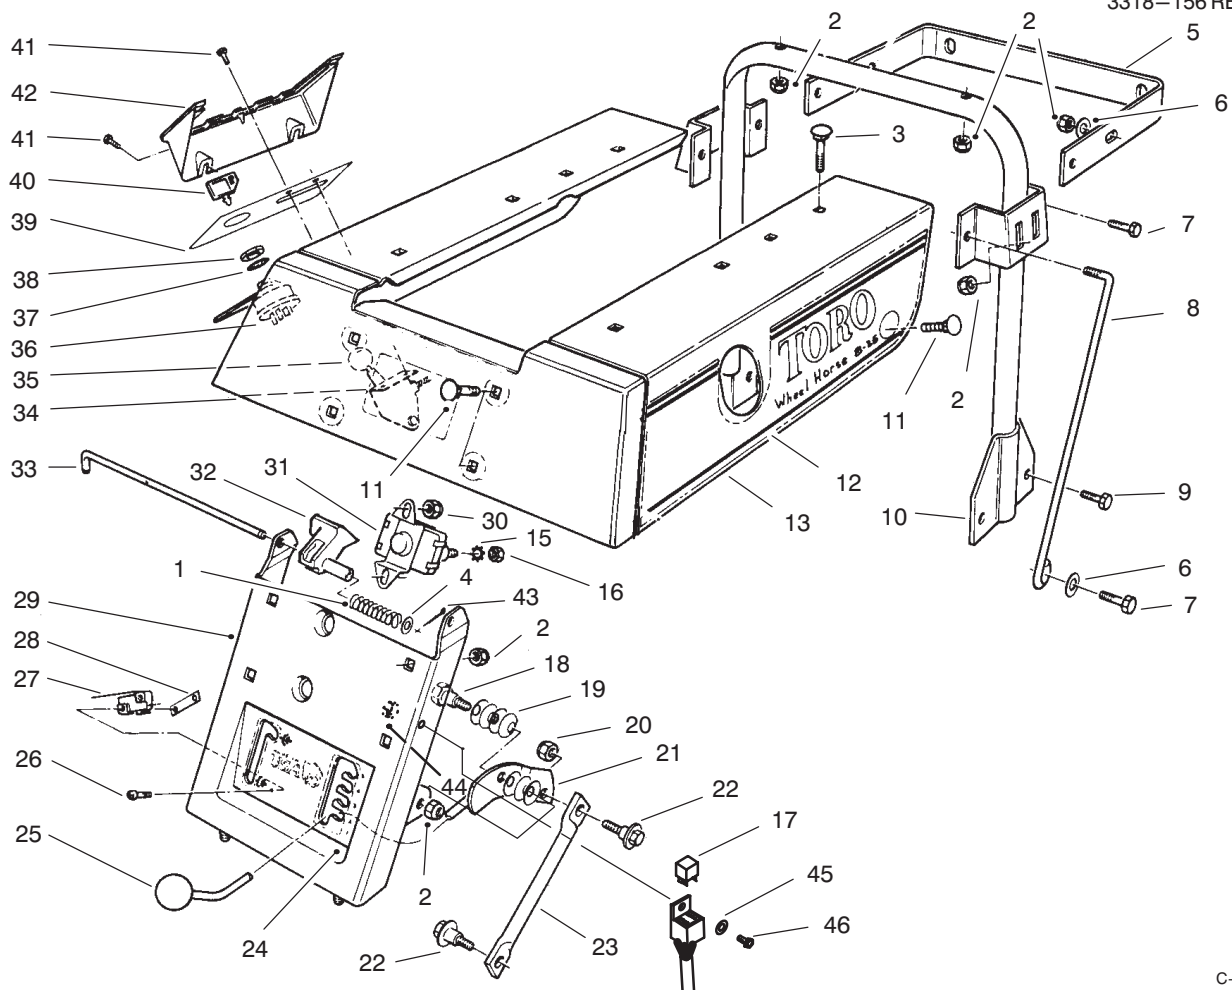


C-1942A

REAR BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	71-8310	Spring - Prop, Seat	1	25	233-22	Knob	1
2	3296-29	Nut - Lock	13	26	147665	Screw - Pan Head	2
3	3230-3	Bolt - Carriage	2	27	88-9931	Switch - Micro	1
4	3256-22	Washer - Flat	1	28	3290-354	Nut - Double	1
5	67-1500-03	Bar - Stand	1	29	67-1090-01	Support W.A. - Seat	1
6	3256-23	Washer - Flat	2	30	3296-42	Nut - Lock	2
7	322-5	Screw - Cap Hex. Hd.	4	31	92-9845	Solenoid	1
8	67-1480	Brace - Support, Seat	2	32	80-4330	Prop - Seat	1
9	322-3	Screw - Cap Hex. Hd.	6	33	80-4550	Rod - Base, Seat	1
10	67-0790-03	Support W.A. - Seat	1	34	66-6640	Control - Throttle	1
11	3230-20	Bolt - Carriage	6	35	233-59	Knob	1
12	92-7979	Decal - Toro L.H.	1	36	88-9830	Switch - Ignition (Incl. Ref. #37 & 38)	1
*	92-7980	Decal - Toro R.H.	1	37	3254-5	Washer - Lock, Int. Tooth	1
13	67-0231-01	Body W.A. - Rear	1	38	218-461	Nut - Hex.	1
15	3253-3	Washer - Lock	2	39	67-1270	Decal - Panel, Control	1
16	3218-1	Nut - Jam	2	40	63-8360	Key	1
17	48-4700	Relay	1	41	32144-42	Screw - Hex. Hd. Tapping	4
18	28-0540	Bolt - Shoulder	1	42	67-1030	Cover - Panel, Control	1
19	3290-413	Washer - Belleville	7	43	3272-4	Pin - Cotter	1
20	3296-39	Nut - Lock	1	44	3296-2	Nut - Lock	1
21	67-0270	Handle W.A. - H.O.C.	1	45	3256-14	Washer - Flat	1
22	67-0870	Bolt - Shoulder	2	46	3290-134	Screw - Cap Mach. Hd.	1
23	67-0080	Link - H.O.C.	1				
24	76-3920	Decal - H.O.C./Deck Engage.	1				

*Not Illustrated

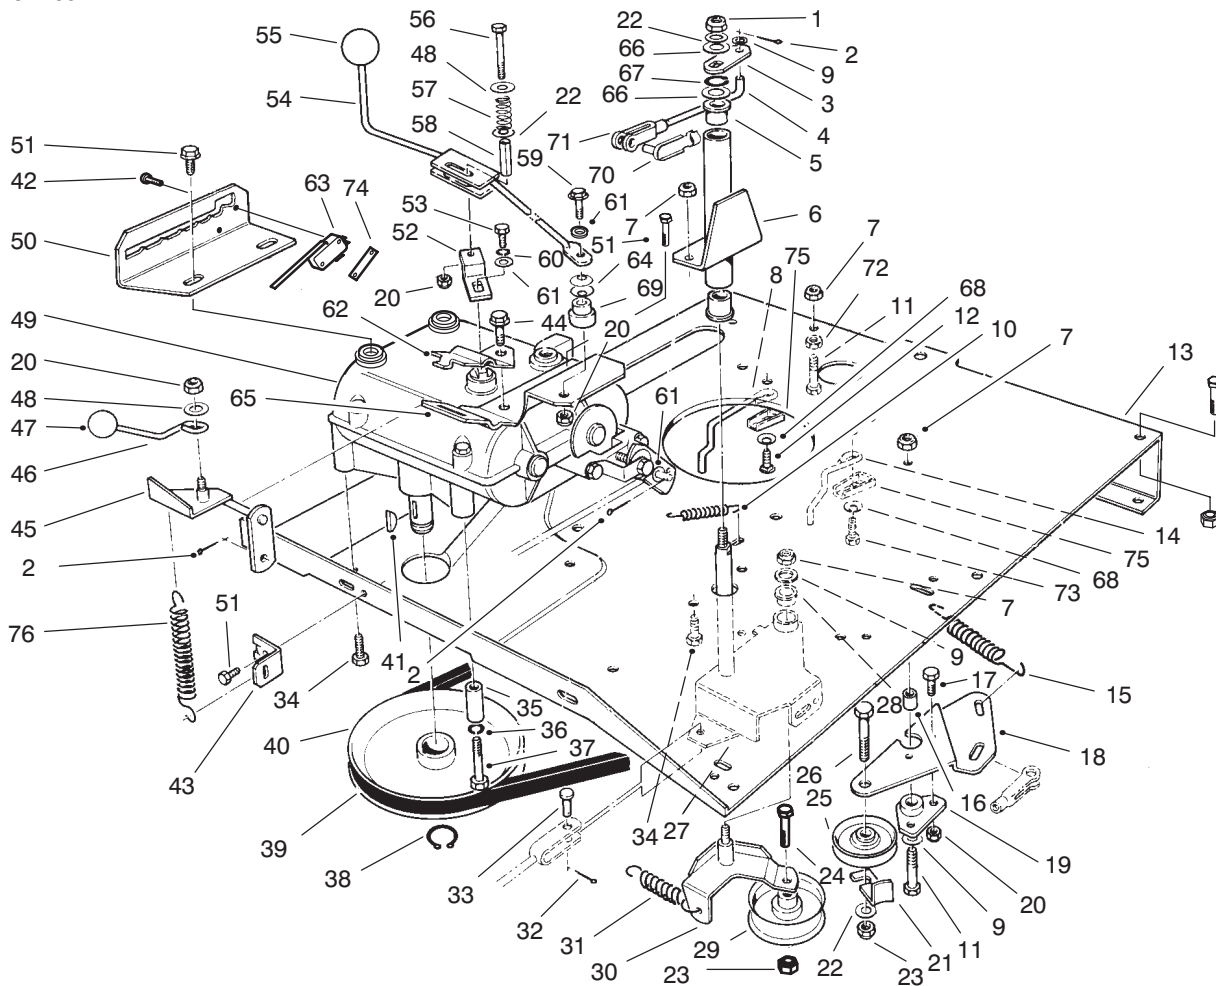


C-1506B

TRANSMISSION & LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	1
2	3272-6	Pin - Cotter	2
3	67-0690-03	Flat - Deck Engage	1
4	68-8370	Link - Deck Engage	1
5	256-90	Bushing	2
6	67-0540-03	Tube W.A. - Pivot (Incl. Ref. #5)	1
7	3296-29	Nut - Lock	13
8	67-0930	Guide R.H. - Belt, Engine	1
9	3256-23	Washer - Flat	3
10	26-6700	Spring - Return, Brake	1
11	322-6	Screw - Cap Hex. Hd.	2
12	32144-49	Screw - Tapping	1
13	76-4090-01	Plate - Engine	1
14	67-0940	Guide L.H. - Belt, Engine	1
15	68-9950	Spring - Traction	1
16	67-0410	Spacer - Pivot	1
17	321-4	Screw - Cap Hex. Hd.	2
18	67-0420-03	Plate - Mount, Idler	1
19	67-0400	Mount - Pivot	1
20	3296-42	Nut - Lock	5
21	12-9020	Retainer - Belt	1
22	3256-24	Washer - Flat	3
23	3296-59	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
24	323-9	Screw - Cap Hex. Hd.	1
25	12-5820	Pulley - Idler, Traction	1
26	323-8	Screw - Cap Hex. Hd.	1
27	67-0360	Bracket - Arm, Idler (Incl. Ref. #28)	1
28	256-155	Bushing	1
29	56-9870	Pulley - Idler, Deck	1
30	67-0330-03	Idler - Plate, Mount	1
31	67-9170	Spring	1
32	3272-4	Pin - Cotter	1
33	283-67	Pin - Clevis	1
34	322-3	Screw - Cap Hex. Hd.	13
35	67-0920	Guide - Belt	1
36	3253-4	Washer - Lock	1
37	322-10	Screw - Cap Hex. Hd.	1
38	32120-64	Ring - Retaining	1
39	67-0900	Belt - Traction	1
40	82-6450	Pulley - Transmission	1
41	3257-23	Key	1
42	147665	Screw - Tapping	2
43	67-0750	Bracket - Mount, Spring	1
44	32144-70	Screw - Hex. Hd. Tapping	1
45	67-0600-03	Lever W.A. - Deck Engage	1
46	67-0640	Handle - Deck Engage	1

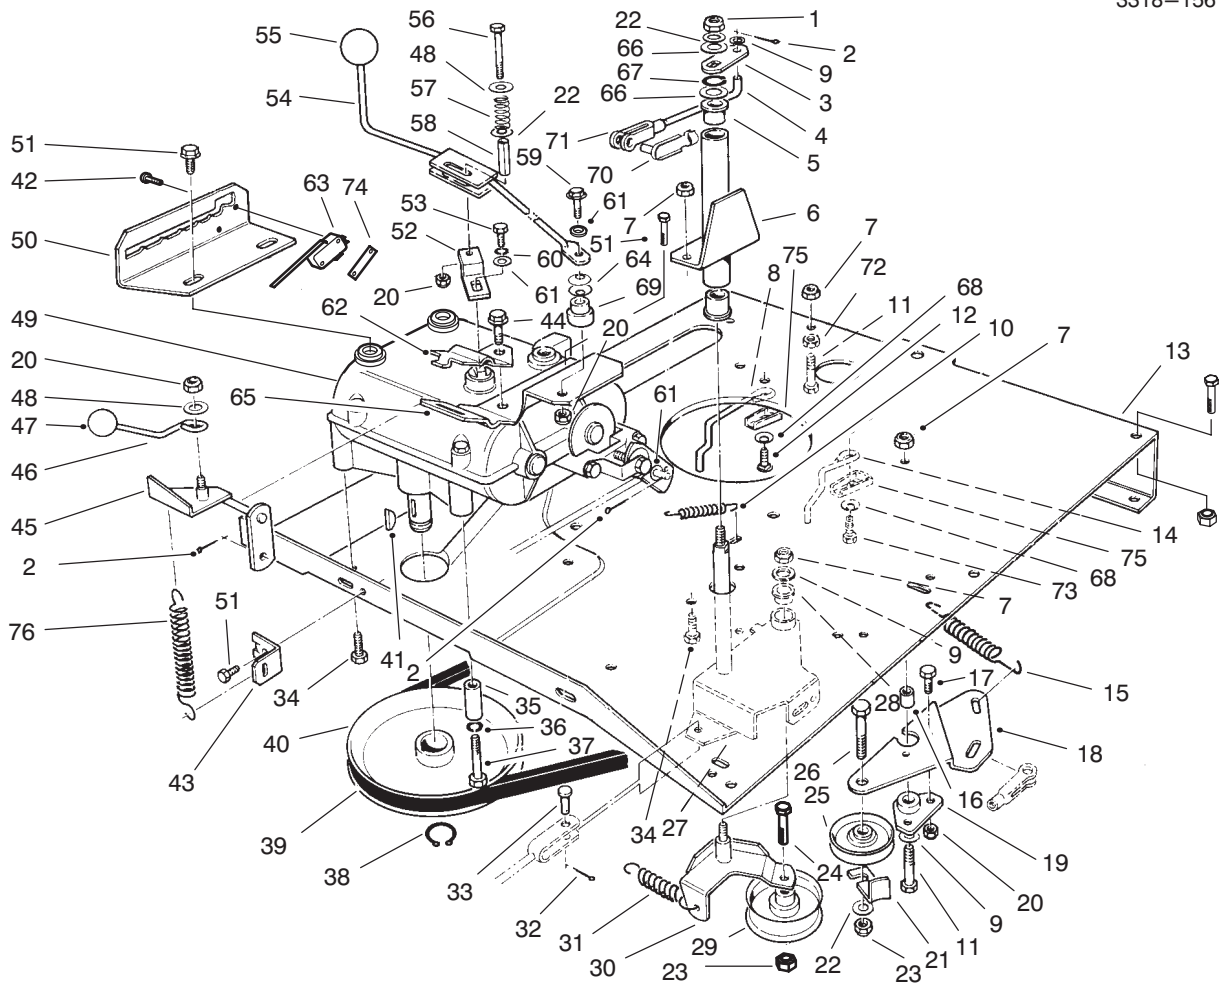


C-1506B

TRANSMISSION & LINKAGE ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
47	233-22	Knob	1
48	3256-55	Washer - Fender	2
49	67-1400	Transmission	1
50	88-9810-03	Gate - Shift	1
51	32144-14	Screw - Wash. Hd., Tap.	4
52	56-7620	Lever - Shift	1
53	329-4	Screw - Cap Hex. Hd.	1
54	76-3940-03	Lever W.A. - Shift	1
55	233-48	Knob	1
56	321-15	Screw - Cap Hex. Hd.	1
57	56-7730	Spring	1
58	56-7740	Spacer	1
59	321-8	Screw - Cap Hex. Hd.	1
60	3253-3	Washer - Lock	1
61	3256-22	Washer - Flat	3
62	67-0670	Bracket - Engage, Deck	1

Ref. No.	Part No.	Description	No. Used
63	88-9930	Switch - Micro	1
64	3290-478	Washer - Belleville	2
65	67-0660	Bracket - Mount, Shifter	1
66	20-3220	Washer - Flat	2
67	32151-62	Ring - Retaining	1
68	3290-456	Washer - Belleville	2
69	76-3970	Spacer - Pivot	1
70	67-1530	Assembly - Pin, Clevis	1
71	282-27	Clevis	1
72	3218-2	Nut - Jam	1
73	3230-2	Bolt - Carriage	1
74	3290-354	Nut - Double	1
75	76-3820	Anchor - Guide, Belt	2
76	76-4660	Spring	1

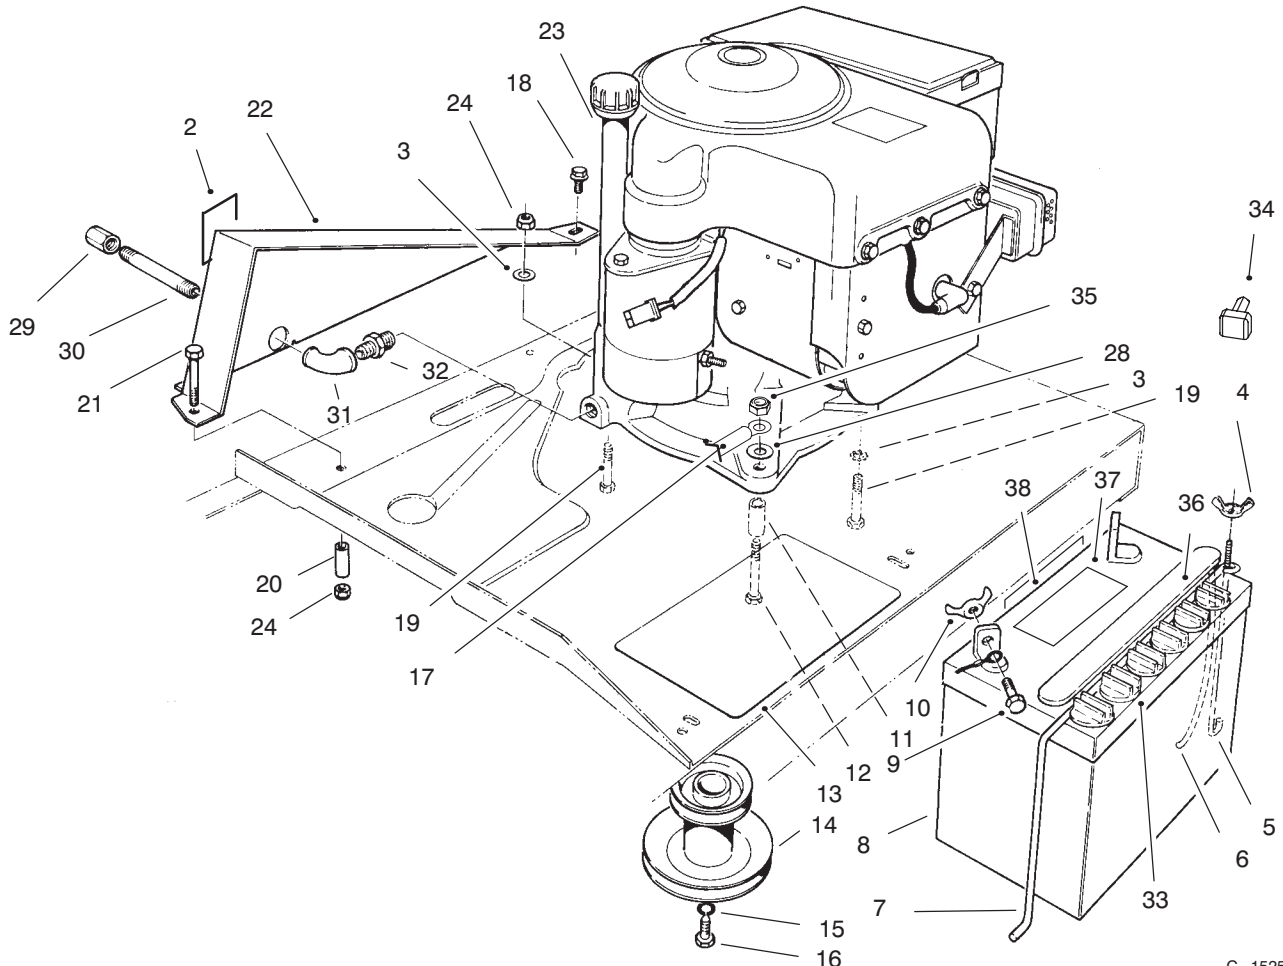


C-1525C

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
3	3256-23	Washer - Flat	2
4	32103-12	Nut - Wing	1
5	56-7720	Post - Hold Down, Battery	1
6	56-2540	Tube - Drain	1
7	56-7710	Hold Down - Battery	1
8	80-2600	Battery 12V	1
9	321-4	Screw - Cap Hex. Hd.	2
10	32103-22	Nut - Wing	2
11	80-4560	Spacer	1
12	322-12	Screw - Cap Hex. Hd.	1
13	62-4300	Pad - Anti-Skid	1
14	83-4840	Pulley - Engine	1
15	3256-25	Washer - Flat	1
16	62-3760	Screw - Cap Hex. Hd.	1
17	54-3091	Assembly - Wire Battery to Ground	2
18	32144-14	Screw - Self Tapping	1
19	322-7	Screw - Cap Hex. Hd.	3

Ref. No.	Part No.	Description	No. Used
20	67-0920	Guide - Belt	1
21	322-10	Screw - Cap Hex. Hd.	1
22	67-0962-01	Guard - Chain	1
23		Engine - 8 H.P. B & S	1
24	3296-29	Nut - Lock	4
28	3255-8	Washer - Lock	3
29	288-2	Cap - Pipe	1
30	289-34	Nipple - Pipe	1
31	2811-17	Elbow - Street	1
32	2812-1	Reducer	1
33	218-560	Cap - Battery	6
34	28-8080	Boot - Battery Terminal	1
35	32153-3	Nut - Lock	1
36	93-9354	Decal - Battery	1
37	93-7276	Decal - Danger	1
38	93-6668	Decal - Battery Charging Instructions	1

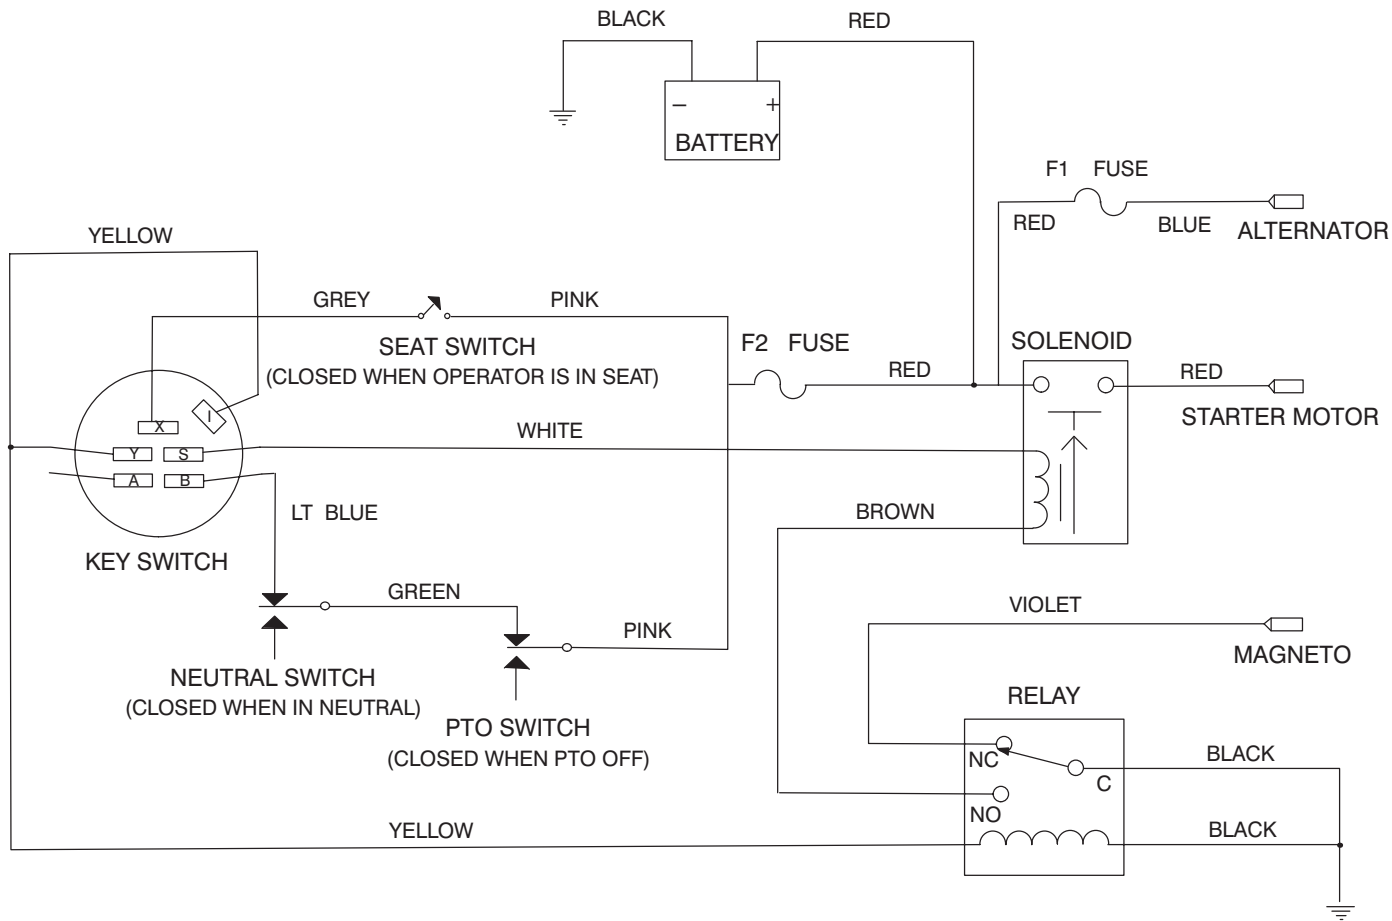


C-2378

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	93-7444	Harness - Wire	1

Ref. No.	Part No.	Description	No. Used

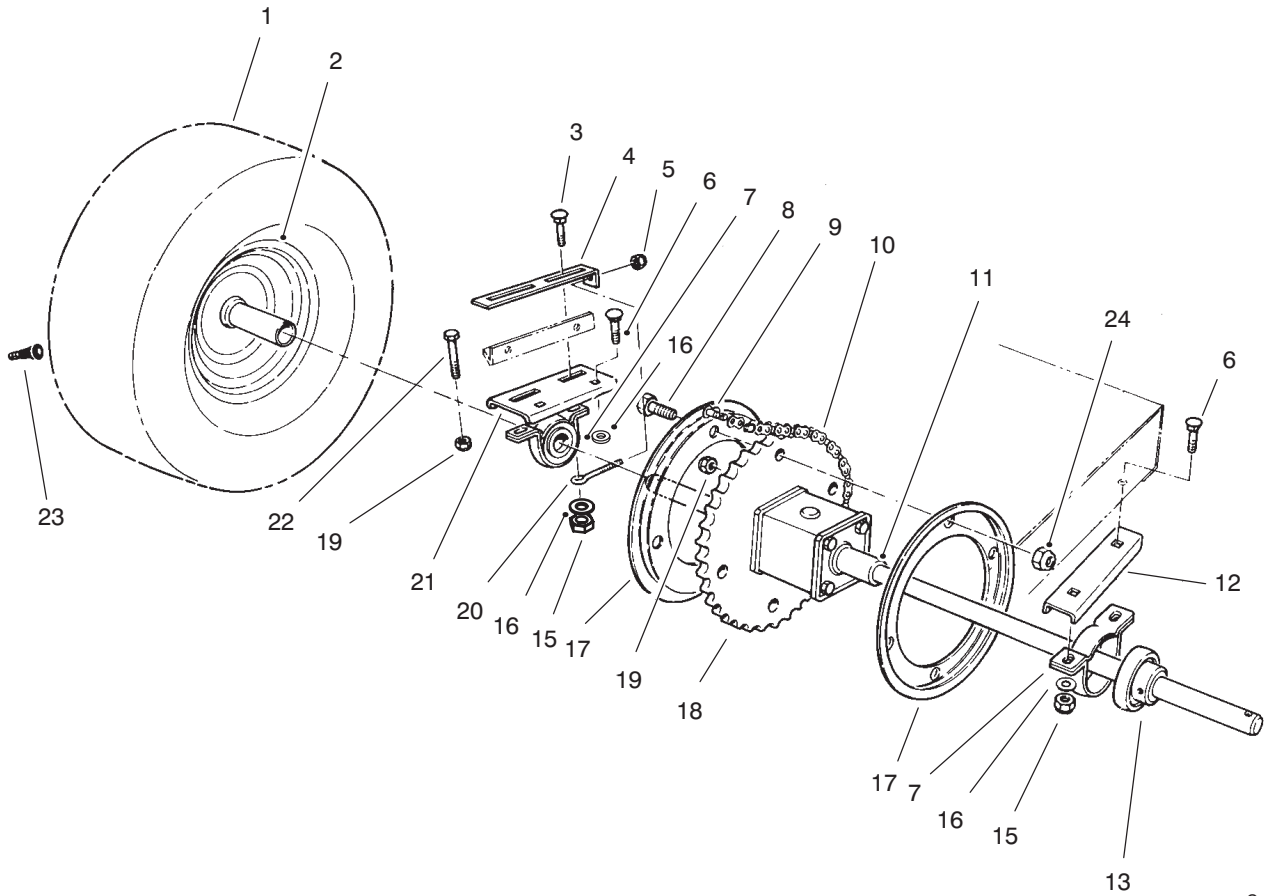


C-0008B

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	231-115	Tire	2
2	44-9760	Rim	2
3	3231-4	Bolt - Carriage	2
4	61-9990	Plate - Adjusting	1
5	3296-42	Nut - Lock	1
6	3231-25	Bolt - Carriage	4
7	47-1480	Mount - Bearing	2
8	321-4	Screw - Cap Hex. Hd.	4
9	2710-11	Link - Connecting	1
10	67-0910	Chain (Incl. Ref. #9)	1
11	56-9960	Differential	1
12	66-6630-03	Support L.H.	1

Ref. No.	Part No.	Description	No. Used
13	47-1490	Bearing (Incl. Ref. #14)	2
15	3296-39	Nut - Lock	6
16	3256-24	Washer - Flat	6
17	76-1580-03	Guide - Chain	2
18	76-4010	Sprocket	1
19	3296-29	Nut - Lock	6
20	61-9980	Screw - Adjusting	1
21	66-6620-03	Support R.H.	1
22	46-2511	Bolt - Axle	2
23	232-27	Valve Stem w/Cap	2
24	3296-8	Nut - Lock	4
*	232-38	Tube - Inner	2

*Not Illustrated

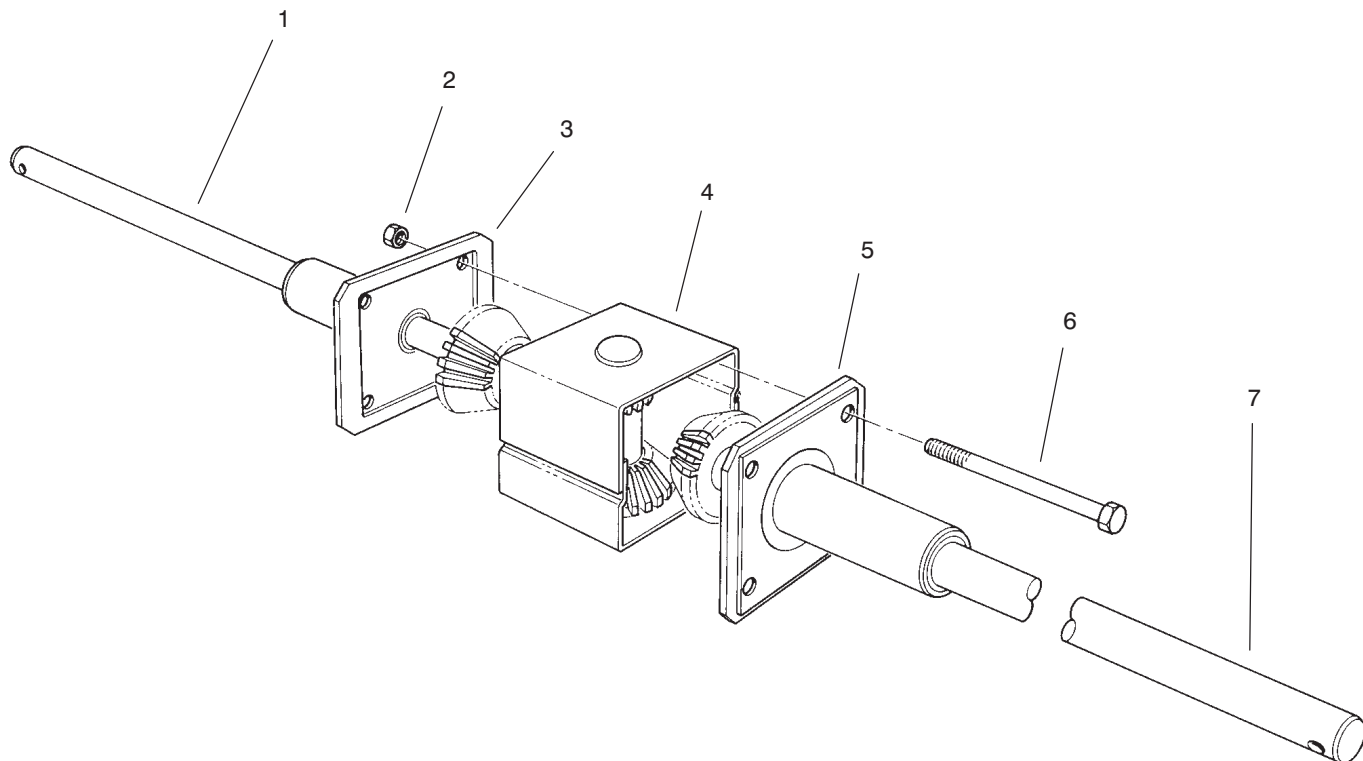


C-0010

DIFFERENTIAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-7762	Axle - R.H.	1
2	32152-1	Nut - Lock	4
3	55-7770	Cap - End, R.H.	1
4	55-7780	Case - Gear, Transfer	1

Ref. No.	Part No.	Description	No. Used
5	55-7771	Cap - End, L.H.	1
6	322-22	Screw - Cap Hex. Hd.	4
7	55-7763	Axle - L.H.	1
*	56-9960	Differential - Complete	1

*Not Illustrated

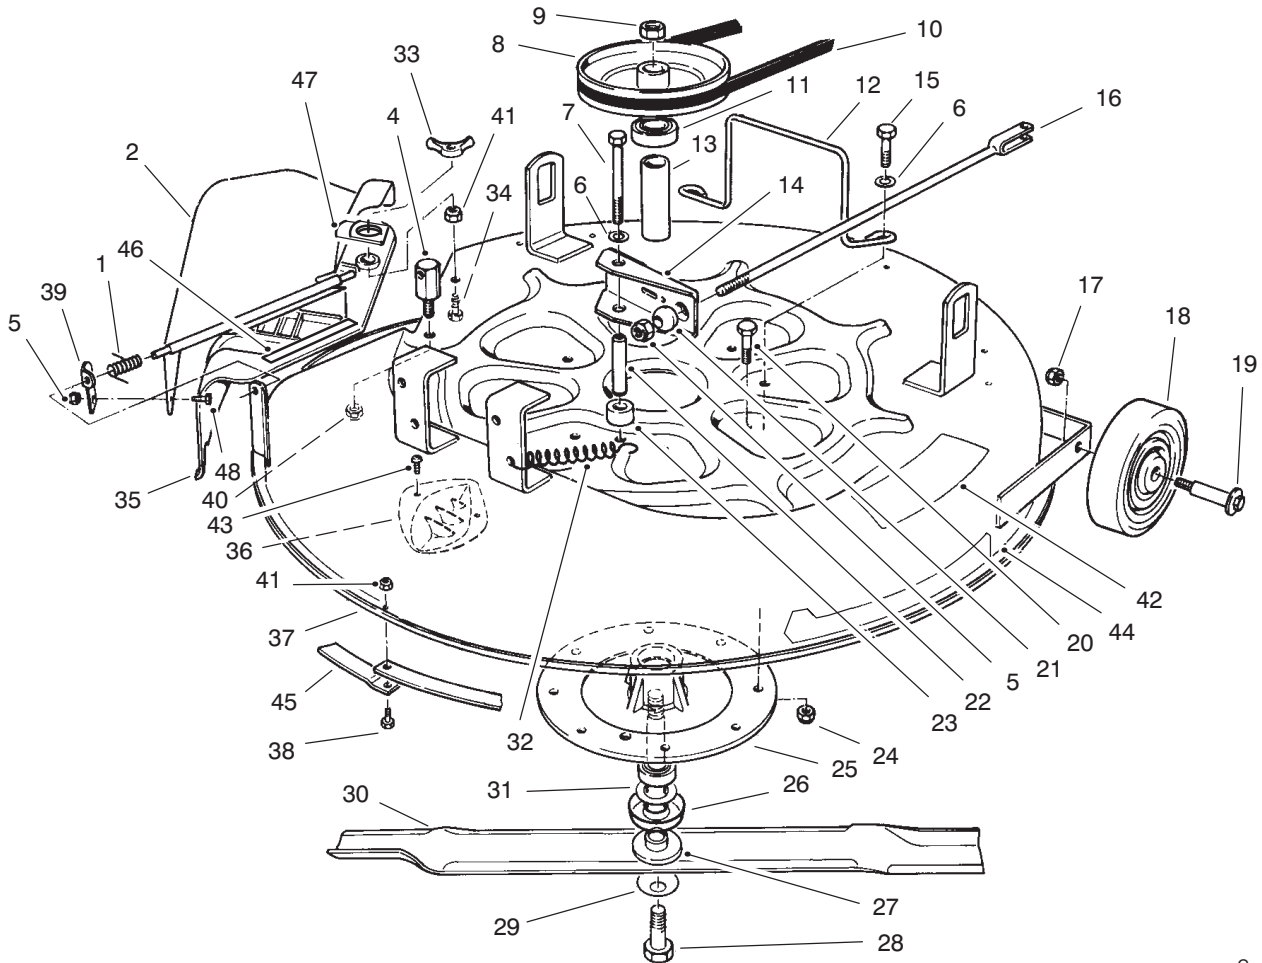


C-1943B

CUTTING UNIT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-8010	Spring	1
2	67-1150	Deflector	1
4	67-0140	Post - Pivot	1
5	3296-8	Nut - Lock	2
6	3256-23	Washer - Lock	3
7	322-22	Screw - Cap Hex. Hd.	1
8	80-4460	Pulley - Deck	1
9	3219-6	Nut - Hex.	1
10	67-1390	V-Belt	1
11	38-7820	Bearing - Ball	2
12	80-4520	Guide - Belt	1
13	62-3660	Spacer - Bearing	1
14	67-1370	Assy. - Brake, Deck	1
15	322-6	Screw - Cap Hex. Hd.	2
16	67-0570	Rod W.A. - Brake, Deck	1
17	3296-39	Nut - Lock	2
18	61-9760	Wheel - Deck	2
19	56-6590	Bolt - Wheel	2
20	322-3	Screw - Cap Hex. Hd.	6
21	67-0710	Ball - Swivel	1
22	67-0730	Post - Mount, Brake	1
23	67-0740	Spacer - Brake, Deck	1
24	3296-29	Nut - Lock	9
25	67-0970	Hub - Spindle	1

Ref. No.	Part No.	Description	No. Used
26	80-4360	Shield - Bearing	1
27	80-4340	Shaft - Spindle	1
28	26-0671	Bolt - Blade	1
29	3290-465	Washer - Belleville	1
30	80-4530	Blade	1
31	80-4380	Spacer - Spindle	1
32	67-1440	Spring - Brake	1
33	32109-14	Nut - Wing	1
34	3234-21	Screw - Cap Hex. Hd.	1
35	80-4450	Cover - Recycler	1
36	80-4510	Kicker	4
37	16-2199	Deck (Incl. Ref. #42)	1
38	321-5	Screw - Cap Hex. Hd.	8
39	67-1600-01	Bracket - Deflector	1
40	3296-59	Nut - Lock	1
41	3296-42	Nut - Lock	9
42	76-4070	Decal - Danger	1
43	32144-111	Screw - Special	8
44	92-9522	Decal - Recycler	1
45	80-4540-03	Ring - Deck, Recycler	4
46	68-3650	Decal - Warning	1
47	83-6610	Tab - Hold Down	1
48	321-4	Screw - Cap Hex. Hd.	1














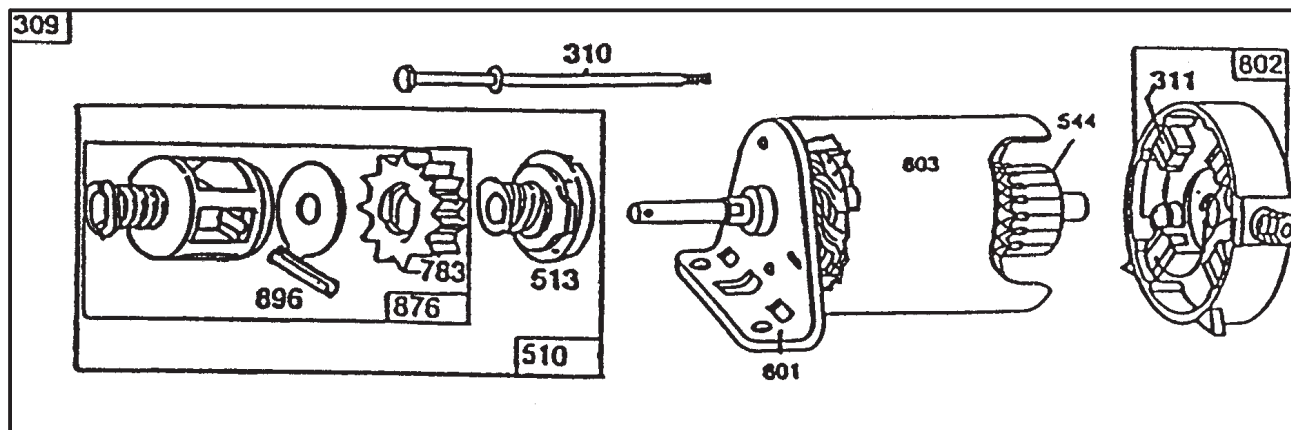


C-0784

STARTER – BRIGGS & STRATTON NO. 195707-0121-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
309	394805	Assembly – Motor & Drive	1	783	280104	Gear	1
310	94003	Assembly – Thru Bolt	2	801	394856	Assembly – End Cap	1
311	395538	Assembly – Brush	2	802	395537	Assembly – Commutator, End Cap	1
510	490421	Assembly – Drive (Incl. Ref. #513, 783, 876 & 896)	1	803	398159	Assembly – Housing (3-21/32" Long)	1
513	398003	Assembly – Clutch	1	876	490467	Kit – Retainer	1
544	390837	Assembly – Armature	1	896	94288	Pin – Roll	1

BRIGGS & STRATTON MODEL NO. 195707-0121-01

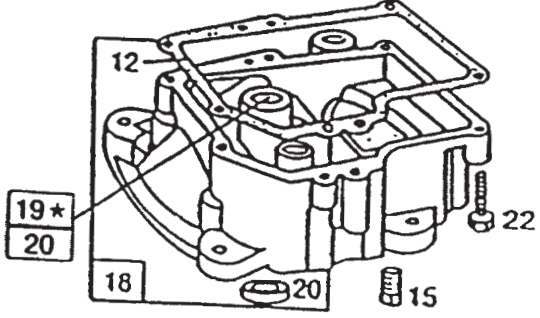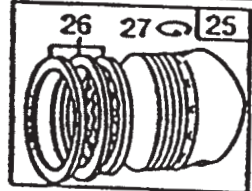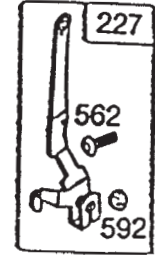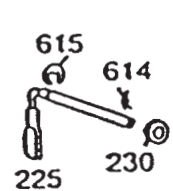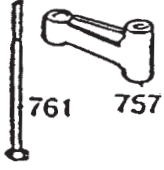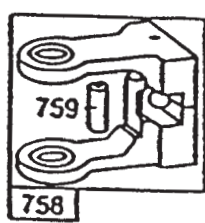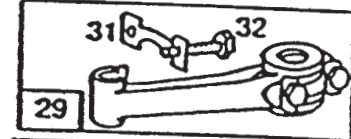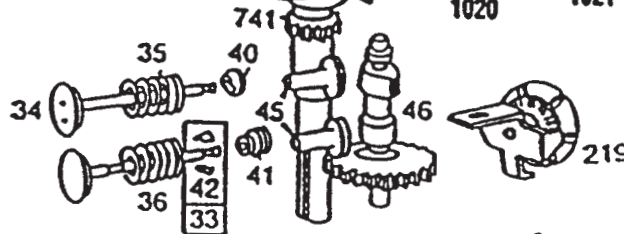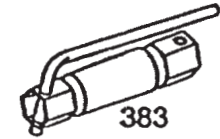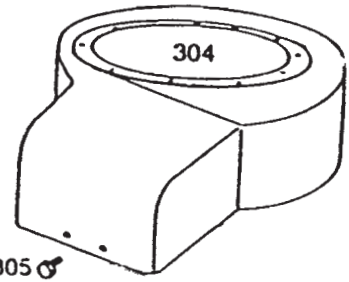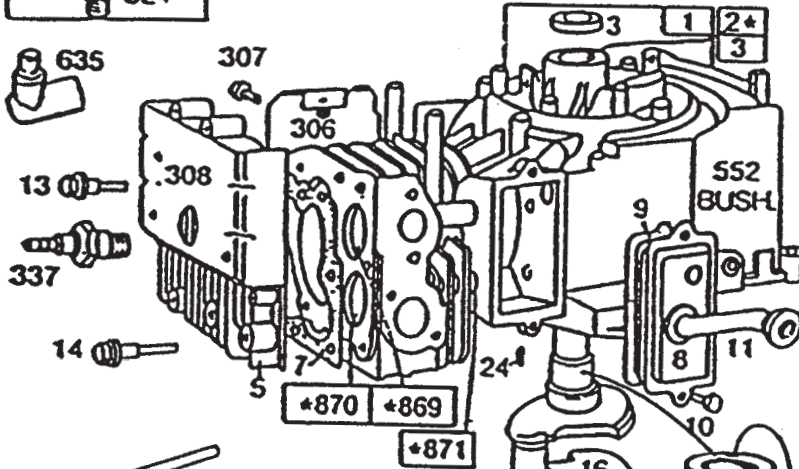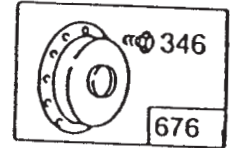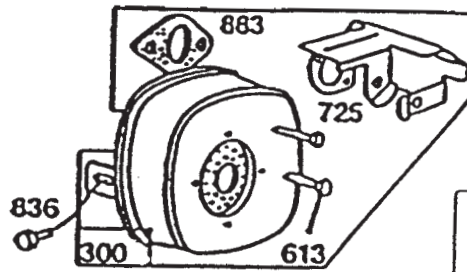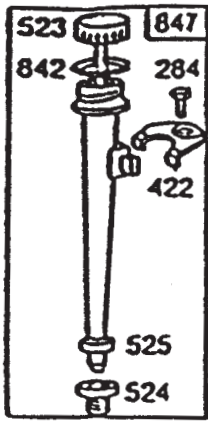

358 GASKET SET

* REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.


Assemblies include all parts shown in frames.

BRIGGS & STRATTON MODEL NO. 195707-0121-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	396269	Assembly – Cylinder	1	32	92659	Screw – Connecting Rod	1
2	399267	Bearing – Cylinder Note: Requires special tools for installation.	1	33	390419	Valve – Exhaust	1
3	294606	Seal – Oil	1	34	261055	Valve – Intake	1
5	212286	Head – Cylinder	1	35	65906	Spring – Valve, Intake	1
*7	272163	Gasket – Head, Cylinder	1	36	26828	Spring – Valve, Exhaust	1
8	391406	Assembly – Breather	1	40	221596	Retainer – Valve, Intake	1
*9	27803	Gasket – Cover, Valve	1	41	292260	Rotocoil – Valve, Exhaust	1
10	94621	Screw	1	42	93630	Retainer – Valve, Exhaust Rotocoil	2
11	280005	Tube – Breather	1	45	260933	Tappet – Valve	1
*12	271701	Gasket – Cover, Crankcase 1/64" Thick	1	46	211689	Gear – Cam	1
*	27876	Gasket – Cover, Crankcase .005" Thick	1	225	231058	Crank – Gov. (1/4" Dia.)	1
*	27877	Gasket – Cover, Crankcase .009" Thick	1	227	43935	Assy. Lever – Governor for 1/4" Dia. Crank	1
13	94565	Screw – Head, Cylinder	1	230	222450	Washer – Lever, Governor (1/4" Inside Diameter)	1
14	93723	Screw – Head, Cylinder (3" Long)	1	284	94419	Screw – Clamp, Mounting	1
15	94239	Plug – Drain, Oil	1	300	398507	Muffler – Exhaust	1
16	396876	Crankshaft Note: Order Part 94388 for timing gear pin replacement.	1	304	494084	Housing – Blower	1
18	392548	Base – Engine	1	305	94608	Screw – Blower Hsg., Sems	1
19	295963	Bushing – Base, Engine Note: Requires special tool for installation.	1	306	224543	Shield – Cylinder	1
20	391086	Seal – Oil	1	307	93949	Screw – Shield, Cylinder	1
22	93585	Screw – Base, Mounting	1	308	222636	Cover – Head, Cylinder	1
24	222698	Key – Flywheel	1	337	802592	Plug – Spark	1
25	391673	Assy. – Piston, Std.	1	346	93705	Screw	1
	391674	Assy. – Piston, .010" O.S.	1	358	299577	Gasket Set	1
	391675	Assy. – Piston, .020" O.S.	1	383	89838	Wrench – Spark Plug	1
	391676	Assy. – Piston, .030" O.S.	1	422	223394	Clamp – Tube, Oil Filler	1
		PISTON RING SETS Note: For Chrome Piston Ring Set – Standard Size – Order No. 299743.		523	391840	Cap & Dipstick – Oil Filler	1
26	391669	Ring Set – Piston, Std.	1	524	68838	Seal – Tube, Filler	1
	391670	Ring Set – Piston, .010" O.S.	1	525	280133	Tube – Filler, Oil	1
	391671	Ring Set – Piston, .020" O.S.	1	527	221428	Clamp	1
	391672	Ring Set – Piston, .030" O.S.	1	552	491986	Bushing – Crank, Gov.	1
27	68546	Lock – Piston Pin	1	562	92613	Bolt – Lever, Governor	1
28	295840	Assy. – Piston Pin, Std.	1	592	231082	Nut – Hex.	1
	295841	Assy. – Piston Pin, .005" O.S.	1	613	94042	Screw – Muffler	1
29	390402	Assy. – Rod, Connecting Note: For Connecting Rod with .020" Undersize Crankpin Bore – Order No. 390773.	1	614	93306	Pin – Hair, Cotter	1
31	222114	Lock – Screw, Conn. Rod	1	615	93307	Retainer – E-Ring	1
				635	66538	Elbow – Plug, Spark	1
				676	395700	Deflector – Exhaust	1
				683	93572	Screw	1
				725	223540	Shield – Muffler	1
				741	262479	Gear – Timing	1
				757	212359	Link – Counterweight	1
				758	390172	Assy. – Counterweight	1
				759	298909	Pin – Counterweight	1
				761	93874	Screw – Counterweight	1
				836	93559	Screw	1
				842	270920	Seal – Cap, Filler	1
				847	392066	Filler Group – Oil	1
				869	211661	Seat – Valve, Intake (Std.)	1
				870	211661	Seat – Valve, Exhaust (Std.)	1
				871	231218	Guide – Exhaust or Intake Valve, See repair manual	1
				883	272309	Gasket – Pipe, Exhaust	1
				1020	261190	Eccentric	1
				1021	94160	Pin – Eccentric	1


*Included in Gasket Set – Part No. 299577.

BRIGGS & STRATTON MODEL NO. 195707-0121-01

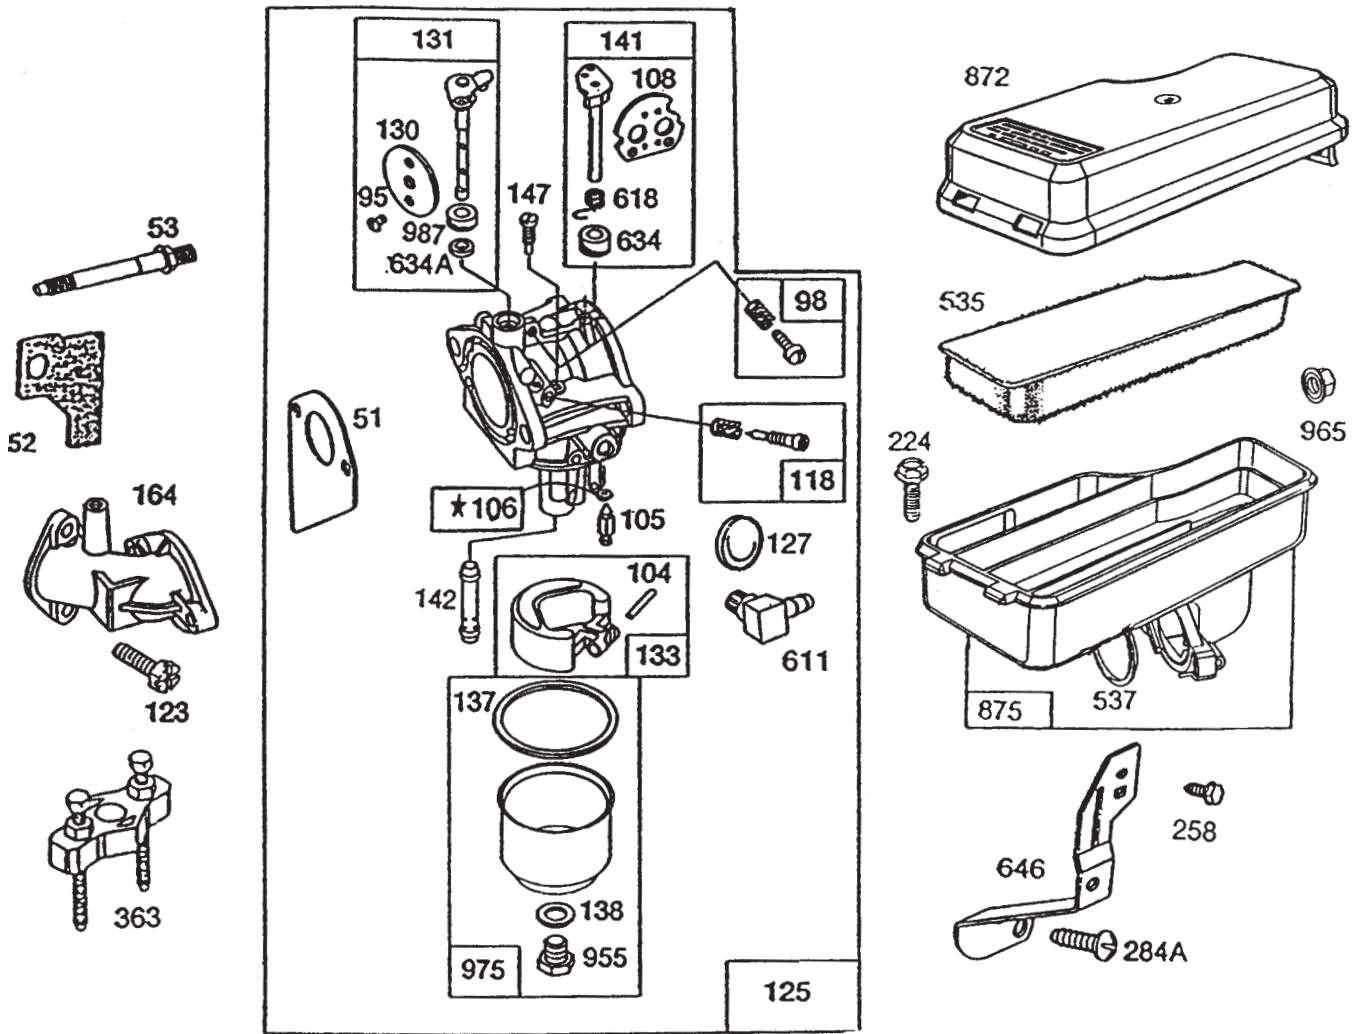

121 CARBURETOR OVERHAUL KIT

977 CARBURETOR GASKET SET

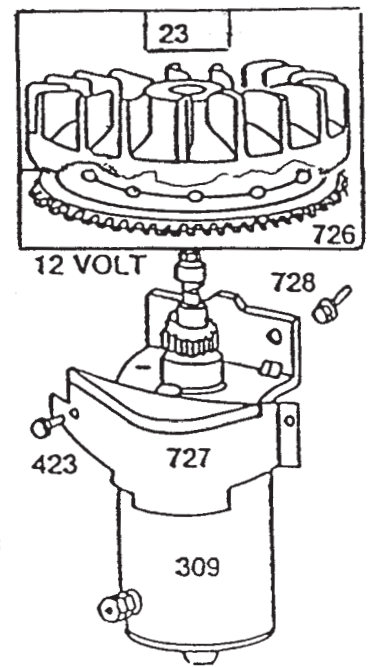

12 VOLT

* REQUIRES SPECIAL TOOLS TO INSTALL.
SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.


BRIGGS & STRATTON MODEL NO. 195707-0121-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
223	391983	Flywheel and Ring Gear Assy. - Magneto (Incl. Aluminum Ring Gear)	1	332	92284	Nut - Flywheel	1
*#51	272465	Gasket - Carburetor (Carb. to Elbow)	1	333	398811	Armature Assembly	1
‡52	270824	Gasket - Carb. Mtg.	1	334	93381	Screw - Armature Mtg. Sem	1
53	94637	Stud - Gasket Mtg.	1	356	494328	Wire - Ground	1
75	224061	Washer - Spring	1	363	19165	Puller - Flywheel	1
78	93805	Screw - Sem	1	423	94073	Screw - Sem	1
*95	94098	Screw - Throttle	1	455	222561	Cup - Screen Mounting	1
98	494382	Screw - Idle Speek	1	468	222562	Screen - Flush Rotating	1
*104	231789	Pin - Float Hinge	1	482	93621	Screw - Sem	1
*105	231790	Valve Assy. - Inlet Needle	1	535	272405	Element - Foam Air Cleaner	1
*106	281169	Inlet Valve Seat	1	537	281106	O-Ring - Air Cleaner	1
108	224540	Valve - Choke	1	611	494451	Fuel Inlet Tube	1
118	494383	Valve - Needle	1	618	262803	Spring - Choke Return	1
121	494880	Carburetor Overhaul Kit	1	*634	281168	Seal - Choke Shaft	1
123	94616	Screw - Carburetor Mtg.	1	*634A	281167	Washer - Throttle Shaft	1
125	494894	Carburetor Assembly	1	646	224614	Brace - Air Cleaner	1
*127		Plug - Welch (Kit Only)	1	657	93496	Screw - Sem	1
130	224668	Valve - Throttle	1	663	94419	Screw	1
131	494885	Shaft & Lever - Throttle	1	726	392134	Gear - Ring (Aluminum) (Incl. Mtg. Parts)	1
133	494381	Float - Carburetor	1	727	395405	Cover - Starter (Incl. Mtg. Screws)	1
*#137	281165	Gasket - Float Bowl	1	728	93535	Screw - Sem	1
*#138	281164	Washer - Float Bowl	1	729	281159	Clip - Lead Wire	1
141	494380	Shaft & Lever - Choke	1	851	221798	Terminal - Ignition Cable	1
*142	494877	Nozzle - Carburetor	1	872	281108	Cover - Air Cleaner	1
*147	231794	Screw - Nozzle	1	875	494745	Body - Air Cleaner	1
164	213819	Carburetor Elbow	1	877	393814	Diode & Connector Assy.	1
201	262769	Link - Governor	1	887	391529	Stator Assembly - Alternator (D.C.)	1
209	260871	Spring - Governor	1	955	94642	Screw - Fuel Bowl	1
216	262768	Link - Choke	1	965	94108	Nut - Lock	1
222	493896	Plate - Gov. Plate	1	975	494378	Bowl Assy. - Carburetor	1
224	94513	Screw - Sem	1	*987	281166	Seal - Throttle Shaft	1
232	262787	Spring - Governor Link	1				
258	94620	Screw - Hex. Tapping	1				
265	221535	Clamp - Casing	1				
284A	94326	Screw - Brace Mtg.	1				
309		Motor - Starting (12 Volt) See Chart for Replacement Parts for Starting Motor on Illustrated Pages	1				

*Included in Carburetor Overhaul Set - Part No. 494880.

‡Included in Carburetor Gasket Set - Part No. 494385.

‡Included in Gasket Set - Part No. 299577.

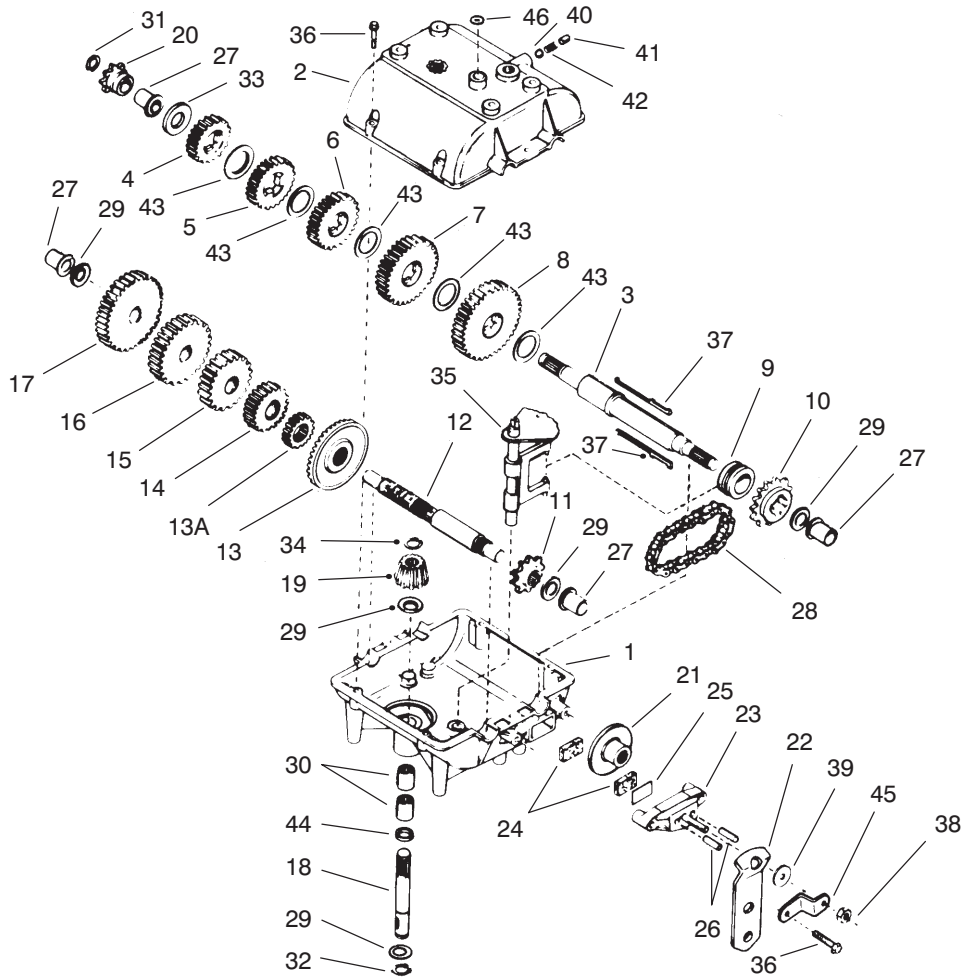

C-0441

TRANSMISSION PEERLESS MODEL 700-025

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	770061	Case – Transmission	1	24	790006	Pad – Brake	2
2	772083	Cover – Transmission	1	25	790007	Plate – Pad, Brake	1
3	776217	Shaft – Output	1	26	786026	Pin – Dowel	2
4	778121A	Gear – Spur (20 Teeth)	1	27	780105A	Bushing – Flange	4
5	778122A	Gear – Spur (22 Teeth)	1	28	786081	Chain – Roller (No. 41 Chain, 24 Links)	1
6	778123A	Gear – Spur (25 Teeth)	1	29	780072	Washer – Thrust	5
7	778124A	Gear – Spur (30 Teeth)	1	30	780086	Bearing – Needle	2
8	778125	Gear – Spur (35 Teeth)	1	31	792072	Ring – Retaining	1
9	784266	Collar – Shift	1	32	792035	Ring – Retaining	1
10	786083	Sprocket (18 Teeth)	1	33	780109	Washer	1
11	786082	Sprocket (9 Teeth)	1	34	788040	Ring – Retaining	1
12	776134	Shaft – Counter	1	35	784267	Assy. Rod & Fork – Shift	1
13	788137A	Gear – Bevel (42 Teeth)	1	36	792073	Screw – Thread Forming	8
13A	778136	Gear – Spur (15 Teeth)	1	37	792089A	Key	2
14	778126A	Gear – Spur (20 Teeth)	1	38	792075	Nut – Lock	1
15	778127A	Gear – Spur (25 Teeth)	1	39	792076	Washer	1
16	778128A	Gear – Spur (28 Teeth)	1	40	792077	Ball – Steel	1
17	778129A	Gear – Spur (30 Teeth)	1	41	792078	Screw – Set	1
18	776135	Shaft – Input	1	42	792079	Spring	1
19	778113A	Bevel – Pinion, Input	1	43	780108	Washer – Thrust	5
20	786047	Sprocket (8 Teeth)	1	44	792001	O-Ring	1
21	790003	Disk – Brake	1	45	786086	Bracket – Lever, Brake	1
22	790008A	Lever – Brake	1	46	788069	Seal – Square Cut	1
23	790025	Holder – Pad, Brake	1				

TORO PART NUMBER INDEX

3318-156 REV. A

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
110513	Bearing	4	16	4	66-6920	Pad - Isolator	3	17	2
147665	Screw - Pan Head	5	26	2	67-0010-03	Lift W.A. - Front, Deck	2	5	1
147665	Screw - Tapping	6	42	2	67-0050-01	Tube W.A. - Support, Rear	2	11	1
12-5820	Pulley - Idler, Traction	6	25	1	67-0080	Link - H.O.C.	5	23	1
12-9020	Retainer - Belt	6	21	1	67-0090-03	Bracket - Link, H.O.C.	2	10	1
13-6049	Kit - Loose parts	2	*	1	67-0140	Post - Pivot	12	4	1
16-2199	Deck	12	37	1	67-0231-01	Body W.A. - Rear	5	13	1
18-2970	R-Clamp	3	4	1	67-0270	Handle W.A. - H.O.C.	5	21	1
19-1470	Bolt - Shoulder	1	18	1	67-0300-01	Lever W.A. - H.O.C.	2	18	2
19-1610-03	Lever - Brake, Parking	1	19	1	67-0330-03	Idler - Plate, Mount	6	30	1
19-1970	Spring - Brake, Parking	1	13	1	67-0360	Bracket - Arm, Idler	6	27	1
19-2200	Tip - Brake, Parking	1	20	1	67-0400	Mount - Pivot	6	19	1
20-3220	Washer - Flat	7	66	2	67-0410	Spacer - Pivot	6	16	1
26-0671	Bolt - Blade	12	28	1	67-0420-03	Plate - Mount, Idler	6	18	1
26-6700	Spring - Return, Brake	6	10	1	67-0430	Rod - Clutch	2	6	1
26-9530	Washer - Pivot	1	8	1	67-0440	Spacer - Steering	2	32	1
28-0540	Bolt - Shoulder	5	18	1	67-0450-01	Frame W.A. - Front	2	25	1
28-2480	Washer - Flat	4	2	2	67-0520-01	Channel - R.H.	2	3	1
28-8010	Spring	12	1	1	67-0530-01	Channel - L.H.	2	24	1
28-8080	Boot - Battery Terminal	8	34	1	67-0540-03	Tube W.A. - Pivot	6	6	1
38-1420	Switch - Seat	3	3	1	67-0570	Rod W.A. - Brake, Deck	12	16	1
38-7820	Bearing - Ball	12	11	2	67-0600-03	Lever W.A. - Deck Engage	6	45	1
44-7030	Tread - Foot Rest	1	3	2	67-0640	Handle - Deck Engage	6	46	1
44-7140-01	Mount - Bearing, Axle	2	2	1	67-0660	Bracket - Mount, Shifter	7	65	1
44-9760	Rim	10	2	2	67-0670	Bracket - Engage, Deck	7	62	1
46-2511	Bolt - Axle	10	22	2	67-0690-03	Flat - Deck Engage	6	3	1
46-2511	Bolt - Mounting, Axle	2	19	2	67-0710	Ball - Swivel	12	21	1
47-1480	Mount - Bearing	10	7	2	67-0730	Post - Mount, Brake	12	22	1
47-1490	Bearing	10	13	2	67-0740	Spacer - Brake, Deck	12	23	1
47-2964	Hose - Gas	3	9	2	67-0750	Bracket - Mount, Spring	6	43	1
47-2986	Hose - Gas	3	5	1	67-0790-03	Support W.A. - Seat	5	10	1
48-4700	Relay	5	17	1	67-0800-01	Spindle - R.H.	4	15	1
49-3242	Wheel - Steering	2	34	1	67-0810-01	Spindle - L.H.	4	12	1
54-3091	Assembly - Wire	8	17	2	67-0830-03	Shaft W.A. - Steering	2	26	1
55-3576	Assembly - Cap, Gas	3	8	1	67-0850	Bushing - Steering	2	29	2
55-7103	Tower	1	22	1	67-0860	Washer - Steering	2	30	1
55-7762	Axle - R.H.	11	1	1	67-0870	Bolt - Shoulder	5	22	2
55-7763	Axle - L.H.	11	7	1	67-0870	Bolt - Shoulder	2	27	2
55-7770	Cap - End, R.H.	11	3	1	67-0880	Assembly - Tie Rod	4	11	2
55-7771	Cap - End, L.H.	11	5	1	67-0900	Belt - Traction	6	39	1
55-7780	Case - Gear, Transfer	11	4	1	67-0910	Chain	10	10	1
56-2540	Tube - Drain	8	6	1	67-0920	Guide - Belt	8	20	1
56-6360	Filter	3	10	1	67-0920	Guide - Belt	6	35	1
56-6590	Bolt - Wheel	12	19	2	67-0930	Guide R.H. - Belt, Engine	6	8	1
56-7620	Lever - Shift	7	52	1	67-0940	Guide L.H. - Belt, Engine	6	14	1
56-7710	Hold Down - Battery	8	7	1	67-0950	Strap - Tank, Gas	3	6	2
56-7720	Post - Hold Down, Battery	8	5	1	67-0962-01	Guard - Chain	8	22	1
56-7730	Spring	7	57	1	67-0970	Hub - Spindle	12	25	1
56-7740	Spacer	7	58	1	67-0990	Axle - Front	4	9	1
56-9870	Pulley - Idler, Deck	6	29	1	67-1030	Cover - Panel, Control	5	42	1
56-9960	Differential	10	11	1	67-1070-01	Body W.A. - Front	1	15	1
56-9960	Differential - Complete	11	*	1	67-1090-01	Support W.A. - Seat	5	29	1
61-9760	Wheel - Deck	12	18	2	67-1130-03	Pedal - Brake & Clutch	1	14	2
61-9780	Cap - Hub	4	1	2	67-1150	Deflector	12	2	1
61-9980	Screw - Adjusting	10	20	1	67-1242-01	Base - Seat	3	2	1
61-9990	Plate - Adjusting	10	4	1	67-1270	Decal - Panel, Control	5	39	1
62-3660	Spacer - Bearing	12	13	1	67-1330-03	Lever - Brake, Bellcrank	1	10	1
62-3760	Screw - Cap Hex. Hd.	8	16	1	67-1340	Rod - Brake, Transmission	1	9	1
62-4300	Pad - Anti-Skid	8	13	1	67-1350	Rod - Front, Brake	1	12	1
63-8360	Key	5	40	1	67-1370	Assy. - Brake, Deck	12	14	1
65-2920	Pad - Pedal	1	17	2	67-1390	V-Belt	12	10	1
66-6620-03	Support R.H.	10	21	1	67-1400	Transmission	7	49	1
66-6630-03	Support L.H.	10	12	1	67-1430	Spring - Compression	1	7	1
66-6640	Control - Throttle	5	34	1	67-1440	Spring - Brake	12	32	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
67-1450	Spring - Extension	1	11	1	232-27	Valve Stem w/Cap	4	17	2
67-1460	Washer - Flat	2	15	2	232-27	Valve Stem w/Cap	10	23	2
67-1480	Brace - Support, Seat	5	8	2	232-38	Tube - Inner	10	*	2
67-1500-03	Bar - Stand	5	5	1	232-44	Tube - Inner	4	*	2
67-1510-03	Brace - Stop, Deck	2	13	2	233-22	Knob	5	25	1
67-1530	Assembly - Pin, Clevis	7	70	1	233-22	Knob	7	47	1
67-1530	Pin - Clevis	2	8	1	233-48	Knob	7	55	1
67-1590	Bracket - Brake Return	1	6	1	233-59	Knob	5	35	1
67-1600-01	Bracket - Deflector	12	39	1	2412-98	Clamp - Hose	3	11	5
67-9170	Spring	6	31	1	256-90	Bushing	6	5	2
68-3650	Decal - Warning	12	46	1	256-155	Bushing	6	28	1
68-8370	Link - Deck Engage	6	4	1	2710-11	Link - Connecting	10	9	1
68-8380	Spacer - Stop, Deck	2	17	2	282-27	Clevis	2	7	1
68-9950	Spring - Traction	6	15	1	282-27	Clevis	7	71	1
71-8310	Spring - Prop, Seat	5	1	1	283-67	Pin - Clevis	6	33	1
76-1580-03	Guide - Chain	10	17	2	288-2	Cap - Pipe	8	29	1
76-3820	Anchor - Guide, Belt	7	75	2	289-34	Nipple - Pipe	8	30	1
76-3920	Decal - H.O.C./Deck	5	24	1	2811-17	Elbow - Street	8	31	1
76-3940-03	Lever W.A. - Shift	7	54	1	2812-1	Reducer	8	32	1
76-3970	Spacer - Pivot	7	69	1	302-5	Fitting - Grease	4	4	4
76-4010	Sprocket	10	18	1	321-4	Screw - Cap Hex. Hd.	10	8	4
76-4070	Decal - Danger	12	42	1	321-4	Screw - Cap Hex. Hd.	8	9	2
76-4080	Decal	2	36	1	321-4	Screw - Cap Hex. Hd.	6	17	2
76-4090-01	Plate - Engine	6	13	1	321-4	Screw - Cap Hex. Hd.	12	48	1
76-4660	Spring	7	76	1	321-5	Screw - Cap Hex. Hd.	12	38	8
80-2600	Battery 12V	8	8	1	321-8	Screw - Cap Hex. Hd.	7	59	1
80-4330	Prop - Seat	5	32	1	321-15	Screw - Cap Hex. Hd.	7	56	1
80-4340	Shaft - Spindle	12	27	1	322-3	Screw - Cap Hex. Hd.	2	1	6
80-4360	Shield - Bearing	12	26	1	322-3	Screw - Cap Hex. Hd.	5	9	6
80-4380	Spacer - Spindle	12	31	1	322-3	Screw - Cap Hex. Hd.	3	14	4
80-4450	Cover - Recycler	12	35	1	322-3	Screw - Cap Hex. Hd.	12	20	6
80-4460	Pulley - Deck	12	8	1	322-3	Screw - Cap Hex. Hd.	6	34	13
80-4510	Kicker	12	36	4	322-5	Screw - Cap Hex. Hd.	5	7	2
80-4520	Guide - Belt	12	12	1	322-6	Screw - Cap Hex. Hd.	6	11	2
80-4530	Blade	12	30	1	322-6	Screw - Cap Hex. Hd.	12	15	2
80-4540-03	Ring - Deck, Recycler	12	45	4	322-7	Screw - Cap Hex. Hd.	8	19	3
80-4550	Rod - Base, Seat	5	33	1	322-10	Screw - Cap Hex. Hd.	8	21	1
80-4560	Spacer	8	11	1	322-10	Screw - Cap Hex. Hd.	6	37	1
80-4580	Tank - Gas	3	7	1	322-12	Screw - Cap Hex. Hd.	8	12	1
82-6450	Pulley - Transmission	6	40	1	322-14	Screw - Cap Hex. Hd.	2	23	2
83-4840	Pulley - Engine	8	14	1	322-22	Screw - Cap Hex. Hd.	11	6	4
83-6610	Tab - Hold Down	12	47	1	322-22	Screw - Cap Hex. Hd.	12	7	1
88-4330	Seat	3	1	1	323-8	Screw - Cap Hex. Hd.	6	26	1
88-9810-03	Gate - Shift	7	50	1	323-9	Screw - Cap Hex. Hd.	6	24	1
88-9830	Switch - Ignition	5	36	1	323-10	Screw - Cap Hex. Hd.	2	16	2
88-9930	Switch - Micro	7	63	1	329-4	Screw - Cap Hex. Hd.	7	53	1
88-9931	Switch - Micro	5	27	1	3218-1	Nut - Jam	5	16	2
92-7978	Decal - Horsehead	3	18	1	3218-2	Nut - Jam	7	72	1
92-7979	Decal - Toro L.H.	5	12	1	3219-6	Nut - Hex.	12	9	1
92-7980	Decal - Toro R.H.	5	*	1	3230-2	Bolt - Carriage	7	73	1
92-7981	Decal - Toro	1	21	1	3230-3	Bolt - Carriage	5	3	2
92-7990	Insert - Wheel, Steering	2	35	1	3230-20	Bolt - Carriage	5	11	6
92-9522	Decal - Recycler	12	44	1	3230-20	Bolt - Carriage	3	16	4
92-9845	Solenoid	5	31	1	3231-4	Bolt - Carriage	10	3	2
93-6668	Decal - Battery Charging	8	38	1	3231-25	Bolt - Carriage	10	6	4
93-7276	Decal - Danger	8	37	1	3234-21	Screw - Cap Hex. Hd.	12	34	1
93-7444	Harness - Wire	9	1	1	3253-3	Washer - Lock	5	15	2
93-9354	Decal - Battery	8	36	1	3253-3	Washer - Lock	7	60	1
93-9499	Decal - Instruction	1	1	1	3253-4	Washer - Lock	6	36	1
217-80	Rim	4	5	2	3254-5	Washer - Lock, Int. Tooth	5	37	1
218-461	Nut - Hex.	5	38	1	3255-8	Washer - Lock	8	28	3
218-560	Cap - Battery	8	33	6	3256-14	Washer - Flat	5	45	1
231-115	Tire	10	1	2	3256-22	Washer - Flat	5	4	1
231-116	Tire	4	3	2	3256-22	Washer - Flat	7	61	3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref.			Part No.	Description	Pg. Ref.		
		No.	No.	Qty.			No.	No.	Qty.
3256-23	Washer - Flat	8	3	2	3296-29	Nut - Lock	3	12	4
3256-23	Washer - Flat	5	6	4	3296-29	Nut - Lock	10	19	6
3256-23	Washer - Flat	6	9	3	3296-29	Nut - Lock	12	24	9
3256-23	Washer - Flat	3	15	8	3296-29	Nut - Lock	8	24	4
3256-23	Washer - Lock	12	6	3	3296-39	Nut - Lock	6	1	1
3256-24	Washer - Flat	10	16	6	3296-39	Nut - Lock	2	12	5
3256-24	Washer - Flat	6	22	3	3296-39	Nut - Lock	10	15	6
3256-25	Washer - Flat	8	15	1	3296-39	Nut - Lock	12	17	2
3256-26	Washer - Flat	4	13	1	3296-39	Nut - Lock	5	20	1
3256-29	Washer - Flat	2	21	2	3296-42	Nut - Lock	10	5	1
3256-55	Washer - Fender	7	48	2	3296-42	Nut - Lock	6	20	5
3257-23	Key	6	41	1	3296-42	Nut - Lock	5	30	2
3272-4	Pin - Cotter	5	43	1	3296-42	Nut - Lock	12	41	9
3272-4	Pin - Cotter	6	32	1	3296-59	Nut - Lock	6	23	2
3272-6	Pin - Cotter	6	2	2	3296-59	Nut - Lock	12	40	1
3272-6	Pin - Cotter	2	9	2	32103-12	Nut - Wing	8	4	1
3272-12	Pin - Cotter	4	18	2	32103-22	Nut - Wing	8	10	2
3272-23	Pin - Cotter	2	20	2	32104-110	Screw - Cap Hex. Hd.	1	4	4
3290-134	Screw - Cap Mach. Hd.	5	46	1	32109-14	Nut - Wing	12	33	1
3290-250	Pin - Hair, Cotter	2	22	1	32120-64	Ring - Retaining	6	38	1
3290-250	Pin - Hair, Cotter	1	16	2	32121-32	Pin - Roll	2	31	1
3290-347	Nut - U-Type	1	5	4	32121-78	Pin - Roll	2	33	1
3290-354	Nut - Double	5	28	1	32144-14	Screw - Self Tapping	8	18	1
3290-354	Nut - Double	7	74	1	32144-14	Screw - Wash. Hd., Tap.	7	51	4
3290-355	Pin - Hair, Cotter	2	14	2	32144-42	Screw - Hex. Hd. Tapping	5	41	4
3290-378	Tie - Cable	3	13	1	32144-49	Screw - Tapping	6	12	1
3290-413	Washer - Belleville	5	19	7	32144-70	Screw - Hex. Hd. Tapping	6	44	1
3290-413	Washer - Belleville	2	28	4	32144-111	Screw - Special	12	43	8
3290-456	Washer - Belleville	7	68	2	32151-48	Ring - Retaining	4	6	2
3290-465	Washer - Belleville	12	29	1	32151-62	Ring - Retaining	7	67	1
3290-478	Washer - Belleville	7	64	2	32152-1	Nut - Lock	11	2	4
3296-2	Nut - Lock	5	44	1	32153-3	Nut - Lock	8	35	1
3296-4	Nut - Lock	4	8	4					
3296-8	Nut - Lock	12	5	2					
3296-8	Nut - Lock	10	24	4					
3296-25	Nut - Lock	4	14	1					
3296-29	Nut - Lock	1	2	5					
3296-29	Nut - Lock	5	2	13					
3296-29	Nut - Lock	2	4	16					
3296-29	Nut - Lock	6	7	13					

OPTIONAL EQUIPMENT

Easy Empty Bagging Kit	Model No. 79090
Twin Bag Bagger Kit	Model No. 79080
Tire Chains	Part No. 11-0410
Hi-Sail Blade	Part No. 67-0200

