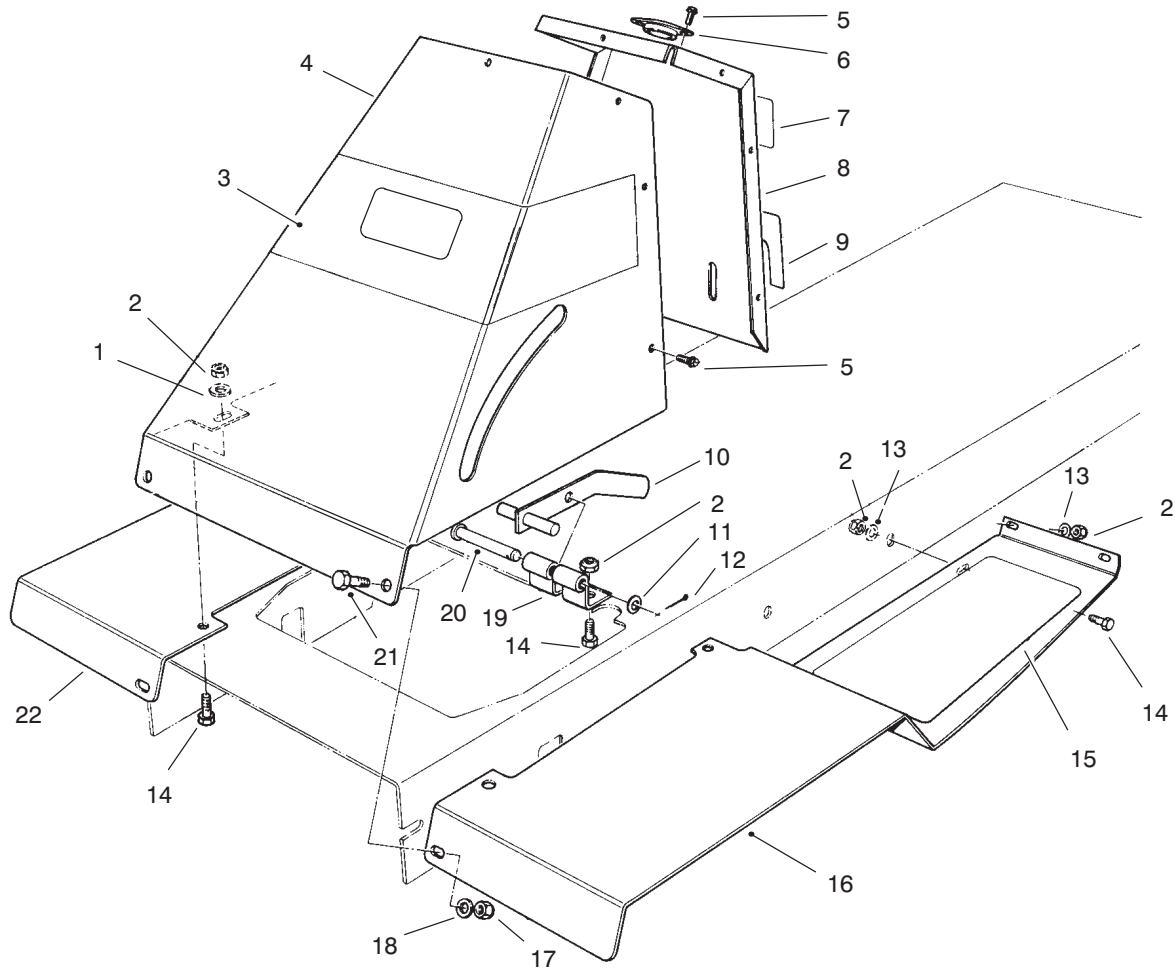



MODEL NO. 70080-6900001 & UP
MODEL NO. 70120-6900001 & UP
PARTS
CATALOG
WHEEL HORSE®
1032 & 1232 Recycler® Riding Mower


C-1933


FRONT TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3256-35	Washer - Flat	4	14	322-5	Screw - Cap Hex. Hd.	10
2	3296-29	Nut - Lock	14	15	92-7975	Tread - Foot L.H.	1
3	92-7987	Decal - Recycler	1	*	92-7974	Tread - Foot R.H.	1
4	56-7130	Tower - Front	1	16	47-0940	Footrest - L.H.	1
5	32104-76	Screw - Self Tap Acorn Hd.	9	17	3296-42	Nut - Lock	2
6	56-7170	Guide - Shaft, Steering	1	18	3256-22	Washer - Flat	2
7	79-0370	Decal - Danger	1	19	47-2060	Bracket - Brake, Parking	1
8	56-7140	Tower - Rear	1	20	283-52	Pin - Clevis	1
9	56-7810	Decal - Brake, Parking	1	21	321-4	Screw - Cap Hex. Hd.	2
10	47-1290	Brake - Parking	1	22	47-0930	Footrest - R.H.	1
11	3256-24	Washer - Flat	1	*	12-8829	Loose Parts	1
12	3272-6	Pin - Cotter	1	*	12-8819	Loose Parts	1
13	3256-23	Washer - Flat	8			(Includes Steering Wheel)	1

*Not Illustrated

© The TORO Company -1995
 All Rights Reserved

TPS

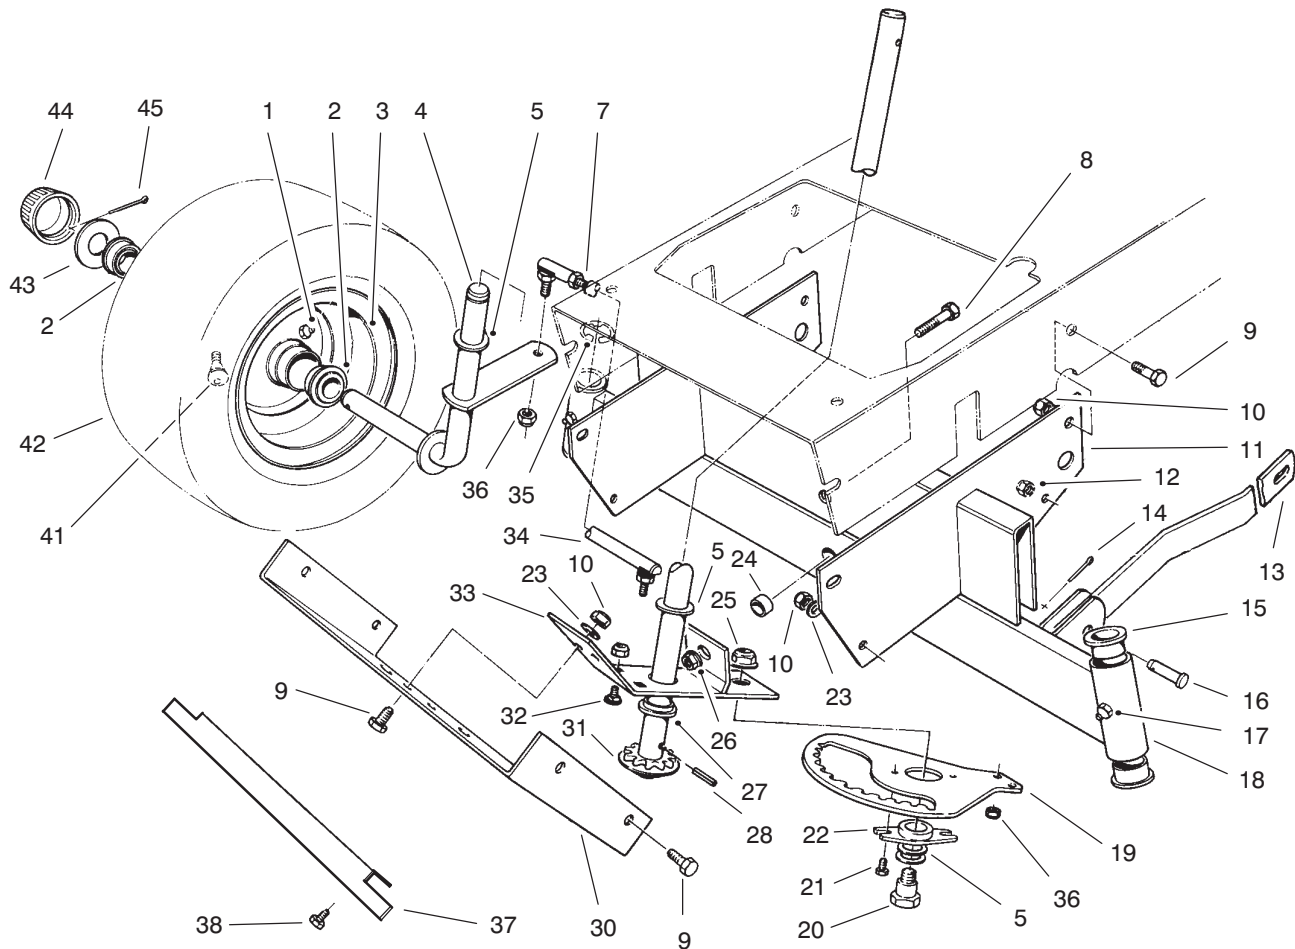

C-0438C


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting - Grease	2
2	110513	Bearing	4
3	217-80	Rim	2
4	47-0600	Spindle - R.H.	1
*	47-0590	Spindle - L.H.	1
5	3-6498	Washer - Thrust	5
7	3220-2	Nut - Hex. Jam	1
8	325-6	Screw - Cap Hex. Hd.	1
9	322-5	Screw - Cap Hex. Hd.	8
10	3296-29	Nut - Lock	8
11	47-0760	Support - Axle, Front	1
12	3296-8	Nut - Lock	1
13	47-0010	Arm - Suspension, Front	2
14	3272-6	Pin - Cotter	2
15	27-9080	Bearing - Flange	4
16	283-2	Pin - Clevis	2
17	302-49	Fitting - Grease	2
18	80-2430	Axle - Front (Incl. Ref. #15 & 17)	1
19	80-2450	Rack - Steering	1
20	56-7530	Bolt - Shoulder	1
21	32144-4	Screw - Special	2
22	56-7520	Bushing - Sector	1
23	3256-23	Washer - Flat	6

Ref. No.	Part No.	Description	No. Used
24	28-0380	Spacer - Axle, Front	1
25	32128-21	Nut - Lock, Flange Hd.	1
26	32128-23	Nut - Lock, Flange Hd.	1
27	47-0700	Bearing - Flange	1
28	32121-9	Pin - Roll	1
30	56-7180	Cover - Front	1
31	56-7500	Shaft - Steering	1
32	3230-18	Bolt - Carriage	2
33	56-7470	Bracket - Rack, Steering (Incl. Ref. #27)	1
34	47-0610	Tie Rod - Adjustable (Incl. Ref. #7)	1
*	80-2460	Tie Rod - Fixed	1
35	32151-48	Ring - Retaining, External	2
36	3296-4	Nut - Lock	4
37	92-0876	Guard - Front	1
38	32144-14	Screw - Thread Forming	2
41	237-27	Valve Stem w/Cap	2
42	231-116	Tire	2
43	28-2480	Washer	2
44	61-9780	Cap - Hub	2
45	3272-12	Pin - Cotter	2
†	232-44	Tube - Inner	2

*Not Illustrated


†Service Replacement Part

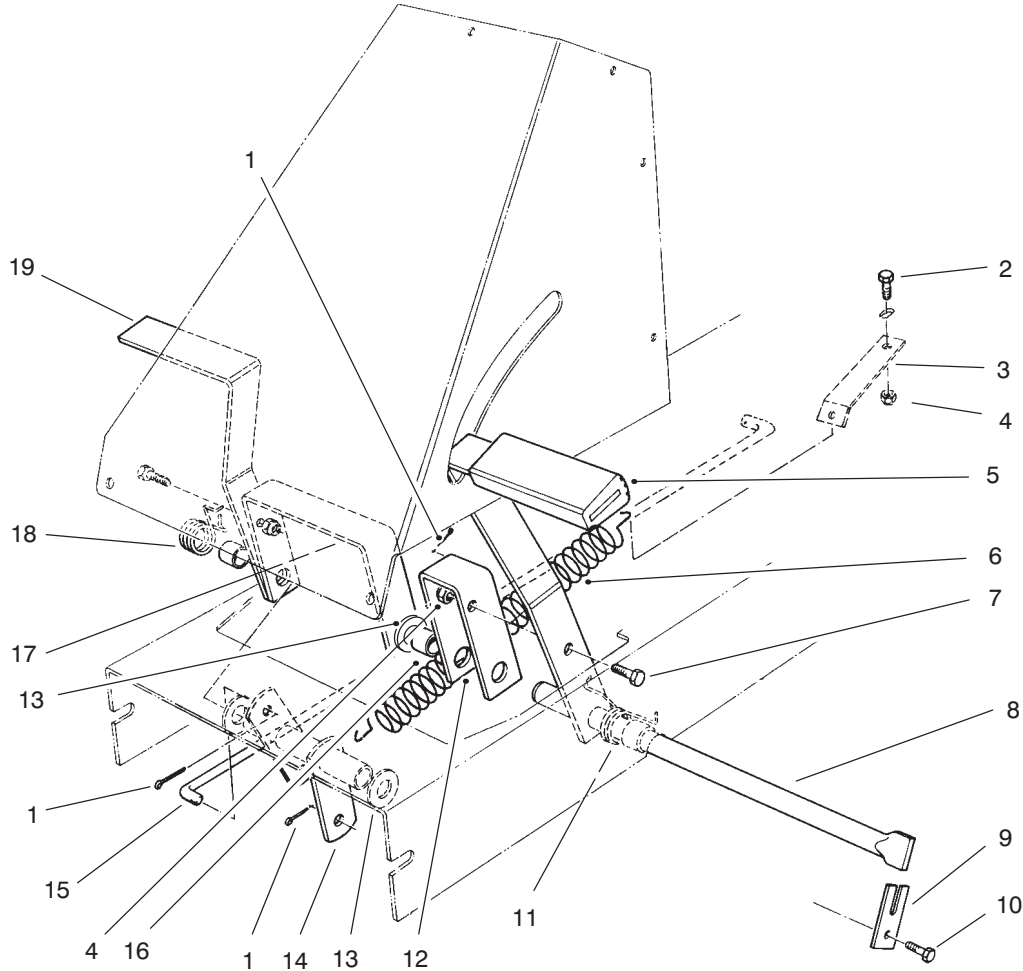

C-0439A

BRAKE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin - Cotter	3	11	56-7070	Spring - Torsion, Clutch	1
2	322-5	Screw - Cap Hex. Hd.	1	12	47-0560	Bracket - Clutch, Pedal	1
3	56-7240	Bracket - Retaining, Spring	1	13	3256-27	Washer - Flat	3
4	3296-29	Nut - Lock	3	14	56-7650	Tube - Pivot	1
5	65-2920	Pad - Pedal, Foot	2	15	56-7570	Rod - Engagement	1
6	62-3930	Spring - Extension	1	16	47-0570	Spacer - Pedal	3
7	322-5	Screw - Cap Hex. Hd.	2	17	47-0550	Bracket - Brake, Pedal	1
8	47-0770	Shaft - Pivot, Pedal	1	18	56-7080	Spring - Torsion, Brake	1
9	47-0780	Retainer - Shaft	1	19	47-0540	Pedal	2
10	321-4	Screw - Cap Hex. Hd.	1				

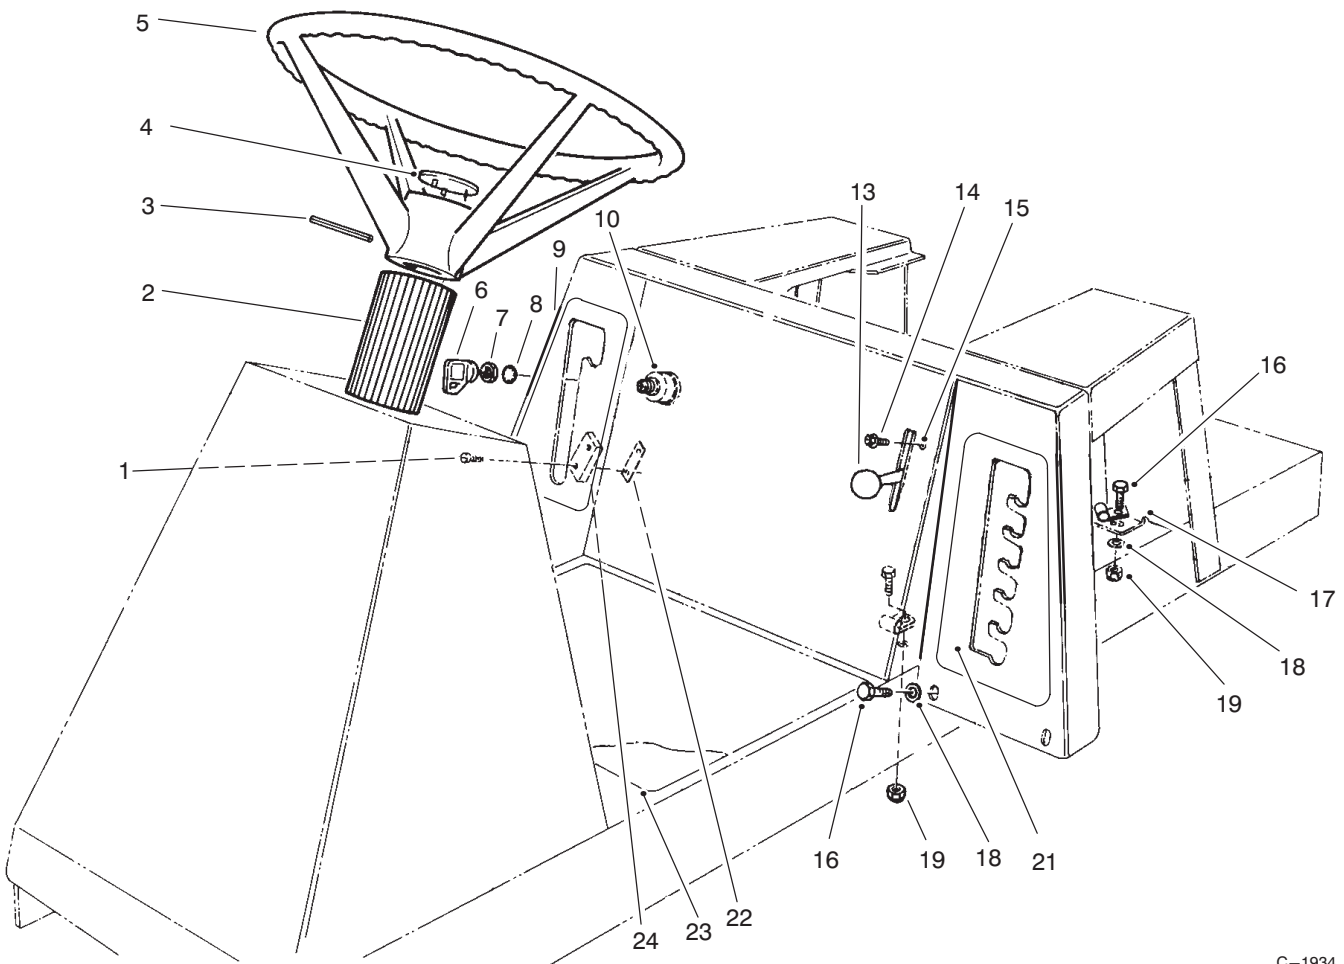


C-1934

STEERING WHEEL, SWITCHES & DECALS

Ref. No.	Part No.	Description	No. Used
1	147665	Screw – Phillips Head	2
2	66-6740	Cover – Shaft, Steering	1
3	32121-78	Pin – Roll	1
4	92-7990	Insert – Wheel, Steering	1
5	49-3242	Assy. – Wheel, Steering (Incl. Ref. #4)	1
6	63-8360	Key	1
7	218-461	Nut – Lock	1
8	3254-5	Washer – Lock, Int. Tooth	1
9	92-7244	Decal – Deck Engage	1
10	23-0660	Switch – Ignition (Incl. Ref. #6-8)	1

Ref. No.	Part No.	Description	No. Used
13	233-25	Knob	1
14	32104-76	Screw – Self-Tapping	2
15	92-0890	Control – Throttle (Incl. Ref. #13)	1
16	322-5	Screw – Cap Hex. Hd.	8
17	2412-68	Clamp	2
18	3256-23	Washer – Flat	7
19	3296-29	Nut – Lock	4
21	92-7245	Decal – H.O.C.	1
22	3290-354	Nut – Double	1
23	76-1090	Decal – Instructions	1
24	88-9931	Switch – Micro	1

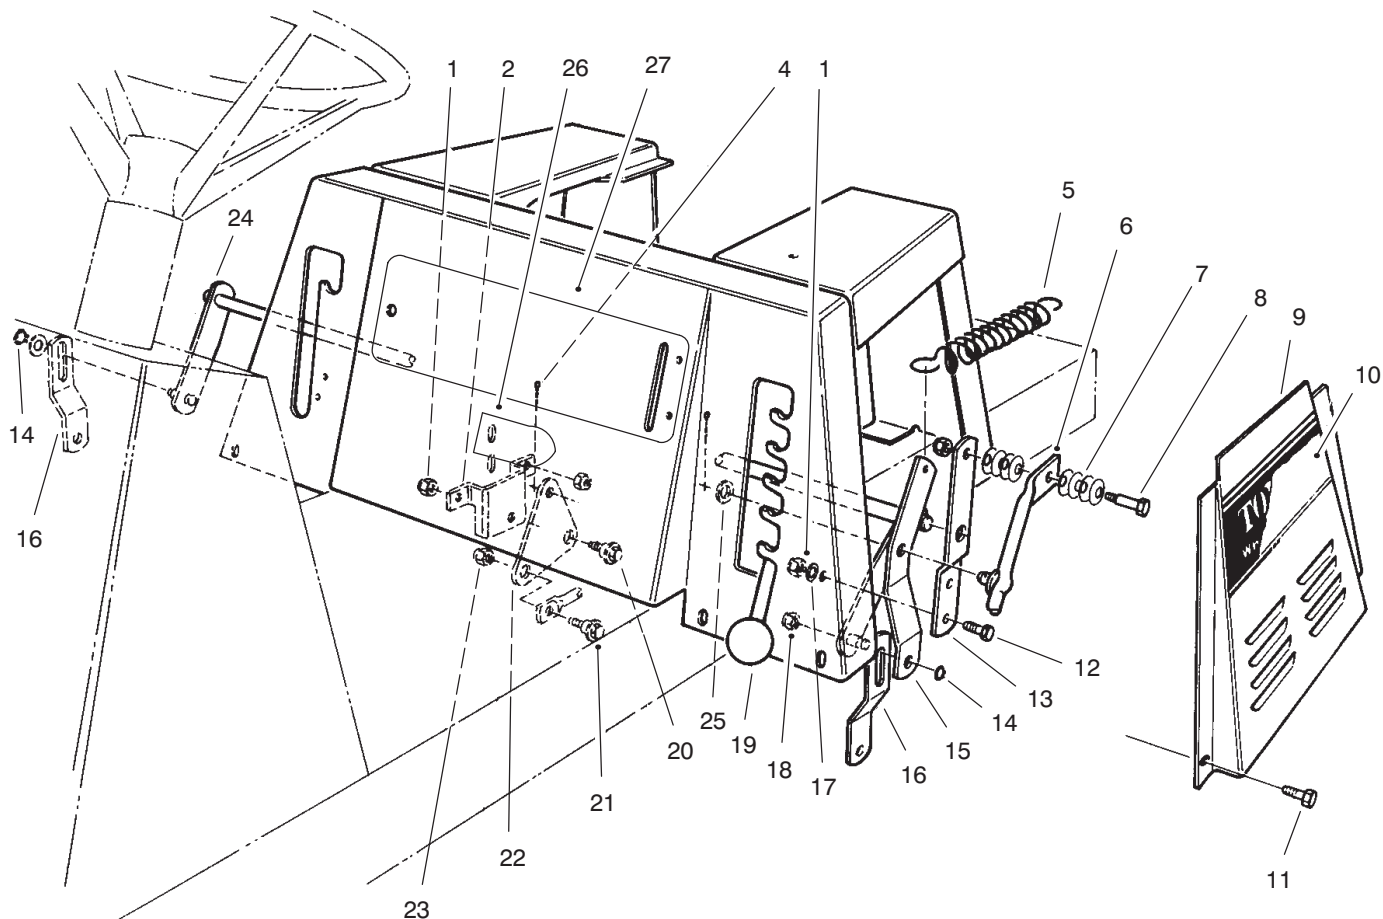


C-1935

LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	7
2	80-2310	Bracket - Bell Crank Mount	1
4	3272-6	Pin - Cotter	2
5	62-3930	Spring - Extension	1
6	47-1850	Lever - Height-of-Cut	1
7	3290-413	Washer - Belleville	8
8	28-0540	Bolt - Shoulder	1
9	92-0878	Panel L.H. - Base, Seat	1
10	92-7986	Decal - L.H. (Model 70120)	1
10	92-7985	Decal - L.H. (Model 70080)	1
11	321-4	Screw - Cap Hex. Hd.	4
12	322-5	Screw - Cap Hex. Hd.	2
13	47-1840	Bracket - Height-of-Cut	1
14	32151-61	Ring - Retaining	2

Ref. No.	Part No.	Description	No. Used
15	80-2320	Bracket - H.O.C., Engage	1
16	63-5830	Link - Suspension, Deck	2
17	3256-23	Washer - Flat	4
18	3296-42	Nut - Lock	1
19	233-48	Knob	1
20	19-1470	Bolt - Shoulder	1
21	65-5670	Bolt - Shoulder	1
22	80-2360	Crank - Bell, Deck Engage	1
23	3296-8	Nut - Lock	1
24	56-7400	Arm - Lever, H.O.C.	1
25	3256-26	Washer - Flat	1
26	76-1340	Decal - Made In USA	1
27	92-7243	Decal - Control Panel	1

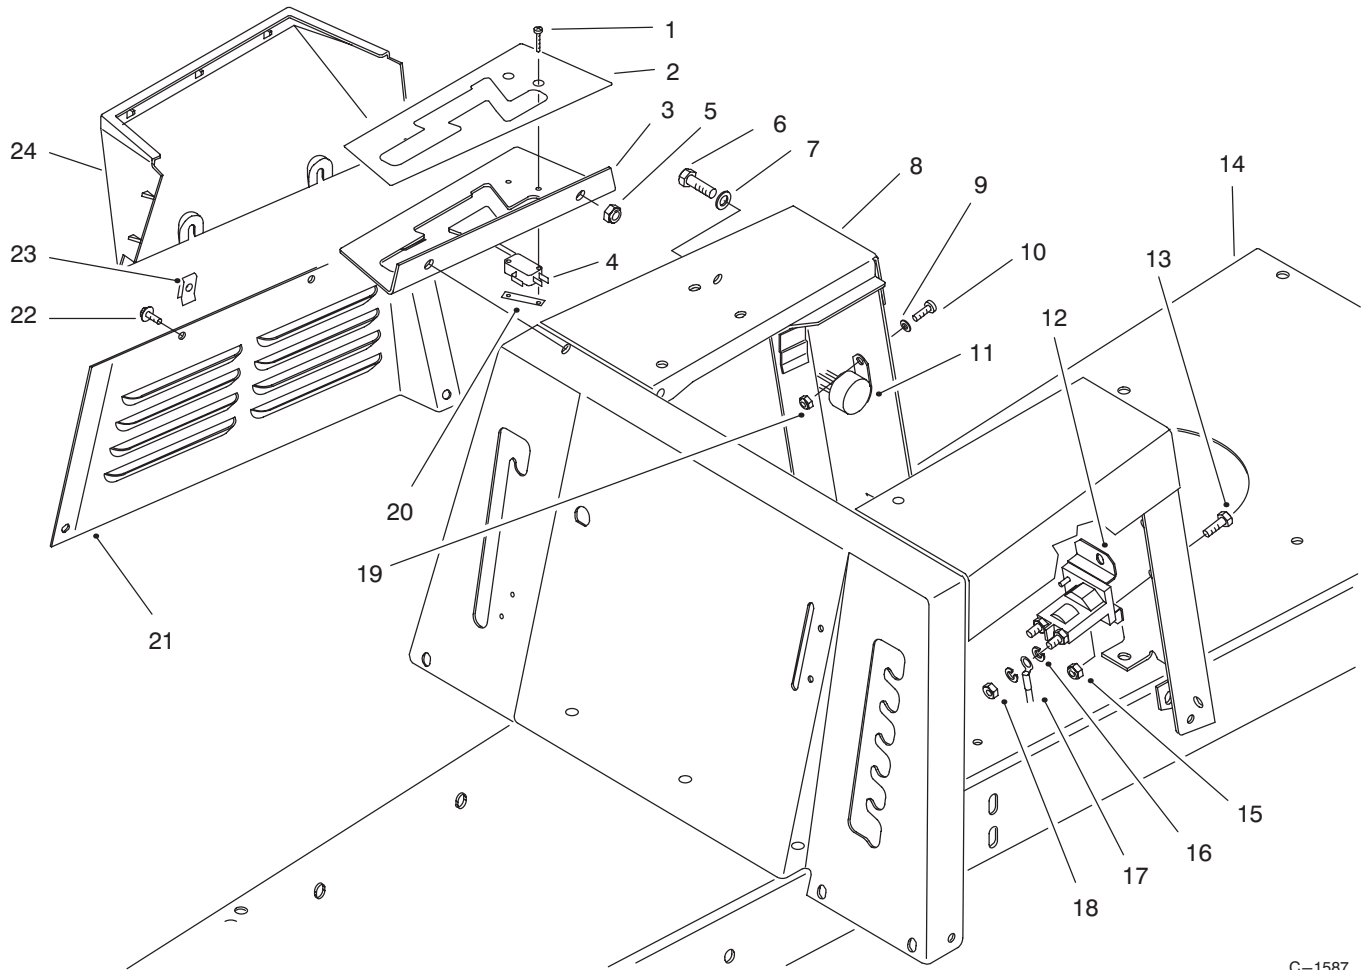


C-1587

SEAT BODY & SIDE PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	147665	Screw – Phillips Hd.	2
2	92-1751	Decal – Shift Pattern	1
3	92-0895	Gate – Shift	1
4	88-9930	Switch – Micro, Short	1
5	3296-29	Nut – Lock	2
6	322-5	Screw – Cap Hex. Hd.	2
7	3256-23	Washer – Flat	2
8	92-0866	Body W.A. – Seat Support	1
9	3256-14	Washer – Flat	1
10	3290-134	Screw – Machine	1
11	28-7890	Module – Interlock	1
12	47-1910	Solenoid	1

Ref. No.	Part No.	Description	No. Used
13	321-4	Screw – Cap Hex. Hd.	2
14	92-0860	Frame	1
15	3296-42	Nut – Lock	2
16	3253-3	Washer – Lock	4
17	56-7670	Cable – Positive	1
18	3218-1	Nut – Jam	2
19	3296-2	Nut – Lock	1
20	3290-354	Nut – Double	1
21	92-0877	Panel – Seat Base, R.H.	1
22	32144-112	Screw – Sems	2
23	3290-191	Nut – Speed	2
24	88-9800	Cover – Gate, Shift	1

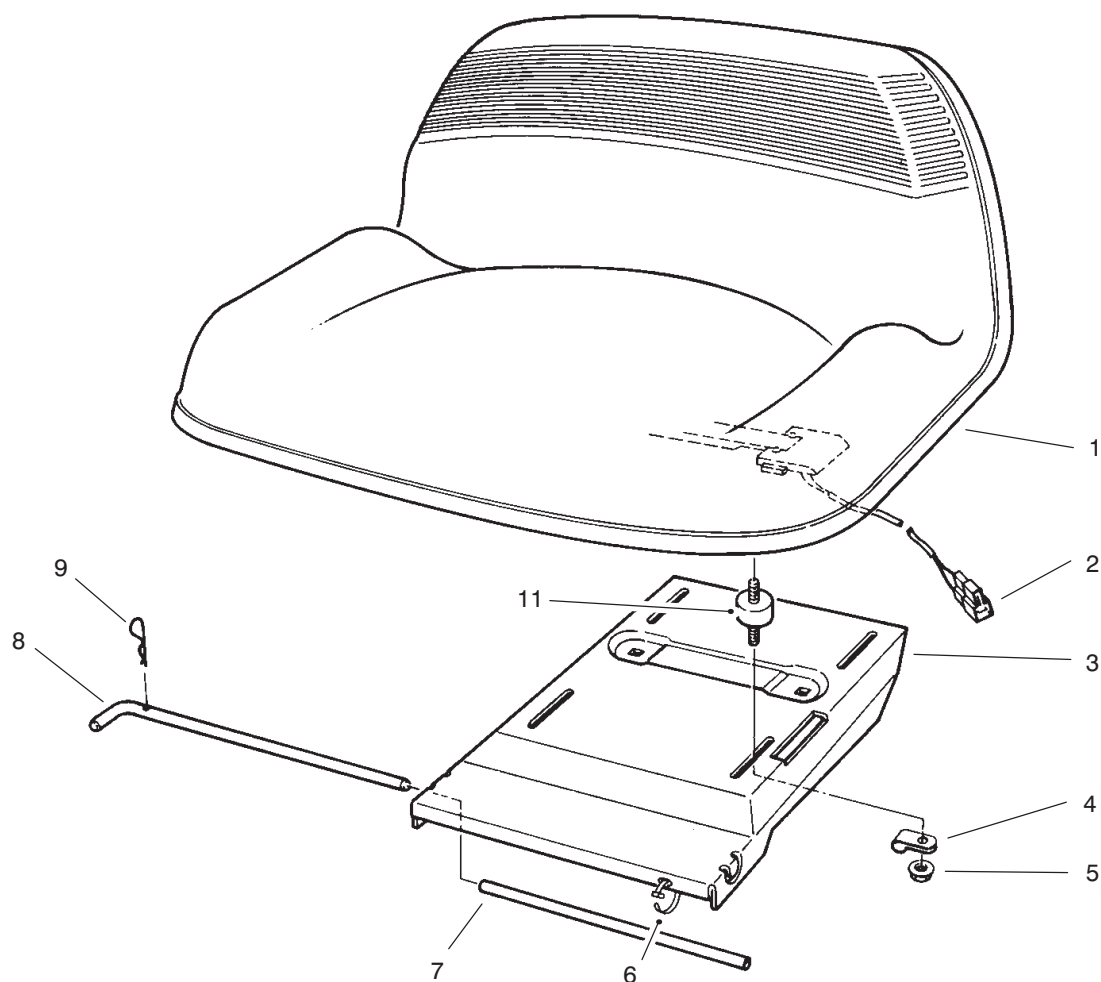


C-1936

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-3950	Assembly - Seat	1
2	38-1420	Switch - Interlock	1
3	63-5540	Base - Seat	1
4	2412-68	Clamp - Wire	1
5	32128-20	Nut - Flange Hd.	4

Ref. No.	Part No.	Description	No. Used
6	3290-378	Tie - Cable	1
7	63-5670	Tube - Bumper, Seat Rod	1
8	80-2620	Rod - Base, Seat	1
9	3290-307	Pin - Cotter, Hair	1
11	62-5480	Isolator - Seat	4

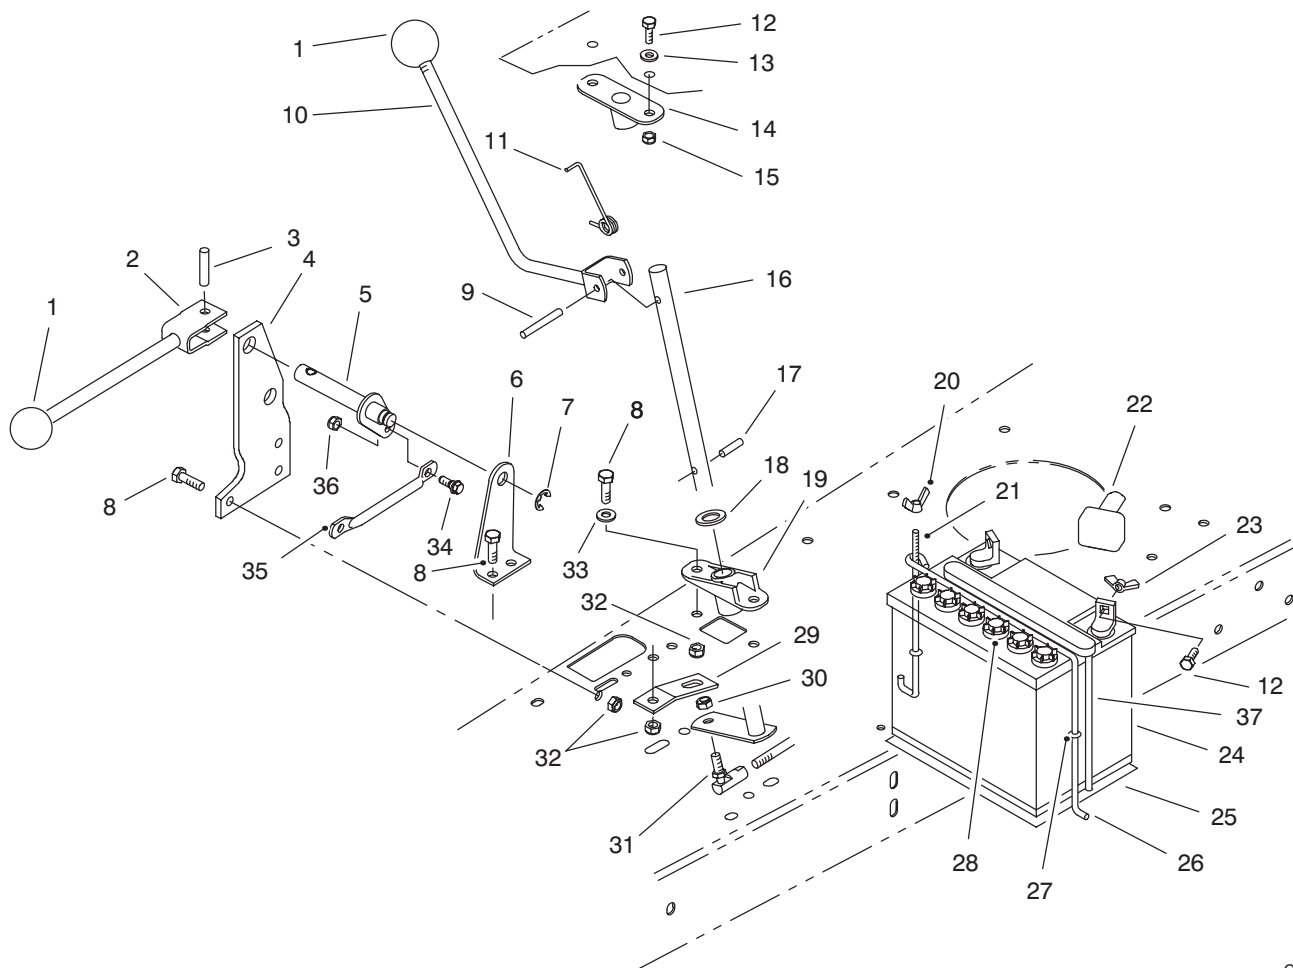


C-1601

TRANSMISSION LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-48	Knob	2
2	80-2400	Lever W.A. - Engage	1
3	32121-25	Pin - Roll	1
4	80-2350	Pivot - Outer	1
5	80-2370	Shaft W.A. - Pivot	1
6	80-2340	Bracket - Pivot, Inner	1
7	32120-47	Ring - Retaining	1
8	322-5	Screw - Cap Hex. Hd.	4
9	32121-78	Pin - Roll	1
10	92-0884	Lever W.A. - Shaft	1
11	92-0894	Spring - Torsion	1
12	321-4	Screw - Cap Hex. Hd.	2
13	3256-22	Washer - Flat	2
14	92-0888	Support - Shift, Upper	1
15	3296-42	Nut - Lock	2
16	92-0891	Shaft W. A. - Shift	1
17	32121-16	Pin - Roll	1
18	257-11	Washer	1
19	92-0887	Support - Shift, Lower	1

Ref. No.	Part No.	Description	No. Used
20	32103-12	Nut - Wing	1
21	56-7720	Post - Battery	1
22	28-8080	Boot - Terminal	1
23	32103-22	Nut - Wing	2
24	80-2600	Battery - 12 Volt (Incl. Ref. #28 & 37)	1
25	62-4300	Pad - Battery	1
26	56-7710	Hold Down - Battery	1
27	237-143	O-Ring	2
28	218-560	Cap - Battery	6
29	92-0896	Retainer - Spring	1
30	3296-4	Nut - Lock	1
31	2411-32	Ball Joint	1
32	3296-29	Nut - Lock	4
33	3256-23	Washer - Flat	2
34	65-5670	Screw - Shoulder	1
35	80-2330	Link - Bell Crank	1
36	3296-8	Nut - Lock	1
37	56-2540	Tube - Vent, Battery	1

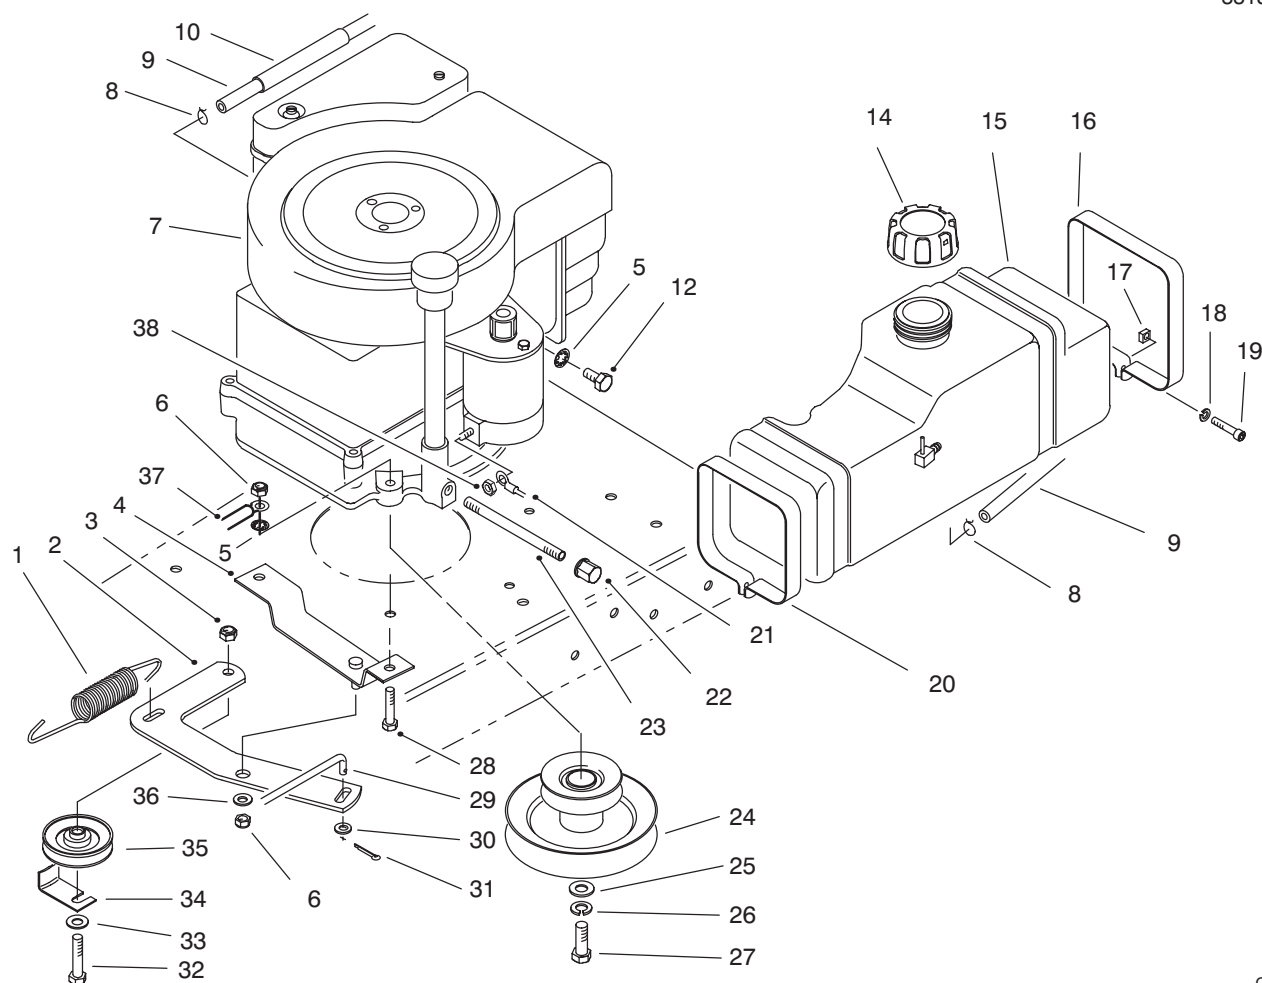



C-1937B

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0879	Spring	1	17	32107-11	Nut - Square	2
2	92-0883	Plate - Mounting, Idler	1	18	3253-3	Washer - Lock	2
3	3296-39	Nut - Lock	1	19	3274-51	Screw - Hex. Socket Hd.	2
4	92-0881	Bracket W.A. - Traction	1	20	57-4070	Retainer - Rear	1
5	3254-2	Washer - Lock, Int. Tooth	4	21	56-7670	Cable - Battery, Positive	1
6	3296-29	Nut - Lock	2	22	288-10	Cap - Pipe	1
7		Engine - 10 H .P. Model 70080 (28B707-0126-01)	1	23	289-19	Nipple - Pipe	1
7		Engine - 12 H.P. Models 70120 (286707-0119-01)	1	24	92-0873	Pulley - Engine	1
8	2412-98	Clamp - Hose	2	25	3256-25	Washer - Flat	1
9	47-2981	Hose - Fuel Line Model 70080	1	26	3253-6	Washer - Lock	1
9	47-2961	Hose - Fuel Line Model 70120	1	27	62-3760	Screw - Cap Hex. Hd.	1
10	62-5490	Support - Fuel Line	1	28	322-7	Screw - Cap Hex. Hd.	1
12	32144-14	Screw	2	29	92-0871	Rod - Traction	1
14	55-3570	Cap - Fuel	1	30	3256-22	Washer - Flat	1
15	56-7050	Tank - Fuel	1	31	3272-6	Pin - Cotter	1
16	57-4060	Retainer - Front	1	32	323-9	Screw - Cap Hex. Hd.	1
				33	3256-24	Washer - Flat	1
				34	12-9020	Retainer - Belt	1
				35	12-5820	Pulley - Idler	1
				36	3256-57	Washer - Flat	1
				37	54-3090	Cable - Battery Ground	1
				38	3218-1	Nut - Jam	1

ELECTRICAL SCHEMATIC

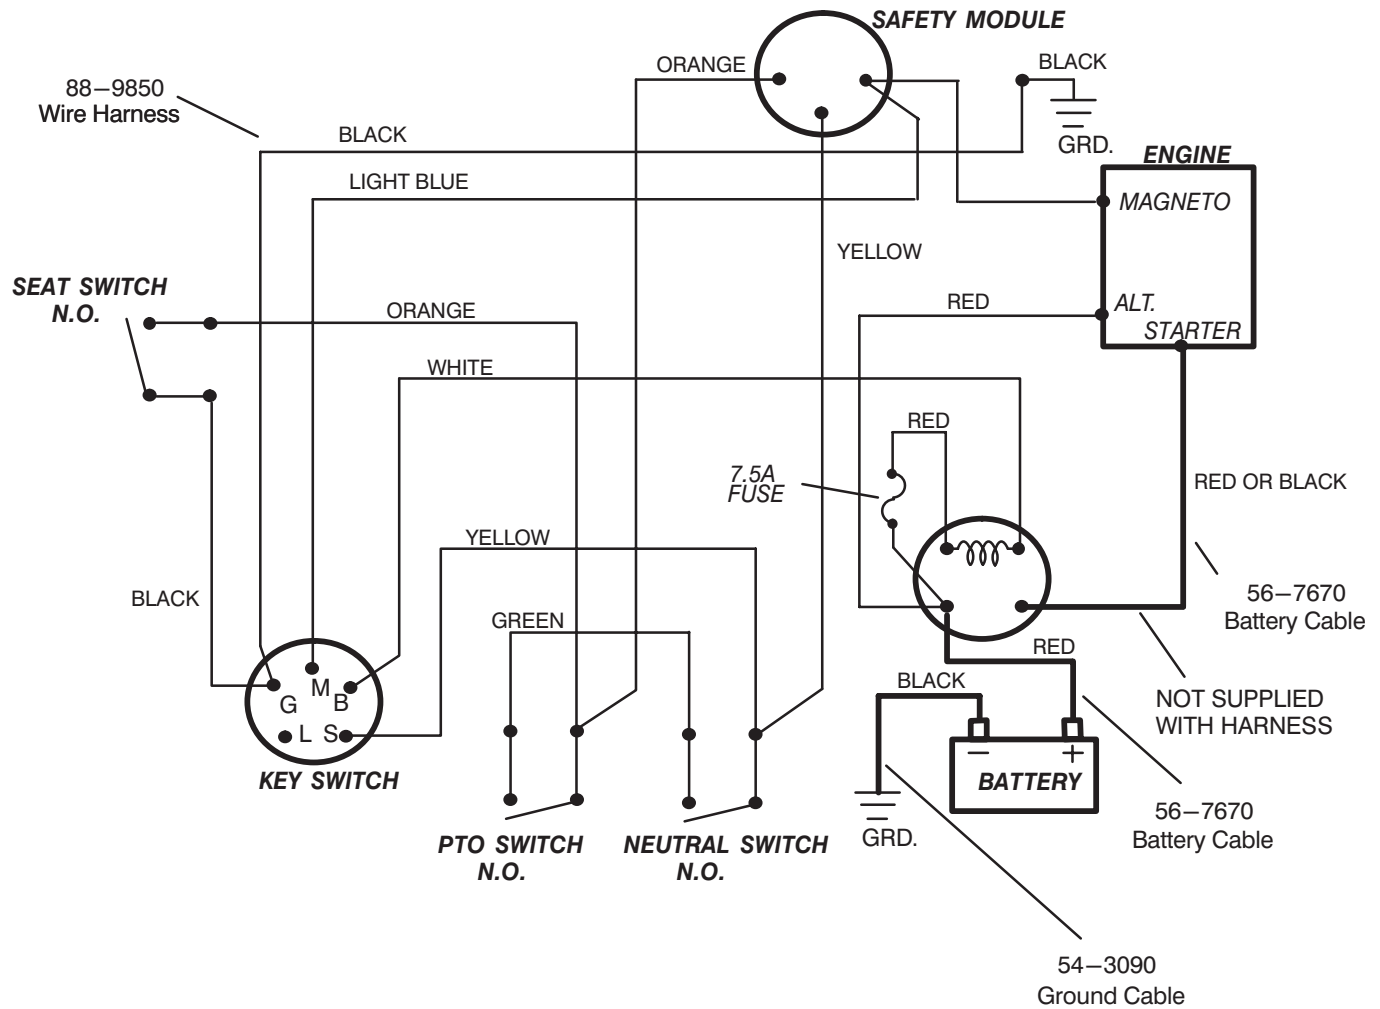


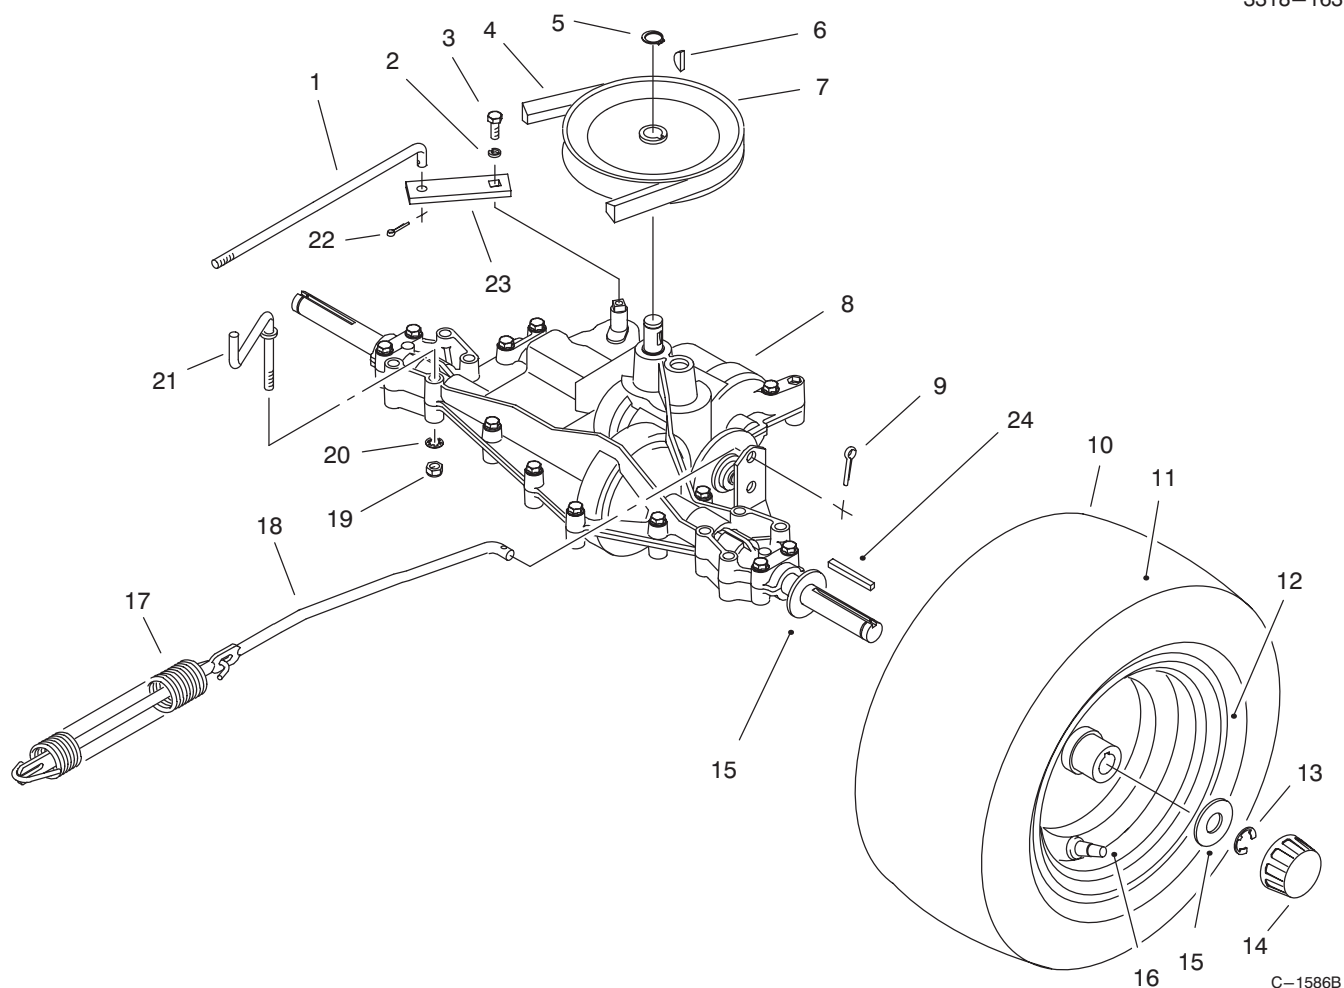

C-1586B

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0889	Link - Shift	1	13	32151-48	Ring - Retaining	2
2	3253-3	Washer - Lock	1	14	61-9780	Cap - Hub	2
3	329-4	Screw - Cap Hex. Hd.	1	15	28-2480	Washer	4
4	92-0870	V-Belt - Traction	1	16	232-27	Stem - Valve	2
5	32120-64	Ring - Retaining	1	17	57-9940	Spring - Brake	1
6	3257-23	Key	1	18	92-0872	Rod - Brake	1
7	92-0874	Pulley	1	19	3296-29	Nut - Lock	1
8	92-0862	Transaxle	1	20	3254-2	Washer - Lock, Int. Tooth	1
9	3272-16	Pin - Cotter	1	21	92-0899	Guide - Belt, Lower	1
10	231-117	Tire	2	22	3272-6	Pin - Cotter	1
11	232-39	Tube - Inner	2	23	92-0880	Arm - Shift, Transaxle	1
12	88-9730	Rim	2	24	7-0036	Key - Square	2

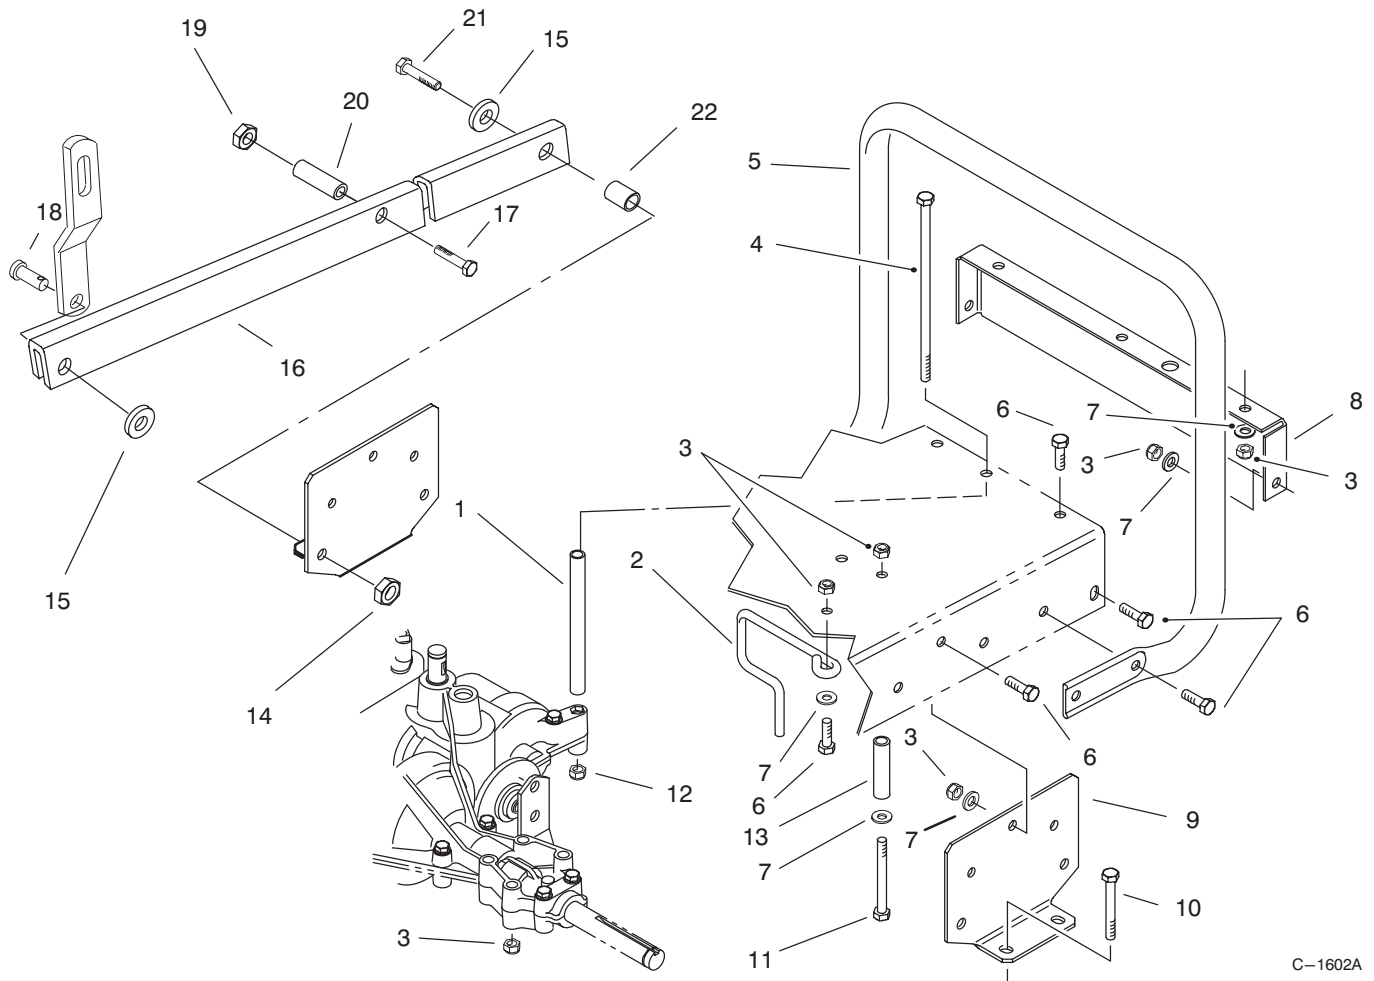


C-1602A

STAND BAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-0897	Spacer	1
2	92-0898	Guide - Belt	1
3	3296-29	Nut - Lock	17
4	322-50	Screw - Cap Hex. Hd.	1
5	92-0864	Standbar	1
6	322-5	Screw - Cap Hex. Hd.	15
7	3256-23	Washer - Flat	12
8	92-0861	Frame - Rear	1
9	92-0865	Support - Axle	2
10	322-12	Screw - Cap Hex. Hd.	4
11	322-14	Screw - Cap Hex. Hd.	2
12	3296-47	Nut - Lock	1

Ref. No.	Part No.	Description	No. Used
13	76-1560	Spacer	2
14	3296-59	Nut - Lock	3
15	3256-24	Washer - Flat	4
16	76-1540	Arm - Suspension R.H.	1
*	76-1550	Arm - Suspension L.H.	1
17	323-14	Screw - Hex Hd. Cap	2
18	283-42	Pin - Clevis	2
19	3296-39	Nut - Lock	1
20	76-1560	Spacer - Split	2
21	323-9	Screw - Hex Hd. Cap	2
22	56-7430	Pin - Support	2

*Not Illustrated

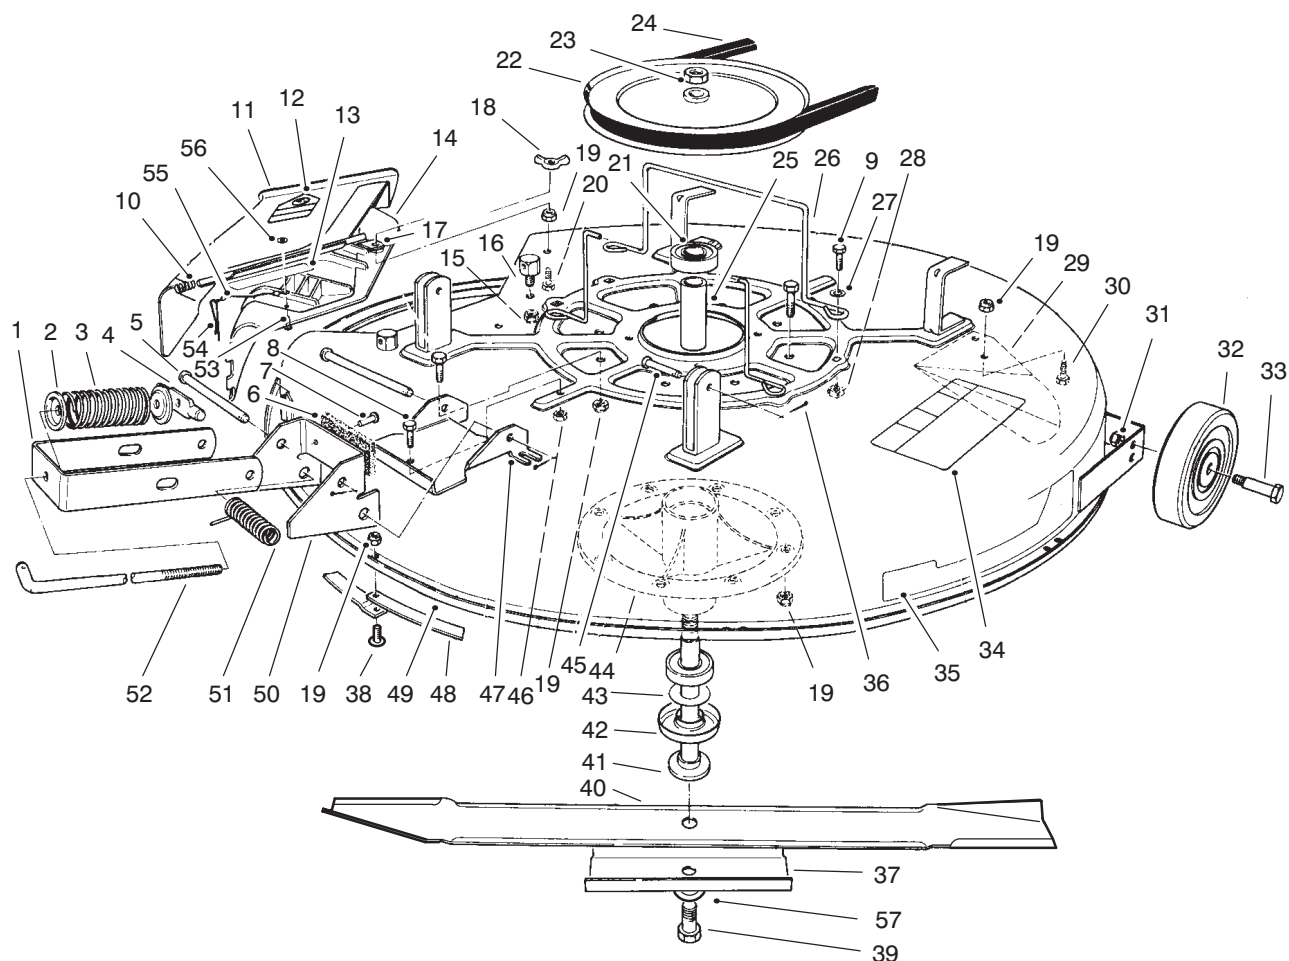


C-0792B

MOWER ASSEMBLY – RECYCLER


Ref. No.	Part No.	Description	No. Used
1	47-1180	Bracket - Engagement	1
2	47-1140	Retainer - Spring, Top	2
3	47-0960	Spring - Compression	1
4	47-1200	Shaft - Adjusting	1
5	80-2570	Pin - Clevis	2
6	80-2550	Pad - Brake	1
7	3290-282	Rivet	2
8	321-4	Screw - Cap Hex. Hd.	1
9	322-5	Screw - Cap Hex. Hd.	12
10	28-8010	Spring - Torsion	1
11	44-5930	Assembly - Deflector (Incl. Ref. #12)	1
12	54-9220	Decal - Caution, Deflector	1
13	68-3650	Decal - Warning, Deflector	1
14	82-6150	Assy. - Cover, Discharge (Incl. Ref. #53-56)	1
15	3296-59	Nut - Lock	1
16	28-7350	Post - Pivot	1
17	83-7010	Brace - Cover, Rear	1
18	32103-2	Nut - Wing	1
19	3296-29	Nut - Lock	24
20	322-6	Screw - Cap Hex. Hd.	1
21	251-297	Bearing	2
22	80-4470	Pulley	1
23	3219-7	Nut - Hex. Hd.	1
24	92-0875	V-Belt	1
25	83-7020	Spacer - Bearing	1
26	60-9730	Guide - Belt	2
27	3256-23	Washer - Flat	4
28	3290-496	Nut - Retainer	4
29	80-2630	Kicker - 32"	4
30	322-3	Screw - Cap Hex. Hd.	7
31	3296-39	Nut - Lock	2
32	61-9760	Wheel - Deck	2
33	56-6590	Bolt - Wheel	2
34	66-1340	Decal - Danger	1
35	92-9521	Decal - Recycler	1
36	3272-6	Pin - Cotter	2
37	80-4570	Stiffener - Blade	1
38	32122-14	Screw - Truss, Phillips Hd.	8
39	26-0671	Bolt - Blade	1
40	80-4430	Blade - Recycler	1
41	80-4350	Shaft - Spindle	1
42	80-4370	Shield - Bearing	1
43	80-4390	Spacer - Hardened	1
44	56-7030	Body - Spindle	1
45	283-2	Pin - Clevis	2
46	3296-8	Nut - Lock	1
47	80-2560	Plate - Deck, Brake Mtg.	1
48	80-4490	Ring - Deck	4
49	14-9999	Deck - Cutting, Recycler	1
50	80-2530	Assembly - Brake (Incl. Ref. #6-7)	1
51	40-6230	Spring - Torsion	1
52	80-2580	Rod - Adjusting	1
53	3290-282	Rivet	2
54	28-8130	Pin - Chute, Locking	1
55	28-8070	Lanyard	1
56	3256-49	Washer - Flat	1
57	3290-465	Washer - Belleville	1

PEERLESS TRANSAXLE MODEL NO. 915-019

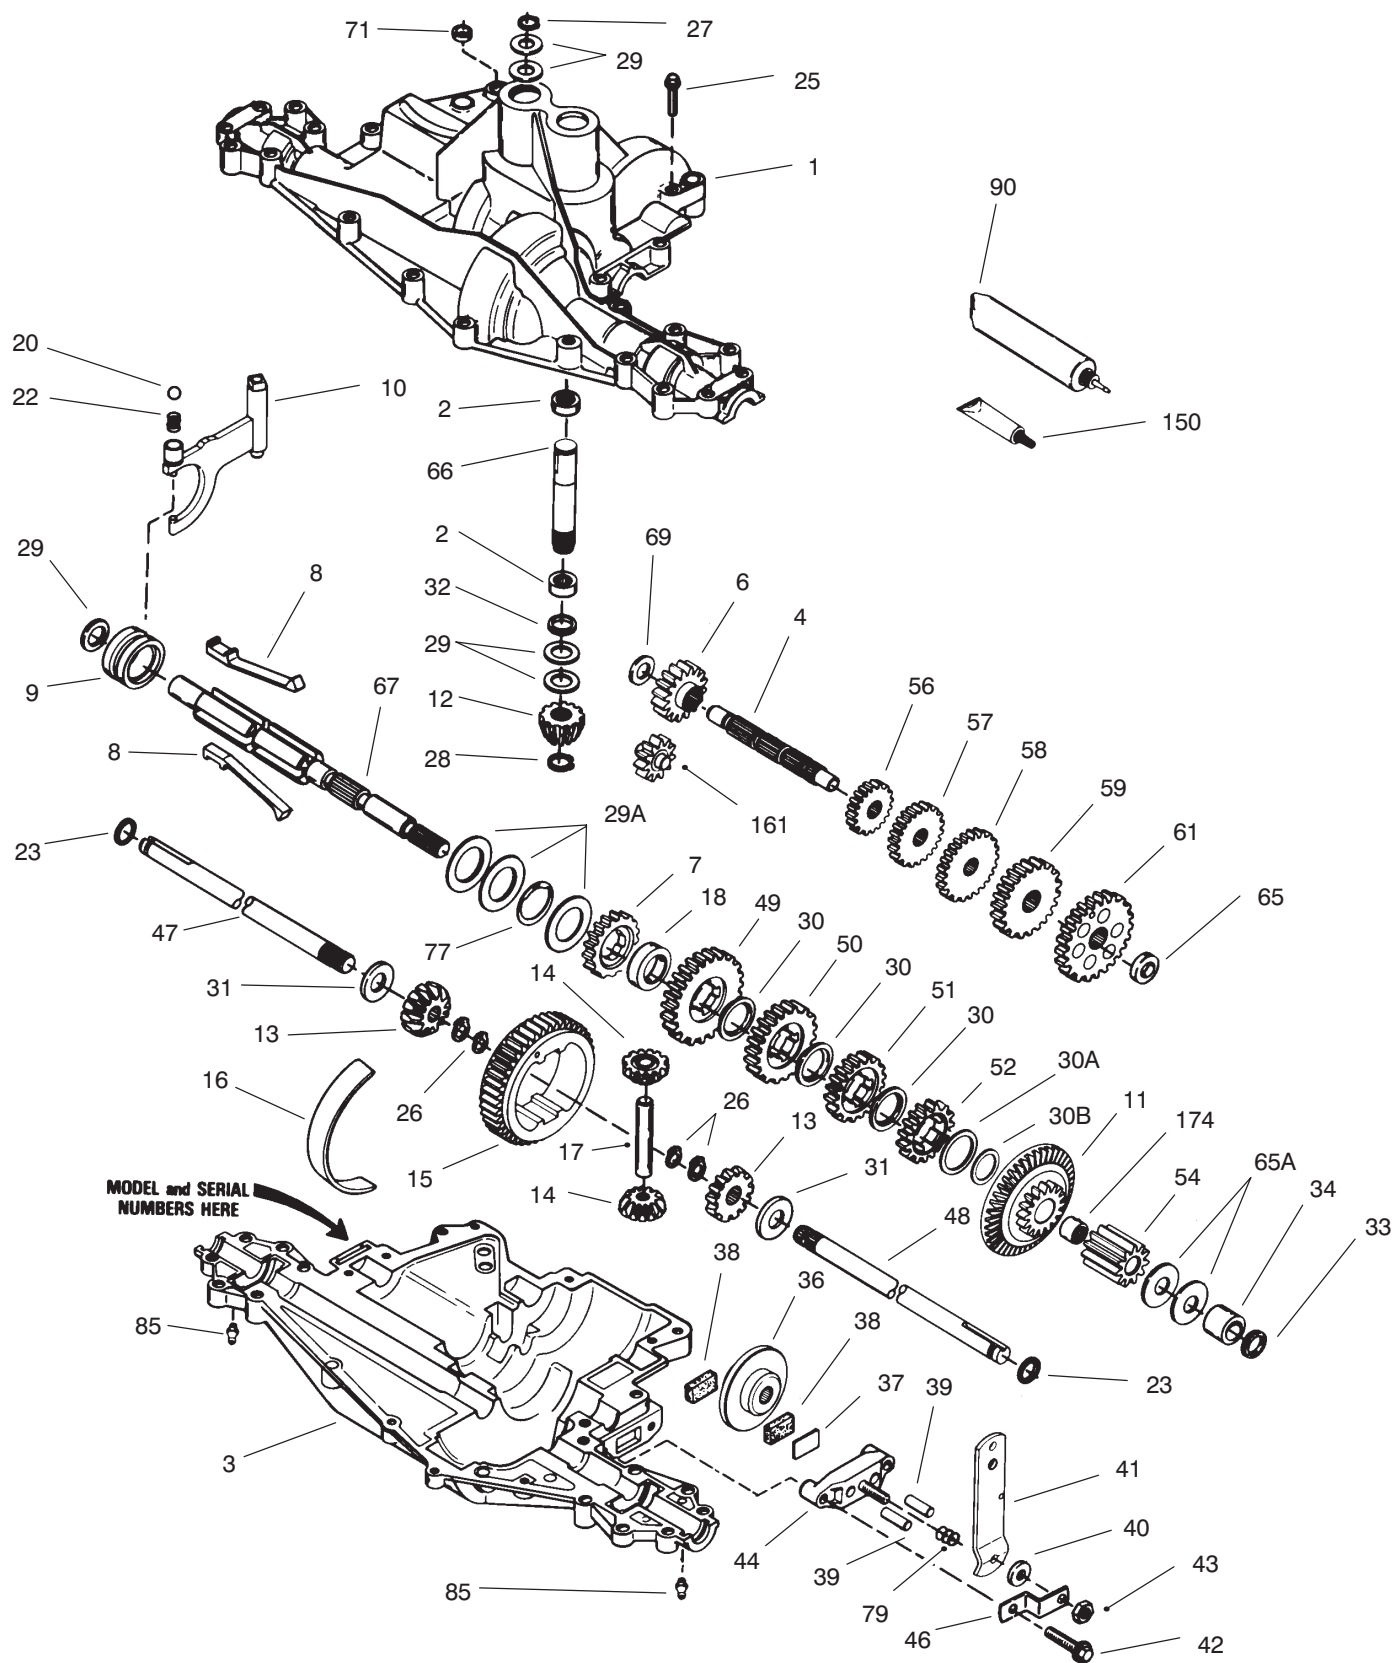

PEERLESS TRANSAXLE MODEL NO. 915—019

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	772117	Transaxle Cover	1	38	790006	Brake Pad	2
2	780086	Needle Bearing	2	39	786026	Dowel Pin	2
3	770114	Transaxle Case	1	40	792076	Washer	1
4	776300	Countershaft	1	41	790045	Brake Lever	1
6	778281	Spur Gear (16 Teeth)	1	42	792073	Screw	2
7	778122A	Spur Gear (22 Teeth)	1	43	792075	Locknut	1
8	792133	Shift Key	4	44	790025	Brake Pad Holder	1
9	784352	Shift Collar	1	46	786086	Brake Lever Bracket	1
10	784365	Shift Rod & Fork	1	47	774930	Axle (16—3/4" lg.)	1
11	778290	Bevel Gear & Bearing (44/16 Teeth) (Incl. Ref. #174)	1	48	774931	Axle (11—9/16" lg.) (Incl. Ref. #26)	1
12	778262	Bevel Pinion (14 Teeth)	1	49	778124A	Spur Gear (30 Teeth)	1
13	778221	Bevel Gear (16 Teeth)	2	50	778123A	Spur Gear (25 Teeth)	1
14	778068	Differential Pinion	2	51	778122A	Spur Gear (22 Teeth)	1
15	778260	Ring Gear	1	52	778273	Spur Gear (19 Teeth)	1
16	786150	Bearing Strip	1	54	778263	Spur Gear (11 Teeth)	1
17	78139	Drive Pin	1	56	778126A	Spur Gear (20 Teeth)	1
18	786147	Neutral Spacer	1	57	778127A	Spur Gear (25 Teeth)	1
20	792139	Ball (3/8" dia.)	1	58	778128A	Spur Gear (28 Teeth)	1
22	792142	Spring	1	59	778129A	Spur Gear (30 Teeth)	1
23	788061	Seal Ring	2	61	778265	Spur Gear (34 Teeth)	1
25	792073	Screw	17	65	780162	Washer	1
26	792125	Retaining Ring (pkg. of 2)	4	65A	780160	Washer	2
27	792035	Retaining Ring	1	66	776299	Input Shaft (3.522" lg.)	1
28	788040	Retaining Ring	1	67	776352	Shifter & Brake Shaft	1
29	780072	Washer	5	69	780161	Thrust Washer	1
29A	780090	Thrust Washer	3	71	788069	Square Cut Ring	1
30	780108	Washer	3	77	788078A	Inverted Retaining Ring (pkg. of 2)	1
30A	789145	Washer	1	79	792144	Spring	1
30B	780178	Washer	1	90	788067B	Grease (32 oz. btl. Bentonite grease)	1
31	780001	Washer	2	150	510334	Gasket Eliminator (Loctite #515)	1
32	792001	O—Ring	1	161	776302	Reverse Idler Assembly	1
33	788076	O—Ring	1	174	780085	Needle Bearing	1
34	780159	Bushing	1				
36	790071	Brake Disk	1				
37	790007	Brake Pad Plate	1				

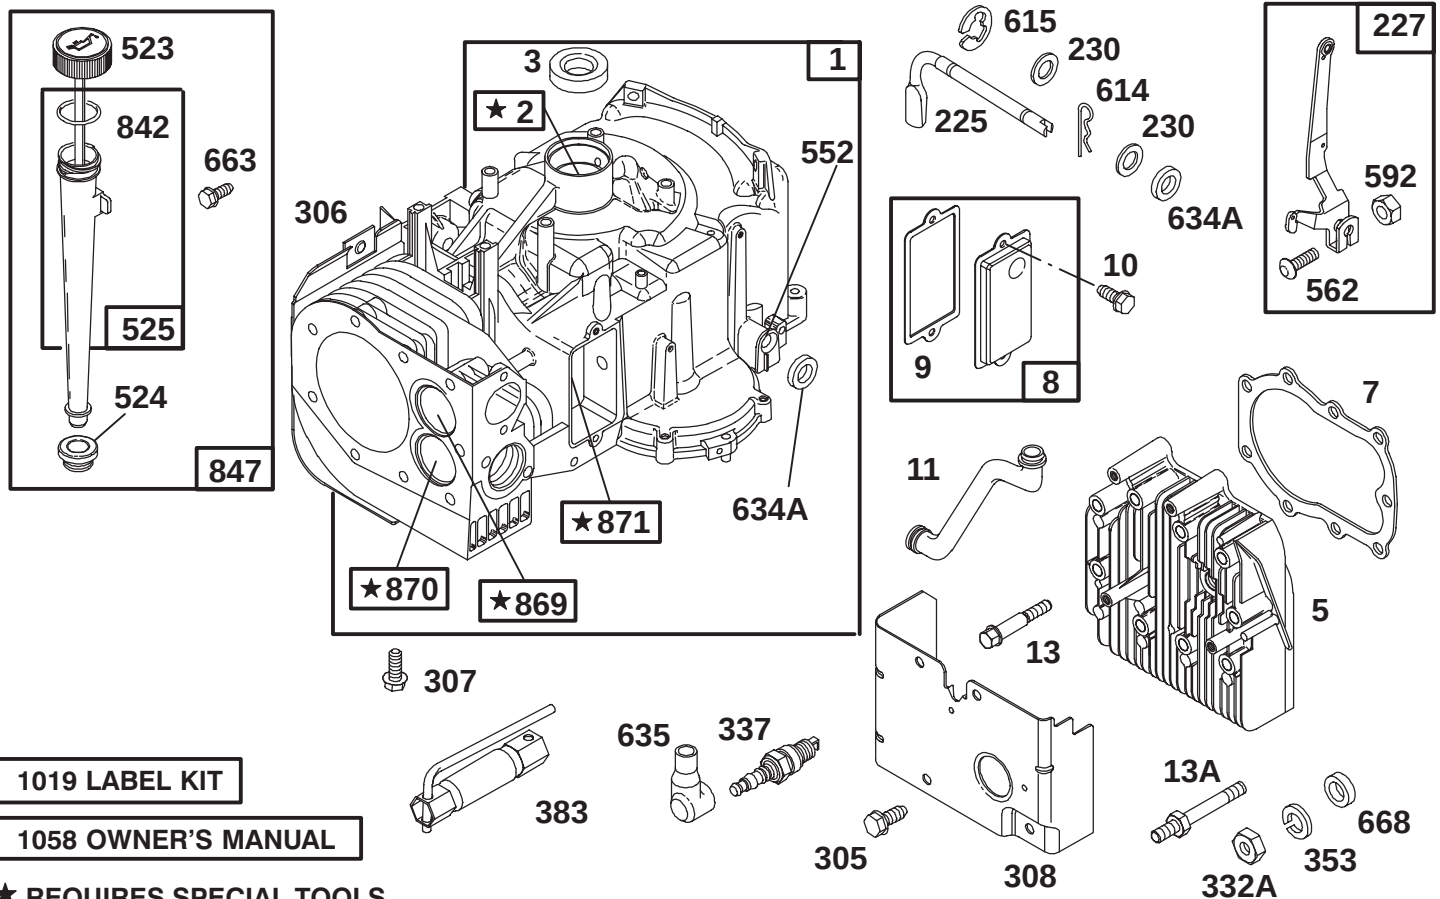

ENGINE BRIGGS & STRATTON MODEL 28B707-0126-01


Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	
2	399265	Bearing—Cylinder	
★3	391086	Seal—Oil	
5	494240	Head—Cylinder	
★7	271866	Gasket—Cylinder Head	
8	495735	Breather Assembly	
★9	27803	Gasket—Valve Cover	
10	94621	Screw—Sem	
11	281246	Tube—Breather	
13	94622	Screw—Cylinder Head	
13A	94776	Stud—Cylinder Head	
225	231058	Crank—Governor	
227	493935	Lever Assy.—Governor	
230	94742	Washer—Governor Lever	
305	94786	screw—Hex. Head	
306	224545	Shield—Cylinder	
307	94386	Screw—Self Tap	
308	491490	Cover—Cylinder Head	
332A	94314	Nut—Hex.	
337	802592	Plug—Spark	
353	94315	Washer—Lock	
383	89838	Wrench—Spark Plug	

Ref. No.	Part No.	Description	No. Used
523	495229	Cap—Oil Filler	
★524	281370	Seal—Filler Tube	
525	496068	Tube—Oil Filler	
552	231597	Bushing—Gov. Crank	
562	92613	Bolt—Governor Lever	
592	231082	Nut—Hex.	
614	93306	Pin—Cotter	
615	93307	Retainer—E-Ring	
★634A	491323	Seal—Governor	
635	66538	Elbow—Spark Plug	
663	94073	Screw—Hex. Head	
668	231109	Spacer	
★842	270920	Seal—Oil Filler Cap	
847	496367	Fill Group—Oil	
869	261463	Seat—Intake Valve	
870	213316	Seat—Exhaust Valve	
871	261961	Guide—Exhaust Valve	
		Note: 231218 Guide—Intake Valve (Brass)	
1019	491254	Label Kit	
1058	272697	Owner's Manual	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 496622.

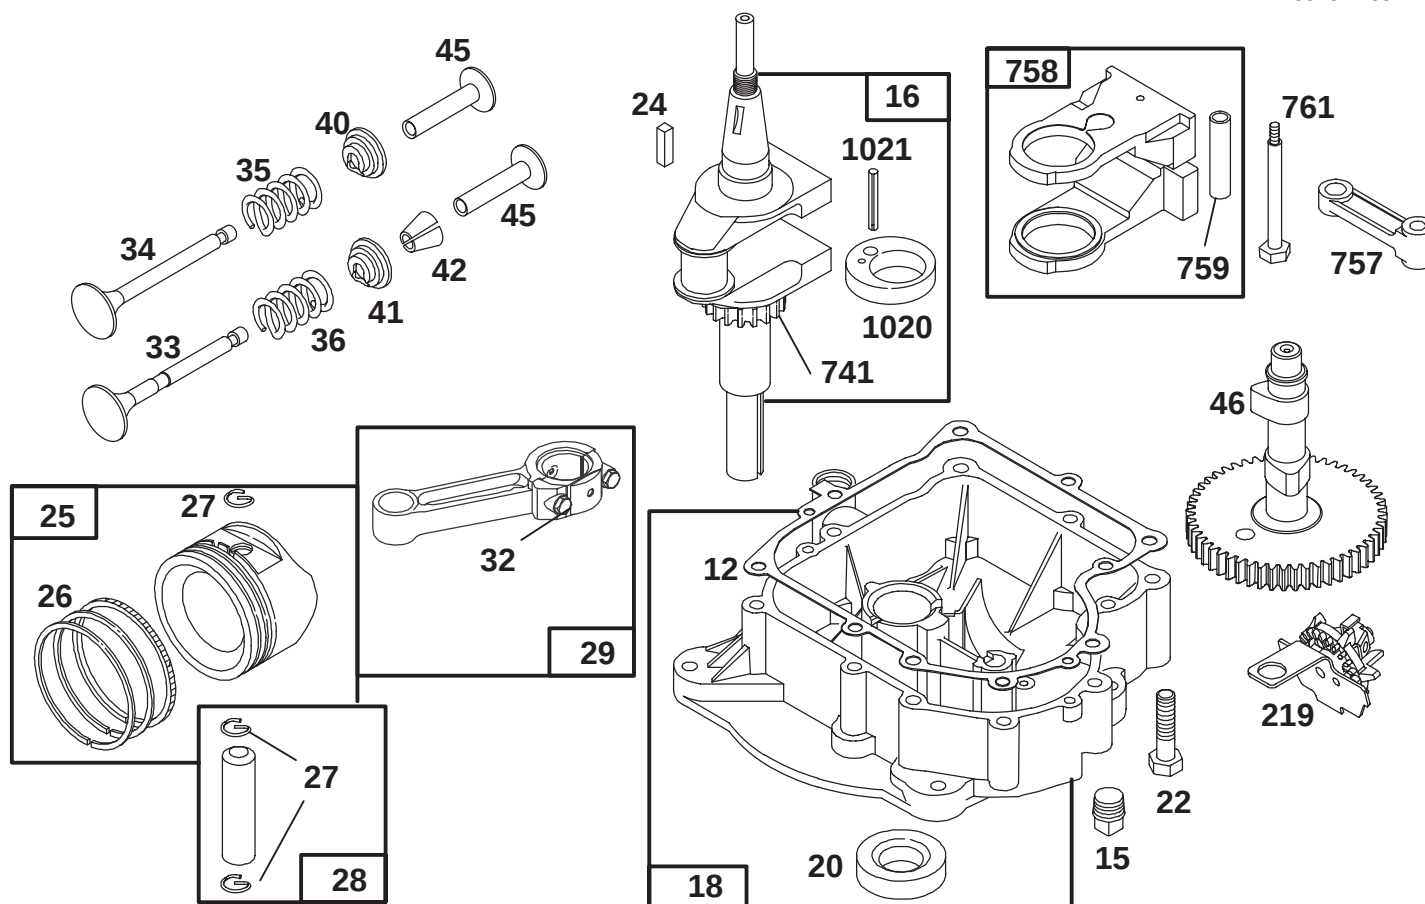

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28B707-0126-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket—Crankcase (.015" Thick)		27	260924	Lock—Piston Pin	
★	271997	Gasket—Crankcase (.005" Thick)		28	299691	Pin—Piston (Standard)	
★	271996	Gasket—Crankcase (.009" Thick)		391286	Pin—Piston (.005" O.S.)		
15	94239	Plug—Oil Drain		29	490348	Rod—Connecting	
16	495162	Crankshaft		490469	Rod—Conn. (.020" U.S.)		
		Note: For Timing Gear Key—Order 94196.		32	94671	Screw—Conn. Rod	
18	494238	Base—Engine		33	262246	Valve—Exhaust	
★20	291675	Seal—Oil		34	262247	Valve—Intake	
22	94624	Screw—Sem		35	65906	Spring—Valve	
24	222698	Key—Flywheel		36	26828	Spring—Valve	
25	394661	Piston Assembly (Standard)		40	221596	Retainer—Intake Valve	
	394662	Piston Assy. (.010" O.S.)		41	292260	Rotocoil—Ex. Valve	
	394663	Piston Assy. (.020" O.S.)		42	494553	Retainer—Rotocoil	
	394664	Piston Assy. (.030" O.S.)		45	262248	Tappet—Valve	
26	391780	Ring Set (Standard)		46	212897	Gear—Cam	
	392331	Ring Set (Chrome Std.)		219	490815	Gear—Gov.	
	391781	Ring Set (.010" O.S.)		741	262932	Gear—Timing	
	391782	Ring Set (.020" O.S.)		757	213998	Link—Counterweight	
	391783	Ring Set (.030" O.S.)		758	399891	Counterweight Assy.	
				759	298909	Pin—Counterweight	
				761	94593	Screw—Counterweight	
				1020	262243	Eccentric	
				1021	94160	Pin—Eccentric	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 496622.

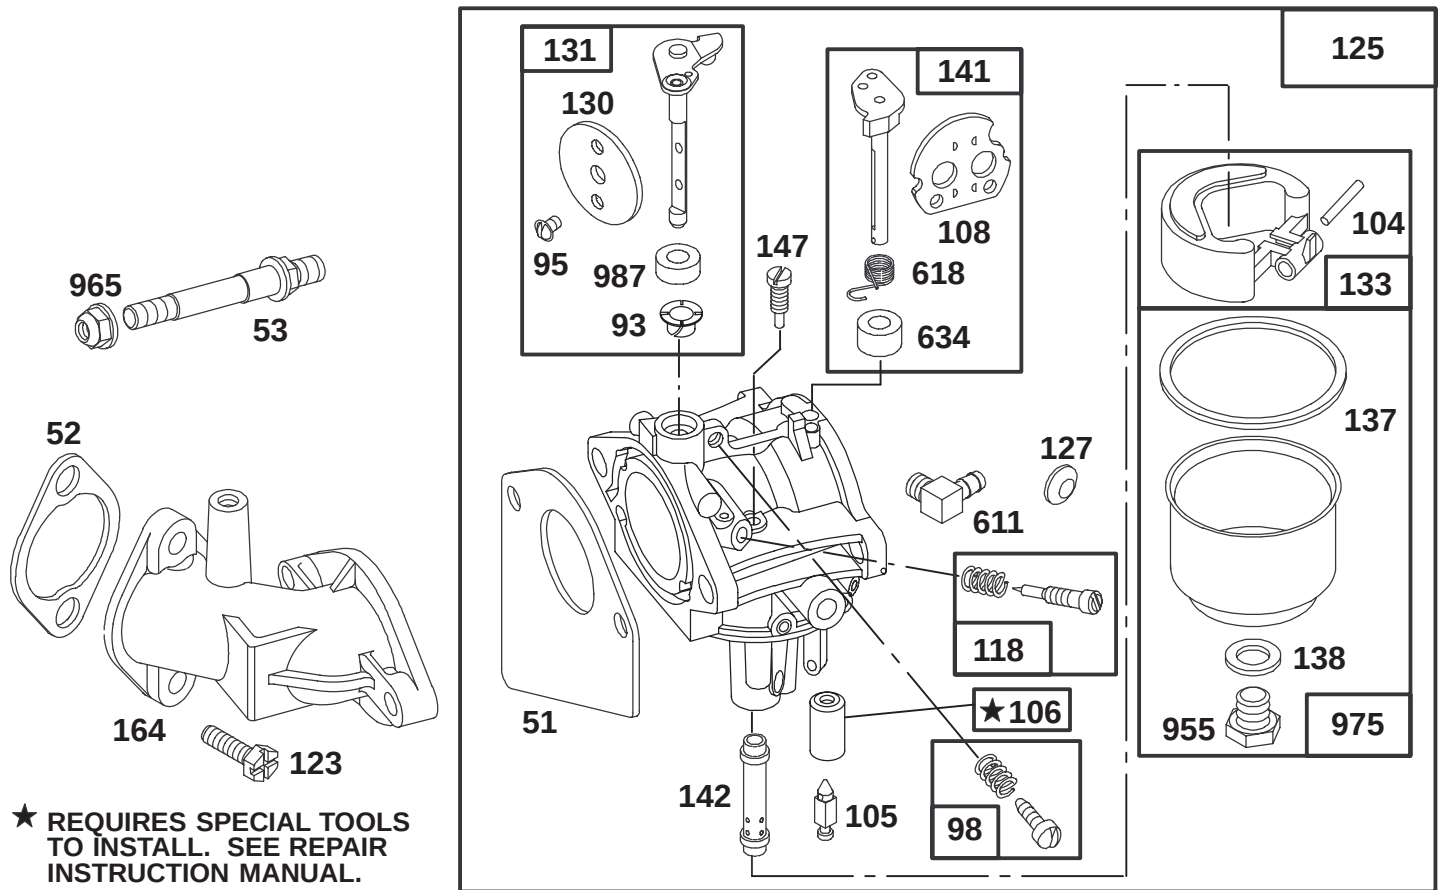

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28B707-0126-01


Ref. No.	Part No.	Description	No. Used
●◆51	272465	Gasket—Carburetor	
★52	272554	Gasket—Carburetor	
53	94637	Stud—Carb. Mtg.	
●93	281346	Bushing—Throttle Shaft	
●95	94098	Screw—Throttle	
98	495800	Screw—Idle Adjust	
●104	231789	Pin—Float Hinge	
●105	231855	Valve—Inlet Needle	
●106	231854	Seat—Inlet	
108	224666	Valve—Choke	
118	496589	Valve—Needle	
123	94616	Screw—Elbow Mtg.	
125	496592	Carburetor	
●127		Plug—Welch (Sold in Kit Only).	
130	224668	Valve—Throttle	
131	494885	Shaft—Throttle	
133	494381	Float—Carburetor	

Ref. No.	Part No.	Description	No. Used
●◆137	281165	Gasket—Float Bowl	
●◆138	281164	Washer—Float Bowl	
141	495931	Shaft—Choke	
●142	496519	Nozzle—Carburetor	
		Note: 496623 Nozzle—Carb. (High Altitude)	
		Includes:	
		281164 Washer—Float Bowl	
●147	231794	Pilot—Jet	
164	213819	Carburetor—Elbow	
611	493496	Elbow—Fuel Pipe	
618	262803	Spring—Choke Return	
●634	281168	Seal—Choke Shaft	
955	94642	Screw—Fuel Bowl	
965	94010	Nut—Hex.	
975	494378	Bowl—Float	
●987	281166	Seal—Throttle Shaft	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

- Included in Carburetor Kit—Part No. 496622.

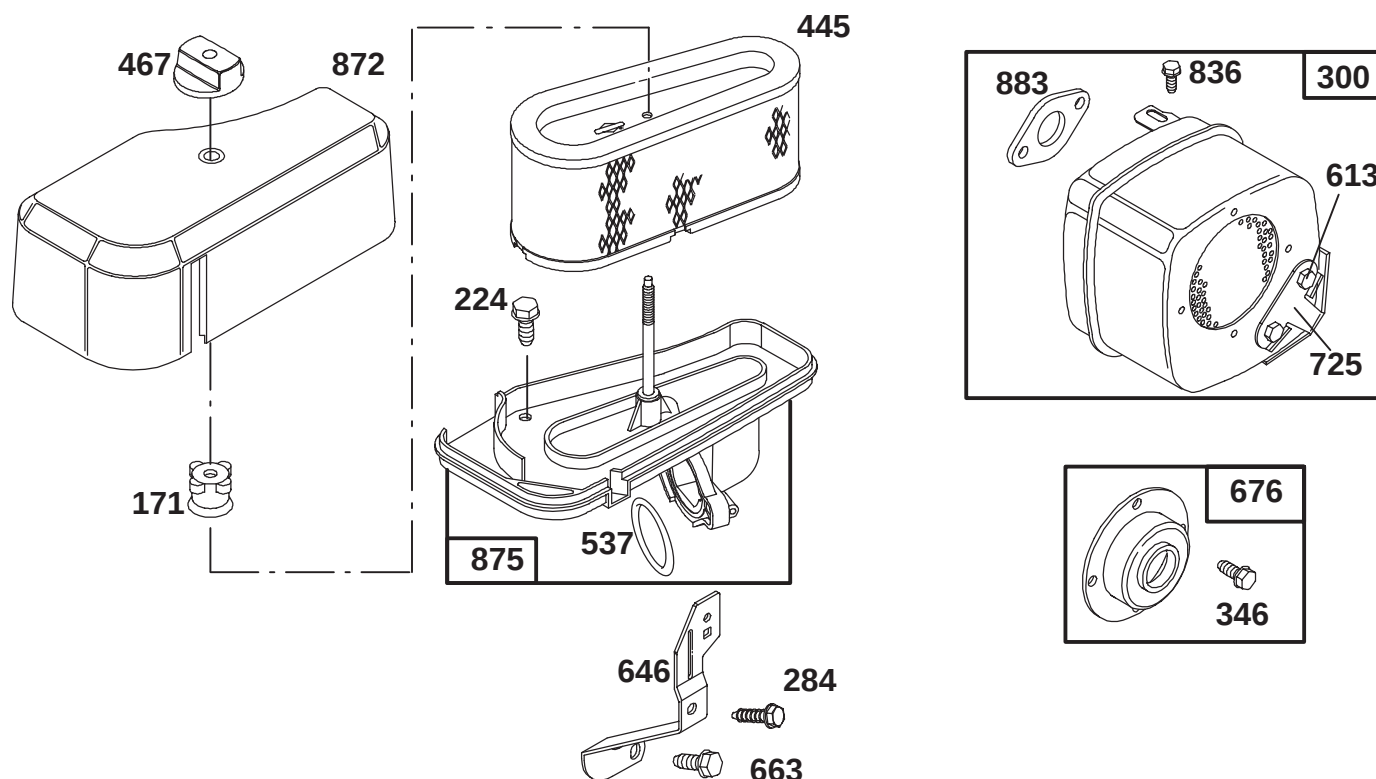

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28B707-0126-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
171	281051	Nut—Air Cleaner Mtg.		646	224546	Brace—Air Cleaner	
224	94729	Screw—Air Cleaner Sem		663	94620	Screw—Hex. Hd.	
284	94704	Screw—Air Cleaner		676	396903	Deflector—Muffler	
300	491413	Muffler—Exhaust		725	223023	Shield—Muffler	
346	93705	Screw—Hex. Head		836	94786	Screw—Hex. Hd.	
445	493910	Cartridge—Air Cleaner		872	281105	Cover—Air Cleaner	
467	493903	Knob—Air Cleaner		875	496368	Body—Air Cleaner	
★537	281106	Gasket—Air Cleaner		★883	272293	Gasket—Exhaust Pipe	
613	93927	Screw—Hex. Hd.					

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 496622.

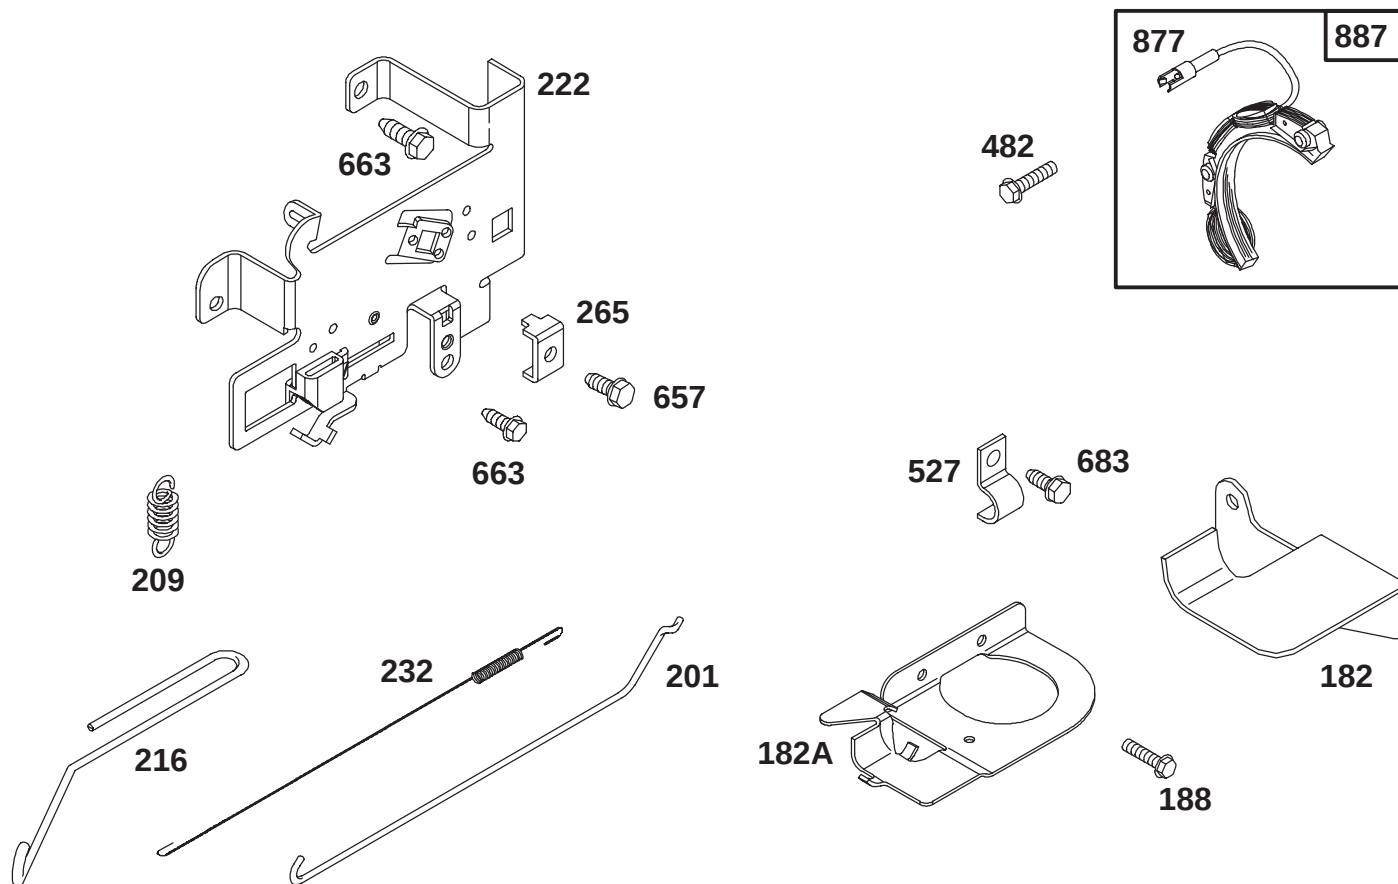

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28B707-0126-01


Ref. No.	Part No.	Description	No. Used
182	223925	Bracket—Fuel Tank (R.H.)	
182A	223866	Bracket—Fuel Tank (L.H.)	
188	94480	Screw—Sem	
201	262767	Link—Governor	
209	260871	Spring—Governor	
216	262766	Link—Choke	
222	495611	Plate—Gov. Control	
232	262785	Spring—Governor Link	

Ref. No.	Part No.	Description	No. Used
265	221535	Clamp—Casing	
482	93621	Screw—Sem	
527	221428	Clamp	
657	93496	Screw—Sem	
663	94620	Screw—Hex. Hd.	
683	93572	Screw—Hex. Hd.	
877	393814	Diode Assy.	
887	391529	Alternator	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 496622.

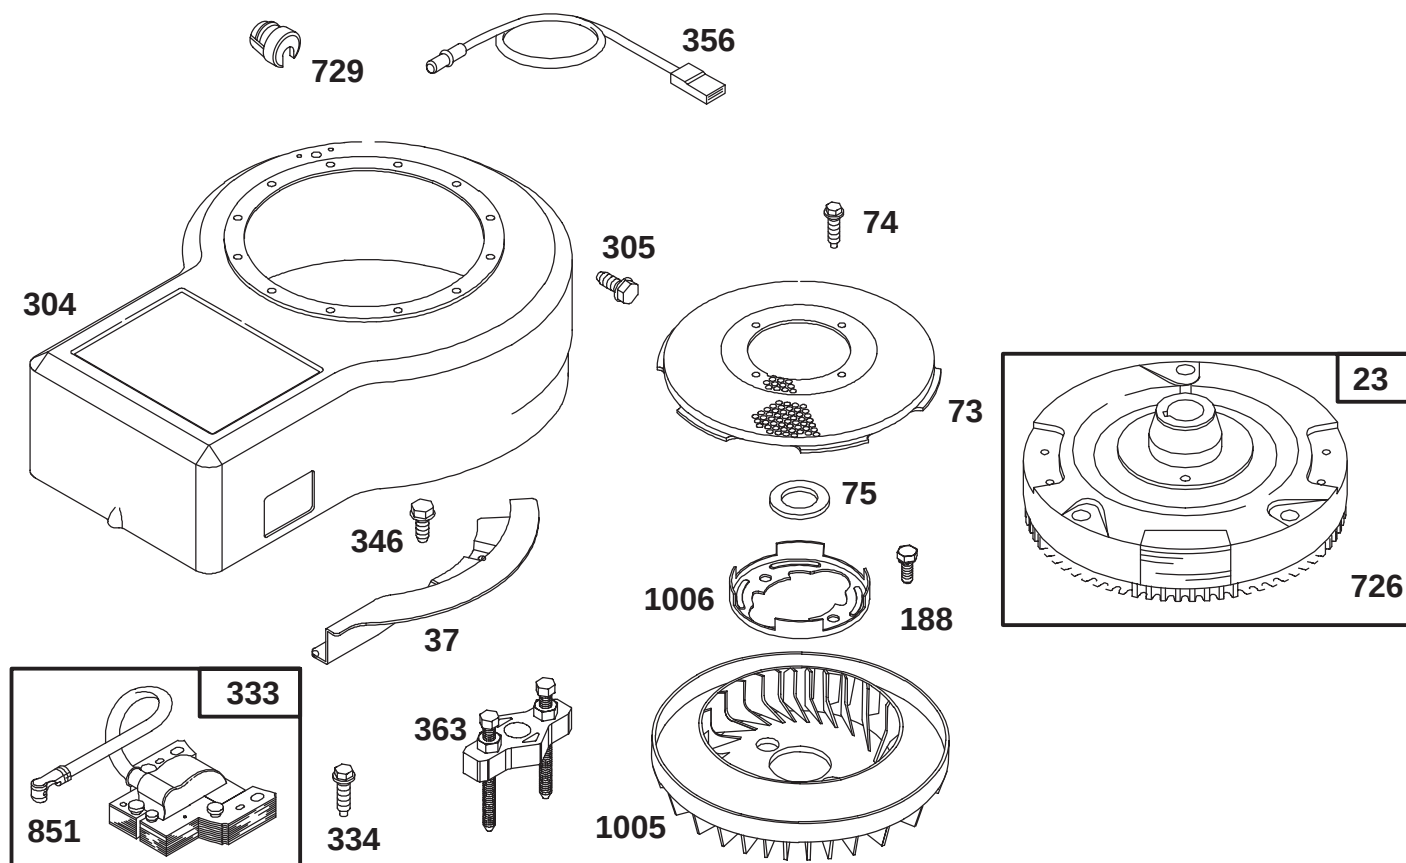

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28B707-0126-01


Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel	
37	224502	Guard—Flywheel	
73	224518	Screen—Rotating	
74	93758	Screw—Sem	
75	224061	Washer—Spring	
188	94627	Screw—Sem	
304	496319	Housing—Blower	
333	492341	Armature—Magnet	
334	94731	Screw—Sem	

Ref. No.	Part No.	Description	No. Used
346	93705	Screw—Hex. Head	
356	494328	Wire—Ground	
363	19203	Puller—Flywheel	
726	392134	Gear—Ring (Includes Mtg. Hardware)	
729	281159	Clip—Lead Wire	
851	493880	Terminal—Ignition Cable	
1005	280687	Fan—Flywheel	
1006	224413	Retainer—Fan	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 496622.

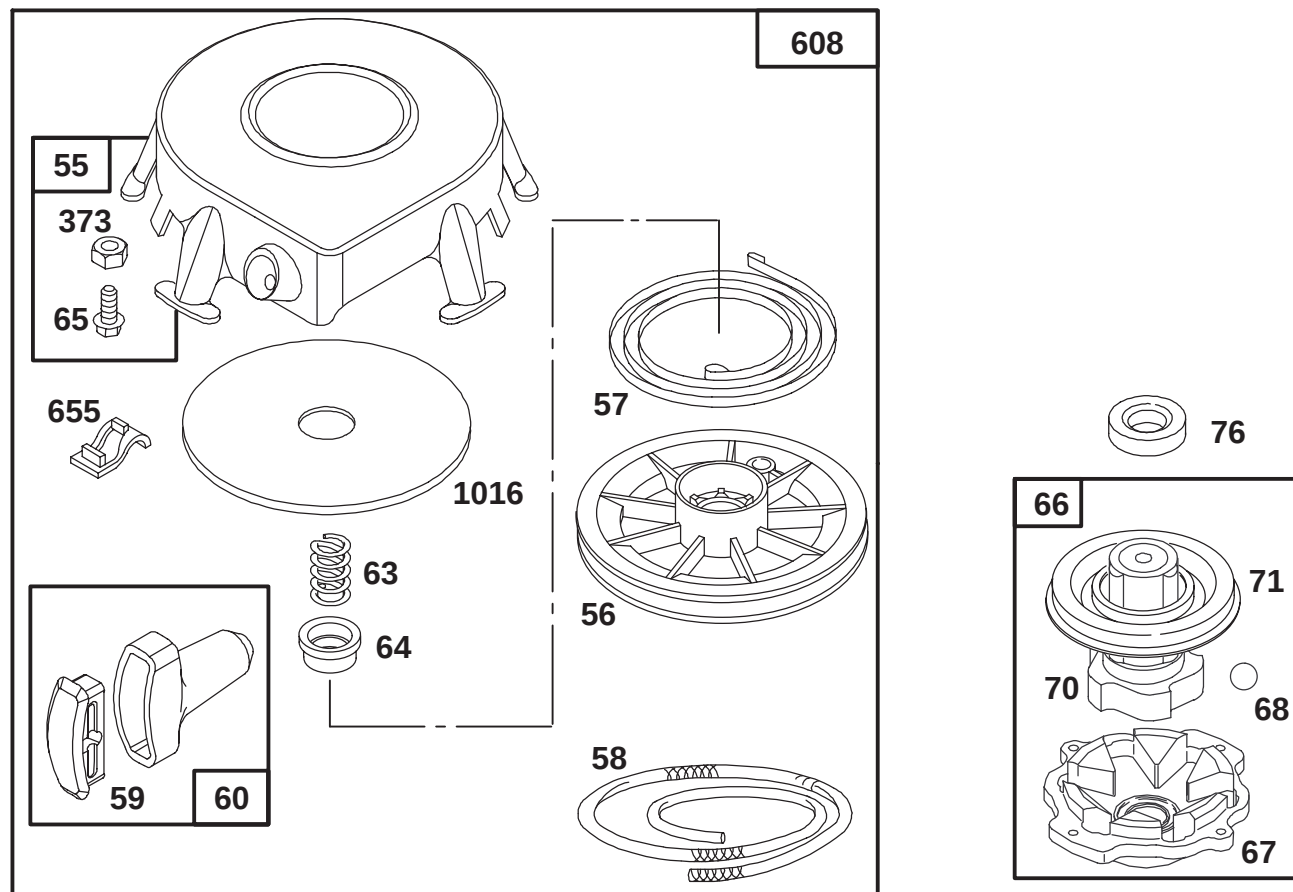

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28B707-0126-01


Ref. No.	Part No.	Description	No. Used
55	393576	Housing—Rewind Starter (Includes 63" Rope)	
56	295871	Pulley—Rewind Starter	
57	490179	Spring—Rewind Starter	
58	66884	Rope—Starter	
59	490653	Insert—Starter Handle	
60	490652	Handle—Rewind Starter	
63	260414	Spring—Ratchet	
64	230543	Adapter— Spring	
65	94128	Screw—Sem	

Ref. No.	Part No.	Description	No. Used
66	495970	Clutch—Starter	
67	394897	Housing—Clutch	
68	63770	Ball—Clutch	
70	298799	Ratchet—Clutch	
71	394506	Washer—Retainer	
76	68238	Washer—Sealing	
373	92987	Nut—Hex.	
608	390391	Starter Assy.—Rewind	
655	222598	Anchor—Spring	
1016	490817	Spacer	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 496622.

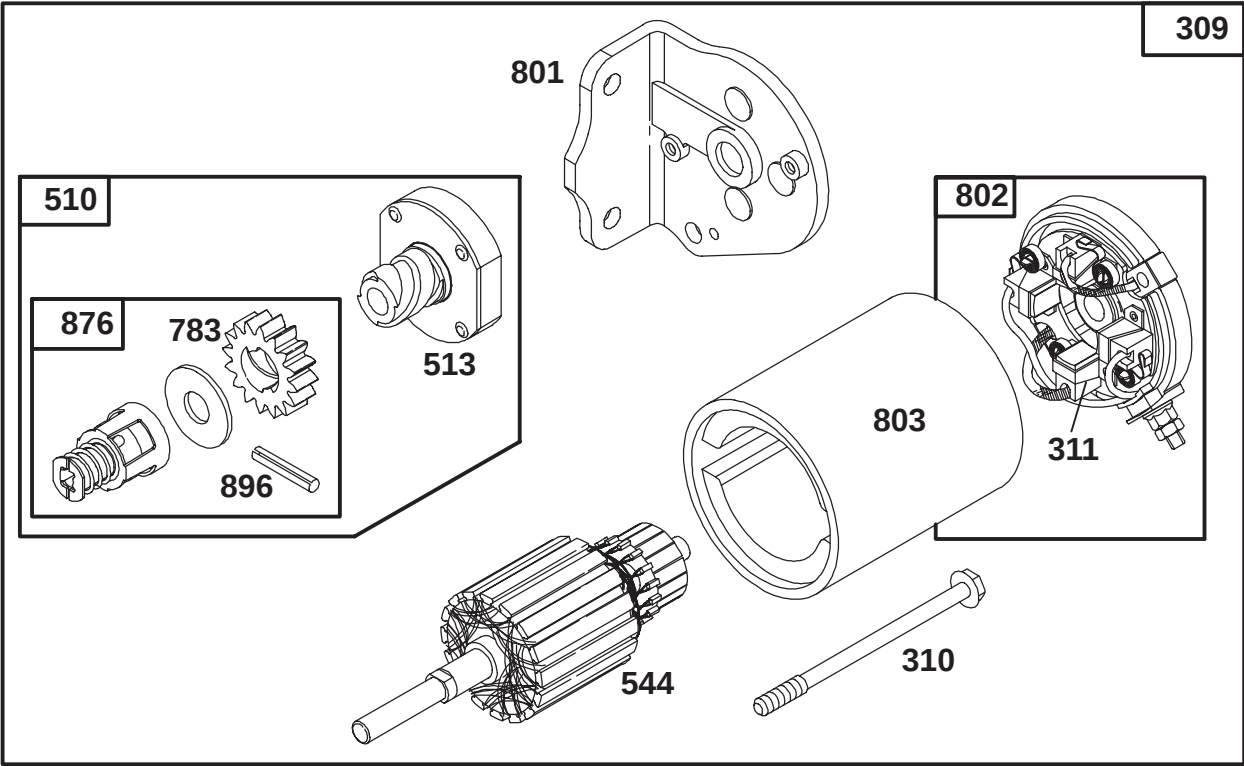

Assemblies include all parts shown in frames.




ENGINE BRIGGS & STRATTON MODEL 28B707-0126-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor—Starter	
310	94003	Bolt—Thru	
311	395538	Brush Set—Starter	
510	495878	Drive—Starter	
513	398003	Clutch Assembly	
544	390837	Armature—Starter	

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	
801	394856	Cap—Drive	
802	395537	Cap—End	
803	398159	Housing—Starter	
876	495877	Kit—Spring	
896	94288	Pin—Roll	

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 496622.

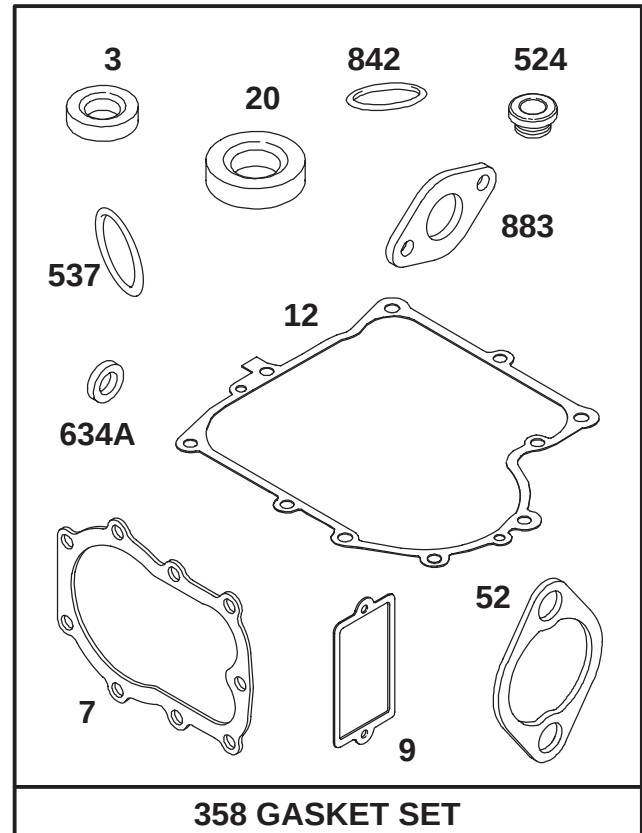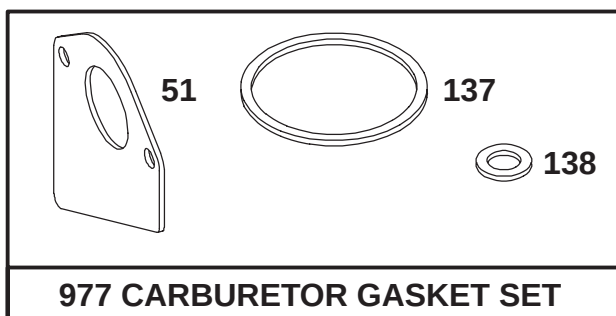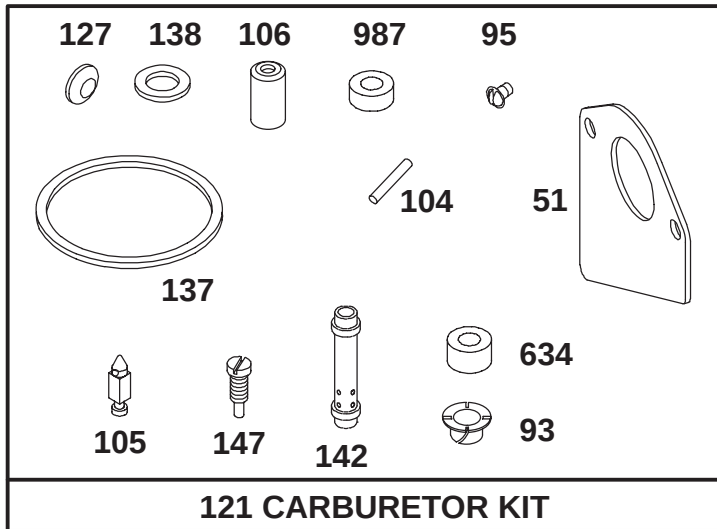

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28B707-0126-01

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	
★7	271866	Gasket—Cylinder Head	
★9	27803	Gasket—Valve Cover	
★12	271916	Gasket—Crankcase (.015" Thick)	
★	271997	Gasket—Crankcase (.005" Thick)	
★	271996	Gasket—Crankcase (.009" Thick)	
★20	291675	Seal—Oil	
●◆51	272465	Gasket—Carburetor	
★52	272554	Gasket—Carburetor	
●93	281346	Bushing—Throttle Shaft	
●95	94098	Screw—Throttle	
●104	231789	Pin—Float Hinge	
●105	231855	Valve—Inlet Needle	
●106	231854	Inlet Valve Seat	
121	496622	Carburetor Kit	

Ref. No.	Part No.	Description	No. Used
●127		Plug—Welch (Sold in Kit Only).	
●◆137	281165	Gasket—Float Bowl	
●◆138	281164	Washer—Float Bowl	
●142	496519	Nozzle—Carburetor	
		Note: 496623 Nozzle—Carb. (High Altitude)	
		Includes:	
		281164 Washer—Float Bowl	
●147	231794	Pilot—Jet	
358	494241	Gasket Set	
★524	281370	Seal—Filler Tube	
★537	281106	Gasket—Air Cleaner	
●634	281168	Seal—Choke Shaft	
★634A	491323	Seal—Governor	
★842	270920	Seal—Oil Filler Cap	
★883	272293	Gasket—Muffler	
977	494385	Carburetor Gasket Set	
●987	281166	Seal—Throttle	

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.

- Included in Carburetor Kit—Part No. 496622.

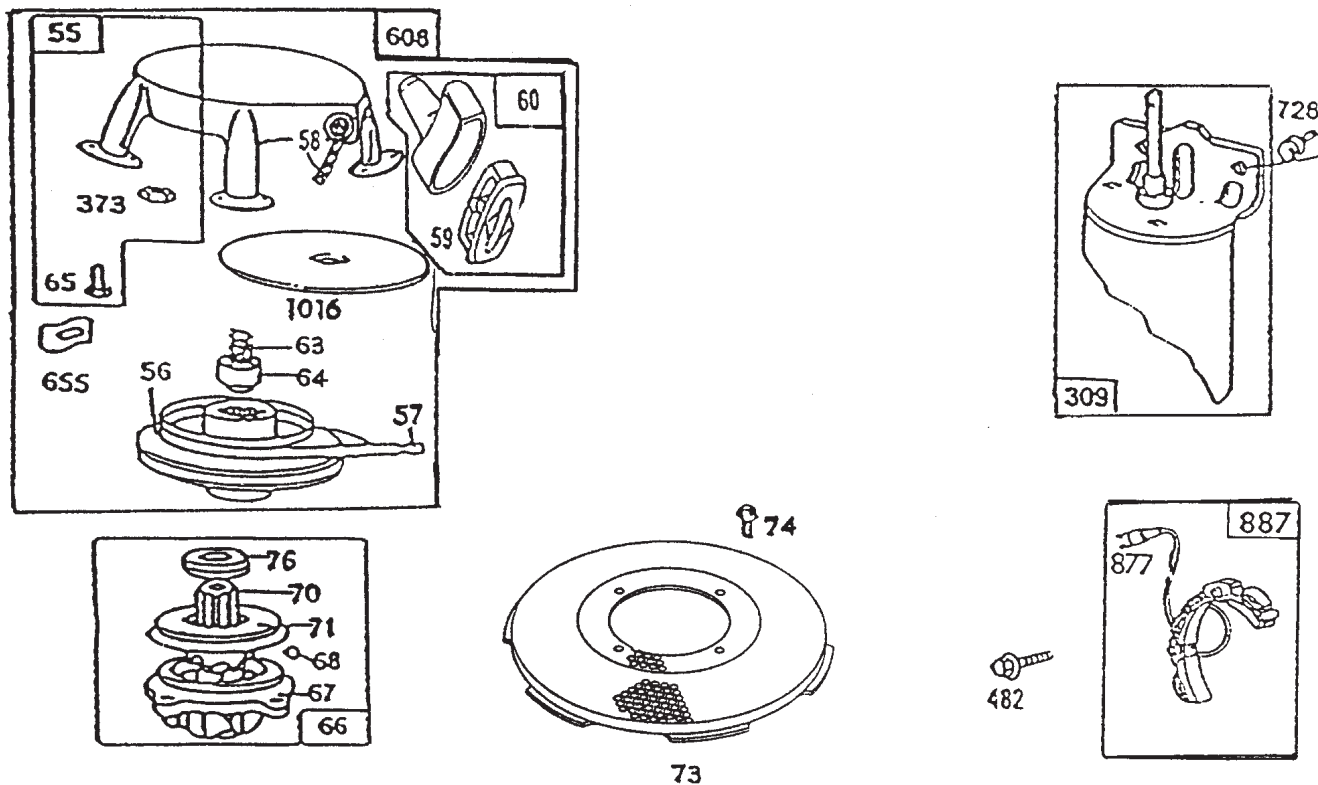


Assemblies include all parts shown in frames.

C-0787

REWIND — BRIGGS & STRATTON NO. 286707-0119-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
55	393576	Housing — Rewind Starter (Includes 63" Rope)	1	73	223859	Screen — Rotating	1
56	295871	Pulley — Rewind Starter	1	74	93042	Screw — Sem	1
57	490179	Spring — Rewind Starter	1	76	68238	Washer — Ratchet, Sealing	1
58	66884	Rope — Rewind Starter (63" Long)	1	309		Motor — Starting (12 Volt) See Illustrated Pages for Replacement Parts for Starter Motor.	1
59	490653	Insert — Starter Handle	1	373	92987	Nut — Hex.	1
60	490652	Handle — Rewind Starter	1	482	93621	Screw — Sem	1
63	260414	Spring — Ratchet	1	608	390391	Starter Assembly — Rewind	1
64	230543	Adapter — Ratchet Spring	1	655	222598	Anchor — Spring	1
65	94128	Screw — Hex. Hd. Sem	1	728	94627	Screw — Sem	1
66	399671	Clutch Assembly — Rewind Starter	1	877	393814	Diode and Connector Assy. Alternator (D.C.)	1
67	394897	Housing — Starter Clutch	1	887	391529	Stator Assembly Alternator (D.C.)	1
68	63770	Ball — Clutch	1	1016	490817	Spacer	1
70	298799	Ratchet — Rewind Starter Clutch	1				
71	221653	Washer — Retainer	1				

BRIGGS & STRATTON MODEL NO. 286707-0119-01

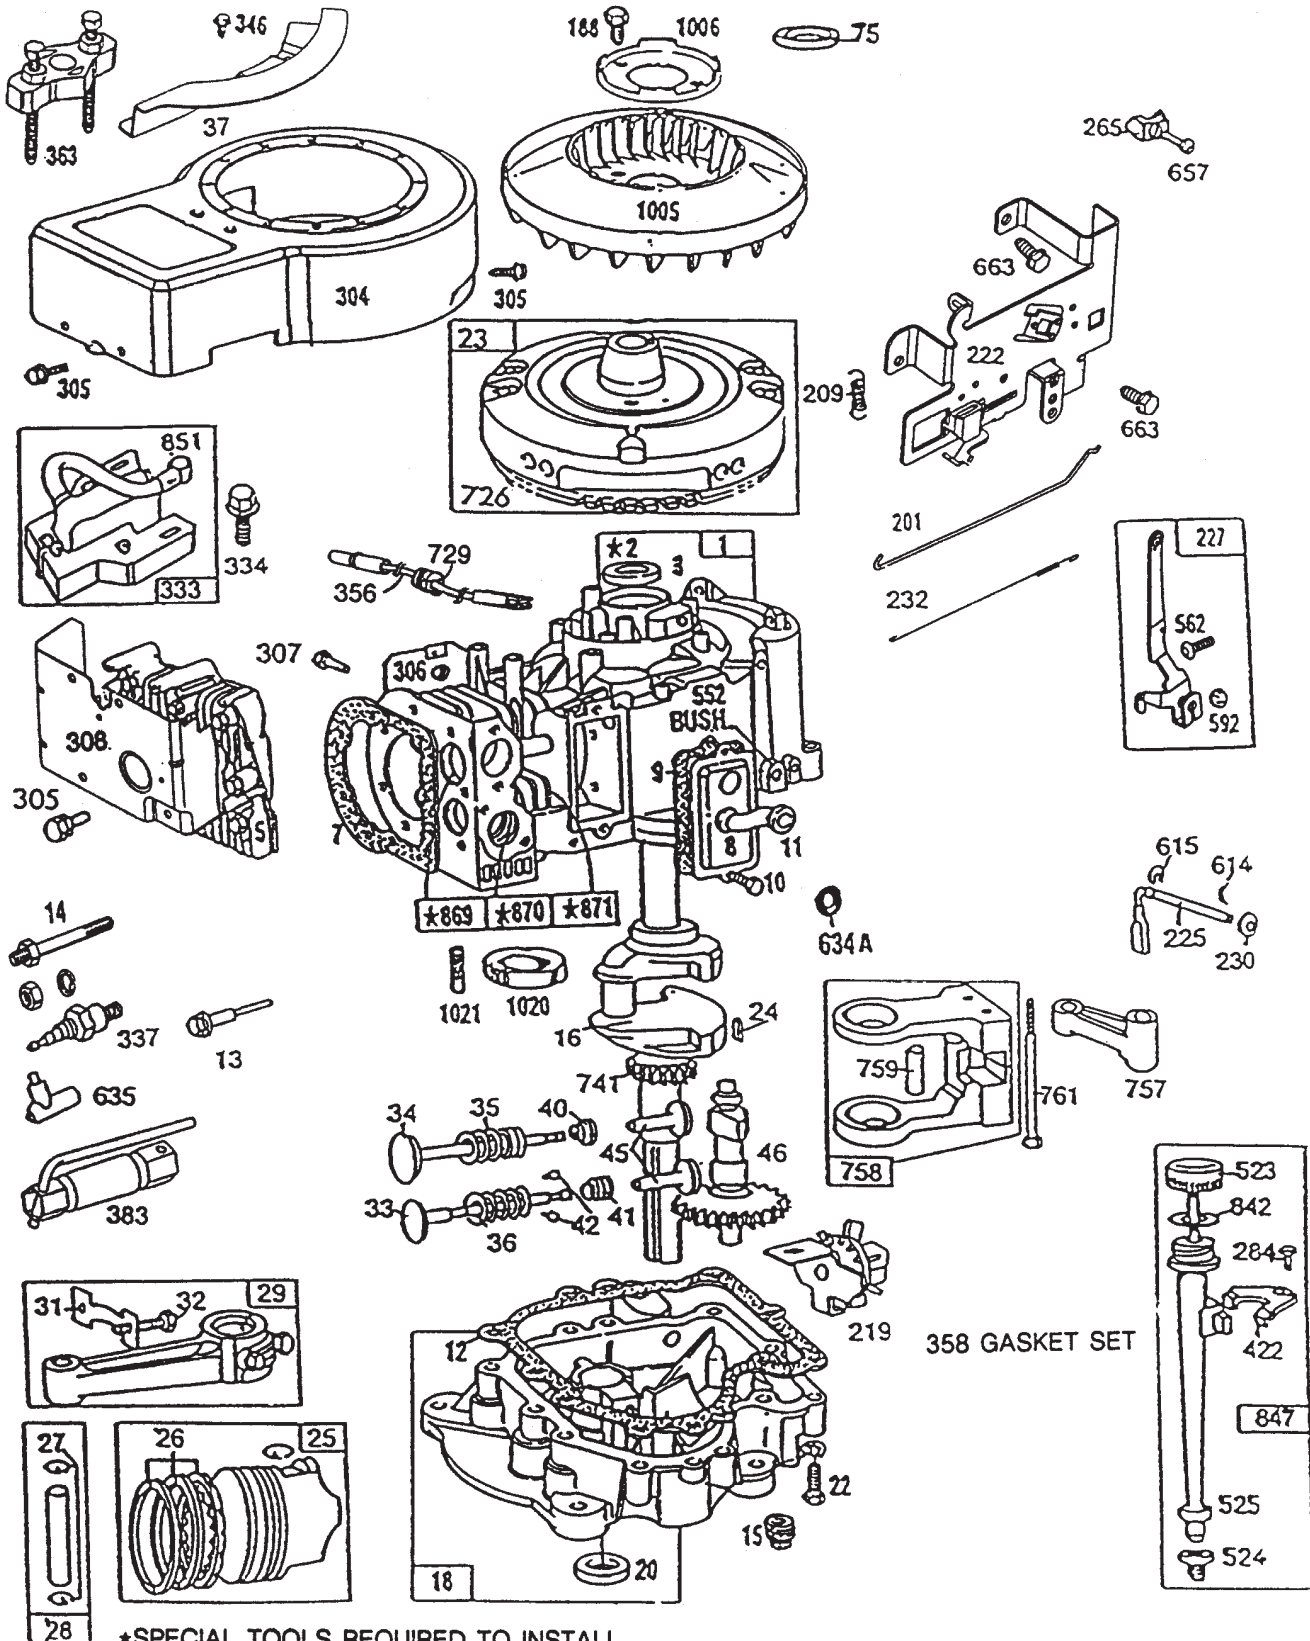

BRIGGS & STRATTON MODEL NO. 286707-0119-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	490450	Cylinder Assembly	1	31	222299	Lock – Conn. Rod Screw	1
2	399265	Bearing – Cylinder Note: Requires Special Tools for Installation.	1	32	92909	Screw – Connecting Rod	1
3	391086	Seal – Oil	1	33	262246	Valve – Exhaust	1
5	494240	Head – Cylinder	1	34	262247	Valve – Intake	1
7	271866	Gasket – Cylinder Head	1	35	65906	Spring – Intake Valve	1
8	391406	Breather Assembly	1	36	26828	Spring – Exhaust Valve	1
9	27803	Gasket – Valve Cover	1	37	223752	Guard – Flywheel	1
10	94621	Screw – Sem	1	40	221596	Retainer – Intake Valve	1
11	280100	Tube – Breather	1	41	292260	Rotocoil – Exhaust Valve	1
12	271916	Gasket – Crankcase Cover (1/64" Thick)	1	42	93630	Retainer – Exhaust Valve Rotocoil	1
*	271997	Gasket – Crankcase Cover (.005" Thick)	1	45	262248	Tappet – Valve	1
*	271996	Gasket – Crankcase Cover (.009" Thick)	1	46	212897	Gear – Cam	1
13	94622	Screw – Cylinder Head (3" Long)	1	75	224061	Washer – Spring	1
14	93781	Stud – Cylinder Head Uses: 90366 Lockwasher, 93203 Nut 231109 Spacer	1	188	93535	Screw – Sem Fan Mount. (3/4" Long)	1
15	94239	Plug – Oil Drain	1	201	262767	Link – Governor	1
16	490466	Crankshaft Note: Order Part Number 94196 For Timing Gear Key	1	209	260871	Spring – Governor	1
18	494238	Base – Engine	1	219	490815	Oil Slinger, Governor Gear, & Bracket Assembly	1
20	291675	Seal – Oil	1	222	493896	Plate – Governor Control	1
22	94624	Screw – Base Mtg. Sem	1	225	231058	Crank – Governor (1/4" Dia.)	1
23	492326	Flywheel & Ring Gear Assy. Magnet	1	227	493935	Lever Assembly – Governor	1
24	222698	Key – Flywheel	1	230	222450	Washer – Governor Crank (1/4" Inside Diameter)	1
25	394661	Piston Assy. – Standard	1	232	262785	Spring – Governor Link	1
	394662	Piston Assy. – .010" O.S.	1	265	221535	Clamp – Casing	1
	394663	Piston Assy. – .020" O.S.	1	284	94419	Screw – Clamp Mounting	1
	394664	Piston Assy. – .030" O.S.	1	304	494269	Housing Blower (Red)	1
		PISTON RING SETS Note: For Chrome Ring Set Standard Size, Order No. 392331		305	94619	Screw – Blower Housing Mounting, Sem	1
26	391780	Ring Set – Piston Std.	1	306	224545	Shield – Cylinder	1
	391781	Ring Set – Piston .010" O.S.	1	307	94623	Screw – Cylinder Shield Mounting, Sem	1
	391782	Ring Set – Piston .020" O.S.	1	308	491490	Cover – Cylinder Head	1
	391783	Ring Set – Piston .030" O.S.	1	333	492341	Armature – Magnet	1
27	260924	Lock – Piston Pin	1	334	93381	Screw – Armature Mtg. Sem	1
28	299691	Pin Assy. – Piston Std.	1	337	802592	Plug – Spark	1
	391286	Pin Assy. – Piston .005" O.S.	1	346	93705	Screw – Hex. Hd.	1
29	490348	Rod Assembly – Conn. Note: For Connecting Rod with .020" Undersize Crankpin Bore, Order No. 490469.	1	356	494328	Wire Assembly	1
				358	494241	Gasket Set	1
				363	19203	Puller – Flywheel	1
				383	89838	Wrench – Spark Plug	1
				422	224390	Clamp – Oil Filler Tube	1
				523	490327	Cap & Dipstick – Oil Filler	1
				524	68838	Seal – Filler Tube	1
				525	280741	Tube – Oil Filler	1
				552	231597	Bushing – Governor Crank (1/4" Inside Diameter)	1
				562	92613	Bolt – Governor Lever	1

BRIGGS & STRATTON MODEL NO. 286707-0119-01


Ref. No.	Part No.	Description	No. Used
592	231082	Nut – Hex. (10–24)	1
614	93306	Cotter – Hair Pin	1
615	93307	Retainer – Ring	1
634A	491323	Seal – Governor	1
635	66538	Elbow – Spark Plug	1
657	93496	Screw – Sem	1
663	94620	Screw – Hex. Hd.	1
726	392134	Gear – Ring (Incl. Mounting Parts)	1
729	281159	Clip – Lead Wire	1
741	262135	Gear – Timing	1
757	212359	Link – Counterweight	1
758	399891	Counterweight Assembly	1
759	298909	Pin – Counterweight	1
761	93875	Screw – Counterweight	1
842	270920	Seal – Oil Filler Cap	1

Ref. No.	Part No.	Description	No. Used
847	490474	Fill Group – Oil	1
8 51	221798	Terminal – Ignition Cable	1
869	261463	Seat – Intake Valve (Std.)	1
870	213316	Seat – Exhaust Valve (Std.)	1
871	261961	Guide – Exhaust Valve	1
		Note: 231218 Guide – Intake Valve (Brass) See Repair Manual	
1005	280687	Fan – Flywheel	1
1006	223726	Retainer – Fan	1
1020	262243	Eccentric	1
1021	94160	Pln – Eccentric	1
*	494241	Kit – Gasket Set (Incl. Ref. #3, 7, 9, 12, 20, & 634A)	1

*Not Illustrated

BRIGGS & STRATTON MODEL NO. 286707-0119-01

121 CARBURETOR OVERHAUL KIT

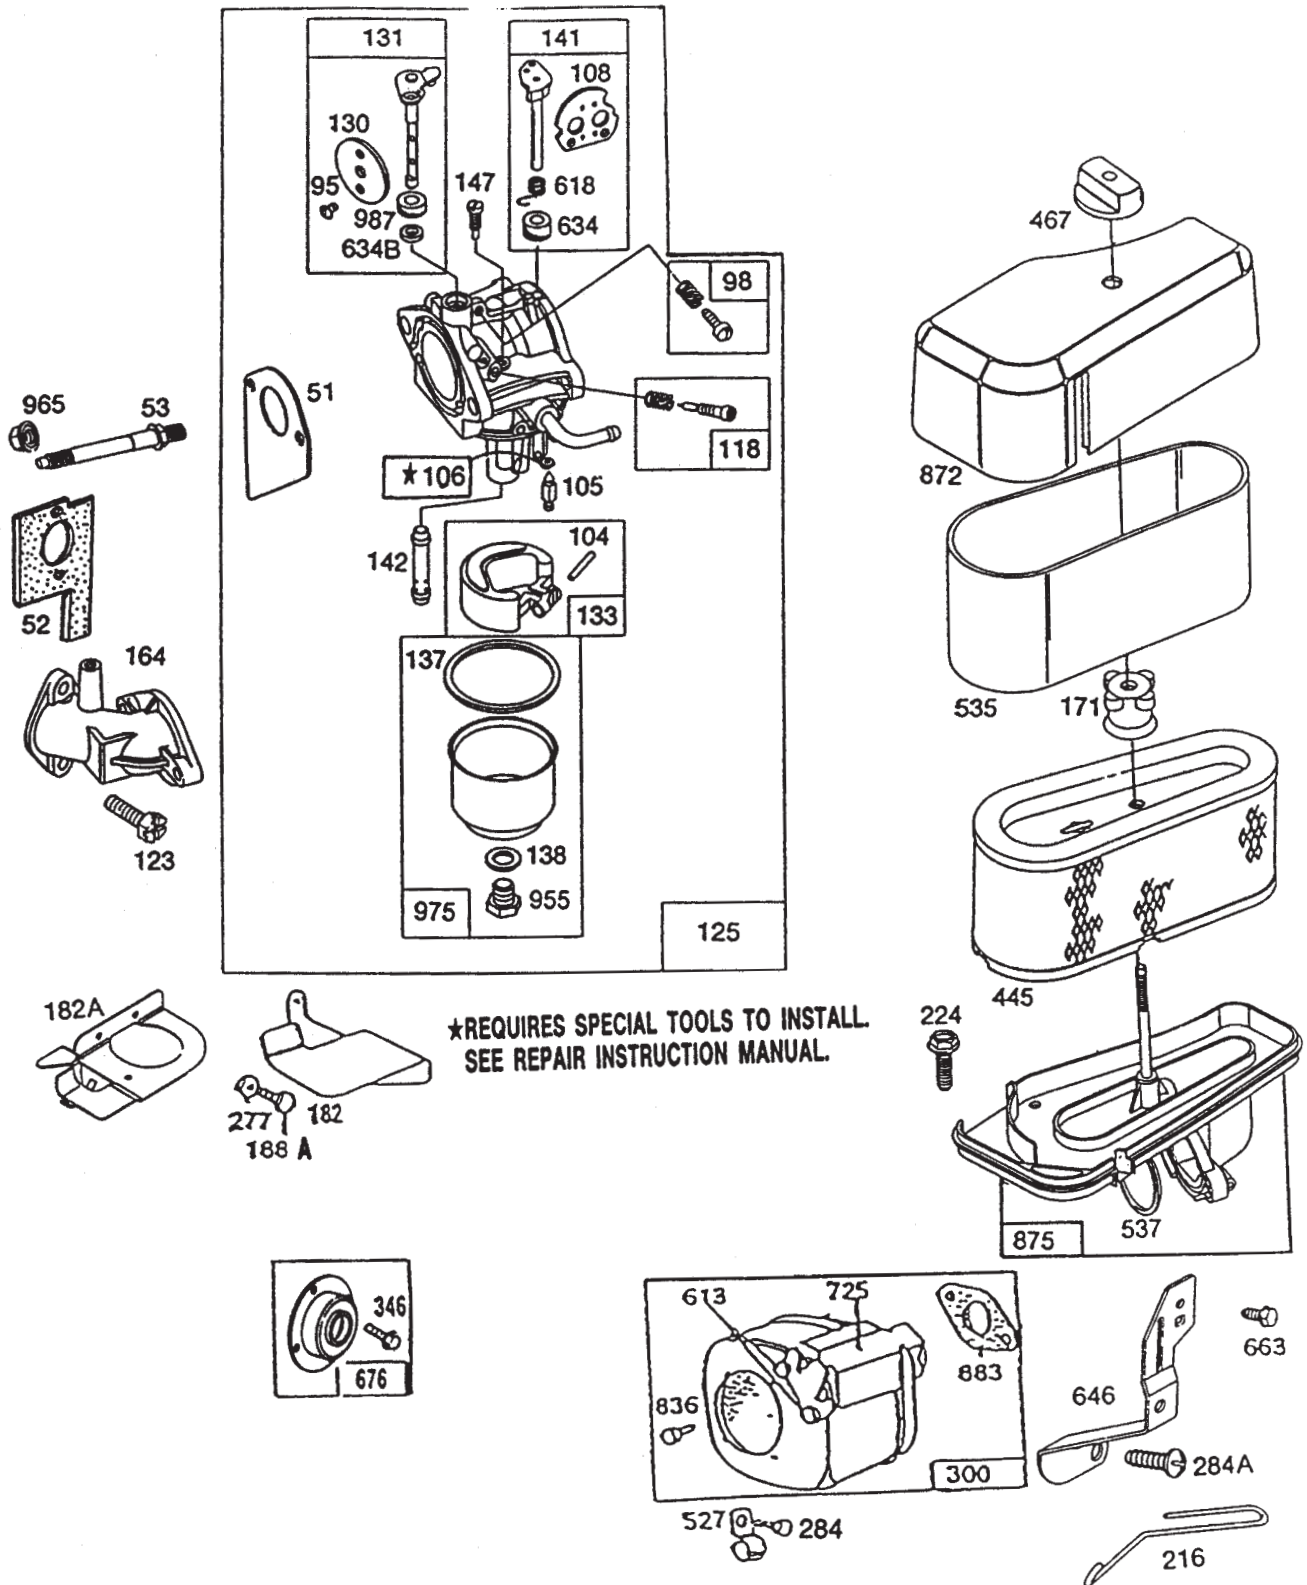


Assemblies include all parts shown in frames.

BRIGGS & STRATTON MODEL NO. 286707-0119-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
51	272465	Gasket – Carburetor (Carburetor to Elbow)	1	224	94513	Screw – Air Cleaner, Sem	1
52	270872	Gasket – Carburetor (Elbow to Cylinder)	1	277	22776	Washer – Flat	1
53	94637	Stud – Carburetor, Mount.	1	284	94419	Screw – Clamp Mounting	1
95	94098	Screw – Throttle	1	284A	94326	Screw – Air Cleaner	1
98	494382	Screw – Idle Speed	1	300	491413	Muffler – Exhaust	1
104	231789	Pin – Float Hinge	1	346	93705	Screw – Hex. Head	1
105	231790	Valve Assembly	1	445	493909	Cartridge – Air Cleaner	1
		Inlet Needle	1	467	493903	Knob – Air Cleaner	1
106	281169	Inlet Valve Seat	1	527	221428	Clamp	1
108	224540	Valve – Choke	1	535	272403	Element – Air Cleaner	1
118	494383	Valve – Needle	1	537	281106	O-Ring – Air Cleaner	1
121	494384	Kit – Carburetor Overhaul	1	613	93927	Screw – Hex. Head	1
123	94616	Screw – Elbow Mounting	1	618	262803	Spring – Choke Return	1
125	494502	Carburetor Assembly	1	634	281168	Seal – Choke Shaft	1
130	224539	Valve – Throttle	1	634B	281167	Washer – Throttle Shaft	1
131	494379	Shaft & Lever, Throttle	1	646	224546	Brace – Air Cleaner	1
133	494381	Float – Carburetor	1	663	94620	Screw – Hex. Head	1
137	281165	Gasket – Float Bowl	1	676	396903	Deflector – Muffler	1
138	281164	Washer – Float Bowl Screw	1	725	223023	Shield – Muffler	1
141	494380	Shaft & Lever – Choke	1	836	94513	Screw – Hex. Head	1
142	494537	Nozzle Jet – Carburetor	1	872	281104	Cover – Air Cleaner	1
		Note: 494499 High Altitude Kit Includes: 231796 Pilot Jet (High Altitude)		875	494237	Body – Air Cleaner	1
		281164 Seat-Bowl Screw		883	270917	Gasket – Exhaust Pipe	1
		494386 Nozzle High Altitude		955	94642	Screw – Fuel Bowl	1
147	231794	Pilot – Jet	1	965	94108	Locknut – Air Cleaner, Mtg.	1
164	213819	Carburetor j- Elbow	1	975	494378	Bowl Ass'y – Carburetor	1
171	281051	Nut – Air Cleaner Mounting	1	977	494385	Kit – Gasket, Carburetor	1
182	223925	Bracket – Fuel Tank (R.H.)	1	987	281166	Seal – Throttle Shaft	1
182A	223866	Bracket – Fuel Tank (L.H.)	1	*	494384	Kit – Overhaul, Carburetor (Incl. Ref. #51, 95, 104, 105, 106, 137, 138, 142, 147, 634, 634B & 987)	1
188A	93634	Screw – Sem (7/8" Long)	1	*	494385	Gasket Set – Carburetor (Incl. Ref. #51, 137 & 138)	1
216	262766	Link – Choke	1	*	494241	Gasket Set (Incl. Ref. #537 & 883)	1

*Not Illustrated

309

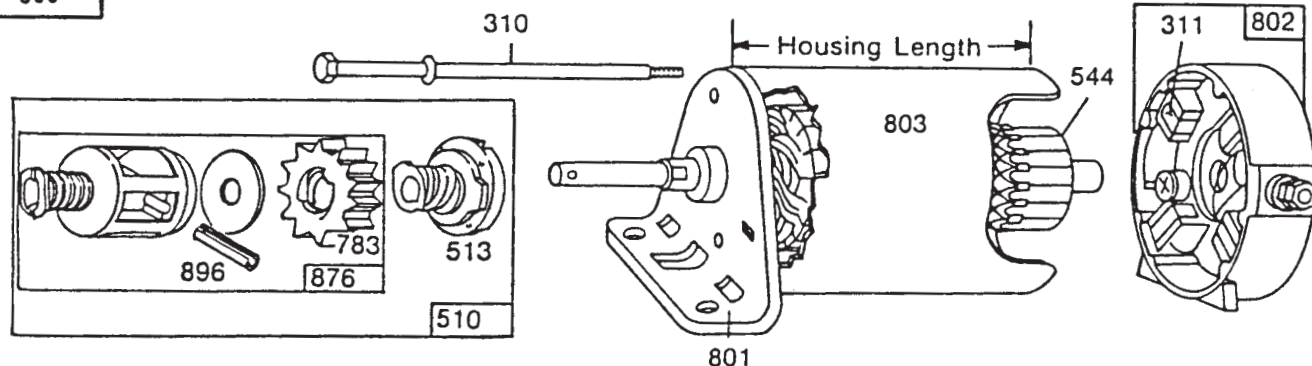

NOTE:

To identify Briggs & Stratton manufactured starter motors, measure the housing length.

C-0784

STARTER — BRIGGS & STRATTON

Ref. No.	Part No.	Description	No. Used
309	394805	Motor & Drive Assembly	1
309	494198	Motor & Drive Assembly (Model 286707-0119-01)	1
310	94003	Thru Bolt Assembly	1
310	94004	Thru Bolt Assembly (Model 286707-0119-01)	1
311	395538	Brush Assembly	1
510	490421	Drive Assembly (Incl. Ref. #513, 783, 876 & 896)	1
513	398003	Clutch Assembly	1
544	390837	Armature Assembly	1
544	391160	Armature Assembly (Model 286707-0119-01)	1

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	394856	Drive End Cap Assembly (Incl. Brush Set)	1
802	395537	End Cap Assembly Commutator	1
803	398159	Housing Assembly (3-21/32" Long)	1
803	494205	Housing Assembly (4-3/8" Long) (Model 286707-0119-01)	1
876	490467	Retainer & Pin	1
896	94288	Roll Pin	1

TORO PART NUMBER INDEX

3318–163

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
110513	Bearing	2 2 4	56-7130	Tower – Front	1 4 1
147665	Screw – Phillips Hd.	6 1 2	56-7140	Tower – Rear	1 8 1
147665	Screw – Phillips Head	4 1 2	56-7170	Guide – Shaft, Steering	1 6 1
3-6498	Washer – Thrust	2 5 5	56-7180	Cover – Front	2 30 1
7-0036	Key – Square	11 24 2	56-7240	Bracket – Retaining, Spring	3 3 1
12-5820	Pulley – Idler	9 35 1	56-7400	Arm – Lever, H.O.C.	5 24 1
12-8819	Loose Parts	1 * 1	56-7430	Pin – Support	12 22 2
12-8829	Loose Parts	1 * 1	56-7470	Bracket – Rack, Steering	2 33 1
12-9020	Retainer – Belt	9 34 1	56-7500	Shaft – Steering	2 31 1
14-9999	Deck – Cutting, Recycler	13 49 1	56-7520	Bushing – Sector	2 22 1
19-1470	Bolt – Shoulder	5 20 1	56-7530	Bolt – Shoulder	2 20 1
23-0660	Switch – Ignition	4 10 1	56-7570	Rod – Engagement	3 15 1
26-0671	Bolt – Blade	13 39 1	56-7650	Tube – Pivot	3 14 1
27-9080	Bearing – Flange	2 15 4	56-7670	Cable – Battery, Positive	9 21 1
28-0380	Spacer – Axle, Front	2 24 1	56-7670	Cable – Positive	6 17 1
28-0540	Bolt – Shoulder	5 8 1	56-7710	Hold Down – Battery	8 26 1
28-2480	Washer	11 15 4	56-7720	Post – Battery	8 21 1
28-2480	Washer	2 43 2	56-7810	Decal – Brake, Parking	1 9 1
28-7350	Post – Pivot	13 16 1	57-4060	Retainer – Front	9 16 1
28-7890	Module – Interlock	6 11 1	57-4070	Retainer – Rear	9 20 1
28-8010	Spring – Torsion	13 10 1	57-9940	Spring – Brake	11 17 1
28-8070	Lanyard	13 55 1	60-9730	Guide – Belt	13 26 2
28-8080	Boot – Terminal	8 22 1	61-9760	Wheel – Deck	13 32 2
28-8130	Pin – Chute, Locking	13 54 1	61-9780	Cap – Hub	11 14 2
38-1420	Switch – Interlock	7 2 1	61-9780	Cap – Hub	2 44 2
40-6230	Spring – Torsion	13 51 1	62-3760	Screw – Cap Hex. Hd.	9 27 1
44-5930	Assembly – Deflector	11 1	62-3930	Spring – Extension	5 5 1
44-5930	Assembly – Deflector	13 11 1	62-3930	Spring – Extension	3 6 1
47-0010	Arm – Suspension, Front	2 13 2	62-4300	Pad – Battery	8 25 1
47-0540	Pedal	3 19 2	62-5480	Isolator – Seat	7 11 4
47-0550	Bracket – Brake, Pedal	3 17 1	62-5490	Support – Fuel Line	9 10 1
47-0560	Bracket – Clutch, Pedal	3 12 1	63-5540	Base – Seat	7 3 1
47-0570	Spacer – Pedal	3 16 3	63-5670	Tube – Bumper, Seat Rod	7 7 1
47-0590	Spindle – L.H.	2 * 1	63-5830	Link – Suspension, Deck	5 16 2
47-0600	Spindle – R.H.	2 4 1	63-8360	Key	4 6 1
47-0610	Tie Rod – Adjustable	2 34 1	65-2920	Pad – Pedal, Foot	3 5 2
47-0700	Bearing – Flange	2 27 1	65-5670	Bolt – Shoulder	5 21 1
47-0760	Support – Axle, Front	2 11 1	65-5670	Screw – Shoulder	8 34 1
47-0770	Shaft – Pivot, Pedal	3 8 1	66-1340	Decal – Danger	13 34 1
47-0780	Retainer – Shaft	3 9 1	66-6740	Cover – Shaft, Steering	4 2 1
47-0930	Footrest – R.H.	1 22 1	68-3650	Decal – Warning, Deflector	13 13 1
47-0940	Footrest – L.H.	1 16 1	76-1090	Decal – Instructions	4 23 1
47-0960	Spring – Compression	13 3 1	76-1340	Decal – Made In USA	5 26 1
47-1140	Retainer – Spring, Top	13 2 2	76-1540	Arm – Suspension R.H.	12 16 1
47-1180	Bracket – Engagement	13 1 1	76-1550	Arm – Suspension L.H.	12 * 1
47-1200	Shaft – Adjusting	13 4 1	76-1560	Spacer	12 13 2
47-1290	Brake – Parking	1 10 1	76-1560	Spacer – Split	12 20 2
47-1840	Bracket – Height-of-Cut	5 13 1	79-0370	Decal – Danger	1 7 1
47-1850	Lever – Height-of-Cut	5 6 1	80-2310	Bracket – Bell Crank Mount	5 2 1
47-1910	Solenoid	6 12 1	80-2320	Bracket – H.O.C., Engage	5 15 1
47-2060	Bracket – Brake, Parking	1 19 1	80-2330	Link – Bell Crank	8 35 1
47-2961	Hose – Fuel Line	9 9 1	80-2340	Bracket – Pivot, Inner	8 6 1
47-2981	Hose – Fuel Line	9 9 1	80-2350	Pivot – Outer	8 4 1
49-3242	Assy. – Wheel, Steering	4 5 1	80-2360	Crank – Bell, Deck Engage	5 22 1
54-3090	Cable – Battery Ground	9 37 1	80-2370	Shaft W.A. – Pivot	8 5 1
54-9220	Decal – Caution, Deflector	13 12 1	80-2400	Lever W.A. – Engage	8 2 1
55-3570	Cap – Fuel	9 14 1	80-2430	Axle – Front	2 18 1
56-2540	Tube – Vent, Battery	8 37 1	80-2450	Rack – Steering	2 19 1
56-6590	Bolt – Wheel	13 33 2	80-2460	Tie Rod – Fixed	2 * 1
56-7030	Body – Spindle	13 44 1	80-2530	Assembly – Brake	13 50 1
56-7050	Tank – Fuel	9 15 1	80-2550	Pad – Brake	13 6 1
56-7070	Spring – Torsion, Clutch	3 11 1	80-2560	Plate – Deck, Brake Mtg.	13 47 1
56-7080	Spring – Torsion, Brake	3 18 1	80-2570	Pin – Clevis	13 5 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
80-2580	Rod - Adjusting	13 52 1	218-461	Nut - Lock	4 7 1
80-2600	Battery - 12 Volt	8 24 1	218-560	Cap - Battery	8 28 6
80-2620	Rod - Base, Seat	7 8 1	231-116	Tire	2 42 2
80-2630	Kicker - 32"	13 29 4	231-117	Tire	11 10 2
80-4350	Shaft - Spindle	13 41 1	232-27	Stem - Valve	11 16 2
80-4370	Shield - Bearing	13 42 1	232-39	Tube - Inner	11 11 2
80-4390	Spacer - Hardened	13 43 1	232-44	Tube - Inner	2 2 2
80-4430	Blade - Recycler	13 40 1	233-25	Knob	4 13 1
80-4470	Pulley	13 22 1	233-48	Knob	8 1 2
80-4490	Ring - Deck	13 48 4	233-48	Knob	5 19 1
80-4570	Stiffener - Blade	13 37 1	237-27	Valve Stem w/Cap	2 41 2
82-6150	Assy. - Cover, Discharge	13 14 1	237-143	O-Ring	8 27 2
82-6270	Decal - Recycler	13 35 1	2411-32	Ball Joint	8 31 1
83-7010	Brace - Cover, Rear	13 17 1	2412-68	Clamp	4 17 2
83-7020	Spacer - Bearing	13 25 1	2412-68	Clamp - Wire	7 4 1
88-3950	Assembly - Seat	7 1 1	2412-98	Clamp - Hose	9 8 2
88-9730	Rim	11 12 2	251-297	Bearing	13 21 2
88-9800	Cover - Gate, Shift	6 24 1	251-297	Bearing	13 21 2
88-9930	Switch - Micro, Short	6 4 1	257-11	Washer	8 18 1
88-9931	Switch - Micro	4 24 1	283-2	Pin - Clevis	2 16 2
92-0860	Frame	6 14 1	283-2	Pin - Clevis	13 45 2
92-0861	Frame - Rear	12 8 1	283-42	Pin - Clevis	12 18 2
92-0862	Transaxle	11 8 1	283-52	Pin - Clevis	1 20 1
92-0864	Standbar	12 5 1	288-10	Cap - Pipe	9 22 1
92-0865	Support - Axle	12 9 2	289-19	Nipple - Pipe	9 23 1
92-0866	Body W.A. - Seat Support	6 8 1	302-5	Fitting - Grease	2 1 2
92-0870	V-Belt - Traction	11 4 1	302-49	Fitting - Grease	2 17 2
92-0871	Rod - Traction	9 29 1	321-4	Screw - Cap Hex. Hd.	13 8 1
92-0872	Rod - Brake	11 18 1	321-4	Screw - Cap Hex. Hd.	3 10 1
92-0873	Pulley - Engine	9 24 1	321-4	Screw - Cap Hex. Hd.	5 11 4
92-0874	Pulley	11 7 1	321-4	Screw - Cap Hex. Hd.	8 12 2
92-0875	V-Belt	13 24 1	321-4	Screw - Cap Hex. Hd.	6 13 2
92-0876	Guard - Front	2 37 1	321-4	Screw - Cap Hex. Hd.	1 21 2
92-0877	Panel - Seat Base, R.H.	6 21 1	322-3	Screw - Cap Hex. Hd.	13 30 15
92-0878	Panel L.H. - Base, Seat	5 9 1	322-5	Screw - Cap Hex. Hd.	3 2 1
92-0879	Spring	9 1 1	322-5	Screw - Cap Hex. Hd.	12 6 15
92-0880	Arm - Shift, Transaxle	11 23 1	322-5	Screw - Cap Hex. Hd.	6 6 2
92-0881	Bracket W.A. - Traction	9 4 1	322-5	Screw - Cap Hex. Hd.	3 7 2
92-0883	Plate - Mounting, Idler	9 2 1	322-5	Screw - Cap Hex. Hd.	8 8 4
92-0884	Lever W.A. - Shaft	8 10 1	322-5	Screw - Cap Hex. Hd.	13 9 12
92-0887	Support - Shift, Lower	8 19 1	322-5	Screw - Cap Hex. Hd.	2 9 8
92-0888	Support - Shift, Upper	8 14 1	322-5	Screw - Cap Hex. Hd.	5 12 2
92-0889	Link - Shift	11 1 1	322-5	Screw - Cap Hex. Hd.	1 14 10
92-0890	Control - Throttle	4 15 1	322-5	Screw - Cap Hex. Hd.	4 16 8
92-0891	Shaft W. A. - Shift	8 16 1	322-6	Screw - Cap Hex. Hd.	13 20 1
92-0894	Spring - Torsion	8 11 1	322-7	Screw - Cap Hex. Hd.	9 28 1
92-0895	Gate - Shift	6 3 1	322-12	Screw - Cap Hex. Hd.	12 10 4
92-0896	Retainer - Spring	8 29 1	322-14	Screw - Cap Hex. Hd.	12 11 2
92-0897	Spacer	12 1 1	322-50	Screw - Cap Hex. Hd.	12 4 1
92-0898	Guide - Belt	12 2 1	323-9	Screw - Cap Hex. Hd.	9 32 1
92-0899	Guide - Belt, Lower	11 21 1	323-9	Screw - Hex Hd. Cap	12 21 2
92-1751	Decal - Shift Pattern	6 2 1	323-14	Screw - Hex Hd. Cap	12 17 2
92-7243	Decal - Control Panel	5 27 1	325-6	Screw - Cap Hex. Hd.	2 8 1
92-7244	Decal - Deck Engage	4 9 1	329-4	Screw - Cap Hex. Hd.	11 3 1
92-7245	Decal - H.O.C.	4 21 1	3218-1	Nut - Jam	6 18 2
92-7974	Tread - Foot R.H.	1 * 1	3218-1	Nut - Jam	9 38 1
92-7975	Tread - Foot L.H.	1 15 1	3219-7	Nut - Hex. Hd.	13 23 1
92-7985	Decal - L.H. (Model 70080)	5 10 1	3220-2	Nut - Hex. Jam	2 7 1
92-7986	Decal - L.H. (Model 70120)	5 10 1	3230-18	Bolt - Carriage	2 32 2
92-7987	Decal - Recycler	1 3 1	3253-3	Washer - Lock	11 2 1
92-7990	Insert - Wheel, Steering	4 4 1	3253-3	Washer - Lock	6 16 4
92-9521	Decal - Recycler	13 35 1	3253-3	Washer - Lock	9 18 2
217-80	Rim	2 3 2	3253-6	Washer - Lock	9 26 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3318-163

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3254-2	Washer - Lock, Int. Tooth	9 5 4	3296-29	Nut - Lock	5 1 7
3254-2	Washer - Lock, Int. Tooth	11 20 1	3296-29	Nut - Lock	1 2 14
3254-5	Washer - Lock, Int. Tooth	4 8 1	3296-29	Nut - Lock	12 3 17
3256-14	Washer - Flat	6 9 1	3296-29	Nut - Lock	3 4 3
3256-22	Washer - Flat	8 13 2	3296-29	Nut - Lock	6 5 2
3256-22	Washer - Flat	1 18 2	3296-29	Nut - Lock	9 6 2
3256-22	Washer - Flat	9 30 1	3296-29	Nut - Lock	2 10 8
3256-23	Washer - Flat	12 7 12	3296-29	Nut - Lock	11 19 1
3256-23	Washer - Flat	6 7 2	3296-29	Nut - Lock	13 19 24
3256-23	Washer - Flat	1 13 8	3296-29	Nut - Lock	4 19 4
3256-23	Washer - Flat	5 17 4	3296-29	Nut - Lock	8 32 4
3256-23	Washer - Flat	4 18 7	3296-39	Nut - Lock	9 3 1
3256-23	Washer - Flat	2 23 6	3296-39	Nut - Lock	12 19 1
3256-23	Washer - Flat	13 27 4	3296-39	Nut - Lock	13 31 2
3256-23	Washer - Flat	8 33 2	3296-42	Nut - Lock	6 15 2
3256-24	Washer - Flat	1 11 1	3296-42	Nut - Lock	8 15 2
3256-24	Washer - Flat	12 15 4	3296-42	Nut - Lock	1 17 2
3256-24	Washer - Flat	9 33 1	3296-42	Nut - Lock	5 18 1
3256-25	Washer - Flat	9 25 1	3296-47	Nut - Lock	12 12 1
3256-26	Washer - Flat	5 25 1	3296-59	Nut - Lock	12 14 3
3256-27	Washer - Flat	3 13 3	3296-59	Nut - Lock	13 15 1
3256-35	Washer - Flat	1 1 4	32103-2	Nut - Wing	13 18 1
3256-49	Washer - Flat	13 56 1	32103-12	Nut - Wing	8 20 1
3256-57	Washer - Flat	9 36 1	32103-22	Nut - Wing	8 23 2
3257-23	Key	11 6 1	32104-76	Screw - Self Tap Acorn Hd.	1 5 9
3272-6	Pin - Cotter	3 1 3	32104-76	Screw - Self-Tapping	4 14 2
3272-6	Pin - Cotter	5 4 2	32107-11	Nut - Square	9 17 2
3272-6	Pin - Cotter	1 12 1	32120-47	Ring - Retaining	8 7 1
3272-6	Pin - Cotter	2 14 2	32120-64	Ring - Retaining	11 5 1
3272-6	Pin - Cotter	11 22 1	32121-9	Pin - Roll	2 28 1
3272-6	Pin - Cotter	9 31 1	32121-16	Pin - Roll	8 17 1
3272-6	Pin - Cotter	13 36 2	32121-25	Pin - Roll	8 3 1
3272-12	Pin - Cotter	2 45 2	32121-78	Pin - Roll	4 3 1
3272-16	Pin - Cotter	11 9 1	32121-78	Pin - Roll	8 9 1
3274-51	Screw - Hex. Socket Hd.	9 19 2	32122-14	Screw - Truss, Phillips Hd.	13 38 8
3290-134	Screw - Machine	6 10 1	32128-20	Nut - Flange Hd.	7 5 4
3290-191	Nut - Speed	6 23 2	32128-21	Nut - Lock, Flange Hd.	2 25 1
3290-282	Rivet	13 7 2	32128-23	Nut - Lock, Flange Hd.	2 26 1
3290-282	Rivet	13 53 2	32144-4	Screw - Special	2 21 2
3290-307	Pin - Cotter, Hair	7 9 1	32144-14	Screw	9 12 2
3290-354	Nut - Double	6 20 1	32144-14	Screw - Thread Forming	2 38 2
3290-354	Nut - Double	4 22 1	32144-112	Screw - Sems	6 22 2
3290-378	Tie - Cable	7 6 1	32151-48	Ring - Retaining	11 13 2
3290-413	Washer - Belleville	5 7 8	32151-48	Ring - Retaining, External	2 35 2
3290-465	Washer - Belleville	13 57 1	32151-61	Ring - Retaining	5 14 2
3290-496	Nut - Retainer	13 28 4			
3296-2	Nut - Lock	6 19 1			
3296-4	Nut - Lock	8 30 1			
3296-4	Nut - Lock	2 36 4			
3296-8	Nut - Lock	2 12 1			
3296-8	Nut - Lock	5 23 1			
3296-8	Nut - Lock	8 36 1			
3296-8	Nut - Lock	13 46 1			

OPTIONAL EQUIPMENT

Easy Empty Bagging Kit Model No. 79095
Twin Bag Bagger Kit Model No. 79085
Tire Chains Part No. 23-2340
Hi-Sail Bagging Blade Part No. 33-4750
Wet Grass Bagging Kit Part No. 38-5730

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]