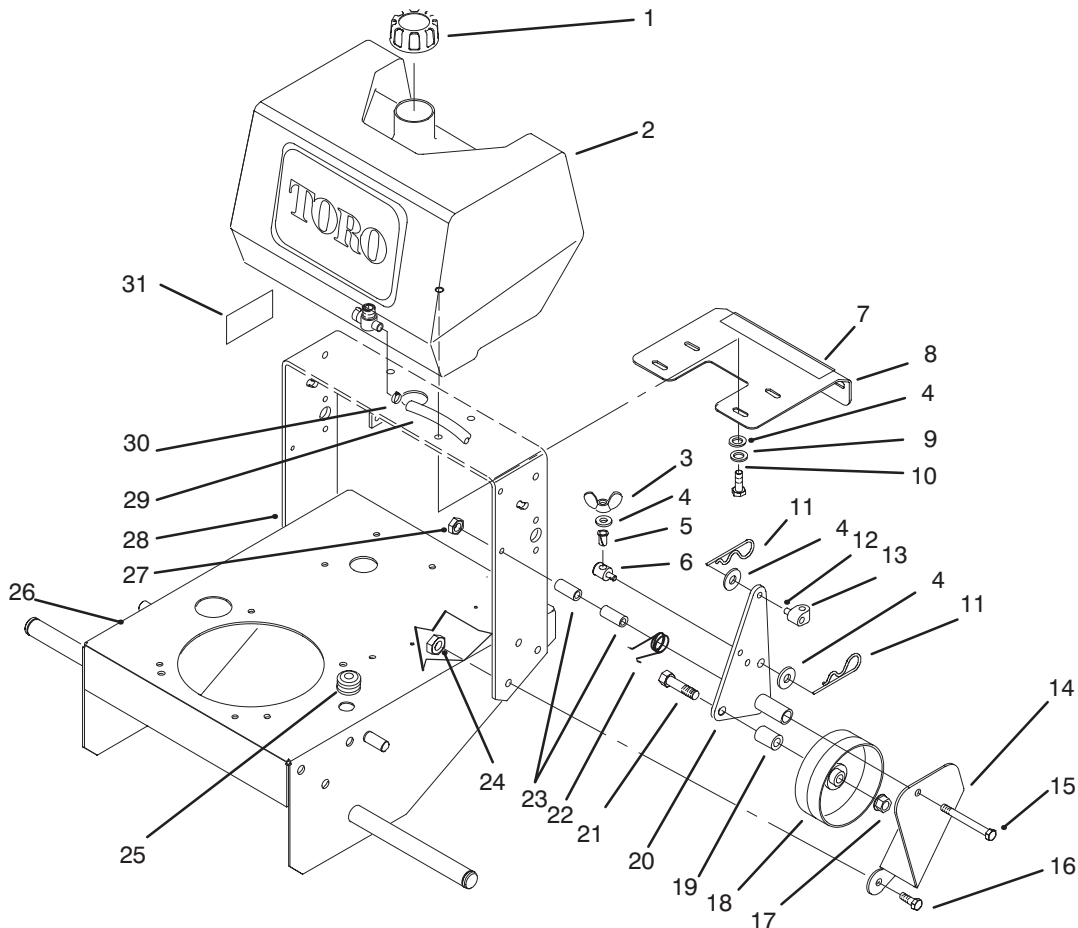



TORO®**MODEL NO. 30182-690001
THRU 790001 & UP****PARTS
CATALOG****ProLine MID-SIZE TRACTION UNIT
16 HP Briggs & Stratton, Gear Drive****FRAME, FUEL TANK AND WHEEL DRIVE IDLER**

Ref. No.	Part No.	Description	No. Used
1	55-3570	Cap - Fuel Tank	1
2	95-2802	Tank - Fuel (Incl. Fuel Valve)	1
3	32103-25	Nut - Wing	2
4	3256-23	Washer - Flat	10
5	52-2890	Bushing	2
6	68-9690	Fitting - Rod	2
7	82-7750	Decal - Ground Speed	1
8	66-7400	Plate - Control	1
9	3253-4	Washer - Lock	4
10	322-4	Screw - Hex. Hd.	4
11	3290-307	Pin - Cotter	4
12	283-6	Pin - Clevis	2
13	74-0521	Fitting - Rod	2
14	67-6380	Bracket - Support L.H.	1
*	67-6370	Bracket - Support R.H.	1
15	323-16	Screw - Hex. Hd.	2
16	323-7	Screw - Hex. Hd.	6

Ref. No.	Part No.	Description	No. Used
17	3296-23	Nut - Lock	2
18	95-2800	Pulley - Idler	2
19	95-2801	Spacer - Pulley	2
20	74-0220	Idler - Bracket L.H.	1
*	74-0230	Idler - Bracket R.H.	1
21	51-4450	Screw - Leveler	2
22	51-4380	Spring - Torsion L.H.	1
*	51-4370	Spring - Torsion R.H.	1
23	74-0040	Spacer - Pivot Idler	4
24	3296-39	Nut - Lock	6
25	237-124	Grommet	1
26	95-2816	Frame	1
27	3296-39	Nut - Lock	2
28	74-0360	Frame - Rear	1
28	47-2980	Hose - Fuel	1
30	2412-98	Clamp - Fuel line	2
31	95-2814	Decal - Fuel Shut Off	1

*Not Illustrated


© The TORO Company -1995 / 1996 Rev.
All Rights Reserved

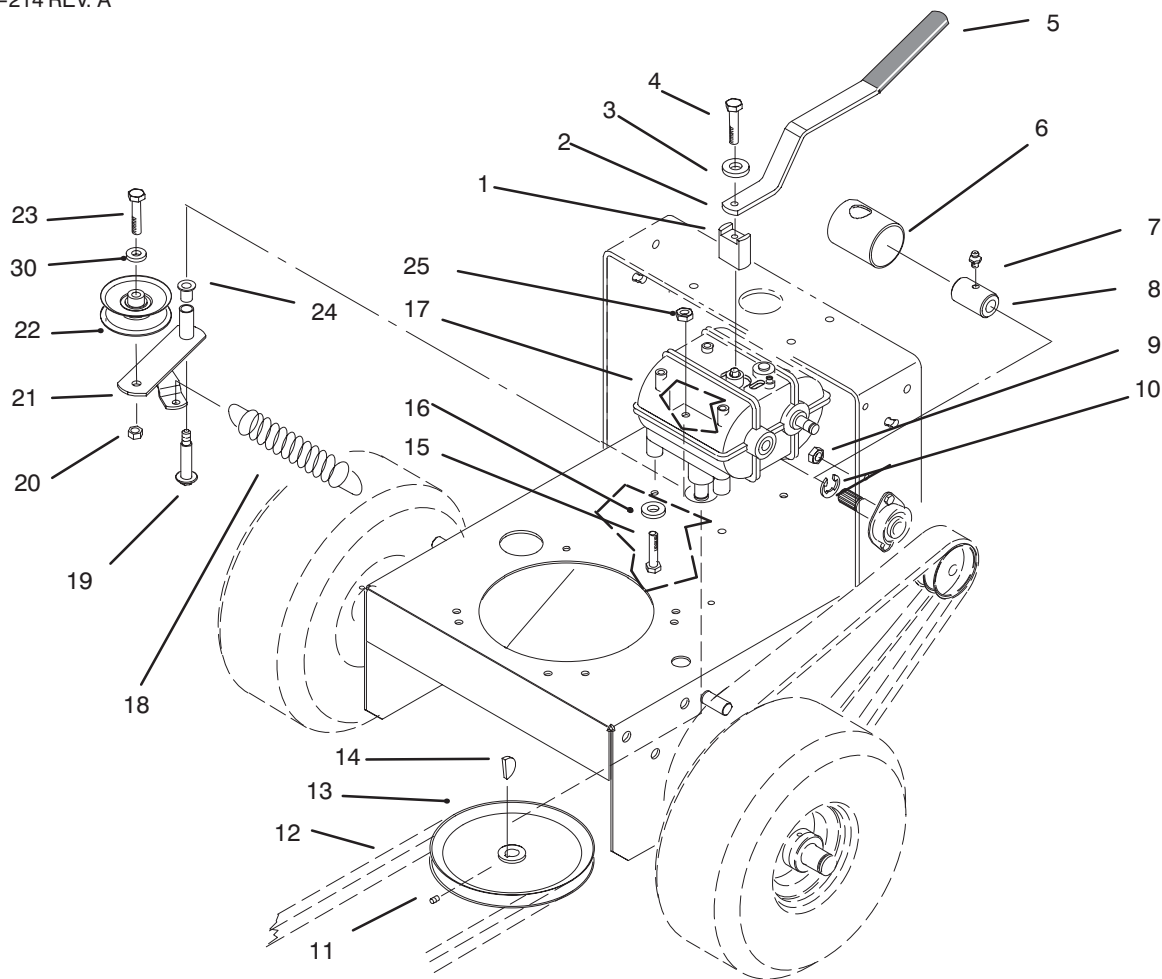

TRANSMISSION, IDLER, DRIVE PULLEYS & DRIVE BELT

Ref. No.	Part No.	Description	No. Used
1	72-2190	Mount — Shift Lever	1
2	74-0320	Lever — Shift	1
3	7-5461	Spacer	1
4	329-10	Screw — Hex. Hd.	1
5	47-1970	Grip — Engagement	1
6	51-4220	Guard — Coupler	2
7	302-5	Fitting — Grease	2
8	51-4260	Coupler	1
9	3296-42	Nut — Lock	4
10	32120-64	Ring — Retaining	3
11	3241-5	Screw — Socket Hd.	1
12	26-9671	"V" Belt — Traction	1
13	51-4190	Pulley — Driven	1

Ref. No.	Part No.	Description	No. Used
15	322-2	Screw — Hex. Hd.	4
16	3253-4	Washer — Lock	4
17	74-0610	Transmission	1
18	68-2190	Spring — Extension	18
19	27-6230	Bolt	1
20	3296-39	Nut — Lock	1
21	16-7509	Lever — Idler (Incl. Ref.#24)	1
22	62-4540	Pulley — Idler	1
23	323-9	Screw — Hex. Hd.	1
24	256-155	Bushing	2
25	3296-6	Nut	1
30	3256-24	Washer	1

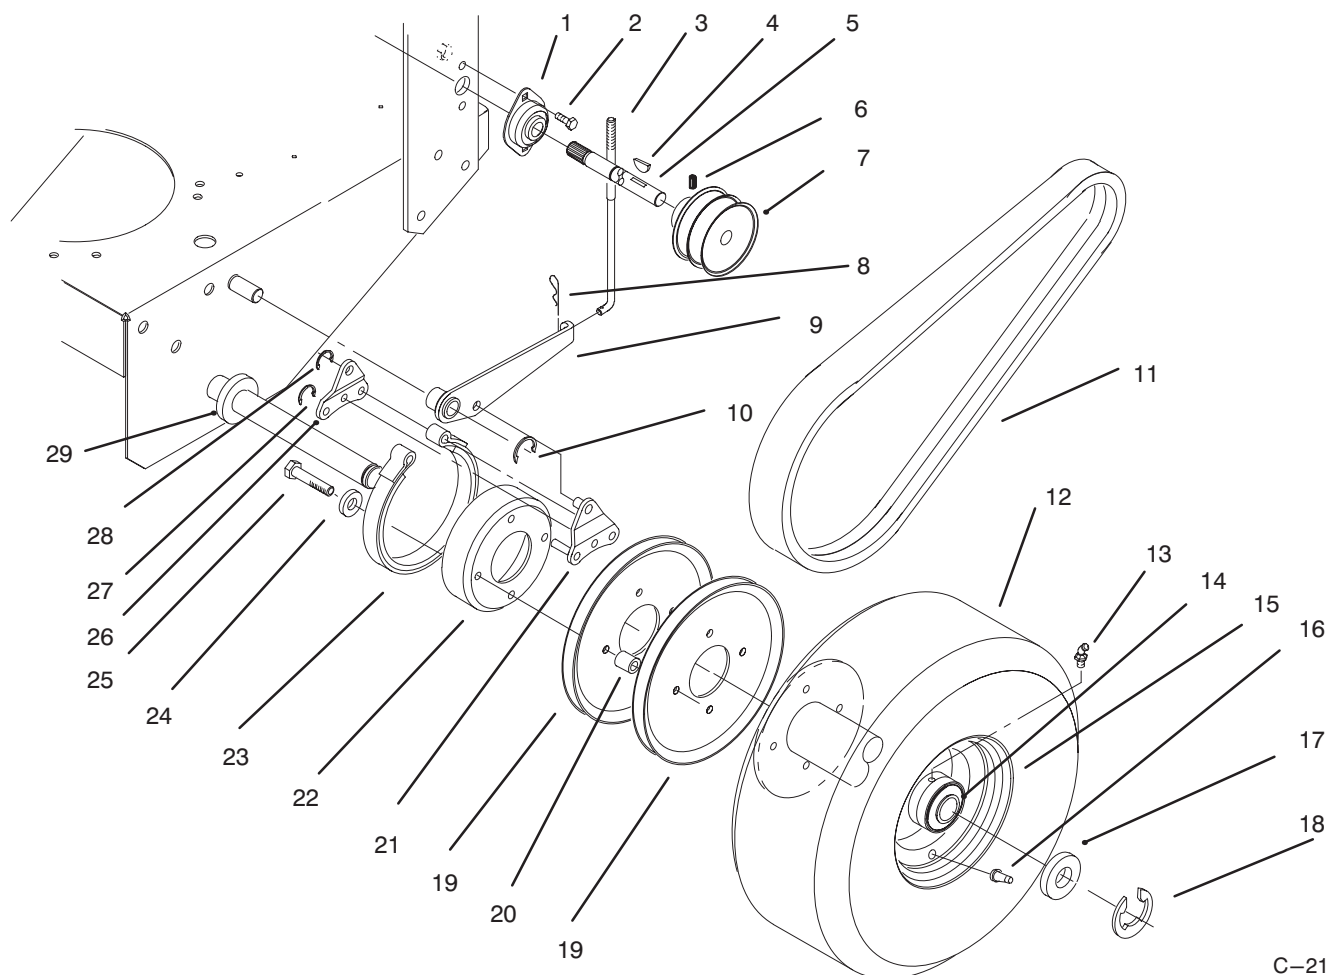


C-2153

AXLE, BRAKE, WHEEL DRIVE AND BELTS

Ref. No.	Part No.	Description	No. Used
1	51-4270	Bearing – Shaft Extension	2
2	321-4	Screw – Hex. Hd.	4
3	51-4580	Rod – Brake	2
4	3257-5	Key – Woodruff	3
5	51-4240	Shaft – Extension R.H.	1
*	51-4250	Shaft – Extension L.H.	1
6	3245-3	Screw – Socket Hd. Set	2
7	74-0480	Pulley – Drive	2
8	3290-307	Pin – Cotter	2
9	51-4610	Brake Arm L.H.	1
*	51-4600	Brake Arm R.H.	1
10	32151-40	Ring – Retaining	2
11	51-4290	Belt – Drive	2
12	231-117	Tire	2
13	302-11	Fitting – Grease	2
14	92-1746	Bearing	4

Ref. No.	Part No.	Description	No. Used
15	242-80	Rim	2
16	232-27	Valve Stem	2
17	10-8110	Washer – Flat	A/R
18	32151-91	Ring – Retaining	2
19	51-4160	Pulley – Wheel	4
20	51-4170	Spacer – Pulley	8
21	51-4650	Link – Brake	2
22	51-4180	Drum – Brake	2
23	51-4700	Brake Band Assembly	2
24	3253-4	Washer – Lock	8
25	322-7	Screw – Hex. Hd.	8
26	51-4660	Plate – Link Brake	2
27	32151-72	Ring – Retaining	4
28	32151-56	Ring – Retaining	2
29	51-4230	Washer – Wheel	2


*Not Illustrated

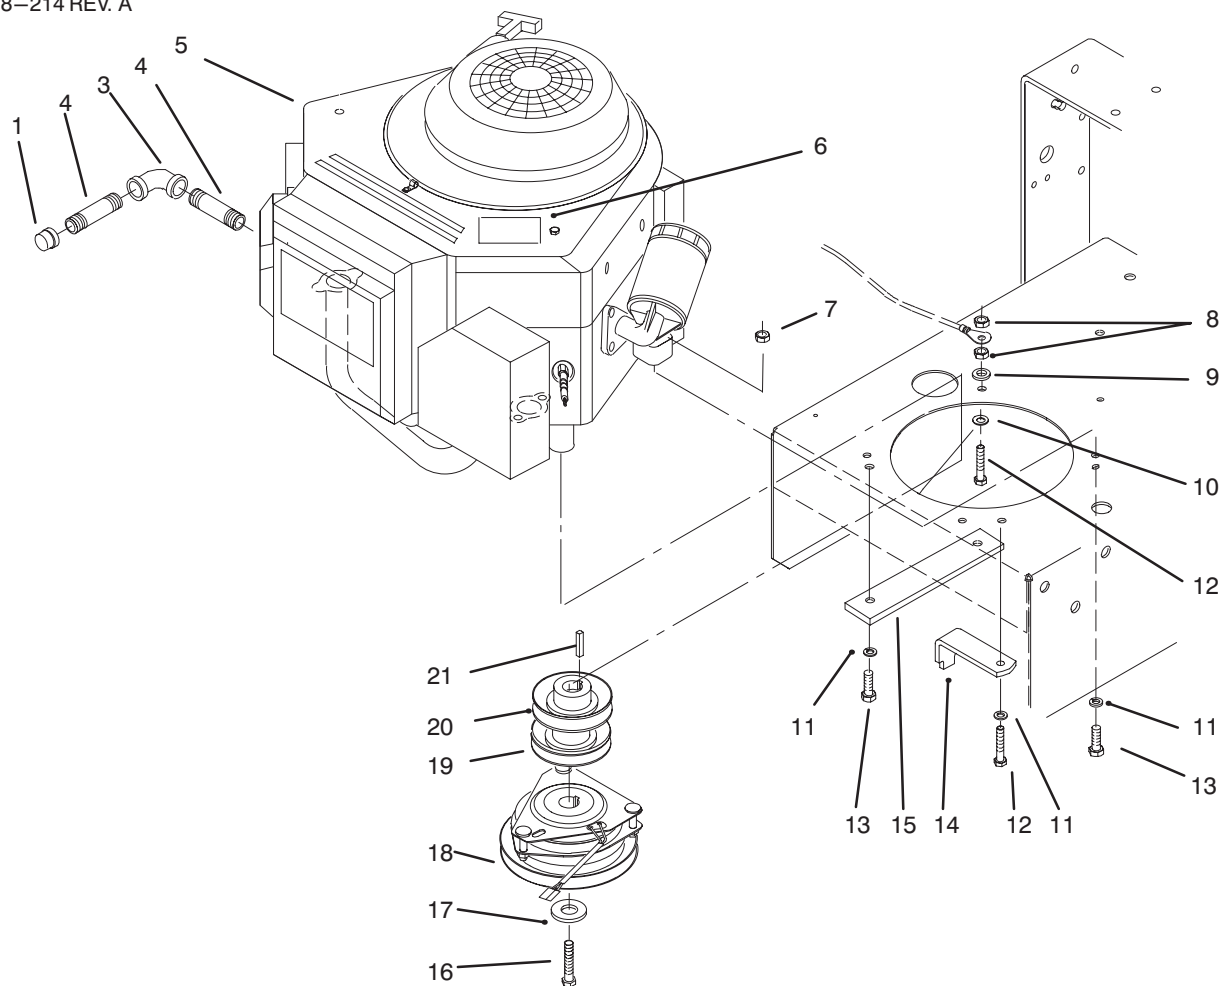

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	288-4	Cap - Pipe	1
3	94-9650	Elbow	1
4	289-46	Nipple	2
5		Engine - Briggs & Stratton (Model No.303776 Type 1188 Trim A1)	1
6	63-8440	Decal - Hot	1
7	3296-29	Nut	3
8	3217-6	Nut	2
9	3255-8	Washer - Lock	1
10	3256-23	Washer - Flat	2


Ref. No.	Part No.	Description	No. Used
11	3253-4	Washer - Lock	3
12	322-9	Screw - Hex. Hd.	2
13	322-17	Screw - Hex. Hd.	2
14	51-4540	Retainer - Clutch	1
15	94-5847	Guard - Engine	1
16	3212-9	Screw - Hex. Hd.	1
17	112843	Washer - PTO	1
18	54-3200	Clutch Assembly	1
19	74-0050	Sheave - Lower Half	1
20	74-0060	Sheave - Upper Half	1
21	608006	Key - Crankshaft	1

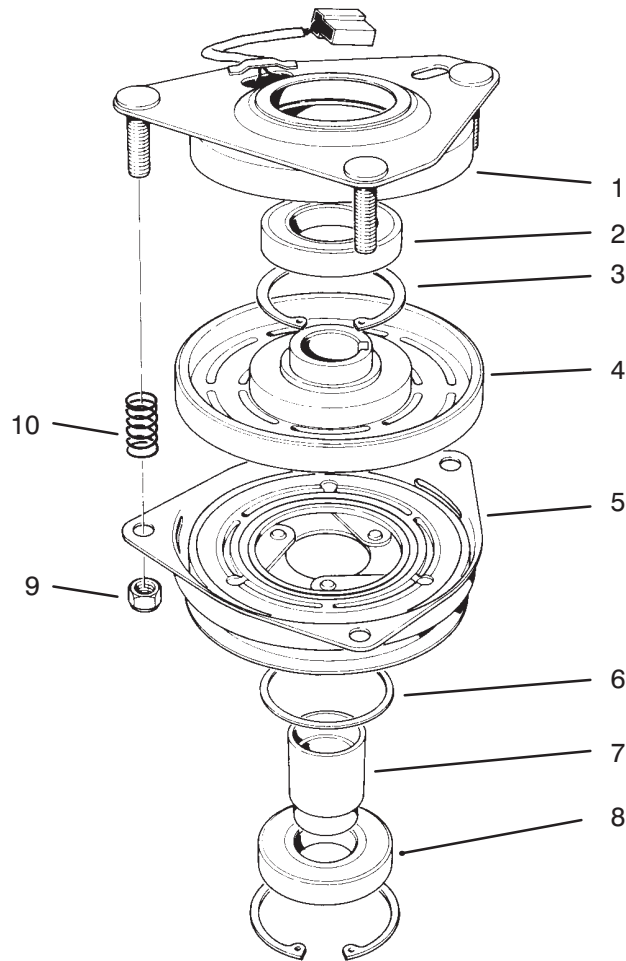

T-0080

CLUTCH ASSEMBLY NO. 54-3200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	54-0230	Field Ass'y (Incl. Ref. #2 & 3)	1	6	44-8330	Spacer	1
2	251-292	Bearing - Field	1	7	44-8340	Collar - Bearing	1
3	44-8310	Ring - Retaining	2	8	251-291	Bearing - Pulley	1
4	44-8360	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)	1	9	3296-5	Nut - Lock	3
5	55-7410	Armature & Pulley Assemble (Incl. Ref. #3, 6, 7, & 8)	1	10	44-8320	Spring	3

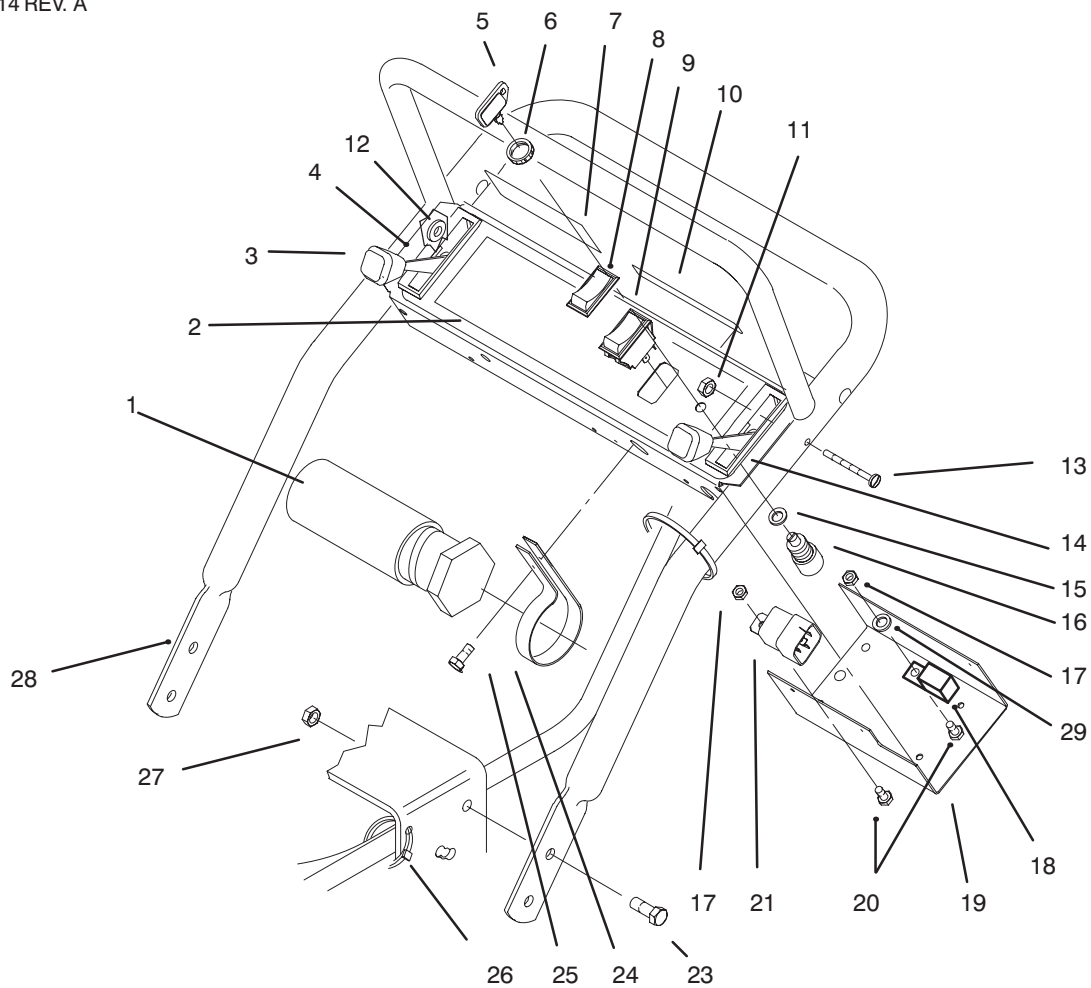


C-2155

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-0720	Tube – Manual	1
2	82-7740	Decal – Control Panel	1
3	94-5839	Control – Choke	1
4	82-2180	Panel – Control	1
5	63-8360	Key	2
6	218-461	Nut	1
7	65-3090	Decal – Instruction	1
8	82-3820	Boot	1
9	82-2300	Switch – Clutch (Incl. Ref.#8)	1
10	93-6657	Decal – Danger	1
11	3296-2	Nut – Lock	4
12	54-2970	Spacer	2
13	32105-14	Screw – Hex. Hd. Machine	4
14	94-5838	Control – Throttle	1

Ref. No.	Part No.	Description	No. Used
15	3254-5	Washer – Lock	1
16	29-5560	Switch – On/Off (Incl. Ref. #5,6, &15)	1
17	3296-42	Nut – Hex	2
18	94-9666	Module – Interlock	1
19	93-7437	Panel – Bottom	1
20	321-3	Screw – Hex. Hd.	2
21	63-7590	Relay	1
23	3234-11	Screw – Hex. Hd.	4
24	2412-120	"R"Clamp	2
25	32104-76	Screw – Self Tapping	4
26	3290-378	Cable Tie	3
27	32128-21	Nut – Lock	4
28	67-6440	Handle – Upper	1
29	3255-7	Washer	1

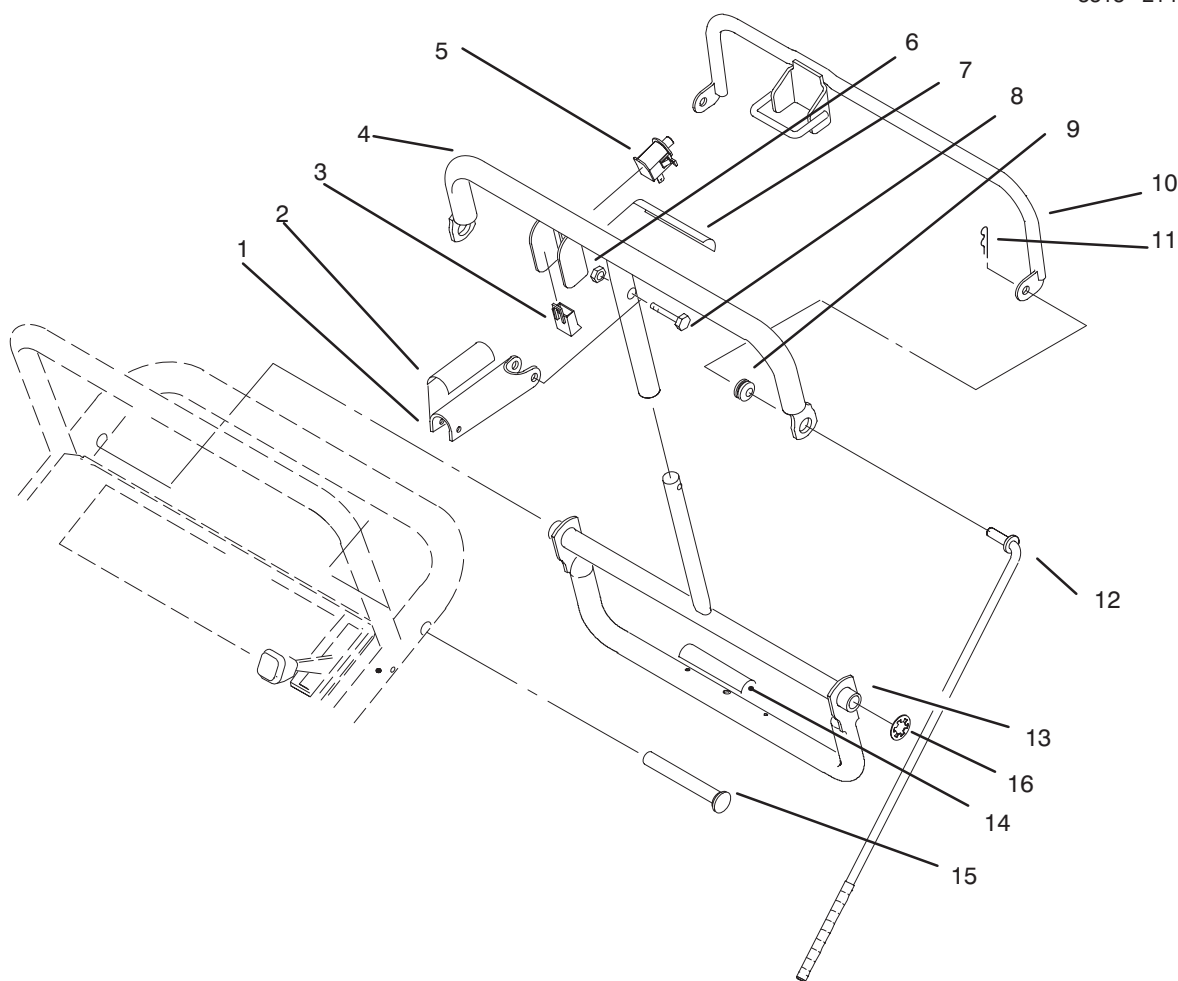


C-2156

HANDLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	51-4850	Lever - Parking Brake	1
2	52-2010	Decal - Parking Brake	1
3	218-595	Connector - Body	1
4	93-7298	Bar - Control	1
5	82-2190	Switch - Bail	1
6	3296-2	Nut - Lock	5
7	82-2290	Decal - Control Bar	1
8	32105-1	Screw - Hex. Hd. Machine	1

Ref. No.	Part No.	Description	No. Used
9	237-141	Grommet - Rubber	2
10	82-7680	Bail Assembly	1
11	3290-307	Pin - Cotter	2
12	82-7631	Rod - Control	2
13	74-0380	Control - Pivot	1
14	82-2280	Decal - Reverse Handle	1
15	283-55	Pin - Clevis	2
16	32151-80	Ring - Push On	2

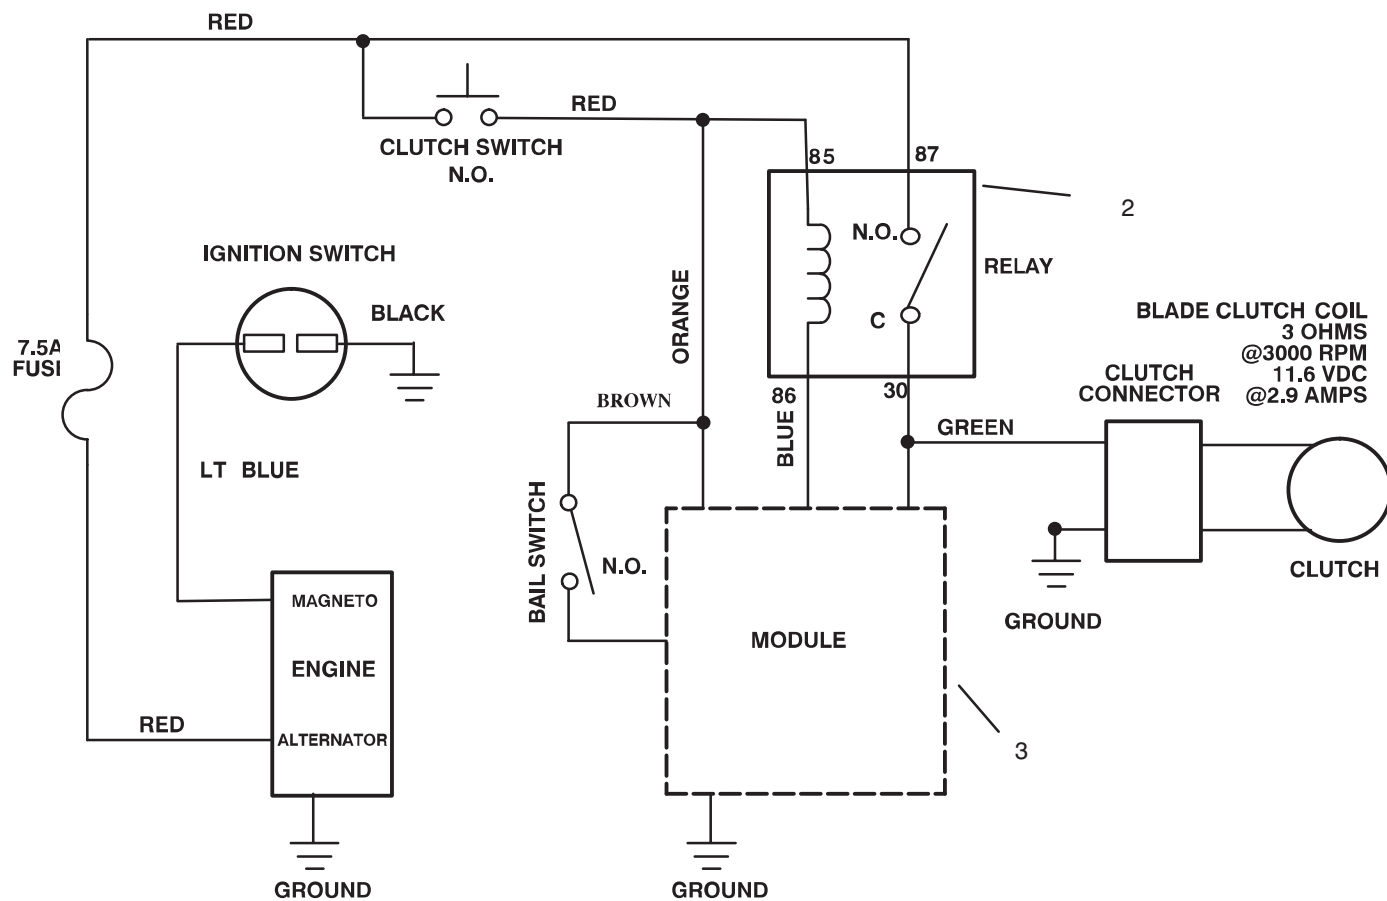


ELECTRIC SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	95-2806	Wire Harness	1
2	63-7590	Relay	1

Ref. No.	Part No.	Description	No. Used
3	94-9666	Module - Interlock	1

*Not Illustrated

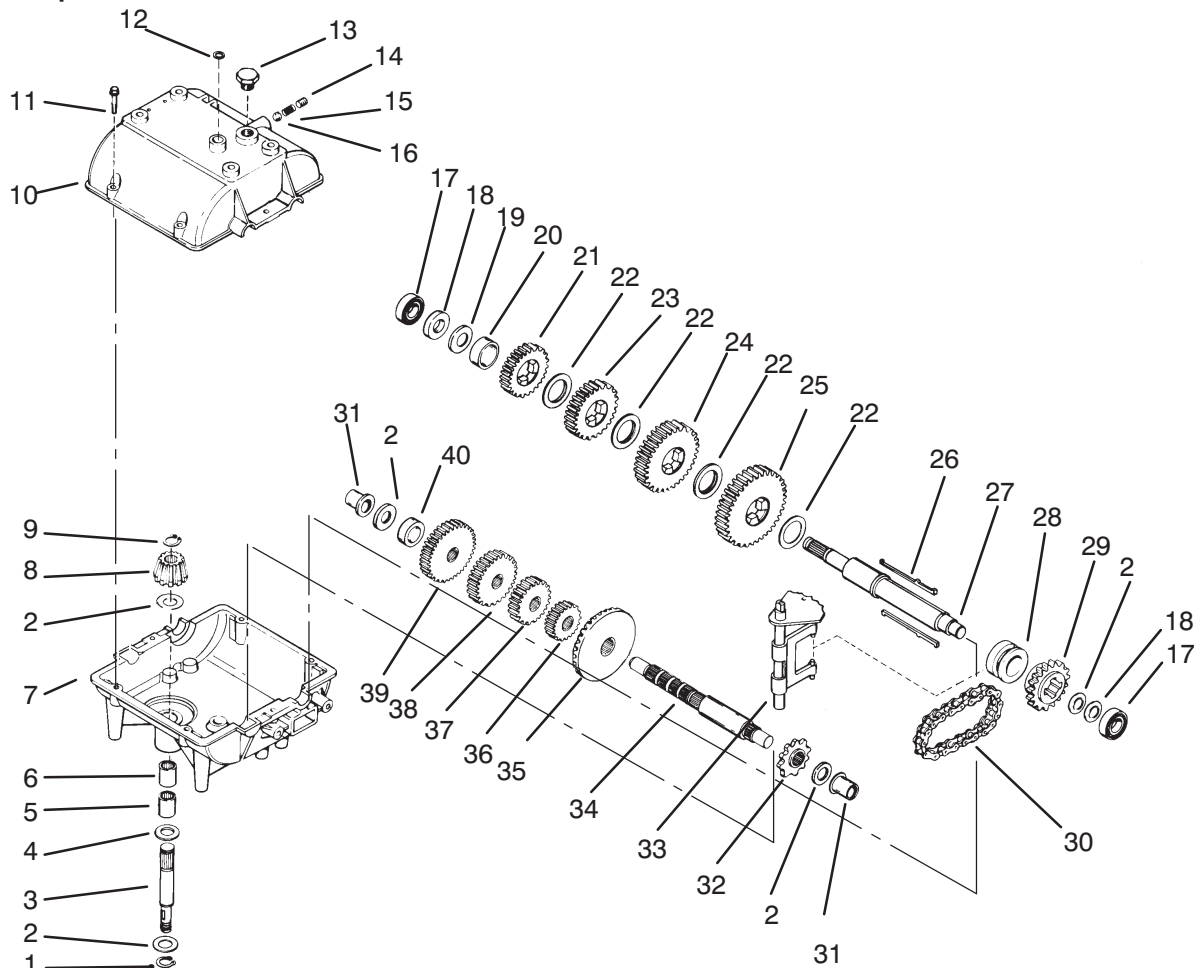


C-1776

PEERLESS TRANSMISSION MODEL NO. 700-039

Ref. No.	Part No.	Description	No. Used
1	792035	Ring – Retaining	1
2	780072	Washer – Thrust	5
3	776135	Shaft – Input	1
4	792001	"O"Ring	2
5	780142	Bearing – Needle	1
6	780086	Bearing – Needle	1
7	770090A	Case – Transmission	1
8	778153	Bevel Pinion – Input	1
9	788040	Ring – Retaining	1
10	772099A	Cover – Transmission	1
11	792073	Screw – Self Tapping	6
12	788069	Seal – Square Cut	1
13	792074	Plug – Threaded	1
14	792078	Screw – Set	1
15	792079	Spring	1
16	792077	Ball – Steel	1
17	780092	Bearing – Ball	2
18	780065	Washer – Thrust	2
19	780139	Washer – Thrust	1
20	786072	Spacer	1
21	778123A	Gear – Spur (25 Teeth)	1

Ref. No.	Part No.	Description	No. Used
22	780108	Washer – Thrust	4
23	778250	Gear – Spur (27 Teeth)	1
24	778124A	Gear – Spur (30 Teeth)	1
25	778125	Gear – Spur (35 Teeth)	1
26	792089A	Key	4
27	776289A	Shaft – Output & Brake	1
28	784266	Collar – Shift	1
29	786083	Sprocket (18 Teeth)	1
30	786081	Chain – Roller (No. 41 Chain 24 Links)	1
31	780105A	Bushing – Flanged	2
32	786082	Sprocket (9 Teeth)	1
33	784267	Rod & Fork Ass'y – Shift	1
34	776134	Shaft – Counter	1
35	778154	Gear – Bevel (42Teeth)	1
36	778136	Gear – Spur (15 Teeth)	1
37	778126A	Gear – Spur (20 Teeth)	1
38	778249	Gear – Spur (23 Teeth)	1
39	778127A	Gear – Spur (25 Teeth)	1
40	786071	Spacer	1

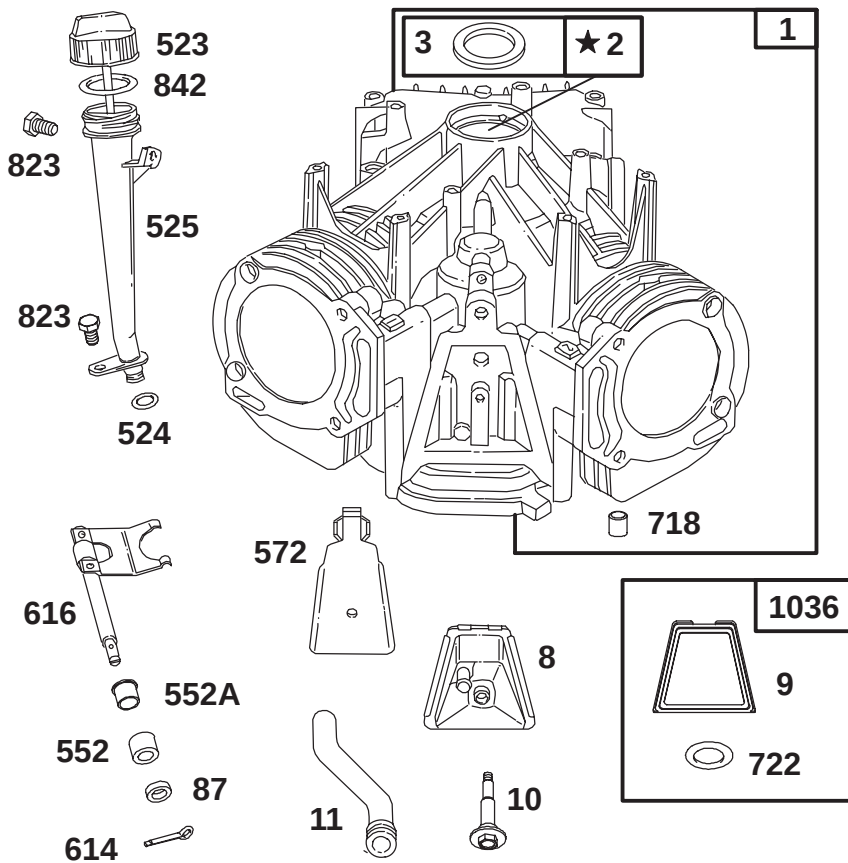

★ REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.


1019 LABEL KIT

ENGINE BRIGGS & STRATTON MODEL 303776-1188-A1

Ref. No.	Part No.	Description	No. Used
1	805511	Cylinder Assembly	
2	805107	Bearing—Cylinder	
★3	805101	Seal—Oil	
8	807795	Breather Assembly	
★9	805379	Gasket—Breather	
10	805751	Screw—Shoulder	
11	805362	Tube—Breather	
★12	805112	Gasket—Crankcase	
15	805048	Plug—Oil Drain	
18	807638	Sump—Engine	
★20	805049	Seal—Oil	
22	805696	Screw—Hex.	
84	91488	Plug—Pipe	
★87	805054	Seal—Governor Shaft	
★116	805198	Seal—O-Ring	
166	805073	Stud—Hex. Drive	
189	805449	Washer—Lock	
523	807985	Cap—Oil Fill	
★524	805011	Seal—Fill Tube	

Ref. No.	Part No.	Description	No. Used
525	807611	Tube—Oil Fill	
552	805412	Bushing—Governor Crank	
552A	805413	Bushing—Governor Crank	
572	805197	Baffle—Oil	
614	805417	Pin—Cotter	
616	807596	Crank—Governor	
634	805416	Seal—Governor	
718	805103	Pin—Dowel	
722	★	Seal—O-Ring (Sold in Kit Only)	
823	805317	Screw—Hex.	
★842	270920	Seal—Oil Fill Cap	
★978	805250	Gasket—Adapter	
982	805030	Screw—Hex.	
1019	808036	Label Kit	
1027	492932	Filter—Oil	
1028	805292	Adapter—Filter	
1036	807688	Gasket Set—Breather	

★ Included in Gasket Set—Part No. 807989.

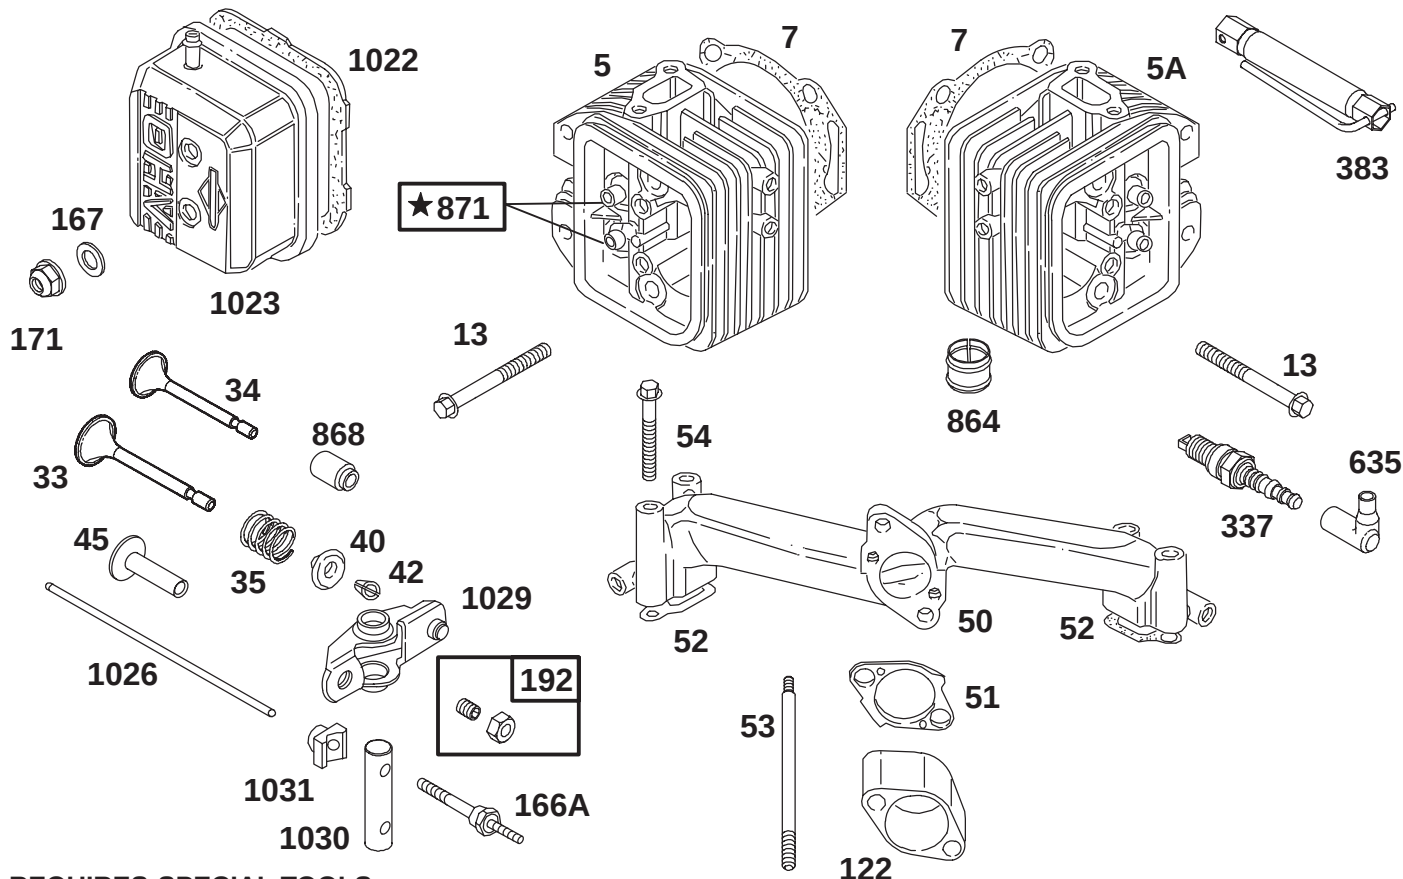

★ REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303776-1188-A1

Ref. No.	Part No.	Description	No. Used
5	807987	Head—Cylinder #1	
5A	807988	Head—Cylinder #2	
Δ★7	807986	Gasket—Cylinder Head	
13	805097	Screw—Hex.	
33	805089	Valve—Exhaust	
34	805090	Valve—Intake	
35	805937	Spring—Valve	
40	805092	Retainer—Valve	
42	805161	Keeper—Valve	
45	262679	Tappet—Valve	
50	805409	Manifold—Intake	
★51	805700	Gasket—Intake	
★52	805023	Gasket—Intake	
53	805669	Stud—Standard	
54	805006	Screw—Hex.	
122	805770	Spacer—Carb.	
166A	805073	Stud—Hex. Drive	
Δ★167	805420	Washer	
171	805019	Nut—Lock	
192	807623	Screw—Adjusting	
337	491055	Plug—Spark	
383	19374	Wrench—Spark Plug	
635	805529	Boot—Spark Plug	
864	805083	Adapter—Muffler	
868	805094	Seal—Valve	
871	805084	Bushing—Guide	
Δ★1022	806039	Gasket—Rocker Cover	
1023	805100	Cover—Rocker	
1026	805352	Rod—Push (Intake, Steel)	
		Note: 805617 Rod—Push (Exhaust, Aluminum)	
1029	808096	Arm—Rocker	
1030	805342	Shaft—Rocker Arm	
1031	805341	Support—Rocker Arm	

★ Included in Gasket Set—Part No. 807989.

Δ Included in Valve Overhaul Kit—Part No. 807990.

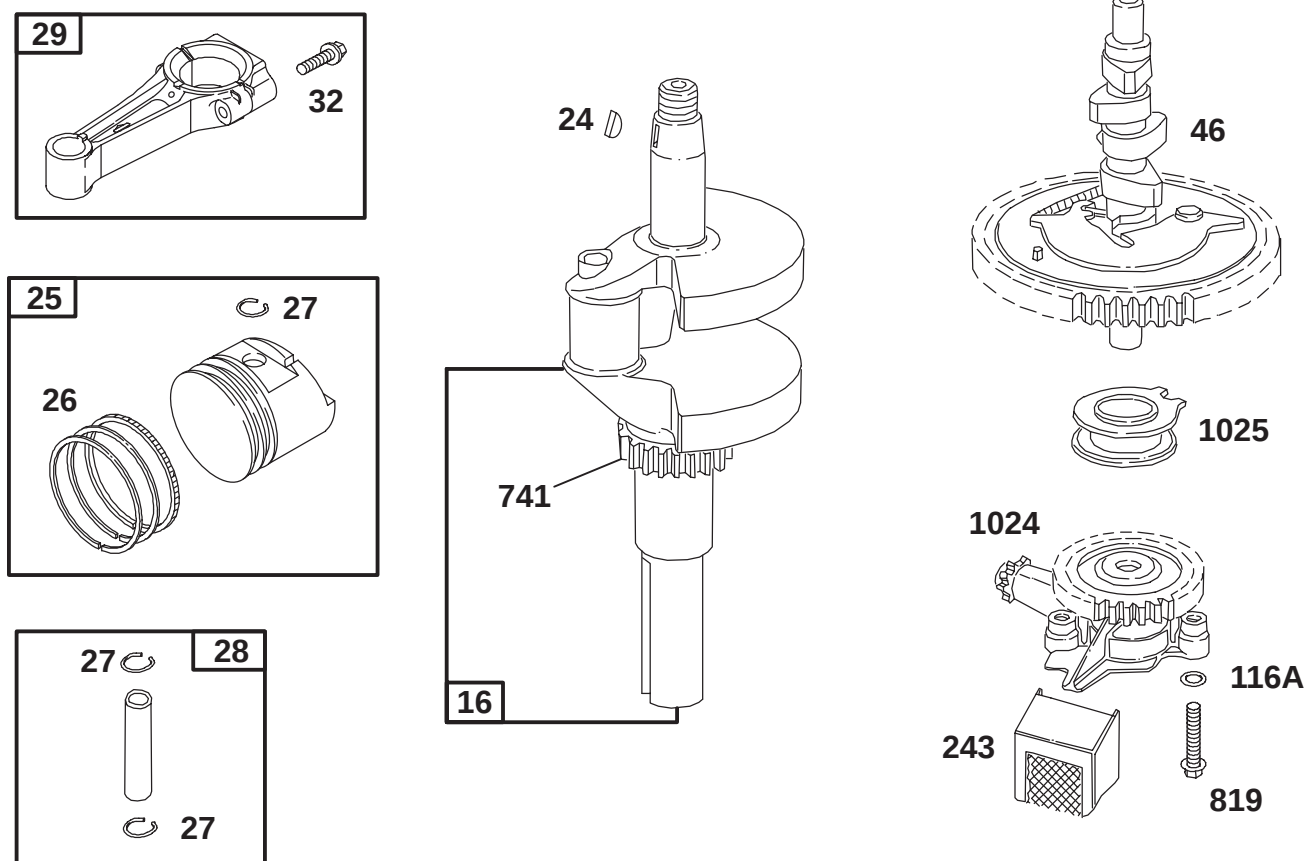


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303776-1188-A1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
16	807586	Crankshaft Note: To Replace Crankshaft Timing Gear Key, Order Part No. 94196. For Thrust Washers, Order Part No. 807625.		27	805099	Lock—Piston Pin	
24	806066	Key—Flywheel		28	807621	Pin—Piston (Standard)	
25	807619	Piston Assembly (Standard)			807803	Pin—Piston (.020" U.S.)	
	807807	Piston Assembly (.010" O.S.)		29	807900	Rod—Connecting	
	807809	Piston Assembly (.020" O.S.)			807803	Rod—Connecting (.020" Undersize)	
	807811	Piston Assembly (.030" O.S.)		32	805395	Screw—Hex.	
26	807620	Ring Set (Standard)		46	807542	Gear—Cam	
	807808	Ring Set (.010" O.S.)		★116A	805058	Seal—O-Ring	
	807810	Ring Set (.020" O.S.)		243	805964	Screen—Oil	
	807812	Ring Set (.030" O.S.)		741	805894	Gear—Timing	
				819	805057	Screw—Hex.	
				1024	807546	Pump—Oil	
				1025	805313	Spool—Governor	

★ Included in Gasket Set—Part No. 807989.

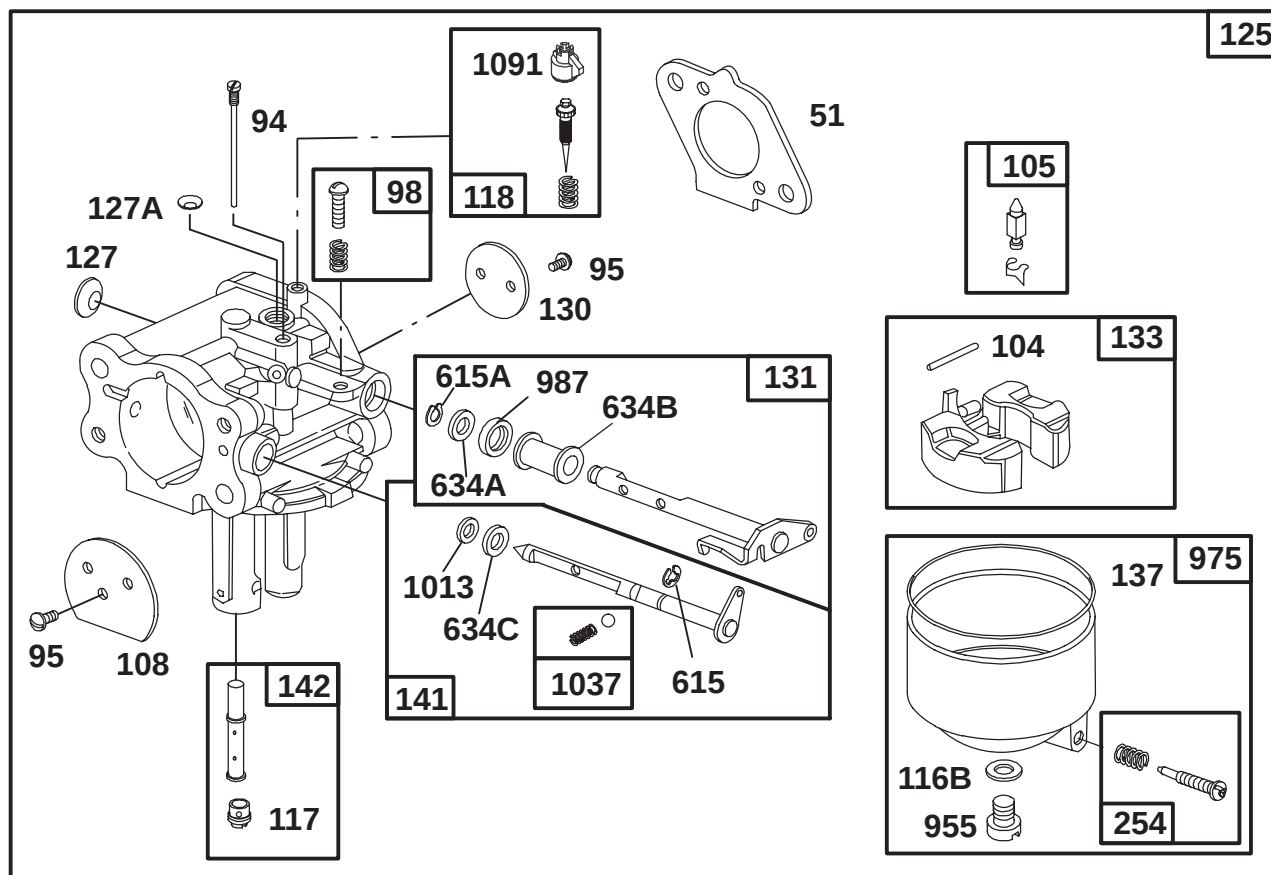


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303776-1188-A1

Ref. No.	Part No.	Description	No. Used
★51	805700	Gasket—Intake	
●94	805777	Tube—Jet	
95	805561	Screw—Slotted	
98	807705	Screw—Idle Speed	
●104	805586	Pin—Float Hinge	
●105	807706	Valve—Needle	
108	805562	Valve—Choke	
◆◆116B		Gasket—Plug (Sold in Kit Only)	
●117		Jet—Main (Sold in Kit Only)	
●118	808258	Valve—Idle Adjustment	
125	808255	Carburetor	
●127	805570	Plug—Welch	
●127A	805571	Plug—Welch	
130	805572	Valve—Throttle	
131	808323	Shaft—Throttle	
133	807710	Float—Carburetor	
◆◆137		Gasket—Float Bowl (Sold in Kit Only)	
◆◆141	807711	Shaft—Choke	
●142	807960	Nozzle—Carburetor	
254	807713	Drain—Carburetor Bowl	
●615	805578	Retainer	
●615A	805577	Retainer	
●634A	805576	Collar—Throttle Shaft	
●634B	805574	Collar—Throttle Shaft	
●634C	805580	Collar—Throttle Shaft	
955	807714	Plug	
975	807715	Bowl—Float	
◆◆987	806079	Seal—Throttle Shaft	
◆◆1013	805581	Seal—Choke Shaft	
●1037	807717	Ball—Choke Locator	
●1091	805858	Cap—Limiter	

★ Included in Gasket Set—Part No. 808989.
● Included in Carburetor Kit—Part No. 808324.


◆ Included in Carburetor Gasket Set—Part No. 808325.

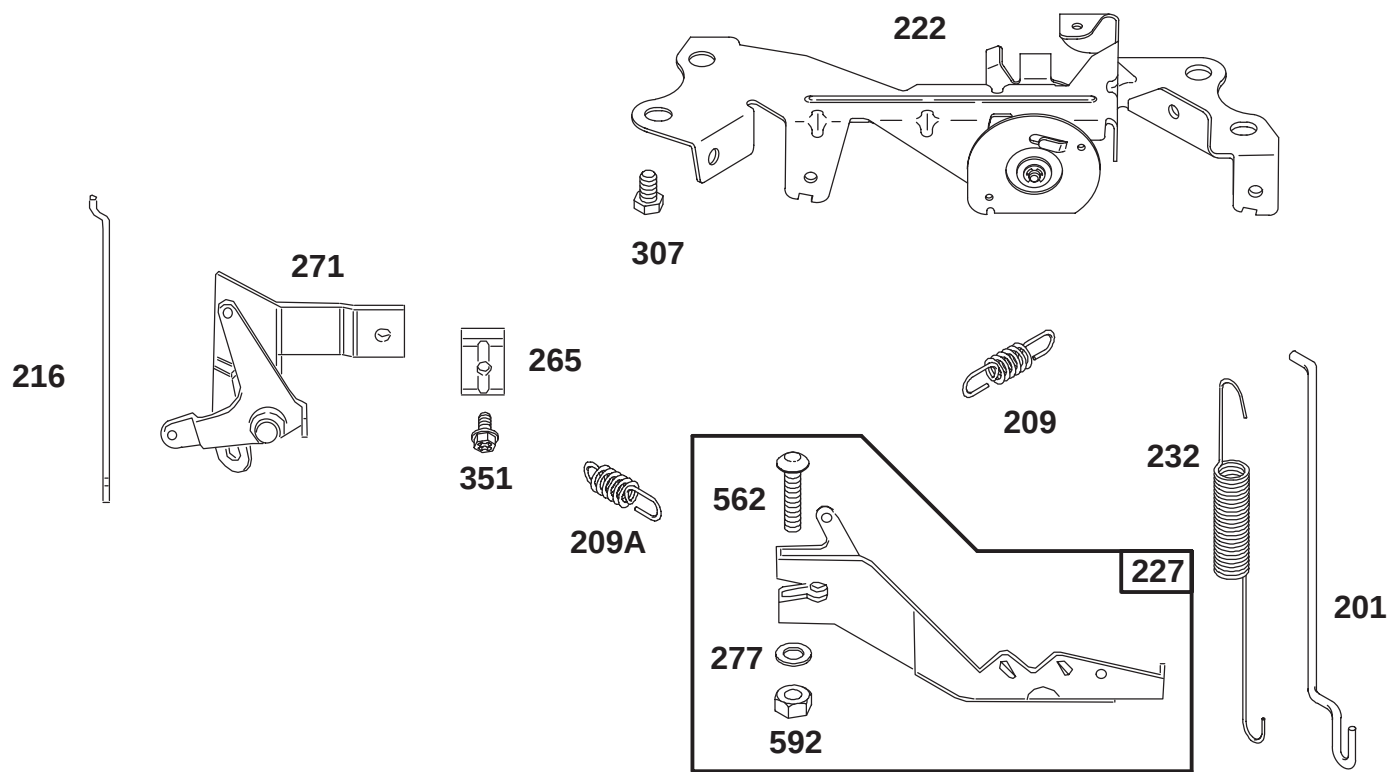

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303776-1188-A1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
201	805480	Link		265	221535	Clamp-Casing	
209	805463	Spring-Governor		271	808145	Lever-Control	
209A	805453	Spring-Governor Idle		277	805018	Washer	
216	805439	Link		307	805025	Screw-Hex.	
222	808195	Bracket-Control		351	805169	Screw-Phillips Hex.	
227	807528	Lever-Governor		562	805381	Bolt-Carriage	
232	805465	Spring-Link		592	805383	Nut-Hex.	

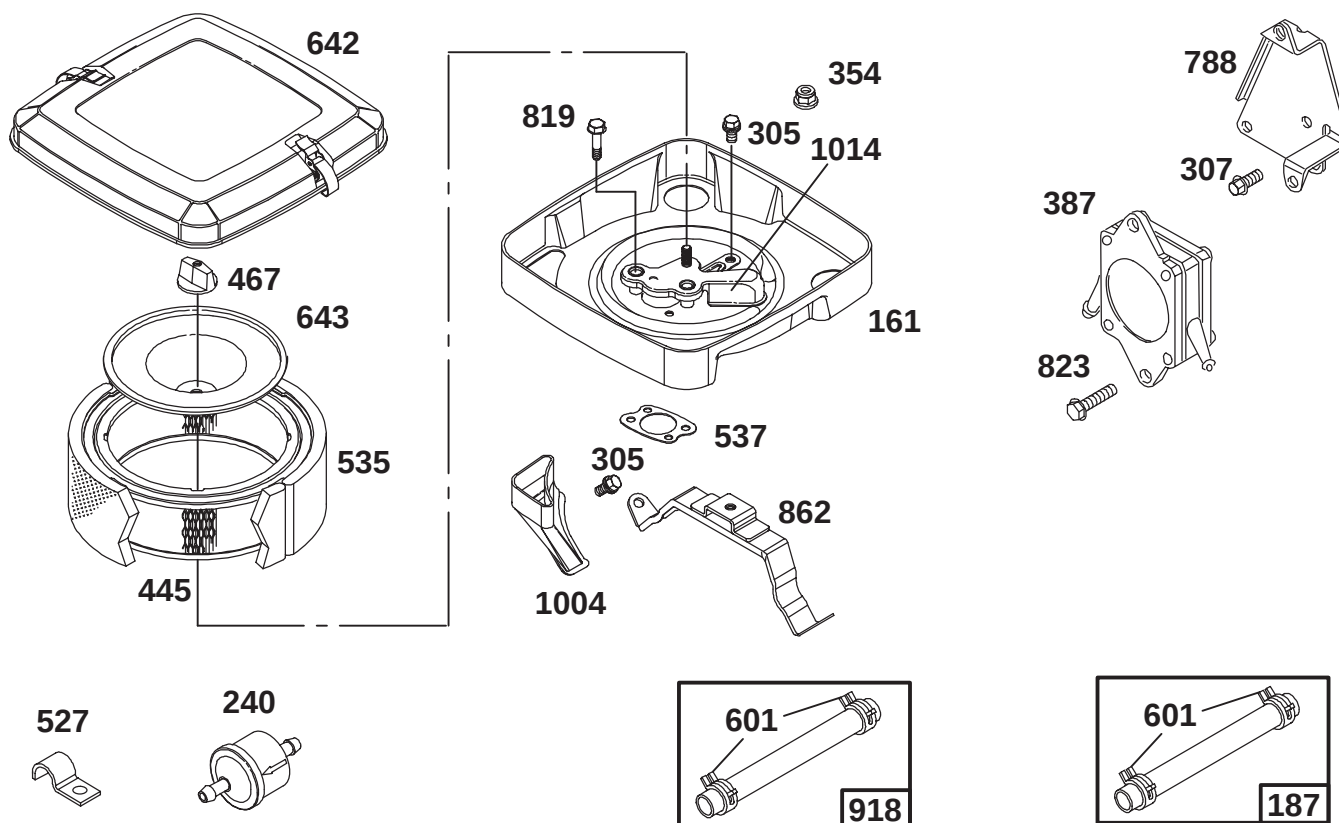


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303776-1188-A1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
161	807857	Base—Air Cleaner		★537	808655	Gasket—Air Cleaner	
187	296004	Line—Fuel (Cut to Required Length)		601	93053	Clamp—Hose	
240	493629	Filter—Fuel		642	807862	Cover—Air Cleaner	
305	805406	Screw—Hex.		643	805631	Retainer—Air Filter	
307	805025	Screw—Hex.		788	807685	Bracket—Pump	
354	810078	Nut—Hex.		819	805057	Screw—Hex.	
387	808322	Pump—Fuel		823	805317	Screw—Hex.	
445	394018	Filter—Air		862	807859	Strap—Cleaner Mounting	
467	491875	Knob		918	393815	Line—Vacuum (Cut to Required Length)	
527	223167	Clamp—Tube		1004	805632	Duct—Air	
535	272490	Filter—Air		1014	807797	Shield—Carburetor	

★ Included in Gasket Set—Part No. 495993.

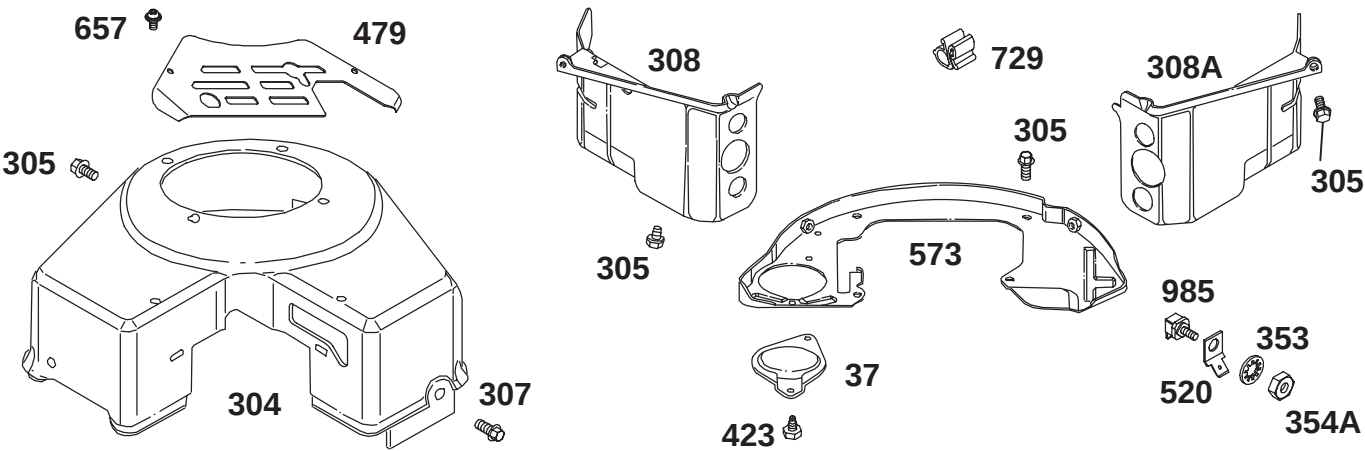


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303776-1188-A1

Ref. No.	Part No.	Description	No. Used
37	805506	Guard—Flywheel	
304	808055	Housing—Blower	
305	805406	Screw—Hex.	
307	805025	Screw—Hex.	
308	808309	Cover—Air Guide	
308A	808098	Cover—Air Guide	
353	92791	Washer—Lock	
354A	90576	Nut—Hex.	

Ref. No.	Part No.	Description	No. Used
423	805260	Screw—Phillips Hex.	
479	805841	Cover—Carburetor	
520	93722	Terminal	
573	807663	Plate—Back	
657	805009	Screw—Phillips	
729	280470	Clip—Wire	
985	398525	Insulator	

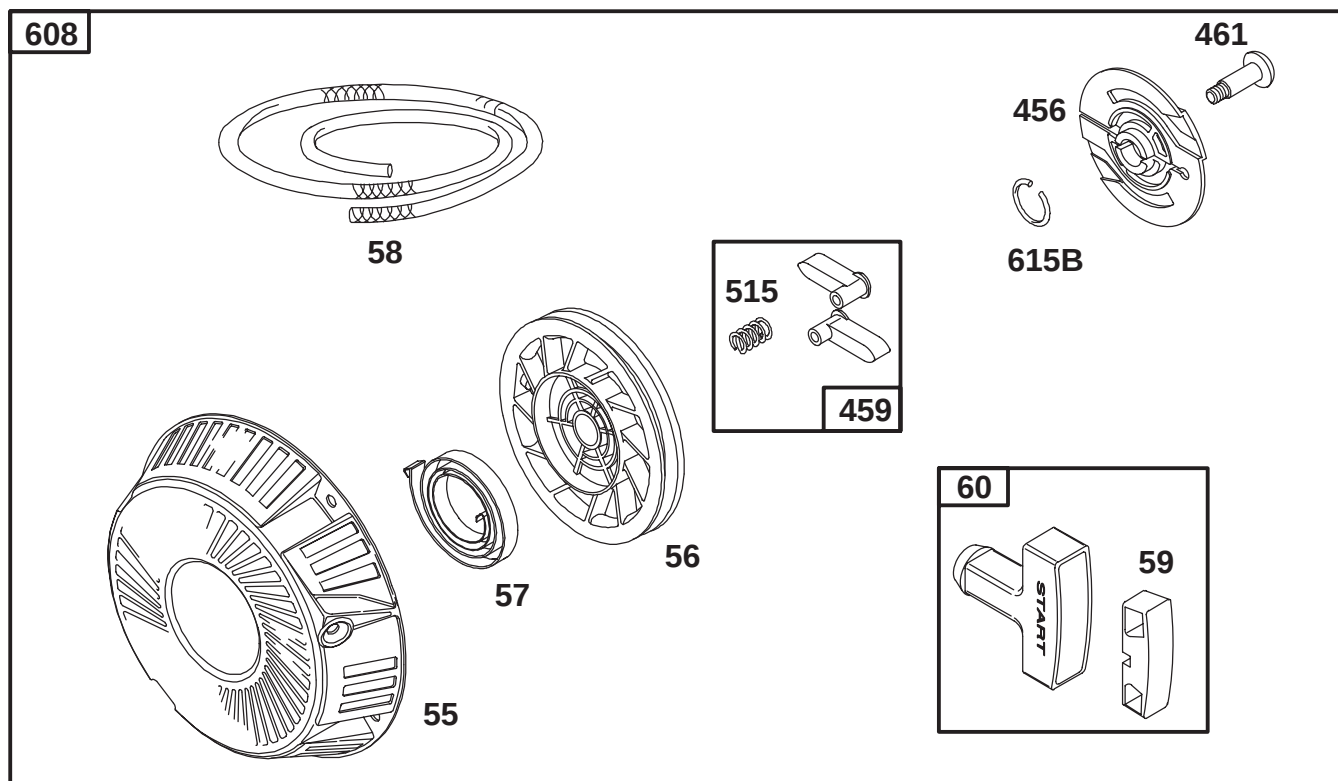

305


455

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303776-1188-A1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
55	808186	Housing—Rewind Starter		461	805955	Screw—Shoulder	
56	805949	Pulley—Starter		515	805953	Spring—Pawl	
57	805951	Spring—Rewind Starter		608	808087	Starter—Rewind	
58	66574	Rope—Starter (Cut to 78—3/4")		615B	805952	Ring—Retaining	
59	805957	Insert—Rope		*	807595	Muffler	1
60	808167	Grip—Starter Rope		*	805778	Manifold — Exhaust	1
305	805406	Screw—Hex.		*	808362	Bracket Asm	1
455	805876	Cup—Flywheel		*	805247	Screa	2
456	805954	Retainer—Spring		*	222573	Deflecor	1
459	808166	Pawl—Ratchet		*	93705	Screw	4

* Not Illustrated

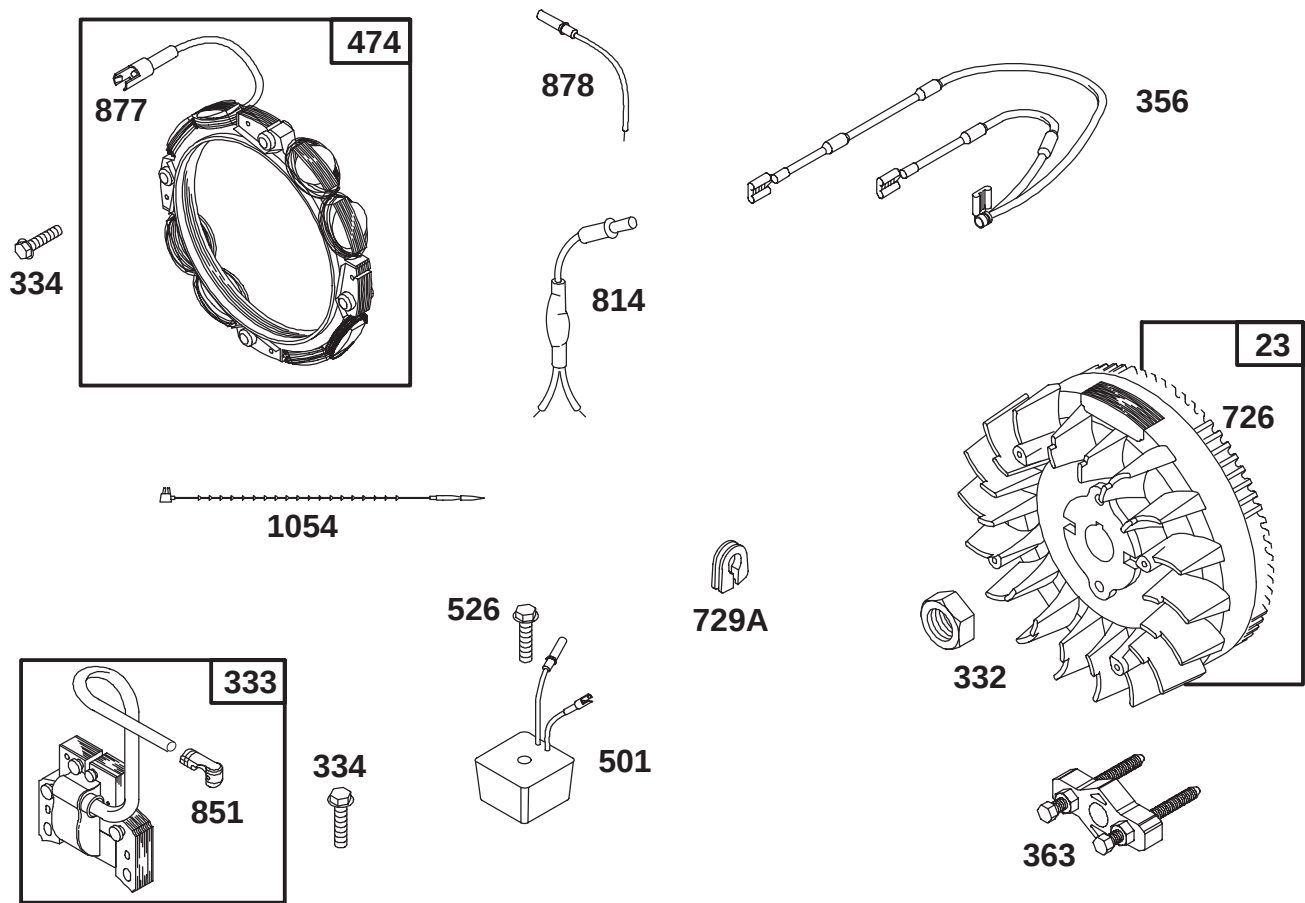


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303776-1188-A1

Ref. No.	Part No.	Description	No. Used
23	807531	Flywheel	
332	806028	Nut-Flywheel	
333	492341	Armature-Magneto	
334	805407	Screw-Hex.	
356	493792	Wire-Stop	
363	19203	Flywheel Puller	
474	392595	Alternator	
501	491546	Regulator	

Ref. No.	Part No.	Description	No. Used
526	805535	Screw-Hex.	
726	807805	Gear-Ring	
729A	805641	Clip-Wire	
814	392606	Harness-Alternator	
851	493880	Terminal-Cable	
877	393537	Wire-Alternator	
878	393422	Harness-Alternator	
1054	270723	Tie-Cable	

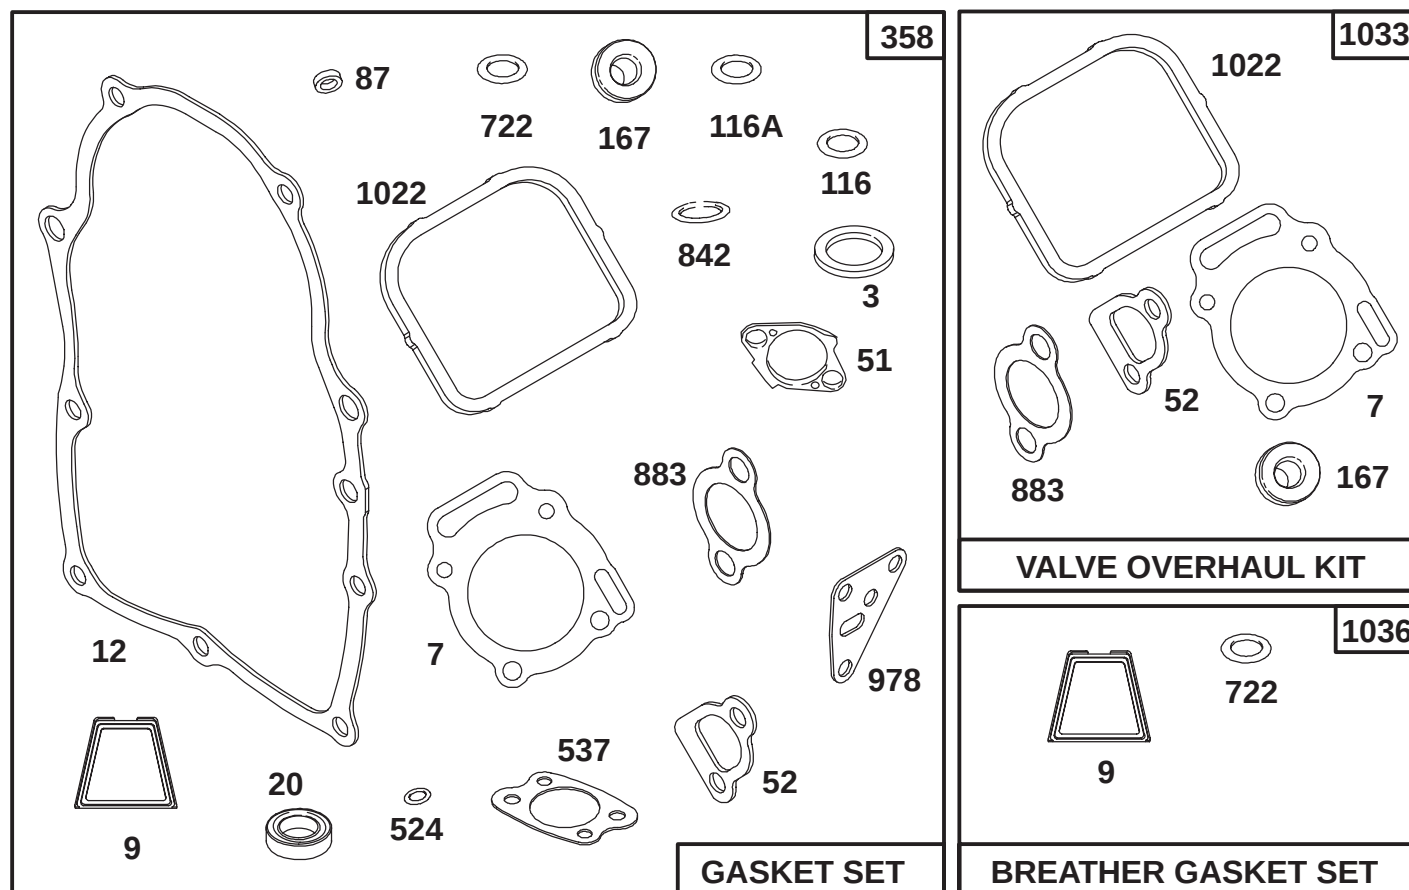



Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303776-1188-A1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★3	805101	Seal—Oil		358	807989	Gasket Set	
△★7	807986	Gasket—Cylinder Head		★524	805011	Seal—Fill Tube	
★9	805379	Gasket—Breather		★537	805655	Gasket—Air Cleaner	
★12	805112	Gasket—Crankcase		★722		Seal—O-Ring (Oil Pump)	
★20	805049	Seal—Oil		★842	270920	Seal—O-Ring	
★51	805700	Gasket—Intake		△★883	805024	Gasket—Exhaust	
△★52	805023	Gasket—Intake		★978	805250	Gasket—Adapter	
★87	805054	Seal—Governor Shaft		△★1022	806039	Gasket—Rocker Cover	
★116	805198	Seal—O-Ring (Crankcase Cover)		1033	807990	Kit—Valve Overhaul	
★116A	805058	Seal—O-Ring (Oil Pump)		1036	807688	Gasket Set—Breather	
△★167	805420	Washer (Valve Cover)					

★ Included in Gasket Set—Part No. 807989.

△ Included in Valve Overhaul Kit—Part No. 807990.

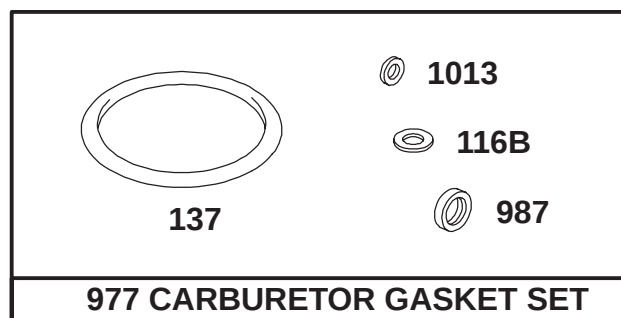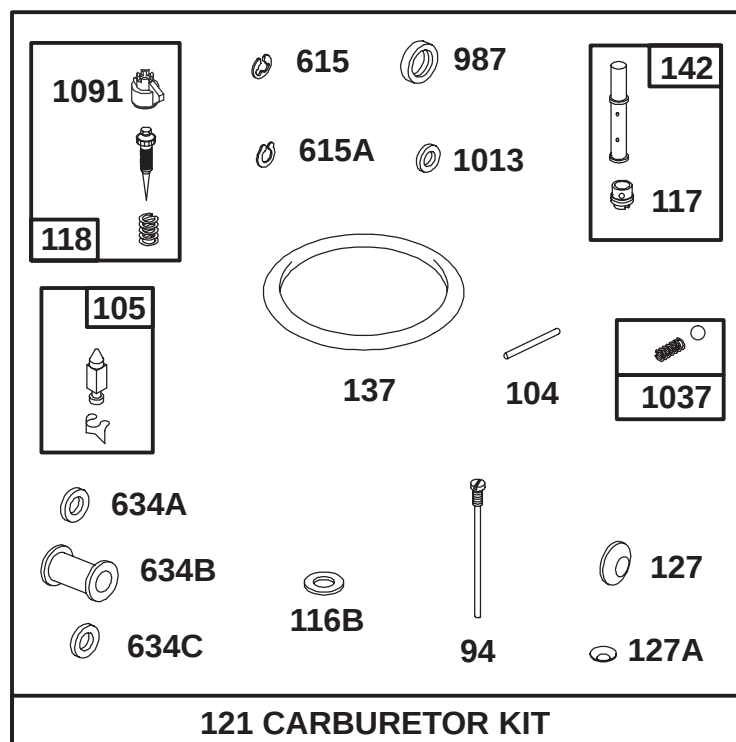

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303776-1188-A1

Ref. No.	Part No.	Description	No. Used
●94	805777	Tube-Jet	
●104	805586	Pin-Float Hinge	
●105	807706	Valve-Needle	
◆●116B		Gasket-Plug (Sold in Kit Only)	
●118	808258	Valve-Idle Adjustment	
●117		Jet-Main (Sold in Kit Only)	
121	808324	Carburetor Kit	
●127	805570	Plug-Welch	
●127A	805571	Plug-Welch	
◆●137		Gasket-Float Bowl (Sold in Kit Only)	

Ref. No.	Part No.	Description	No. Used
●142	807960	Nozzle-Carburetor	
●615	805578	Retainer	
●615A	805577	Retainer	
●634A	805576	Collar-Throttle Shaft	
●634B	805574	Collar-Throttle Shaft	
●634C	805580	Collar-Throttle Shaft	
977	808325	Gasket Set-Carburetor	
◆●987	806079	Seal-Throttle Shaft	
◆●1013	805581	Seal-Choke Shaft	
●1037	807717	Ball-Choke Locator	
●1091	805858	Cap-Limiter	

● Included in Carburetor Kit-Part No. 808324.

◆ Included in Carburetor Gasket Set-Part No. 808325.

TORO PART NUMBER INDEX

3318—214 REV. A

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
112843	Washer — PTO	4 17 1	74—0360	Frame — Rear	1 27 1
608006	Key — Crankshaft	4 21 1	74—0380	Control — Pivot	7 13 1
7—5461	Spacer	2 3 1	74—0480	Pulley — Drive	3 7 2
10—8110	Washer — Flat	3 17A/R	74—0521	Fitting — Rod	1 13 2
26—9671	VBelt — Traction	2 12 1	74—0610	Transmission	2 17 1
27—6230	Bolt	2 19 1	74—0720	Tube — Manual	6 1 1
29—5560	Switch — On/Off	6 16 1	82—2180	Panel — Control	6 4 1
95—2806	Wire Harness	8 1 1	82—2190	Switch — Bail	7 5 1
44—8310	Ring — Retaining	5 3 2	82—2280	Decal — Reverse Handle	7 14 1
44—8320	Spring	5 10 3	82—2290	Decal — Control Bar	7 7 1
44—8330	Spacer	5 6 1	82—2300	Switch — Clutch	6 9 1
44—8340	Collar — Bearing	5 7 1	82—3820	Boot	6 8 1
44—8360	Field Coil, Rotor & Bearing	5 4 1	82—4800	Lever — Idler	2 21 1
47—1970	Grip — Engagement	2 5 1	82—7631	Rod — Control	7 12 2
47—2980	Hose — Fuel	1 28 1	82—7680	Bail Assembly	7 10 1
51—4160	Pulley — Wheel	3 19 4	82—7740	Decal — Control Panel	6 2 1
51—4170	Spacer — Pulley	3 20 8	82—7750	Decal — Ground Speed	1 7 1
51—4180	Drum — Brake	3 22 2	92—1746	Bearing	3 14 4
51—4190	Pulley — Driven	2 13 1	93—1156	Frame	1 26 1
51—4220	Guard — Coupler	2 6 2	93—6657	Decal — Danger	6 10 1
51—4230	Washer — Wheel	3 29 2	93—7298	Bar — Control	7 4 1
51—4240	Shaft — Extension R.H.	3 5 1	93—7437	Panel — Bottom	6 19 1
51—4250	Shaft — Extension L.H.	3 * 1	94—4194	Engine — Briggs & Stratton	4 5 1
51—4260	Coupler	2 8 1	94—5838	Control — Throttle	6 14 1
51—4270	Bearing — Shaft Extension	3 1 2	94—5839	Control — Choke	6 3 1
51—4290	Belt — Drive	3 11 2	94—5847	Guard — Engine	4 15 1
51—4370	Spring — Torsion R.H.	1 * 1	94—9650	Elbow	4 3 1
51—4380	Spring — Torsion L.H.	1 22 1	94—9666	Module — Interlock	8 3 1
51—4450	Screw — Leveler	1 21 2	94—9666	Module — Interlock	6 18 1
51—4540	Retainer — Clutch	4 14 1	95—2800	Pulley — Idler	1 18 2
51—4580	Rod — Brake	3 3 2	95—2801	Spacer — Pulley	1 19 2
51—4600	Brake Arm R.H.	3 * 1	95—2802	Tank — Fuel	1 2 1
51—4610	Brake Arm L.H.	3 9 1	95—2814	Decal — Fuel Shut Off	1 31 1
51—4650	Link — Brake	3 21 2	218—461	Nut	6 6 1
51—4660	Plate — Link Brake	3 26 2	218—595	Connector — Body	7 3 1
51—4700	Brake Band Assembly	3 23 2	231—117	Tire	3 12 2
51—4850	Lever — Parking Brake	7 1 1	232—27	Valve Stem	3 16 2
52—2010	Decal — Parking Brake	7 2 1	237—7	ORing	1 35 1
52—2890	Bushing	1 5 2	237—124	Grommet	1 25 1
54—0230	Field Ass'y	5 1 1	237—141	Grommet — Rubber	7 9 2
54—2970	Spacer	6 12 2	242—80	Rim	3 15 2
54—3200	Clutch Assembly	4 18 1	2412—98	Clamp — Fuel line	1 29 2
55—3570	Cap — Fuel Tank	1 1 1	2412—120	RClamp	6 24 2
55—7410	Armature & Pulley Assemble	5 5 1	251—291	Bearing — Pulley	5 8 1
62—4540	Pulley — Idler	2 22 1	251—292	Bearing — Field	5 2 1
63—7590	Relay	8 2 1	256—155	Bushing	2 24 2
63—7590	Relay	6 21 1	283—6	Pin — Clevis	1 12 2
63—8360	Key	6 5 2	283—55	Pin — Clevis	7 15 2
63—8440	Decal — Hot	4 6 1	288—4	Cap — Pipe	4 1 1
65—3090	Decal — Instruction	6 7 1	289—46	Nipple	4 4 2
66—7400	Plate — Control	1 8 1	302—5	Fitting — Grease	2 7 2
67—6370	Bracket — Support R.H.	1 * 1	302—11	Fitting — Grease	3 13 2
67—6380	Bracket — Support L.H.	1 14 1	321—3	Screw — Hex. Hd.	6 20 2
67—6440	Handle — Upper	6 28 1	321—4	Screw — Hex. Hd.	3 2 4
68—2190	Spring — Extension	2 18 18	322—2	Screw — Hex. Hd.	2 15 4
68—9690	Fitting — Rod	1 6 2	322—4	Screw — Hex. Hd.	1 10 4
72—2190	Mount — Shift Lever	2 1 1	322—7	Screw — Hex. Hd.	3 25 8
74—0040	Spacer — Pivot Idler	1 23 4	322—9	Screw — Hex. Hd.	4 12 2
74—0050	Sheave — Lower Half	4 19 1	322—17	Screw — Hex. Hd.	4 13 2
74—0060	Sheave — Upper Half	4 20 1	323—7	Screw — Hex. Hd.	1 16 6
74—0220	Idler — Bracket L.H.	1 20 1	323—9	Screw — Hex. Hd.	2 23 1
74—0230	Idler — Bracket R.H.	1 * 1	323—16	Screw — Hex. Hd.	1 15 2
74—0320	Lever — Shift	2 2 1	329—10	Screw — Hex. Hd.	2 4 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3212—9	Screw — Hex. Hd.	4 16 1	3296—2	Nut — Lock	6 11 4
3217—6	Nut	4 8 2	3296—5	Nut — Lock	5 9 3
3234—11	Screw — Hex. Hd.	6 23 4	3296—6	Nut	2 25 1
3241—5	Screw — Socket Hd.	2 11 1	3296—23	Nut — Lock	1 17 2
3245—3	Screw — Socket Hd. Set	3 6 2	3296—29	Nut	4 7 3
3253—4	Washer — Lock	1 9 4	3296—39	Nut — Lock	2 20 1
3253—4	Washer — Lock	2 16 4	3296—39	Nut — Lock	1 36 2
3253—4	Washer — Lock	3 24 8	3296—39	Nut — Lock	1 24 6
3253—4	Washer — Lock	4 11 3	3296—42	Nut — Hex	6 17 2
3254—5	Washer — Lock	6 15 1	3296—42	Nut — Lock	2 9 4
3255—7	Washer	6 29 1	32103—25	Nut — Wing	1 3 2
3255—8	Washer — Lock	4 9 1	32104—76	Screw — Self Tapping	6 25 4
3256—23	Washer — Flat	1 4 10	32105—1	Screw — Hex. Hd. Machine	7 8 1
3256—23	Washer — Flat	4 10 2	32105—14	Screw — Hex. Hd. Machine	6 13 4
3256—24	Washer	2 30 1	32120—64	Ring — Retaining	2 10 3
3257—5	Key — Woodruff	3 4 3	32128—21	Nut — Lock	6 27 4
3290—307	Pin — Cotter	3 8 2	32151—40	Ring — Retaining	3 10 2
3290—307	Pin — Cotter	1 11 4	32151—56	Ring — Retaining	3 28 2
3290—307	Pin — Cotter	7 11 2	32151—72	Ring — Retaining	3 27 4
3290—378	Cable Tie	6 26 3	32151—80	Ring — Push On	7 16 2
3296—2	Nut — Lock	7 6 5	32151—91	Ring — Retaining	3 18 2

TABLE OF CONTENTS

Description	Page	Description	Page
Frame, Fuel Tank & Wheel Drive Idler	1	Peerless Transmission	9
Transmission, Idler. Drive Pulleys & Drive Belts	2	Obtain Parts Peerless	
Axle, Brake, Wheel Drive Belt	3	16 HP Briggs & Stratton	
Engine Asm	4	Model 303776 Type 1188	10—20
Clutch Asm	5	Obtain Parts From Briggs & Stratton	
Handle Asm	6	Toro Numeric Parts Index	21
Electric Schematic	8		

Optional Equipment

Description	Model / Part No.	Description	Model / Part No.
36" Cutting Unit	Model No. 30136	KITS	
37" Cutting Unit	Model No. 30137	Bagging For 36" Deck	Model No. 30125
44" Cutting Unit	Model No. 30144	Bagging For 37" Deck	Model No. 30129
48" Cutting Unit	Model No. 30148	Height Of Cut 36" & 37" Decks . . .	Part No. 84—5010
52" Cutting Unit	Model No. 30152	Front Weight	Part No. 80—3350
62" Cutting Unit	Model No. 30162	Idler	Part No. 85—7360
Standard Sulky	Model No. 30122	Electric Start	Part No. 74—0980
Steerable Sulky	Model No. 30123		

[illegible]

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]