



Count on it.

Form No. 3365-321 Rev A

Parts Catalog

Greensmaster® Flex™ 21 Traction Unit

Model No. 04025—Serial No. 310002001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Frame Assembly	4
Reel Drive Assembly	5
Drum Drive and Basket Assembly	6
Gearbox and Engine Assembly	8
Gearbox Assembly	9
Differential Assembly No. 99-2038	11
Handle Assembly	12
Cylinder and Crankcase Assembly	14
Piston and Crankshaft Assembly	15
Valve and Camshaft Assembly	16
Lubrication Equipment Assembly	17
Cooling Equipment Assembly	18
Electric Equipment Assembly	19
Control Equipment Assembly	20
Carburetor Assembly	21
Air Filter and Muffler Assembly	22
Fuel Tank and Fuel Valve Assembly	23
Starter Assembly	24
Label Set	25
Attachments and Accessories	26

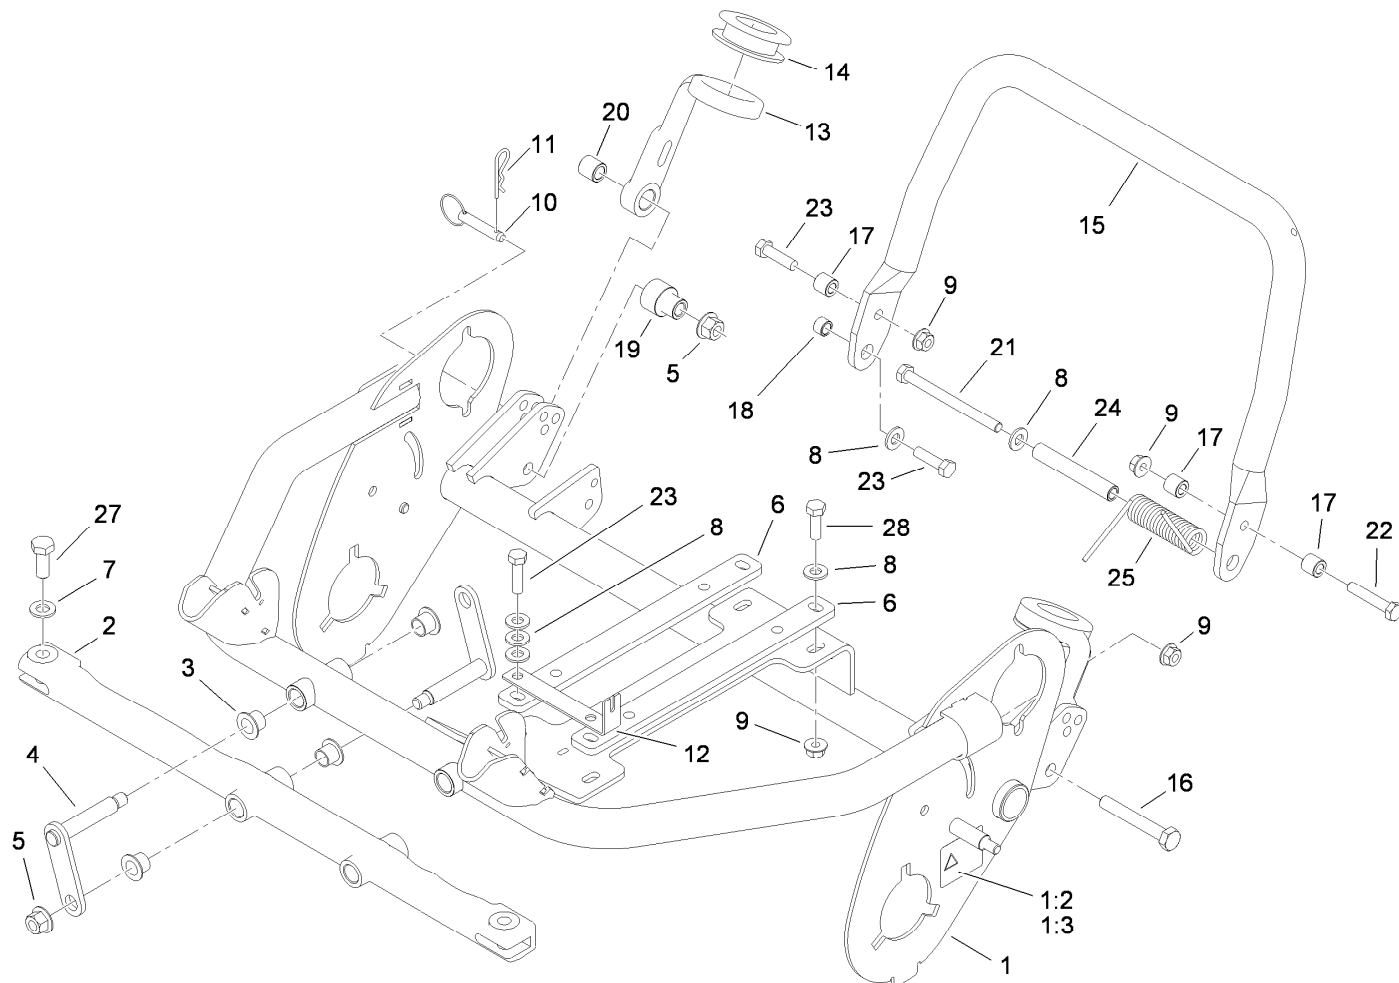

Frame Assembly

Ref.	Part Number	Qty.	Description
1	110-2401	1	Frame ASM
1:2	93-9356	2	Decal-Warning, Belt
1:3	93-9389	2	Decal-Warning, Belt (Japan)
2	104-9798-01	1	Front Frame ASM
3	93-2561	8	Bushing-Flange
4	99-2063	4	Link ASM
5	104-2611	6	Nut-HF
6	99-2070-01	2	Base-Engine
7	33095-00	2	Washer-Flat
8	33094-00	8	Washer-Plain
9	117-1350	8	Nut-HF, Lock
10	93-6029	2	Pin-Clevis, Ring
11	3290-467	2	Pin-Hair
12	105-9939	1	Strap-Support, Cable
13	99-3774-03	2	Arm-Handle


Ref.	Part Number	Qty.	Description
14	65-7510	2	Grommet-Handle
15	99-3778-03	1	Kickstand
16	33115-070	2	Screw-HH
17	93-6024	3	Bushing-Support, Handle
18	65-7910	1	Spacer
19	108-3177	2	Spacer-Hub
20	99-2058	2	Spacer-Support, Handle
21	33114-100	1	Screw-HH
22	33114-045	1	Screw-HH
23	33114-030	3	Screw-HH
24	104-0502	1	Spacer-Kickstand, Long
25	99-2011	1	Spring-Torsion
27	33115-025	2	Screw-HH
28	33114-025	3	Screw-HH

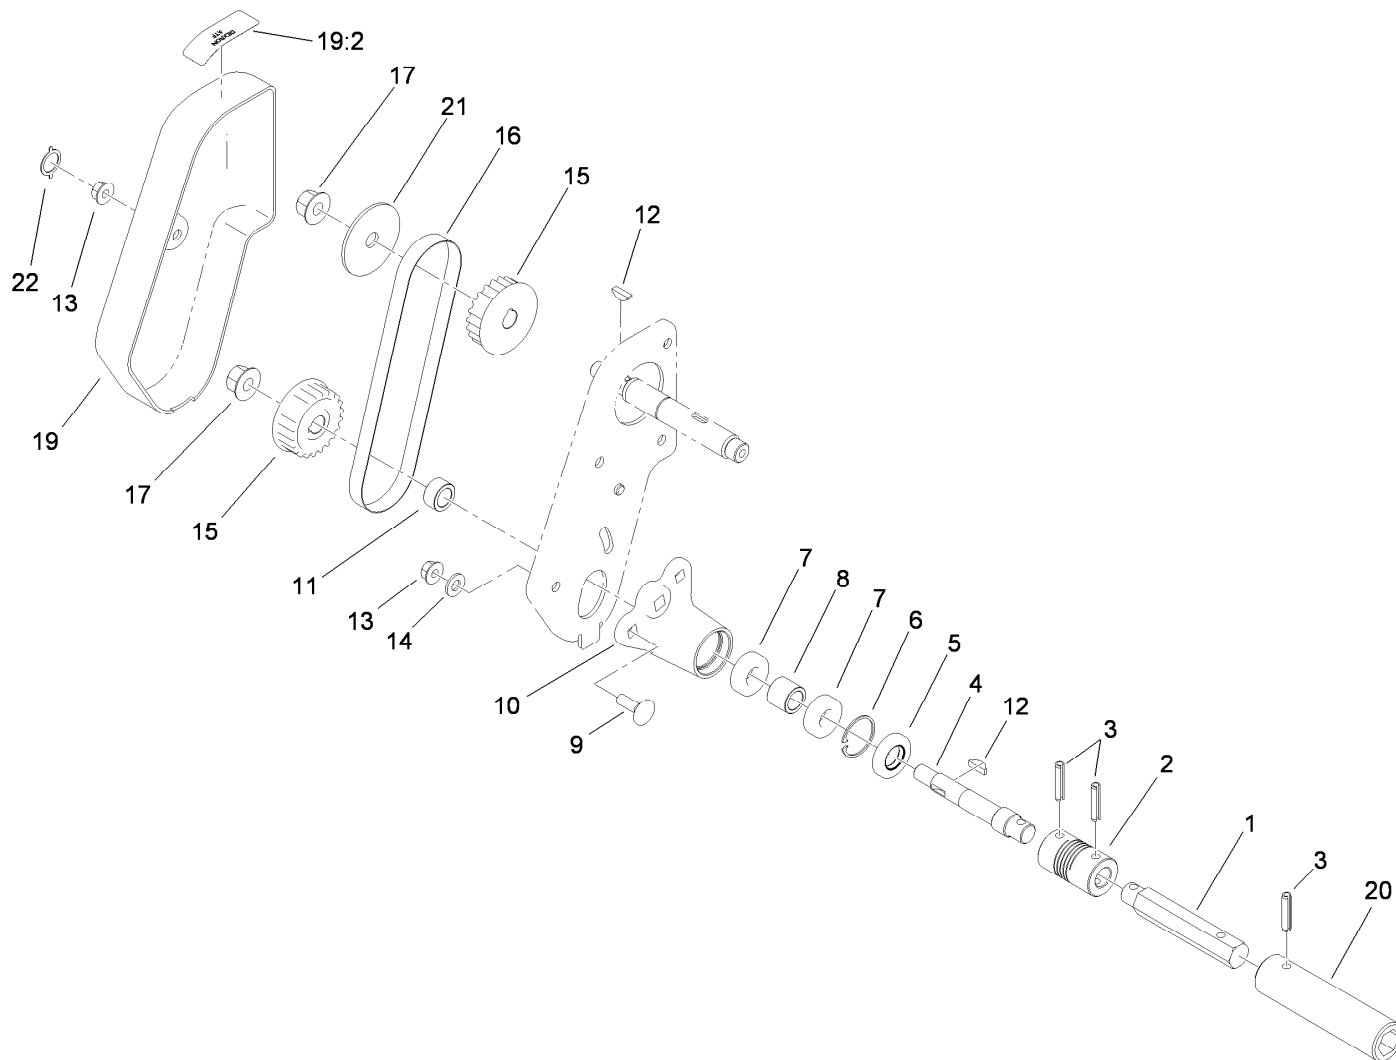

Reel Drive Assembly


Ref.	Part Number	Qty.	Description
1	110-2389	1	Shaft-Hex
2	99-3757	1	Coupling-Flex
3	32121-69	3	Pin-Spring
4	110-2382	1	Shaft-Drive, Reel
5	107-3205	1	Seal-Oil
6	32151-51	1	Ring-Retaining
7	251-336	2	Bearing-Ball
8	99-2079	1	Spacer
9	33124-025	2	Screw-CARR
10	99-2083	1	Housing-Bearing
11	110-2381	1	Spacer

Ref.	Part Number	Qty.	Description
12	3257-30	2	Key-Woodruff
13	117-1350	3	Nut-HF, Lock
14	33094-00	2	Washer-Plain
15	107-9044	2	Pulley-22 Tooth
16	99-2022	1	Belt
17	115-1115	2	Nut-HHF, Lock
19	110-2286	1	Belt Cover ASM
19:2	105-2411	1	Decal-Oil, HYD
20	110-2390	1	Tube-Hex
21	104-0532	1	Washer-Pulley
22	119-4140	1	Tab-Retainer

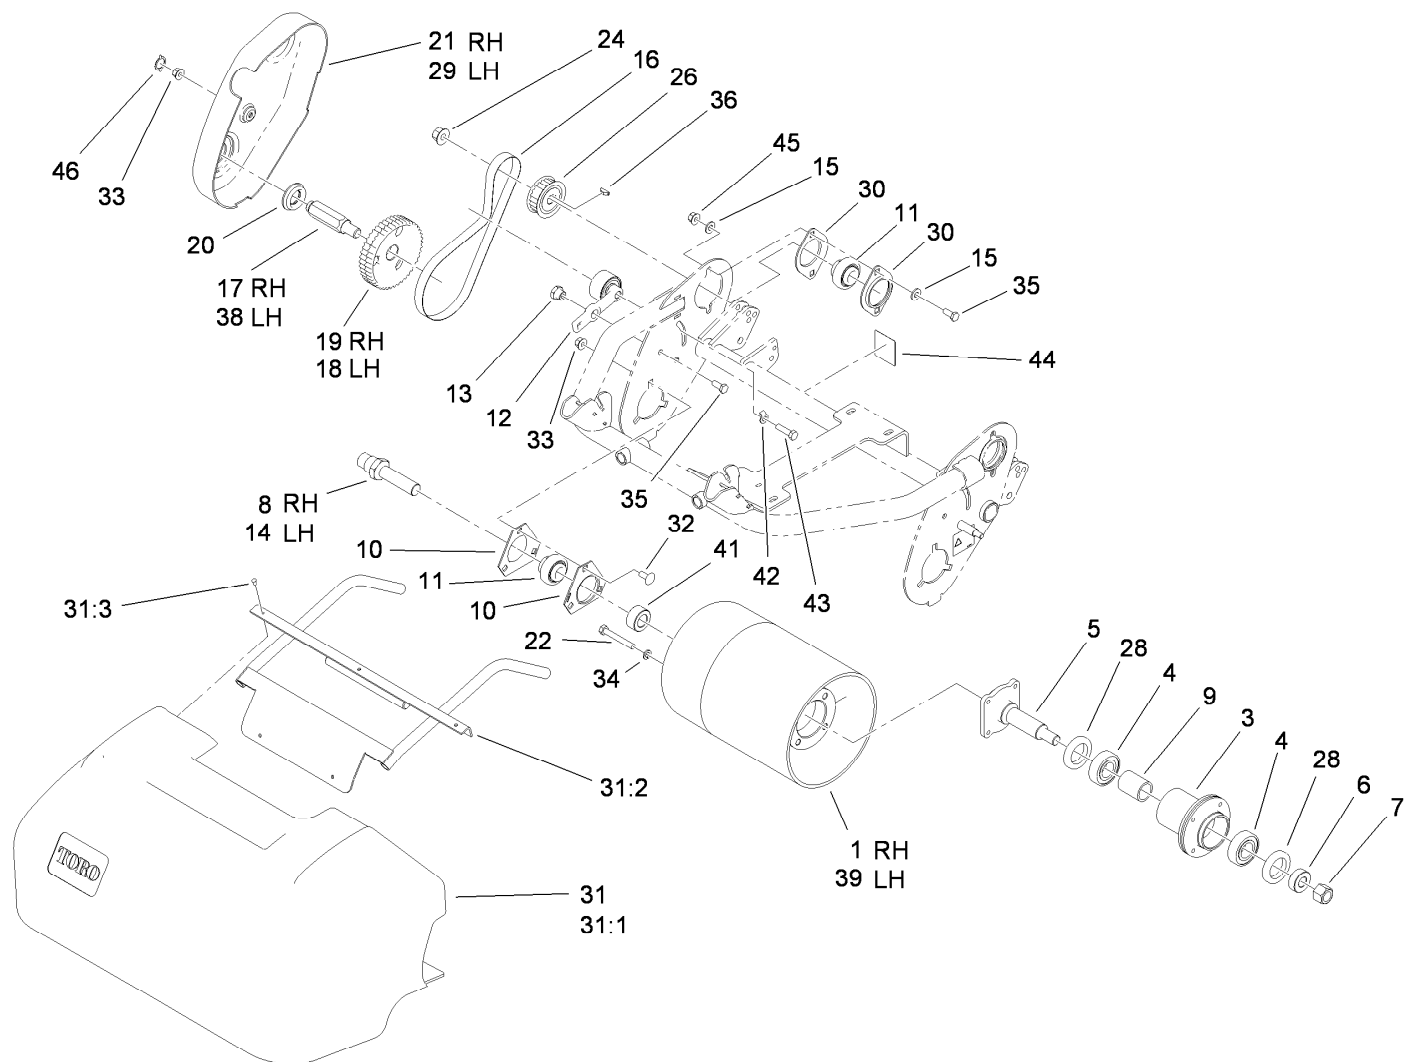

Drum Drive and Basket Assembly (continued)

Ref.	Part Number	Qty.	Description
45	98-0668	4	Nut
46	119-4047	2	Tab-Retainer

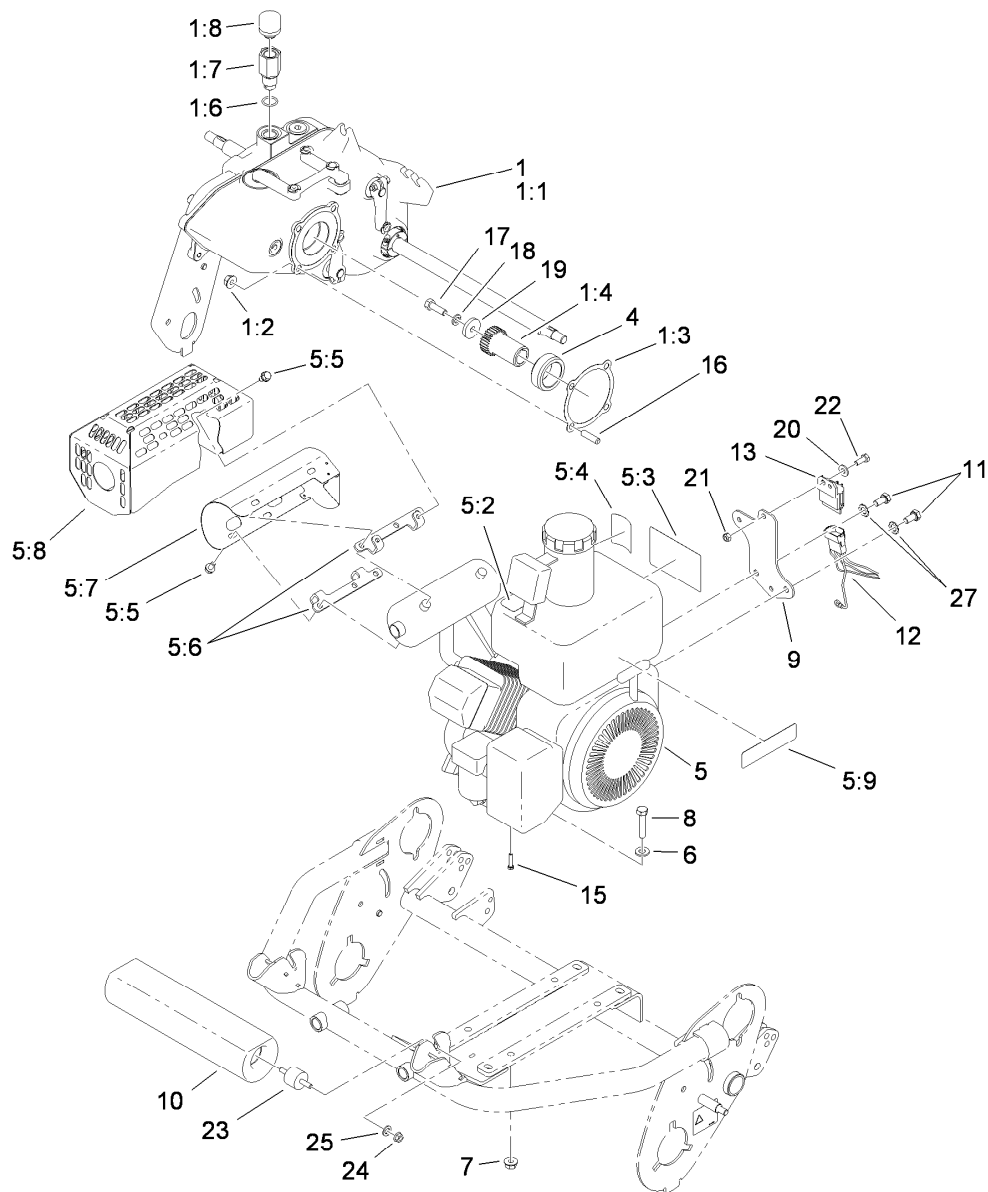


Gearbox and Engine Assembly

Ref.	Part Number	Qty.	Description
1	117-1457	1	Gearbox Service ASM
1:1		1	Gearbox ASM ●
1:2	117-1350	4	Nut-HF, Lock
1:3	99-2052	1	Gasket-Flange
1:4	110-2445	1	Gear-Engine, 28 Tooth
1:6	237-79	1	O-Ring
1:7	117-1453	1	Adapter-Vent
1:8	117-1446	1	Vent-Breather
4	99-2001	1	Adapter-Engine
5	117-1464	1	Engine ASM
5:2	115-1615	1	Decal-Surface, Hot
5:3	115-1613	1	Decal-Danger
5:4	93-9886	1	Decal-Fuel
5:5	104-2628	8	Screw-HWH
5:6	104-9771	2	Bracket-Guard, Muffler
5:7	112-9360	1	Shield-Muffler, Inner
5:8	112-9361-03	1	Guard-Muffler
5:9	117-2718	1	Decal-Arrester, Spark
6	33094-00	4	Washer-Plain

Ref.	Part Number	Qty.	Description
7	117-1350	8	Nut-HF, Lock
8	33114-040	4	Screw-HH
9	117-1365-03	1	Plate-Harness, Wire
10	117-1459-01	1	Damper-13Lbs
11	33114-016	2	Screw-HH
12	117-1410	1	Harness-Wire
13	1-323430	1	Module-Interlock
15	94-9015	1	Screw-HH
16	108-9446	4	Screw-Set
17	3210-5	1	Screw-HH
18	3253-4	1	Washer-Lock
19	65-8270	1	Washer
20	3256-22	1	Washer-Flat
21	33023-00	1	Nut-Lock
22	33113-016	1	Screw-HH
23	110-2259	2	Mount-Isolator
24	33003-00	2	Nut-HF
25	107-7601	2	Washer-Tab
27	3255-9	2	Washer-Lock


● Not serviced separately

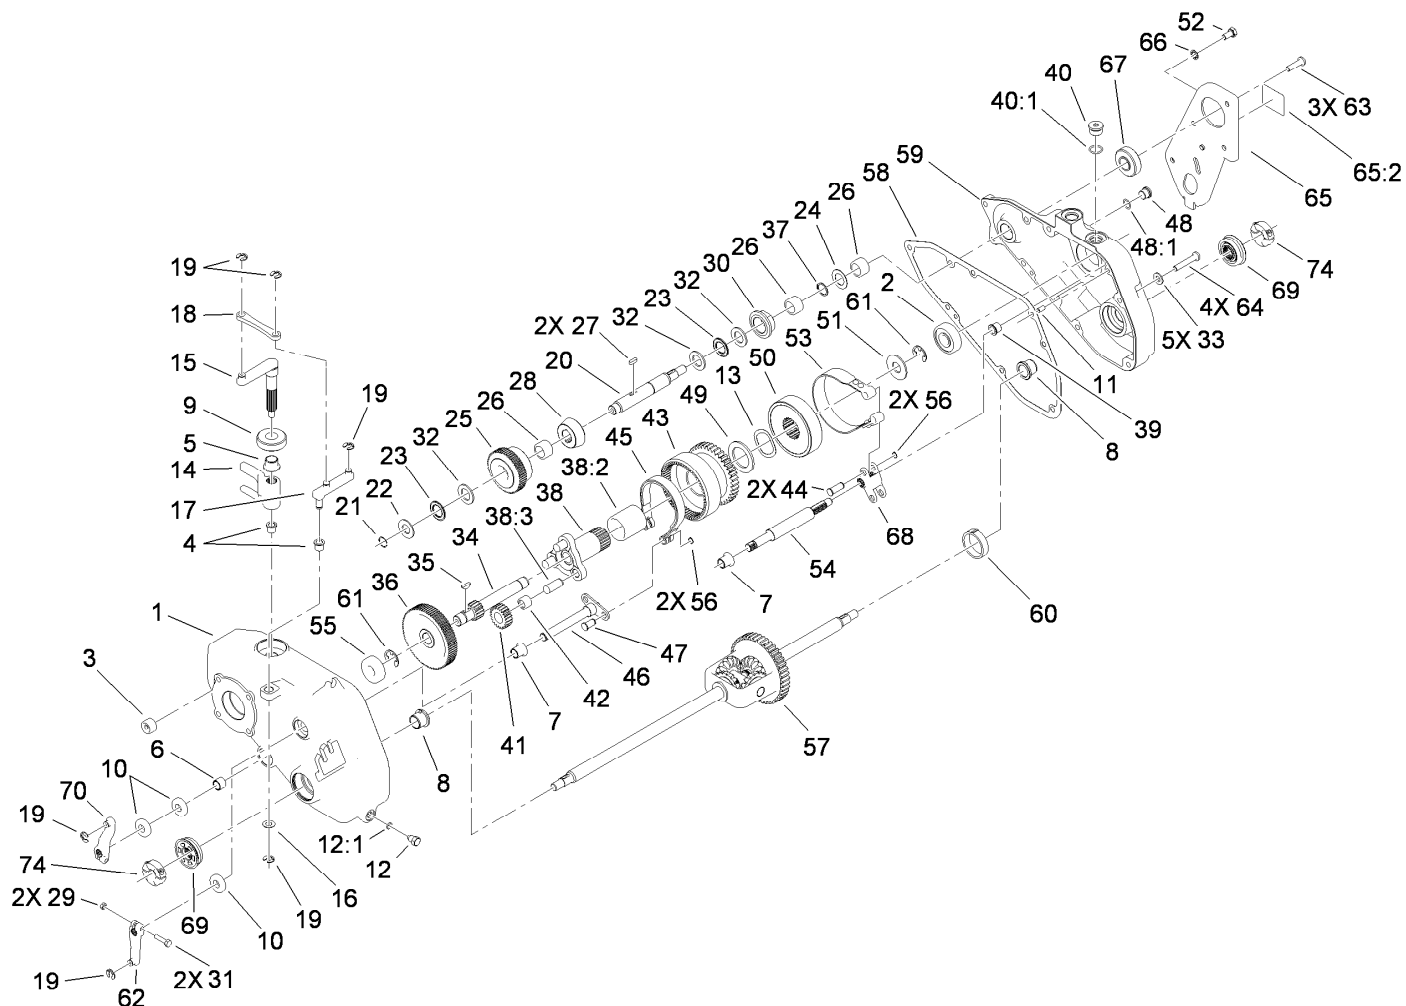

Gearbox Assembly


Ref.	Part Number	Qty.	Description
1	117-1450	1	Housing-Gearbox
2	110-7339	1	Bearing-Ball
3	98-4194	1	Bearing-Needle, Caged
4	256-316	2	Bushing
5	256-287	1	Bushing
6	256-1	1	Bushing
7	256-219	2	Bushing
8	99-2062	2	Bushing-Keyed, Flanged
9	99-3842	1	Seal-Oil, Non-Vented Gearbox
10	99-2056	3	Seal-Oil
11	95-0715	2	Pin-Dowel
12	110-2455	1	Fitting-Plug, Magnetic
12:1	237-118	1	O-Ring
13	105-9944	1	Washer-Wave, Spring
14	99-2014	1	Fork-Clutch
15	99-2015	1	Shaft-Fork
16	37-8080	1	Washer-Thrust
17	110-2450	1	Lever-Bellcrank
18	99-3780	1	Link
19	32151-47	6	Ring-Retaining

Ref.	Part Number	Qty.	Description
20	115-1117	1	Shaft-Clutch, Reel
21	99-3805	1	Ring-Retaining
22	99-3806	1	Washer-Thrust
23	99-3836	2	Bearing-Thrust
24	99-3837	1	Washer-Thrust
25	110-2444	1	Gear-Clutch, 55 Tooth (Reel Crowned)
26	1523	3	Bearing-Needle
27	99-2059	2	Key
28	107-3232	1	Cone ASM
29	33023-00	2	Nut-Lock
30	110-2459	1	Hub-Plunger
31	33113-025	2	Screw-HH
32	99-3807	3	Washer-Thrust
33	33094-00	5	Washer-Plain
34	107-8128	1	Shaft-Sun
35	3257-30	1	Key-Woodruff
36	110-2442	1	Gear-Traction, 78 Tooth (Crowned)
37	32120-72	1	Ring-Snap
38	110-2439	1	Carrier ASM

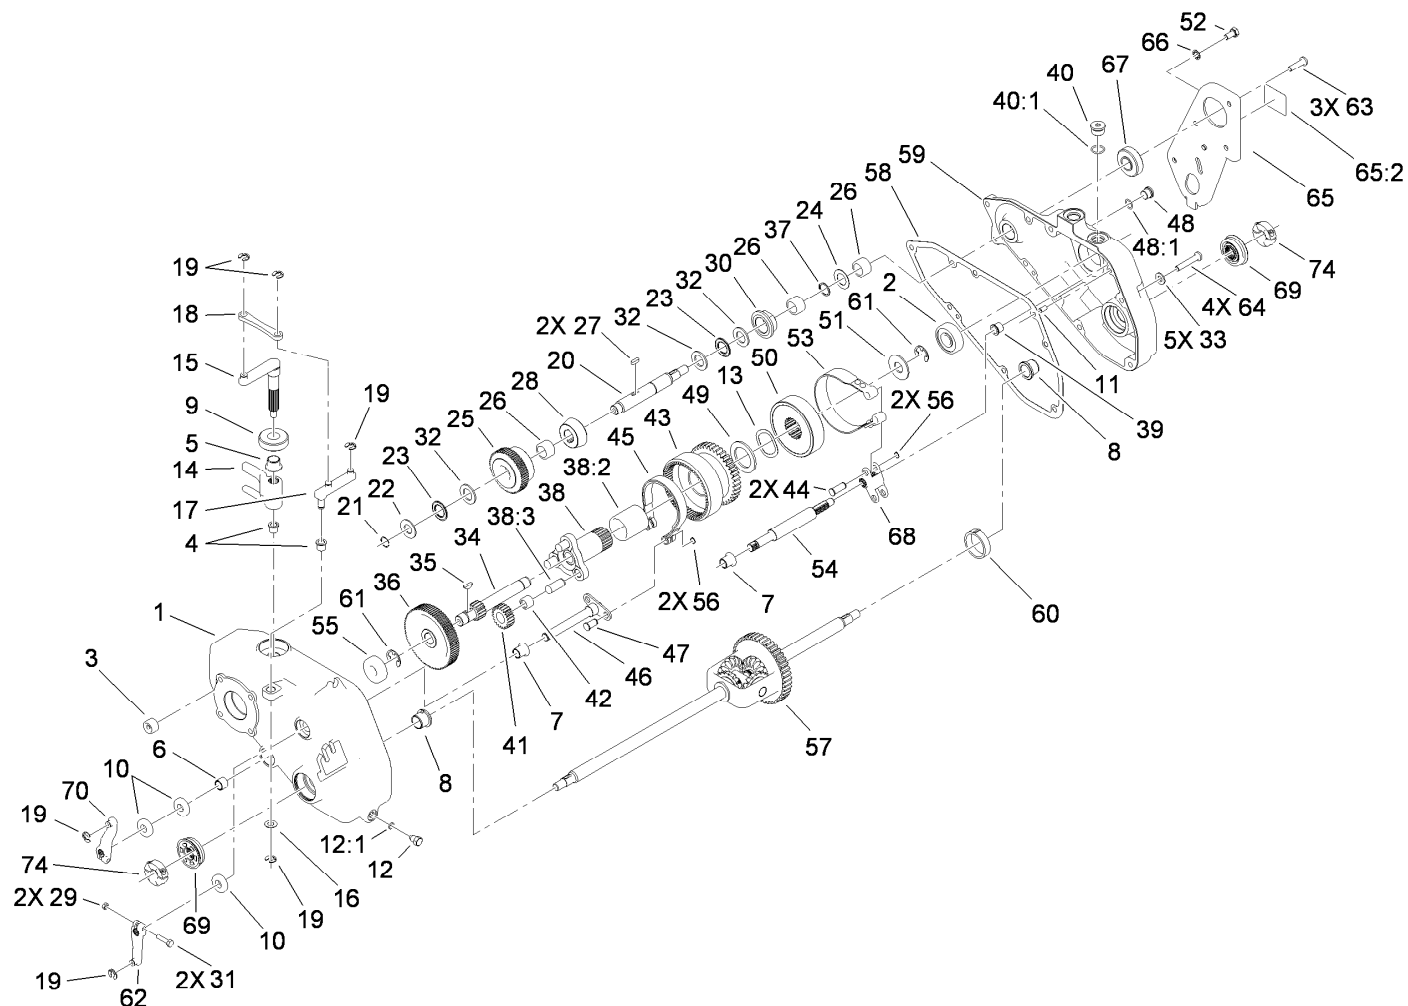


Gearbox Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
38:2	104-0524	1	Bushing-Carrier	55	251-6	1	Bearing-Ball
38:3	107-9031	3	Pin-Dowel	56	32120-46	4	Ring-Retaining
39	104-9776	1	Bushing-Flanged	57	99-2038	1	Differential ASM
40	353-988	1	Plug-Hex	58	117-1452	1	Gasket-Gearbox
40:1	237-79	1	O-Ring	59	117-1451	1	Cover-Gearbox
41	106-4694	3	Gear-Spur	60	99-2061	1	Bushing-Keyed
42	48-2060	3	Bearing-Roller	61	32151-48	2	E-Ring
43	110-2451	1	Gear-Ring, Planetary	62	99-3761	1	Lever-Gearbox
44	106-8444	2	Pin-Clevis, Long	63	99-6208	3	Screw-HSH
45	99-2049	1	Band-Brake	64	99-6207	4	Screw-HSBH
46	99-2020	1	Shaft-Brake	65	110-2293	1	Drive Plate ASM
47	106-8445	2	Pin-Clevis, Short	65:2	93-9389	1	Decal-Warning, Belt (Japan)
48	353-989	1	Plug-Hex, Hollow	65:2	93-9356	1	Decal-Warning, Belt
48:1	237-42	1	O-Ring	66	3254-2	1	Washer-Lock, Internal
49	99-2054	1	Washer-Thrust	67	105-2429	1	Seal-Oil
50	110-2452	1	Drum-Clutch, Traction	68	105-9938	1	Hub-Clutch, Traction
51	99-2055	1	Washer-Thrust	69	117-1443	2	Seal-Oil, Vented Gearbox
52	33114-016	1	Screw-HH	70	110-3451	1	Lever-Gearbox
53	107-9042	1	Clutch Band ASM	74	117-1388	2	Collar Assembly
54	105-9937	1	Shaft-Clutch, Traction				

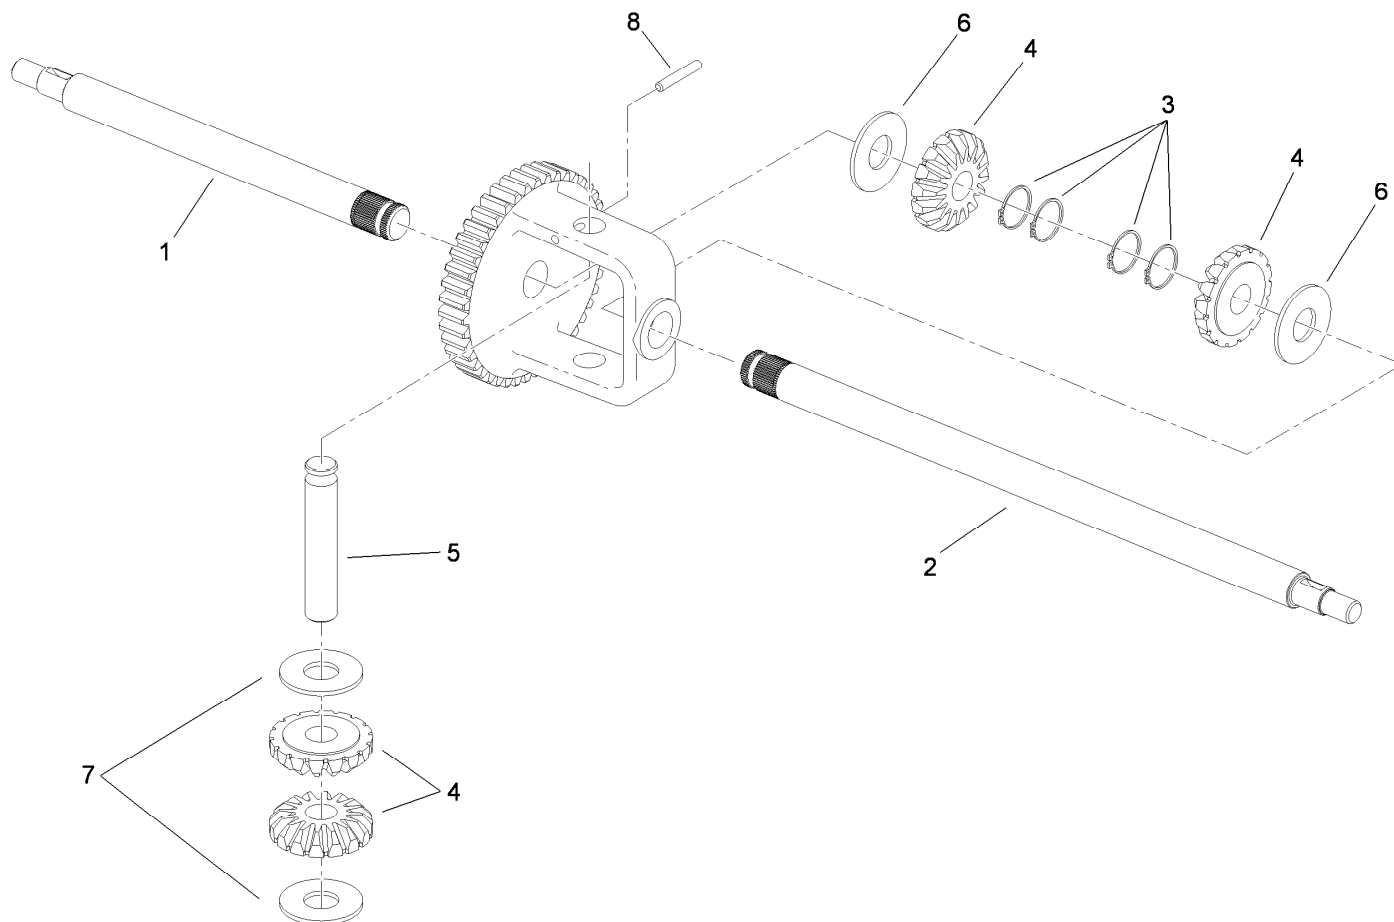

Differential Assembly No. 99-2038


Ref.	Part Number	Qty.	Description
1	105-2402	1	Axle (Short)
2	105-2403	1	Axle (Long)
3	95-5746	2	Ring-Retaining
4	105-2405	1	Gear Set-Differential
5	105-2404	1	Pin-Drive
6	95-5745	2	Washer
7	105-2406	2	Washer-Thrust
8	32121-79	1	Pin-Roll

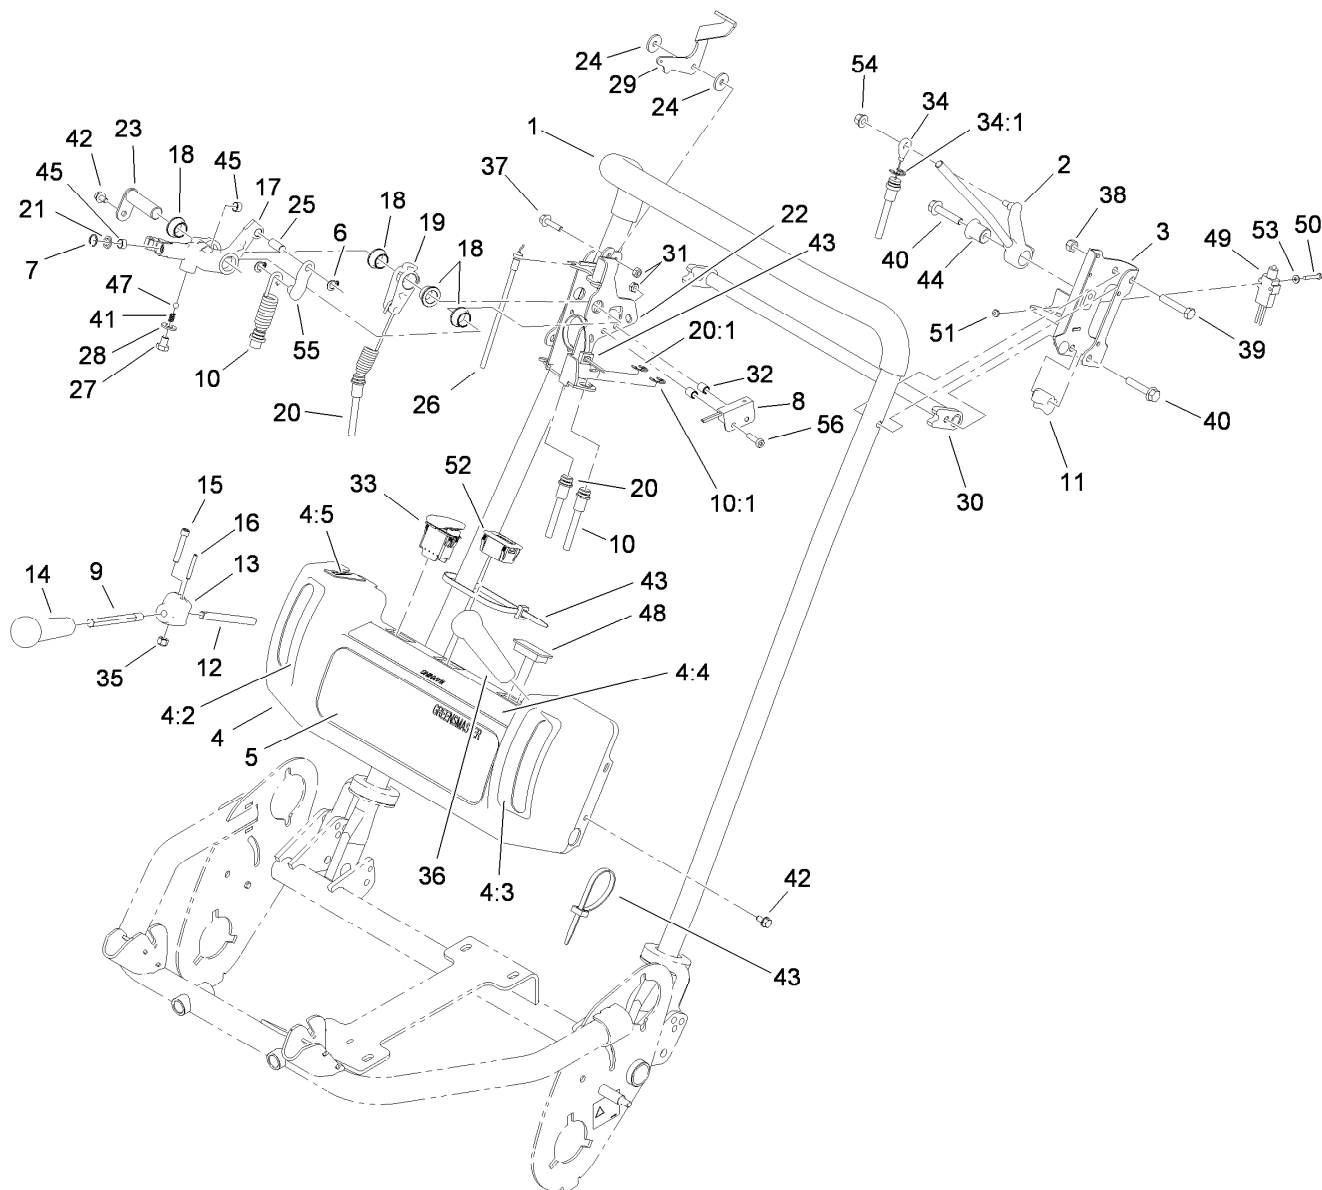

Handle Assembly

Ref.	Part Number	Qty.	Description
1	110-2414	1	Handle
2	117-1361	1	Lever-Brake, Console
3	117-1363-03	1	Brake Bracket ASM
4	115-1123	1	Console ASM
4:2	104-2617	1	Decal-Lever, Traction
4:3	104-2618	1	Decal-Lever, Brake
4:4	115-1614	1	Decal-Warning
4:5	93-6085	1	Decal-Throttle
5	105-9916	1	Decal-Console, Main
6	105-2410	2	Ring-Retaining
7	105-5324	1	Ring-Retaining
8	100-1270	1	Switch-Proximity
9	105-5319	1	Rod-Handle
10	117-1435	1	Cable-Traction
10:1	32120-47	1	Ring-Retaining, External
11	110-2415	2	Clamp-Handle
12	99-3835	1	Pin
13	104-9761	1	Hub-Mount, Handle
14	104-9760	1	Knob-Black
15	105-5349	1	Screw-HSH, Special
16	32121-51	1	Pin-Roll


Ref.	Part Number	Qty.	Description
17	104-9758	1	Lever-Control, Traction
18	80-1290	4	Bushing
19	99-3830	1	Lever-Reel
20	99-3765	1	Cable-Clutch, Reel
20:1	32120-47	1	Ring-Retaining, External
21	105-2407	1	Wiper
22	110-7334-03	1	Control Bracket ASM
23	99-3833	1	Pin-Lever, Reel
24	66-2921	2	Washer-Friction
25	104-9782	1	Pin-Dowel
26	104-2620	1	Cable-Throttle
27	108-8646	1	Screw-HH, Lock
28	33094-00	1	Washer-Plain
29	108-3179	1	Lever-Throttle
30	112-9425	1	Handle-Crossmember
31	33023-00	3	Nut-Lock
32	105-2401	2	Spacer-Cable, Brake
33	112-9420	1	Switch-Engine
34	99-6214	1	Cable-Brake
34:1	32120-47	1	Ring-Retaining, External
35	3296-42	1	Nut-Lock, NI

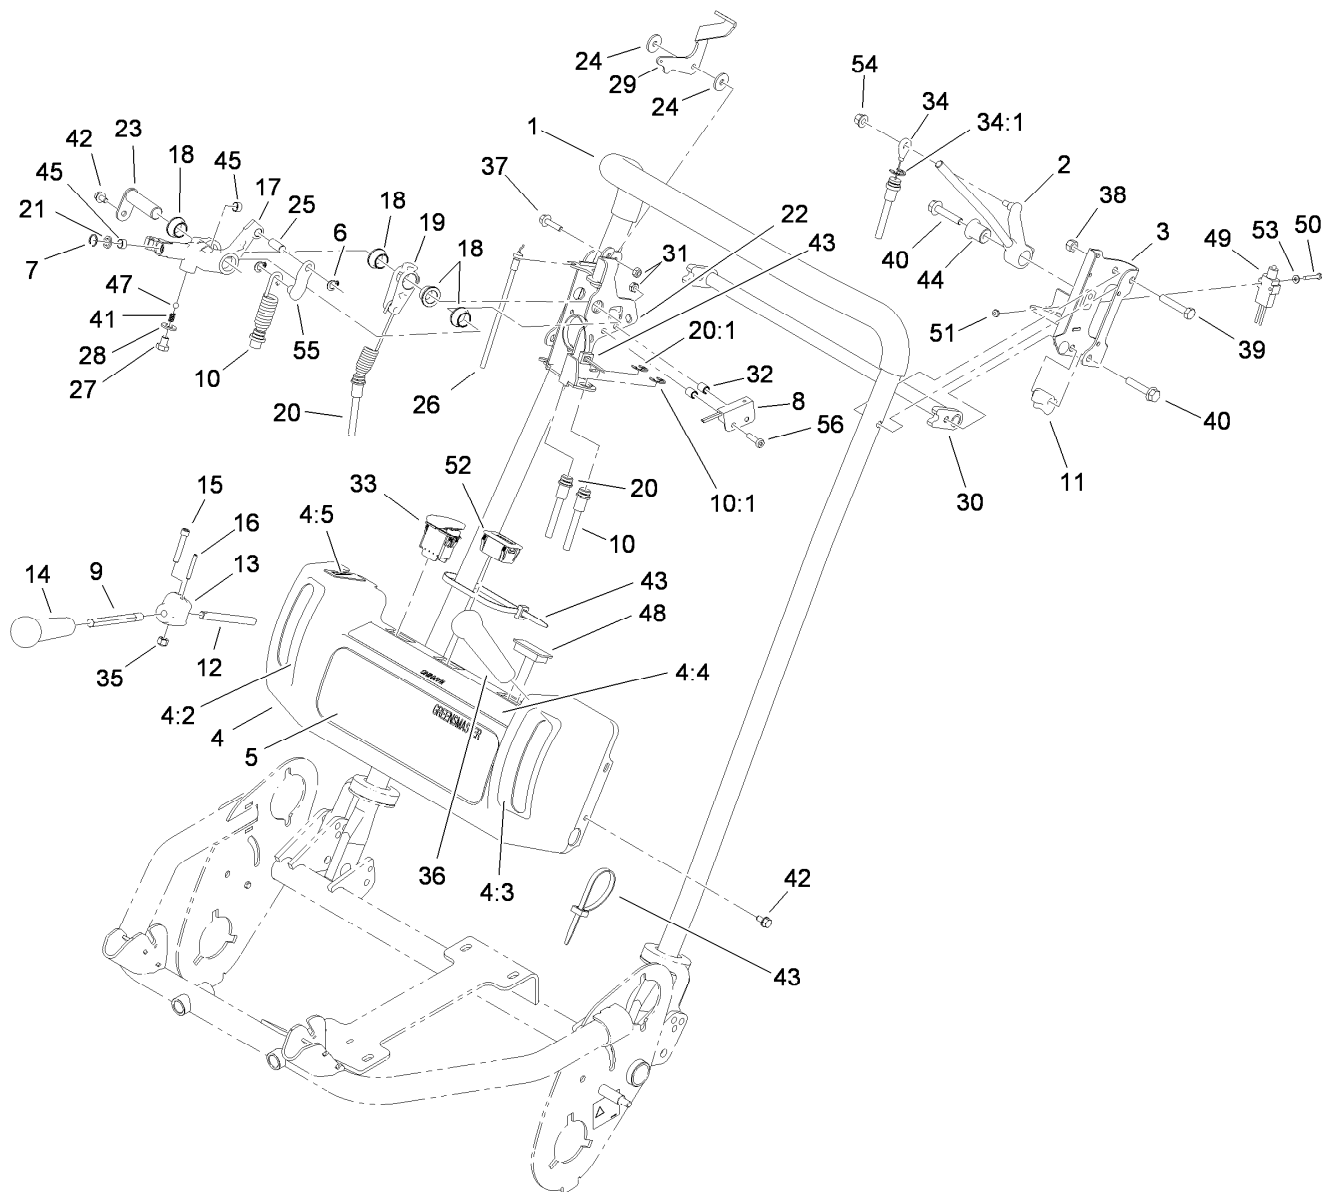

Handle Assembly (continued)

Ref.	Part Number	Qty.	Description
36	104-9774	1	Knob-Red
37	33103-025	1	Screw-HHF
38	33024-00	2	Nut-Lock
39	33114-045	2	Screw-HH
40	112-9419	3	Screw-HHF, W/Lock
41	105-2443	1	Spring-Detent
42	104-2628	5	Screw-HWH
43	3290-378	5	Tie-Cable
44	112-9317	1	Bushing-Flanged
45	99-6247	2	Bushing-Bronze


Ref.	Part Number	Qty.	Description
47	105-2442	1	Ball-Detent
48	99-7420	1	Plug-Hole
49	95-8900	1	Switch
50	32105-9	2	Screw
51	3296-9	2	Nut-Lock
52	119-1347	1	Meter-Hour
53	3269-6	2	Washer-Flat
54	81-0130	1	Nut-Flange, NI
55	117-1428	1	Link-Traction
56	112-9356	2	Screw-HSBH

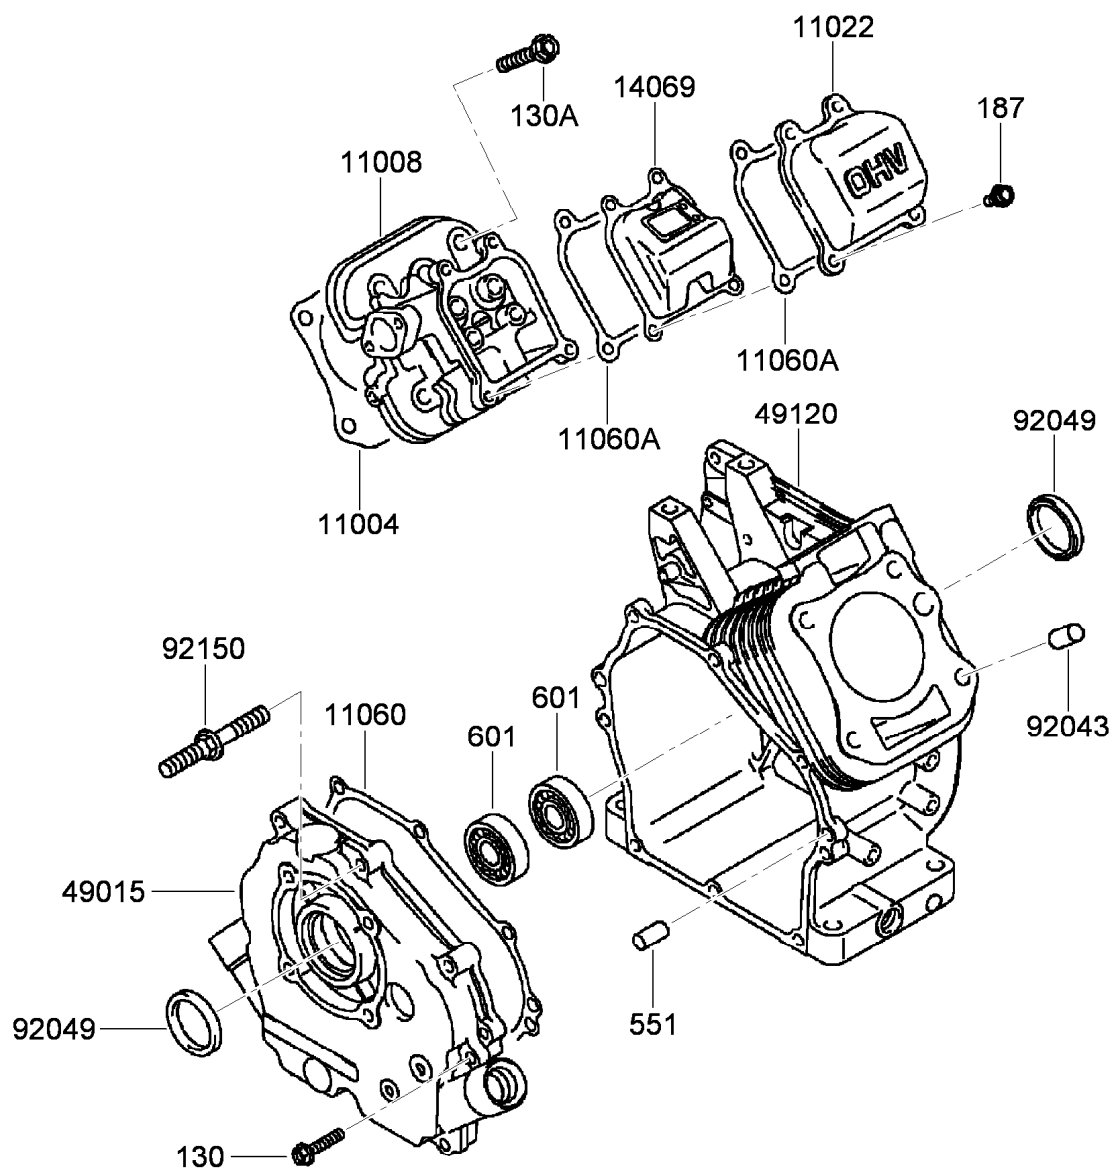

Cylinder and Crankcase Assembly


Ref.	Part Number	Qty.	Description
130	108-2522	7	Bolt-Flanged (6X30)
130A	115-1759	4	Bolt-Flanged (8X45)
187	115-1760	4	Bolt-Upset, Wsp (6X16)
551	93-8516	2	Pin-Dowel (6X12)
601	93-8517	2	Bearing-Ball
11004	93-8504	1	Gasket-Head
11008	115-1757	1	Head-Cylinder
11022	93-8508	1	Case-Rocker

Ref.	Part Number	Qty.	Description
11060	93-8525	1	Gasket-Cover, Crankcase
11060A	93-8509	2	Gasket-Case, Rocker
14069	93-8510	1	Breather
49015	93-8697	1	Cover-Crankcase
49120	93-8515	1	Crankcase
92043	93-8512	2	Pin
92049	93-8511	2	Seal-Oil
92150	93-8524	1	Stud

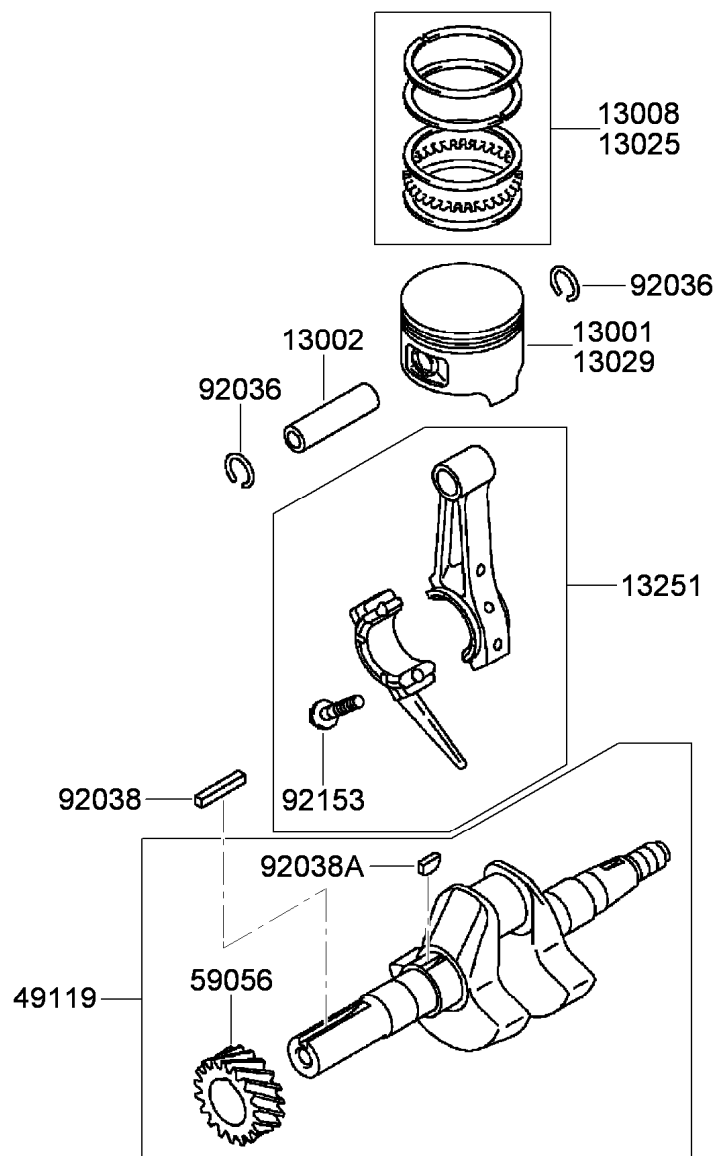

Piston and Crankshaft Assembly


Ref.	Part Number	Qty.	Description
13001	93-8502	1	Piston
13002	93-8501	1	Pin-Piston
13008	93-8503	1	Set-Ring, Piston
13025	94-6837	1	Piston Ring Set (.05Mm)
13029	94-6836	1	Piston (0.5 O S)
13251	93-8528	1	Connecting Rod ASM
49119	93-8696	1	Crankshaft ASM
59056	94-9043	1	Gear-Helical
92036	93-8500	2	Ring-Retaining
92038	93-8526	1	Key
92038A	93-8698	1	Key
92153	115-1805	2	Bolt (6X30)

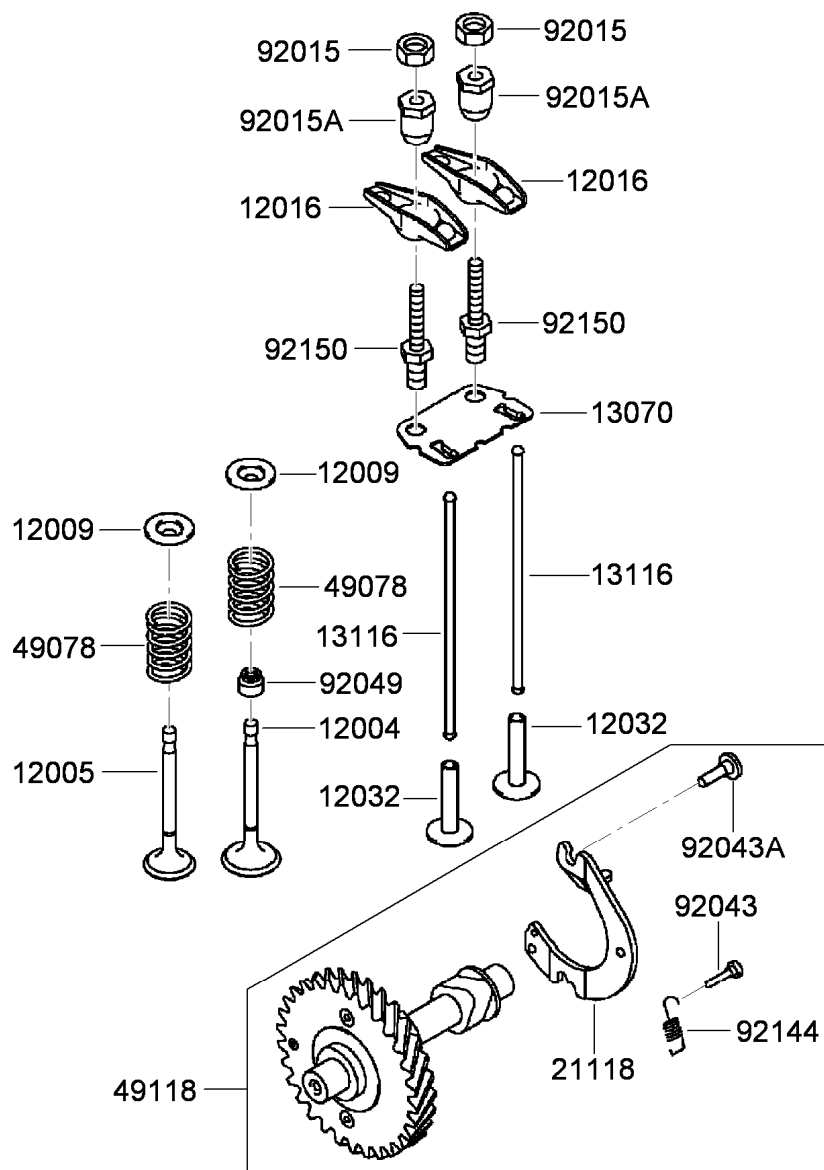

Valve and Camshaft Assembly


Ref.	Part Number	Qty.	Description
12004	93-8532	1	Valve-Intake
12005	93-8529	1	Valve-Exhaust
12009	93-8531	2	Retainer-Spring, Valve
12016	93-8535	2	Arm-Rocker
12032	93-8539	2	Tappet
13070	115-1758	1	Guide
13116	93-8538	2	Rod-Push
21118	93-8543	1	Decompressor
49078	108-2533	2	Spring-Valve, Engine

Ref.	Part Number	Qty.	Description
49118	93-8699	1	Camshaft ASM
92015	93-8533	2	Nut
92015A	93-8534	2	Nut
92043	93-8542	1	Pin
92043A	93-8540	2	Pin
92049	115-1762	1	Seal-Oil
92144	93-8541	1	Spring
92150	93-8536	2	Bolt

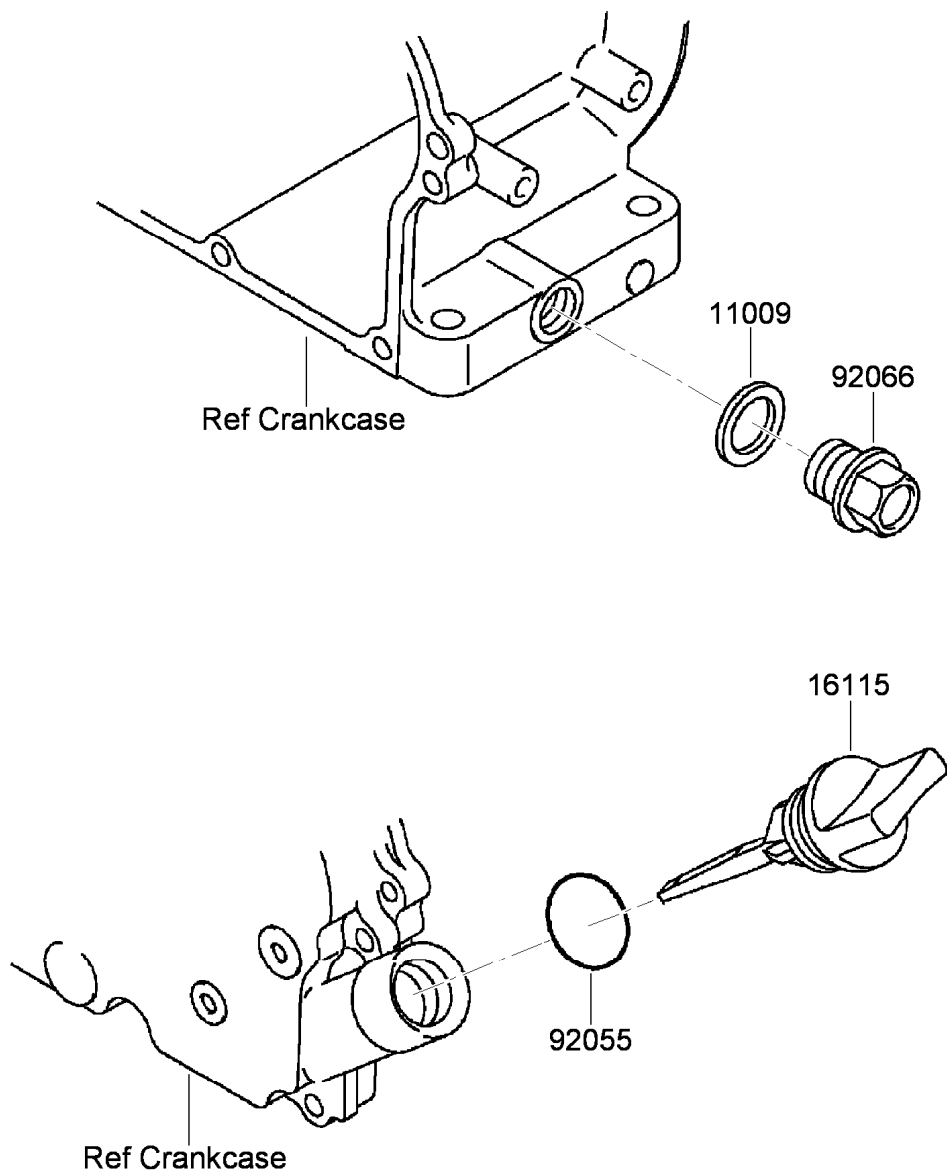


Lubrication Equipment Assembly

Ref.	Part Number	Qty.	Description
11009	93-8514	2	Gasket-Plug, Drain (14.2X19X2)
16115	93-8523	2	Cap-Filler, Oil
92055	94-9041	2	O-Ring (20Mm)
92066	115-1761	2	Plug (14X12)

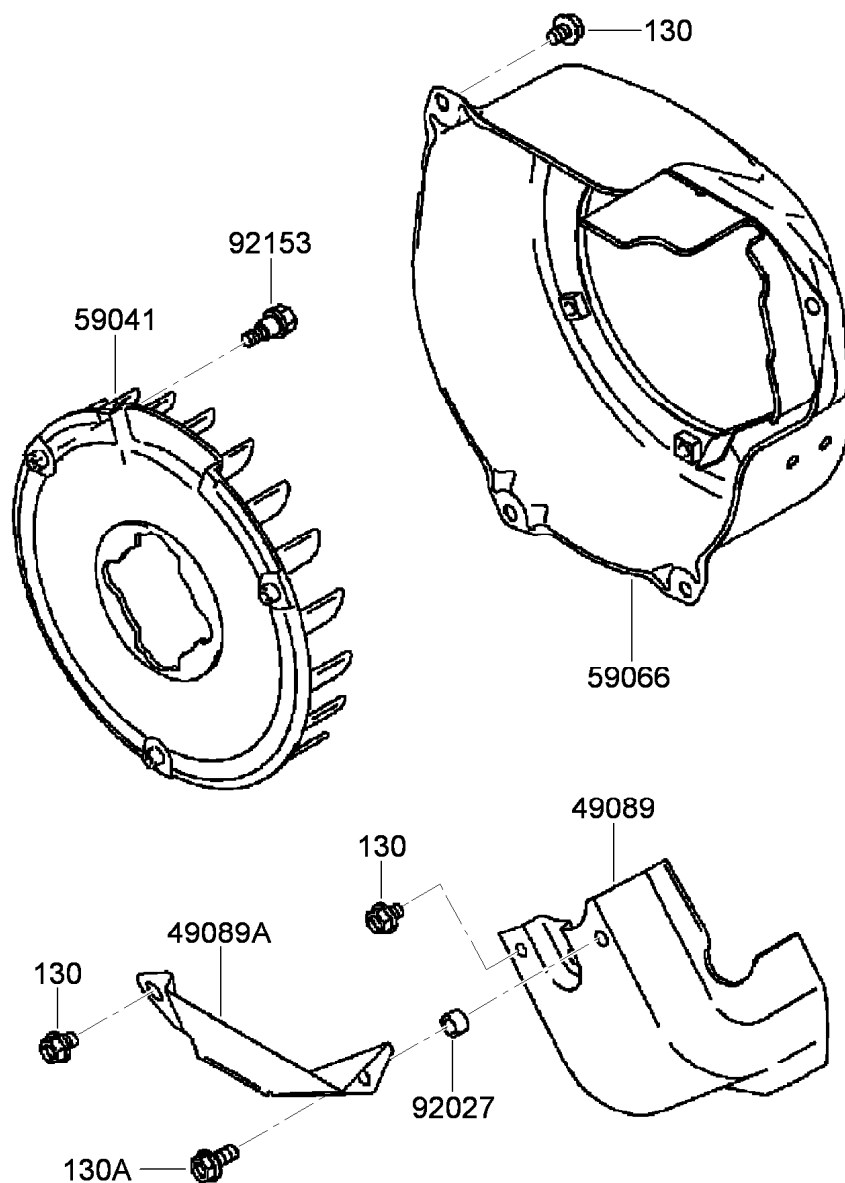


Cooling Equipment Assembly

Ref.	Part Number	Qty.	Description
130	115-1765	7	Bolt-Flanged (6X8)
130A	115-1764	1	Bolt-Flanged (6X14)
49089	93-8563	1	Shroud-Engine
49089A	93-8565	1	Shroud-Engine
59041	93-8572	1	Fan
59066	115-1804	1	Housing-Fan
92027	93-8564	1	Collar (6.8X10X6)
92153	94-6840	3	Bolt-Flanged

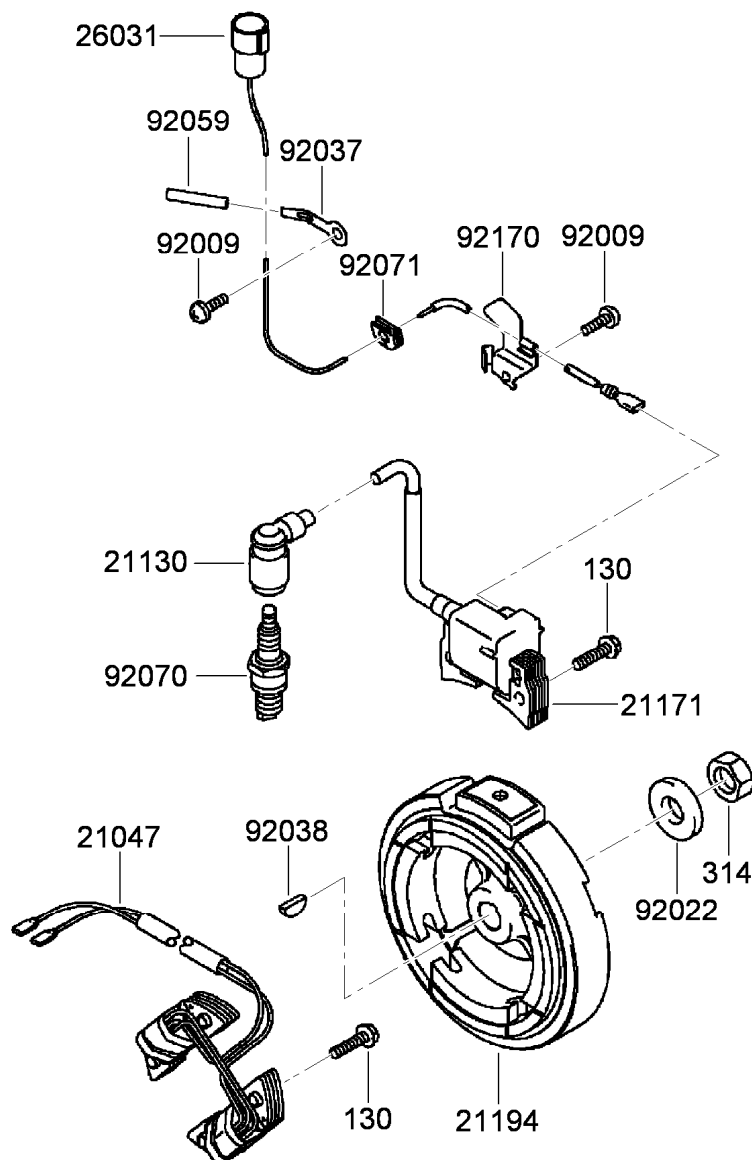

Electric Equipment Assembly


Ref.	Part Number	Qty.	Description
130	100-2610	6	Bolt-Flanged (6X25)
314	115-1845	1	Nut-Hex, Fine
21047	99-4267	1	Coil-Lighting
21130	KW10087	1	Cap-Sparkplug
21171	94-9031	1	Ignition Coil ASM
21194	99-6237	1	Flywheel ASM
26031	115-1767	1	Harness
92009	95-9716	2	Screw
92022	93-8569	1	Washer
92037	93-8576	1	Clamp
92038	93-8571	1	Key
92059	115-1768	1	Tube (5X6X75)
92070	108-2557	1	Sparkplug (Bpr5Es) (Ngk) Solid
92071	115-1772	1	Grommet
92170	93-8583	1	Clamp

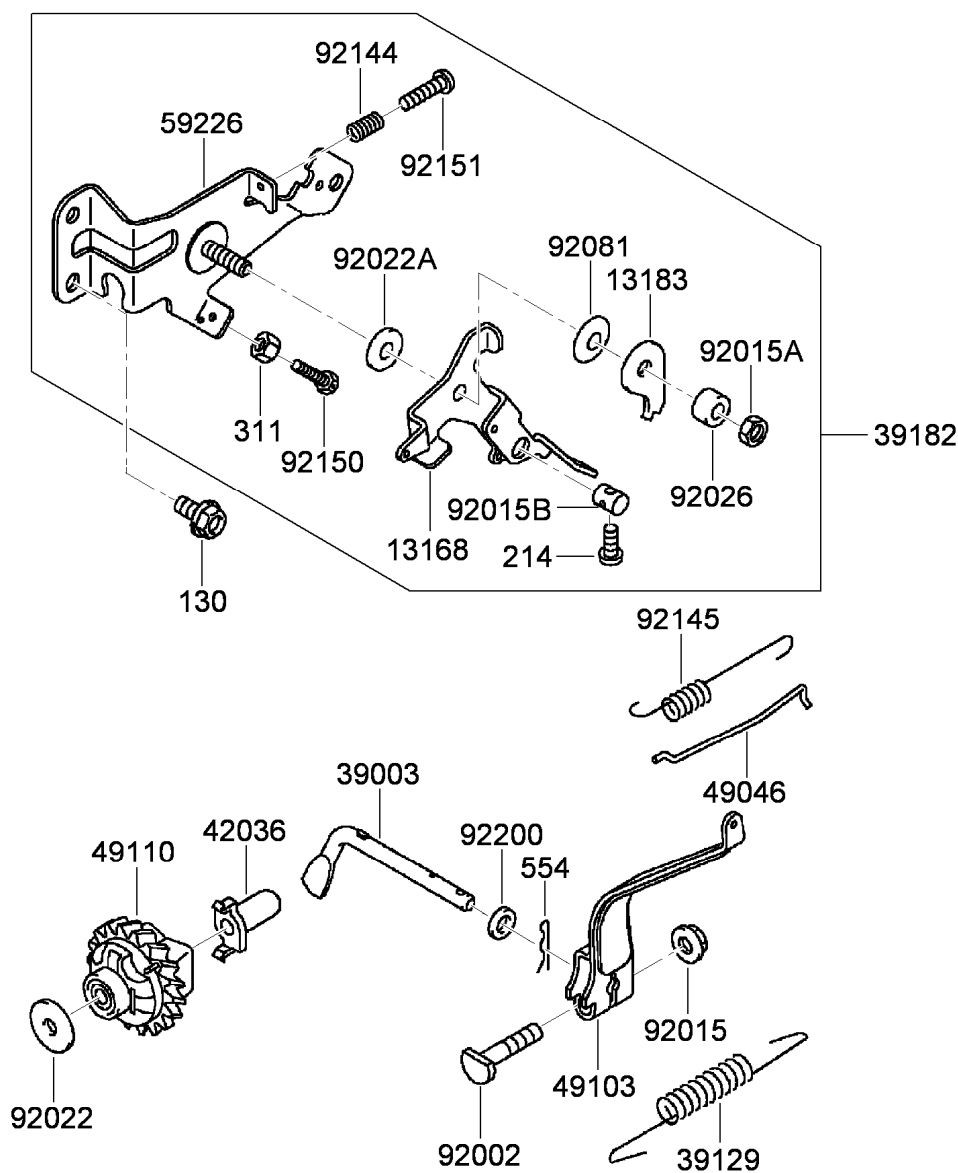

Control Equipment Assembly

Ref.	Part Number	Qty.	Description
130	115-1809	2	Bolt-Flanged (6X12)
214	115-1778	1	Screw-Pan (4X14)
311	115-6495	1	Nut-Hex
554	115-8671	1	Pin-Snap (1.2X21.2)
13168	93-8598	1	Lever
13183	93-8592	1	Plate
39003	93-8609	1	Arm-Pivot
39129	115-1803	1	Spring-Governor
39182	115-1754	1	Control Panel ASM
42036	108-2567	1	Sleeve
49046	115-1811	1	Rod-Governor
49103	93-8603	1	Arm-Governor
49110	93-8611	1	Governor ASM
59226	115-1773	1	Panel-Control


Ref.	Part Number	Qty.	Description
92002	93-8606	1	Bolt (6X28)
92015	93-8631	1	Nut
92015A	93-8595	1	Nut
92015B	93-8597	1	Nut
92022	94-6842	1	Washer (6.2X20X0.5)
92022A	93-8590	1	Washer
92026	115-1776	1	Spacer
92081	115-1775	1	Spring
92144	93-8588	1	Spring
92145	115-1810	1	Spring
92150	115-1813	1	Bolt
92151	115-1774	1	Bolt (4X22)
92200	93-8608	1	Washer (6.5X11.5X2.0)

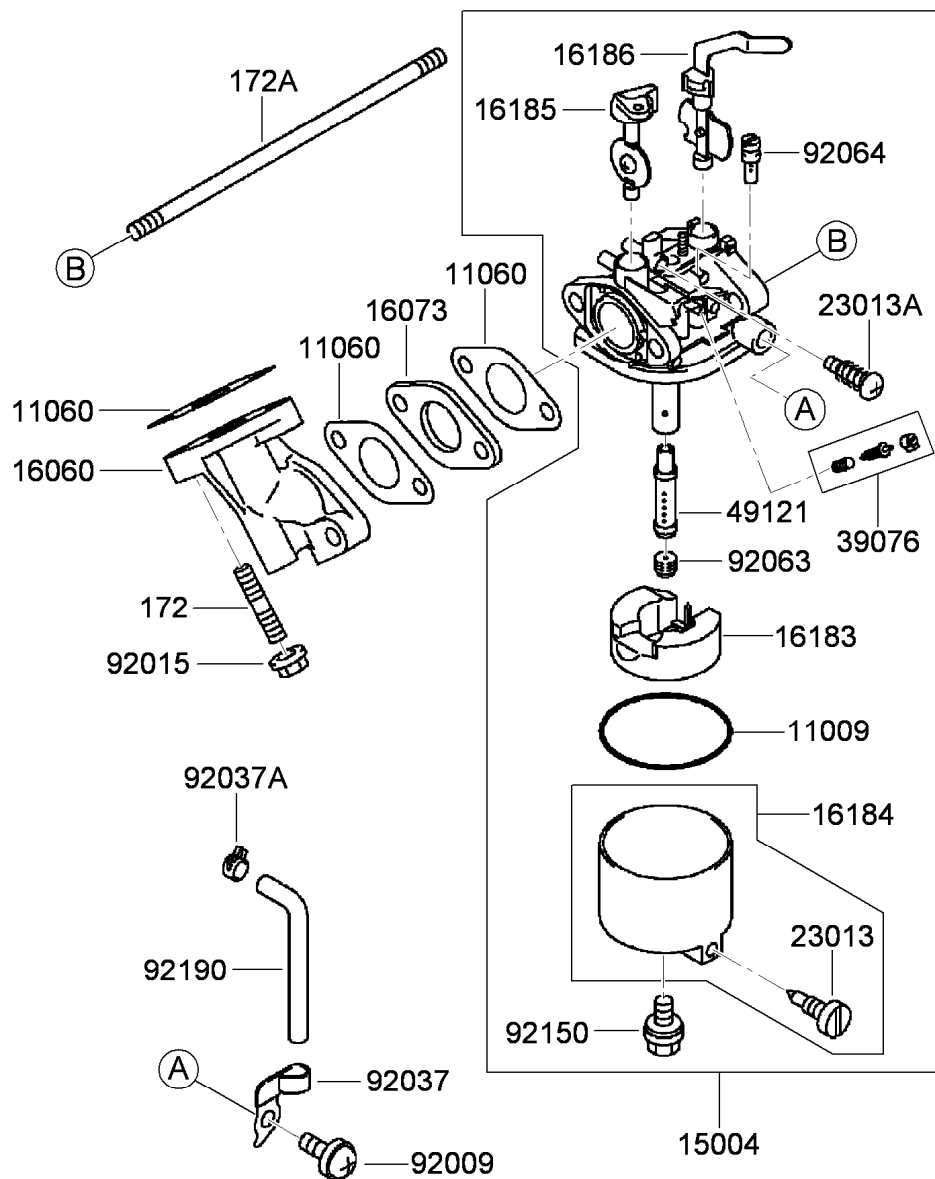

Carburetor Assembly

Ref.	Part Number	Qty.	Description
172	93-8632	2	Bolt-Stud (6X18)
172A	115-1814	1	Bolt-Stud (6X73)
11009	93-8624	1	Gasket
11060	93-8613	3	Gasket
15004	115-1869	1	Carburetor ASM
16060	93-8633	1	Pipe-Intake
16073	94-9048	1	Insulator
16183	94-6844	1	Float ASM
16184	93-8625	1	Float Chamber ASM
16185	94-9033	1	Throttle Valve ASM
16186	115-1870	1	Choke Valve ASM
23013	93-8626	1	Screw ASM


Ref.	Part Number	Qty.	Description
23013A	93-8619	1	Screw ASM
39076	94-9034	1	Limiter
49121	115-1871	1	Nozzle-Main
92009	94-6845	1	Screw
92015	93-8631	2	Nut
92037	94-6846	1	Clamp
92037A	93-8629	1	Clamp
92063	94-9036	1	Jet-Main (No.65)
92064	94-9037	1	Jet-Pilot (No.40)
92150	93-8627	1	Bolt
92190	93-8630	1	Tube

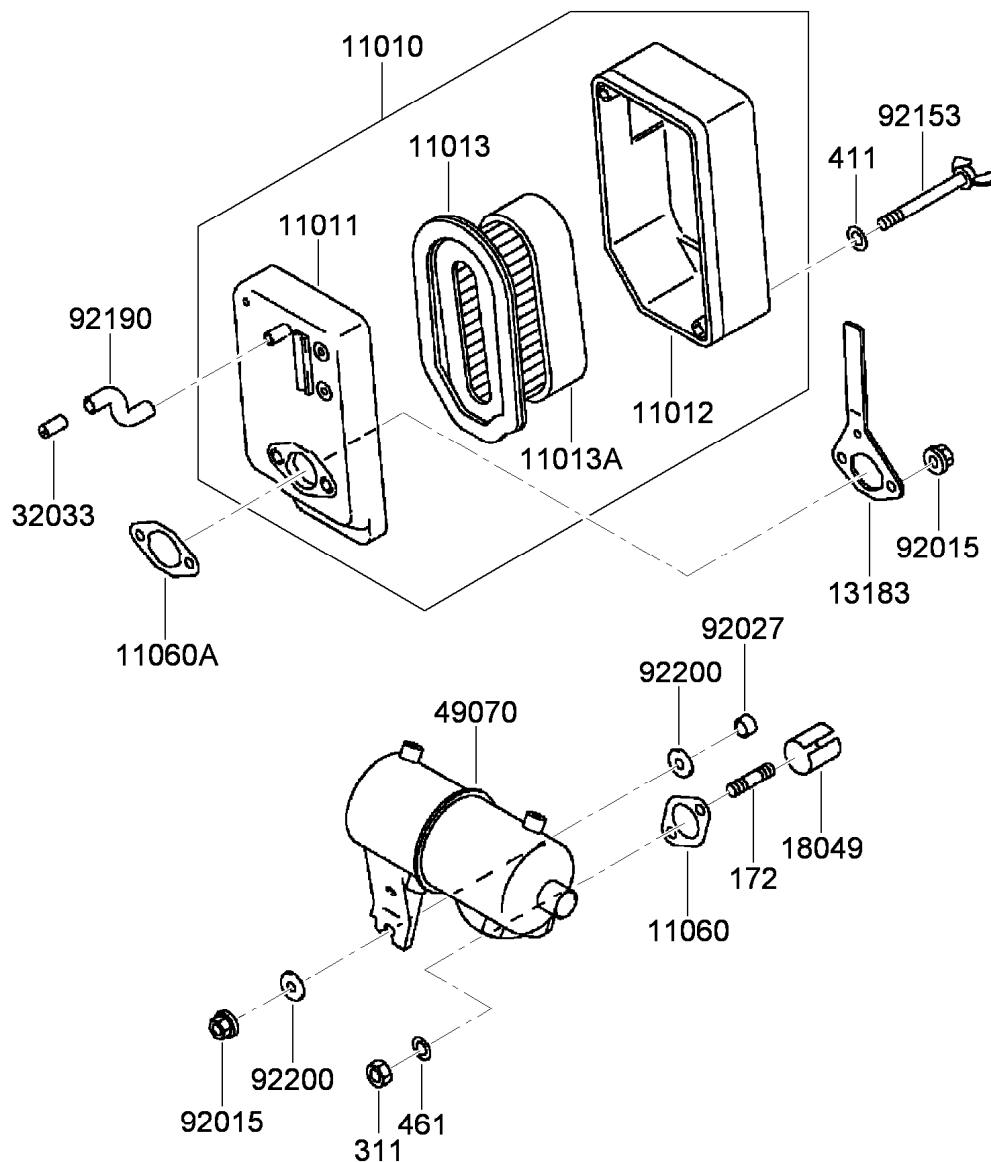

Air Filter and Muffler Assembly

Ref.	Part Number	Qty.	Description
172	115-1819	2	Bolt-Stud (6X16)
311	93-8656	2	Nut-Hex (6Mm)
411	115-1802	2	Washer-Plain
461	115-1801	2	Washer-Spring
11010	115-1872	1	Air Filter ASM
11011	115-1873	1	Case-Filter, Air
11012	93-8638	1	Cap-Filter, Air
11013	93-8636	1	Element-Filter, Air
11013A	93-8637	1	Element-Filter, Air
11060	93-8654	1	Gasket-Muffler


Ref.	Part Number	Qty.	Description
11060A	93-8657	1	Gasket-Filter, Air
13183	93-8642	1	Plate-Filter, Air
18049	93-8652	1	Pipe-Exhaust
32033	93-8658	1	Pipe
49070	115-1874	1	Muffler
92015	93-8631	3	Nut
92027	93-8651	1	Collar
92153	93-8640	2	Bolt
92190	93-8659	1	Tube
92200	93-8650	2	Washer (.5X18X2.0)

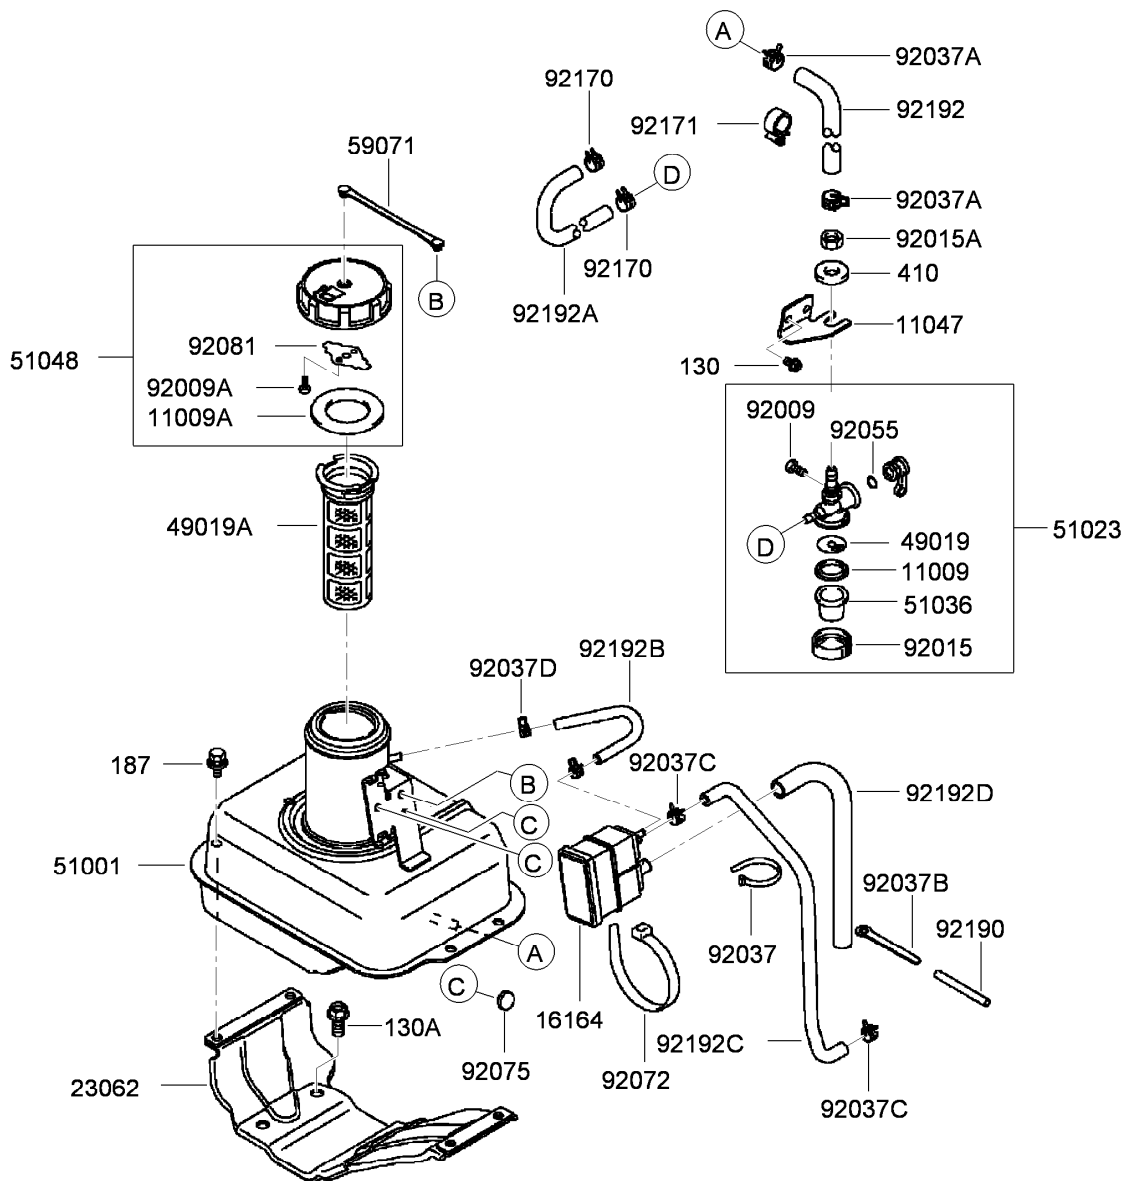

Fuel Tank and Fuel Valve Assembly


Ref.	Part Number	Qty.	Description
130	115-1864	2	Bolt-Flanged (5X8)
130A	115-1867	4	Bolt-Flanged (8X18)
187	115-1760	4	Bolt-Upset, Wsp (6X16)
410	115-1885	1	Washer-Plain, Small
11009	93-8673	1	Gasket
11009A	93-8662	1	Gasket
11047	93-8681	1	Bracket
16164	115-1859	1	Canister
23062	104-2383	1	Bracket-Tank
49019	94-6849	1	Filter-Tapper, Fuel
49019A	94-6826	1	Filter-Fuel
51001	119-4133	1	Fuel Tank ASM, Carb
51023	93-8669	1	Fuel Tapper ASM
51036	93-8674	1	Cup-Tapper, Fuel
51048	115-1857	1	Tank Cap ASM
59071	115-1856	1	Joint
92009	93-8670	1	Screw
92009A	93-8661	2	Screw
92015	93-8675	1	Nut

Ref.	Part Number	Qty.	Description
92015A	94-9042	1	Nut
92037	115-1855	1	Clamp
92037A	115-1861	2	Clamp-Clip, Hose
92037B	115-1854	1	Clamp
92037C	93-8664	2	Clamp
92037D	93-8676	2	Clamp
92055	93-8671	1	O-Ring
92072	115-1853	1	Band
92075	115-1852	2	Damper
92081	93-8663	1	Spring
92170	115-1865	2	Clamp
92171	115-1862	1	Clamp
92190	115-1851	1	Tube
92192	115-1863	1	Tube (6.2X13.2X200)
92192A	115-1866	1	Tube (4X11X160)
92192B	115-1889	1	Tube
92192C	115-1890	1	Tube
92192D	115-1891	1	Tube

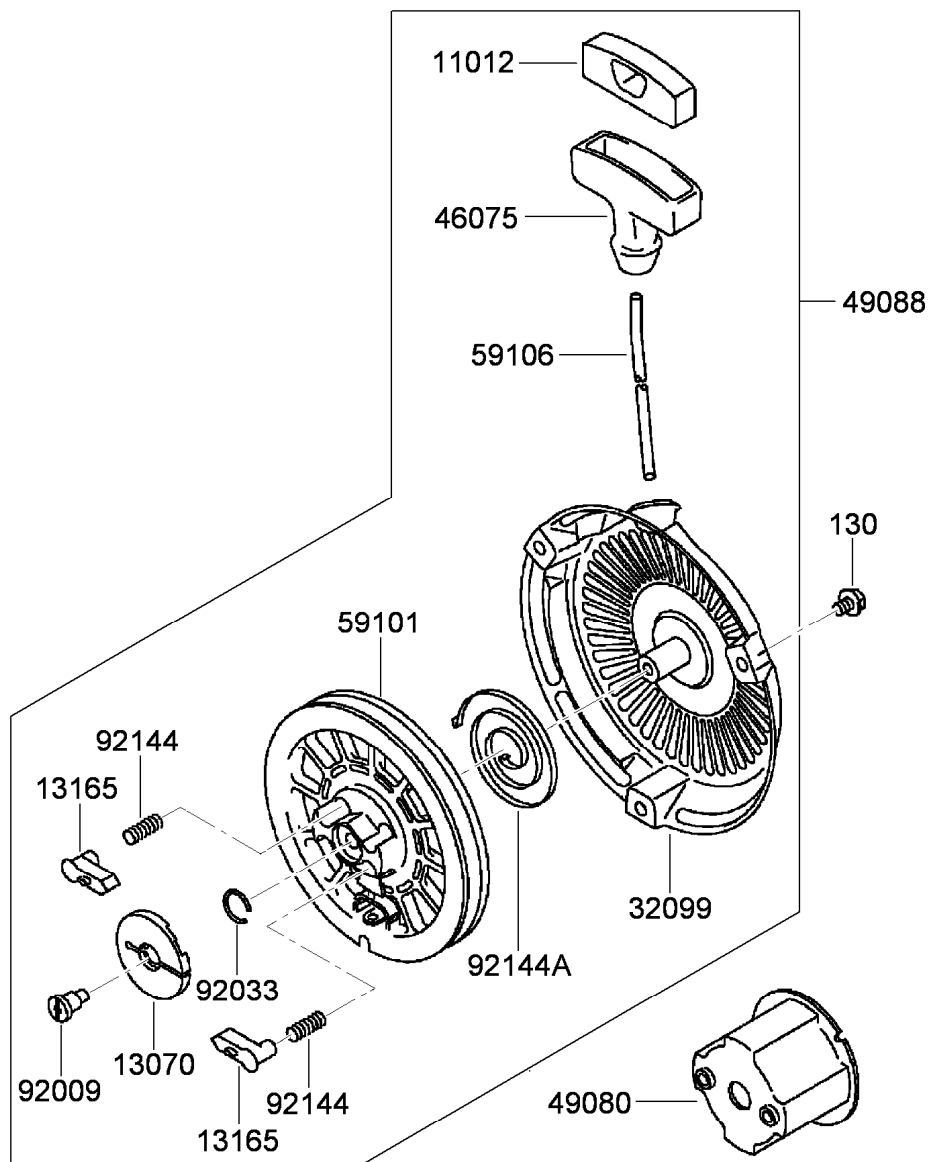

Starter Assembly

Ref.	Part Number	Qty.	Description
130	115-1765	3	Bolt-Flanged (6X8)
11012	94-9044	1	Cap-Grip
13070	93-8562	1	Guide-Pawl
13165	93-8554	2	Pawl-Starter, Recoil
32099	94-9046	1	Case-Starter, Recoil
46075	94-9045	1	Grip-Starter, Recoil
49080	93-8567	1	Pulley-Recoil
49088	93-8552	1	Recoil Starter ASM
59101	93-8556	1	Reel-Starter, Recoil
59106	93-8560	1	Rope (4X1500)
92009	93-8553	1	Screw
92033	93-8561	1	Ring-Retaining
92144	93-8555	2	Spring-Return
92144A	93-8557	1	Spring

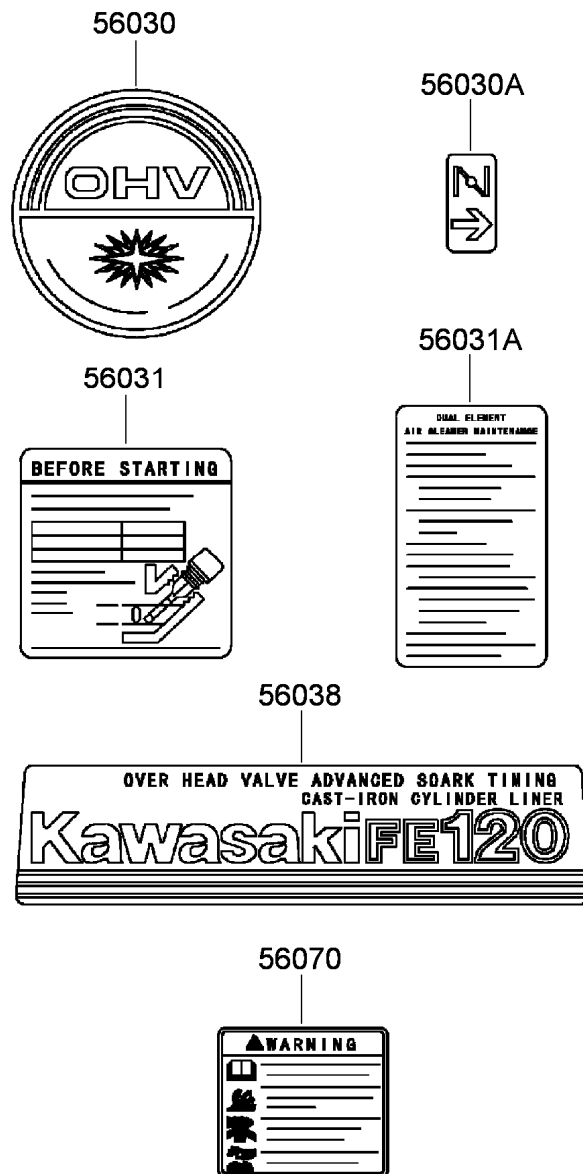

Label Set

Ref.	Part Number	Qty.	Description
56030	94-9027	1	Label-Recoil
56030A	93-8687	1	Decal-Choke
56031	93-8689	1	Decal-Instructions
56031A	93-8690	1	Decal-Maintenance
56038	94-9028	1	Label-Kawasaki
56070	93-8692	1	Decal-Warning

Attachments and Accessories

For 04025 Greensmaster Flex 21 Traction Unit

Product Name	Model/Part
Light Kit.....	04061
Out Front Brush Kit.....	04119
Wheel Kit	04123
11-Blade Cutting Unit.....	04202
14-Blade Cutting Unit.....	04208
Operator Presence Kit	112-9282
Spark Arrestor Kit	117-1441
MVP Filter and Spark Plug Kit.....	30065
Jet-Main, No. 62 (High Altitude)	98-8735
Jet-Main, No. 60 (High Altitude)	98-8736

Notes:



Count on it.