



**Wheel Horse®
Garden Tractor**

42" Snowthrower

Model No. 79360-5900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	includes
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form X (Y). X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

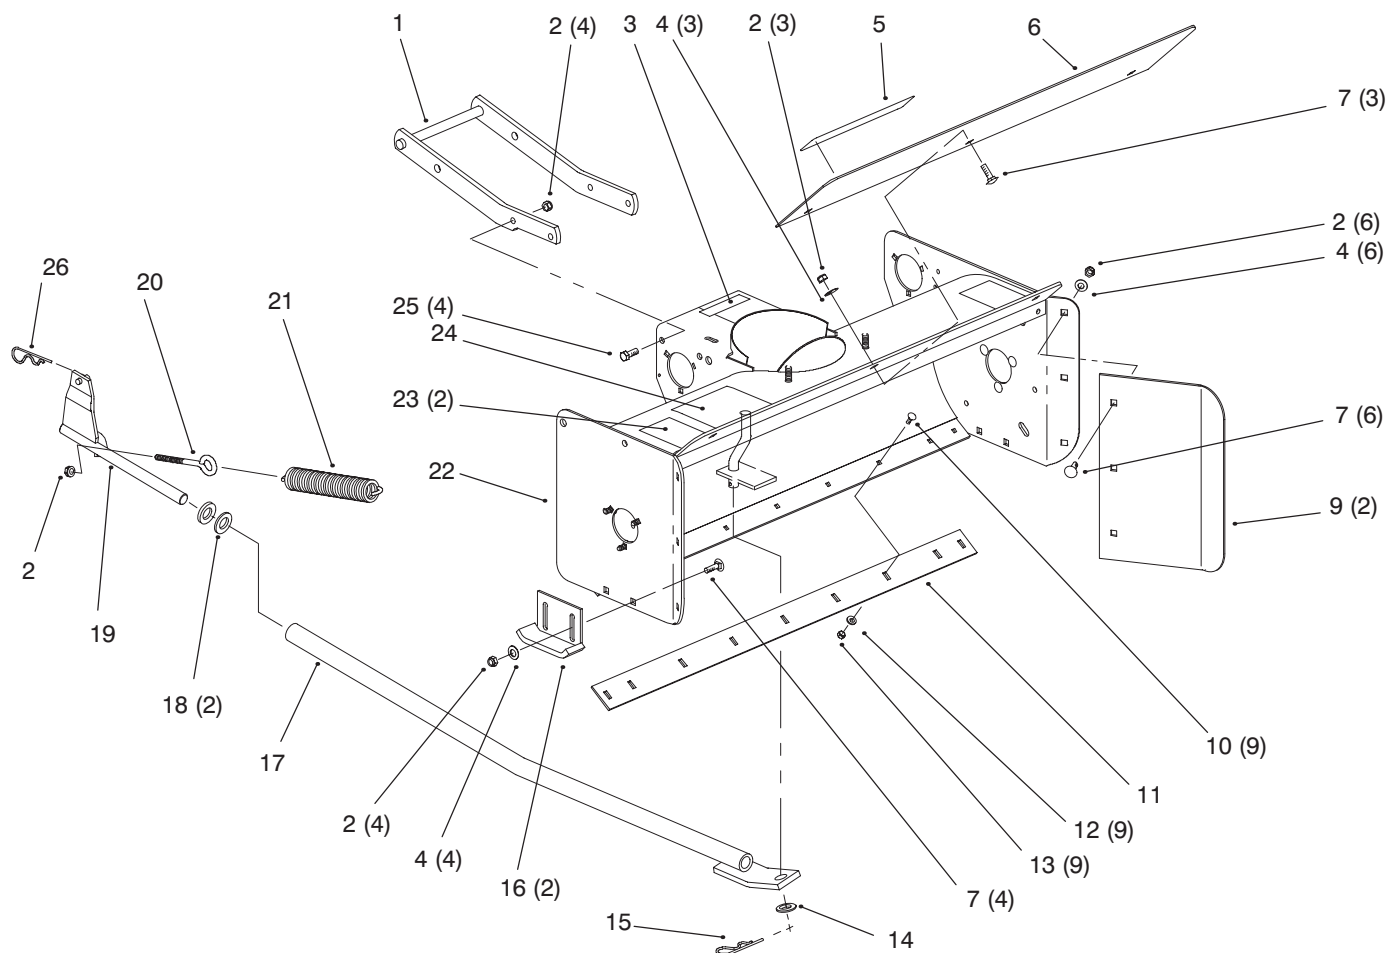


Sheet No.: 2

Auger Housing

Ref. No.	Part No.	Description	No. Used
1	104604-01	Frame	1
2	3296-39	Nut-Lock	18
4	3256-24	Washer-Flat	13
5	92-8748	Decal-Attachment	1
6	93-1616-01	Plate-Extension	1
7	3231-2	Screw-CARR	13
9	93-1617-01	Plate-Extension	2
10	3229-25	Screw-CARR	9
11	79-6170-01	Scraper-Reversible	1
12	3256-22	Washer-Flat	9
13	3296-42	Nut-Lock	9
14	3256-27	Washer-Flat	1
15	9335064	Hairpin	1

Ref. No.	Part No.	Description	No. Used
16	93-1620-01	Skid	2
17	114600	Lift Tube	1
18	3256-28	Washer-Flat	2
19	101461	Lift Rod	1
20	100653	Eyebolt	1
21	4629	Spring-Extension	1
22	92-7299-01	Auger Housing ASM (Incl. Ref. # 23,24)	1
23	63-2380	Decal-Danger	2
24	92-8652	Decal-Warning	1
25	323-6	Screw-HH	4
26	9335054	Hairpin	1

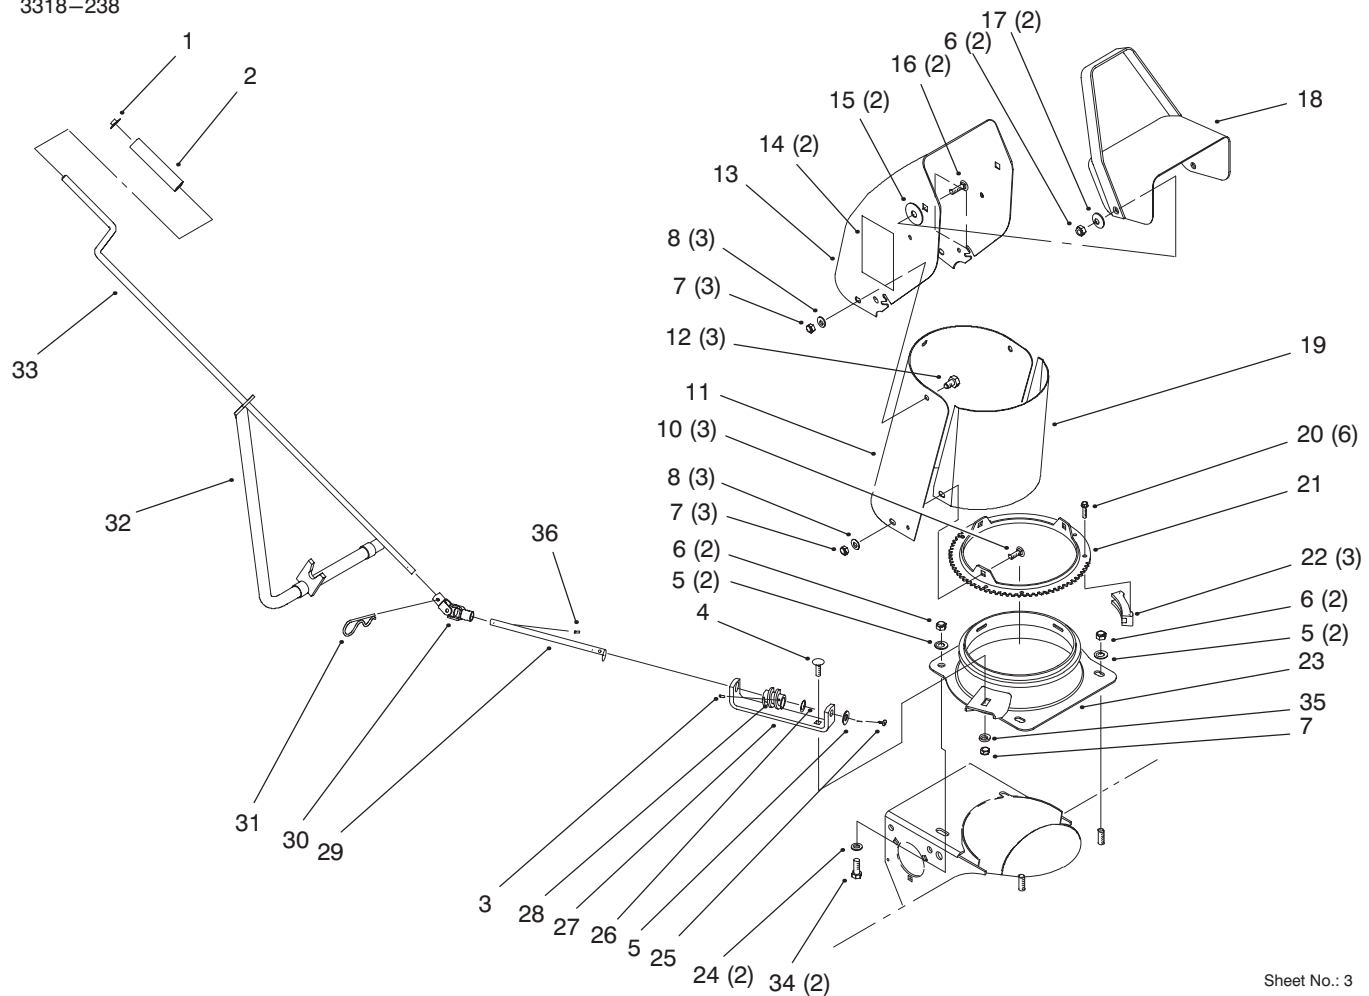


Sheet No.: 3

Chute And Direction Control

Ref. No.	Part No.	Description	No. Used
1	3290-320	Nut-Push On	1
2	40-8230	Grip-Control	1
3	32121-50	Pin-Roll	1
4	3230-2	Screw-CARR	1
5	3256-24	Washer-Flat	5
6	3296-39	Nut-Lock	6
7	3296-29	Nut-Lock	7
8	3256-23	Washer-Flat	6
10	3230-1	Screw-CARR	3
11	26-1110-01	Extender-Chute	1
12	322-2	Screw-HH	3
13	92-6335-01	Discharge Chute Asm (Incl. Ref. # 14)	1
14	63-3740	Decal-Danger	2
15	20-4320	Washer-Rubber	2
16	3231-2	Screw-CARR	2
17	3290-340	Washer-Belleville	2
18	11-7120-01	Deflector	1

Ref. No.	Part No.	Description	No. Used
19	94-2997	Shield - Deflector	1
20	27-0220	Screw-HWH	6
21	78-0160-01	Ring-Swivel	1
22	25-5450	Retainer-Chute	3
23	78-0330-01	Adapter	1
24	9202414	Washer-Spacer	2
25	3272-10	Pin-Cotter	1
26	3290-212	Washer	1
27	79-3770-03	Bracket-Worm	1
28	8-8600	Gear-Worm	1
29	78-7430	Shaft - Gear	1
30	94-2686	Joint-Universal	1
31	9335054	Hairpin	1
32	78-0200	Crank Support	1
33	51-2650	Rod-Control	1
34	323-6	Screw-HH	2
35	3290-238	Washer - Lock	1
36	32121-47	Pin - Roll	1

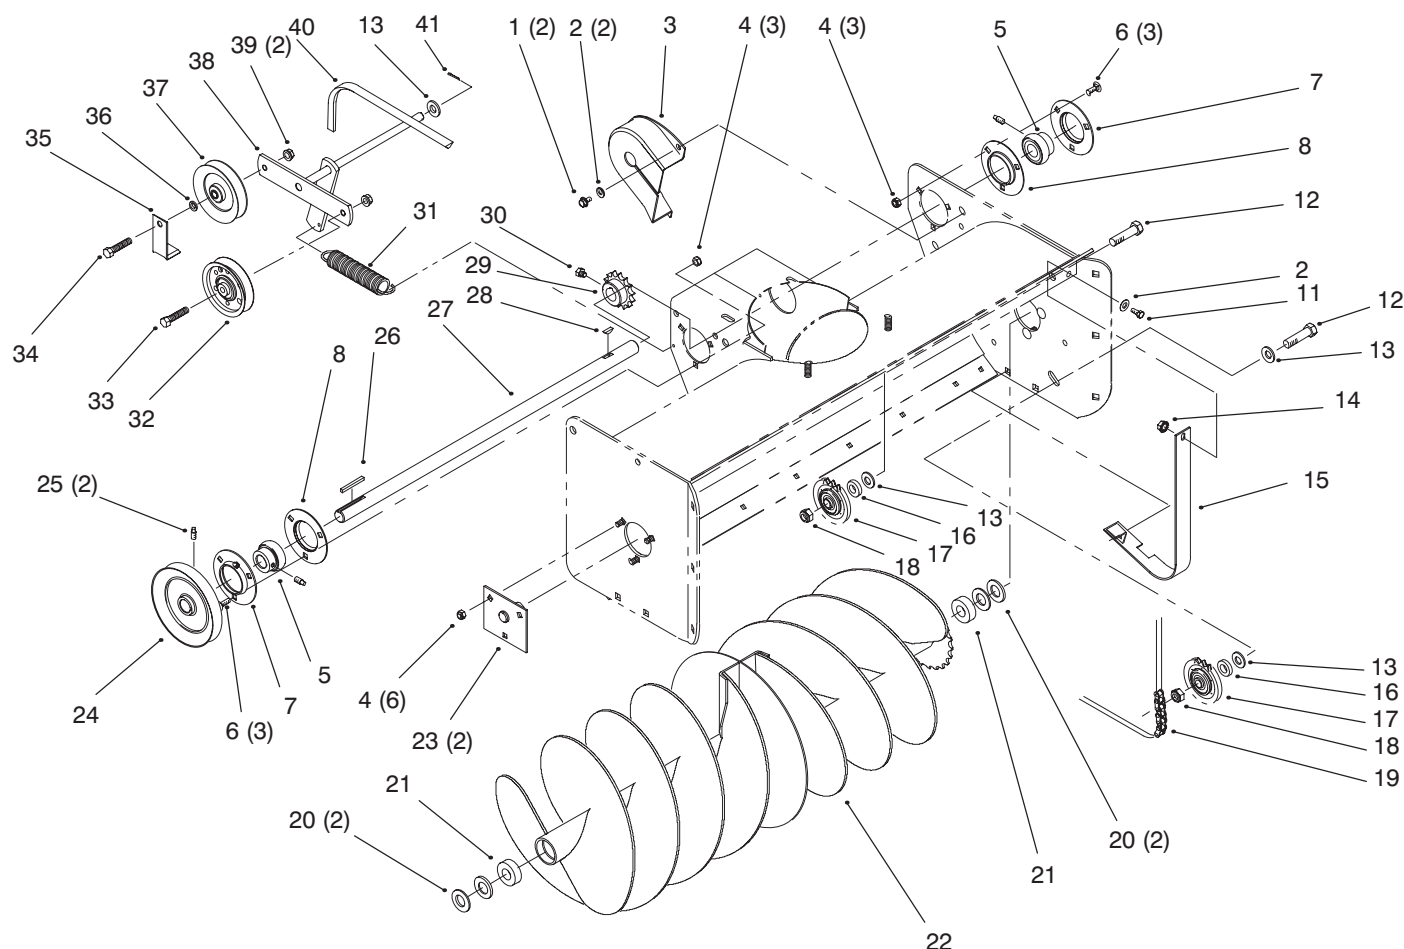

Sheet No.: 4

Auger

Ref. No.	Part No.	Description	No. Used
1	9266714	Screw-HWHTF	2
2	3256-22	Washer-Flat	3
3	109218	Guard-Chain	1
4	3296-29	Nut-Lock	12
5	110569	Bearing & Collar	2
6	3230-1	Screw-CARR	6
7	110567	Flange-Relube W/Zerk	2
8	110568	Flange-Plain W/O Zerk	2
11	321-3	Screw-HH	1
12	325-8	Screw-HH	2
13	3256-26	Washer-Flat	4
14	32149-2	Nut	1
15	109244	Guard	1
16	6417	Spacer	2
17	93-1614-01	Sprocket-Idler	2
18	3296-23	Nut-HH	2
19	6416	Chain	1
20	3256-28	Washer-Flat	4
21	101480	Bearing-Ball	2
22	93-1615-01	Auger	1

Ref. No.	Part No.	Description	No. Used
23	93-1618-01	Support	2
24	113356	Pulley	1
25	3242-2	Screw-Sqh Set	2
26	1005	Key-Square	1
27	113320	Shaft	1
28	937089	Key-Woodruff	1
29	78-0850	Sprocket-14t	1
30	3246-2	Screw-HSH	1
31	78-7480	Spring-Extension	1
32	92-7101	Pulley-Flat Idler	1
33	323-9	Screw-HH	1
34	323-10	Screw-HH	1
35	7450	Bracket-Retainer	1
36	104662	Spacer	1
37	7451	Pulley-Idler	1
38	78-0480	Idler Arm	1
39	3296-39	Nut-Lock	2
40	9750	Belt-V	1
41	3272-7	Pin-Cotter	1

TORO PART NUMBER INDEX

3318-238

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
1005	Key—Square	3 26 1	93-1615-01	Auger	3 22 1
4629	Spring—Extension	1 21 1	93-1616-01	Plate—Extension	1 6 1
6416	Chain	3 19 1	93-1617-01	Plate—Extension	1 9 2
6417	Spacer	3 16 2	93-1618-01	Support	3 23 2
7450	Bracket—Retainer	3 35 1	93-1620-01	Skid	1 16 2
7451	Pulley—Idler	3 37 1	94-2686	Joint—Universal	2 30 1
9750	Belt—V	3 40 1	94-2997	Shield — Deflector	2 19 1
100653	Eyebolt	1 20 1	104604-01	Frame	1 1 1
101461	Lift Rod	1 19 1	321-3	Screw—HH	3 11 1
101480	Bearing—Ball	3 21 2	322-2	Screw—HH	2 12 3
104662	Spacer	3 36 1	323-6	Screw—HH	1 25 4
109218	Guard—Chain	3 3 1	323-6	Screw—HH	2 34 2
109244	Guard	3 15 1	323-9	Screw—HH	3 33 1
110567	Flange—Relube W/Zerk	3 7 2	323-10	Screw—HH	3 34 1
110568	Flange—Plain W/O Zerk	3 8 2	325-8	Screw—HH	3 12 2
110569	Bearing & Collar	3 5 2	3229-25	Screw—CARR	1 10 9
113320	Shaft	3 27 1	3230-1	Screw—CARR	3 6 6
113356	Pulley	3 24 1	3230-1	Screw—CARR	2 10 3
114600	Lift Tube	1 17 1	3230-2	Screw—CARR	2 4 1
9335054	Hairpin	1 26 1	3231-2	Screw—CARR	1 7 13
9335064	Hairpin	1 15 1	3231-2	Screw—CARR	2 16 2
937089	Key—Woodruff	3 28 1	3242-2	Screw—Sqh Set	3 25 2
9202414	Washer—Spacer	2 24 2	3246-2	Screw—HSH	3 30 1
9266714	Screw—HWHTF	3 1 2	3256-22	Washer—Flat	3 2 3
9335054	Hairpin	2 31 1	3256-22	Washer—Flat	1 12 9
8-8600	Gear—Worm	2 28 1	3256-23	Washer—Flat	2 8 6
11-7120-01	Deflector	2 18 1	3256-24	Washer—Flat	1 4 13
20-4320	Washer—Rubber	2 15 2	3256-24	Washer—Flat	2 5 5
25-5450	Retainer—Chute	2 22 3	3256-26	Washer—Flat	3 13 4
26-1110-01	Extender—Chute	2 11 1	3256-27	Washer—Flat	1 14 1
27-0220	Screw—HWH	2 20 6	3256-28	Washer—Flat	1 18 2
40-8230	Grip—Control	2 2 1	3256-28	Washer—Flat	3 20 4
51-2650	Rod—Control	2 33 1	3272-7	Pin—Cotter	3 41 1
63-2380	Decal—Danger	1 23 2	3272-10	Pin—Cotter	2 25 1
63-3740	Decal—Danger	2 14 2	3290-212	Washer	2 26 1
78-0160-01	Ring—Swivel	2 21 1	3290-238	Washer — Lock	2 35 1
78-0200	Crank Support	2 32 1	3290-320	Nut—Push On	2 1 1
78-0330-01	Adapter	2 23 1	3290-340	Washer—Belleville	2 17 2
78-0480	Idler Arm	3 38 1	3296-23	Nut—HH	3 18 2
78-0850	Sprocket—14t	3 29 1	3296-29	Nut—Lock	3 4 12
78-7430	Shaft — Gear	2 29 1	3296-29	Nut—Lock	2 7 7
78-7480	Spring—Extension	3 31 1	3296-39	Nut—Lock	1 2 18
79-3770-03	Bracket—Worm	2 27 1	3296-39	Nut—Lock	2 6 6
79-6170-01	Scraper—Reversible	1 11 1	3296-39	Nut—Lock	3 39 2
92-6335-01	Discharge Chute Asm	2 13 1	3296-42	Nut—Lock	1 13 9
92-7101	Pulley—Flat Idler	3 32 1	32121-47	Pin — Roll	2 36 1
92-7299-01	Auger Housing ASM	1 22 1	32121-50	Pin—Roll	2 3 1
92-8652	Decal—Warning	1 24 1	32149-2	Nut	3 14 1
92-8748	Decal—Attachment	1 5 1			
93-1614-01	Sprocket—Idler	3 17 2			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.

[illegible]