



Count on it.

Form No. 3365-373 Rev A

Parts Catalog

Emotion 43cm Lawn Mower

Model No. 21026—Serial No. 310000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Housing Assembly 4

Drive Assembly..... 5


Front Wheel Assembly 6

Engine Assembly 7

Lower Handle Assembly 8

Upper Handle Assembly 9


Grass Bag Assembly 10

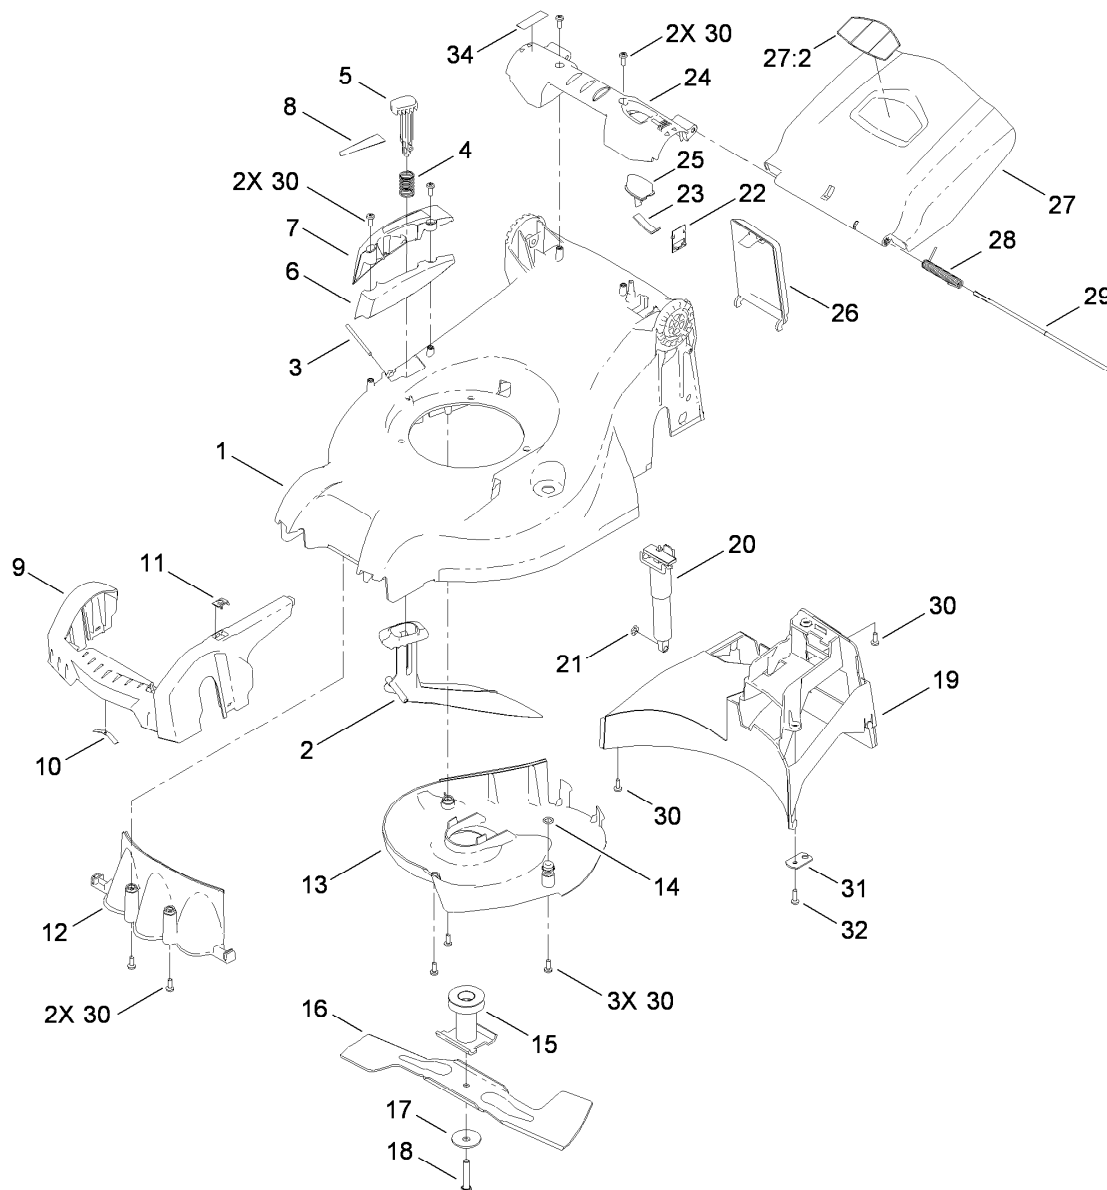

Housing Assembly

Ref.	Part Number	Qty.	Description
1	112-8550-01	1	Deck ASM
2	110-9269	1	Door-Rod
3	110-9271	1	Pin-Door, Rod
4	110-9274	1	Spring-Door, Rod
5	110-9270	1	Button-Rod
6	110-9272	1	Cover-Rod, Left
7	110-9273	1	Cover-Rod, Right
8	110-9333	1	Decal
9	112-8600	1	Bumper-Front
10	110-9305	1	Spring-Leaf, Front
11	110-9259	1	Lense-HOC
12	110-9257	1	Baffle-Front
13	112-8609	1	Cover-Deck
14	46-6290	1	O-Ring, Seal
15	110-9291	1	Blade Driver ASM
16	110-9289	1	Blade-Rotary
17	95-6727	1	Washer-Spring


Ref.	Part Number	Qty.	Description
18	115-3129	1	Screw-HH
19	110-9397	1	Baffle-Rear
20	112-8612	1	HOC Cylinder ASM
21	115-3125	1	Clip-Push
22	110-9295	1	Plate-Locking
23	112-8620	1	Lever-Button, HOC
24	110-9267	1	Handle-Deck, Rear
25	110-9277	1	Button-HOC
26	110-9285	1	Cover-Battery
27	114-5361	1	Rear Door ASM
27:2	115-3114	1	Decal-Warning
28	110-9276	1	Spring-Door, Rear
29	110-9275	1	Pin-Door, Rear
30	114-5356	11	Screw-SPH, Thread Rolling
31	110-9332	1	Support-Cable, Traction
32	93-4095	1	Screw-RH
34	112-8554	1	Decal

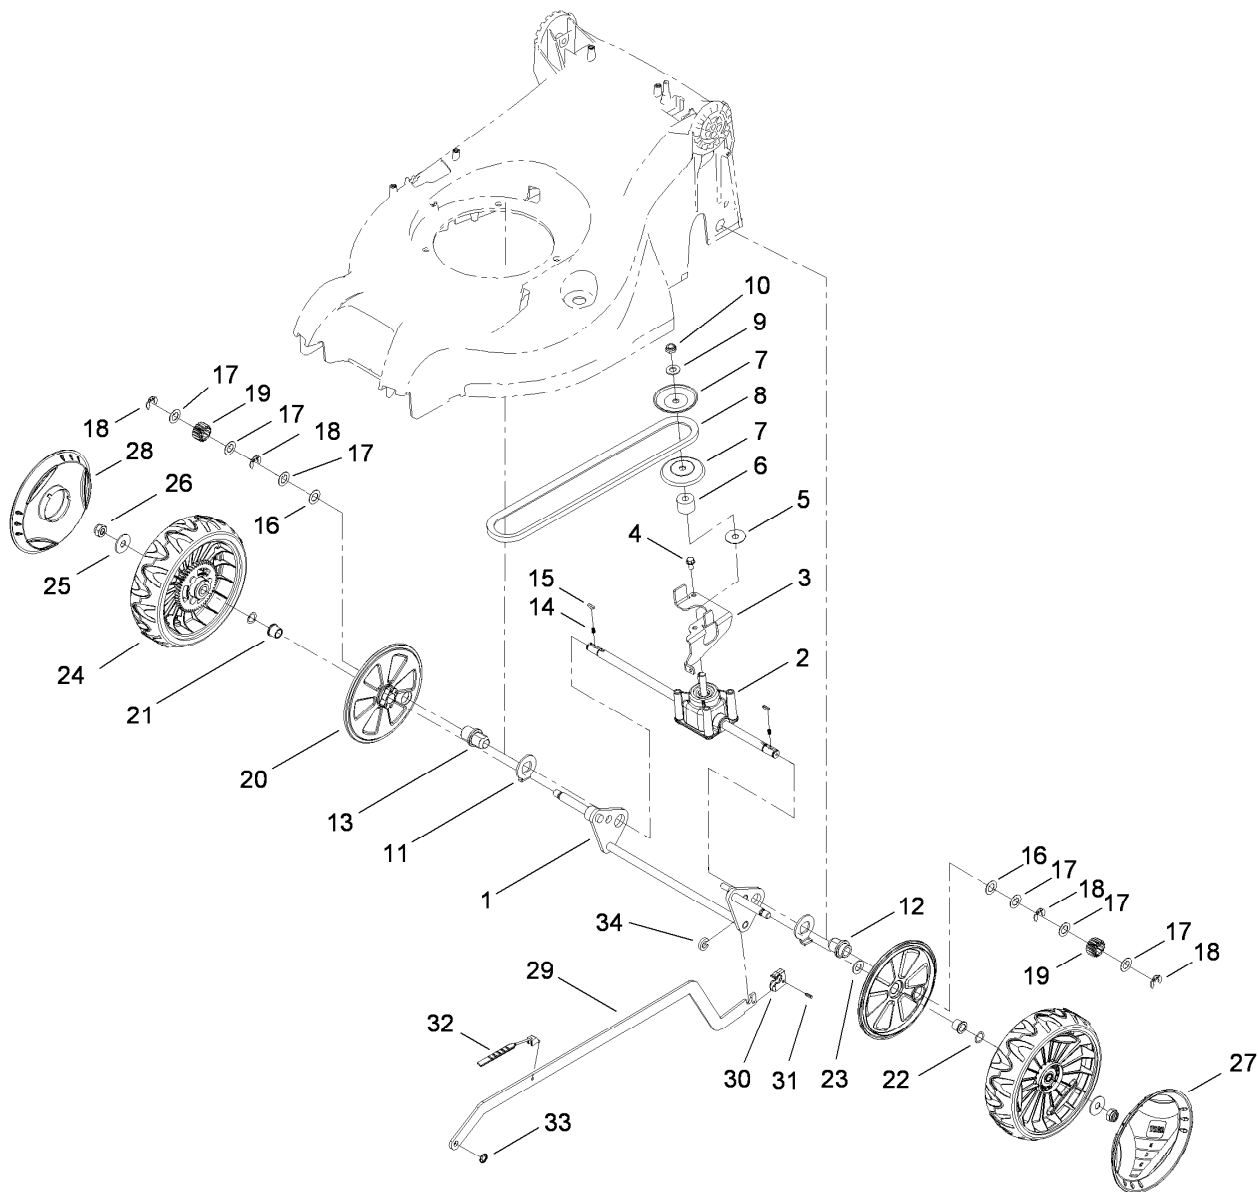

Drive Assembly


Ref.	Part Number	Qty.	Description
1	112-8577	1	Pivot Bar ASM
2	108-8757	1	Transmission ASM
3	110-9292	1	Bracket-Case, Gear
4	32144-4	2	Screw-HWH
5	105-6814	1	Washer-Plain
6	92-5791	1	Spacer
7	100-1176	2	Pulley-Half
8	36-8070	1	V-Belt
9	3256-24	1	Washer-Flat
10	3296-5	1	Nut-Lock
11	112-8591	2	Clip-Bushing
12	112-8589	1	Bushing-Wheel, Left
13	112-8590	1	Bushing-Wheel, Right
14	39-9650	2	Spring-Compression
15	612066	2	Key
16	36-4780	2	Washer-Plain
17	105-6840	6	Washer-Thrust

Ref.	Part Number	Qty.	Description
18	65-2720	4	Ring-Clip, Locking
19	105-3040	2	Gear-Pinion, 15T
20	110-9284	2	Cover-Wheel, Inner
21	110-9312	2	Hub-Axle, Rear
22	99-1713	2	Washer-Spring
23	112-8616	1	Washer-Plain
24	95-6994	2	Rear Wheel ASM
25	114-5360	2	Washer-Plain
26	93-4098	2	Nut-HH
27	112-8598	1	Cover-Wheel, Smart Wheel
28	110-9250	1	Cover-Wheel, Rear
29	110-9282	1	Bar-Connection, HOC
30	110-9283	1	Clip-Bar, Connection
31	112-8573	1	Pin-Groove
32	112-8614	1	Scale-HOC
33	115-3125	1	Clip-Push
34	112-8618	1	Ring-Fixing

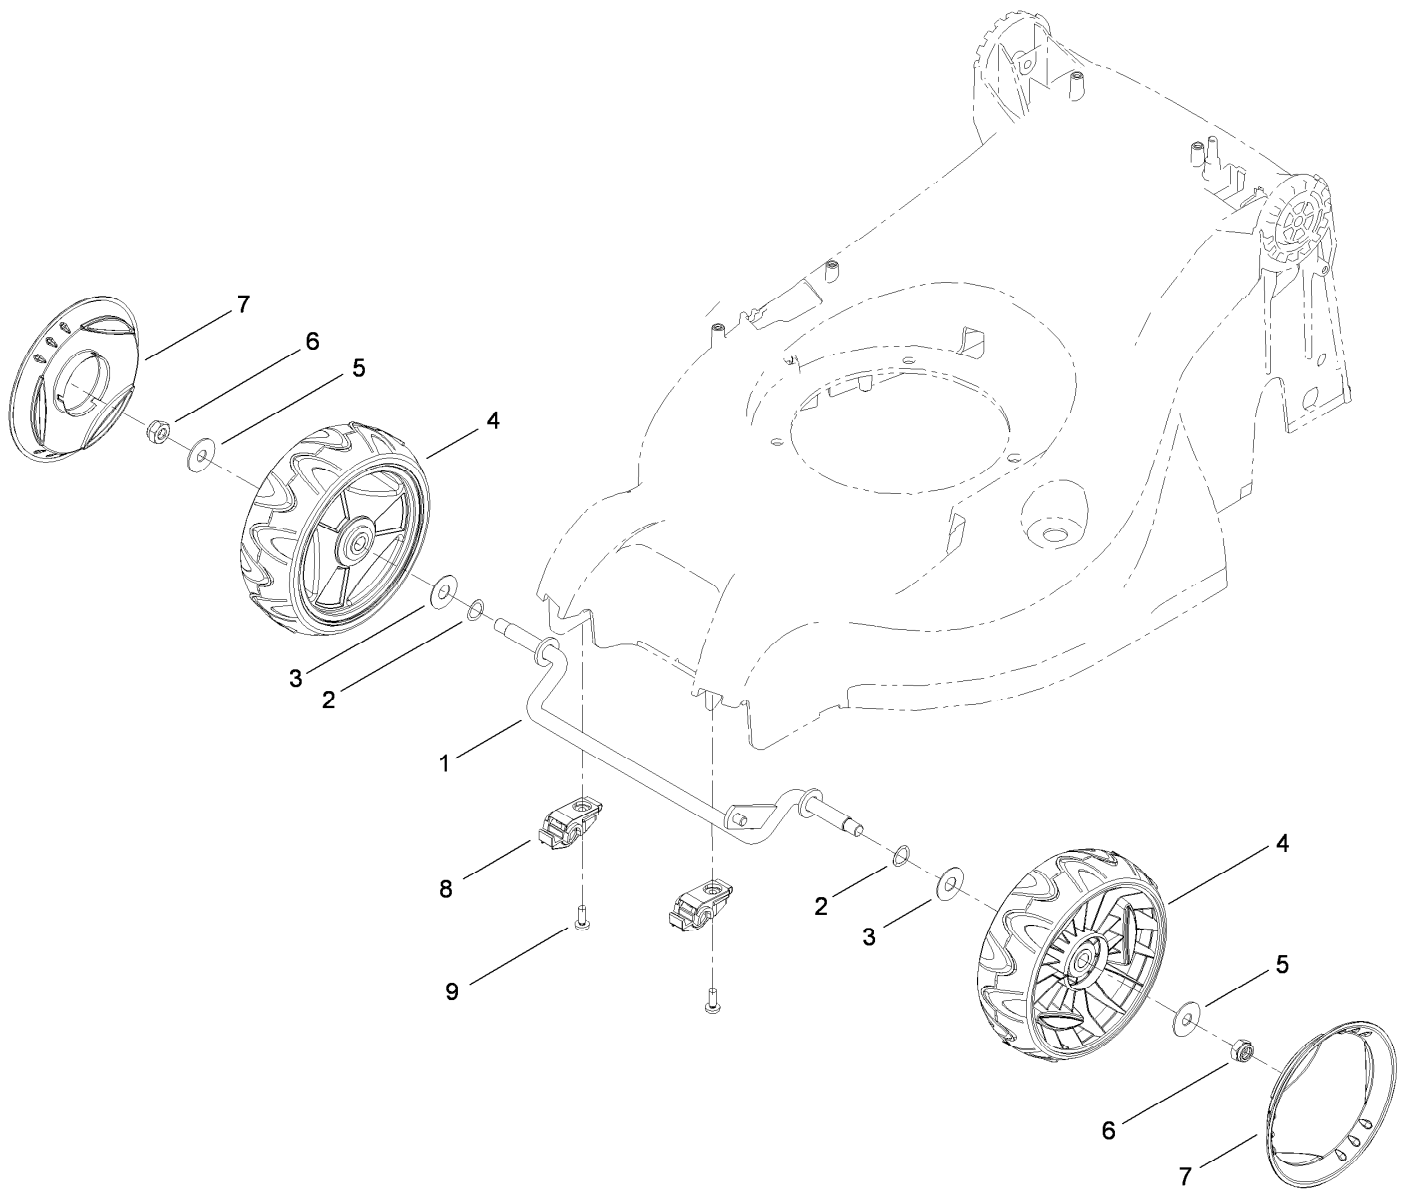

Front Wheel Assembly

Ref.	Part Number	Qty.	Description
1	110-9266	1	Front Axle ASM
2	99-1713	2	Washer-Spring
3	114-5351	2	Washer-Plain
4	95-6993	2	Front Wheel ASM
5	114-5360	2	Washer-Plain
6	93-4098	2	Nut-HH
7	110-9253	2	Cover-Wheel, Front
8	110-9261	2	Clamp-Axle, Front
9	114-5356	2	Screw-SPH, Thread Rolling

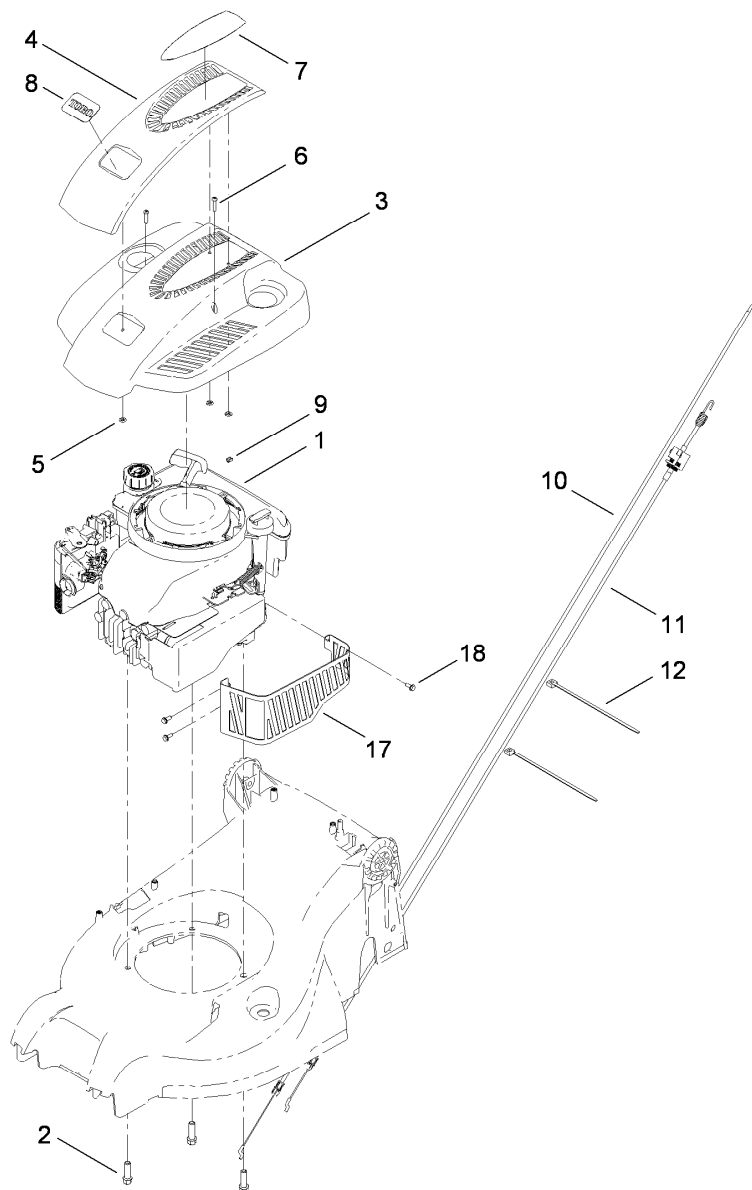


Engine Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Briggs, 124T02-0305-B1 ●■
2	95-1727	3	Screw-Taptite
3	110-9156	1	Shroud-Engine
4	110-9157	1	Cover-Shroud
5	110-9350	3	Clip-Push
6	93-0231	2	Screw-PPH
7	110-9399	1	Decal
8	115-3112	1	Decal
9	2210-316	1	Stop-Rope
10	110-9324	1	Cable-Brake
11	110-9326	1	Cable-Traction
12	115-3113	1	Tie-Cable
17	110-9158	1	Shield-Muffler
18	32144-1	3	Screw-Taptite


● Not serviced separately

■ Obtain parts from www.briggsandstratton.com

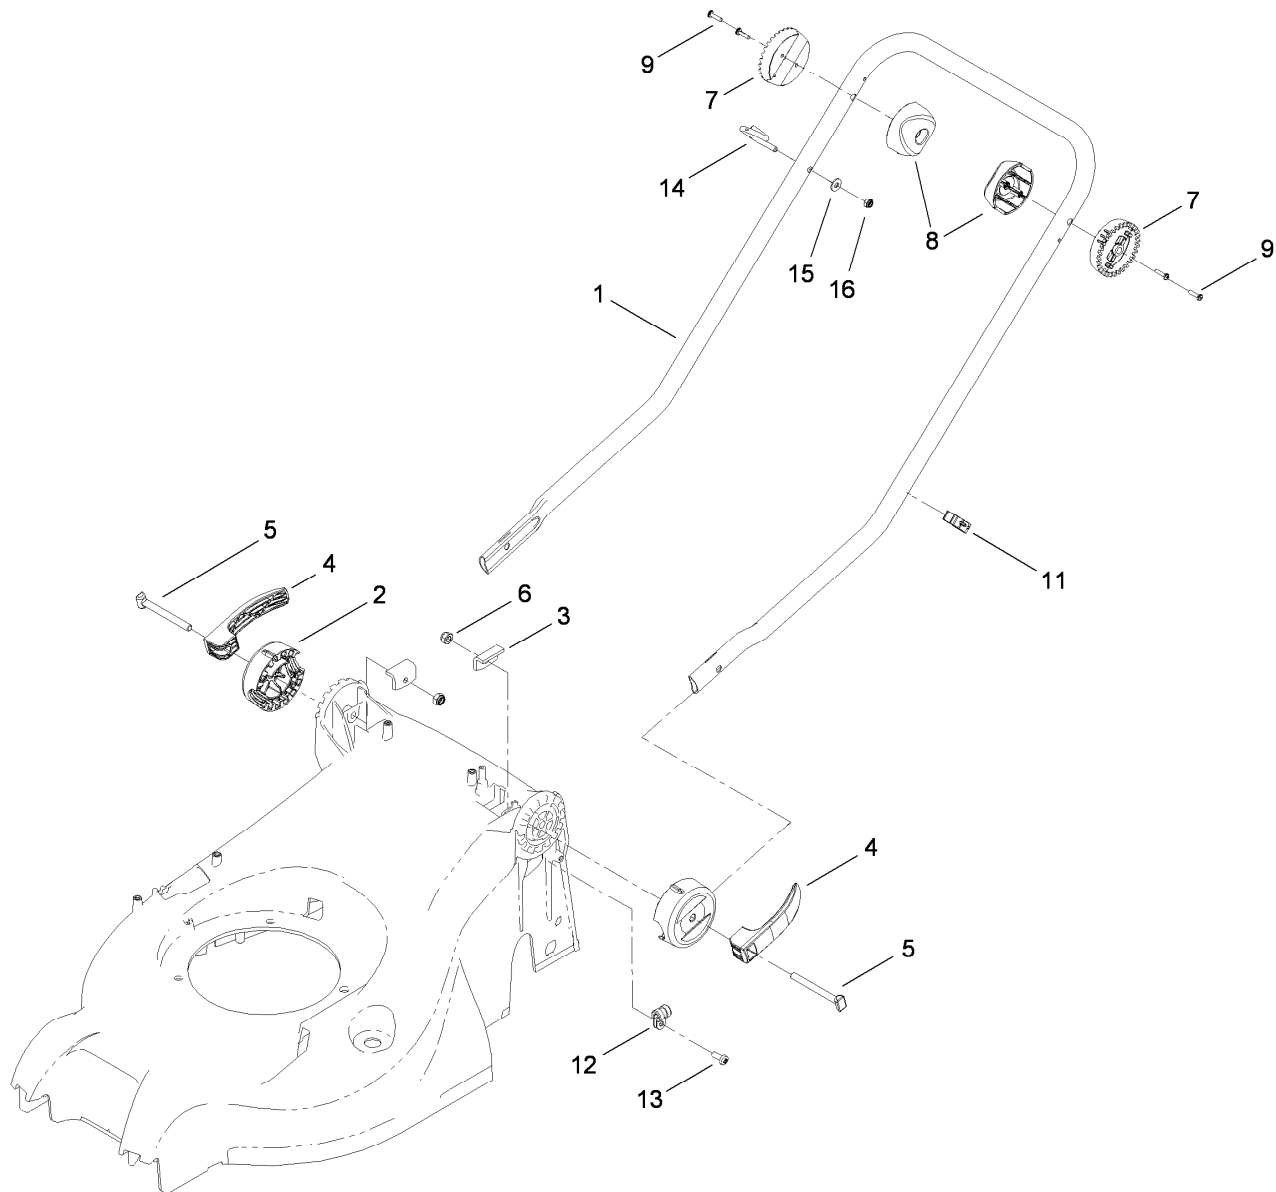

Lower Handle Assembly

Ref.	Part Number	Qty.	Description
1	110-9297	1	Handle-Lower
2	110-9351	2	Disc-Handle, Lower
3	110-9376	2	Bracket-Adjust, Handle
4	110-9296	2	Lever-Locking, Handle
5	95-6988	2	Bolt-T Head, Lower
6	106-4757	2	Nut-Hex
7	110-9314	2	Mount-Handle
8	110-9315	2	Clamp-Handle
9	95-6598	4	Screw
11	110-9294	1	Guide-Cable
12	115-3126	1	Clamp-Cable
13	114-5356	1	Screw-SPH, Thread Rolling
14	112-8586	1	Guide-Rope
15	3256-1	1	Washer-Flat
16	106-8576	1	Nut-Hex

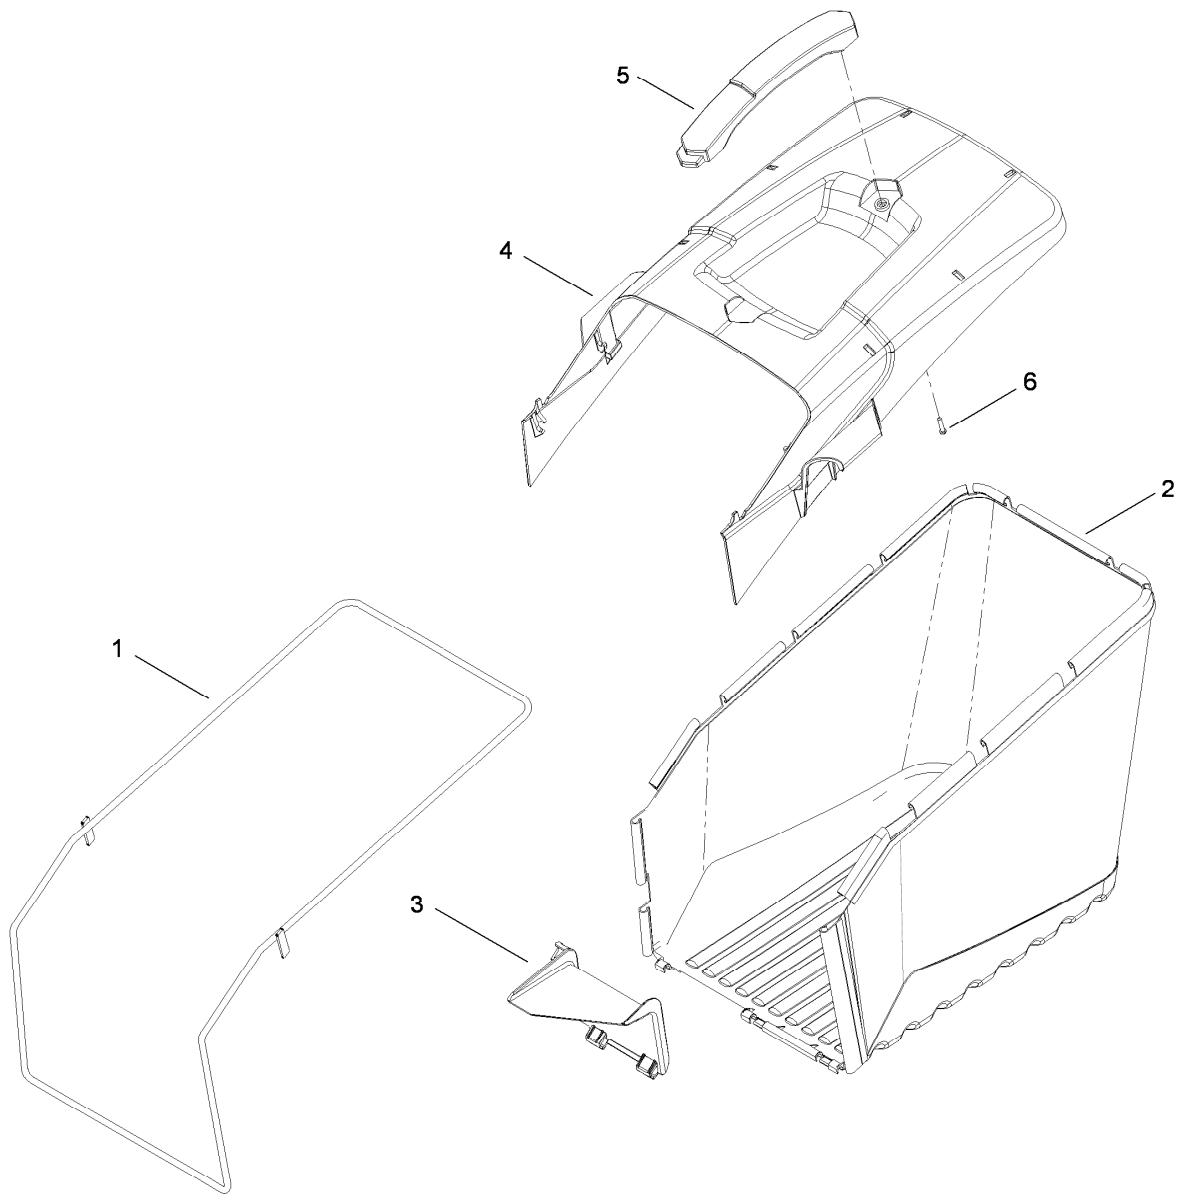

Grass Bag Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-8552	1	Bag Frame ASM
2	112-8602	1	Lower Bag ASM
3	110-9371	1	Lip-Bag, Grass
4	110-9298	1	Cover-Bag
5	110-9299	1	Handle-Bag
6	95-6560	1	Screw-Button Head, Torx

Notes:



Count on it.