



44" VACUUM BAGGER (INT'L)

Model No.79104 – 6900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Hopper & Chute Assembly	1	Baffle Assembly & Adjusting Link	6
Blower & Impeller Assembly	2		
Idler Assembly	3		
Pulley & Shield Assembly	4	Note:	
Bag Assembly	5		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
-------------	-------------------	-------------	-------------------

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

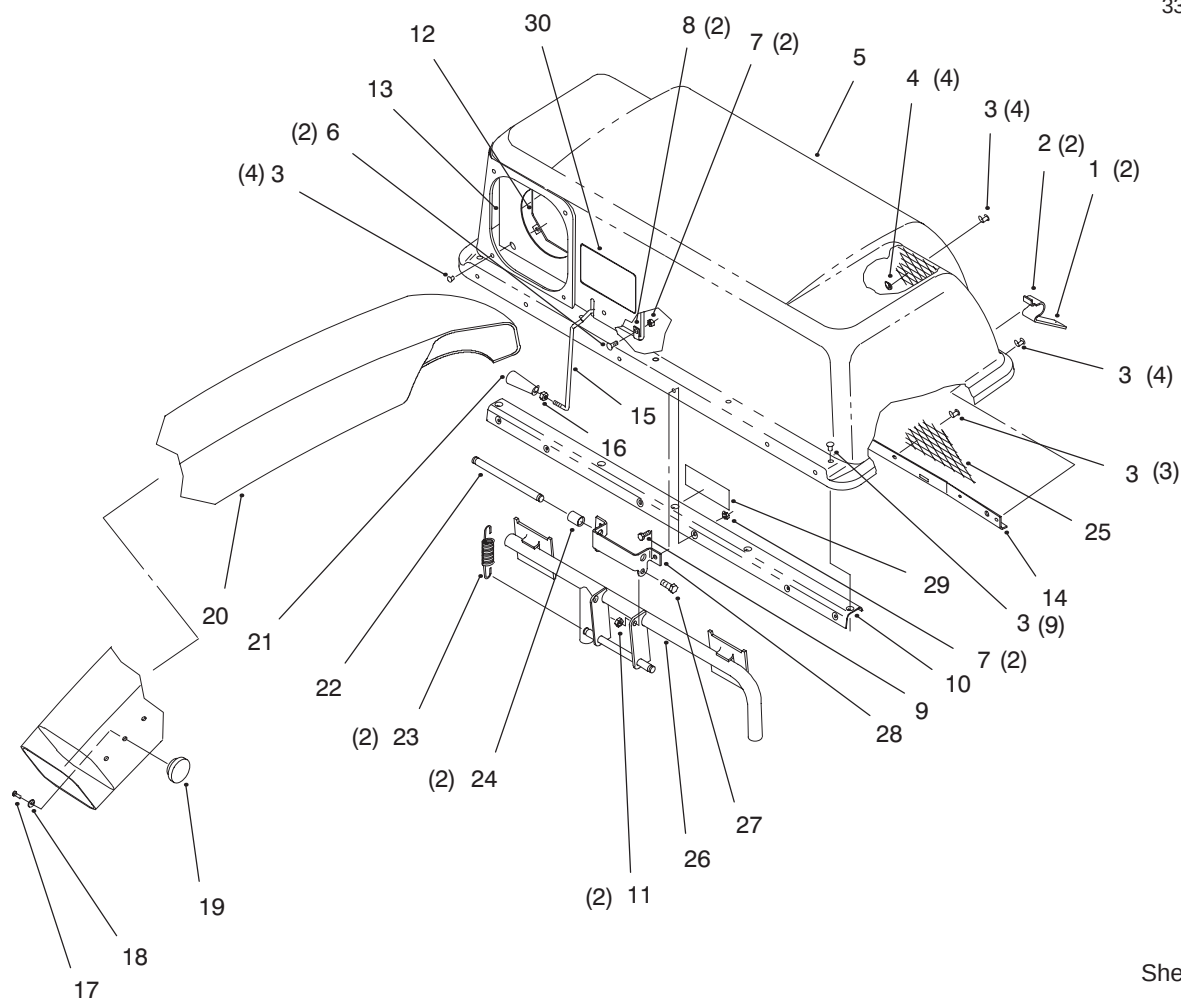

Sheet No.: 4

Hopper & Chute Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	115880	2	Grip	26	114955	1	Frame
2	115481	2	Latch-Bag Top	27	323-6	2	Screw-HH
3	114439	24	Rivet-Pop	28	114961	1	Hinge-Bagger Top
4	9202704	4	Washer-Flat	29	93-7320	1	Decal-Caution
5	92-1734	1	Top-Bagger	30	93-7329	1	Decal-Easy Twin
6	321-4	2	Screw-HH				
7	3296-42	4	Nut-Lock				
8	2412-91	2	Clamp-Cable				
9	321-4	2	Screw-HH				
10	94-4379	1	ASM-Stiffener (Incl. Ref. #29)				
11	3296-39	2	Nut-Lock				
12	114966	1	Clamp-Seal				
13	117239	1	Chute-Seal				
14	92-1736	1	Support-Screen				
15	114969	1	Feeler-Bag				
16	3218-1	1	Nut-Jam				
17	32144-8	1	Screw-PPH				
18	3256-49	1	Washer-Flat				
19	233-68	1	Knob				
20	79-7240	1	Chute-Discharge				
21	118320	1	Handle				
22	114960	1	Pin-Spring				
23	114962	2	Spring-Extension				
24	9790944	2	Spacer				
25	114967	1	Bagger-Screen				

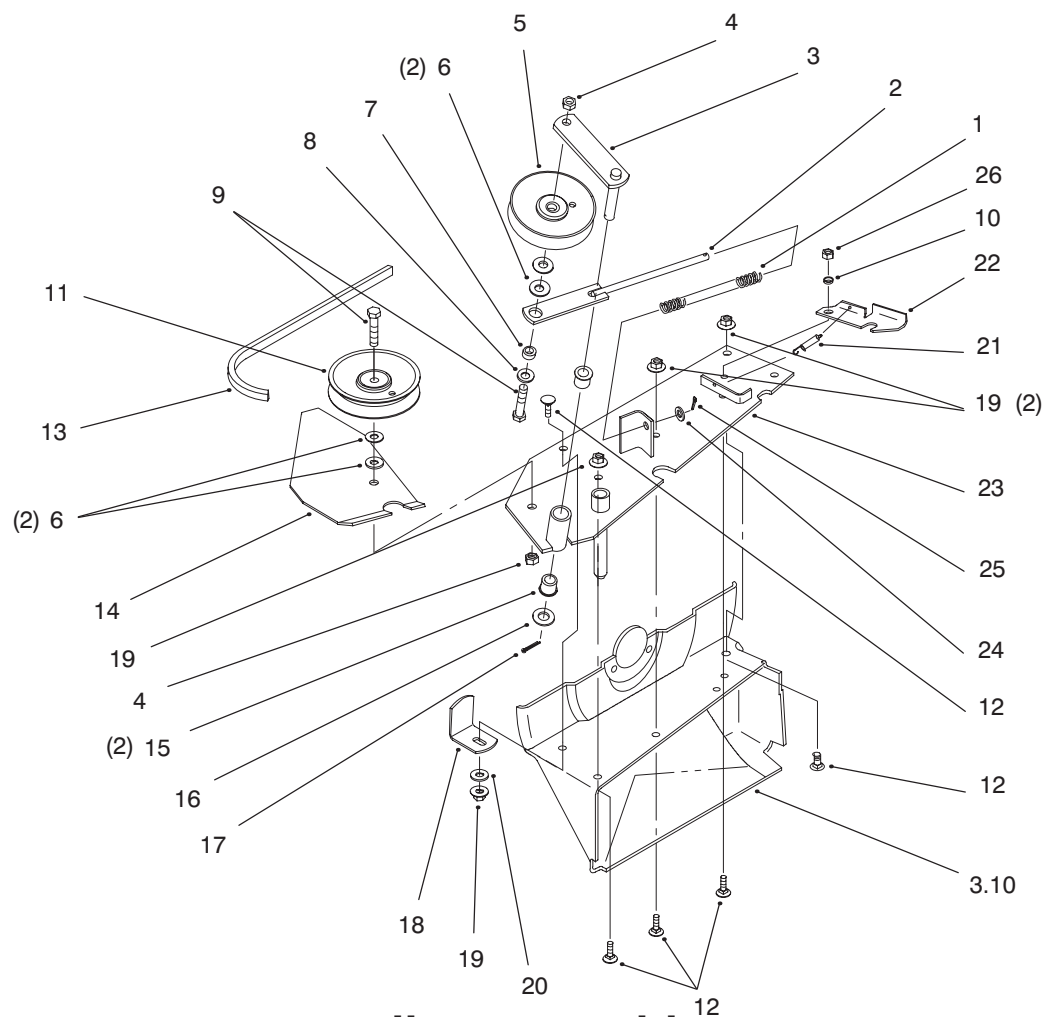

Sheet No.: 2

Idler Assembly

Ref. No.	Part No.	Qty.	Description
1	79-7110	1	Spring-Compression
2	79-2020	1	Spring
3	79-1970	1	Arm
4	3296-39	2	Nut-Lock
5	92-7099	1	Pulley-Idler
6	3256-4	4	Washer-Flat
7	107213	1	Spacer-Pivot
8	3256-24	1	Washer-Flat
9	323-10	2	Screw-HH
10	93-8013	1	Spacer-Bushing
11	93-1622	1	Pulley-Idler
12	3230-16	5	Screw-CARR
13	93-8007	1	V Belt
14	79-7280	1	Support-Shield
15	100284	2	Bushing
16	3256-26	1	Washer-Flat
17	3272-7	1	Pin-Cotter
18	79-7440	1	Bracket-Support
19	32128-20	4	Nut-Lock
20	3256-3	1	Washer-Flt
21	79-7390	1	Spring-Extension
22	93-8012	1	Latch-Blower
23	93-8016	1	Mounting
24	3256-23	1	Washer-Flat
25	3272-10	1	Pin-Cotter
26	3296-29	1	Nut-Lock

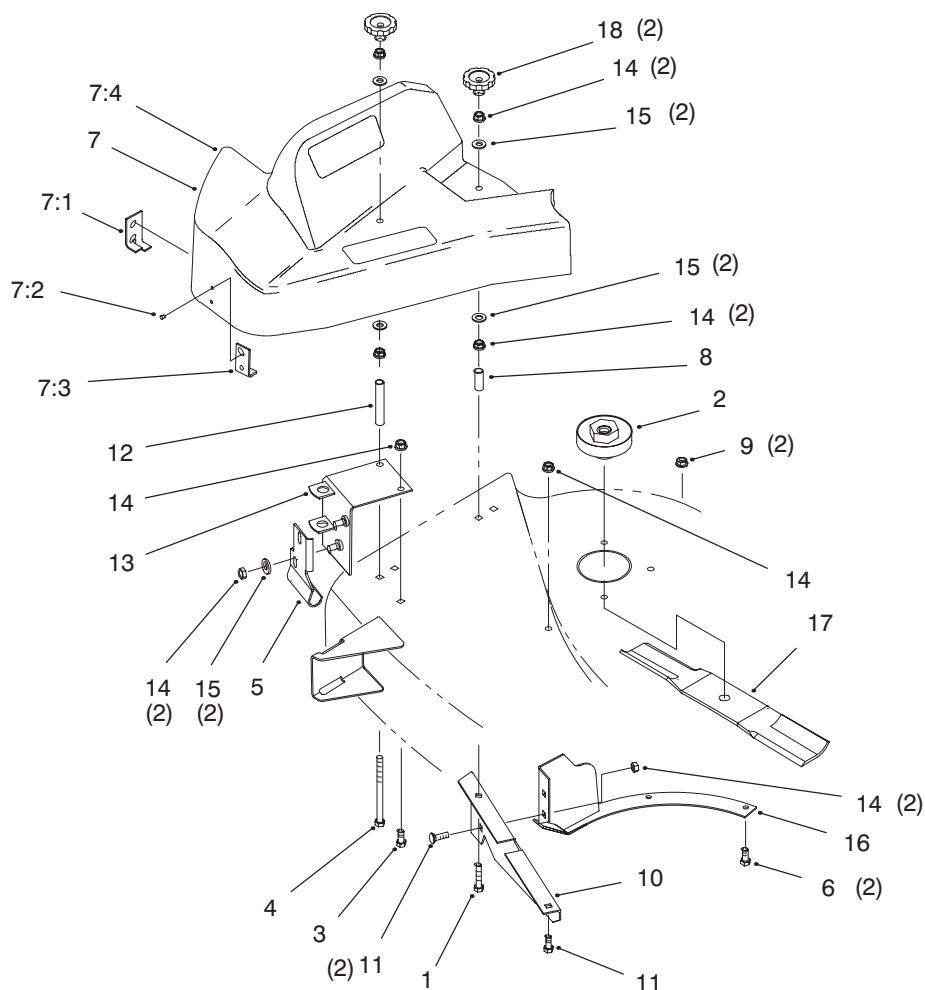


Sheet No.: 5

Pulley & Shield Assembly

Ref. No.	Part No.	Qty.	Description
1	3230-8	1	Screw-CARR
2	93-8008	1	Pulley
3	3230-16	1	Screw-CARR
4	3230-30	1	Screw-CARR
5	93-9344	1	Bracket-Pivot
6	321-4	2	Screw-HH
7	94-4380	1	ASM-Shield
7:1	93-8022	1	Bracket-Support
7:2	79-0470	4	Pop Rivet
7:3	88-1870	1	Bracket-Support
7:4	94-4381	1	Shield-Belt
8	93-8009	1	Tube-Latch
9	3296-42	2	Nut-Lock
10	56-5170	1	Baffle-Rear
11	3230-16	3	Screw-CARR
12	93-8023	1	Tube-Spacer
13	93-8020	1	Pivot Bracket
14	3296-29	10	Nut-Lock
15	3256-23	6	Washer-Flat
16	93-8006	1	Ring
17	55-4940	3	Blade
18	19-4050	2	Knob

Ref. No.	Part No.	Qty.	Description

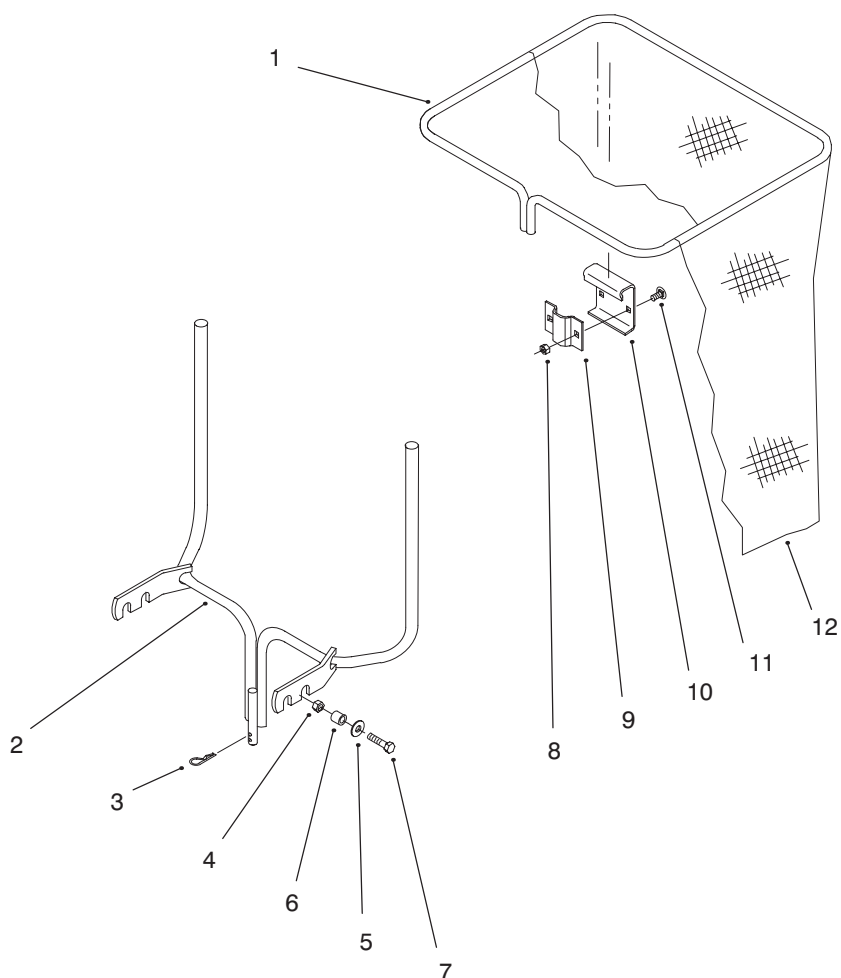


Sheet No.: 6

Bag Assembly

Ref. No.	Part No.	Qty.	Description
1	114972	2	Frame—Bag
2	93—8015	1	Bagger Bracket
3	9335064	1	Hairpin
4	3296—39	2	Nut—Lock
5	9202204	2	Washer
6	105474	2	Spacer
7	323—10	2	Screw—HH
8	3296—29	4	Nut—Lock
9	114974	2	Clamp
10	114973	2	Hanger—Bag
11	3230—1	4	Screw—CARR
12	93—1623	2	Bag

Ref. No.	Part No.	Qty.	Description

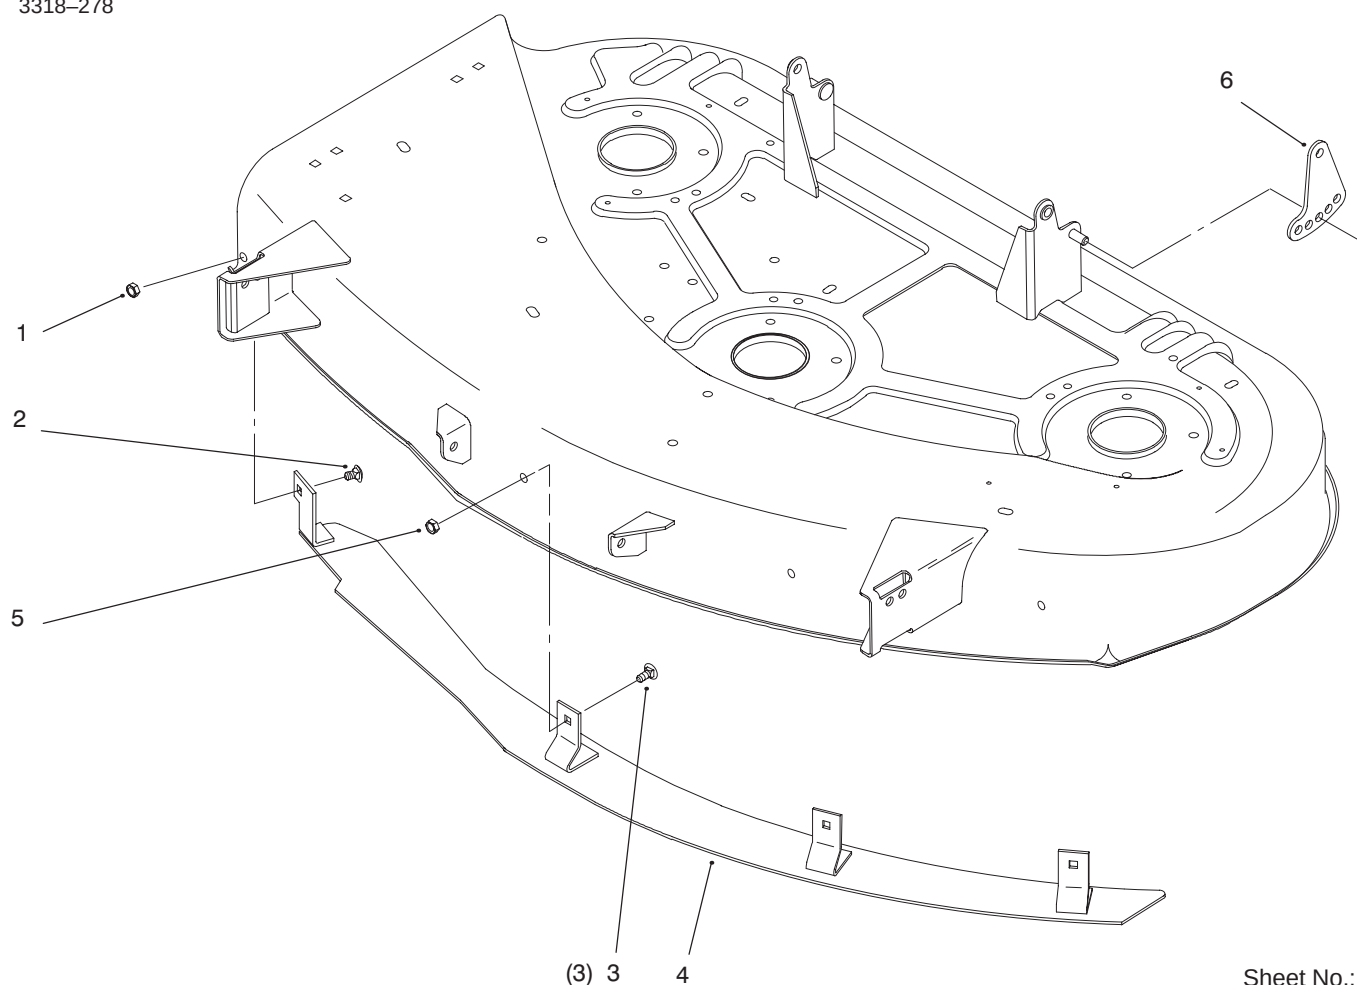

Sheet No.: 8

Baffle Assembly & Adjusting Link

Ref. No.	Part No.	Qty.	Description
1	3296-47	1	Nut-Lock
2	3230-19	1	Screw-CARR
3	3230-16	3	Screw-CARR
4	93-9950	1	Baffle
5	3296-29	3	Nut-Lock
6	93-9910	2	Link - Adjusting

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
7038	2	18	1	Spacer
100284	3	15	2	Bushing
105474	5	6	2	Spacer
107213	3	7	1	Spacer—Pivot
114439	1	3	24	Rivet—Pop
114955	1	26	1	Frame
114960	1	22	1	Pin—Spring
114961	1	28	1	Hinge—Bagger Top
114962	1	23	2	Spring—Extension
114966	1	12	1	Clamp—Seal
114967	1	25	1	Bagger—Screen
114969	1	15	1	Feeler—Bag
114972	5	1	2	Frame—Bag
114973	5	10	2	Hanger—Bag
114974	5	9	2	Clamp
115481	1	2	2	Latch—Bag Top
115880	1	1	2	Grip
117239	1	13	1	Chute—Seal
118320	1	21	1	Handle
9202204	5	5	2	Washer
9202704	1	4	4	Washer—Flat
9335064	5	3	1	Hairpin
9790944	1	24	2	Spacer
19—4050	4	18	2	Knob
22—9741	2	4	1	Spacer—Flanged
55—4940	4	17	3	Blade
56—5170	4	10	1	Baffle—Rear
79—1460	2	19	1	Pulley—Blower
79—1470	2	17	1	Shaft—Blower
79—1970	3	3	1	Arm
79—2020	3	2	1	Spring
79—4300	2	12	1	Impeller
79—7110	3	1	1	Spring—Compression
79—7170	2	13	1	Cover—Blower
79—7240	1	20	1	Chute—Discharge
79—7280	3	14	1	Support—Shield
79—7390	3	21	1	Spring—Extension
79—7440	3	18	1	Bracket—Support
82—5690	2	3	1	Retainer
92—1734	1	5	1	Top—Bagger
92—1736	1	14	1	Support—Screen
92—7099	3	5	1	Pulley—Idler
93—1622	3	11	1	Pulley—Idler
93—1623	5	12	2	Bag
93—7320	1	29	1	Decal—Caution
93—7329	1	30	1	Decal—Easy Twin
93—8006	4	16	1	Ring
93—8007	3	13	1	V Belt
93—8008	4	2	1	Pulley
93—8009	4	8	1	Tube—Latch
93—8012	3	22	1	Latch—Blower
93—8013	3	10	1	Spacer—Bushing
93—8015	5	2	1	Bagger Bracket
93—8016	3	23	1	Mounting
93—8020	4	13	1	Pivot Bracket
93—8023	4	12	1	Tube—Spacer
93—9344	4	5	1	Bracket—Pivot
93—9910	6	6	2	Link — Adjusting
93—9950	6	4	1	Baffle
94—4378	2	10	1	Housing—Blower
94—4379	1	10	1	ASM—Stiffener
94—4380	4	7	1	ASM—Shield

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
233-68	1	19	1	Knob
2412-91	1	8	2	Clamp-Cable
251-288	2	8	2	Bearing-Ball
251-341	2	7	4	Bearing-Flange
321-4	1	6	2	Screw-HH
321-4	1	9	2	Screw-HH
321-4	4	6	2	Screw-HH
323-6	1	27	2	Screw-HH
323-10	3	9	2	Screw-HH
323-10	5	7	2	Screw-HH
3218-1	1	16	1	Nut-Jam
3220-6	2	5	2	Nut-Jam
3229-22	2	11	6	Screw-CARR
3230-1	5	11	4	Screw-CARR
3230-8	4	1	1	Screw-CARR
3230-16	2	9	6	Screw-CARR
3230-16	3	12	5	Screw-CARR
3230-16	4	3	1	Screw-CARR
3230-16	4	11	3	Screw-CARR
3230-16	6	3	3	Screw-CARR
3230-19	6	2	1	Screw-CARR
3230-30	4	4	1	Screw-CARR
3253-8	2	6	2	Washer-Lock
3256-3	3	20	1	Washer-Flat
3256-4	3	6	4	Washer-Flat
3256-22	2	14	6	Washer-Flat
3256-23	3	24	1	Washer-Flat
3256-23	4	15	6	Washer-Flat
3256-24	3	8	1	Washer-Flat
3256-26	3	16	1	Washer-Flat
3256-49	1	18	1	Washer-Flat
3257-40	2	16	1	Key-Woodruff
3272-7	3	17	1	Pin-Cotter
3272-10	3	25	1	Pin-Cotter
3290-479	2	2	1	Fastener-Panel
3296-29	3	26	1	Nut-Lock
3296-29	4	14	10	Nut-Lock
3296-29	5	8	4	Nut-Lock
3296-29	6	5	3	Nut-Lock
3296-39	1	11	2	Nut-Lock
3296-39	3	4	2	Nut-Lock
3296-39	5	4	2	Nut-Lock
3296-42	1	7	4	Nut-Lock
3296-42	4	9	2	Nut-Lock
3296-47	6	1	1	Nut-Lock
3296-56	2	15	6	Nut-Hex Lock
32128-20	2	1	6	Nut-Lock
32128-20	3	19	4	Nut-Lock
32144-8	1	17	1	Screw-PPH