



**Count on it.**

**Parts Catalog**

**LX423 Lawn Tractor**

Model No. 13AX90RS848—Serial No. 1 and Up

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

<b>AR:</b> as required	<b>HLH:</b> hex lag head	<b>RH:</b> right hand
<b>ASM:</b> assembly	<b>HOC:</b> height-of-cut	<b>ROPS:</b> roll-over protection system
<b>BBC:</b> blade brake control	<b>HSBH:</b> hex socket button head	<b>RRB:</b> rear roller brush
<b>BHTF:</b> button head thread forming	<b>HSFH:</b> hex socket flat head	<b>SFH:</b> slotted fillister head
<b>CARR:</b> carriage	<b>HSH:</b> hex socket head	<b>SHH:</b> slotted hex head
<b>CCW:</b> counter clockwise	<b>HWH:</b> hex washer head	<b>SHWH:</b> slotted hex washer head
<b>CW:</b> clockwise	<b>HWHTF:</b> hex washer head thread forming	<b>SPH:</b> slotted pan head
<b>DEG:</b> degrees	<b>HYD:</b> hydraulic	<b>SQH:</b> square head
<b>ECM:</b> electronic control module	<b>LH:</b> left hand	<b>SRH:</b> slotted round head
<b>EXT:</b> external	<b>NI:</b> nylon insert	<b>STD:</b> standard
<b>FH:</b> flat head	<b>NPTF:</b> national pipe thread fine	<b>TAP:</b> self tapping
<b>GA:</b> gauge	<b>PFH:</b> phillips flat head	<b>TTH:</b> torx truss head
<b>HD:</b> heavy-duty	<b>PPH:</b> phillips pan head	
<b>HF:</b> hex flange	<b>PPHTF:</b> phillips pan head thread forming	
<b>HH:</b> hex head	<b>PRH:</b> phillips round head	
<b>HHF:</b> hex head flange	<b>PTH:</b> phillips truss head	
<b>HHFTF:</b> hex head flange thread forming	<b>PTO:</b> power-take-off	
<b>HJ:</b> hex jam		


# Contents

Wheel and Tire Assembly .....	4
Muffler and Shield Assembly .....	5
Steering and Front Axle Assembly .....	6
Frame, Battery and PTO Assembly .....	8
Seat, Fender and Deck Lift Assembly .....	10
Fuel Tank, Hood and Dash Assembly .....	12
Transmission, Belt and Drive Assembly .....	14
42 Inch Deck Assembly .....	16
Transmission Assembly No. 112-6256 .....	18
Attachments and Accessories .....	20

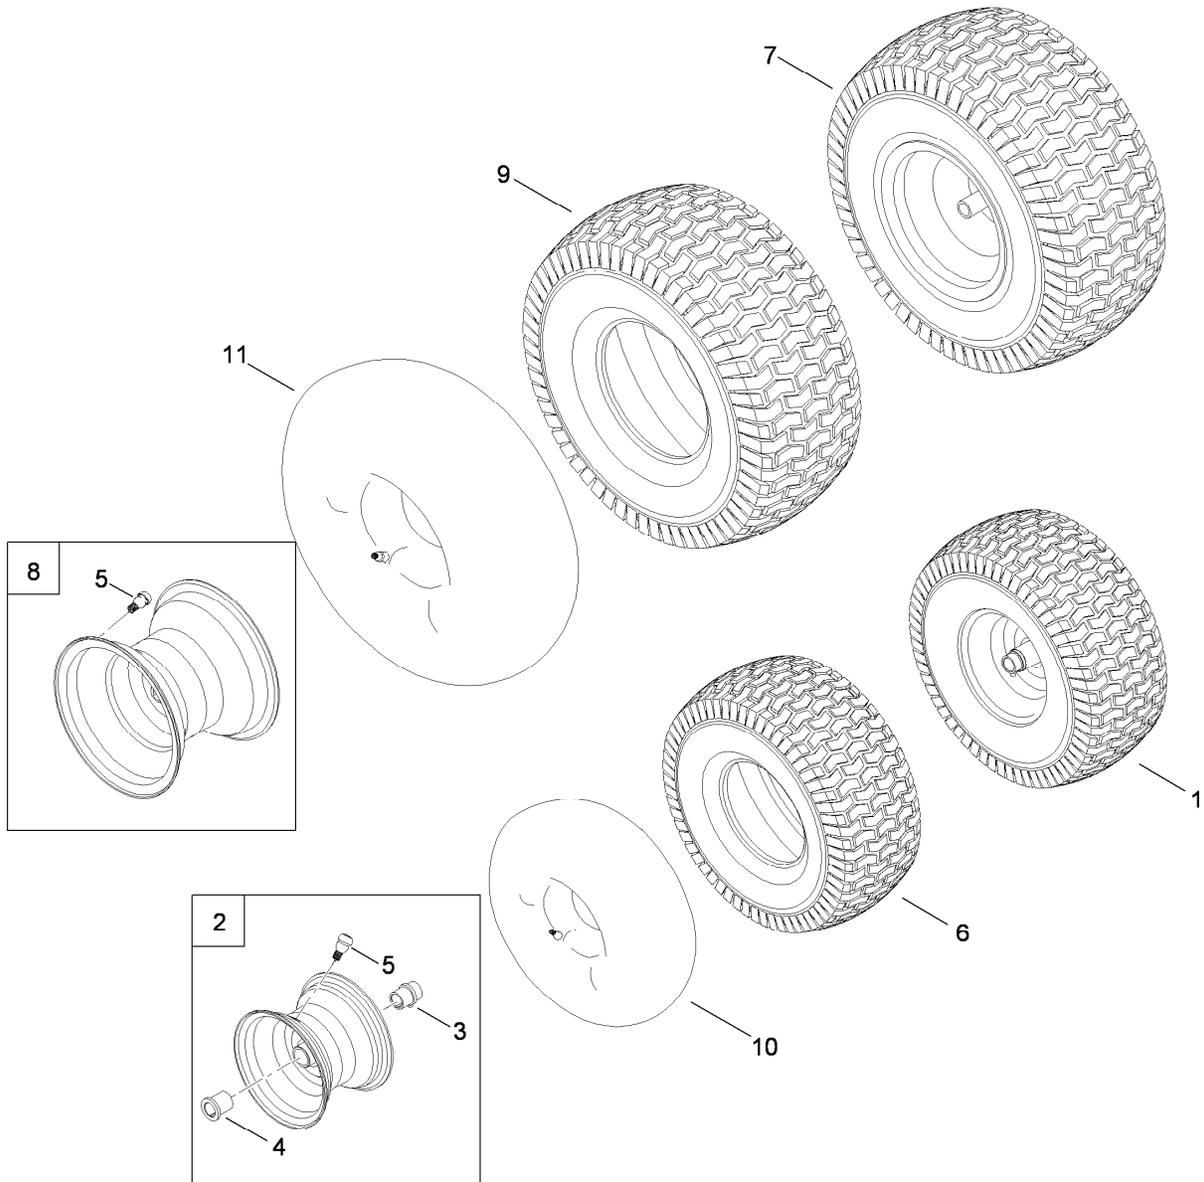

## Wheel and Tire Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-3969	1	Front Wheel And Tire ASM
2	119-3970	1	Rim ASM (W/Bearings)
3	112-0375	1	Bearing-Flange (W/Zerk)
4	112-0331	1	Bearing-Flange
5	112-0503	1	Valve-Air, Tubeless
6	112-0576	1	Tire-Front
7	119-3971	1	Rear Wheel And Tire ASM
8	112-6201	1	Rim-Wheel, Rear
9	112-0713	1	Tire-Multi Trac
10	232-39	1	Tube-Inner
11	93-3893	1	Tube-Inner

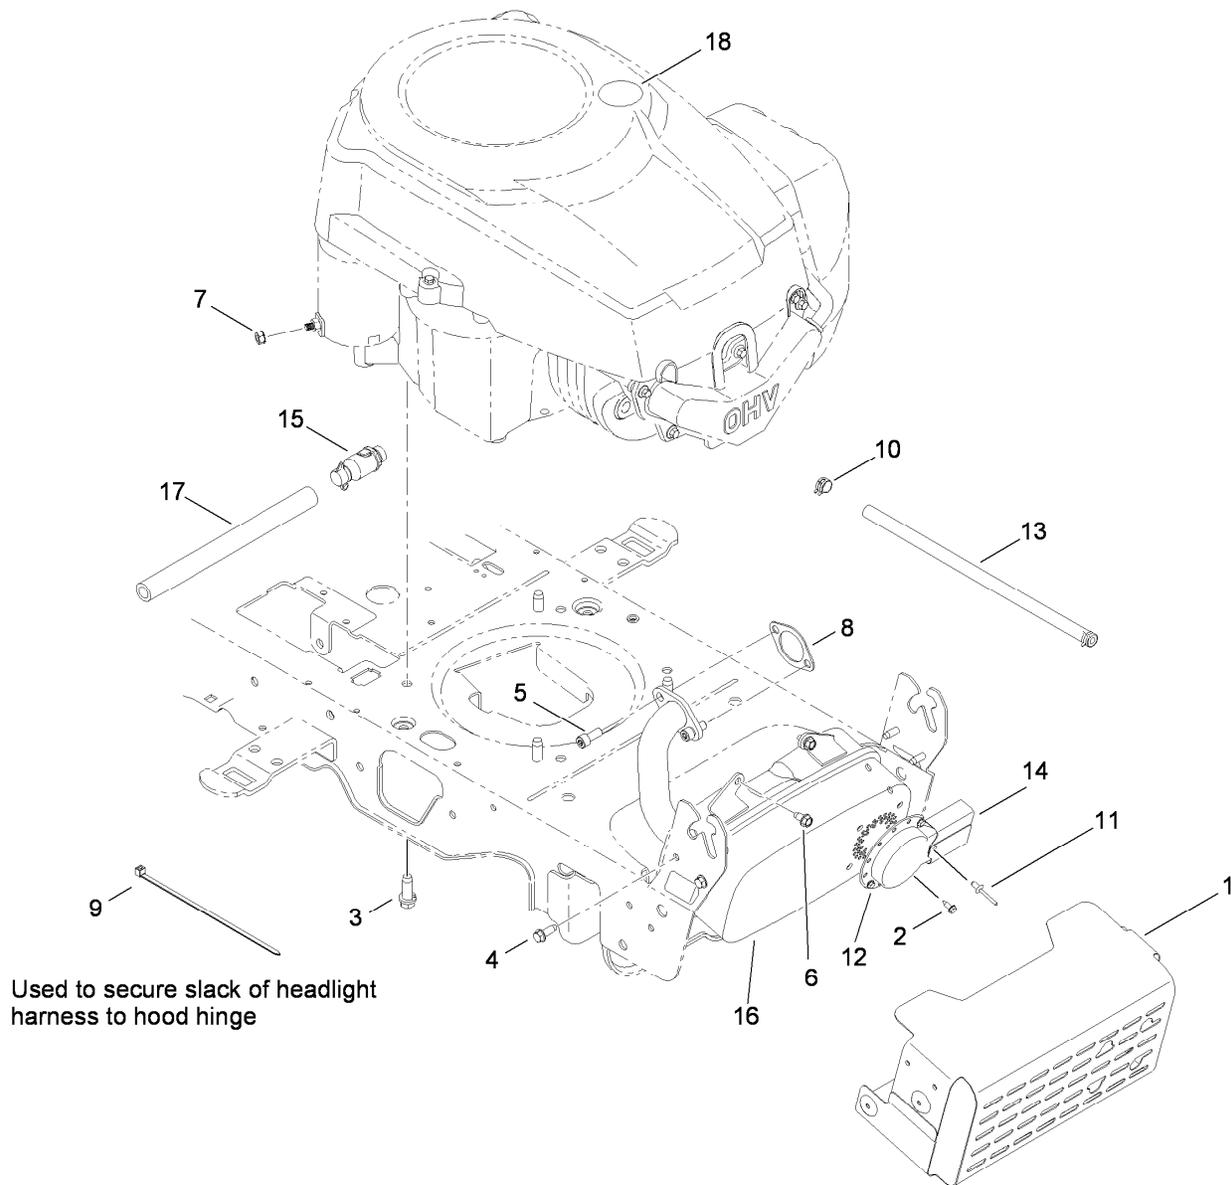


## Muffler and Shield Assembly

Ref.	Part Number	Qty.	Description
1	112-6202	1	Shield-Muffler
2	112-0626	1	Screw-HWHTF
3	112-6163	1	Screw-HH, TAP
4	112-0524	1	Screw-HWHTF
5	112-6012	1	Screw-HSH
6	112-0659	1	Screw-HWH
7	112-0546	1	Nut-Sems
8	119-3972	1	Gasket-Exhaust
9	112-0527	1	Tie-Cable

Ref.	Part Number	Qty.	Description
10	112-0573	1	Clamp-Hose
11	112-3741	1	Rivet-Pop
12	112-0453	1	Deflector-Muffler
13	112-0720	1	Hose-Fuel
14	112-0730	1	Deflector-Muffler, Long
15	110-9890	1	Drain-Oil
16	119-3973	1	Muffler
17	112-0553	1	Hose-Drain
18	112-5960	1	Decal-Check Oil


# Steering and Front Axle Assembly

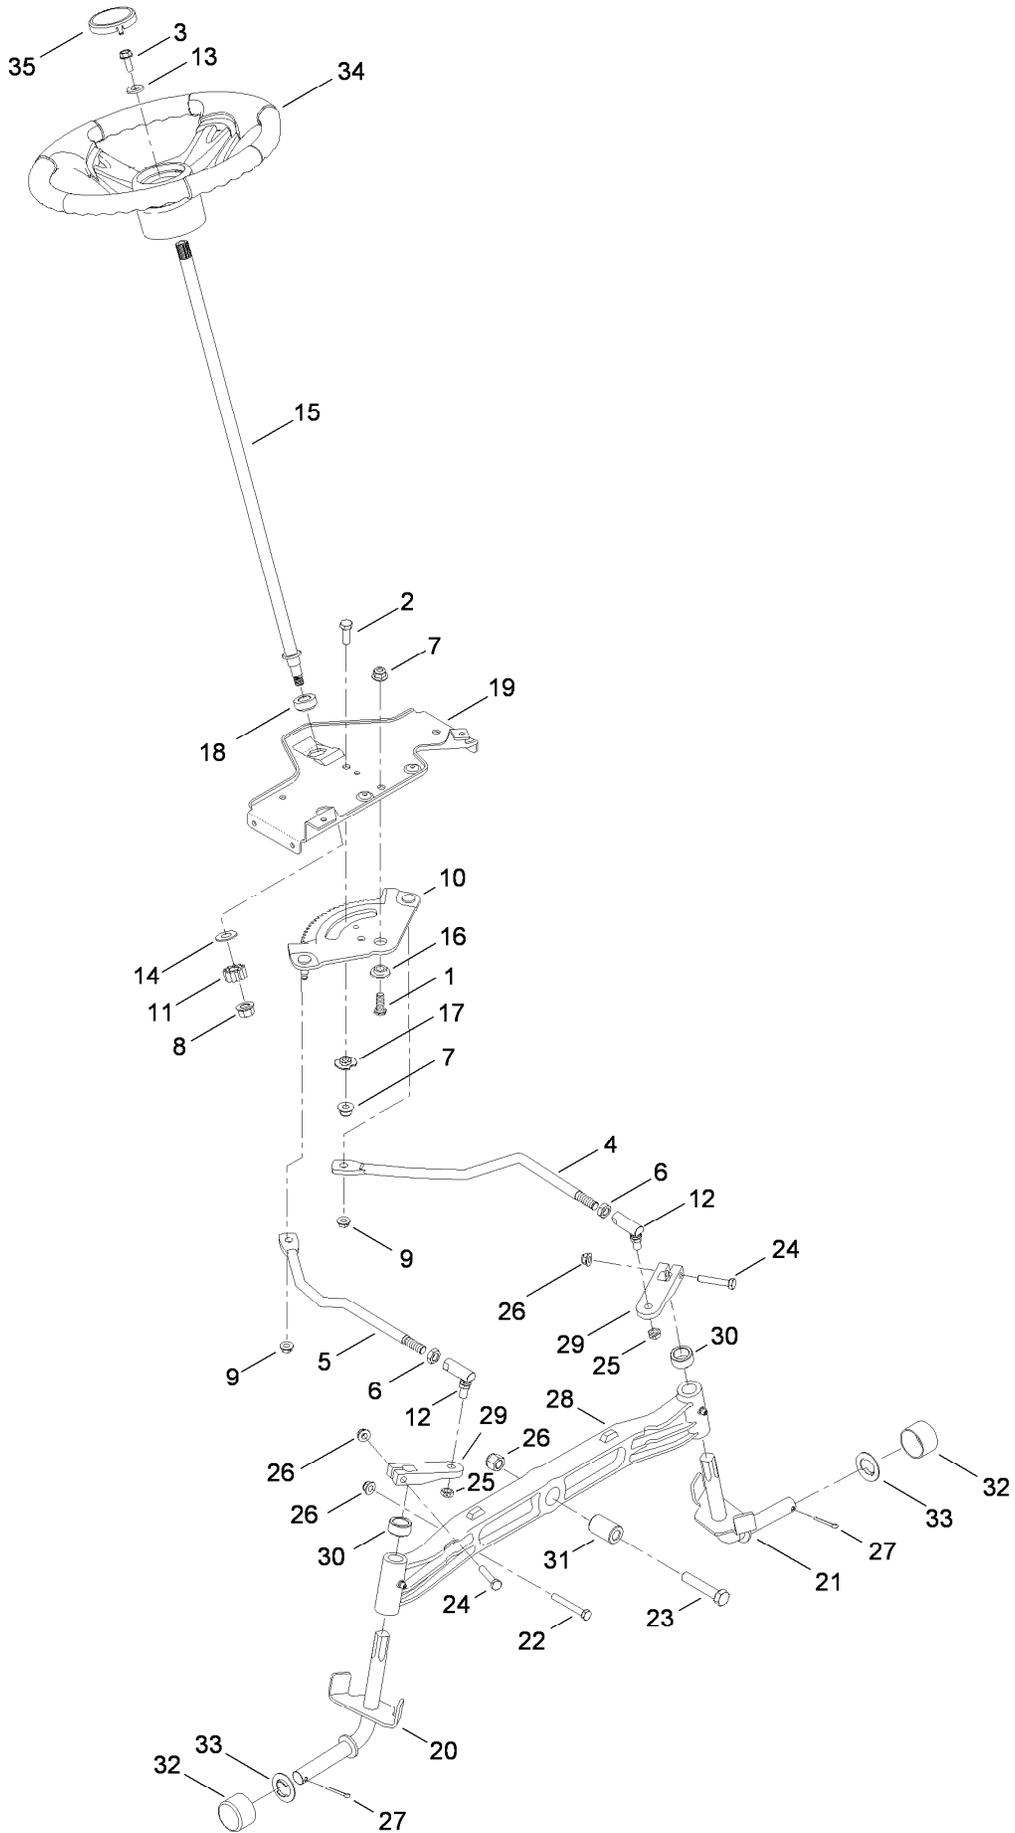

## Steering and Front Axle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-0631	1	Screw-HH	19	119-3979	1	Bracket-Support, Steering
2	112-0492	1	Screw-HH	20	119-3980	1	RH Axle ASM
3	112-0473	1	Screw-HH	21	119-3981	1	LH Axle ASM
4	119-3974	1	Link-Drag, LH	22	112-5843	1	Screw-HH
5	119-3975	1	Link-Drag, RH	23	112-0611	1	Screw-HH
6	112-0493	1	Nut-Jam	24	112-1095	1	Bolt-HH
7	112-0668	1	Nut-Lock, Flange	25	112-0483	1	Nut-Hex, Lock
8	112-0859	1	Nut-Lock, Flange	26	112-0650	1	Nut-Lock, Flange
9	112-0511	1	Nut-Lock, Flange	27	112-0860	1	Pin-Cotter
10	119-3976	1	Gear-Steering	28	119-3982	1	Axle-Cast
11	112-0863	1	Gear-Pinion, Steering	29	119-3983	1	Block-Steering
12	112-0917	1	Ball Joint ASM	30	112-6136	1	Spacer
13	112-0924	1	Washer-Flat	31	119-3984	1	Spacer
14	112-0925	1	Washer-Flat	32	112-5968	1	Cap-Hub
15	112-6097	1	Shaft-Steering	33	112-6258	1	Washer-Flat
16	119-3977	1	Spacer-Shoulder	34	119-3985	1	Steering Wheel ASM
17	119-3978	1	Spacer	35	112-3734	1	Cap-Wheel, Steering
18	112-6257	1	Bearing-Flange, Hex				

# Frame, Battery and PTO Assembly

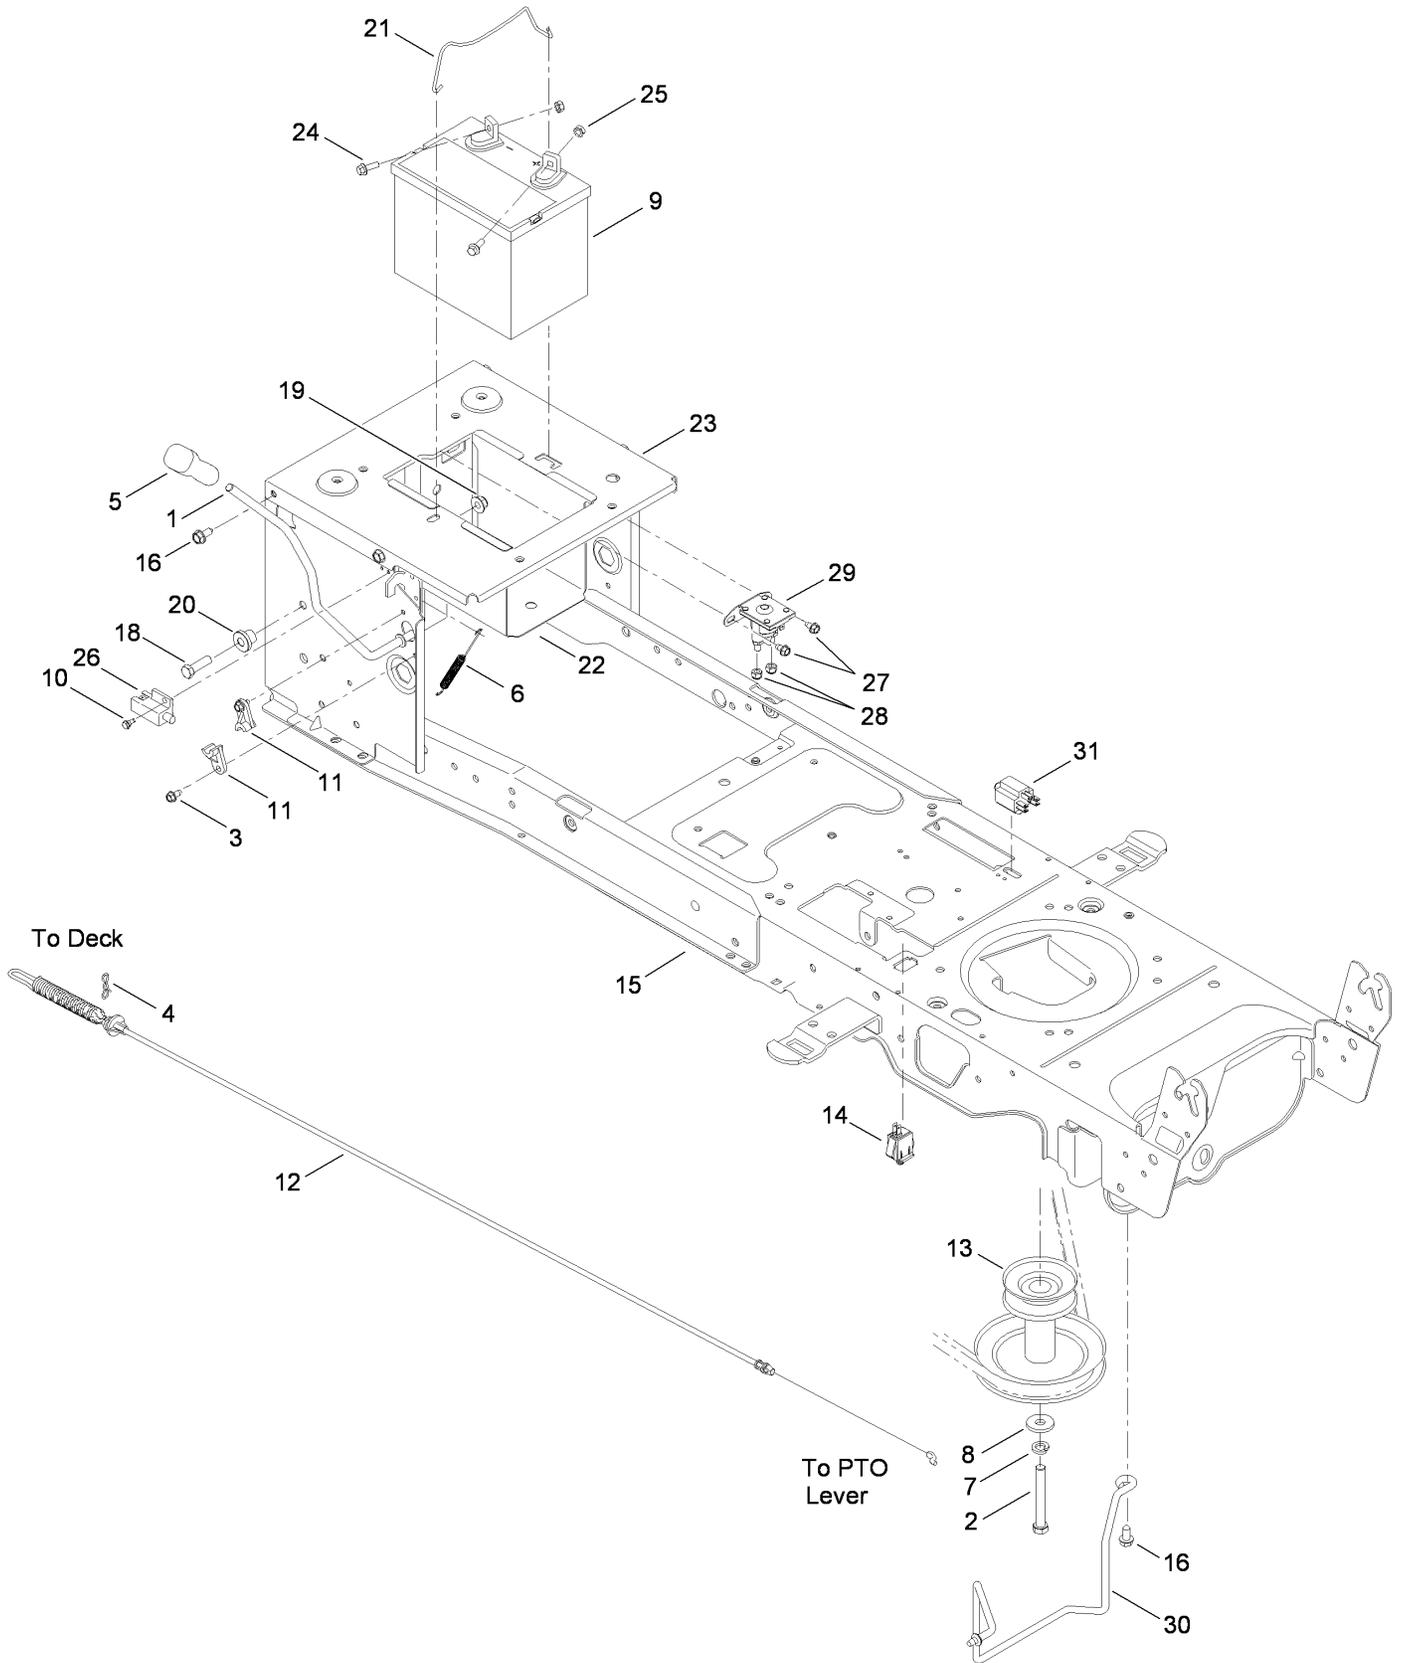


## Frame, Battery and PTO Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-3986	1	PTO Handle ASM	16	112-6070	1	Screw-TAP
2	119-3987	1	Bolt	18	112-0557	1	Screw-HH
3	112-0524	1	Screw-HWHTF	19	112-0668	1	Nut-Lock, Flange
4	112-0990	1	Pin-Cotter	20	112-0661	1	Spacer-Shoulder
5	119-3988	1	Grip-Handle	21	112-0581	1	Rod-Holddown, Battery
6	119-3989	1	Spring-Extension	22	112-0570	1	Tray-Battery
7	112-0428	1	Washer-Lock	23	112-6209	1	Bracket-Frame, Seat
8	112-0380	1	Washer-Flat	24	119-3994	1	Bolt
9	112-0425	1	Battery-245, Cca (Dry Flat Top)	25	112-0546	1	Nut-Sems
10	112-6206	1	Bolt-Shoulder	26	112-6210	1	Switch-Interlock, No/Nc
11	119-3990	1	Bearing-PTO	27	112-6022	1	Screw-TAP
12	119-3991	1	Cable-Engagement, Deck	28	112-0636	1	Nut-Lock, Flange
13	112-0333	1	Pulley-Engine	29	112-6073	1	Solenoid-12V, 2 Post 2 Tab
14	119-3992	1	Switch-Plunger, Snap Mount	30	119-3995	1	Rod-Keeper
15	119-3993	1	Lower Frame ASM	31	119-3996	1	Switch-3 Pole
				99	119-3997	1	Harness-Wiring ●

● Not illustrated

# Seat, Fender and Deck Lift Assembly

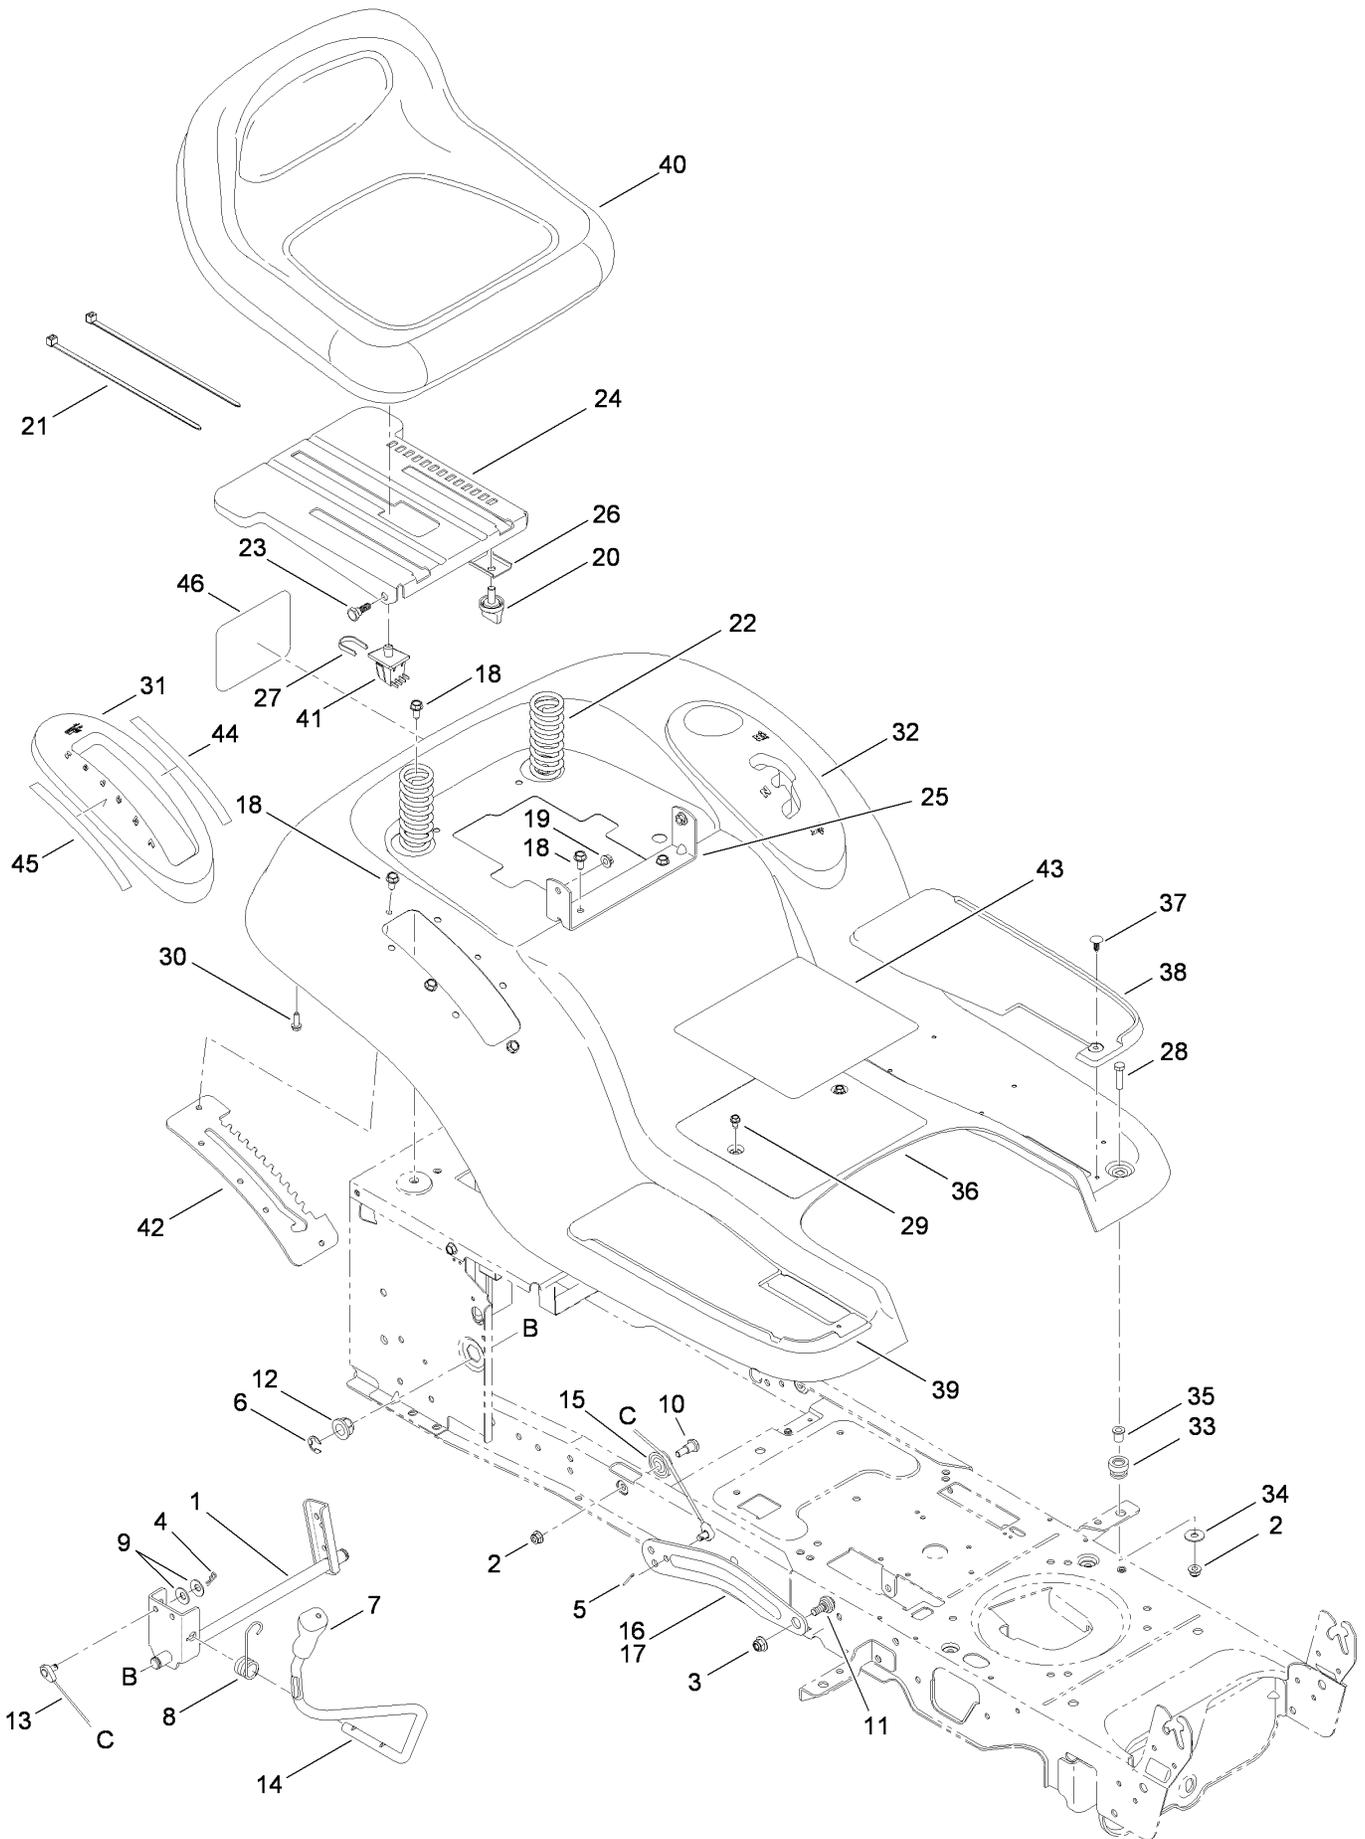


## Seat, Fender and Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-5969	1	Lift Shaft ASM	24	112-6214	1	Bracket-Mount, Seat
2	112-0650	1	Nut-Lock, Flange	25	112-6217	1	Bracket-Pivot, Seat
3	112-0668	1	Nut-Lock, Flange	26	112-6216	1	Bracket-Knob, Adjustment
4	112-0459	1	Pin-Cotter	27	119-8400	1	Clip-Retension
5	112-0990	1	Pin-Cotter	28	112-0373	1	Screw-HH
6	112-0586	1	Ring-E	29	112-0524	1	Screw-HWHTF
7	112-0585	1	Grip-Handle	30	112-0509	1	Screw-TAP
8	112-0477	1	Spring-Torsion	31	112-6226	1	Cover-Lift, Lever
9	112-0660	1	Washer-Spring	32	112-6111	1	Cover-Holder (W/Cup)
10	112-0443	1	Bolt-Shoulder	33	112-3732	1	Grommet
11	112-0669	1	Bolt-Shoulder	34	112-0582	1	Washer-Flat
12	112-0347	1	Bearing-Flange	35	112-3733	1	Spacer
13	112-0374	1	Cable-Lift	36	119-8401	1	Fender
14	119-3998	1	Handle-Lift	37	112-0549	1	Clip-Ratchet, Fastener
15	119-3999	1	Pulley-Cable	38	119-8402	1	Pad-Foot, LH
16	119-8471	1	Arm-Lift, RH	39	119-8403	1	Pad-Foot, RH
17	119-8472	1	Arm-Lift, LH ●	40	112-6231	1	Seat
18	112-6070	1	Screw-TAP	41	119-8404	1	Switch-Seat
19	112-0511	1	Nut-Lock, Flange	42	119-8405	1	Bracket-Lift
20	112-0409	1	Knob	43	119-8475	1	Decal-Safety
21	112-0527	1	Tie-Cable	44	119-8477	1	Decal-HOC
22	112-6208	1	Spring-Compression	45	119-8478	1	Decal-PTO
23	112-0575	1	Bolt-Shoulder	46	119-9050	1	Decal-Toro

● Not illustrated


# Fuel Tank, Hood and Dash Assembly

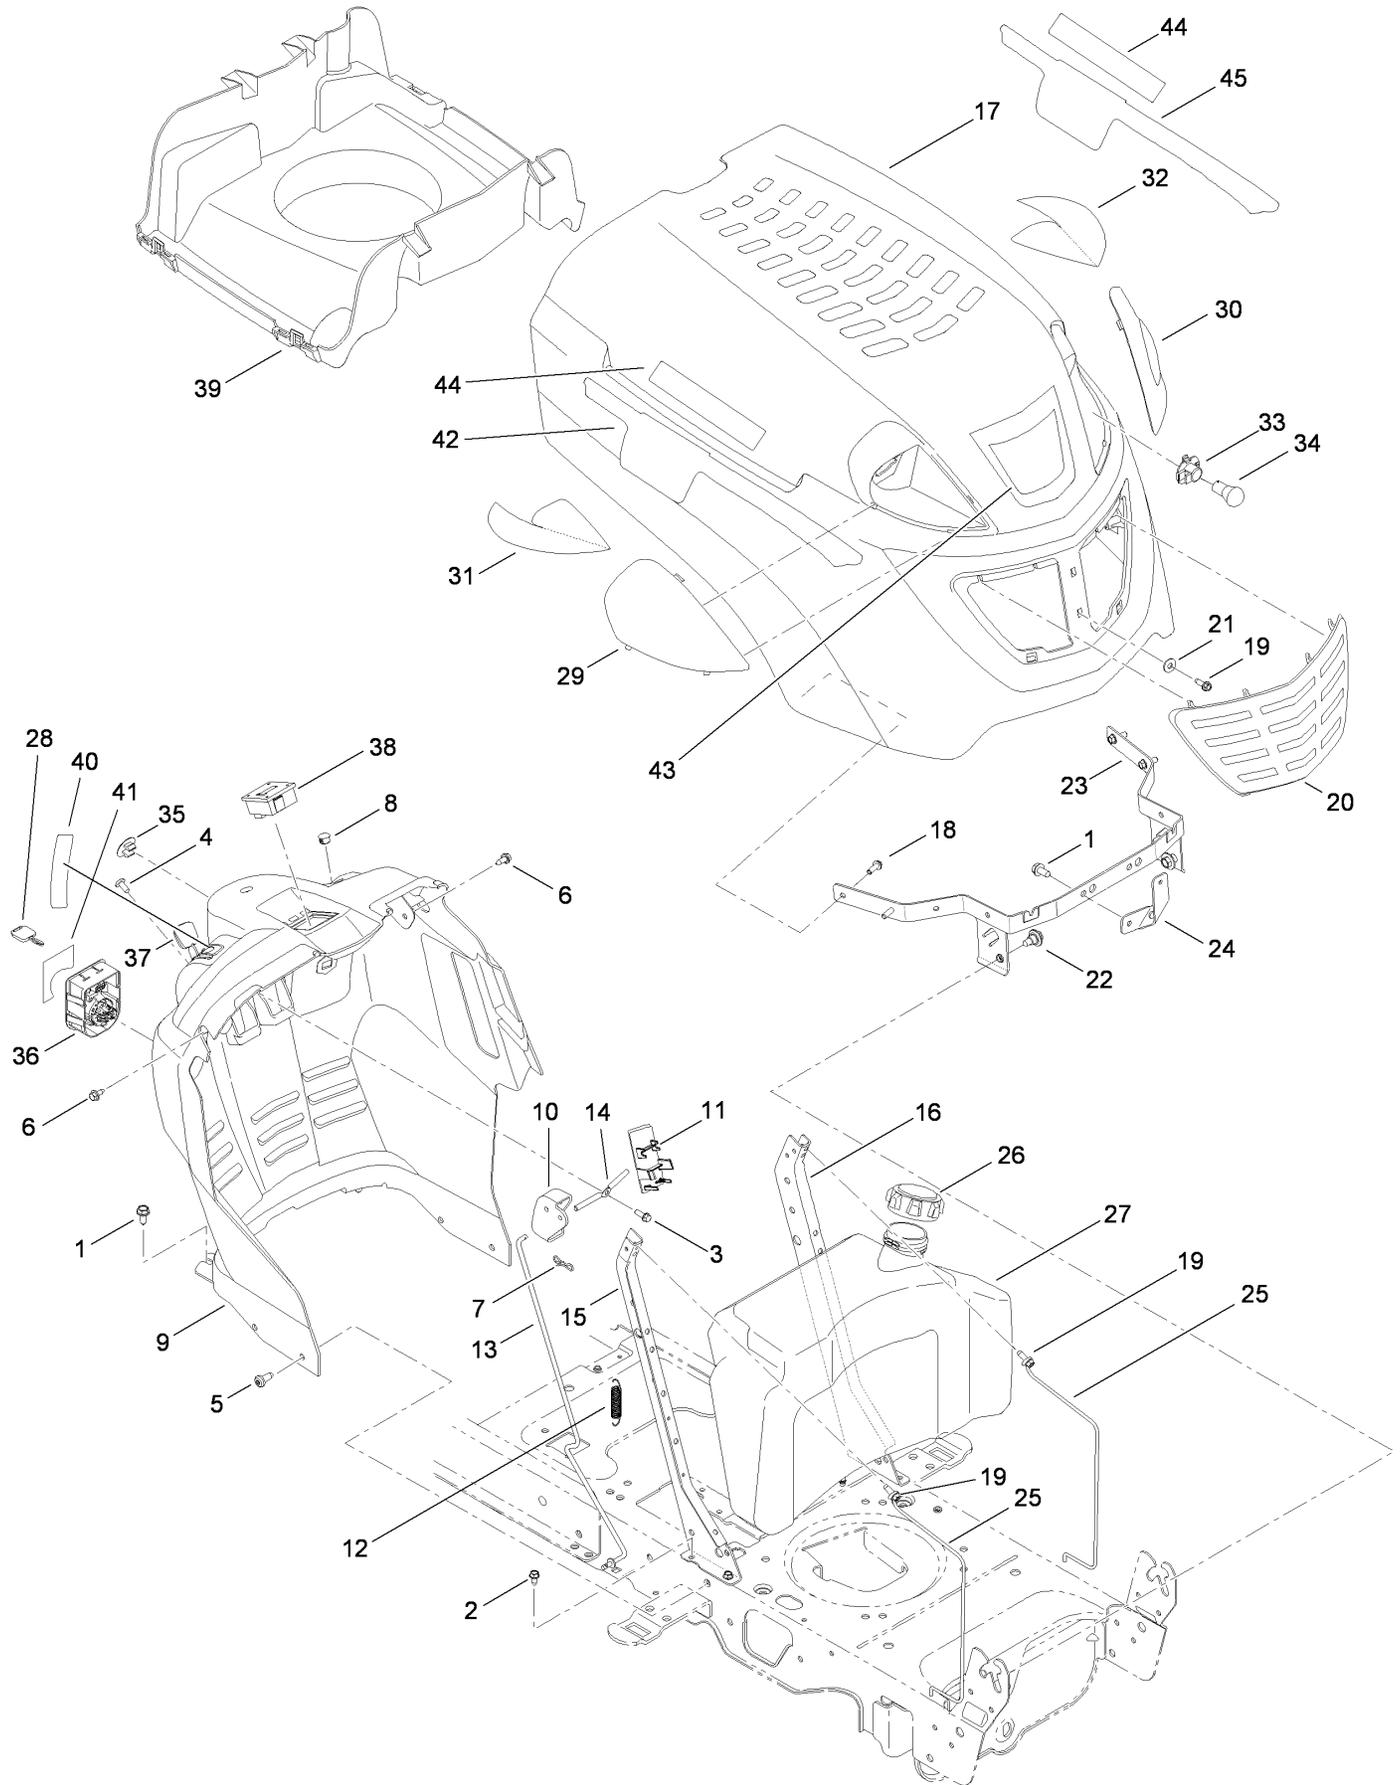

## Fuel Tank, Hood and Dash Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-6070	1	Screw-TAP	24	112-5986	1	Bracket-Support, Hood
2	112-0524	1	Screw-HWHTF	25	112-0678	1	Rod-Support
3	112-0509	1	Screw-TAP	26	112-6264	1	Cap-Fuel
4	112-0550	1	Screw-TAP	27	112-6119	1	Tank-Fuel, 3 Gal
5	112-0563	1	Screw-TAP	28	112-6115	1	Key-Ignition
6	112-0659	1	Screw-HWH	29	112-0447	1	Lens-RH
7	112-0990	1	Pin-Cotter	30	112-0446	1	Lens-LH
8	119-8406	1	Cap-Plug, Hole	31	112-5810	1	Reflector-RH
9	112-6123	1	Dash-Manual, PTO	32	112-5811	1	Reflector-LH
10	119-8407	1	Lever-Dash	33	112-0408	1	Socket-Headlight
11	119-8408	1	Cover-Cruise	34	112-0402	1	Lamp-12V, Miniature
12	119-8409	1	Spring-Extension	35	112-0535	1	Plug-Choke
13	119-8410	1	Rod-Latch	36	119-8412	1	Module-Switch, Ignition
14	112-0604	1	Rod-Lever, Bent	37	112-6253	1	Cable-Throttle/Choke
15	112-6262	1	Support-Dash, Plate (RH)	38	112-6117	1	Meter-Hour
16	112-6263	1	Support-Dash, Plate (LH)	39	112-6124	1	Plenium-Hood
17	112-0444	1	Hood	40	112-6283	1	Decal-Throttle
18	119-8411	1	Screw	41	119-8479	1	Decal-Switch, Ignition
19	112-0587	1	Screw-TAP	42	112-5953	1	Decal-Hood, Right Side
20	112-0381	1	Grill	43	112-3716	1	Decal-Hood
21	112-5989	1	Washer-Flat	44	112-6287	1	Decal
22	112-6128	1	Bolt-Shoulder, TAP	45	112-5952	1	Decal-Hood, Left Side
23	112-5985	1	Bracket-Pivot				

# Transmission, Belt and Drive Assembly

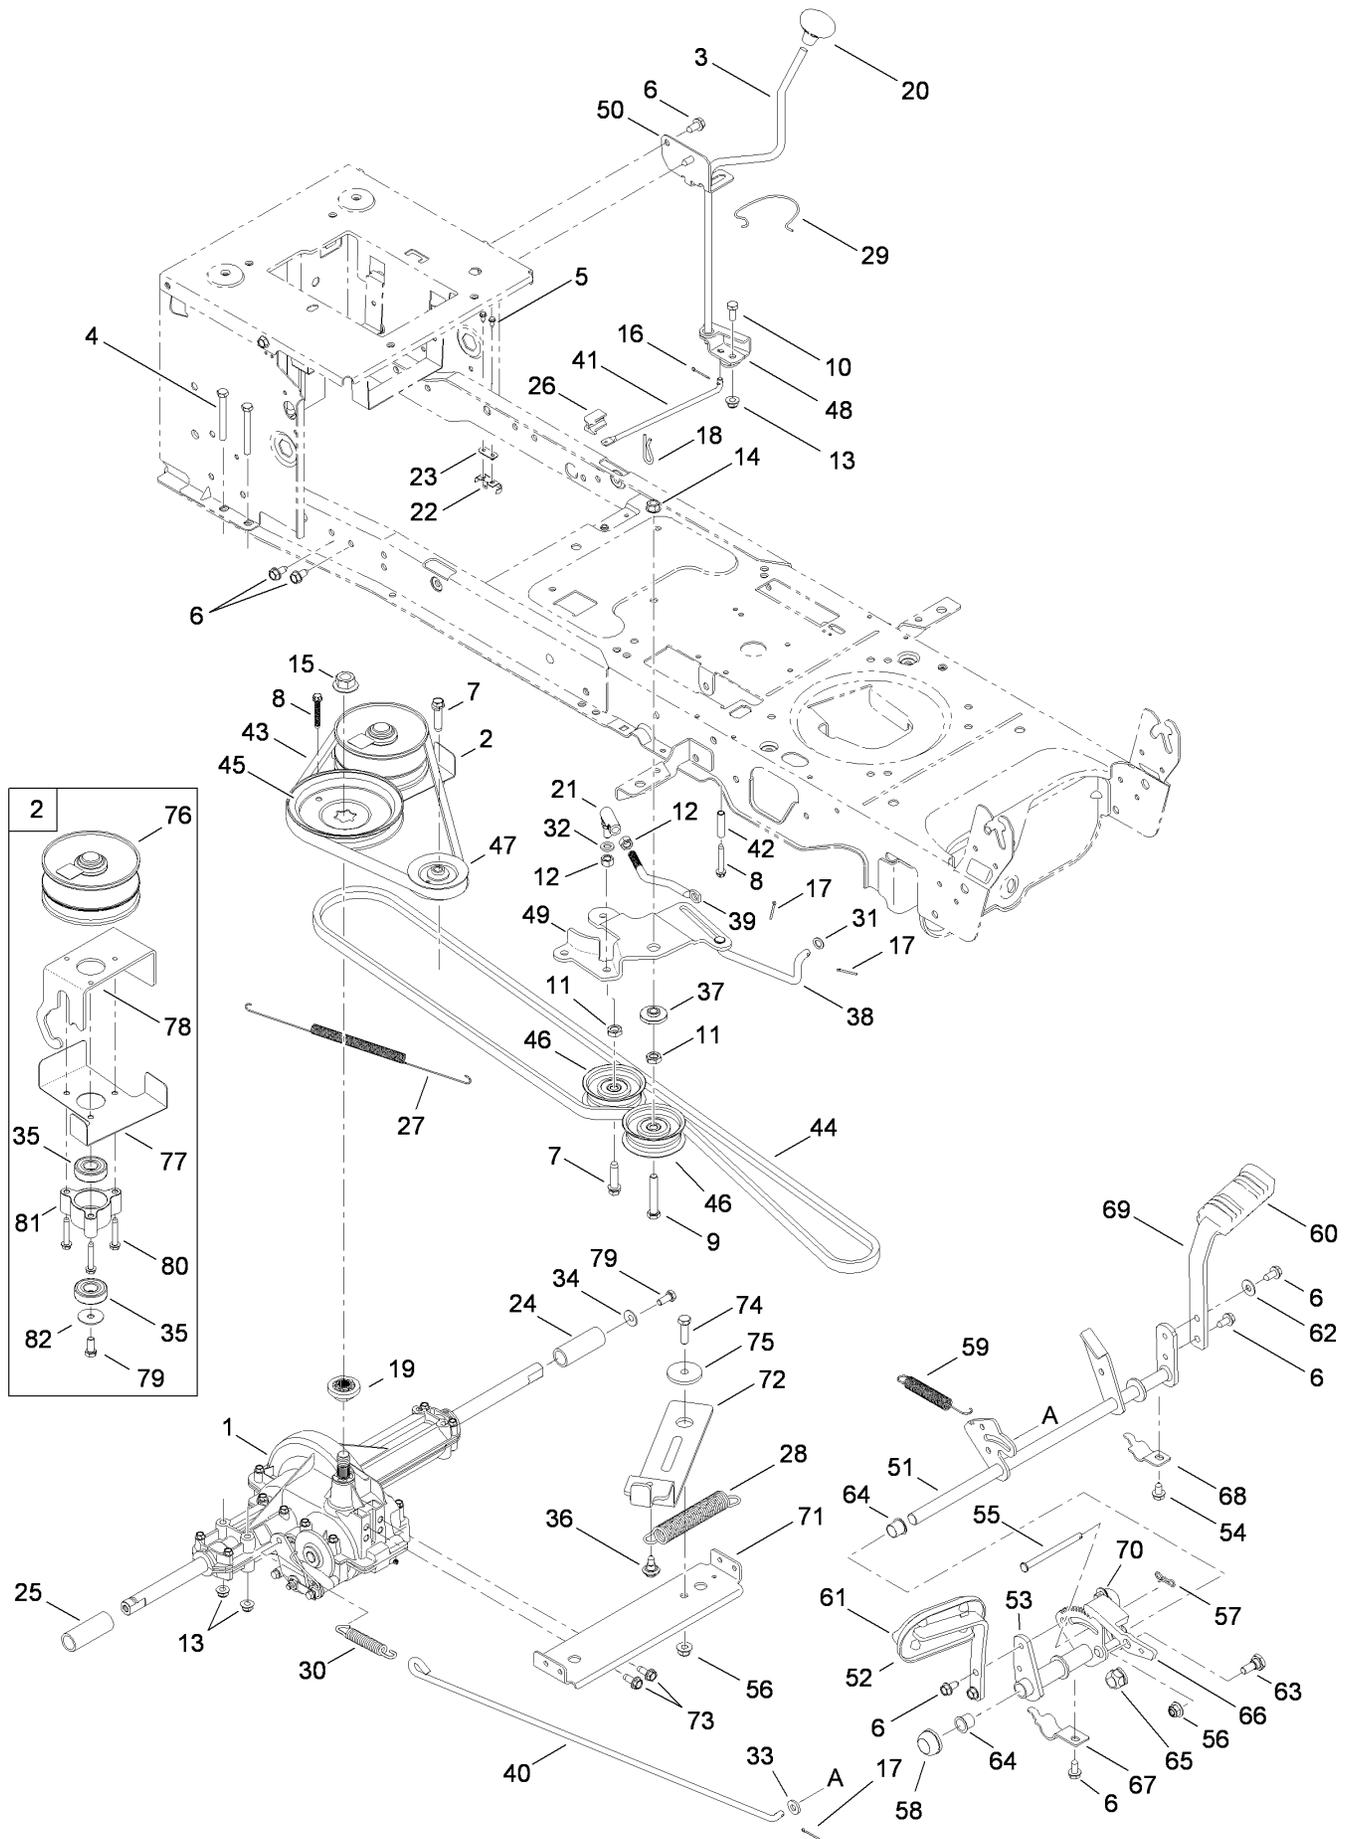

## Transmission, Belt and Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-6256	1	Drive ASM	44	112-0301	1	Belt-Drive, Variable Speed
2		1	Pulley And Bracket ASM ●	45	112-0379	1	Pulley-V (W/Hub)
3	119-8414	1	Shift Lever ASM	46	112-0313	1	Pulley-Idler, Flat
4	112-0714	1	Screw-Hex	47	112-6149	1	Pulley-Idler, Y Type
5	112-0626	1	Screw-HWHTF	48	119-8426	1	Bracket-Adjustment, Shift
6	112-6070	1	Screw-TAP	49	119-8427	1	Bracket-Idler, Center Double
7	112-0469	1	Screw-TAP	50	119-8428	1	Bracket-Shift
8	112-5828	1	Screw-HH	51	119-8429	1	Brake Control ASM
9	112-6009	1	Screw-HH	52	112-0680	1	Pedal ASM
10	119-8415	1	Screw	53	119-8430	1	Pedal Bracket ASM
11	112-0493	1	Nut-Jam	54	112-0556	1	Screw-HWH
12	112-0343	1	Nut-Hex	55	119-8431	1	Pin-Clevis
13	112-0650	1	Nut-Lock, Flange	56	112-0668	1	Nut-Lock, Flange
14	112-0385	1	Nut-Lock, Flange	57	112-0990	1	Pin-Cotter
15	112-0451	1	Nut-Flange	58	119-8432	1	Cap-Push
16	112-0459	1	Pin-Cotter	59	119-8433	1	Spring-Extension
17	112-0568	1	Pin-Cotter	60	119-8434	1	Pad-Pedal, Brake
18	112-0639	1	Pin-Hair	61	112-0543	1	Pad-Pedal
19	112-6235	1	Hub-Pulley, Spline	62	112-0435	1	Washer-Bell
20	112-0514	1	Knob-Shift	63	112-0442	1	Bolt-Shoulder
21	112-0306	1	Ball Joint ASM	64	119-8435	1	Bearing-Flange
22	112-0602	1	Switch-Spring, Short	65	112-0387	1	Bearing-Flange, Hex (Split)
23	112-0625	1	Plate-Insulator	66	119-8436	1	Latch-Cruise
24	112-0670	1	Sleeve	67	119-8437	1	Bracket-Strap, Pedal Support
25	112-0683	1	Sleeve	68	119-8438	1	Bracket-Strap, Pedal Support
26	119-8416	1	Bearing-Plate, Shift	69	119-8439	1	Bracket-Pedal, Brake
27	119-8417	1	Spring-Extension	70	119-8440	1	Bracket-Plate, Reinforcement
28	119-8418	1	Spring-Extension	71	119-8441	1	Bracket-Transmission
29	112-0357	1	Clip-Spring, Shifter	72	119-8442	1	Bracket-Idler
30	112-0350	1	Spring-Extension	73	112-0395	1	Screw-HWH
31	112-0407	1	Washer-Flat	74	112-0557	1	Screw-HH
32	112-0415	1	Washer-Lock	75	112-0584	1	Spacer-Shoulder
33	112-0579	1	Washer-Flat	76	119-8470	1	Pulley ASM
34	112-0435	1	Washer-Bell	77	119-8443	1	Belt Keeper ASM
35	112-0423	1	Bearing-Ball	78	119-8444	1	Bracket ASM
36	112-6128	1	Bolt-Shoulder, TAP	79	112-0551	1	Screw-HH
37	119-8419	1	Spacer-Shoulder	80	112-0843	1	Screw-HWH
38	119-8420	1	Rod-Bypass, Foot Pedal	81	112-5996	1	Cup-Bearing
39	119-8421	1	Rod-Adjustment, Idler	82	112-0500	1	Washer-Flat
40	119-8422	1	Rod-Brake				
41	119-8423	1	Rod-Shift				
42	112-5831	1	Spacer				
43	119-8424	1	Belt-V, Poly				


● Not serviced separately



## 42 Inch Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-8445	1	Spindle Pulley ASM	33	119-8455	1	Washer-Bellville
2	112-0413	1	LH Hanger Bracket ASM	34	112-0500	1	Washer-Flat
3	119-8446	1	Deck Brake ASM	35	112-0577	1	Plug
4	119-8447	1	Deck Brake ASM	36	112-0584	1	Spacer-Shoulder
5	119-8448	1	Deck ASM	37	112-3747	1	Spacer-Shoulder
5:1	112-6284	1	Decal-Deck	38	112-0325	1	Bolt-Shoulder
5:2	119-8476	1	Decal-Belt Routing	39	119-8456	1	Blade-2 In 1
5:3	112-6285	1	Decal-Chute	40	112-5879	1	Rod-Keeper, Belt
6	112-6070	1	Screw-TAP	41	119-8457	1	Rod-Lift, Deck
7	112-0492	1	Screw-HH	42	119-8458	1	Rod-Brake
8	112-0373	1	Screw-HH	43	119-8459	1	Chute ASM
9	112-0524	1	Screw-HWHTF	44	112-0436	1	Pin-Handle, Deck Release
10	112-0843	1	Screw-HWH	45	119-8460	1	Spacer
11	112-0603	1	Screw-HH	46	112-0644	1	Spacer
12	112-0421	1	Screw-HH	47	112-0340	1	Belt - V
13	112-0452	1	Bolt-CARR	48	112-0314	1	Pulley-Idler
14	112-0440	1	Nut-Push	49	119-8461	1	Pin-Hinge
15	112-0650	1	Nut-Lock, Flange	50	119-8462	1	Bracket-Cable, Deck Engage
16	112-0668	1	Nut-Lock, Flange	51	119-8463	1	Spring-Torsion
17	112-0330	1	Nut-Lock, Flange	52	119-8464	1	Bracket-Pivot, Idler
18	119-8449	1	Nut	53	119-8465	1	Bracket-Cable, Deck Engage
19	112-0351	1	Nut-Hex	54	119-8466	1	Bracket-Guard, Belt
20	119-8450	1	Pin-Lynch	55	119-8467	1	Cover-Belt
21	112-0412	1	Pin-Cotter	56	119-8468	1	Stop-LH
22	112-0327	1	Gear-Adjustment, Deck	57	119-8469	1	Bracket-Support, Idler
23	119-8473	1	Spring-Extension	58	112-0330	1	Nut-Lock, Flange
24	119-8451	1	Spring-Compression	59	112-0813	1	Washer-Thrust
25	119-8452	1	Spring-Torsion	60	112-6278	1	Shaft-Spindle
26	112-0677	1	Wheel-Deck, Front	61	112-0377	1	Bearing-Ball
27	112-0366	1	Washer-Lock	62	112-6252	1	Spacer
28	119-8453	1	Washer-Flat	63	112-0613	1	Pulley-Deck
29	119-8454	1	Washer-Flat	64	119-9051	1	Bracket-Pivot, Chute
30	112-0339	1	Washer-Flat	65	119-8474	1	Decal-Deck Wash System
31	112-0643	1	Washer-Lock				
32	112-0541	1	Washer-Flat				

# Transmission Assembly No. 112-6256

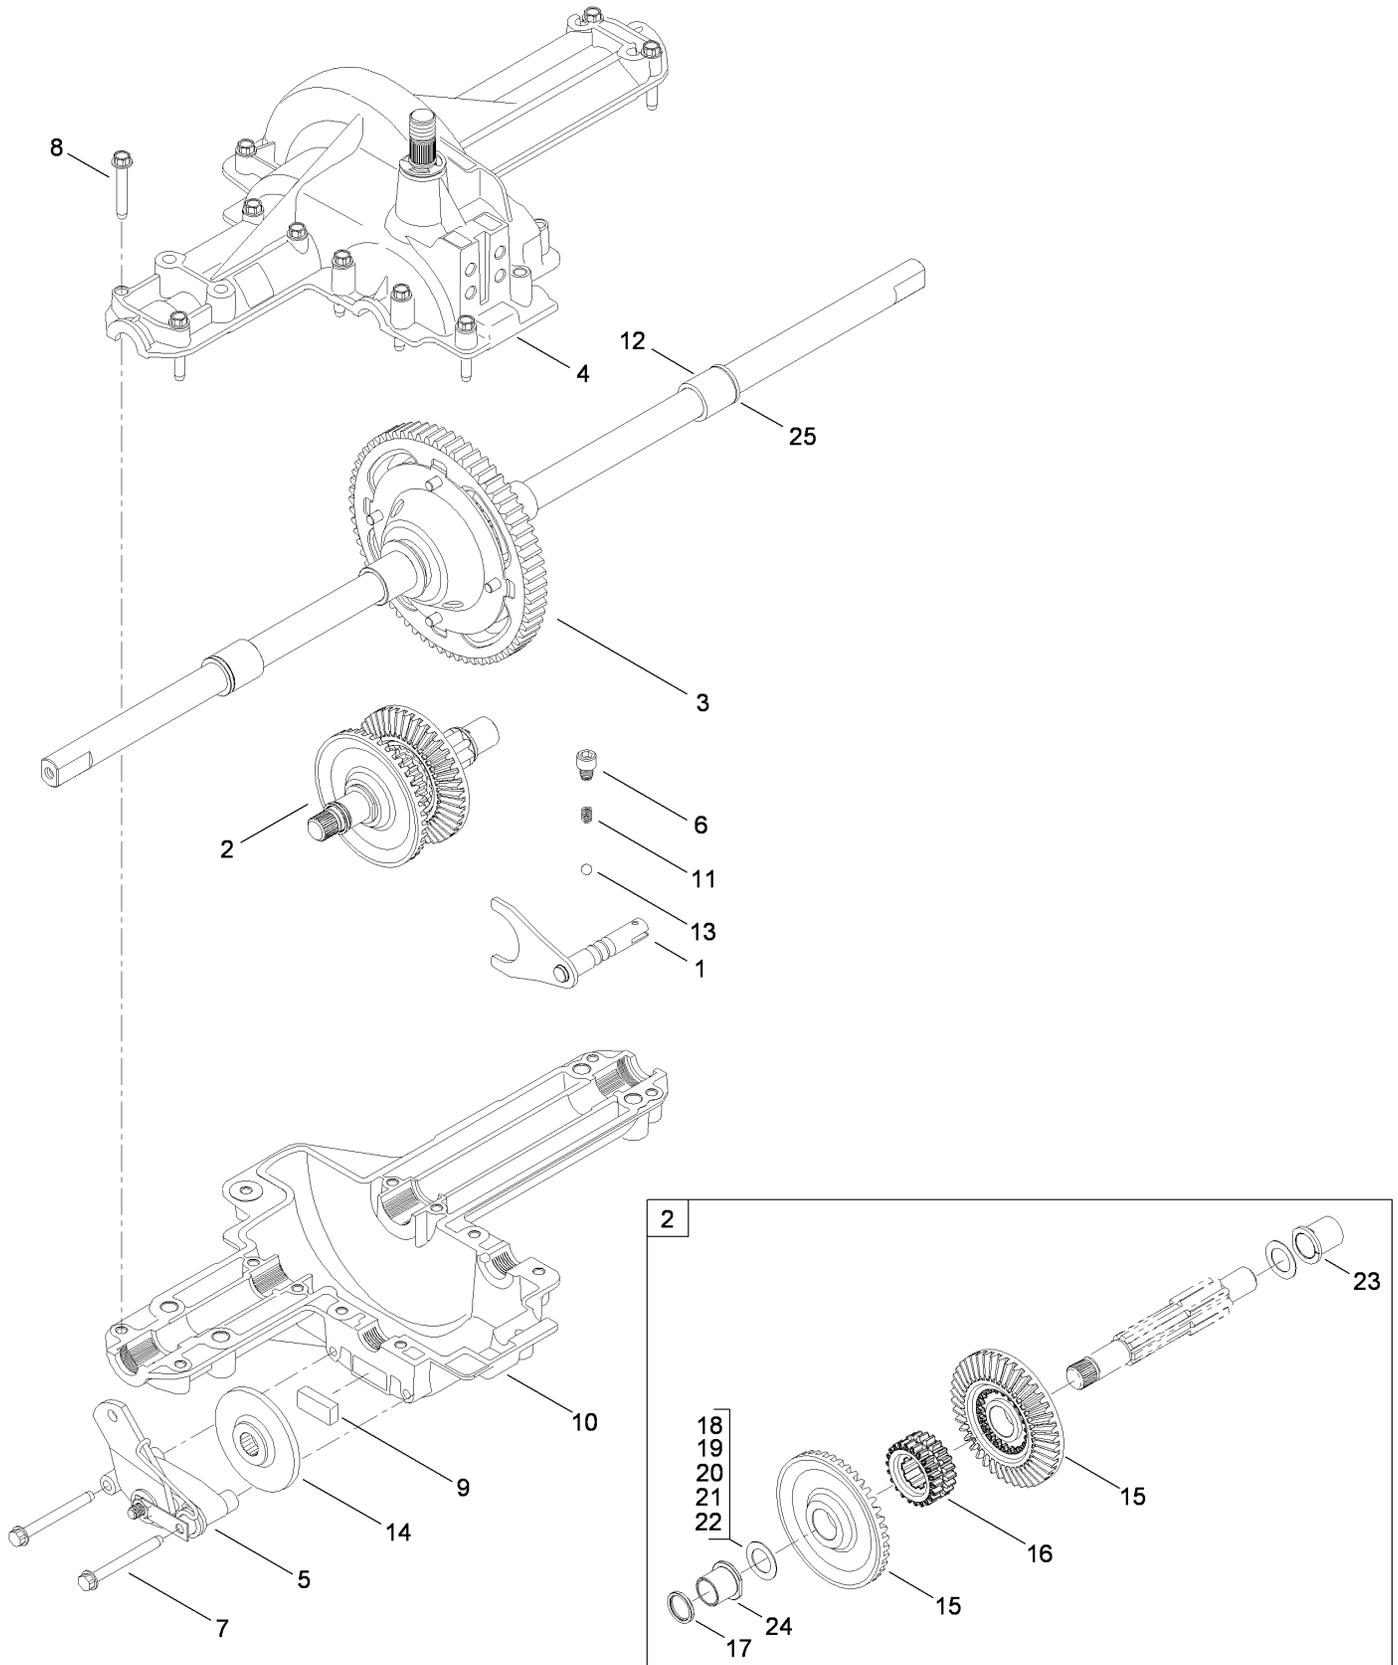

## Transmission Assembly No. 112-6256 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-0806	1	Shift Fork ASM	14	112-0817	1	Disc-Brake
2	112-6084	1	Drive Shaft ASM	15	112-6089	1	Gear-Bevel, 42T (Spline)
3	112-6085	1	Differential ASM	16	112-6090	1	Collar-Cluster
4	112-6086	1	Upper Housing ASM	17	112-6091	1	Seal
5	112-0832	1	Brake ASM	18	112-0748	1	Washer-Flat
6	112-6087	1	Screw-TAP	19	112-0750	1	Washer-Flat
7	112-0698	1	Screw-HWH	20	112-0745	1	Washer-Flat
8	112-0839	1	Screw-TAP	21	112-0773	1	Washer-Thrust
9	112-0741	1	Puck-Brake	22	112-0755	1	Washer-Thrust
10	112-6088	1	Housing-Lower	23	112-0794	1	Bearing-Flange
11	112-0801	1	Spring-Detent	24	112-0795	1	Bearing-Flange
12	112-6092	1	Bearing-Sleeve	25	112-0800	1	Seal
13	112-0799	1	Ball-Detent	99	110-9891	1	Grease ●

● Not illustrated

# Attachments and Accessories

## For 13AX90RS848 LX423 Lawn Tractor

<b>Product Name</b>	<b>Model/Part</b>
42 inch Two-Stage Snowthrower .....	190-032-101
46 inch Front Blade .....	190-833-000
Twin Bagger for 42-inch and 46-inch Lawn Tractors.....	19A30003000
10 cu. ft. Poly Dump Cart .....	79991
17 cu. ft. Poly Dump Cart .....	79992
125 lb. Tow Spreader .....	79993
42 inch Sweeper .....	79994
48 inch Dethatcher.....	79995
40 inch Spike Aerator .....	79996
Stake Side Kit .....	79997

**Notes:**

**Notes:**

**Notes:**



**Count on it.**