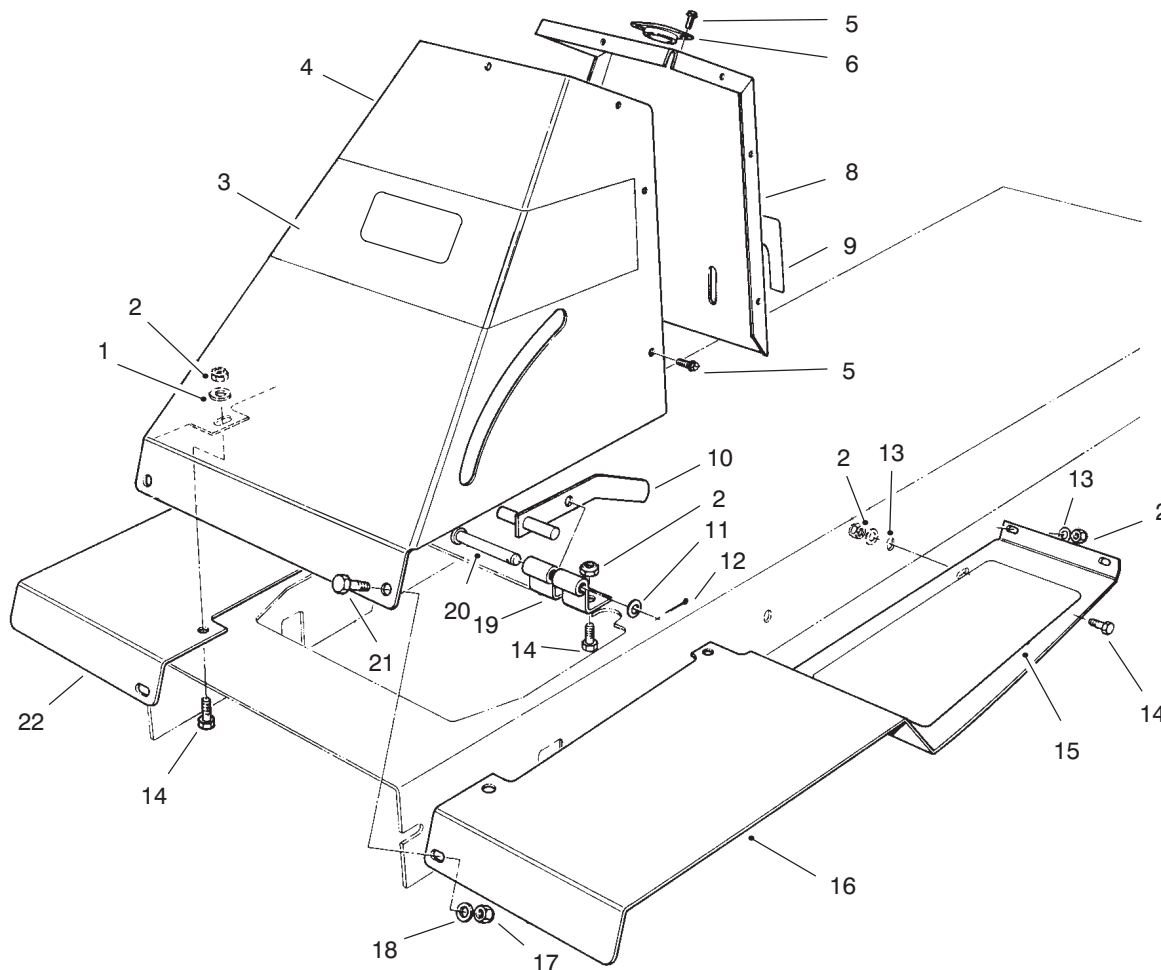


MODEL NO. 70183-6900001-
7900001 & UP**PARTS
CATALOG****WHEEL HORSE®
13-32 RIDING MOWER**


C-1933A

FRONT TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3256-35	Washer - Flat	4
2	3296-29	Nut - Lock	14
3	92-7987	Decal - Recycler	1
4	56-7130	Tower - Front	1
5	32104-76	Screw - Self Tap Acorn Hd.	9
6	56-7170	Guide - Shaft, Steering	1
8	56-7140	Tower - Rear	1
9	93-7008	Decal - Brake, Parking	1
10	47-1290	Brake - Parking	1
11	3256-24	Washer - Flat	1
12	3272-6	Pin - Cotter	1
13	3256-23	Washer - Flat	8
14	322-5	Screw - Cap Hex. Hd.	10

Ref. No.	Part No.	Description	No. Used
15	92-7975	Tread - Foot L.H.	1
*	92-7974	Tread - Foot R.H.	1
16	47-0940	Footrest - L.H.	1
17	3296-42	Nut - Lock	2
18	3256-22	Washer - Flat	2
19	47-2060	Bracket - Brake, Parking	1
20	283-52	Pin - Clevis	1
21	321-4	Screw - Cap Hex. Hd.	2
22	47-0930	Footrest - R.H.	1
*	12-8829	Loose Parts	1
*	12-8819	Loose Parts (Includes Steering Wheel)	1

*Not Illustrated

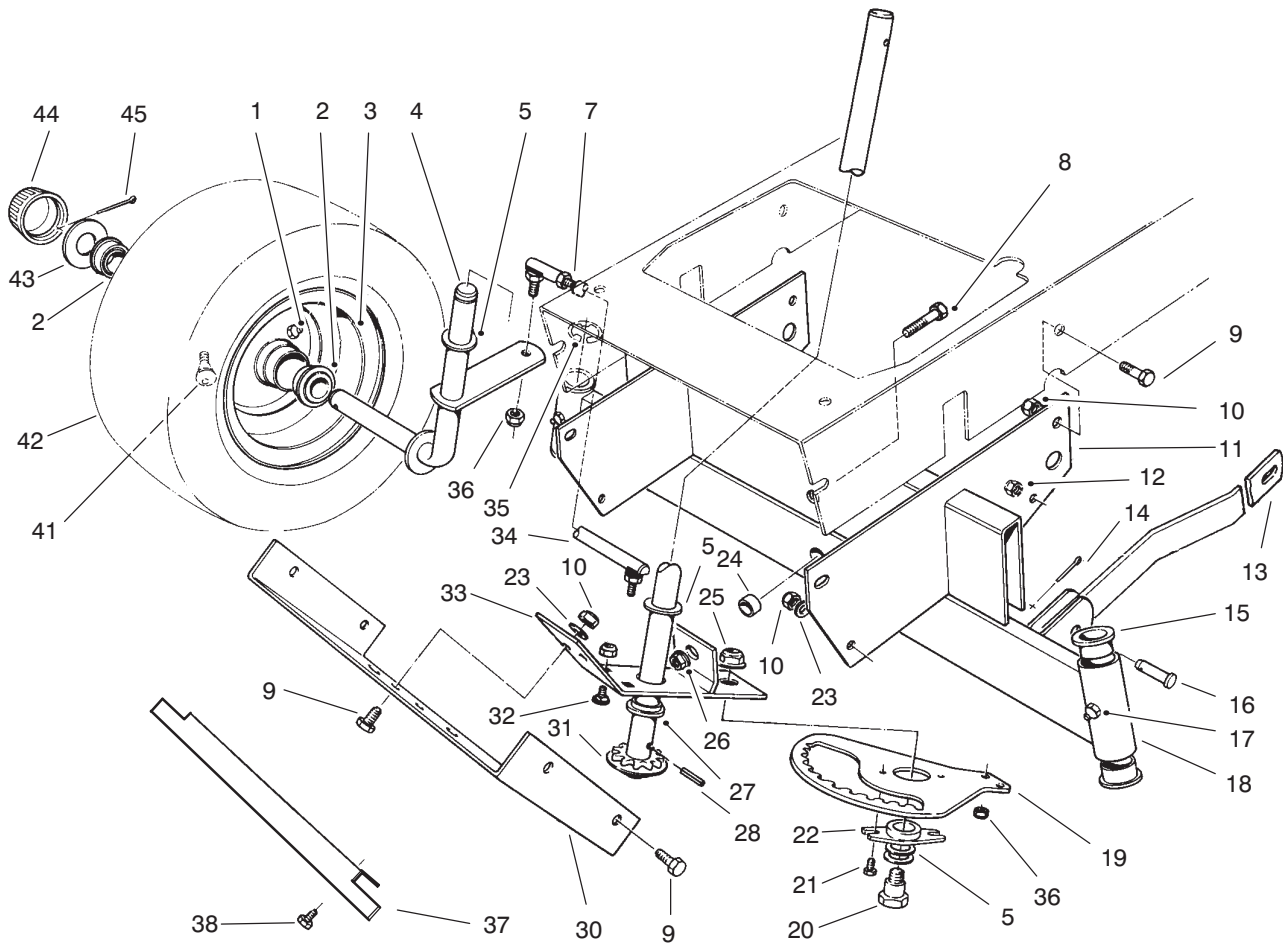

C-0438C


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting - Grease	2
2	110513	Bearing	4
3	217-80	Rim	2
4	47-0600	Spindle - R.H.	1
*	47-0590	Spindle - L.H.	1
5	3-6498	Washer - Thrust	5
7	3220-2	Nut - Hex. Jam	1
8	325-6	Screw - Cap Hex. Hd.	1
9	322-5	Screw - Cap Hex. Hd.	8
10	3296-29	Nut - Lock	8
11	47-0760	Support - Axle, Front	1
12	3296-8	Nut - Lock	1
13	47-0010	Arm - Suspension, Front	2
14	3272-6	Pin - Cotter	2
15	27-9080	Bearing - Flange	4
16	283-2	Pin - Clevis	2
17	302-5	Fitting - Grease	2
18	80-2430	Axle - Front (Incl. Ref. #15 & 17)	1
19	80-2450	Rack - Steering	1
20	56-7530	Bolt - Shoulder	1
21	32144-4	Screw - Special	2
22	56-7520	Bushing - Sector	1
23	3256-23	Washer - Flat	6

Ref. No.	Part No.	Description	No. Used
24	28-0380	Spacer - Axle, Front	1
25	32128-21	Nut - Lock, Flange Hd.	1
26	32128-23	Nut - Lock, Flange Hd.	1
27	47-0700	Bearing - Flange	1
28	32121-9	Pin - Roll	1
30	56-7180	Cover - Front	1
31	56-7500	Shaft - Steering	1
32	3230-18	Bolt - Carriage	2
33	56-7470	Bracket - Rack, Steering (Incl. Ref. #27)	1
34	47-0610	Tie Rod - Adjustable (Incl. Ref. #7)	1
*	80-2460	Tie Rod - Fixed	1
35	32151-48	Ring - Retaining, External	2
36	3296-4	Nut - Lock	4
37	92-0876	Guard - Front	1
38	32144-14	Screw - Thread Forming	2
41	232-27	Valve Stem w/Cap	2
42	231-116	Tire	2
43	28-2480	Washer	2
44	61-9780	Cap - Hub	2
45	3272-12	Pin - Cotter	2
†	232-44	Tube - Inner	2

*Not Illustrated


†Service Replacement Part

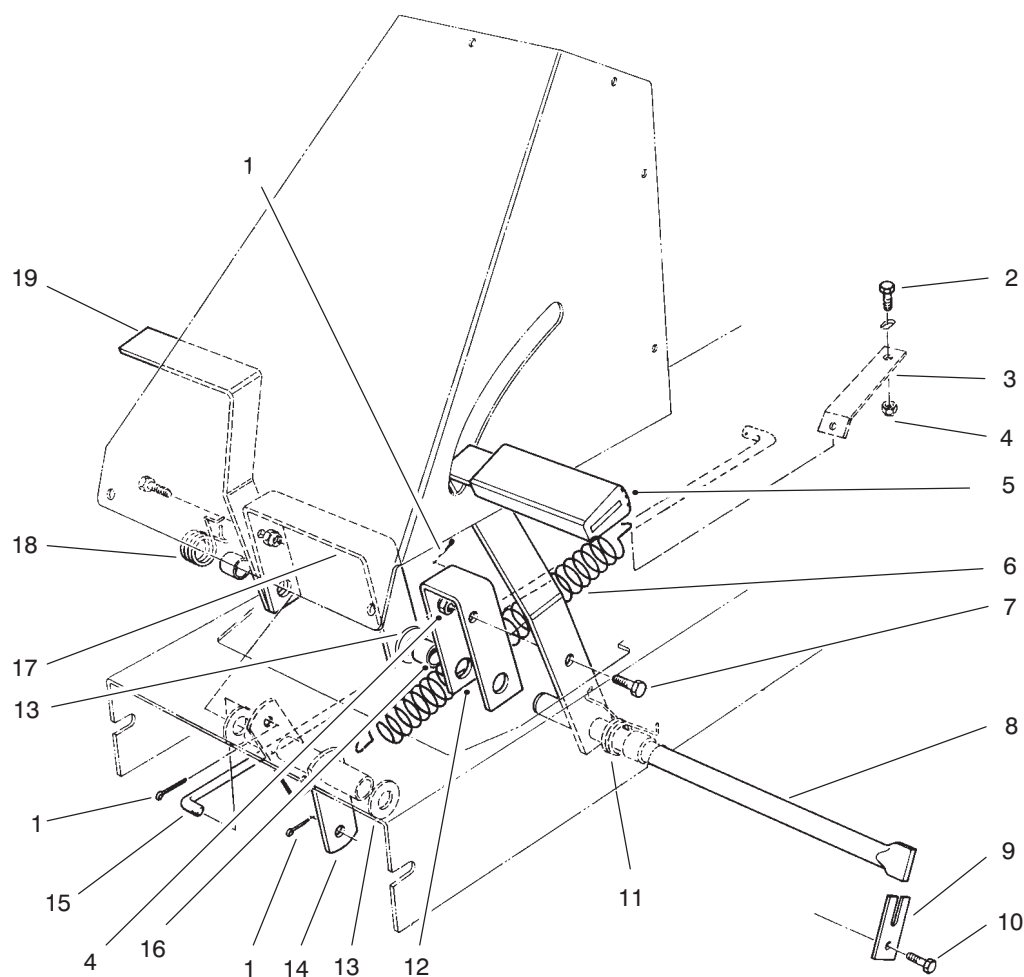

C-0439A

BRAKE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin - Cotter	3	11	56-7070	Spring - Torsion, Clutch	1
2	322-5	Screw - Cap Hex. Hd.	1	12	47-0560	Bracket - Clutch, Pedal	1
3	56-7240	Bracket - Retaining, Spring	1	13	3256-27	Washer - Flat	3
4	3296-29	Nut - Lock	3	14	56-7650	Tube - Pivot	1
5	65-2920	Pad - Pedal, Foot	2	15	56-7570	Rod - Engagement	1
6	62-3930	Spring - Extension	1	16	47-0570	Spacer - Pedal	3
7	322-5	Screw - Cap Hex. Hd.	2	17	47-0550	Bracket - Brake, Pedal	1
8	47-0770	Shaft - Pivot, Pedal	1	18	56-7080	Spring - Torsion, Brake	1
9	47-0780	Retainer - Shaft	1	19	47-0540	Pedal	2
10	321-4	Screw - Cap Hex. Hd.	1				

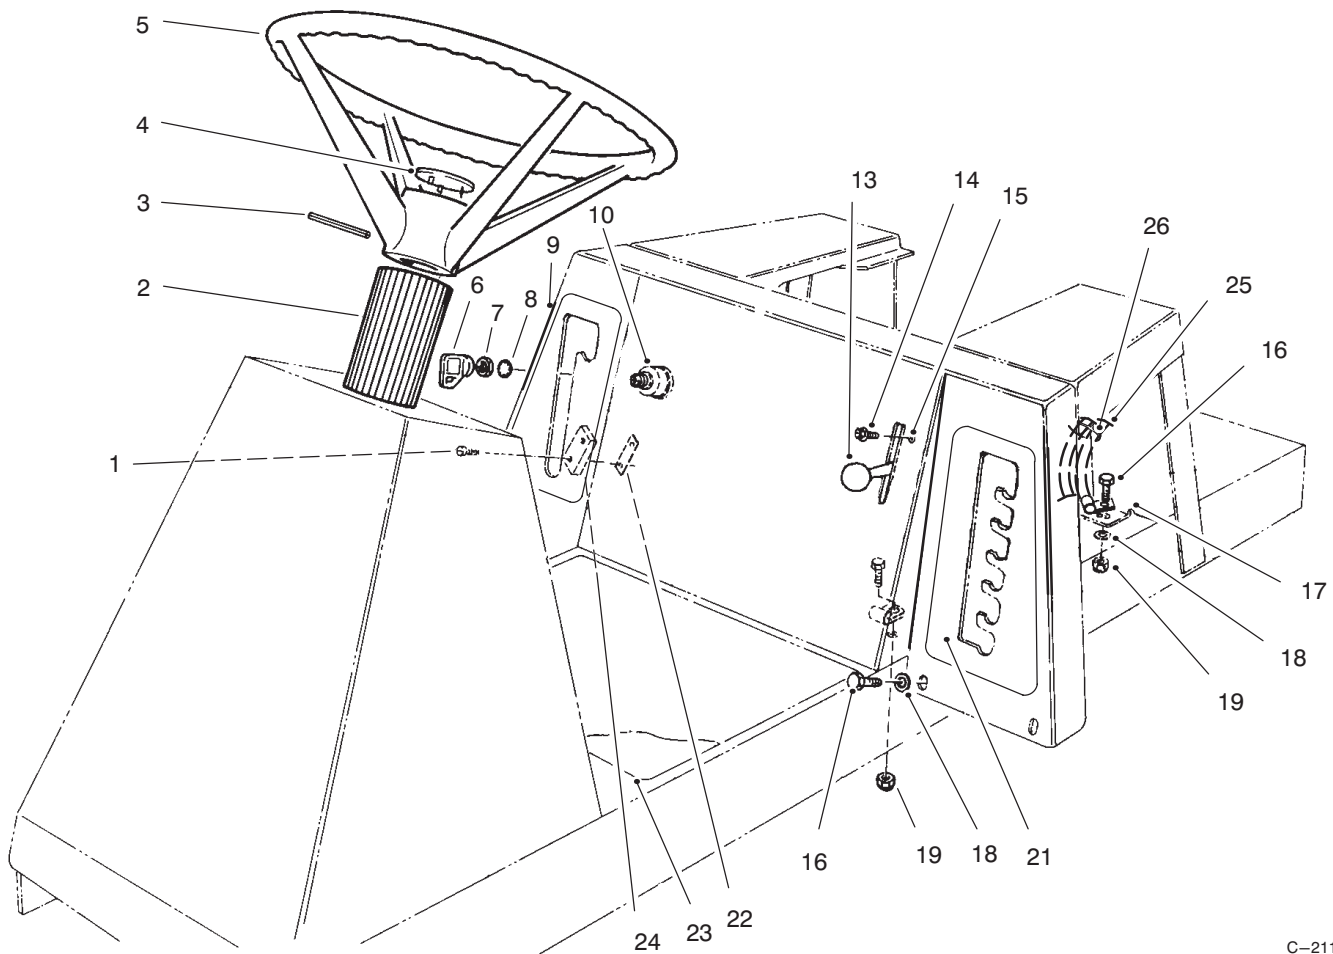


C-2119

STEERING WHEEL, SWITCHES & DECALS

Ref. No.	Part No.	Description	No. Used
1	147665	Screw – Phillips Head	2
2	66-6740	Cover – Shaft, Steering	1
3	32121-78	Pin – Roll	1
4	92-7990	Insert – Wheel, Steering	1
5	49-3242	Assy. – Wheel, Steering (Incl. Ref. #4)	1
6	63-8360	Key	1
7	218-461	Nut – Lock	1
8	3254-5	Washer – Lock, Int. Tooth	1
9	92-7983	Decal – Deck Engage	1
10	88-9830	Switch – Ignition (Incl. Ref. #6-8)	1
13	233-25	Knob	1

Ref. No.	Part No.	Description	No. Used
14	32104-76	Screw – Self-Tapping	2
15	92-0890	Control – Throttle (Incl. Ref. #13)	1
16	322-5	Screw – Cap Hex. Hd.	8
17	8830	Clamp	2
18	3256-23	Washer – Flat	7
19	3296-29	Nut – Lock	4
21	92-7984	Decal – H.O.C.	1
22	3290-354	Nut – Double	1
23	93-7006	Decal – Instructions	1
24	88-9931	Switch – Micro	1
25	54-3090	Wire Assembly	1
26	3290-378	Tie – Cable	1

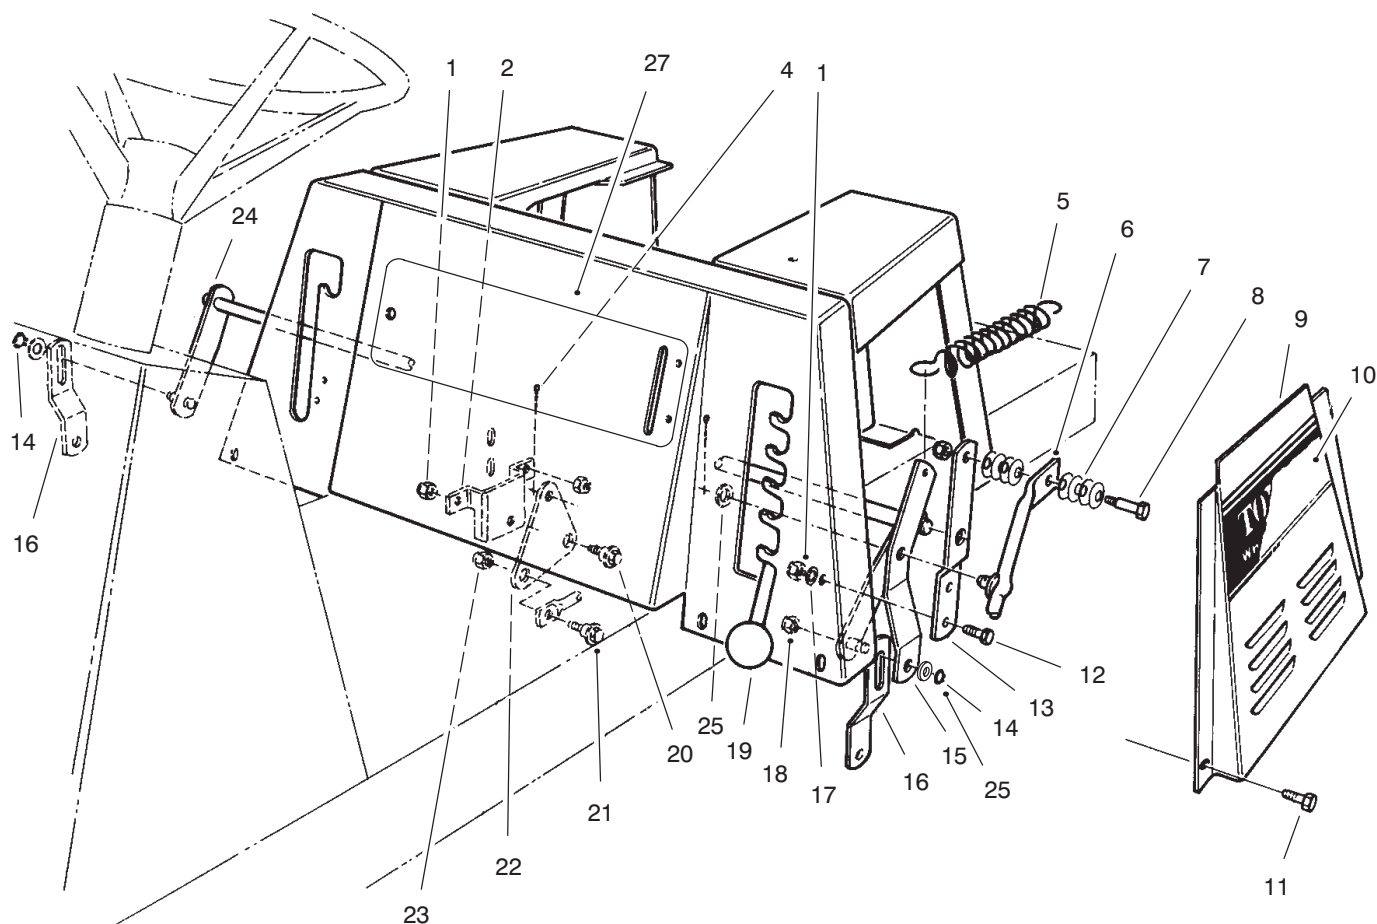


C-1935B

LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	7
2	80-2310	Bracket - Bell Crank Mount	1
4	3272-6	Pin - Cotter	2
5	62-3930	Spring - Extension	1
6	47-1850	Lever - Height-of-Cut	1
7	3290-413	Washer - Belleville	8
8	28-0540	Bolt - Shoulder	1
9	92-0878	Panel L.H. - Base, Seat	1
10	94-3516	Decal - L.H.	1
11	321-4	Screw - Cap Hex. Hd.	4
12	322-5	Screw - Cap Hex. Hd.	2
13	47-1840	Bracket - Height-of-Cut	1
14	32151-61	Ring - Retaining	2

Ref. No.	Part No.	Description	No. Used
15	80-2321	Bracket - H.O.C., Engage	1
16	63-5830	Link - Suspension, Deck	2
17	3256-23	Washer - Flat	4
18	3296-42	Nut - Lock	1
19	233-48	Knob	1
20	19-1470	Bolt - Shoulder	1
21	65-5670	Bolt - Shoulder	1
22	80-2360	Crank - Bell, Deck Engage	1
23	3296-8	Nut - Lock	1
24	56-7400	Arm - Lever, H.O.C.	1
25	3256-26	Washer - Flat	2
27	92-7982	Decal - Control Panel	1

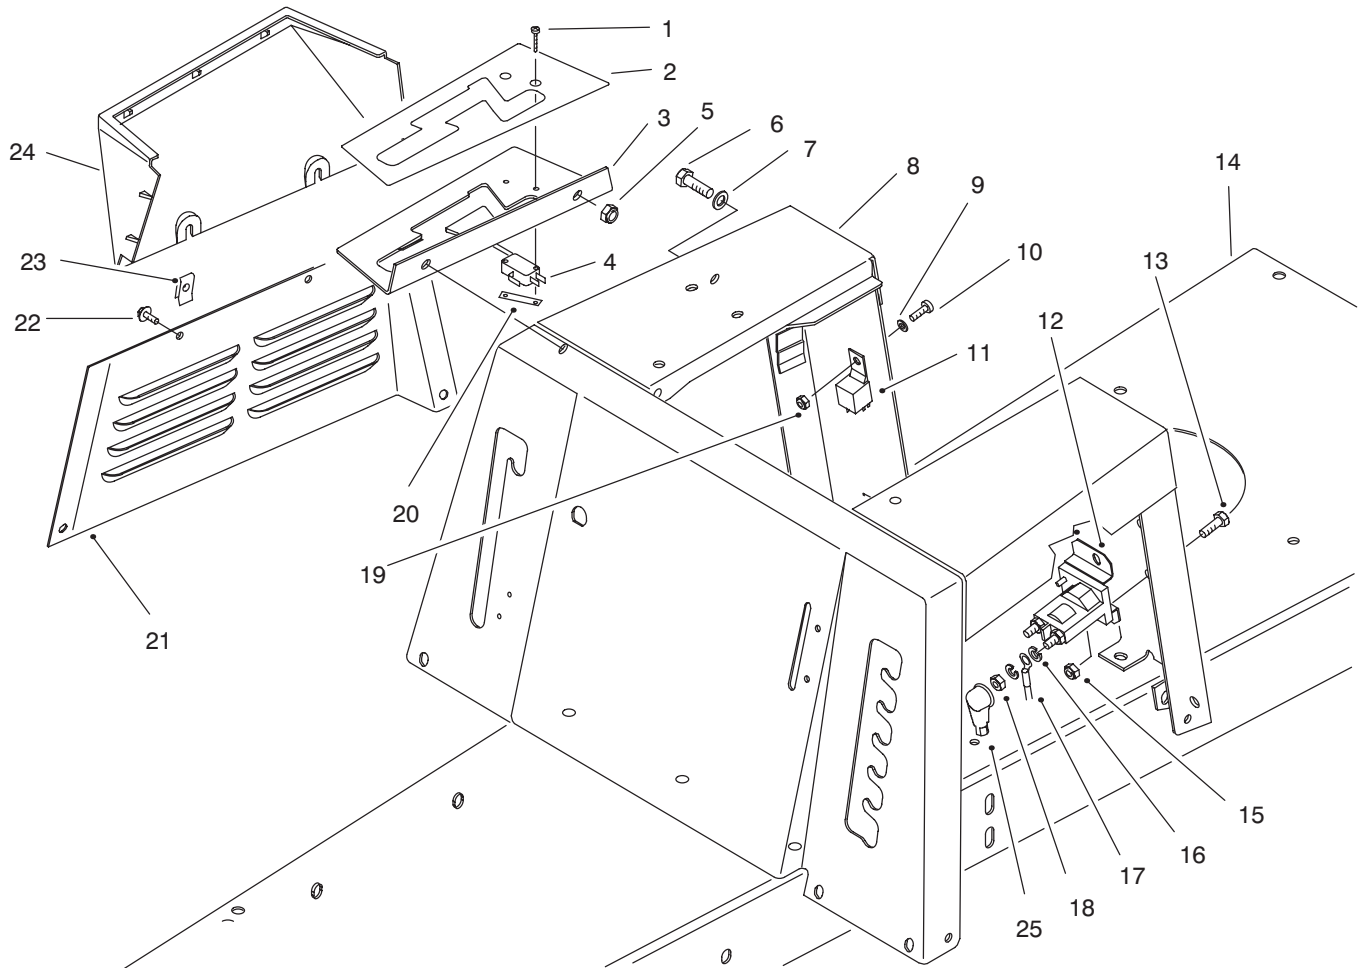


C-1587A

SEAT BODY & SIDE PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	147665	Screw – Phillips Hd.	2
2	93-7007	Decal – Shift Pattern	1
3	92-0895	Gate – Shift	1
4	88-9930	Switch – Micro, Short	1
5	3296-29	Nut – Lock	2
6	322-5	Screw – Cap Hex. Hd.	2
7	3256-23	Washer – Flat	2
8	92-0866	Body W.A. – Seat Support	1
9	3256-14	Washer – Flat	1
10	3290-134	Screw – Machine	1
11	116397	Relay	1
12	47-1910	Solenoid	1
13	321-4	Screw – Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
14	92-0860	Frame	1
15	3296-42	Nut – Lock	2
16	3253-3	Washer – Lock	2
17	56-7670	Cable – Positive	1
18	3218-1	Nut – Jam	3
19	3296-2	Nut – Lock	1
20	3290-354	Nut – Double	1
21	92-0877	Panel – Seat Base, R.H.	1
22	32144-112	Screw – Sems	2
23	3290-191	Nut – Speed	2
24	88-9800	Cover – Gate, Shift	1
25	93-3190	Boot – Terminal	1

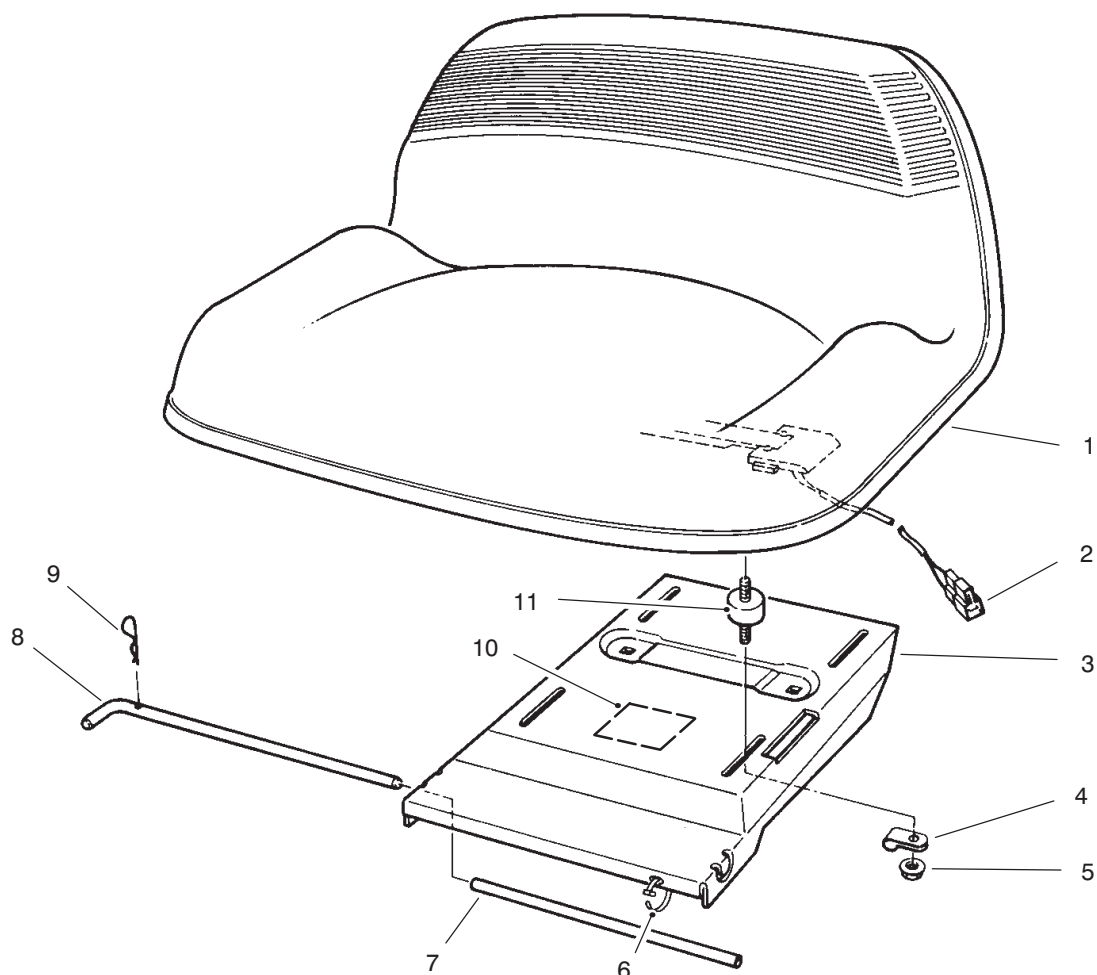


C-0745A

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-3950	Assembly - Seat	1
2	38-1420	Switch - Interlock	1
3	63-5540	Base - Seat	1
4	2412-68	Clamp - Wire	1
5	32128-20	Nut - Flange Hd.	4
6	3290-378	Tie - Cable	1

Ref. No.	Part No.	Description	No. Used
7	63-5670	Tube - Bumper, Seat Rod	1
8	80-2620	Rod - Base, Seat	1
9	3290-307	Pin - Cotter, Hair	1
10	114621	Decal - Euro Noise	1
11	62-5480	Isolator - Seat	4

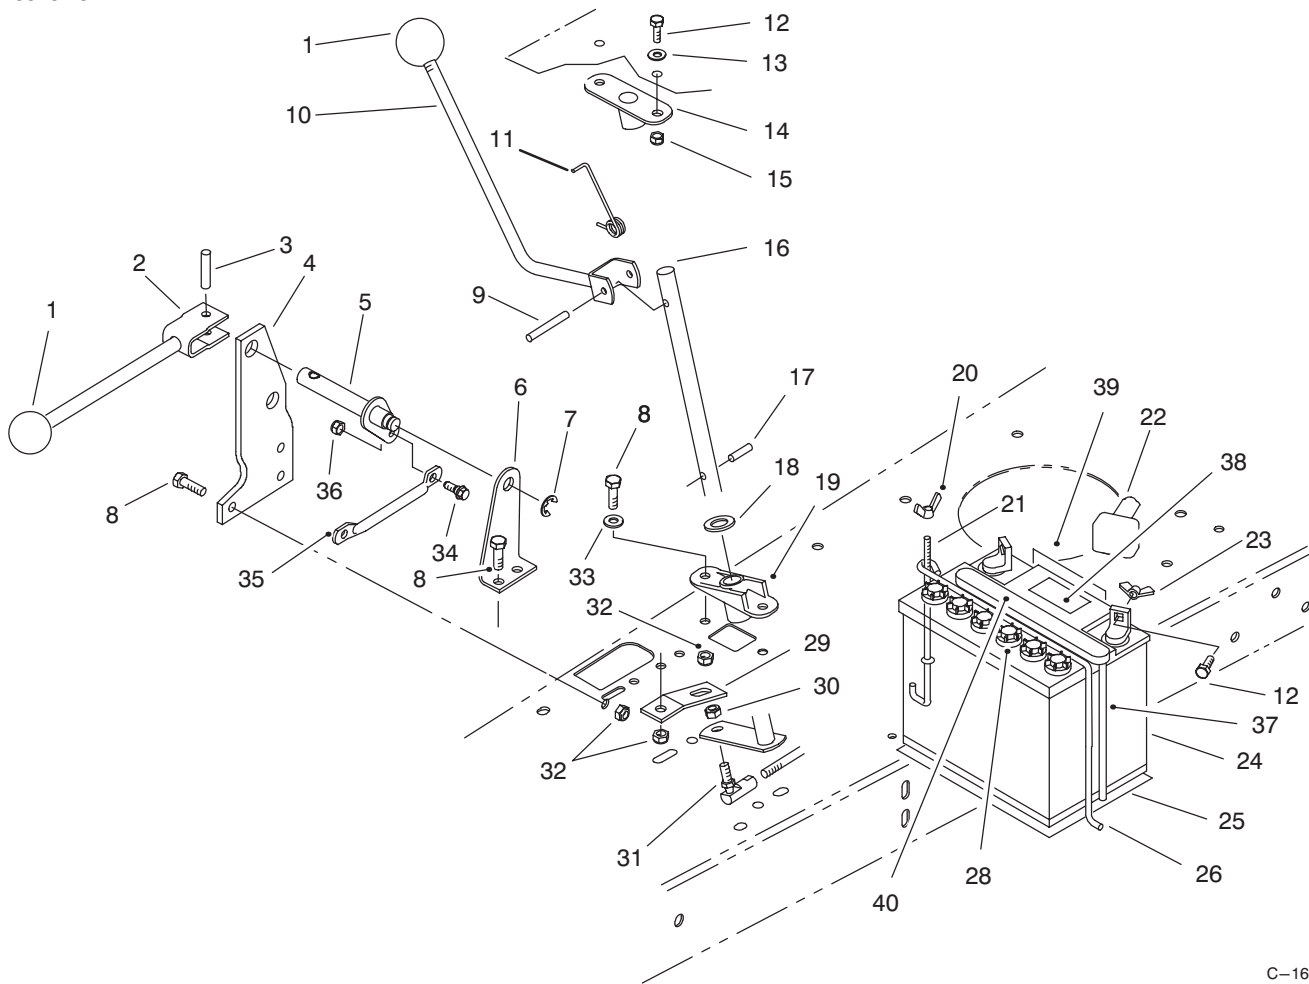


C-1601A

TRANSMISSION LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-48	Knob	2
2	80-2400	Lever W.A. - Engage	1
3	32121-25	Pin - Roll	1
4	80-2350	Pivot - Outer	1
5	80-2370	Shaft W.A. - Pivot	1
6	80-2340	Bracket - Pivot, Inner	1
7	32120-47	Ring - Retaining	1
8	322-5	Screw - Cap Hex. Hd.	4
9	32121-78	Pin - Roll	1
10	92-0884	Lever W.A. - Shaft	1
11	92-0894	Spring - Torsion	1
12	321-4	Screw - Cap Hex. Hd.	2
13	3256-22	Washer - Flat	2
14	92-0888	Support - Shift, Upper	1
15	3296-42	Nut - Lock	2
16	92-0891	Shaft W. A. - Shift	1
17	32121-16	Pin - Roll	1
18	257-11	Washer	1
19	92-0887	Support - Shift, Lower	1
20	32103-12	Nut - Wing	1
21	56-7720	Post - Battery	1

Ref. No.	Part No.	Description	No. Used
22	28-8080	Boot - Terminal	1
23	32103-22	Nut - Wing	2
24	80-2600	Battery - 12 Volt (Incl. Ref. #28 & 37)	1
25	62-4300	Pad - Battery	1
26	56-7710	Hold Down - Battery	1
27	237-143	O-Ring	2
28	218-560	Cap - Battery	6
29	92-0896	Retainer - Spring	1
30	3296-4	Nut - Lock	1
31	2411-32	Ball Joint	1
32	3296-29	Nut - Lock	4
33	3256-23	Washer - Flat	2
34	65-5670	Screw - Shoulder	1
35	80-2330	Link - Bell Crank	1
36	3296-8	Nut - Lock	1
37	56-2540	Tube - Vent, Battery	1
38	93-6668	Decal - Battery Charging Instructions	1
39	93-7276	Decal - Danger	1
40	93-9354	Decal - Battery	1

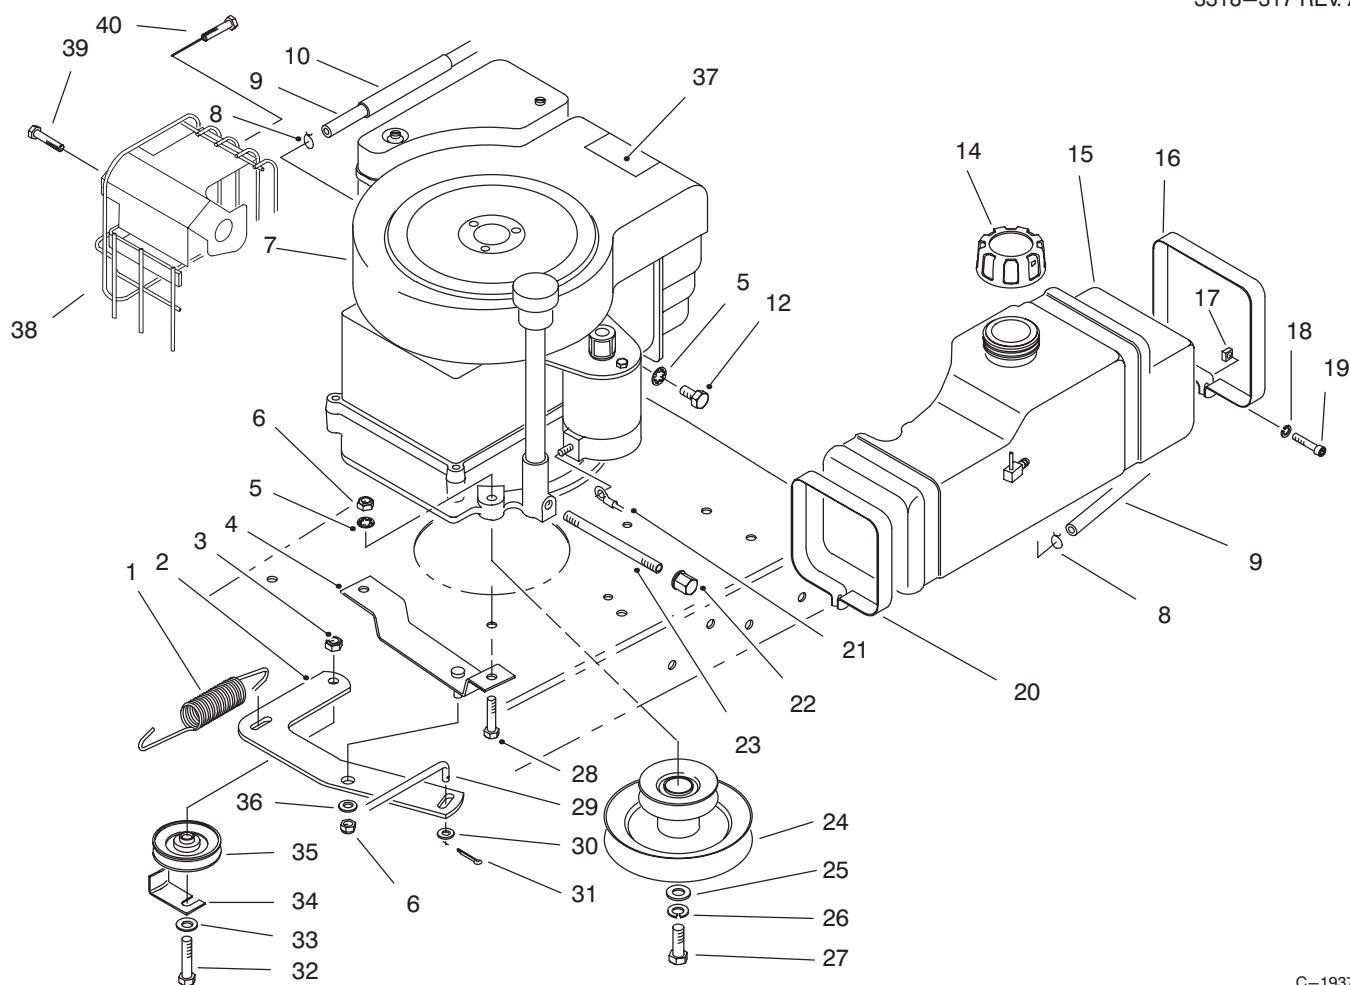


C-1937A

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0879	Spring	1	23	289-19	Nipple - Pipe	1
2	92-0883	Plate - Mounting, Idler	1	24	92-0873	Pulley - Engine	1
3	3296-39	Nut - Lock	1	25	3256-25	Washer - Flat	1
4	92-0881	Bracket W.A. - Traction	1	26	3253-6	Washer - Lock	1
5	3254-2	Washer - Lock, Int. Tooth	3	27	62-3760	Screw - Cap Hex. Hd.	1
6	3296-29	Nut - Lock	2	28	322-7	Screw - Cap Hex. Hd.	4
7		Engine - 11.5 H.P.	1	29	92-0871	Rod - Traction	1
8	2412-98	Clamp - Hose	2	30	3256-22	Washer - Flat	1
9	47-2961	Hose - Fuel Line	1	31	3272-6	Pin - Cotter	1
10	62-5490	Support - Fuel Line	1	32	323-9	Screw - Cap Hex. Hd.	1
12	32144-14	Screw	2	33	3256-24	Washer - Flat	1
14	55-3570	Cap - Fuel	1	34	12-9020	Retainer - Belt	1
15	56-7050	Tank - Fuel	1	35	12-5820	Pulley - Idler	1
16	57-4060	Retainer - Front	1	36	3256-57	Washer - Flat	1
17	32107-11	Nut - Square	2	37	92-8757	Decal - Engine	1
18	3253-3	Washer - Lock	2	38	93-7446	Guard - Muffler	1
19	3274-51	Screw - Hex. Socket Hd.	2			(Incl. Ref. #39 & 40)	
20	57-4070	Retainer - Rear	1	39	94-1278	Screw	3
21	56-7670	Cable - Battery, Positive	1	40	94-1277	Screw	1
22	288-10	Cap - Pipe	1	*	88-4490	Reducer - Throttle	1


*Not Illustrated

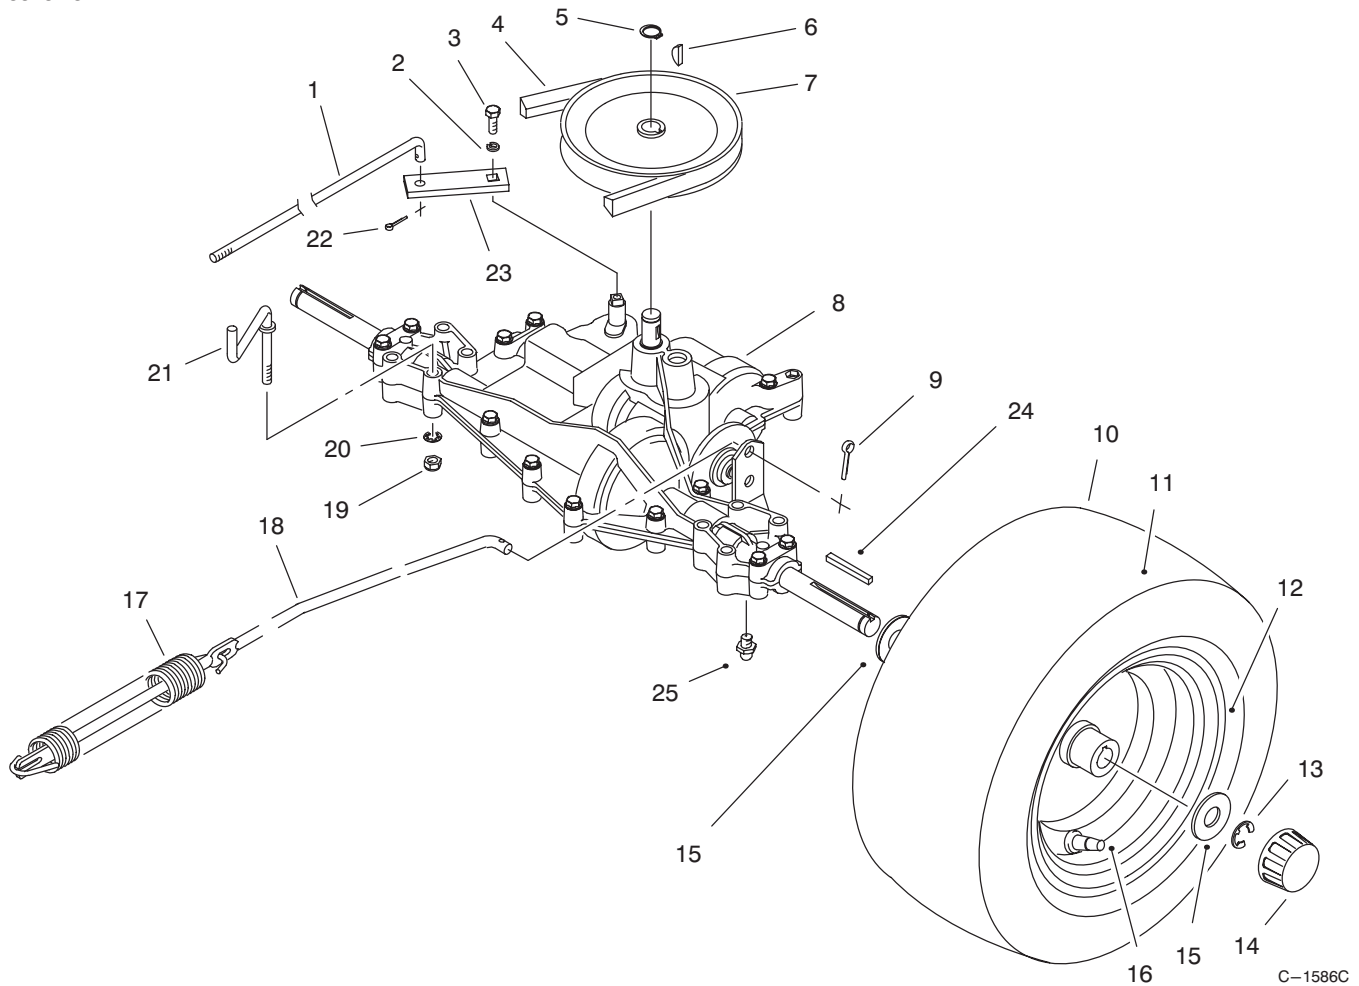

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-0889	Link - Shift	1
2	3253-3	Washer - Lock	1
3	329-4	Screw - Cap Hex. Hd.	1
4	92-0870	V-Belt - Traction	1
5	32120-64	Ring - Retaining	1
6	3257-23	Key	1
7	92-0874	Pulley	1
8	92-0862	Transaxle	1
9	3272-16	Pin - Cotter	1
10	231-117	Tire	2
11	232-39	Tube - Inner	2
12	88-9730	Rim	2
13	32151-48	Ring - Retaining	2

Ref. No.	Part No.	Description	No. Used
14	61-9780	Cap - Hub	2
15	28-2480	Washer	4
16	232-27	Stem - Valve	2
17	57-9940	Spring - Brake	1
18	92-0872	Rod - Brake	1
19	3296-29	Nut - Lock	1
20	3254-2	Washer - Lock, Int. Tooth	1
21	92-0899	Guide - Belt, Lower	1
22	3272-6	Pin - Cotter	1
23	92-0880	Arm - Shift, Transaxle	1
24	7-0036	Key - Square	2
25	302-5	Fitting - Grease	2

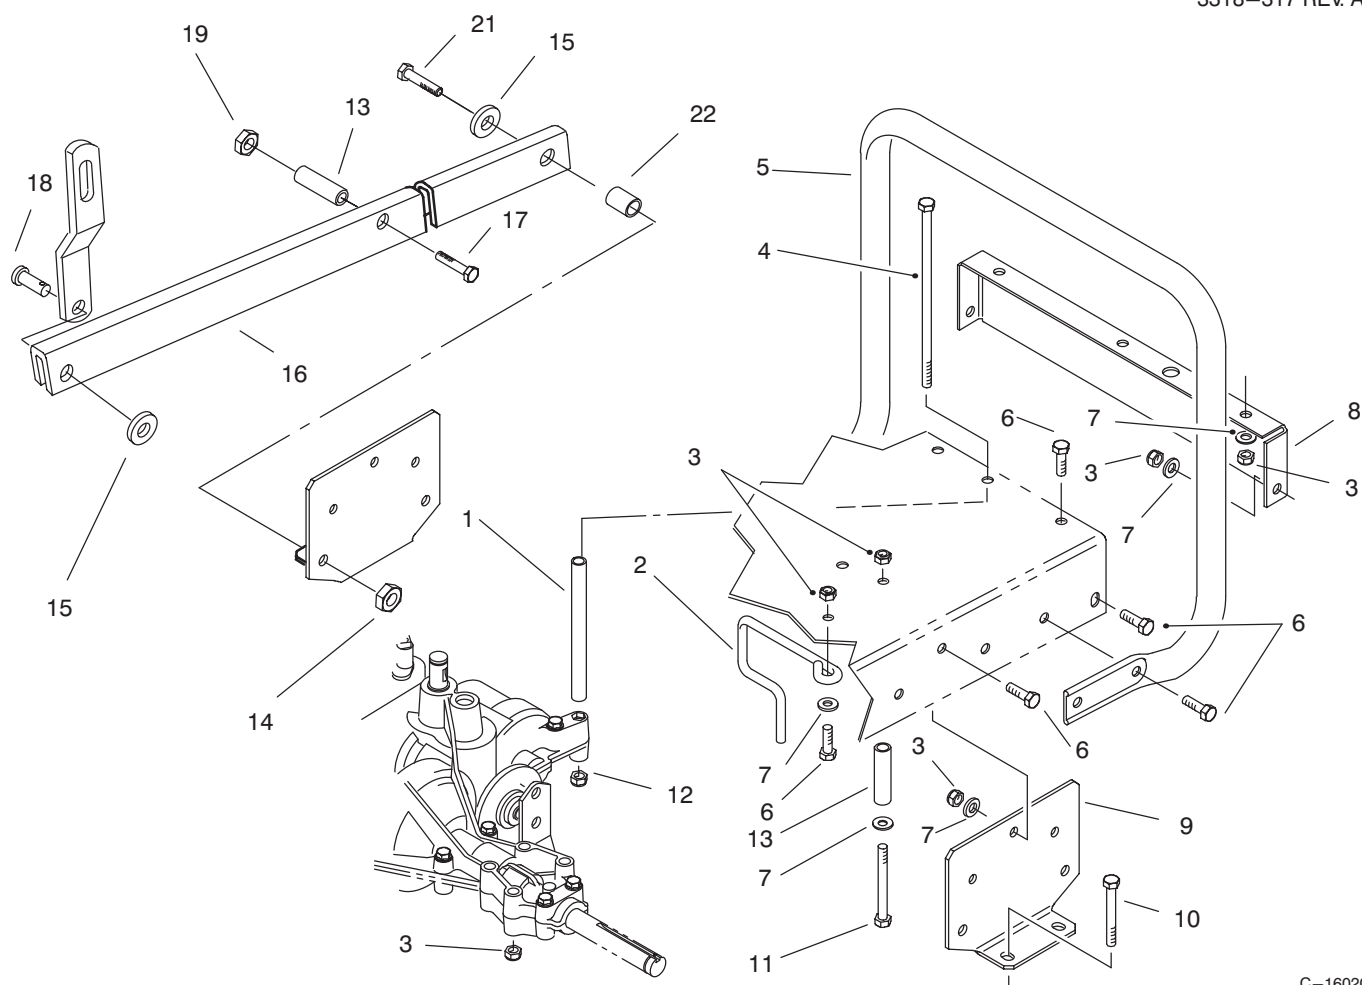


C-1602C

STAND BAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-0897	Spacer	1
2	92-0898	Guide - Belt	1
3	3296-29	Nut - Lock	17
4	322-50	Screw - Cap Hex. Hd.	1
5	92-0864	Standbar	1
6	322-5	Screw - Cap Hex. Hd.	15
7	3256-23	Washer - Flat	12
8	92-0861	Frame - Rear	1
9	92-0865	Support - Axle	2
10	322-12	Screw - Cap Hex. Hd.	4
11	322-14	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
12	3296-47	Nut - Lock	1
13	76-1560	Spacer	4
14	3296-59	Nut - Lock	3
15	3256-24	Washer - Flat	4
16	76-1540	Arm - Suspension R.H.	1
*	76-1550	Arm - Suspension L.H.	1
17	323-14	Screw - Hex Hd. Cap	2
18	283-42	Pin - Clevis	2
19	3296-39	Nut - Lock	2
21	323-9	Screw - Hex Hd. Cap	2
22	56-7430	Pin - Support	2


*Not Illustrated

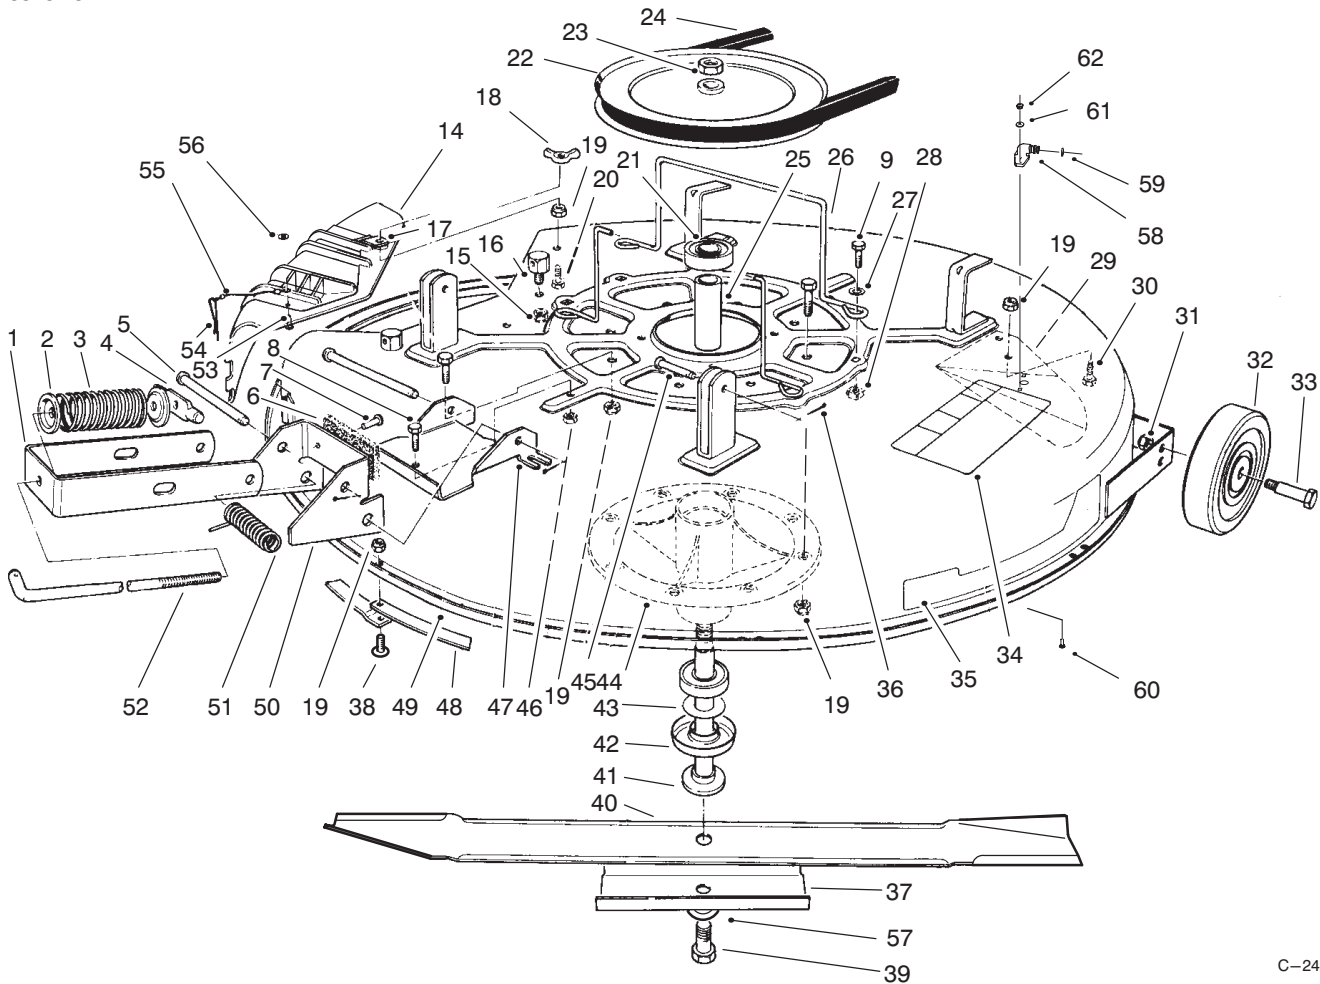

C-2425

MOWER ASSEMBLY – RECYCLER


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	47-1180	Bracket – Engagement	1	32	61-9760	Wheel – Deck	2
2	47-1140	Retainer – Spring, Top	2	33	56-6590	Bolt – Wheel	2
3	47-0960	Spring – Compression	1	34	93-7010	Decal – Danger	1
4	47-1200	Shaft – Adjusting	1	35	92-7988	Decal – Recycler	1
5	80-2570	Pin – Clevis	2	36	3272-6	Pin – Cotter	2
6	80-2550	Pad – Brake	1	37	80-4570	Stiffener – Blade	1
7	3290-282	Rivet	2	38	32122-14	Screw – Truss, Phillips Hd.	8
8	321-4	Screw – Cap Hex. Hd.	1	39	26-0671	Bolt – Blade	1
9	322-5	Screw – Cap Hex. Hd.	6	40	80-4430	Blade – Recycler	1
14	82-6150	Assy. – Cover, Discharge (Incl. Ref. #53-56)	1	41	80-4350	Shaft – Spindle	1
15	3296-59	Nut – Lock	1	42	80-4370	Shield – Bearing	1
16	28-7350	Post – Pivot	1	43	80-4390	Spacer – Hardened	1
17	83-7010	Brace – Cover, Rear	1	44	56-7030	Body – Spindle	1
18	32103-2	Nut – Wing	1	45	283-2	Pin – Clevis	2
19	3296-29	Nut – Lock	24	46	3296-8	Nut – Lock	1
20	322-6	Screw – Cap Hex. Hd.	1	47	80-2560	Plate – Deck, Brake Mtg.	1
21	251-297	Bearing	2	48	80-4490	Ring – Deck	4
22	80-4470	Pulley	1	49	14-9999	Deck – Cutting, Recycler (Incl. Ref. #34) (Serial No 6900001 – 7900999)	1
23	3219-7	Nut – Hex. Hd.	1	49	95-7850	Deck Assembly (Incl. Ref. #34) (Serial No. 7901000 & Up)	1
24	92-0875	V-Belt	1	50	80-2530	Assembly – Brake (Incl. Ref. #6-7)	1
25	83-7020	Spacer – Bearing	1	51	40-6230	Spring – Torsion	1
26	60-9730	Guide – Belt	2	52	80-2580	Rod – Adjusting	1
27	3256-23	Washer – Flat	4				
28	3290-496	Nut – Retainer	4				
29	80-2630	Kicker – 32"	4				
30	322-3	Screw – Cap Hex. Hd.	13				
31	3296-39	Nut – Lock	2				

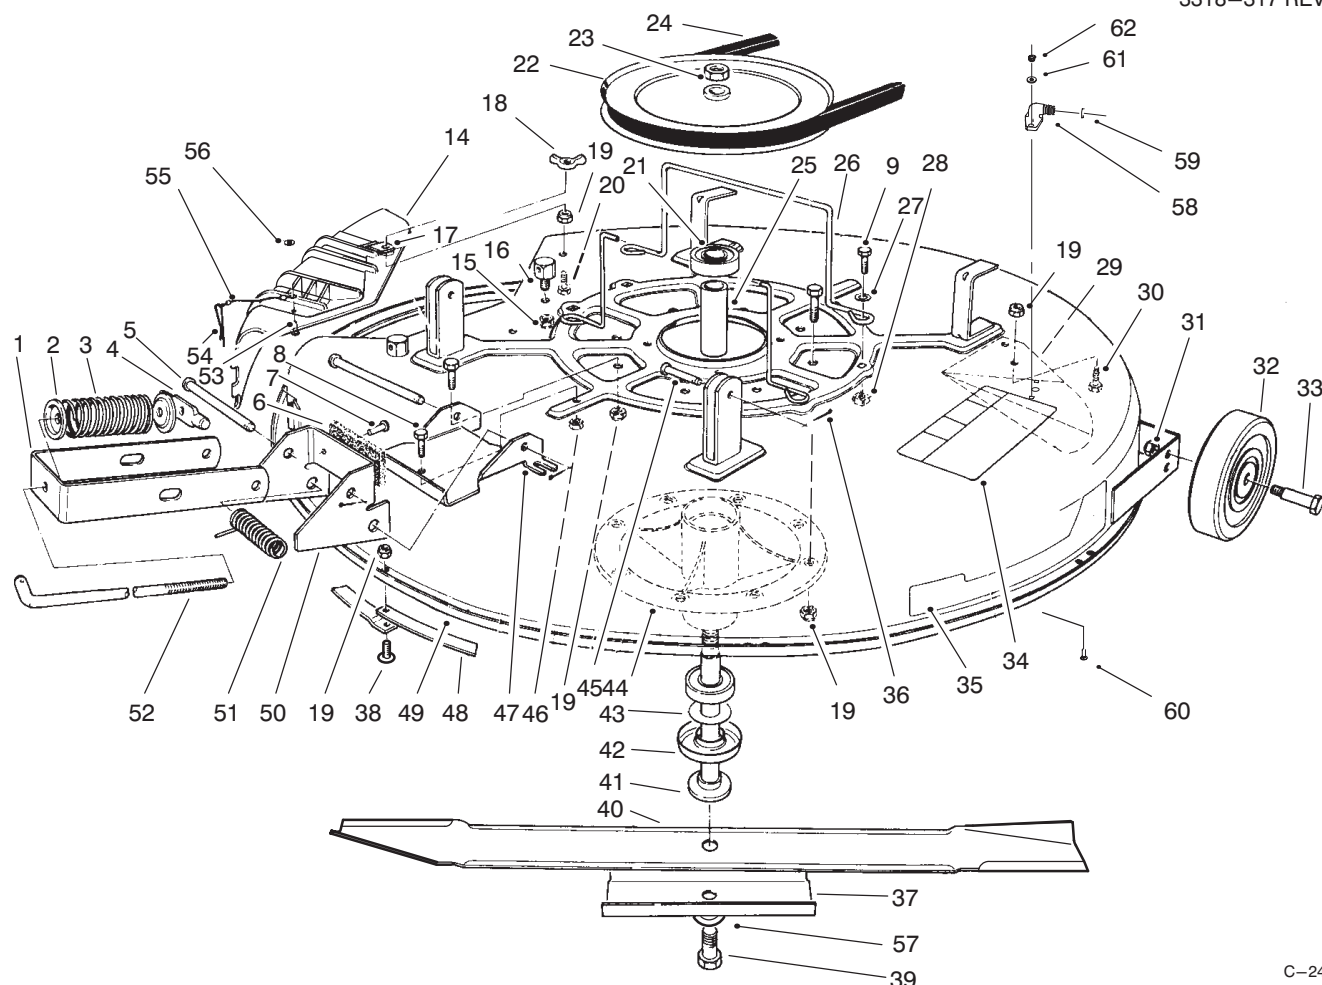

C-2425

MOWER ASSEMBLY – RECYCLER (Cont.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
53	3290-282	Rivet	2	60	3229-1	Bolt – Carriage (Serial No. 7901000 & Up)	2
54	28-8130	Pin – Chute, Locking	1	61	3256-1	Washer – Flat (Serial No. 7901000 & Up)	2
55	28-8070	Lanyard	1	62	3296-16	Nut – Lock (Serial No. 7901000 & Up)	2
56	3256-49	Washer – Flat	1				
57	3290-465	Washer – Belleville	1				
58	95-2747	Fitting – Washout (Serial No. 7901000 & Up)	1				
59	46-6290	O-Ring (Serial No. 7901000 & Up)	1				

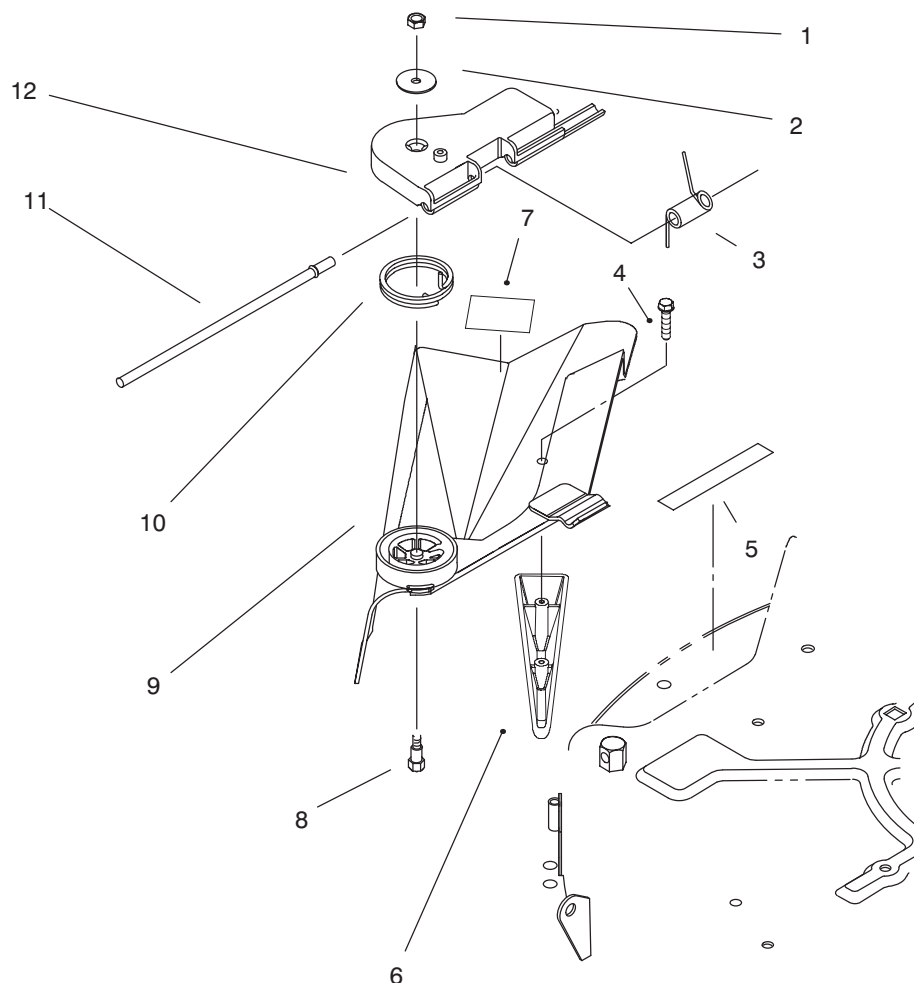


C-2426

DEFLECTOR ASSEMBLY – RECYCLER

Ref. No.	Part No.	Description	No. Used
1	3296-42	Nut – Lock	1
2	3256-58	Washer – Fender	1
3	92-2493	Spring – Torsion	1
4	93-0231	Screw – Pan Hd.	4
5	93-7009	Decal – Deflector Danger	1
6	93-7696	Kicker – CE	2
7	93-7010	Decal – Danger	1

Ref. No.	Part No.	Description	No. Used
8	92-8916	Bolt – Shoulder	1
9	93-7694	Deflector Ass'y (Incl. Ref. #7)	1
10	88-6160	Spring – Torsion	1
11	88-6150	Rod – Deflector Hinge	1
12	88-4540	Hinge – Deflector Danger	1

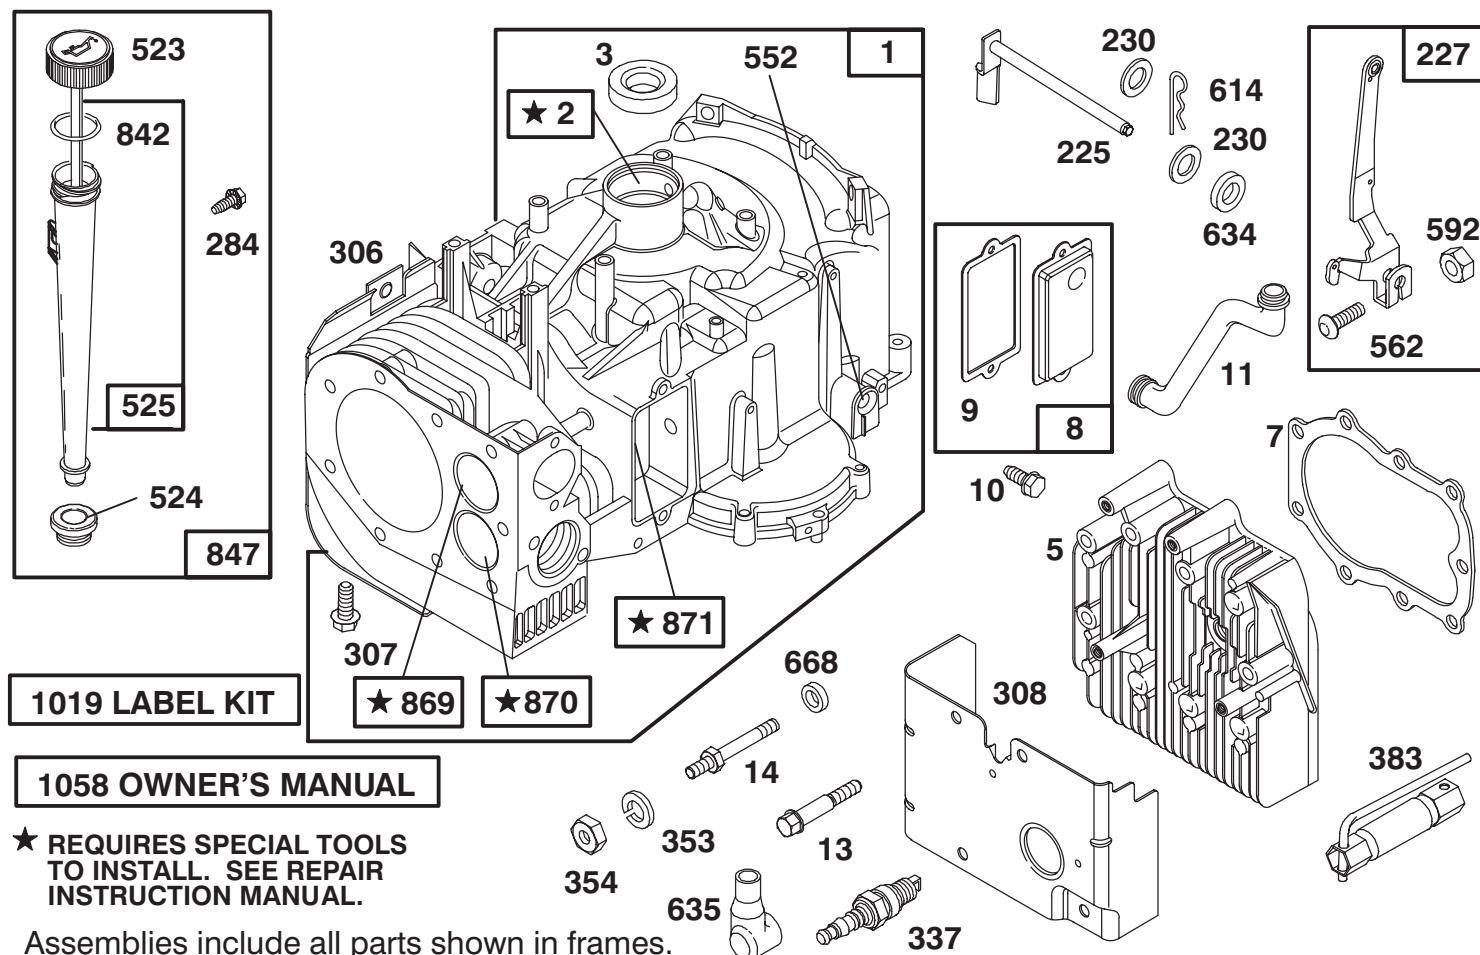

ENGINE BRIGGS & STRATTON MODEL 28M707—0127—01


Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	1
2	399265	Bearing—Cylinder	1
★3	391086	Seal—Oil	1
5	494240	Head—Cylinder	1
★7	271866	Gasket—Cylinder Head	1
8	495735	Breather Assembly	1
★9	27803	Gasket—Valve Cover	1
10	94621	Screw—Sem	1
11	281246	Tube—Breather	1
13	94622	Screw—Cylinder Head	1
14	94776	Stud—Cyl. Head	1
225	495157	Crank—Governor	1
227	493935	Lever Assy.—Governor	1
230	94742	Washer—Gov. Crank	1
284	94073	Screw—Hex Head	1
306	224545	Shield—Cylinder	1
307	94623	Screw—Cyl. Shield Mtg.	1
308	491490	Cover—Cylinder Head	1
337	802592	Plug—Spark	1
353	94315	Washer—Lock	1
354	94314	Nut—Hex.	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench—Spark Plug	1
523	495230	Cap—Oil Fill	1
★524	281370	Seal—Fill Tube	1
525	496113	Tube—Oil Fill	1
552	231597	Bushing—Gov. Crank	1
562	92613	Bolt—Carriage	1
592	231082	Nut—Hex.	1
614	93306	Pin—Cotter	1
★634	491323	Seal—Governor	1
635	66538	Elbow—Spark Plug	1
668	231109	Spacer	1
★842	270920	Seal—Oil Fill Cap	1
847	496415	Fill Group—Oil	1
869	261463	Seat—Intake Valve	1
870	213316	Seat—Exhaust Valve	1
871	261961	Guide—Exhaust Valve	1
		Note: 231218 Guide—Intake Valve	1
1019	491255	Label Kit	1
1058	272697	Owner's Manual	1

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

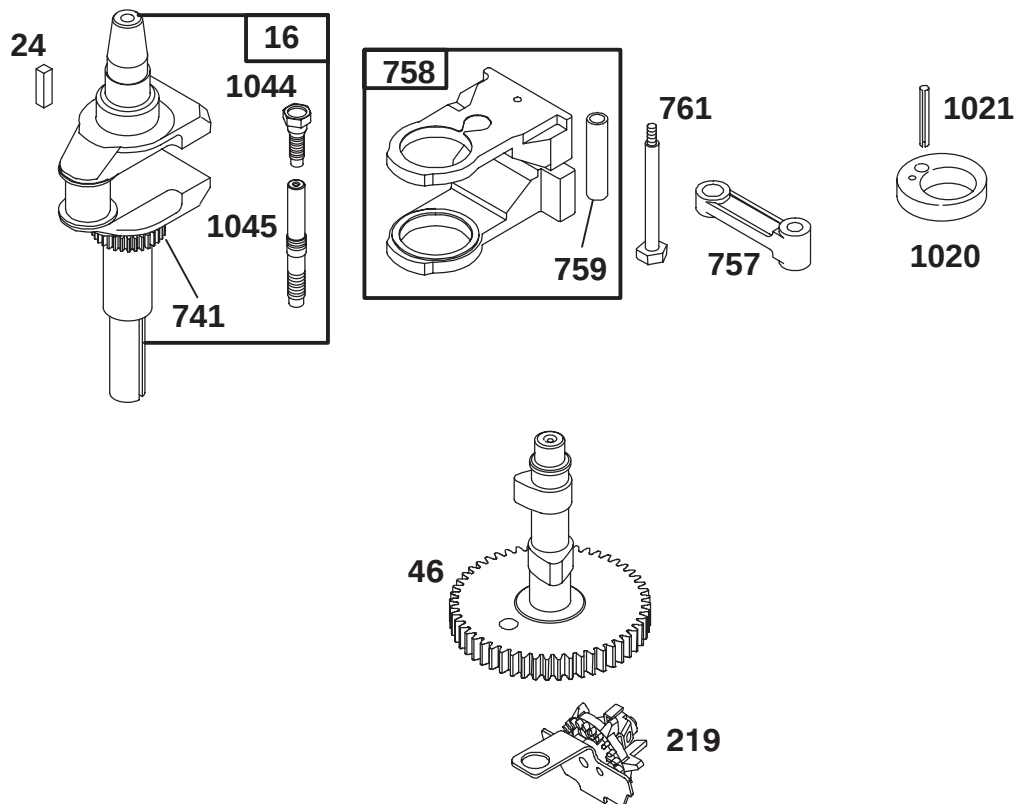


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0127-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
16	495162	Crankshaft	1	758	399891	Counterweight Assy.	1
	94196	Key-Timing Gear	1	759	298909	Pin-Counterweight	1
24	222698	Key-Flywheel	1	761	94593	Screw-Counterweight	1
46	213720	Gear-Cam	1	1020	262243	Eccentric	1
219	490815	Oil Slinger, Gov. Gear Assy.	1	1021	94160	Pin-Eccentric	1
741	262932	Gear-Timing	1	1044	94673	Screw-Shoulder	1
757	213998	Link-Counterweight	1	1045	231828	Extension-Crankshaft	1

★ Included in Gasket Set-Part No. 494241.
◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 497535.

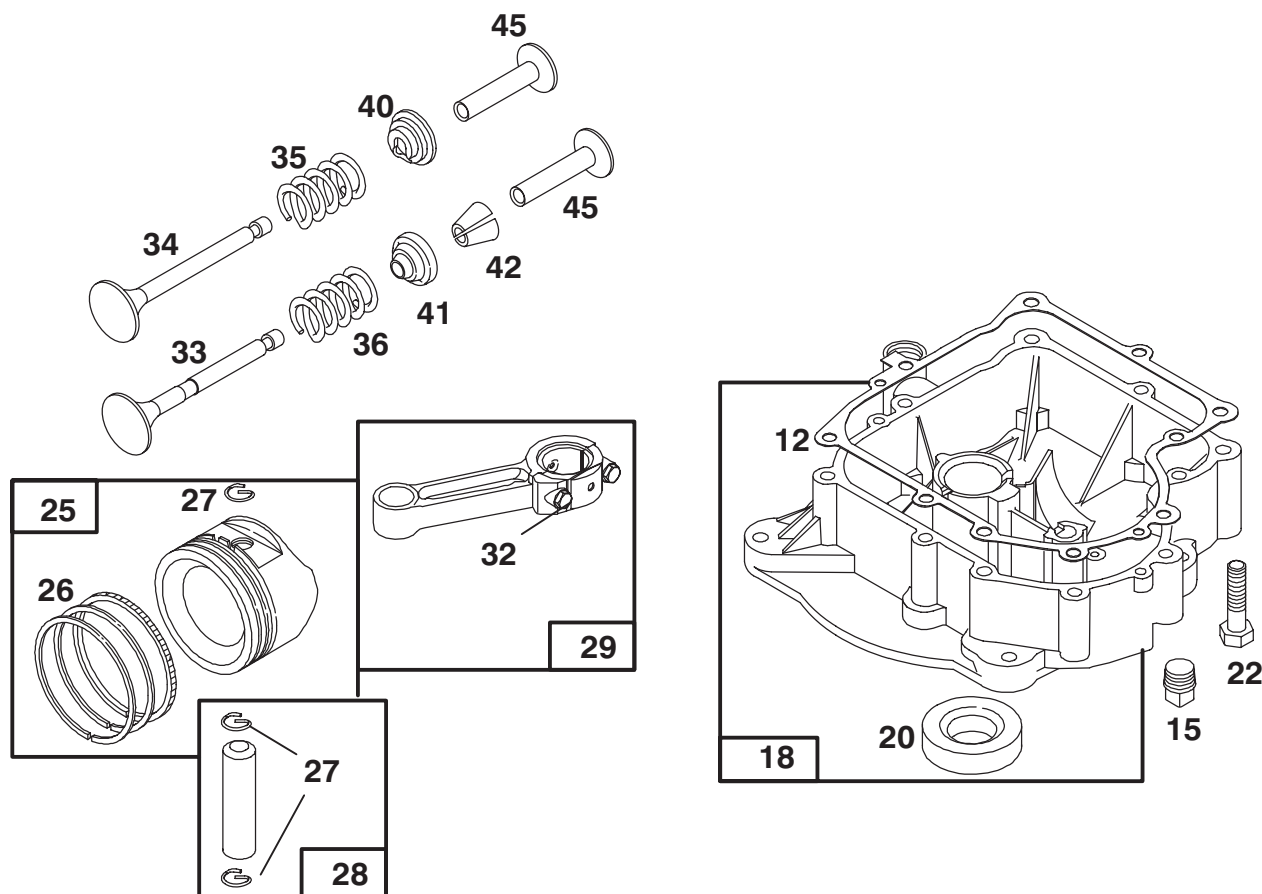

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707—0127—01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket—Crankcase (.015" Thick)	1	27	260924	Lock—Piston Pin	1
★	271997	Gasket—Crankcase (.005" Thick)	1	28	299691	Pin Assy.—Piston (Standard)	1
★	271996	Gasket—Crankcase (.009" Thick)	1		391286	Pin Assy.—Piston (.005" O.S.)	1
15	94239	Plug—Oil Drain	1	29	490348	Rod Assembly—Connecting	1
18	494238	Base—Engine	1		490469	Rod—Connecting (020" U.S. Crankpin Bore)	1
★20	291675	Seal—Oil	1	32	94671	Screw—Connecting Rod	1
22	94624	Screw—Base Mtg. Sem	1	33	262246	Valve—Exhaust	1
25	497518	Piston Assy. (Std.)	1	34	262247	Valve—Intake	1
	497519	Piston Assy. (.010" O.S.)	1	35	65906	Spring—Intake Valve	1
	497520	Piston Assy. (.020" O.S.)	1	36	26828	Spring—Exhaust Valve	1
	497521	Piston Assy. (.030" O.S.)	1	40	221596	Retainer—Intake Valve	1
26	391780	Ring Set—Piston (Std.)	1	41	292260	Rotocoil—Exhaust Valve	1
	391781	Ring Set—Piston (.010" O.S.)	1	42	93630	Retainer—Ex. Valve Rotocoil	1
	391782	Ring Set—Piston (.020" O.S.)	1	45	262248	Tappet—Valve	1
	391783	Ring Set—Piston (.030" O.S.)	1				

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

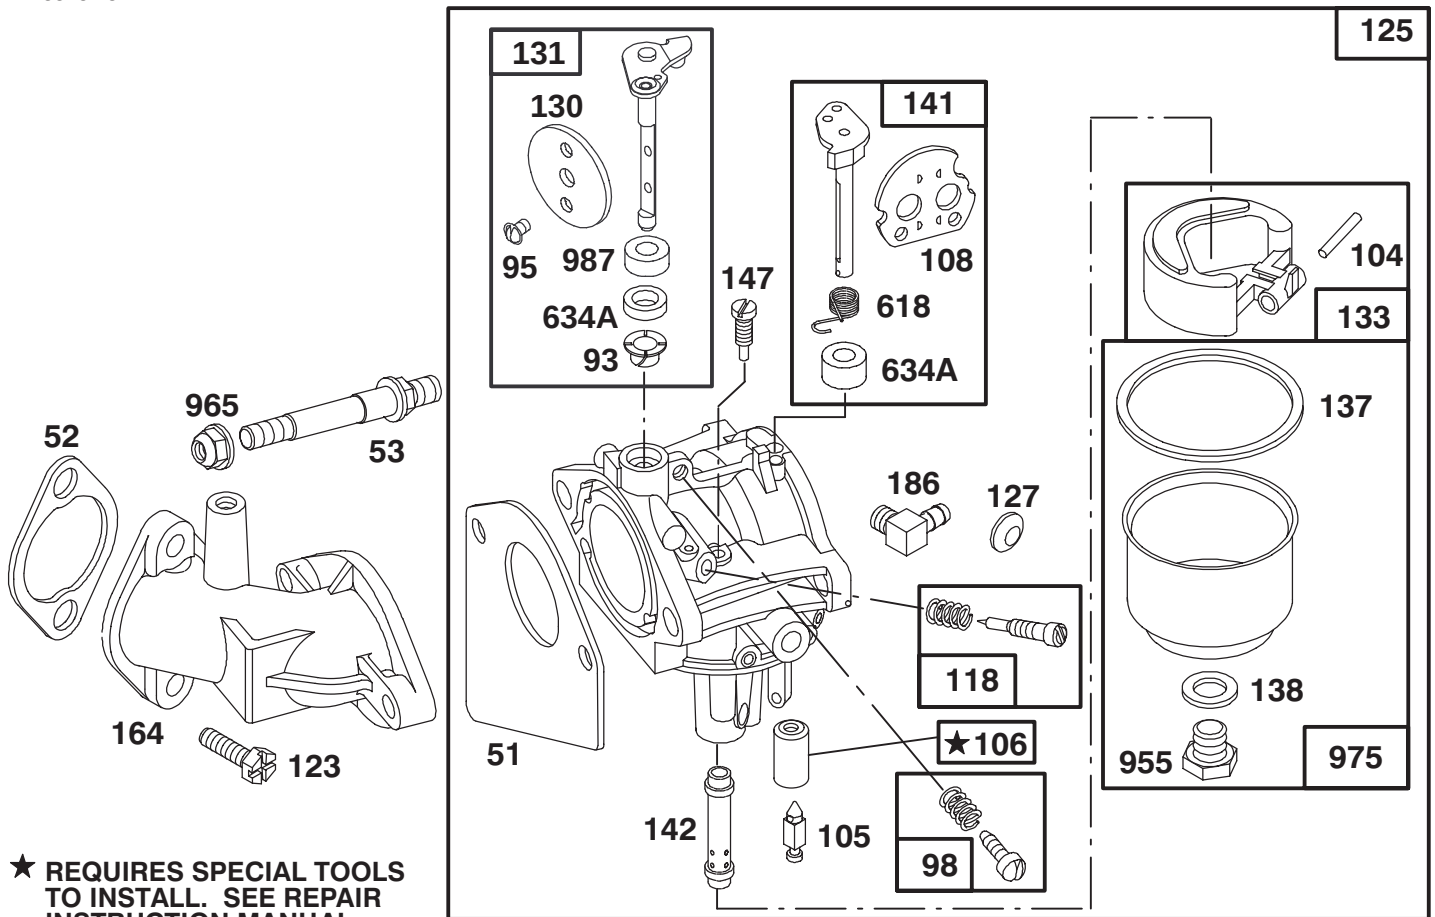

★ REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0127-01


Ref. No.	Part No.	Description	No. Used
◆51	272465	Gasket—Carburetor (Carb. to Manifold)	1
★52	272554	Gasket—Carburetor (Manifold to Cylinder)	1
53	94637	Stud—Carb. Mtg.	1
●93	281346	Bushing—Throttle Shaft	1
●95	94098	Screw—Throttle	1
98	495800	Screw—Idle Speed	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224540	Valve—Choke	1
118	494383	Valve—Needle	1
121	495799	Carburetor Kit	1
123	94616	Screw—Elbow Mtg.	1
125	495706	Carburetor Assembly	1
●127		Plug—Welch (Sold in Kit Only)	1
130	224539	Valve—Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft—Throttle	1
133	494381	Float—Carburetor	1
◆137	281165	Gasket—Float Bowl	1
◆138	281164	Washer—Float Bowl Screw	1
141	495931	Shaft—Choke	1
●142	497566	Nozzle—Carburetor	1
●147	231984	Pilot—Jet	1
164	213819	Manifold—Intake	1
186	493496	Connector—Fuel	1
618	262803	Spring—Choke Return	1
●634A	281168	Seal—Choke Shaft	1
●634B	398970	Washer—Throttle Shaft	1
955	94642	Screw—Fuel Bowl	1
965	94010	Nut—Hex.	1
975	494378	Bowl Assy.—Carburetor	1
977	494385	Carburetor Gasket Kit	1
●987	281166	Seal—Throttle Shaft	1

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

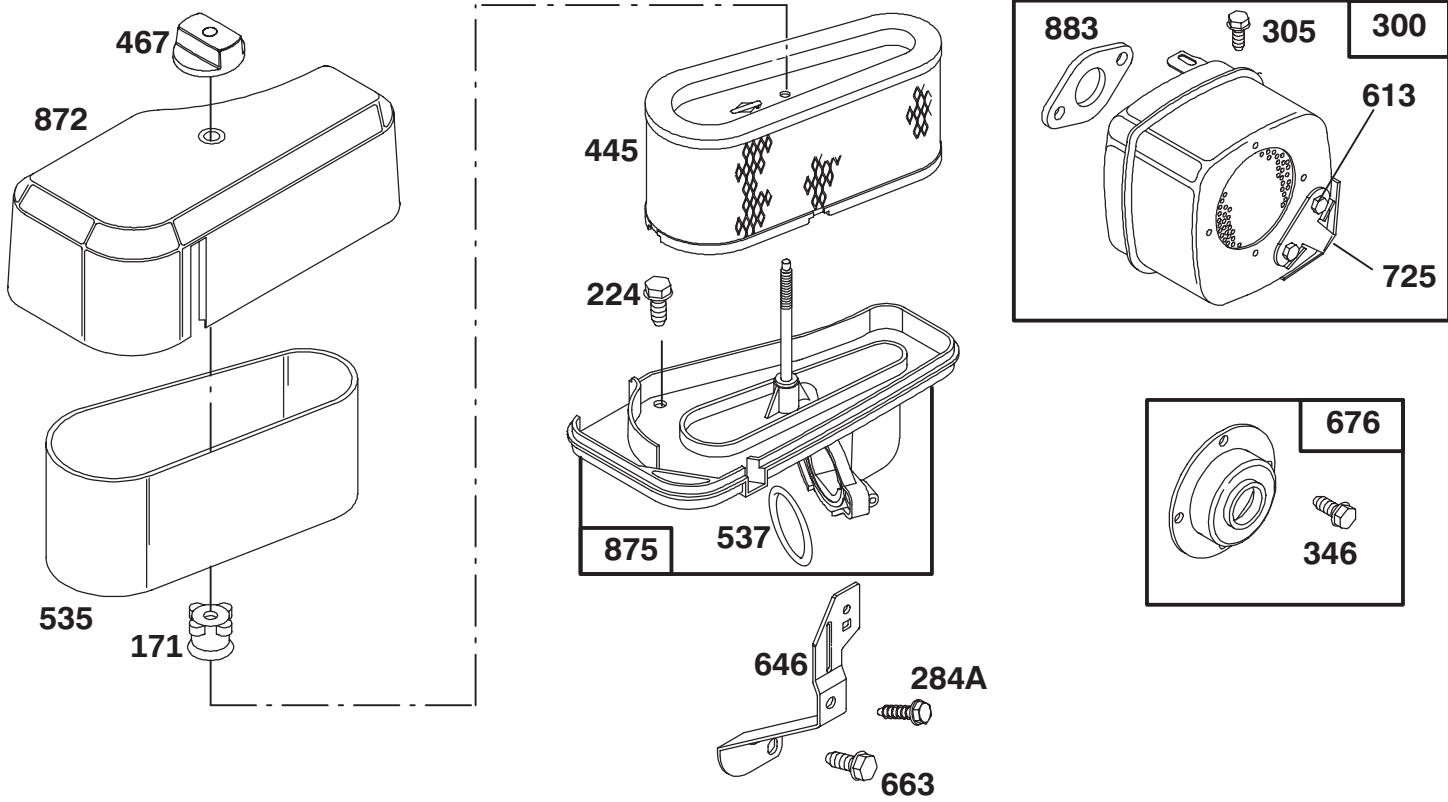


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707—0127—01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
171	281051	Nut—Air Cleaner Mtg.	1	★537	281106	O-Ring—Air Cleaner	1
224	94729	Screw—Air Cleaner Sem	1	613	93927	Screw—Hex. Head	1
284A	94704	Screw Hex. Head	1	646	224546	Brace—Air Cleaner	1
300	491413	Muffler—Exhaust	1	663	94620	Screw—Hex. Hd.	1
305	94786	Screw—Hex. Head	1	676	396903	Deflector—Muffler	1
346	93705	Screw—Hex. Head	1	725	223023	Shield—Muffler	1
445	496894	Cartridge—Air Cleaner	1	872	281361	Cover—Air Cleaner	1
467	493903	Knob—Air Cleaner	1	875	494237	Body—Air Cleaner	1
535	272403	Element—Air Cleaner	1	★883	272293	Gasket—Exhaust	1

★ Included in Gasket Set—Part No. 494241.
 ◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

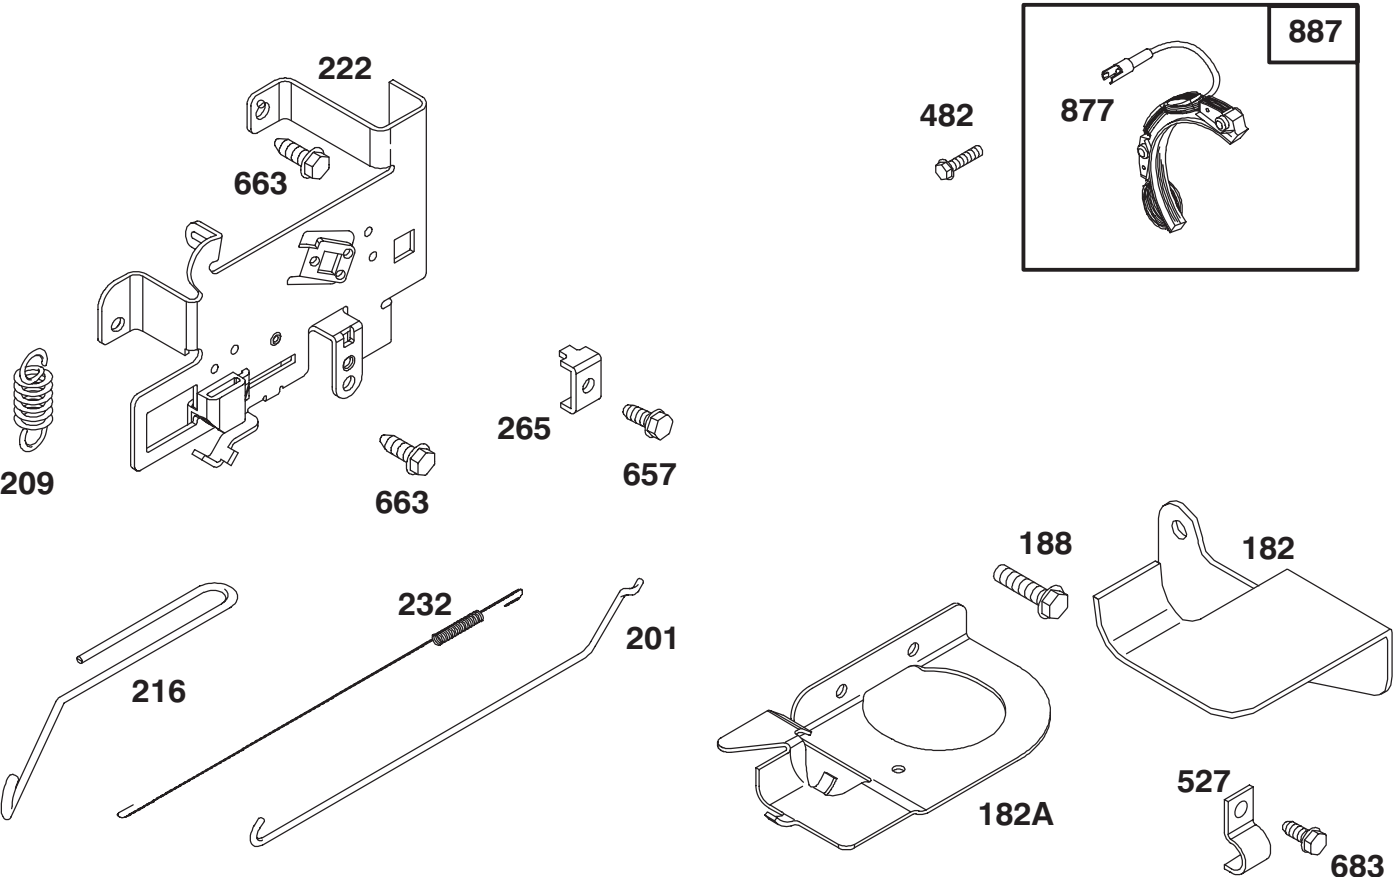

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707-0127-01

Ref. No.	Part No.	Description	No. Used
182	223925	Bracket—Fuel Tank	1
182A	223866	Bracket—Fuel Tank	1
188	94480	Screw—Sem	1
201	262767	Link—Governor	1
209	260871	Spring—Governor	1
216	262766	Link—Choke	1
222	495611	Plate—Governor Control	1
232	262785	Spring—Governor Link	1

Ref. No.	Part No.	Description	No. Used
265	221535	Clamp—Casing	1
482	93621	Screw—Sem	1
527	221428	Clamp	1
657	93496	Screw—Sem	1
663	94620	Screw—Hex. Head	1
683	94602	Screw—Hex. Head	1
877	393814	Diode and Connector Assy.	1
887	391529	Alternator	1

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

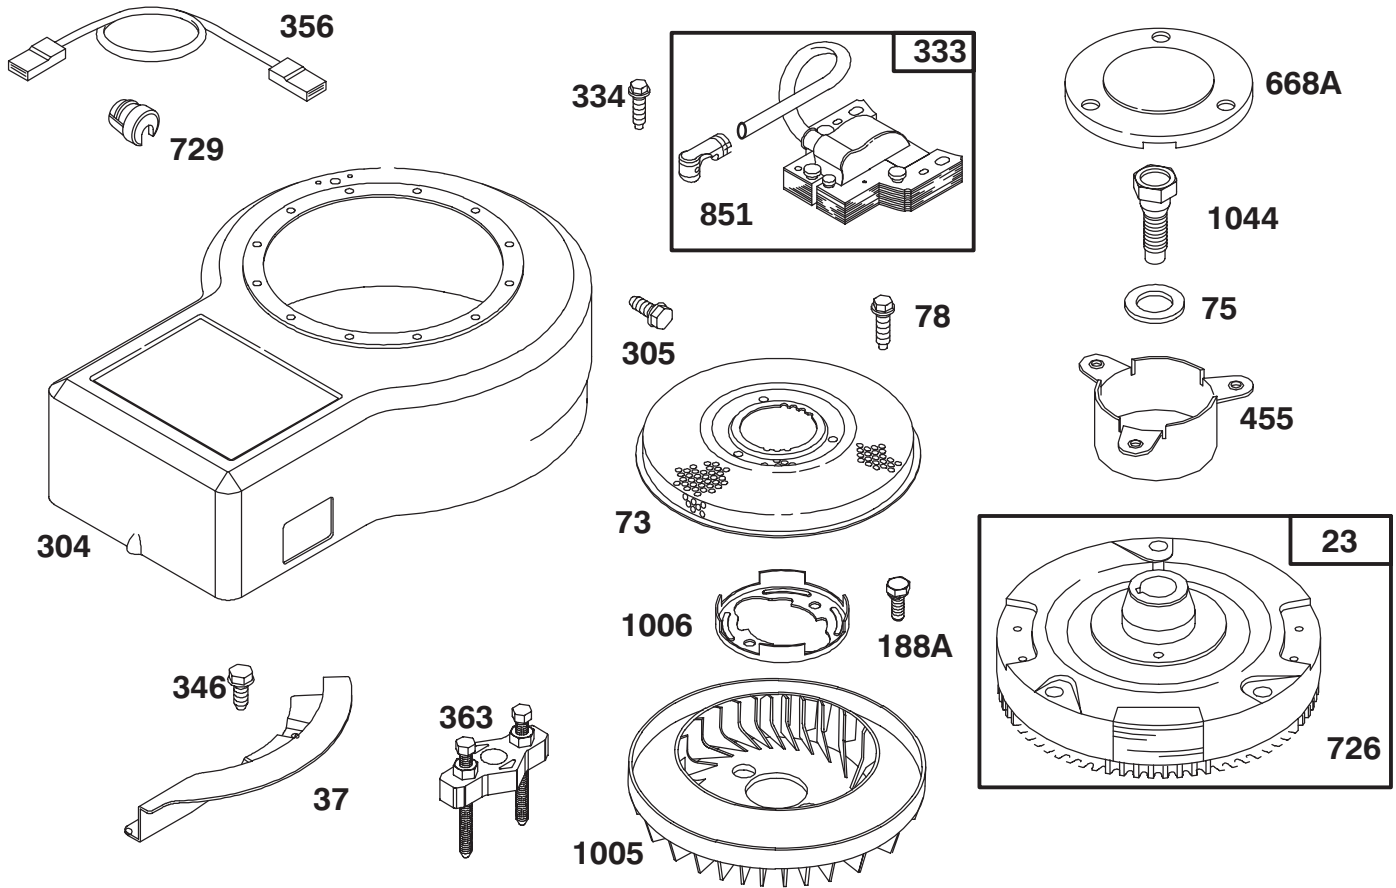

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707—0127—01

Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel	1
37	224502	Guard—Flywheel	1
73	224948	Screen—Rotating	1
75	224061	Washer—Spring	1
78	94626	Screw—Sem	1
188A	94627	Screw—Sem	1
304	496431	Housing—Blower	1
305	94786	Screw—Hex.	1
333	492341	Armature—Magneto	1
334	93381	Screw—Hex.	1
346	93705	Screw—Hex. Head	1
356	494328	Wire Assembly	1

Ref. No.	Part No.	Description	No. Used
363	19203	Puller—Flywheel	1
455	222561	Cup—Screen Mounting	1
668A	280848	Spacer	1
726	392134	Gear—Ring (Includes Mtg Hardware)	1
729	281159	Clip—Lead Wire	1
851	493880	Terminal—Ignition Cable	1
1005	281355	Fan—Flywheel	1
1006	224413	Retainer—Fan	1
1044	94673	Screw—Shoulder	1

★ Included in Gasket Set—Part No. 494241.
 ◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

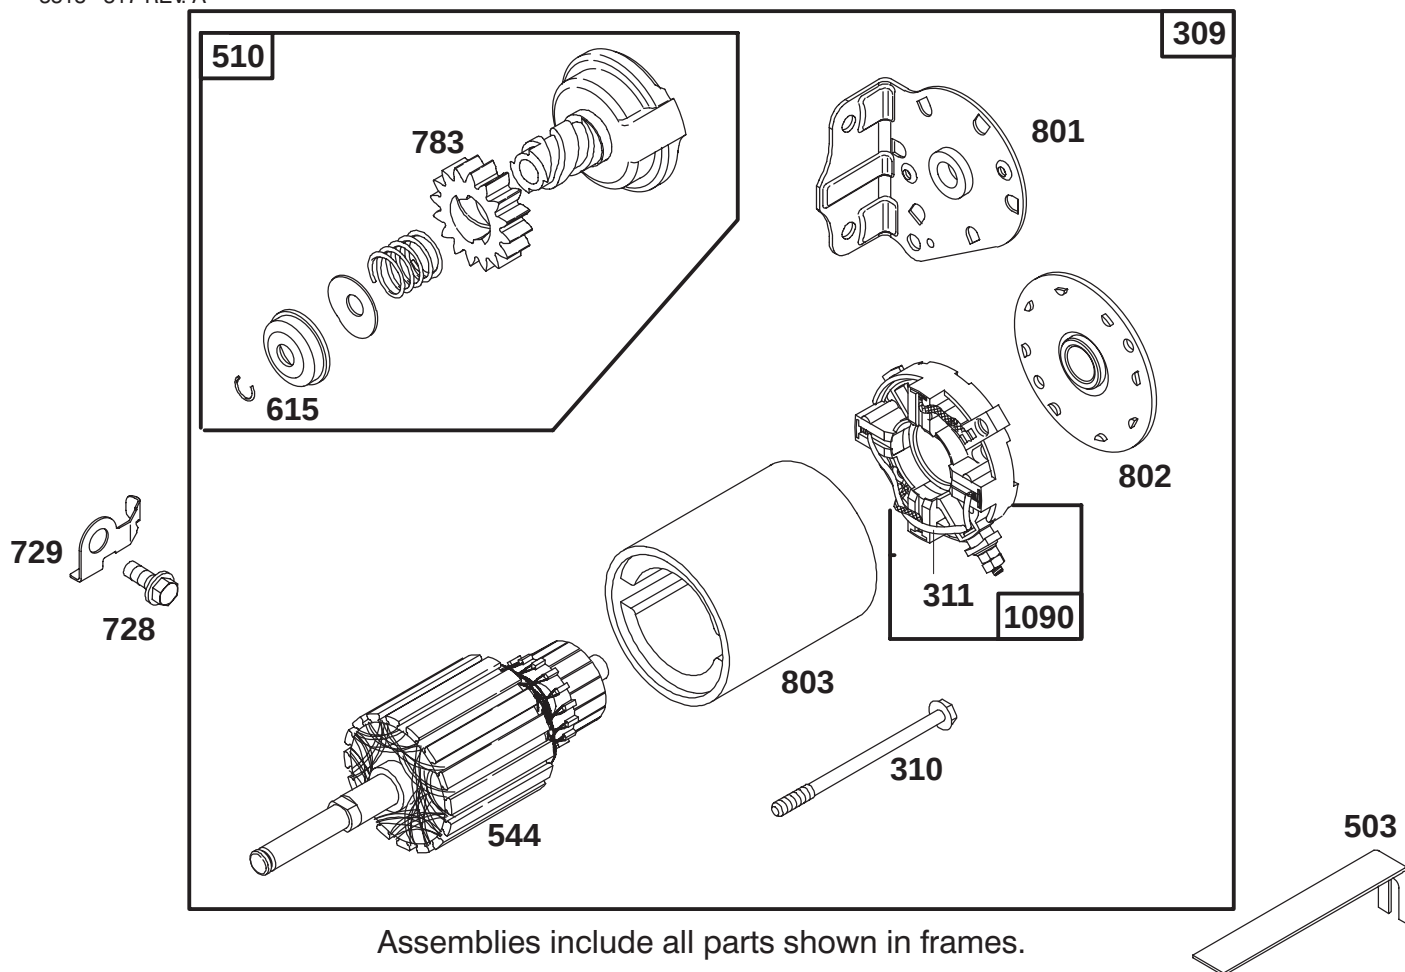

ENGINE BRIGGS & STRATTON MODEL 28M707-0127-01




Ref. No.	Part No.	Description	No. Used
309	497595	Motor—Starter	1
310	94003	Bolt—Thru	1
311	497608	Brush Set	1
503	806000	Strap—Starter	1
510	497606	Drive—Starter	1
544	497603	Armature—Starter	1
615	263080	Retainer	1

Ref. No.	Part No.	Description	No. Used
728	94627	Screw—Hex. Head	1
729	225170	Clip—Wire	1
783	280104	Gear—Starter	1
801	394856	Cap—Drive	1
802	497607	Plate—Cover	1
803	497604	Housing—Starter	1
1090	497605	Cap—End	1

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

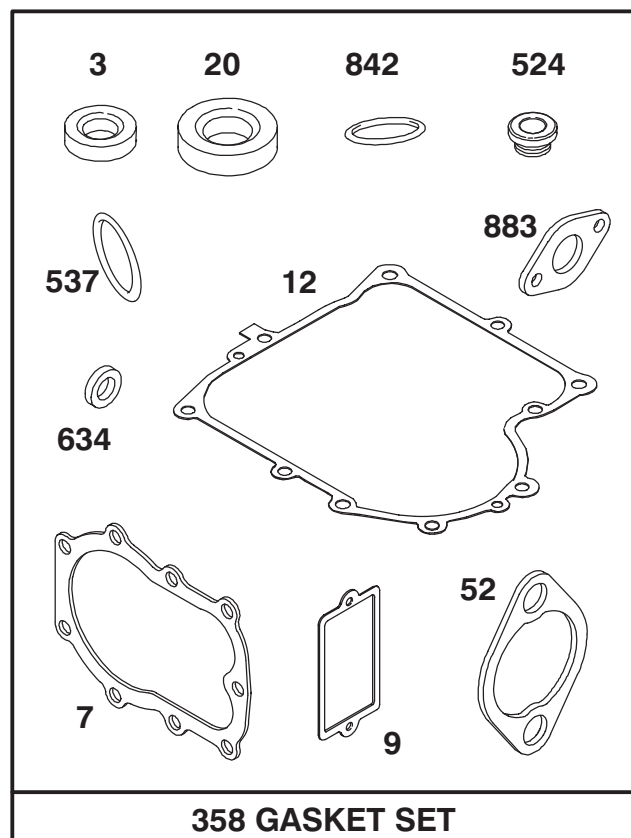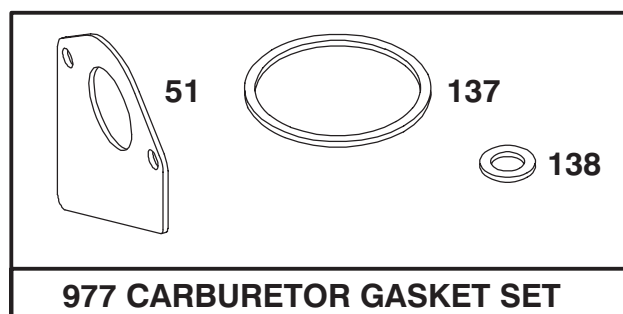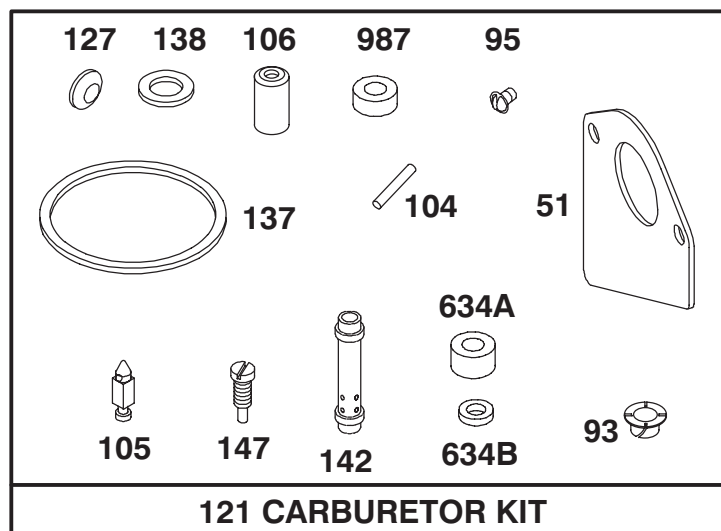

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707—0127—01

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	1
★7	271866	Gasket—Cylinder Head	1
★9	27803	Gasket—Valve Cover	1
★12	271916	Gasket—Crankcase (.015" Thick)	1
★	271997	Gasket—Crankcase (.005" Thick)	1
★	271996	Gasket—Crankcase (.009" Thick)	1
★20	291675	Seal—Oil	1
◆●51	272465	Gasket—Carburetor (Carb. to Manifold)	1
★52	272554	Gasket—Carburetor (Manifold to Cylinder)	1
●93	281346	Bushing—Throttle Shaft	1
●95	94098	Screw—Throttle	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1


Ref. No.	Part No.	Description	No. Used
121	497535	Carburetor Kit	1
●127		Plug—Welch (Sold in Kit Only)	1
◆●137	281165	Gasket—Float Bowl	1
◆●138	281164	Washer—Float Bowl Screw	1
●142	494566	Nozzle—Carburetor	1
●147	231984	Pilot—Jet	1
358	494241	Gasket Set	1
★524	281370	Seal—Fill Tube	1
★537	281106	O-Ring—Air Cleaner	1
★634	491323	Seal—Governor	1
●634A	281168	Seal—Choke Shaft	1
●634B	398970	Washer—Throttle Shaft	1
★842	270920	Seal—Oil Fill Cap	1
★883	272293	Gasket—Exhaust	1
977	494385	Carburetor Gasket Set	1
●987	281166	Seal—Throttle Shaft	1

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.


PEERLESS TRANSAXLE MODEL NO. 915-019

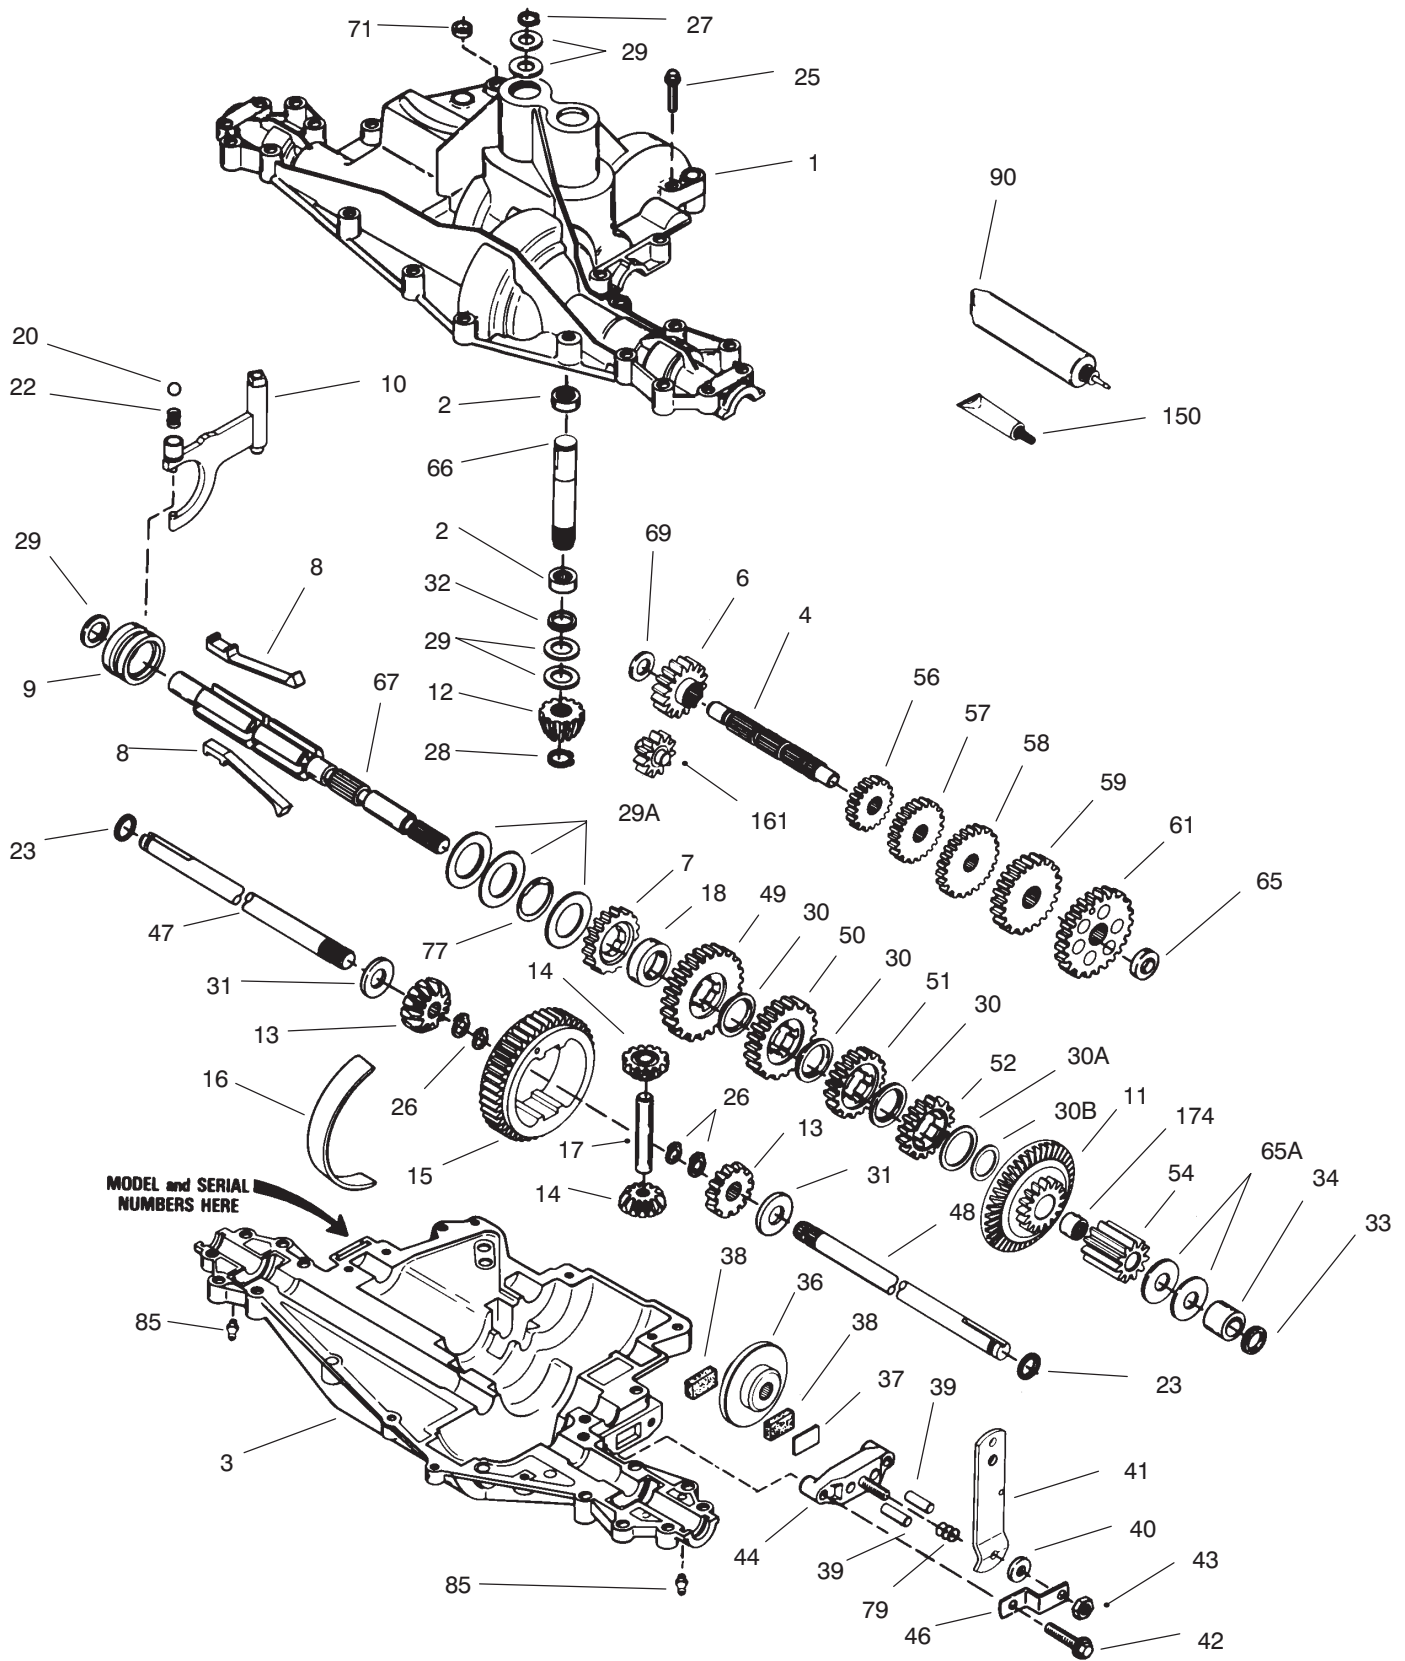

PEERLESS TRANSAXLE MODEL NO. 915—019

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	772117	Transaxle Cover	1	38	790006	Brake Pad	2
2	780086	Needle Bearing	2	39	786026	Dowel Pin	2
3	770114	Transaxle Case	1	40	792076	Washer	1
4	776300	Countershaft	1	41	790045	Brake Lever	1
6	778281	Spur Gear (16 Teeth)	1	42	792073	Screw	2
7	778122A	Spur Gear (22 Teeth)	1	43	792075	Locknut	1
8	792133	Shift Key	4	44	790025	Brake Pad Holder	1
9	784352	Shift Collar	1	46	786086	Brake Lever Bracket	1
10	784365	Shift Rod & Fork	1	47	774930	Axle (16—3/4" lg.)	1
11	778290	Bevel Gear & Bearing (44/16 Teeth) (Incl. Ref. #174)	1	48	774931	Axle (11—9/16" lg.) (Incl. Ref. #26)	1
12	778262	Bevel Pinion (14 Teeth)	1	49	778124A	Spur Gear (30 Teeth)	1
13	778221	Bevel Gear (16 Teeth)	2	50	778123A	Spur Gear (25 Teeth)	1
14	778068	Differential Pinion	2	51	778122A	Spur Gear (22 Teeth)	1
15	778260	Ring Gear	1	52	778273	Spur Gear (19 Teeth)	1
16	786150	Bearing Strip	1	54	778263	Spur Gear (11 Teeth)	1
17	78139	Drive Pin	1	56	778126A	Spur Gear (20 Teeth)	1
18	786147	Neutral Spacer	1	57	778127A	Spur Gear (25 Teeth)	1
20	792139	Ball (3/8" dia.)	1	58	778128A	Spur Gear (28 Teeth)	1
22	792142	Spring	1	59	778129A	Spur Gear (30 Teeth)	1
23	788061	Seal Ring	2	61	778265	Spur Gear (34 Teeth)	1
25	792073	Screw	17	65	780162	Washer	1
26	792125	Retaining Ring (pkg. of 2)	4	65A	780160	Washer	2
27	792035	Retaining Ring	1	66	776299	Input Shaft (3.522" lg.)	1
28	788040	Retaining Ring	1	67	776352	Shifter & Brake Shaft	1
29	780072	Washer	5	69	780161	Thrust Washer	1
29A	780090	Thrust Washer	3	71	788069	Square Cut Ring	1
30	780108	Washer	3	77	788078A	Inverted Retaining Ring (pkg. of 2)	1
30A	789145	Washer	1	79	792144	Spring	1
30B	780178	Washer	1	90	788067B	Grease (32 oz. btl. Bentonite grease)	1
31	780001	Washer	2	150	510334	Gasket Eliminator (Loctite #515)	1
32	792001	O—Ring	1	161	776302	Reverse Idler Assembly	1
33	788076	O—Ring	1	174	780085	Needle Bearing	1
34	780159	Bushing	1				
36	790071	Brake Disk	1				
37	790007	Brake Pad Plate	1				

ELECTRICAL SCHEMATIC

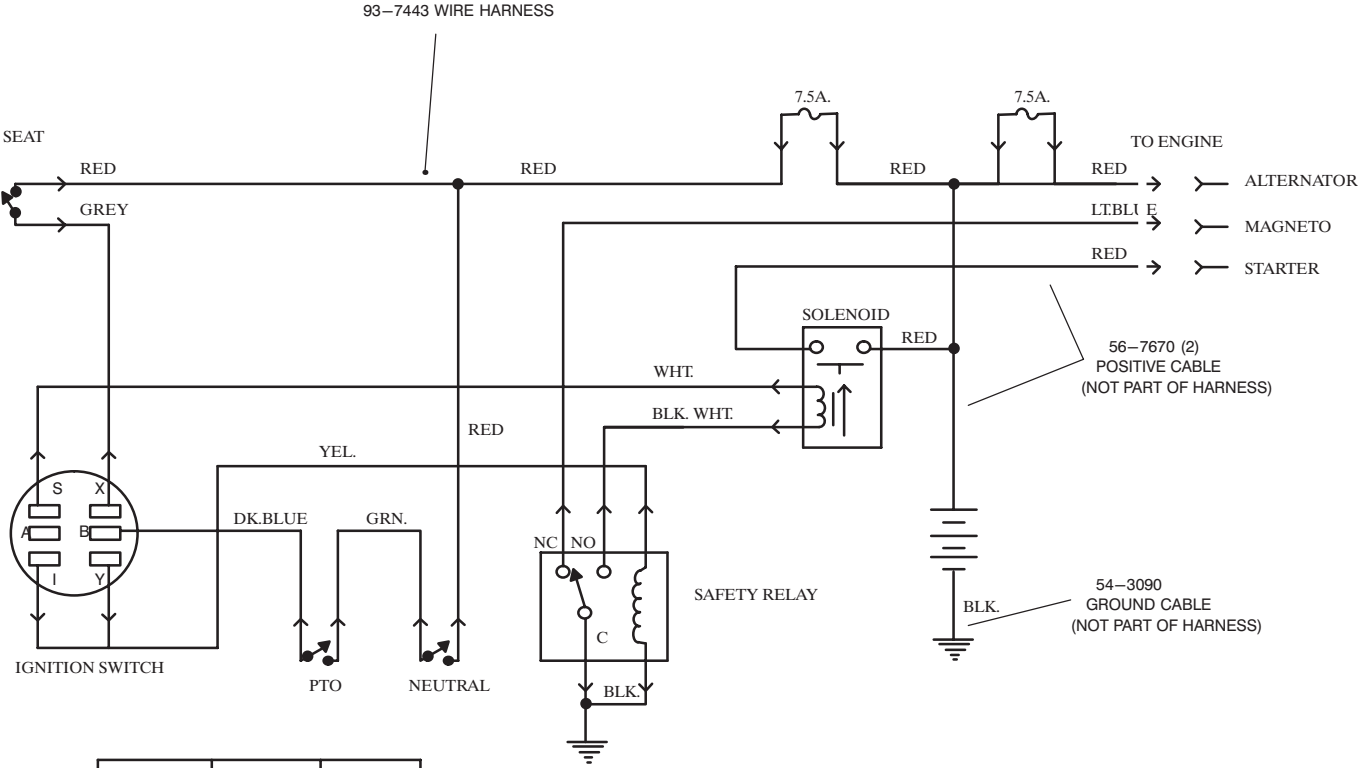

POSITION	CIRCUIT	MAKE
OFF	—	—
RUN	B+I+A	X+Y
START	B+I+S	—

TORO PART NUMBER INDEX

3318—317 REV. A

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
8830	Clamp	4 17 2	56-7240	Bracket — Retaining, Spring	3 3 1
110513	Bearing	2 2 4	56-7400	Arm — Lever, H.O.C.	5 24 1
114621	Decal — Euro Noise	7 10 1	56-7430	Pin — Support	11 22 2
116397	Relay	6 11 1	56-7470	Bracket — Rack, Steering	2 33 1
147665	Screw — Phillips Hd.	6 1 2	56-7500	Shaft — Steering	2 31 1
147665	Screw — Phillips Head	4 1 2	56-7520	Bushing — Sector	2 22 1
3-6498	Washer — Thrust	2 5 5	56-7530	Bolt — Shoulder	2 20 1
7-0036	Key — Square	10 24 2	56-7570	Rod — Engagement	3 15 1
12-5820	Pulley — Idler	9 35 1	56-7650	Tube — Pivot	3 14 1
12-8819	Loose Parts	1 * 1	56-7670	Cable — Battery, Positive	9 21 1
12-8829	Loose Parts	1 * 1	56-7670	Cable — Positive	6 17 1
12-9020	Retainer — Belt	9 34 1	56-7710	Hold Down — Battery	8 26 1
14-9999	Deck — Cutting, Recycler	12 49 1	56-7720	Post — Battery	8 21 1
19-1470	Bolt — Shoulder	5 20 1	57-4060	Retainer — Front	9 16 1
26-0671	Bolt — Blade	12 39 1	57-4070	Retainer — Rear	9 20 1
27-9080	Bearing — Flange	2 15 4	57-9940	Spring — Brake	10 17 1
28-0380	Spacer — Axle, Front	2 24 1	60-9730	Guide — Belt	12 26 2
28-0540	Bolt — Shoulder	5 8 1	61-9760	Wheel — Deck	12 32 2
28-2480	Washer	10 15 4	61-9780	Cap — Hub	10 14 2
28-2480	Washer	2 43 2	61-9780	Cap — Hub	2 44 2
28-7350	Post — Pivot	12 16 1	62-3760	Screw — Cap Hex. Hd.	9 27 1
28-8070	Lanyard	13 55 1	62-3930	Spring — Extension	5 5 1
28-8080	Boot — Terminal	8 22 1	62-3930	Spring — Extension	3 6 1
28-8130	Pin — Chute, Locking	13 54 1	62-4300	Pad — Battery	8 25 1
38-1420	Switch — Interlock	7 2 1	62-5480	Isolator — Seat	7 11 4
40-6230	Spring — Torsion	12 51 1	62-5490	Support — Fuel Line	9 10 1
46-6290	O-Ring	13 59 1	63-5540	Base — Seat	7 3 1
47-0010	Arm — Suspension, Front	2 13 2	63-5670	Tube — Bumper, Seat Rod	7 7 1
47-0540	Pedal	3 19 2	63-5830	Link — Suspension, Deck	5 16 2
47-0550	Bracket — Brake, Pedal	3 17 1	63-8360	Key	4 6 1
47-0560	Bracket — Clutch, Pedal	3 12 1	65-2920	Pad — Pedal, Foot	3 5 2
47-0570	Spacer — Pedal	3 16 3	65-5670	Bolt — Shoulder	5 21 1
47-0590	Spindle — L.H.	2 * 1	65-5670	Screw — Shoulder	8 34 1
47-0600	Spindle — R.H.	2 4 1	66-6740	Cover — Shaft, Steering	4 2 1
47-0610	Tie Rod — Adjustable	2 34 1	76-1540	Arm — Suspension R.H.	11 16 1
47-0700	Bearing — Flange	2 27 1	76-1550	Arm — Suspension L.H.	11 * 1
47-0760	Support — Axle, Front	2 11 1	76-1560	Spacer	11 13 4
47-0770	Shaft — Pivot, Pedal	3 8 1	80-2310	Bracket — Bell Crank Mount	5 2 1
47-0780	Retainer — Shaft	3 9 1	80-2321	Bracket — H.O.C., Engage	5 15 1
47-0930	Footrest — R.H.	1 22 1	80-2330	Link — Bell Crank	8 35 1
47-0940	Footrest — L.H.	1 16 1	80-2340	Bracket — Pivot, Inner	8 6 1
47-0960	Spring — Compression	12 3 1	80-2350	Pivot — Outer	8 4 1
47-1140	Retainer — Spring, Top	12 2 2	80-2360	Crank — Bell, Deck Engage	5 22 1
47-1180	Bracket — Engagement	12 1 1	80-2370	Shaft W.A. — Pivot	8 5 1
47-1200	Shaft — Adjusting	12 4 1	80-2400	Lever W.A. — Engage	8 2 1
47-1290	Brake — Parking	1 10 1	80-2430	Axle — Front	2 18 1
47-1840	Bracket — Height-of-Cut	5 13 1	80-2450	Rack — Steering	2 19 1
47-1850	Lever — Height-of-Cut	5 6 1	80-2460	Tie Rod — Fixed	2 * 1
47-1910	Solenoid	6 12 1	80-2530	Assembly — Brake	12 50 1
47-2060	Bracket — Brake, Parking	1 19 1	80-2550	Pad — Brake	12 6 1
47-2961	Hose — Fuel Line	9 9 1	80-2560	Plate — Deck, Brake Mtg.	12 47 1
49-3242	Assy. — Wheel, Steering	4 5 1	80-2570	Pin — Clevis	12 5 2
54-3090	Wire Assembly	4 25 1	80-2580	Rod — Adjusting	12 52 1
55-3570	Cap — Fuel	9 14 1	80-2600	Battery — 12 Volt	8 24 1
56-2540	Tube — Vent, Battery	8 37 1	80-2620	Rod — Base, Seat	7 8 1
56-6590	Bolt — Wheel	12 33 2	80-2630	Kicker — 32	12 29 4
56-7030	Body — Spindle	12 44 1	80-4350	Shaft — Spindle	12 41 1
56-7050	Tank — Fuel	9 15 1	80-4370	Shield — Bearing	12 42 1
56-7070	Spring — Torsion, Clutch	3 11 1	80-4390	Spacer — Hardened	12 43 1
56-7080	Spring — Torsion, Brake	3 18 1	80-4430	Blade — Recycler	12 40 1
56-7130	Tower — Front	1 4 1	80-4470	Pulley	12 22 1
56-7140	Tower — Rear	1 8 1	80-4490	Ring — Deck	12 48 4
56-7170	Guide — Shaft, Steering	1 6 1	80-4570	Stiffener — Blade	12 37 1
56-7180	Cover — Front	2 30 1	82-6150	Assy. — Cover, Discharge	12 14 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
83-7010	Brace - Cover, Rear	12 17 1	93-7446	Guard - Muffler	9 38 1
83-7020	Spacer - Bearing	12 25 1	93-7694	Deflector Ass'y	14 9 1
88-3950	Assembly - Seat	7 1 1	93-7696	Kicker - CE	14 6 2
88-4490	Reducer - Throttle	9 * 1	93-9354	Decal - Battery	8 40 1
88-4540	Hinge - Deflector Danger	14 12 1	94-1277	Screw	9 40 1
88-6150	Rod - Deflector Hinge	14 11 1	94-1278	Screw	9 39 3
88-6160	Spring - Torsion	14 10 1	94-3516	Decal - L.H.	5 10 1
88-9730	Rim	10 12 2	95-2747	Fitting - Washout	13 58 1
88-9800	Cover - Gate, Shift	6 24 1	95-7850	Deck Assembly	12 49 1
88-9830	Switch - Ignition	4 10 1	217-80	Rim	2 3 2
88-9930	Switch - Micro, Short	6 4 1	218-461	Nut - Lock	4 7 1
88-9931	Switch - Micro	4 24 1	218-560	Cap - Battery	8 28 6
92-0860	Frame	6 14 1	231-116	Tire	2 42 2
92-0861	Frame - Rear	11 8 1	231-117	Tire	10 10 2
92-0862	Transaxle	10 8 1	232-27	Stem - Valve	10 16 2
92-0864	Standbar	11 5 1	232-27	Valve Stem w/Cap	2 41 2
92-0865	Support - Axle	11 9 2	232-39	Tube - Inner	10 11 2
92-0866	Body W.A. - Seat Support	6 8 1	232-44	Tube - Inner	2 { 2
92-0870	V-Belt - Traction	10 4 1	233-25	Knob	4 13 1
92-0871	Rod - Traction	9 29 1	233-48	Knob	8 1 2
92-0872	Rod - Brake	10 18 1	233-48	Knob	5 19 1
92-0873	Pulley - Engine	9 24 1	237-143	O-Ring	8 27 2
92-0874	Pulley	10 7 1	2411-32	Ball Joint	8 31 1
92-0875	V-Belt	12 24 1	2412-68	Clamp - Wire	7 4 1
92-0876	Guard - Front	2 37 1	2412-98	Clamp - Hose	9 8 2
92-0877	Panel - Seat Base, R.H.	6 21 1	251-297	Bearing	12 21 2
92-0878	Panel L.H. - Base, Seat	5 9 1	257-11	Washer	8 18 1
92-0879	Spring	9 1 1	283-2	Pin - Clevis	2 16 2
92-0880	Arm - Shift, Transaxle	10 23 1	283-2	Pin - Clevis	12 45 2
92-0881	Bracket W.A. - Traction	9 4 1	283-42	Pin - Clevis	11 18 2
92-0883	Plate - Mounting, Idler	9 2 1	283-52	Pin - Clevis	1 20 1
92-0884	Lever W.A. - Shaft	8 10 1	288-10	Cap - Pipe	9 22 1
92-0887	Support - Shift, Lower	8 19 1	289-19	Nipple - Pipe	9 23 1
92-0888	Support - Shift, Upper	8 14 1	302-5	Fitting - Grease	2 1 2
92-0889	Link - Shift	10 1 1	302-5	Fitting - Grease	2 17 2
92-0890	Control - Throttle	4 15 1	302-5	Fitting - Grease	10 25 2
92-0891	Shaft W. A. - Shift	8 16 1	321-4	Screw - Cap Hex. Hd.	12 8 1
92-0894	Spring - Torsion	8 11 1	321-4	Screw - Cap Hex. Hd.	3 10 1
92-0895	Gate - Shift	6 3 1	321-4	Screw - Cap Hex. Hd.	5 11 4
92-0896	Retainer - Spring	8 29 1	321-4	Screw - Cap Hex. Hd.	8 12 2
92-0897	Spacer	11 1 1	321-4	Screw - Cap Hex. Hd.	6 13 2
92-0898	Guide - Belt	11 2 1	321-4	Screw - Cap Hex. Hd.	1 21 2
92-0899	Guide - Belt, Lower	10 21 1	322-5	Screw - Cap Hex. Hd.	3 2 1
92-2493	Spring - Torsion	14 3 1	322-5	Screw - Cap Hex. Hd.	11 6 15
92-7974	Tread - Foot R.H.	1 * 1	322-5	Screw - Cap Hex. Hd.	6 6 2
92-7975	Tread - Foot L.H.	1 15 1	322-5	Screw - Cap Hex. Hd.	3 7 2
92-7982	Decal - Control Panel	5 27 1	322-5	Screw - Cap Hex. Hd.	8 8 4
92-7983	Decal - Deck Engage	4 9 1	322-5	Screw - Cap Hex. Hd.	12 9 6
92-7984	Decal - H.O.C.	4 21 1	322-5	Screw - Cap Hex. Hd.	2 9 8
92-7987	Decal - Recycler	1 3 1	322-5	Screw - Cap Hex. Hd.	5 12 2
92-7988	Decal - Recycler	12 35 1	322-5	Screw - Cap Hex. Hd.	1 14 10
92-7990	Insert - Wheel, Steering	4 4 1	322-5	Screw - Cap Hex. Hd.	4 16 8
92-8757	Decal - Engine	9 37 1	322-6	Screw - Cap Hex. Hd.	12 20 1
92-8916	Bolt - Shoulder	14 8 1	322-7	Screw - Cap Hex. Hd.	9 28 4
93-0231	Screw - Pan Hd.	14 4 4	322-12	Screw - Cap Hex. Hd.	11 10 4
93-3190	Boot - Terminal	6 25 1	322-14	Screw - Cap Hex. Hd.	11 11 2
93-6668	Decal - Battery Charging	8 38 1	322-50	Screw - Cap Hex. Hd.	11 4 1
93-7006	Decal - Instructions	4 23 1	323-9	Screw - Cap Hex. Hd.	9 32 1
93-7007	Decal - Shift Pattern	6 2 1	323-9	Screw - Hex Hd. Cap	11 21 2
93-7008	Decal - Brake, Parking	1 9 1	323-14	Screw - Hex Hd. Cap	11 17 2
93-7009	Decal - Deflector Danger	14 5 1	325-6	Screw - Cap Hex. Hd.	2 8 1
93-7010	Decal - Danger	14 7 1	329-4	Screw - Cap Hex. Hd.	10 3 1
93-7010	Decal - Danger	12 34 1	3218-1	Nut - Jam	6 18 3
93-7276	Decal - Danger	8 39 1	3219-7	Nut - Hex. Hd.	12 23 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3220-2	Nut - Hex. Jam	2 7 1	3296-8	Nut - Lock	2 12 1
3229-1	Bolt - Carriage	13 60 2	3296-8	Nut - Lock	5 23 1
3230-18	Bolt - Carriage	2 32 2	3296-8	Nut - Lock	8 36 1
3253-3	Washer - Lock	10 2 1	3296-8	Nut - Lock	12 46 1
3253-3	Washer - Lock	6 16 2	3296-16	Nut - Lock	13 62 2
3253-3	Washer - Lock	9 18 2	3296-29	Nut - Lock	5 1 7
3253-6	Washer - Lock	9 26 1	3296-29	Nut - Lock	1 2 14
3254-2	Washer - Lock, Int. Tooth	9 5 3	3296-29	Nut - Lock	11 3 17
3254-2	Washer - Lock, Int. Tooth	10 20 1	3296-29	Nut - Lock	3 4 3
3254-5	Washer - Lock, Int. Tooth	4 8 1	3296-29	Nut - Lock	6 5 2
3256-1	Washer - Flat	13 61 2	3296-29	Nut - Lock	9 6 2
3256-14	Washer - Flat	6 9 1	3296-29	Nut - Lock	2 10 8
3256-22	Washer - Flat	8 13 2	3296-29	Nut - Lock	10 19 1
3256-22	Washer - Flat	1 18 2	3296-29	Nut - Lock	12 19 24
3256-22	Washer - Flat	9 30 1	3296-29	Nut - Lock	4 19 4
3256-23	Washer - Flat	11 7 12	3296-29	Nut - Lock	8 32 4
3256-23	Washer - Flat	6 7 2	3296-39	Nut - Lock	9 3 1
3256-23	Washer - Flat	1 13 8	3296-39	Nut - Lock	11 19 2
3256-23	Washer - Flat	5 17 4	3296-39	Nut - Lock	12 31 2
3256-23	Washer - Flat	4 18 7	3296-42	Nut - Lock	14 1 1
3256-23	Washer - Flat	2 23 6	3296-42	Nut - Lock	6 15 2
3256-23	Washer - Flat	12 27 4	3296-42	Nut - Lock	8 15 2
3256-23	Washer - Flat	8 33 2	3296-42	Nut - Lock	1 17 2
3256-24	Washer - Flat	1 11 1	3296-42	Nut - Lock	5 18 1
3256-24	Washer - Flat	11 15 4	3296-47	Nut - Lock	11 12 1
3256-24	Washer - Flat	9 33 1	3296-59	Nut - Lock	11 14 3
3256-25	Washer - Flat	9 25 1	3296-59	Nut - Lock	12 15 1
3256-26	Washer - Flat	5 25 2	32103-2	Nut - Wing	12 18 1
3256-27	Washer - Flat	3 13 3	32103-12	Nut - Wing	8 20 1
3256-35	Washer - Flat	1 1 4	32103-22	Nut - Wing	8 23 2
3256-49	Washer - Flat	13 56 1	32104-76	Screw - Self Tap Acorn Hd.	1 5 9
3256-57	Washer - Flat	9 36 1	32104-76	Screw - Self-Tapping	4 14 2
3256-58	Washer - Fender	14 2 1	32107-11	Nut - Square	9 17 2
3257-23	Key	10 6 1	32120-47	Ring - Retaining	8 7 1
3272-6	Pin - Cotter	3 1 3	32120-64	Ring - Retaining	10 5 1
3272-6	Pin - Cotter	5 4 2	32121-9	Pin - Roll	2 28 1
3272-6	Pin - Cotter	1 12 1	32121-16	Pin - Roll	8 17 1
3272-6	Pin - Cotter	2 14 2	32121-25	Pin - Roll	8 3 1
3272-6	Pin - Cotter	10 22 1	32121-78	Pin - Roll	4 3 1
3272-6	Pin - Cotter	9 31 1	32121-78	Pin - Roll	8 9 1
3272-6	Pin - Cotter	12 36 2	32122-14	Screw - Truss, Phillips Hd.	12 38 8
3272-12	Pin - Cotter	2 45 2	32128-20	Nut - Flange Hd.	7 5 4
3272-16	Pin - Cotter	10 9 1	32128-21	Nut - Lock, Flange Hd.	2 25 1
3274-51	Screw - Hex. Socket Hd.	9 19 2	32128-23	Nut - Lock, Flange Hd.	2 26 1
3290-134	Screw - Machine	6 10 1	32144-4	Screw - Special	2 21 2
3290-191	Nut - Speed	6 23 2	32144-14	Screw	9 12 2
3290-282	Rivet	12 7 2	32144-14	Screw - Thread Forming	2 38 2
3290-282	Rivet	13 53 2	32144-112	Screw - Sems	6 22 2
3290-307	Pin - Cotter, Hair	7 9 1	32151-48	Ring - Retaining	10 13 2
3290-354	Nut - Double	6 20 1	32151-48	Ring - Retaining, External	2 35 2
3290-354	Nut - Double	4 22 1	32151-61	Ring - Retaining	5 14 2
3290-378	Tie - Cable	7 6 1			
3290-378	Tie - Cable	4 26 1			
3290-413	Washer - Belleville	5 7 8			
3290-465	Washer - Belleville	13 57 1			
3290-496	Nut - Retainer	12 28 4			
3296-2	Nut - Lock	6 19 1			
3296-4	Nut - Lock	8 30 1			
3296-4	Nut - Lock	2 36 4			

OPTIONAL EQUIPMENT

Easy Empty Bagging Kit Model No. 79095

Twin Bag Bagger Kit Model No. 79085

Tire Chains Part No. 23-2340

Wet Grass Bagging Kit Part No. 38-5730

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

[illegible]

MAINTENANCE RECORD

[illegible]