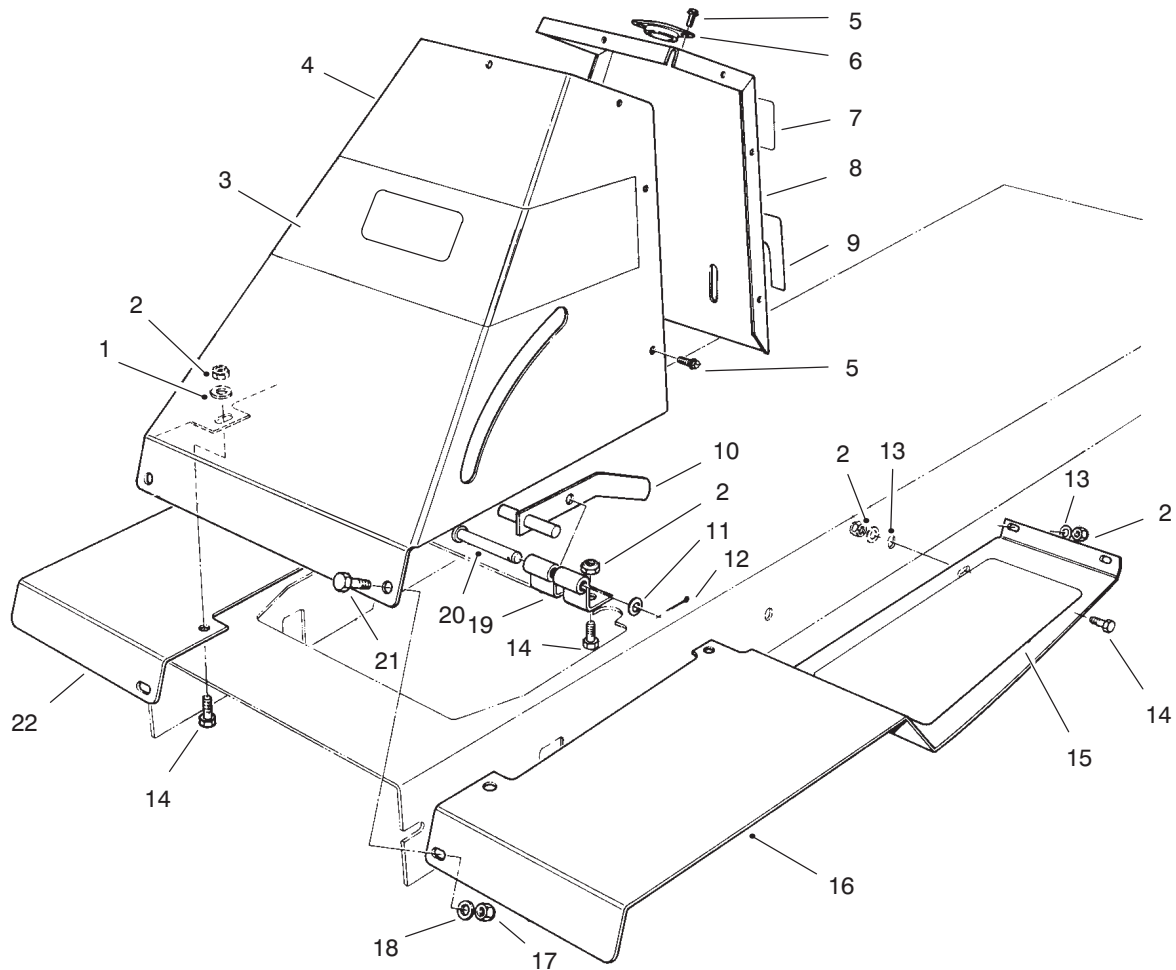


TORO®

MODEL NO. 70081-6900001 & UP

**PARTS
CATALOG****WHEEL HORSE®**
1132 Recycler® Riding Mower

C-1933

FRONT TOWER ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	3256-35	Washer - Flat	4
2	3296-29	Nut - Lock	14
3	92-7987	Decal - Recycler	1
4	56-7130	Tower - Front	1
5	32104-76	Screw - Self Tap Acorn Hd.	9
6	56-7170	Guide - Shaft, Steering	1
7	92-8946	Decal - Danger	1
8	56-7140	Tower - Rear	1
9	56-7810	Decal - Brake, Parking	1
10	47-1290	Brake - Parking	1
11	3256-24	Washer - Flat	1
12	3272-6	Pin - Cotter	1
13	3256-23	Washer - Flat	8

Ref. No.	Part No.	Description	No. Used
14	322-5	Screw - Cap Hex. Hd.	10
15	92-7975	Tread - Foot L.H.	1
*	92-7974	Tread - Foot R.H.	1
16	47-0940	Footrest - L.H.	1
17	3296-42	Nut - Lock	2
18	3256-22	Washer - Flat	2
19	47-2060	Bracket - Brake, Parking	1
20	283-52	Pin - Clevis	1
21	321-4	Screw - Cap Hex. Hd.	2
22	47-0930	Footrest - R.H.	1
*	12-8829	Loose Parts	1
*	12-8819	Loose Parts (Includes Steering Wheel)	1

*Not Illustrated

© The TORO Company -1995
All Rights Reserved

TPS

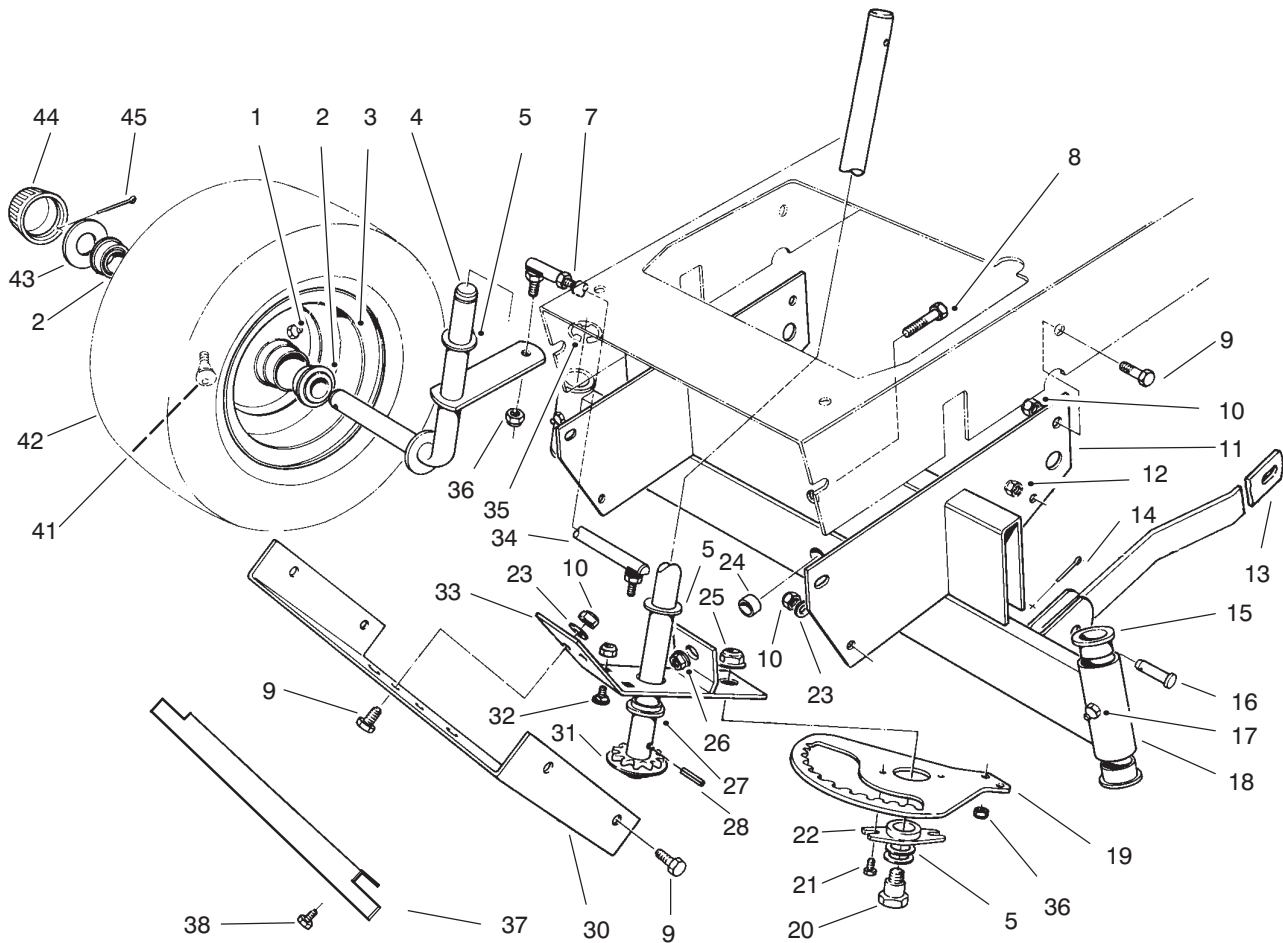

C-0438C


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting - Grease	2
2	110513	Bearing	4
3	217-80	Rim	2
4	47-0600	Spindle - R.H.	1
*	47-0590	Spindle - L.H.	1
5	3-6498	Washer - Thrust	5
7	3220-2	Nut - Hex. Jam	1
8	325-6	Screw - Cap Hex. Hd.	1
9	322-5	Screw - Cap Hex. Hd.	8
10	3296-29	Nut - Lock	8
11	47-0760	Support - Axle, Front	1
12	3296-8	Nut - Lock	1
13	47-0010	Arm - Suspension, Front	2
14	3272-6	Pin - Cotter	2
15	27-9080	Bearing - Flange	4
16	283-2	Pin - Clevis	2
17	302-49	Fitting - Grease	2
18	80-2430	Axle - Front (Incl. Ref. #15 & 17)	1
19	80-2450	Rack - Steering	1
20	56-7530	Bolt - Shoulder	1
21	32144-4	Screw - Special	2
22	56-7520	Bushing - Sector	1
23	3256-23	Washer - Flat	6

Ref. No.	Part No.	Description	No. Used
24	28-0380	Spacer - Axle, Front	1
25	32128-21	Nut - Lock, Flange Hd.	1
26	32128-23	Nut - Lock, Flange Hd.	1
27	47-0700	Bearing - Flange	1
28	32121-9	Pin - Roll	1
30	56-7180	Cover - Front	1
31	56-7500	Shaft - Steering	1
32	3230-18	Bolt - Carriage	2
33	56-7470	Bracket - Rack, Steering (Incl. Ref. #27)	1
34	47-0610	Tie Rod - Adjustable (Incl. Ref. #7)	1
*	80-2460	Tie Rod - Fixed	1
35	32151-48	Ring - Retaining, External	2
36	3296-4	Nut - Lock	4
37	92-0876	Guard - Front	1
38	32144-14	Screw - Thread Forming	2
41	232-27	Valve Stem w/Cap	2
42	231-116	Tire	2
43	28-2480	Washer	2
44	61-9780	Cap - Hub	2
45	3272-12	Pin - Cotter	2
†	232-44	Tube - Inner	2

*Not Illustrated


†Service Replacement Part

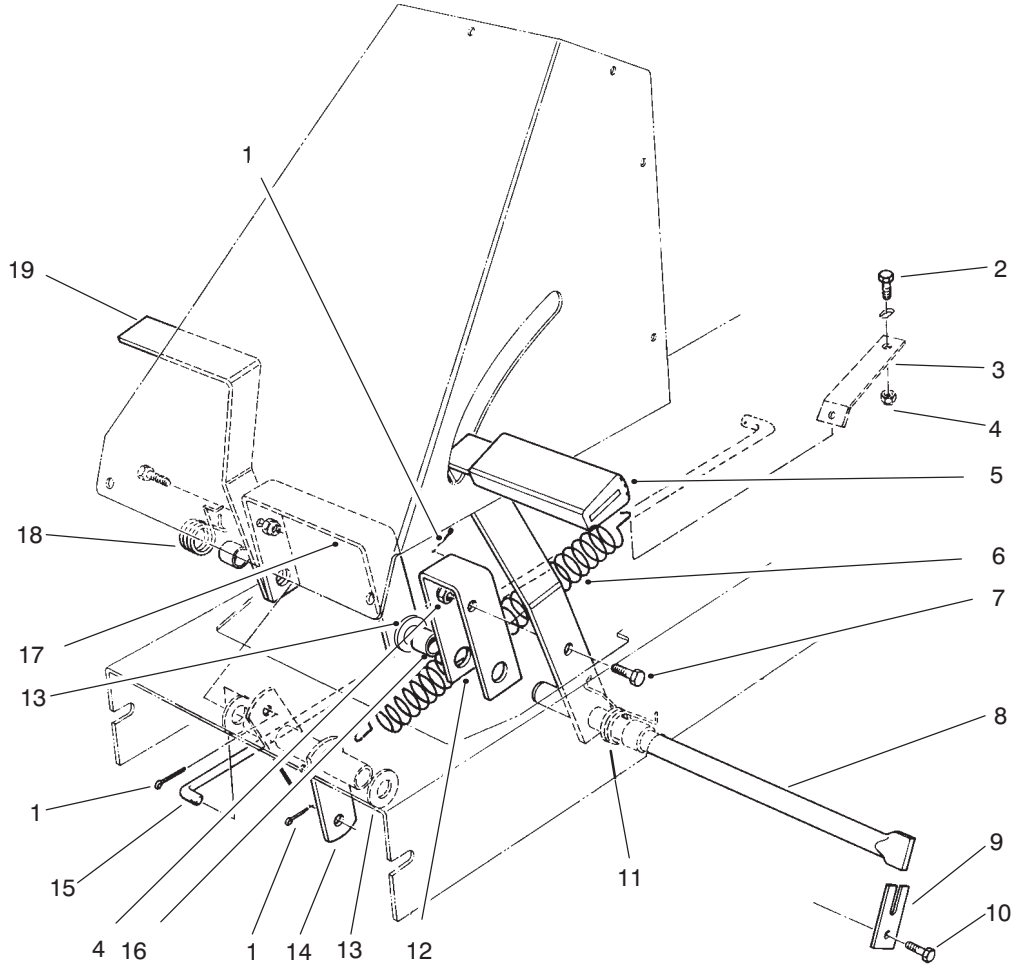

C-0439A

BRAKE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin - Cotter	3	11	56-7070	Spring - Torsion, Clutch	1
2	322-5	Screw - Cap Hex. Hd.	1	12	47-0560	Bracket - Clutch, Pedal	1
3	56-7240	Bracket - Retaining, Spring	1	13	3256-27	Washer - Flat	3
4	3296-29	Nut - Lock	3	14	56-7650	Tube - Pivot	1
5	65-2920	Pad - Pedal, Foot	2	15	56-7570	Rod - Engagement	1
6	62-3930	Spring - Extension	1	16	47-0570	Spacer - Pedal	3
7	322-5	Screw - Cap Hex. Hd.	2	17	47-0550	Bracket - Brake, Pedal	1
8	47-0770	Shaft - Pivot, Pedal	1	18	56-7080	Spring - Torsion, Brake	1
9	47-0780	Retainer - Shaft	1	19	47-0540	Pedal	2
10	321-4	Screw - Cap Hex. Hd.	1				

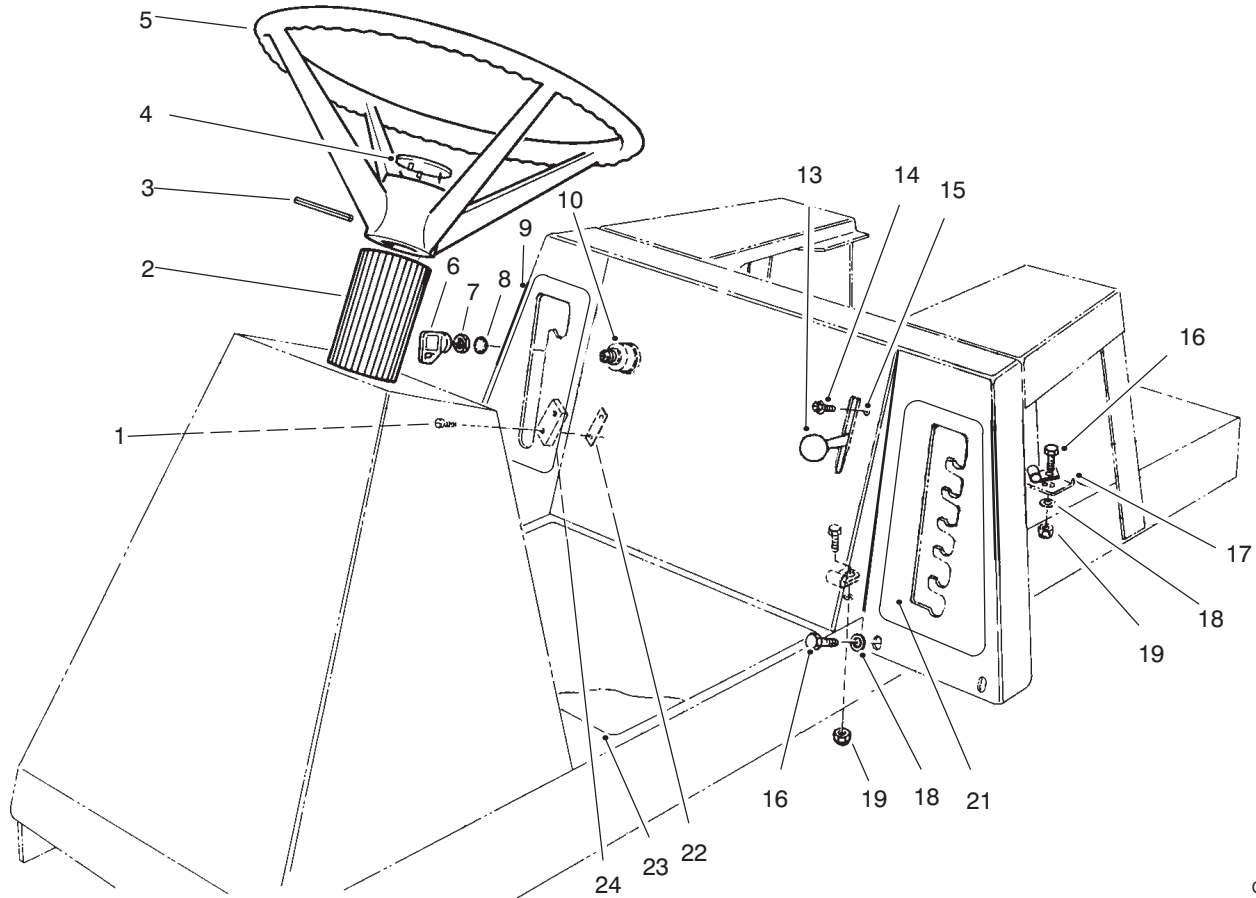


C-1934

STEERING WHEEL, SWITCHES & DECALS

Ref. No.	Part No.	Description	No. Used
1	147665	Screw – Phillips Head	2
2	66-6740	Cover – Shaft, Steering	1
3	32121-78	Pin – Roll	1
4	92-7990	Insert – Wheel, Steering	1
5	49-3242	Assy. – Wheel, Steering (Incl. Ref. #4)	1
6	63-8360	Key	1
7	218-461	Nut – Lock	1
8	3254-5	Washer – Lock, Int. Tooth	1
9	92-7244	Decal – Deck Engage	1
10	88-9830	Switch – Ignition (Incl. Ref. #6-8)	1


Ref. No.	Part No.	Description	No. Used
13	233-25	Knob	1
14	32104-76	Screw – Self-Tapping	2
15	92-0890	Control – Throttle (Incl. Ref. #13)	1
16	322-5	Screw – Cap Hex. Hd.	8
17	2412-68	Clamp	2
18	3256-23	Washer – Flat	7
19	3296-29	Nut – Lock	4
21	92-7245	Decal – H.O.C.	1
22	3290-354	Nut – Double	1
23	76-1090	Decal – Instructions	1
24	88-9931	Switch – Micro	1

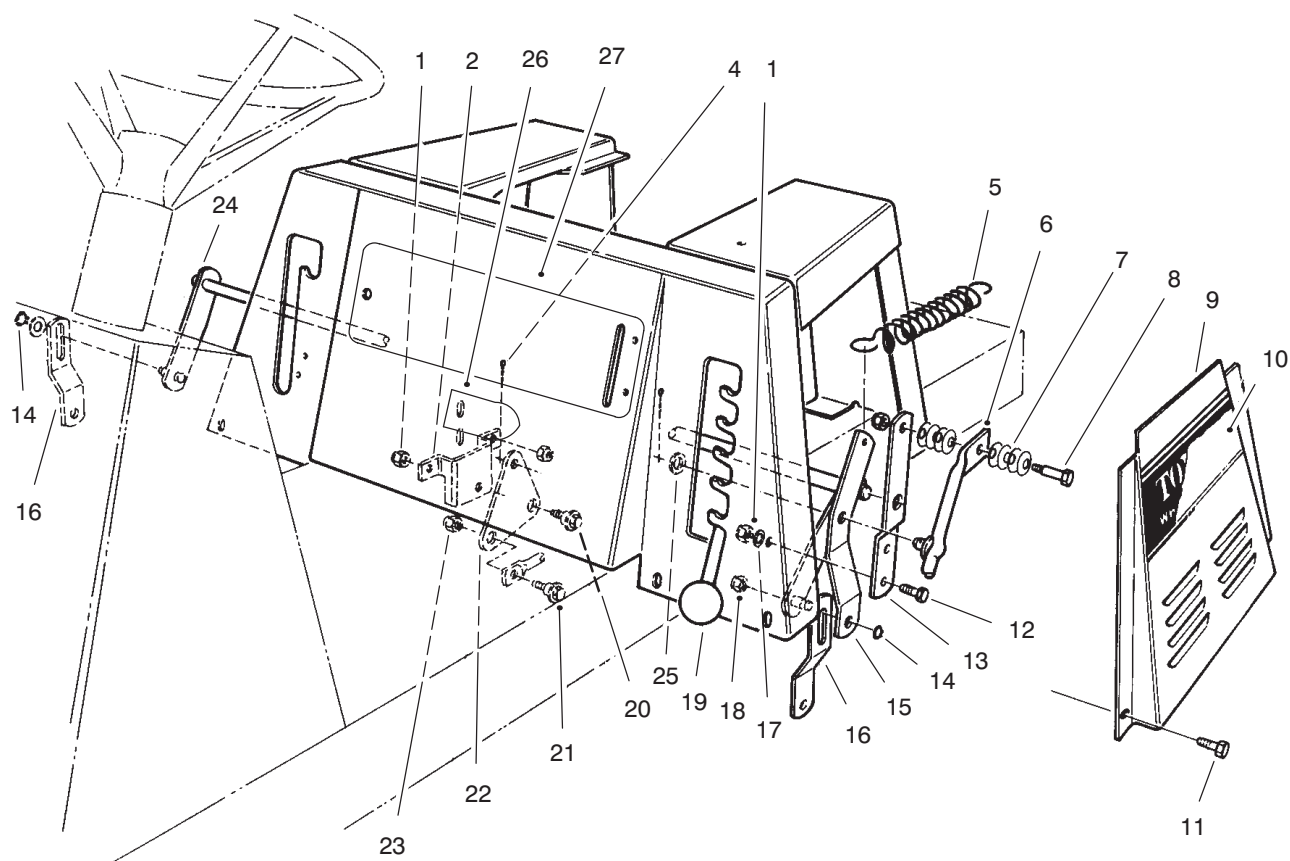

C-1935

LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	7	15	80-2320	Bracket - H.O.C., Engage	1
2	80-2310	Bracket - Bell Crank Mount	1	16	63-5830	Link - Suspension, Deck	2
4	3272-6	Pin - Cotter	2	17	3256-23	Washer - Flat	4
5	62-3930	Spring - Extension	1	18	3296-42	Nut - Lock	1
6	47-1850	Lever - Height-of-Cut	1	19	233-48	Knob	1
7	3290-413	Washer - Belleville	8	20	19-1470	Bolt - Shoulder	1
8	28-0540	Bolt - Shoulder	1	21	65-5670	Bolt - Shoulder	1
9	92-0878	Panel L.H. - Base, Seat	1	22	80-2360	Crank - Bell, Deck Engage	1
10	93-1194	Decal - L.H.	1	23	3296-8	Nut - Lock	1
11	321-4	Screw - Cap Hex. Hd.	4	24	56-7400	Arm - Lever, H.O.C.	1
12	322-5	Screw - Cap Hex. Hd.	2	25	3256-26	Washer - Flat	1
13	47-1840	Bracket - Height-of-Cut	1	26	76-1340	Decal - Made In USA	1
14	32151-61	Ring - Retaining	2	27	92-7243	Decal - Control Panel	1

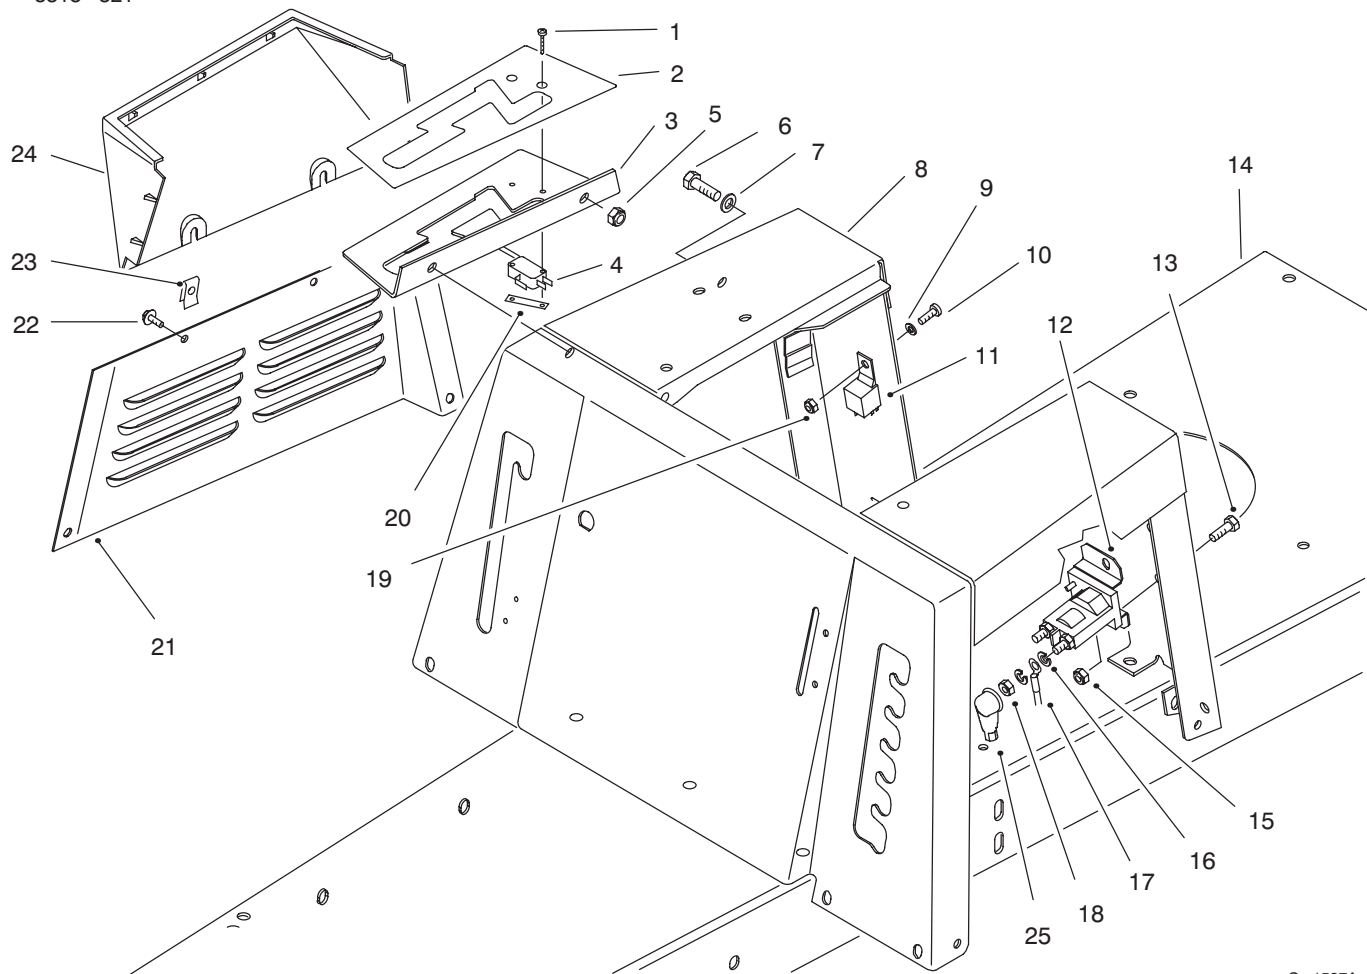


C-1587A

SEAT BODY & SIDE PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	147665	Screw – Phillips Hd.	2
2	92-1751	Decal – Shift Pattern	1
3	92-0895	Gate – Shift	1
4	88-9930	Switch – Micro, Short	1
5	3296-29	Nut – Lock	2
6	322-5	Screw – Cap Hex. Hd.	2
7	3256-23	Washer – Flat	2
8	92-0866	Body W.A. – Seat Support	1
9	3256-14	Washer – Flat	1
10	3290-134	Screw – Machine	1
11	116397	Relay	1
12	47-1910	Solenoid	1
13	321-4	Screw – Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
14	92-0860	Frame	1
15	3296-42	Nut – Lock	2
16	3253-3	Washer – Lock	4
17	56-7670	Cable – Positive	1
18	3218-1	Nut – Jam	2
19	3296-2	Nut – Lock	1
20	3290-354	Nut – Double	1
21	92-0877	Panel – Seat Base, R.H.	1
22	32144-112	Screw – Sems	2
23	3290-191	Nut – Speed	2
24	88-9800	Cover – Gate, Shift	1
25	93-3190	Boot – Terminal Insulator	1

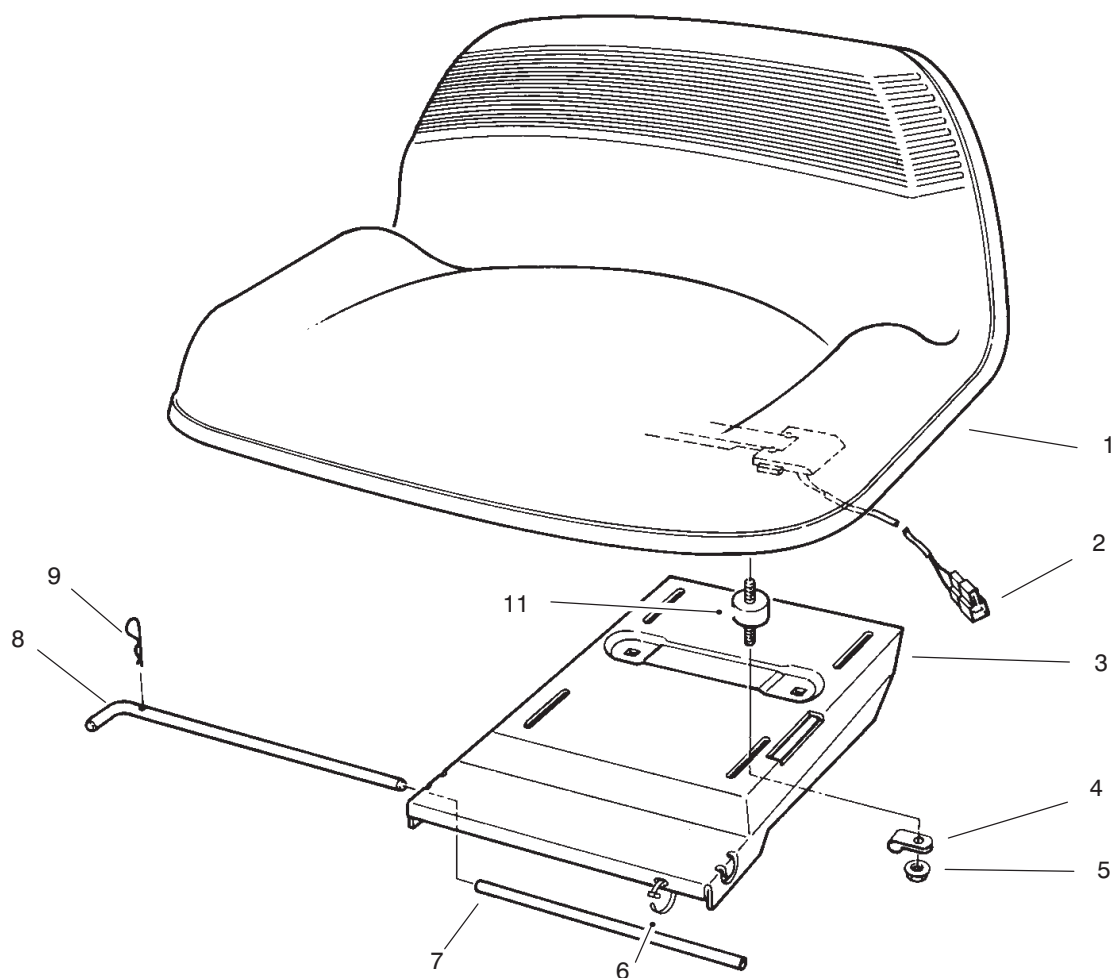


C-1936

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-3950	Assembly - Seat	1
2	38-1420	Switch - Interlock	1
3	63-5540	Base - Seat	1
4	2412-68	Clamp - Wire	1
5	32128-20	Nut - Flange Hd.	4

Ref. No.	Part No.	Description	No. Used
6	3290-378	Tie - Cable	1
7	63-5670	Tube - Bumper, Seat Rod	1
8	80-2620	Rod - Base, Seat	1
9	3290-307	Pin - Cotter, Hair	1
11	62-5480	Isolator - Seat	4

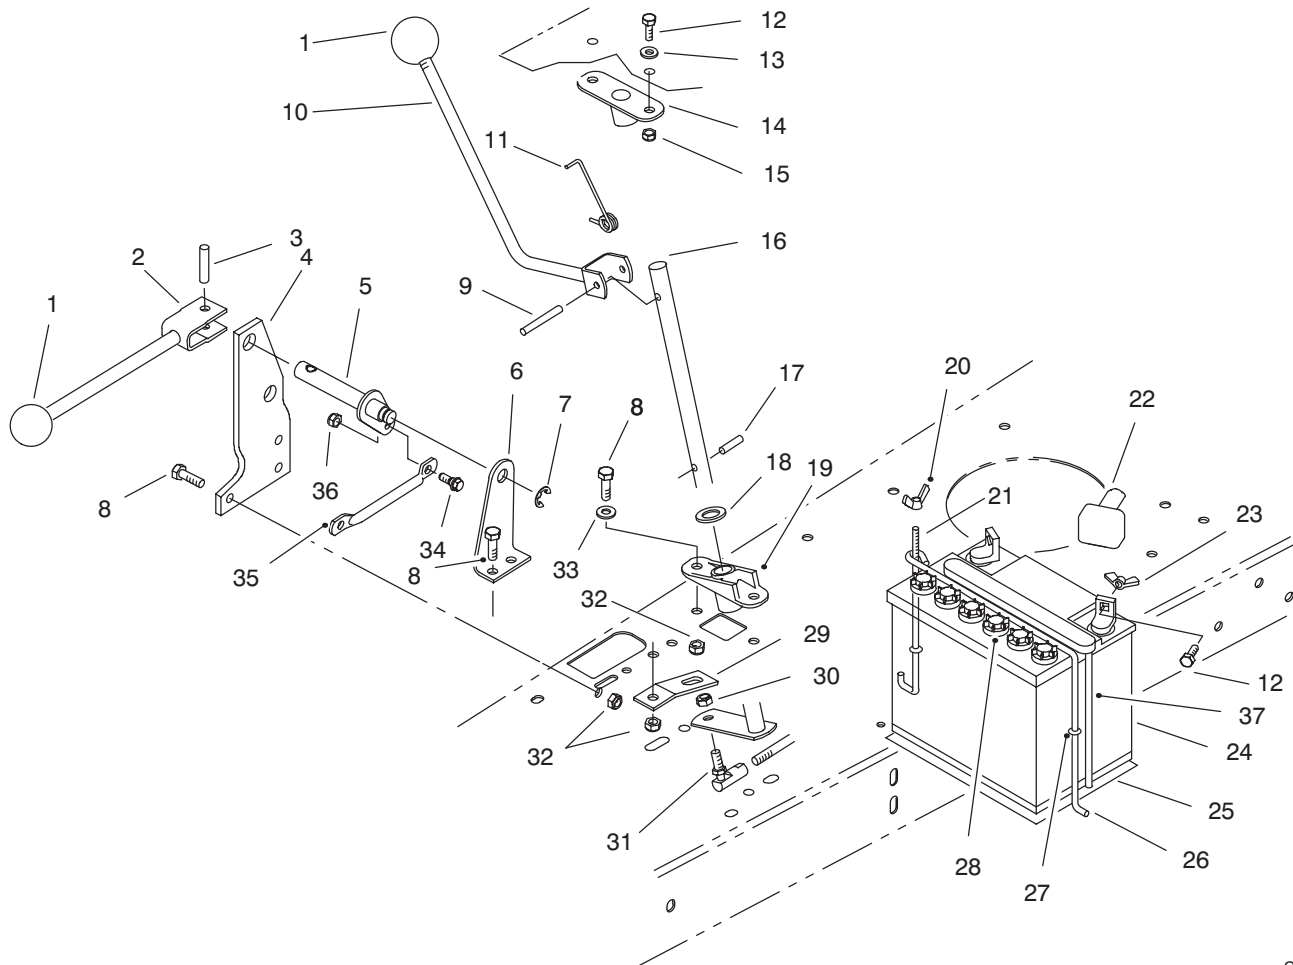


C-1601

TRANSMISSION LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-48	Knob	2
2	80-2400	Lever W.A. - Engage	1
3	32121-25	Pin - Roll	1
4	80-2350	Pivot - Outer	1
5	80-2370	Shaft W.A. - Pivot	1
6	80-2340	Bracket - Pivot, Inner	1
7	32120-47	Ring - Retaining	1
8	322-5	Screw - Cap Hex. Hd.	4
9	32121-78	Pin - Roll	1
10	92-0884	Lever W.A. - Shaft	1
11	92-0894	Spring - Torsion	1
12	321-4	Screw - Cap Hex. Hd.	2
13	3256-22	Washer - Flat	2
14	92-0888	Support - Shift, Upper	1
15	3296-42	Nut - Lock	2
16	92-0891	Shaft W. A. - Shift	1
17	32121-16	Pin - Roll	1
18	257-11	Washer	1
19	92-0887	Support - Shift, Lower	1

Ref. No.	Part No.	Description	No. Used
20	32103-12	Nut - Wing	1
21	56-7720	Post - Battery	1
22	28-8080	Boot - Terminal	1
23	32103-22	Nut - Wing	2
24	80-2600	Battery - 12 Volt (Incl. Ref. #28 & 37)	1
25	62-4300	Pad - Battery	1
26	56-7710	Hold Down - Battery	1
27	237-143	O-Ring	2
28	218-560	Cap - Battery	6
29	92-0896	Retainer - Spring	1
30	3296-4	Nut - Lock	1
31	2411-32	Ball Joint	1
32	3296-29	Nut - Lock	4
33	3256-23	Washer - Flat	2
34	65-5670	Screw - Shoulder	1
35	80-2330	Link - Bell Crank	1
36	3296-8	Nut - Lock	1
37	56-2540	Tube - Vent, Battery	1

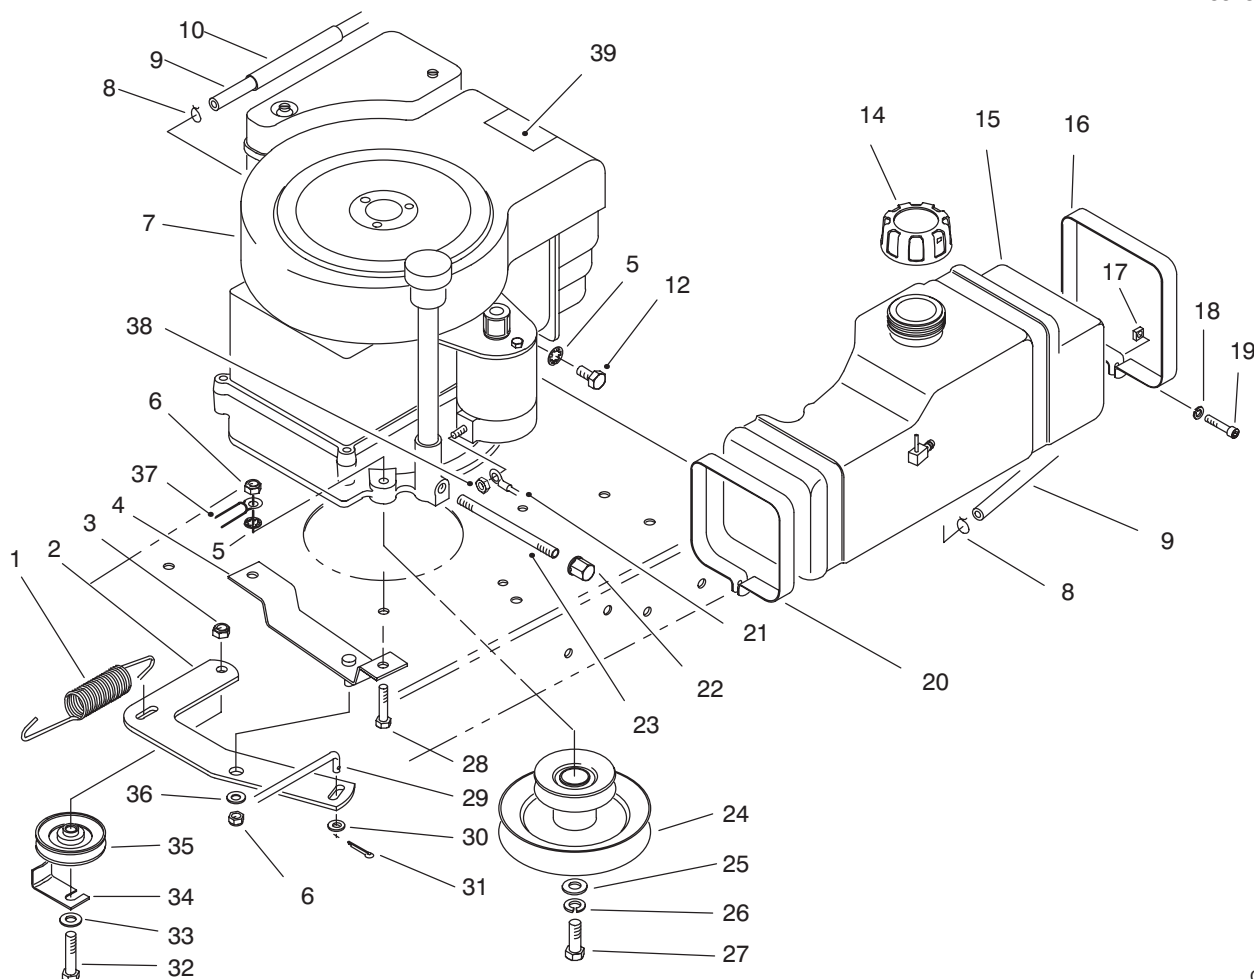


C-2428

ENGINE ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0879	Spring	1	22	288-10	Cap - Pipe	1
2	92-0883	Plate - Mounting, Idler	1	23	289-19	Nipple - Pipe	1
3	3296-39	Nut - Lock	1	24	92-0873	Pulley - Engine	1
4	92-0881	Bracket W.A. - Traction	1	25	3256-25	Washer - Flat	1
5	3254-2	Washer - Lock, Int. Tooth	4	26	3253-6	Washer - Lock	1
6	3296-29	Nut - Lock	2	27	62-3760	Screw - Cap Hex. Hd.	1
7		Engine - 11.5 H.P.	1	28	322-7	Screw - Cap Hex. Hd.	1
8	2412-98	Clamp - Hose	2	29	92-0871	Rod - Traction	1
9	47-2961	Hose - Fuel Line	1	30	3256-22	Washer - Flat	1
10	62-5490	Support - Fuel Line	1	31	3272-6	Pin - Cotter	1
12	32144-14	Screw	2	32	323-9	Screw - Cap Hex. Hd.	1
14	55-3570	Cap - Fuel	1	33	3256-24	Washer - Flat	1
15	56-7050	Tank - Fuel	1	34	12-9020	Retainer - Belt	1
16	57-4060	Retainer - Front	1	35	12-5820	Pulley - Idler	1
17	32107-11	Nut - Square	2	36	3256-57	Washer - Flat	1
18	3253-3	Washer - Lock	2	37	54-3090	Cable - Battery Ground	1
19	3274-51	Screw - Hex. Socket Hd.	2	38	3218-1	Nut - Jam	1
20	57-4070	Retainer - Rear	1	39	93-1192	Decal - Engine	1
21	56-7670	Cable - Battery, Positive	1				

ELECTRICAL SCHEMATIC

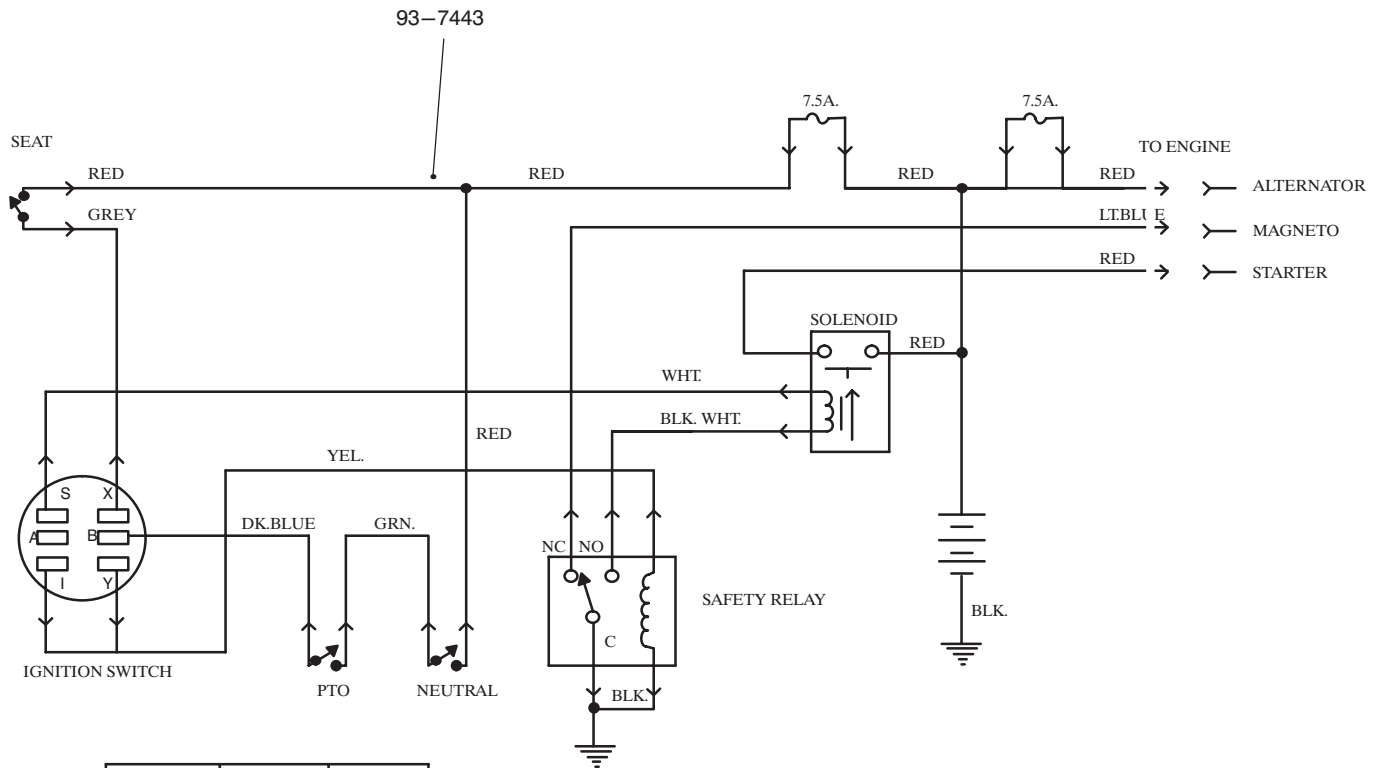


POSITION	CIRCUIT	MAKE
OFF	—	—
RUN	B+I+A	X+Y
START	B+I+S	—

C-2427

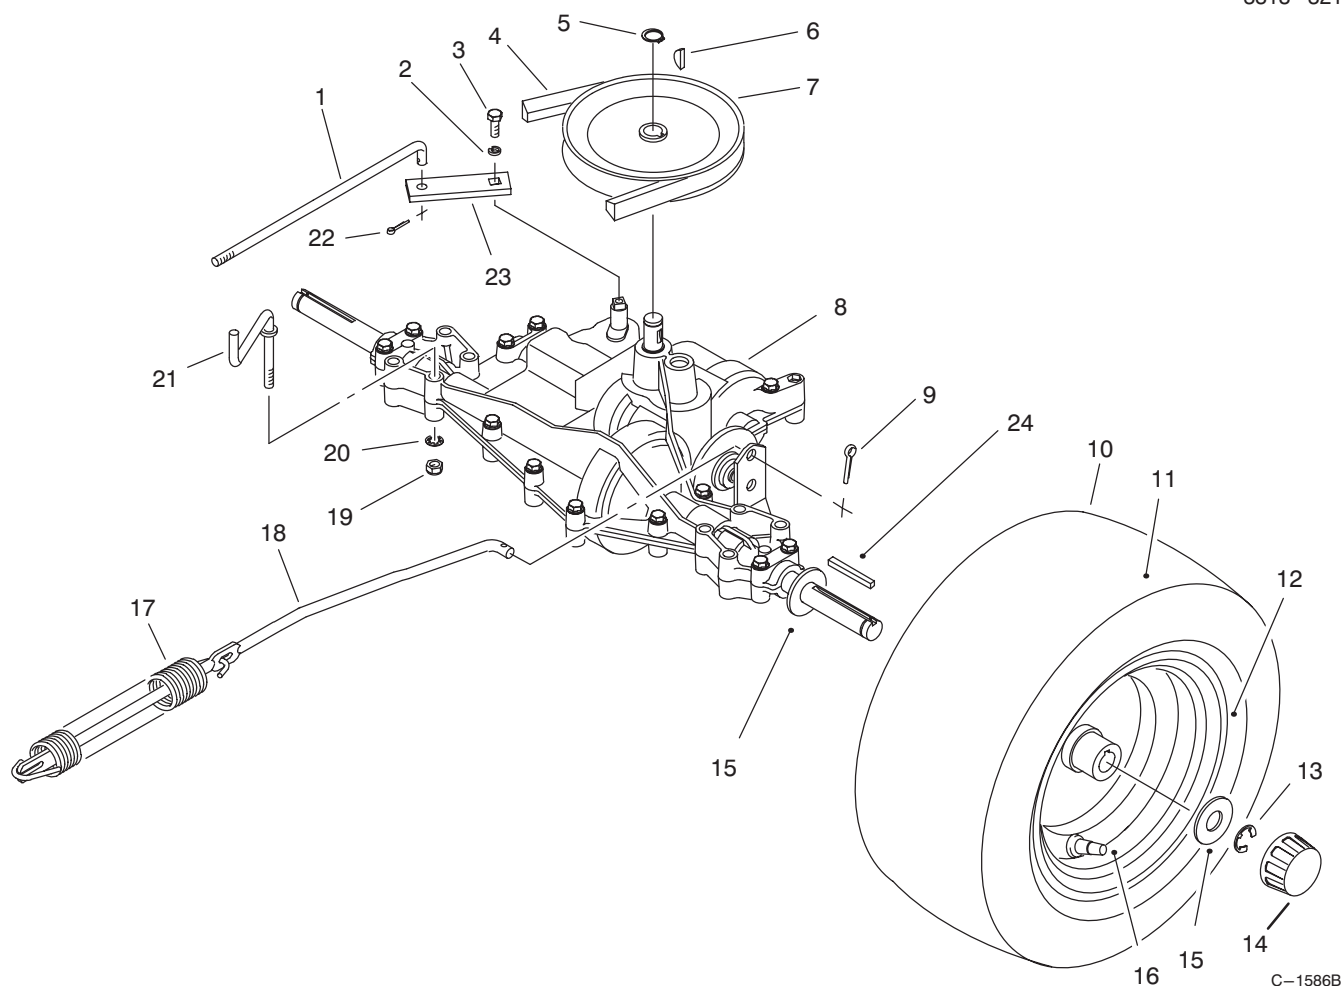

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0889	Link - Shift	1	13	32151-48	Ring - Retaining	2
2	3253-3	Washer - Lock	1	14	61-9780	Cap - Hub	2
3	329-4	Screw - Cap Hex. Hd.	1	15	28-2480	Washer	4
4	92-0870	V-Belt - Traction	1	16	232-27	Stem - Valve	2
5	32120-64	Ring - Retaining	1	17	57-9940	Spring - Brake	1
6	3257-23	Key	1	18	92-0872	Rod - Brake	1
7	92-0874	Pulley	1	19	3296-29	Nut - Lock	1
8	92-0862	Transaxle	1	20	3254-2	Washer - Lock, Int. Tooth	1
9	3272-16	Pin - Cotter	1	21	92-0899	Guide - Belt, Lower	1
10	231-117	Tire	2	22	3272-6	Pin - Cotter	1
11	232-39	Tube - Inner	2	23	92-0880	Arm - Shift, Transaxle	1
12	88-9730	Rim	2	24	7-0036	Key - Square	2

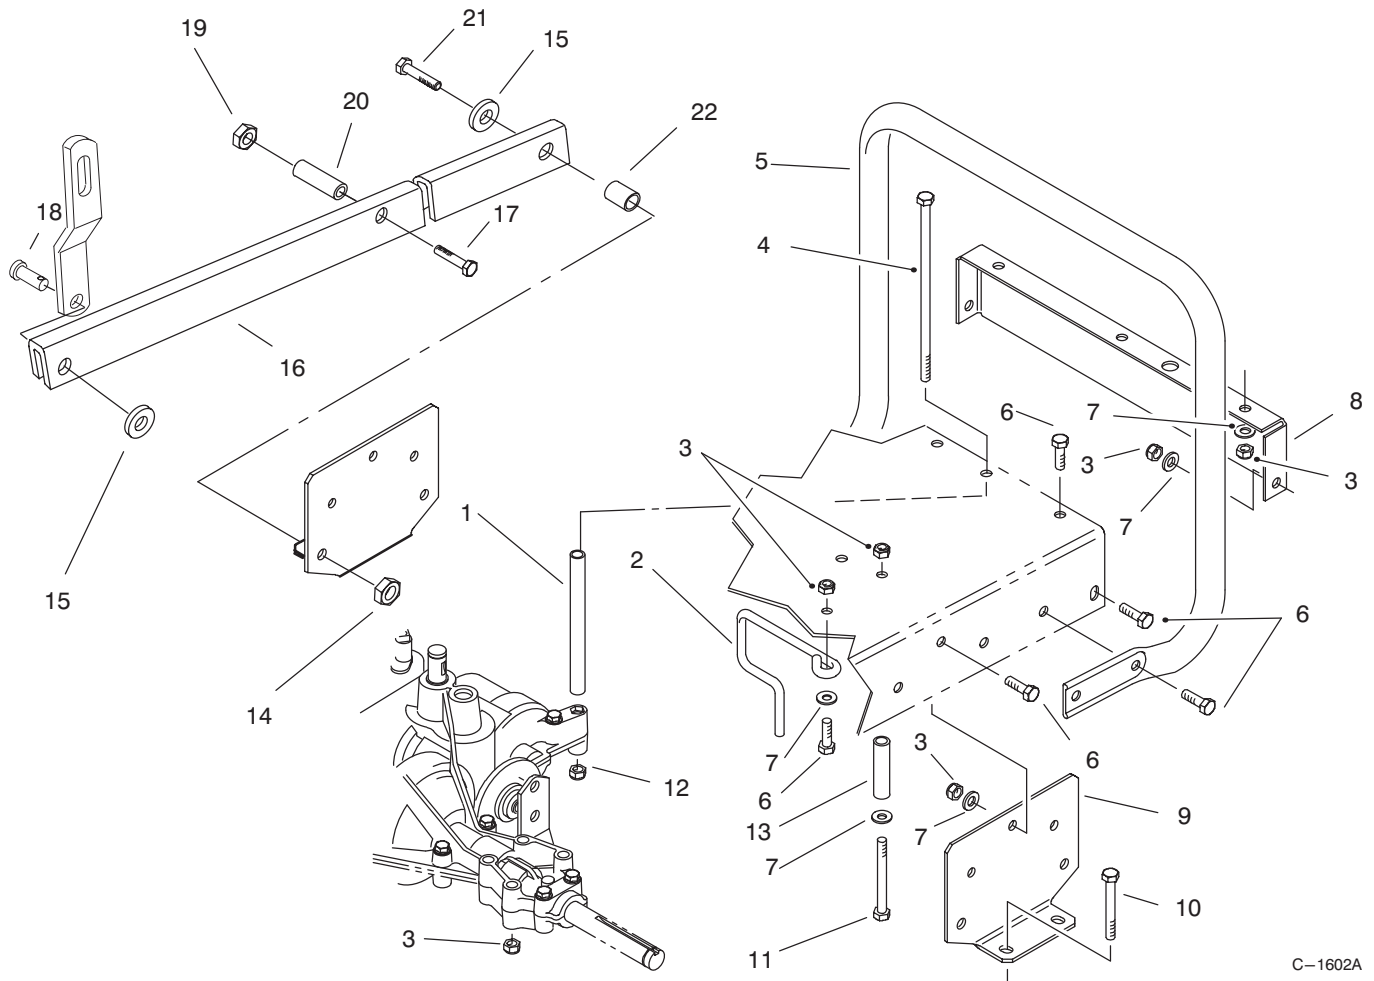


C-1602A

STAND BAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-0897	Spacer	1
2	92-0898	Guide - Belt	1
3	3296-29	Nut - Lock	17
4	322-50	Screw - Cap Hex. Hd.	1
5	92-0864	Standbar	1
6	322-5	Screw - Cap Hex. Hd.	15
7	3256-23	Washer - Flat	12
8	92-0861	Frame - Rear	1
9	92-0865	Support - Axle	2
10	322-12	Screw - Cap Hex. Hd.	4
11	322-14	Screw - Cap Hex. Hd.	2
12	3296-47	Nut - Lock	1

Ref. No.	Part No.	Description	No. Used
13	76-1560	Spacer	2
14	3296-59	Nut - Lock	3
15	3256-24	Washer - Flat	4
16	76-1540	Arm - Suspension R.H.	1
*	76-1550	Arm - Suspension L.H.	1
17	323-14	Screw - Hex Hd. Cap	2
18	283-42	Pin - Clevis	2
19	3296-39	Nut - Lock	1
20	76-1560	Spacer - Split	2
21	323-9	Screw - Hex Hd. Cap	2
22	56-7430	Pin - Support	2

*Not Illustrated

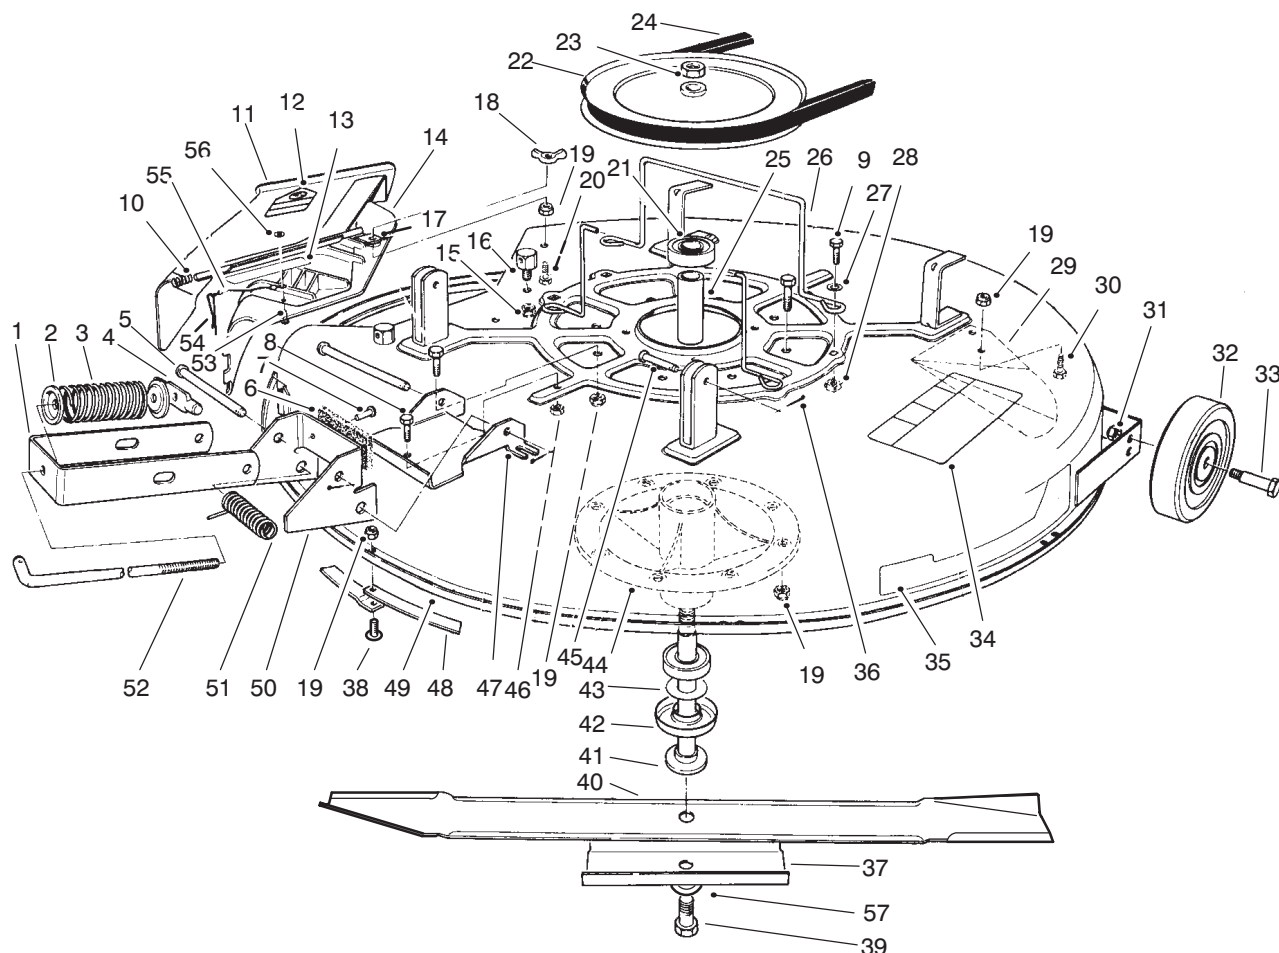


C-0792B

MOWER ASSEMBLY – RECYCLER


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	47-1180	Bracket – Engagement	1	29	80-2630	Kicker – 32"	4
2	47-1140	Retainer – Spring, Top	2	30	322-3	Screw – Cap Hex. Hd.	13
3	47-0960	Spring – Compression	1	31	3296-39	Nut – Lock	2
4	47-1200	Shaft – Adjusting	1	32	61-9760	Wheel – Deck	2
5	80-2570	Pin – Clevis	2	33	56-6590	Bolt – Wheel	2
6	80-2550	Pad – Brake	1	34	66-1340	Decal – Danger	1
7	3290-282	Rivet	2	35	92-9521	Decal – Recycler	1
8	321-4	Screw – Cap Hex. Hd.	1	36	3272-6	Pin – Cotter	2
9	322-5	Screw – Cap Hex. Hd.	6	37	80-4570	Stiffener – Blade	1
10	28-8010	Spring – Torsion	1	38	32122-14	Screw – Truss, Phillips Hd.	8
11	44-5930	Assembly – Deflector (Incl. Ref. #12)	1	39	26-0671	Bolt – Blade	1
12	93-1122	Decal – Caution, Deflector	1	40	80-4430	Blade – Recycler	1
13	68-3650	Decal – Warning, Deflector	1	41	80-4350	Shaft – Spindle	1
14	82-6150	Assy. – Cover, Discharge (Incl. Ref. #53-56)	1	42	80-4370	Shield – Bearing	1
15	3296-59	Nut – Lock	1	43	80-4390	Spacer – Hardened	1
16	28-7350	Post – Pivot	1	44	56-7030	Body – Spindle	1
17	83-7010	Brace – Cover, Rear	1	45	283-2	Pin – Clevis	2
18	32103-2	Nut – Wing	1	46	3296-8	Nut – Lock	1
19	3296-29	Nut – Lock	24	47	80-2560	Plate – Deck, Brake Mtg.	1
20	322-6	Screw – Cap Hex. Hd.	1	48	80-4490	Ring – Deck	4
21	251-297	Bearing	2	49	14-9999	Deck – Recycler (Incl. Ref. # 13, & 34)	1
22	80-4470	Pulley	1	50	80-2530	Brake Ass'y (Incl. Ref. #6-7)	1
23	3219-7	Nut – Hex. Hd.	1	51	40-6230	Spring – Torsion	1
24	92-0875	V-Belt	1	52	80-2580	Rod – Adjusting	1
25	83-7020	Spacer – Bearing	1	53	3290-282	Rivet	2
26	60-9730	Guide – Belt	2	54	28-8130	Pin – Chute, Locking	1
27	3256-23	Washer – Flat	4	55	28-8070	Lanyard	1
28	3290-496	Nut – Retainer	4	56	3256-49	Washer – Flat	1
				57	3290-465	Washer – Belleville	1

PEERLESS TRANSAXLE MODEL NO. 915-019

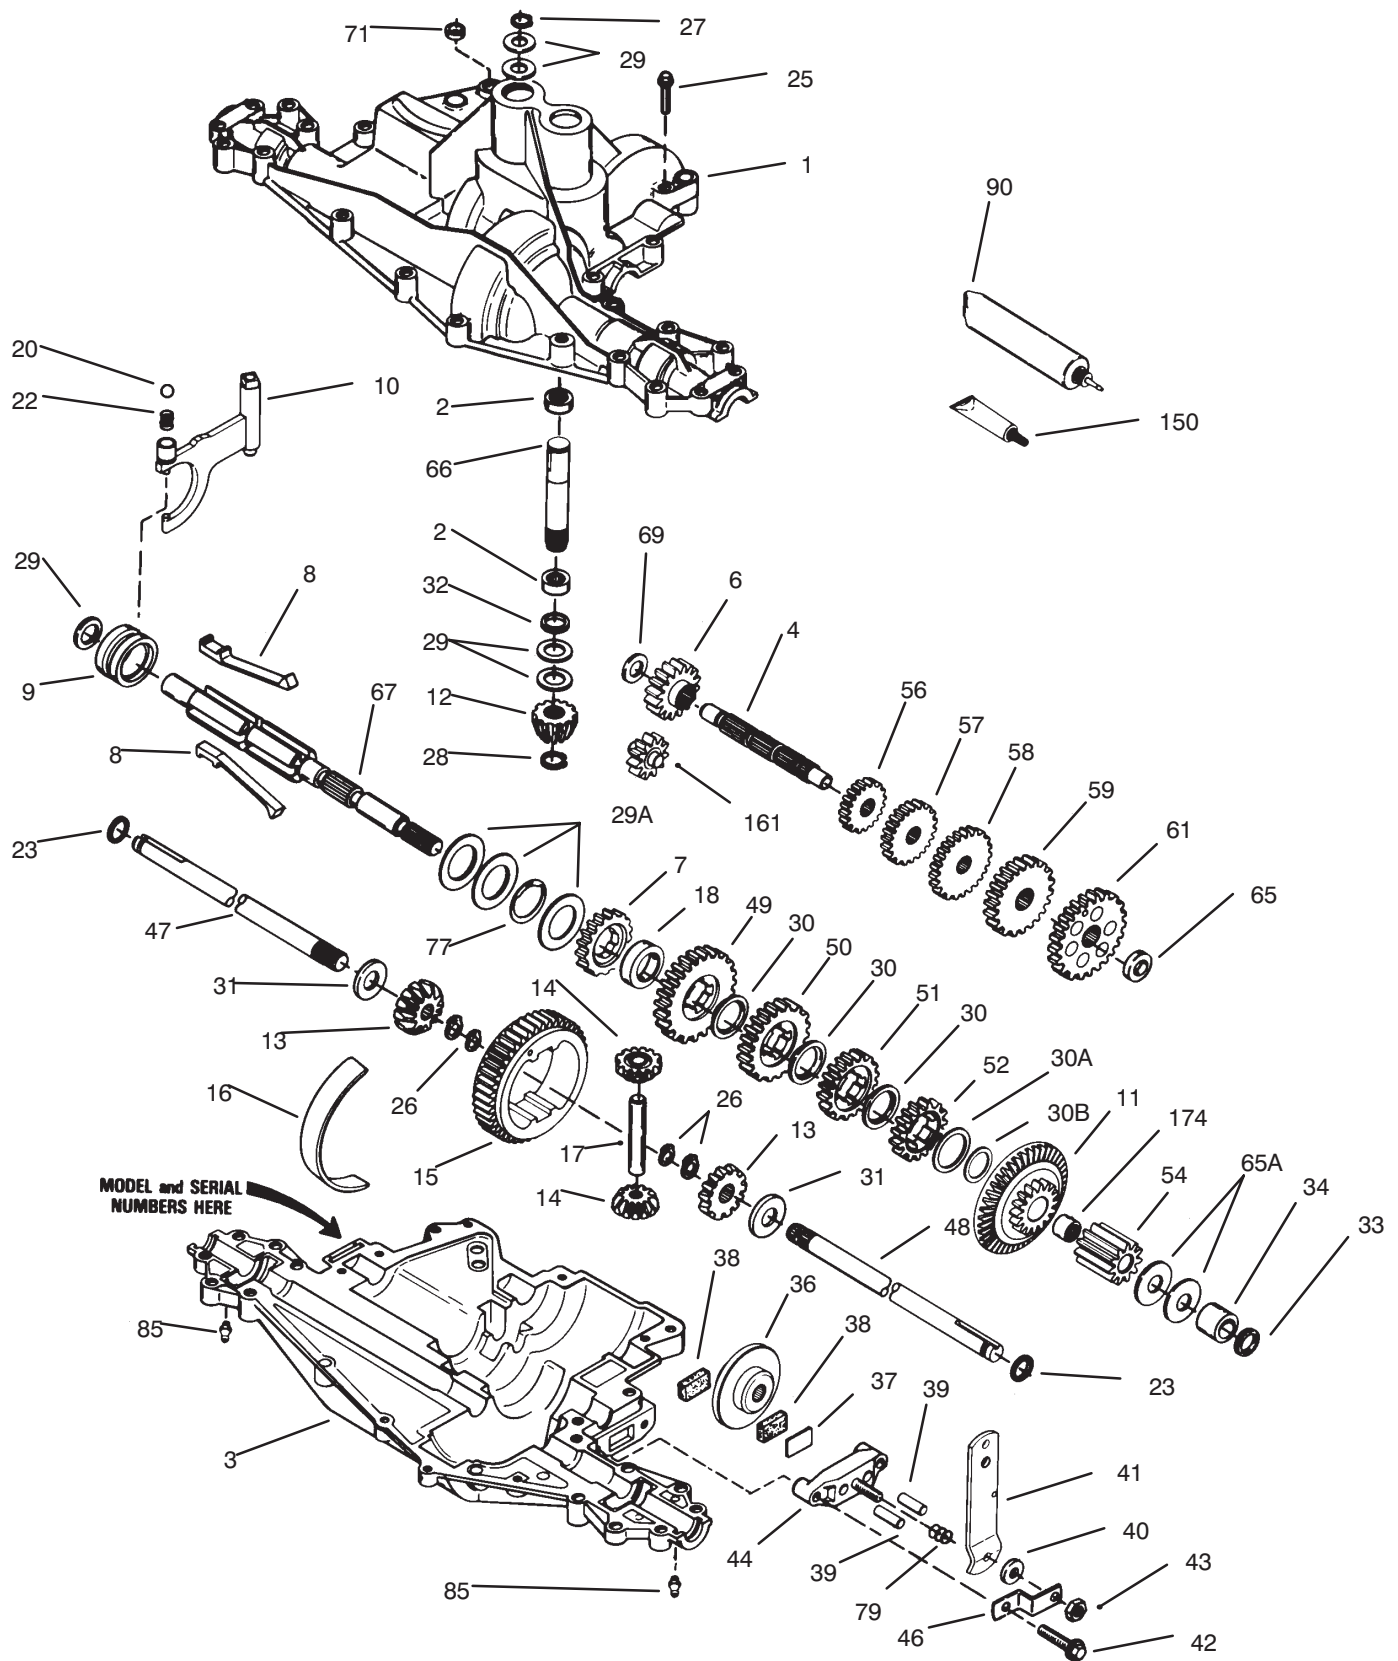

PEERLESS TRANSAXLE MODEL NO. 915—019

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	772117	Transaxle Cover	1	38	790006	Brake Pad	2
2	780086	Needle Bearing	2	39	786026	Dowel Pin	2
3	770114	Transaxle Case	1	40	792076	Washer	1
4	776300	Countershaft	1	41	790045	Brake Lever	1
6	778281	Spur Gear (16 Teeth)	1	42	792073	Screw	2
7	778122A	Spur Gear (22 Teeth)	1	43	792075	Locknut	1
8	792133	Shift Key	4	44	790025	Brake Pad Holder	1
9	784352	Shift Collar	1	46	786086	Brake Lever Bracket	1
10	784365	Shift Rod & Fork	1	47	774930	Axle (16—3/4" lg.)	1
11	778290	Bevel Gear & Bearing (44/16 Teeth) (Incl. Ref. #174)	1	48	774931	Axle (11—9/16" lg.) (Incl. Ref. #26)	1
12	778262	Bevel Pinion (14 Teeth)	1	49	778124A	Spur Gear (30 Teeth)	1
13	778221	Bevel Gear (16 Teeth)	2	50	778123A	Spur Gear (25 Teeth)	1
14	778068	Differential Pinion	2	51	778122A	Spur Gear (22 Teeth)	1
15	778260	Ring Gear	1	52	778273	Spur Gear (19 Teeth)	1
16	786150	Bearing Strip	1	54	778263	Spur Gear (11 Teeth)	1
17	78139	Drive Pin	1	56	778126A	Spur Gear (20 Teeth)	1
18	786147	Neutral Spacer	1	57	778127A	Spur Gear (25 Teeth)	1
20	792139	Ball (3/8" dia.)	1	58	778128A	Spur Gear (28 Teeth)	1
22	792142	Spring	1	59	778129A	Spur Gear (30 Teeth)	1
23	788061	Seal Ring	2	61	778265	Spur Gear (34 Teeth)	1
25	792073	Screw	17	65	780162	Washer	1
26	792125	Retaining Ring (pkg. of 2)	4	65A	780160	Washer	2
27	792035	Retaining Ring	1	66	776299	Input Shaft (3.522" lg.)	1
28	788040	Retaining Ring	1	67	776352	Shifter & Brake Shaft	1
29	780072	Washer	5	69	780161	Thrust Washer	1
29A	780090	Thrust Washer	3	71	788069	Square Cut Ring	1
30	780108	Washer	3	77	788078A	Inverted Retaining Ring (pkg. of 2)	1
30A	789145	Washer	1	79	792144	Spring	1
30B	780178	Washer	1	90	788067B	Grease (32 oz. btl. Bentonite grease)	1
31	780001	Washer	2	150	510334	Gasket Eliminator (Loctite #515)	1
32	792001	O—Ring	1	161	776302	Reverse Idler Assembly	1
33	788076	O—Ring	1	174	780085	Needle Bearing	1
34	780159	Bushing	1				
36	790071	Brake Disk	1				
37	790007	Brake Pad Plate	1				

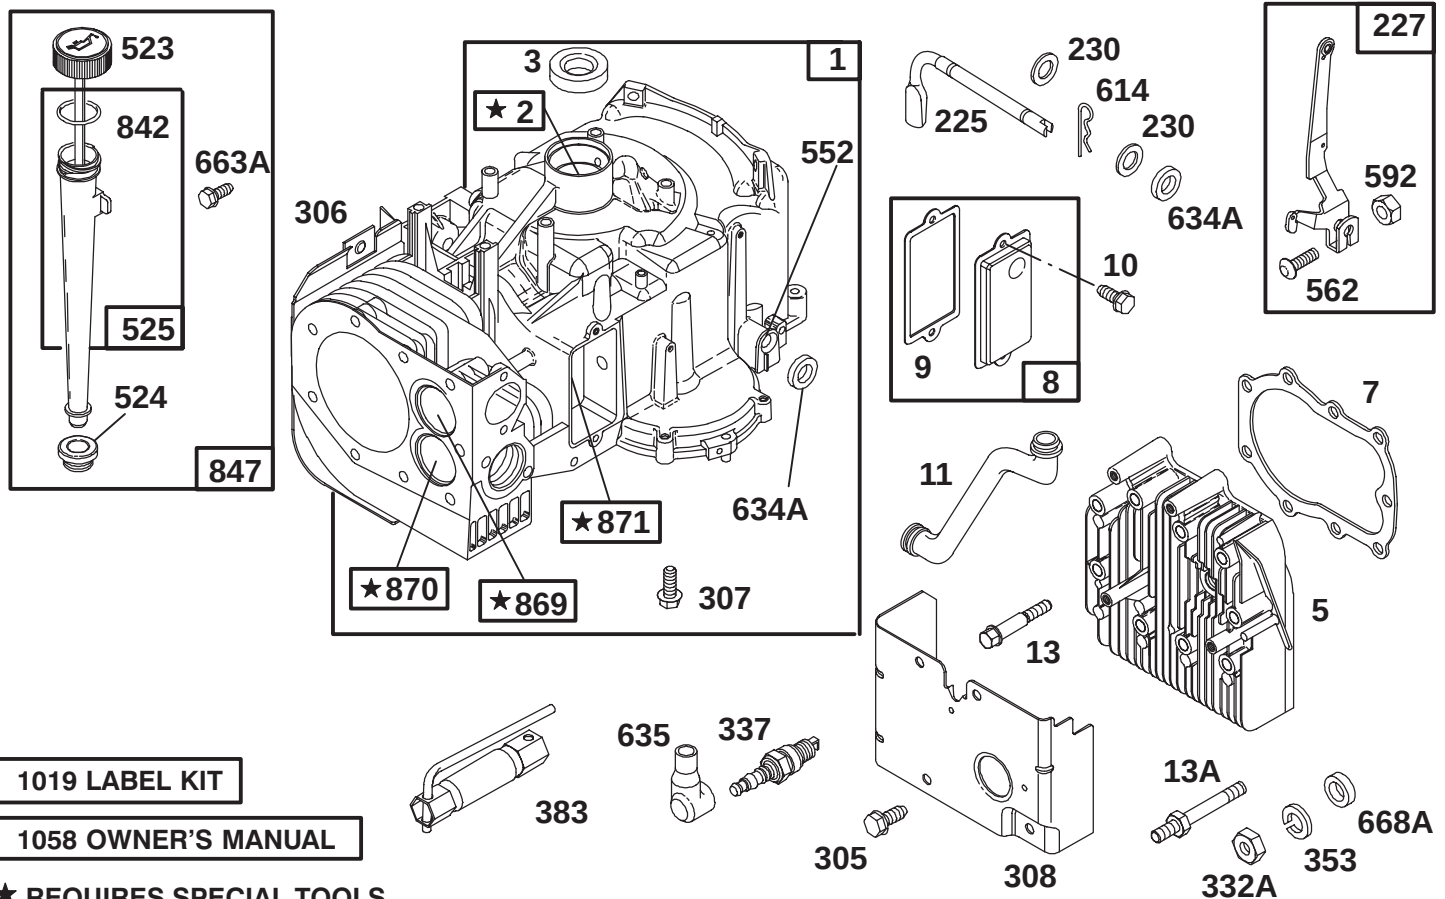

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	
2	399265	Bearing—Cylinder	
★3	391086	Seal—Oil	
5	494240	Head—Cylinder	
★7	271866	Gasket—Cylinder Head	
8	495735	Breather Assembly	
★9	27803	Gasket—Valve Cover	
10	94621	Screw—Sem	
11	281246	Tube—Breather	
13	94622	Screw—Cylinder Head	
13A	94776	Stud—Cylinder Head	
225	495157	Crank—Governor	
227	493935	Lever Assy.—Governor	
230	94742	Washer—Governor Lever	
305	94786	Screw—Hex. Head	
306	224545	Shield—Cylinder	
307	94386	Screw—Self Tap	
308	491490	Cover—Cylinder Head	
332A	94314	Nut—Hex.	
337	802592	Plug—Spark	
353	94315	Washer—Lock	

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench—Spark Plug	
523	495229	Cap—Oil Filler	
★524	68838	Seal—Filler Tube	
525	496068	Tube—Oil Filler	
552	231597	Bushing—Gov. Crank	
562	92613	Bolt—Governor Lever	
592	231082	Nut—Hex.	
614	93306	Pin—Cotter	
★634A	491323	Seal—Governor	
635	66538	Elbow—Spark Plug	
663A	94073	Screw—Hex. Head	
668A	231109	Spacer	
★842	270920	Seal—Oil Filler Cap	
847	496367	Fill Group—Oil	
869	261463	Seat—Intake Valve	
870	213316	Seat—Exhaust Valve	
871	261961	Guide—Exhaust Valve	
		Note: 231218 Guide—Intake Valve (Brass)	
1019	491254	Label Kit	
1058	272697	Owner's Manual	

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.

- Included in Carburetor Kit—Part No. 497481.

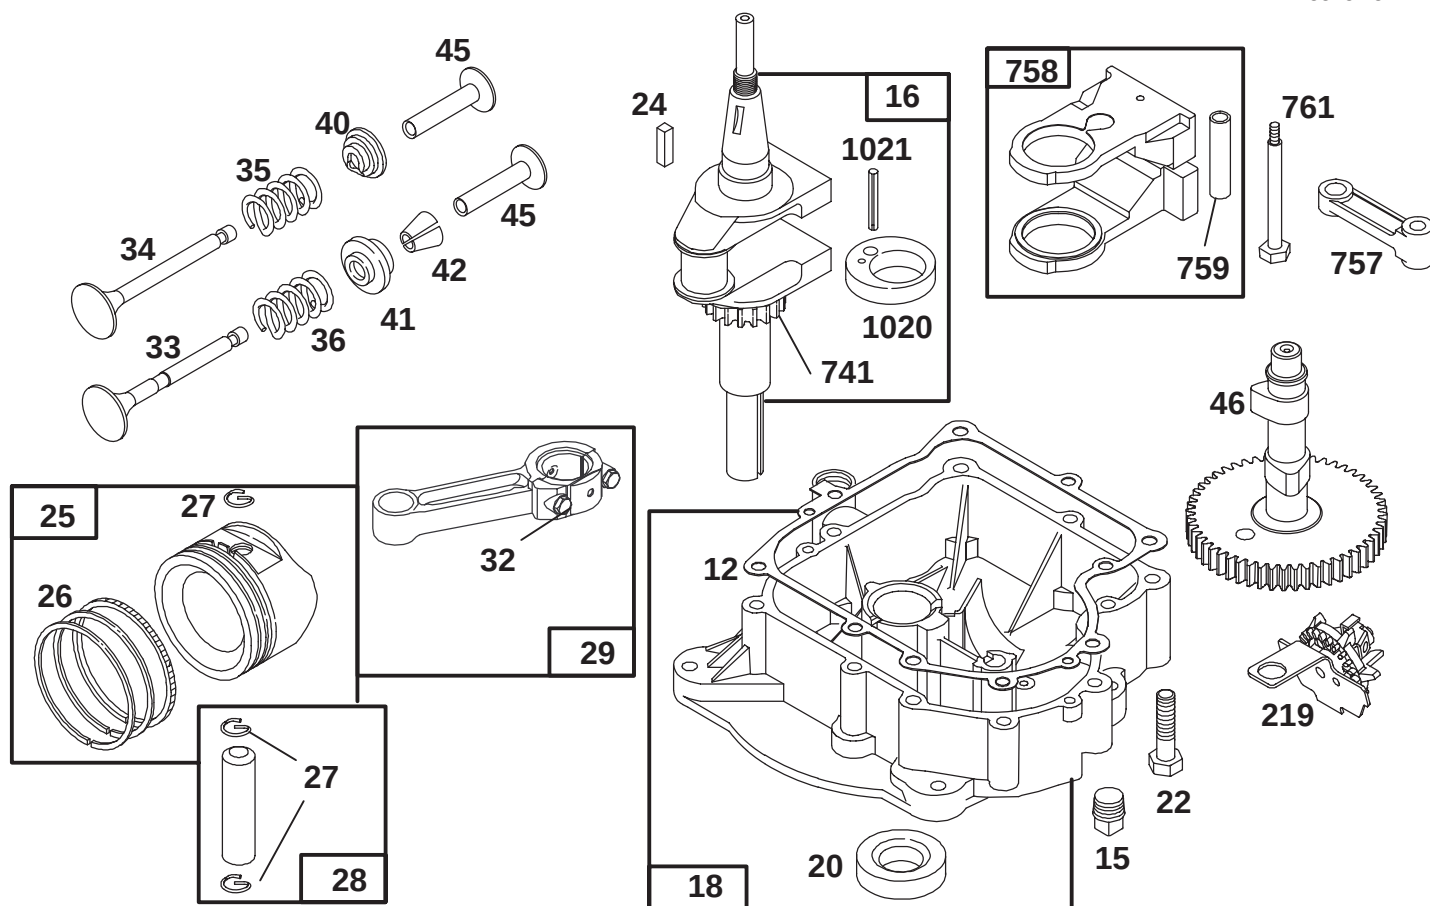

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket—Crankcase (.015" Thick)		27	260924	Lock—Piston Pin	
★	271997	Gasket—Crankcase (.005" Thick)		28	299691	Pin—Piston (Standard)	
★	271996	Gasket—Crankcase (.009" Thick)			391286	Pin—Piston (.005" O.S.)	
15	94239	Plug—Oil Drain		29	490348	Rod—Connecting	
16	495162	Crankshaft			490469	Rod—Conn. (.020" U.S.)	
		Note: For Timing Gear Key—Order 94196.		32	94671	Screw—Conn. Rod	
18	494238	Base—Engine		33	262246	Valve—Exhaust	
★20	291675	Seal—Oil		34	262247	Valve—Intake	
22	94624	Screw—Sem		35	65906	Spring—Valve	
24	222698	Key—Flywheel		36	26828	Spring—Valve	
25	394661	Piston Assembly (Standard)		40	221596	Retainer—Intake Valve	
	394662	Piston Assy. (.010" O.S.)		41	292260	Rotocoil—Ex. Valve	
	394663	Piston Assy. (.020" O.S.)		42	494553	Retainer—Rotocoil	
	394664	Piston Assy. (.030" O.S.)		45	262248	Tappet—Valve	
26	391780	Ring Set (Standard)		46	212897	Gear—Cam	
	392331	Ring Set (Chrome Std.)		219	490815	Gear—Gov.	
	391781	Ring Set (.010" O.S.)		741	262932	Gear—Timing	
	391782	Ring Set (.020" O.S.)		757	213998	Link—Counterweight	
	391783	Ring Set (.030" O.S.)		758	399891	Counterweight Assy.	
				759	298909	Pin—Counterweight	
				761	94593	Screw—Counterweight	
				1020	262243	Eccentric	
				1021	94853	Pin—Eccentric	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497481.

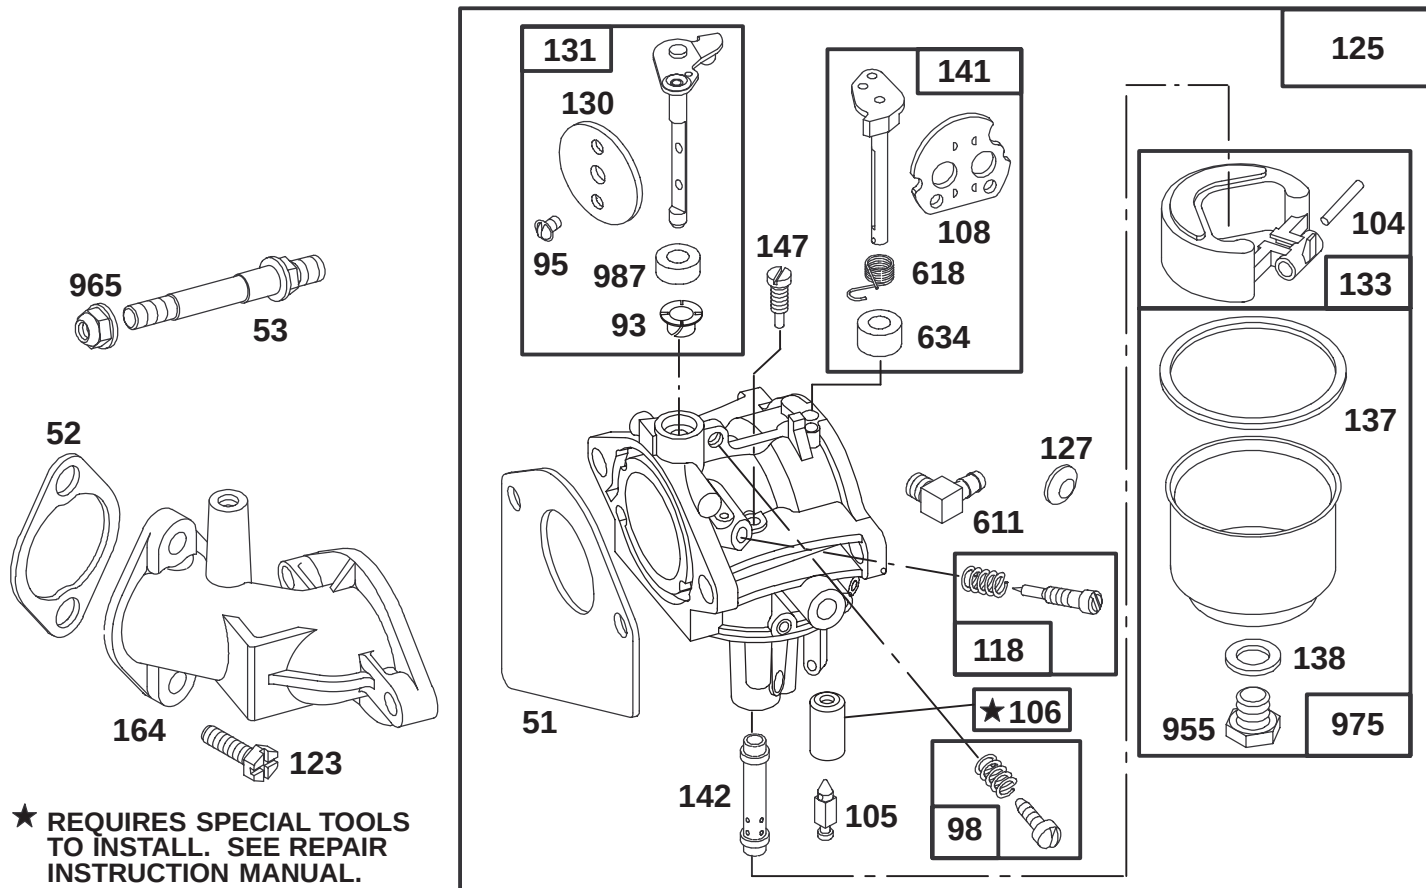

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01


Ref. No.	Part No.	Description	No. Used
◆51	272465	Gasket—Carburetor	
★52	272554	Gasket—Carburetor	
53	94637	Stud—Carb. Mtg.	
●93	281346	Bushing—Throttle Shaft	
●95	94098	Screw—Throttle	
98	495800	Screw—Idle Adjust	
●104	231789	Pin—Float Hinge	
●105	231855	Valve—Inlet Needle	
●106	231854	Seat—Inlet	
108	224666	Valve—Choke	
118	496589	Valve—Needle	
123	94616	Screw—Elbow Mtg.	
125	496592	Carburetor	
●127		Plug—Welch (Sold in Kit Only).	
130	224668	Valve—Throttle	
131	494885	Shaft—Throttle	
133	494381	Float—Carburetor	

Ref. No.	Part No.	Description	No. Used
◆137	281165	Gasket—Float Bowl	
◆138	281164	Washer—Float Bowl	
141	495931	Shaft—Choke	
●142	496519	Nozzle—Carburetor Note: 496623 Nozzle—Carb. (High Altitude) Includes: 281164 Washer—Float Bowl	
●147	497472	Pilot—Jet	
164	213819	Carburetor—Elbow	
611	493496	Elbow—Fuel Pipe	
618	262803	Spring—Choke Return	
●634	281168	Seal—Choke Shaft	
955	94642	Screw—Fuel Bowl	
965	94010	Nut—Hex.	
975	494378	Bowl—Float	
●987	281166	Seal—Throttle Shaft	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497481.

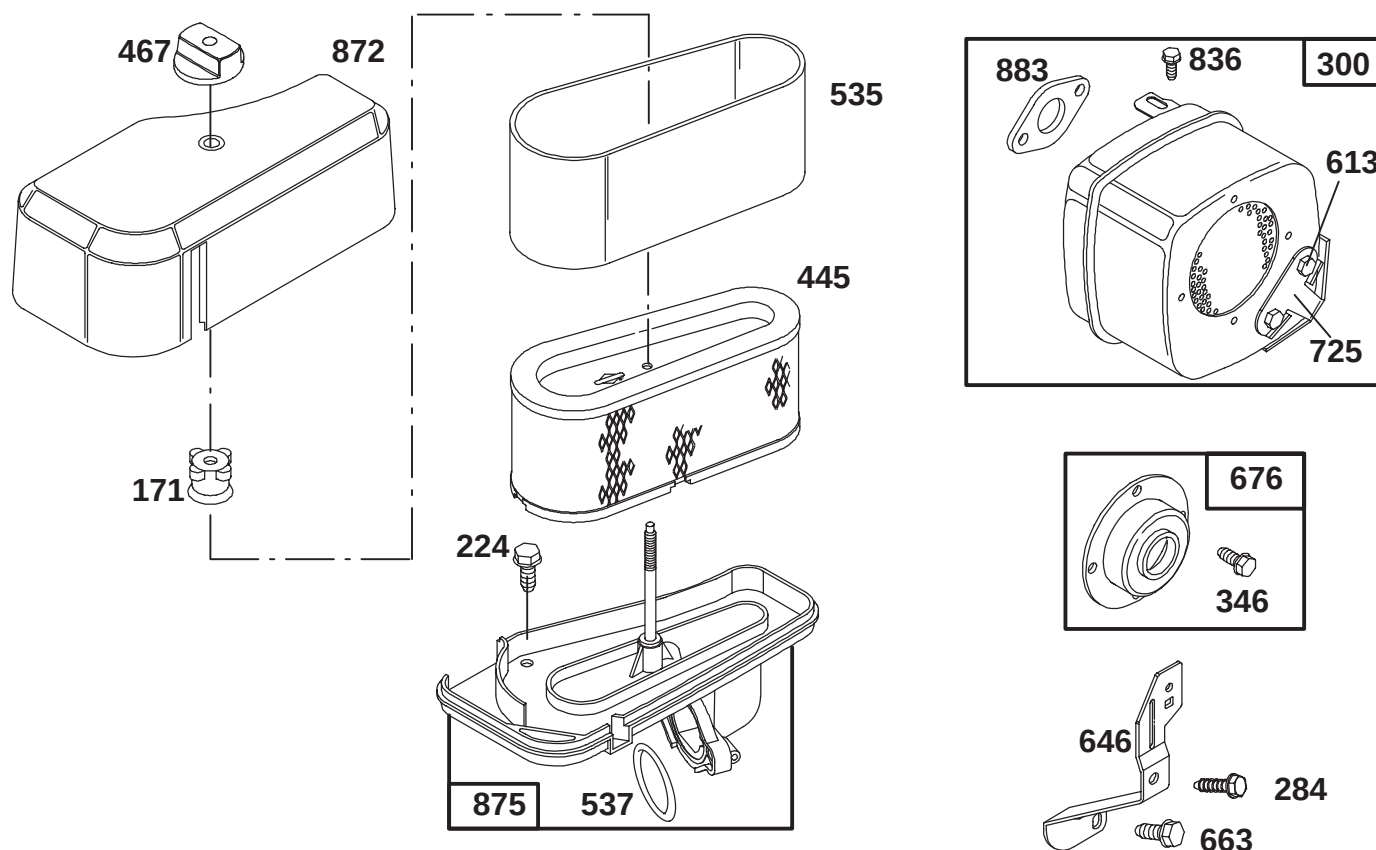

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28D707—0124—01


Ref. No.	Part No.	Description	No. Used
171	281051	Nut—Air Cleaner Mtg.	
224	94729	Screw—Air Cleaner Sem	
284	94704	Screw—Air Cleaner	
300	491413	Muffler—Exhaust	
346	93705	Screw—Hex. Head	
445	493910	Element—Air Cleaner	
467	493903	Knob—Air Cleaner	
535	272477	Element—Air Cleaner	
★537	281106	Gasket—Air Cleaner	

Ref. No.	Part No.	Description	No. Used
613	93927	Screw—Hex. Hd.	
646	224546	Brace—Air Cleaner	
663	94620	Screw—Hex. Hd.	
676	396903	Deflector—Muffler	
725	223023	Shield—Muffler	
836	94786	Screw—Hex. Hd.	
872	281105	Cover—Air Cleaner	
875	496368	Body—Air Cleaner	
★883	272293	Gasket—Exhaust Pipe	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497481.

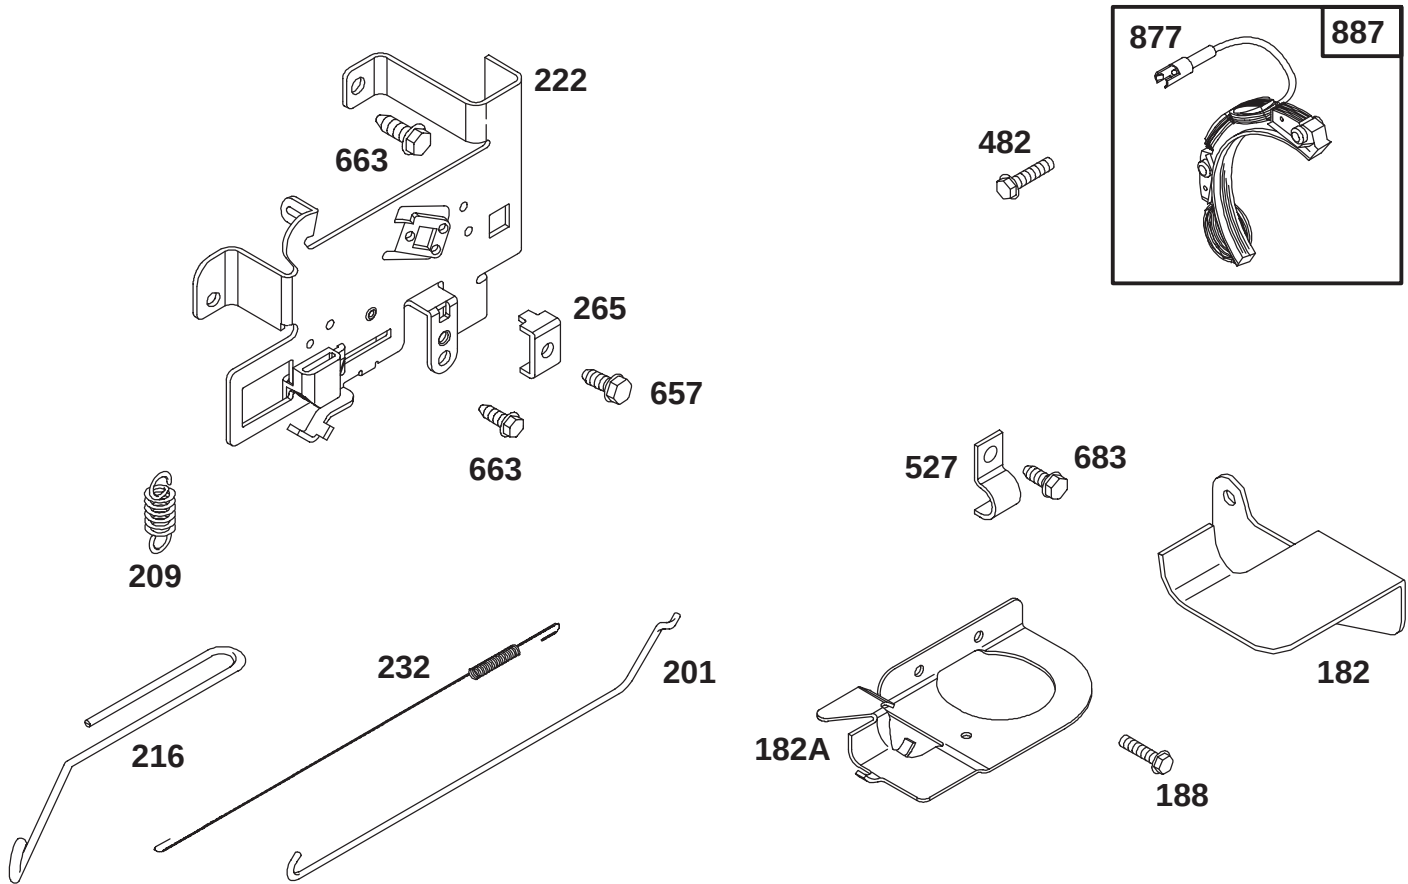

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used
182	223925	Bracket—Fuel Tank (R.H.)	
182A	223866	Bracket—Fuel Tank (L.H.)	
188	94480	Screw—Sem	
201	262767	Link—Governor	
209	260871	Spring—Governor	
216	262766	Link—Choke	
222	495611	Plate—Gov. Control	
232	262785	Spring—Governor Link	

Ref. No.	Part No.	Description	No. Used
265	221535	Clamp—Casing	
482	93621	Screw—Sem	
527	221428	Clamp	
657	93496	Screw—Sem	
663	94620	Screw—Hex. Hd.	
683	93572	Screw—Hex. Hd.	
877	393814	Diode Assy.	
887	391529	Alternator	

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497481.

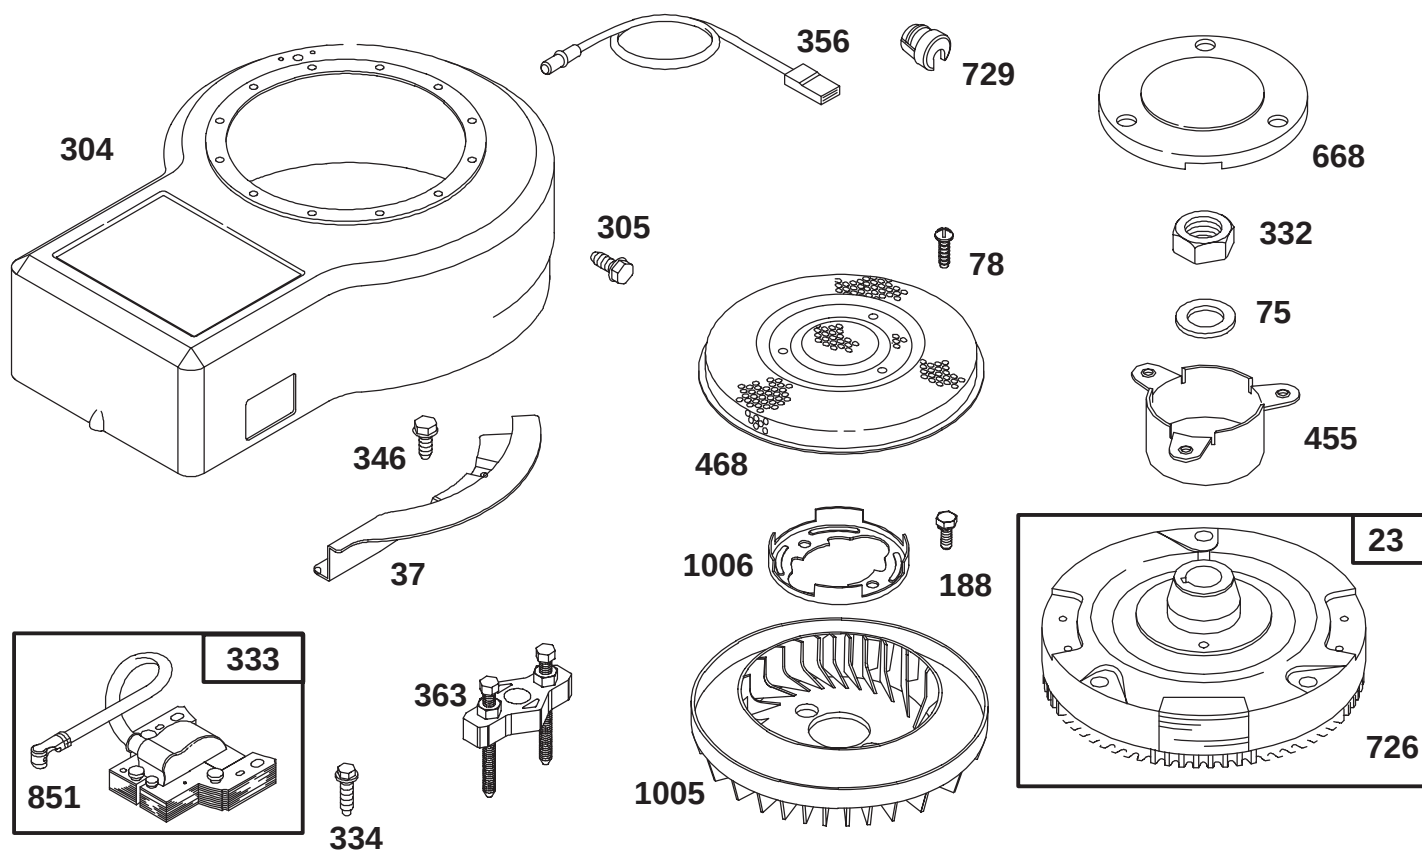

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28D707–0124–01


Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel	
37	224502	Guard—Flywheel	
78	94626	Screw—Sem	
75	224061	Washer—Spring	
188	94627	Screw—Sem	
305	94863	Screw—Sem	
304	496319	Housing—Blower	
332	92284	Nut—Hex	
333	492341	Armature—Magneto	
334	94731	Screw—Sem	
346	93705	Screw—Hex. Head	

Ref. No.	Part No.	Description	No. Used
356	494328	Wire—Ground	
363	19203	Puller—Flywheel	
455	222561	Cup—Screen Mounting	
468	224517	Screen—Rotating	
668	280848	Spacer	
726	392134	Gear—Ring (Includes Mtg. Hardware)	
729	281159	Clip—Lead Wire	
851	493880	Terminal—Ignition Cable	
1005	280687	Fan—Flywheel	
1006	224413	Retainer—Fan	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497481.

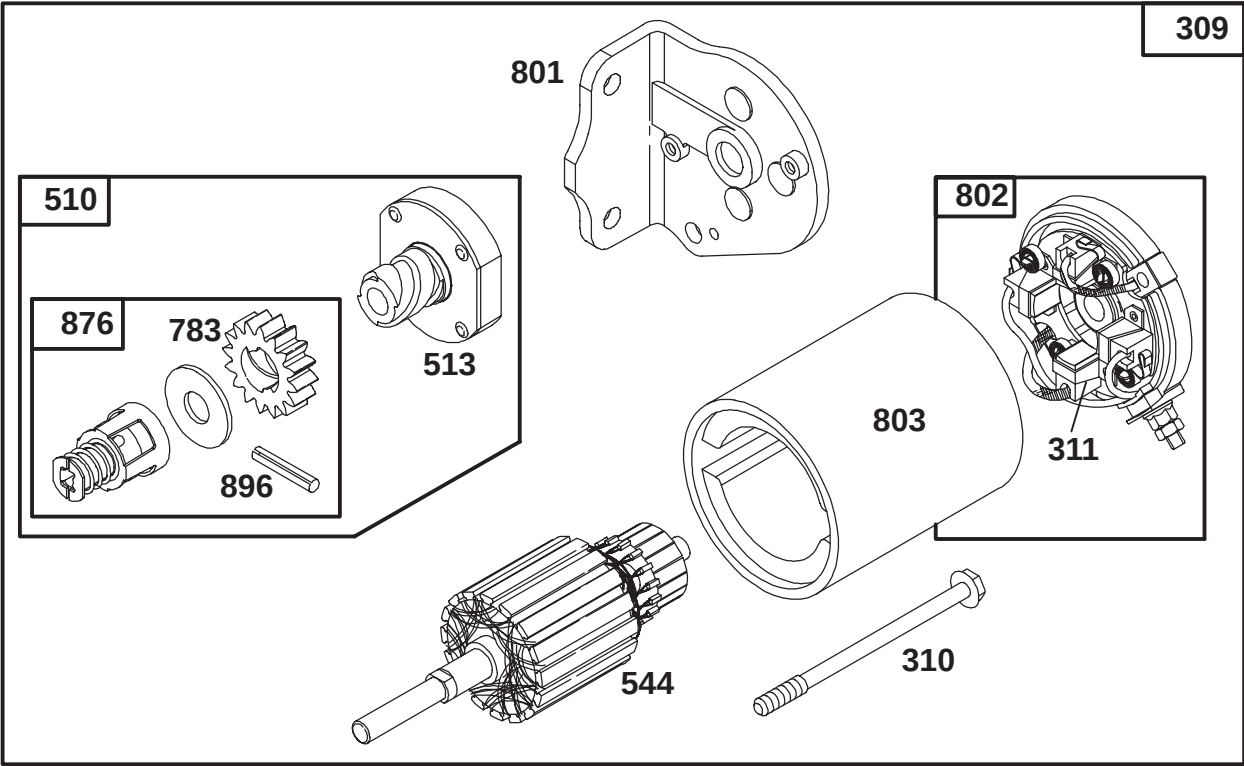

Assemblies include all parts shown in frames.




ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor—Starter	
310	94003	Bolt—Thru	
311	395538	Brush Set—Starter	
510	495878	Drive—Starter	
513	398003	Clutch Assembly	
544	390837	Armature—Starter	

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	
801	394856	Cap—Drive	
802	395537	Cap—End	
803	398159	Housing—Starter	
876	495877	Kit—Spring	
896	94288	Pin—Roll	

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497481.

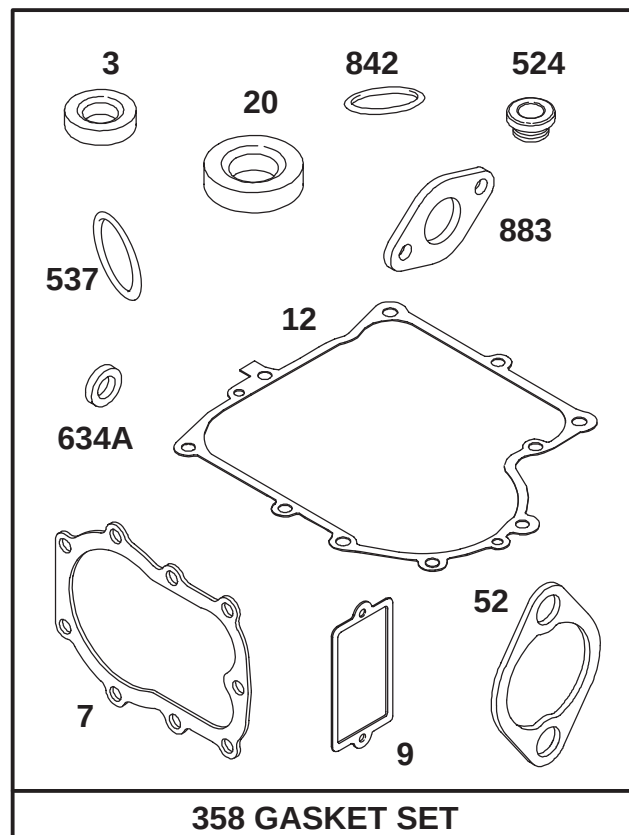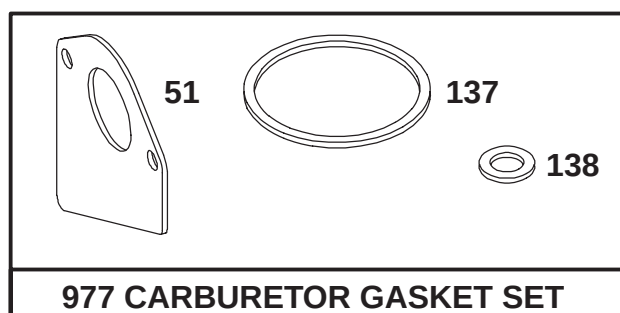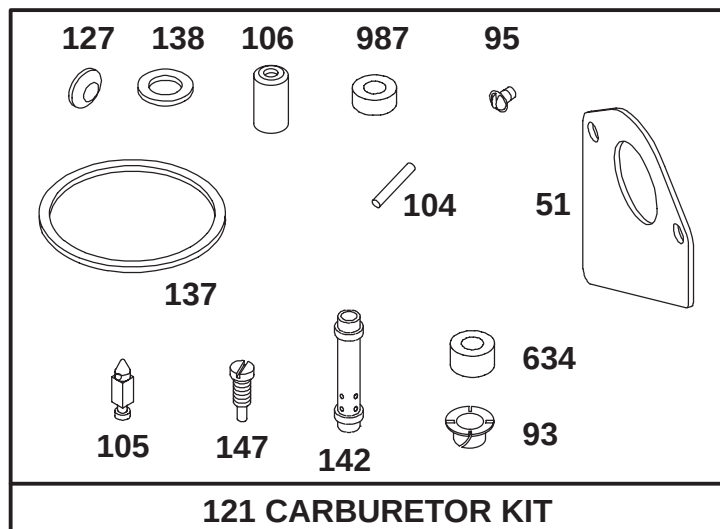

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28D707—0124—01

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	
★7	271866	Gasket—Cylinder Head	
★9	27803	Gasket—Valve Cover	
★12	271916	Gasket—Crankcase (.015" Thick)	
★	271997	Gasket—Crankcase (.005" Thick)	
★	271996	Gasket—Crankcase (.009" Thick)	
★20	291675	Seal—Oil	
◆	272465	Gasket—Carburetor	
★52	272554	Gasket—Carburetor	
●93	281346	Bushing—Throttle Shaft	
●95	94098	Screw—Throttle	
●104	231789	Pin—Float Hinge	
●105	231855	Valve—Inlet Needle	
●106	231854	Inlet Valve Seat	
121	497481	Carburetor Kit	

Ref. No.	Part No.	Description	No. Used
●127		Plug—Welch (Sold in Kit Only).	
◆137	281165	Gasket—Float Bowl	
◆138	281164	Washer—Float Bowl	
●142	496519	Nozzle—Carburetor	
		Note: 496623 Nozzle—Carb. (High Altitude)	
		Includes:	
		281164 Washer—Float Bowl	
●147	497472	Pilot—Jet	
358	494241	Gasket Set	
★524	281370	Seal—Filler Tube	
★537	281106	Gasket—Air Cleaner	
●634	281168	Seal—Choke Shaft	
★634A	491323	Seal—Governor	
★842	270920	Seal—Oil Filler Cap	
★883	272293	Gasket—Muffler	
977	494385	Carburetor Gasket Set	
●987	281166	Seal—Throttle	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497481.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
110513	Bearing	2	2	4	56-7400	Arm - Lever, H.O.C.	5	24	1
116397	Relay	6	11	1	56-7430	Pin - Support	12	22	2
147665	Screw - Phillips Hd.	6	1	2	56-7470	Bracket - Rack, Steering	2	33	1
147665	Screw - Phillips Head	4	1	2	56-7500	Shaft - Steering	2	31	1
3-6498	Washer - Thrust	2	5	5	56-7520	Bushing - Sector	2	22	1
7-0036	Key - Square	11	24	2	56-7530	Bolt - Shoulder	2	20	1
12-5820	Pulley - Idler	9	35	1	56-7570	Rod - Engagement	3	15	1
12-8819	Loose Parts	1	*	1	56-7650	Tube - Pivot	3	14	1
12-8829	Loose Parts	1	*	1	56-7670	Cable - Battery, Positive	9	21	1
12-9020	Retainer - Belt	9	34	1	56-7670	Cable - Positive	6	17	1
14-9999	Deck - Recycler	13	49	1	56-7710	Hold Down - Battery	8	26	1
19-1470	Bolt - Shoulder	5	20	1	56-7720	Post - Battery	8	21	1
26-0671	Bolt - Blade	13	39	1	56-7810	Decal - Brake, Parking	1	9	1
27-9080	Bearing - Flange	2	15	4	57-4060	Retainer - Front	9	16	1
28-0380	Spacer - Axle, Front	2	24	1	57-4070	Retainer - Rear	9	20	1
28-0540	Bolt - Shoulder	5	8	1	57-9940	Spring - Brake	11	17	1
28-2480	Washer	11	15	4	60-9730	Guide - Belt	13	26	2
28-2480	Washer	2	43	2	61-9760	Wheel - Deck	13	32	2
28-7350	Post - Pivot	13	16	1	61-9780	Cap - Hub	11	14	2
28-8010	Spring - Torsion	13	10	1	61-9780	Cap - Hub	2	44	2
28-8070	Lanyard	13	55	1	62-3760	Screw - Cap Hex. Hd.	9	27	1
28-8080	Boot - Terminal	8	22	1	62-3930	Spring - Extension	5	5	1
28-8130	Pin - Chute, Locking	13	54	1	62-3930	Spring - Extension	3	6	1
38-1420	Switch - Interlock	7	2	1	62-4300	Pad - Battery	8	25	1
40-6230	Spring - Torsion	13	51	1	62-5480	Isolator - Seat	7	11	4
44-5930	Assembly - Deflector	13	11	1	62-5490	Support - Fuel Line	9	10	1
47-0010	Arm - Suspension, Front	2	13	2	63-5540	Base - Seat	7	3	1
47-0540	Pedal	3	19	2	63-5670	Tube - Bumper, Seat Rod	7	7	1
47-0550	Bracket - Brake, Pedal	3	17	1	63-5830	Link - Suspension, Deck	5	16	2
47-0560	Bracket - Clutch, Pedal	3	12	1	63-8360	Key	4	6	1
47-0570	Spacer - Pedal	3	16	3	65-2920	Pad - Pedal, Foot	3	5	2
47-0590	Spindle - L.H.	2	*	1	65-5670	Bolt - Shoulder	5	21	1
47-0600	Spindle - R.H.	2	4	1	65-5670	Screw - Shoulder	8	34	1
47-0610	Tie Rod - Adjustable	2	34	1	66-1340	Decal - Danger	13	34	1
47-0700	Bearing - Flange	2	27	1	66-6740	Cover - Shaft, Steering	4	2	1
47-0760	Support - Axle, Front	2	11	1	68-3650	Decal - Warning, Deflector	13	13	1
47-0770	Shaft - Pivot, Pedal	3	8	1	76-1090	Decal - Instructions	4	23	1
47-0780	Retainer - Shaft	3	9	1	76-1340	Decal - Made In USA	5	26	1
47-0930	Footrest - R.H.	1	22	1	76-1540	Arm - Suspension R.H.	12	16	1
47-0940	Footrest - L.H.	1	16	1	76-1550	Arm - Suspension L.H.	12	*	1
47-0960	Spring - Compression	13	3	1	76-1560	Spacer	12	13	2
47-1140	Retainer - Spring, Top	13	2	2	76-1560	Spacer - Split	12	20	2
47-1180	Bracket - Engagement	13	1	1	80-2310	Bracket - Bell Crank Mount	5	2	1
47-1200	Shaft - Adjusting	13	4	1	80-2320	Bracket - H.O.C., Engage	5	15	1
47-1290	Brake - Parking	1	10	1	80-2330	Link - Bell Crank	8	35	1
47-1840	Bracket - Height-of-Cut	5	13	1	80-2340	Bracket - Pivot, Inner	8	6	1
47-1850	Lever - Height-of-Cut	5	6	1	80-2350	Pivot - Outer	8	4	1
47-1910	Solenoid	6	12	1	80-2360	Crank - Bell, Deck Engage	5	22	1
47-2060	Bracket - Brake, Parking	1	19	1	80-2370	Shaft W.A. - Pivot	8	5	1
47-2961	Hose - Fuel Line	9	9	1	80-2400	Lever W.A. - Engage	8	2	1
49-3242	Assy. - Wheel, Steering	4	5	1	80-2430	Axle - Front	2	18	1
54-3090	Cable - Battery Ground	9	37	1	80-2450	Rack - Steering	2	19	1
55-3570	Cap - Fuel	9	14	1	80-2460	Tie Rod - Fixed	2	*	1
56-2540	Tube - Vent, Battery	8	37	1	80-2530	Brake Ass'y	13	50	1
56-6590	Bolt - Wheel	13	33	2	80-2550	Pad - Brake	13	6	1
56-7030	Body - Spindle	13	44	1	80-2560	Plate - Deck, Brake Mtg.	13	47	1
56-7050	Tank - Fuel	9	15	1	80-2570	Pin - Clevis	13	5	2
56-7070	Spring - Torsion, Clutch	3	11	1	80-2580	Rod - Adjusting	13	52	1
56-7080	Spring - Torsion, Brake	3	18	1	80-2600	Battery - 12 Volt	8	24	1
56-7130	Tower - Front	1	4	1	80-2620	Rod - Base, Seat	7	8	1
56-7140	Tower - Rear	1	8	1	80-2630	Kicker - 32	13	29	4
56-7170	Guide - Shaft, Steering	1	6	1	80-4350	Shaft - Spindle	13	41	1
56-7180	Cover - Front	2	30	1	80-4370	Shield - Bearing	13	42	1
56-7240	Bracket - Retaining, Spring	3	3	1	80-4390	Spacer - Hardened	13	43	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3318—321

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
80—4430	Blade — Recycler	13 40 1	232—27	Valve Stem w/Cap	2 41 2
80—4470	Pulley	13 22 1	232—39	Tube — Inner	11 11 2
80—4490	Ring — Deck	13 48 4	232—44	Tube — Inner	2 † 2
80—4570	Stiffener — Blade	13 37 1	233—25	Knob	4 13 1
82—6150	Assy. — Cover, Discharge	13 14 1	233—48	Knob	8 1 2
83—7010	Brace — Cover, Rear	13 17 1	233—48	Knob	5 19 1
83—7020	Spacer — Bearing	13 25 1	237—143	O—Ring	8 27 2
88—3950	Assembly — Seat	7 1 1	2411—32	Ball Joint	8 31 1
88—9730	Rim	11 12 2	2412—68	Clamp	4 17 2
88—9800	Cover — Gate, Shift	6 24 1	2412—68	Clamp — Wire	7 4 1
88—9830	Switch — Ignition	4 10 1	2412—98	Clamp — Hose	9 8 2
88—9930	Switch — Micro, Short	6 4 1	251—297	Bearing	13 21 2
88—9931	Switch — Micro	4 24 1	257—11	Washer	8 18 1
92—0860	Frame	6 14 1	283—2	Pin — Clevis	2 16 2
92—0861	Frame — Rear	12 8 1	283—2	Pin — Clevis	13 45 2
92—0862	Transaxle	11 8 1	283—42	Pin — Clevis	12 18 2
92—0864	Standbar	12 5 1	283—52	Pin — Clevis	1 20 1
92—0865	Support — Axle	12 9 2	288—10	Cap — Pipe	9 22 1
92—0866	Body W.A. — Seat Support	6 8 1	289—19	Nipple — Pipe	9 23 1
92—0870	V—Belt — Traction	11 4 1	302—5	Fitting — Grease	2 1 2
92—0871	Rod — Traction	9 29 1	302—49	Fitting — Grease	2 17 2
92—0872	Rod — Brake	11 18 1	321—4	Screw — Cap Hex. Hd.	13 8 1
92—0873	Pulley — Engine	9 24 1	321—4	Screw — Cap Hex. Hd.	3 10 1
92—0874	Pulley	11 7 1	321—4	Screw — Cap Hex. Hd.	5 11 4
92—0875	V—Belt	13 24 1	321—4	Screw — Cap Hex. Hd.	8 12 2
92—0876	Guard — Front	2 37 1	321—4	Screw — Cap Hex. Hd.	6 13 2
92—0877	Panel — Seat Base, R.H.	6 21 1	321—4	Screw — Cap Hex. Hd.	1 21 2
92—0878	Panel L.H. — Base, Seat	5 9 1	322—5	Screw — Cap Hex. Hd.	3 2 1
92—0879	Spring	9 1 1	322—5	Screw — Cap Hex. Hd.	12 6 15
92—0880	Arm — Shift, Transaxle	11 23 1	322—5	Screw — Cap Hex. Hd.	6 6 2
92—0881	Bracket W.A. — Traction	9 4 1	322—5	Screw — Cap Hex. Hd.	3 7 2
92—0883	Plate — Mounting, Idler	9 2 1	322—5	Screw — Cap Hex. Hd.	8 8 4
92—0884	Lever W.A. — Shaft	8 10 1	322—5	Screw — Cap Hex. Hd.	13 9 6
92—0887	Support — Shift, Lower	8 19 1	322—5	Screw — Cap Hex. Hd.	2 9 8
92—0888	Support — Shift, Upper	8 14 1	322—5	Screw — Cap Hex. Hd.	5 12 2
92—0889	Link — Shift	11 1 1	322—5	Screw — Cap Hex. Hd.	1 14 10
92—0890	Control — Throttle	4 15 1	322—5	Screw — Cap Hex. Hd.	4 16 8
92—0891	Shaft W. A. — Shift	8 16 1	322—6	Screw — Cap Hex. Hd.	13 20 1
92—0894	Spring — Torsion	8 11 1	322—7	Screw — Cap Hex. Hd.	9 28 1
92—0895	Gate — Shift	6 3 1	322—12	Screw — Cap Hex. Hd.	12 10 4
92—0896	Retainer — Spring	8 29 1	322—14	Screw — Cap Hex. Hd.	12 11 2
92—0897	Spacer	12 1 1	322—50	Screw — Cap Hex. Hd.	12 4 1
92—0898	Guide — Belt	12 2 1	323—9	Screw — Cap Hex. Hd.	9 32 1
92—0899	Guide — Belt, Lower	11 21 1	323—9	Screw — Hex Hd. Cap	12 21 2
92—1751	Decal — Shift Pattern	6 2 1	323—14	Screw — Hex Hd. Cap	12 17 2
92—7243	Decal — Control Panel	5 27 1	325—6	Screw — Cap Hex. Hd.	2 8 1
92—7244	Decal — Deck Engage	4 9 1	329—4	Screw — Cap Hex. Hd.	11 3 1
92—7245	Decal — H.O.C.	4 21 1	3218—1	Nut — Jam	6 18 2
92—7974	Tread — Foot R.H.	1 * 1	3218—1	Nut — Jam	9 38 1
92—7975	Tread — Foot L.H.	1 15 1	3219—7	Nut — Hex. Hd.	13 23 1
92—7987	Decal — Recycler	1 3 1	3220—2	Nut — Hex. Jam	2 7 1
92—7990	Insert — Wheel, Steering	4 4 1	3230—18	Bolt — Carriage	2 32 2
92—8946	Decal — Danger	1 7 1	3253—3	Washer — Lock	11 2 1
92—9521	Decal — Recycler	13 35 1	3253—3	Washer — Lock	6 16 4
93—1122	Decal — Caution, Deflector	13 12 1	3253—3	Washer — Lock	9 18 2
93—1192	Decal — Engine	9 39 1	3253—6	Washer — Lock	9 26 1
93—1194	Decal — L.H.	5 10 1	3254—2	Washer — Lock, Int. Tooth	9 5 4
93—3190	Boot — Terminal Insulator	6 25 1	3254—2	Washer — Lock, Int. Tooth	11 20 1
217—80	Rim	2 3 2	3254—5	Washer — Lock, Int. Tooth	4 8 1
218—461	Nut — Lock	4 7 1	3256—14	Washer — Flat	6 9 1
218—560	Cap — Battery	8 28 6	3256—22	Washer — Flat	8 13 2
231—116	Tire	2 42 2	3256—22	Washer — Flat	1 18 2
231—117	Tire	11 10 2	3256—22	Washer — Flat	9 30 1
232—27	Stem — Valve	11 16 2	3256—23	Washer — Flat	12 7 12

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3256-23	Washer - Flat	6 7 2	3296-29	Nut - Lock	9 6 2
3256-23	Washer - Flat	1 13 8	3296-29	Nut - Lock	2 10 8
3256-23	Washer - Flat	5 17 4	3296-29	Nut - Lock	11 19 1
3256-23	Washer - Flat	4 18 7	3296-29	Nut - Lock	13 19 24
3256-23	Washer - Flat	2 23 6	3296-29	Nut - Lock	4 19 4
3256-23	Washer - Flat	13 27 4	3296-29	Nut - Lock	8 32 4
3256-23	Washer - Flat	8 33 2	3296-39	Nut - Lock	9 3 1
3256-24	Washer - Flat	1 11 1	3296-39	Nut - Lock	12 19 1
3256-24	Washer - Flat	12 15 4	3296-39	Nut - Lock	13 31 2
3256-24	Washer - Flat	9 33 1	3296-42	Nut - Lock	6 15 2
3256-25	Washer - Flat	9 25 1	3296-42	Nut - Lock	8 15 2
3256-26	Washer - Flat	5 25 1	3296-42	Nut - Lock	1 17 2
3256-27	Washer - Flat	3 13 3	3296-42	Nut - Lock	5 18 1
3256-35	Washer - Flat	1 1 4	3296-47	Nut - Lock	12 12 1
3256-49	Washer - Flat	13 56 1	3296-59	Nut - Lock	12 14 3
3256-57	Washer - Flat	9 36 1	3296-59	Nut - Lock	13 15 1
3257-23	Key	11 6 1	32103-2	Nut - Wing	13 18 1
3272-6	Pin - Cotter	3 1 3	32103-12	Nut - Wing	8 20 1
3272-6	Pin - Cotter	5 4 2	32103-22	Nut - Wing	8 23 2
3272-6	Pin - Cotter	1 12 1	32104-76	Screw - Self Tap Acorn Hd.	1 5 9
3272-6	Pin - Cotter	2 14 2	32104-76	Screw - Self-Tapping	4 14 2
3272-6	Pin - Cotter	11 22 1	32107-11	Nut - Square	9 17 2
3272-6	Pin - Cotter	9 31 1	32120-47	Ring - Retaining	8 7 1
3272-6	Pin - Cotter	13 36 2	32120-64	Ring - Retaining	11 5 1
3272-12	Pin - Cotter	2 45 2	32121-9	Pin - Roll	2 28 1
3272-16	Pin - Cotter	11 9 1	32121-16	Pin - Roll	8 17 1
3274-51	Screw - Hex. Socket Hd.	9 19 2	32121-25	Pin - Roll	8 3 1
3290-134	Screw - Machine	6 10 1	32121-78	Pin - Roll	4 3 1
3290-191	Nut - Speed	6 23 2	32121-78	Pin - Roll	8 9 1
3290-282	Rivet	13 7 2	32122-14	Screw - Truss, Phillips Hd.	13 38 8
3290-282	Rivet	13 53 2	32128-20	Nut - Flange Hd.	7 5 4
3290-307	Pin - Cotter, Hair	7 9 1	32128-21	Nut - Lock, Flange Hd.	2 25 1
3290-354	Nut - Double	6 20 1	32128-23	Nut - Lock, Flange Hd.	2 26 1
3290-354	Nut - Double	4 22 1	32144-4	Screw - Special	2 21 2
3290-378	Tie - Cable	7 6 1	32144-14	Screw	9 12 2
3290-413	Washer - Belleville	5 7 8	32144-14	Screw - Thread Forming	2 38 2
3290-465	Washer - Belleville	13 57 1	32144-112	Screw - Sems	6 22 2
3290-496	Nut - Retainer	13 28 4	32151-48	Ring - Retaining	11 13 2
3296-2	Nut - Lock	6 19 1	32151-48	Ring - Retaining, External	2 35 2
3296-4	Nut - Lock	8 30 1	32151-61	Ring - Retaining	5 14 2
3296-4	Nut - Lock	2 36 4			
3296-8	Nut - Lock	2 12 1			
3296-8	Nut - Lock	5 23 1			
3296-8	Nut - Lock	8 36 1			
3296-8	Nut - Lock	13 46 1			
3296-29	Nut - Lock	5 1 7			
3296-29	Nut - Lock	1 2 14			
3296-29	Nut - Lock	12 3 17			
3296-29	Nut - Lock	3 4 3			
3296-29	Nut - Lock	6 5 2			

OPTIONAL EQUIPMENT

Easy Empty Bagging Kit Model No. 79095
Twin Bag Bagger Kit Model No. 79085
Tire Chains Part No. 23-2340
Hi-Sail Bagging Blade Part No. 33-4750
Wet Grass Bagging Kit Part No. 38-5730

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]