

LAWN-BOY®

48 cm REAR BAGGING MOWER

MODEL NO. 10915B—6900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.


To order replacement parts from an Authorized Service Dealer, supply the following information:

- 1. Model and serial number.
- 2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS


Description	Page	Description	Page
Housing Assembly	3	Carburetor Assembly	10
Engine Assembly	4	Rear Axle Assembly	11
Blade Assembly	5	Gear Case Assembly	12
Shroud & Block Assembly	6	Handle Assembly	13
Brake & Muffler Assembly	7	Bag Assembly	14
Block Assembly	8	Numeric Parts Index	15–16
Recoil Starter Assembly	9		

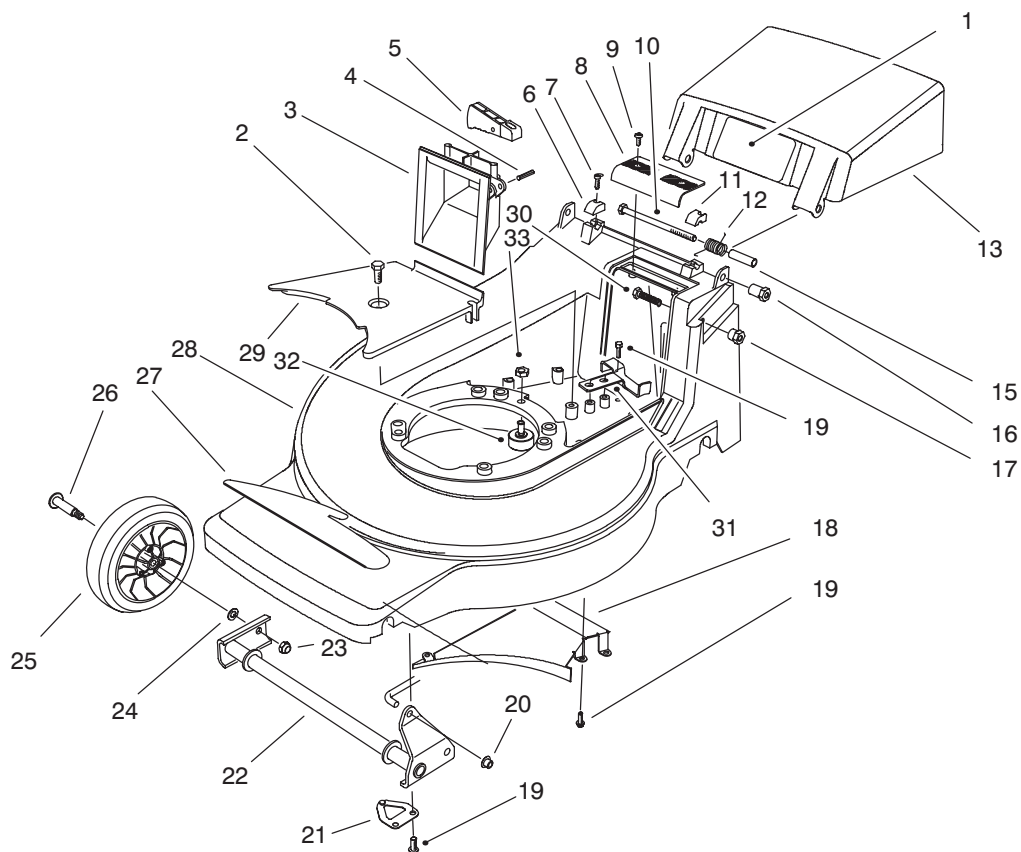

C-2213

HOUSING ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4105	Decal — Danger	1	18	71-7990	Ramp — Discharge	1
2	32144-70	Screw — Tapping	1	19	32144-4	Screw — Tapping	10
3	71-7870	Grip — Lower	1	20	32112-1	Nut — Push	1
4	3284-5	Pin — Groove	1	21	71-8830	Retainer — Shaft	2
5	71-7930	Trigger — HOC	1	22	92-9304	Pivot — Front	1
6	71-7910	Cap — R.H. Hinge Bolt	1	23	3296-59	Nut — Lock	2
7	65-5210	Screw — Thread Forming	2	24	40-1940	Washer	2
8	71-7860	Grip — Upper	1	25	92-8810	Wheel & Tire Assembly	2
9	32144-97	Screw — Pan Hd. Phillips	2	26	92-8811	Bolt — Wheel	2
10	92-8806	Screw — Hex Hd. Cap	2	27	92-8837	Decal — Deck 450VS	1
11	71-7900	Cap — L.H. Hinge Bolt	1	28	16-8889	Housing (Incl. Ref. #1)	1
12	71-9840	Spring — Door	2	29	71-7920	Cover — Belt	1
13	17-1569	Door — Discharge (Incl. Ref. #1)	1	30	92-8818	Screw — Hex Hd. Cap	2
15	92-9313	Spacer — Door	2	31	71-7890	Guide — Rear Belt	1
16	93-7161	Spacer — Handle	2	32	92-8808	Stud — Ball Bearing	1
17	93-7162	Spacer — Handle	2	33	3296-29	Nut — Lock	1

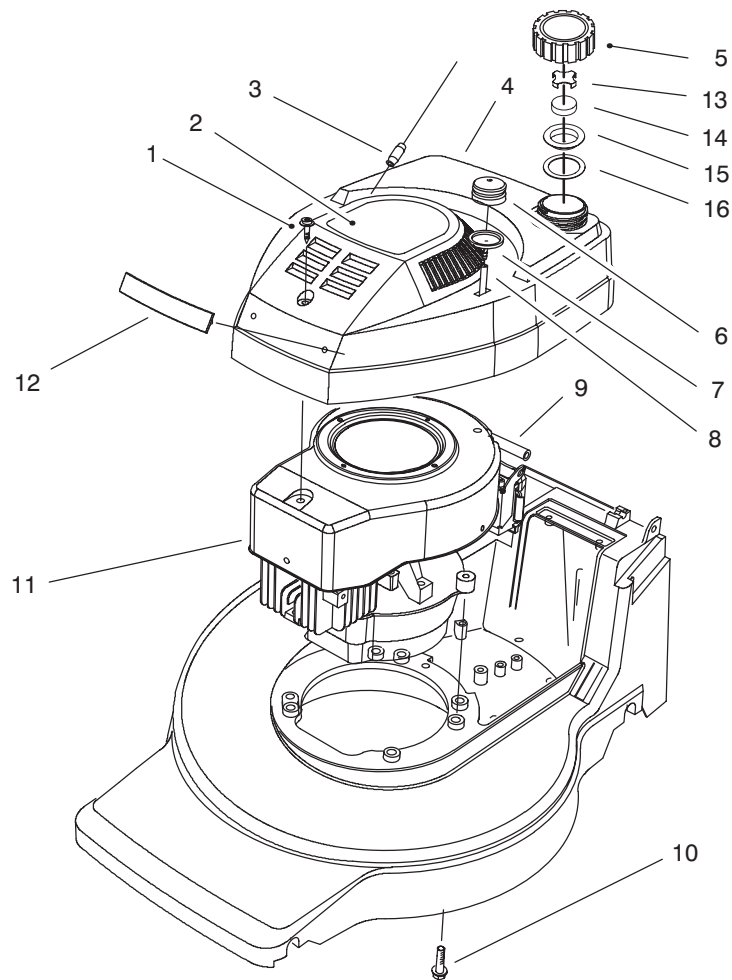

C-1895A

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4302	Screw - Sems	3	9	612782	Line - Gas	1
2	92-8828	Decal - Shroud	1	10	32144-102	Screw - Engine	3
3	92-1701	Rope - Stop	1	11		Engine - "V" 48cm	1
4	92-8898	Tank Shroud Assembly	1	12	92-8615	Decal - Shroud	1
5	93-3660	Cap - Gas	1	13	93-3175	Baffle	1
		(Incl. Ref. #13-16)	1	14	609150	Baffle - Foam	1
6	66-7460	Bulb - Primer	1	15	93-1230	Cover	1
7	44-2750	Body - Primer	1	16	613311	Gasket	1
8	44-3174	Hose - Primer	1				

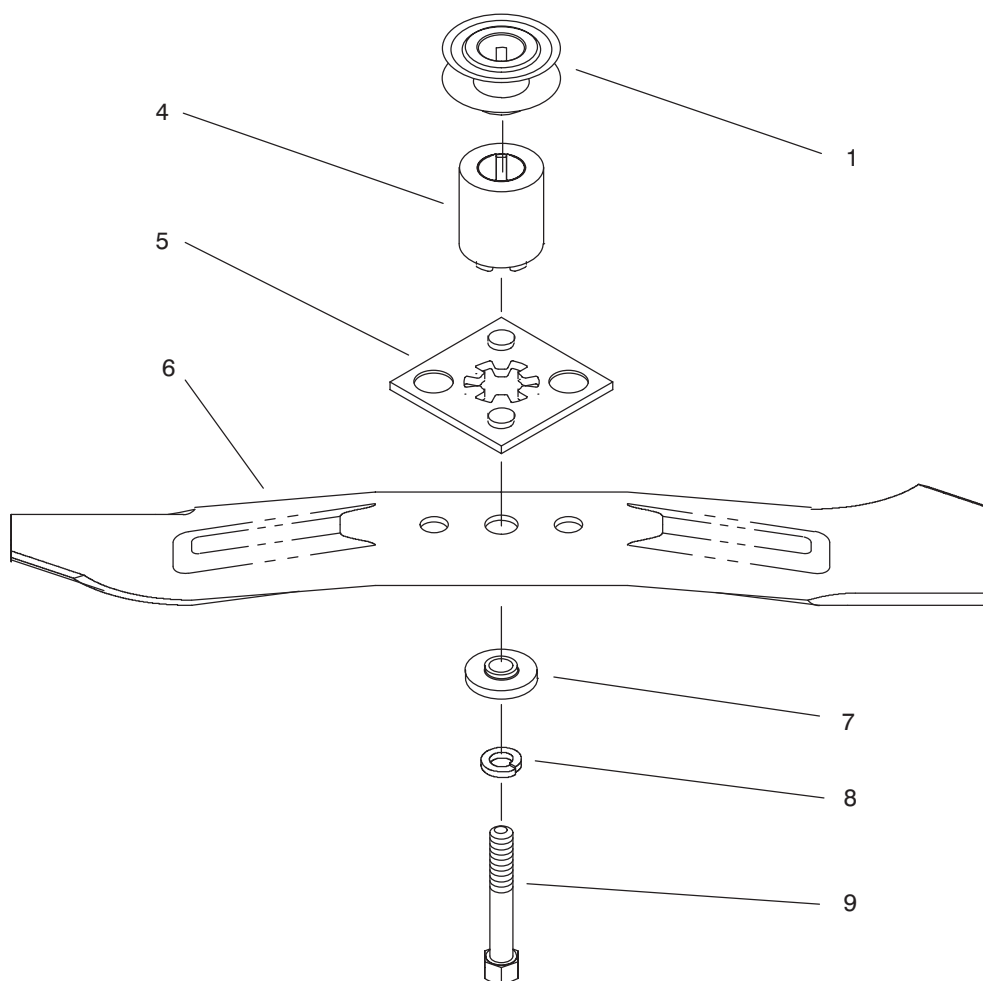


C-1983

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-0278	Pulley - Driver	1
4	92-8807	Hub - Blade Driver	1
5	146046	Plate - Blade Driver	1
6	612079	Blade - 48cm	1

Ref. No.	Part No.	Description	No. Used
7	92-8626	Spacer - Blade	1
8	3253-22	Washer - Lock	1
9	26-0670	Bolt - Blade	1

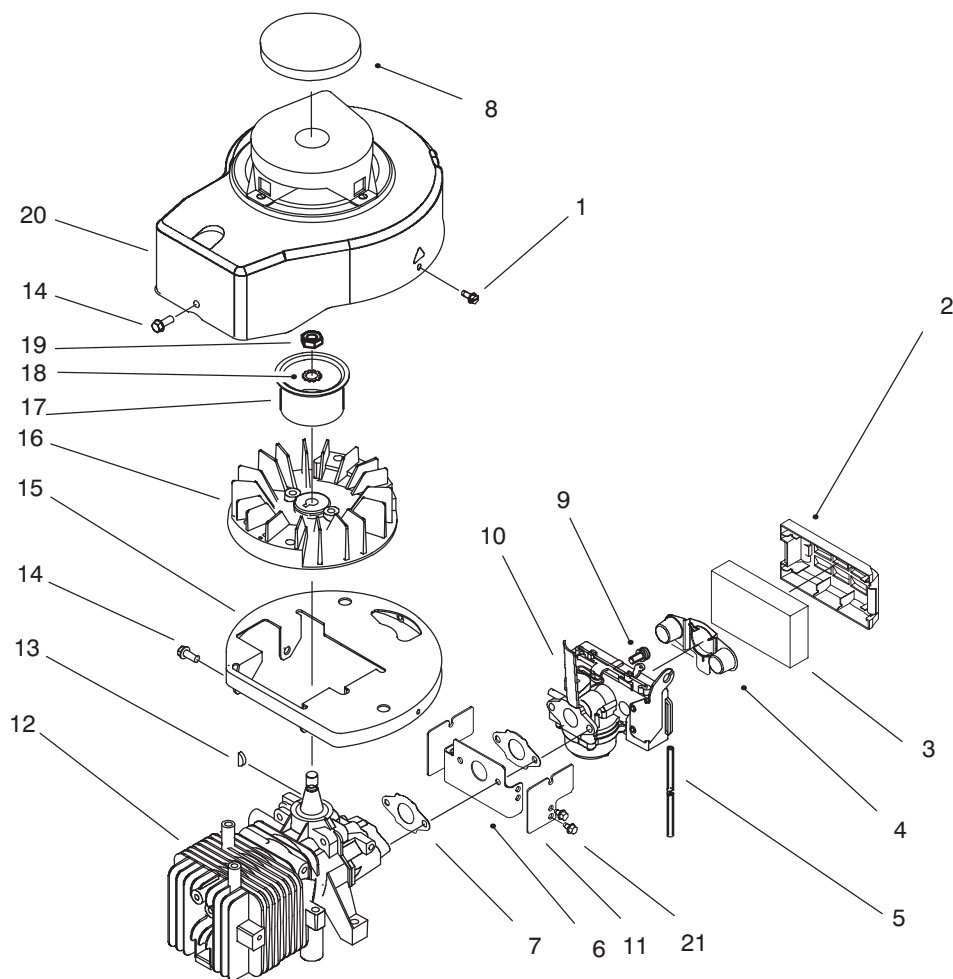


C-2438

SHROUD & BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	614699	Screw	3
2	93-1231	Cover — Air Filter	1
3	609493	Element — Air Filter	1
4	93-4320	Shield — Fuel	1
5	44-3174	Hose — Primer	1
6	93-4315	Shield — Carburetor	1
7	92-4948	Gasket — Carburetor	2
8	93-1201	Disc — Foam	1
9	609482	Screw	2
10	93-4331	Carburetor Assembly	1
11	93-4316	Shield — Governor	2


Ref. No.	Part No.	Description	No. Used
12	94-5731	Short Block Assembly	1
13	607199	Key	1
14	614702	Screw	4
15	93-1216	Base — Shroud	1
16	684743	Flywheel Assembly	1
17	614640	Hub — Starter	1
18	316959	Washer — Lock	1
19	130743	Nut	1
20	93-4304	Shroud	1
21	613269	Screw	4

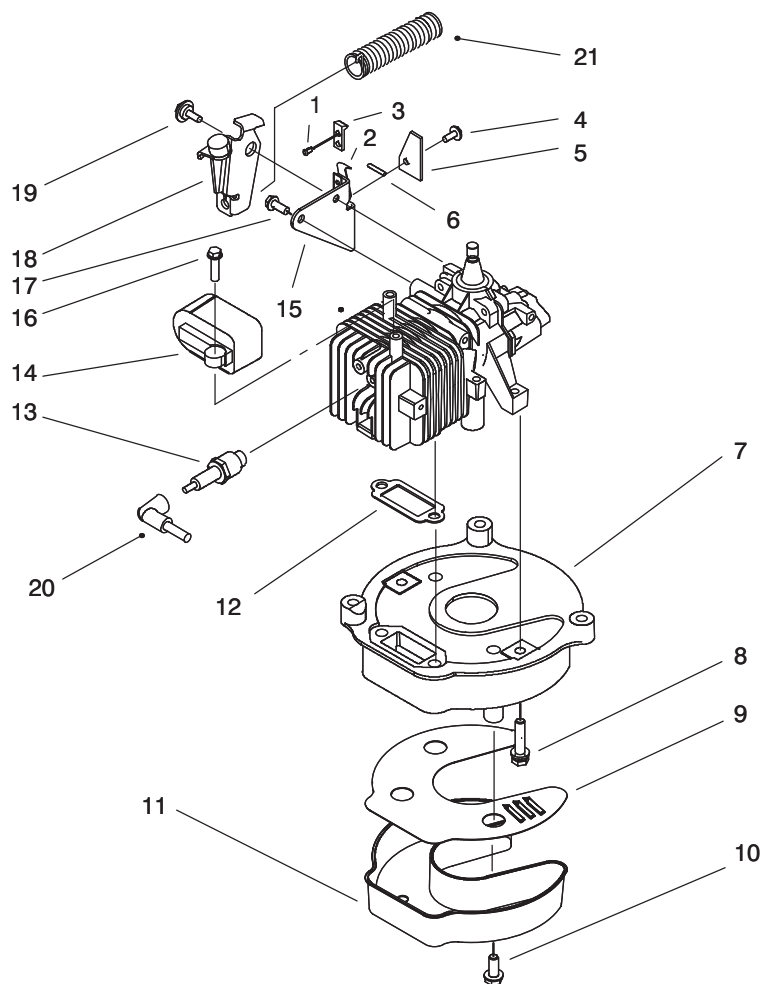

C-1899

BRAKE & MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3290—459	Rivet	2	12	93—1233	Gasket — Exhaust	1
2	60—9010	Strap — Ground	1	13	614009	Plug — Spark	1
3	92—2925	Strap — Insulation	1	14	684049	Ignition Assembly (Incl. Ref. #20)	1
4	12—5450	Screw — Thread Forming	1	15	84—7820	Plate — Brake Mount	1
5	53—4690	Stop — Ground Strap	1	16	613208	Screw — Hex Washer Hd.	2
6	92—1156	Wire — Brake Switch Lead	1	17	614702	Screw	1
7	614654	Plate — Muffler	1	18	93—4312	Plate — Brake Assembly	1
8	607601	Screw	4	19	92—9698	Screw — Shoulder	1
9	93—1217	Baffle	1	20	684179	Lead & Cover Assembly	1
10	609471	Screw	3	21	93—4306	Spring — Compression	1
11	93—1108	Cover — Muffler	1				

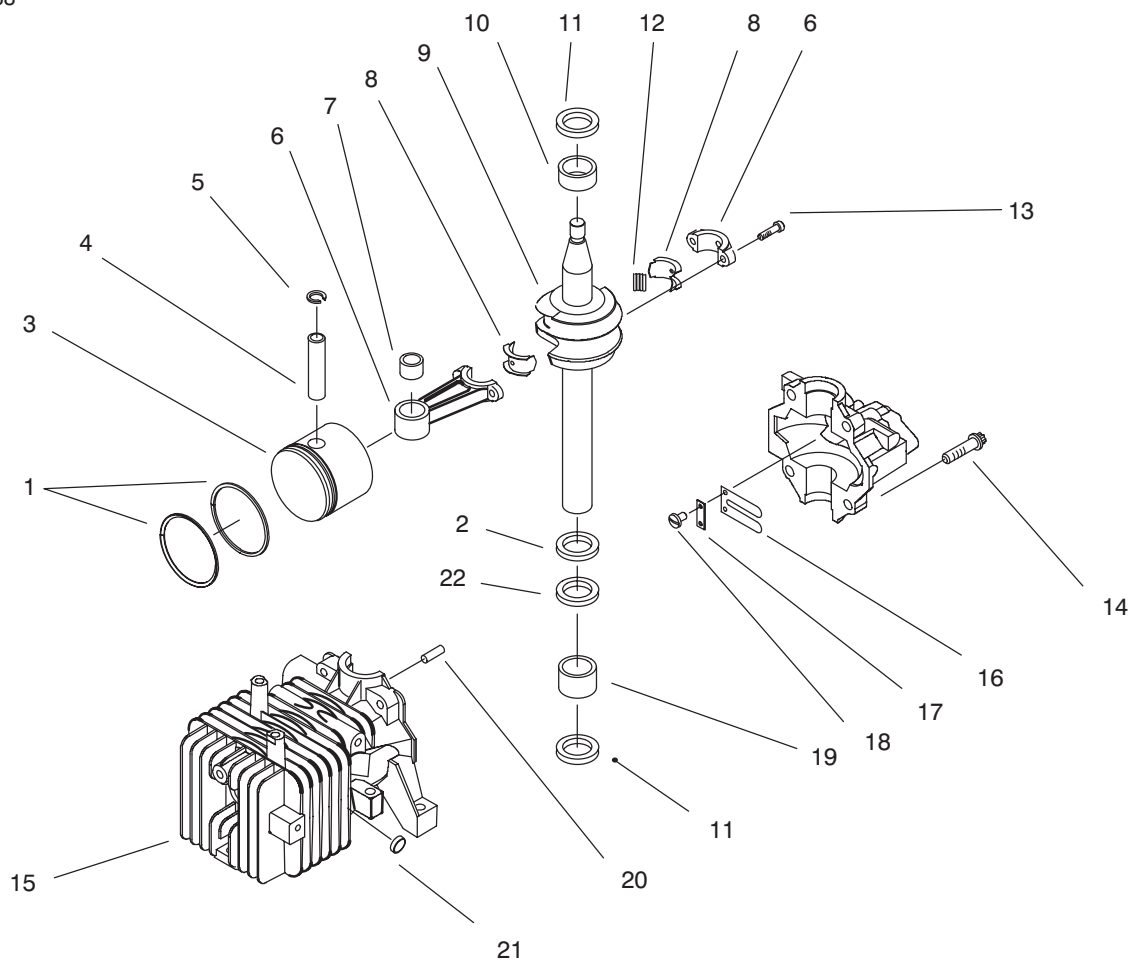


C-1295A

BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	681737	Set – Rings, Piston	1
2	252-76	Bearing – Thrust	1
3	92-4925	Piston & Connecting Rod (Incl. Ref. #1, 3-7 & 13)	1
4	606608	Pin – Wrist	1
5	303712	Ring – Retaining	2
6	92-4921	Connecting Rod Assembly (Incl. Ref. #8, 12 & 13)	1
7	92-4927	Bearing	1
8	677982	Liner – Split (Set of 2)	1
9	94-5733	Crankshaft	1
10	681830	Bearing – Upper Main	1

Ref. No.	Part No.	Description	No. Used
11	611396	Seal – Oil	2
12	609754	Bearing – Needle	1
13	611393	Screw – Hex. Hd.	2
14	614636	Screw – Hex. Washer Hd.	3
16	602588	Reed – Carburetor	1
17	602587	Reed – Backup Plate	1
18	612872	Screw	2
19	681831	Bearing – Needle	1
20	609629	Dowel	1
21	609123	Plug – Core	4
22	252-80	Washer – Thrust	1

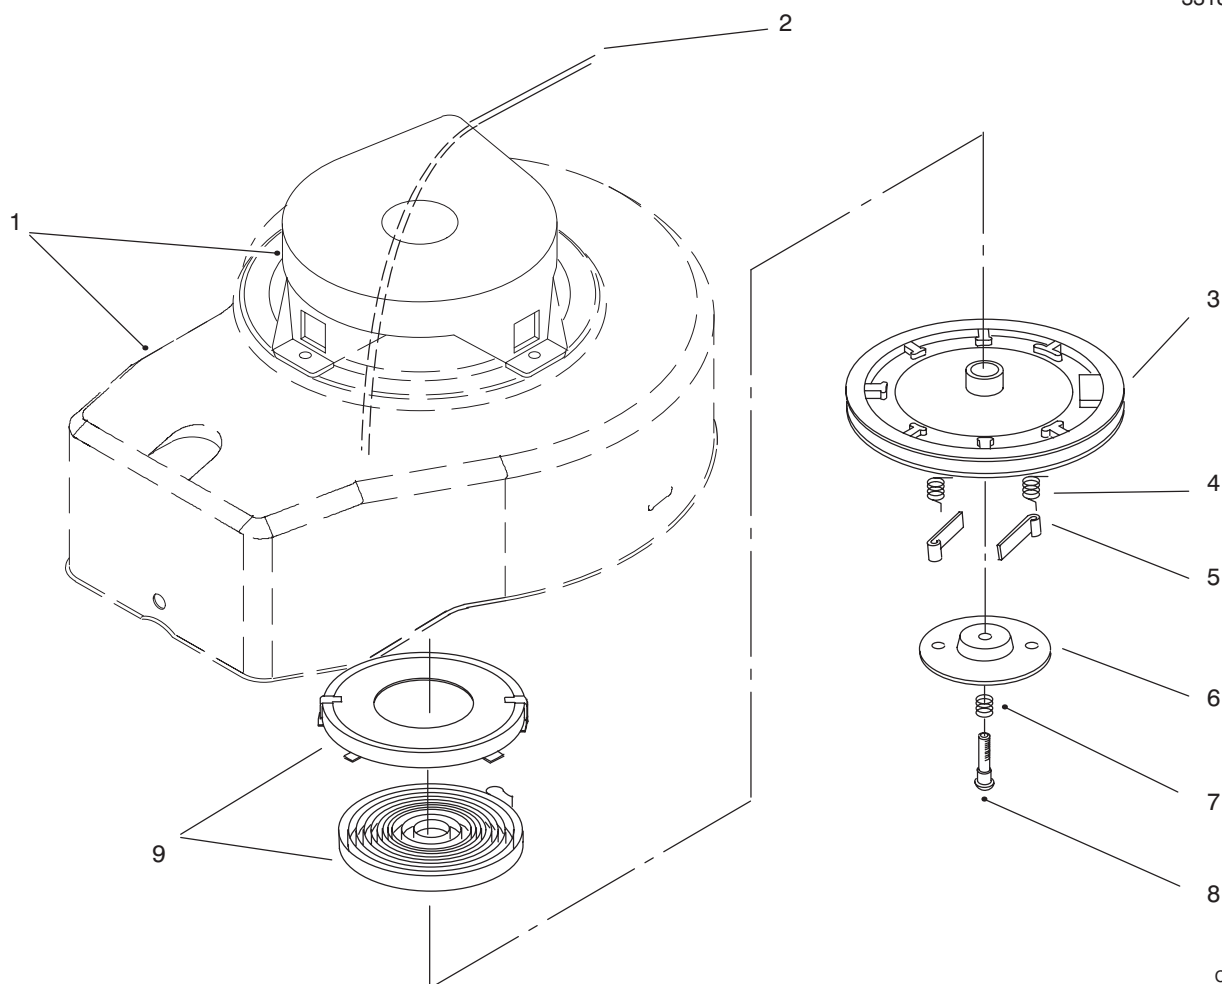


C-1309

RECOIL STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4304	Housing Assembly	1
2	93-4305	Rope - Starter	1
3	92-4929	Pulley Assembly	1
4	92-4930	Spring - Dog	2
5	92-4931	Dog	2

Ref. No.	Part No.	Description	No. Used
6	92-9692	Retainer	1
7	92-4933	Screw	1
8	92-4934	Spring	1
9	92-4935	Spring Keeper Assembly	1

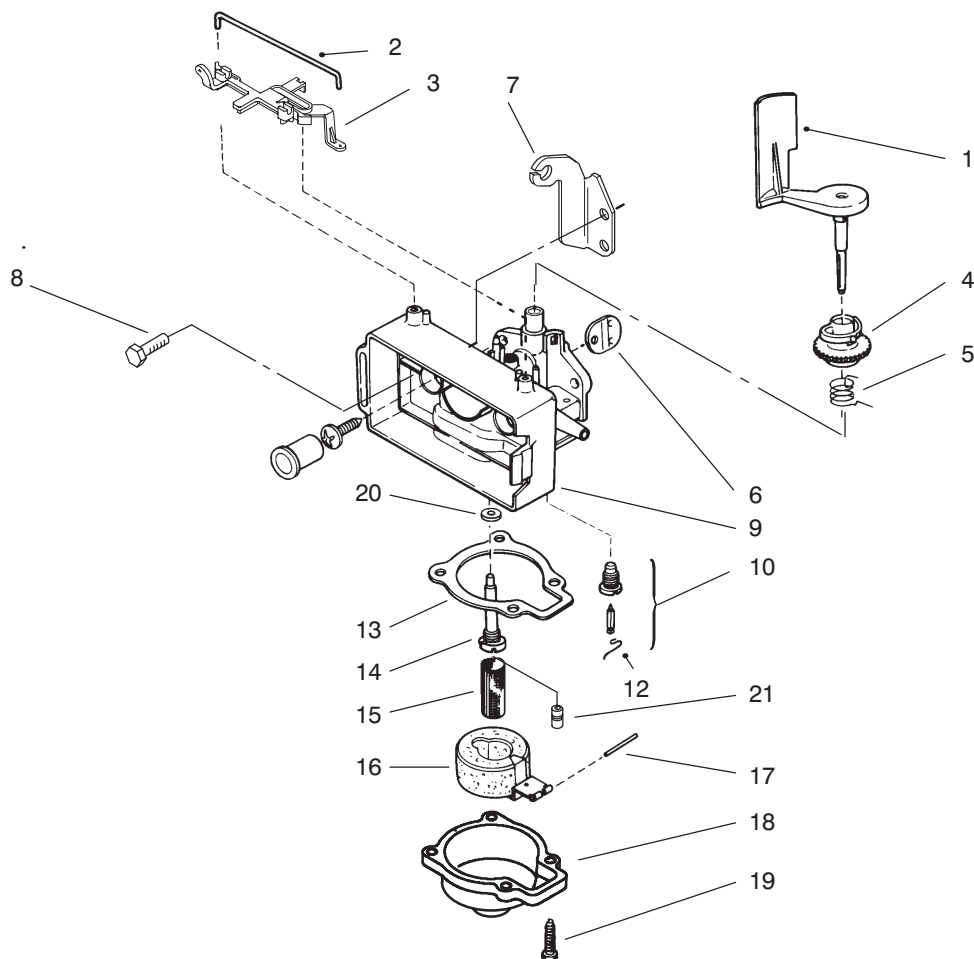


C-2130A

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-6376	Air Vane & Shaft	1	13	602850	Gasket	1
2	610165	Retainer - Speed Control	1	14	92-6371	Nozzle	1
3	93-1225	Lever - Speed Adjust	1	15	611071	Filter - Fuel	1
4	610834	Collar - Air Vane	1	16	678113	Float & Arm Assembly	1
5	92-4944	Spring - Governor	1	17	92-6389	Pin	1
6	92-6373	Disc - Throttle	1	18	92-9691	Float Chamber	1
7	92-4949	Bracket - Throttle Control	1	19	608850	Screw	4
8	613269	Screw	2	20	612383	Washer	1
9	93-4324	Carburetor Body	1	21	92-6370	Main Jet	1
10	92-9697	Kit - Float Valve, Body & Seat (Incl. Ref. #12)	1	*	92-6385	Jet - High Altitude	1
12	603145	Spring	1	*	93-4331	Carburetor Assembly (Incl. Ref. #7 pg.6)	1


*Not Illustrated

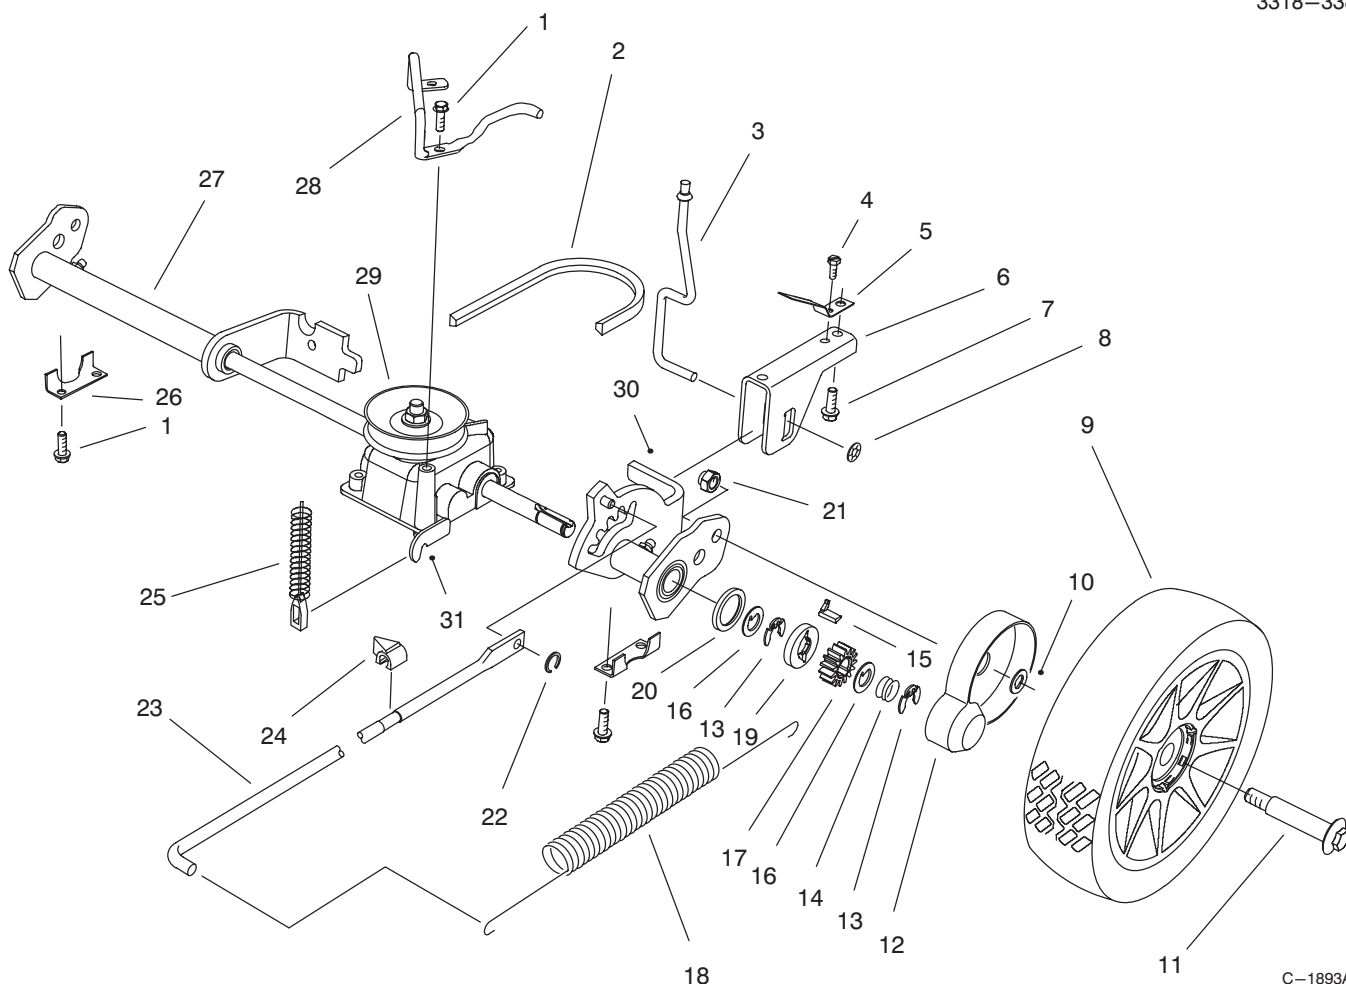

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw — Tapping	10	16	65-4740	Washer — Thrust Keyed	4
2	71-9450	V-Belt — Gear Case	1	17	65-4750	Gear — Pinion	2
3	71-7840	Rod — Trigger	1	18	92-9300	Spring — Counterbalance	1
4	32144-31	Screw — Tapping	1	19	65-4760	Washer	2
5	71-8060	Spring — Trigger Retainer	2	20	65-4710	Ring — Friction	2
6	71-8080	Saddle — H.O.C.	1	21	3296-59	Nut — Lock	2
7	63-8590	Screw	2	22	32151-93	Ring — Grip	1
8	32112-13	Nut — Push	1	23	92-9301	Rod — Link	1
9	92-9318	Wheel & Tire Assembly	2	24	71-7980	Indicator — H.O.C.	1
10	74-1670	Spacer — Wheel	2	25	71-8310	Spring — Compression	1
11	92-1057	Bolt — Shoulder	2	26	71-7770	Plate — Securing Rear	2
12	74-1660	Cover — Wheel	2	27	92-9310	Arm — R.H. Pivot	1
13	65-2720	Ring — Retaining	4	28	71-9850	Retainer — Belt	1
14	65-4720	Spring — Compression	2	29	71-9600	Case — Gear	1
15	66-6050	Key — Rocking L.H.	1	30	92-9311	Arm — L.H. Pivot	1
*	66-6040	Key — Rocking R.H.	1	31	71-9630	Bracket — Traction	1

*Not Illustrated

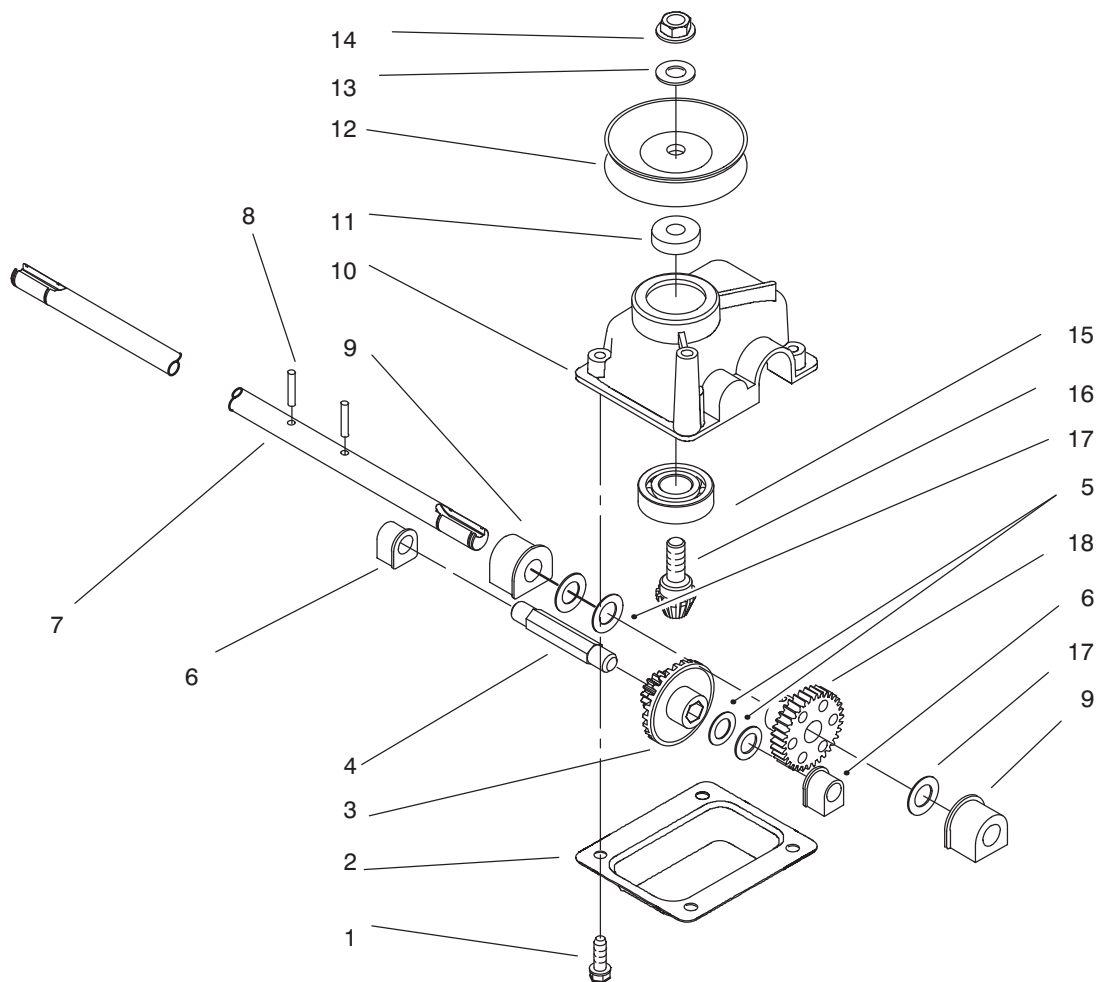


C-1292A

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw - Taptite	4
2	614668	Cover - Gear Case	1
3	55-3760	Pinion - 15 Tooth	1
4	614696	Shaft - Intermediate	1
5	36-4791	Washer	2
6	60-8750	Bushing	2
7	71-9620	Shaft - Output	1
8	32121-114	Pin - Groove	2
9	60-8850	Bushing - Output	2
10	614578	Gearcase	1

Ref. No.	Part No.	Description	No. Used
11	62-6660	Spacer	1
12	71-9610	Pulley - Half	2
13	3256-24	Washer	1
14	3296-5	Nut	1
15	38-7820	Bearing - Ball	1
16	60-8890	Gear - Bevel Pinion	1
17	36-4780	Washer - Thrust	3
18	614596	Gear 34 Tooth	1
*	71-9600	Gear Case Ass'y Complete	1


*Not Illustrated

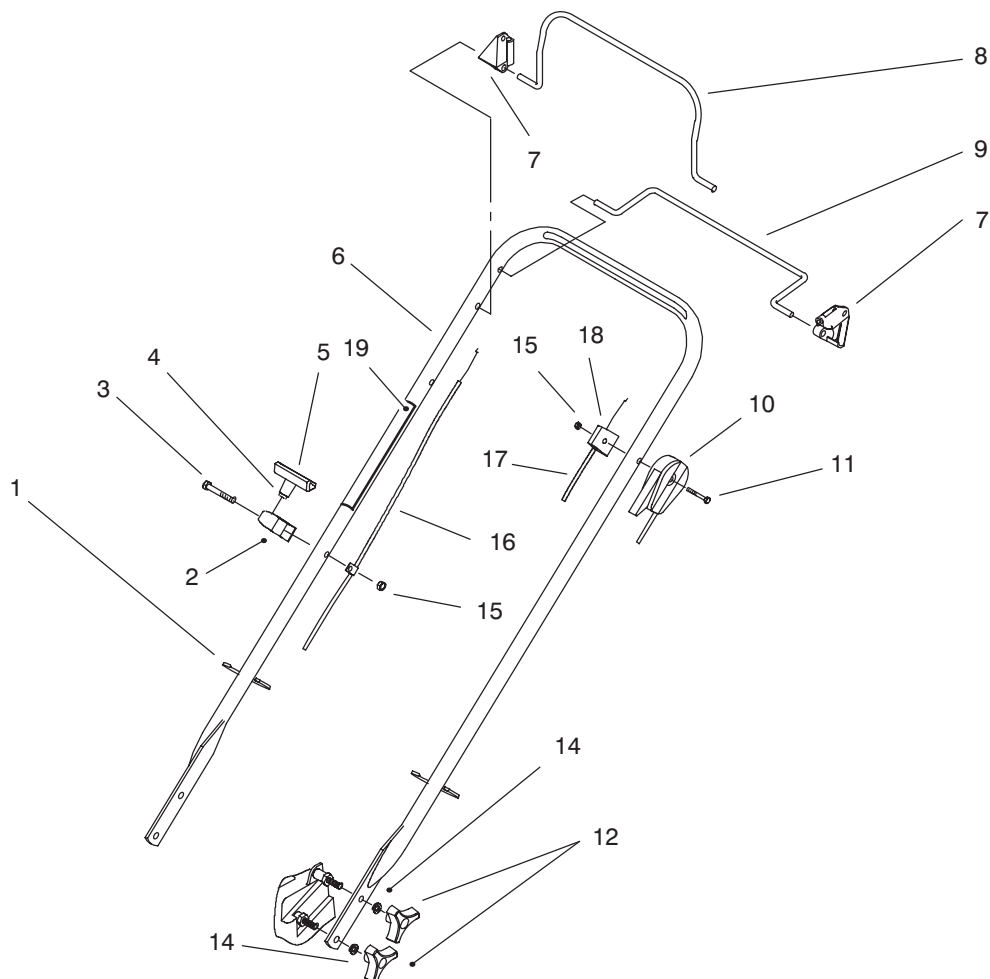

C-2214A

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3290—378	Tie — Cable	2	10	92—9327	Cable — Throttle	1
2	93—7383	Guide — Rope	1	11	321—57	Screw — Hex Hd. Cap	1
3	321—53	Screw — Hex Hd. Cap	1	12	93—7159	Knob	4
4	612825	Handle — Starter	1	14	3253—33	Washer — Lock	4
5	612824	Clip — Rope Insert	1	15	3296—73	Nut — Lock Insert	2
6	92—8800	Handle	1	16	92—9328	Cable — Brake	1
7	92—5412	Stop — Pivot	2	17	92—9316	Cable — Traction	1
8	92—1002	Bail — Flywheel Brake	1	18	92—7729	Anchor — Cable S.P. Upper	1
9	92—1001	Bail — S.P. Control	1	19	93—7266	Decal — Operation	1

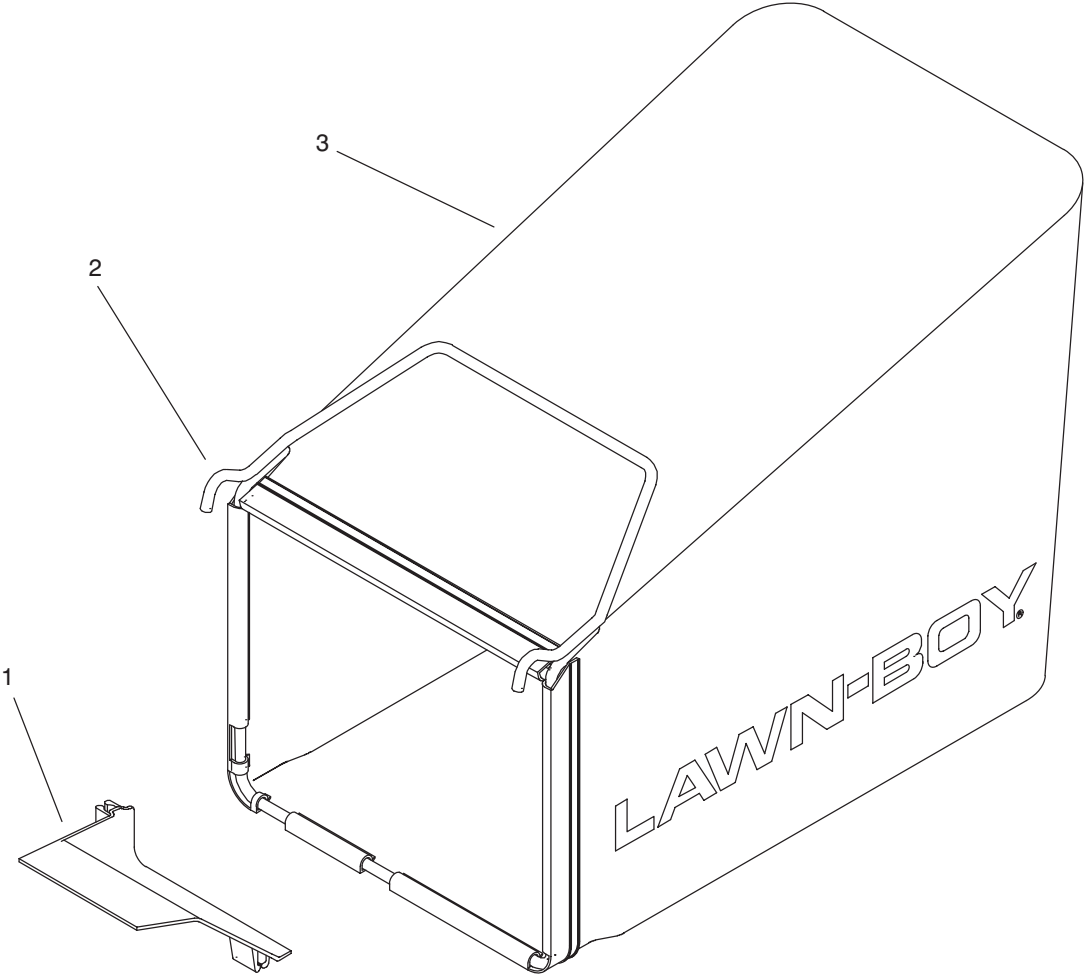

C-1890

BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-3750	Ramp - Grass Bag	1
2	71-8180	Frame	1

Ref. No.	Part No.	Description	No. Used
3	92-8890	Bag - Grass	1

LAWN—BOY PART NUMBER INDEX

3318—338

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
130743	Nut	6 19 1	49—2040	Screw — Taptite	12 1 4
146046	Plate — Blade Driver	5 5 1	53—4690	Stop — Ground Strap	7 5 1
303712	Ring — Retaining	8 5 2	55—3760	Pinion — 15 Tooth	12 3 1
316959	Washer — Lock	6 18 1	60—8750	Bushing	12 6 2
602587	Reed — Backup Plate	8 17 1	60—8850	Bushing — Output	12 9 2
602588	Reed — Carburetor	8 16 1	60—8890	Gear — Bevel Pinion	12 16 1
602850	Gasket	10 13 1	60—9010	Strap — Ground	7 2 1
603145	Spring	10 12 1	62—6660	Spacer	12 11 1
606608	Pin — Wrist	8 4 1	63—8590	Screw	11 7 2
607199	Key	6 13 1	65—2720	Ring — Retaining	11 13 4
607601	Screw	7 8 4	65—4710	Ring — Friction	11 20 2
608850	Screw	10 19 4	65—4720	Spring — Compression	11 14 2
609123	Plug — Core	8 21 4	65—4740	Washer — Thrust Keyed	11 16 4
609150	Baffle — Foam	4 14 1	65—4750	Gear — Pinion	11 17 2
609471	Screw	7 10 3	65—4760	Washer	11 19 2
609482	Screw	6 9 2	65—5210	Screw — Thread Forming	3 7 2
609493	Element — Air Filter	6 3 1	66—6040	Key — Rocking R.H.	11 * 1
609629	Dowel	8 20 1	66—6050	Key — Rocking L.H.	11 15 1
609754	Bearing — Needle	8 12 1	66—7460	Bulb — Primer	4 6 1
610165	Retainer — Speed Control	10 2 1	71—3750	Ramp — Grass Bag	14 1 1
610834	Collar — Air Vane	10 4 1	71—7770	Plate — Securing Rear	11 26 2
611071	Filter — Fuel	10 15 1	71—7840	Rod — Trigger	11 3 1
611393	Screw — Hex. Hd.	8 13 2	71—7860	Grip — Upper	3 8 1
611396	Seal — Oil	8 11 2	71—7870	Grip — Lower	3 3 1
612079	Blade — 48cm	5 6 1	71—7890	Guide — Rear Belt	3 31 1
612383	Washer	10 20 1	71—7900	Cap — L.H. Hinge Bolt	3 11 1
612782	Line — Gas	4 9 1	71—7910	Cap — R.H. Hinge Bolt	3 6 1
612824	Clip — Rope Insert	13 5 1	71—7920	Cover — Belt	3 29 1
612825	Handle — Starter	13 4 1	71—7930	Trigger — HOC	3 5 1
612872	Screw	8 18 2	71—7980	Indicator — H.O.C.	11 24 1
613208	Screw — Hex Washer Hd.	7 16 2	71—7990	Ramp — Discharge	3 18 1
613269	Screw	10 8 2	71—8060	Spring — Trigger Retainer	11 5 2
613269	Screw	6 21 4	71—8080	Saddle — H.O.C.	11 6 1
613311	Gasket	4 16 1	71—8180	Frame	14 2 1
614009	Plug — Spark	7 13 1	71—8310	Spring — Compression	11 25 1
614578	Gearcase	12 10 1	71—8830	Retainer — Shaft	3 21 2
614596	Gear 34 Tooth	12 18 1	71—9450	V—Belt — Gear Case	11 2 1
614636	Screw — Hex. Washer Hd.	8 14 3	71—9600	Case — Gear	11 29 1
614640	Hub — Starter	6 17 1	71—9600	Gear Case Ass'y Complete	12 * 1
614654	Plate — Muffler	7 7 1	71—9610	Pulley — Half	12 12 2
614668	Cover — Gear Case	12 2 1	71—9620	Shaft — Output	12 7 1
614696	Shaft — Intermediate	12 4 1	71—9630	Bracket — Traction	11 31 1
614699	Screw	6 1 3	71—9840	Spring — Door	3 12 2
614702	Screw	6 14 4	71—9850	Retainer — Belt	11 28 1
614702	Screw	7 17 1	74—1660	Cover — Wheel	11 12 2
677982	Liner — Split (Set of 2)	8 8 1	74—1670	Spacer — Wheel	11 10 2
678113	Float & Arm Assembly	10 16 1	84—7820	Plate — Brake Mount	7 15 1
681737	Set — Rings, Piston	8 1 1	92—1001	Bail — S.P. Control	13 9 1
681830	Bearing — Upper Main	8 10 1	92—1002	Bail — Flywheel Brake	13 8 1
681831	Bearing — Needle	8 19 1	92—1057	Bolt — Shoulder	11 11 2
684049	Ignition Assembly	7 14 1	92—1156	Wire — Brake Switch Lead	7 6 1
684179	Lead & Cover Assembly	7 20 1	92—1701	Rope — Stop	4 3 1
684743	Flywheel Assembly	6 16 1	92—2925	Strap — Insulation	7 3 1
12—5450	Screw — Thread Forming	7 4 1	92—4921	Connecting Rod Assembly	8 6 1
16—8889	Housing	3 28 1	92—4925	Piston & Connecting Rod	8 3 1
17—1569	Door — Discharge	3 13 1	92—4927	Bearing	8 7 1
26—0670	Bolt — Blade	5 9 1	92—4929	Pulley Assembly	9 3 1
36—4780	Washer — Thrust	12 17 3	92—4930	Spring — Dog	9 4 2
36—4791	Washer	12 5 2	92—4931	Dog	9 5 2
38—7820	Bearing — Ball	12 15 1	92—4933	Screw	9 7 1
40—1940	Washer	3 24 2	92—4934	Spring	9 8 1
44—2750	Body — Primer	4 7 1	92—4935	Spring Keeper Assembly	9 9 1
44—3174	Hose — Primer	6 5 1	92—4944	Spring — Governor	10 5 1
44—3174	Hose — Primer	4 8 1	92—4948	Gasket — Carburetor	6 7 2

*Not Illustrated

LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-4949	Bracket - Throttle Control	10 7 1	93-3660	Cap - Gas	4 5 1
92-5412	Stop - Pivot	13 7 2	93-4105	Decal - Danger	3 1 1
92-6370	Main Jet	10 21 1	93-4302	Screw - Sems	4 1 3
92-6371	Nozzle	10 14 1	93-4304	Housing Assembly	9 1 1
92-6373	Disc - Throttle	10 6 1	93-4304	Shroud	6 20 1
92-6376	Air Vane & Shaft	10 1 1	93-4305	Rope - Starter	9 2 1
92-6385	Jet - High Altitude	10 * 1	93-4306	Spring - Compression	7 21 1
92-6389	Pin	10 17 1	93-4312	Plate - Brake Assembly	7 18 1
92-7729	Anchor - Cable S.P. Upper	13 18 1	93-4315	Shield - Carburetor	6 6 1
92-8615	Decal - Shroud	4 12 1	93-4316	Shield - Governor	6 11 2
92-8626	Spacer - Blade	5 7 1	93-4320	Shield - Fuel	6 4 1
92-8800	Handle	13 6 1	93-4324	Carburetor Body	10 9 1
92-8806	Screw - Hex Hd. Cap	3 10 2	93-4331	Carburetor Assembly	6 10 1
92-8807	Hub - Blade Driver	5 4 1	93-4331	Carburetor Assembly	10 * 1
92-8808	Stud - Ball Bearing	3 32 1	93-7159	Knob	13 12 4
92-8810	Wheel & Tire Assembly	3 25 2	93-7161	Spacer - Handle	3 16 2
92-8811	Bolt - Wheel	3 26 2	93-7162	Spacer - Handle	3 17 2
92-8818	Screw - Hex Hd. Cap	3 30 2	93-7266	Decal - Operation	13 19 1
92-8828	Decal - Shroud	4 2 1	93-7383	Guide - Rope	13 2 1
92-8837	Decal - Deck 450VS	3 27 1	94-5731	Short Block Assembly	6 12 1
92-8890	Bag - Grass	14 3 1	94-5733	Crankshaft	8 9 1
92-8898	Tank Shroud Assembly	4 4 1	252-76	Bearing - Thrust	8 2 1
92-9300	Spring - Counterbalance	11 18 1	252-80	Washer - Thrust	8 22 1
92-9301	Rod - Link	11 23 1	321-53	Screw - Hex Hd. Cap	13 3 1
92-9304	Pivot - Front	3 22 1	321-57	Screw - Hex Hd. Cap	13 11 1
92-9310	Arm - R.H. Pivot	11 27 1	3253-22	Washer - Lock	5 8 1
92-9311	Arm - L.H. Pivot	11 30 1	3253-33	Washer - Lock	13 14 4
92-9313	Spacer - Door	3 15 2	3256-24	Washer	12 13 1
92-9316	Cable - Traction	13 17 1	3284-5	Pin - Groove	3 4 1
92-9318	Wheel & Tire Assembly	11 9 2	3290-378	Tie - Cable	13 1 2
92-9327	Cable - Throttle	13 10 1	3290-459	Rivet	7 1 2
92-9328	Cable - Brake	13 16 1	3296-5	Nut	12 14 1
92-9691	Float Chamber	10 18 1	3296-29	Nut - Lock	3 33 1
92-9692	Retainer	9 6 1	3296-59	Nut - Lock	3 23 2
92-9697	Kit - Float Valve, Body	10 10 1	3296-59	Nut - Lock	11 21 2
92-9698	Screw - Shoulder	7 19 1	3296-73	Nut - Lock Insert	13 15 2
93-0278	Pulley - Driver	5 1 1	32112-1	Nut - Push	3 20 1
93-1108	Cover - Muffler	7 11 1	32112-13	Nut - Push	11 8 1
93-1201	Disc - Foam	6 8 1	32121-114	Pin - Groove	12 8 2
93-1216	Base - Shroud	6 15 1	32144-4	Screw - Tapping	11 1 10
93-1217	Baffle	7 9 1	32144-4	Screw - Tapping	3 19 10
93-1225	Lever - Speed Adjust	10 3 1	32144-31	Screw - Tapping	11 4 1
93-1230	Cover	4 15 1	32144-70	Screw - Tapping	3 2 1
93-1231	Cover - Air Filter	6 2 1	32144-97	Screw - Pan Hd. Phillips	3 9 2
93-1233	Gasket - Exhaust	7 12 1	32144-102	Screw - Engine	4 10 3
93-3175	Baffle	4 13 1	32151-93	Ring - Grip	11 22 1