

LAWN-BOY®

Euro Series

Walk—Behind Power Mower

MODEL NO. 10800B—6900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.


NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Housing Assembly	3	Engine Assembly	6–9
Engine Assembly	4	Recoil Starter Assembly	10
Handle Assembly	5	Carburetor Assembly	11

Accessories


Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800	Leaf Bag Kit w/Chute	Model No. 89811

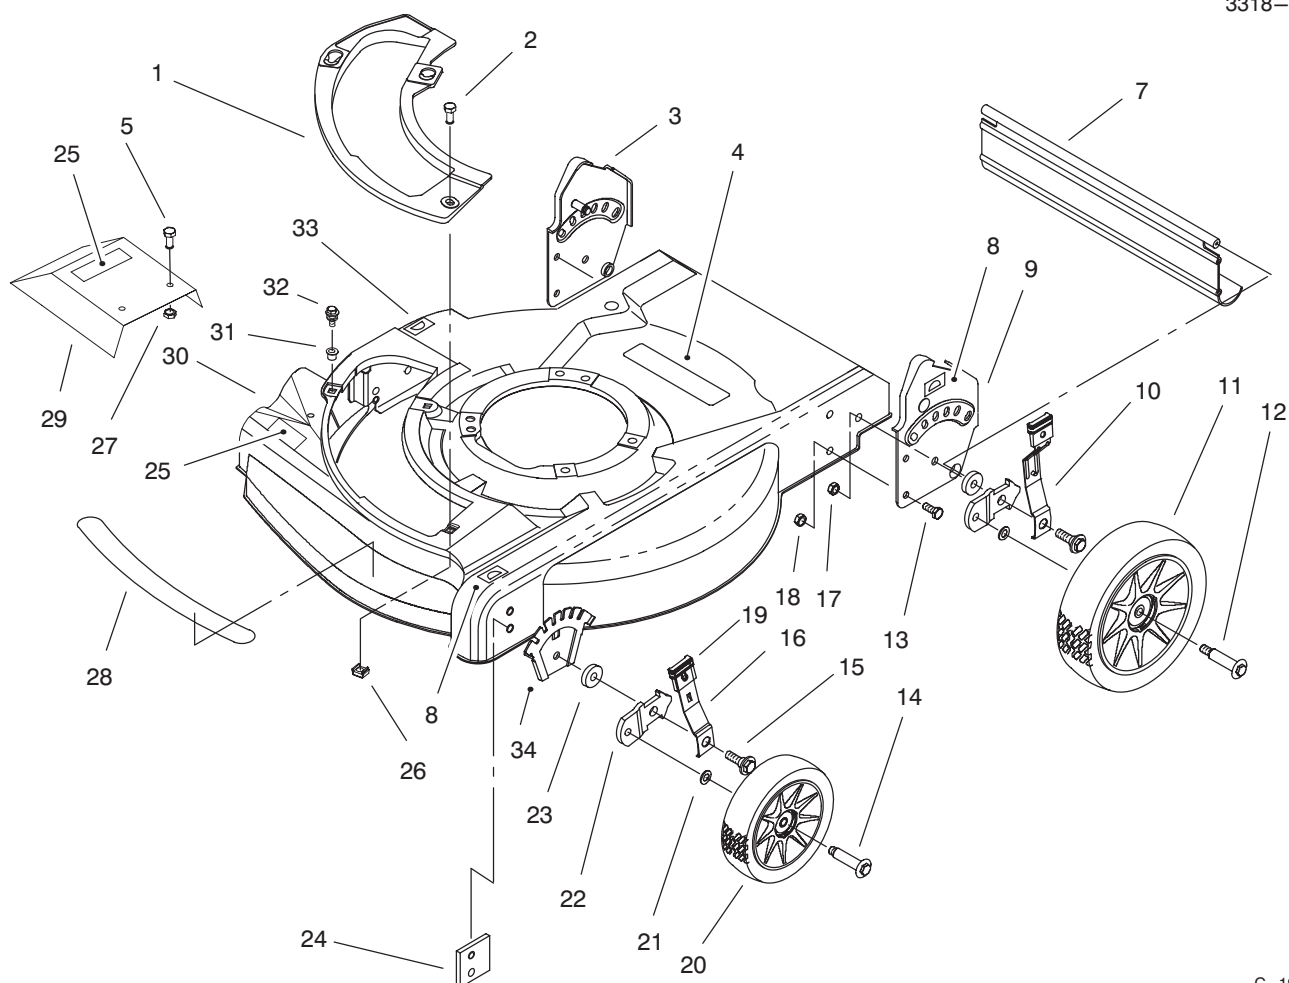

C-1927B

HOUSING ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	607560	Plate – Cover	1	19	92–1008	Knob – Height Adjust	4
2	49–2040	Screw	1	20	92–8885	Wheel & Tire Assembly	2
3	92–7742	Handle Brkt. Ass'y – R.H.	1	21	40–1940	Washer	4
4	93–6657	Decal – Danger	1	22	614637	Bracket – Wheel Height Adj.	4
5	32105–15	Screw	2	23	92–4890	Washer	4
7	92–8647	Shield – Trailing	1	24	92–7731	Plate – Baffle	2
8	93–6671	Decal – H.O.C. L.H.	2	25	93–6667	Decal – Warning	2
9	92–7743	Handle Brkt. Ass'y – L.H.	1	26	613765	Nut – Cage	1
10	92–1005	Spring Arm Ass'y	2	27	3296–42	Nut – Lock	2
11	92–8887	Wheel & Tire Assembly	2	28	92–8833	Decal – Deck 345VP	1
12	614650	Bolt – Shoulder	2	29	93–7415	Guard – Plate	1
13	322–3	Screw – Hex Hd. Cap	4	30	16–5659	Housing	1
14	92–1099	Bolt – Shoulder	2	31	604604	Grommet – Plastic	2
15	614672	Bolt – Shoulder Height Adj.	4	32	614677	Screw – Sems Thr'd Form	2
16	614687	Spring Arm Ass'y	2	33	93–6670	Decal – H.O.C. R.H.	2
17	3296–39	Nut – Lock	2	34	92–4881	Plate – Height Adjust	2
18	3296–29	Nut – Lock	4				

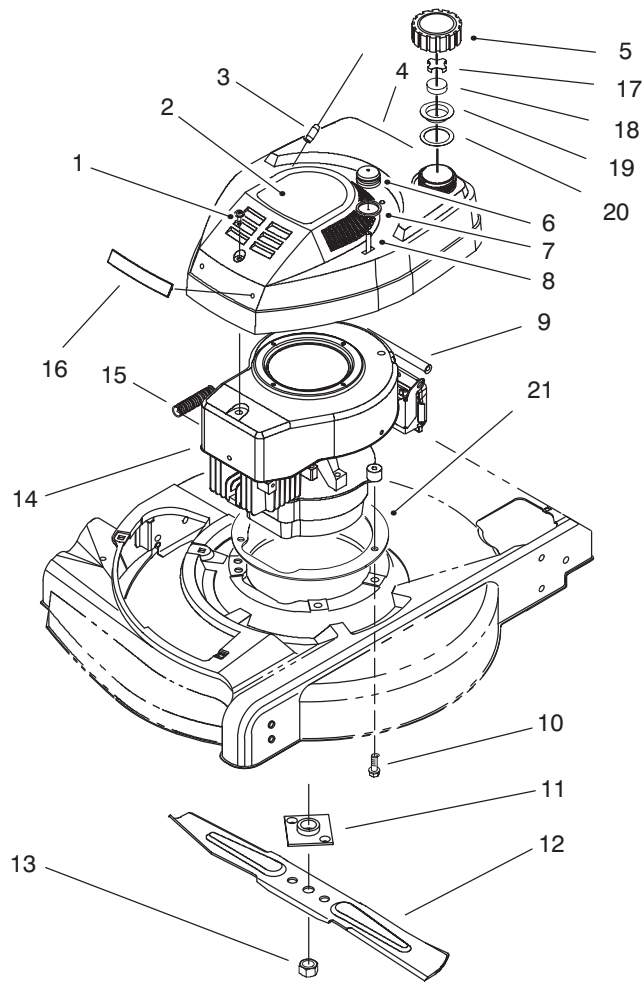

C-1928A

ENGINE ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4302	Screw – Sems	3	11	677525	Plate & Collar Assembly	1
2	92-8828	Decal – Shroud	1	12	612543	Blade – 21”	1
3	92-1701	Rope – Stop	1	13	603164	Nut – Blade	1
4	92-8619	Tank & Shroud Assembly	1	14		Engine	1
5	93-3660	Gas Cap Assembly (Incl. Ref. #17-20)	1	15	66-5370	Spring – Compression	1
6	66-7460	Bulb – Primer	1	16	92-8615	Applique – Shroud	1
7	44-2750	Body – Primer	1	17	93-3175	Baffle	1
8	44-3174	Hose – Primer	1	18	609150	Baffle – Foam	1
9	612782	Line – Gas	1	19	93-1230	Cover	1
10	92-1624	Screw – Engine	3	20	613311	Gasket	1
				21	93-7152	Plate – Engine	1

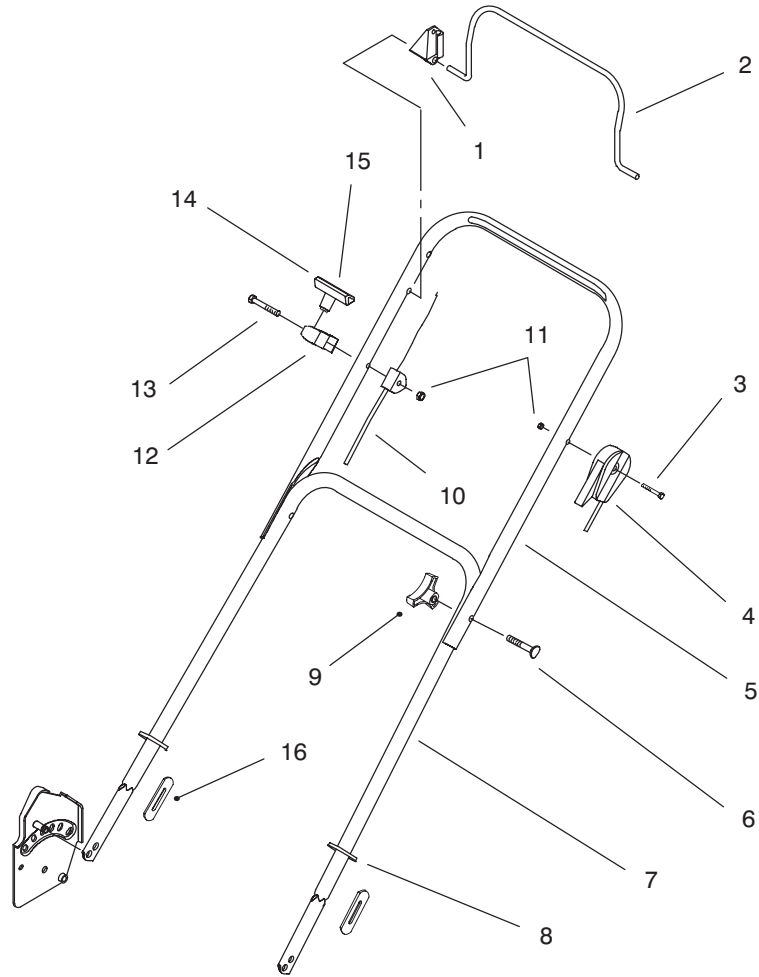

C-1929A

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-5412	Stop - Pivot	1	9	614243	Knob	2
2	92-1002	Bail - Flywheel Brake	1	10	92-7738	Cable - Flywheel Brake	1
3	321-14	Screw - Hex Hd. Cap	1	11	3296-73	Nut - Lock	2
4	92-9326	Cable - Throttle	1	12	92-7720	Guide - Rope	1
5	92-7737	Handle - Upper	1	13	321-53	Screw - Hex Hd Cap	1
6	614697	Screw - Handle	2	14	612825	Handle - Starter	1
7	614643	Handle - Lower	1	15	612824	Clip - Rope Insert	1
8	3290-378	Tie - Cable	2	16	93-3653	Guard - Handle	2

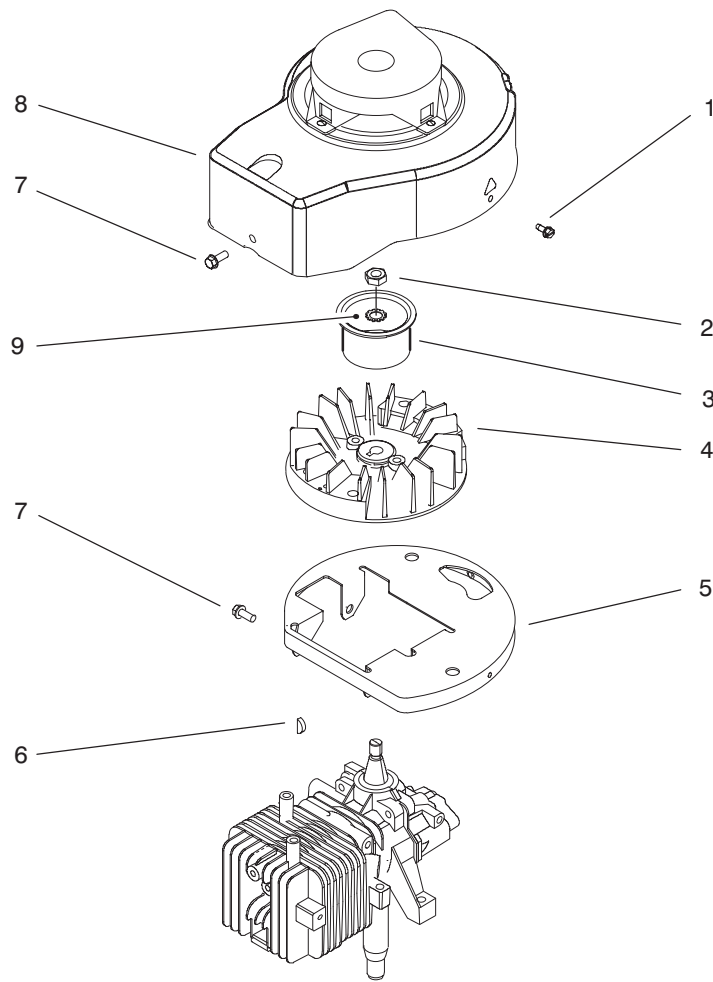


C-2128A

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	614699	Screw	3
2	130743	Nut	1
3	614640	Hub – Starter	1
4	684743	Flywheel	1
5	93–1216	Base – Shroud	1


Ref. No.	Part No.	Description	No. Used
6	607199	Key	1
7	614702	Screw	4
8	93–4304	Shroud Assembly	1
9	316959	Washer – Lock	1

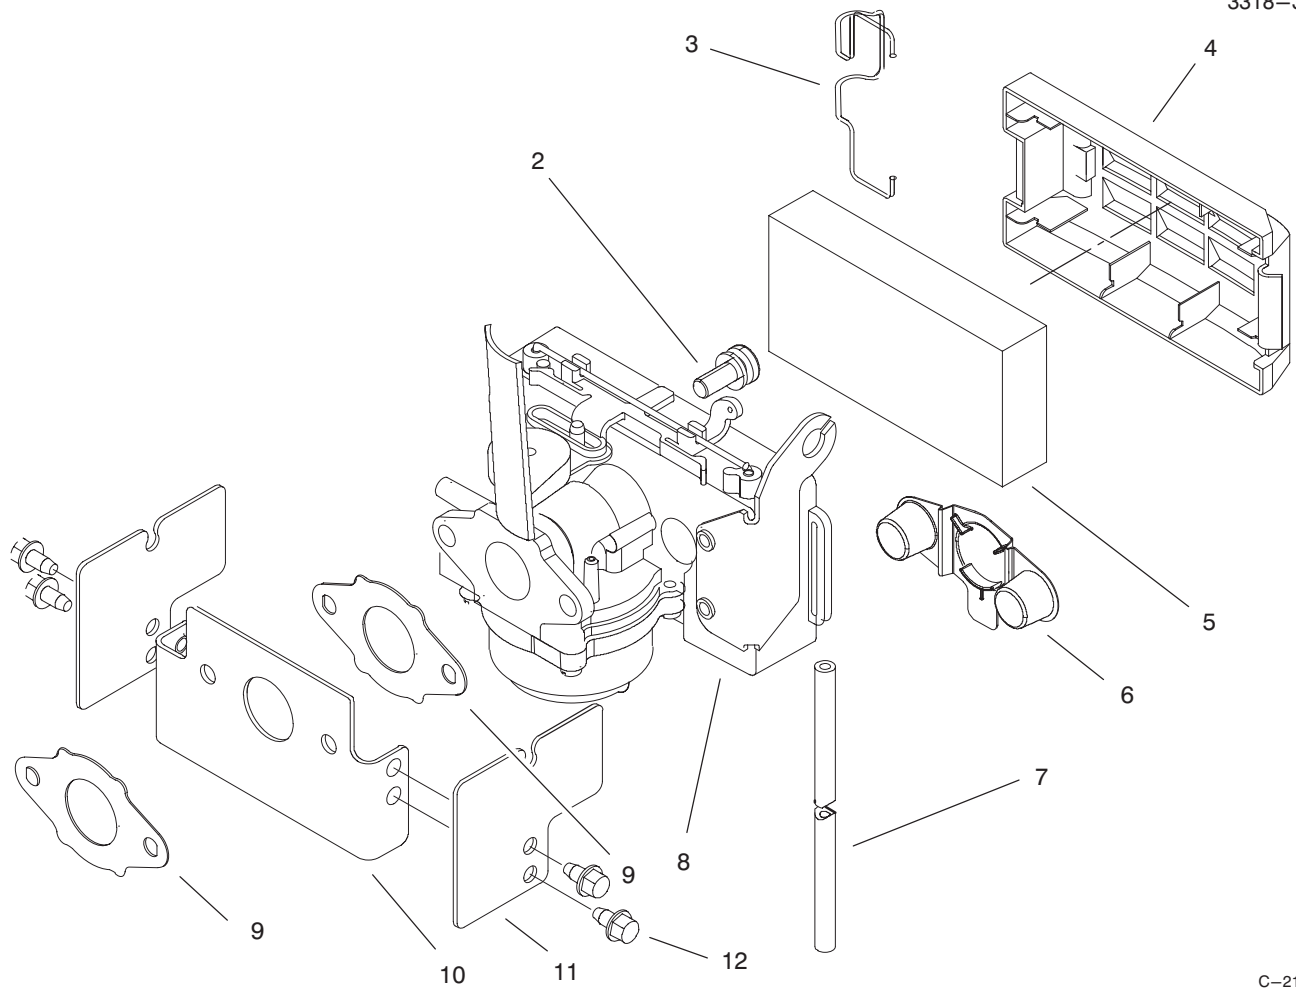

C-2129B

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
2	609482	Screw	2	8	93-4331	Carburetor Assembly (Incl. Ref. #9)	1
3	610383	Retainer - Filter	1	9	92-4948	Gasket - Carburetor	2
4	93-1231	Cover - Air Cleaner	1	10	93-4315	Shield - Carburetor (Intl.)	1
5	609493	Element - Filter Air	1	11	93-4316	Shield - Governor V (Intl.)	2
6	93-4320	Shield - Fuel	2	12	613269	Screw	4
7	44-3174	Hose - Primer	1				

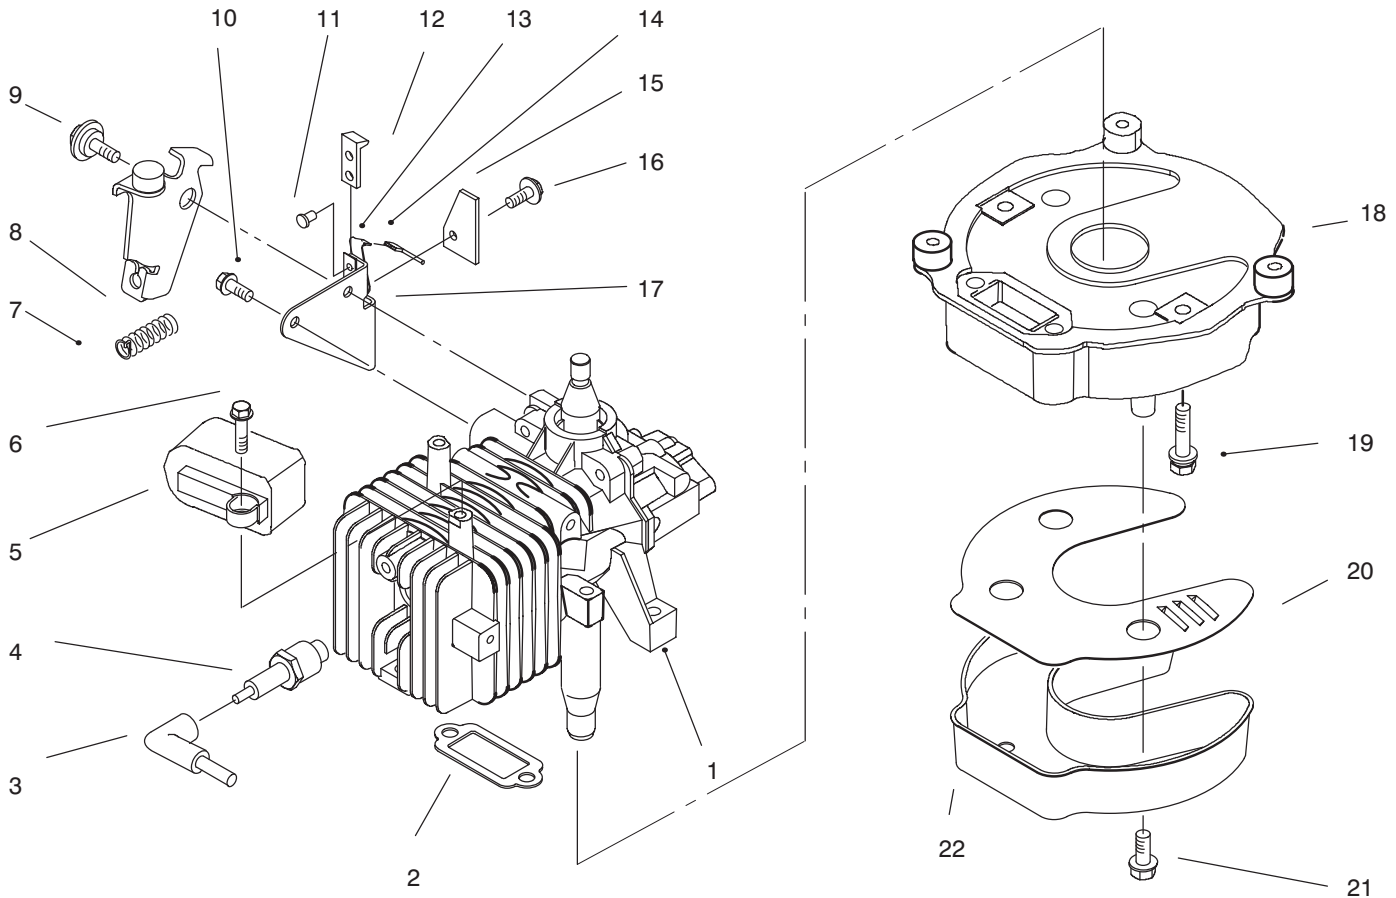


C-1296

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	94-5737	Short Block (Incl. Ref. #2, Ref. #9 pg. 8)	1
2	93-1233	Gasket - Exhaust	1
3		CD Ignition	1
*	681678	Cover & Terminal	1
4	614009	Plug - Spark	1
5	684049	CD Ignition (Incl. Ref. #3)	1
6	613208	Screw - Hex. Washer Hd.	2
7	93-4306	Spring - Compression	1
8	93-4312	Brake Plate Assembly	1
9	92-9698	Screw - Shoulder	1
10	614702	Screw	1

Ref. No.	Part No.	Description	No. Used
11	3290-459	Rivet - Plastic	2
12	92-2925	Strap - Insulation	1
13	60-9010	Strap - Ground	1
14	92-1156	Wire - Brake Switch Lead	1
15	53-4690	Stop - Ground Strap	1
16	12-5450	Screw - Thread Forming	1
17	14-6009	Mounting Plate	1
18	614654	Plate - Muffler	1
19	607601	Screw	4
20	93-1217	Baffle	1
21	609471	Screw	3
22	614674	Cover - Muffler	1

*Not Illustrated

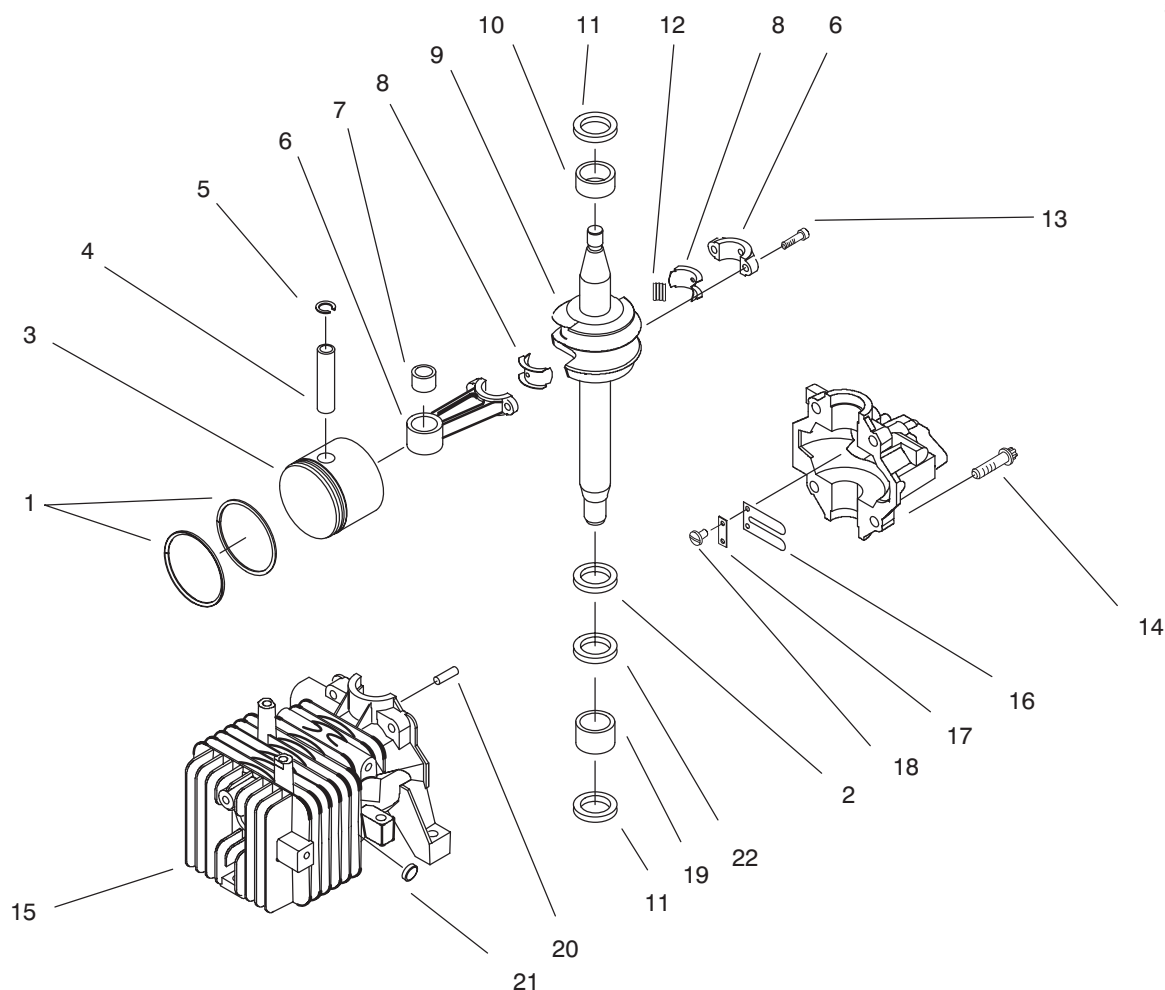


C-2489A

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	681737	Set – Ring	1	11	611396	Seal – Oil	2
2	252–76	Bearing – Thrust	1	12	609754	Bearing – Needle	1
3	92–4925	Piston & Connecting Rod (Incl. Ref. #1–2, 4–8, 12, & 13)	1	13	611393	Screw – Hex. Hd.	2
4	606608	Pin – Wrist	1	14	614636	Screw – Torx. Washer Hd.	4
5	303712	Ring – Retaining	2	16	602588	Reed – Carburetor	1
6	92–4921	Connecting Rod Assembly (Incl. Ref. #6–8, 12, & 13)	1	17	602587	Reed – Backup Plate	1
7	92–4927	Bearing	1	18	612872	Screw	2
8	677982	Liner – Split (Set of 2)	1	19	681831	Bearing – Needle	1
9	94–5713	Crankshaft	1	20	609629	Dowel	1
10	681830	Bearing – Upper Main	1	21	609123	Plug – Core	4
				22	252–80	Washer – Thrust	1
				*	94–5714	Cylinder & Crankcase Ass'y	1

*Not Illustrated

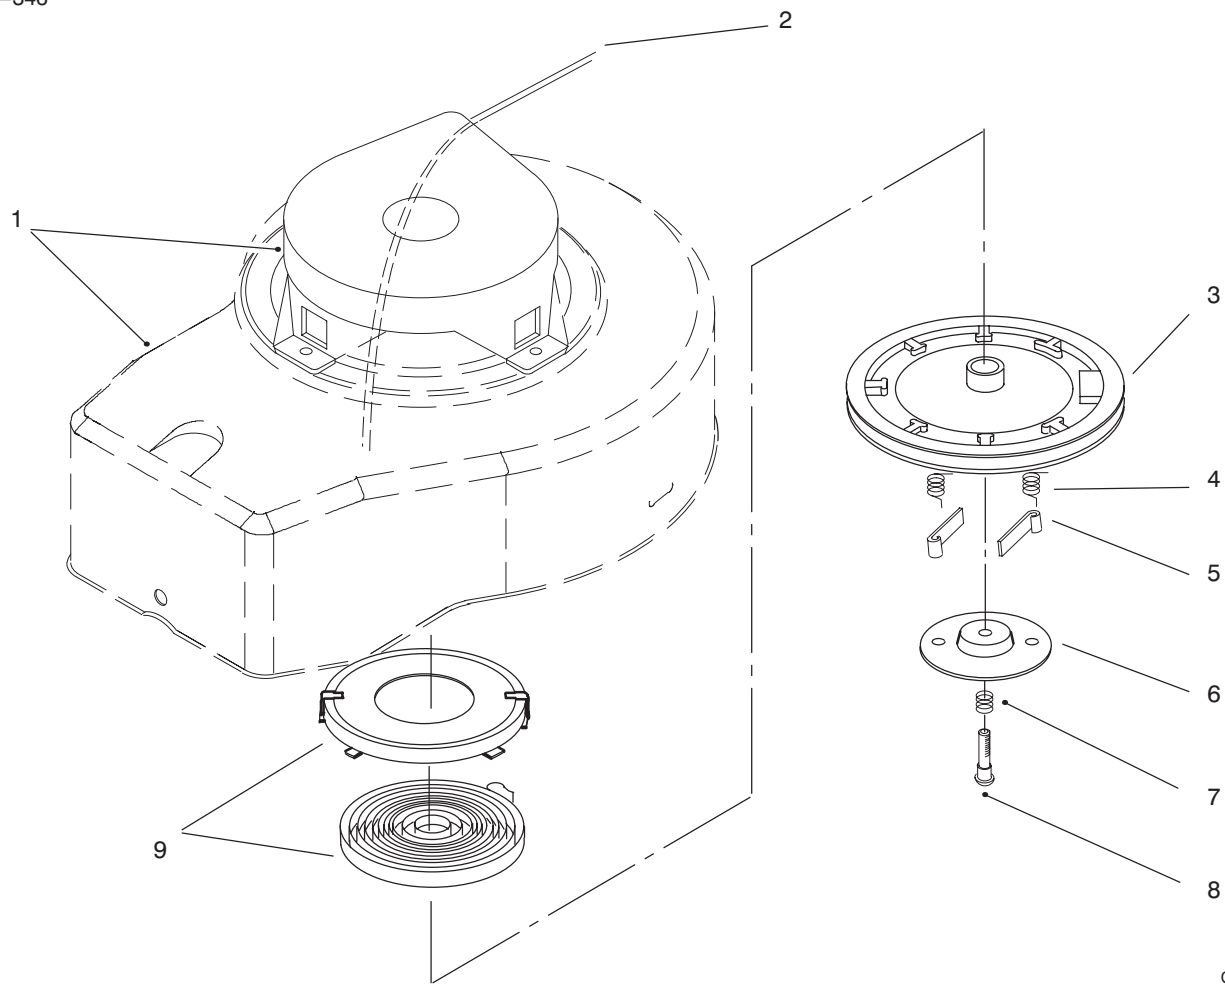


C-1309

RECOIL STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4304	Housing Assembly	1
2	93-4305	Rope - Starter	1
3	92-4929	Pulley Assembly	1
4	92-4930	Spring - Dog	2
5	92-4931	Dog	2
6	92-9692	Retainer	1

Ref. No.	Part No.	Description	No. Used
7	92-4933	Screw	1
8	92-4934	Spring	1
9	92-4935	Spring Keeper Assembly	1
*	93-1236	Recoil Assembly (Incl. Ref. #2-9)	1

* Not Illustrated

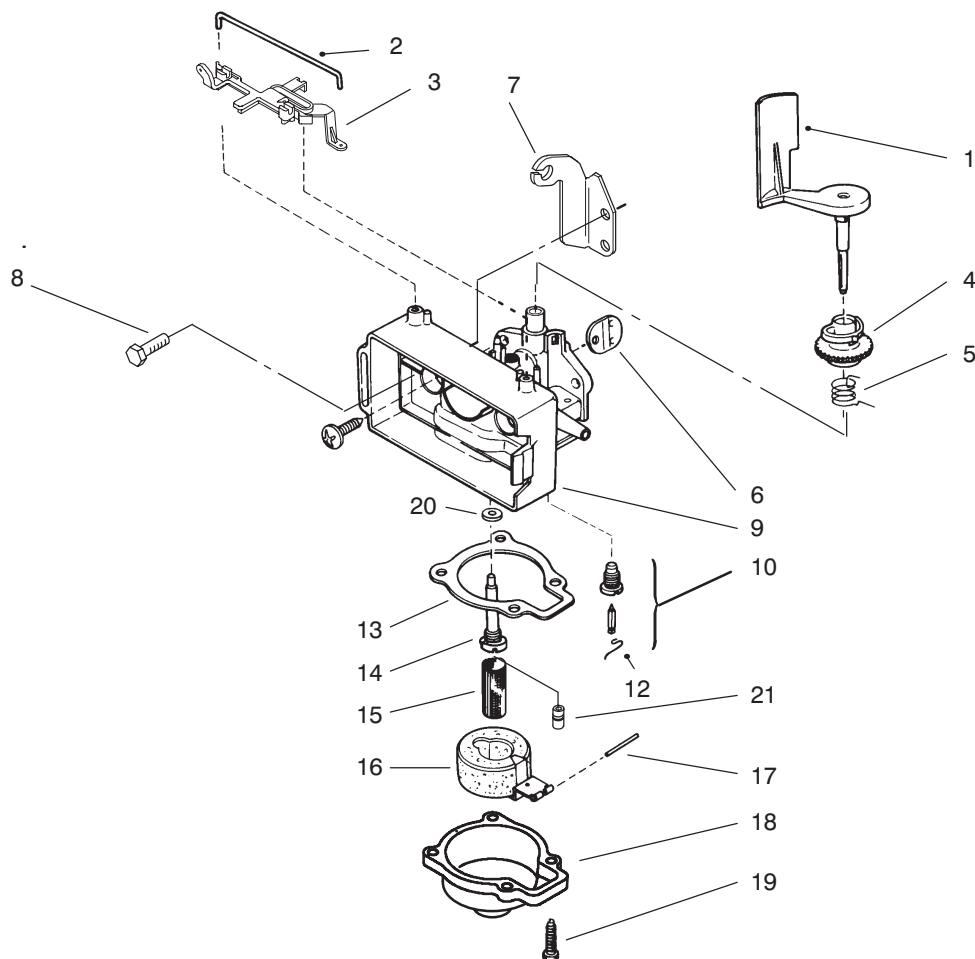

C-2130B

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-6376	Air Vane & Shaft	1	12	603145	Spring	1
2	610165	Retainer – Speed Control	1	13	602850	Gasket	1
3	93-1225	Lever – Speed Adjust	1	14	92-6371	Nozzle	1
4	610834	Collar – Air Vane	1	15	611071	Filter – Fuel	1
5	92-4944	Spring – Governor	1	16	678113	Float & Arm Assembly	1
6	92-6373	Disc – Throttle	1	17	92-6389	Pin	1
7	92-4949	Bracket – Throttle Control	1	18	92-9691	Float Chamber	1
8	613269	Screw	2	19	608850	Screw	4
9	93-4324	Carburetor Body	1	20	612383	Washer	1
10	92-9697	Kit – Float Valve, Body & Seat (Incl. Ref. #12)	1	21	92-6370	Main Jet	1
				*	92-6385	Jet – High Altitude	1
				*	93-4331	Carburetor Assembly	1

*Not Illustrated

LAWN–BOY PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
130743	Nut	6 2 1	14–6009	Mounting Plate	8 17 1
303712	Ring – Retaining	9 5 2	16–5659	Housing	3 30 1
316959	Washer – Lock	6 9 1	40–1940	Washer	3 21 4
602587	Reed – Backup Plate	9 17 1	44–2750	Body – Primer	4 7 1
602588	Reed – Carburetor	9 16 1	44–3174	Hose – Primer	7 7 1
602850	Gasket	11 13 1	44–3174	Hose – Primer	4 8 1
603145	Spring	11 12 1	49–2040	Screw	3 2 1
603164	Nut – Blade	4 13 1	53–4690	Stop – Ground Strap	8 15 1
604604	Grommet – Plastic	3 31 2	60–9010	Strap – Ground	8 13 1
606608	Pin – Wrist	9 4 1	66–5370	Spring – Compression	4 15 1
607199	Key	6 6 1	66–7460	Bulb – Primer	4 6 1
607560	Plate – Cover	3 1 1	92–1002	Bail – Flywheel Brake	5 2 1
607601	Screw	8 19 4	92–1005	Spring Arm Ass'y	3 10 2
608850	Screw	11 19 4	92–1008	Knob – Height Adjust	3 19 4
609123	Plug – Core	9 21 4	92–1099	Bolt – Shoulder	3 14 2
609150	Baffle – Foam	4 18 1	92–1156	Wire – Brake Switch Lead	8 14 1
609471	Screw	8 21 3	92–1624	Screw – Engine	4 10 3
609482	Screw	7 2 2	92–1701	Rope – Stop	4 3 1
609493	Element – Filter Air	7 5 1	92–2925	Strap – Insulation	8 12 1
609629	Dowel	9 20 1	92–4881	Plate – Height Adjust	3 34 2
609754	Bearing – Needle	9 12 1	92–4890	Washer	3 23 4
610165	Retainer – Speed Control	11 2 1	92–4921	Connecting Rod Assembly	9 6 1
610383	Retainer – Filter	7 3 1	92–4925	Piston & Connecting Rod	9 3 1
610834	Collar – Air Vane	11 4 1	92–4927	Bearing	9 7 1
611071	Filter – Fuel	11 15 1	92–4929	Pulley Assembly	10 3 1
611393	Screw – Hex. Hd.	9 13 2	92–4930	Spring – Dog	10 4 2
611396	Seal – Oil	9 11 2	92–4931	Dog	10 5 2
612383	Washer	11 20 1	92–4933	Screw	10 7 1
612543	Blade – 21	4 12 1	92–4934	Spring	10 8 1
612782	Line – Gas	4 9 1	92–4935	Spring Keeper Assembly	10 9 1
612824	Clip – Rope Insert	5 15 1	92–4944	Spring – Governor	11 5 1
612825	Handle – Starter	5 14 1	92–4948	Gasket – Carburetor	7 9 2
612872	Screw	9 18 2	92–4949	Bracket – Throttle Control	11 7 1
613208	Screw – Hex. Washer Hd.	8 6 2	92–5412	Stop – Pivot	5 1 1
613269	Screw	11 8 2	92–6370	Main Jet	11 21 1
613269	Screw	7 12 4	92–6371	Nozzle	11 14 1
613311	Gasket	4 20 1	92–6373	Disc – Throttle	11 6 1
613765	Nut – Cage	3 26 1	92–6376	Air Vane & Shaft	11 1 1
614009	Plug – Spark	8 4 1	92–6385	Jet – High Altitude	11 * 1
614243	Knob	5 9 2	92–6389	Pin	11 17 1
614636	Screw – Torx. Washer Hd.	9 14 4	92–7720	Guide – Rope	5 12 1
614637	Bracket – Wheel Height Adj.	3 22 4	92–7731	Plate – Baffle	3 24 2
614640	Hub – Starter	6 3 1	92–7737	Handle – Upper	5 5 1
614643	Handle – Lower	5 7 1	92–7738	Cable – Flywheel Brake	5 10 1
614650	Bolt – Shoulder	3 12 2	92–7742	Handle Brkt. Ass'y – R.H.	3 3 1
614654	Plate – Muffler	8 18 1	92–7743	Handle Brkt. Ass'y – L.H.	3 9 1
614672	Bolt – Shoulder Height Adj.	3 15 4	92–8615	Applique – Shroud	4 16 1
614674	Cover – Muffler	8 22 1	92–8619	Tank & Shroud Assembly	4 4 1
614677	Screw – Sems Thr'd Form	3 32 2	92–8647	Shield – Trailing	3 7 1
614687	Spring Arm Ass'y	3 16 2	92–8828	Decal – Shroud	4 2 1
614697	Screw – Handle	5 6 2	92–8833	Decal – Deck 345VP	3 28 1
614699	Screw	6 1 3	92–8885	Wheel & Tire Assembly	3 20 2
614702	Screw	6 7 4	92–8887	Wheel & Tire Assembly	3 11 2
614702	Screw	8 10 1	92–9326	Cable – Throttle	5 4 1
677525	Plate & Collar Assembly	4 11 1	92–9691	Float Chamber	11 18 1
677982	Liner – Split (Set of 2)	9 8 1	92–9692	Retainer	10 6 1
678113	Float & Arm Assembly	11 16 1	92–9697	Kit – Float Valve, Body	11 10 1
681737	Set – Ring	9 1 1	92–9698	Screw – Shoulder	8 9 1
681830	Bearing – Upper Main	9 10 1	93–1216	Base – Shroud	6 5 1
681831	Bearing – Needle	9 19 1	93–1217	Baffle	8 20 1
684049	CD Ignition	8 5 1	93–1225	Lever – Speed Adjust	11 3 1
681678	Cover & Terminal	8 * 1	93–1230	Cover	4 19 1
684743	Flywheel	6 4 1	93–1231	Cover – Air Cleaner	7 4 1
12–5450	Screw – Thread Forming	8 16 1	93–1233	Gasket – Exhaust	8 2 1

*Not Illustrated

LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
93-1236	Recoil Assembly	10 * 1	93-6671	Decal - H.O.C. L.H.	3 8 2
93-3175	Baffle	4 17 1	93-7152	Plate - Engine	4 21 1
93-3653	Guard - Handle	5 16 2	93-7415	Guard - Plate	3 29 1
93-3660	Gas Cap Assembly	4 5 1	94-5713	Crankshaft	9 9 1
93-4302	Screw - Sems	4 1 3	94-5714	Cylinder & Crankcase Ass'y	9 * 1
93-4304	Housing Assembly	10 1 1	94-5737	Short Block	8 1 1
93-4304	Shroud Assembly	6 8 1	252-76	Bearing - Thrust	9 2 1
93-4305	Rope - Starter	10 2 1	252-80	Washer - Thrust	9 22 1
93-4306	Spring - Compression	8 7 1	321-14	Screw - Hex Hd. Cap	5 3 1
93-4312	Brake Plate Assembly	8 8 1	321-53	Screw - Hex Hd. Cap	5 13 1
93-4315	Shield - Carburetor (Intl.)	7 10 1	322-3	Screw - Hex Hd. Cap	3 13 4
93-4316	Shield - Governor V (Intl.)	7 11 2	3290-378	Tie - Cable	5 8 2
93-4320	Shield - Fuel	7 6 2	3290-459	Rivet - Plastic	8 11 2
93-4324	Carburetor Body	11 9 1	3296-29	Nut - Lock	3 18 4
93-4331	Carburetor Assembly	11 * 1	3296-39	Nut - Lock	3 17 2
93-4331	Carburetor Assembly	7 8 1	3296-42	Nut - Lock	3 27 2
93-6657	Decal - Danger	3 4 1	3296-73	Nut - Lock	5 11 2
93-6667	Decal - Warning	3 25 2	32105-15	Screw	3 5 2
93-6670	Decal - H.O.C. R.H.	3 33 2			

MAINTENANCE RECORD

[illegible]

[illegible]

MAINTENANCE RECORD

[illegible]