

LAWN-BOY®

COMMERCIAL SERIES SIDE DISCHARGE MOWER

MODEL NO.11000B—6900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.


NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Housing Assembly	1	Engine Assembly	6–7
Shroud Assembly	2	Carburetor Assembly	8
Starter Assembly	3	Air Filter Assembly	9
Handle Assembly	4–5	Numeric Parts Index	10–11

Accessories

 
Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Mulching Plate	Model No. 89864
Leaf Bag	Model No. 89804	Leaf Bag w/Chute	Model No. 89811
Rear Bagging Kit	Model No. 89800		

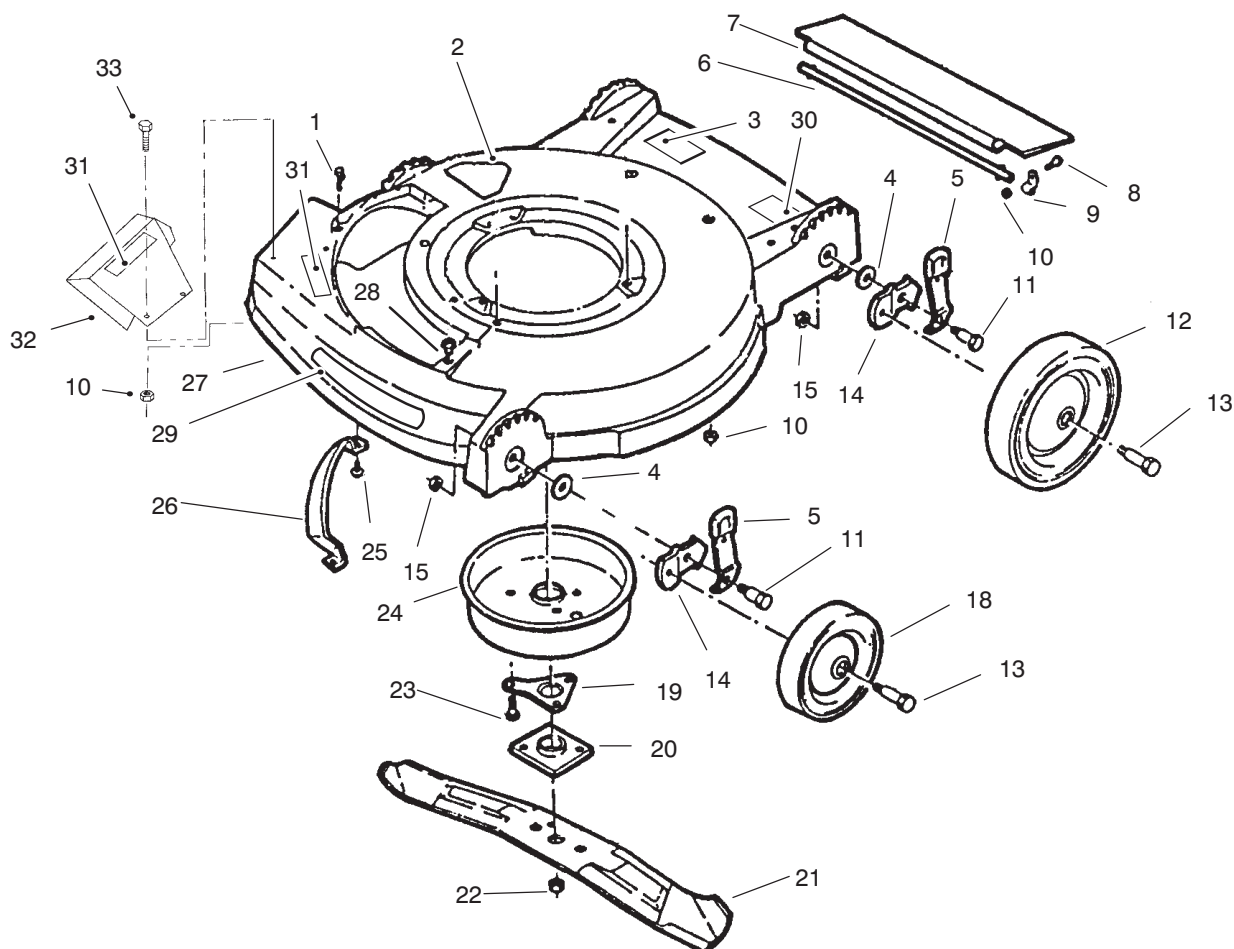

C-2293

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	614677	Screw – Sems, Plate Cover	2	20	677525	Collar & Plate	1
2	92-9077	Decal – DIN	1	21	612543	Blade – 21"	1
3	93-6657	Decal – Danger	1	22	603164	Nut – Blade	1
4	608834	Washer	4	23	609471	Screw – Plate to Muffler Cover	3
5	153444	Knob & Spring – Adj.	4	24	682876	Cover – Muffler	1
6	608174	Rod – Shield, Trailing	1	25	46-6811	Screw – Toe Bar to Housing	2
7	611016	Shield – Trailing	1	26	608175	Toe Bar	1
8	321-3	Screw	2	27	16-9619	Assembly – Housing (Incl. Ref.#2, 3, & 31)	1
9	608161	Clamp – Rod, Shield	2	28	604604	Grommet	3
10	3296-42	Nut – Lock	4	29	92-8838	Decal – Deck 550C	1
11	610646	Bolt – Shoulder	4	30	66-2000	Decal – Noise	1
12	92-8889	Wheel – Rear, 8"	2	31	93-6667	Decal – Warning	2
13	603567	Bolt – Wheel	4	32	93-7415	Guard – Plate	1
14	608833	Bracket – Wheel Adj.	4	33	32105-15	Screw – Hex Hd.	2
15	3296-39	Nut – Lock	4				
18	92-8888	Wheel – Front, 6"	2				
19	609786	Plate – Support, Crankshaft	1				

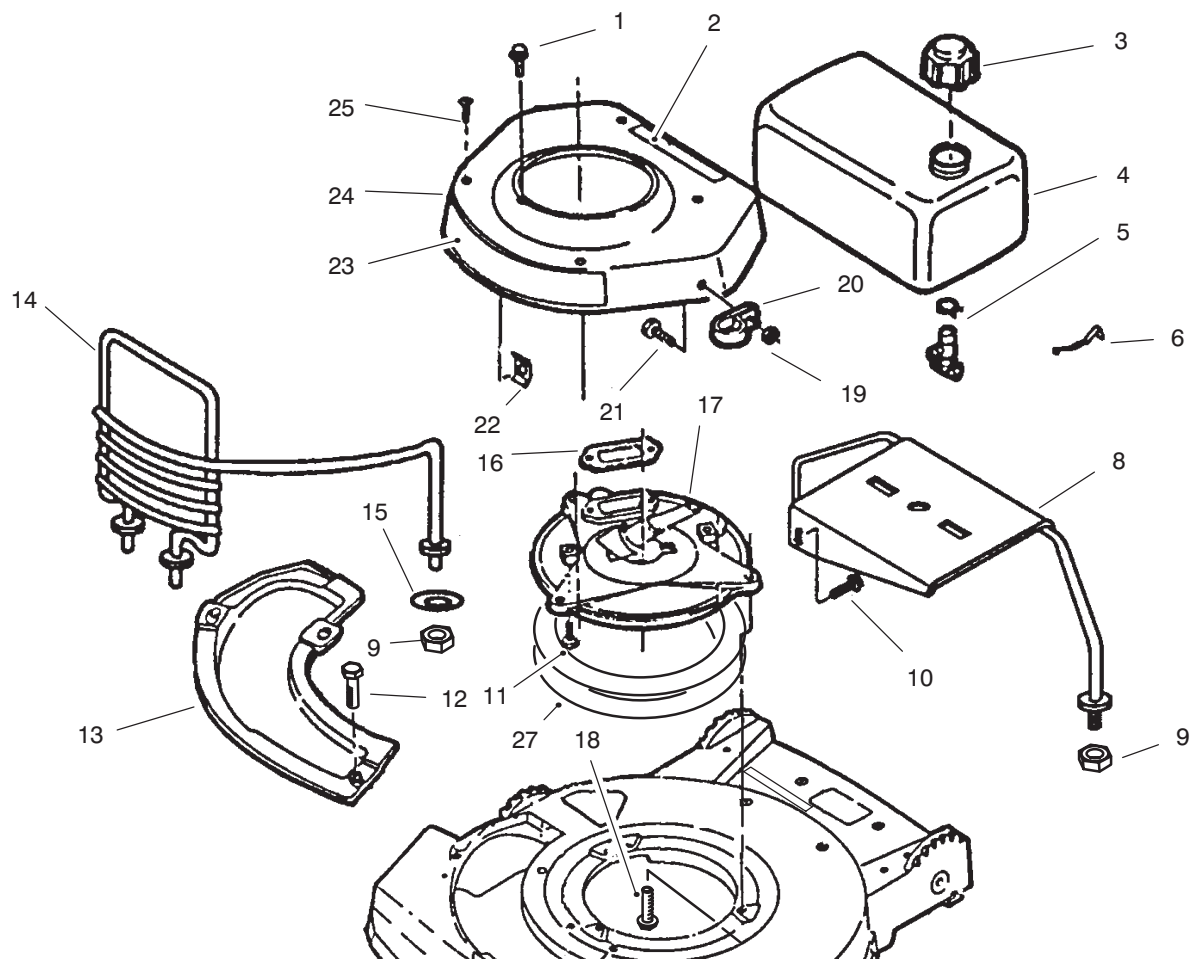 


C-2294B

SHROUD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	612428	Screw – Starter	4	13	607560	Plate – Cover	1
2	93-6672	Decal – Mixture, Fuel	1	14	93-7164	Guard – Engine	1
3	682755	Assembly – Cap, Fuel	1	15	145875	Washer	1
*	609150	Baffle	1	16	93-1233	Gasket – Exhaust	1
*	607213	Gasket	1	17	92-1054	Plate – Muffler	1
4	145476	Tank – Fuel	1	18	92-1624	Screw – Muffler Plate to Housing	3
5	312387	Clamp – Valve to Tank	1	19	3296-42	Nut – Lock	1
6	609830	Spring – Mount., Fuel Tank	2	20	611504	Clamp	1
7	677052	Valve & Screen – Shut-Off	1	21	46-6811	Screw – Clamp to Shroud	1
8	684583	Bracket – Tank, Fuel	1	22	145945	Retainer – Applique	3
9	3296-29	Nut	5	23	612754	Applique	1
10	321-3	Screw – Hex Hd. Cap	1	24	683638	Shroud	1
11	607601	Screw – Muffler Plate to Block	3	25	611395	Screw – Shroud to Base	4
12	49-2040	Screw – Hex Hd.	1	27	93-7153	Plate – Engine	2

 *Not Illustrated

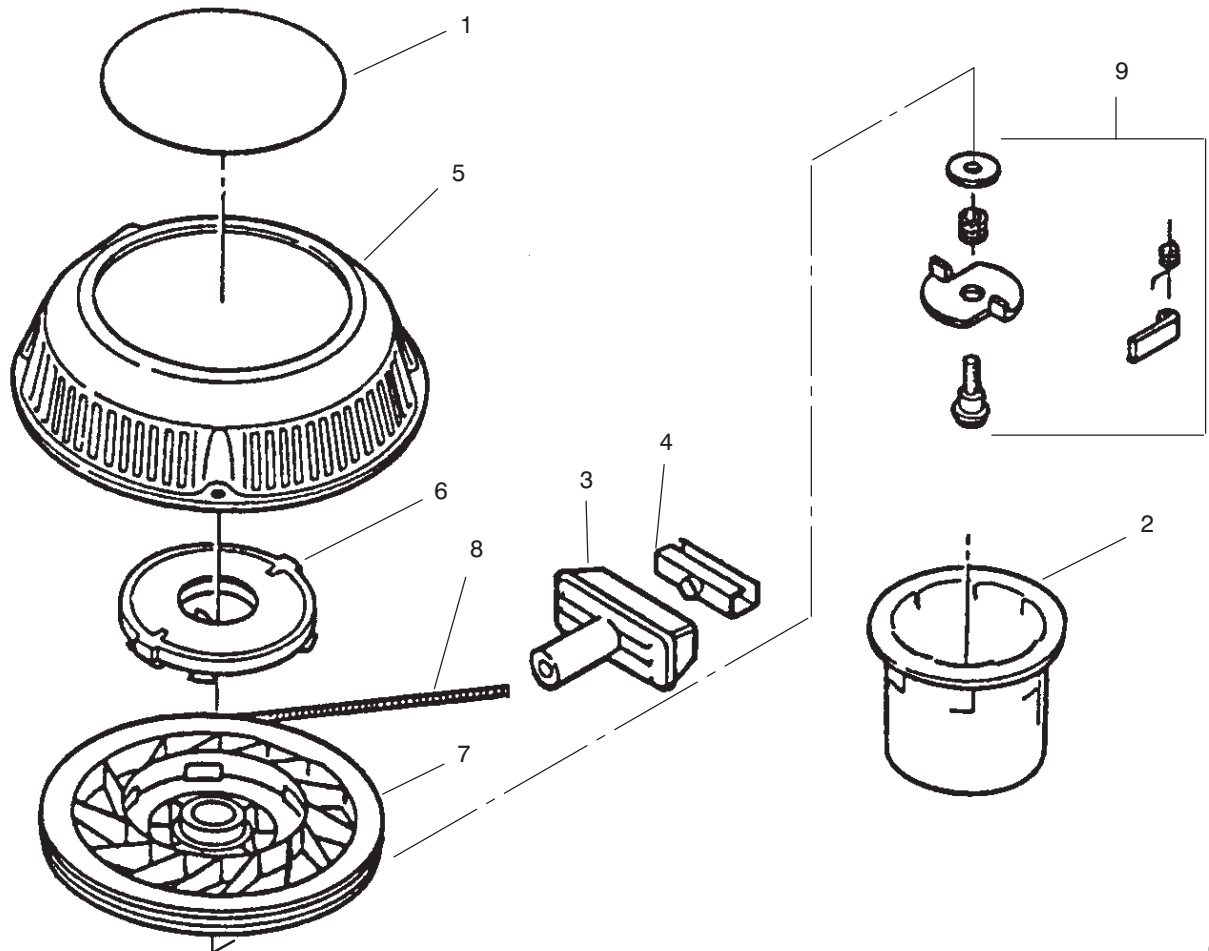

C-1406


STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-8830	Decal	1
2	612949	Hub - Starter	1
3	612825	Handle - Starter	1
4	612824	Insert - Clip, Rope	1
5	684567	Housing - Starter	1
6	92-4935	Recoil Spring & Keeper	1

Ref. No.	Part No.	Description	No. Used
7	612950	Pulley	1
8	612432	Rope	1
9	683899	Assembly - Dog Kit	1
*	612428	Screw-Sems	4
*	684622	Assembly - Starter (Inc. Ref. No. 5-9)	1

*Not Illustrated

 HANDLE ASSEMBLY

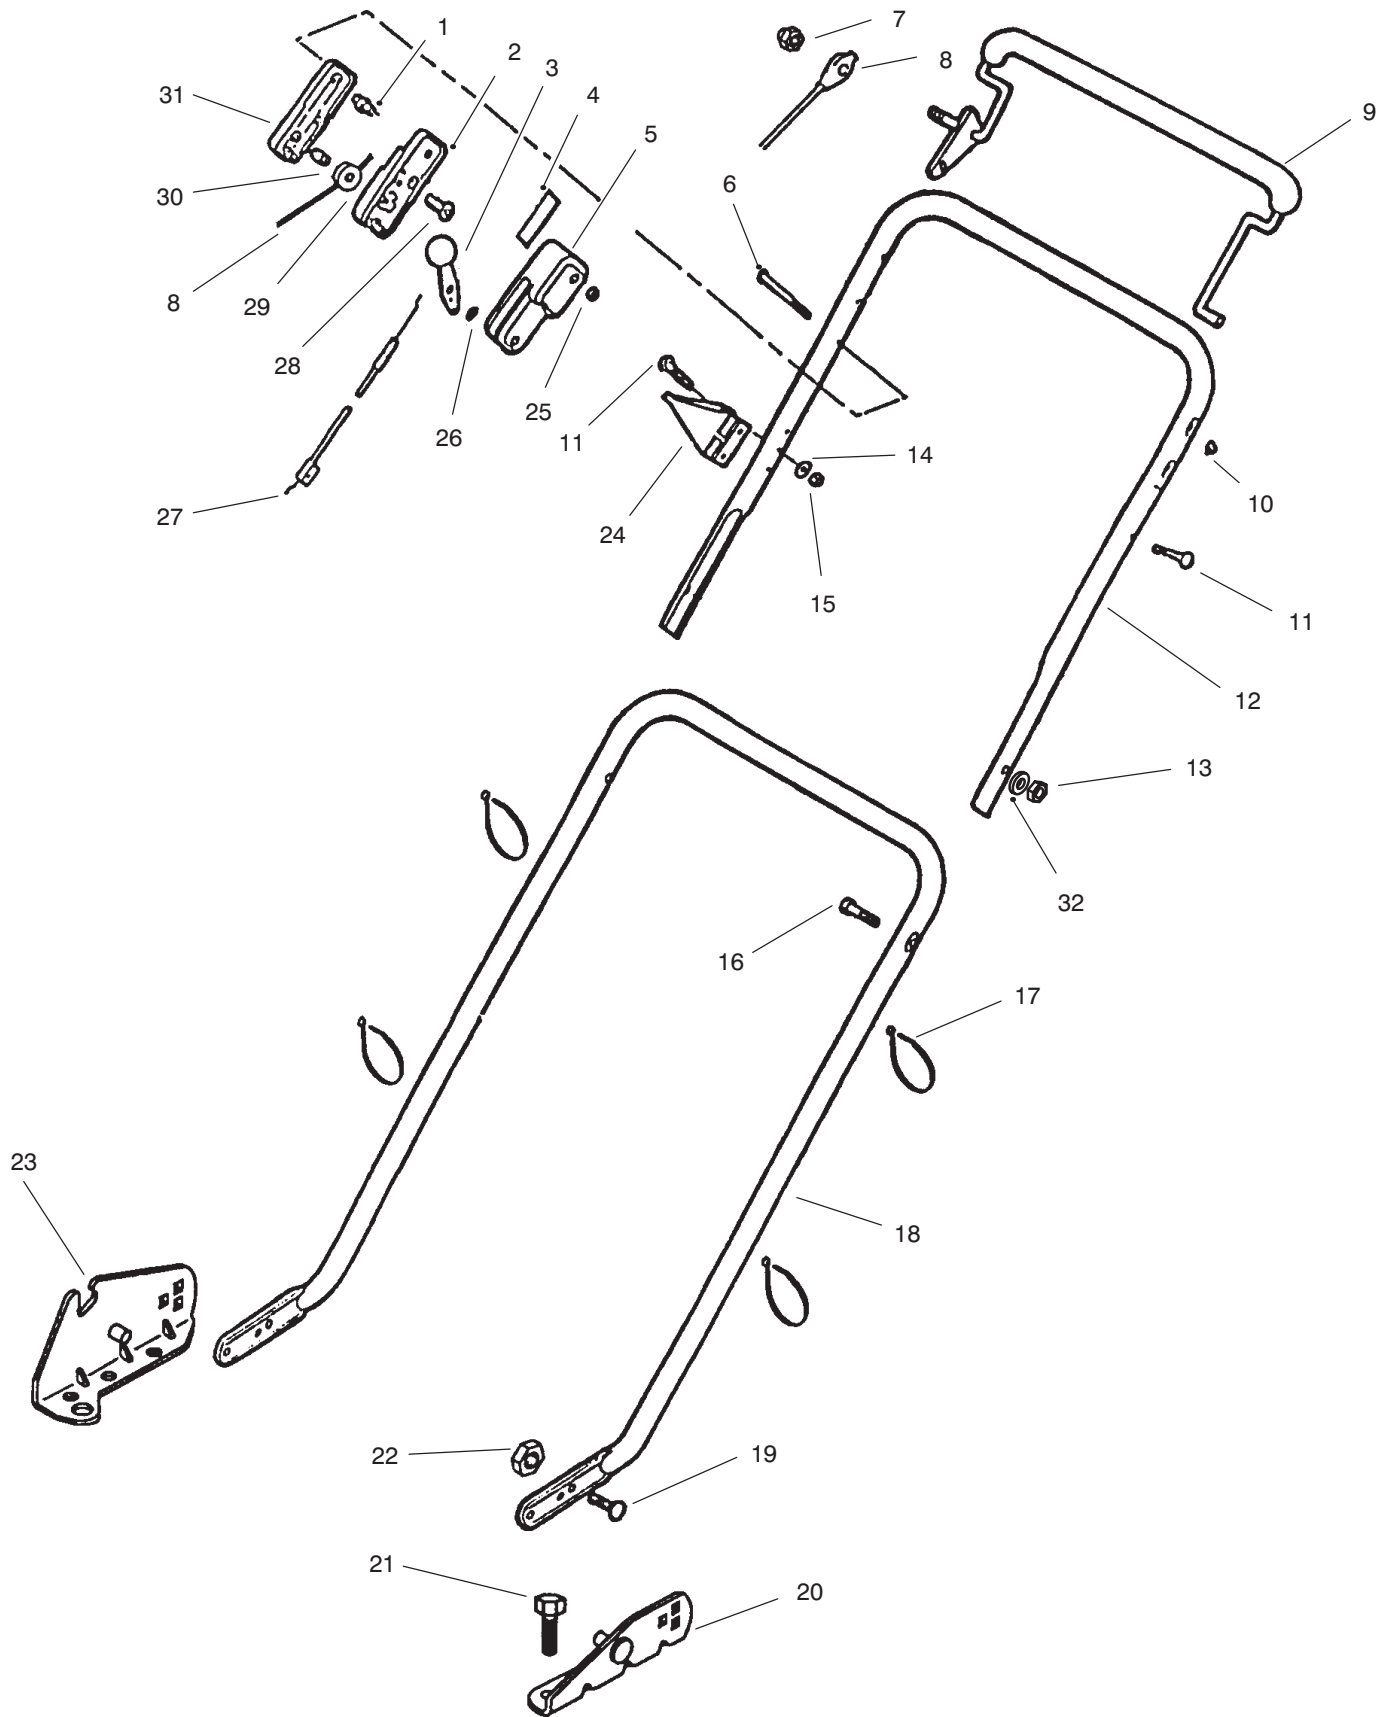


HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	611541	Column	1
2	612633	Case – Throttle, Center	1
3	93–4135	Assembly – Knob & Lever	1
4	92–8893	Decal – Control, Throttle	1
5	612634	Case – Throttle, Inner	1
6	611799	Screw	2
7	612168	Nut – Acorn	1
8	93–3694	Cable – Control	1
9	683478	Assembly – Lever, Control	1
10	605546	Palnut	1
11	611233	Screw	2
12	614515	Handle – Top	1
13	3296–29	Nut – Handle	2
14	602945	Washer	2
15	3296–42	Nut	2
16	322–9	Screw	2

Ref. No.	Part No.	Description	No. Used
17	614249	Strap – Tie	2
18	92–2920	Handle – Lower	1
19	800358	Bolt	2
20	684058	Bracket – Handle, L.H.	1
21	607188	Screw	4
22	3296–29	Nut	2
23	684057	Bracket – Handle, R.H.	1
24	153254	Assembly – Guide, Rope	1
25	3296–12	Nut	2
26	612586	Washer	2
27	93–3778	Cable – Throttle	1
28	611543	Screw	2
29	612564	Pulley	1
30	611542	Pin – Pulley	1
31	611777	Case – Throttle, Outer	1
32	609739	Washer – Screw, Handle	2

 ENGINE ASSEMBLY

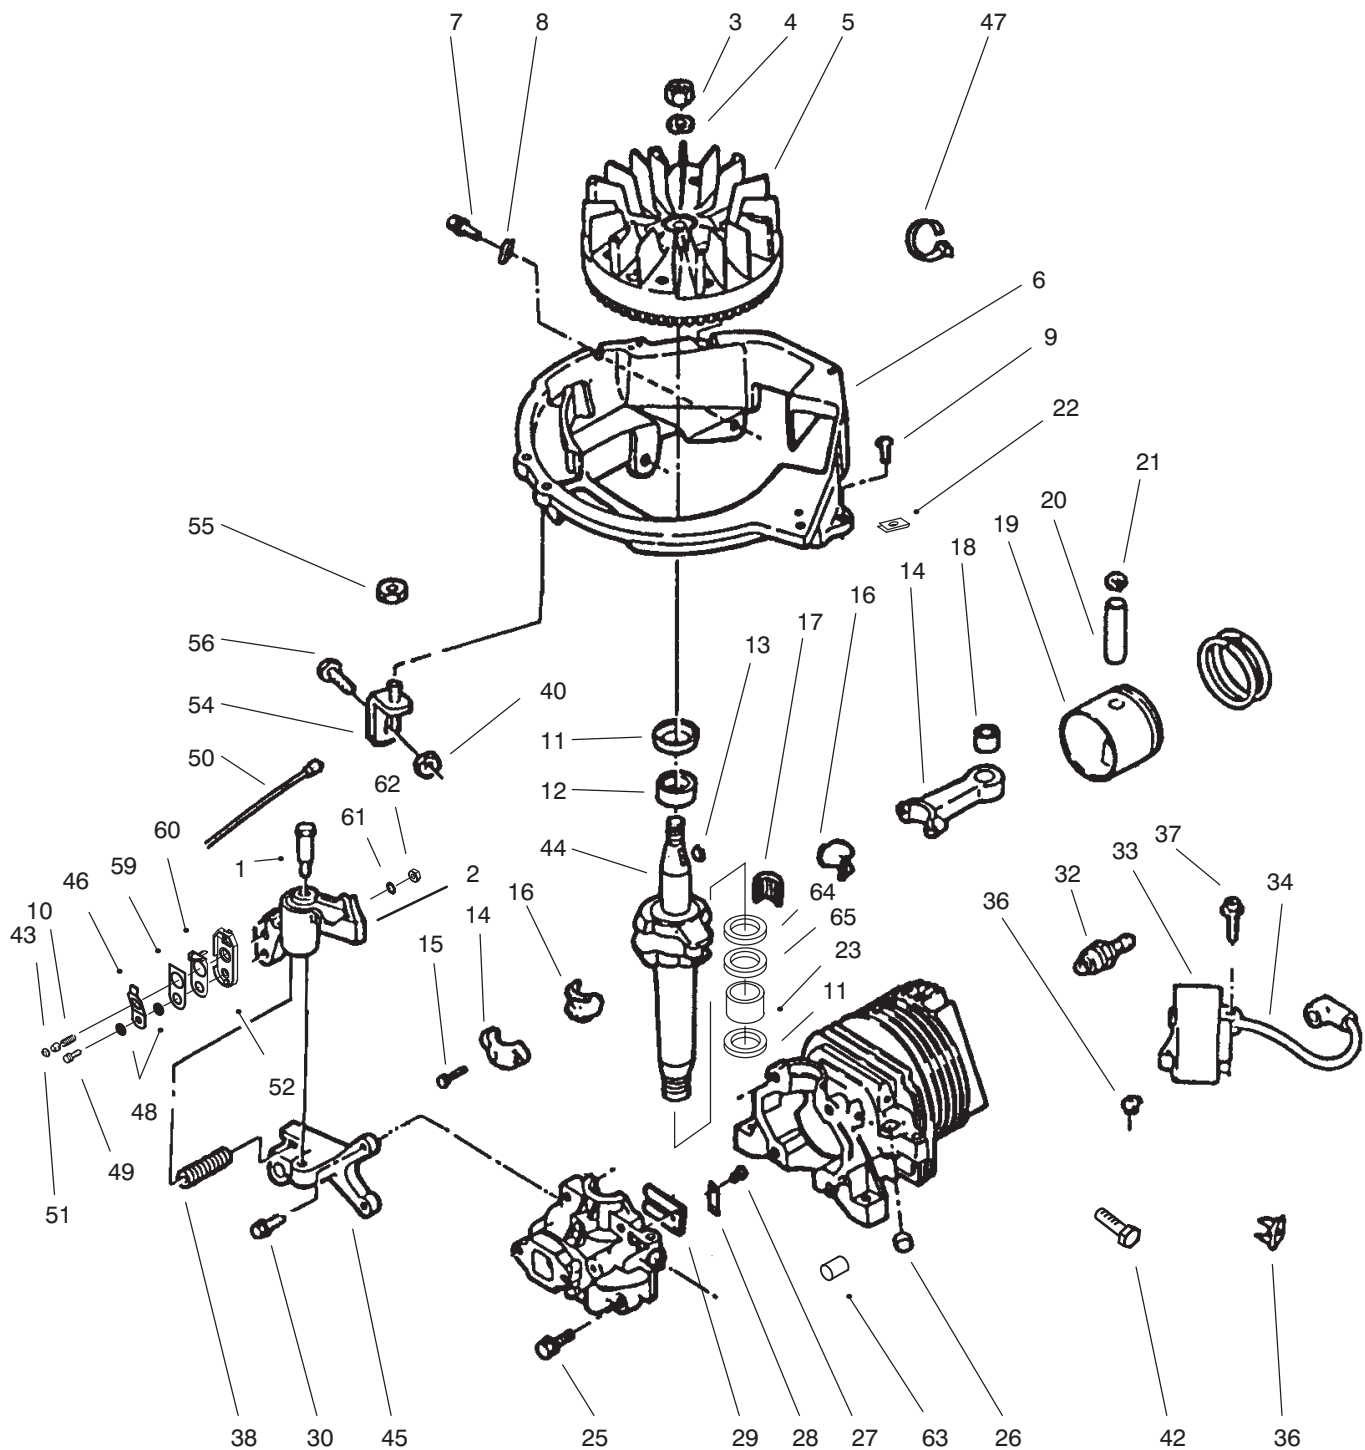


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	613529	Bolt– Shoulder	1
2	682683	Brake Assembly	1
3	130743	Nut – Flywheel	1
4	316959	Lockwasher	1
5	683580	Flywheel Assembly	1
6	612427	Base – Shroud	1
7	609947	Screw	3
8	611191	Clip – "J"	1
9	609808	Screw	1
10	611214	Spring – Cable Return	1
11	611396	Oil Seal	2
12	681830	Bearing – Main – Upper	1
13	607199	Key – Flywheel	1
*	92–4925	Piston & Connecting Rod Assembly (Inc. 14–22)	1
14	92–4921	Connecting Rod Assy. (Inc 15–18)	1
15	611393	Screw – Cap	2
16	677982	Liner – Pair	1
17	609754	Strip – Roller	1
18	92–4927	Bearing Assembly	1
19	92–4923	Piston & Ring Set (Inc 20–22)	1
20	606608	Wrist Pin	1
21	303712	Retaining Ring	2
22	609900	Nut – Speed	1
23	681831	Bearing – Main – Lower	1
25	613110	Screw – Cover to Crankcase	1
26	609123	Plug	4
27	612872	Screw – Reed to Crankcase Cover	2
28	602587	Plate – Reed Hold Down	1
29	602588	Reed	1

Ref. No.	Part No.	Description	No. Used
30	613233	Screw – Brake Mounting Bracket	2
32	614009	Spark Plug	1
33	683215	C. D. Ignition Module & Lead Assy (Incl. Ref. #34)	1
34	681678	High Tension Lead & Cover	1
36	605120	Grommet	2
37	607526	Screw – C. D. Mounting	2
38	611211	Spring – Brake	1
40	608311	Nut	1
42	614343	Screw	2
43	611509	Actuator – Brake Lever	1
44	94–5713	Crankshaft	1
45	611192	Bracket – Brake	1
46	93–1239	Spring	1
47	317893	Tie Strap	1
48	306407	Washer	2
49	321–6	Screw – Hex Hd. Cap	1
50	683821	Lead Assembly	1
51	611213	Retainer	1
52	93–1240	Case – Switch	1
54	683581	Brace Assembly	1
55	602315	Nut	1
56	603014	Bolt	1
59	612842	Shield	1
60	612841	Plate – Contact	1
61	3255–7	Washer – Lock	1
62	306375	Nut	1
63	609629	Dowel	1
64	252–76	Bearing – Thrust	1
65	252–80	Washer – Thrust	1
*	94–5734	Short Block Assembly	1

 *Not Illustrated

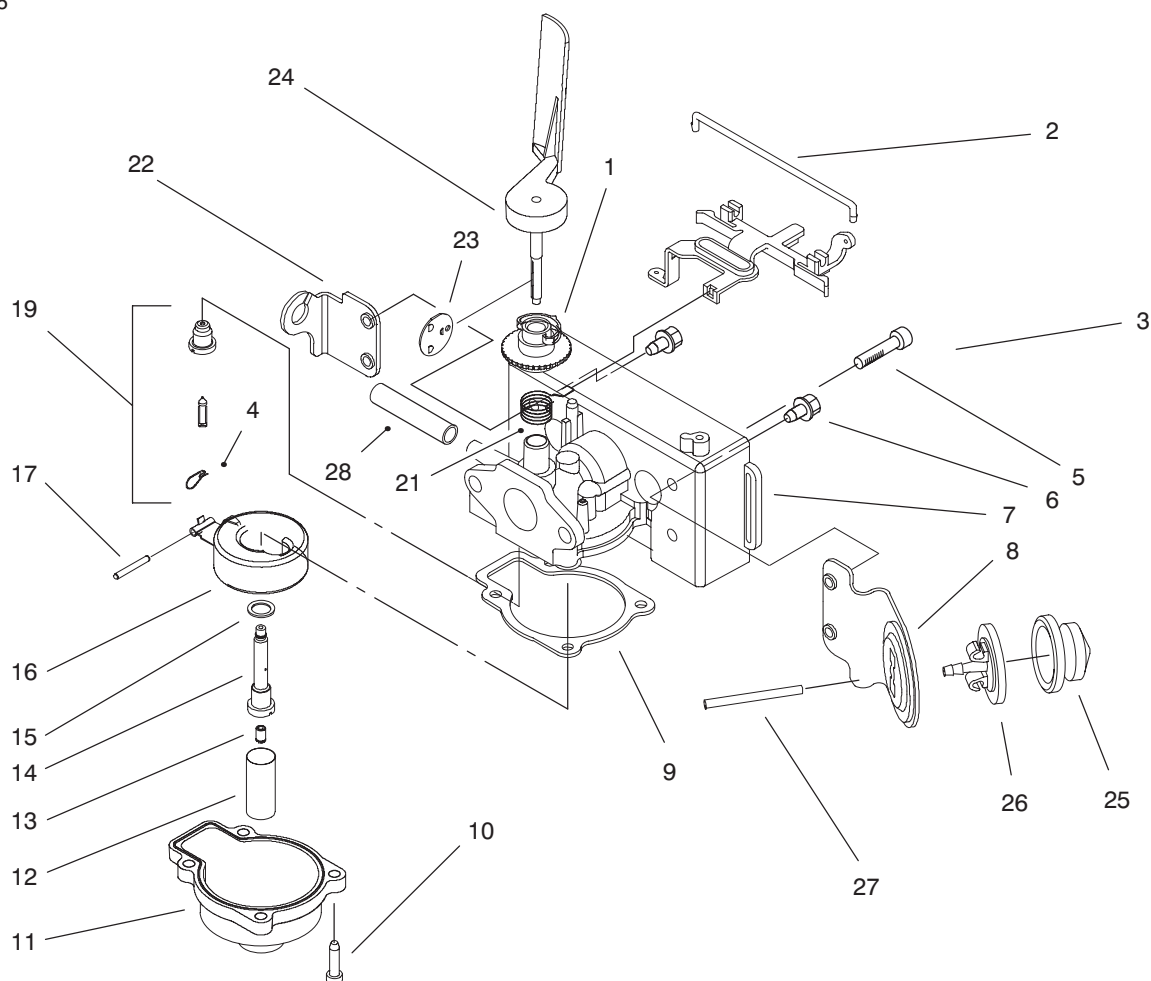


C-2295A

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610834	Collar – Adjustment	1
2	610165	Retainer	1
3	93-1225	Lever – Speed Adjust	1
4	603145	Spring	1
5	609482	Screw – Pan Hd. Sems	2
6	613269	Screw	4
7	93-4323	Body – Carburetor	1
8	93-1232	Bracket – Primer	1
9	602850	Gasket – Float Chamber	1
10	608850	Screw	4
11	92-9691	Float Chamber	1
12	611071	Filter – Fuel	1
13	92-6370	Main Jet	1
14	92-6371	Nozzle	1

Ref. No.	Part No.	Description	No. Used
15	612383	Washer	1
16	678113	Float & Arm Assembly	1
17	92-6389	Pin	1
19	678278	Float, Valve, & Body Ass'y (Incl. Ref. #4)	1
21	92-4944	Spring – Governor	1
22	93-1226	Bracket – Throttle Control	1
23	92-6373	Disc – Throttle	1
24	92-6376	Air Vane & Shaft	1
25	66-7460	Bulb – Primer	1
26	44-2750	Body – Primer	1
27	44-3172	Hose – Primer	1
*	94-5738	Carburetor Complete	1
28	612784	Line – Gas	1

 *Not Illustrated

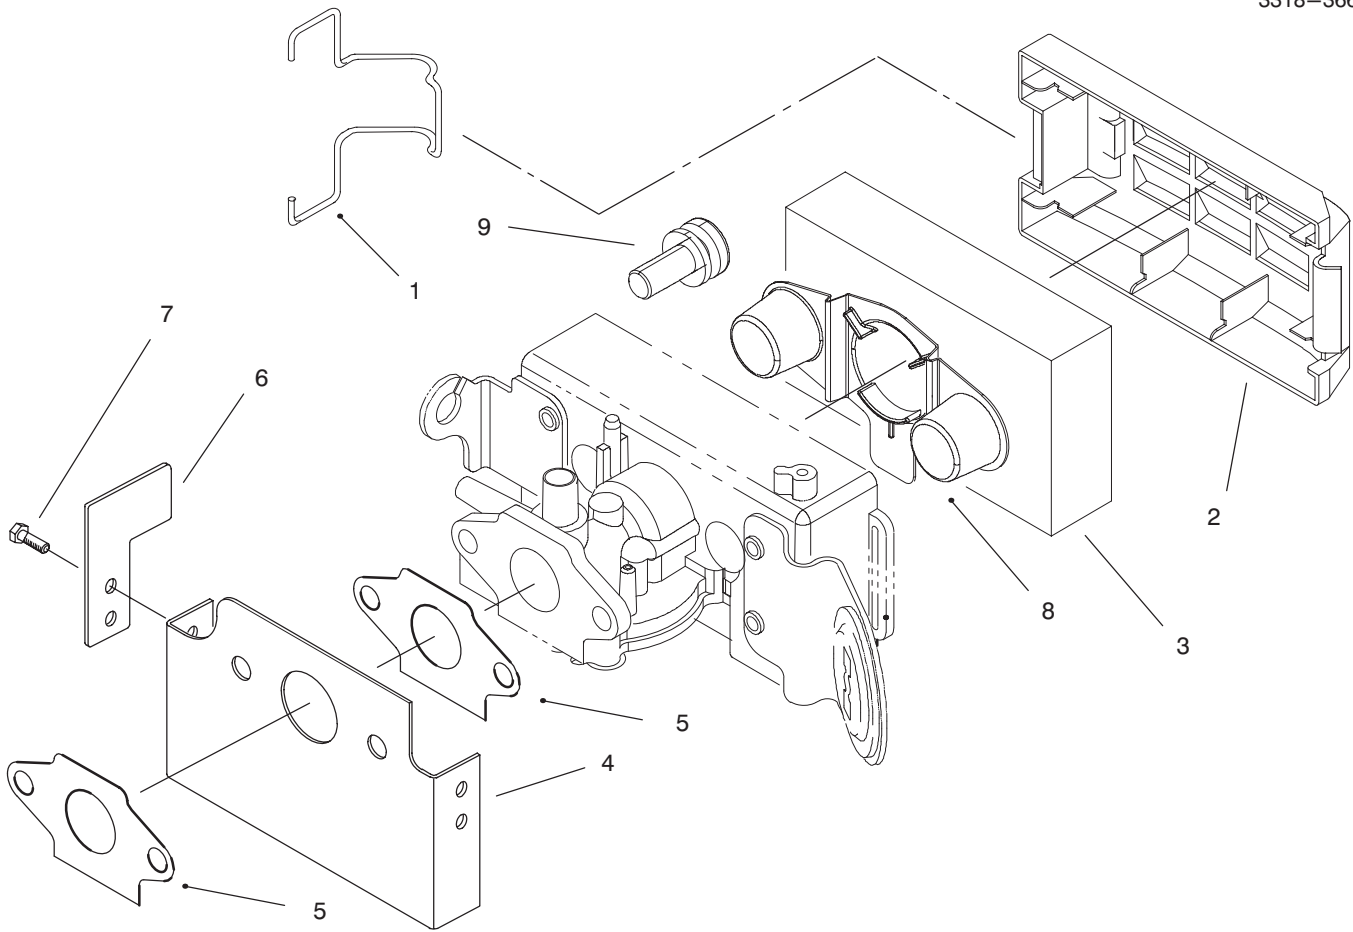

C-2296A

AIR FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610383	Retainer - Cover	1
2	93-1231	Cover - Air Filter	1
3	609493	Element - Air Filter	1
4	93-4315	Shield - Carburetor (Int'l)	1
5	92-4948	Gasket - Carb.	2

Ref. No.	Part No.	Description	No. Used
6	93-4317	Shield - Governor F (Int'l)	1
7	613269	Screw	2
8	93-4320	Shield - Fuel	1
9	609482	Screw	2

LAWN—BOY PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
130743	Nut — Flywheel	7 3 1	611393	Screw — Cap	7 15 2
145476	Tank — Fuel	2 4 1	611395	Screw — Shroud to Base	2 25 4
145875	Washer	2 15 1	611396	Oil Seal	7 11 2
145945	Retainer — Applique	2 22 3	611504	Clamp	2 20 1
153254	Assembly — Guide, Rope	5 24 1	611509	Actuator — Brake Lever	7 43 1
153444	Knob & Spring — Adj.	1 5 4	611541	Column	5 1 1
303712	Retaining Ring	7 21 2	611542	Pin — Pulley	5 30 1
306375	Nut	7 62 1	611543	Screw	5 28 2
306407	Washer	7 48 2	611777	Case — Throttle, Outer	5 31 1
312387	Clamp — Valve to Tank	2 5 1	611799	Screw	5 6 2
316959	Lockwasher	7 4 1	612168	Nut — Acorn	5 7 1
317893	Tie Strap	7 47 1	612383	Washer	8 15 1
602315	Nut	7 55 1	612427	Base — Shroud	7 6 1
602587	Plate — Reed Hold Down	7 28 1	612428	Screw — Starter	2 1 4
602588	Reed	7 29 1	612428	Screw—Sems	3 * 4
602850	Gasket — Float Chamber	8 9 1	612432	Rope	3 8 1
602945	Washer	5 14 2	612543	Blade — 21	1 21 1
603014	Bolt	7 56 1	612564	Pulley	5 29 1
603145	Spring	8 4 1	612586	Washer	5 26 2
603164	Nut — Blade	1 22 1	612633	Case — Throttle, Center	5 2 1
603567	Bolt — Wheel	1 13 4	612634	Case — Throttle, Inner	5 5 1
604604	Grommet	1 28 3	612754	Applique	2 23 1
605120	Grommet	7 36 2	612784	Line — Gas	8 28 1
605546	Palnut	5 10 1	612824	Insert — Clip, Rope	3 4 1
606608	Wrist Pin	7 20 1	612825	Handle — Starter	3 3 1
607188	Screw	5 21 4	612841	Plate — Contact	7 60 1
607199	Key — Flywheel	7 13 1	612842	Shield	7 59 1
607213	Gasket	2 * 1	612872	Screw — Reed to Crankcase	7 27 2
607526	Screw — C. D. Mounting	7 37 2	612949	Hub — Starter	3 2 1
607560	Plate — Cover	2 13 1	612950	Pulley	3 7 1
607601	Screw — Muffler Plate to	2 11 3	613110	Screw — Cover to	7 25 1
608161	Clamp — Rod, Shield	1 9 2	613233	Screw — Brake Mounting	7 30 2
608174	Rod — Shield, Trailing	1 6 1	613269	Screw	8 6 4
608175	Toe Bar	1 26 1	613269	Screw	9 7 2
608311	Nut	7 40 1	613529	Bolt— Shoulder	7 1 1
608833	Bracket — Wheel Adj.	1 14 4	614009	Spark Plug	7 32 1
608834	Washer	1 4 4	614249	Strap — Tie	5 17 2
608850	Screw	8 10 4	614343	Screw	7 42 2
609123	Plug	7 26 4	614515	Handle — Top	5 12 1
609150	Baffle	2 * 1	614677	Screw — Sems, Plate Cover	1 1 2
609471	Screw — Plate to Muffler	1 23 3	677052	Valve & Screen — Shut—Off	2 7 1
609482	Screw	9 9 2	677525	Collar & Plate	1 20 1
609482	Screw — Pan Hd. Sems	8 5 2	677982	Liner — Pair	7 16 1
609493	Element — Air Filter	9 3 1	678113	Float & Arm Assembly	8 16 1
609629	Dowel	7 63 1	678278	Float, Valve, & Body Ass'y	8 19 1
609739	Washer — Screw, Handle	5 32 2	681678	High Tension Lead & Cover	7 34 1
609754	Strip — Roller	7 17 1	681830	Bearing — Main — Upper	7 12 1
609786	Plate — Support, Crankshaft	1 19 1	681831	Bearing — Main — Lower	7 23 1
609808	Screw	7 9 1	682683	Brake Assembly	7 2 1
609830	Spring — Mount., Fuel Tank	2 6 2	682755	Assembly — Cap, Fuel	2 3 1
609900	Nut — Speed	7 22 1	682876	Cover — Muffler	1 24 1
609947	Screw	7 7 3	683215	C. D. Ignition Module &	7 33 1
610165	Retainer	8 2 1	683478	Assembly — Lever, Control	5 9 1
610383	Retainer — Cover	9 1 1	683580	Flywheel Assembly	7 5 1
610646	Bolt — Shoulder	1 11 4	683581	Brace Assembly	7 54 1
610834	Collar — Adjustment	8 1 1	683638	Shroud	2 24 1
611016	Shield — Trailing	1 7 1	683821	Lead Assembly	7 50 1
611071	Filter — Fuel	8 12 1	683899	Assembly — Dog Kit	3 9 1
611191	Clip — J	7 8 1	684057	Bracket — Handle, R.H.	5 23 1
611192	Bracket — Brake	7 45 1	684058	Bracket — Handle, L.H.	5 20 1
611211	Spring — Brake	7 38 1	684567	Housing — Starter	3 5 1
611213	Retainer	7 51 1	684583	Bracket — Tank, Fuel	2 8 1
611214	Spring — Cable Return	7 10 1	684622	Assembly — Starter	3 * 1
611233	Screw	5 11 2	800358	Bolt	5 19 2

*Not Illustrated

LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
16-9619	Assembly - Housing	1 27 1	93-1239	Spring	7 46 1
44-2750	Body - Primer	8 26 1	93-1240	Case - Switch	7 52 1
44-3172	Hose - Primer	8 27 1	93-3694	Cable - Control	5 8 1
46-6811	Screw - Clamp to Shroud	2 21 1	93-3778	Cable - Throttle	5 27 1
46-6811	Screw - Toe Bar to Housing	1 25 2	93-4135	Assembly - Knob & Lever	5 3 1
49-2040	Screw - Hex Hd.	2 12 1	93-4315	Shield - Carburetor (Int'l)	9 4 1
66-2000	Decal - Noise	1 30 1	93-4317	Shield - Governor F (Int'l)	9 6 1
66-7460	Bulb - Primer	8 25 1	93-4320	Shield - Fuel	9 8 1
92-1054	Plate - Muffler	2 17 1	93-4323	Body - Carburetor	8 7 1
92-1624	Screw - Muffler Plate to	2 18 3	93-6657	Decal - Danger	1 3 1
92-2920	Handle - Lower	5 18 1	93-6667	Decal - Warning	1 31 2
92-4921	Connecting Rod Assy.	7 14 1	93-6672	Decal - Mixture, Fuel	2 2 1
92-4923	Piston & Ring Set	7 19 1	93-7153	Plate - Engine	2 27 2
92-4925	Piston & Connecting Rod	7 * 1	93-7164	Guard - Engine	2 14 1
92-4927	Bearing Assembly	7 18 1	93-7415	Guard - Plate	1 32 1
92-4935	Recoil Spring & Keeper	3 6 1	94-5713	Crankshaft	7 44 1
92-4944	Spring - Governor	8 21 1	94-5734	Short Block Assembly	7 * 1
92-4948	Gasket - Carb.	9 5 2	94-5738	Carburetor Complete	8 * 1
92-6370	Main Jet	8 13 1	321-3	Screw	1 8 2
92-6371	Nozzle	8 14 1	321-3	Screw - Hex Hd. Cap	2 10 1
92-6373	Disc - Throttle	8 23 1	321-6	Screw - Hex Hd. Cap	7 49 1
92-6376	Air Vane & Shaft	8 24 1	322-9	Screw	5 16 2
92-6389	Pin	8 17 1	3255-7	Washer - Lock	7 61 1
92-8830	Decal	3 1 1	3296-12	Nut	5 25 2
92-8838	Decal - Deck 550C	1 29 1	3296-29	Nut	2 9 5
92-8888	Wheel - Front, 6	1 18 2	3296-29	Nut	5 22 2
92-8889	Wheel - Rear, 8	1 12 2	3296-29	Nut - Handle	5 13 2
92-8893	Decal - Control, Throttle	5 4 1	3296-39	Nut - Lock	1 15 4
92-9077	Decal - DIN	1 2 1	3296-42	Nut	5 15 2
92-9691	Float Chamber	8 11 1	3296-42	Nut - Lock	1 10 4
93-1225	Lever - Speed Adjust	8 3 1	3296-42	Nut - Lock	2 19 1
93-1226	Bracket - Throttle Control	8 22 1	32105-15	Screw - Hex Hd.	1 33 2
93-1231	Cover - Air Filter	9 2 1	252-76	Bearing - Thrust	7 64 1
93-1232	Bracket - Primer	8 8 1	252-80	Washer - Thrust	7 65 1
93-1233	Gasket - Exhaust	2 16 1			

*Not Illustrated

MAINTENANCE RECORD

[illegible]

[illegible]

MAINTENANCE RECORD

[illegible]