 


TORO®

MODEL NO. 20913B-6900001 & UP

PARTS CATALOG

48cm REAR BAGGING MOWER

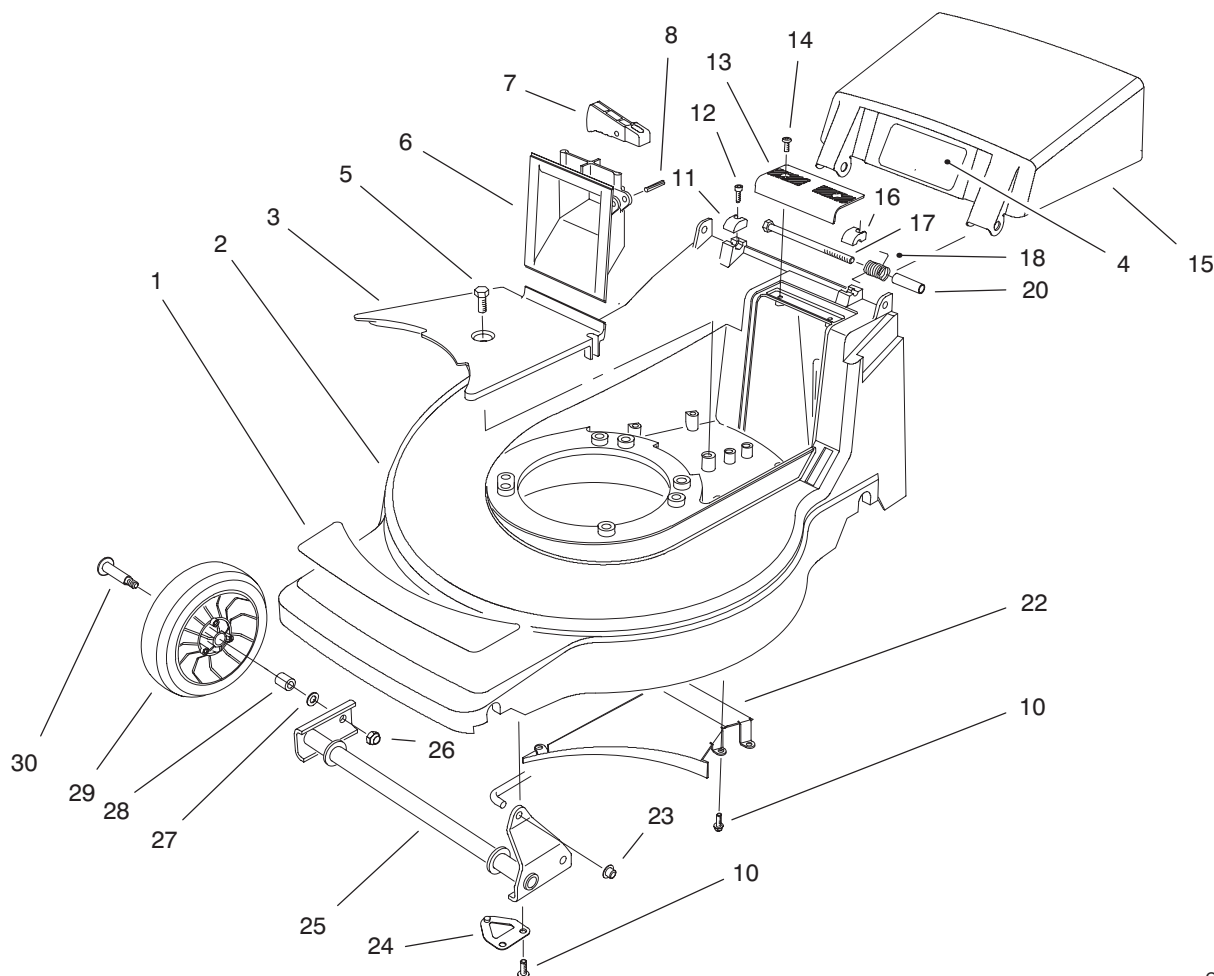


C-2444A

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-9860	Decal - 48cm	1
2	16-5979	Housing - 48cm	1
3	71-7920	Cover - Belt	1
†4	93-4105	Decal - Danger	1
5	32144-70	Screw - Hex. Flange Hd.	1
6	71-7870	Grip - Lower	1
7	71-7930	Trigger - H.O.C.	1
8	3284-5	Pin - Roll	1
10	32144-4	Screw - Thread Forming)	8
11	71-7910	Cap - Hinge Bolt R.H.	1
12	65-5210	Screw - Thread Forming	2
13	71-7860	Grip - Upper	1
14	32144-97	Screw - Thread Forming	2
15	71-9800	Door - Discharge	1

Ref. No.	Part No.	Description	No. Used
16	71-7900	Cap - Hinge Bolt L.H.	1
17	322-29	Screw - Cap Hex. Hd.	2
†18	71-9840	Spring - Door	2
20	71-8580	Spacer - Door	2
22	71-7990	Ramp - Discharge	1
23	32112-11	Nut - Push	1
24	71-8830	Retainer - Shaft	2
†25	71-7820	Pivot - Front	1
26	3296-5	Nut - Lock	2
27	40-1940	Washer - Wheel	2
28	27-6250	Bushing - Wheel	4
29	46-1113	Wheel & Tire Assembly (Incl. Ref. #28)	2
30	27-6230	Bolt - Wheel	2

 
† Obtain From Toro Europe N.V.

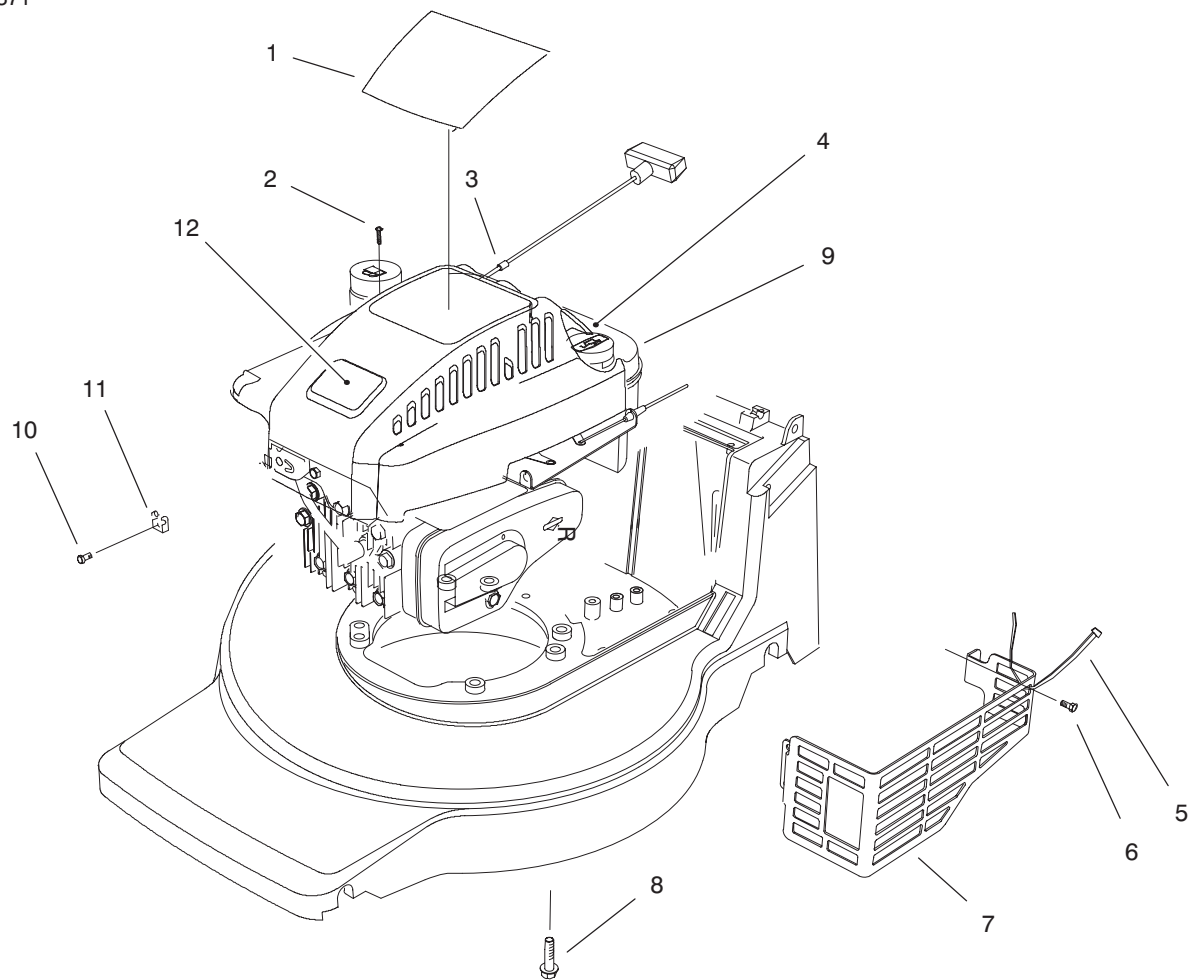

C-2273

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4354	Decal - Engine	1	7	82-8550	Shield - Muffler	1
2	32144-121	Screw	2	8	32144-102	Screw - Engine Mount	3
3	2210-316	Stop - Rope	1	9		Engine - B&S Quantum	1
4	93-0243	Shroud - QT Wedge	1	10	93-8470	Screw - Clamp	1
5	3290-378	Tie - Cable	1	11	2210-249	Clamp - Cable	1
6	32144-73	Screw - Muffler	3	12	92-2289	Decal - Toro Logo	1

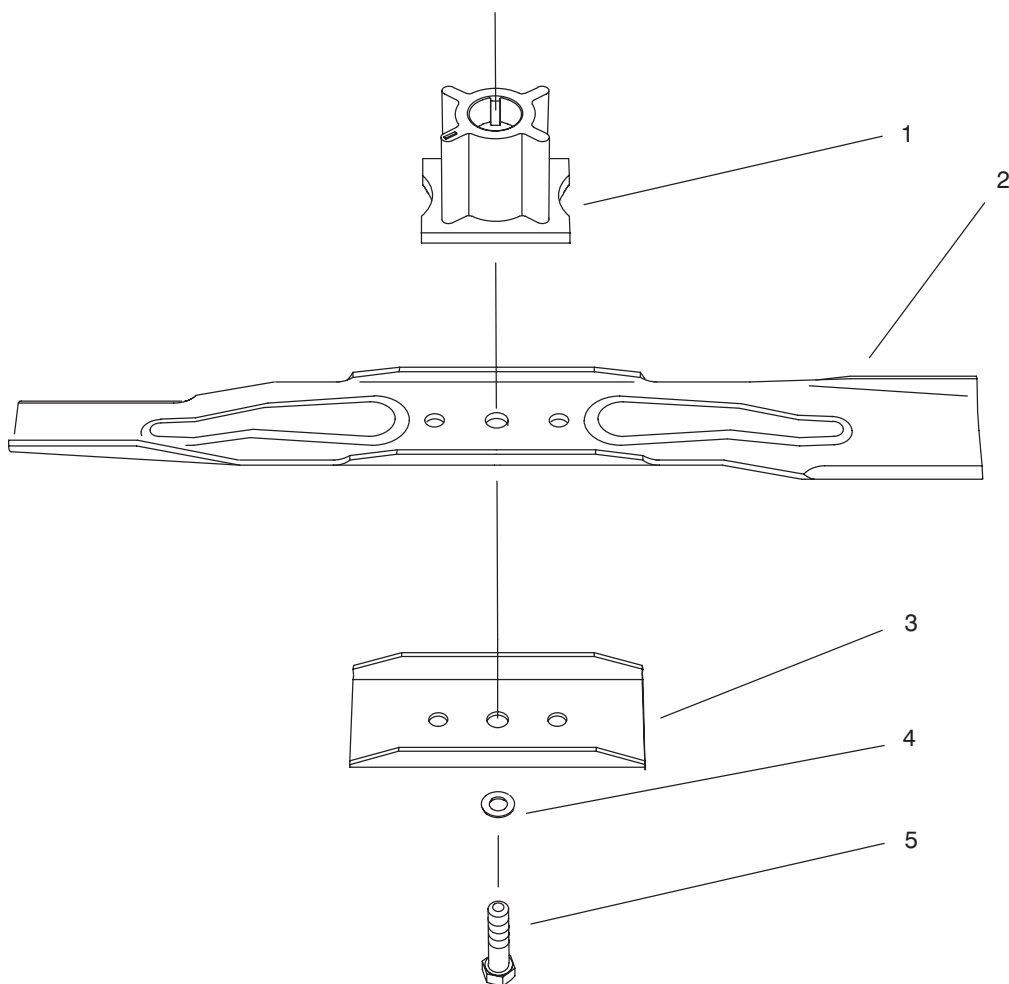 


C-2445

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-7940	Retainer - Blade	1
†2	92-9813	Blade - 48cm	1
†3	92-9812	Stiffener - Blade	1

Ref. No.	Part No.	Description	No. Used
4	3253-22	Washer - Lock	1
5	26-0672	Bolt - Blade	1

 † Obtain From Toro Europe N.V.

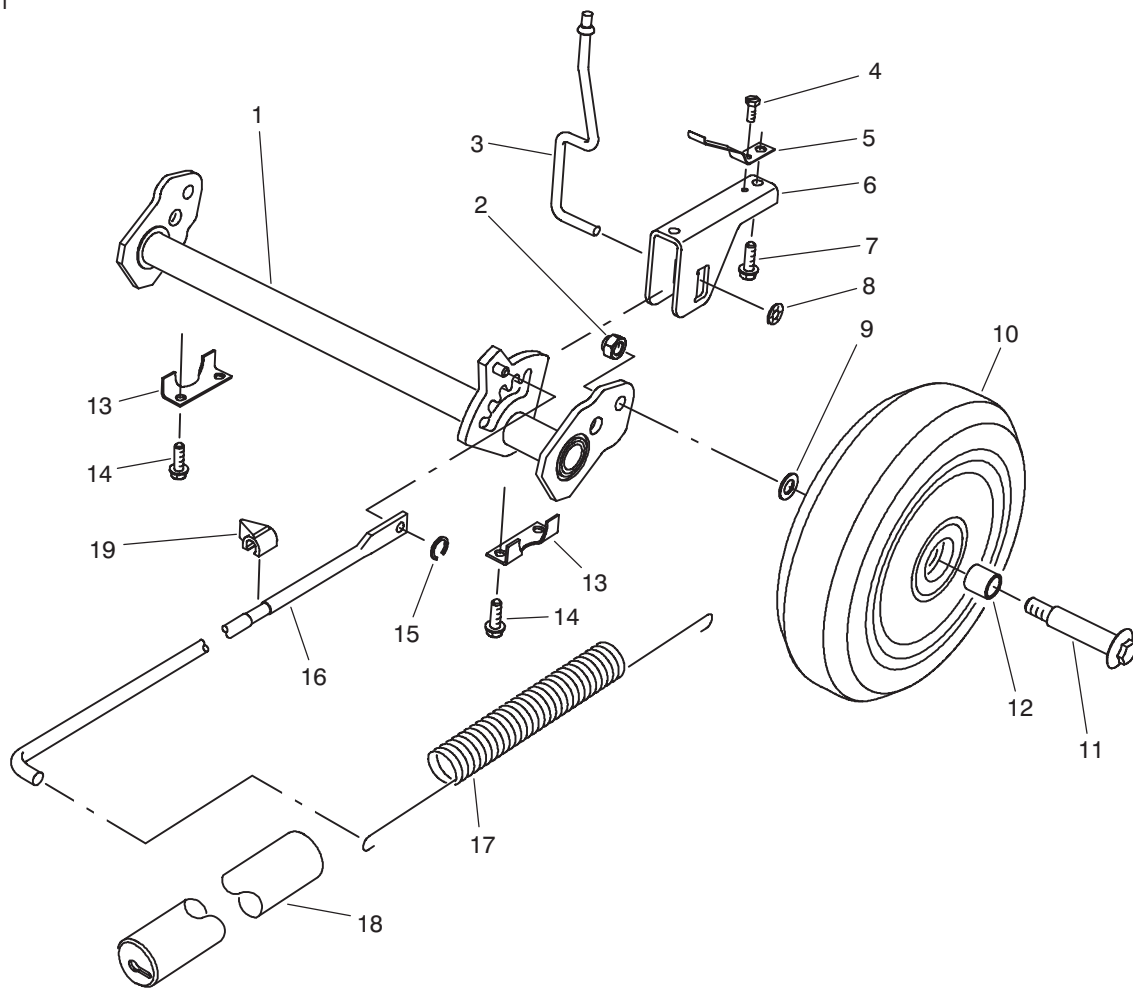


C-0363

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
†1	71-7800	Pivot - Rear H.P.	1
2	3296-5	Nut - Lock	2
3	71-7840	Rod - Trigger	1
4	32144-31	Screw - Thread Forming	1
5	71-8060	Spring - Trigger Return	2
6	71-8080	Saddle - H.O.C.	1
7	63-8590	Screw - Thread Forming	2
8	32112-13	Nut - Push	1
9	40-1940	Washer - Wheel	2
10	11-9509	Wheel & Tire Assembly (Incl. Ref. #12)	2

Ref. No.	Part No.	Description	No. Used
11	27-6230	Bolt - Wheel	2
12	27-6250	Bushing - Wheel	4
13	71-7770	Plate - Rear Securing	2
14	32144-4	Screw - Thread Forming	4
15	32151-93	Ring - Grip	1
16	71-7970	Rod - Link	1
17	71-7740	Spring - Counterbalance	1
18	71-8450	Cover - Spring	1
19	71-7980	Indicator - H.O.C.	1

 † Obtain From Toro Europe N.V.

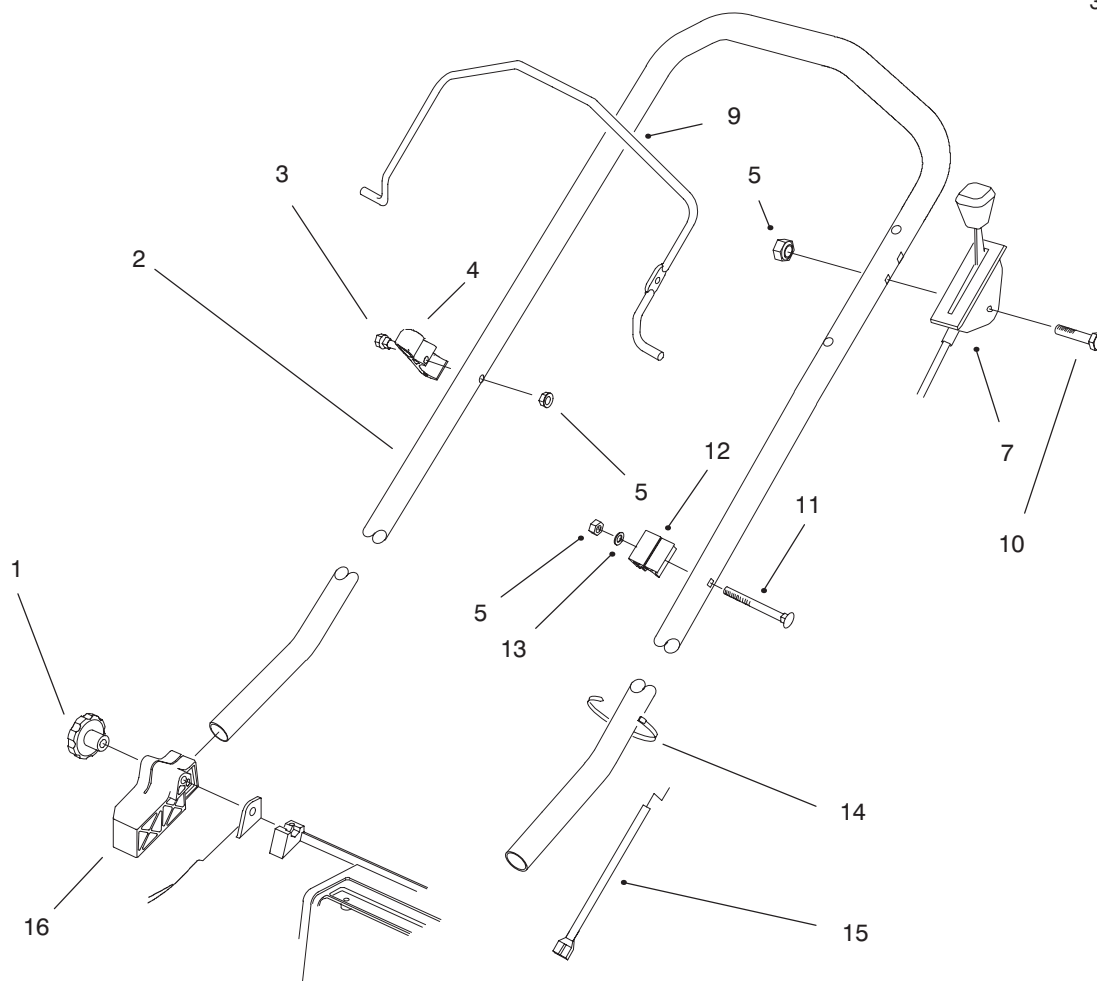

C-2446A


HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	19-4050	Knob	2
2	94-4375	Handle	1
3	321-52	Screw - Hex Hd. Cap	1
†4	93-3772	Guide - Rope	1
5	3296-73	Nut - Lock	3
7	93-1118	Control - Throttle	1
†9	94-4364	Bail - Brake	1
10	321-48	Screw - Hex Hd. Cap	1

Ref. No.	Part No.	Description	No. Used
11	92-2270	Screw - Handle	1
12	46-6980	Support - Cable	1
13	3256-1	Washer - Flat	1
14	3290-378	Tie - Cable	2
15	93-1116	Cable - Brake	1
16	71-8100	Mount - Handle R.H.	1
*	71-8090	Mount - Handle L.H.	1

*Not Illustrated

 † Obtain From Toro Europe N.V.

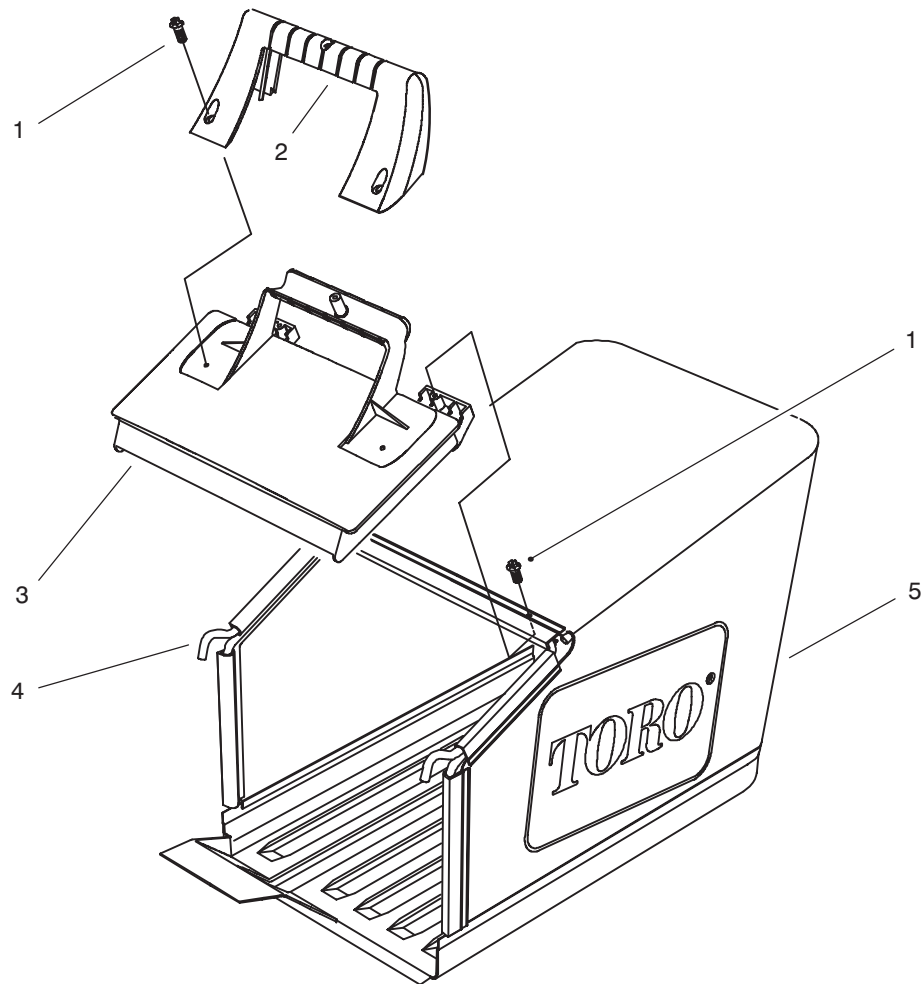


C-1509

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Thr'd Form	5
†2	71-9480	Handle - Door	1
†3	71-9470	Door - Bag	1

Ref. No.	Part No.	Description	No. Used
†4	71-9900	Frame - Bag	1
5	71-9460	Bag - Grass	1

 † Obtain From Toro Europe N.V.

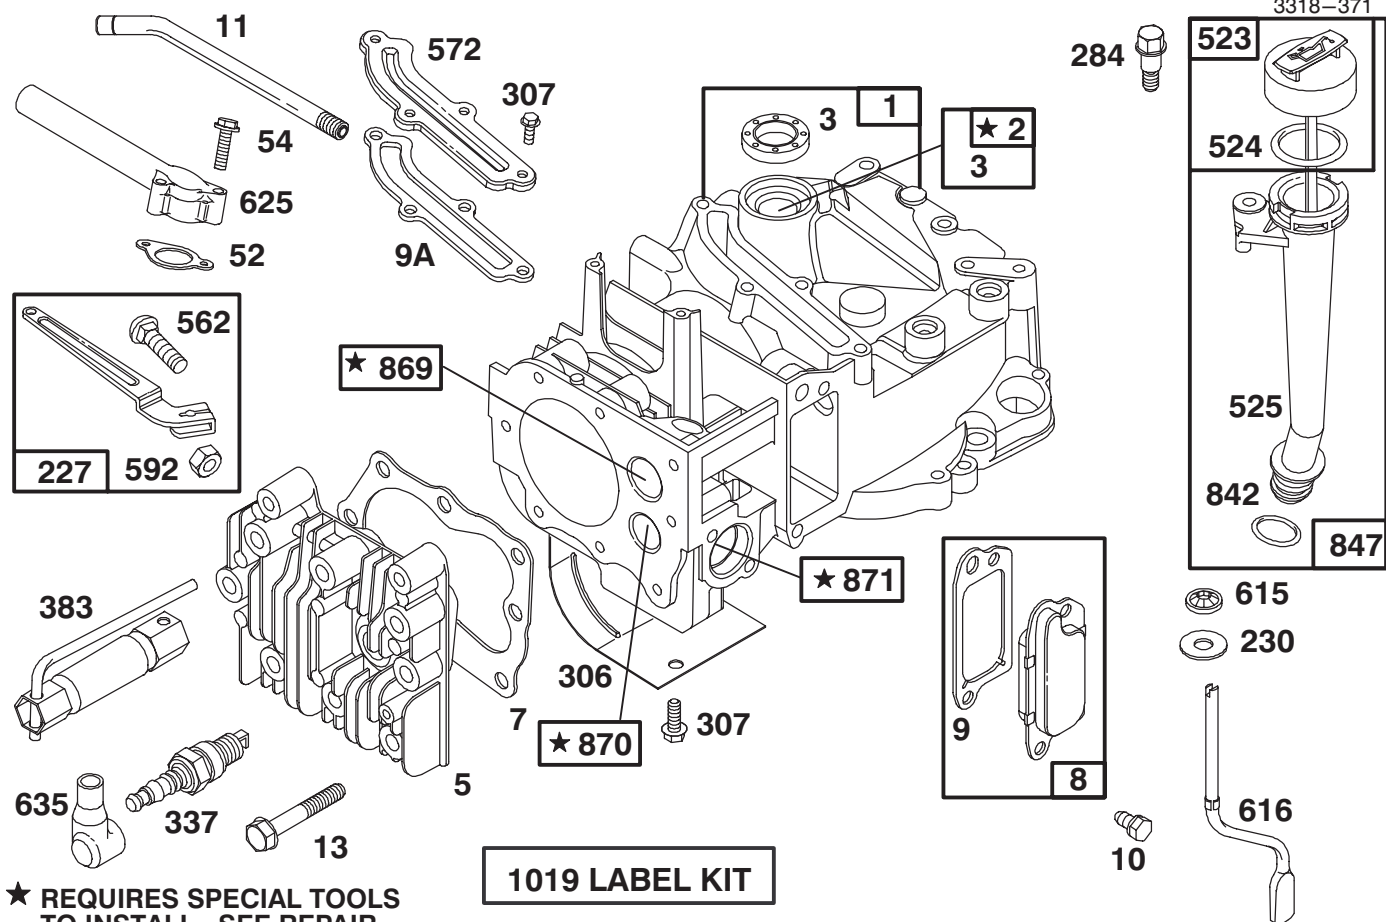

1019 LABEL KIT


★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1	383	89838	Wrench – Spark Plug	1
2	293708	Bushing – Cylinder	1	523	495264	Cap With Dipstick – Oil Filler	1
★3	299819	Seal – Oil	1	★524	280393	Seal – Filler Tube	1
5	214349	Head – Cylinder	1	525	495265	Tube – Oil Filler	1
★7	272916	Gasket – Cylinder Head	1	562	94852	Bolt – Carriage	1
8	495786	Breather – Valve Chamber	1	572	224328	Baffle – Cylinder	1
★9	272481	Gasket – Breather	1	592	231082	Nut – Hex.	1
★9A	272238	Gasket – Baffle Plate	1	615	94474	Fastener	1
10	94650	Screw – Breather Mtg.	1	616	262578	Crank – Governor	1
11	231933	Tube – Breather	1	625	497465	Tube – Fuel Intake	1
13	94547	Screw – Cylinder Head	1	635	66538	Elbow – Spark Plug	1
★52	272199	Gasket – Intake Elbow	1	★842	280966	Seal – O-Ring	1
54	94526	Screw – Intake Elbow Mtg.	1	847	495263	Oil Fill Tube Assy.	1
227	492349	Lever Assembly – Gov.	1	869	213512	Seat – Intake Valve	1
230	67072	Washer – Gov. Crank	1	870	213513	Seat – Exhaust Valve	1
284	94511	Screw – Hex. Head	1	871	262001	Guide – Exhaust Valve	1
306	224324	Shield – Cylinder	1			Note: 63709 Guide – Intake Valve	1
307	94515	Screw – Hex. Head	1			Label Kit	1
337	802592	Plug – Spark	1	1019	494256		

 ★ Included in Gasket Set—Part No. 496316.

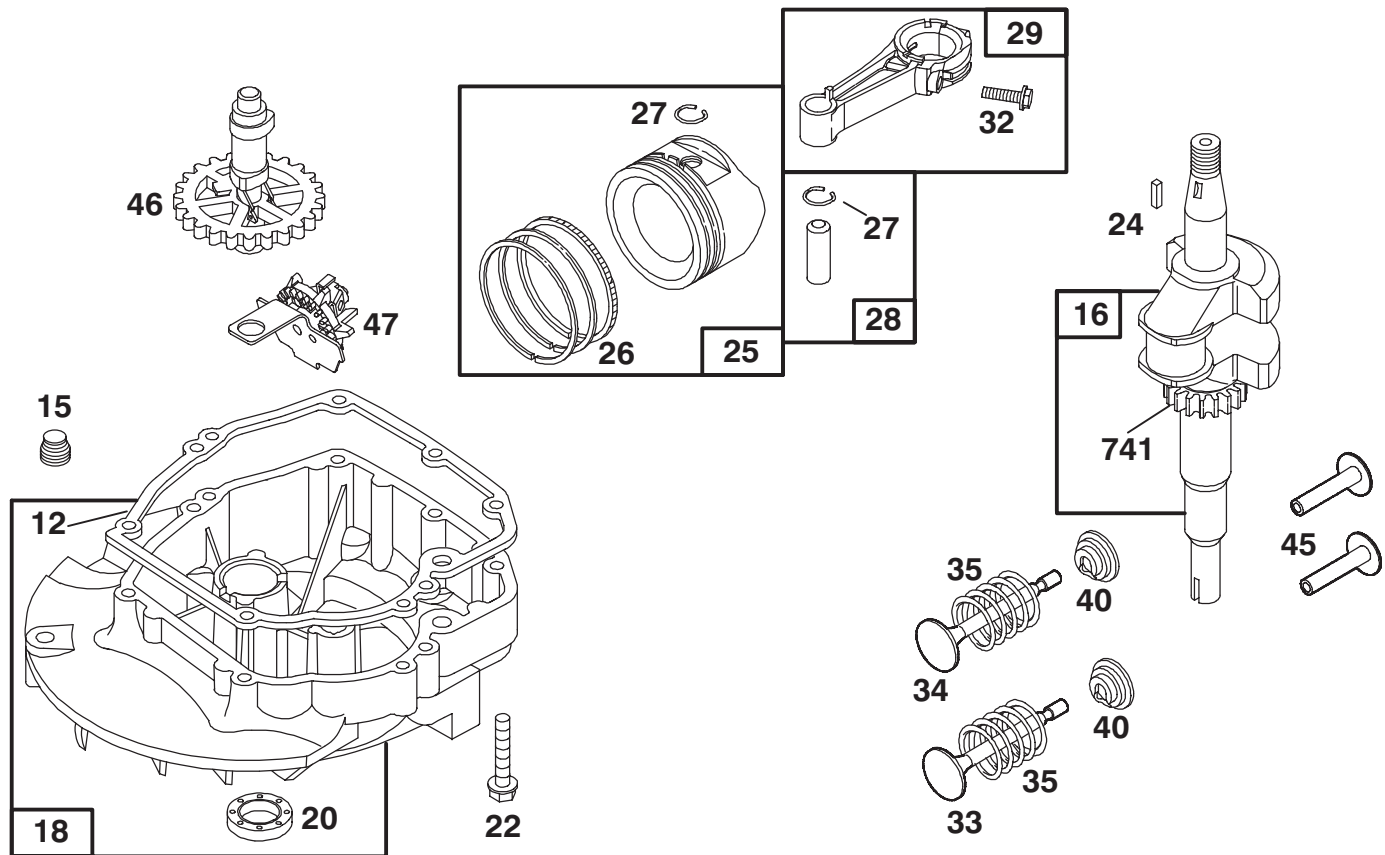


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket — Crankcase	1
15	94720	Plug — Oil Drain	1
16	494546	Crankshaft	
		Note: Order 94388 For Timing Gear Key.	
18	493279	Sump — Engine	1
★20	399781	Seal — Oil	1
22	94220	Screw — Hex. Head	1
		Note: 94612 Screw — Hex. Head (One (1) Used in Hole Nearest Breather)	1
24	222698	Key — Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock — Piston Pin	1
28	298909	Pin — Piston (Standard)	1
	298908	Pin — Piston (.005" O.S.)	1
29	490566	Rod Assembly — Connecting	1
		Note: For Conn. Rod With .020" Undersize Crankpin Bearing — Order No. 490743.	1
32	94699	Screw — Connecting Rod	1
33	262651	Valve — Exhaust	1
34	262652	Valve — Intake	1
35	262224	Spring — Valve	1
40	93312	Retainer — Valve Spring	1
45	262204	Tappet — Valve	1
46	492830	Gear — Cam	1
47	493737	Slinger — Oil	1
741	262598	Gear — Timing	1

 ★ Included in Gasket Set—Part No. 496316.

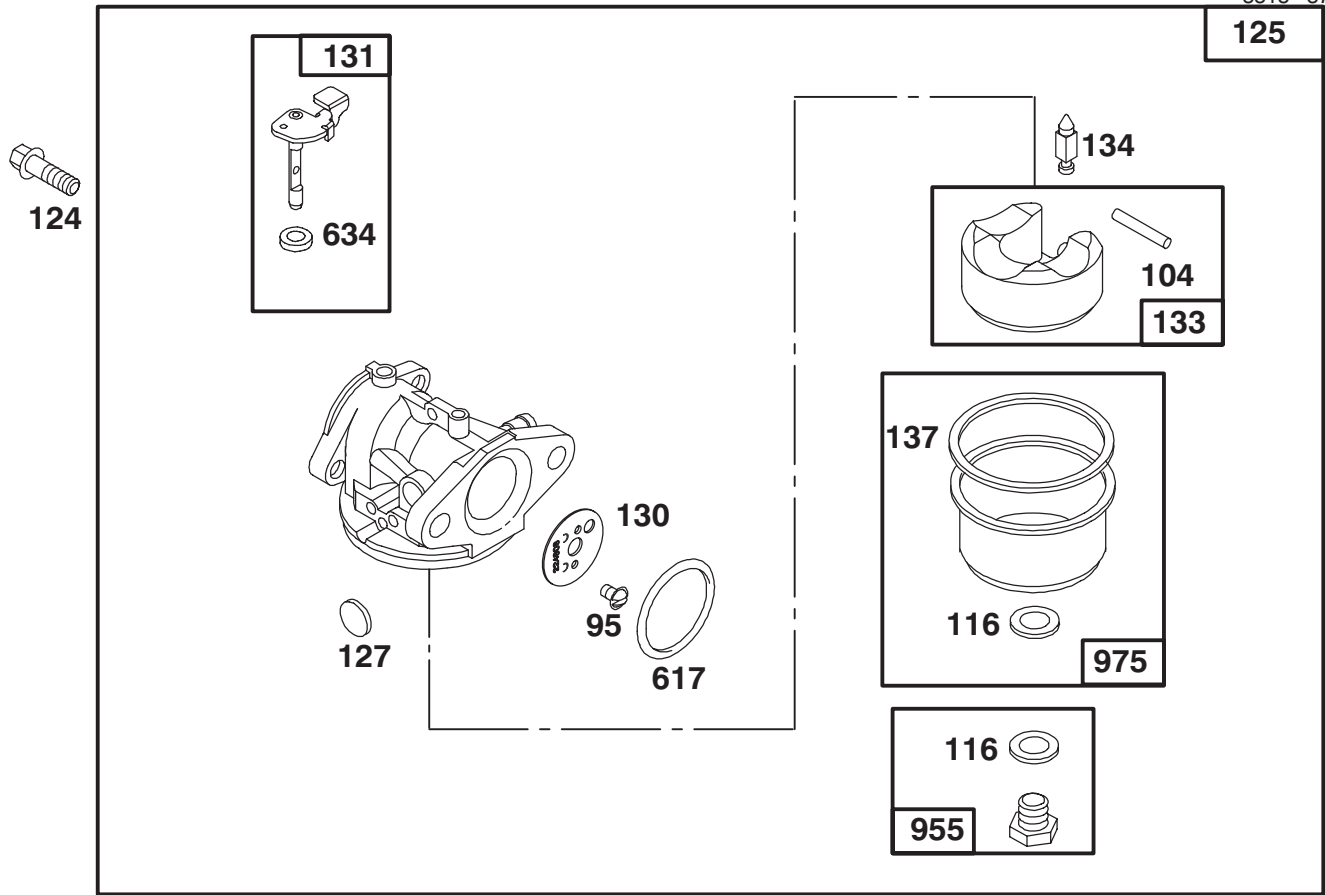


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw - Throttle Valve Mounting	1
●104	231371	Pin - Float Hinge	1
◆116		Gasket-Sealing (Sold in Kit Only)	1
124	94525	Screw - Carburetor Mtg.	1
125	497314	Carburetor	1
●127		Plug - Welch (Sold in Kit Only)	1
130	224908	Valve - Throttle	1
131	493267	Shaft - Throttle	1
133	398187	Float Assy. - Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve - Inlet (Includes Seat)	1
◆137		Gasket - Bowl (Sold in Kit Only)	1
◆137		Seal - Fuel Intake Tube (Sold in Kit Only)	1
◆617	270344	Washer - Shaft	1
◆634		Screw - Bowl Mtg. (Std.)	1
955	497315	Screw - Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. - Carburetor	1

 - Included in Carburetor Kit-Part No. 493762.
- ◆Included in Carburetor Gasket Set-Part No. 490937.

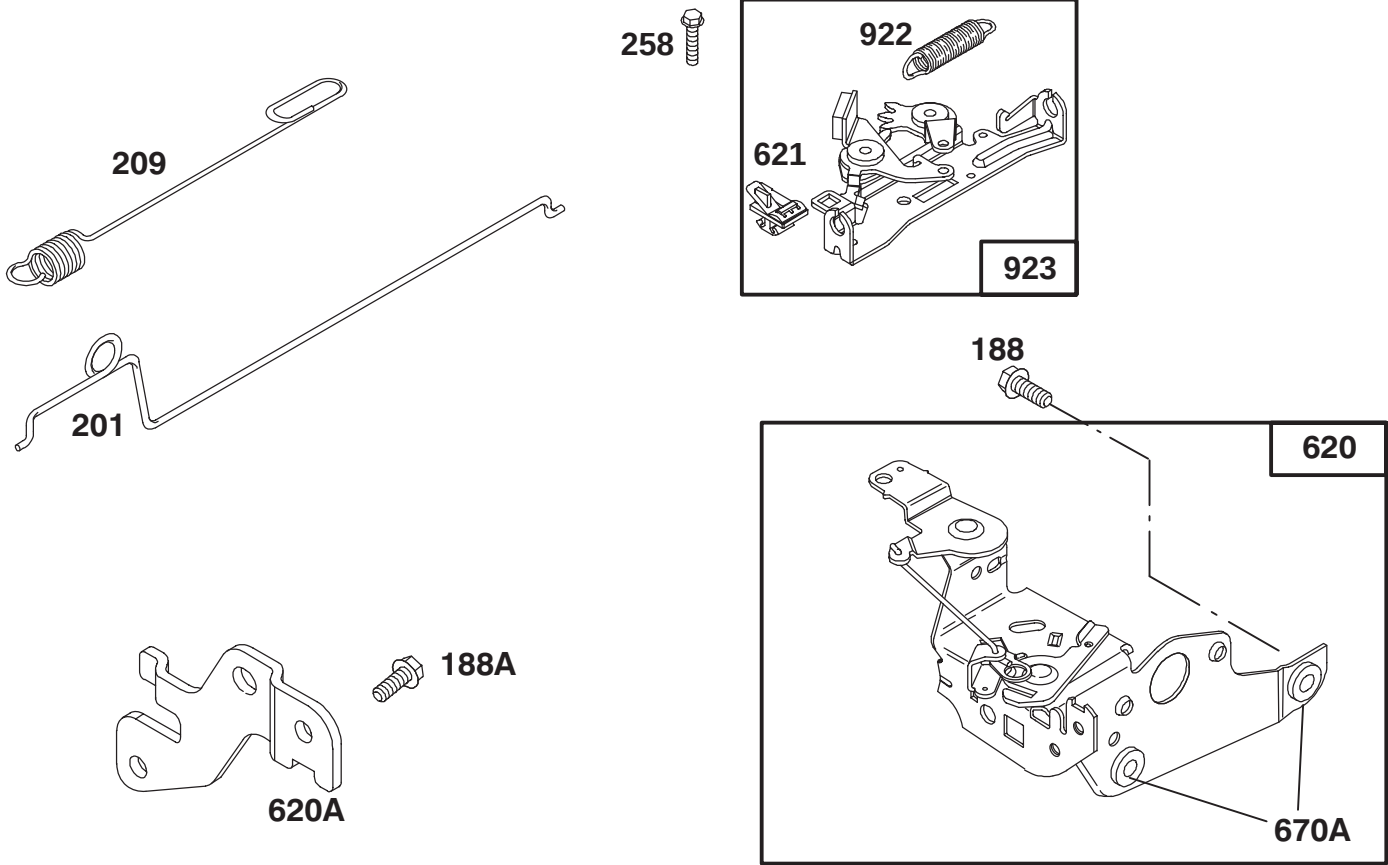


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex. Head	1
188A	94602	Screw – Hex. Head	1
201	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw–Hex. Head	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
670A	493823	Spacer – Bracket	1
922	262640	Spring–Brake	1
923	493442	Brake Assembly	1

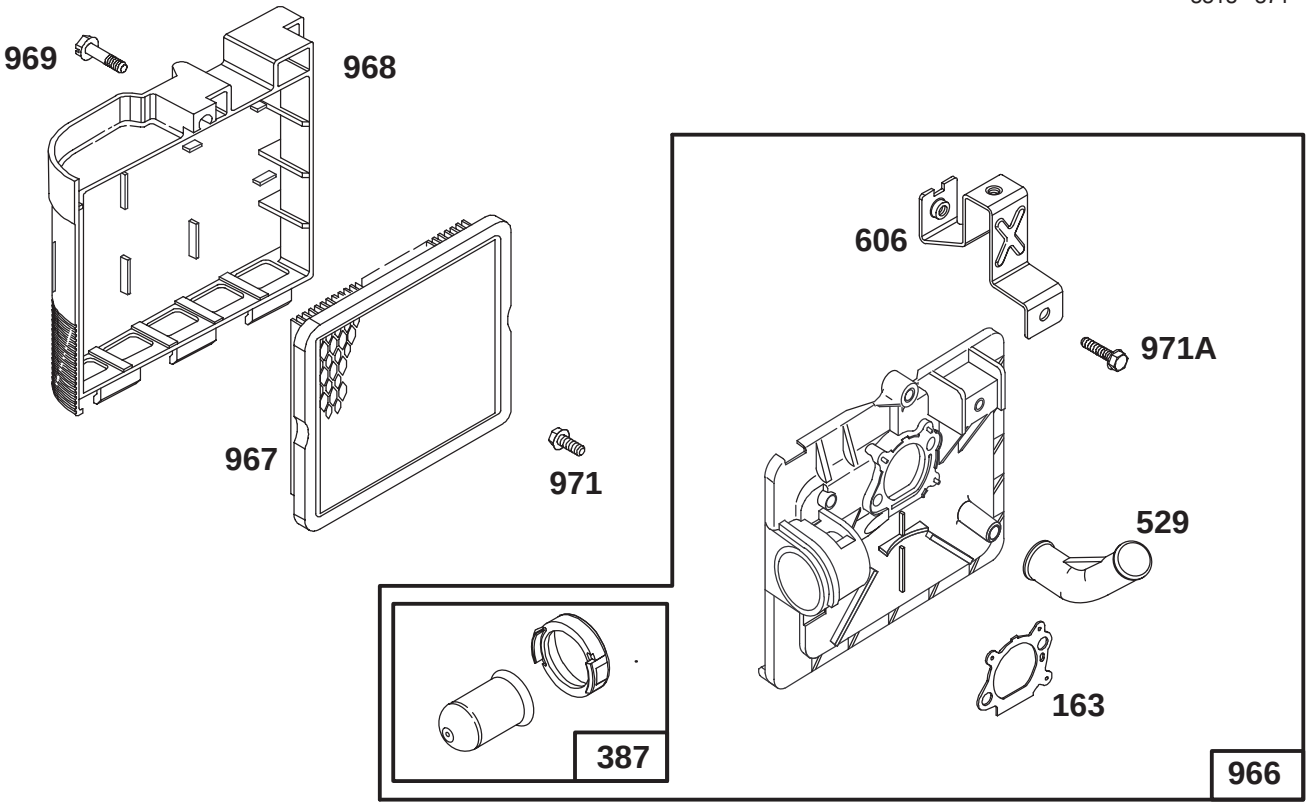 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667—01

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket — Air Cleaner	1
387	496115	Primer—Carburetor	1
529	281299	Grommet — Breather	1
606	224815	Strap — Bracket	1
966	496116	Base — Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
967	491588	Filter — Air	1
968	281340	Cover — Air Cleaner	1
969	94120	Screw — Cover Mtg.	1
971	94121	Screw — Air Cleaner	1
971A	94749	Screw — Hex. Head	1

 
★ Included in Gasket Set—Part No. 496316.

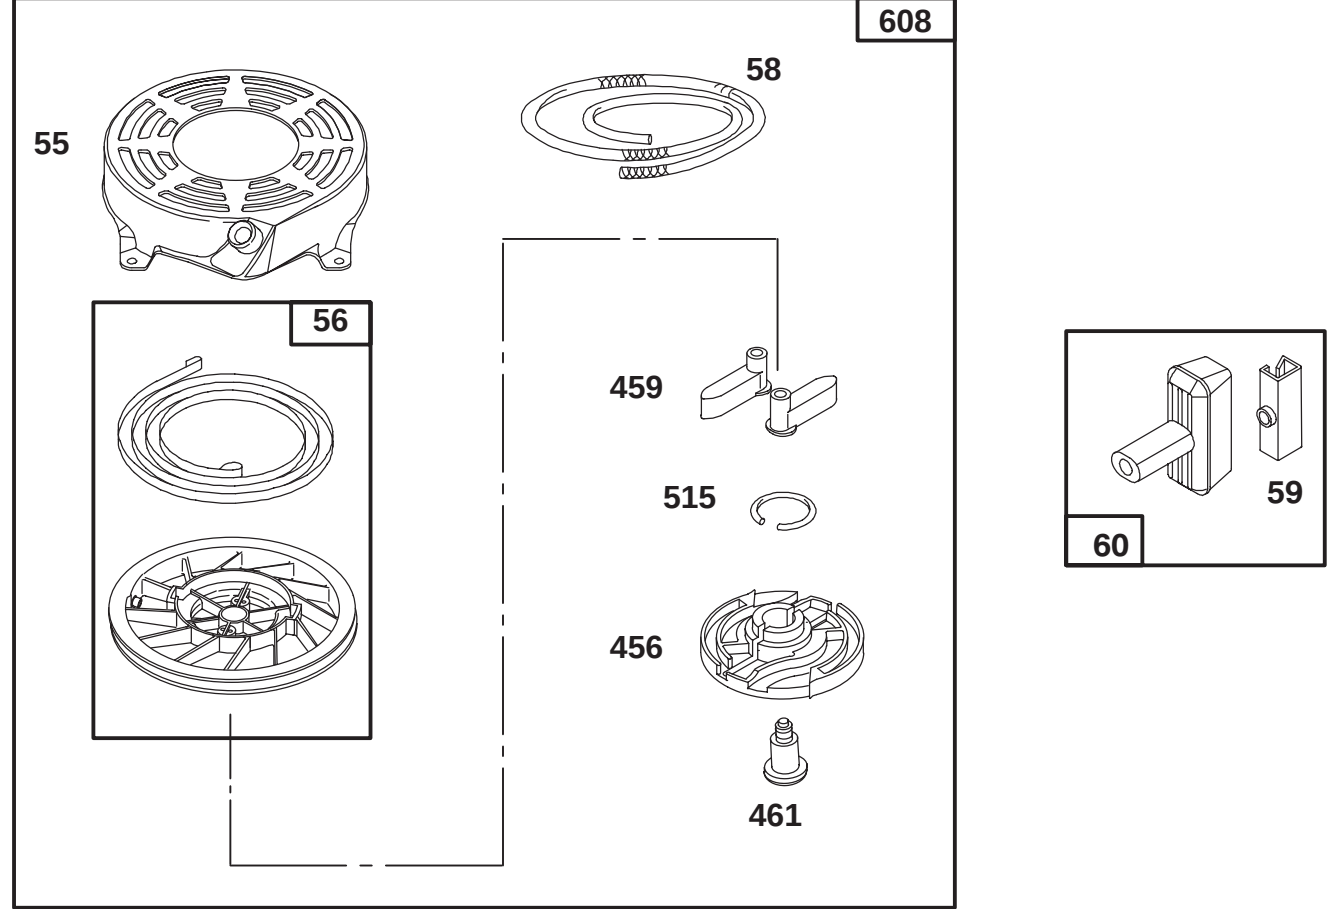

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1	459	281505	Pawl – Starter	1
56	498144	Pulley – Rewind Starter	1	461	94943	Pin – Starter	1
58	280399	Rope – Rewind Starter (Cut to Required Length)	1	515	263073	Spring – Torsion	1
59	224467	Insert – Starter Grip	1	608	497680	Starter Assy. – Rewind	1
60	493926	Handle – Rewind Starter	1			Includes:	
456	281503	Retainer – Rewind Starter	1			94128 Screw – Hex Hd.	1
						92987 Nut – Hex.	1

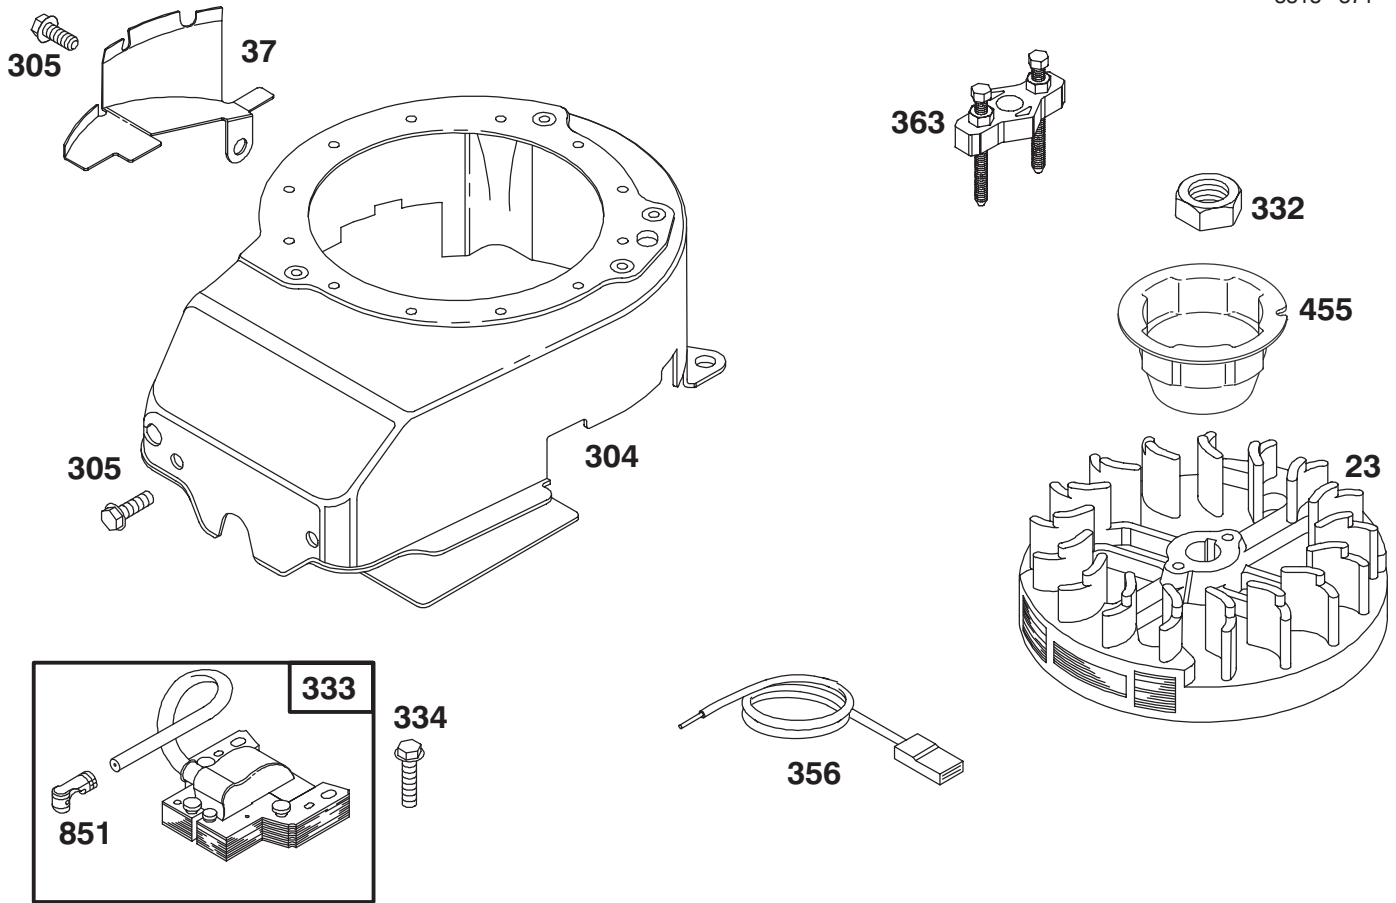 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667—01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard — Flywheel	1
304	493293	Housing — Blower	1
305	94744	Screw — Sem	1
332	92284	Nut — Flywheel	1
333	802574	Armature — Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw — Sem	1
356	398808	Wire — Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup — Starter	1
851	493880	Terminal — Ignition Cable	1



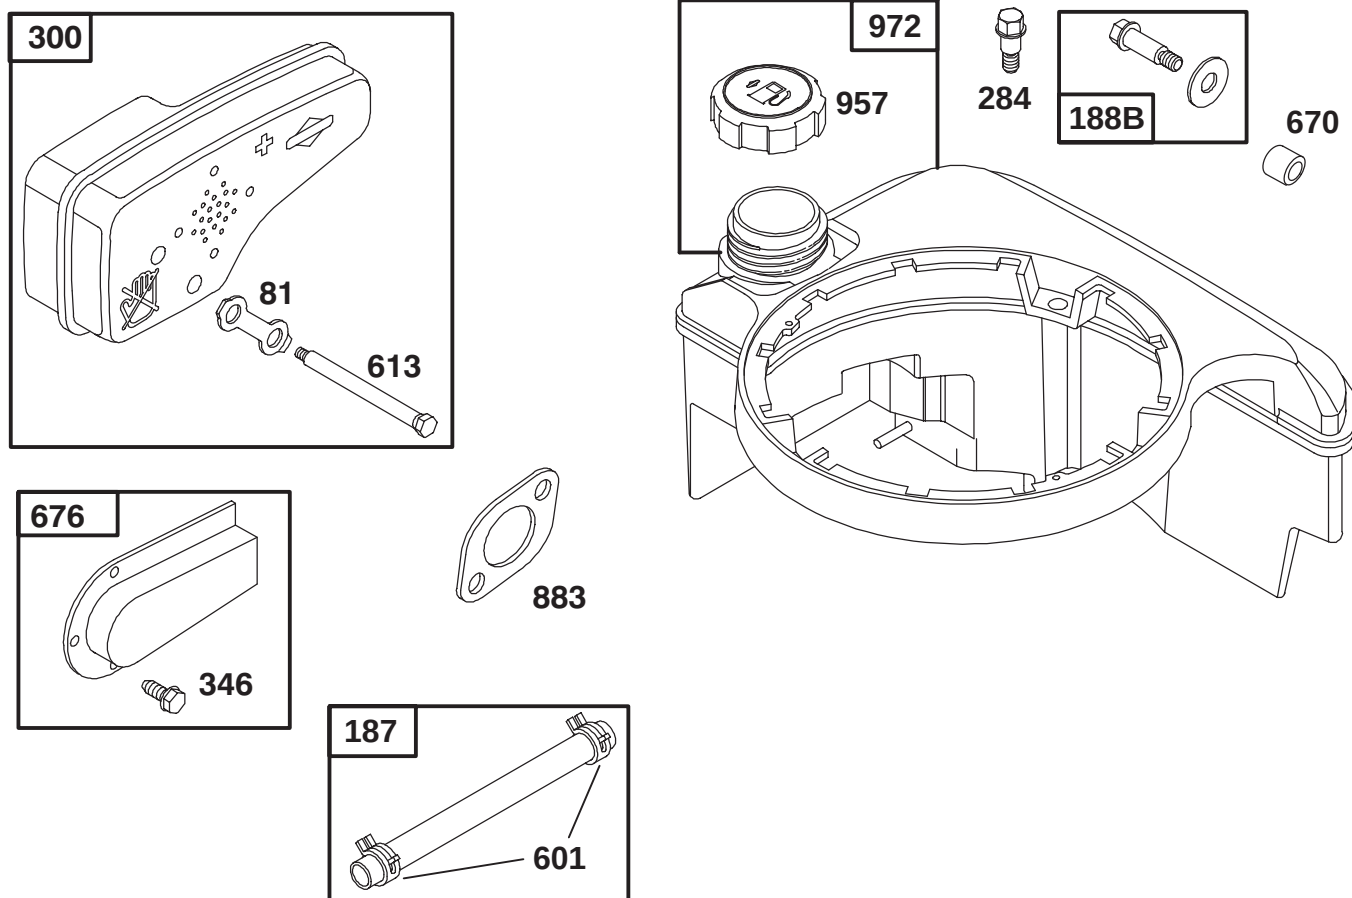 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock - Muffler Screw	1
187	492790	Hose - Fuel	1
188	398540	Screw - Tank Mounting	1
284	94511	Screw - Shoulder	1
300	496106	Muffler - Exhaust	1
346	93705	Screw - Hex. Head	1
601	93053	Clamp - Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw - Shoulder	1
670	280512	Spacer - Fuel Tank	1
676	493871	Deflector - Muffler	1
★883	272253	Gasket - Exhaust	1
957	397974	Cap Assy. - Fuel	1
972	495224	Tank Assembly - Fuel	1

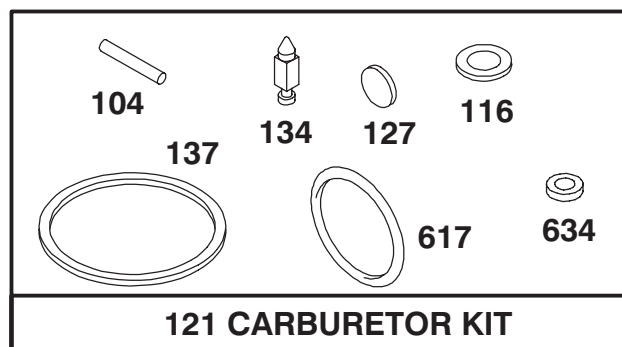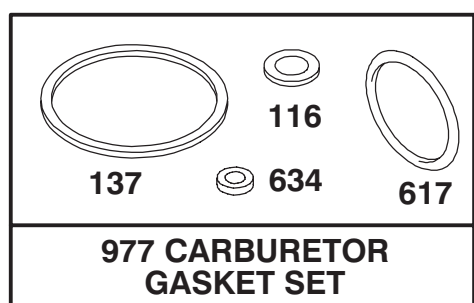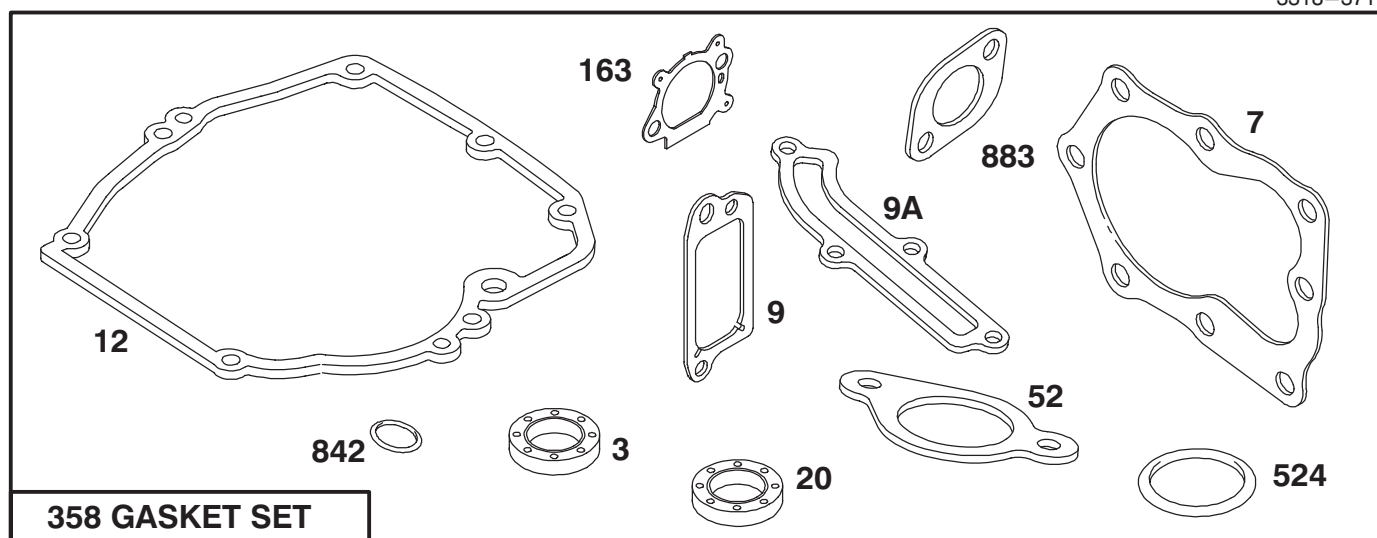   

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667—01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal — Oil	1
★7	272916	Gasket — Cylinder Hd.	1
★9	272481	Gasket — Breather	1
★9A	272238	Gasket — Baffle Plate	1
★12	272198	Gasket — Crankcase	1
★20	399781	Seal — Oil	1
★52	272199	Gasket — Intake Elbow	1
●104	231371	Pin — Float Hinge	1
◆116		Gasket — Sealing (Sold in Kit Only)	1
121	493762	Carburetor Kit	1
●127		Plug — Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve — Inlet (Includes Seat)	1
◆137		Gasket — Bowl (Sold in Kit Only)	1
★163	272653	Gasket — Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal — Filler Tube	1
◆617	270344	Seal — Fuel Intake Tube	1
◆634		Washer — Shaft (Sold in Kit Only)	1
★842	280966	Seal — O-Ring	1
★883	272253	Gasket — Exhaust	1
977	490937	Gasket Set — Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 496316.

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
11—9509	Wheel & Tire Assembly	4 10 2	71—9860	Decal — 48cm	1 1 1
16—5979	Housing — 48cm	1 2 1	71—9900	Frame — Bag	6 4 1
19—4050	Knob	5 1 2	82—8550	Shield — Muffler	2 7 1
26—0672	Bolt — Blade	3 5 1	92—2270	Screw — Handle	5 11 1
27—6230	Bolt — Wheel	4 11 2	92—2289	Decal — Toro Logo	2 12 1
27—6230	Bolt — Wheel	1 30 2	92—9812	Stiffener — Blade	3 3 1
27—6250	Bushing — Wheel	4 12 4	92—9813	Blade — 48cm	3 2 1
27—6250	Bushing — Wheel	1 28 4	93—0243	Shroud — QT Wedge	2 4 1
40—1940	Washer — Wheel	4 9 2	93—1116	Cable — Brake	5 15 1
40—1940	Washer — Wheel	1 27 2	93—1118	Control — Throttle	5 7 1
46—1113	Wheel & Tire Assembly	1 29 2	93—3772	Guide — Rope	5 4 1
46—6980	Support — Cable	5 12 1	93—4105	Decal — Danger	1 4 1
63—8590	Screw — Thread Forming	4 7 2	93—4354	Decal — Engine	2 1 1
65—5210	Screw — Thread Forming	1 12 2	93—8470	Screw — Clamp	2 10 1
71—7740	Spring — Counterbalance	4 17 1	94—4364	Bail — Brake	5 9 1
71—7770	Plate — Rear Securing	4 13 2	94—4375	Handle	5 2 1
71—7800	Pivot — Rear H.P.	4 1 1	2210—249	Clamp — Cable	2 11 1
71—7820	Pivot — Front	1 25 1	2210—316	Stop — Rope	2 3 1
71—7840	Rod — Trigger	4 3 1	321—48	Screw — Hex Hd. Cap	5 10 1
71—7860	Grip — Upper	1 13 1	321—52	Screw — Hex Hd. Cap	5 3 1
71—7870	Grip — Lower	1 6 1	322—29	Screw — Cap Hex. Hd.	1 17 2
71—7900	Cap — Hinge Bolt L.H.	1 16 1	3253—22	Washer — Lock	3 4 1
71—7910	Cap — Hinge Bolt R.H.	1 11 1	3256—1	Washer — Flat	5 13 1
71—7920	Cover — Belt	1 3 1	3284—5	Pin — Roll	1 8 1
71—7930	Trigger — H.O.C.	1 7 1	3290—378	Tie — Cable	2 5 1
71—7940	Retainer — Blade	3 1 1	3290—378	Tie — Cable	5 14 2
71—7970	Rod — Link	4 16 1	3296—5	Nut — Lock	4 2 2
71—7980	Indicator — H.O.C.	4 19 1	3296—73	Nut — Lock	5 5 3
71—7990	Ramp — Discharge	1 22 1	32112—11	Nut — Push	1 23 1
71—8060	Spring — Trigger Return	4 5 2	32112—13	Nut — Push	4 8 1
71—8080	Saddle — H.O.C.	4 6 1	32144—4	Screw — Thread Forming	4 14 4
71—8090	Mount — Handle L.H.	5 * 1	32144—4	Screw — Thread Forming)	1 10 8
71—8100	Mount — Handle R.H.	5 16 1	32144—31	Screw — Thread Forming	4 4 1
71—8450	Cover — Spring	4 18 1	32144—70	Screw — Hex. Flange Hd.	1 5 1
71—8580	Spacer — Door	1 20 2	32144—73	Screw — Muffler	2 6 3
71—8830	Retainer — Shaft	1 24 2	32144—97	Screw — Thread Forming	1 14 2
71—9460	Bag — Grass	6 5 1	32144—102	Screw — Engine Mount	2 8 3
71—9470	Door — Bag	6 3 1	32144—111	Screw — Thr'd Form	6 1 5
71—9480	Handle — Door	6 2 1	32144—121	Screw	2 2 2
71—9800	Door — Discharge	1 15 1	32151—93	Ring — Grip	4 15 1
71—9840	Spring — Door	1 18 2			