



Count on it.

Parts Catalog

MH-400EH0

Material Delivery Unit

Model No. 44933—Serial No. 311000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Box Frame Assembly	4
Box Frame Decal Assembly No. 120-0890	5
Attachment Clamp Assembly No. T36015800.	6
Guard Assembly	7
Hitch Assembly	8
Belt and Skirting Assembly	9
Skirting Assembly	10
Conveyor Assembly	11
Chain Drive Assembly	12
Chain and Sprocket Assembly	13
Wheel Assembly	14
Shaft Assembly No. 120-0941	15
Hub Assembly No. T54031039	16
Hydraulic Manifold Block and Fitting Assembly	17
Hydraulic Motor and Hose Assembly	18
Hydraulic Motor Assembly No. T0000-5303	19
Hydraulic Cylinder and Manifold Block Assembly	20
Block Guard and Hose Assembly	21
Wireless Base and Emergency Stop Assembly	22
Wireless Remote Mounting Assembly	23

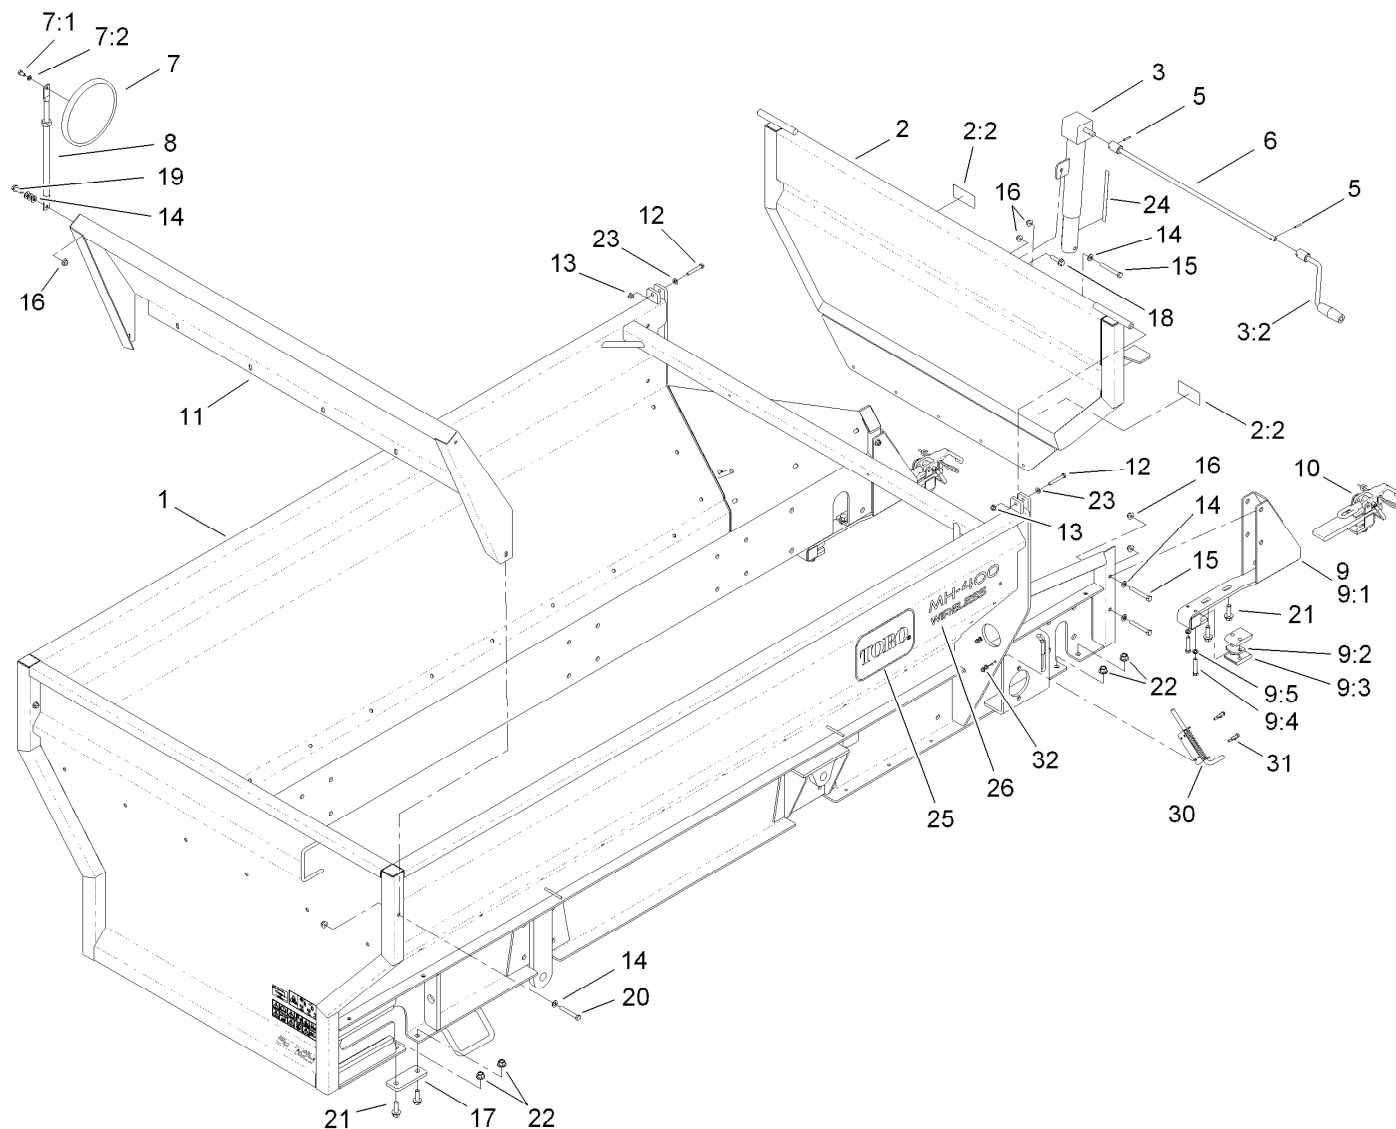

Box Frame Assembly


Ref.	Part Number	Qty.	Description
1	120-0890	1	Box Frame ASM
2	120-0891	1	Tailgate ASM
2:2	119-6838	2	Decal-Warning, Conveyor
3	T36031200	1	Jack-Tailgate
3:2	T36031210	1	Handle-Crank
5	32121-45	2	Pin-Spring
6	T36011220-01	1	Jack Crank ASM
7	92-2678	1	Mirror-Convex
7:1	322-2	1	Screw-HH
7:2	3253-4	1	Washer-Lock
8	T36011560	1	Arm-Mirror
9	T36015790	2	Attachment Bracket ASM
9:1	119-6872-01	1	Bracket-Attachment
9:2	T01-13489B	1	Tab-Spacer
9:3	T36015200	2	Bar-Bearing
9:4	323-10	2	Screw-HH
9:5	3253-21	2	Washer-Lock
10	T36015800	2	Attachment Clamp ASM
11	T36011550-01	1	Sloped Panel ASM

Ref.	Part Number	Qty.	Description
12	322-11	2	Screw-HH
13	104-8300	2	Nut-Flange, NI
14	3256-24	10	Washer-Flat
15	323-14	5	Screw-HH
16	104-8301	14	Nut-Flange, NI
17	T36011650	2	Bar-Bridge
18	114-4681	1	Screw-HHF
19	3234-42	6	Screw-HHF
20	323-13	2	Screw-HH
21	100-6116	8	Screw-HHF
22	99-5107	8	Nut-Lock
23	3256-23	2	Washer-Flat
24	119-6869	1	Decal-Tailgate Adjustment
25	66-6140	3	Decal
26	119-6803	3	Decal-Mh 400, Wireless
30	T62021030	2	Latch-Spring
31	321-6	8	Screw-HH
32	104-7201	8	Nut-HF

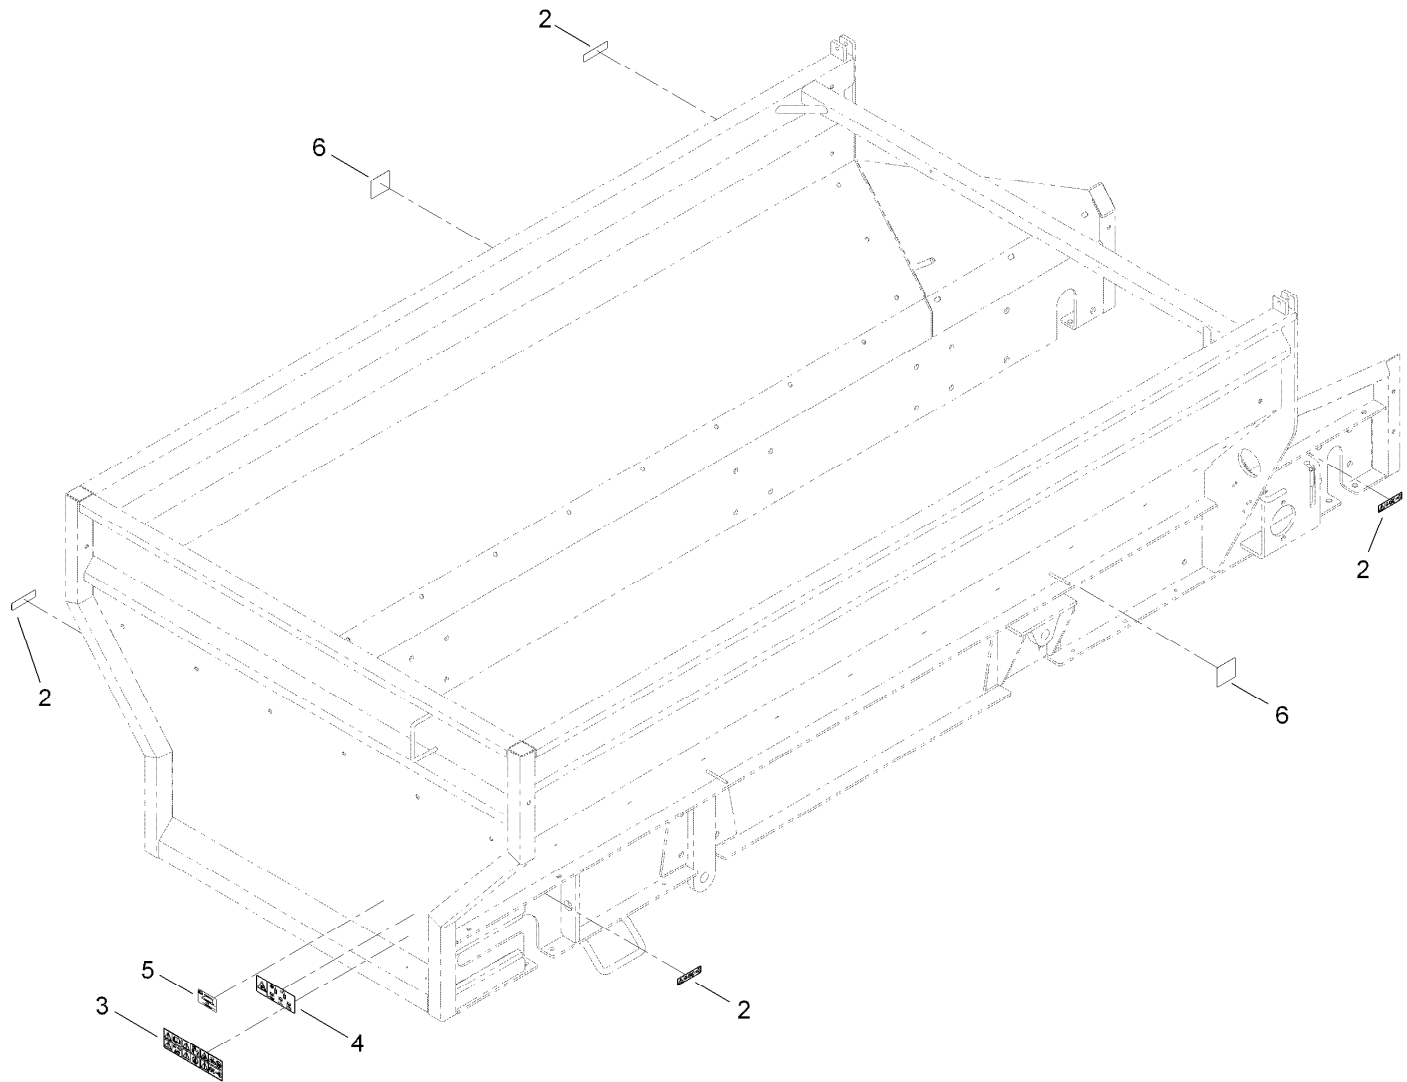


Box Frame Decal Assembly No. 120-0890

Ref.	Part Number	Qty.	Description
2	119-0217	4	Decal-Danger
3	119-6806	1	Decal-Danger, Propass
4	119-6812	1	Decal-Warning, Tipping Hazard
5	119-6833	1	Decal-Max Load
6	93-9899	2	Decal-Warning

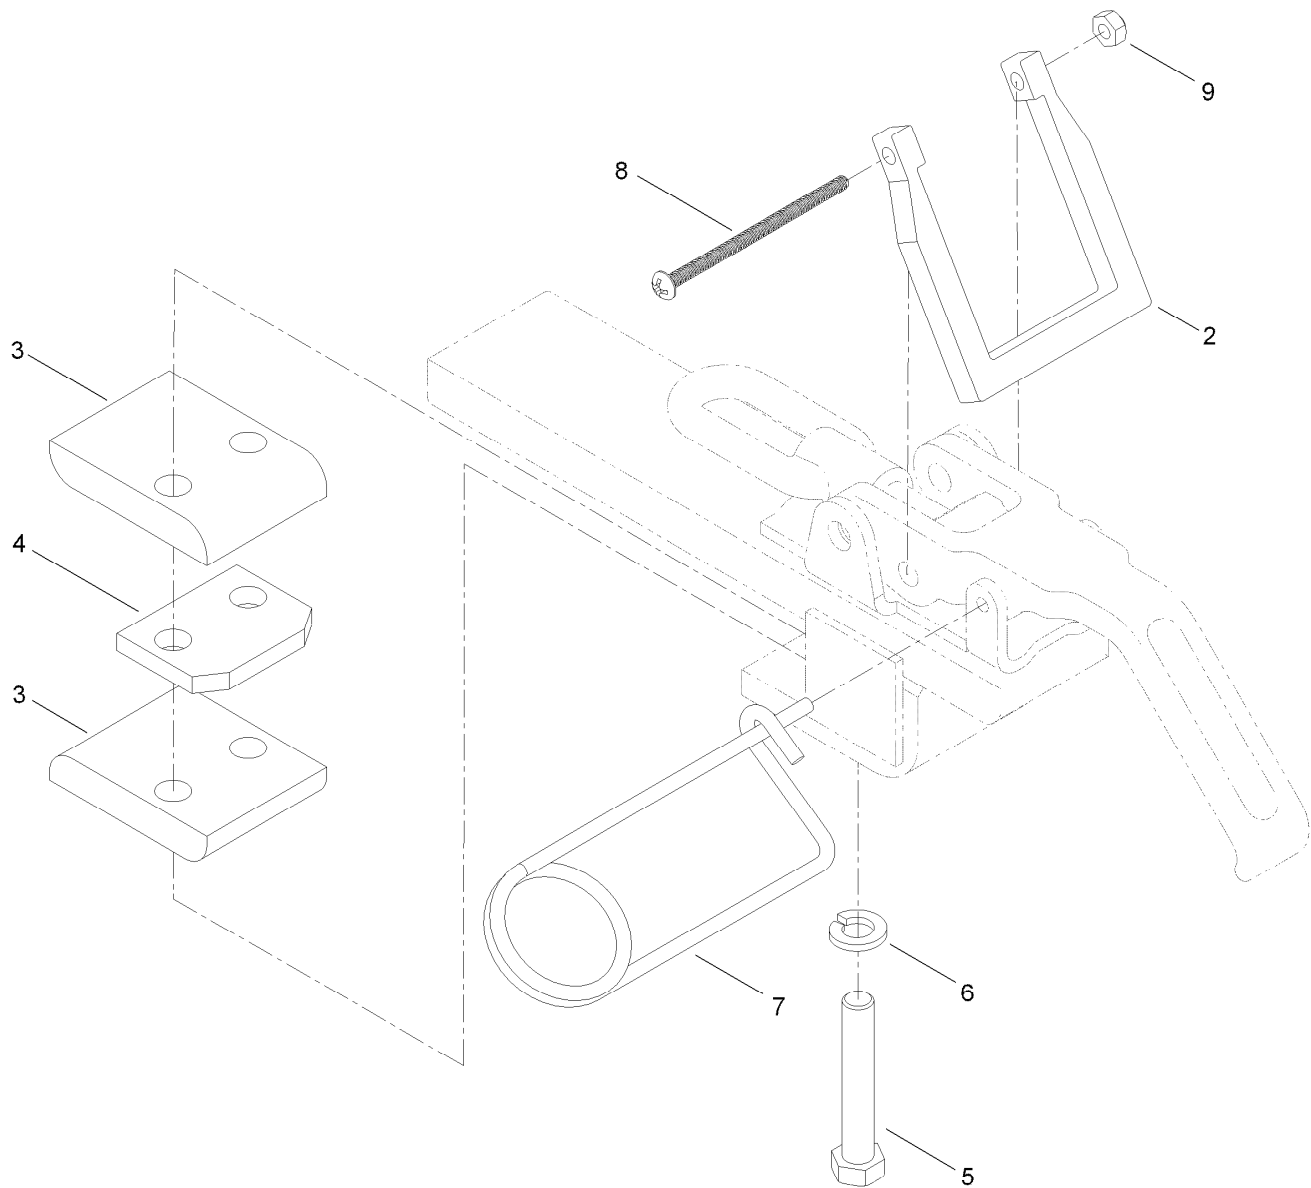

Attachment Clamp Assembly No. T36015800


Ref.	Part Number	Qty.	Description
2	T36015794	1	Lock-Attachment Clamp
3	T36015200	2	Bar-Bearing
4	T01-13489B	1	Tab-Spacer
5	323-11	2	Screw-HH
6	3253-21	2	Washer-Lock
7	T0000-3247	1	Pin-Lock
8	120-0884	1	Screw-PRH
9	3296-2	1	Nut-Lock, NI

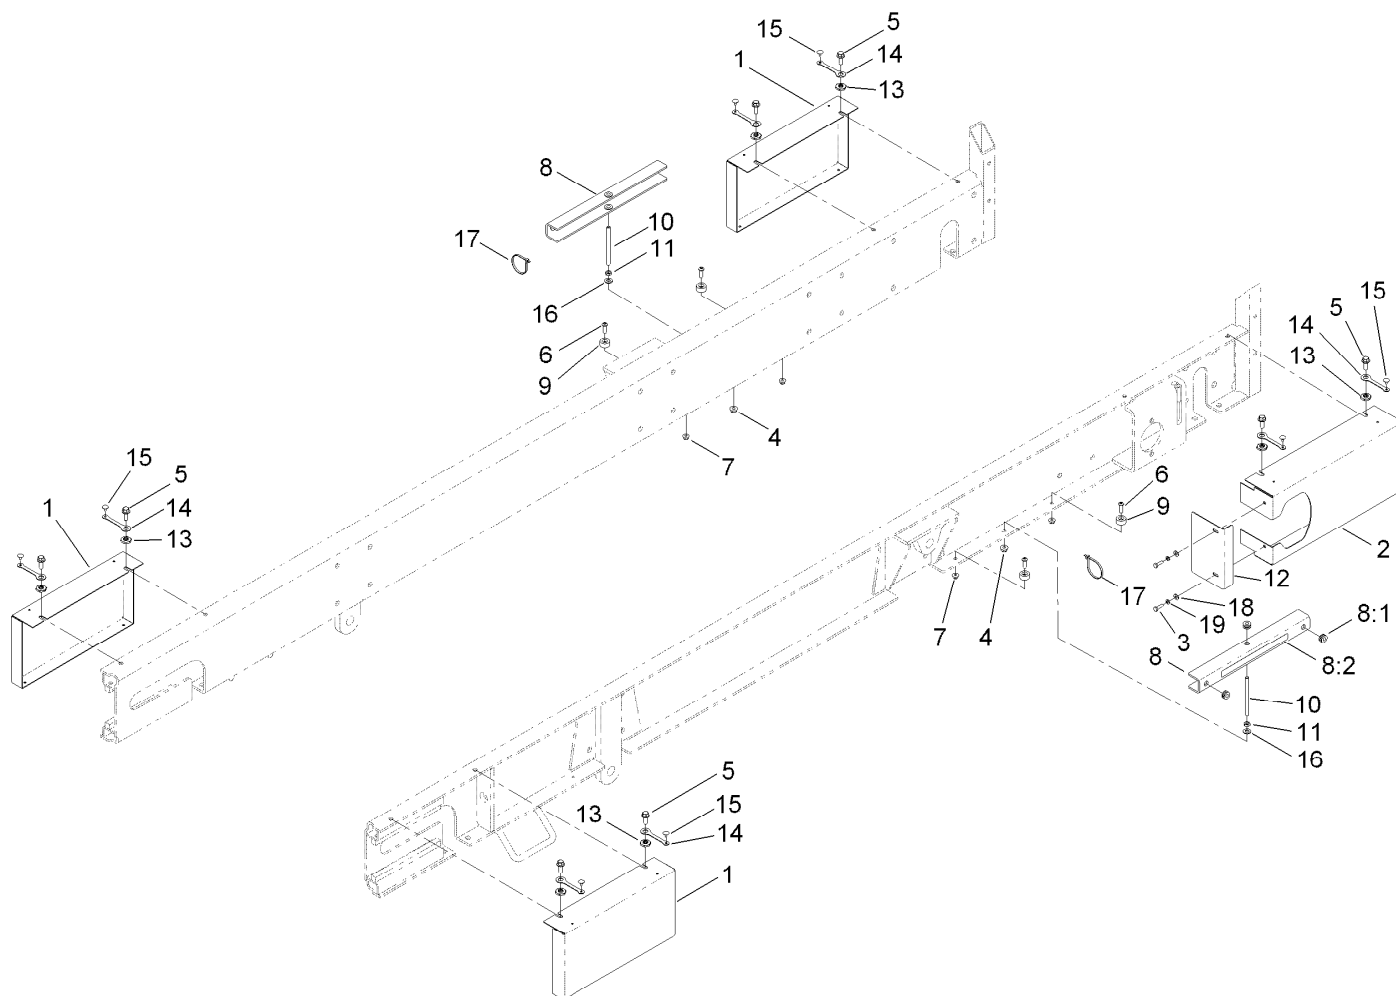

Guard Assembly

Ref.	Part Number	Qty.	Description
1	T36011630-03	3	Guard-Idler
2	T36011640-03	1	Drive Guard ASM
3	321-5	2	Screw-HH
4	104-8301	2	Nut-Flange, NI
5	3234-42	8	Screw-HHF
6	3274-104	4	Screw-HSBH
7	104-8300	4	Nut-Flange, NI
8	T36011580	2	Lift Cylinder Stop ASM
8:1	92-5972	4	Grommet-Rubber
8:2	93-9852	1	Decal-Warning
9	T0001-3570	4	Spacer-Stop, Lift Cylinder


Ref.	Part Number	Qty.	Description
10	T36011590	2	Pin-Lift Cylinder Stop
11	3218-3	2	Nut-Jam
12	T0000-5529-03	1	Guard-Motor, Drive
13	117-8347	8	Nut-Shoulder
14	117-8339	8	Lanyard-3 Inch
15	146489	8	Rivet
16	3256-24	2	Washer-Flat
17	3290-379	2	Tie-Cable
18	3256-22	2	Washer-Flat
19	3253-3	2	Washer-Lock

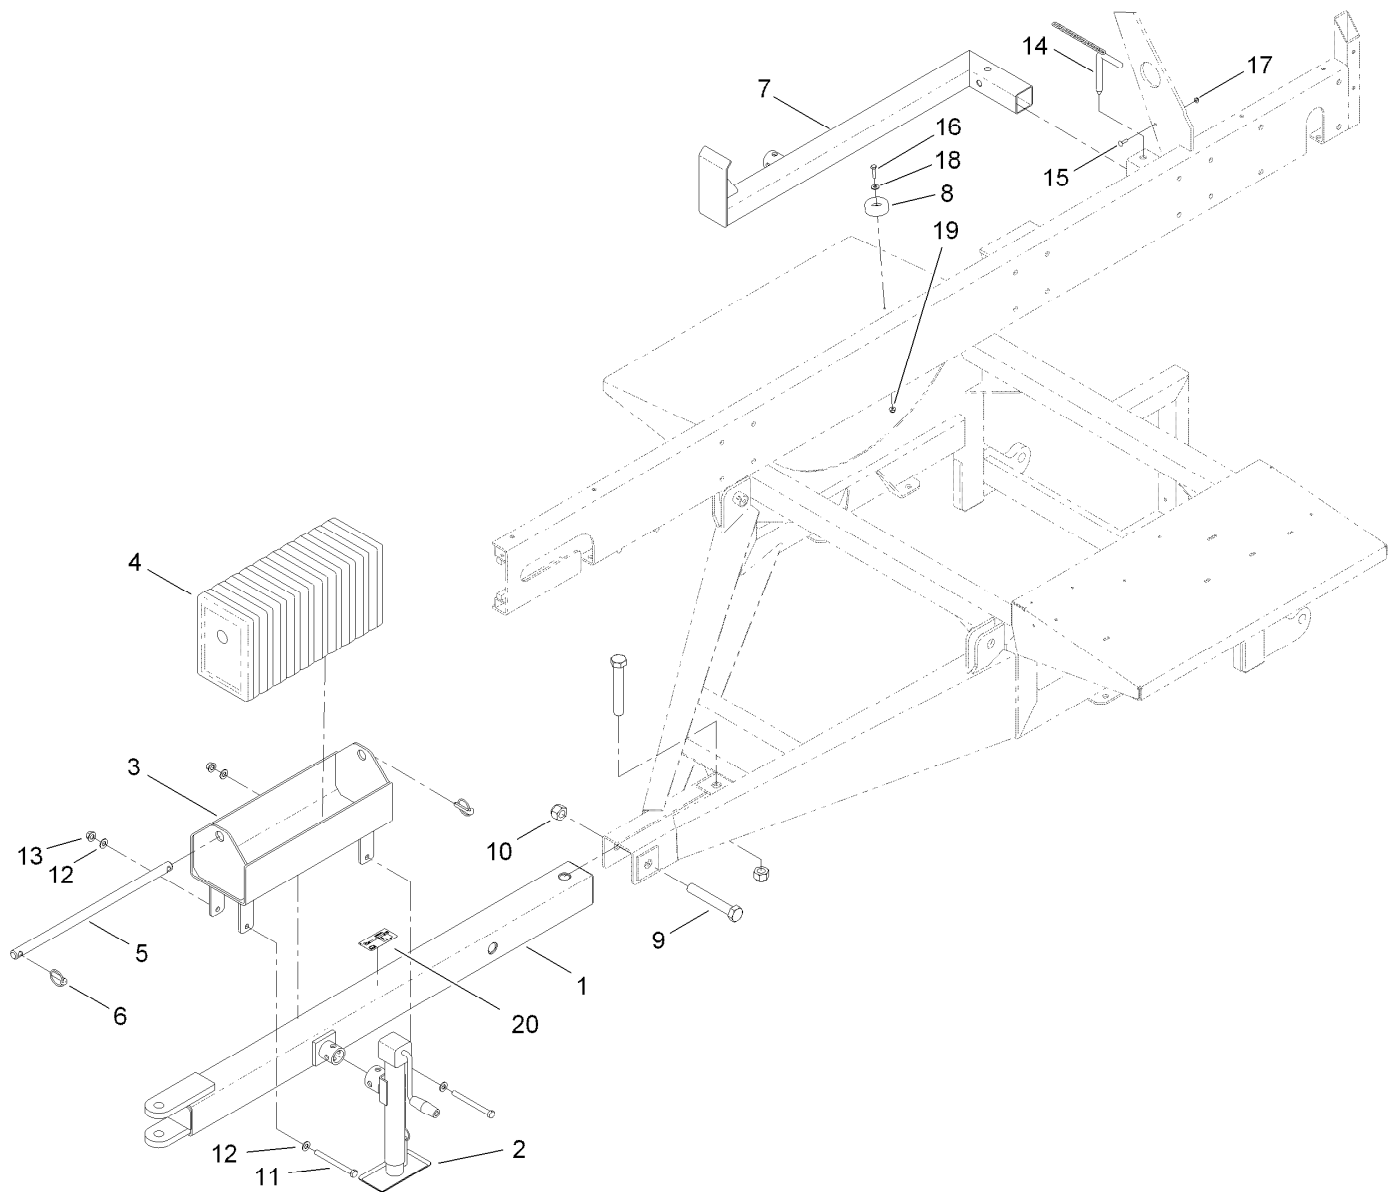

Hitch Assembly


Ref.	Part Number	Qty.	Description
1	T36012112-01	1	Tube-Hitch
2	T0000-3423	1	Jack-Sidewind
3	T36028000-01	1	Weight Box ASM
4	119-6860-01	10	Casting-Counterweight
5	T36028010-01	1	Shaft-Weight Box
6	283-71	2	Pin-Lynch
7	T36011190-01	1	Jack Leg ASM
8	108-1605	1	Bumper-Recess
9	120-0887	2	Screw-HH
10	120-0888	2	Nut-HH
11	325-22	2	Screw-HH

Ref.	Part Number	Qty.	Description
12	3256-26	4	Washer-Flat
13	99-5107	2	Nut-Lock
14	T36011195	1	Pin ASM
15	3229-2	1	Screw-CARR
16	322-6	1	Screw-HH
17	104-7201	1	Nut-HF
18	3256-3	1	Washer-Flat
19	104-8300	1	Nut-Flange, NI
20	119-6836	1	Decal-Propass, Weight Case

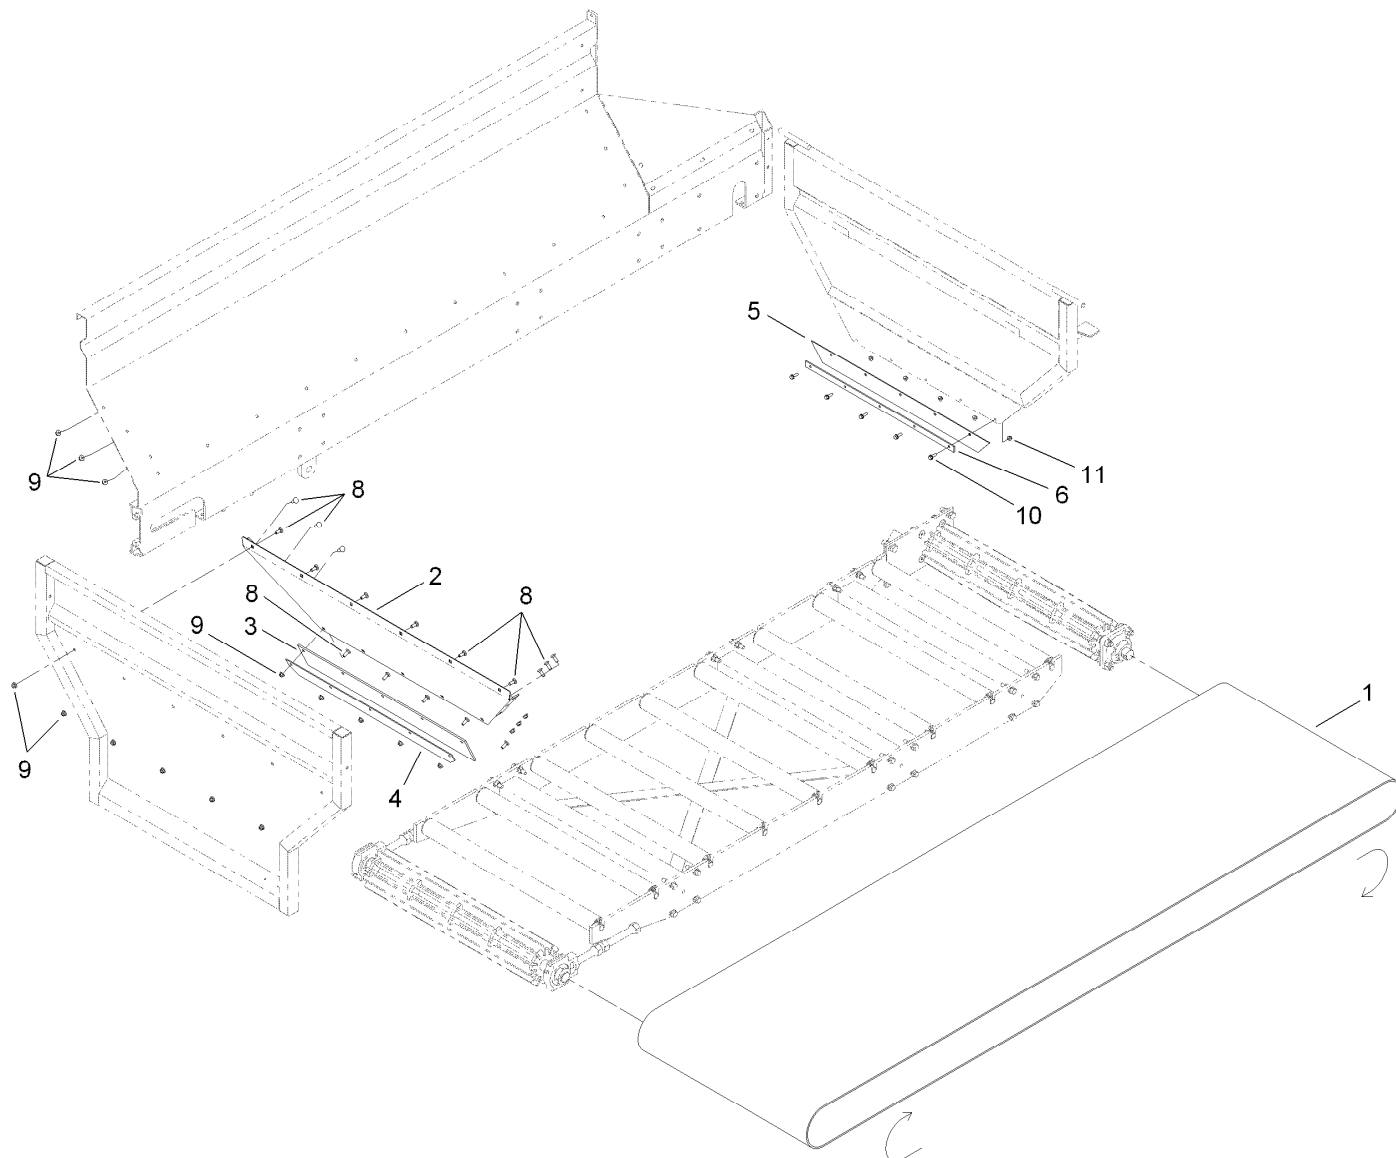


Belt and Skirting Assembly

Ref.	Part Number	Qty.	Description
1	T60191215	1	Belt-Endless
2	T36011525-01	1	Sloped Panel ASM
3	T01-22002B	1	Skirt-Front Seal, Rubber
4	T36011535-01	1	Bar-Front Seal
5	T36013010	1	Seal-Belt
6	T36011230-01	1	Retainer-Belt Seal
8	3231-22	17	Screw-CARR
9	104-8301	17	Nut-Flange, NI
10	3234-29	5	Screw-HHF
11	104-8300	5	Nut-Flange, NI

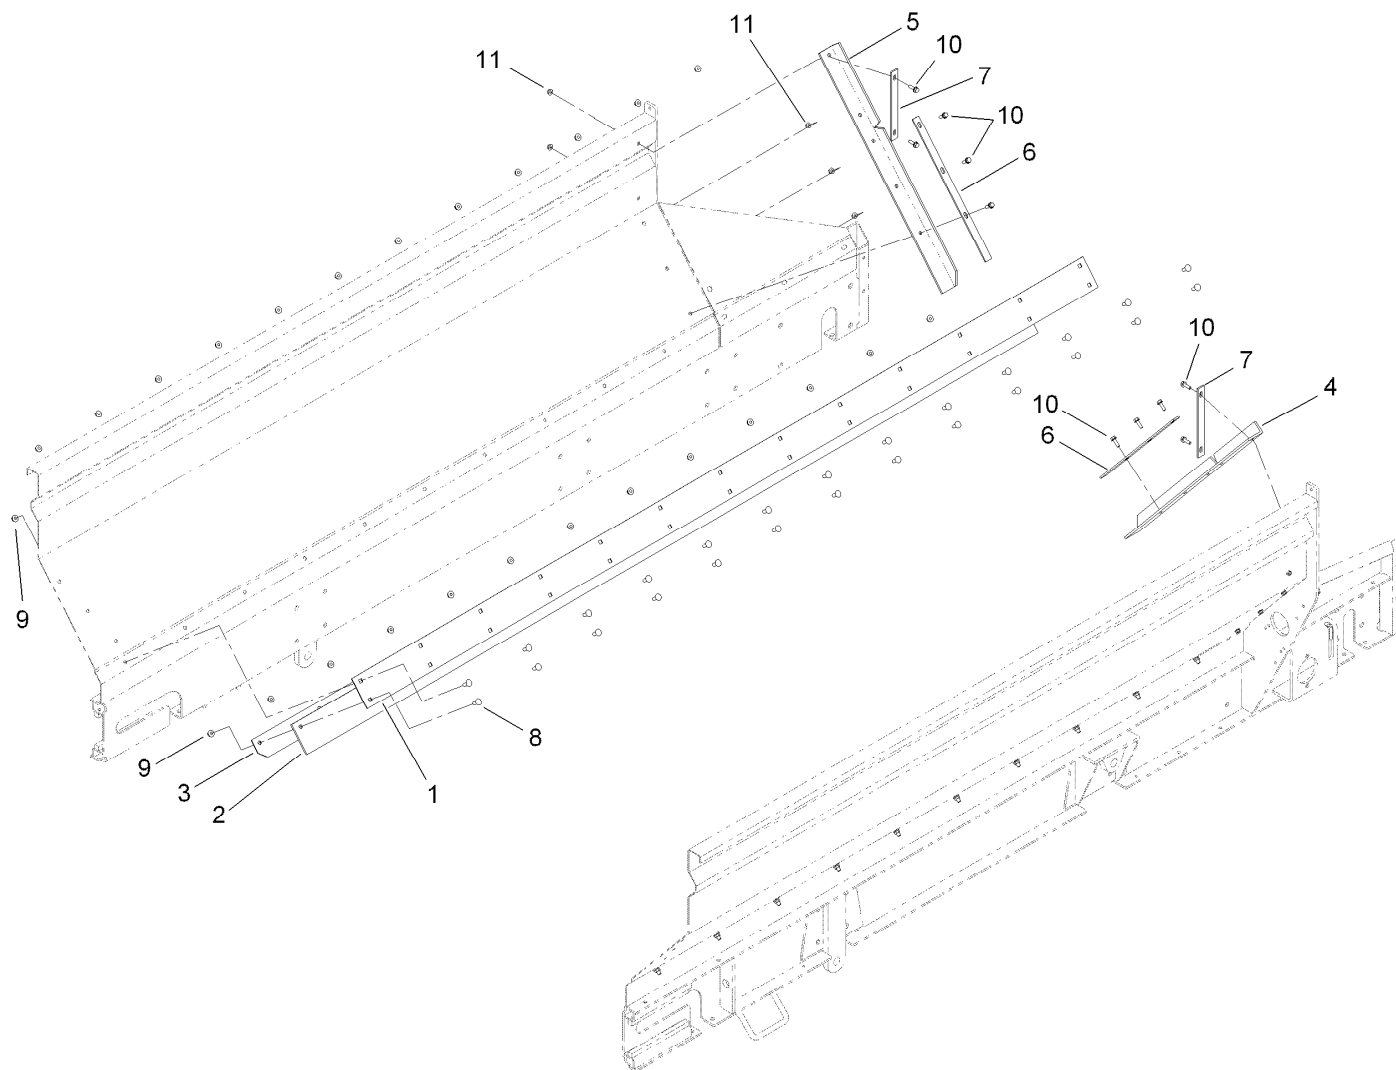

Skirting Assembly


Ref.	Part Number	Qty.	Description
1	T36011520-01	2	Panel-Side Seal
2	T01-22000B	2	Seal-Rubber, Side
3	T36011530-01	2	Bar-Side Seal
4	T36011260	1	Seal-Tailgate, LH
5	T36011270	1	Seal-Tailgate, RH
6	T36011280-01	2	Bar-Seal, Lower
7	T36011290-01	2	Bar-Seal, Upper
8	3231-22	52	Screw-CARR
9	104-8301	52	Nut-Flange, NI
10	3234-29	10	Screw-HHF
11	104-8300	10	Nut-Flange, NI

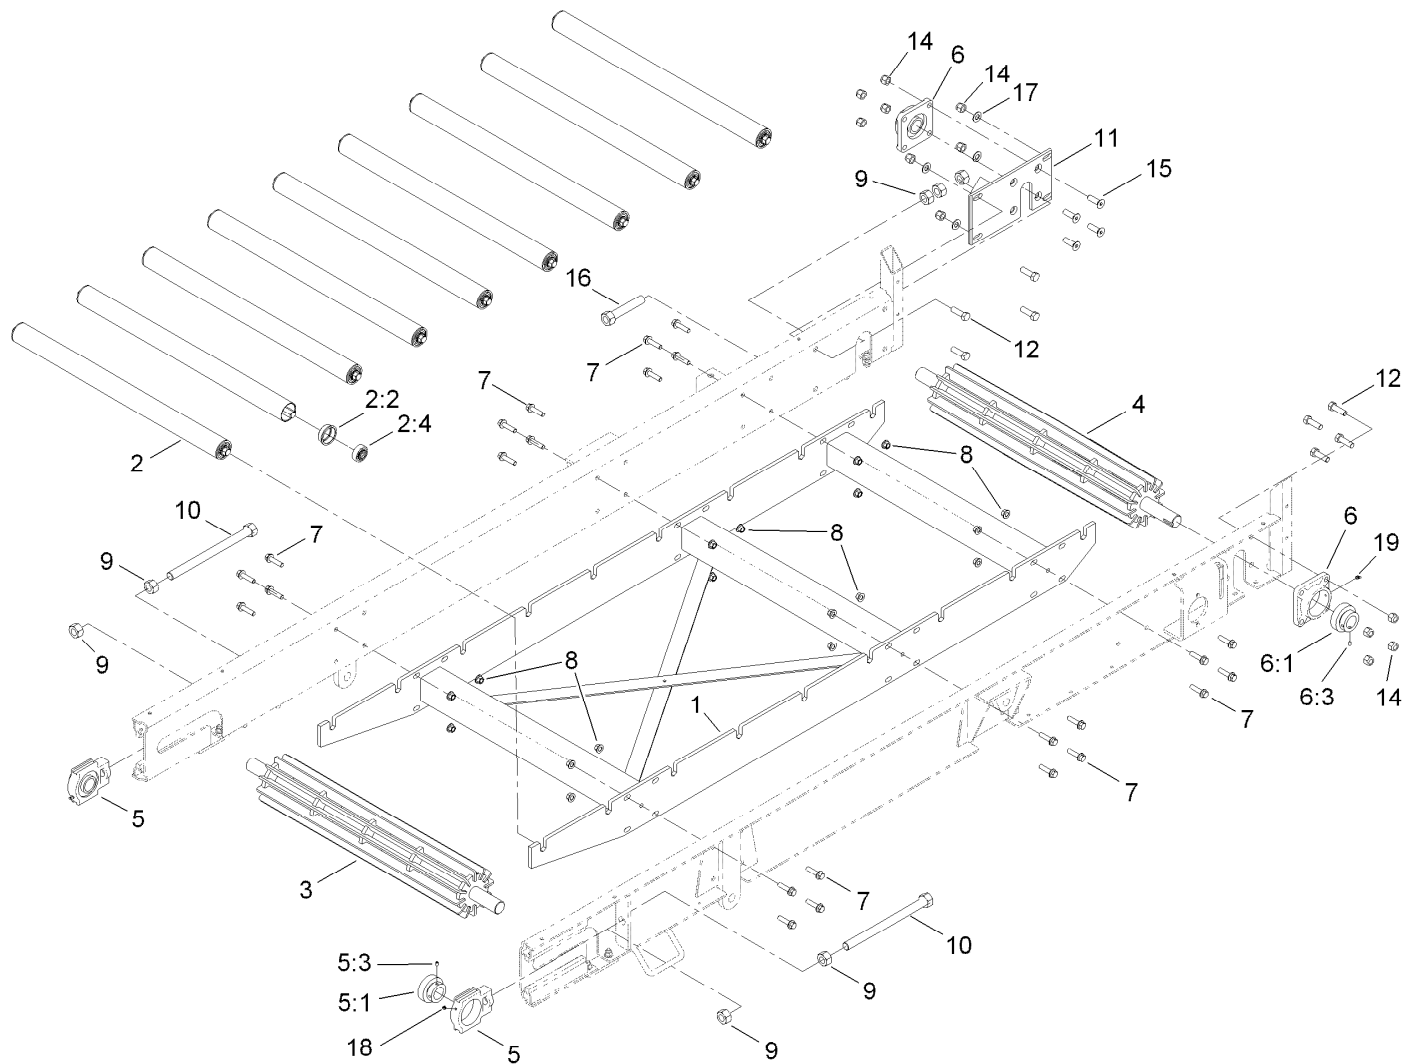

Conveyor Assembly


Ref.	Part Number	Qty.	Description
1	T36011600-01	1	Roller Frame ASM
2	T36011680	9	Belt Roller ASM
2:2	T36011685	2	Insert-Roller
2:4	T60111000	2	Bearing-Ball
3	T36011620-03	1	Idler Roller ASM
4	119-6892-03	1	Drive Roller ASM
5	T60114305	2	Take-Up Bearing ASM
5:1	120-0817	1	Bearing-Collar, Lock
5:3	3246-17	1	Setscrew-HSH
6	T60116355	2	4-Bolt Bearing ASM
6:1	120-0817	1	Bearing-Collar, Lock
6:3	3246-17	1	Setscrew-HSH

Ref.	Part Number	Qty.	Description
7	3234-27	24	Screw-HHF
8	99-5107	24	Nut-Lock
9	SG330081	7	Nut-Hex
10	T36011670	2	Tensioner Rod ASM
11	T36011690	1	Mounting Plate ASM
12	327-6	8	Screw-HH
14	3296-53	12	Nut-Lock, NI
15	120-0904	4	Screw-HSH
16	T36011675	1	Lock Rod ASM
17	3256-27	4	Washer-Flat
18	302-61	2	Fitting-Grease
19	302-10	2	Fitting-Grease

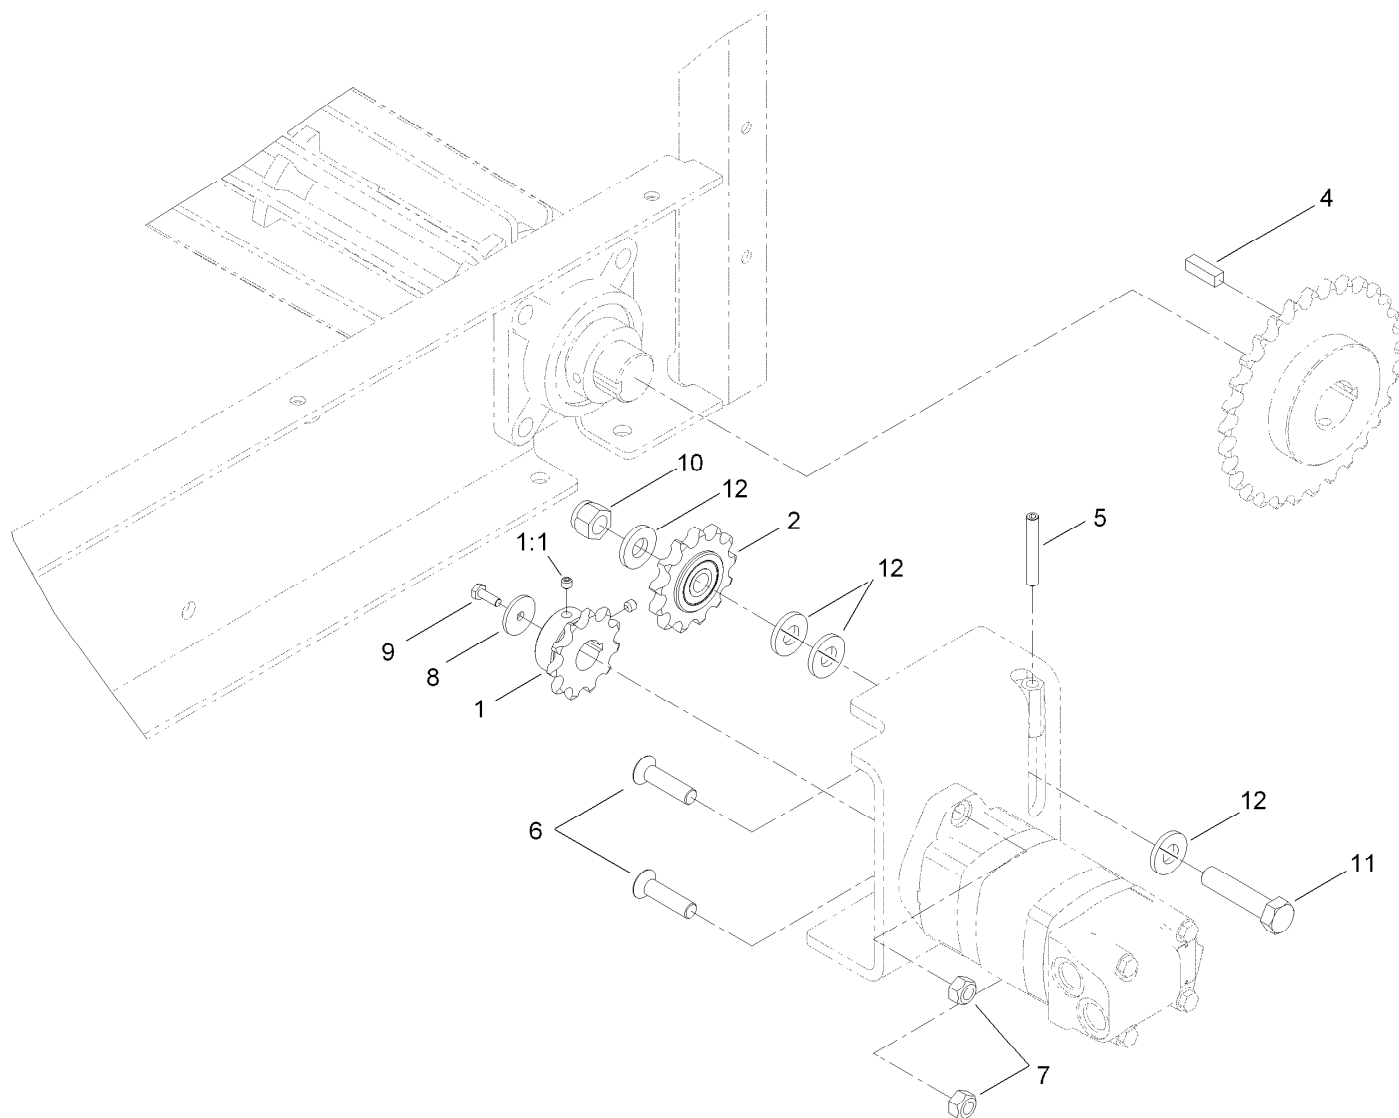


Chain Drive Assembly

Ref.	Part Number	Qty.	Description
1	T60135010	1	Sprocket
1:1	3246-2	2	Screw-Set, HSH
2	T60134090	1	Sprocket
4	T36011810	1	Key
5	120-0909	1	Screw-HSH
6	120-0898	2	Screw-Fhhs
7	97-1206	2	Locknut
8	103995	1	Washer
9	321-4	1	Screw-HH
10	3296-53	1	Nut-Lock, NI
11	327-8	1	Screw-HH
12	99-7667	4	Washer-Flat

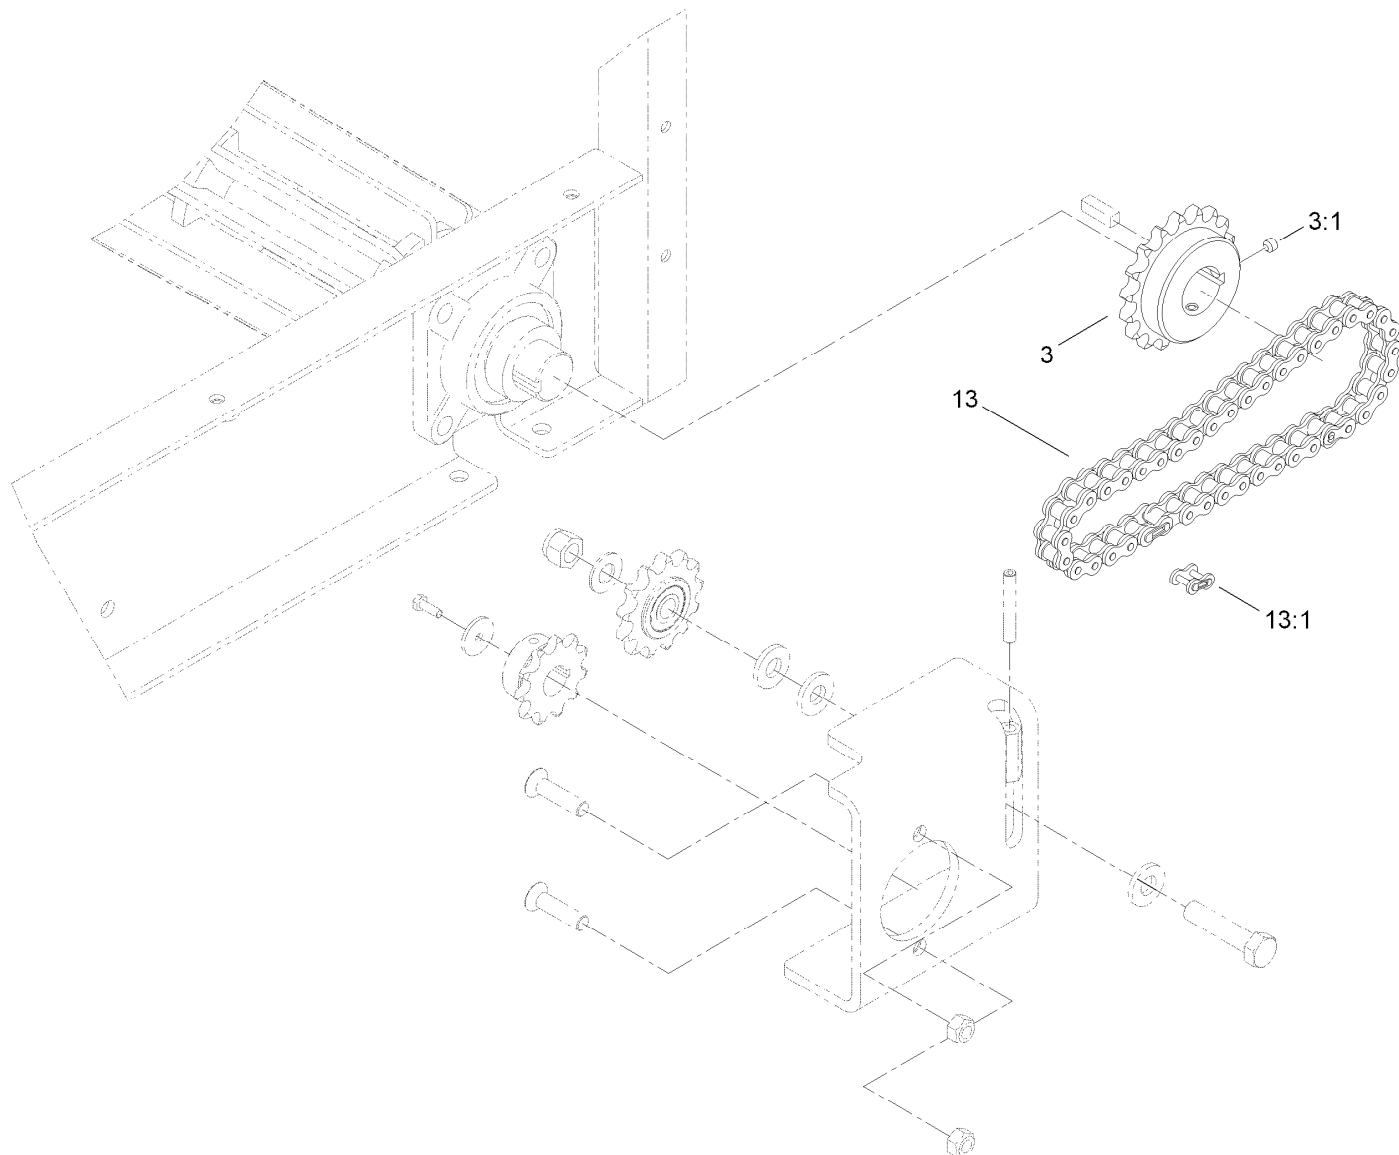

Chain and Sprocket Assembly


Ref.	Part Number	Qty.	Description
3	T0000-8137	1	Sprocket
3:1	3247-2	2	Screw-Set, HSH
13	T36011805	1	Chain-Drive, 33 Inch
13:1	T60151016	1	Link-Connecting, #60

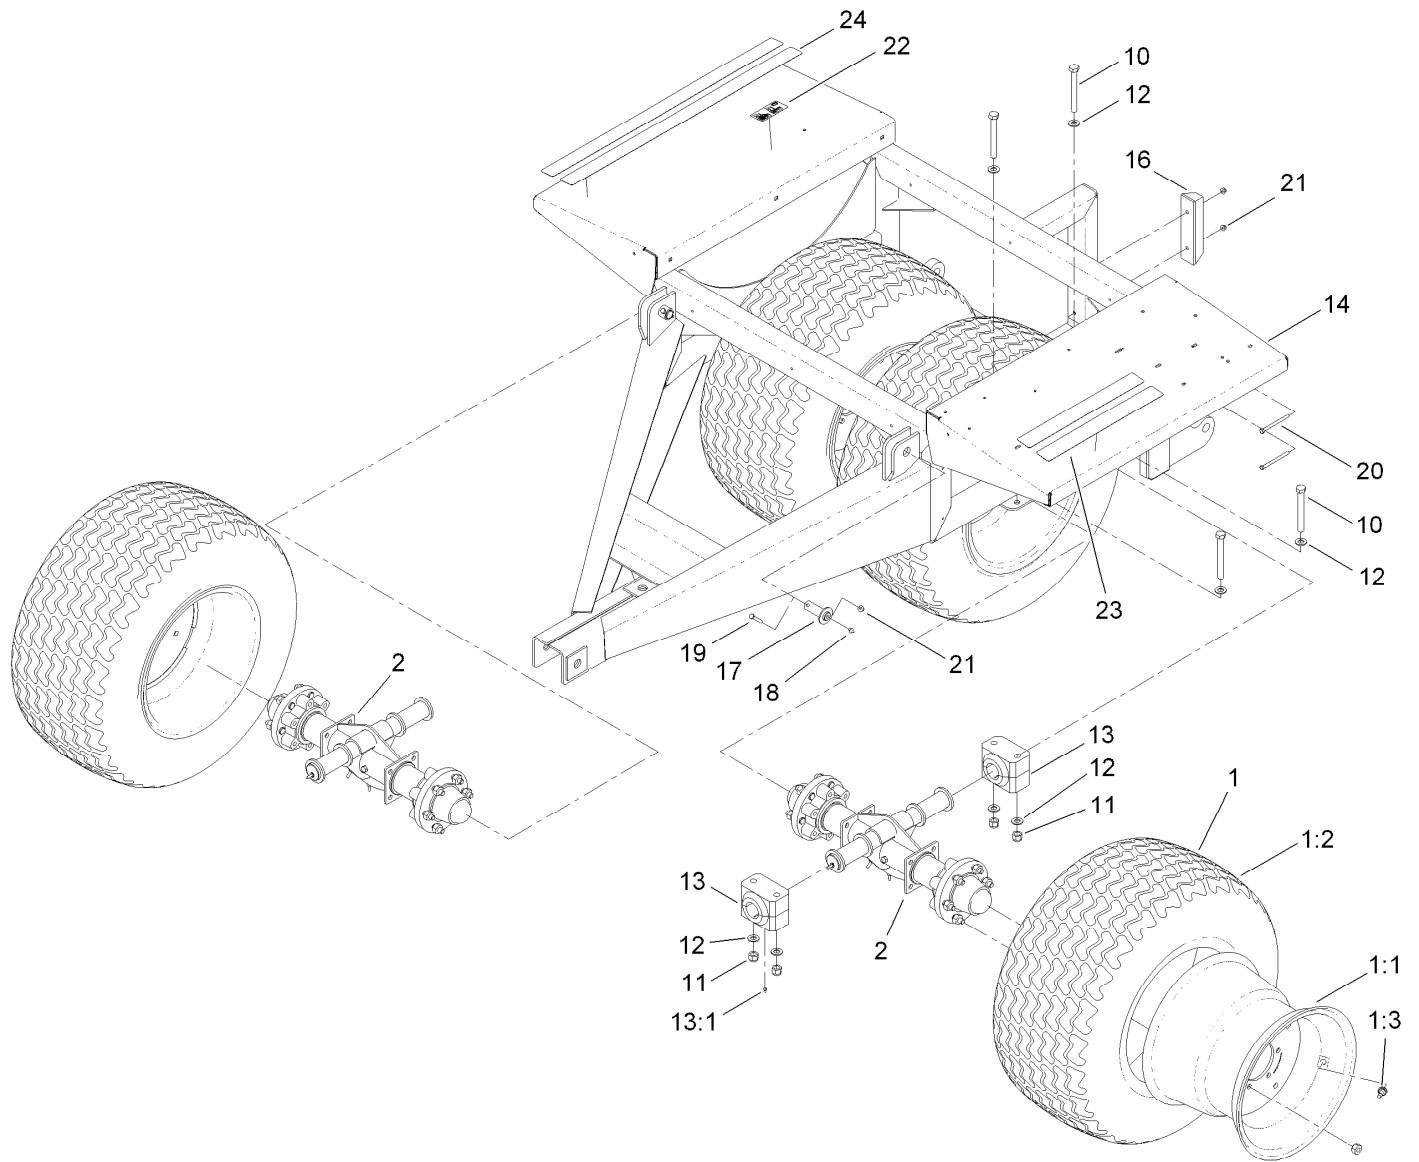

Wheel Assembly


Ref.	Part Number	Qty.	Description
1	T0000-6872	4	Wheel And Tire ASM
1:1	T54011022	1	Wheel-Turf
1:2	T68021100	1	Tire-Turf
1:3	232-24	1	Stem-Valve
2	120-0941	2	Shaft ASM, Hub Only
10	120-0923	8	Screw-HH
11	120-0924	8	Nut-Lock, NI
12	119-1868	16	Washer
13	T60111196	4	Bearing-Polyurethane
13:1	302-19	1	Fitting-Grease

Ref.	Part Number	Qty.	Description
14	T01-43164D-01	1	Frame ASM
16	T62011021	1	Bumper-Rubber
17	T36012070-01	2	Pin-Hinge
18	302-2	2	Fitting-Grease
19	322-10	2	Screw-HH
20	322-19	2	Screw-HH
21	104-8300	4	Nut-Flange, NI
22	119-6835	1	Decal-Jack
23	T36013050	2	Thread-Walk, Safety
24	T36013052	2	Thread-Walk, Safety

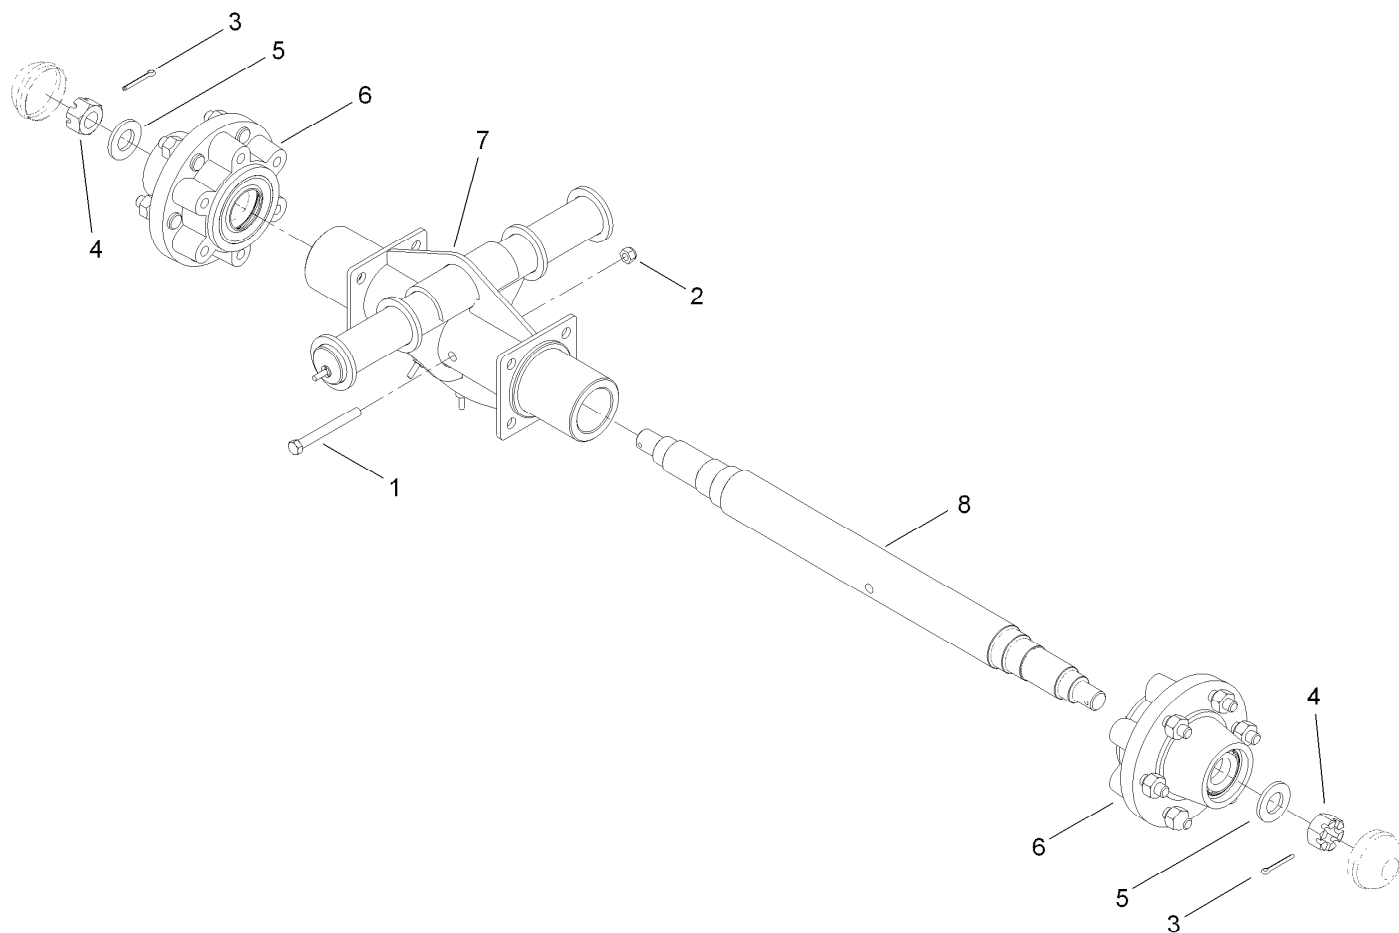


Shaft Assembly No. 120-0941

Ref.	Part Number	Qty.	Description
1	120-0922	1	Screw-HH
2	3296-76	1	Nut-Lock, NI
3	3272-23	2	Pin-Cotter
4	32136-11	2	Nut-Hex, Slot
5	T54051068	2	Washer-Spindle
6	T54031039	2	Hub ASM
7	T36012020-03	1	Walking Beam ASM
8	T54031102	1	Spindle-Double End

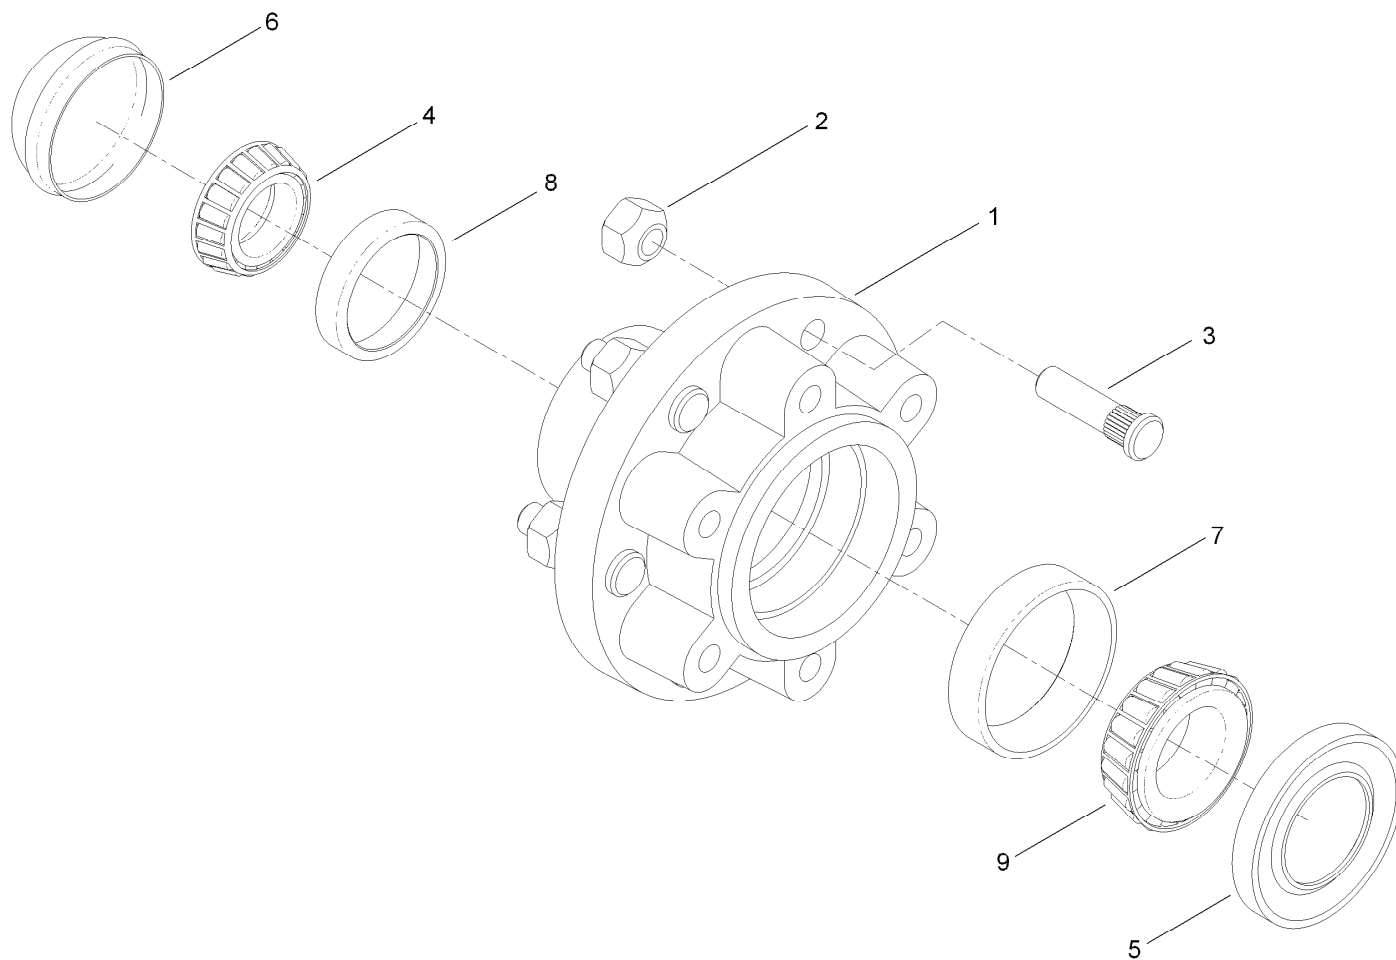

Hub Assembly No. T54031039


Ref.	Part Number	Qty.	Description
1	120-0911	1	Hub-Wheel
2	T54031040	6	Nut-Wheel
3	T54031042	6	Bolt-Stud, Hub ASM
4	T54051010	1	Bearing-Hub Out
5	T54051019	1	Seal-Bearing
6	T54051026	1	Cap-Hub (5000/6000 Lb.)
7	T54051037	1	Race-Bearing, Inner
8	T54051042	1	Races-Bearing, Out
9	T54051100	1	Bearing-Hub In

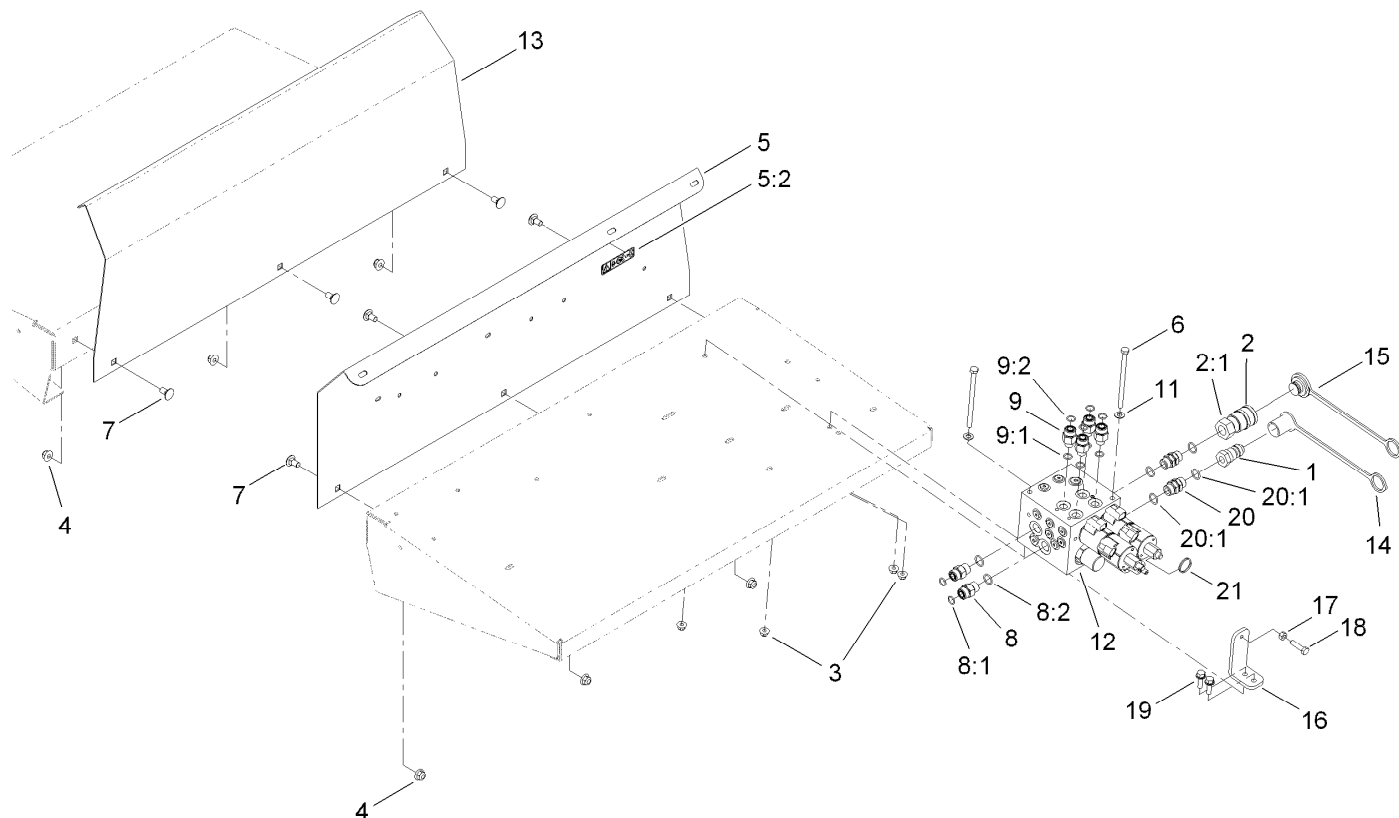

Hydraulic Manifold Block and Fitting Assembly

Ref.	Part Number	Qty.	Description
1	98-4698	1	Male-Disconnect, Quick
2	98-4699	1	Female-Disconnect, Quick
2:1	100-4165	1	Seal Kit
3	104-8300	4	Nut-Flange, NI
4	104-8301	6	Nut-Flange, NI
5	120-0921	1	LH Fender Guard Service ASM
5:2	119-0217	1	Decal-Danger
6	322-29	2	Screw-HH
7	3231-1	6	Screw-CARR
8	340-4	2	Fitting-HYD, Straight
8:1	237-30	1	O-Ring
8:2	237-79	1	O-Ring
9	340-5	4	Fitting-Straight
9:1	237-42	1	O-Ring


Ref.	Part Number	Qty.	Description
9:2	237-30	1	O-Ring
11	3256-23	2	Washer-Flat
12	T0000-7792	1	HYD Block ASM
13	T36011720-01	1	Guard-Fender, RH
14	T56152152	1	Cap-Quick Connect, 1/2 Inch
15	T56152150	1	Plug-Quick Connect, 1/2 Inch
16	T0002-4579-01	1	Bracket-Override Manual
17	3217-6	1	Nut-Hex
18	322-6	1	Screw-HH
19	3234-29	2	Screw-HHF
20	95-3209	2	Fitting-Thread, Straight
20:1	237-79	2	O-Ring
21	106-1392	1	Ring-Retaining, Spiral (EXT)

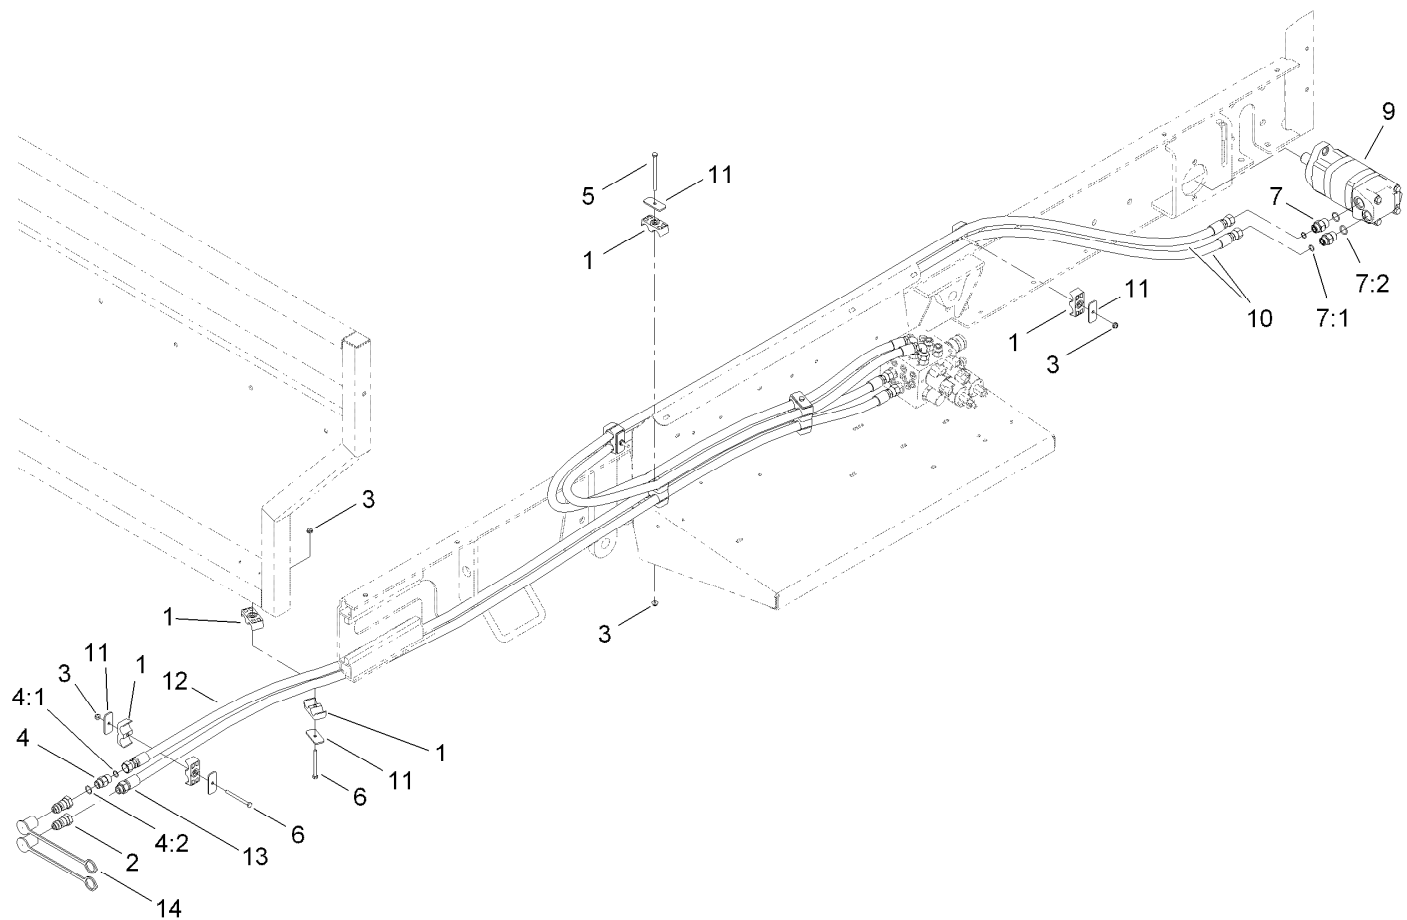

Hydraulic Motor and Hose Assembly

Ref.	Part Number	Qty.	Description
1	56-7974	16	Clamp-Tube
2	98-4698	2	Male-Disconnect, Quick
3	104-7201	6	Nut-HF
4	119-6898	1	Valve-Check, HYD
4:1	237-30	1	O-Ring
4:2	237-79	1	O-Ring
5	321-19	2	Screw-HH
6	321-23	2	Screw-HH
7	340-6	2	Fitting-HYD, Straight


Ref.	Part Number	Qty.	Description
7:1	237-30	1	O-Ring
7:2	237-80	1	O-Ring
9	T0000-5303	1	HYD Motor ASM
10	120-0865	2	HYD Hose ASM
11	T36033040	7	Plate-Clamp
12	120-0866	1	HYD Hose ASM
13	120-0867	1	HYD Hose ASM
14	T56152152	2	Cap-Quick Connect, 1/2 Inch

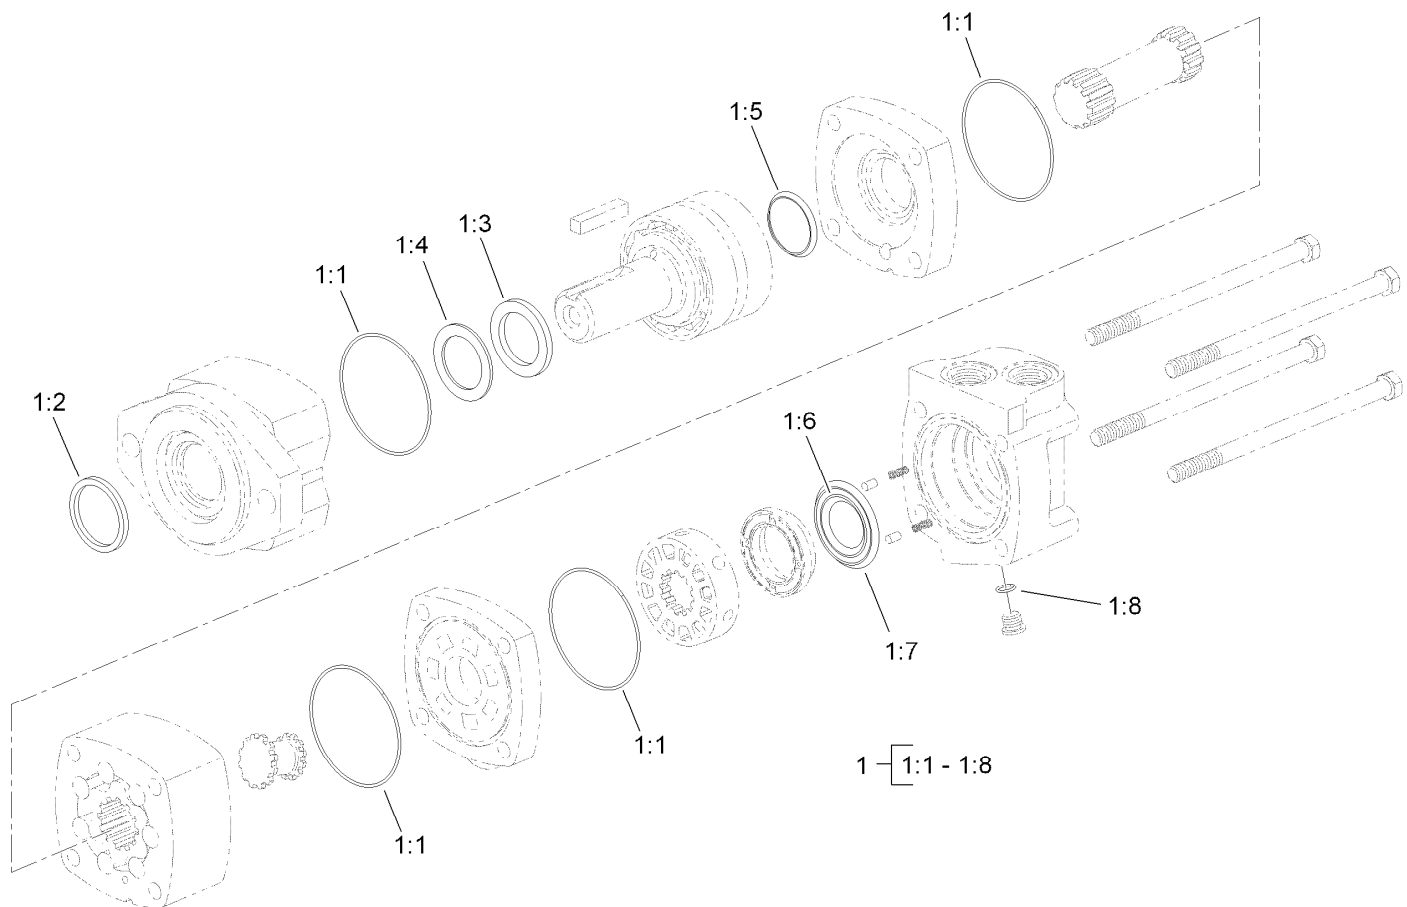

Hydraulic Motor Assembly No. T0000-5303

Ref.	Part Number	Qty.	Description
1	56-6890	1	Seal Kit
1:1		4	O-Ring ●
1:2		1	Seal-Exclusion, Shaft ●
1:3		1	Seal-Shaft ●
1:4		1	Ring-Back-Up ●
1:5		1	Seal-Face, Shaft ●
1:6		1	Seal-Face, Inner ●
1:7		1	Seal-Face, Outer ●
1:8		1	O-Ring ●


● Not serviced separately

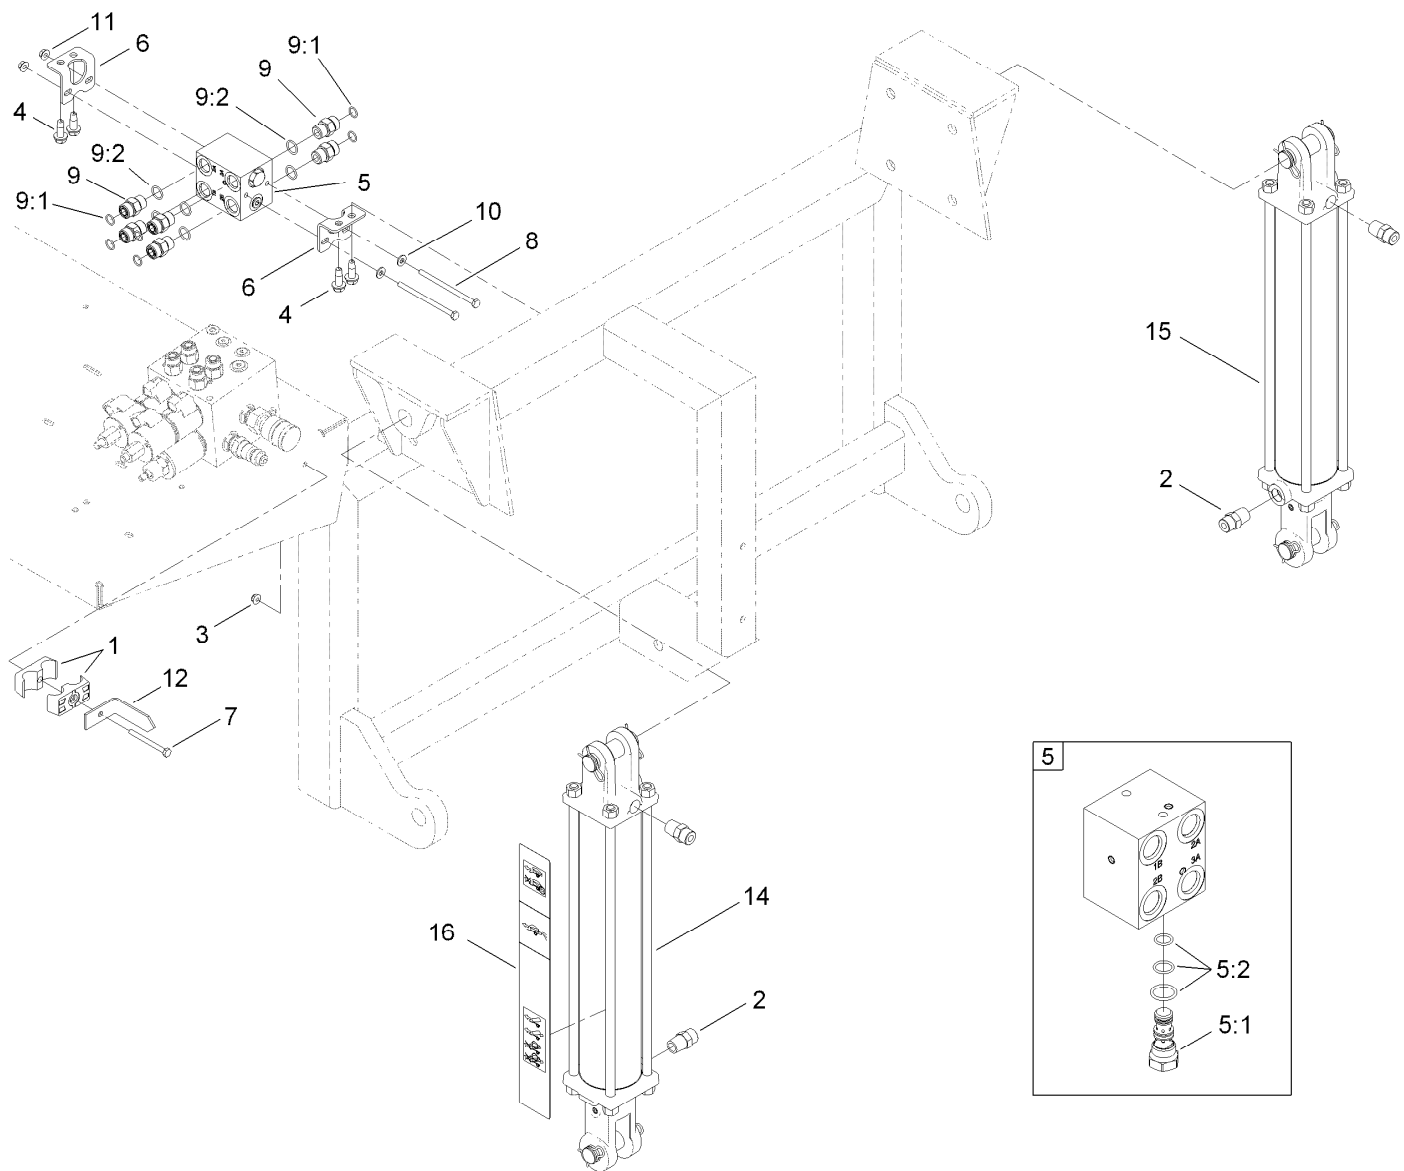

Hydraulic Cylinder and Manifold Block Assembly


Ref.	Part Number	Qty.	Description
1	56-7974	2	Clamp-Tube
2	93-5107	4	Fitting-Adapter
3	104-7201	1	Nut-HF
4	105-6245	2	Screw-Tapping
5	120-0849	1	Block-Manifold,Po Check
5:1	120-0873	1	Valve-Po Check
5:2	120-0886	1	Seal Kit
6	120-0875-03	2	Bracket-Mounting, Manifold
7	321-14	1	Screw-HH
8	321-34	2	Screw-HH

Ref.	Part Number	Qty.	Description
9	340-4	6	Fitting-HYD, Straight
9:1	237-30	1	O-Ring
9:2	237-79	1	O-Ring
10	3256-22	2	Washer-Flat
11	32128-33	2	Nut-HF
12	T36011570	1	Bar-Indicator, Lift
14	T56071160	1	HYD Cylinder ASM
15	T56071170	1	HYD Cylinder ASM
16	119-6863	1	Decal-Load Range

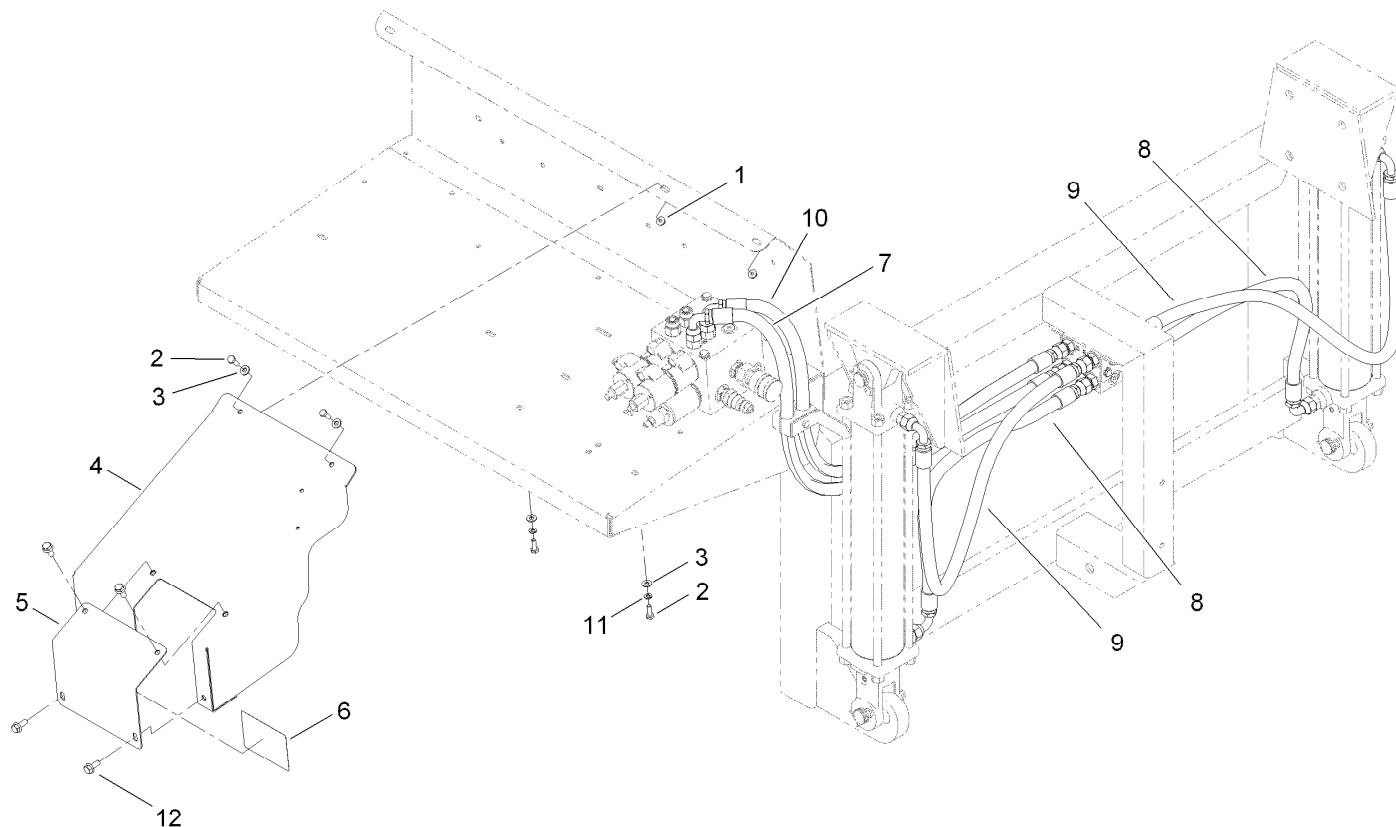

Block Guard and Hose Assembly


Ref.	Part Number	Qty.	Description
1	104-7201	2	Nut-HF
2	321-4	4	Screw-HH
3	3256-22	7	Washer-Flat
4	T0002-4581	1	Block Guard ASM
5	T0002-4578-01	1	Plate-Cover, Override
6	119-6832	1	Decal-Adjustment
7	120-0868	1	HYD Hose ASM
8	120-0869	2	HYD Hose ASM
9	120-0870	2	HYD Hose ASM
10	120-0872	1	HYD Hose ASM
11	3253-3	2	Washer-Lock
12	3234-47	4	Screw-HHF

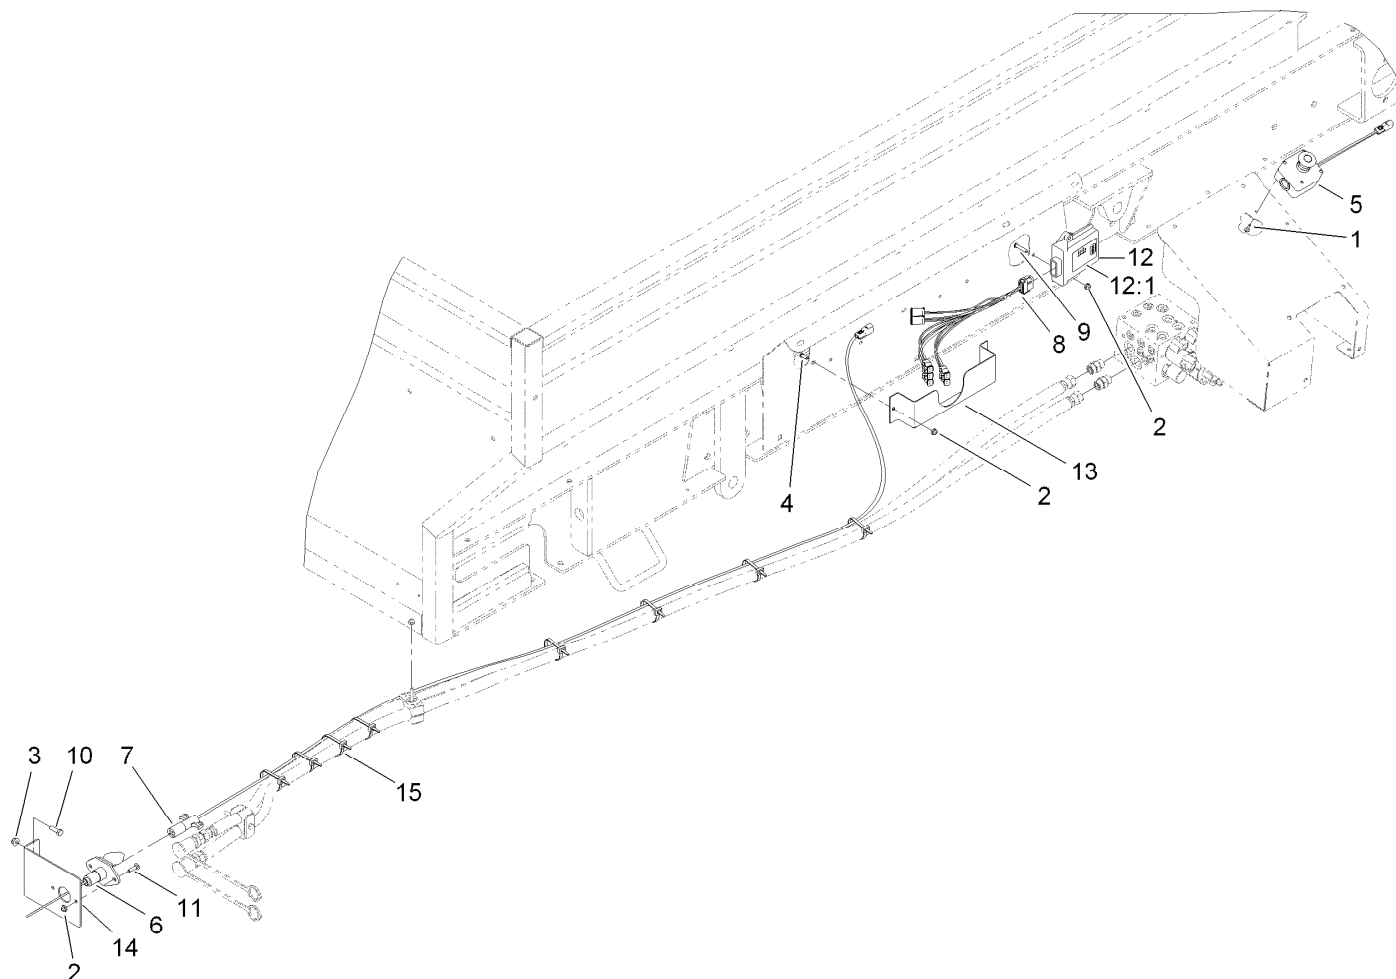

Wireless Base and Emergency Stop Assembly

Ref.	Part Number	Qty.	Description
1	98-1375	2	Screw-HWH
2	104-7201	6	Nut-HF
3	104-8300	2	Nut-Flange, NI
4	119-6906	2	Screw-HSBH
5	119-6909	1	Emergency Stop ASM
6	120-0976	1	Harness-Wire, Power Lead
7	120-0926	1	Harness-Wire, Intermediate Power
8	119-6912	1	Harness-Wire Bulkhead

Ref.	Part Number	Qty.	Description
9	120-0834	2	Screw-HSBH
10	322-5	2	Screw-HH
11	3229-2	2	Screw-CARR
12	T0002-1762	1	Wireless Base Unit
12:1	119-6830	1	Decal-Base Unit
13	T36016084	1	Pocket-Control, Wireless
14	T36054020	1	Bracket-Socket
15	3290-378	8	Tie-Cable

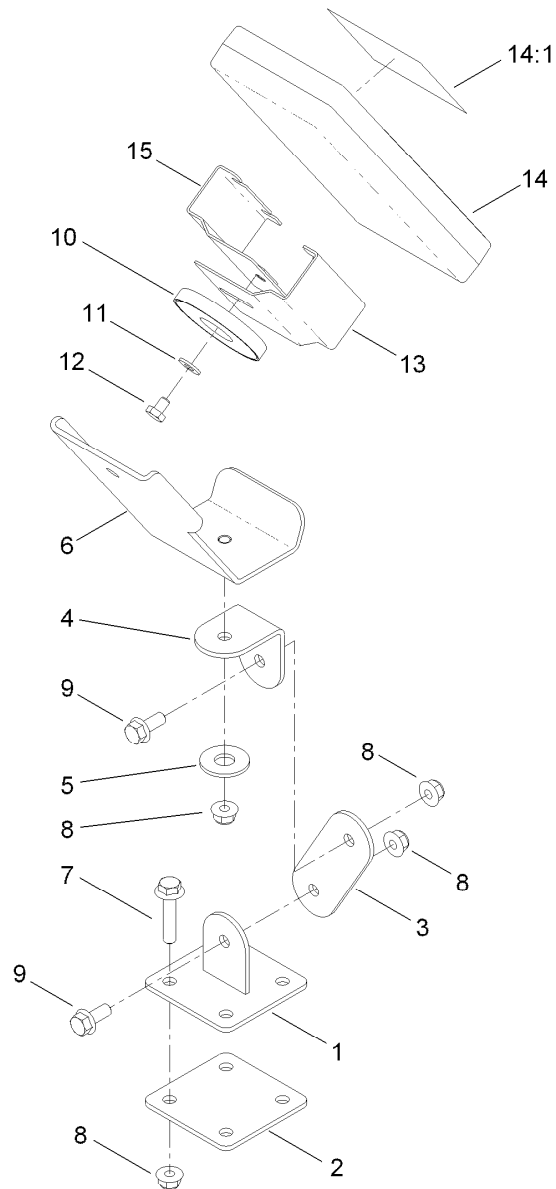

Wireless Remote Mounting Assembly

Ref.	Part Number	Qty.	Description
1	T0002-8707-01	1	Swivel Base ASM
2	T0002-8704-01	1	Plate-Base, Swivel
3	T0002-8710-01	1	Plate-Mount, Wireless
4	T0002-8712-01	1	Angle-Mount, Wireless
5	T0000-2623	1	Washer-Poly, Ultra High Molecular Weight
6	T0002-8685-01	1	Control Mount ASM
7	115-1794	4	Screw-HHF
8	104-8300	7	Nut-Flange, NI

Ref.	Part Number	Qty.	Description
9	3234-47	2	Screw-HHF
10	T0002-8729	1	Magnet-Ceramic, Encased
11	3256-22	1	Washer-Flat
12	321-1	1	Screw-HH
13	T0002-9249-01	1	Sleeve-Half
14	T0002-1761	1	Remote-Wireless
14:1	119-6837	1	Decal-Wireless Console
15	T0002-9252-01	1	Half Sleeve ASM



Count on it.