



# **44" CUTTING UNIT**

**Model No. 79108 – 6900001 Thru 7900001 & Up**

---

## **Parts Catalog**

## ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

## Contents

| Description                   | Page | Description  | Page |
|-------------------------------|------|--------------|------|
| Deck Assembly .....           | 1    |              |      |
| Baffle & Cover Assembly ..... | 2    | <b>Note:</b> |      |
| Brake & Idler Assembly .....  | 3    |              |      |
| Belt & Decal Assembly .....   | 4    |              |      |

## Accessories

| Description | Model / Parts No. | Description | Model / Parts No. |
|-------------|-------------------|-------------|-------------------|
| ..          |                   |             |                   |

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| Abbreviation | Meaning                | Abbreviation | Meaning                           |
|--------------|------------------------|--------------|-----------------------------------|
| AR .....     | as required            | HWHTF .....  | hex washer head<br>thread forming |
| ASM .....    | assembly               | INC .....    | incorporated                      |
| CARR .....   | carriage               | LH .....     | left hand                         |
| DEG .....    | degrees                | PH .....     | pan head                          |
| FH .....     | flat head              | PPH .....    | Phillips pan head                 |
| GA .....     | gauge                  | PTO .....    | power take off                    |
| HF .....     | hex flange             | RH .....     | right hand                        |
| HFV .....    | hex flange washer      | SFH .....    | slotted fillister head            |
| HH .....     | hex head               | SH .....     | square head                       |
| HHF .....    | hex head flange        | SHWH .....   | slotted hex washer head           |
| HHST .....   | hex head self tapping  | SPH .....    | slotted pan head                  |
| HJ .....     | hex jam                | STD .....    | standard                          |
| HOC .....    | height-of-cut          | TAP .....    | self tapping                      |
| HS .....     | hex socket             | TH .....     | truss head                        |
| HSBH .....   | hex socket button head | TTH .....    | Torx truss head                   |
| HSFH .....   | hex socket flat head   | WH .....     | wing head                         |
| HSH .....    | hex socket head        |              |                                   |
| HWH .....    | hex washer head        |              |                                   |

## Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

## Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

## **Reference Numbers with Quantities**

Illustrations may have a quantity in parentheses next to a reference number, in the form  $X (Y)$ .  $X$  is the reference number.  $Y$  in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

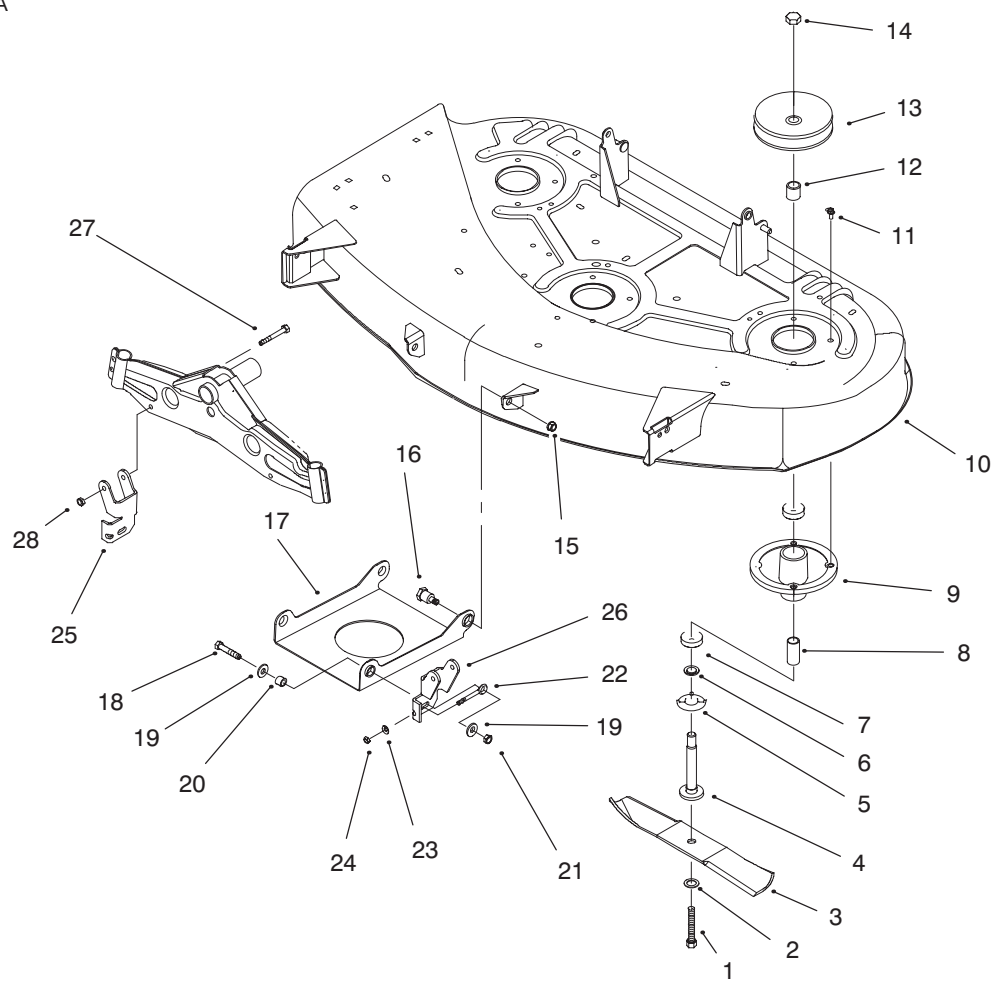


Sheet No.:2

Deck Assembly

| Ref. No. | Part No.   | Qty. | Description              |
|----------|------------|------|--------------------------|
| 1        | 26-0671    | 3    | Bolt-Blade               |
| 2        | 3290-465   | 3    | Washer-Spring            |
| 3        | 92-7952    | 3    | Blade-Recycler           |
| 4        | 80-4342    | 3    | Shaft-Spindle            |
| 5        | 80-4360    | 3    | Shield - Bearing         |
| 6        | 80-4380    | 3    | Spacer - Hardened        |
| 7        | 38-7820    | 6    | Bearing-Ball             |
| 8        | 62-3661    | 3    | Spacer - Bearing         |
| 9        | 88-4510    | 3    | Spindle - Diecast Alum.  |
| 10       | 94-5820    | 1    | Deck Wa-44"              |
| 11       | 32144-41   | 12   | Screw-HWHTF              |
| 12       | 88-5360    | 3    | Spacer - Pulley          |
| 13       | 88-5330    | 3    | Pulley - Deck            |
| 14       | 3219-6     | 3    | Nut-Hex                  |
| 15       | 3296-23    | 2    | Nut-Lock                 |
| 16       | 94-5823    | 2    | Bolt-Shoulder            |
| 17       | 93-3881-03 | 1    | Pan - Front Deck Suspens |
| 18       | 323-9      | 2    | Screw-HH                 |
| 19       | 80-6990    | 4    | Washer-Hardened          |
| 20       | 93-9847    | 2    | Spacer                   |
| 21       | 3296-39    | 2    | Nut-Lock                 |
| 22       | 61-9980    | 2    | Screw-Adjusting          |
| 23       | 3256-22    | 2    | Washer-Flat              |
| 24       | 3296-42    | 2    | Nut-Lock                 |

| Ref. No. | Part No.   | Qty. | Description  |
|----------|------------|------|--------------|
| 25       | 93-9849-03 | 1    | Bracket-Deck |
| 26       | 93-9848-03 | 1    | Bracket-Deck |
| 27       | 322-12     | 2    | Screw HH     |
| 28       | 3296-29    | 2    | Nut-Lock     |

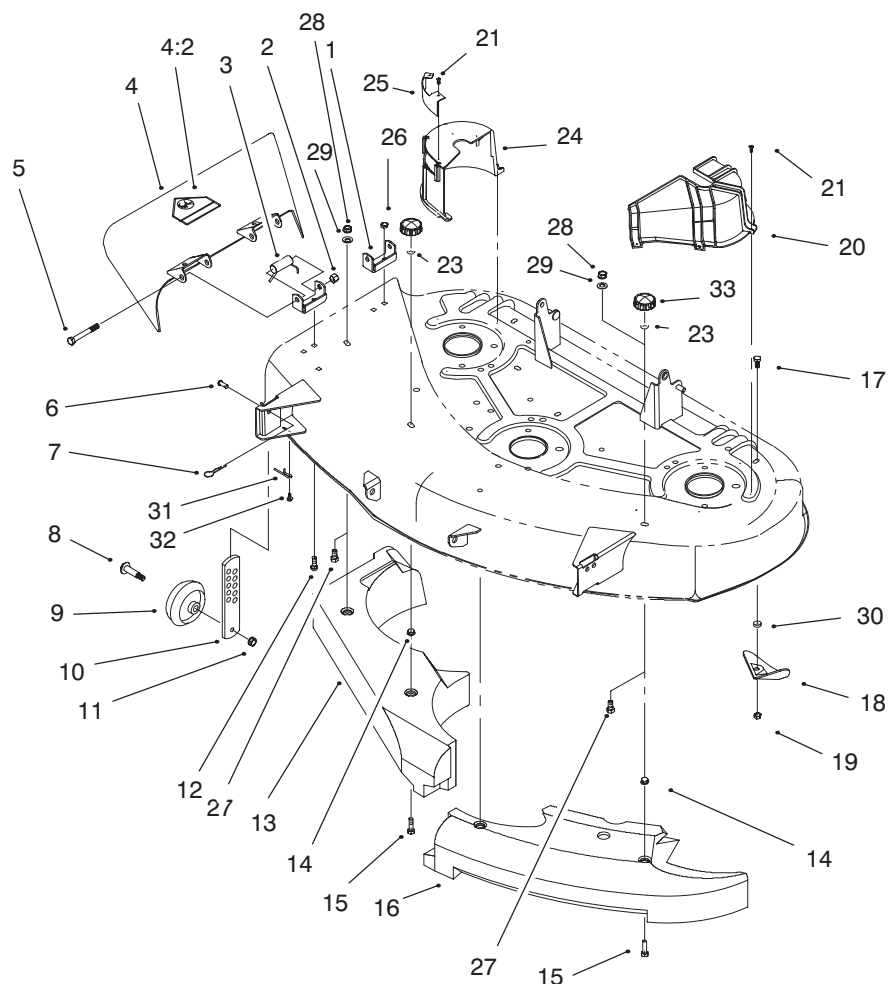


Sheet No.:3

## Baffle & Cover Assembly

| Ref. No. | Part No.   | Qty. | Description        | Ref. No. | Part No. | Qty. | Description       |
|----------|------------|------|--------------------|----------|----------|------|-------------------|
| 1        | 29-5590-03 | 2    | Bracket-Pivot      | 26       | 3296-29  | 4    | Nut-Lock          |
| 2        | 3296-5     | 2    | Nut-Lock           | †27      | 3231-21  | 2    | Bolt-Carriage     |
| 3        | 40-6230    | 2    | Spring-Torsion     | †28      | 3296-39  | 2    | Nut-Lock          |
| 4        | 57-6980-03 | 1    | Deflector ASM-44"  | †29      | 3256-5   | 2    | Washer-Flt        |
|          |            |      | Deck               | 30       | 59-4310  | 4    | Spacer            |
| 4:2      | 43-8480    | 1    | Decal - Danger     | 31       | 94-1981  | 2    | Spring-Gage Wheel |
| 5        | 3211-15    | 2    | Screw-Cap          | 32       | 32104-76 | 2    | Screw-Self TAP    |
| 6        | 283-2      | 2    | Pin-Clevis         | 33       | 94-5583  | 4    | Knob              |
| 7        | 3290-307   | 2    | Pin-Cotter         |          |          |      |                   |
| 8        | 56-6591    | 2    | Wheel Bolt         |          |          |      |                   |
| 9        | 701756     | 2    | Wheel - Deck       |          |          |      |                   |
| 10       | 93-8010    | 2    | Plate - Gage Wheel |          |          |      |                   |
| 11       | 3296-59    | 2    | Nut-Lock           |          |          |      |                   |
| 12       | 3230-23    | 4    | Bolt-CARR          |          |          |      |                   |
| 13       | 93-7651    | 1    | Baffle-RH          |          |          |      |                   |
| 14       | 32149-1    | 4    | Nut-Keps           |          |          |      |                   |
| 15       | 322-6      | 4    | Screw-HH           |          |          |      |                   |
| 16       | 93-7652    | 1    | Baffle-LH          |          |          |      |                   |
| 17       | 3230-23    | 4    | Bolt-CARR          |          |          |      |                   |
| 18       | 84-5760    | 4    | Plate-Kicker       |          |          |      |                   |
| 19       | 3296-29    | 4    | Nut-Lock           |          |          |      |                   |
| 20       | 93-3866    | 1    | Cover-Belt         |          |          |      |                   |
| 21       | 32104-76   | 9    | Screw-Self TAP     |          |          |      |                   |
| 23       | 3290-456   | 4    | Washer-Lock        |          |          |      |                   |
| 24       | 93-3865    | 1    | Cover-Belt         |          |          |      |                   |
| 25       | 93-3876-03 | 1    | Insert-Belt Cover  |          |          |      |                   |

† Loose Parts Used Only To Plug Holes When Baffles Are Removed

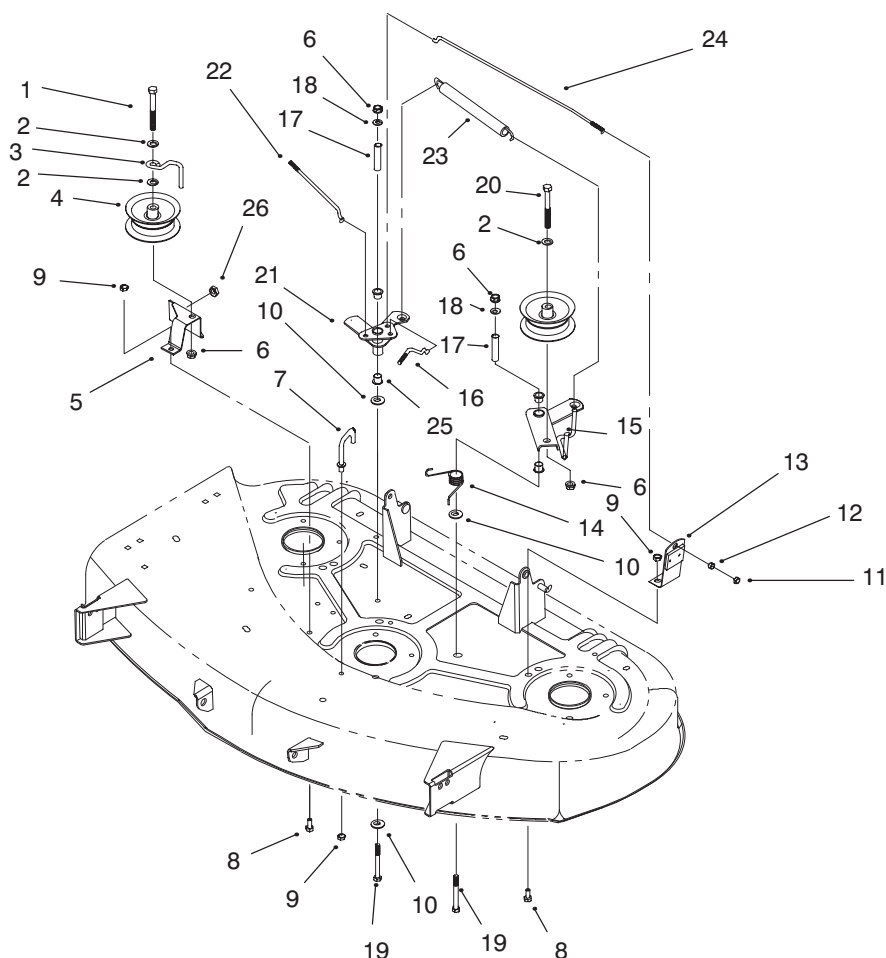


Sheet No.:4

## Brake & Idler Assembly

| Ref. No. | Part No.   | Qty. | Description            |
|----------|------------|------|------------------------|
| 1        | 323-12     | 1    | Screw                  |
| 2        | 3256-24    | 3    | Washer-Flat            |
| 3        | 88-5070    | 1    | Belt Guide - Idler     |
| 4        | 88-5630    | 2    | Pulley - Idler         |
| 5        | 93-3860-03 | 1    | Bracket-Idler          |
| 6        | 3296-39    | 4    | Nut-Lock               |
| 7        | 88-5960    | 1    | Belt Guide - Trans. LH |
| 8        | 322-3      | 9    | Screw-HH               |
| 9        | 3296-29    | 10   | Nut-Lock               |
| 10       | 80-6990    | 3    | Washer-Hardened        |
| 11       | 3296-42    | 3    | Nut-Lock               |
| 12       | 67-0710    | 3    | Ball - Swivel          |
| 13       | 93-3841    | 3    | Brake Assembly         |
| 14       | 93-9342    | 1    | Spring-Torsion         |
| 15       | 94-1986-03 | 1    | Bellcrank Wa           |
| 16       | 93-3852    | 1    | Rod-Brake              |
| 17       | 94-1988    | 2    | Spacer-Pivot           |
| 18       | 3256-24    | 2    | Washer-Flat            |
| 19       | 323-14     | 2    | Screw-HH               |
| 20       | 323-10     | 1    | Screw-HH               |
| 21       | 94-1989-03 | 1    | Bellcrank Wa           |
| 22       | 93-3853    | 1    | Rod-Brake              |
| 23       | 93-3850    | 1    | Spring - Deck Engage   |
| 24       | 93-3851    | 1    | Rod-Brake              |
| 25       | 256-257    | 4    | Bushing-Flange         |
| 26       | 3220-2     | 1    | Nut - Jam              |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

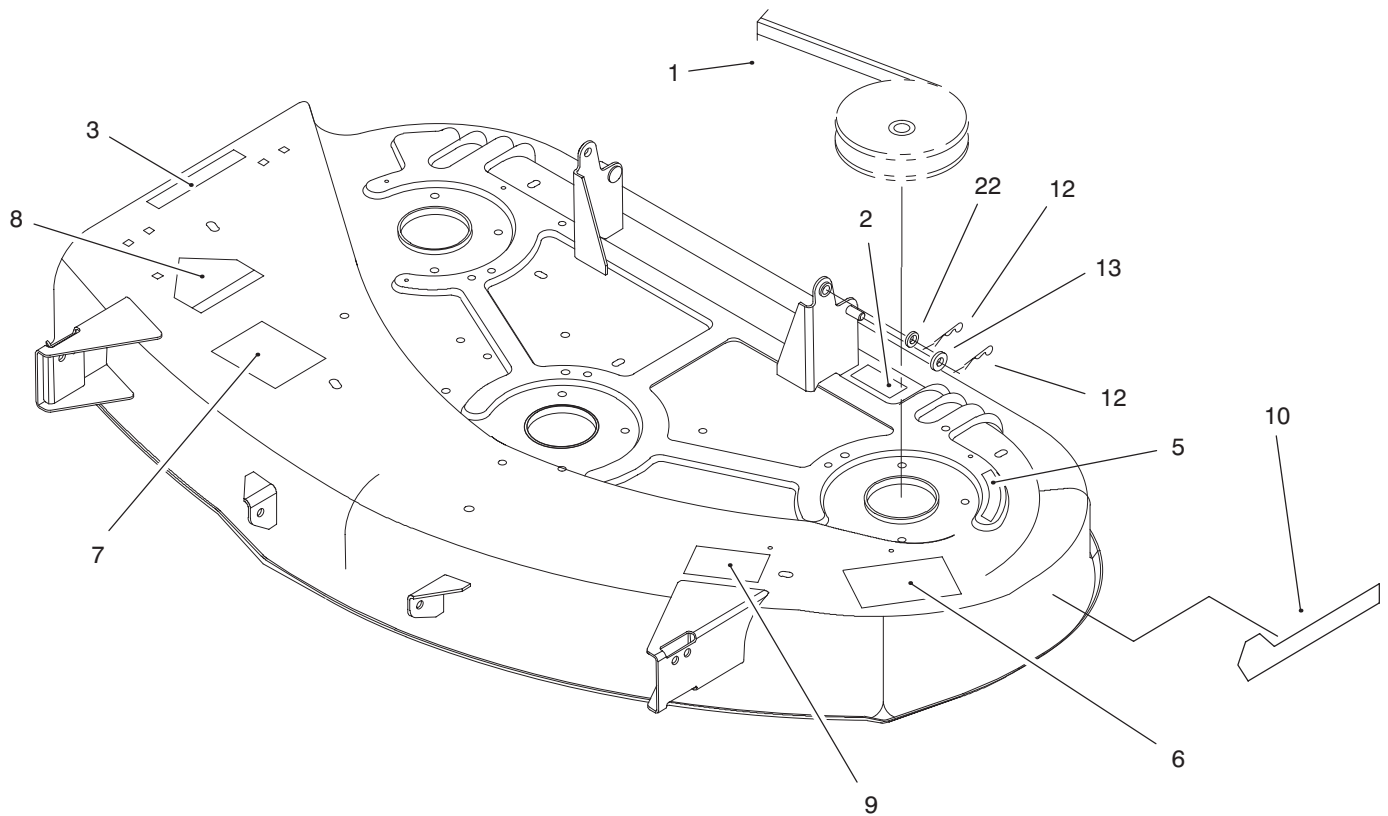

Sheet No.:5

## Belt & Decal Assembly

| Ref. No. | Part No. | Qty. | Description               |
|----------|----------|------|---------------------------|
| 1        | 93-3884  | 1    | V-Belt                    |
| 2        | 55-4300  | 2    | Decal-Warning             |
| 3        | 68-3650  | 1    | Decal-Danger              |
| 5        | 68-3660  | 2    | Decal - Shield Danger     |
| 6        | 66-1340  | 1    | Decal-Discharge           |
| 7        | 93-3777  | 1    | Decal-Belt                |
| 8        | 93-1122  | 1    | Decal-Danger              |
| 9        | 93-7282  | 1    | Decal-Wheel<br>Adjustment |
| 10       | 93-3776  | 1    | Decal-Deck                |
| 12       | 3290-307 | 4    | Pin-Cotter                |
| 13       | 80-6990  | 2    | Washer-Hardened           |
| 22       | 3256-24  | 2    | Washer-Flat               |

# Toro Part Number Index

| Part No.   | Page No. | Ref. No. | Qty. | Description              |
|------------|----------|----------|------|--------------------------|
| 701756     | 2        | 9        | 2    | Wheel – Deck             |
| 26–0671    | 1        | 1        | 3    | Bolt–Blade               |
| 29–5590–03 | 2        | 1        | 2    | Bracket–Pivot            |
| 38–7820    | 1        | 7        | 6    | Bearing–Ball             |
| 40–6230    | 2        | 3        | 2    | Spring–Torsion           |
| 43–8480    | 2        | 4:2      | 1    | Decal – Danger           |
| 55–4300    | 4        | 2        | 2    | Decal–Warning            |
| 56–6591    | 2        | 8        | 2    | Wheel Bolt               |
| 57–6980–03 | 2        | 4        | 1    | Deflector ASM–44” Deck   |
| 59–4310    | 2        | 30       | 4    | Spacer                   |
| 61–9980    | 1        | 22       | 2    | Screw–Adjusting          |
| 62–3661    | 1        | 8        | 3    | Spacer – Bearing         |
| 66–1340    | 4        | 6        | 1    | Decal–Discharge          |
| 67–0710    | 3        | 12       | 3    | Ball – Swivel            |
| 68–3650    | 4        | 3        | 1    | Decal–Danger             |
| 68–3660    | 4        | 5        | 2    | Decal – Shield Danger    |
| 80–4342    | 1        | 4        | 3    | Shaft–Spindle            |
| 80–4360    | 1        | 5        | 3    | Shield – Bearing         |
| 80–4380    | 1        | 6        | 3    | Spacer – Hardened        |
| 80–6990    | 1        | 19       | 4    | Washer–Hardened          |
| 80–6990    | 3        | 10       | 3    | Washer–Hardened          |
| 80–6990    | 4        | 13       | 2    | Washer–Hardened          |
| 84–5760    | 2        | 18       | 4    | Plate–Kicker             |
| 88–4510    | 1        | 9        | 3    | Spindle – Diecast Alum.  |
| 88–5070    | 3        | 3        | 1    | Belt Guide – Idler       |
| 88–5330    | 1        | 13       | 3    | Pulley – Deck            |
| 88–5360    | 1        | 12       | 3    | Spacer – Pulley          |
| 88–5630    | 3        | 4        | 2    | Pulley – Idler           |
| 88–5960    | 3        | 7        | 1    | Belt Guide – Trans. LH   |
| 92–7952    | 1        | 3        | 3    | Blade–Recycler           |
| 93–1122    | 4        | 8        | 1    | Decal–Danger             |
| 93–3776    | 4        | 10       | 1    | Decal–Deck               |
| 93–3777    | 4        | 7        | 1    | Decal–Belt               |
| 93–3841    | 3        | 13       | 3    | Brake Assembly           |
| 93–3850    | 3        | 23       | 1    | Spring – Deck Engage     |
| 93–3851    | 3        | 24       | 1    | Rod–Brake                |
| 93–3852    | 3        | 16       | 1    | Rod–Brake                |
| 93–3853    | 3        | 22       | 1    | Rod–Brake                |
| 93–3860–03 | 3        | 5        | 1    | Bracket–Idler            |
| 93–3865    | 2        | 24       | 1    | Cover–Belt               |
| 93–3866    | 2        | 20       | 1    | Cover–Belt               |
| 93–3876–03 | 2        | 25       | 1    | Insert–Belt Cover        |
| 93–3881–03 | 1        | 17       | 1    | Pan – Front Deck Suspens |
| 93–3884    | 4        | 1        | 1    | V–Belt                   |
| 93–7282    | 4        | 9        | 1    | Decal–Wheel Adjustment   |
| 93–7651    | 2        | 13       | 1    | Baffle–RH                |
| 93–7652    | 2        | 16       | 1    | Baffle–LH                |
| 93–8010    | 2        | 10       | 2    | Plate – Gage Wheel       |
| 93–9342    | 3        | 14       | 1    | Spring–Torsion           |
| 93–9847    | 1        | 20       | 2    | Spacer                   |
| 93–9848–03 | 1        | 26       | 1    | Bracket–Deck             |
| 93–9849–03 | 1        | 25       | 1    | Bracket–Deck             |
| 94–1981    | 2        | 31       | 2    | Spring–Gage Wheel        |
| 94–1986–03 | 3        | 15       | 1    | Bellcrank Wa             |
| 94–1988    | 3        | 17       | 2    | Spacer–Pivot             |
| 94–1989–03 | 3        | 21       | 1    | Bellcrank Wa             |
| 94–5583    | 2        | 33       | 4    | Knob                     |
| 94–5820    | 1        | 10       | 1    | Deck Wa–44”              |
| 94–5823    | 1        | 16       | 2    | Bolt–Shoulder            |
| 256–257    | 3        | 25       | 4    | Bushing–Flange           |
| 283–2      | 2        | 6        | 2    | Pin–Clevis               |
| 322–3      | 3        | 8        | 9    | Screw–HH                 |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No. | Page No. | Ref. No. | Qty. | Description    |
|----------|----------|----------|------|----------------|
| 322-6    | 2        | 15       | 4    | Screw-HH       |
| 322-12   | 1        | 27       | 2    | Screw HH       |
| 323-9    | 1        | 18       | 2    | Screw-HH       |
| 323-10   | 3        | 20       | 1    | Screw-HH       |
| 323-12   | 3        | 1        | 1    | Screw          |
| 323-14   | 3        | 19       | 2    | Screw-HH       |
| 3211-15  | 2        | 5        | 2    | Screw-Cap      |
| 3219-6   | 1        | 14       | 3    | Nut-Hex        |
| 3220-2   | 3        | 26       | 1    | Nut - Jam      |
| 3230-23  | 2        | 12       | 4    | Bolt-CARR      |
| 3230-23  | 2        | 17       | 4    | Bolt-CARR      |
| 3231-21  | 2        | 27       | 2    | Bolt-Carriage  |
| 3256-5   | 2        | 29       | 2    | Washer-Flt     |
| 3256-22  | 1        | 23       | 2    | Washer-Flat    |
| 3256-24  | 3        | 2        | 3    | Washer-Flat    |
| 3256-24  | 3        | 18       | 2    | Washer-Flat    |
| 3256-24  | 4        | 22       | 2    | Washer-Flat    |
| 3290-307 | 2        | 7        | 2    | Pin-Cotter     |
| 3290-307 | 4        | 12       | 4    | Pin-Cotter     |
| 3290-456 | 2        | 23       | 4    | Washer-Lock    |
| 3290-465 | 1        | 2        | 3    | Washer-Spring  |
| 3296-5   | 2        | 2        | 2    | Nut-Lock       |
| 3296-23  | 1        | 15       | 2    | Nut-Lock       |
| 3296-29  | 1        | 28       | 2    | Nut-Lock       |
| 3296-29  | 2        | 19       | 4    | Nut-Lock       |
| 3296-29  | 2        | 26       | 4    | Nut-Lock       |
| 3296-29  | 3        | 9        | 10   | Nut-Lock       |
| 3296-39  | 1        | 21       | 2    | Nut-Lock       |
| 3296-39  | 2        | 28       | 2    | Nut-Lock       |
| 3296-39  | 3        | 6        | 4    | Nut-Lock       |
| 3296-42  | 1        | 24       | 2    | Nut-Lock       |
| 3296-42  | 3        | 11       | 3    | Nut-Lock       |
| 3296-59  | 2        | 11       | 2    | Nut-Lock       |
| 32104-76 | 2        | 21       | 9    | Screw-Self TAP |
| 32104-76 | 2        | 32       | 2    | Screw-Self TAP |
| 32144-41 | 1        | 11       | 12   | Screw-HWHTF    |
| 32149-1  | 2        | 14       | 4    | Nut-Keps       |

\*Not Illustrated

[illegible]

[illegible]

