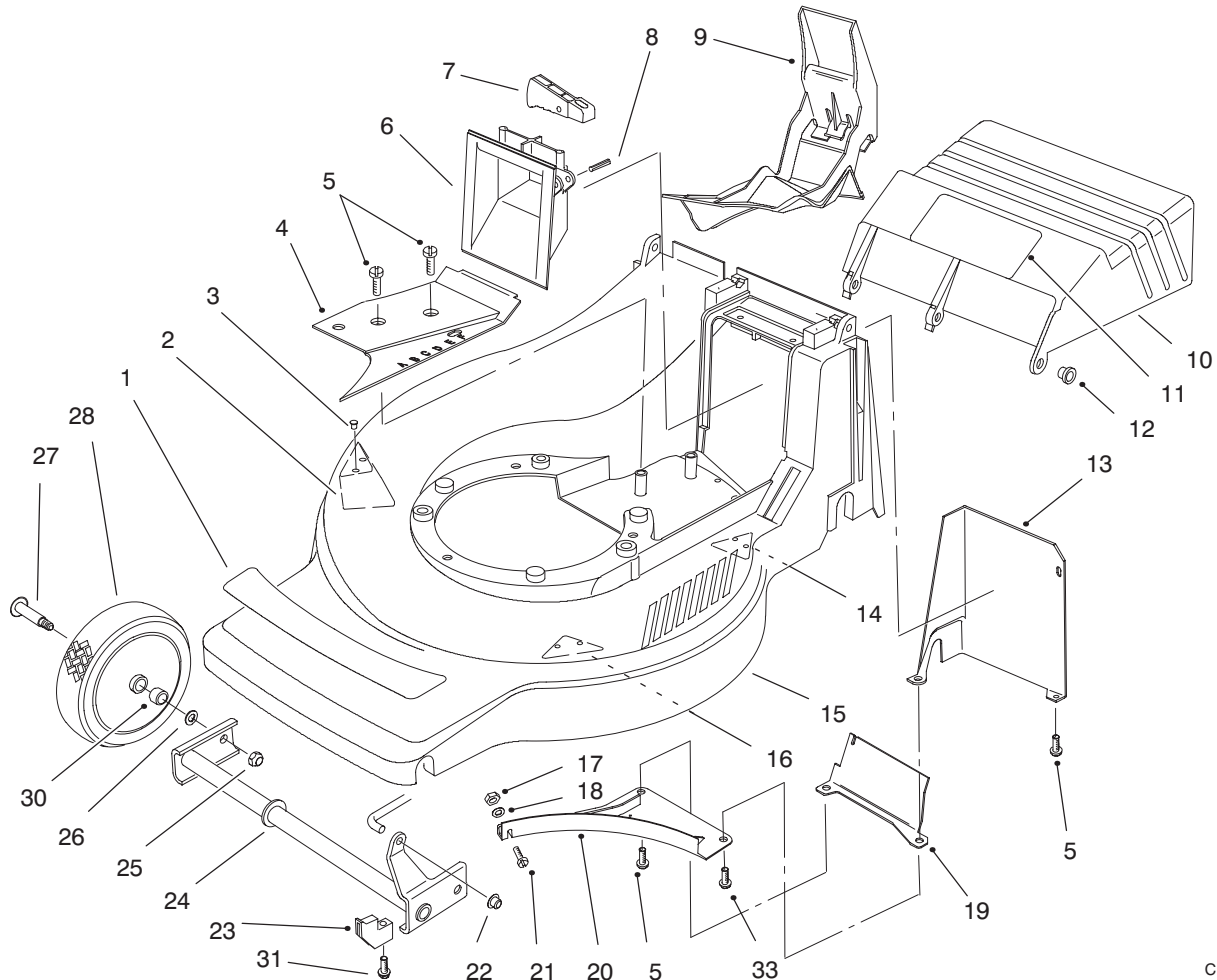



TORO®**MODEL NO. 21013B—6900001 & UP****PARTS
CATALOG****43cm RECYCLER® MOWER**

C-2107

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4351	Decal — Deck	1
2	93-3730	Kicker — Front Right	1
3	32144-111	Screw — Phillips Head	6
4	93-3782	Cover — Belt	1
5	93-4095	Screw	4
6	93-4054	Grip — Lower	1
7	71-7930	Trigger — H.O.C.	1
8	3284-5	Pin — Groove	1
9	93-3790	Plug — Mulch	1
10	93-4055	Door — Discharge	1
11	93-4105	Decal	1
12	93-3794	Bushing — Door	1
13	93-3781	Cover — Shield	1
14	93-3750	Kicker — Rear Left	1
15	16-8959	Housing — Deck (Incl. Ref.# 2, 3, 14 & 16)	1

Ref. No.	Part No.	Description	No. Used
16	93-3740	Kicker — Front Left	1
17	3296-2	Nut	1
18	3256-21	Washer	1
19	93-4110	Baffle	1
20	93-3720	Baffle — Mulch	1
21	3250-13	Screw	1
22	32112-11	Nut — Push	1
23	93-4064	Retainer — Axle	2
24	93-4080	Axle — Front	1
25	3296-6	Nut — Lock	2
26	40-1940	Washer	2
27	27-6231	Bolt — Wheel	2
28	93-4081	Wheel & Tire Assembly 7"	2
30	93-7024	Bushing	4
31	93-3793	Screw — Retainer	2
33	94-1864	Screw — Baffle	1

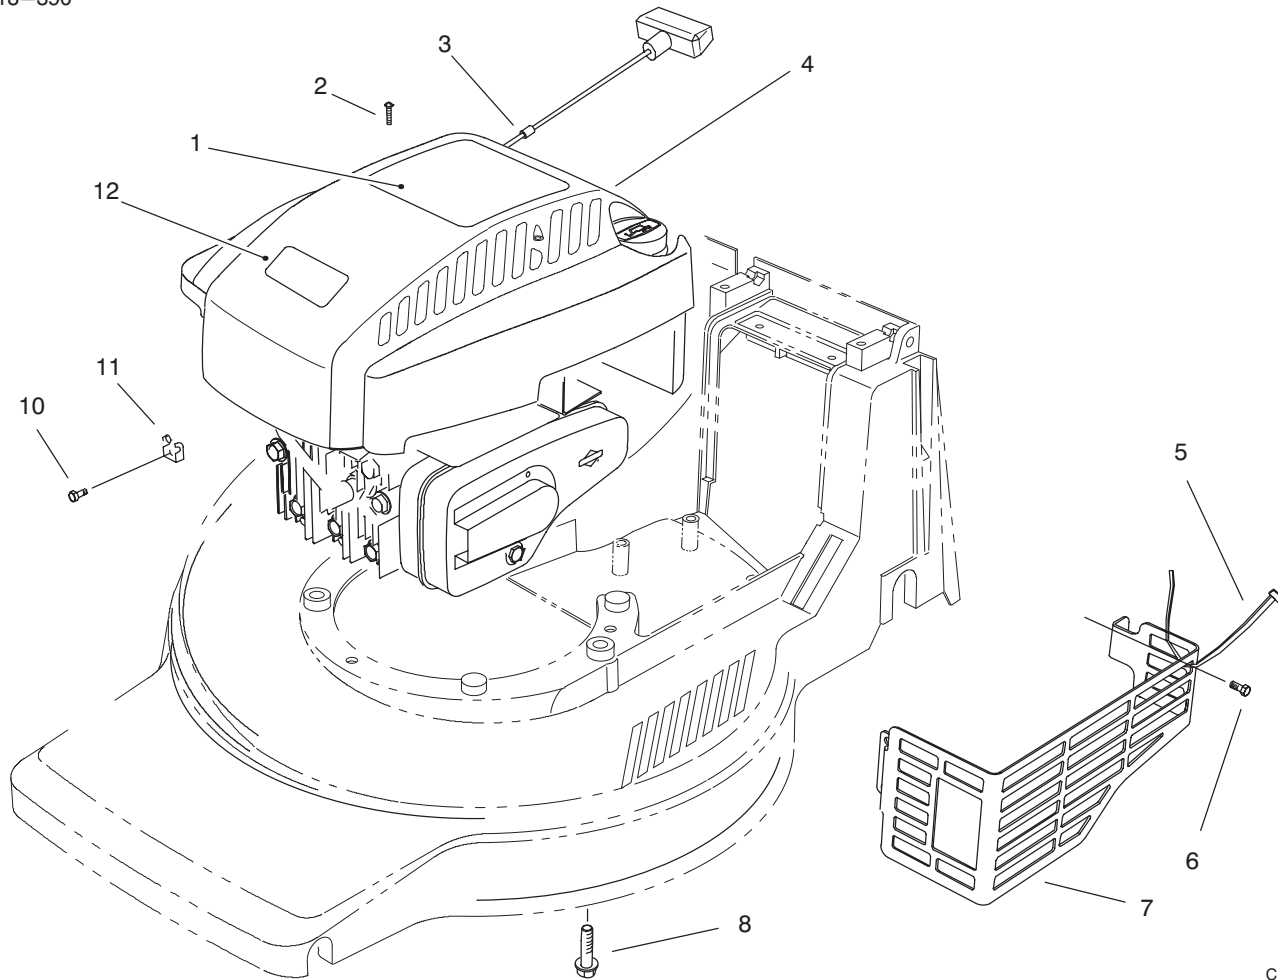


C-2108

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4352	Decal - Shroud	1
2	32144-121	Screw - Mounting	2
3	2210-316	Stop - Rope	1
4	93-0243	Shroud - Engine	1
5	3290-378	Tie - Cable	1
6	32144-73	Screw - Hex Washer Hd. Thread Forming	3

Ref. No.	Part No.	Description	No. Used
7	82-8550	Shield - Muffler	1
8	32144-102	Screw - Engine	3
10	93-8470	Screw - Clamp	1
11	2210-249	Clamp - Casing	1
12	92-2289	Plate - Logo Toro	1

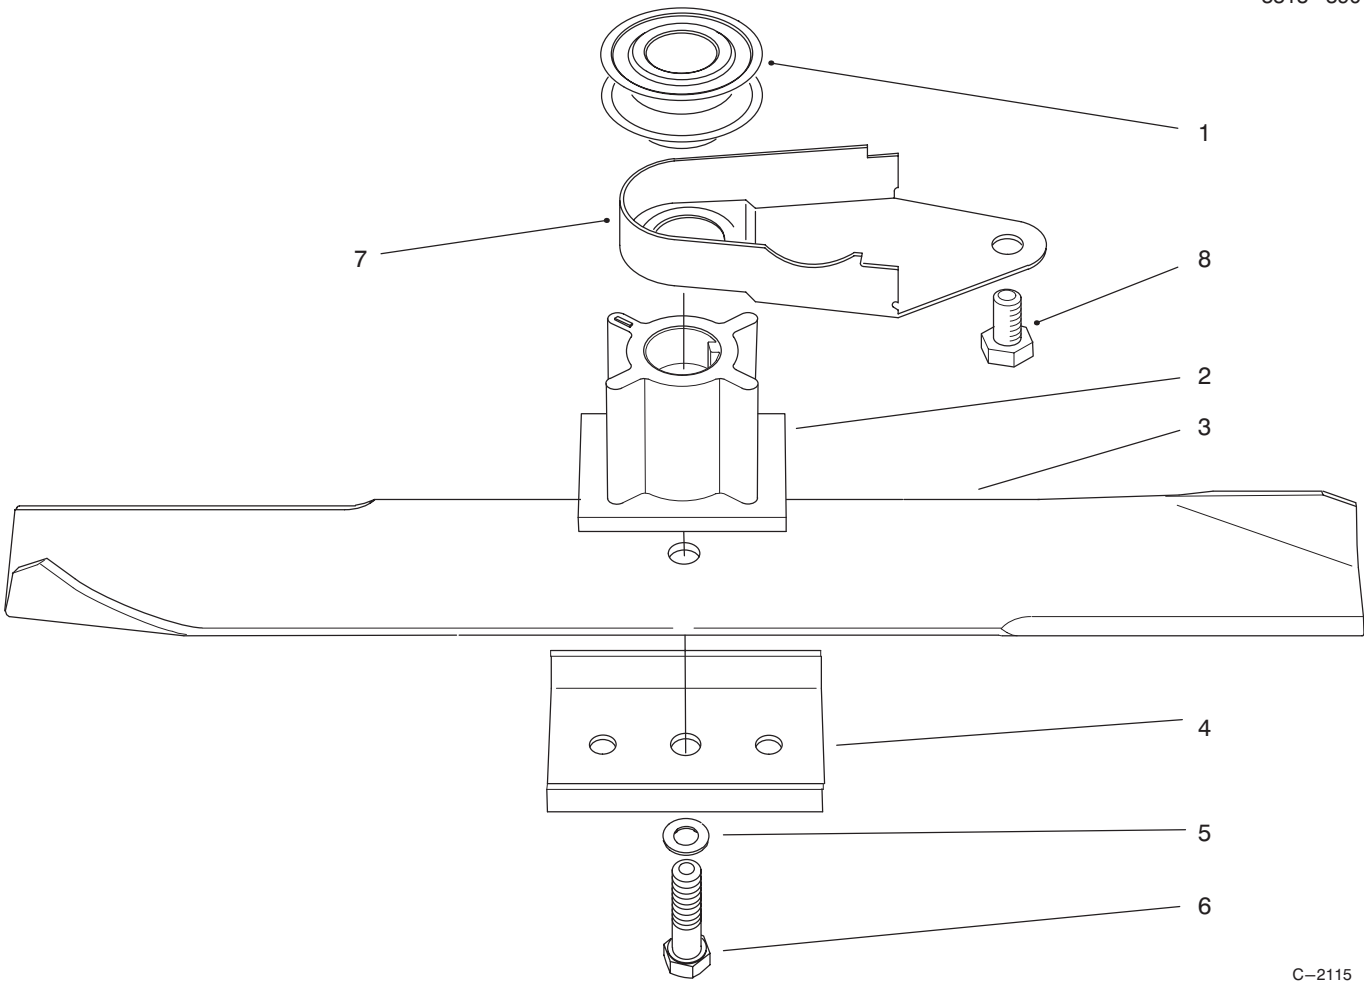


C-2115

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-7550	Pulley - Driver	1	5	3253-22	Washer - Lock	1
2	93-4091	Retainer - Blade	1	6	26-0672	Bolt - Blade	1
3	93-3760	Blade - 43cm	1	7	93-8718	Cover - Belt	1
4	93-8731	Stiffener - Blade	1	8	93-9837	Screw - Belt Cover	1

3318-390

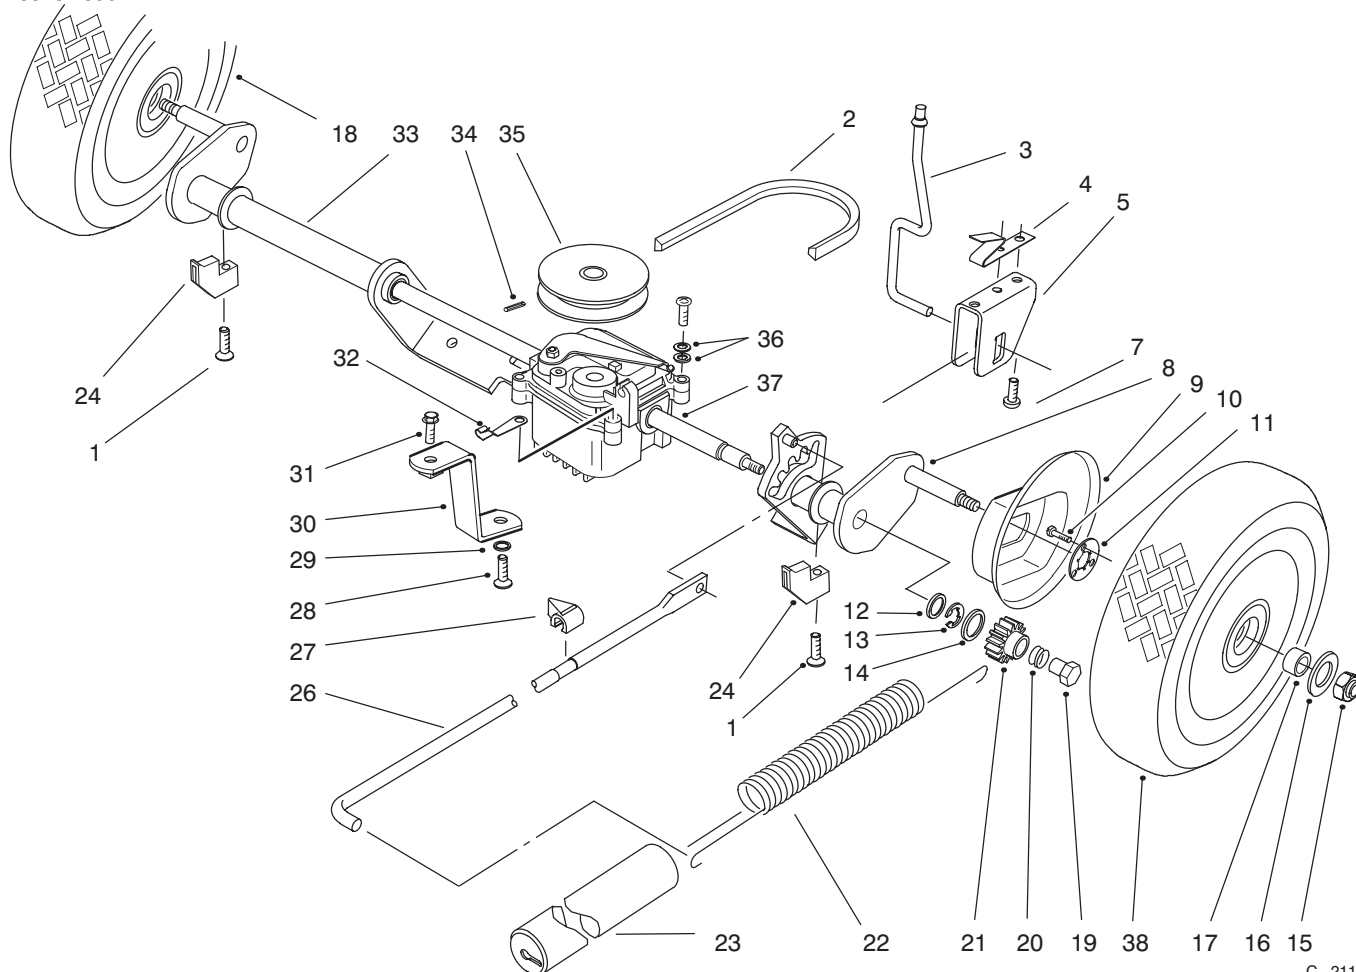


C-2116

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-3793	Screw – Retainer	2
2	93-4118	Belt	1
3	93-4061	Rod – Trigger	1
4	93-4062	Spring – Trigger Ret.	1
5	93-4066	Saddle – H.O.C.	1
7	93-4095	Screw	2
8	93-4077	Axle – Rear, Left	1
9	93-4067	Cover – Wheel	2
10	93-4096	Screw	6
11	93-4068	Gear	2
12	93-3792	Washer – Cover	2
13	93-3791	Washer – Axle	2
14	93-4099	Washer – Gear	2
15	93-4098	Nut – Lock	2
16	93-4097	Washer – Wheel	2
17	93-7023	Bushing	4
18	93-3783	Wheel & Tire Assembly	1
19	93-3759	Bushing – Left	1
*	93-4100	Bushing – Right	1
20	93-4070	Spring – L.H.	1

Ref. No.	Part No.	Description	No. Used
*	93-4071	Spring – R.H.	1
21	93-4072	Gear	2
22	71-7740	Spring – Counterbalance	1
23	71-8450	Cover – Spring	1
24	93-4064	Retainer – Axle	2
26	93-4065	Rod – Link	1
27	71-7980	Indicator – H.O.C.	1
28	93-4116	Screw	1
29	93-4115	Washer	1
30	93-4112	Bracket – Gear Box	1
31	93-4114	Screw	1
32	93-7018	Holder – Cable	1
33	93-4078	Axle – Rear, Right	1
34	93-4113	Pin	1
35	93-4111	Pulley	1
36	93-7019	Washer	2
37	93-4073	Gearbox Assembly	1
38	93-9836	Wheel & Tire Assy. "Smart Wheel"	1

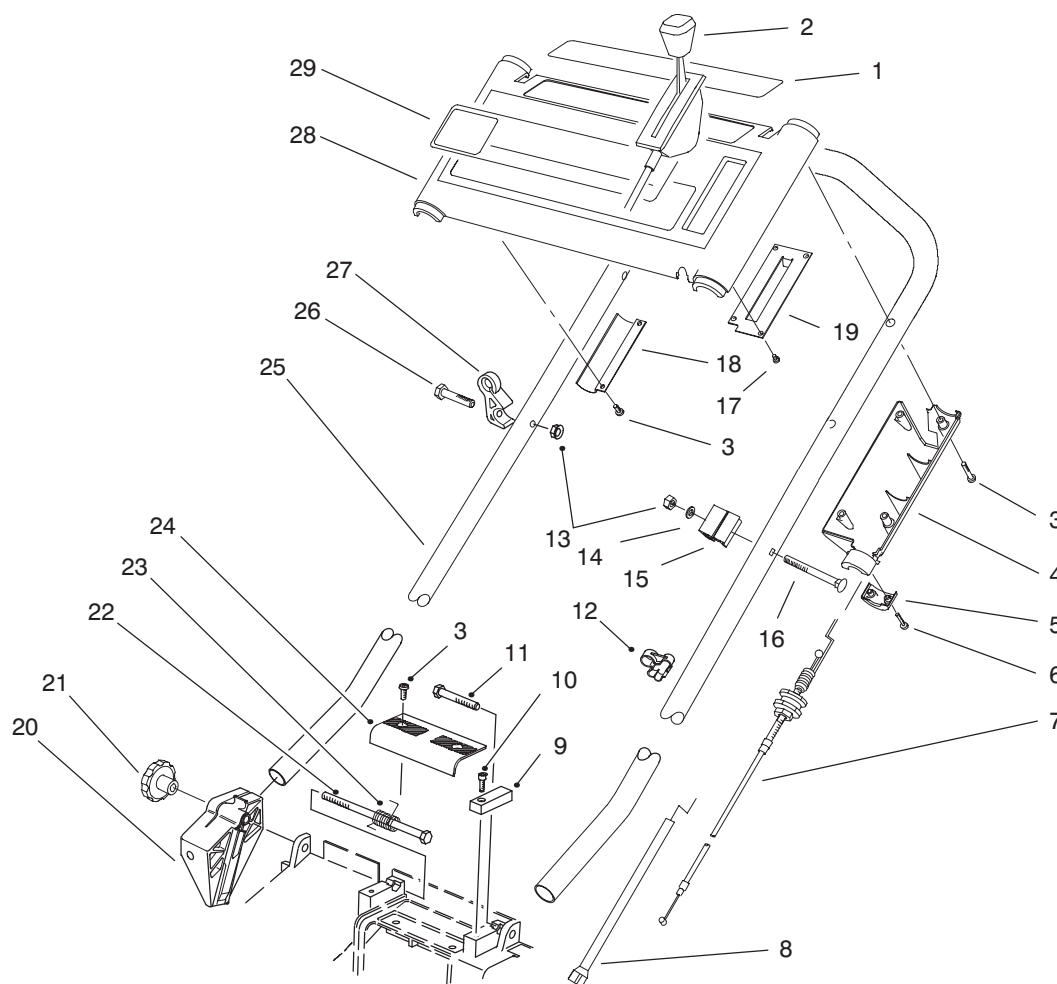


C-2117

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-6026	Decal	1	17	32144-98	Screw	4
2	93-1117	Control - Throttle	1	18	71-8130	Bracket - Control	1
3	32144-97	Screw	7	19	71-8040	Plate - Throttle	1
4	93-0339	Cover - Throttle Lower	1	20	93-4082	Mount - Handle R.H.	1
5	71-7630	Cap - Throttle Lower	1	*	93-4083	Mount - Handle L.H.	1
6	32144-99	Screw	2	21	19-4050	Knob	2
7	94-6034	Cable - Traction	1	22	93-4058	Bolt - Long	1
8	93-1116	Cable - Brake	1	23	93-4057	Spring	1
9	93-4056	Cap	2	24	71-7860	Cover	1
10	93-4094	Screw - Hinge, Cap	2	25	94-4367	Handle	1
11	93-4060	Bolt - Short	1	26	321-52	Screw	1
12	93-4084	Clamp - Cable	2	27	93-3772	Guide - Rope	1
13	3296-73	Nut - Lock	2	28	17-4319	Panel - Control (Incl. Ref.# 1 & 29)	1
14	3256-1	Washer - Flat	1	29	92-7865	Decal - Panel SP	1
15	46-6980	Support - Cable	1				
16	92-2270	Screw - Handle	1				

*Not Illustrated

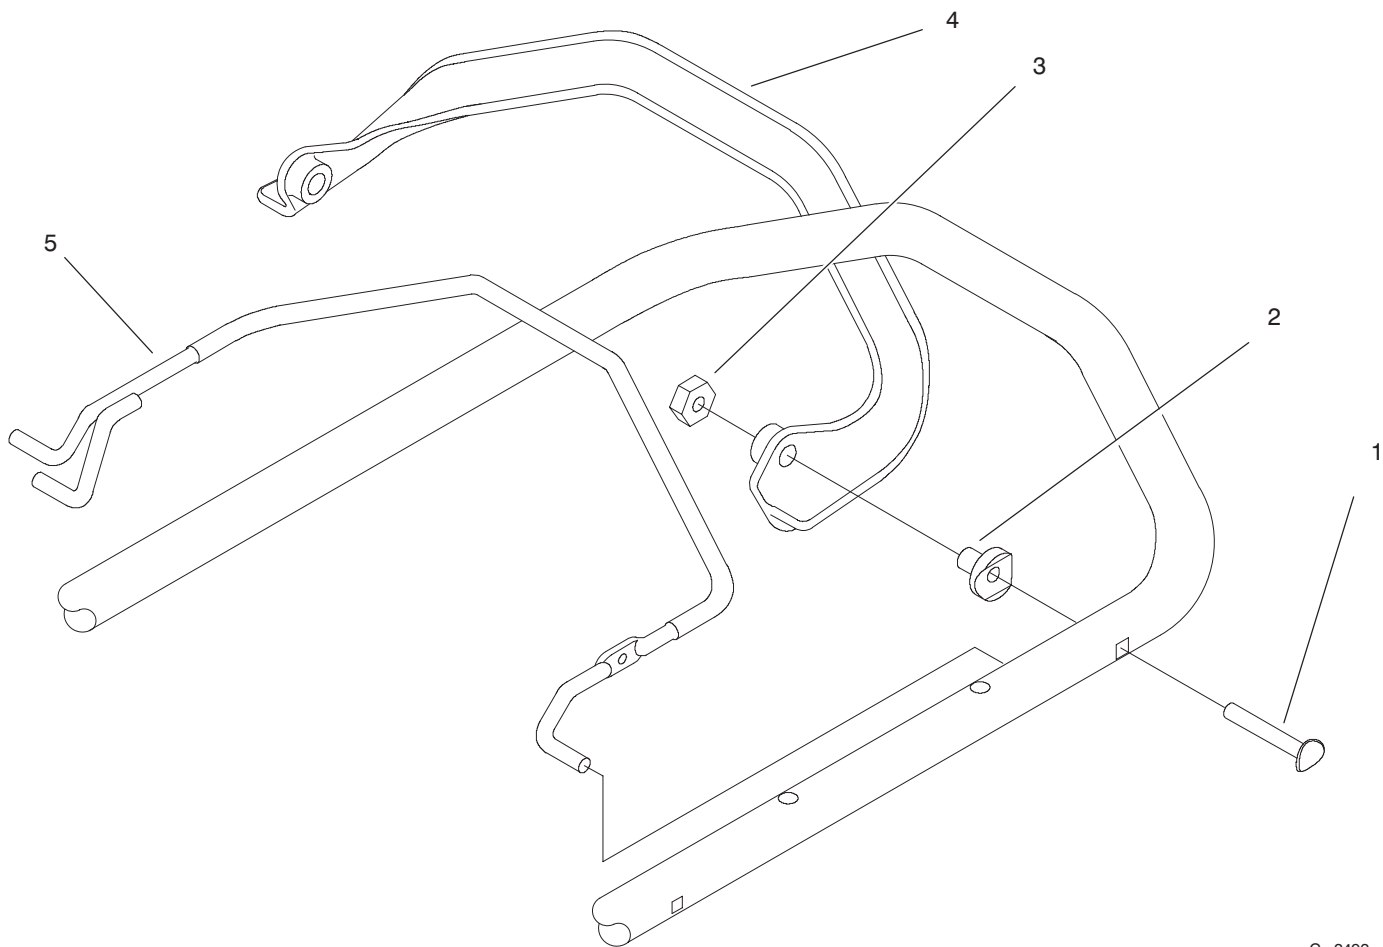


C-2492

CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	17-9428	Screw	2
2	66-0330	Spacer - Support	2
3	3296-74	Nut - Flange, Nylon	2

Ref. No.	Part No.	Description	No. Used
4	94-4365	Bail - Traction	1
5	94-4364	Bail - Brake	1

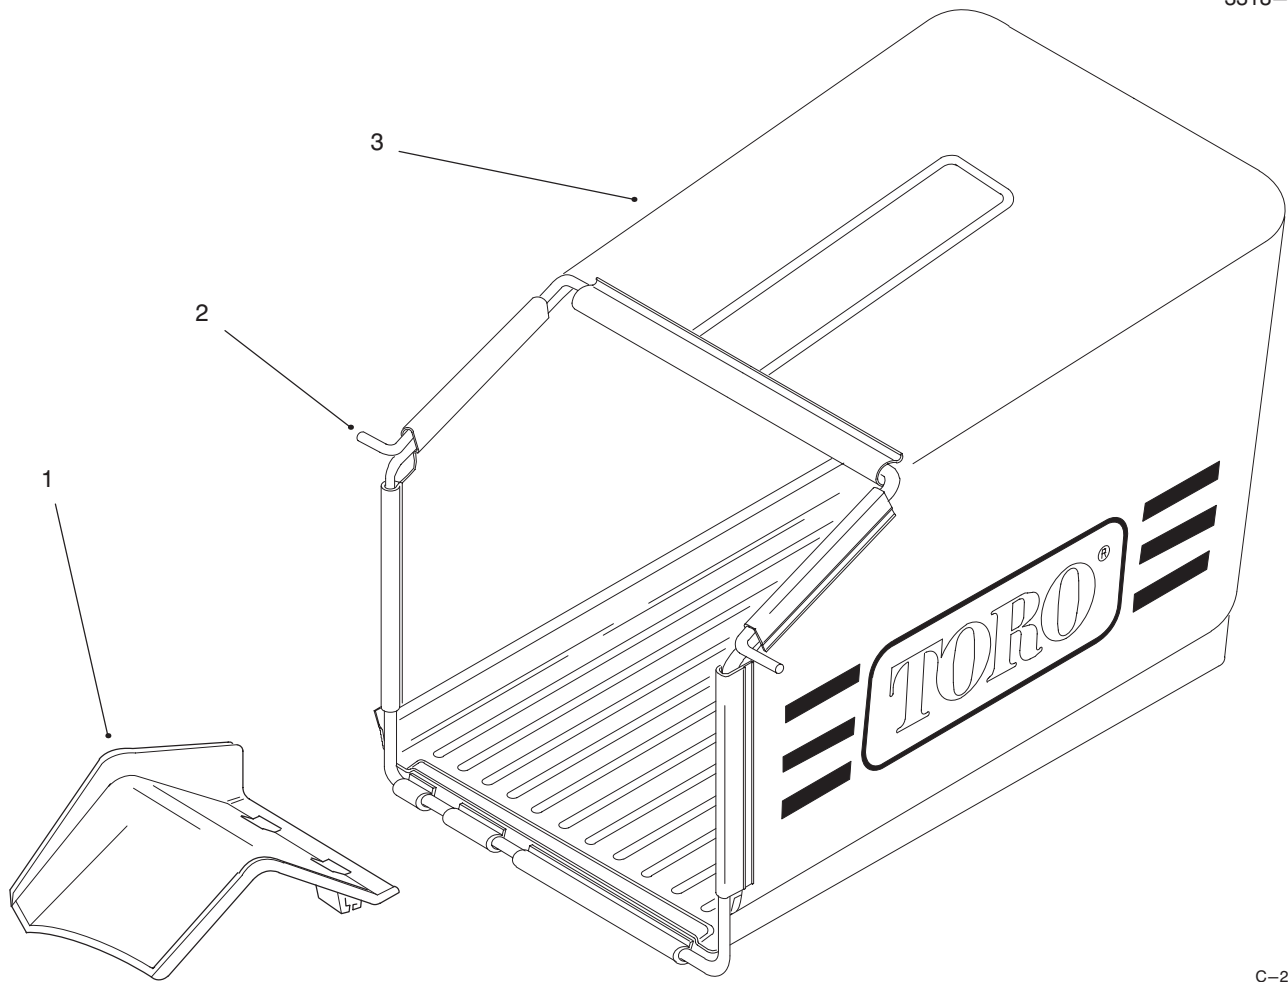


C-2112

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4087	Grass Bag Remover	1
2	93-4085	Frame - Bag	1

Ref. No.	Part No.	Description	No. Used
3	93-4086	Bag - Grass	1

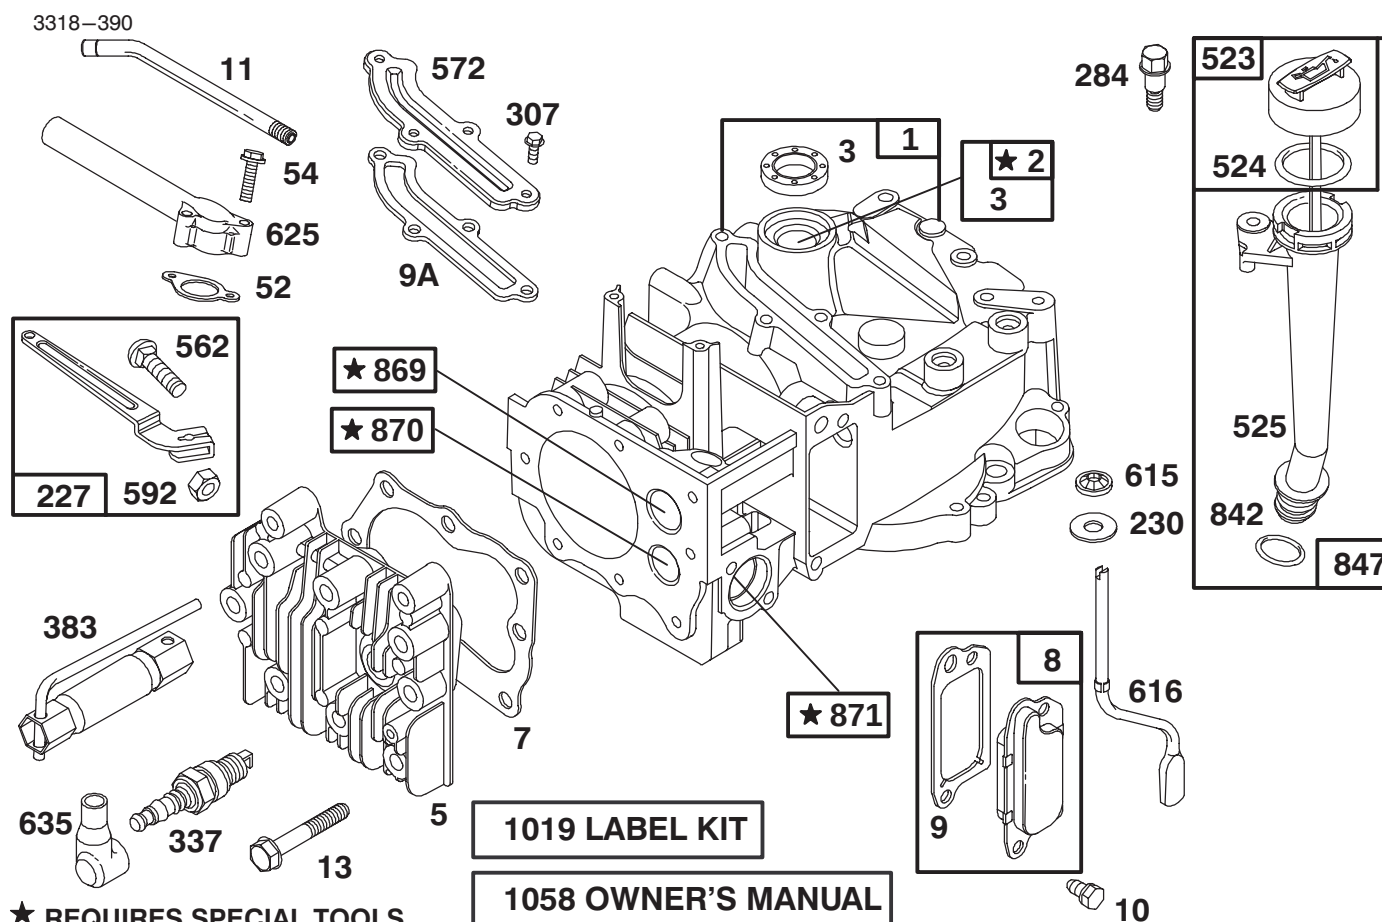


ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214349	Head – Cylinder	1
★7	272916	Gasket – Cylinder Head	1
8	495786	Breather Assembly	1
★9	272481	Gasket – Valve Cover	1
★9A	272238	Gasket – Baffle Plate	1
10	94650	Screw – Breather Mtg.	1
11	231933	Tube – Breather	1
13	94547	Screw – Cylinder Head	1
★52	272199	Gasket – Intake Elbow	1
54	94526	Screw – Intake Elbow Mtg	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex. Head	1
337	802592	Plug – Spark	1
383	89838	Wrench – Spark Plug	1
523	495264	Cap With Dipstick – Oil Filler	1

Ref. No.	Part No.	Description	No. Used
★524	280393	Seal – Filler Tube	1
525	495265	Tube – Oil Filler	1
562	92613	Bolt – Governor Lever	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	262578	Crank – Governor	1
625	281085	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
★842	280966	Seal – O-Ring	1
847	495263	Oil Fill Tube and Dipstick Assy.	1
869	213512	Seat – Intake Valve	1
870	213513	Seat – Exhaust Valve	1
871	262001	Guide – Exhaust Valve	1
1019	494256	Label Kit	1
1058	272262	Owner's Manual	1

★ Included in Gasket Set—Part No. 497316.

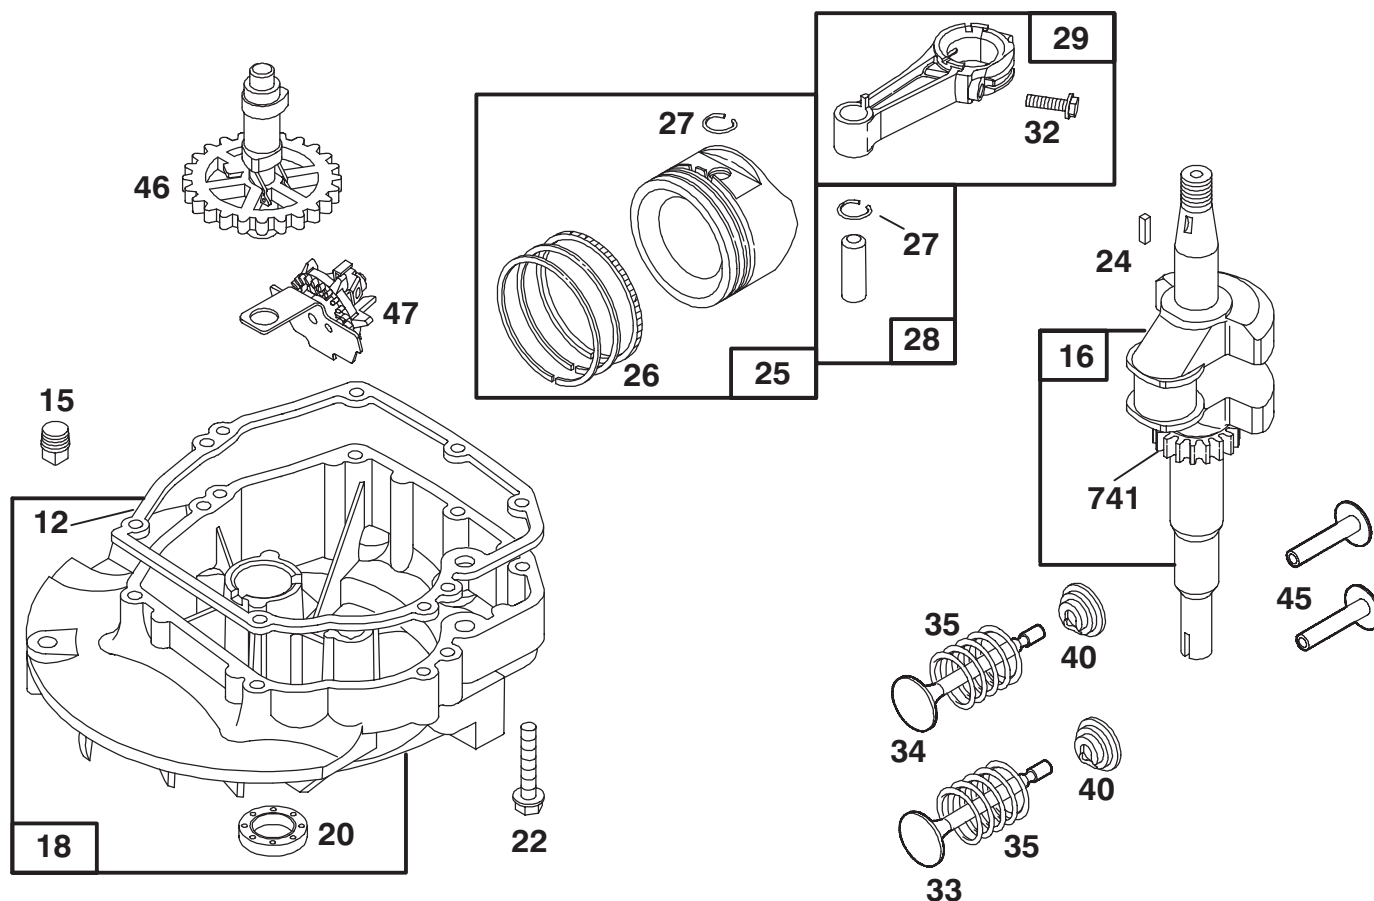


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802—0620—01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket — Crankcase	1
15	94720	Plug — Oil Drain	1
16	494546	Crankshaft	
		Note: Order 94388 For Timing Gear Key.	
18	493279	Sump — Engine	1
★20	399781	Seal — Oil	1
22	94220	Screw — Hex. Head	
		Note: 94612 Screw — Hex. Head (One (1) Used in Hole Nearest Breather.)	
24	222698	Key — Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1

Ref. No.	Part No.	Description	No. Used
	493390	Ring Set (.030" O.S.)	1
27	26026	Lock — Piston Pin	1
28	298909	Pin — Piston (Standard)	1
	298908	Pin — Piston (.005" O.S.)	1
29	490566	Rod Assembly — Connecting	1
		Note: For Connecting Rod With .020" Undersize Crankpin Bearing — Order No. 490743.	
32	94699	Screw — Connecting Rod	1
33	262651	Valve — Exhaust	1
34	262652	Valve — Intake	1
35	262224	Spring — Valve	1
	93312	Retainer — Valve Spring	1
40	262204	Tappet — Valve	2
45	492828	Gear — Cam	1
46	493737	Slinger — Oil	1
741	262598	Gear — Timing	1

★ Included in Gasket Set—Part No. 497316.

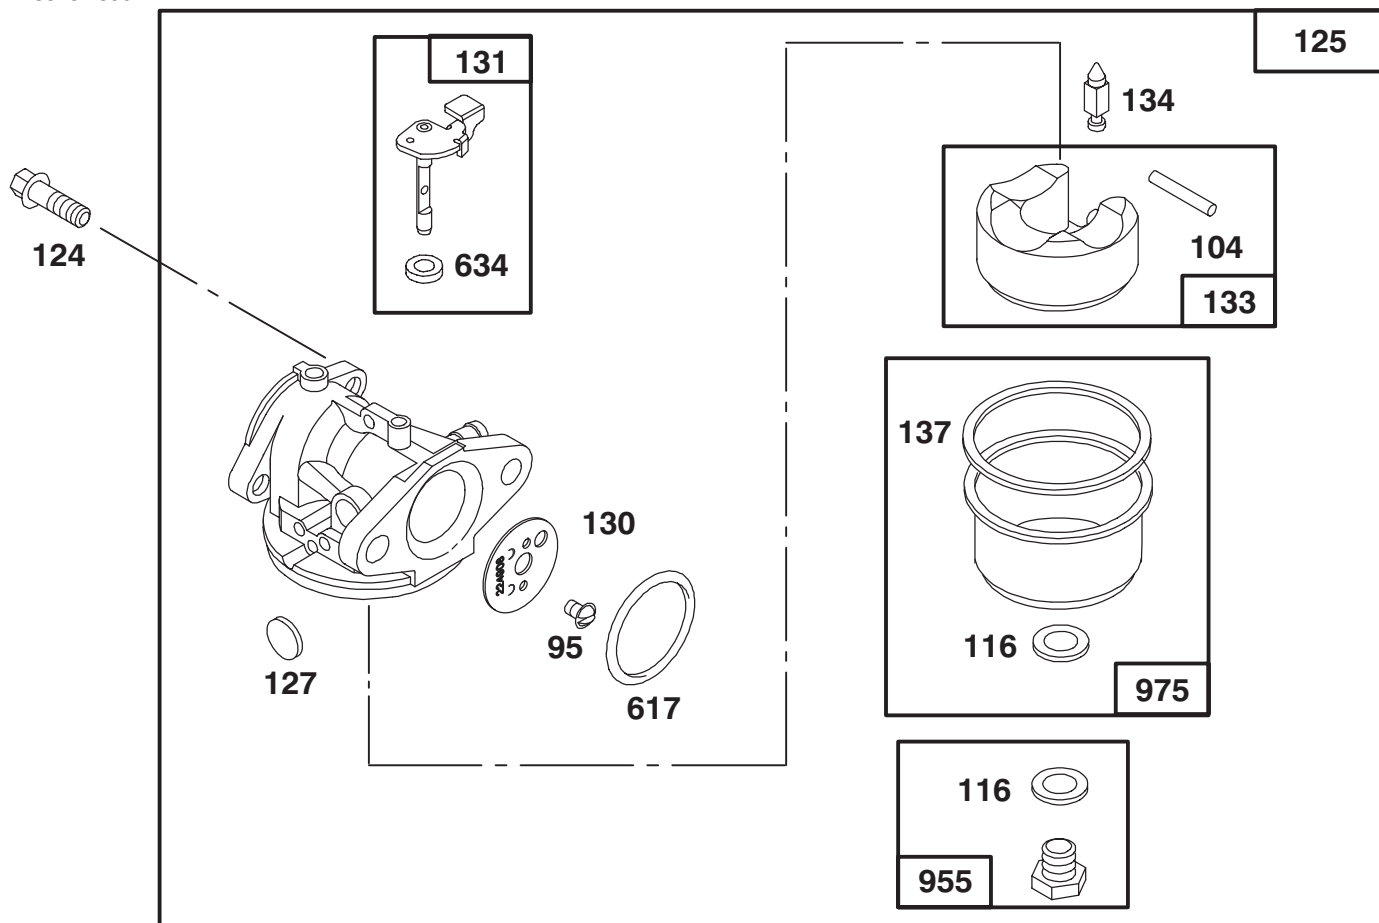

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12E802–0620–01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Throttle Valve Mounting	2
●104	231371	Pin – Float Hinge	1
●◆116		Gasket – Sealing (Sold in Kit Only).	1
124	94525	Screw – Carburetor Mtg.	1
125	497314	Carburetor	1
●127		Plug – Welch (Sold in Kit Only).	1
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float Assy. – Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only).	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only).	1
955	497315	Screw – Bowl Mtg. (Std.)	1
975	493640	Note: 496495 Screw – Bowl Mtg. (High Altitude) Bowl Assy. – Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

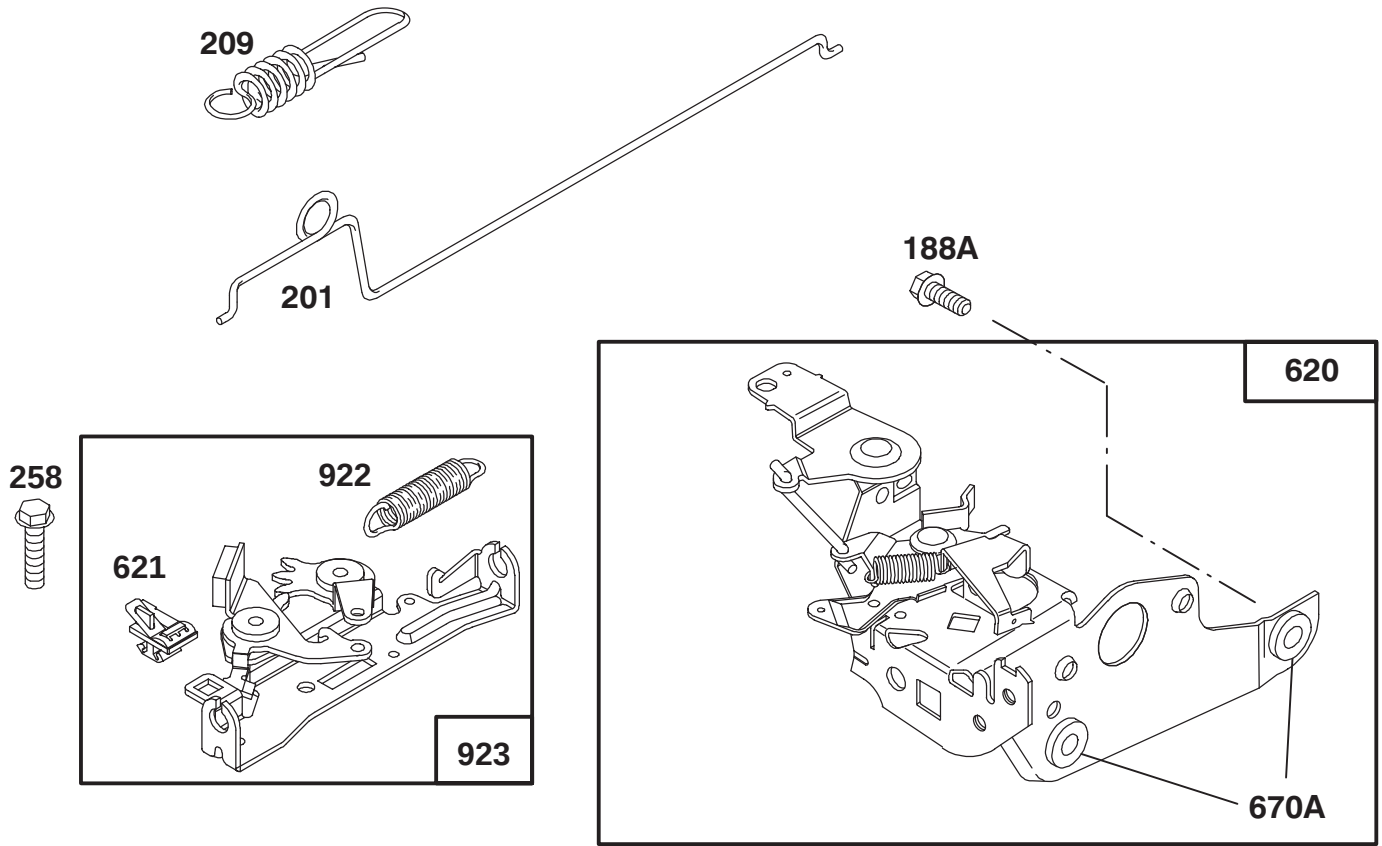

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12E802—0620—01

Ref. No.	Part No.	Description	No. Used
188A	94644	Screw — Hex. Head	1
201	262579	Link — Governor	1
209	263043	Spring — Governor	1
258	94512	Screw — Hex. Head	1
620	497203	Bracket — Carburetor	1

Ref. No.	Part No.	Description	No. Used
621	396847	Switch — Stop	1
★670A	493823	Spacer — Bracket	1
922	262640	Spring — Brake	1
923	493442	Brake Assembly	1

★ Included in Gasket Set—Part No. 497316.

3318-390

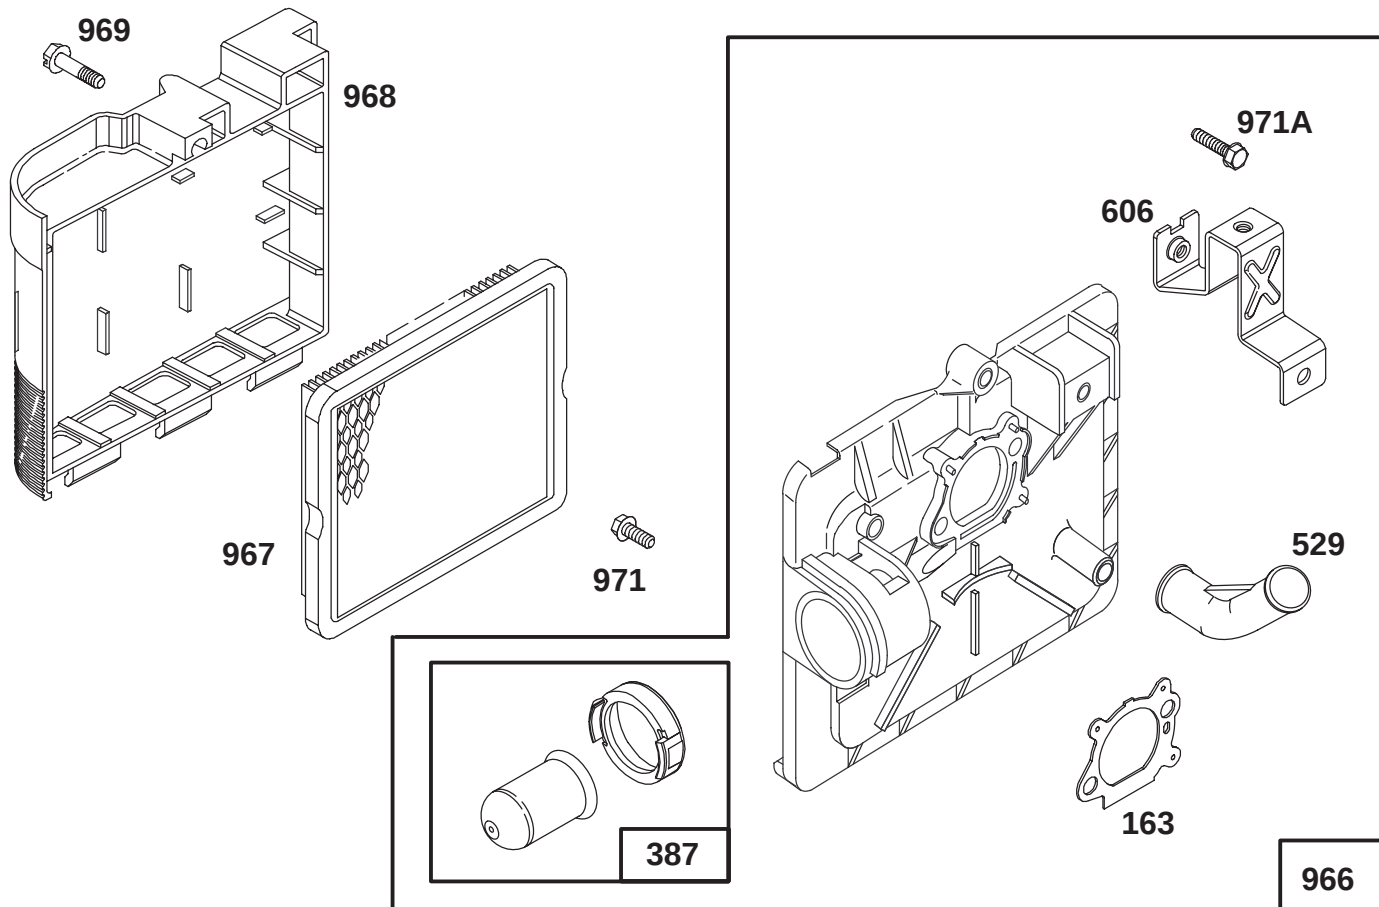


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
★163	272653	Gasket — Air Cleaner	1
387	496115	Primer—Carburetor	1
529	281299	Grommet — Breather	1
606	224815	Strap — Bracket	1
966	496116	Base — Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
967	491588	Filter — Air	1
968	281340	Cover — Air Cleaner	1
969	94120	Screw — Cover Mtg.	1
971	94121	Screw — Air Cleaner	1
971A	94749	Screw — Hex. Head	1

★ Included in Gasket Set—Part No. 497316.

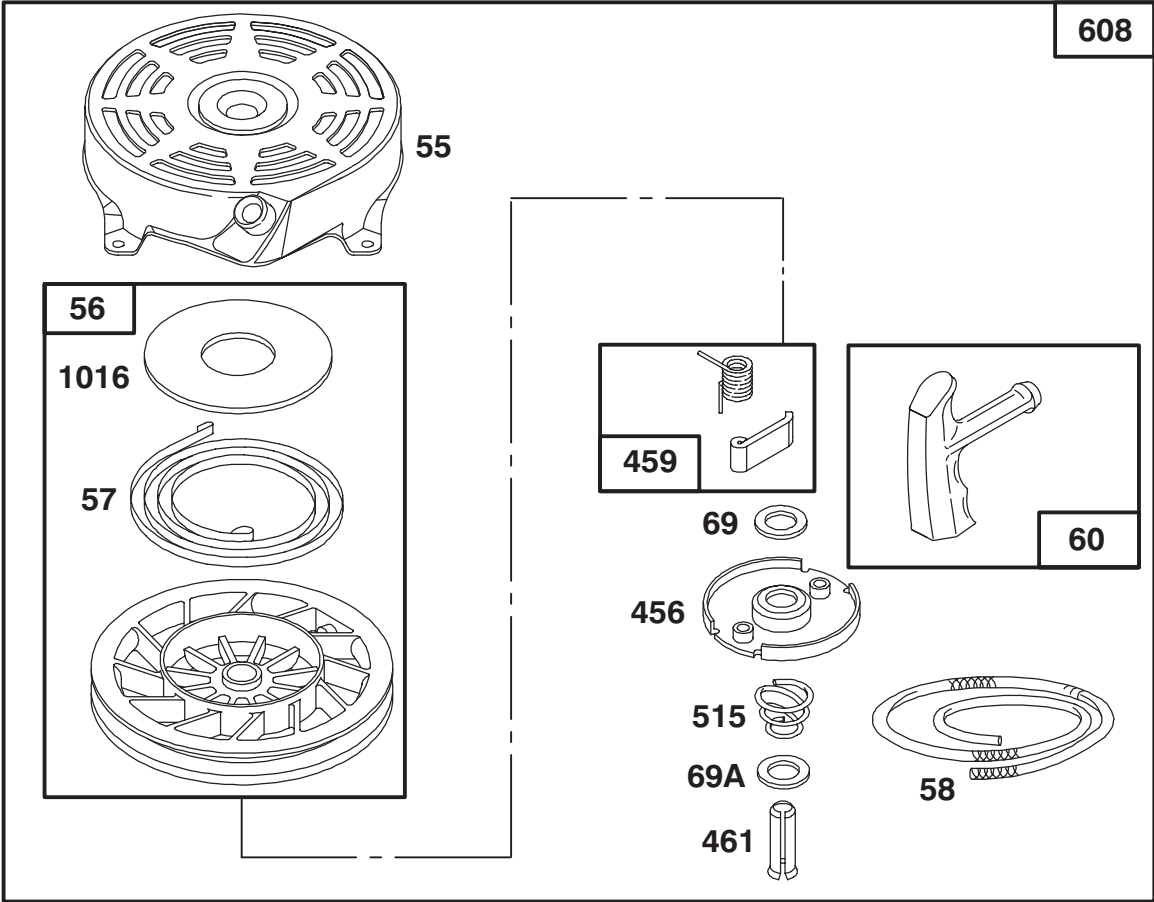


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
55	492831	Housing – Rewind Starter	1
56	493824	Pulley – Rewind Starter	1
57	262594	Spring – Rewind Starter	1
58	280399	Rope – Rewind Starter	1
60	393152	Handle – Rewind Starter	1
69	280973	Washer – Rewind Starter	1
69A	224322	Washer – Rewind Starter	1
456	224321	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	492833	Pawl – Starter	1
461	262626	Pin – Starter	1
515	262625	Spring – Torsion	1
608	493295	Starter Assy. – Rewind	
		Includes:	
		94128 Screw – Hex. Head	1
		92987 Nut – Hex.	1
1016	224278	Cover – Rewind Starter	1

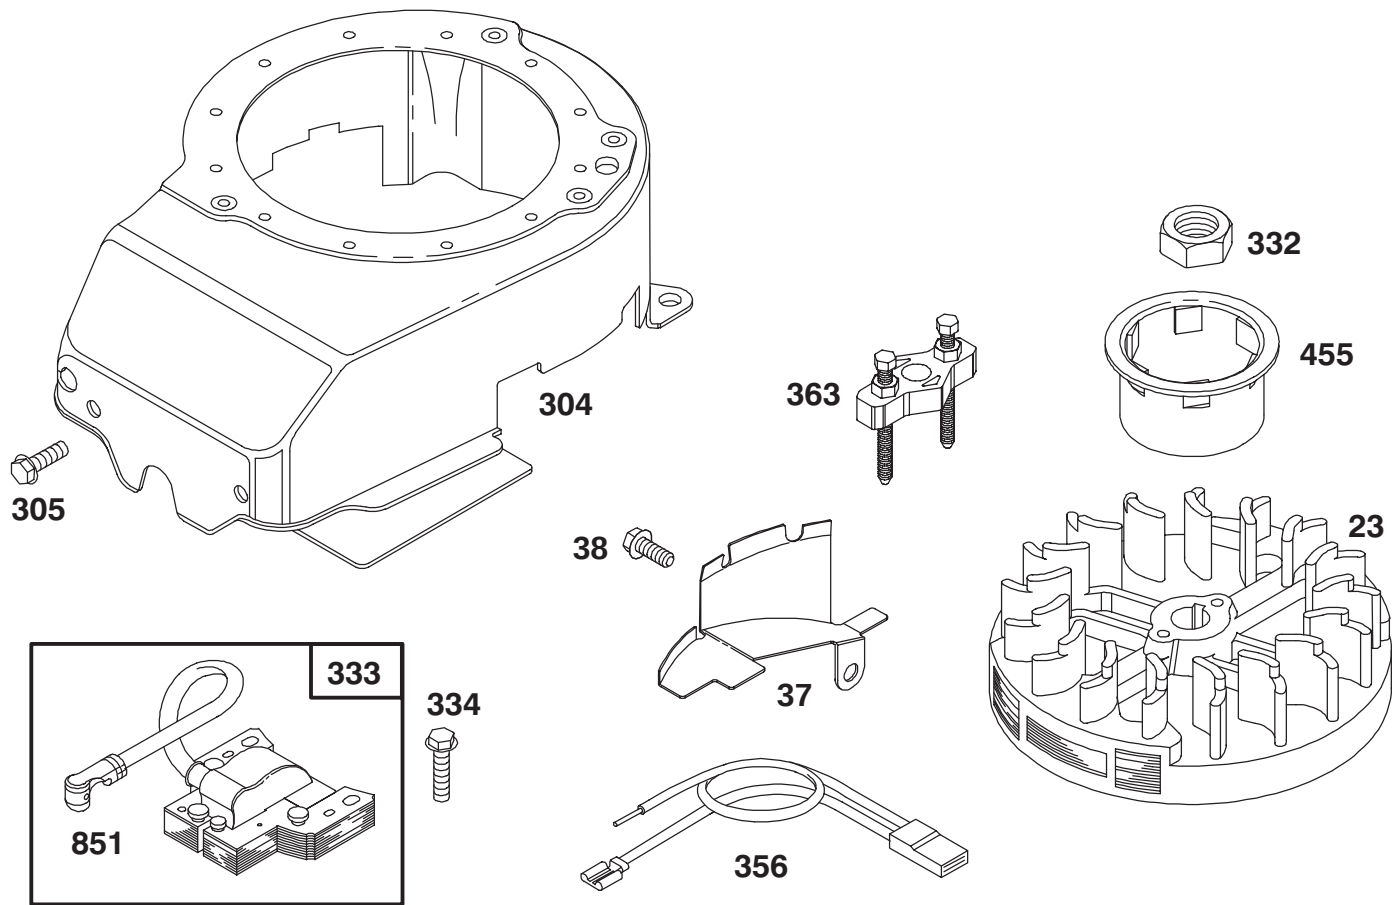


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard - Flywheel	1
38	94608	Screw - Hex. Hd.	1
304	493293	Housing - Blower	1
305	94513	Screw - Sem	1
332	92284	Nut - Flywheel	1

Ref. No.	Part No.	Description	No. Used
333	802574	Armature - Magneto	1
334	94731	Screw - Sem	1
356	398808	Wire - Ground	1
363	19069	Puller - Flywheel	1
455	224250	Cup - Starter	1
851	493880	Terminal - Ignition Cable	1

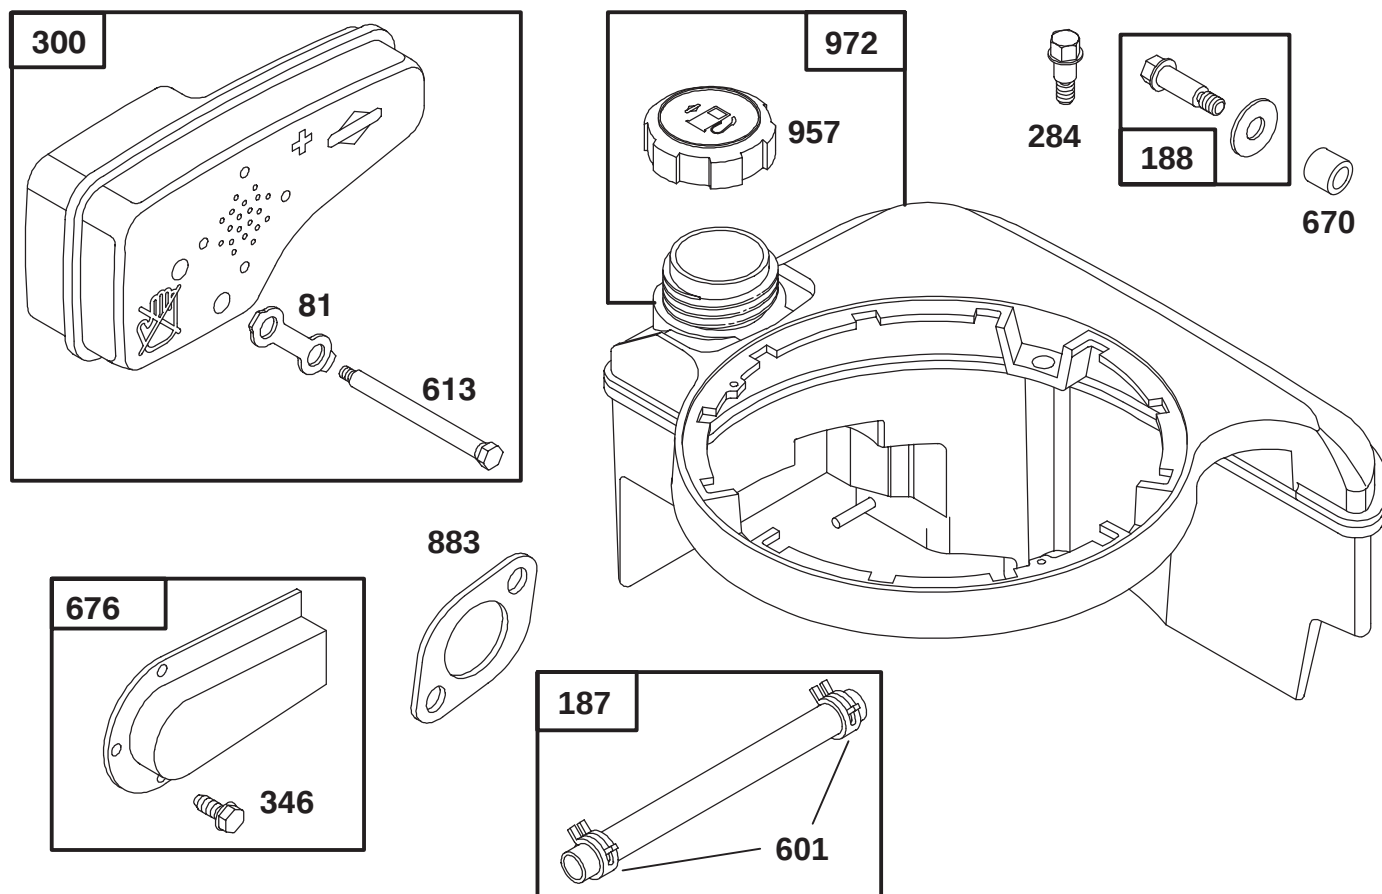




Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188	398540	Screw – Tank Mounting	1
284	94511	Screw – Hex. Head	1
300	490547	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93807	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Muffler Mtg.	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket–Muffler	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

★ Included in Gasket Set—Part No. 497316.

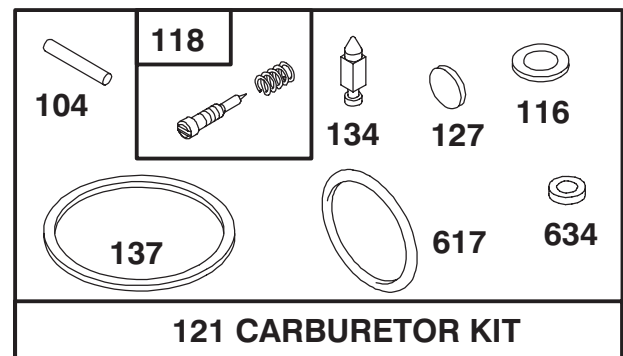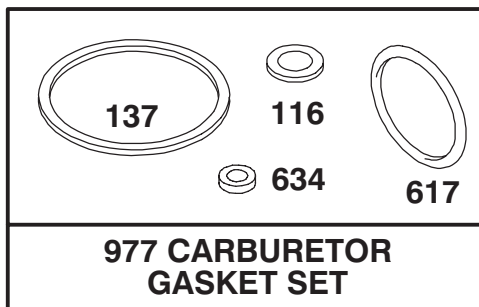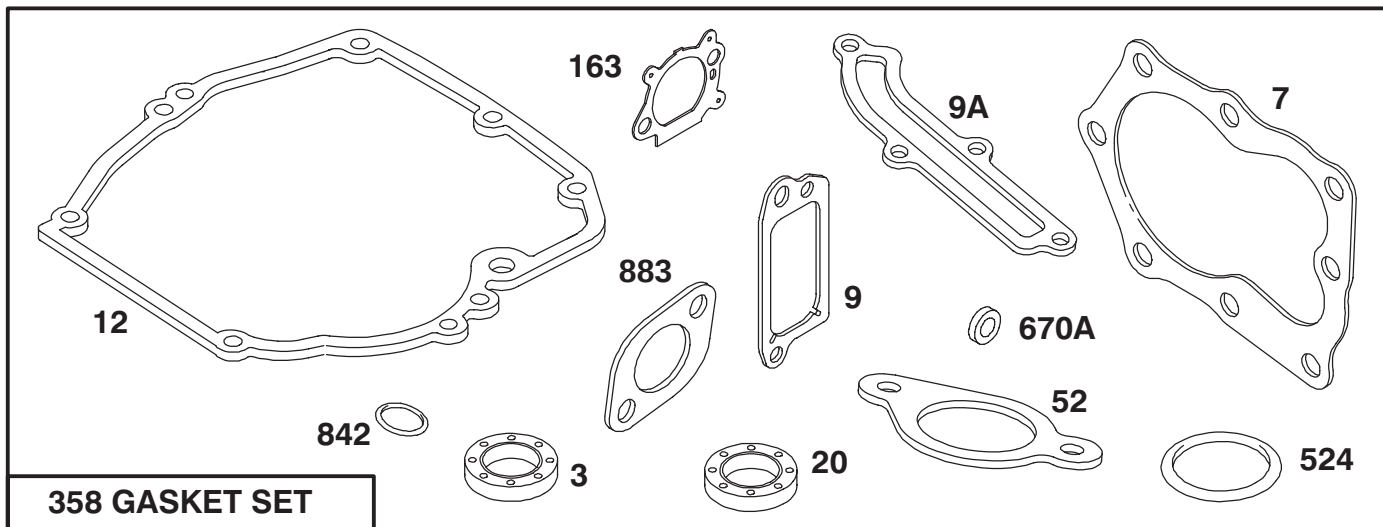

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802–0620–01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272916	Gasket – Cylinder Hd.	1
★9	272481	Gasket – Valve Cover	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket – Sealing (Sold in Kit Only).	1
●118	493765	Valve – Needle	1
121	493762	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1
●134	398188	Valve – Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137		Gasket – Bowl (Sold in Kit Only)	1
★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
★670A	493823	Spacer – Bracket (Includes 2)	1
★842	280966	Seal – O-Ring	1
★883	272253	Gasket–Muffler	1
977	490937	Gasket Set – Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 497316.

TORO PART NUMBER INDEX

3318–390

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
16–8959	Housing – Deck	1 15 1	93–4082	Mount – Handle R.H.	5 20 1
17–4319	Panel – Control	5 28 1	93–4083	Mount – Handle L.H.	5 * 1
17–9428	Screw	6 1 2	93–4084	Clamp – Cable	5 12 2
19–4050	Knob	5 21 2	93–4085	Frame – Bag	7 2 1
26–0672	Bolt – Blade	3 6 1	93–4086	Bag – Grass	7 3 1
27–6231	Bolt – Wheel	1 27 2	93–4087	Grass Bag Remover	7 1 1
40–1940	Washer	1 26 2	93–4091	Retainer – Blade	3 2 1
46–6980	Support – Cable	5 15 1	93–4094	Screw – Hinge, Cap	5 10 2
62–7550	Pulley – Driver	3 1 1	93–4095	Screw	1 5 4
66–0330	Spacer – Support	6 2 2	93–4095	Screw	4 7 2
71–7630	Cap – Throttle Lower	5 5 1	93–4096	Screw	4 10 6
71–7740	Spring – Counterbalance	4 22 1	93–4097	Washer – Wheel	4 16 2
71–7860	Cover	5 24 1	93–4098	Nut – Lock	4 15 2
71–7930	Trigger – H.O.C.	1 7 1	93–4099	Washer – Gear	4 14 2
71–7980	Indicator – H.O.C.	4 27 1	93–4100	Bushing – Right	4 * 1
71–8040	Plate – Throttle	5 19 1	93–4105	Decal	1 11 1
71–8130	Bracket – Control	5 18 1	93–4110	Baffle	1 19 1
71–8450	Cover – Spring	4 23 1	93–4111	Pulley	4 35 1
82–8550	Shield – Muffler	2 7 1	93–4112	Bracket – Gear Box	4 30 1
92–2270	Screw – Handle	5 16 1	93–4113	Pin	4 34 1
92–2289	Plate – Logo Toro	2 12 1	93–4114	Screw	4 31 1
92–7865	Decal – Panel SP	5 29 1	93–4115	Washer	4 29 1
93–0243	Shroud – Engine	2 4 1	93–4116	Screw	4 28 1
93–0339	Cover – Throttle Lower	5 4 1	93–4118	Belt	4 2 1
93–1116	Cable – Brake	5 8 1	93–4351	Decal – Deck	1 1 1
93–1117	Control – Throttle	5 2 1	93–4352	Decal – Shroud	2 1 1
93–3720	Baffle – Mulch	1 20 1	93–7018	Holder – Cable	4 32 1
93–3730	Kicker – Front Right	1 2 1	93–7019	Washer	4 36 2
93–3740	Kicker – Front Left	1 16 1	93–7023	Bushing	4 17 4
93–3750	Kicker – Rear Left	1 14 1	93–7024	Bushing	1 30 4
93–3759	Bushing – Left	4 19 1	93–8470	Screw – Clamp	2 10 1
93–3760	Blade – 43cm	3 3 1	93–8718	Cover – Belt	3 7 1
93–3772	Guide – Rope	5 27 1	93–8731	Stiffener – Blade	3 4 1
93–3781	Cover – Shield	1 13 1	93–9836	Wheel & Tire Assy.	4 38 1
93–3782	Cover – Belt	1 4 1	93–9837	Screw – Belt Cover	3 8 1
93–3783	Wheel & Tire Assembly	4 18 1	94–1864	Screw – Baffle	1 33 1
93–3790	Plug – Mulch	1 9 1	94–4364	Bail – Brake	6 5 1
93–3791	Washer – Axle	4 13 2	94–4365	Bail – Traction	6 4 1
93–3792	Washer – Cover	4 12 2	94–4367	Handle	5 25 1
93–3793	Screw – Retainer	4 1 2	94–6026	Decal	5 1 1
93–3793	Screw – Retainer	1 31 2	94–6034	Cable – Traction	5 7 1
93–3794	Bushing – Door	1 12 1	2210–249	Clamp – Casing	2 11 1
93–4054	Grip – Lower	1 6 1	2210–316	Stop – Rope	2 3 1
93–4055	Door – Discharge	1 10 1	321–52	Screw	5 26 1
93–4056	Cap	5 9 2	3250–13	Screw	1 21 1
93–4057	Spring	5 23 1	3253–22	Washer – Lock	3 5 1
93–4058	Bolt – Long	5 22 1	3256–1	Washer – Flat	5 14 1
93–4060	Bolt – Short	5 11 1	3256–21	Washer	1 18 1
93–4061	Rod – Trigger	4 3 1	3284–5	Pin – Groove	1 8 1
93–4062	Spring – Trigger Ret.	4 4 1	3290–378	Tie – Cable	2 5 1
93–4064	Retainer – Axle	1 23 2	3296–2	Nut	1 17 1
93–4064	Retainer – Axle	4 24 2	3296–6	Nut – Lock	1 25 2
93–4065	Rod – Link	4 26 1	3296–73	Nut – Lock	5 13 2
93–4066	Saddle – H.O.C.	4 5 1	3296–74	Nut – Flange, Nylon	6 3 2
93–4067	Cover – Wheel	4 9 2	32112–11	Nut – Push	1 22 1
93–4068	Gear	4 11 2	32144–73	Screw – Hex Washer Hd.	2 6 3
93–4070	Spring – L.H.	4 20 1	32144–97	Screw	5 3 7
93–4071	Spring – R.H.	4 * 1	32144–98	Screw	5 17 4
93–4072	Gear	4 21 2	32144–99	Screw	5 6 2
93–4073	Gearbox Assembly	4 37 1	32144–102	Screw – Engine	2 8 3
93–4077	Axle – Rear, Left	4 8 1	32144–111	Screw – Phillips Head	1 3 6
93–4078	Axle – Rear, Right	4 33 1	32144–121	Screw – Mounting	2 2 2
93–4080	Pivot – Front	1 24 1			
93–4081	Wheel & Tire Assembly 7	1 28 2			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

[illegible]

[illegible]