 


TORO®

MODEL NO. 20803B-6900001 & UP
MODEL NO. 20808B-6900001 & UP

PARTS CATALOG

48cm RECYCLER® MOWER

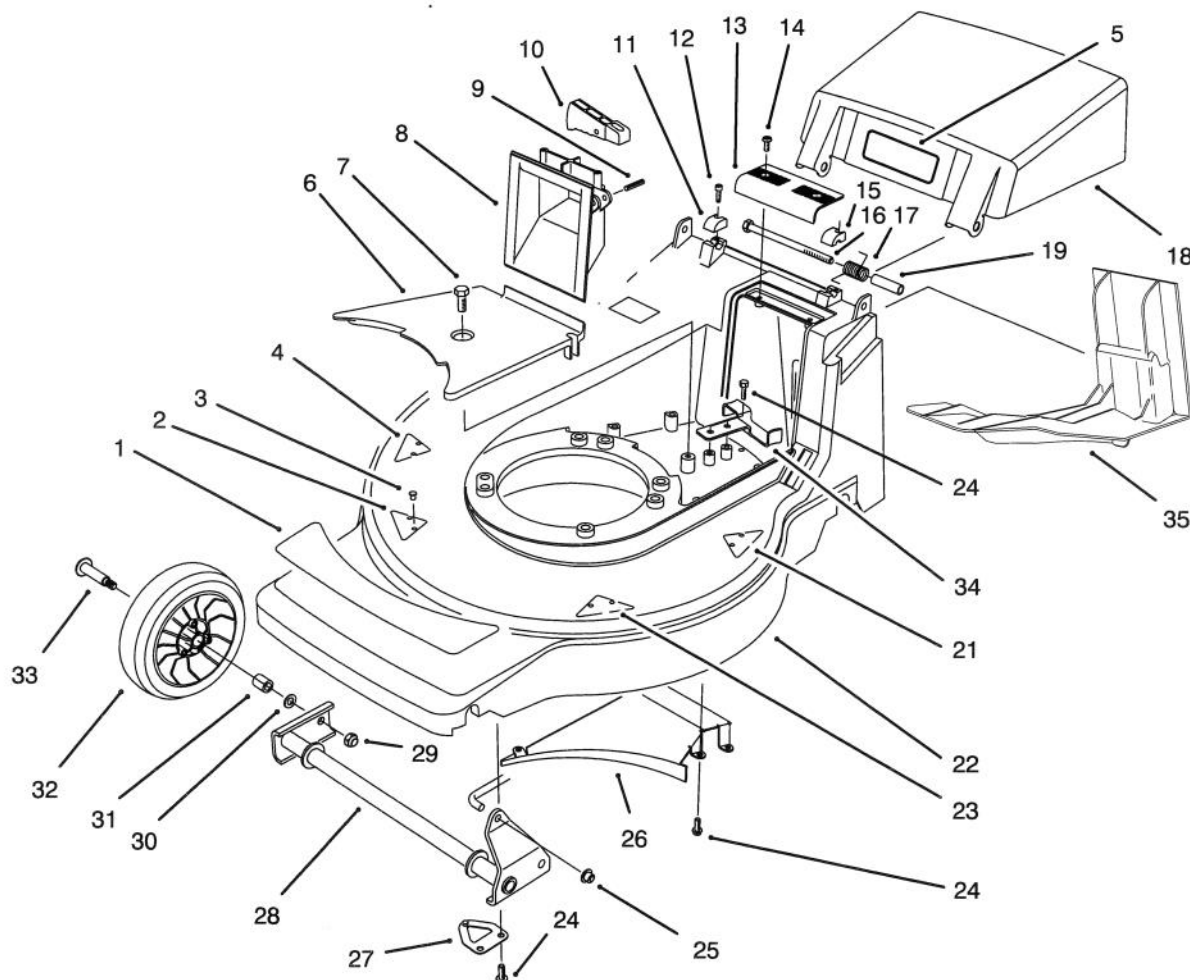

C-2272

HOUSING ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	92-7863	Decal - Deck	1
2	71-8920	Kicker - Front Right	1
3	32144-111	Screw - Phillips Hd.	8
4	71-9230	Kicker - Rear Right	1
†5	93-4105	Decal - Danger	1
6	71-7920	Cover - Belt	1
7	32144-70	Screw - Tapping	1
8	71-7870	Grip - Lower	1
9	3284-5	Pin - Groove	1
10	71-7930	Trigger - H.O.C.	1
11	71-7910	Cap - Bolt Hinge R.H.	1
12	65-5210	Screw - Thread Forming	2
13	71-7860	Grip - Upper	1
14	32144-97	Screw - Phillips Hd.	2
15	71-7900	Cap - Bolt Hinge L.H.	1
16	322-29	Screw - Hex Hd. Cap	2
†17	71-9840	Spring - Door	2
18	71-9800	Door - Discharge	1

Ref. No.	Part No.	Description	No. Used
19	71-8580	Spacer - Door	2
21	71-9250	Kicker - Rear Left	1
†22	16-5989	Housing - Deck (Incl. Ref. #2-4, 20, 21, & 23)	1
23	71-9440	Kicker - Front Left	1
24	32144-4	Screw - Tapping (Model No. 20803B Only)	8
24	32144-4	Screw - Tapping (Model No. 20808B Only)	10
25	32112-11	Nut - Push	1
26	71-7990	Ramp - Discharge	1
27	71-8830	Retainer - Shaft	2
†28	71-7820	Pivot - Front	1
29	3296-5	Nut - Lock	2
30	40-1940	Washer	2
31	27-6250	Bushing	2

† Obtain From Toro Europe N.V.

©The TORO Company - 1995
All Rights Reserved

 TPS

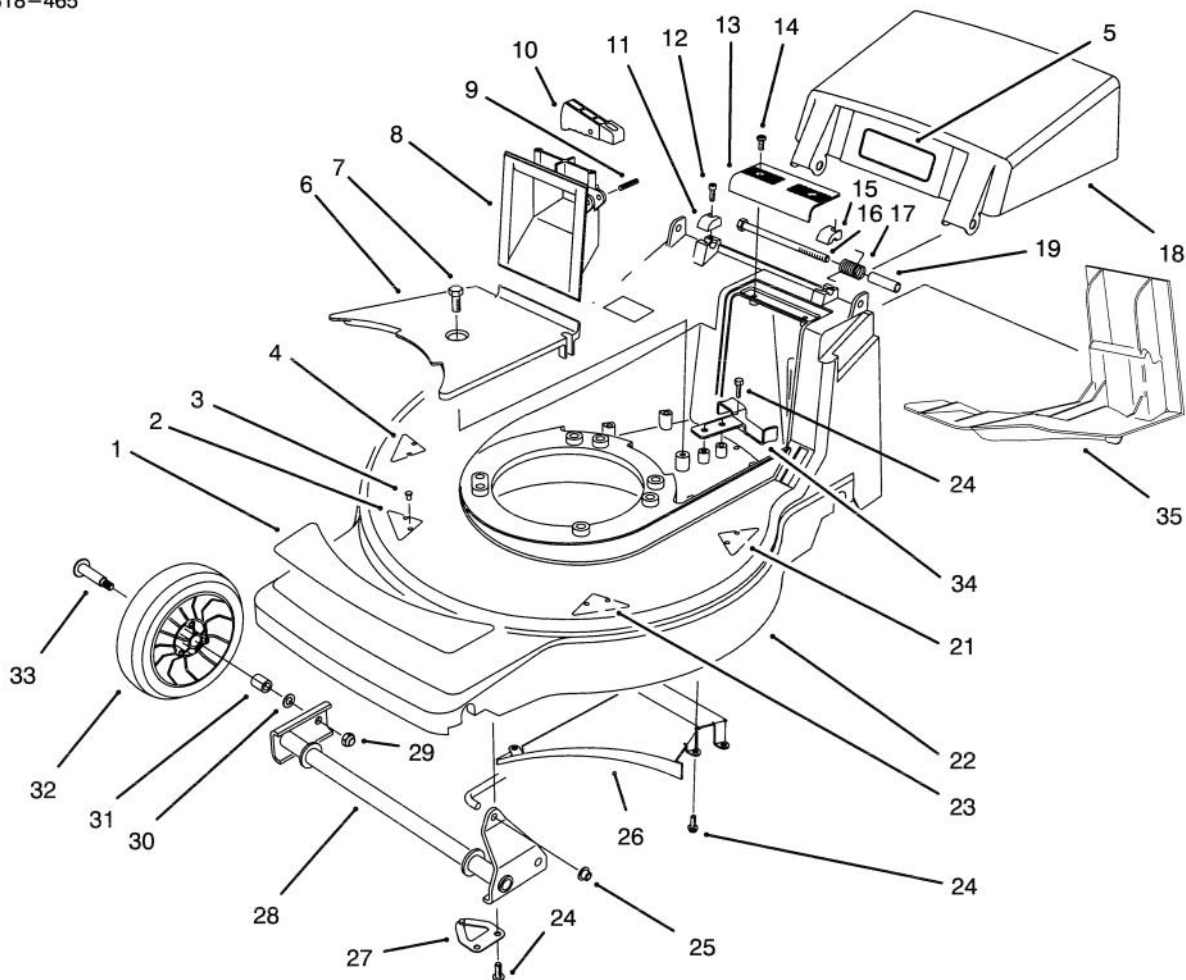


C-2272

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
32	46-1113	Wheel & Tire Assembly 7" (Incl. Ref. #31)	2
33	27-6230	Bolt - Wheel	2

Ref. No.	Part No.	Description	No. Used
34	71-7890	Guide - Belt Rear (Model No. 20808B Only)	1
35	71-9990	Plug - Recycler	1

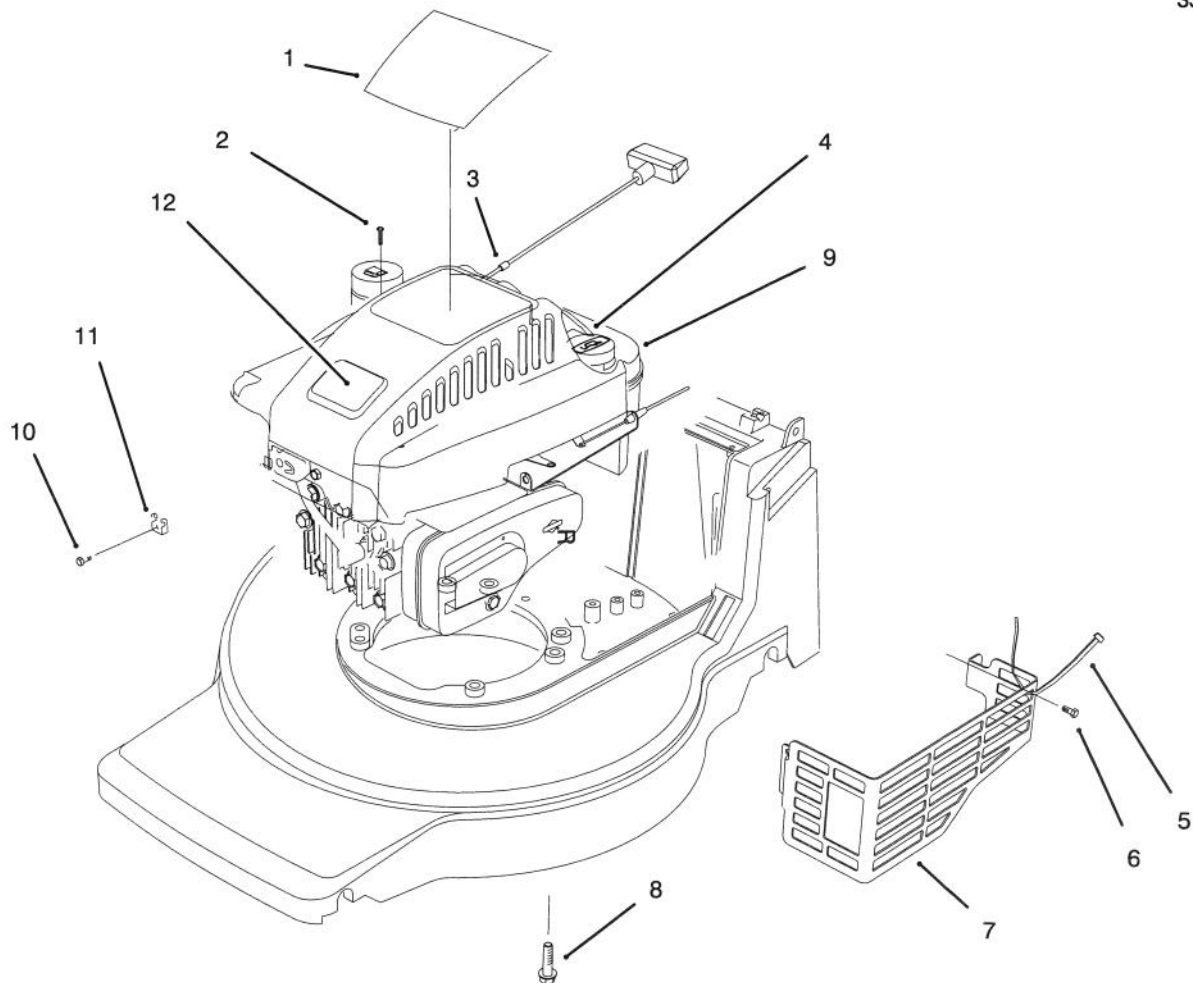 


C-2273

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4354	Decal - Engine	1
2	32144-121	Screw - Mounting	2
3	2210-316	Stop - Rope	1
4	93-0243	Shroud - QT Wedge	1
5	3290-378	Tie - Cable	1
6	32144-73	Screw - Hex Washer Hd. Thread Forming	3


Ref. No.	Part No.	Description	No. Used
7	82-8550	Shield - Muffler	1
8	32144-102	Screw - Engine	3
9		Engine	1
10	93-8470	Screw - Clamp	1
11	2210-249	Clamp - Casing	1
12	92-2289	Plate - Logo Toro	1

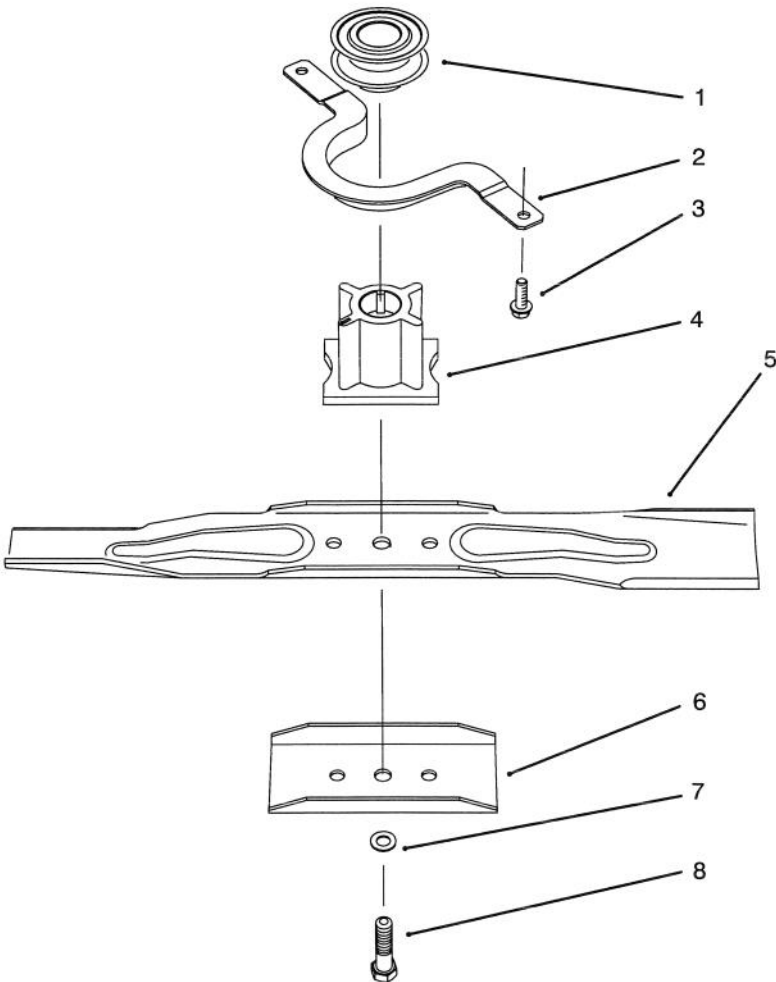 

C-1012

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-7550	Pulley - Driver (Model No. 20808B Only)	1	4	71-7940	Retainer - Blade	1
2	71-7960	Guide - Engine Belt (Model No. 20808B Only)	1	5	71-9260	Blade - 48cm Recycler	1
3	32144-4	Screw - Tapping (Model No. 20808B Only)	2	6	80-0510	Stiffener - Blade	1
				7	3253-22	Washer - Lock	1
				8	26-0672	Bolt - Blade	1

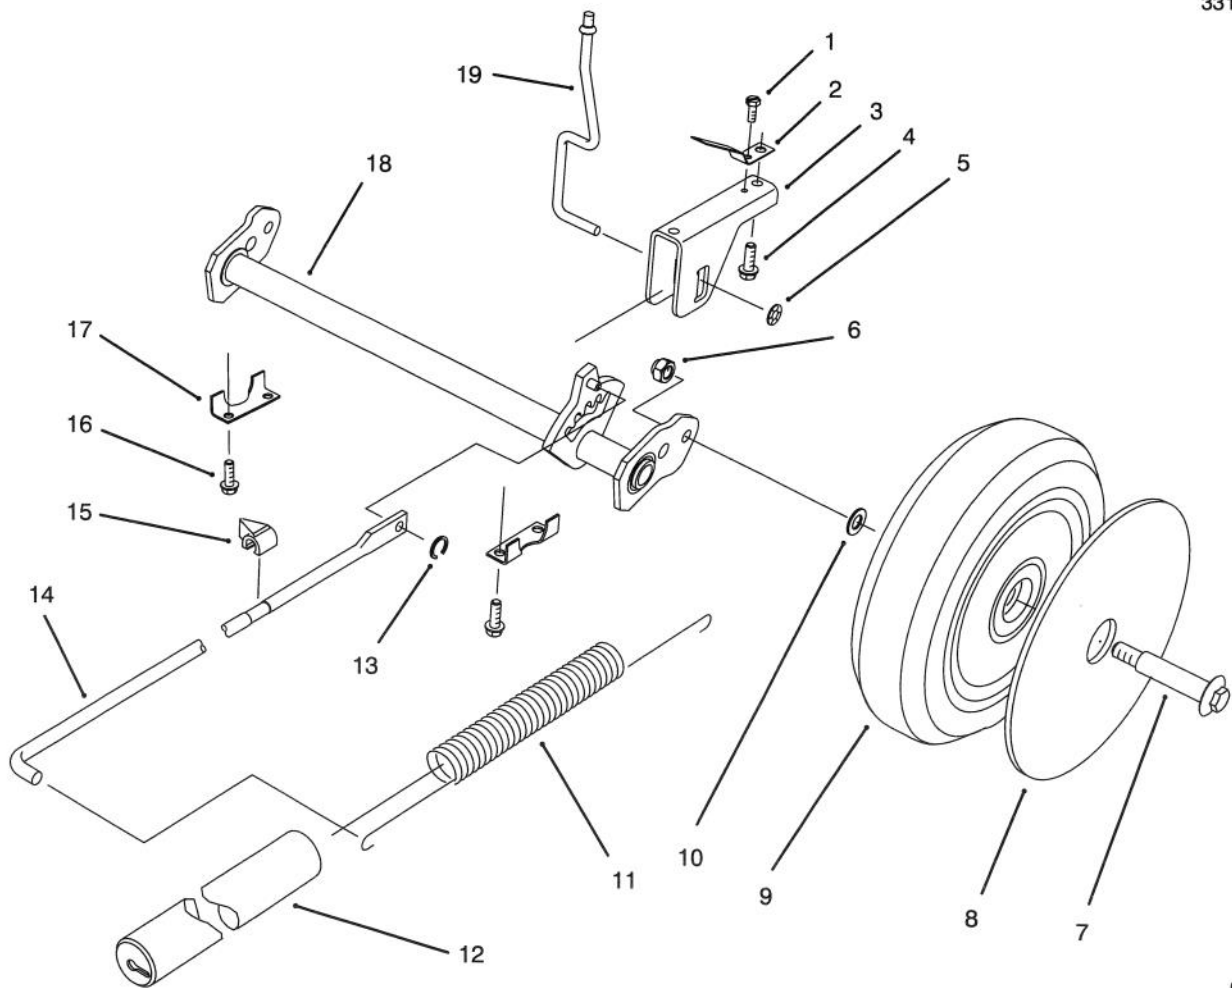 


C-2006

REAR AXLE ASSEMBLY (Model No. 20803B Only)

Ref. No.	Part No.	Description	No. Used
1	32144-31	Screw - Tapping	1
2	71-8060	Spring - Trigger Ret.	2
3	71-8080	Saddle - H.O.C.	1
4	63-8590	Screw	2
5	32112-13	Nut - Push	1
6	3296-5	Nut - Lock	2
7	27-6230	Bolt - Wheel	2
8	92-7663	Cover - Wheel	1
9	14-9949	Wheel & Tire Assembly 8"	2
10	40-1940	Washer	2

Ref. No.	Part No.	Description	No. Used
11	71-7740	Spring - Counterbalance	1
12	71-8450	Cover - Spring	1
13	32151-93	Ring - Grip	1
14	71-7970	Rod - Link	1
15	71-7980	Indicator - H.O.C.	1
16	32144-4	Screw - Tapping	4
17	71-7770	Plate - Securing Rear	2
†18	71-7800	Arm - Pivot	1
19	71-7840	Rod - Trigger	1

 † Obtain From Toro Europe N.V.

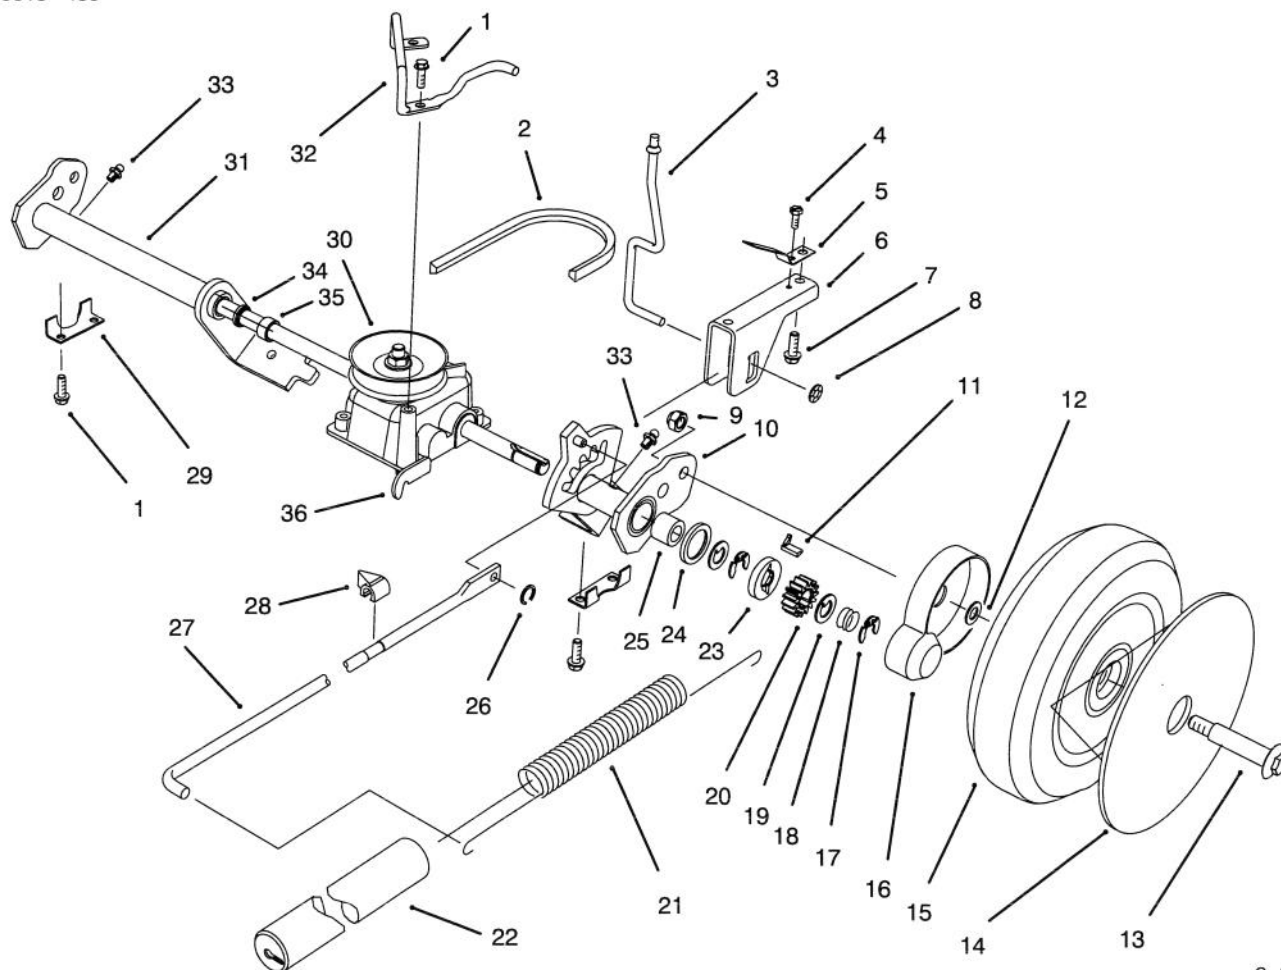

C-2013


REAR AXLE ASSEMBLY (Model No. 20808B Only)

Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Tapping	6
2	71-9450	V-Belt	1
3	71-7840	Rod - Trigger	1
4	32144-31	Screw - Tapping	1
5	71-8060	Spring - Trigger Ret.	2
6	71-8080	Saddle - H.O.C.	1
7	63-8590	Screw	2
8	32112-13	Nut - Push	1
9	3296-5	Nut - Lock	2
†10	92-9677	Arm - Pivot L.H. (Incl. Ref. #25, & 33-35)	1
11	66-6050	Key - Rocking L.H.	1
*	66-6040	Key - Rocking R.H.	1
12	74-1670	Spacer - Wheel	2
13	27-6230	Bolt - Wheel	2
14	92-7663	Cover - Wheel	1
15	14-9959	Wheel & Tire Assembly 8"	2
16	74-1660	Cover - Wheel	2
17	65-2720	Ring - Retaining	4
18	65-4720	Spring - Compression	2

Ref. No.	Part No.	Description	No. Used
19	65-4740	Washer - Thrust Keyed	4
20	65-4750	Gear - Pinion	2
21	71-7740	Spring - Counterbalance	1
22	71-8450	Cover - Spring	1
23	65-4760	Washer	2
24	65-4710	Ring - Friction	2
25	48-2060	Bearing - Roller	2
26	32151-93	Ring - Grip	1
27	71-7970	Rod - Link	1
28	71-7980	Indicator - H.O.C.	1
29	71-7770	Plate - Securing Rear	2
†30	71-9600	Gear Case Assembly	1
†31	92-9680	Arm - Pivot R.H. (Incl. Ref. #25, & 33-35)	1
†32	71-9850	Retainer - Belt	1
33	302-26	Fitting - Grease	2
34	47-6730	Seal - Oil	2
35	47-2890	Bushing	2
36	71-9630	Bracket - Traction	1

*Not Illustrated

 † Obtain From Toro Europe N.V.

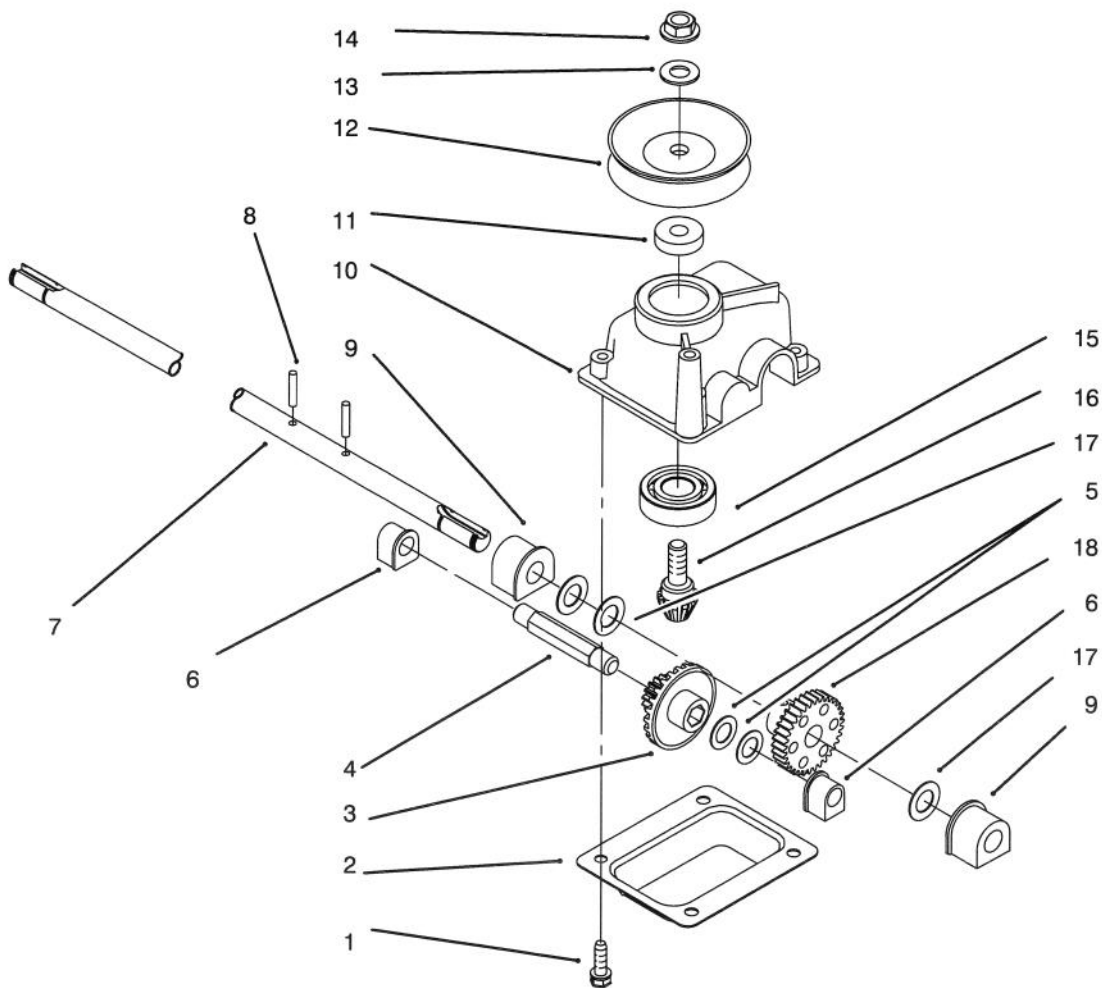

C-1292a


GEAR CASE ASSEMBLY (Model No. 20808B Only)

Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw - Taptite	4
2	614668	Cover - Gear Case	1
3	55-3760	Pinion - 15 Tooth	1
4	614696	Shaft - Intermediate	1
5	36-4791	Washer	2
6	60-8750	Bushing	2
†7	71-9620	Shaft - Output	1
8	32121-114	Pin - Groove	2
9	60-8850	Bushing - Output	2
10	614578	Cover - Gearcase	1

Ref. No.	Part No.	Description	No. Used
11	62-6660	Spacer	1
12	71-9610	Pulley - Half	2
13	3256-24	Washer	1
14	3296-5	Nut	1
15	38-7820	Bearing - Ball	1
16	60-8890	Gear - Bevel Pinion	1
17	36-4780	Washer - Thrust	3
18	614596	Gear 34 Tooth	1
†*	71-9600	Gear Case Ass'y Complete	1

*Not Illustrated

 † Obtain From Toro Europe N.V.

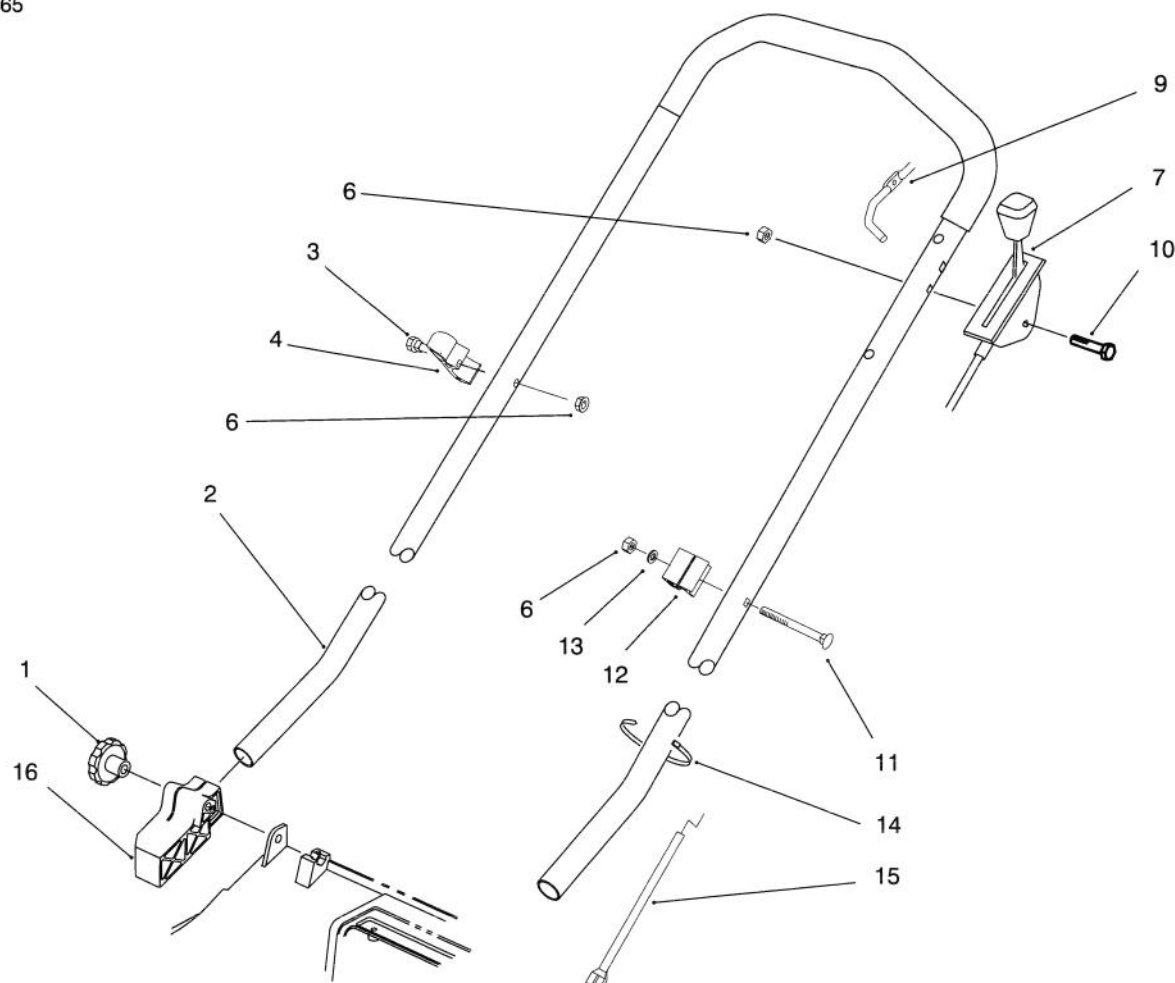

C-2475


HANDLE ASSEMBLY (Model No. 20803B Only)

Ref. No.	Part No.	Description	No. Used
1	19-4050	Knob	2
2	94-4375	Handle	1
3	321-52	Screw - Hex Hd. Cap	1
4	93-3772	Guide - Rope	1
6	3296-73	Nut - Lock	3
7	93-1118	Control - Throttle	1
9	94-4364	Bail - Brake	1
10	321-48	Screw HH - Handle	1

Ref. No.	Part No.	Description	No. Used
11	92-2270	Screw - Handle	1
12	46-6980	Support - Cable	1
13	3256-1	Washer - Flat	1
14	3290-378	Tie - Cable	1
15	93-1116	Cable - Brake	1
†16	71-8100	Mount - Handle R.H.	1
†*	71-8090	Mount - Handle L.H.	1

*Not Illustrated

 † Obtain From Toro Europe N.V.

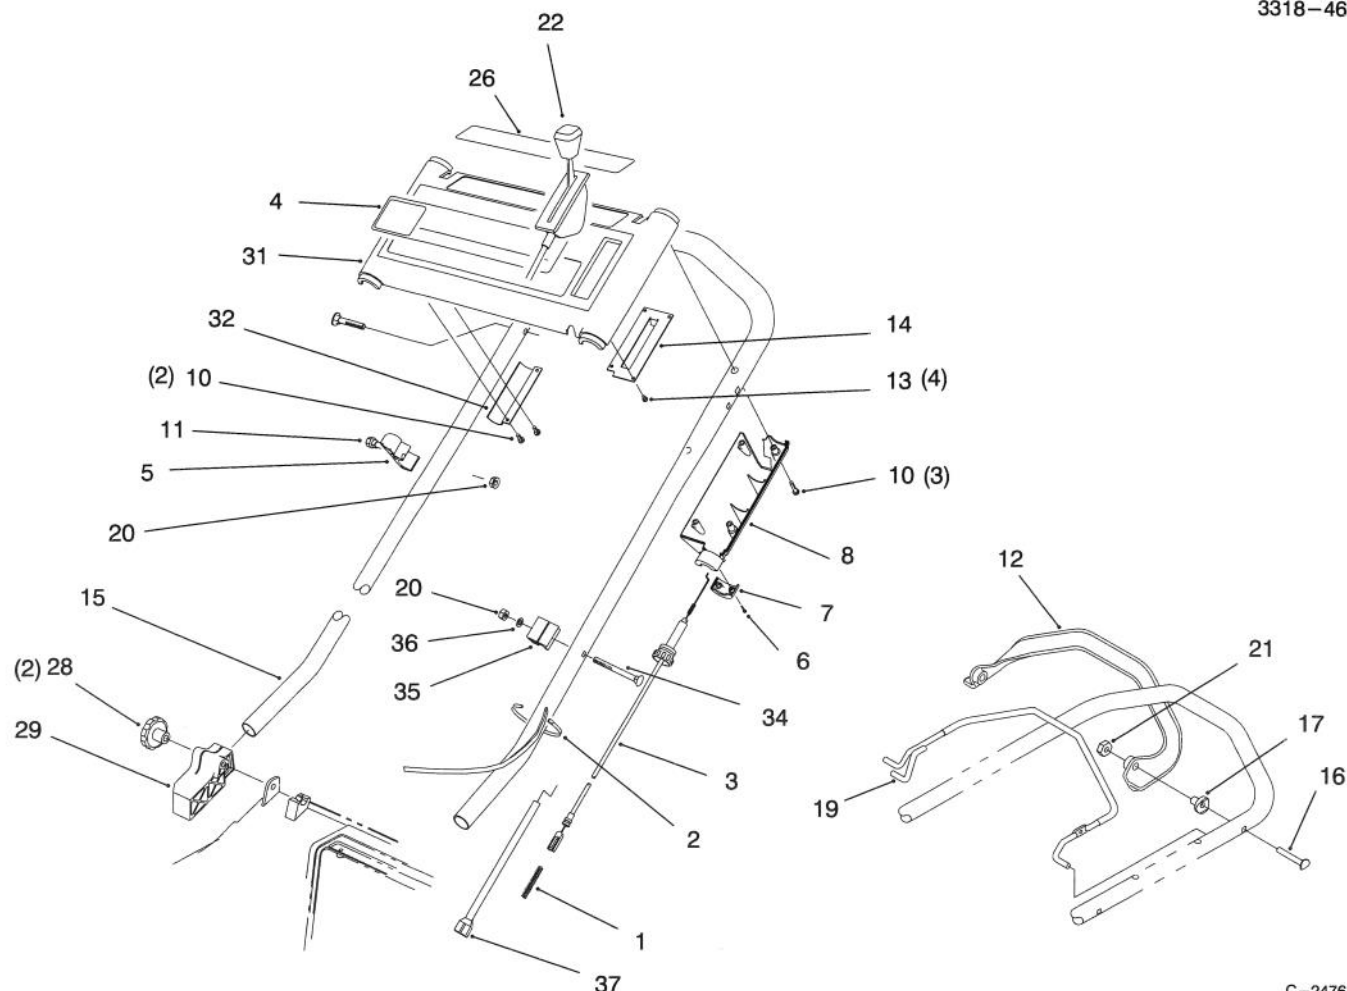

C-2476


HANDLE ASSEMBLY (Model No. 20808B Only)

Ref. No.	Part No.	Description	No. Used
1	71-8310	Spring - Compression	1
2	3290-378	Tie - Cable	1
3	94-6754	Cable - Traction	1
4	92-7865	Decal - Panel SP	1
†5	93-3772	Guide - Rope	1
6	32144-99	Screw - Phillips Pan Hd.	2
7	71-7630	Cap - Throttle Lower	1
8	93-0339	Cover - Throttle Lower	1
10	32144-97	Screw - Phillips Pan Hd.	5
11	321-52	Screw - Hex Hd. Cap	1
12	94-4365	Bail - Traction	1
13	32144-98	Screw - Phillips Pan Hd.	4
14	71-8040	Plate - Throttle	1
15	94-4367	Handle SP	1
16	17-9428	Screw	2
17	66-0330	Spacer - Support	2

Ref. No.	Part No.	Description	No. Used
19	94-4364	Bail - Brake	1
20	3296-73	Nut - Lock, Insert	2
21	3296-74	Nut - Flange, Nylon	2
22	93-1117	Control - Throttle	1
26	94-6026	Decal - Instruction	1
28	19-4050	Knob	2
†29	71-8100	Mount - Handle R.H.	1
†*	71-8090	Mount - Handle L.H.	1
31	17-4319	Panel - Control (Incl. Ref. #4,26)	1
32	71-8130	Bracket - Control	1
34	92-2270	Screw - Handle	1
35	46-6980	Support - Cable	1
36	3256-1	Washer - Flat	1
37	93-1116	Cable - Brake	1

*Not Illustrated

 † Obtain From Toro Europe N.V.

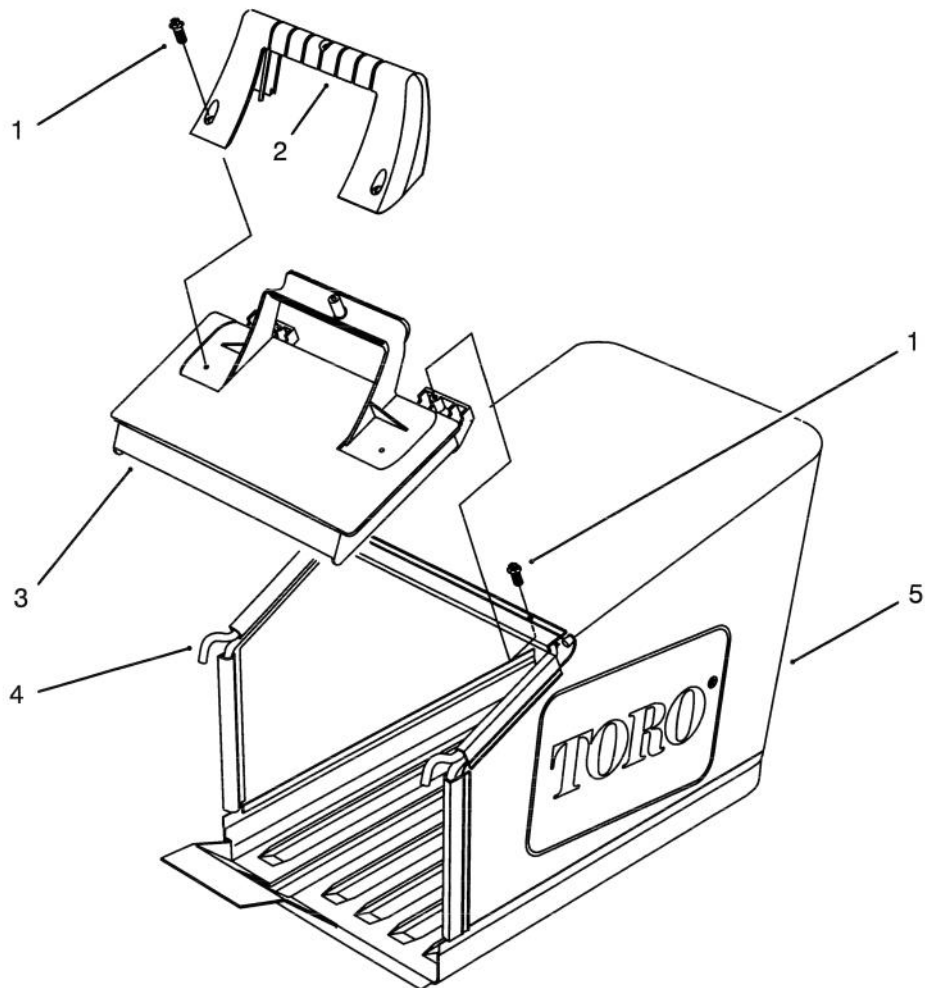


C-1509

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Thr'd Form	5
†2	71-9480	Handle - Door	1
†3	71-9470	Door - Bag	1

Ref. No.	Part No.	Description	No. Used
†4	71-9900	Frame - Bag	1
5	71-9460	Bag - Grass	1

 † Obtain From Toro Europe N.V.

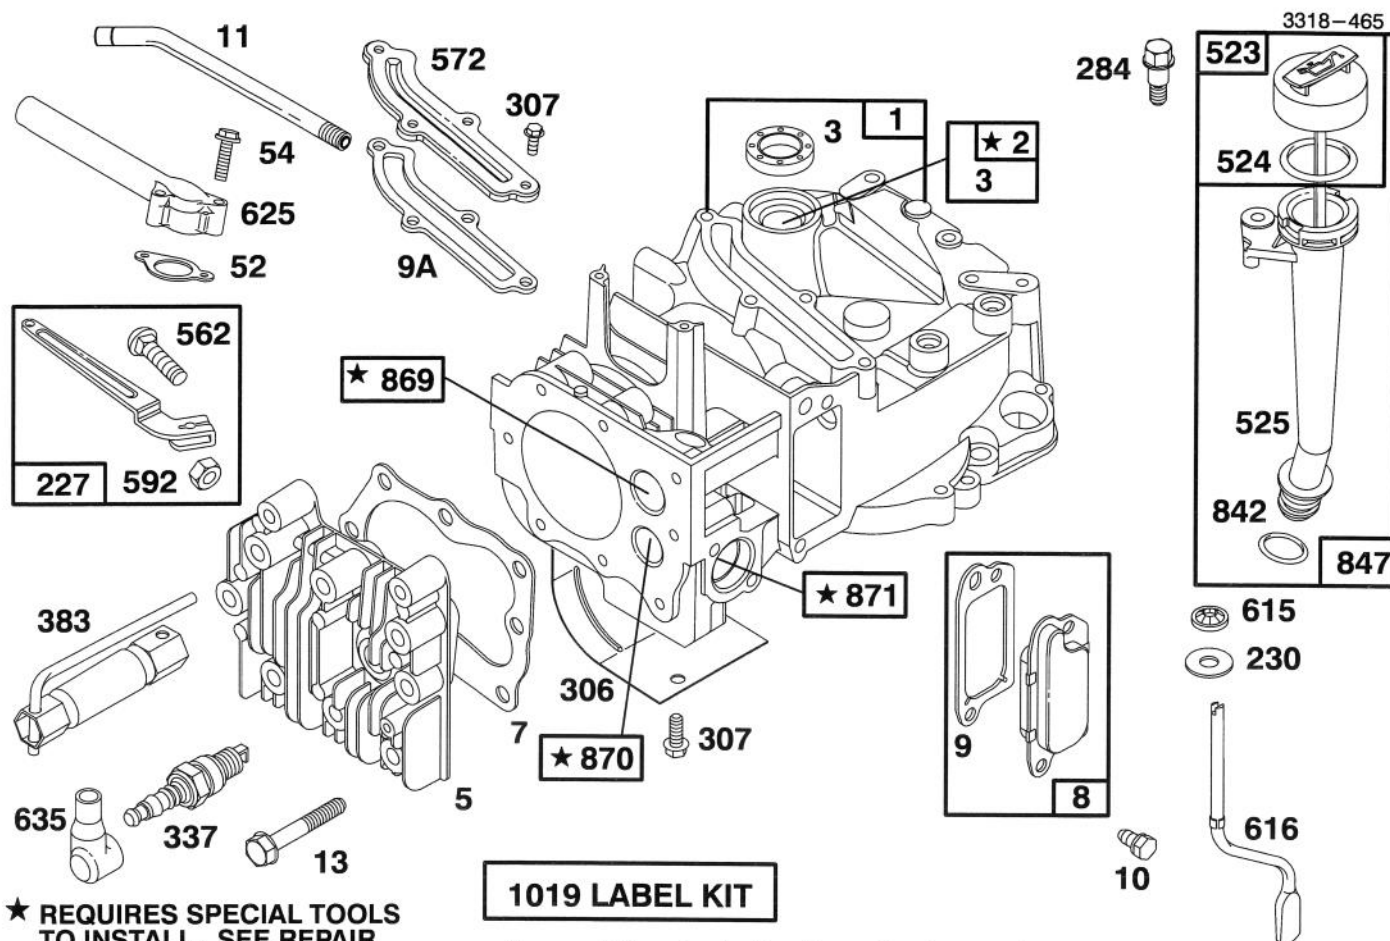


ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing - Cylinder	1
★3	299819	Seal - Oil	1
5	214349	Head - Cylinder	1
★7	272916	Gasket - Cylinder Head	1
8	495786	Breather - Valve Chamber	1
★9	272481	Gasket - Breather	1
★9A	272238	Gasket - Baffle Plate	1
10	94650	Screw - Breather Mtg.	1
11	231933	Tube - Breather	1
13	94547	Screw - Cylinder Head	1
★52	272199	Gasket - Intake Elbow	1
54	94526	Screw - Intake Elbow Mtg.	1
227	492349	Lever Assembly - Gov.	1
230	67072	Washer - Gov. Crank	1
284	94511	Screw - Hex. Head	1
306	224324	Shield - Cylinder	1
307	94515	Screw - Hex. Head	1
337	802592	Plug - Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench - Spark Plug	1
523	495264	Cap With Dipstick - Oil Filler	1
★524	280393	Seal - Filler Tube	1
525	495265	Tube - Oil Filler	1
562	94852	Bolt - Carriage	1
572	224328	Baffle - Cylinder	1
592	231082	Nut - Hex.	1
615	94474	Fastener	1
616	262578	Crank - Governor	1
625	497465	Tube - Fuel Intake	1
635	66538	Elbow - Spark Plug	1
★842	280966	Seal - O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat - Intake Valve	1
870	213513	Seat - Exhaust Valve	1
871	262001	Guide - Exhaust Valve	1
1019	494256	Note: 63709 Guide - Intake Valve Label Kit	1

 ★ Included in Gasket Set - Part No. 496316.

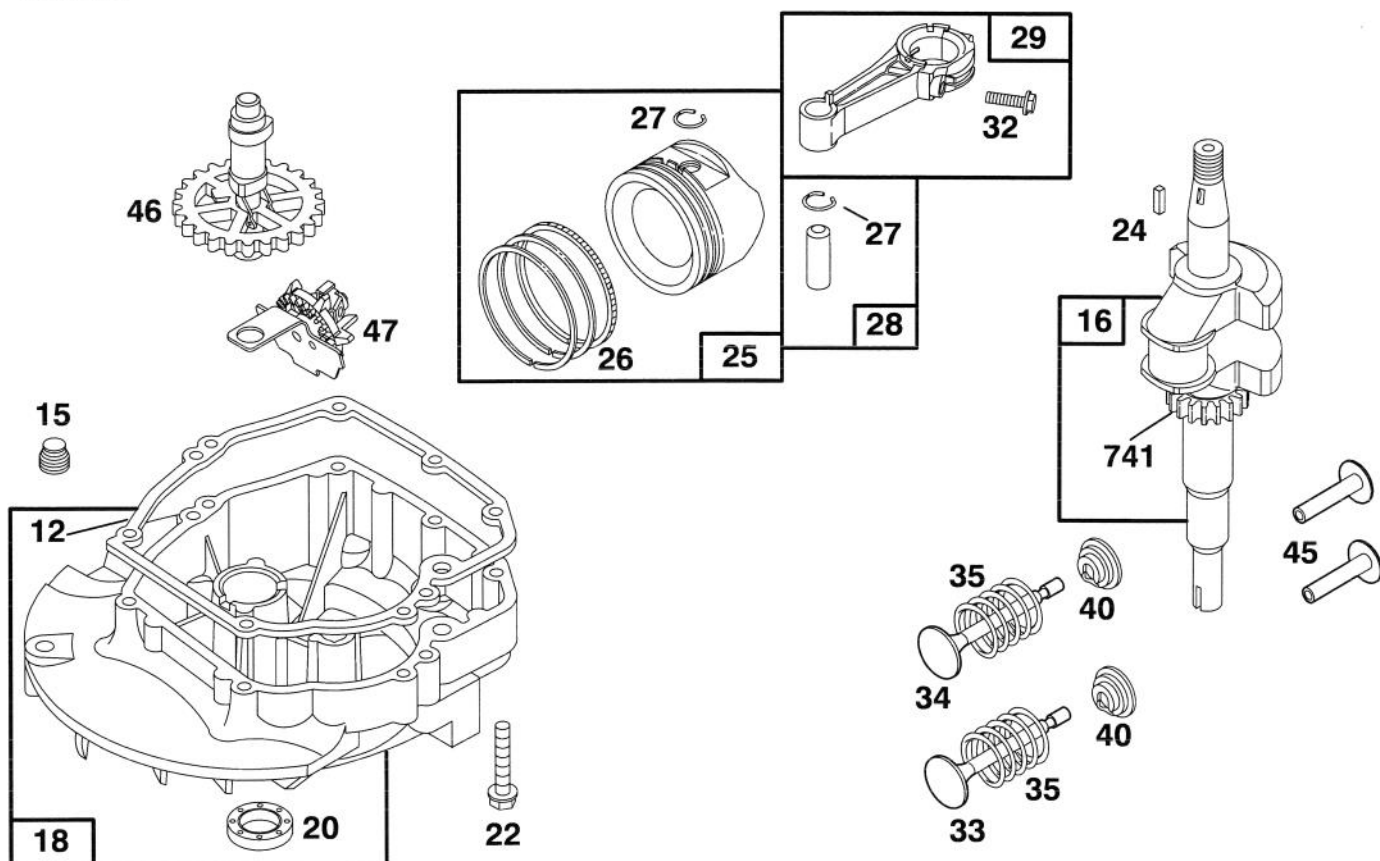

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket – Crankcase	1
15	94720	Plug – Oil Drain	1
16	494546	Crankshaft	
		Note: Order 94388 For Timing Gear Key.	1
18	493279	Sump – Engine	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex. Head	1
		Note: 94612 Screw – Hex. Head (One (1) Used in Hole Nearest Breather)	1
24	222698	Key – Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1


Ref. No.	Part No.	Description	No. Used
27	26026	Lock – Piston Pin	1
28	298909	Pin – Piston (Standard)	1
	298908	Pin – Piston (.005" O.S.)	1
29	490566	Rod Assembly – Connecting	1
		Note: For Conn. Rod With .020" Undersize Crankpin Bearing – Order No. 490743.	1
32	94699	Screw – Connecting Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	492830	Gear – Cam	1
47	493737	Slinger – Oil	1
741	262598	Gear – Timing	1

★ Included in Gasket Set – Part No. 496316.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01


Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
955	497315	Screw – Bowl Mtg. (Std.) Note: 496495 Screw – Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. – Carburetor	1

 13

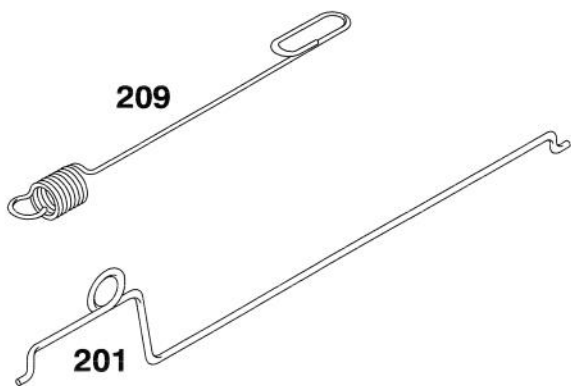258 

209

 201

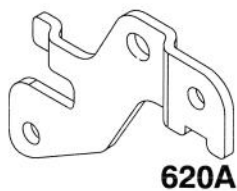


620A



188A

 258

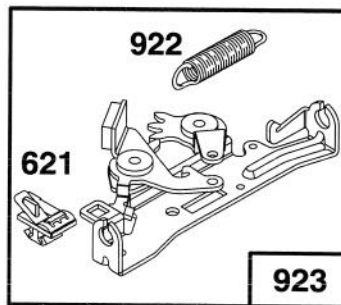


922

621

923

 188

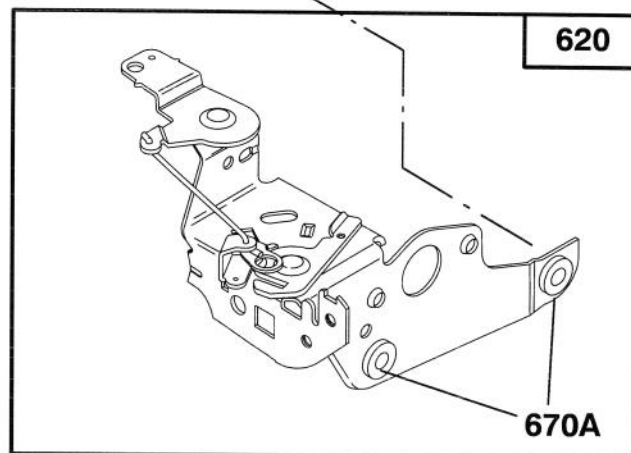

620


670A

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex. Head	1
188A	94602	Screw – Hex. Head	1
201	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw – Hex. Head	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
670A	493823	Spacer – Bracket	1
922	262640	Spring – Brake	1
923	493442	Brake Assembly	1

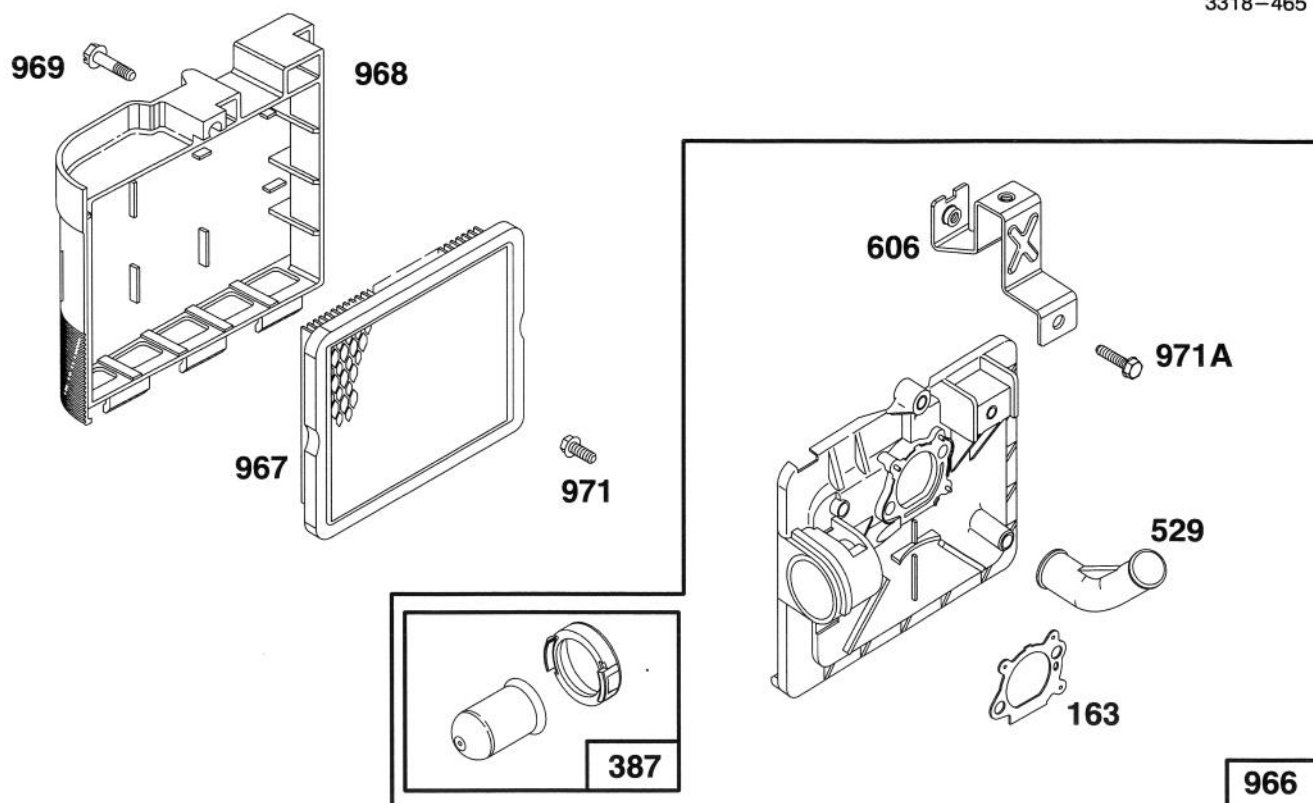 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket – Air Cleaner	1
387	496115	Primer–Carburetor	1
529	281299	Grommet – Breather	1
606	224815	Strap – Bracket	1
966	496116	Base – Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
967	491588	Filter – Air	1
968	281340	Cover – Air Cleaner	1
969	94120	Screw – Cover Mtg.	1
971	94121	Screw – Air Cleaner	1
971A	94749	Screw – Hex. Head	1

 ★ Included in Gasket Set—Part No. 496316.

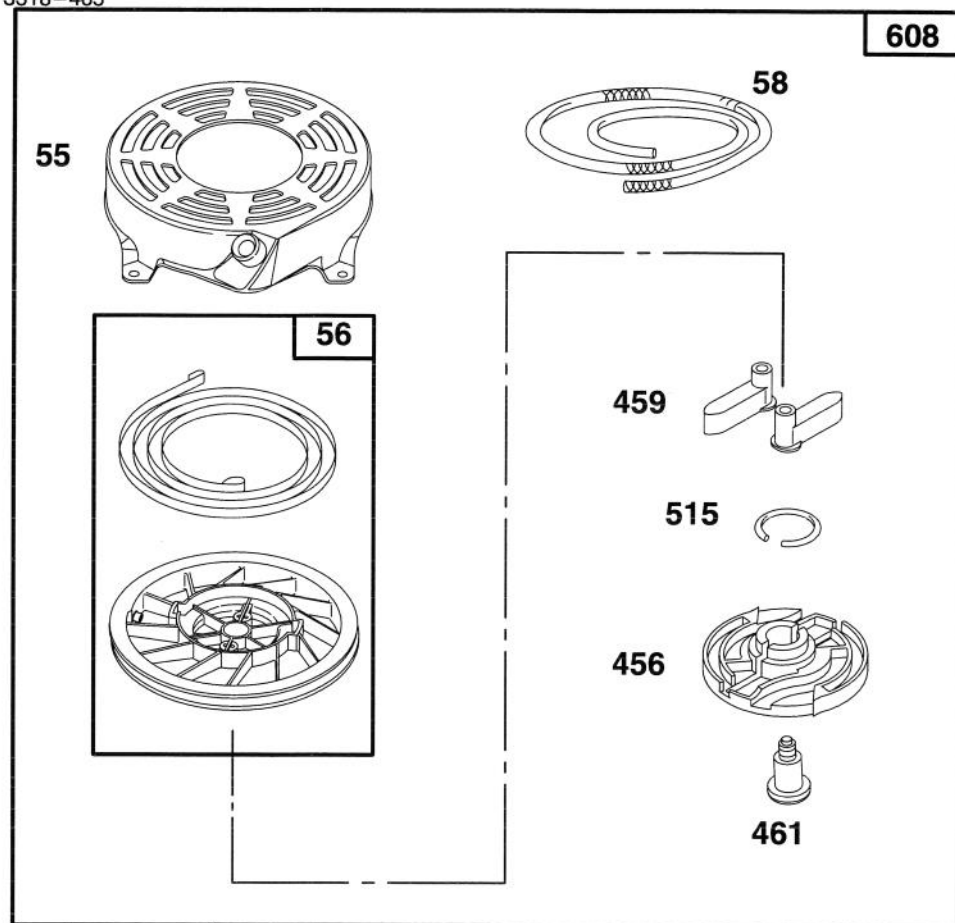


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1
56	498144	Pulley – Rewind Starter	1
58	280399	Rope – Rewind Starter (Cut to Required Length)	1
59	224467	Insert – Starter Grip	1
60	493926	Handle – Rewind Starter	1
456	281503	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	281505	Pawl – Starter	1
461	94943	Pin – Starter	1
515	263073	Spring – Torsion	1
608	497680	Starter Assy. – Rewind	1
		Includes:	
		94128 Screw – Hex Hd.	1
		92987 Nut – Hex.	1




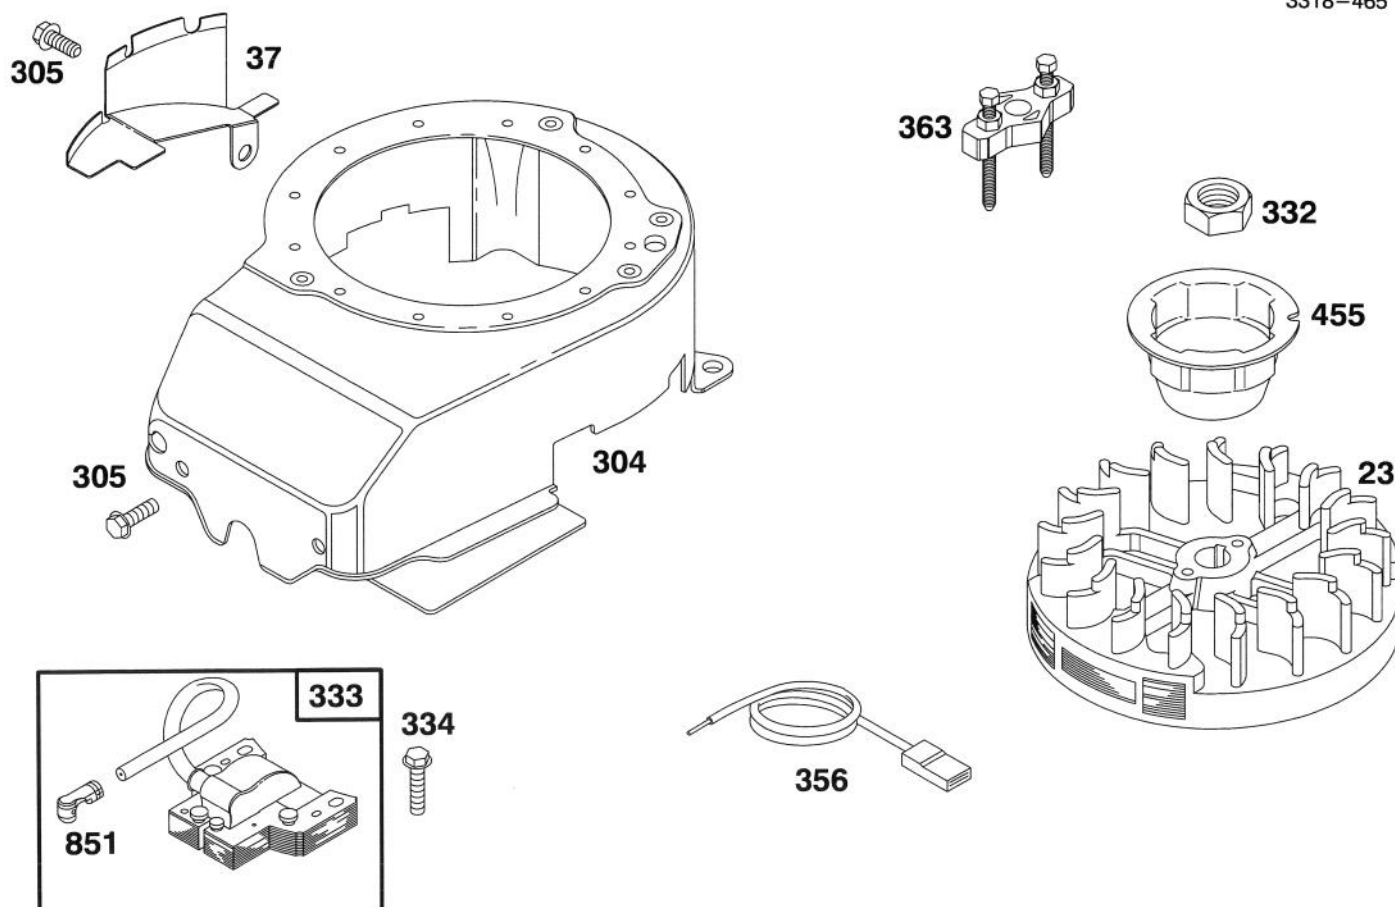 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard - Flywheel	1
304	493293	Housing - Blower	1
305	94744	Screw - Sem	1
332	92284	Nut - Flywheel	1
333	802574	Armature - Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw - Sem	1
356	398808	Wire - Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup - Starter	1
851	493880	Terminal - Ignition Cable	1

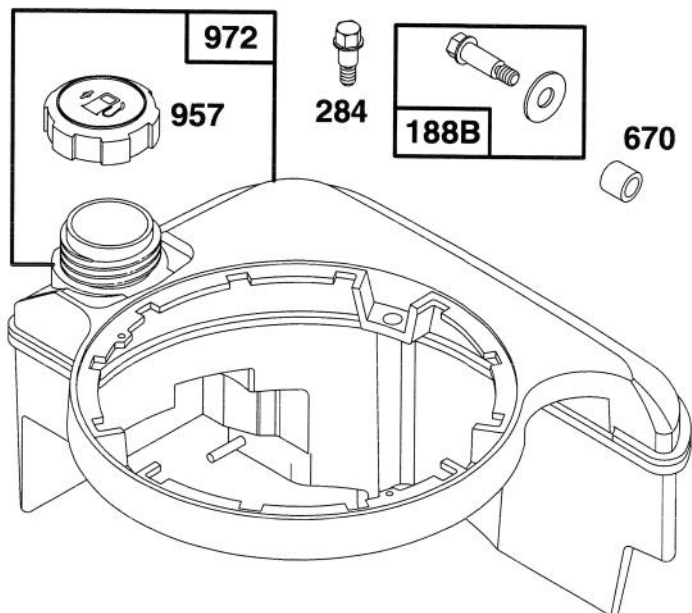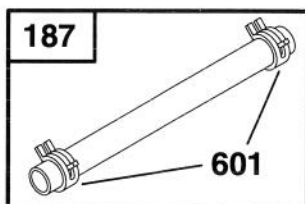  
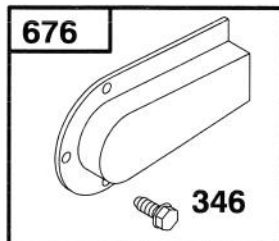 
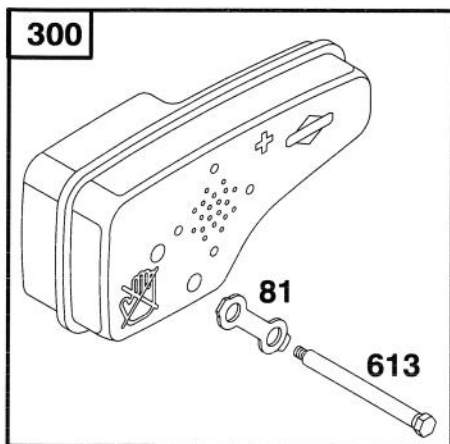 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188	398540	Screw – Tank Mounting	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93053	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Shoulder	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
*883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

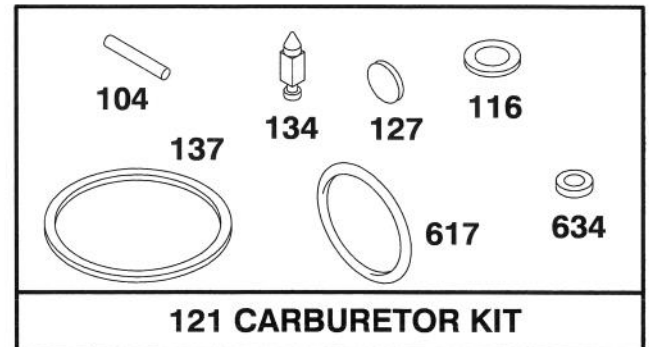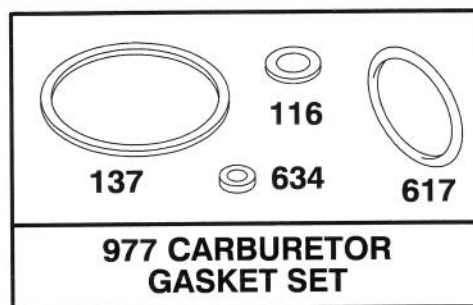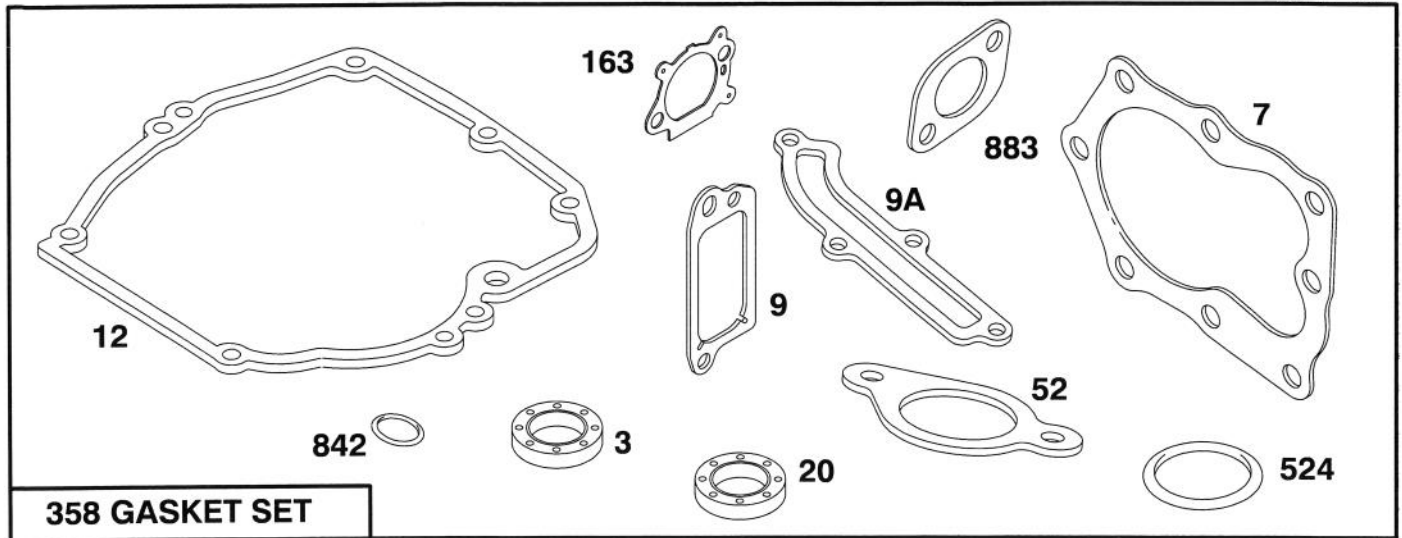   

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272916	Gasket – Cylinder Hd.	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
◆◆116		Gasket – Sealing (Sold in Kit Only)	1
121	493762	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
◆◆137		Gasket – Bowl (Sold in Kit Only)	1
★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
◆◆617	270344	Seal – Fuel Intake Tube	1
◆◆634		Washer – Shaft (Sold in Kit Only)	1
★842	280966	Seal – O-Ring	1
★883	272253	Gasket – Exhaust	1
977	490937	Gasket Set – Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 496316.

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
614578	Cover - Gearcase	7 10 1	71-8080	Saddle - H.O.C.	6 6 1
614596	Gear 34 Tooth	7 18 1	71-8090	Mount - Handle L.H.	8 * 1
614668	Cover - Gear Case	7 2 1	71-8090	Mount - Handle L.H.	9 * 1
614696	Shaft - Intermediate	7 4 1	71-8100	Mount - Handle R.H.	8 16 1
14-9949	Wheel & Tire Assembly 8	5 9 2	71-8100	Mount - Handle R.H.	9 29 1
14-9959	Wheel & Tire Assembly 8	6 15 2	71-8130	Bracket - Control	9 32 1
16-5989	Housing - Deck	1 22 1	71-8310	Spring - Compression	9 1 1
17-4319	Panel - Control	9 31 1	71-8450	Cover - Spring	5 12 1
17-9428	Screw	9 16 2	71-8450	Cover - Spring	6 22 1
19-4050	Knob	8 1 2	71-8580	Spacer - Door	1 19 2
19-4050	Knob	9 28 2	71-8830	Retainer - Shaft	1 27 2
26-0672	Bolt - Blade	4 8 1	71-8920	Kicker - Front Right	1 2 1
27-6230	Bolt - Wheel	5 7 2	71-9230	Kicker - Rear Right	1 4 1
27-6230	Bolt - Wheel	6 13 2	71-9250	Kicker - Rear Left	1 21 1
27-6230	Bolt - Wheel	2 33 2	71-9260	Blade - 48cm Recycler	4 5 1
36-4780	Washer - Thrust	7 17 3	71-9440	Kicker - Front Left	1 23 1
36-4791	Washer	7 5 2	71-9450	V-Belt	6 2 1
38-7820	Bearing - Ball	7 15 1	71-9460	Bag - Grass	11 5 1
40-1940	Washer	5 10 2	71-9470	Door - Bag	11 3 1
40-1940	Washer	1 30 2	71-9480	Handle - Door	11 2 1
46-1113	Wheel & Tire Assembly 7	2 32 2	71-9600	Gear Case Ass'y Complete	7 * 1
46-6980	Support - Cable	8 12 1	71-9600	Gear Case Assembly	6 30 1
46-6980	Support - Cable	9 35 1	71-9610	Pulley - Half	7 12 2
47-2890	Bushing	6 35 2	71-9620	Shaft - Output	7 7 1
47-6730	Seal - Oil	6 34 2	71-9630	Bracket - Traction	6 36 1
48-2060	Bearing - Roller	6 25 2	71-9800	Door - Discharge	1 18 1
49-2040	Screw - Tapitite	7 1 4	71-9840	Spring - Door	1 17 2
55-3760	Pinion - 15 Tooth	7 3 1	71-9850	Retainer - Belt	6 32 1
60-8750	Bushing	7 6 2	71-9900	Frame - Bag	11 4 1
60-8850	Bushing - Output	7 9 2	71-9990	Plug - Recycler	2 35 1
60-8890	Gear - Bevel Pinion	7 16 1	74-1660	Cover - Wheel	6 16 2
62-6660	Spacer	7 11 1	74-1670	Spacer - Wheel	6 12 2
62-7550	Pulley - Driver	4 1 1	80-0510	Stiffener - Blade	4 6 1
63-8590	Screw	5 4 2	82-8550	Shield - Muffler	3 7 1
63-8590	Screw	6 7 2	92-2270	Screw - Handle	8 11 1
65-2720	Ring - Retaining	6 17 4	92-2270	Screw - Handle	9 34 1
65-4710	Ring - Friction	6 24 2	92-2289	Plate - Logo Toro	3 12 1
65-4720	Spring - Compression	6 18 2	92-7663	Cover - Wheel	5 8 1
65-4740	Washer - Thrust Keyed	6 19 4	92-7663	Cover - Wheel	6 14 1
65-4750	Gear - Pinion	6 20 2	92-7863	Decal - Deck	1 1 1
65-4760	Washer	6 23 2	92-7865	Decal - Panel SP	9 4 1
65-5210	Screw - Thread Forming	1 12 2	92-9677	Arm - Pivot L.H.	6 10 1
66-0330	Spacer - Support	9 17 2	92-9680	Arm - Pivot R.H.	6 31 1
66-6040	Key - Rocking R.H.	6 * 1	93-0243	Shroud - QT Wedge	3 4 1
66-6050	Key - Rocking L.H.	6 11 1	93-0339	Cover - Throttle Lower	9 8 1
71-7630	Cap - Throttle Lower	9 7 1	93-1116	Cable - Brake	8 15 1
71-7740	Spring - Counterbalance	5 11 1	93-1116	Cable - Brake	9 37 1
71-7740	Spring - Counterbalance	6 21 1	93-1117	Control - Throttle	9 22 1
71-7770	Plate - Securing Rear	5 17 2	93-1118	Control - Throttle	8 7 1
71-7770	Plate - Securing Rear	6 29 2	93-3772	Guide - Rope	9 5 1
71-7800	Arm - Pivot	5 18 1	93-3772	Guide - Rope	8 4 1
71-7820	Pivot - Front	1 28 1	93-4105	Decal - Danger	1 5 1
71-7840	Rod - Trigger	6 3 1	93-4354	Decal - Engine	3 1 1
71-7840	Rod - Trigger	5 19 1	93-8470	Screw - Clamp	3 10 1
71-7860	Grip - Upper	1 13 1	94-4364	Bail - Brake	8 9 1
71-7870	Grip - Lower	1 8 1	94-4364	Bail - Brake	9 19 1
71-7890	Guide - Belt Rear	2 34 1	94-4365	Bail - Traction	9 12 1
71-7900	Cap - Bolt Hinge L.H.	1 15 1	94-4367	Handle SP	9 15 1
71-7910	Cap - Bolt Hinge R.H.	1 11 1	94-4375	Handle	8 2 1
71-7920	Cover - Belt	1 6 1	94-6026	Decal - Instruction	9 26 1
71-7930	Trigger - H.O.C.	1 10 1	94-6754	Cable - Traction	9 3 1
71-7940	Retainer - Blade	4 4 1	2210-249	Clamp - Casing	3 11 1
71-7960	Guide - Engine Belt	4 2 1	2210-316	Stop - Rope	3 3 1
71-7970	Rod - Link	5 14 1	302-26	Fitting - Grease	6 33 2
71-7970	Rod - Link	6 27 1	321-48	Screw HH - Handle	8 10 1
71-7980	Indicator - H.O.C.	5 15 1	321-52	Screw - Hex Hd. Cap	8 3 1
71-7980	Indicator - H.O.C.	6 28 1	321-52	Screw - Hex Hd. Cap	9 11 1
71-7990	Ramp - Discharge	1 26 1	322-29	Screw - Hex Hd. Cap	1 16 2
71-8040	Plate - Throttle	9 14 1	3253-22	Washer - Lock	4 7 1
71-8060	Spring - Trigger Ret.	5 2 2	3256-1	Washer - Flat	8 13 1
71-8060	Spring - Trigger Ret.	6 5 2	3256-1	Washer - Flat	9 36 1
71-8080	Saddle - H.O.C.	5 3 1	3256-24	Washer	7 13 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3318-465

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3284-5	Pin - Groove	1 9 1	32144-4	Screw - Tapping	1 24 10
3290-378	Tie - Cable	9 2 1	32144-4	Screw - Tapping	1 24 8
3290-378	Tie - Cable	3 5 1	32144-31	Screw - Tapping	5 1 1
3290-378	Tie - Cable	8 14 1	32144-31	Screw - Tapping	6 4 1
3296-5	Nut	7 14 1	32144-70	Screw - Tapping	1 7 1
3296-5	Nut - Lock	5 6 2	32144-73	Screw - Hex Washer Hd.	3 6 3
3296-5	Nut - Lock	6 9 2	32144-97	Screw - Phillips Hd.	1 14 2
3296-5	Nut - Lock	1 29 2	32144-97	Screw - Phillips Pan Hd.	9 10 5
3296-73	Nut - Lock	8 6 3	32144-98	Screw - Phillips Pan Hd.	9 13 4
3296-73	Nut - Lock, Insert	9 20 2	32144-99	Screw - Phillips Pan Hd.	9 6 2
3296-74	Nut - Flange, Nylon	9 21 2	32144-102	Screw - Engine	3 8 3
32112-11	Nut - Push	1 25 1	32144-111	Screw - Phillips Hd.	1 3 8
32112-13	Nut - Push	5 5 1	32144-111	Screw - Thr'd Form	11 1 5
32112-13	Nut - Push	6 8 1	32144-121	Screw - Mounting	3 2 2
32121-114	Pin - Groove	7 8 2	32151-93	Ring - Grip	5 13 1
32144-4	Screw - Tapping	6 1 6	32151-93	Ring - Grip	6 26 1
32144-4	Screw - Tapping	4 3 2			
32144-4	Screw - Tapping	5 16 4			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

[illegible]

[illegible]