

LAWN-BOY®

WALK-BEHIND MOWER 21" GOLD SERIES

HAND PUSH

MODEL NO.10418-690001 & UP

SELF PROPELLED

MODEL NO.10517-690001 & UP

MODEL NO.10522-690001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN-BOY owners as quickly as possible, minor changes are incorporated into LAWN-BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN-BOY Distributor or his Authorized LAWN-BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the control panel. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.


NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Engine, Fuel Tank & Blade Assembly	1	Handle Assembly	6
Deck And Wheel Assembly (Model No. 10418)	2	Rear Catcher Assembly (Model No. 10522)	7
Deck And Wheel Assembly (Model No. 10517 & 10522)	3	Engine Assembly, Briggs & Stratton Model No. 128702-0624-01	8-16
Rear Wheel Drive Ass'y (Model No..10517 & 10522)	4	Lawn-Boy Part Number Index	17-18
Gear Case Assembly (Model No..10517 & 10522)	5		

Accessories

 Description	Model / Parts No.	Description	Model / Parts No.
Rear Bagging Kit (Model No. 10418 & 10517)	Model No. 89800	Leaf Shredder Kit	Model No. 89860
Side Bagging Kit	Model No. 89814	Leaf Bag	Model No. 89804

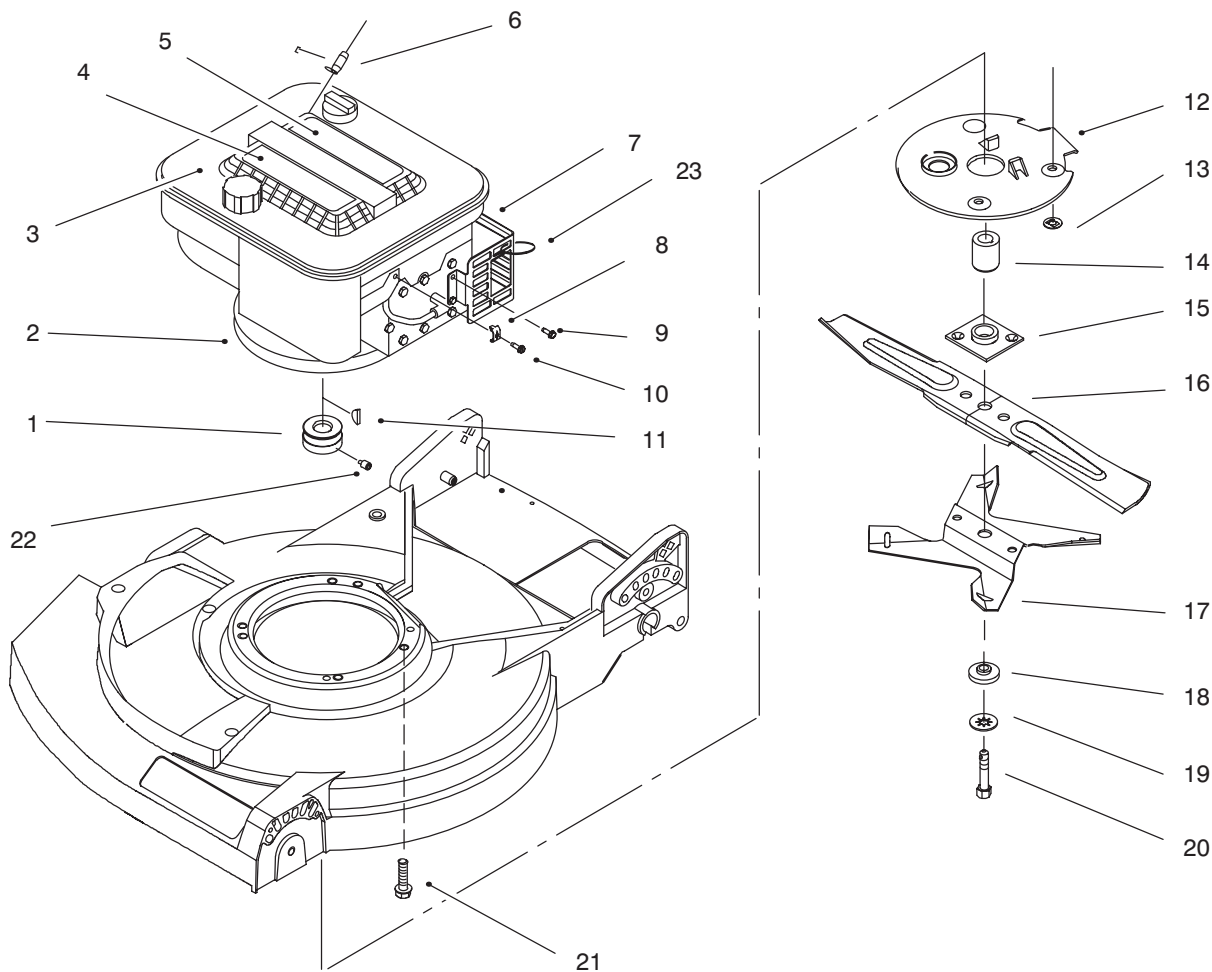


C-1329

ENGINE, FUEL TANK & BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-7653	Pulley - Engine (Model No. 10517 & 10522)	1	12	92-2944	Shield - Grass (Model No. 10517 & 10522)	1
2		Engine	1	13	92-4877	Nut - Push (Model No. 10517 & 10522)	3
3	92-4891	Grille - Engine	1	14	146044	Hub - Blade Driver	1
4	93-0291	Decal - Recoil (Model No. 10418)	1	15	146046	Plate - Blade Driver	1
5	92-7883	Decal - Recoil (Model No. 10522)	1	16	612543	Blade - 21"	1
5	92-4988	Decal - Recoil (Model No. 10418 & 10517)	1	17	92-1630	Fan - Mulching	1
6	92-1701	Stop - Rope	1	18	92-4857	Spacer	1
7	684659	Shield - Muffler	1	19	605339	Washer - Lock	1
8	2210-249	Clamp - Cable	1	20	92-4879	Bolt - Blade	1
9	32144-73	Screw - Hex. Hd.	3	21	92-1648	Screw	3
10	86-7990	Screw	1	22	700029	Screw - Set (Model No. 10517 & 10522)	1
11	551041	Key - Woodruff (Model No. 10418)	1	23	614249	Strap - Tie	1
11	551041	Key - Woodruff (Model No. 10517 & 10522)	2				

 *Not Illustrated

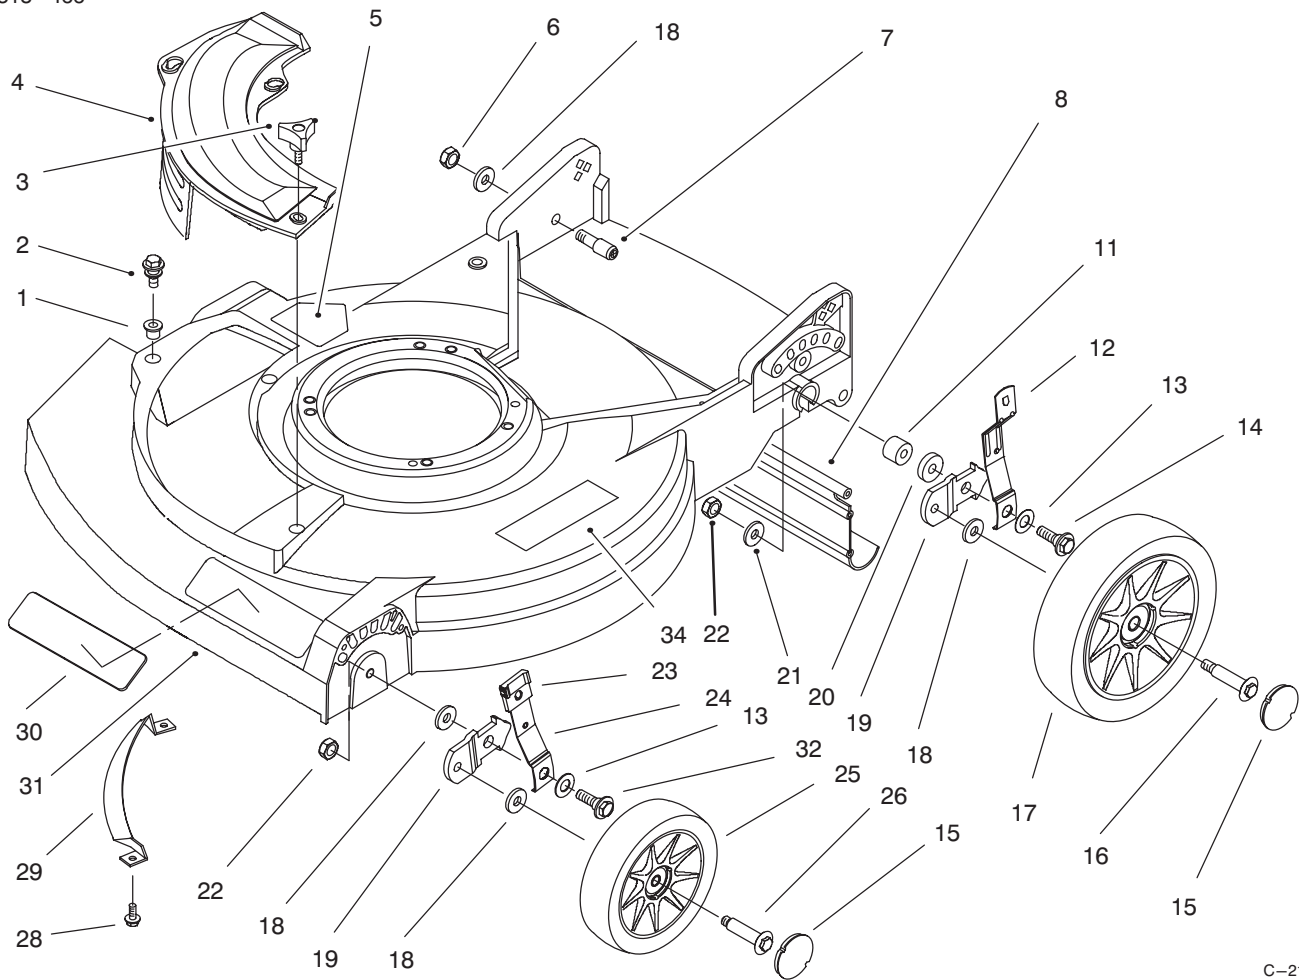


C-2173

DECK AND WHEEL ASSEMBLY (Model No. 10418)

Ref. No.	Part No.	Description	No. Used
1	94-1610	Grommet	3
2	614677	Screw - Thread Form.	2
3	614682	Knob	1
4	92-8630	Cover- Plate, Mulch	1
*	607560	Cover - Side Discharge	1
5	39-5770	Decal - Danger	1
6	610358	Nut	2
7	92-9673	Bolt - Shoulder	2
8	92-7736	Shield - Trailing	1
11	92-5791	Spacer	2
12	92-1005	Spring Arm Assembly	2
13	3290-413	Washer - Belleville	4
14	92-7674	Bolt - Shoulder	2
15	92-1604	Hub Cap	4
16	614650	Bolt - Wheel	2
17	684777	Wheel Assembly 8"	2

Ref. No.	Part No.	Description	No. Used
18	40-1940	Washer - Wheel Bolt	8
19	614637	Bracket - H. O. C.	4
20	29-8970	Washer	2
21	608834	Washer	2
22	3296-39	Nut - Lock	4
23	92-1008	Knob - Spring Arm	4
24	92-1006	Spring Arm Assembly	2
25	684776	Wheel - 6"	2
26	92-1099	Bolt - Wheel	2
28	46-6811	Screw	2
29	608175	Bar - Toe	1
30	93-0289	Decal - Deck	1
31	17-4449	Housing - 21" (Incl. Ref.#5, 30 & 34)	1
32	92-4856	Bolt - Shoulder	2
34	93-7250	Decal - Warning	1

 *Not Illustrated

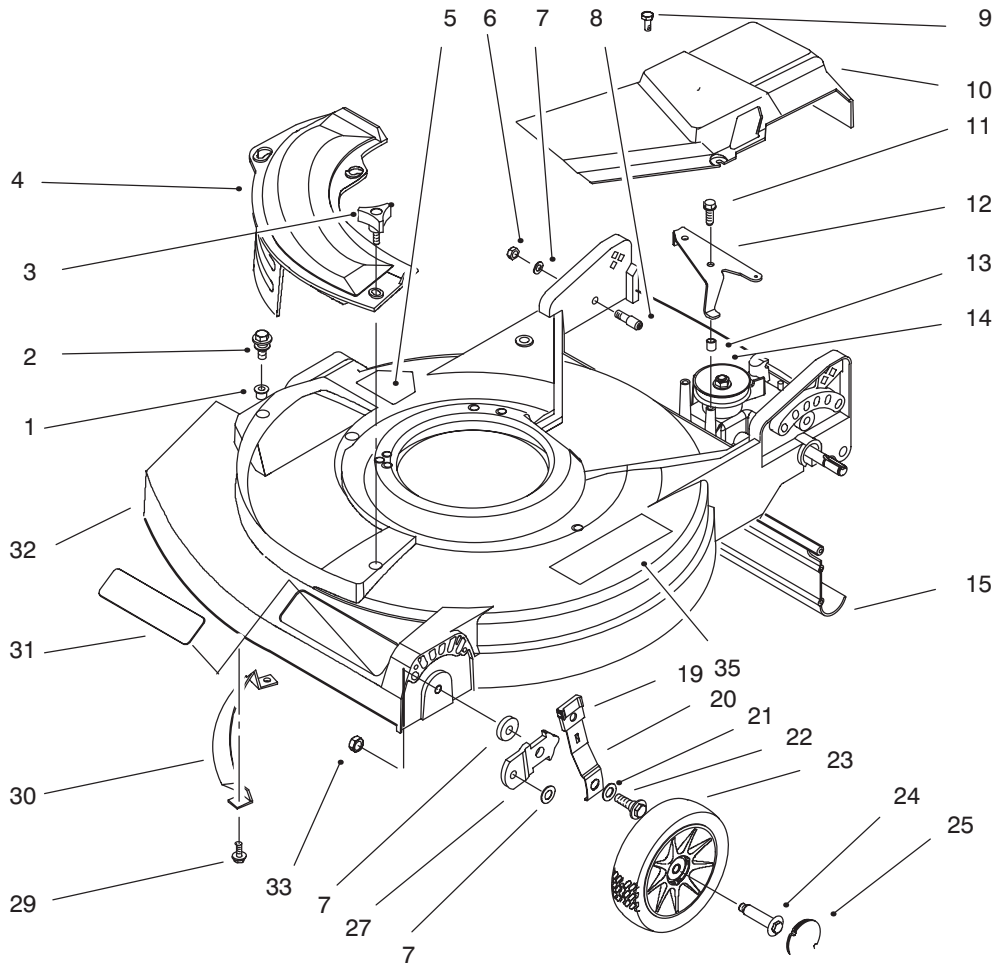


C-2174

DECK AND WHEEL ASSEMBLY (Model No. 10517 & 10522)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-1610	Grommet	3	19	92-1008	Knob - Spring Arm	4
2	614677	Screw - Thread Forming	2	20	92-1006	Spring Arm Assembly	2
3	614682	Knob	1	21	3290-413	Washer - Belleville	2
4	92-8630	Cover- Plate, Mulch	1	22	92-4856	Bolt - Shoulder	2
*	607560	Cover - Side Discharge	1	23	684776	Wheel - 6"	2
5	39-5770	Decal - Danger (English)	1	24	92-1099	Bolt - Wheel	2
6	610358	Nut	2	25	92-1604	Hub Cap	4
7	40-1940	Washer - Wheel Bolt	6	27	614637	Bracket - H. O. C.	2
8	92-9673	Bolt - Shoulder	2	29	46-6811	Screw	2
9	32144-112	Screw	2	30	608175	Bar - Toe	1
10	92-8852	Cover - Drive	1	31	93-0290	Decal - Deck	1
11	92-7748	Screw	2	32	16-5809	Housing - 21 (Incl. Ref. #5 & 35)	1
12	92-7699	Bracket - Actuator	1	33	3296-39	Nut - Lock	2
13	256-251	Bushing	2	35	93-7250	Decal - Warning	1
14	92-7869	Gear Case Assembly	1				
15	92-7736	Shield - Trailing	1				

 *Not Illustrated

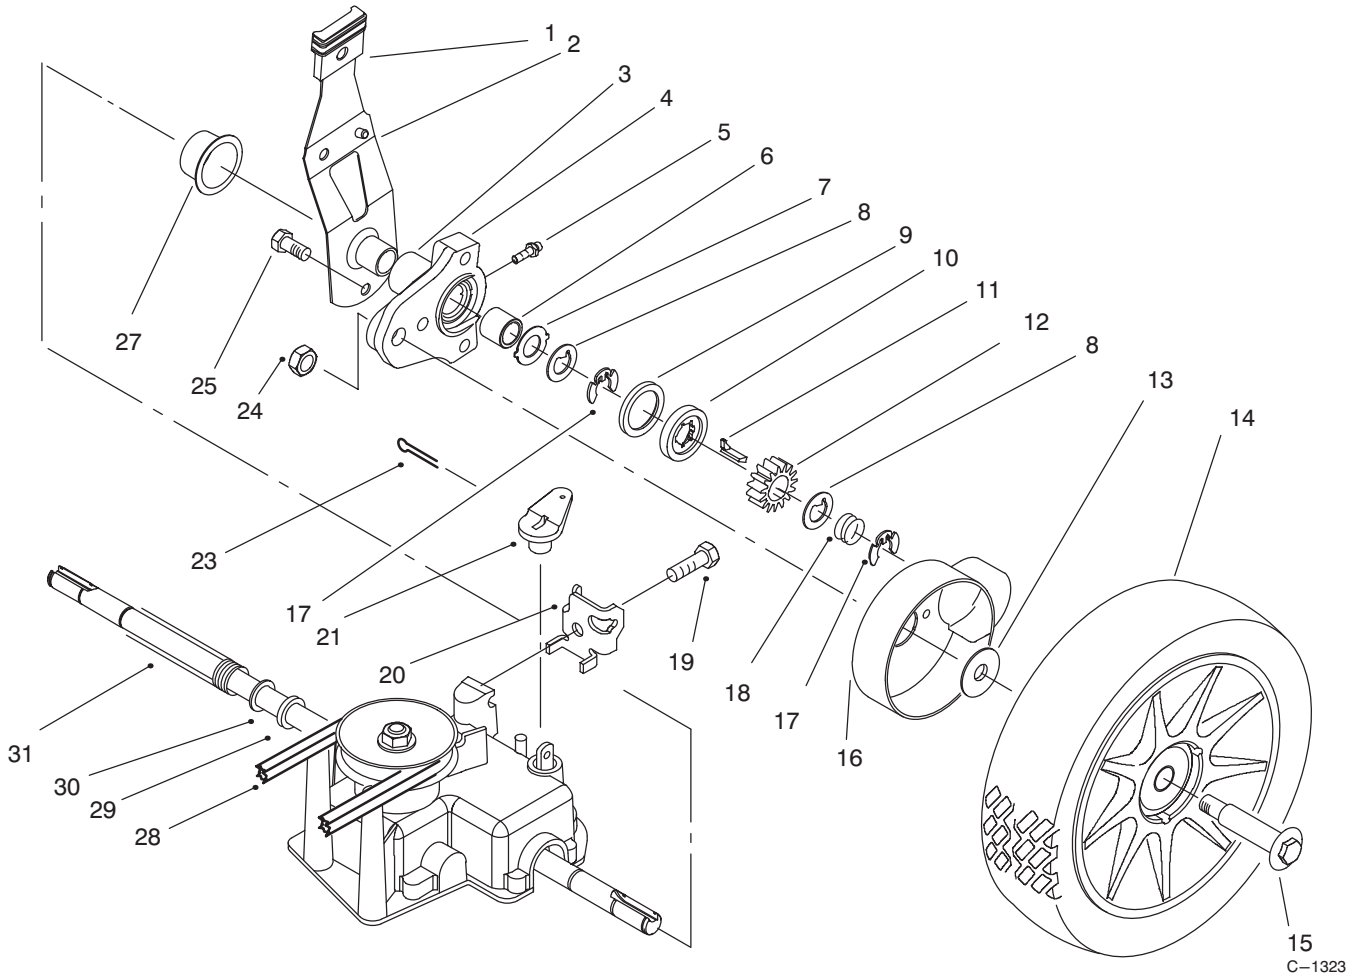


REAR WHEEL DRIVE ASS'Y (Model No. 10517 & 10522)

Ref. No.	Part No.	Description	No. Used
1	92-1008	Knob - Spring Arm (Ref.)	2
2	92-6540	Spring Arm Assy L. H.	2
*	92-6539	Spring Arm Assy R.H.	2
3	70-9760	Bushing	2
4	92-7746	Pivot Arm Assembly (Incl. Ref. #3, 5, & 6)	2
5	302-56	Fitting - Grease (Ref.)	2
6	47-2900	Bushing	2
7	65-4730	Washer - Thrust	2
8	65-4740	Washer - Thrust	4
9	65-4710	Ring - Friction	2
10	65-4760	Washer - Clutch	2
11	66-6050	Key - Rocking, L. H.	1
*	66-6040	Key - Rocking, R. H.	1
12	65-4750	Gear - Pinion	2
13	614426	Washer - Stepped	2

Ref. No.	Part No.	Description	No. Used
14	92-1042	Wheel - 8"	2
15	92-1057	Bolt - Wheel	2
16	94-1609	Cover - Wheel	2
17	65-2720	Ring - Retaining	4
18	65-4720	Spring - Compression	2
19	32144-70	Screw - Hex. Hd.	1
20	82-8780	Retainer - Cable	1
21	60-8821	Lever - Shift	1
23	3272-10	Pin - Cotter	1
24	610358	Nut	2
25	32144-85	Screw	2
27	92-6535	Cap - End	2
28	92-1043	"V"Belt	1
29	605255	Washer - Felt	1
30	303259	Washer - Flat	1
31	24-7920	Cover - Drive Shaft	1

 *Not Illustrated

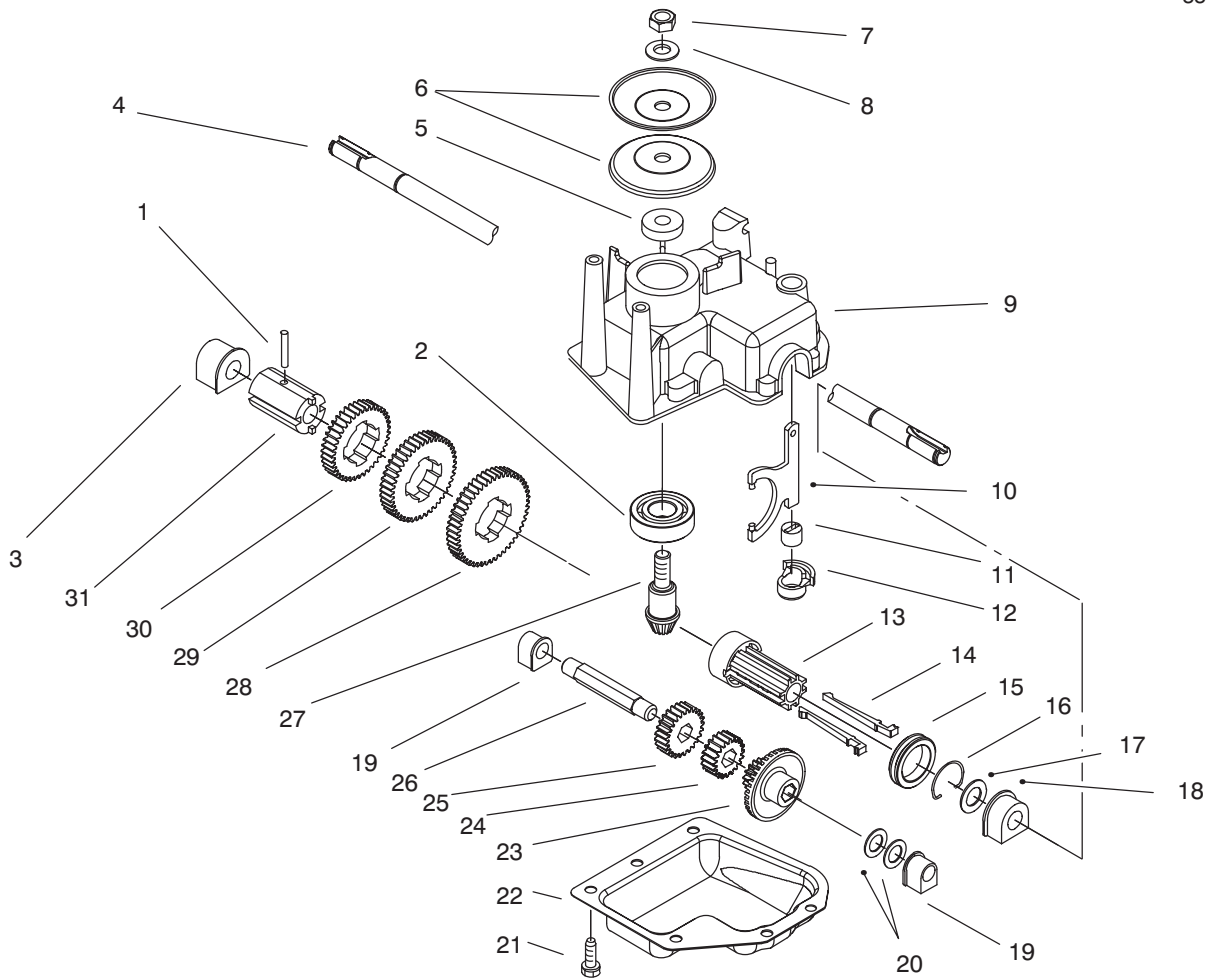


C-1322

GEAR CASE ASSEMBLY (Model No. 10517 & 10522)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3285-19	Pin - Groove	1	17	36-4780	Washer	1
2	38-7820	Bearing - Ball	1	18	60-8770	Bushing - Output	1
3	60-8850	Bushing - Output	1	19	60-8750	Bushing - Inter. Shaft	2
4	65-4770	Shaft - Output	1	20	36-4791	Washer - Thrust	2
5	92-5791	Spacer	1	21	49-2040	Screw	6
6	60-8840	Pulley - Half	2	22	60-8730	Gear Case Cover	1
7	3296-5	Nut	1	23	55-3760	Pinion - 15 Tooth	1
8	3256-24	Washer	1	24	55-3780	Pinion - 20 Tooth	1
9	60-8710	Gearcase - Upper	1	25	55-3800	Pinion - 25 Tooth	1
10	60-8870	Yoke - Shift	1	26	60-8800	Shaft - Intermediate	1
11	29-9570	Bushing - Yoke	1	27	92-5790	Pinion - Bevel	1
12	60-8810	Retainer - Shift Fork	1	28	55-3770	Gear - 49 Tooth	1
13	76-0780	Sleeve - Shift Key	1	29	55-3790	Gear - 44 Tooth	1
14	76-0760	Key - Shift	2	30	55-3810	Gear - 39 Tooth	1
15	76-0770	Collar - Shift	1	31	60-8790	Sleeve - Gear	1
16	65-5250	Clip - Spring	1	*	92-7869	Gear Case Complete	1

 *Not Illustrated

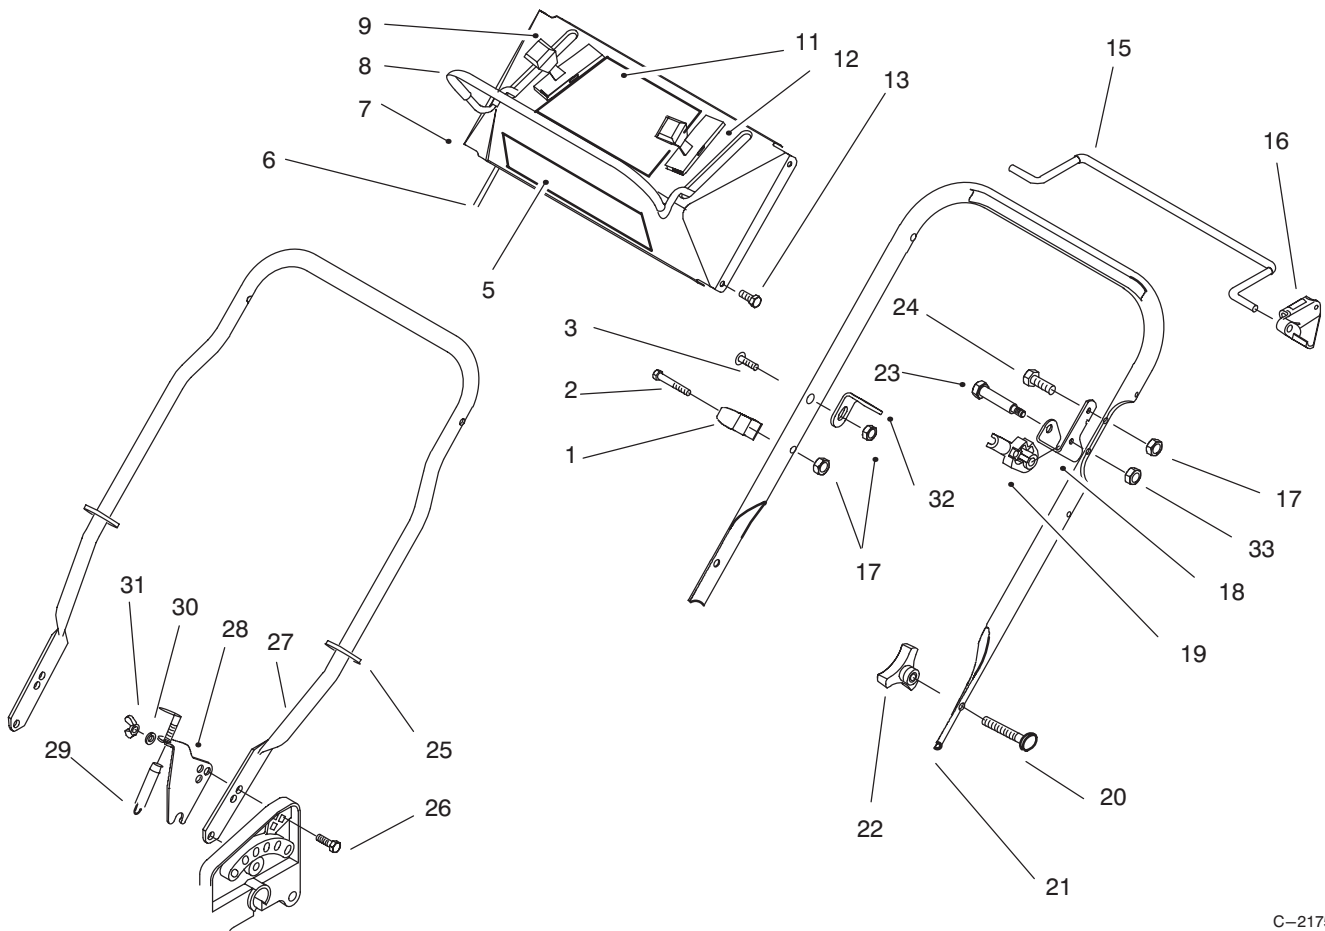


C-2175

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-7383	Guide - Rope	1
2	321-51	Bolt	1
3	92-2268	Screw	1
5	92-2918	Decal - Control Panel	1
6	92-1632	Cable - Brake	1
7	16-2039	Panel - Control (Incl. Ref. # 11) (Model No. 10418)	1
*	16-8929	Panel - Control (Incl. Ref. # 11) (Model No. 10517 & 10522)	1
8	92-1093	Bail - Brake	1
9	92-8926	Control Ground (Model No. 10517 & 10522)	1
11	93-6625	Decal - Control Panel, (Model No. 10418)	1
*	93-6624	Decal - Control Panel, (Model No. 10517 & 10522)	1
12	93-4148	Control - Throttle	1
13	92-9665	Screw (Model No. 10418 & 10517) (Model No. 10522)	2
15	92-1617	Bail - Control SP (Model No. 10517 & 10522)	1

Ref. No.	Part No.	Description	No. Used
16	92-5412	Stop - Pivot (Model No. 10517 & 10522)	1
17	3296-73	Nut	3
18	92-1094	Bracket - Cam	1
19	92-1078	Brake - BBC Cam	1
20	614697	Screw - Handle	2
21	92-1092	Handle - Upper	1
22	614243	Knob - Handle	2
23	613050	Bolt - Shoulder	1
24	321-4	Screw - Hex. Hd.	1
25	614249	Tie - Cable	3
26	3230-29	Bolt - Carriage	2
27	92-6537	Handle - Lower	1
28	92-7899	Bracket - Traction Cable (Model No. 10517 & 10522)	1
29	92-6518	Cable - Traction (Model No. 10517 & 10522)	1
30	3253-33	Washer	2
31	32103-29	Nut - Wing	2
32	92-2928	Bracket - Cable	1
33	3296-56	Nut - Lock	1

 *Not Illustrated

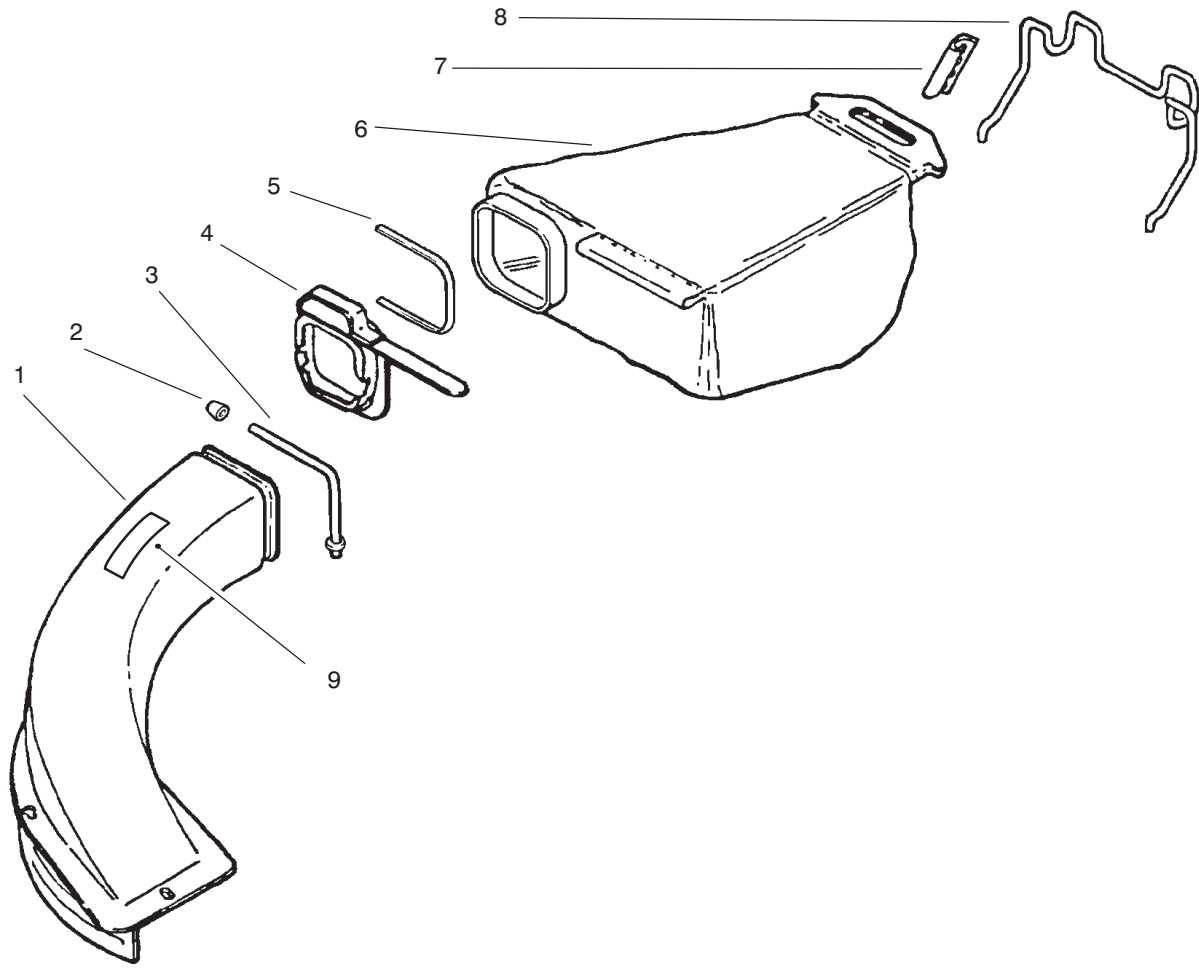


REAR CATCHER ASSEMBLY (Model No. 10522)

Ref. No.	Part No.	Description	No. Used
1	684729	Chute & Support Assy (Incl. Ref.# 2,3 & 9)	1
2	614589	Nut – Cap	1
3	614591	Chute Support	1
4	684727	Adaptor Assembly	1
5	614700	Tie Strap	1

Ref. No.	Part No.	Description	No. Used
6	684728	Bag Assembly (Inc. Ref.#4-5)	1
*		Replacement Bag	1
7	613462	Hanger Clamp	2
8	613455	Wide Hanger	1
9	92-2919	Decal – Danger	1

 *Not Illustrated

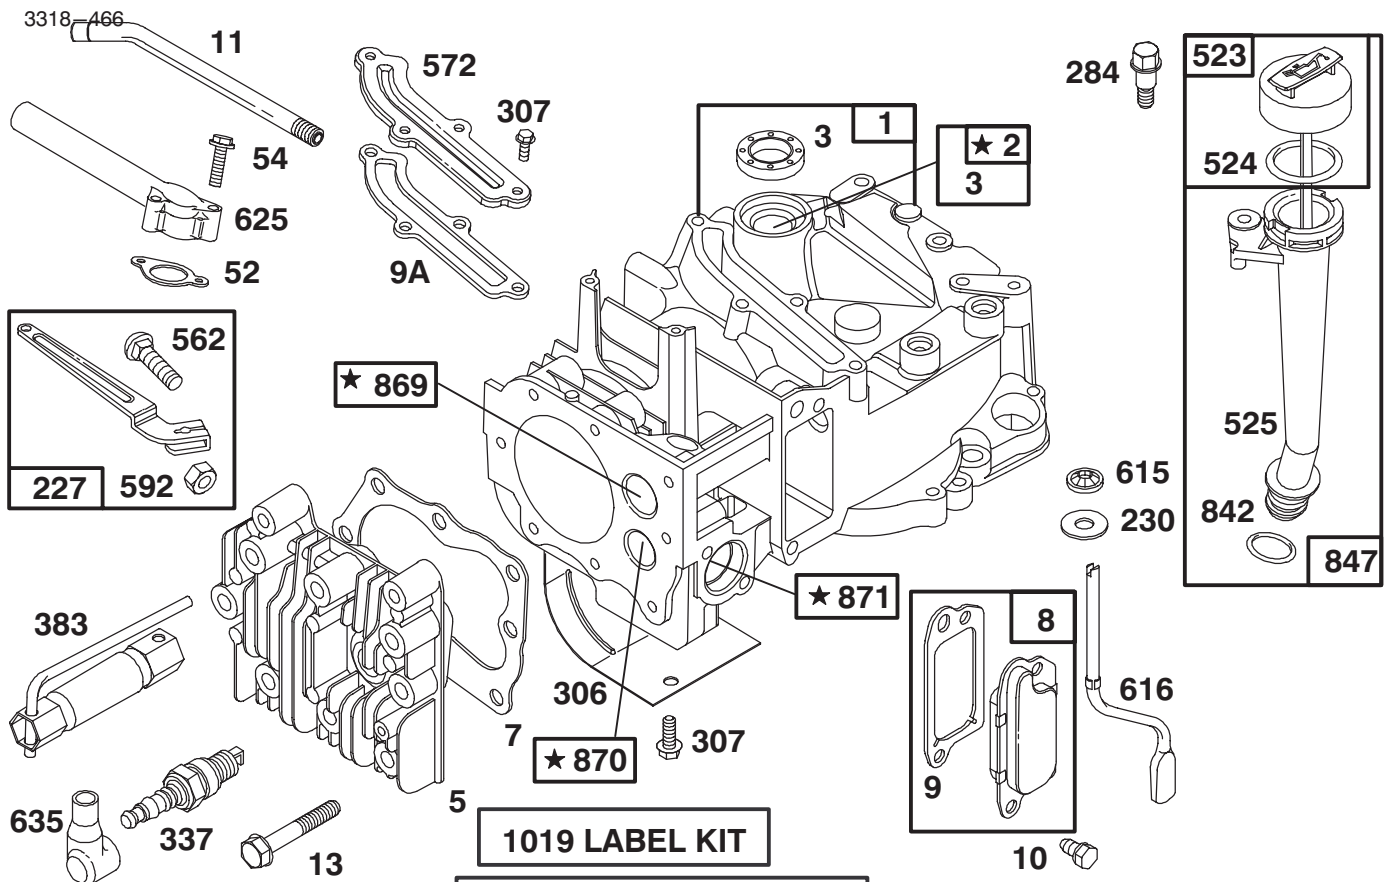

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

1058 OWNER'S MANUAL


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 128702-0624-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214368	Head – Cylinder	1
★7	272916	Gasket – Cylinder Head	1
8	495786	Breather – Valve Chamber	1
★9	272481	Gasket – Valve Cover	1
★9A	272238	Gasket – Baffle Plate	1
10	94650	Screw – Breather Mtg.	1
11	231933	Tube – Breather	1
13	94547	Screw – Cylinder Head	1
★52	272199	Gasket – Intake Elbow	1
54	94526	Screw – Intake Elbow Mtg.	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex. Head	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex. Head	1
337	802592	Plug – Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench – Spark Plug	1
523	495264	Cap With Dipstick – Oil Filler	1
★524	280393	Seal – Filler Tube	1
525	495265	Tube – Oil Filler	1
562	94852	Bolt – Governor Lever	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	262578	Crank – Governor	1
625	281085	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
★842	280966	Seal – O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat – Intake Valve	1
870	213513	Seat – Exhaust Valve	1
871	262001	Guide – Exhaust Valve	1
		Note: 63709 Guide – Intake Valve	1
1019	494256	Label Kit	1
1058	272262	Owner's Manual	1

 ★ Included in Gasket Set—Part No. 496117.

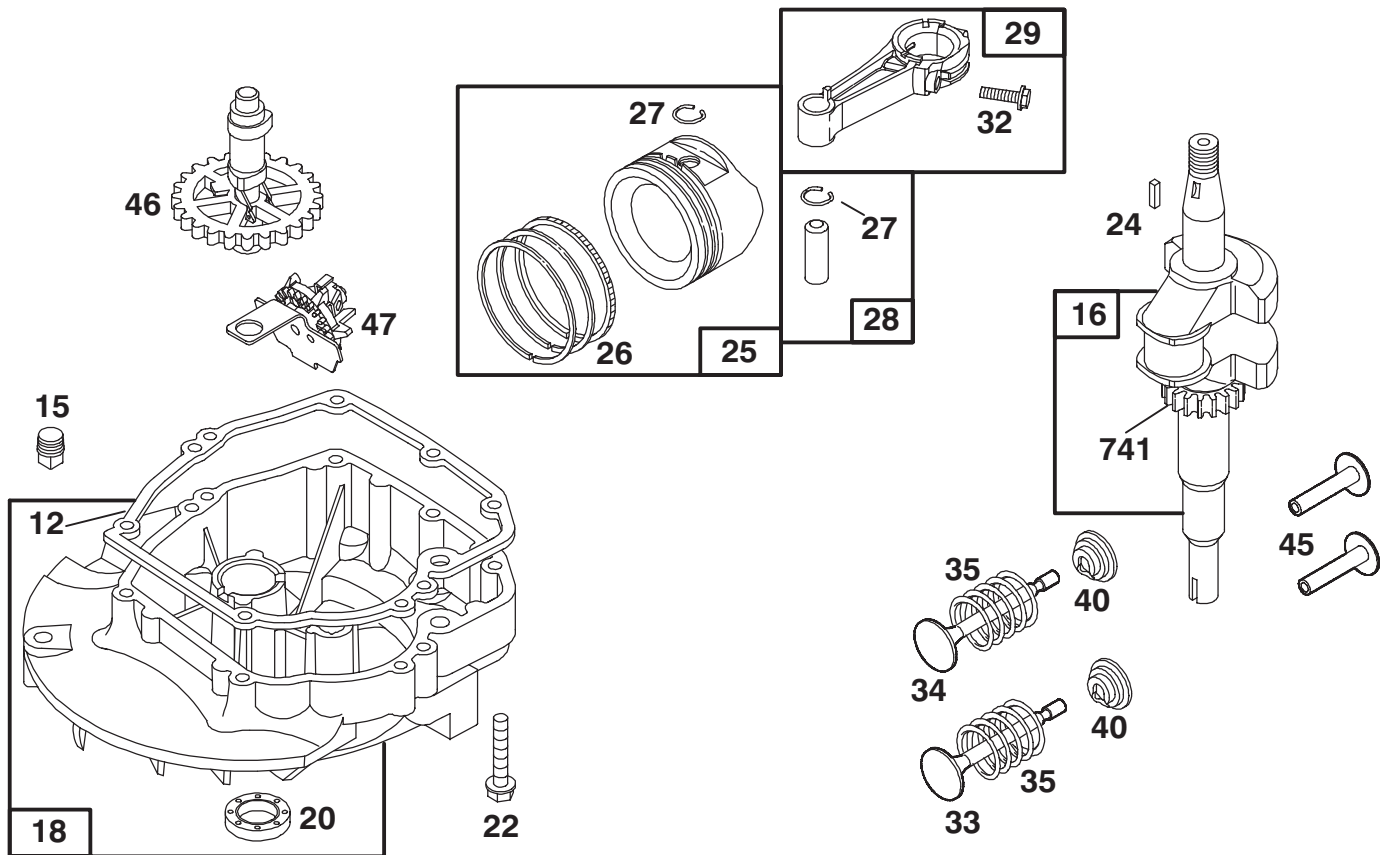


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 128702-0624-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket – Crankcase	1
15	94720	Plug – Oil Drain	1
16	494984	Crankshaft	1
		Note: Order 94388 For Timing Gear Key.	1
18	493279	Sump – Engine	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex. Head	1
		Note: 94612 Screw – Hex. Head (One (1) Used in Hole Nearest Breather.)	1
24	222698	Key – Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock – Piston Pin	1
28	298909	Pin – Piston (Standard)	1
	298908	Pin – Piston (.005" O.S.)	1
29	490566	Rod Assembly – Connecting	1
		Note: For Conn. Rod With .020" Undersize Crankpin Bearing – Order No. 490743.	1
32	94699	Screw – Connecting Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	492830	Gear – Cam	1
47	493737	Slinger – Oil	1
741	262598	Gear – Timing	1

 ★ Included in Gasket Set—Part No. 496117.

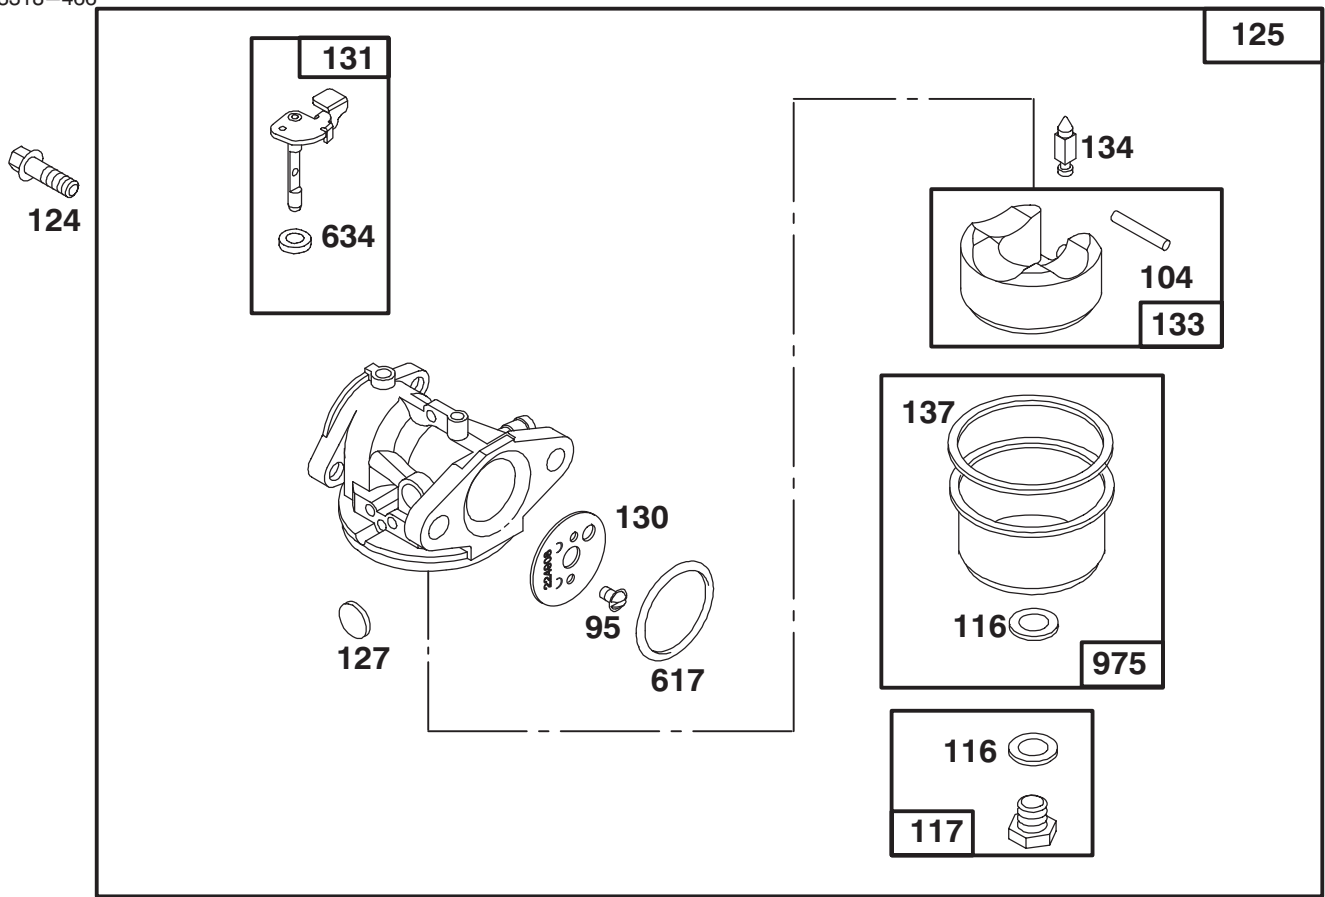

Assemblies include all parts shown in frames.




ENGINE BRIGGS & STRATTON MODEL 128702-0624-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Throttle Valve Mtg.	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket–Sealing (Sold in Kit Only).	1
117	497466	Screw – Bowl Mtg. (Std.) Note: 496495 Screw – Bowl Mtg. (High Altitude)	1
124	94525	Screw – Carburetor Mtg.	1
125	498254	Carburetor	1
●127		Plug – Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float Assy. – Carburetor	1
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only).	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer–Shaft (Sold in Kit Only).	1
975	493640	Bowl Assy. – Carburetor	1

●Included in Carburetor Kit–Part No. 493762.

   ◆Included in Carburetor Gasket Set–Part No. 490937.

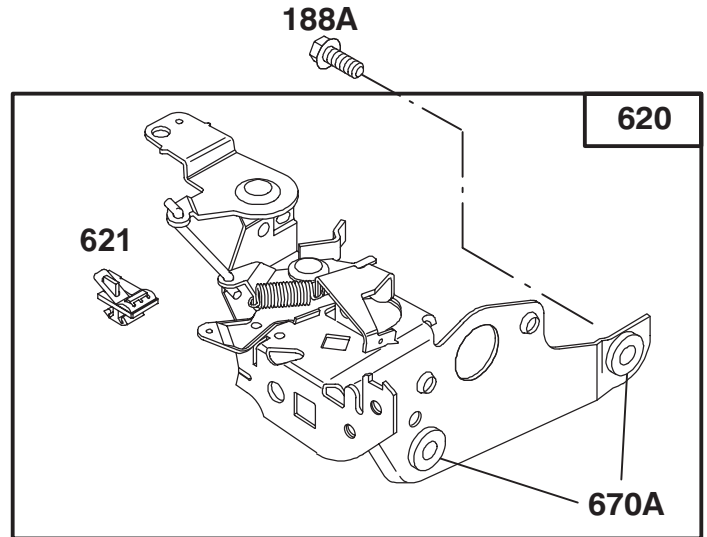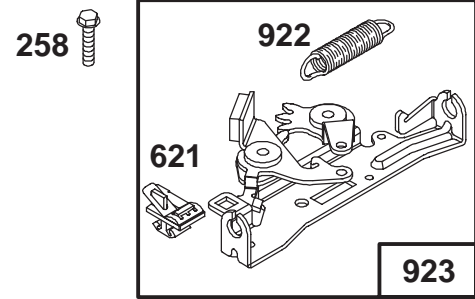
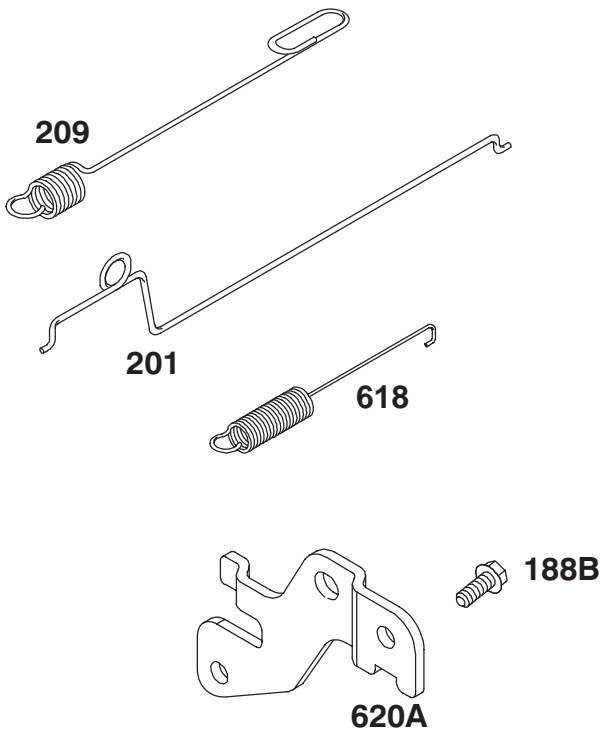


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 128702-0624-01

Ref. No.	Part No.	Description	No. Used
188A	94644	Screw – Hex. Head	1
188B	94602	Screw – Hex. Head	1
201	262579	Link – Governor	1
209	263044	Spring – Governor	1
258	94512	Screw–Hex. Head	1
618	262749	Spring – Return	1

Ref. No.	Part No.	Description	No. Used
620	497203	Bracket – Carburetor	1
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
670A	493823	Spacer – Bracket	1
922	262640	Spring–Brake	1
923	493442	Brake Assembly	1

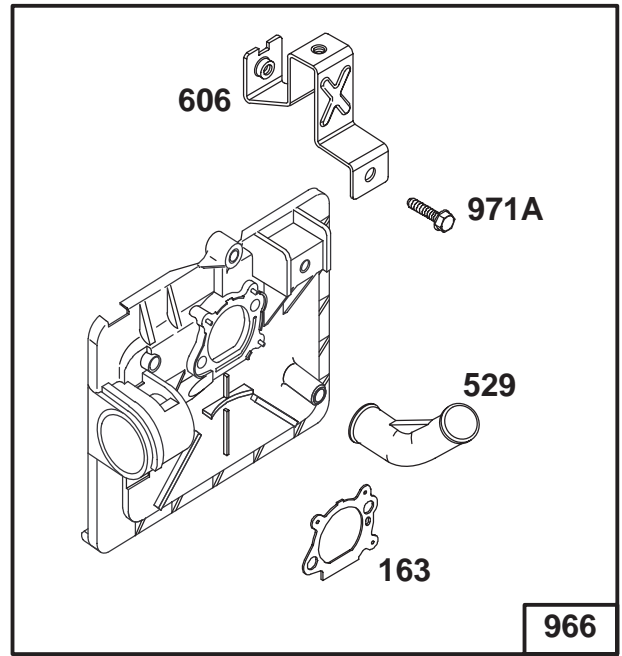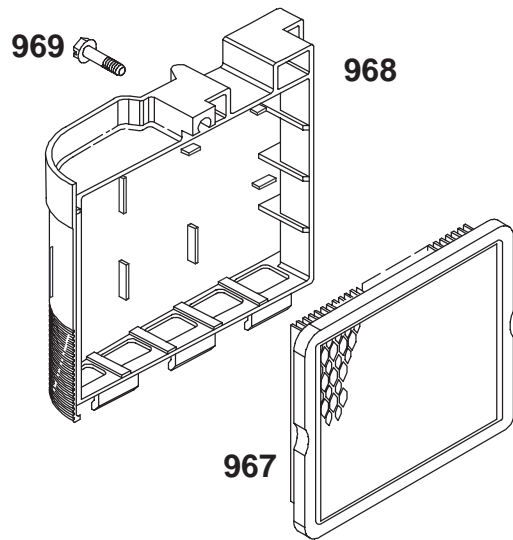  


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 128702-0624-01

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket – Air Cleaner	1
529	281299	Grommet – Breather	1
606	224815	Strap – Bracket	1
966	496116	Base – Air Cleaner	1
967	491588	Filter – Air	1

Ref. No.	Part No.	Description	No. Used
968	281340	Cover – Air Cleaner	1
969	94120	Screw – Cover Mtg.	1
971	94121	Screw – Air Cleaner	1
971A	94749	Screw – Hex. Head	1

 * Included in Gasket Set—Part No. 496117.

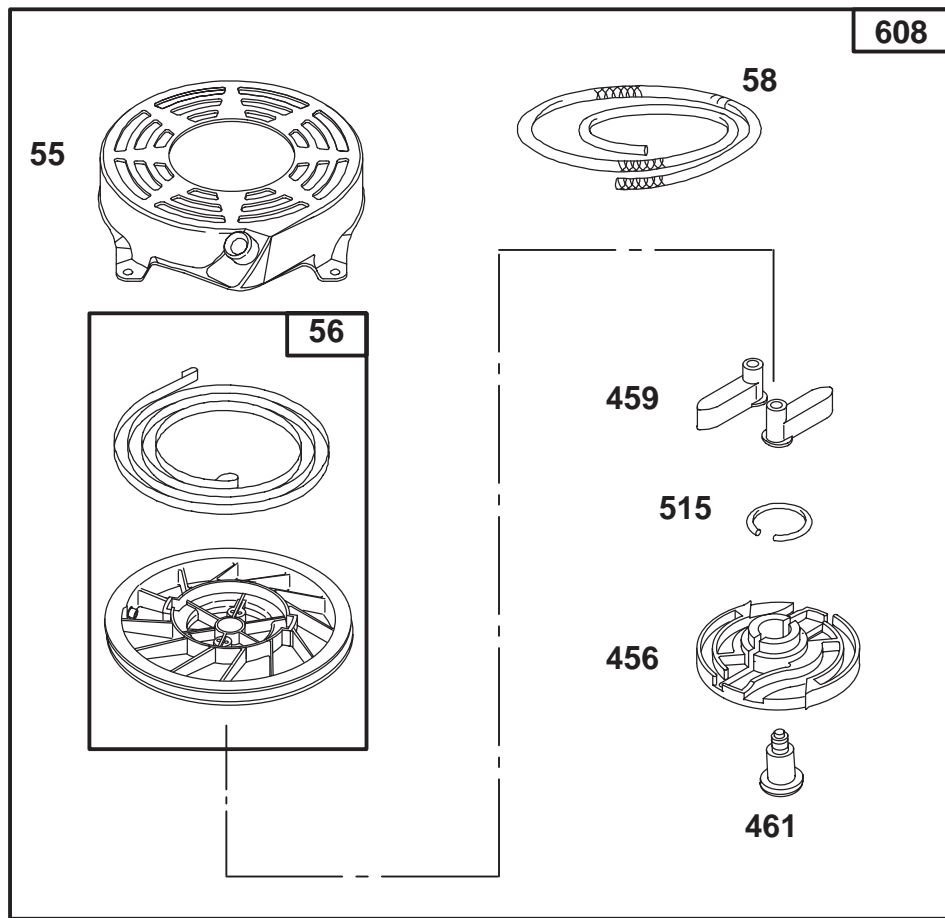


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 128702-0624-01

Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1
56	498144	Pulley – Rewind Starter	1
58	280399	Rope – Rewind Starter (Cut to Required Length)	1
59	224467	Insert – Grip	1
60	493926	Handle – Rewind Starter	1
456	281503	Retainer – Rewind Starter	1
459	281505	Pawl – Starter	1

Ref. No.	Part No.	Description	No. Used
461	94943	Pin – Starter	1
515	263073	Spring – Torsion	1
608	497680	Starter – Rewind	1
		Includes:	
		94128 Screw – Hex. Head	1
		94908 Nut – Hex.	1

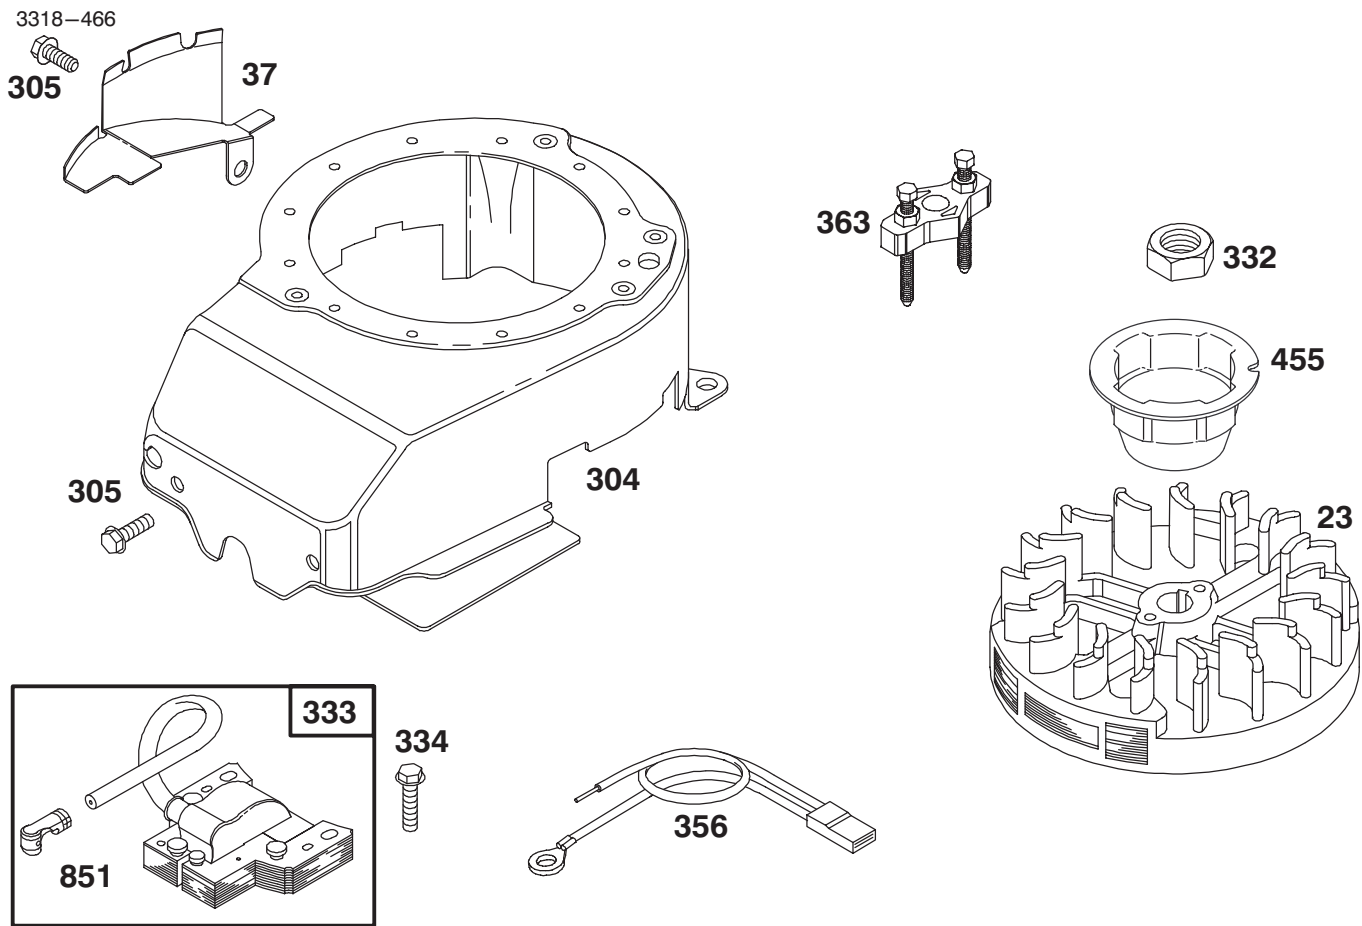 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 128702-0624-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	
37	224511	Guard – Flywheel	
304	493294	Housing – Blower	
305	94786	Screw – Sem	
332	92284	Nut – Flywheel	
333	802574	Armature – Magneto	

Ref. No.	Part No.	Description	No. Used
334	94731	Screw – Sem	
356	398808	Wire – Ground	
363	19069	Puller – Flywheel	
455	225121	Cup – Starter	
851	493880	Terminal – Ignition Cable	



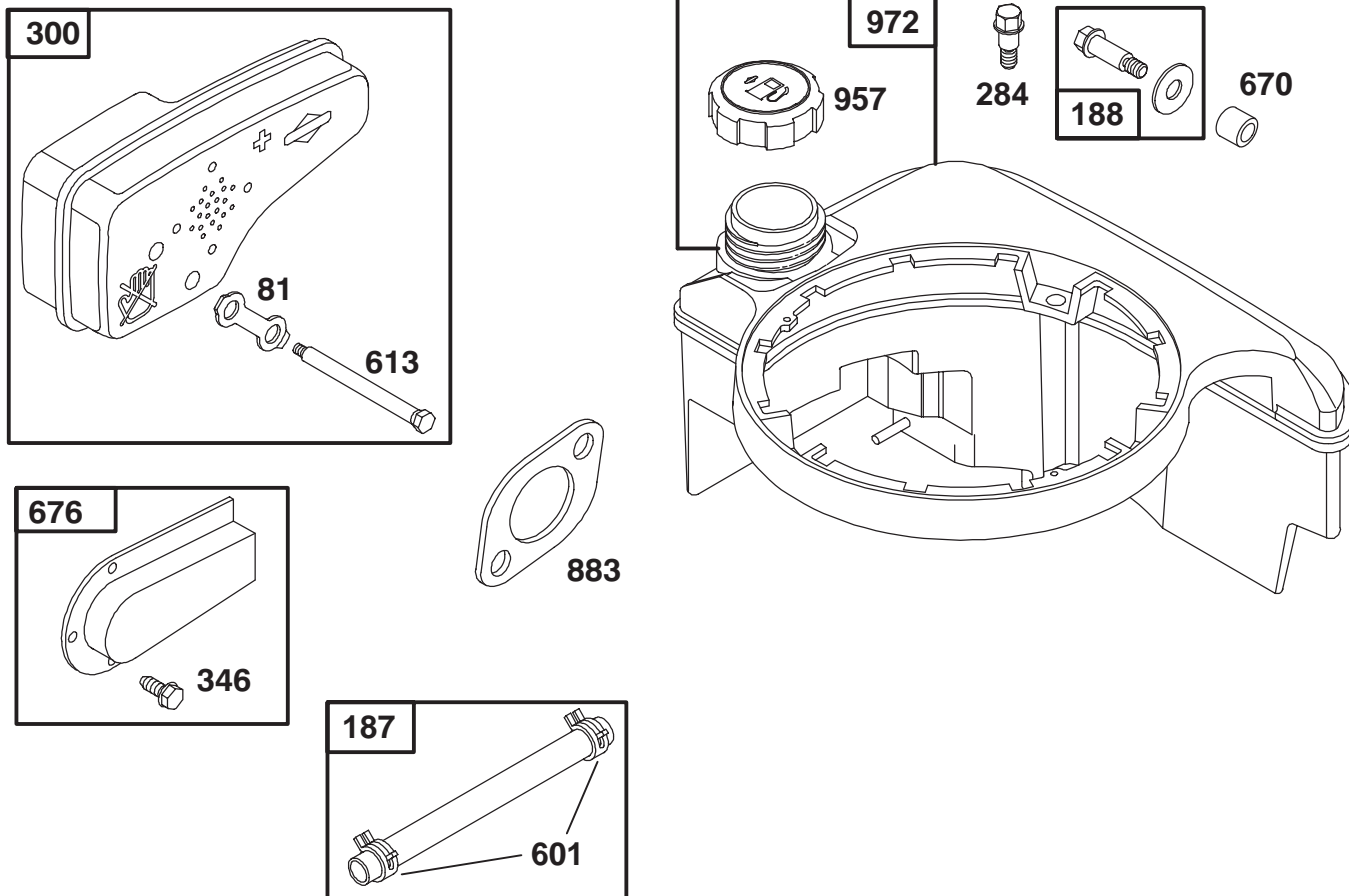 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 128702-0624-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188	398540	Screw – Shoulder	1
284	94511	Screw – Hex. Head	1
300	496106	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93807	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Shoulder	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket – Exhaust	1
957	397974	Cap – Fuel	1
972	495227	Tank Assembly – Fuel	1

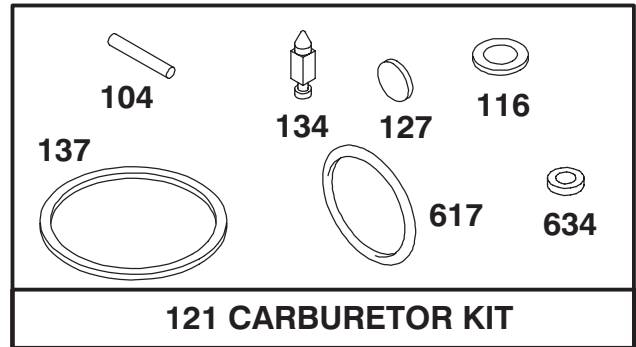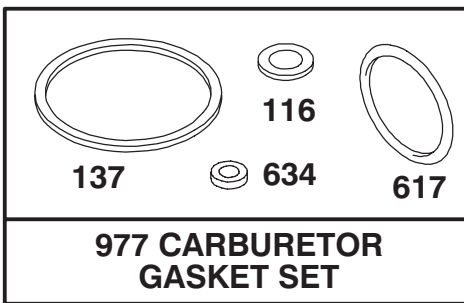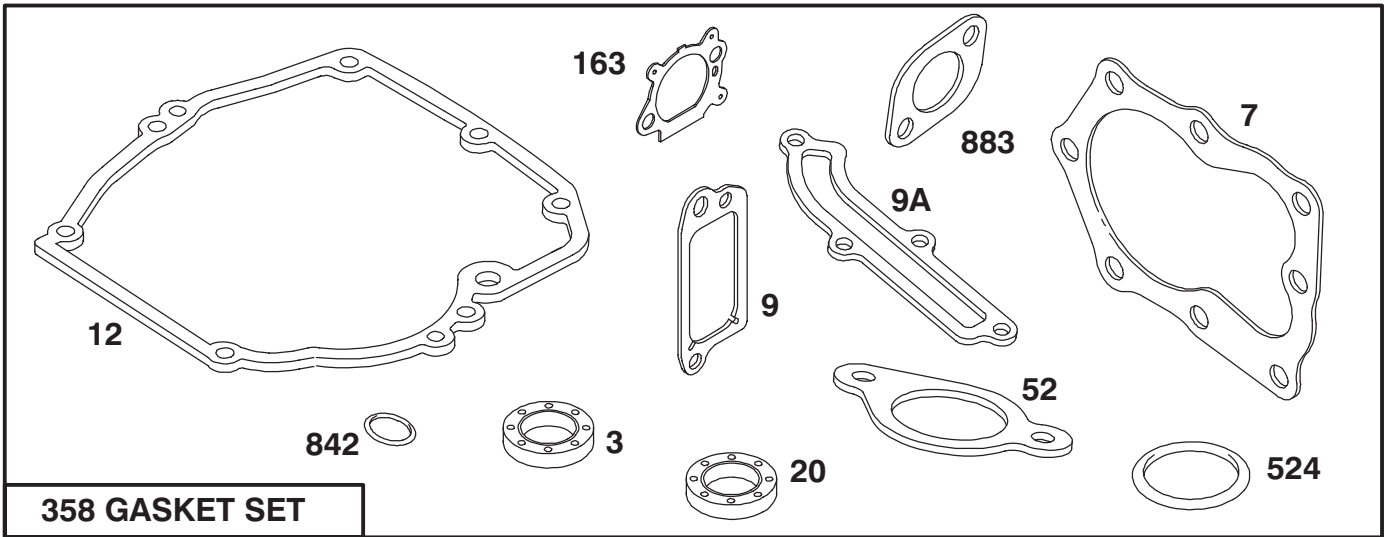   

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 128702-0624-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	
★7	272200	Gasket – Cylinder Hd.	
★9	272481	Gasket – Valve Cover	
★9A	272238	Gasket – Baffle Plate	
★12	272198	Gasket – Crankcase	
★20	399781	Seal – Oil	
★52	272199	Gasket – Intake Elbow	
●104	231371	Pin – Float Hinge	
●◆116		Gasket – Sealing (Sold in Kit Only).	
121	493762	Carburetor Kit	
●127		Plug – Welch (Sold in Kit Only).	

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	
●◆137		Gasket – Bowl (Sold in Kit Only).	
★163	272653	Gasket – Air Cleaner	
358	496117	Gasket Set	
★524	280393	Seal – Filler Tube	
●◆617	270344	Seal – Fuel Intake Tube	
●◆634		Washer – Shaft (Sold in Kit Only).	
★842	280966	Seal – O-Ring	
★883	272253	Gasket – Exhaust	
977	490937	Gasket Set – Carburetor	

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 496117.

LAWN-BOY PART NUMBER INDEX

3318-466

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
146044	Hub – Blade Driver	1	14	1	55-3800	Pinion – 25 Tooth	5	25	1
146046	Plate – Blade Driver	1	15	1	55-3810	Gear – 39 Tooth	5	30	1
303259	Washer – Flat	4	30	1	60-8710	Gearcase – Upper	5	9	1
551041	Key – Woodruff	1	11	1	60-8730	Gear Case Cover	5	22	1
551041	Key – Woodruff	1	11	2	60-8750	Bushing – Inter. Shaft	5	19	2
605255	Washer – Felt	4	29	1	60-8770	Bushing – Output	5	18	1
605339	Washer – Lock	1	19	1	60-8790	Sleeve – Gear	5	31	1
607560	Cover – Side Discharge	2	*	1	60-8800	Shaft – Intermediate	5	26	1
607560	Cover – Side Discharge	3	*	1	60-8810	Retainer – Shift Fork	5	12	1
608175	Bar – Toe	2	29	1	60-8821	Lever – Shift	4	21	1
608175	Bar – Toe	3	30	1	60-8840	Pulley – Half	5	6	2
608834	Washer	2	21	2	60-8850	Bushing – Output	5	3	1
610358	Nut	2	6	2	60-8870	Yoke – Shift	5	10	1
610358	Nut	3	6	2	65-2720	Ring – Retaining	4	17	4
610358	Nut	4	24	2	65-4710	Ring – Friction	4	9	2
612543	Blade – 21	1	16	1	65-4720	Spring – Compression	4	18	2
613050	Bolt – Shoulder	6	23	1	65-4730	Washer – Thrust	4	7	2
613455	Wide Hanger	7	8	1	65-4740	Washer – Thrust	4	8	4
613462	Hanger Clamp	7	7	2	65-4750	Gear – Pinion	4	12	2
614243	Knob – Handle	6	22	2	65-4760	Washer – Clutch	4	10	2
614249	Strap – Tie	1	23	1	65-4770	Shaft – Output	5	4	1
614249	Tie – Cable	6	25	3	65-5250	Clip – Spring	5	16	1
614426	Washer – Stepped	4	13	2	66-6040	Key – Rocking, R. H.	4	*	1
614589	Nut – Cap	7	2	1	66-6050	Key – Rocking, L. H.	4	11	1
614591	Chute Support	7	3	1	70-9760	Bushing	4	3	2
614637	Bracket – H. O. C.	2	19	4	76-0760	Key – Shift	5	14	2
614637	Bracket – H. O. C.	3	27	2	76-0770	Collar – Shift	5	15	1
614650	Bolt – Wheel	2	16	2	76-0780	Sleeve – Shift Key	5	13	1
614677	Screw – Thread Form.	2	2	2	82-8780	Retainer – Cable	4	20	1
614677	Screw – Thread Forming	3	2	2	86-7990	Screw	1	10	1
614682	Knob	2	3	1	92-1005	Spring Arm Assembly	2	12	2
614682	Knob	3	3	1	92-1006	Spring Arm Assembly	3	20	2
614697	Screw – Handle	6	20	2	92-1006	Spring Arm Assembly	2	24	2
614700	Tie Strap	7	5	1	92-1008	Knob – Spring Arm	3	19	4
684659	Shield – Muffler	1	7	1	92-1008	Knob – Spring Arm	2	23	4
684727	Adaptor Assembly	7	4	1	92-1042	Wheel – 8	4	14	2
684728	Bag Assembly	7	6	1	92-1043	VBelt	4	28	1
684729	Chute & Support Assy	7	1	1	92-1057	Bolt – Wheel	4	15	2
684776	Wheel – 6	3	23	2	92-1078	Brake – BBC Cam	6	19	1
684776	Wheel – 6	2	25	2	92-1092	Handle – Upper	6	21	1
684777	Wheel Assembly 8	2	17	2	92-1093	Bail – Brake	6	8	1
700029	Screw – Set	1	22	1	92-1094	Bracket – Cam	6	18	1
16-2039	Panel – Control	6	7	1	92-1099	Bolt – Wheel	3	24	2
16-5809	Housing – 21”	3	32	1	92-1099	Bolt – Wheel	2	26	2
16-8929	Panel – Control	6	*	1	92-1604	Hub Cap	2	15	4
17-4449	Housing – 21”	2	31	1	92-1604	Hub Cap	3	25	4
24-7920	Cover – Drive Shaft	4	31	1	92-1617	Bail – Control SP	6	15	1
29-8970	Washer	2	20	2	92-1630	Fan – Mulching	1	17	1
29-9570	Bushing – Yoke	5	11	1	92-1632	Cable – Brake	6	6	1
36-4780	Washer	5	17	1	92-1648	Screw	1	21	3
36-4791	Washer – Thrust	5	20	2	92-1701	Stop – Rope	1	6	1
38-7820	Bearing – Ball	5	2	1	92-2268	Screw	6	3	1
39-5770	Decal – Danger	2	5	1	92-2918	Decal – Control Panel	6	5	1
39-5770	Decal – Danger (English)	3	5	1	92-2919	Decal – Danger	7	9	1
40-1940	Washer – Wheel Bolt	3	7	6	92-2928	Bracket – Cable	6	32	1
40-1940	Washer – Wheel Bolt	2	18	8	92-2944	Shield – Grass	1	12	1
46-6811	Screw	2	28	2	92-4856	Bolt – Shoulder	3	22	2
46-6811	Screw	3	29	2	92-4856	Bolt – Shoulder	2	32	2
47-2900	Bushing	4	6	2	92-4857	Spacer	1	18	1
49-2040	Screw	5	21	6	92-4877	Nut – Push	1	13	3
55-3760	Pinion – 15 Tooth	5	23	1	92-4879	Bolt – Blade	1	20	1
55-3770	Gear – 49 Tooth	5	28	1	92-4891	Grille – Engine	1	3	1
55-3780	Pinion – 20 Tooth	5	24	1	92-4988	Decal – Recoil	1	5	1
55-3790	Gear – 44 Tooth	5	29	1	92-5412	Stop – Pivot	6	16	1

*Not Illustrated

LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref.		Part No.	Description	Pg. Ref.	
		No.	Qty.			No.	Qty.
92-5790	Pinion - Bevel	5	27 1	93-6624	Decal - Control Panel,	6	* 1
92-5791	Spacer	5	5 1	93-6625	Decal - Control Panel,	6	11 1
92-5791	Spacer	2	11 2	93-7250	Decal - Warning	2	34 1
92-6518	Cable - Traction	6	29 1	93-7250	Decal - Warning	3	35 1
92-6535	Cap - End	4	27 2	93-7383	Guide - Rope	6	1 1
92-6537	Handle - Lower	6	27 1	94-1609	Cover - Wheel	4	16 2
92-6539	Spring Arm Assy R.H.	4	* 2	94-1610	Grommet	2	1 3
92-6540	Spring Arm Assy L. H.	4	2 2	94-1610	Grommet	3	1 3
92-7653	Pulley - Engine	1	1 1	2210-249	Clamp - Cable	1	8 1
92-7674	Bolt - Shoulder	2	14 2	256-251	Bushing	3	13 2
92-7699	Bracket - Actuator	3	12 1	302-56	Fitting - Grease (Ref.)	4	5 2
92-7736	Shield - Trailing	2	8 1	321-4	Screw - Hex. Hd.	6	24 1
92-7736	Shield - Trailing	3	15 1	321-51	Bolt	6	2 1
92-7746	Pivot Arm Assembly	4	4 2	3230-29	Bolt - Carriage	6	26 2
92-7748	Screw	3	11 2	3253-33	Washer	6	30 2
92-7869	Gear Case Assembly	3	14 1	3256-24	Washer	5	8 1
92-7869	Gear Case Complete	5	* 1	3272-10	Pin - Cotter	4	23 1
92-7883	Decal - Recoil	1	5 1	3285-19	Pin - Groove	5	1 1
92-7899	Bracket - Traction Cable	6	28 1	3290-413	Washer - Belleville	2	13 4
92-8630	Cover- Plate, Mulch	2	4 1	3290-413	Washer - Belleville	3	21 2
92-8630	Cover- Plate, Mulch	3	4 1	3296-5	Nut	5	7 1
92-8852	Cover - Drive	3	10 1	3296-39	Nut - Lock	2	22 4
92-8926	Control Ground	6	9 1	3296-39	Nut - Lock	3	33 2
92-9665	Screw (Model No. 10418 &	6	13 2	3296-56	Nut - Lock	6	33 1
92-9673	Bolt - Shoulder	2	7 2	3296-73	Nut	6	17 3
92-9673	Bolt - Shoulder	3	8 2	32103-29	Nut - Wing	6	31 2
93-0289	Decal - Deck	2	30 1	32144-70	Screw - Hex. Hd.	4	19 1
93-0290	Decal - Deck	3	31 1	32144-73	Screw - Hex. Hd.	1	9 3
93-0291	Decal - Recoil	1	4 1	32144-85	Screw	4	25 2
93-4148	Control - Throttle	6	12 1	32144-112	Screw	3	9 2

*Not Illustrated