


TORO®

MODEL NO. 26633B-6900001 & UP

PARTS CATALOG


53cm REAR BAGGING MOWER

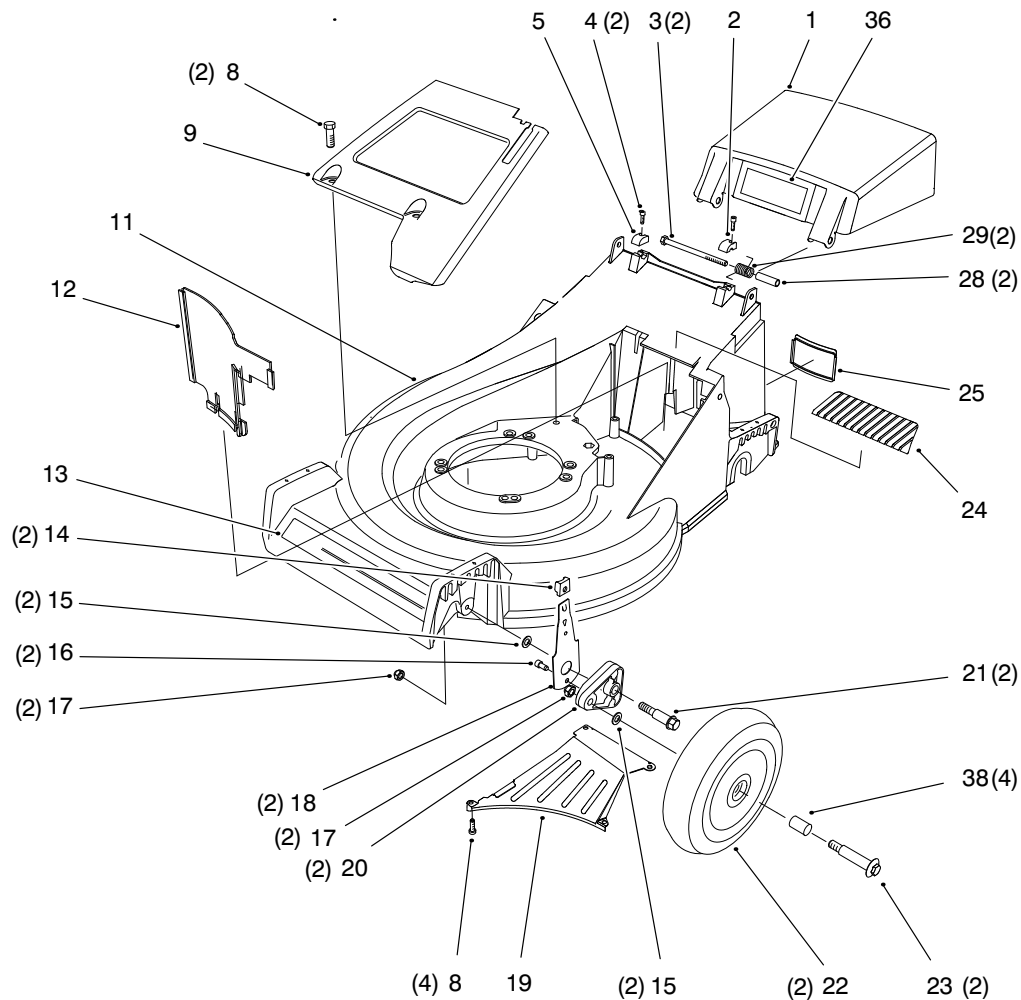

C-2481

DECK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	17-1569	Door - Discharge (Incl. Ref. #36)	1	17	3296-6	Nut - Lock	4
2	71-7900	Cap - Bolt, Hinge LH	1	18	66-0540	Asm - Spring Arm, Front	2
3	322-29	Screw - Hex Head	2	19	71-9640	Ramp - Discharge	1
4	65-5210	Screw	2	20	66-0580	Arm - Pivot	2
5	71-7910	Cap - Bolt, Hinge RH	1	21	66-0560	Screw - Shoulder	2
8	32144-70	Screw - Tap	6	22	14-9949	Asm - Wheel & Tire, 8" (Incl. Ref. #38)	2
9	65-5660	Panel - Screen	1	23	27-6231	Bolt - Wheel	2
11	16-1769	Housing (Incl. Ref. # 13)	1	24	71-9920	Cover - Top	1
12	66-0020	Panel - Vertical	1	25	71-9650	Access - Cover	1
13	71-9870	Decal - Deck	1	28	71-8580	Spacer - Door	2
14	25-7740	Knob - Arm	2	29	71-9840	Spring - Door	2
15	40-1940	Washer	4	36	93-4105	Decal - Bag Door	1
16	65-5220	Screw	2	38	27-6250	Bushing - Wheel	4

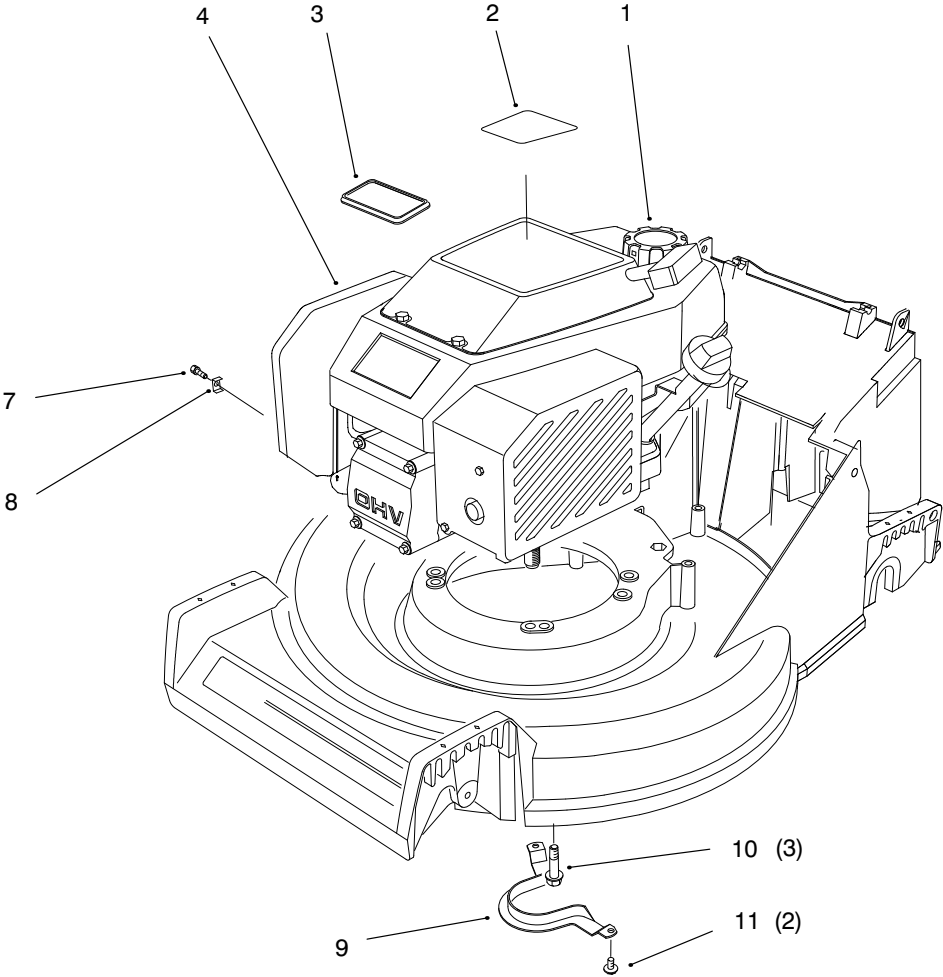


C-2482

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-7198	Asm - Cap, Gas	1
2	93-4355	Decal - Engine	1
3	92-2289	Plate - Logo, Toro	1
4	94-1605	Engine - GTS 150 BBC (Complete)	1


Ref. No.	Part No.	Description	No. Used
7	86-7990	Screw - Clamp	1
8	2210-249	Clamp - Casting	1
9	66-0570	Guide - Belt	1
10	32144-102	Screw	3
11	32144-70	Screw - Tap	2

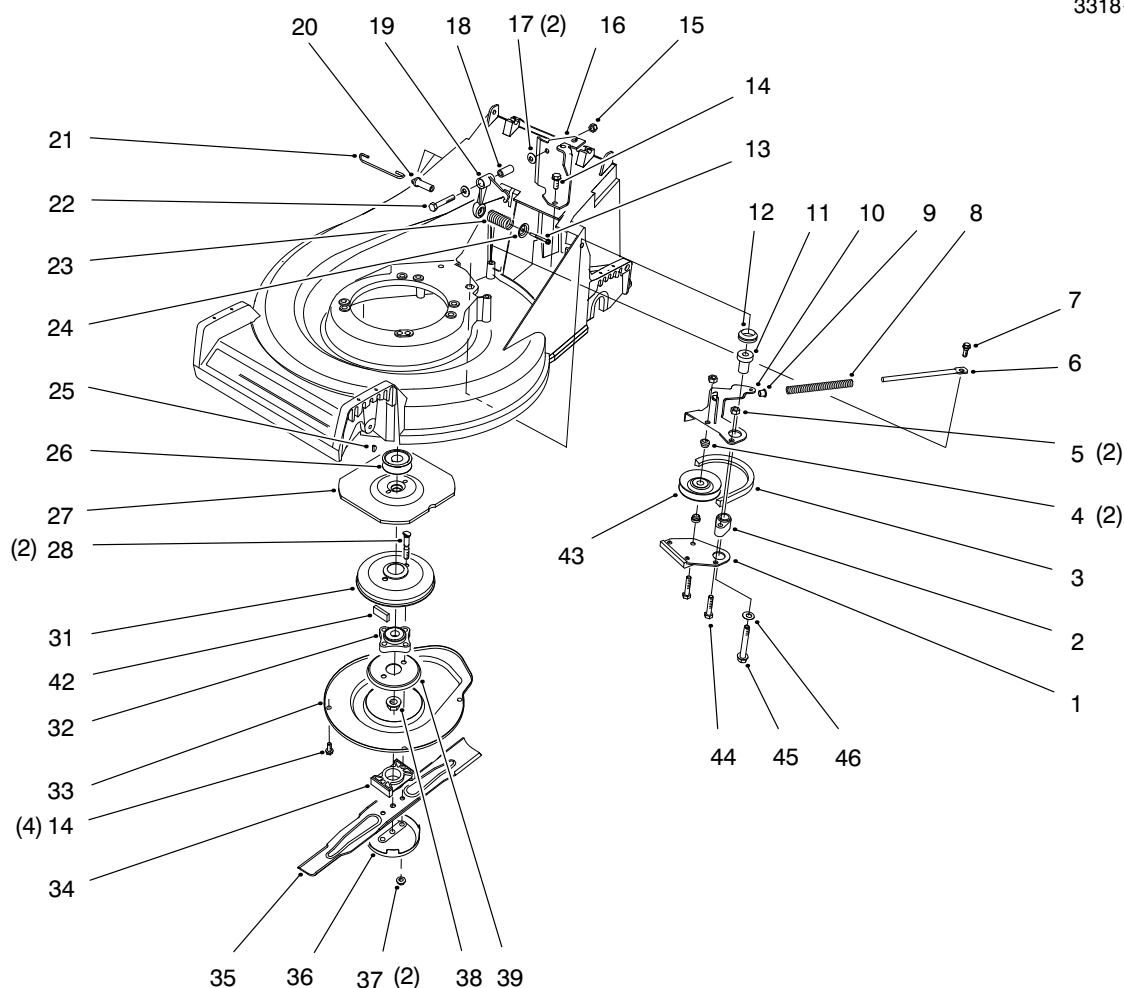

C-2483

BLADE AND BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	65-5780	Shoe - Brake	1	22	322-21	Screw - Hex Hd.	1
2	65-5070	Hub - Plate	1	23	71-3630	Spring - Compression	1
3	65-5740	V-Belt	1	24	65-5280	Retainer - Spring	1
4	65-5130	Hub - Pulley	2	25	3257-17	Key - Woodruff	1
5	3296-42	Nut - Lock	2	26	62-7560	Pulley - Driver	1
6	65-5320	Rod - Spring	1	27	65-5300	Flywheel - BBC	1
7	65-5670	Bolt - Shoulder	1	28	42-3190	Bolt - Blade	2
8	71-3640	Spring - Compression	1	31	62-3890	Drum - Brake	1
9	66-0350	Bushing - Flange	1	32	42-6890	Asm - Hub	1
10	66-0090	Lever - Brake	1	33	65-5200	Shield - BBC	1
11	65-5720	Bushing	1	34	62-4280	Spacer - Blade	1
12	253-151	Seal - Ring	1	35	62-7700	Blade - 21"	1
13	46-7040	Screw - Hex Washer Hd.	1	36	80-2770	Cup - Anti Scalp	1
14	32144-70	Screw - Tap	5	37	54-9190	Nut - Lock	2
15	32128-44	Nut - Flange	1	38	3296-33	Nut - Lock, Nylon	1
16	66-0030	Bracket - Cable Support	1	39	65-5330	Screen - BBC	1
17	3256-23	Washer - Flat	2	42	52-3480	Damper - Vibration	2
18	65-5690	Bushing - Bellcrank	1	43	46-5650	Pulley - Idler	1
19	65-5700	Crank	1	44	321-13	Screw - Hex Hd.	2
20	71-3660	Pin - Spring	1	45	11-0580	Screw	1
21	71-3650	Link - Control	1	46	65-5380	Washer - Flat	1

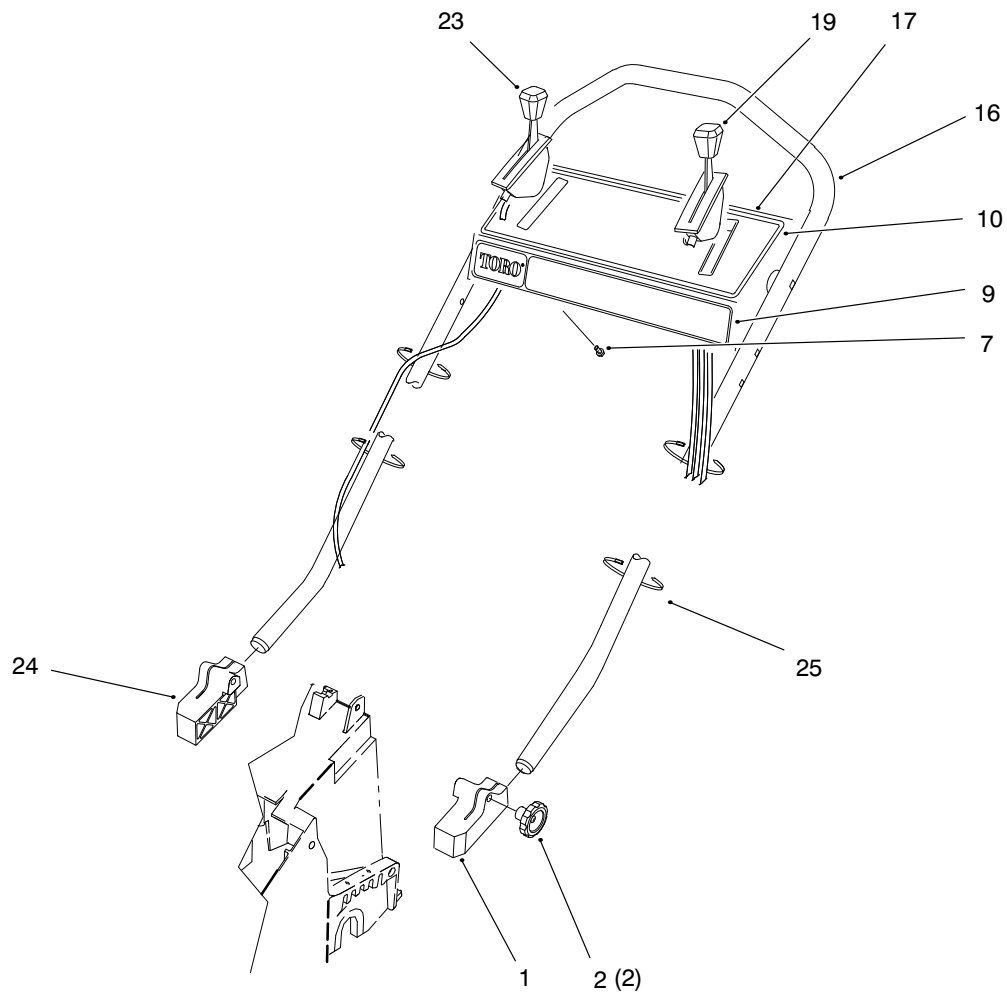


C-2484

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-8090	Mount - Handle LH	1
2	19-4050	Knob	2
7	92-9665	Screw	4
9	71-9872	Decal - Panel	1
10	93-6656	Decal - Instruction	1
16	94-4910	Handle	1

Ref. No.	Part No.	Description	No. Used
17	16-8969	Panel - Control (Incl. Ref.#9 & 10)	1
19	93-6630	Control - Throttle	1
23	93-6632	Control - Speed	1
24	71-8100	Mount - Handle RH	1
25	3290-378	Tie - Cable	5

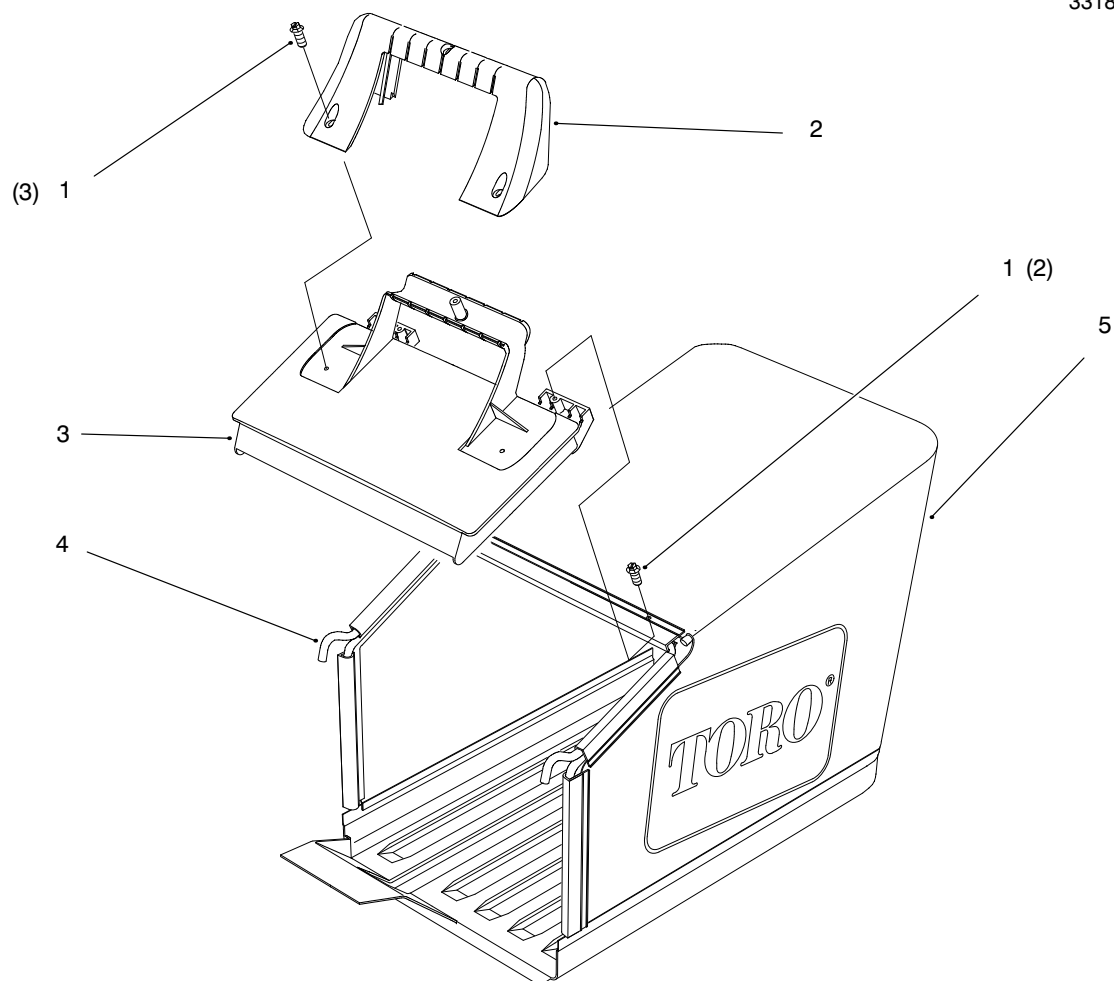


C-2485

BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Phillips Pan Hd.	5
2	71-9480	Handle - Door	1
3	71-9470	Door - Bag	1

Ref. No.	Part No.	Description	No. Used
4	71-9930	Frame	1
5	71-9680	Bag - Grass	1

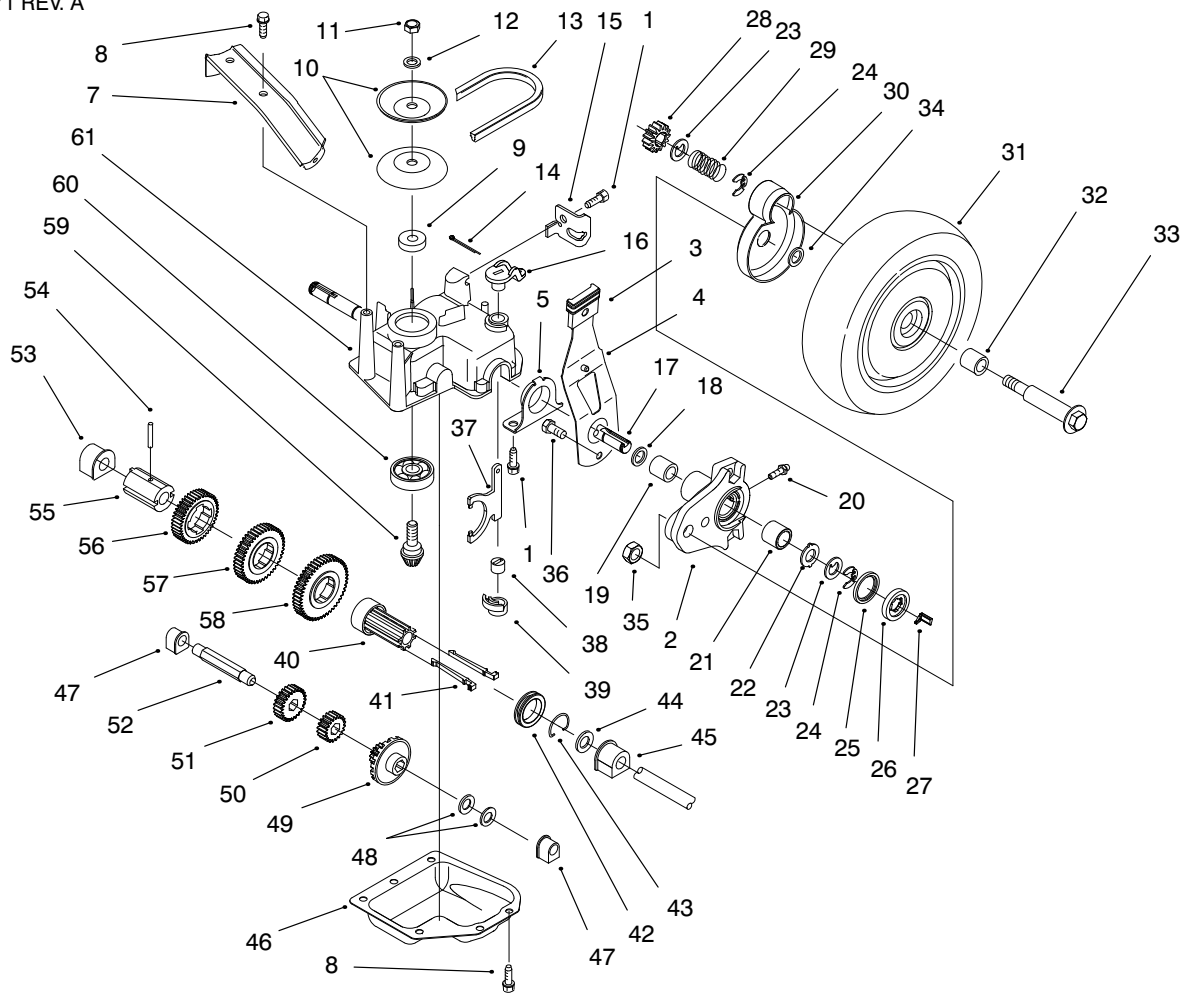


C-2486

DECK SUSPENSION & GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Hex. Washer Hd.	5
2	65-5042	Pivot Arm Assembly (Incl. Ref. #19-21)	2
3	25-7740	Knob - Arm	2
4	65-5440	Spring Arm Assembly	2
5	66-0360	Cap - End	2
7	65-5190	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Nut - Lock	1
12	3256-24	Washer - Flat	1
13	36-8070	V-Belt	1
14	3272-5	Pin - Cotter	1
15	76-2930	Retainer - Cable	1
16	76-0920	Lever - Shift	1
17	65-4770	Shaft - Output	1
18	237-153	Seal - "O"Ring	2
19	70-9760	Bushing - Sleeve	2
20	302-56	Fitting - Grease	2
21	48-2060	Bearing - Needle	2
22	65-4730	Washer - Thrust (Inner)	2
23	65-4740	Washer - Thrust (Keyed)	4

Ref. No.	Part No.	Description	No. Used
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2
26	65-4760	Washer - Clutch	2
27	66-6050	Key - Rocking (L.H.)	1
*	66-6040	Key - Rocking (R.H.)	1
28	65-4750	Pinion	2
29	65-4720	Spring - Compression	2
30	74-1660	Cover - Wheel	2
31	14-9959	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
32	27-6250	Bushing - Wheel	4
33	27-6231	Bolt - Wheel	2
34	74-1670	Spacer - Wheel Cover	2
35	3296-6	Nut - Lock	2
36	65-5220	Screw - Socket Hd. Cap	2
37	60-8870	Yoke - Shift	1
38	29-9570	Bushing - Yoke	1
39	60-8810	Retainer - Shift Fork	1
40	76-0780	Sleeve - Shift Key	1
41	76-0760	Key - Shift	2
42	76-0770	Collar - Shift	1
43	65-5250	Clip - Spring	1
44	36-4780	Washer - Thrust	1

*Not Illustrated

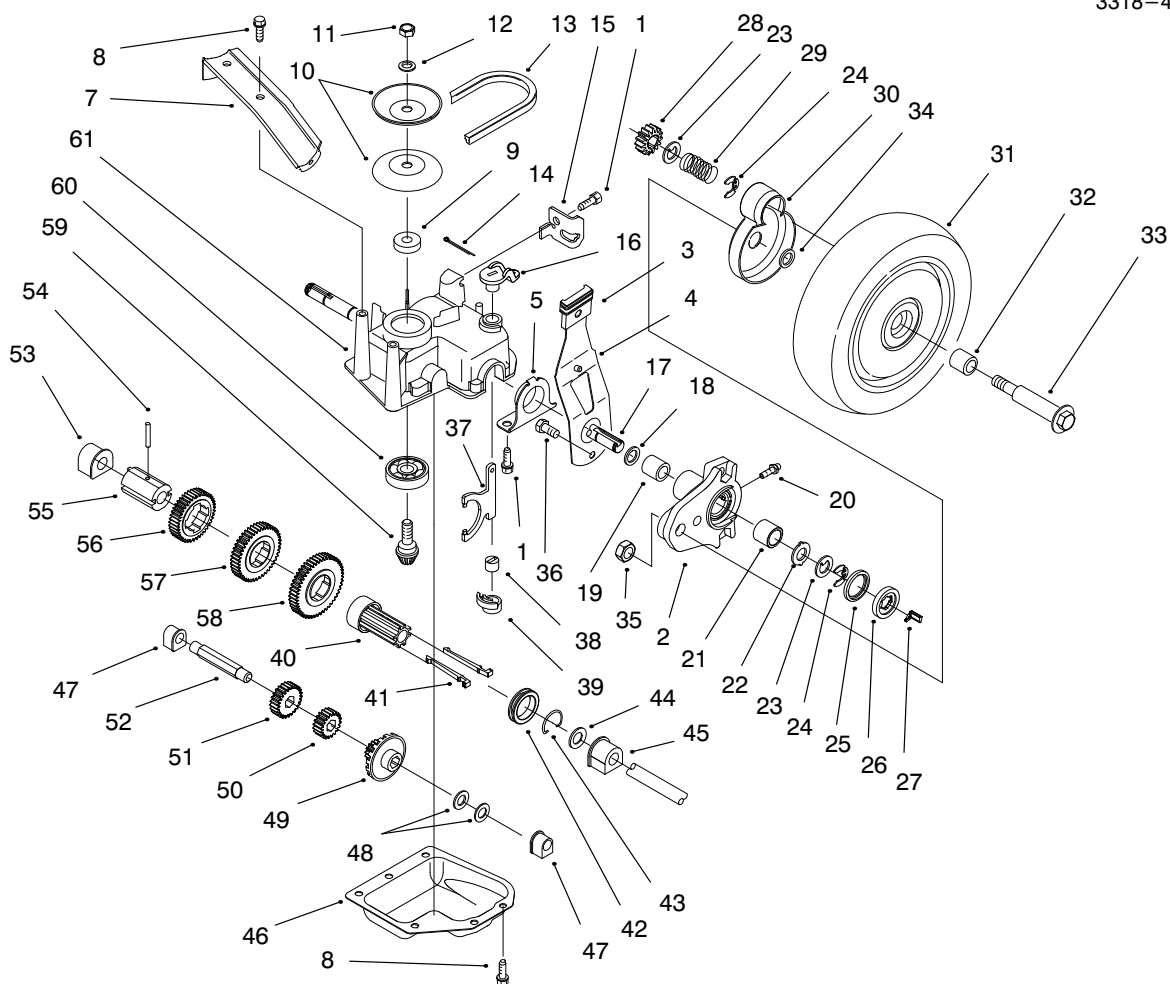


C-2486

DECK SUSPENSION & GEAR CASE ASSEMBLY (CONT.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
45	60-8770	Bushing – Output Shaft	1	54	32121-120	Pin – Coil	1
46	60-8730	Cover – Gear Case	1	55	60-8790	Sleeve – Gear	1
47	60-8750	Bushing – Intrmdt. Shaft	2	56	55-3810	Gear – 39T (3rd Gear)	1
48	36-4791	Washer – Thrust	2	57	55-3790	Gear – 44T (2nd Gear)	1
49	55-3760	Gear – Pinion 15T	1	58	55-3770	Gear – 49T (1st Gear)	1
50	55-3780	Gear – Pinion 20T	1	59	60-8890	Pinion – Bevel	1
51	55-3800	Gear – Pinion 25T	1	60	38-7820	Bearing – Ball	1
52	60-8800	Shaft – Intermediate	1	61	60-8710	Case – Gear (Upper)	1
53	60-8850	Bushing – Output Shaft	1	*	62-6673	Gear Case Assy. Complete	1

*Not Illustrated

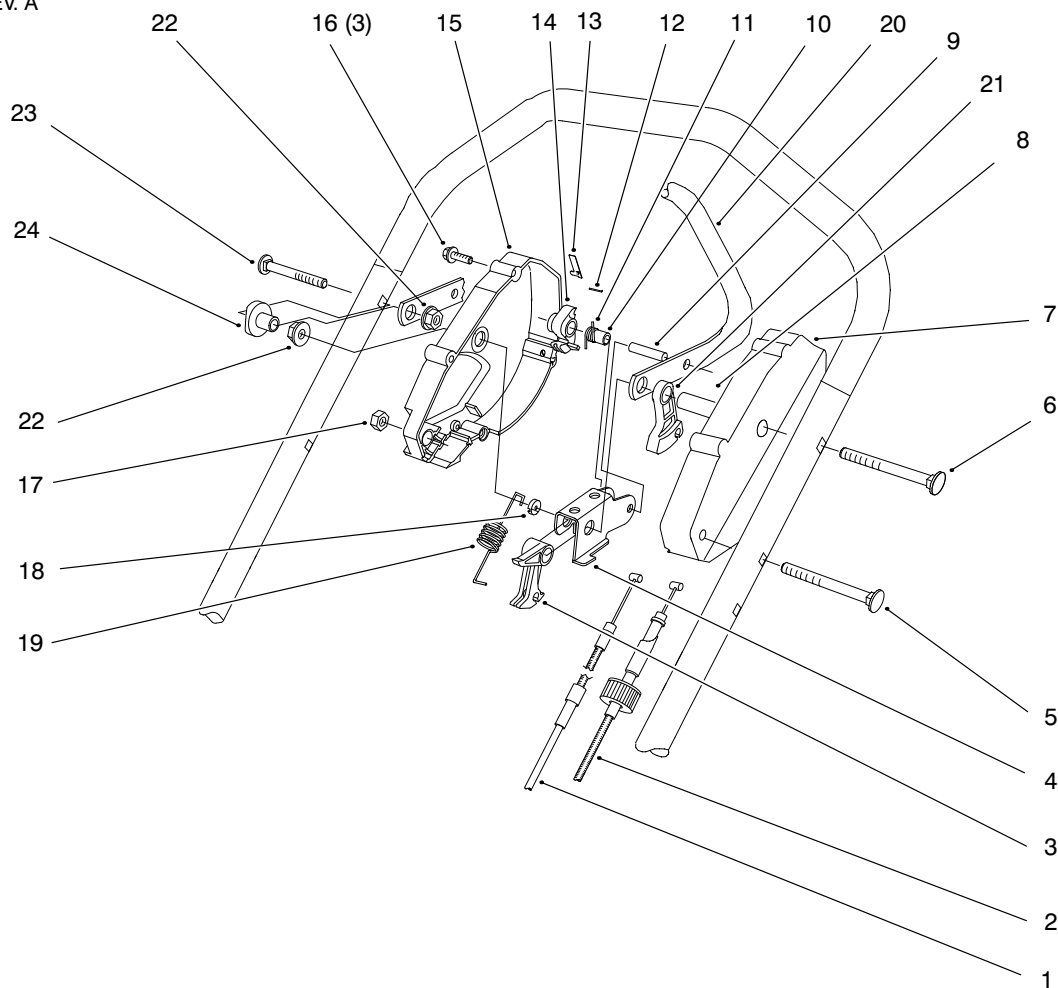


C-2487

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-6629	Asm - Cable	1
2	93-6633	Cable - Traction	1
3	46-5540	Lever - Cable	1
4	66-0180	Rocker	1
5	46-6431	Screw - Handle	1
6	17-9425	Screw - Handle	1
7	46-5460	Housing - Control LH	1
8	46-5590	Spacer	1
9	32121-9	Pin - Roll	1
10	46-5550	Bushing	1
11	46-5510	Spring - Torsion	1
12	57-6290	Pin - Insert	1

Ref. No.	Part No.	Description	No. Used
13	52-7410	Spring - Leaf	1
14	46-5530	Hook - Control	1
15	66-0160	Housing - Control RH	1
16	46-7040	Screw - Hex Washer Hd.	3
17	3296-8	Nut - Lock	1
18	66-0170	Washer - Nylon	1
19	66-0190	Spring - Detent	1
20	52-7430	Bar - Control	1
21	46-5520	Lever - Traction	1
22	3296-58	Nut - Flange	2
23	17-9426	Screw	1
24	66-0330	Spacer - Support	1

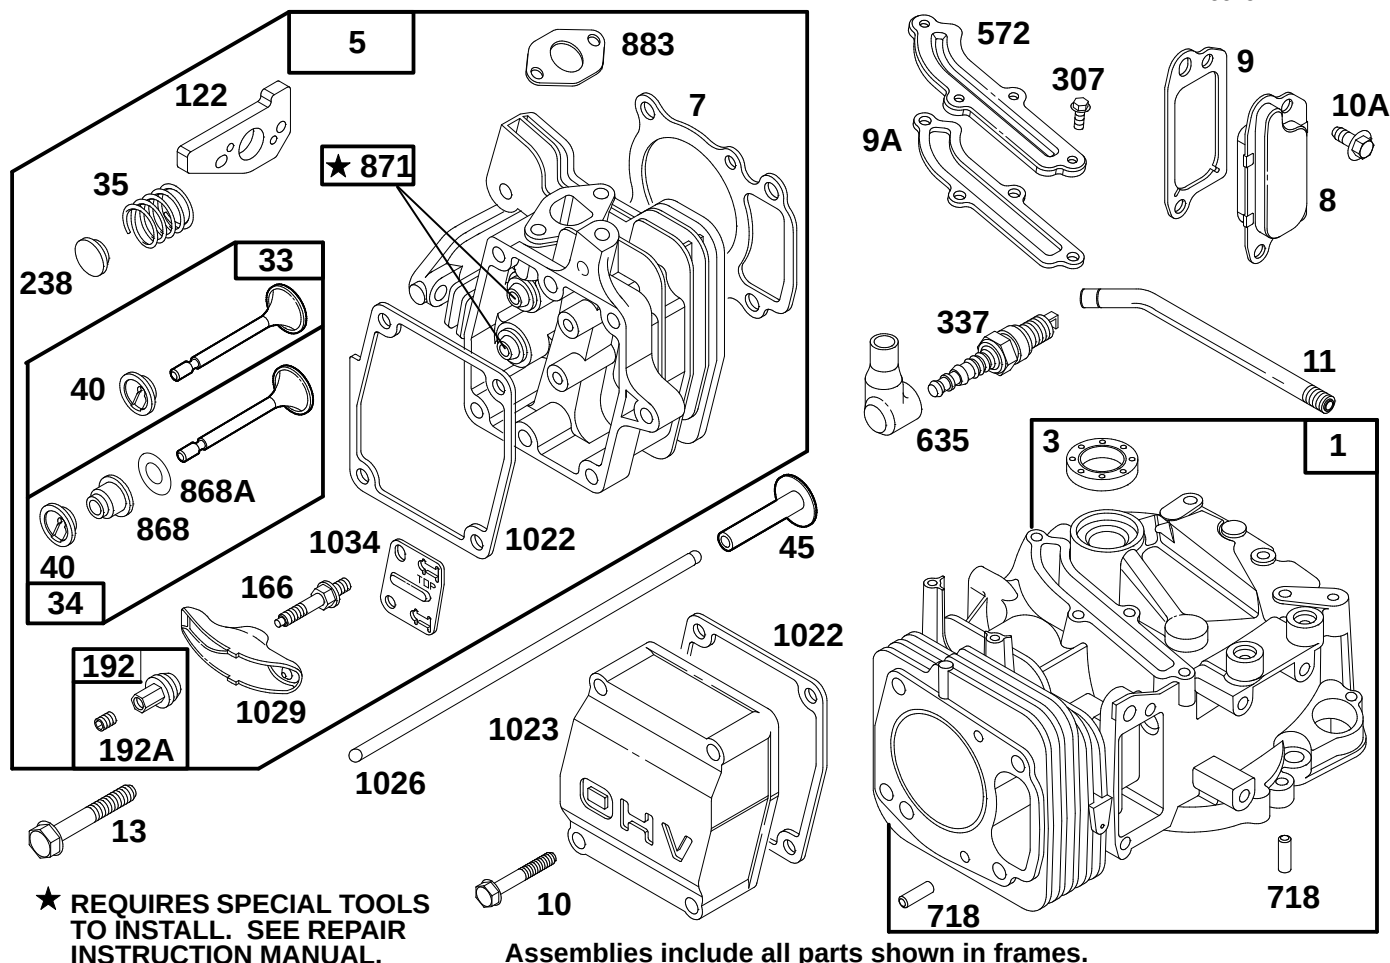


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	77-7590	Cylinder Assy	1	192	77-7910	Ball & Screw – Rocker Arm	1
†3	77-9060	Seal – Oil	1	192A	77-9310	Screw – Set	1
5	77-7730	Head – Cylinder	1	238	77-7800	Cap – Valve	1
†7	77-7740	Gasket – Cylinder Head	1	307	77-7420	Screw – Cover Mtg (Breather Cover)	1
8	77-9300	Breather Assy	1	337	77-7330	Plug – Spark	1
†9	77-9250	Gasket – Breather	1	572	77-7400	Cover – Breather	1
†9A	77-7410	Gasket – Breather	1	635	77-7340	Elbow – Spark Plug	1
10	77-7360	Screw – Hex Head (Valve Cover)	1	718	77-7600	Pin – Dowel	1
10A	77-9200	Screw – Hex Head	1	†868	77-7890	Seal Assy – Valve	1
11	77-9410	Tube – Breather	1	†868A	77-7900	Gasket – Valve	1
13	77-7630	Screw – Cylinder Head	1	871	77-7850	Bushing – Guide	1
33	77-7860	Valve – Exhaust	1	†883	77-7760	Gasket – Exhaust	1
34	77-7880	Valve – Intake	1	†1022	77-7320	Gasket – Rocker Cover	1
35	77-7810	Spring – Valve	1	1023	77-9320	Cover – Valve	1
40	77-7870	Retainer – Spring	1	1026	77-7620	Rod – Push	1
45	77-7610	Tappet – Valve	1	1029	77-7790	Arm – Rocker	1
†122	77-7820	Adapter Assy	1	1034	77-7770	Guide – Push Rod	1
166	77-7780	Stud – Rocker Arm	1				

† Included in Gasket Set – Part No. 77-8900

‡ Included in Carburetor Overhaul Kit – Part No. 77-9580

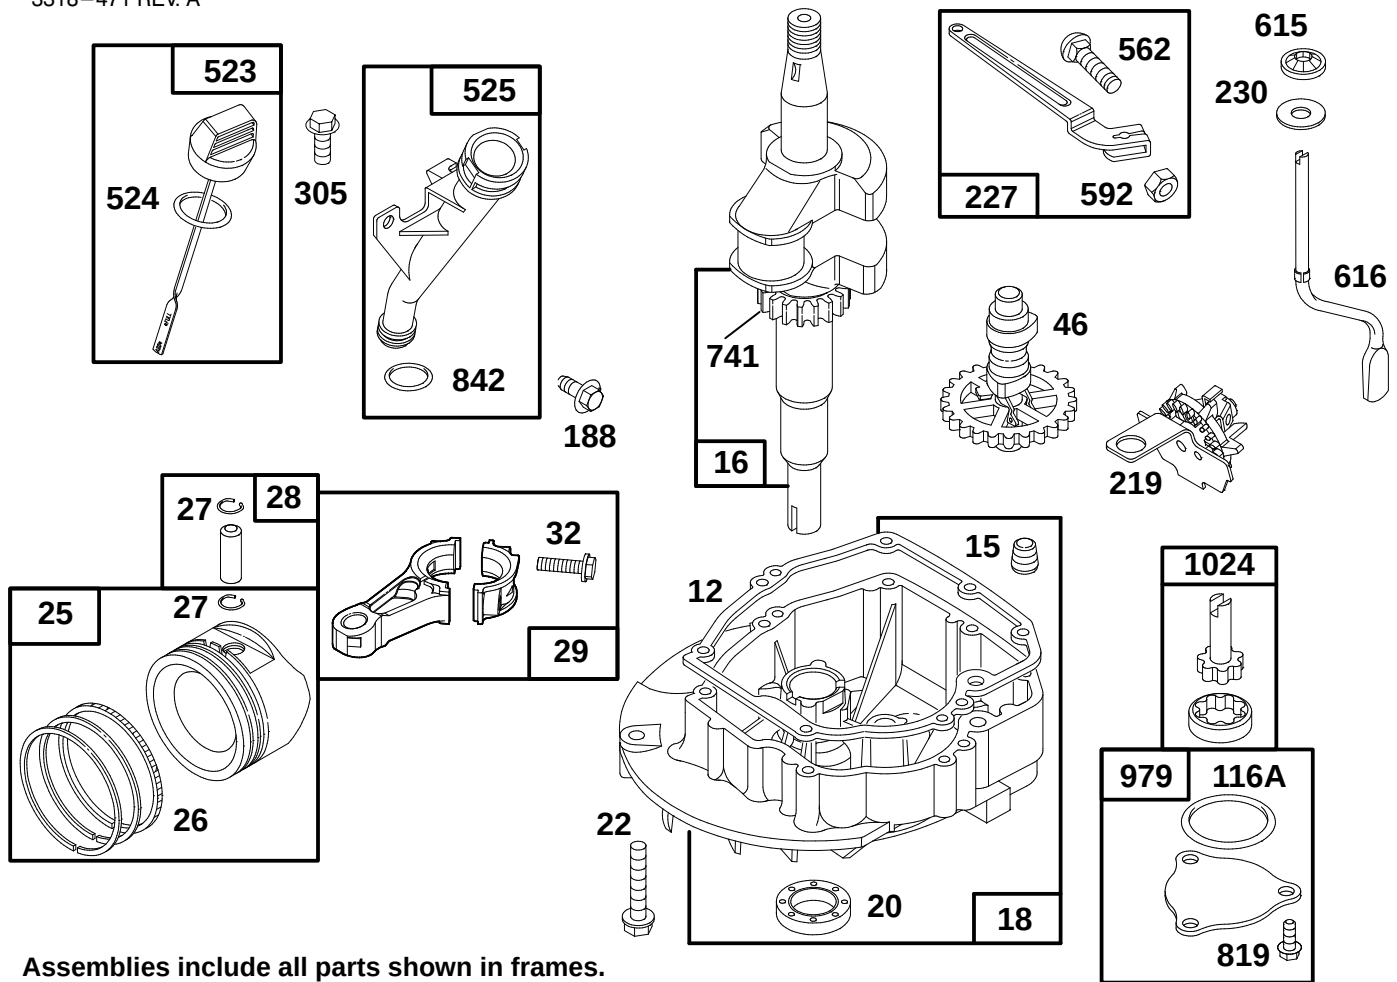


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
†12	77-7550	Gasket – Engine Base	1
15	77-9240	Plug – Pipe	1
16	77-7510	Crankshaft	
		Note: Order Part No. 77-7540 For Timing Gear Key	1
18	77-7560	Base – Engine	1
†20	77-7570	Seal – Oil	1
22	77-9070	Screw – Engine Base	1
25	77-7690	Piston Assy (Std.)	1
26	77-7700	Ring Set (Std.)	1
27	77-7710	Lock – Piston Pin	1
28	77-9340	Pin Assembly – Piston	1
29	77-7670	Rod – Connecting	1
32	77-7680	Screw – Connecting Rod	1
46	77-7490	Gear – Cam	1
†116A	77-7660	O-Ring	1
188	77-9360	Screw – Hex Head	1

Ref. No.	Part No.	Description	No. Used
219	77-7500	Gear – Governor	1
227	77-7370	Lever Assembly – Governor	1
230	77-7470	Washer	1
305	77-8310	Screw – Hex Head	1
523	77-7260	Dipstick – Oil	1
†524	77-7270	Seal – O-Ring	1
525	77-7280	Tube – Oil Fill	1
562	77-7380	Bolt – Governor Lever	1
592	77-7390	Nut – Hex	1
615	77-7480	Push Nut	1
616	77-7460	Crank – Governor	1
741	77-7530	Gear – Timing	1
†842	77-7300	Seal – O-Ring	1
819	77-7450	Screw – Cap	1
979	77-7650	Cover – Oil Pump	1
1024	77-7640	Pump – Oil	1

† Included in Gasket Set – Part No. 77-8900

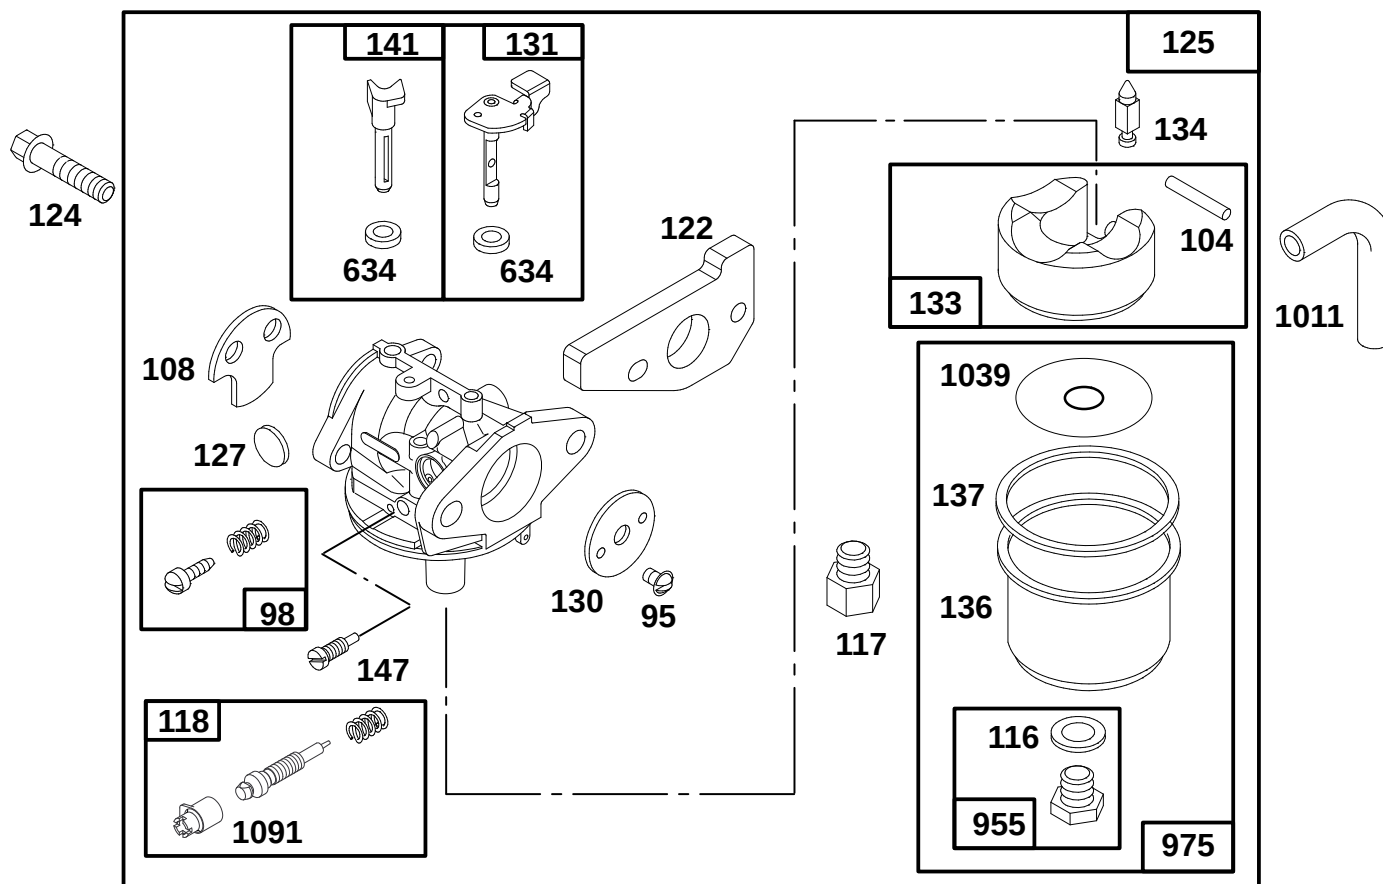


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
95	77-8090	Screw – Valve Mtg	1	130	77-8080	Valve – Throttle	1
98	77-8240	Screw – Idle Adj.	1	131	77-8160	Shaft – Throttle	1
‡104	77-8180	Pin – Float Hinge	1	133	77-8170	Float – Carburetor	1
108	77-9600	Valve – Choke	1	‡134	77-8110	Valve – Inlet (Includes Seat)	1
‡*116	77-8210	Gasket – Sealing	1	136	77-7240	Bowl – Fuel	1
‡117	77-9610	Jet – Main Note: For High Altitude Jet, Order Part No. 94-1650	1	‡*137	77-8200	Gasket – Float Bowl	1
‡118	77-9620	Valve & Spring – Needle	1	141	77-8130	Shaft – Choke	1
‡122	77-7820	Adapter Assy	1	147	77-9640	Jet – Pilot	1
124	77-7970	Screw – Hex Head (Carb. Mtg.)	1	*634	77-8150	Washer – Seal	1
125	77-9630	Carburetor Assy	1	955	77-8220	Screw – Hex Head	1
‡127	94-1651	Plug – Welch	1	975	77-8190	Bowl Assy – Carburetor	1
				1011	77-8040	Tube – Vent	1
				‡1039	77-7250	Limiters – Float	1
				‡1091	77-9650	Cap – Limiter	1

‡ Included in Gasket Set – Part No. 77-9580

* Included in Gasket Set – Part No. 77-8930

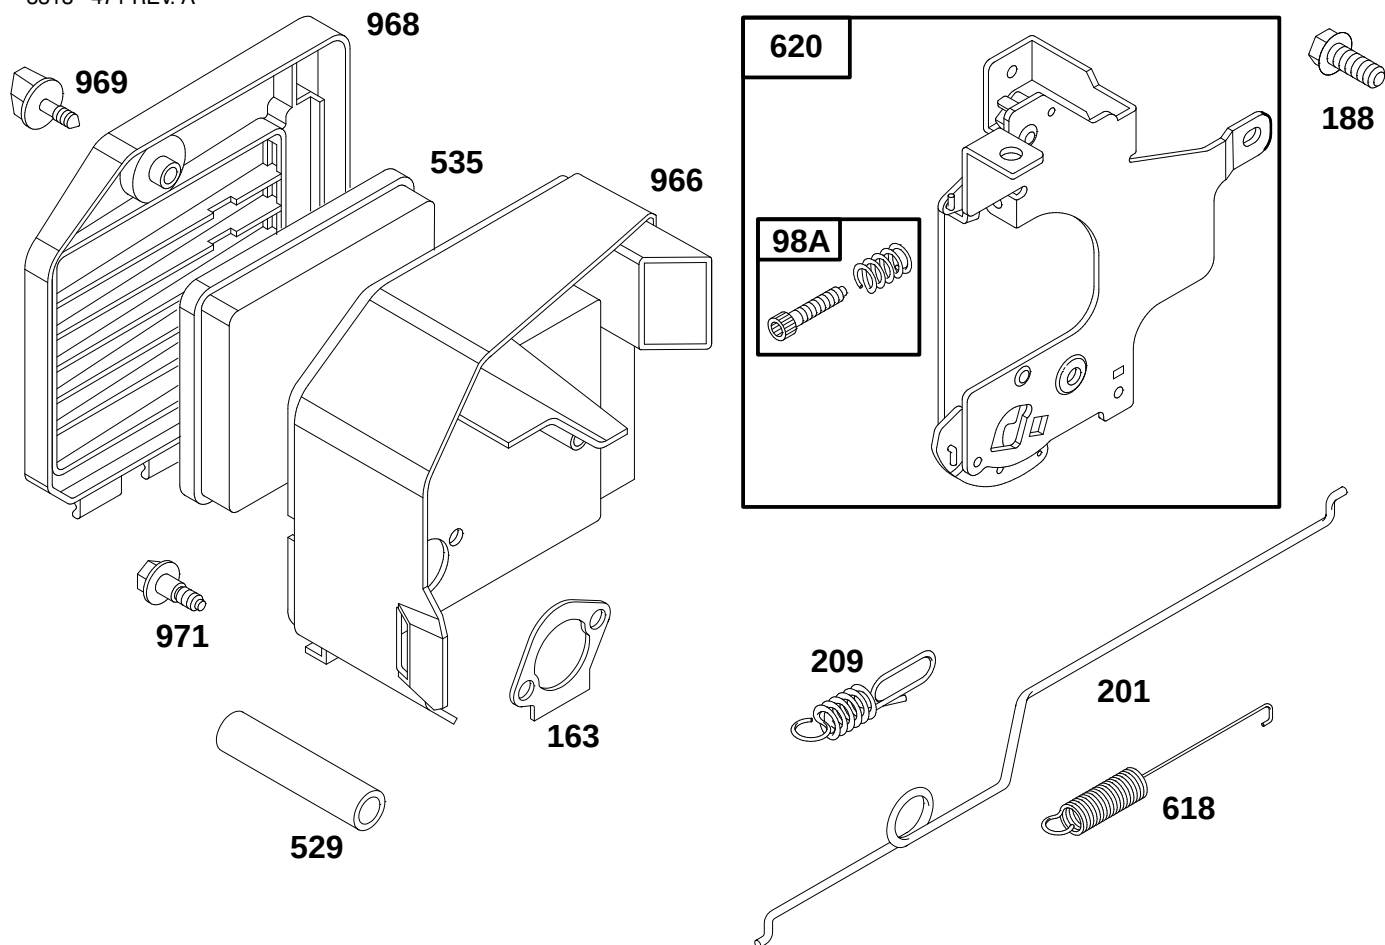

Assemblies include all parts shown in frames.


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
98A	77-8020	Screw Assy - Speed Adj.	1
†163	77-7960	Gasket - Air Cleaner	1
188	77-9360	Screw - Hex Head	1
201	77-7980	Link - Governor	1
209	77-7990	Spring - Governor	1
529	77-8030	Tube - Breather	1
535	77-7950	Element - Filter	1

Ref. No.	Part No.	Description	No. Used
618	77-8140	Spring - Choke	1
620	77-8000	Bracket - Carburetor	1
966	77-7940	Base - Air Cleaner	1
968	77-7040	Cover - Air Cleaner	1
969	77-7920	Screw - Air Cleaner	1
971	77-7930	Screw - Air Cleaner	1

† Included in Gasket Set - Part No. 77-8900

608

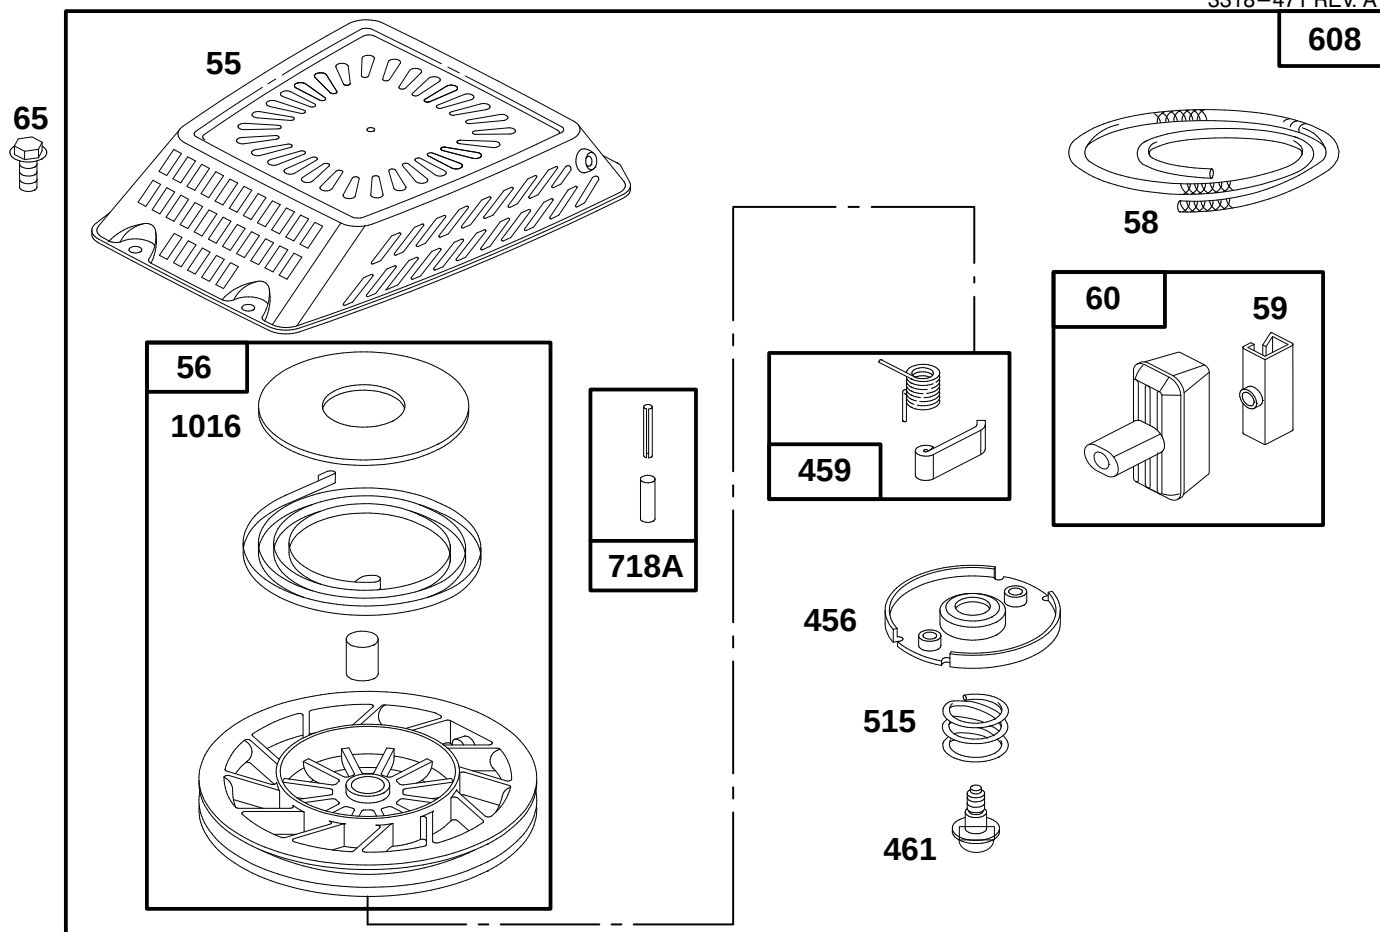


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
55	77-8460	Housing – Rewind Starter	1
56	77-9270	Pulley – Rewind Starter	1
58	77-8480	Rope – Starter (Cut To Suit)	1
59	77-7210	Insert – Rewind Handle	1
60	77-8510	Handle – Rewind Starter	1
65	77-8300	Screw – Hex Head	1
456	77-8470	Retainer – Rewind Starter	1
459	77-8530	Pawl – Starter	1
461	77-8490	Screw – Rewind Starter	1
515	77-8500	Spring – Torsion	1
608	77-8450	Starter Assy – Rewind	1

Ref. No.	Part No.	Description	No. Used
718A	77-8550	Pin – Spring	1
1016	77-8570	Cover – Spring	1
Model No. 26633B–6900001 & Up may have been assembled with Starter Ass’y No. 77-8450 or 94-1678. Part identification will be required for service part replacement.			

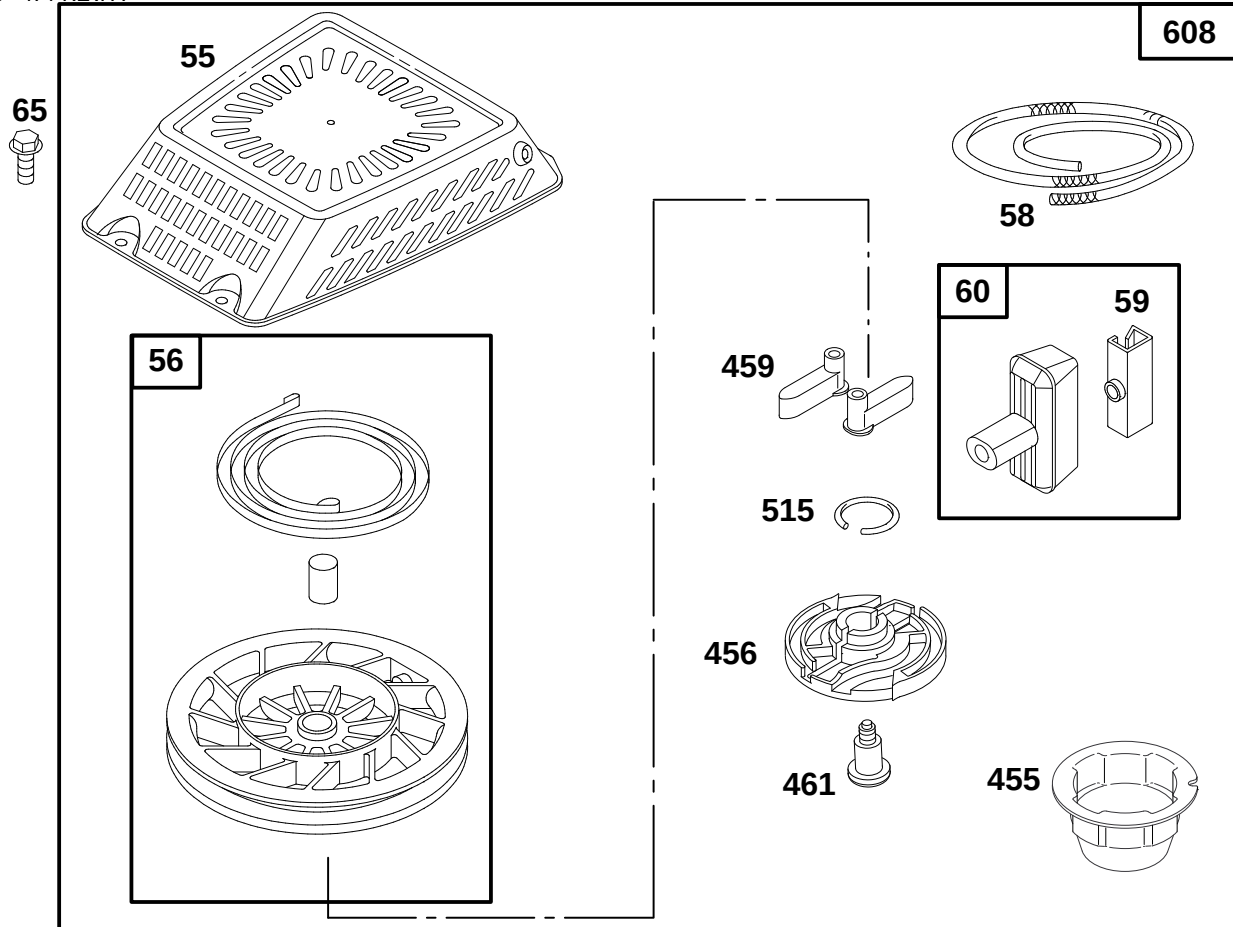


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
55	94-1656	Housing-Rewind Starter	1
56	94-1657	Pulley-Rewind Starter	1
58	94-1668	Rope-Starter (Cut To Suit)	1
59	77-7210	Insert-Rewind Handle	1
60	77-8520	Handle-Rewind Starter	1
65	77-8300	Screw-Hex Head	1
455	94-1653	Cup - Starter	1
456	94-1659	Retainer-Rewind Starter	1
459	94-1654	Pawl-Starter	1
461	94-1660	Screw-Rewind Starter	1
515	94-1655	Spring-Torsion	1




Ref. No.	Part No.	Description	No. Used
608	94-1678	Starter Assy-Rewind Model No. 26633B-6900001 & Up may have been assembled with Starter Ass'y No. 77-8450 or 94-1678. Part identification will be required for service part replacement.	1

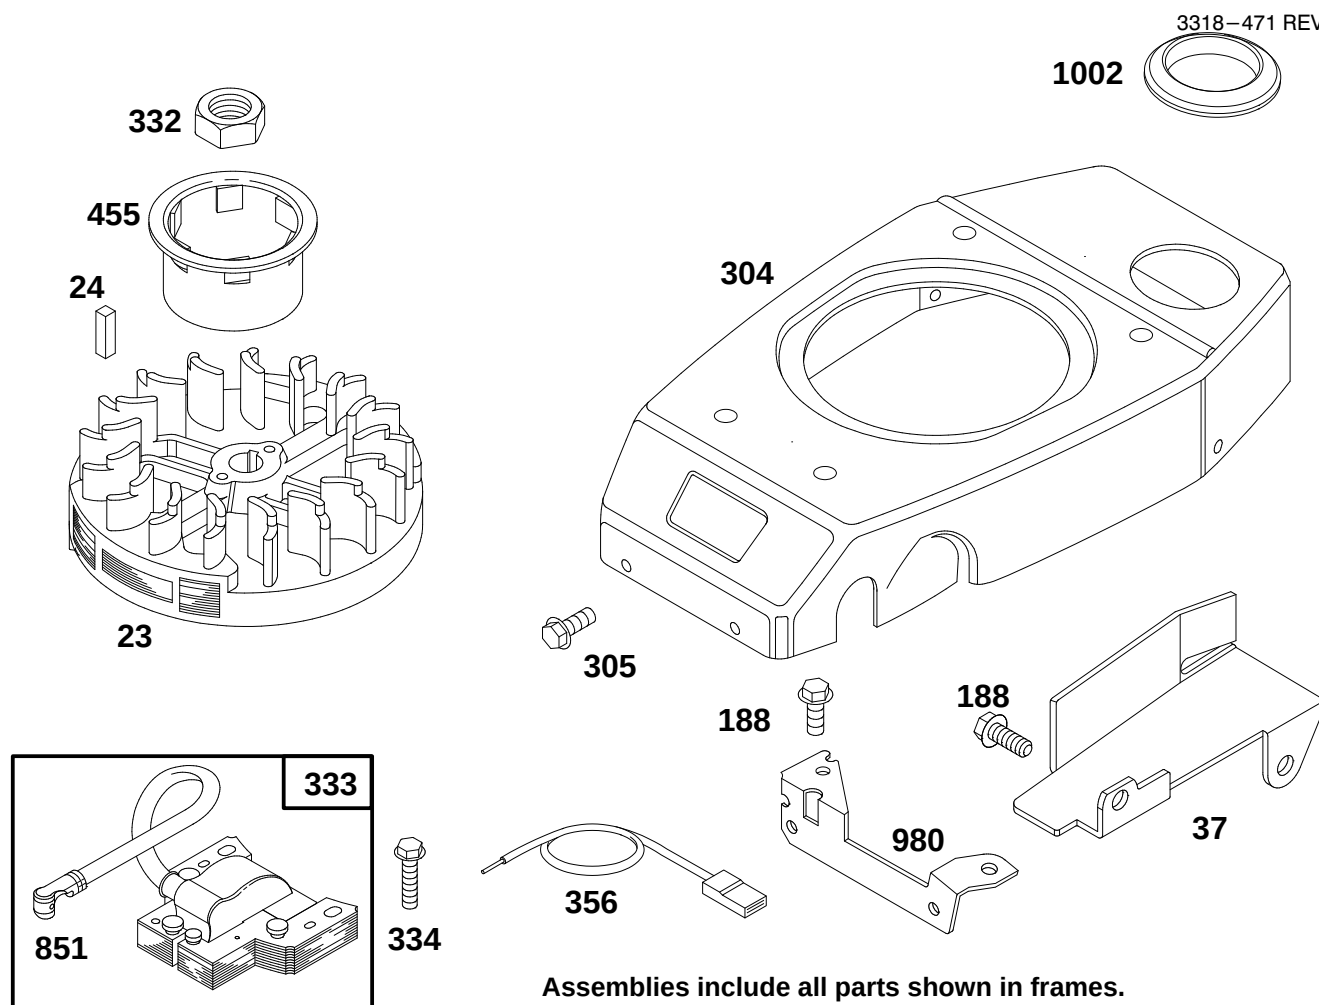

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
23	77-8330	Flywheel – Magneto	1
24	77-8340	Key – Flywheel	1
37	77-7190	Guard – Flywheel	1
188	77-9360	Screw – Hex Head	1
304	77-8270	Housing – Blower	1
305	77-8310	Screw – Hex Head	1
332	77-8360	Nut – Flywheel	1

Ref. No.	Part No.	Description	No. Used
333	77-8420	Armature – Magneto	1
334	77-9420	Screw – Armature Mtg.	1
356	77-8400	Wire – Ground	1
455	77-8350	Cup – Starter	1
851	77-8430	Terminal – Spark Plug	1
980	77-7140	Bracket – Blower Housing	1
1002	77-7180	Grommet	1

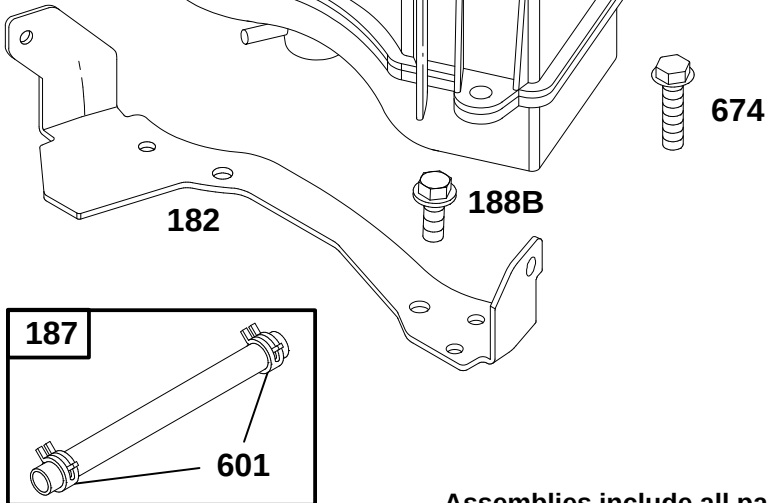
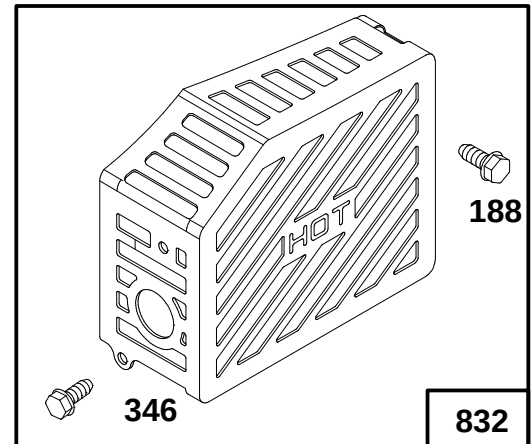
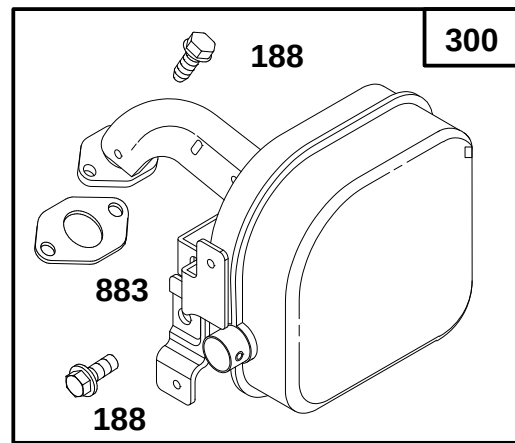


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
180	77-8580	Tank Assy - Fuel	1
182	77-7170	Bracket - Fuel Tank	1
187	78-4100	Hose - Fuel (Cut To Suit)	1
188	77-9360	Screw - Cap	1
300	77-8640	Muffler - Exhaust	1
346	77-9430	Screw - Hex Head	1

Ref. No.	Part No.	Description	No. Used
601	78-4690	Clamp - Hose	1
670	77-9030	Spacer - Fuel Tank	1
674	77-8600	Screw - Tank Mtg.	1
†832	77-9290	Guard - Muffler	1
†1041	77-8590	Seal - Foam	1

16

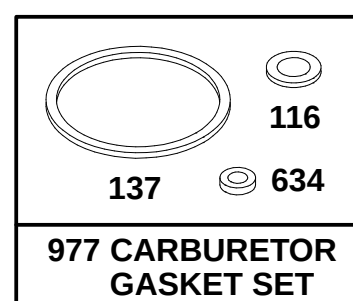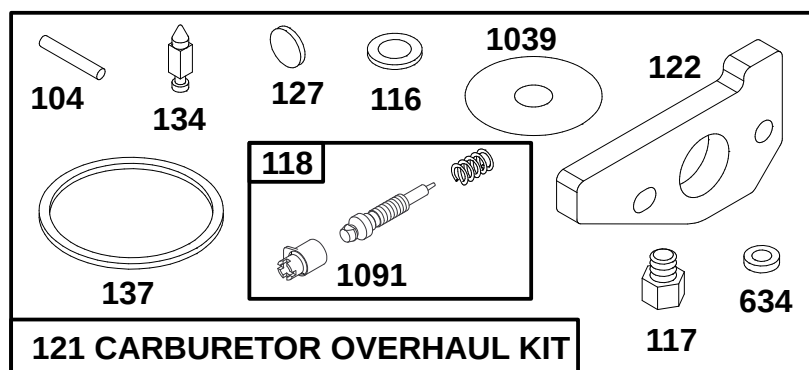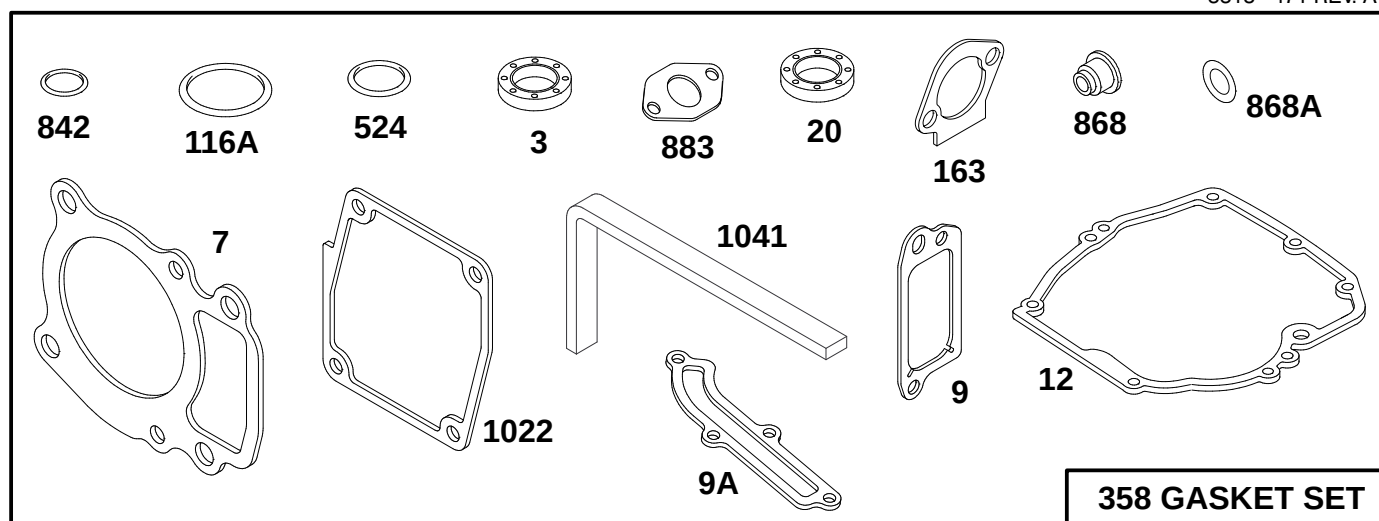

Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†3	77-9060	Seal - Oil (Upper)	1	‡*137	77-8200	Gasket - Float Bowl	1
†7	77-7740	Gasket - Cylinder Head	1	†163	77-7960	Gasket - Air Cleaner	1
†9	77-9250	Gasket - Breather	1	358	77-8900	Gasket Set	1
†9A	77-7410	Gasket - Breather Cover	1	†524	77-7270	Seal - O-Ring (Oil Fill Cap)	1
†12	77-7550	Gasket - Engine Base	1	*634	77-8150	Washer - Seal	1
†20	77-7570	Seal - Oil (Lower)	1	†842	77-7300	Seal - O-Ring (Oil Fill Tube)	1
‡104	77-8180	Pin - Float Hinge	1	†868	77-7890	Seal Assy - Valve	1
‡*116	77-8210	Washer - Bowl	1	†868A	77-7900	Seal - Valve	1
†116A	77-7660	Seal - O-Ring	1	†883	77-7760	Gasket - Exhaust	1
†117	77-9610	Jet - Main	1	977	77-8930	Carburetor Gasket Set	1
†118	77-9620	Valve & Spring - Needle	1	†1022	77-7320	Gasket - Rocker Cover	1
121	77-9580	Overhaul Kit - Carburetor	1	†1039	77-7250	Limiter - Float	1
†122	77-7820	Adapter Assy	1	†1041	77-8590	Seal - Foam (Fuel Tank)	1
†127	94-1651	Plug - Welch	1	‡1091	77-9650	Cap - Limiter	1
†134	77-8110	Valve - Inlet (Includes Seat)	1				

‡ Incl. in Carburetor Overhaul Kit - Part No. 77-9580
 *Incl. in Carburetor Gasket Set - Part No. 77-8930

† Included in Gasket Set - Part No. 77-8900

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
11-0580	Screw	3 45 1	65-4710	Ring - Friction	6 25 2
14-9949	Asm - Wheel & Tire, 8	1 22 2	65-4720	Spring - Compression	6 29 2
14-9959	Wheel Tire & Gear Assy.	6 31 2	65-4730	Washer - Thrust (Inner)	6 22 2
16-1769	Housing	1 11 1	65-4740	Washer - Thrust (Keyed)	6 23 4
16-8969	Panel - Control	4 17 1	65-4750	Pinion	6 28 2
17-1569	Door - Discharge	1 1 1	65-4760	Washer - Clutch	6 26 2
17-9425	Screw - Handle	8 6 1	65-4770	Shaft - Output	6 17 1
17-9426	Screw	8 23 1	65-5042	Pivot Arm Assembly	6 2 2
19-4050	Knob	4 2 2	65-5070	Hub - Plate	3 2 1
25-7740	Knob - Arm	6 3 2	65-5130	Hub - Pulley	3 4 2
25-7740	Knob - Arm	1 14 2	65-5190	Bracket - Belt Guide	6 7 1
27-6231	Bolt - Wheel	1 23 2	65-5200	Shield - BBC	3 33 1
27-6231	Bolt - Wheel	6 33 2	65-5210	Screw	1 4 2
27-6250	Bushing - Wheel	6 32 4	65-5220	Screw	1 16 2
27-6250	Bushing - Wheel	1 38 4	65-5220	Screw - Socket Hd. Cap	6 36 2
29-9570	Bushing - Yoke	6 38 1	65-5250	Clip - Spring	6 43 1
36-4780	Washer - Thrust	6 44 1	65-5280	Retainer - Spring	3 24 1
36-4791	Washer - Thrust	7 48 2	65-5300	Flywheel - BBC	3 27 1
36-8070	V-Belt	6 13 1	65-5320	Rod - Spring	3 6 1
38-7820	Bearing - Ball	7 60 1	65-5330	Screen - BBC	3 39 1
40-1940	Washer	1 15 4	65-5380	Washer - Flat	3 46 1
42-3190	Bolt - Blade	3 28 2	65-5440	Spring Arm Assembly	6 4 2
42-6890	Asm - Hub	3 32 1	65-5660	Panel - Screen	1 9 1
46-5460	Housing - Control LH	8 7 1	65-5670	Bolt - Shoulder	3 7 1
46-5510	Spring - Torsion	8 11 1	65-5690	Bushing - Bellcrank	3 18 1
46-5520	Lever - Traction	8 21 1	65-5700	Crank	3 19 1
46-5530	Hook - Control	8 14 1	65-5720	Bushing	3 11 1
46-5540	Lever - Cable	8 3 1	65-5740	V-Belt	3 3 1
46-5550	Bushing	8 10 1	65-5780	Shoe - Brake	3 1 1
46-5590	Spacer	8 8 1	66-0020	Panel - Vertical	1 12 1
46-5650	Pulley - Idler	3 43 1	66-0030	Bracket - Cable Support	3 16 1
46-6431	Screw - Handle	8 5 1	66-0090	Lever - Brake	3 10 1
46-7040	Screw - Hex Washer Hd.	3 13 1	66-0160	Housing - Control RH	8 15 1
46-7040	Screw - Hex Washer Hd.	8 16 3	66-0170	Washer - Nylon	8 18 1
48-2060	Bearing - Needle	6 21 2	66-0180	Rocker	8 4 1
49-2040	Screw - Self Tapping	6 8 8	66-0190	Spring - Detent	8 19 1
52-3480	Damper - Vibration	3 42 2	66-0330	Spacer - Support	8 24 1
52-7410	Spring - Leaf	8 13 1	66-0350	Bushing - Flange	3 9 1
52-7430	Bar - Control	8 20 1	66-0360	Cap - End	6 5 2
54-9190	Nut - Lock	3 37 2	66-0540	Asm - Spring Arm, Front	1 18 2
55-3760	Gear - Pinion 15T	7 49 1	66-0560	Screw - Shoulder	1 21 2
55-3770	Gear - 49T (1st Gear)	7 58 1	66-0570	Guide - Belt	2 9 1
55-3780	Gear - Pinion 20T	7 50 1	66-0580	Arm - Pivot	1 20 2
55-3790	Gear - 44T (2nd Gear)	7 57 1	66-6040	Key - Rocking (R.H.)	6 * 1
55-3800	Gear - Pinion 25T	7 51 1	66-6050	Key - Rocking (L.H.)	6 27 1
55-3810	Gear - 39T (3rd Gear)	7 56 1	70-9760	Bushing - Sleeve	6 19 2
57-6290	Pin - Insert	8 12 1	71-3630	Spring - Compression	3 23 1
60-8710	Case - Gear (Upper)	7 61 1	71-3640	Spring - Compression	3 8 1
60-8730	Cover - Gear Case	7 46 1	71-3650	Link - Control	3 21 1
60-8750	Bushing - Intrmdt. Shaft	7 47 2	71-3660	Pin-Spring	3 20 1
60-8770	Bushing - Output Shaft	7 45 1	71-7900	Cap-Bolt, Hinge LH	1 2 1
60-8790	Sleeve - Gear	7 55 1	71-7910	Cap - Bolt, Hinge RH	1 5 1
60-8800	Shaft - Intermediate	7 52 1	71-8090	Mount - Handle LH	4 1 1
60-8810	Retainer - Shift Fork	6 39 1	71-8100	Mount - Handle RH	4 24 1
60-8840	Pulley - Half	6 10 2	71-8580	Spacer - Door	1 28 2
60-8850	Bushing - Output Shaft	7 53 1	71-9470	Door - Bag	5 3 1
60-8870	Yoke - Shift	6 37 1	71-9480	Handle - Door	5 2 1
60-8890	Pinion - Bevel	7 59 1	71-9640	Ramp - Discharge	1 19 1
62-3890	Drum - Brake	3 31 1	71-9650	Access - Cover	1 25 1
62-4280	Spacer - Blade	3 34 1	71-9680	Bag - Grass	5 5 1
62-6660	Spacer	6 9 1	71-9840	Spring - Door	1 29 2
62-6673	Gear Case Assy. Complete	7 * 1	71-9870	Decal - Deck	1 13 1
62-7560	Pulley - Driver	3 26 1	71-9872	Decal - Panel	4 9 1
62-7700	Bade - 21	3 35 1	71-9920	Cover - Top	1 24 1
65-2720	Ring - Retaining	6 24 4	71-9930	Frame	5 4 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
74-1660	Cover - Wheel	6 30 2	77-7760	Gasket - Exhaust	17 883 1
74-1670	Spacer - Wheel Cover	6 34 2	77-7760	Gasket - Exhaust	9 883 1
76-0760	Key - Shift	6 41 2	77-7770	Guide - Push Rod	9 1034 1
76-0770	Collar - Shift	6 42 1	77-7780	Stud - Rocker Arm	9 166 1
76-0780	Sleeve - Shift Key	6 40 1	77-7790	Arm - Rocker	9 1029 1
76-0920	Lever - Shift	6 16 1	77-7800	Cap - Valve	9 238 1
76-2930	Retainer - Cable	6 15 1	77-7810	Spring - Valve	9 35 1
77-7040	Cover - Air Cleaner	12 968 1	77-7820	Adapter Assy	11 122 1
77-7140	Bracket - Blower Housing	15 980 1	77-7820	Adapter Assy	17 122 1
77-7170	Bracket - Fuel Tank	16 182 1	77-7820	Adapter Assy	9 122 1
77-7180	Grommet	15 1002 1	77-7850	Bushing - Guide	9 871 1
77-7190	Guard - Flywheel	15 37 1	77-7860	Valve - Exhaust	9 33 1
77-7210	Insert - Rewind Handle	13 59 1	77-7870	Retainer - Spring	9 40 1
77-7210	Insert - Rewind Handle	14 59 1	77-7880	Valve - Intake	9 34 1
77-7240	Bowl - Fuel	11 136 1	77-7890	Seal Assy - Valve	17 868 1
77-7250	Limit - Float	11 1039 1	77-7890	Seal Assy - Valve	9 868 1
77-7250	Limit - Float	17 1039 1	77-7900	Gasket - Valve	9 868A 1
77-7260	Dipstick - Oil	10 523 1	77-7900	Seal - Valve	17 868A 1
77-7270	Seal - O-Ring	10 524 1	77-7910	Ball & Screw - Rocker Arm	9 192 1
77-7270	Seal - O-Ring	17 524 1	77-7920	Screw - Air Cleaner	12 969 1
77-7280	Tube - Oil Fill	10 525 1	77-7930	Screw - Air Cleaner	12 971 1
77-7300	Seal - O-Ring	10 842 1	77-7940	Base - Air Cleaner	12 966 1
77-7300	Seal - O-Ring	17 842 1	77-7950	Element - Filter	12 535 1
77-7320	Gasket - Rocker Cover	17 1022 1	77-7960	Gasket - Air Cleaner	12 163 1
77-7320	Gasket - Rocker Cover	9 1022 1	77-7960	Gasket - Air Cleaner	17 163 1
77-7330	Plug - Spark	9 337 1	77-7970	Screw - Hex Head	11 124 1
77-7340	Elbow - Spark Plug	9 635 1	77-7980	Link - Governor	12 201 1
77-7360	Screw - Hex Head	9 10 1	77-7990	Spring - Governor	12 209 1
77-7370	Lever Assembly - Governor	10 227 1	77-8000	Bracket - Carburetor	12 620 1
77-7380	Bolt - Governor Lever	10 562 1	77-8020	Screw Assy - Speed Adj.	12 98A 1
77-7390	Nut - Hex	10 592 1	77-8030	Tube - Breather	12 529 1
77-7400	Cover - Breather	9 572 1	77-8040	Tube - Vent	11 1011 1
77-7410	Gasket - Breather	9 9A 1	77-8080	Valve - Throttle	11 130 1
77-7410	Gasket - Breather Cover	17 9A 1	77-8090	Screw - Valve Mtg	11 95 1
77-7420	Screw - Cover Mtg	9 307 1	77-8110	Valve - Inlet	11 134 1
77-7450	Screw - Cap	10 819 1	77-8110	Valve - Inlet	17 134 1
77-7460	Crank - Governor	10 616 1	77-8130	Shaft - Choke	11 141 1
77-7470	Washer	10 230 1	77-8140	Spring - Choke	12 618 1
77-7480	Push Nut	10 615 1	77-8150	Washer - Seal	11 *634 1
77-7490	Gear - Cam	10 46 1	77-8150	Washer - Seal	17 *634 1
77-7500	Gear - Governor	10 219 1	77-8160	Shaft - Throttle	11 131 1
77-7510	Crankshaft	10 16 1	77-8170	Float - Carburetor	11 133 1
77-7530	Gear - Timing	10 741 1	77-8180	Pin - Float Hinge	11 104 1
77-7550	Gasket - Engine Base	10 12 1	77-8180	Pin - Float Hinge	17 104 1
77-7550	Gasket - Engine Base	17 12 1	77-8190	Bowl Assy - Carburetor	11 975 1
77-7560	Base - Engine	10 18 1	77-8200	Gasket - Float Bowl	11 *137 1
77-7570	Seal - Oil	10 20 1	77-8200	Gasket - Float Bowl	17 *137 1
77-7570	Seal - Oil	17 20 1	77-8210	Gasket - Sealing	11 *116 1
77-7590	Cylinder Assy	9 1 1	77-8220	Screw - Hex Head	11 955 1
77-7600	Pin - Dowel	9 718 1	77-8240	Screw - Idle Adj.	11 98 1
77-7610	Tappet - Valve	9 45 1	77-8270	Housing - Blower	15 304 1
77-7620	Rod - Push	9 1026 1	77-8300	Screw - Hex Head	13 65 1
77-7630	Screw - Cylinder Head	9 13 1	77-8300	Screw - Hex Head	14 65 1
77-7640	Pump - Oil	10 1024 1	77-8310	Screw - Hex Head	10 305 1
77-7650	Cover - Oil Pump	10 979 1	77-8310	Screw - Hex Head	15 305 1
77-7660	O-Ring	10 116A 1	77-8330	Flywheel - Magneto	15 23 1
77-7660	Seal - O-Ring	17 116A 1	77-8340	Key - Flywheel	15 24 1
77-7670	Rod - Connecting	10 29 1	77-8350	Cup - Starter	15 455 1
77-7680	Screw - Connecting Rod	10 32 1	77-8360	Nut - Flywheel	15 332 1
77-7690	Piston Assy (Std.)	10 25 1	77-8400	Wire - Ground	15 356 1
77-7700	Ring Set (Std.)	10 26 1	77-8420	Armature - Magneto	15 333 1
77-7710	Lock - Piston Pin	10 27 1	77-8430	Terminal - Spark Plug	15 851 1
77-7730	Head - Cylinder	9 5 1	77-8450	Starter Assy - Rewind	13 608 1
77-7740	Gasket - Cylinder Head	17 7 1	77-8460	Housing - Rewind Starter	13 55 1
77-7740	Gasket - Cylinder Head	9 7 1	77-8470	Retainer - Rewind Starter	13 456 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
77-8480	Rope - Starter	13 58 1	92-9665	Screw	4 7 4
77-8490	Screw - Rewind Starter	13 461 1	93-4105	Decal - Bag Door	1 36 1
77-8500	Spring - Torsion	13 515 1	93-4355	Decal - Engine	2 2 1
77-8510	Handle - Rewind Starter	13 60 1	93-6629	Asm - Cable	8 1 1
77-8520	Handle - Rewind Starter	14 60 1	93-6630	Control - Throttle	4 19 1
77-8530	Pawl - Starter	13 459 1	93-6632	Control - Speed	4 23 1
77-8550	Pin - Spring	13 718A 1	93-6633	Cable - Traction	8 2 1
77-8570	Cover - Spring	13 1016 1	93-6656	Decal - Instruction	4 10 1
77-8580	Tank Assy - Fuel	16 180 1	93-7198	Asm - Cap, Gas	2 1 1
77-8590	Seal - Foam	16 1041 1	94-1605	Engine - GTS 150	2 4 1
77-8590	Seal - Foam	17 1041 1	94-1651	Plug - Welch	11 127 1
77-8600	Screw - Tank Mtg.	16 674 1	94-1651	Plug - Welch	17 127 1
77-8640	Muffler - Exhaust	16 300 1	94-1653	Cup - Starter	14 455 1
77-8900	Gasket Set	17 358 1	94-1654	Pawl - Starter	14 459 1
77-8930	Carburetor Gasket Set	17 977 1	94-1655	Spring - Torsion	14 515 1
77-9030	Spacer - Fuel Tank	16 670 1	94-1656	Housing - Rewind Starter	14 55 1
77-9060	Seal - Oil	17 3 1	94-1657	Pulley - Rewind Starter	14 56 1
77-9060	Seal - Oil	9 3 1	94-1659	Retainer - Rewind Starter	14 456 1
77-9070	Screw - Engine Base	10 22 1	94-1660	Screw - Rewind Starter	14 461 1
77-9200	Screw - Hex Head	9 10A 1	94-1668	Rope - Starter (Cut To Suit)	14 58 1
77-9240	Plug - Pipe	10 15 1	94-1678	Starter Assy - Rewind	14 608 1
77-9250	Gasket - Breather	17 9 1	94-4910	Handle	4 16 1
77-9250	Gasket - Breather	9 9 1	2210-249	Clamp - Casting	2 8 1
77-9270	Pulley - Rewind Starter	13 56 1	237-153	Seal - ORing	6 18 2
77-9290	Guard - Muffler	16 832 1	253-151	Seal - Ring	3 12 1
77-9300	Breather Assy	9 8 1	302-56	Fitting - Grease	6 20 2
77-9310	Screw - Set	9 192A 1	321-13	Screw - Hex Hd.	3 44 2
77-9320	Cover - Valve	9 1023 1	322-21	Screw - Hex Hd.	3 22 1
77-9340	Pin Assembly - Piston	10 28 1	322-29	Screw - Hex Head	1 3 2
77-9360	Screw - Cap	16 188 1	3256-23	Washer - Flat	3 17 2
77-9360	Screw - Hex Head	10 188 1	3256-24	Washer - Flat	6 12 1
77-9360	Screw - Hex Head	12 188 1	3257-17	Key - Woodruff	3 25 1
77-9360	Screw - Hex Head	15 188 1	3272-5	Pin - Cotter	6 14 1
77-9410	Tube - Breather	9 11 1	3290-378	Tie - Cable	4 25 5
77-9420	Screw - Armature Mtg.	15 334 1	3296-5	Nut - Lock	6 11 1
77-9430	Screw - Hex Head	16 346 1	3296-6	Nut - Lock	1 17 4
77-9580	Overhaul Kit - Carburetor	17 121 1	3296-6	Nut - Lock	6 35 2
77-9600	Valve - Choke	11 108 1	3296-8	Nut - Lock	8 17 1
77-9610	Jet - Main	11 117 1	3296-33	Nut - Lock, Nylon	3 38 1
77-9610	Jet - Main	17 117 1	3296-42	Nut - Lock	3 5 2
77-9620	Valve & Spring - Needle	11 118 1	3296-58	Nut - Flange	8 22 2
77-9620	Valve & Spring - Needle	17 118 1	32121-9	Pin - Roll	8 9 1
77-9630	Carburetor Assy	11 125 1	32121-120	Pin - Coil	7 54 1
77-9640	Jet - Pilot	11 147 1	32128-44	Nut - Flange	3 15 1
77-9650	Cap - Limiter	11 1091 1	32144-70	Screw - Hex. Washer Hd.	6 1 5
77-9650	Cap - Limiter	17 1091 1	32144-70	Screw - Tap	1 8 6
78-4100	Hose - Fuel	16 187 1	32144-70	Screw - Tap	2 11 2
78-4690	Clamp - Hose	16 601 1	32144-70	Screw - Tap	3 14 5
80-2770	Cup - Anti Scalp	3 36 1	32144-102	Screw	2 10 3
86-7990	Screw - Clamp	2 7 1	32144-111	Screw - Phillips Pan Hd.	5 1 5
92-2289	Plate - Logo, Toro	2 3 1			

*Not Illustrated