

LAWN-BOY®

21" SILVER SERIES WALK-BEHIND MOWER

MODEL NO. 10305—6900001 & UP
MODEL NO. 10313—6900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN-BOY owners as quickly as possible, minor changes are incorporated into LAWN-BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN-BOY Distributor or his Authorized LAWN-BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.


NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Housing Assembly	3	Engine TVS120-63926M	9-11
Rear Axle Assembly	4	Carburetor No. 632681	12
Gear Case Assembly	5	Recoil Starter Assembly 590702	13
Engine Assembly	6	Recoil Starter Assembly 590739 (Optional)	14
Handle Assembly	7	Numeric Parts Index	15
Rear Catcher Assembly (Model No. 10313 Only)	8		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Mow & Feed Fertilizer Spreader .	Model No. 52070
Leaf Bag	Model No. 89804	Rear Bagging Kit	
Leaf Shredder Kit	Model No. 89860	(Model No. 10305 Only)	Model No. 89800
Leaf Bag Kit w/Chute	Model No. 89811		

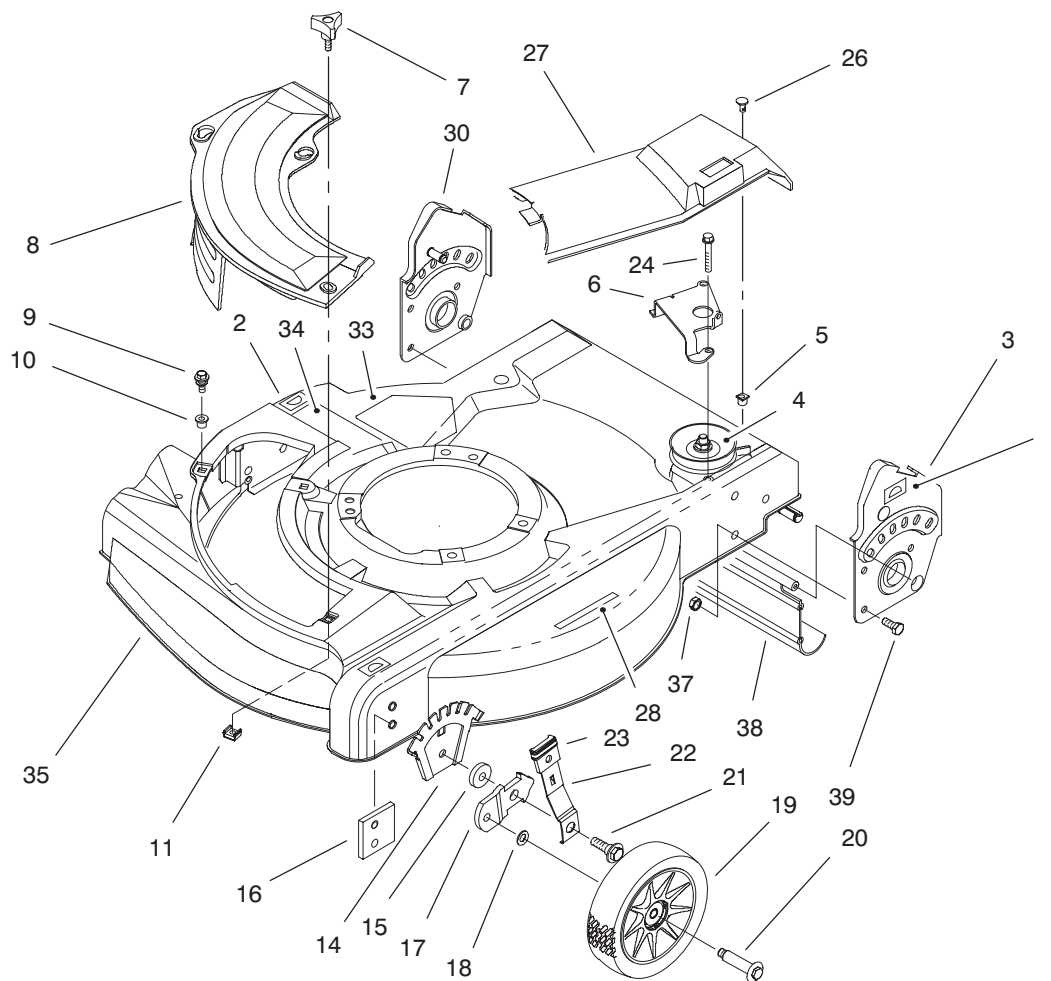


C-2237

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-2915	Decal - H.O.C.	2	21	614672	Bolt - Shoulder	2
2	92-2914	Decal - H.O.C.	2	22	614687	Spring Arm - Front	2
3	92-7724	Bracket - Handle L.H.	1	23	92-1008	Knob - Height Adjust	4
4	92-7735	Gear Case Assembly	1	24	49-2040	Screw - Hex Hd. Cap	2
5	605120	Grommet	1	26	92-9665	Screw - Phillip Hd.	1
6	92-7728	Guide - Transmission	1	27	614671	Cover - Drive	1
7	614682	Knob - Cover Plate	1	28	93-7250	Decal - Warning	1
8	92-8630	Plate - Mulch 21"	1	30	92-7723	Bracket - Handle R.H.	1
9	614677	Screw - Sems Thr'd Form.	2	33	39-5770	Decal - Danger	1
10	94-1610	Grommet - Plastic	2	34	92-1097	Decal - Discharge	1
11	613765	Nut - Cage	1	35		Housing Assembly (Incl. Ref. #5, 10, 11, 28, 33, & 34)	1
14	92-4881	Plate - Height Adjust	2	37	3296-29	Nut - Hex Lock	6
15	92-4890	Washer	2	38	92-8647	Shield - Trailing	1
16	92-7731	Plate - Baffle	2	39	322-3	Screw - Hex Hd. Cap	6
17	614637	Bracket - Wheel Height Adj.	2	*	607560	Plate - Cover	1
18	40-1940	Washer	2				
19	684776	Wheel & Tire Assembly - 6"	2				
20	92-1099	Bolt - Shoulder	2				

*Not Illustrated

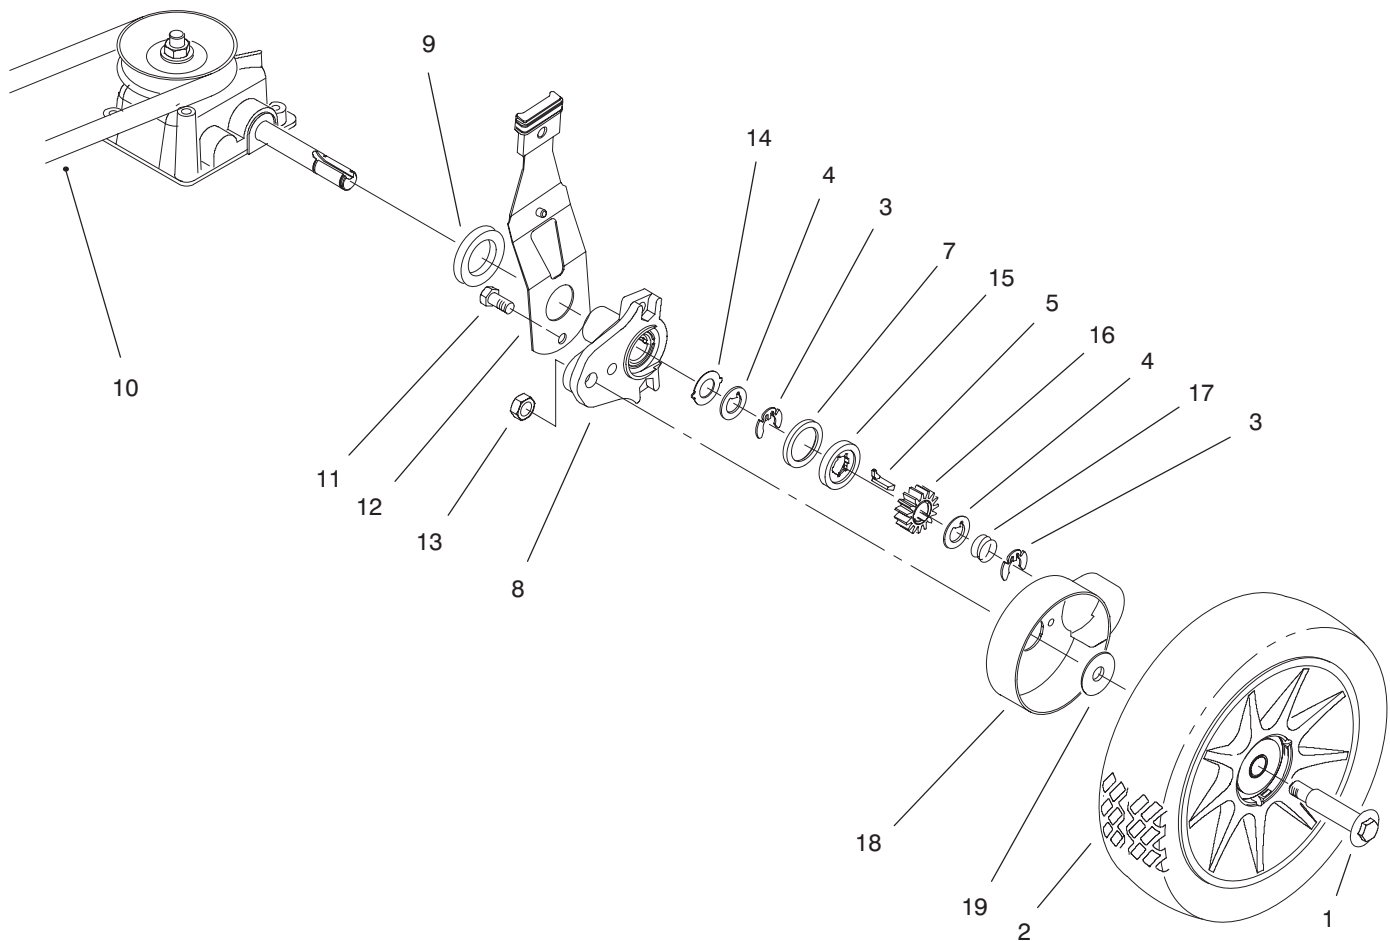


C-2238

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-1057	Bolt - Shoulder	2
2	92-1042	Wheel & Tire Assembly 8"	2
3	65-2720	Ring - Retaining	4
4	65-4740	Washer - Thrust Keyed	4
5	66-6050	Key - Rocking L.H.	1
*	66-6040	Key - Rocking R.H.	1
7	65-4710	Ring - Friction	2
8	92-7746	Arm - Height Adj. Rear	2
9	614447	Spacer - Axle Shaft	2
10	93-7381	V-Belt	1

Ref. No.	Part No.	Description	No. Used
11	32144-85	Screw - Hex Hd.	2
12	92-1004	Spring Arm Assembly	2
13	610358	Nut - Lock	2
14	65-4730	Washer - Thrust	2
15	65-4760	Washer	2
16	65-4750	Gear - Pinion	2
17	65-4720	Spring - Compression	2
18	94-1609	Cover - Wheel	2
19	614426	Washer - Stepped	2

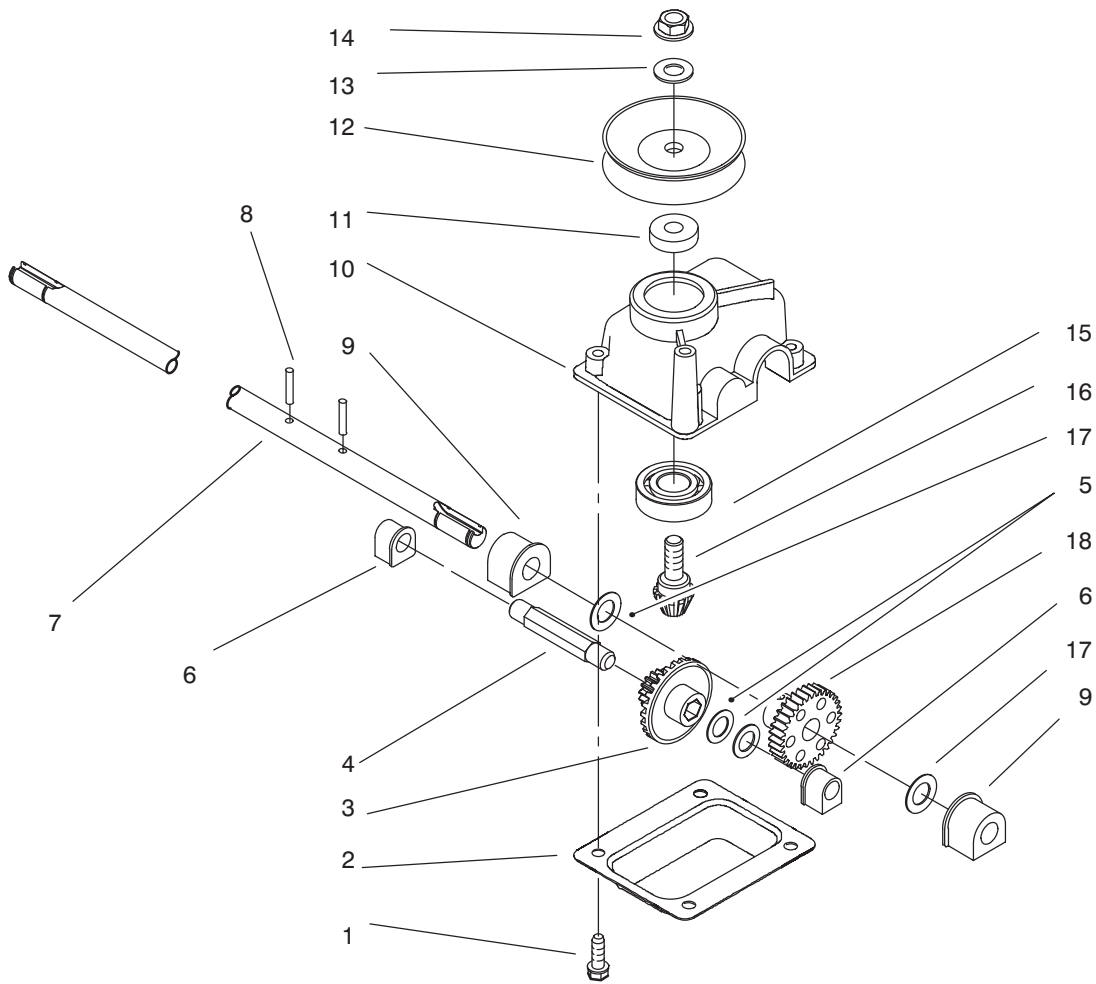


C-1292

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Taptite	4	11	62-6660	Spacer	1
2	614668	Cover - Gear Case	1	12	614669	Pulley - Half	2
3	55-3760	Pinion - 15 Tooth	1	13	3256-24	Washer	1
4	614696	Shaft - Intermediate	1	14	3296-5	Nut	1
5	36-4791	Washer	2	15	38-7820	Bearing - Ball	1
6	60-8750	Bushing	2	16	60-8890	Gear - Bevel Pinion	1
7	93-0239	Shaft - Output	1	17	36-4780	Washer - Thrust	2
8	3285-19	Pin - Groove	2	18	614596	Gear 34 Tooth	1
9	60-8850	Bushing - Output	2	*	92-7735	Gear Case Complete	1
10	92-7727	Gearcase	1				


*Not Illustrated

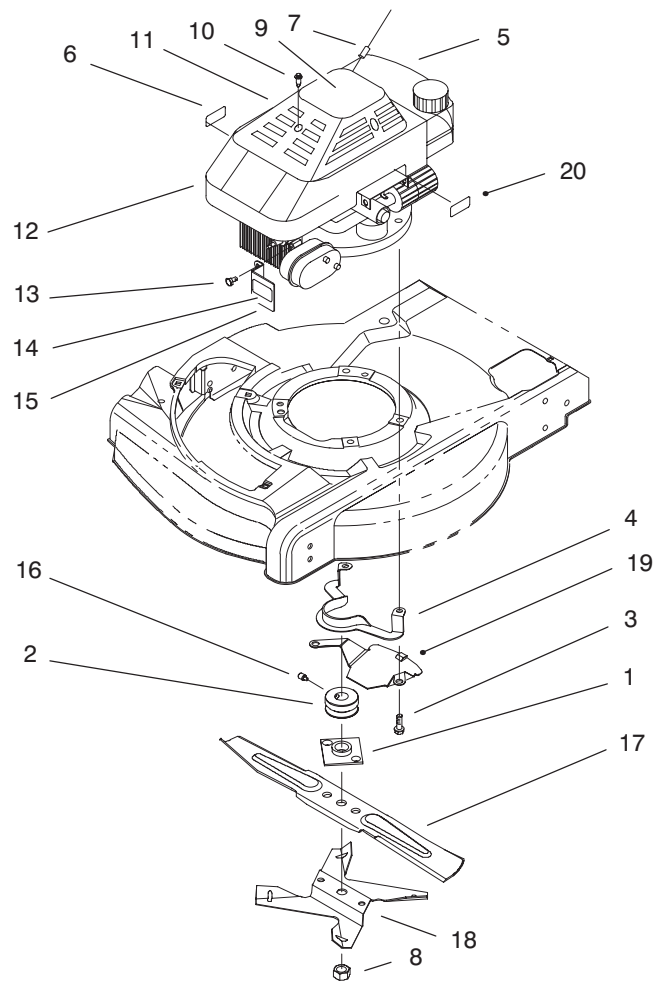

C-2239

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	677525	Plate & Collar Assembly	1	12	92-4855	Shroud – Engine	1
2	92-9575	Pulley – Engine	1	13	3274-52	Screw – Hex Socket Hd.	2
3	92-1624	Screw – Engine	3	14	65-2690	Decal – Warning	1
4	92-1024	Guide – Belt	1	15	16-2139	Guard – Muffler (Incl. Ref. #14)	1
5		Engine	1	16	613227	Screw – Set	1
6	92-4851	Decal – Oil Instruction	1	17	612543	Blade – 21” Whirl	1
7	92-1701	Rope – Stop	1	18	92-1630	Fan – Mulching	1
8	603164	Nut – Blade	1	19	93-4196	Shield – Grass	1
9	93-7358	Decal – Recoil	1	20	94-8083	Decal – Primer	1
10	92-4852	Screw – Recoil Cover	4				
11	92-4854	Cover – Starter	1				

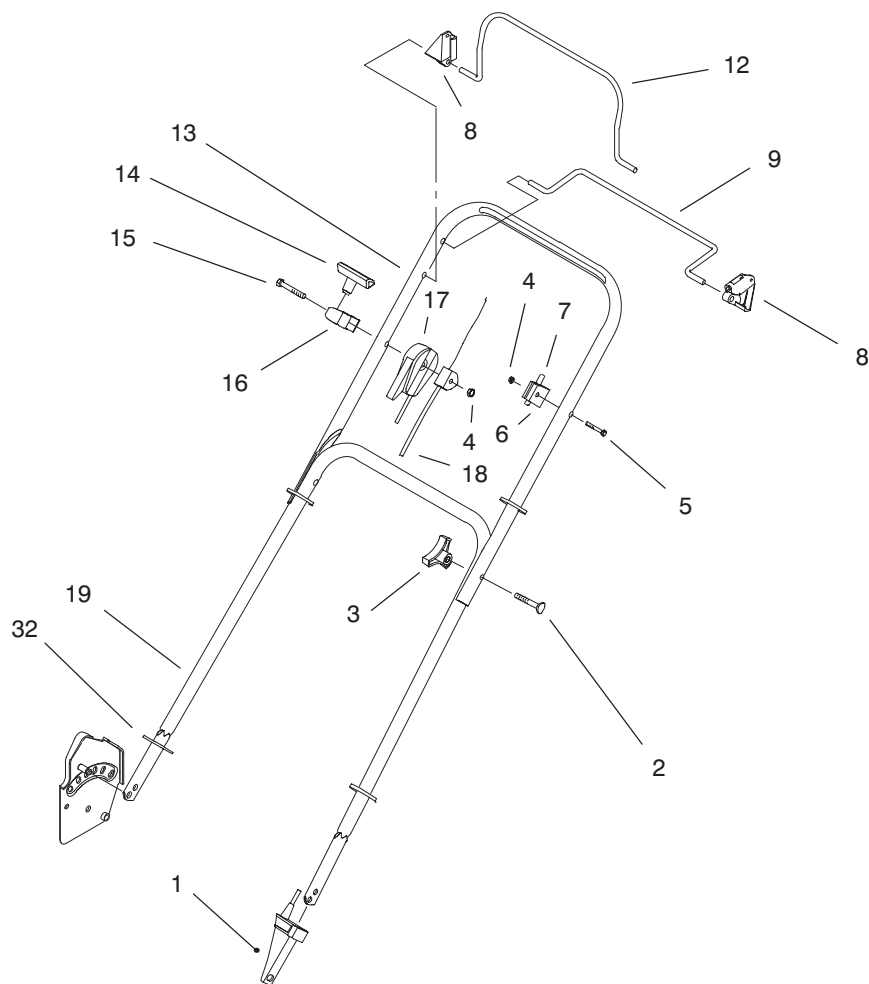


C-2240

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	614693	Anchor – Cable SP Lower	1	13	92-7737	Handle – Upper	1
2	614697	Screw – Handle	2	14	92-4853	Handle – Starter	1
3	614243	Knob	2	15	321-49	Screw – Hex Hd. Cap	1
4	3296-73	Nut – Lock	2	16	92-7720	Guide – Rope	1
5	92-2266	Screw – Handle	1	17	92-1045	Cable – Throttle	1
6	92-7729	Anchor – Cable SP Upper	1	18	92-9589	Cable – Brake Assembly	1
7	92-7726	Cable – Traction	1	19	614643	Handle – Lower	1
8	92-5412	Stop – Pivot	2	32	93-3653	Guard – Handle	1
9	92-1001	Bail – SP Control	1	*	92-5424	Staple	1
12	92-1002	Bail – Flywheel Brake	1				

*Not Illustrated

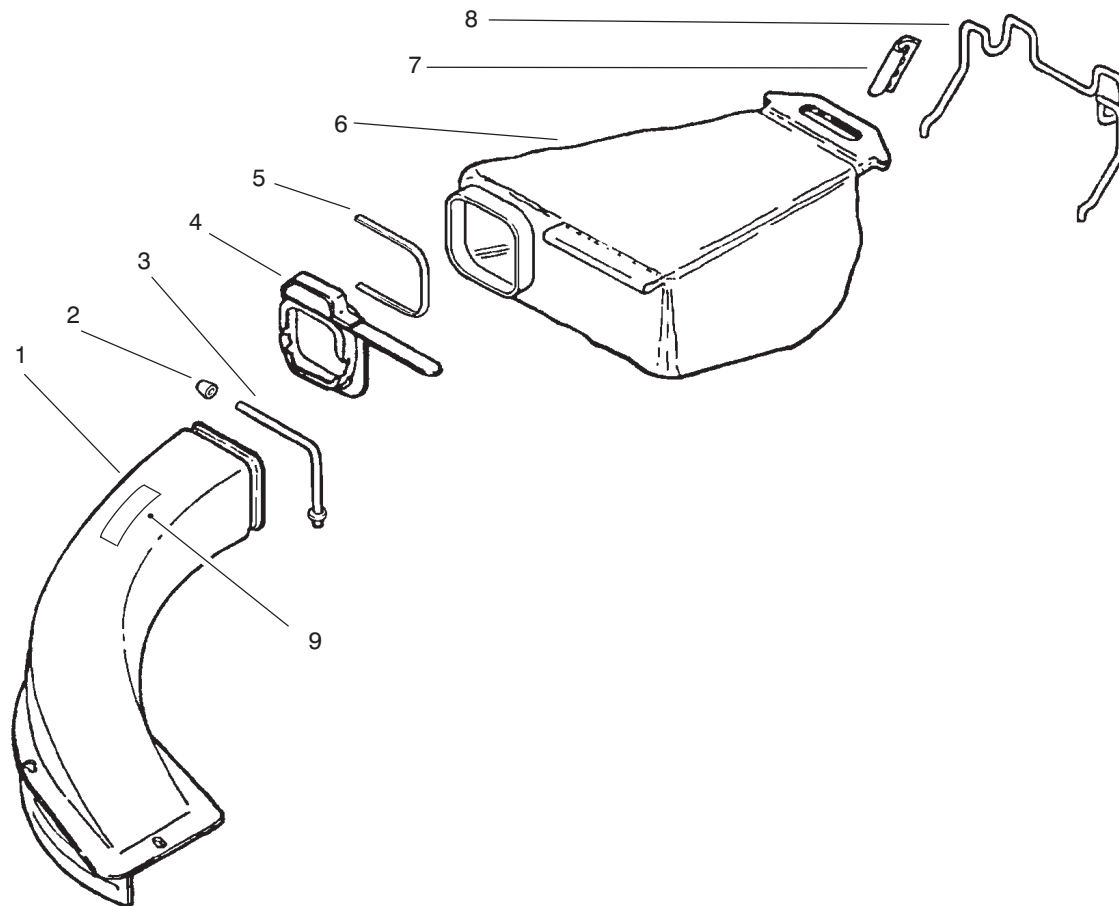


REAR CATCHER ASSEMBLY (Model No. 10313 Only)

Ref. No.	Part No.	Description	No. Used
1	684729	Chute & Support Assembly (Incl. Ref.# 2,3 & 9)	1
2	614589	Nut – Cap	1
3	614591	Chute Support	1
4	684727	Adaptor Assembly	1
5	614700	Tie Strap	1

Ref. No.	Part No.	Description	No. Used
6	*	Bag Assembly	1
7	613462	Hanger Clamp	2
8	613455	Wide Hanger	1
9	92-2919	Decal - Danger	1

*Includes Ref.#5 and instruction sheet for installing bag to adapter assembly. Order via model #89800.

ENGINE TVS120—63926M

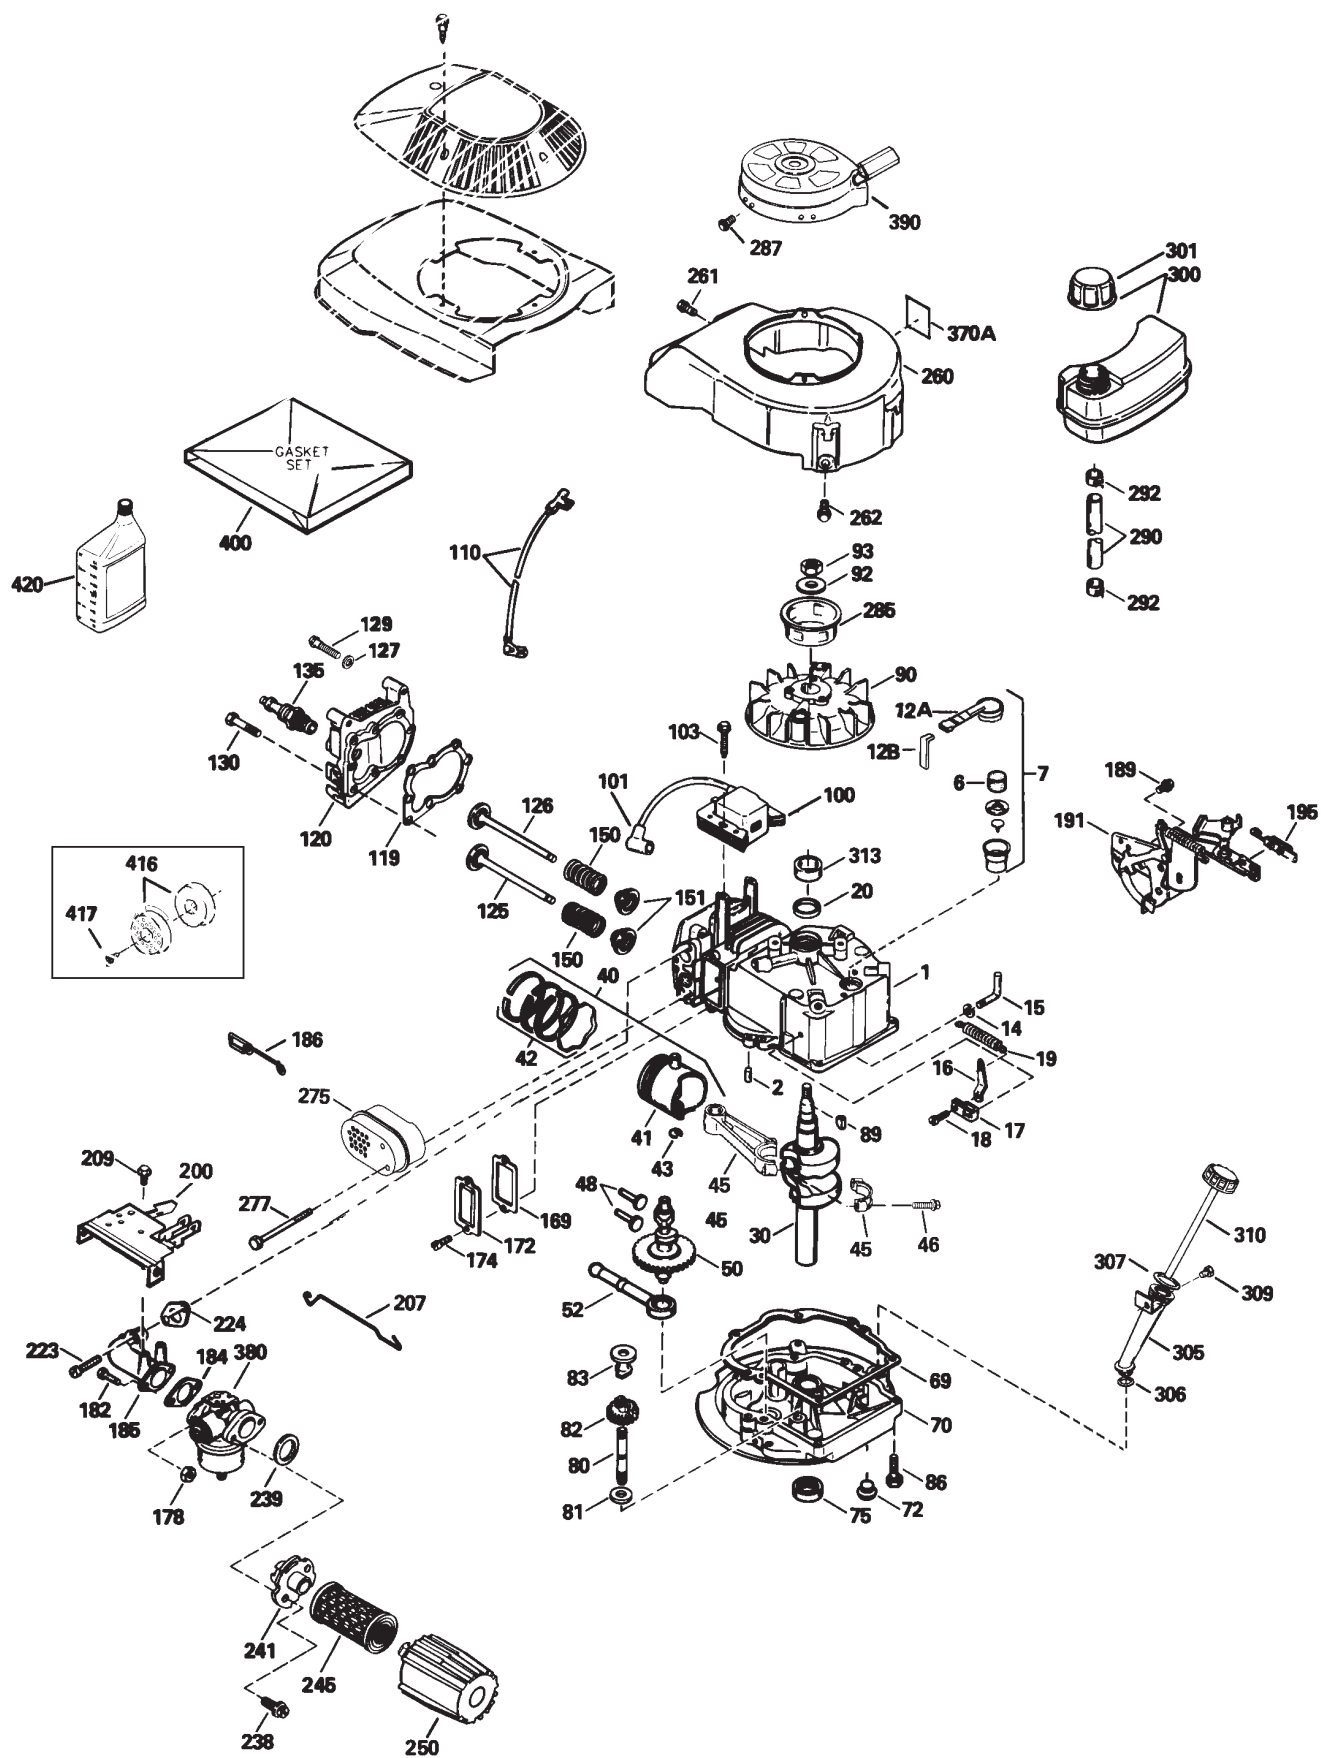


ENGINE TVS120-63926M

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	36478A	Cylinder (Incl. 2,7,20 & 125)	1	125	36471	Exhaust Valve (Std.) (Incl. 151)	1
2	26727	Dowel Pin	2	125	36472	Exhaust Valve (1/32" OS) (Incl. 151)	1
6	33734	Breather Element	1	126	29314B	Intake Valve (Std.) (Incl. 151)	1
7	36557	Breather Body Ass'y. (Incl. 6 & 12A)	1	126	29315C	Intake Valve (1/32" OS) (Incl. 151)	1
12A	36558	Breather Cover & Tube (Incl. 12B)	1	127	650691	Washer	2
12B	34695	Breather Tube Elbow	1	129	650818	Screw	2
14	28277	Washer	1	130	6021A	Screw	6
15	30589	Governor Rod (Incl. 14)	1	135	35395	Resistor Spark Plug (RJ19LM)	1
16	32651	Governor Lever	1	150	35991	Valve Spring	2
17	31335	Governor Lever Clamp	1	151	31673	Valve Spring Cap	2
18	650548	Screw	1	169	27234A	Valve Cover Gasket	1
19	35998	Extension Spring	1	172	32755	Valve Cover	1
20	32600	Oil Seal	1	174	30200	Screw	2
30	36597	Crankshaft	1	178	29752	Nut & Lock Washer	2
40	36073	Piston, Pin & Ring Set (Std.)	1	182	6201	Screw	2
40	36074	Piston, Pin & Ring Set (.010" OS)	1	184	26756	Carburetor To Intake Pipe Gasket	1
40	36075	Piston, Pin & Ring Set (.020" OS)	1	185	36544	Intake Pipe	1
41	36070	Piston & Pin Ass'y. (Std.) (Incl. 43)	1	186	36255	Governor Link	1
41	36071	Piston & Pin Ass'y. (.010" OS) (Incl. 43)	1	189	650839	Screw	2
41	36072	Piston & Pin Ass'y. (.020" OS) (Incl. 43)	1	191	36559	S.E. Brake Bracket (Incl. 195)	1
42	36076	Ring Set (Std.)	1	195	610973	Terminal	1
42	36077	Ring Set (.010" OS)	1	200	35999	Control Bracket	1
42	36078	Ring Set (.020" OS)	1	207	36200	Throttle Link	1
43	20381	Piston Pin Retaining Ring	2	209	30200	Screw	2
45	32875	Connecting Rod Ass'y. (Incl. 46)	1	223	650451	Screw	2
46	32610A	Connecting Rod Bolt	2	224	34690A	Intake Pipe Gasket	1
48	27241	Valve Lifter	2	238	650932	Screw	2
50	35992	Camshaft (MCR)	1	239	34338	Air Cleaner Gasket	1
52	29914	Oil Pump Ass'y.	1	241	35797	Air Cleaner Collar	1
69	35261	Mounting Flange Gasket	1	245	35066	Air Cleaner Filter	1
70	34311D	Mounting Flange (Incl. 72 thru 83)	1	250	35986	Air Cleaner Cover	1
72	36083	Oil Drain Plug	1	260	35826	Blower Housing	1
75	27897	Oil Seal	1	261	30200	Screw	2
80	30574A	Governor Shaft	1	262	650831	Screw	2
81	30590A	Washer	1	275	36473	Muffler (Incl. 277)	1
82	30591	Governor Gear Ass'y. (Incl. 81)	1	277	650988	Screw	2
83	30588A	Governor Spool	1	285	35000A	Starter Cup	1
86	650488	Screw	6	287	650926	Screw	2
89	611004	Flywheel Key	1	290	34357	Fuel Line	1
90	611112	Flywheel	1	292	26460	Fuel Line Clamp	2
92	650815	Belleville Washer	1	300	35586	Fuel Tank (Incl. 292 & 301)	1
93	650816	Flywheel Nut	1	301	35355	Fuel Cap	1
100	34443A	Solid State Ignition	1	305	35819A	Oil Fill Tube	1
101	610118	Spark Plug Cover	1	306	34265	"O"-Ring	1
103	651007	Screw, Torx T-15,	2	307	35499	"O"-Ring	1
110	34961	Ground Wire	1	309	651014	Screw	1
119	36477	Cylinder Head Gasket	1	310	36259	Dipstick	1
120	36476	Cylinder Head	1	313	34080	Spacer	1
				370A	36261	Lubrication Decal	1
				380	632681	Carburetor (Incl. 184)	1


ENGINE TVS120–63926M

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
390	590702	Rewind Starter (NOTE: This engine could have been built with 590739 starter. Refer to the design of the rope pulley strength ribs for part identification. Individual starter parts do not interchange. Refer to service bulletin 116.)	1	416	36085	Spark Arrestor Kit (Incl. 417) (Optional)	1
				417	650760	Screw (Optional)	1
400	36481	Gasket Set (Incl. Items Marked PK in Notes) Incl. part #'s 26756 (1), 27234A (1), 33735 (1), 34265 (1), 34338 (1), 34690A (1), 35261 (1), 36477 (1)	1	420	730225	SAE 30 4–Cycle Engine Oil (Quart)	1

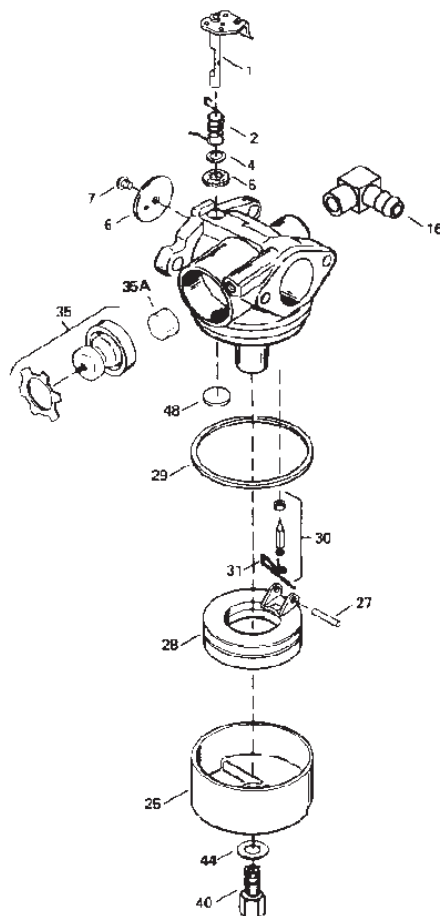


CARBURETOR No. 632681

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	631615	Throttle Shaft & Lever Assembly	1	29	631028	Float Bowl "O" Ring	1
2	631767	Throttle Return Spring	1	30	631021	Inlet Needle, Seat, & Clip (Incl. 31)	1
4	631184	Dust Seal Washer	1	31	631022	Spring Clip	1
5	631183	Dust Seal (Throttle)	1	35	632694	Primer Bulb/Retainer Ring	1
6	632504	Throttle Shutter	1	35A	632647	Primer Bulb Filter	1
7	650506	Shutter Screw	1	40	632682	High Speed Bowl Nut	1
16	631775	Fuel Fitting	1	44	27110	Bowl Nut Washer	1
25	631867	Float Bowl	1	48	631027	Welch Plug, Atmospheric Vent	1
27	631024	Float Shaft	1				
28	632019	Float	1				

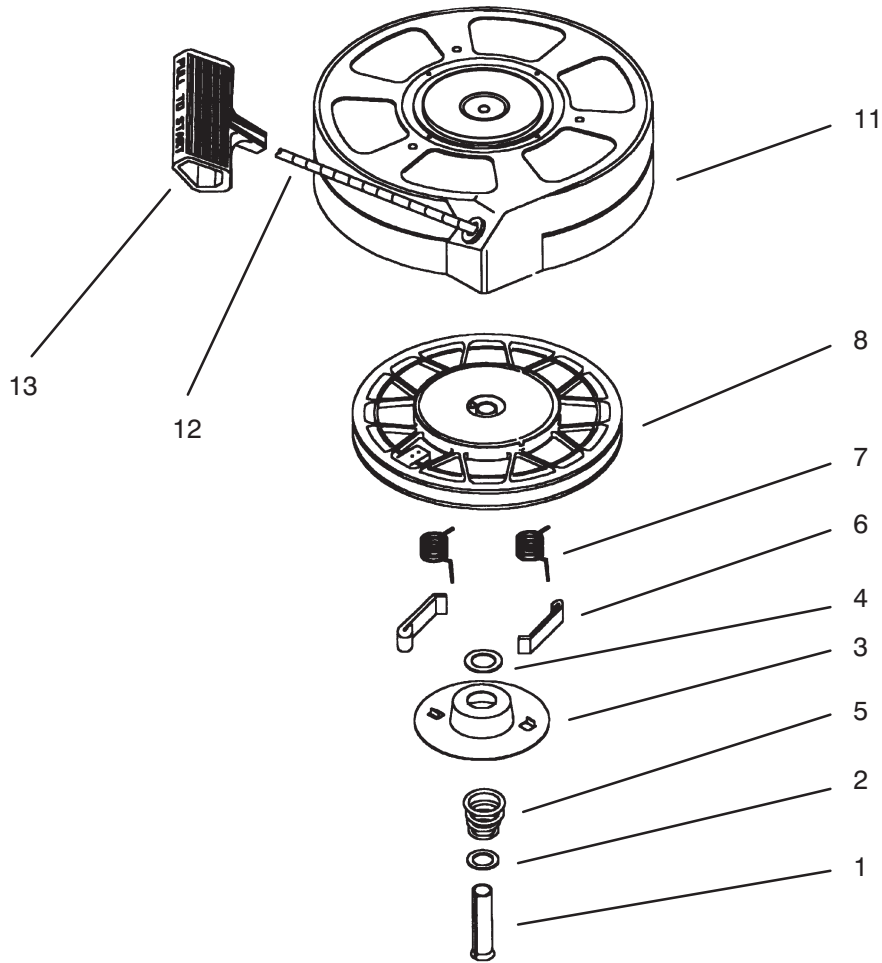

RECOIL STARTER ASSEMBLY 590702

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
0	590702	Recoil Starter	1	8	590700	Pulley & Rewind Spring Ass'y.	1
1	590599A	Spring Pin (Incl. 4)	1	11	590703	Starter Housing Ass'y (40 degree grommet)	1
2	590600	Washer	1	12	590535	Starter Rope (98" X 9/64" dia.)	1
3	590696	Retainer	1	13	590701	Starter Handle	1
4	590601	Washer	2				
5	590697	Brake Spring	1				
6	590698	Starter Dog	2				
7	590699	Dog Spring	2				

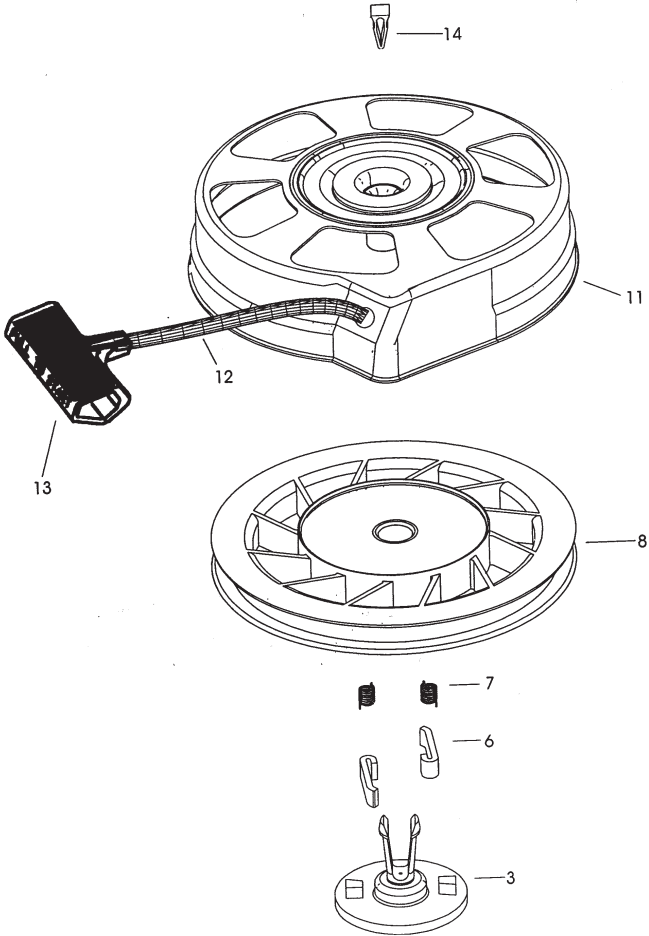

RECOIL STARTER ASSEMBLY 590739 (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
0	590739	Rewind Starter	1	11	590638	Starter Housing Ass'y (40 degree grommet)	1
3	590740	Retainer	1	12	590535	Starter Rope (Length 98" x 9/64" dia.)	1
6	590616	Starter Dog	2	13	590701	Starter Handle	1
7	590617	Dog Spring	2	14	590741	Locking Tab	1
8	590618A	Pulley & Rewind Spring Ass'y	1				

LAWN-BOY PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
*	Bag Assembly	8 6 1	92-1024	Guide - Belt	6 4 1
603164	Nut - Blade	6 8 1	92-1042	Wheel & Tire Assembly 8	4 2 2
605120	Grommet	3 5 1	92-1045	Cable - Throttle	7 17 1
607560	Plate - Cover	3 * 1	92-1057	Bolt - Shoulder	4 1 2
610358	Nut - Lock	4 13 2	92-1097	Decal - Discharge	3 34 1
612543	Blade - 21 Whirl	6 17 1	92-1099	Bolt - Shoulder	3 20 2
613227	Screw - Set	6 16 1	92-1624	Screw - Engine	6 3 3
613455	Wide Hanger	8 8 1	92-1630	Fan - Mulching	6 18 1
613462	Hanger Clamp	8 7 2	92-1701	Rope - Stop	6 7 1
613765	Nut - Cage	3 11 1	92-2266	Screw - Handle	7 5 1
614243	Knob	7 3 2	92-2914	Decal - H.O.C.	3 2 2
614426	Washer - Stepped	4 19 2	92-2915	Decal - H.O.C.	3 1 2
614447	Spacer - Axle Shaft	4 9 2	92-2919	Decal - Danger	8 9 1
614589	Nut - Cap	8 2 1	92-4851	Decal - Oil Instruction	6 6 1
614591	Chute Support	8 3 1	92-4852	Screw - Recoil Cover	6 10 4
614596	Gear 34 Tooth	5 18 1	92-4853	Handle - Starter	7 14 1
614637	Bracket - Wheel Height Adj.	3 17 2	92-4854	Cover - Starter	6 11 1
614643	Handle - Lower	7 19 1	92-4855	Shroud - Engine	6 12 1
614668	Cover - Gear Case	5 2 1	92-4881	Plate - Height Adjust	3 14 2
614669	Pulley - Half	5 12 2	92-4890	Washer	3 15 2
614671	Cover - Drive	3 27 1	92-5412	Stop - Pivot	7 8 2
614672	Bolt - Shoulder	3 21 2	92-5424	Staple	7 * 1
614677	Screw - Sems Thr'd Form.	3 9 2	92-7720	Guide - Rope	7 16 1
614682	Knob - Cover Plate	3 7 1	92-7723	Bracket - Handle R.H.	3 30 1
614687	Spring Arm - Front	3 22 2	92-7724	Bracket - Handle L.H.	3 3 1
614693	Anchor - Cable SP Lower	7 1 1	92-7726	Cable - Traction	7 7 1
614696	Shaft - Intermediate	5 4 1	92-7727	Gearcase	5 10 1
614697	Screw - Handle	7 2 2	92-7728	Guide - Transmission	3 6 1
614700	Tie Strap	8 5 1	92-7729	Anchor - Cable SP Upper	7 6 1
677525	Plate & Collar Assembly	6 1 1	92-7731	Plate - Baffle	3 16 2
684727	Adaptor Assembly	8 4 1	92-7735	Gear Case Assembly	3 4 1
684729	Chute & Support Assembly	8 1 1	92-7735	Gear Case Complete	5 * 1
684776	Wheel & Tire Assembly - 6	3 19 2	92-7737	Handle - Upper	7 13 1
16-2139	Guard - Muffler	6 15 1	92-7746	Arm - Height Adj. Rear	4 8 2
36-4780	Washer - Thrust	5 17 2	92-8630	Plate - Mulch 21	3 8 1
36-4791	Washer	5 5 2	92-8647	Shield - Trailing	3 38 1
38-7820	Bearing - Ball	5 15 1	92-9575	Pulley - Engine	6 2 1
39-5770	Decal - Danger	3 33 1	92-9589	Cable - Brake Assembly	7 18 1
40-1940	Washer	3 18 2	92-9665	Screw - Phillip Hd.	3 26 1
49-2040	Screw - Hex Hd. Cap	3 24 2	93-0239	Shaft - Output	5 7 1
55-3760	Pinion - 15 Tooth	5 3 1	93-3653	Guard - Handle	7 32 1
60-8750	Bushing	5 6 2	93-4196	Shield - Grass	6 19 1
60-8850	Bushing - Output	5 9 2	93-7250	Decal - Warning	3 28 1
60-8890	Gear - Bevel Pinion	5 16 1	93-7358	Decal - Recoil	6 9 1
62-6660	Spacer	5 11 1	93-7381	V-Belt	4 10 1
65-2690	Decal - Warning	6 14 1	94-1609	Cover - Wheel	4 18 2
65-2720	Ring - Retaining	4 3 4	94-1610	Grommet - Plastic	3 10 2
65-4710	Ring - Friction	4 7 2	94-8083	Decal - Primer	6 20 1
65-4720	Spring - Compression	4 17 2	321-49	Screw - Hex Hd. Cap	7 15 1
65-4730	Washer - Thrust	4 14 2	322-3	Screw - Hex Hd. Cap	3 39 6
65-4740	Washer - Thrust Keyed	4 4 4	3256-24	Washer	5 13 1
65-4750	Gear - Pinion	4 16 2	3274-52	Screw - Hex Socket Hd.	6 13 2
65-4760	Washer	4 15 2	3285-19	Pin - Groove	5 8 2
66-6040	Key - Rocking R.H.	4 * 1	3296-5	Nut	5 14 1
66-6050	Key - Rocking L.H.	4 5 1	3296-29	Nut - Hex Lock	3 37 6
92-1001	Bail - SP Control	7 9 1	3296-73	Nut - Lock	7 4 2
92-1002	Bail - Flywheel Brake	7 12 1	32144-4	Screw - Taptite	5 1 4
92-1004	Spring Arm Assembly	4 12 2	32144-85	Screw - Hex Hd.	4 11 2
92-1008	Knob - Height Adjust	3 23 4			

*Not Illustrated

MAINTENANCE RECORD

[illegible]