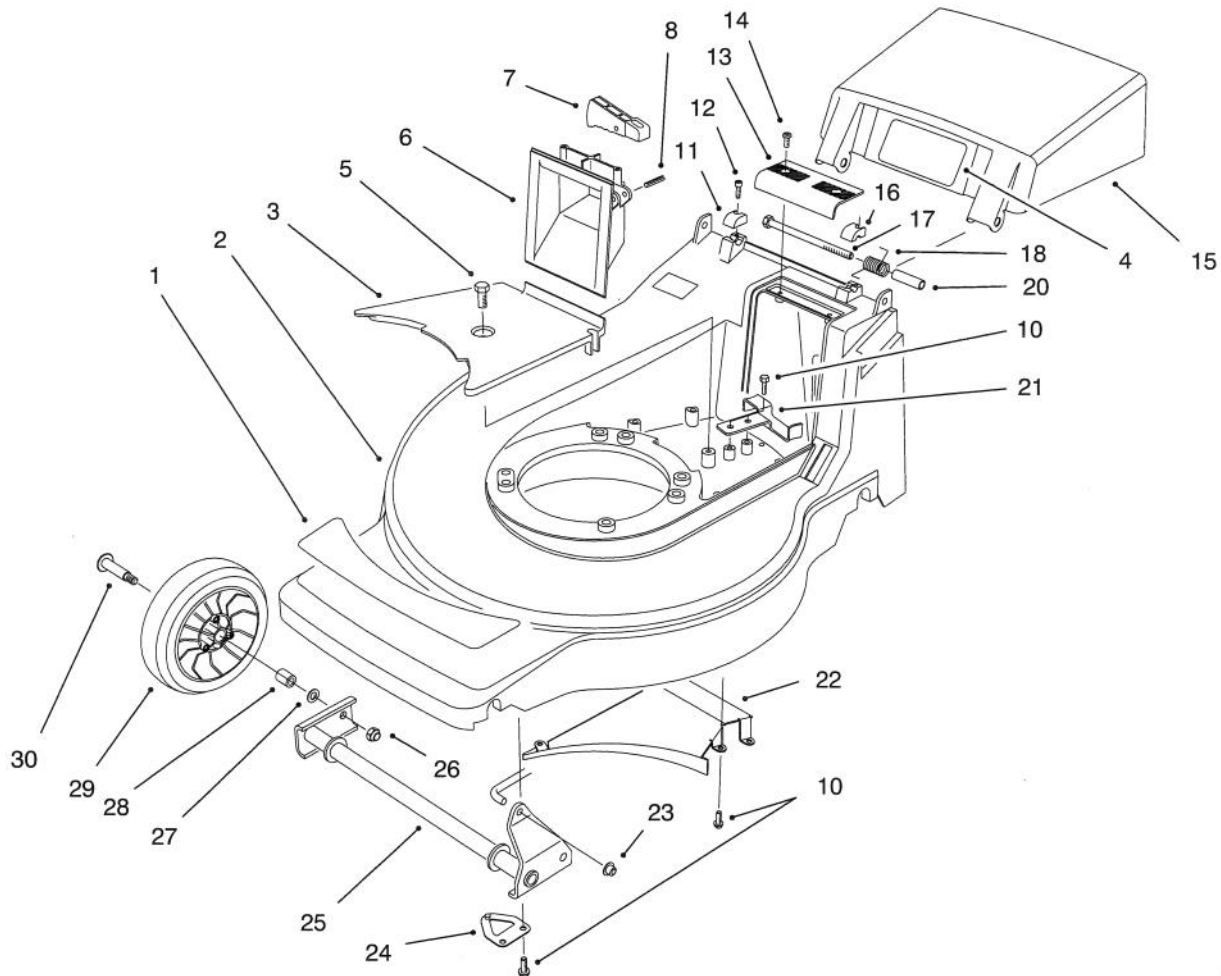 



TORO®**MODEL NO. 20914B-6900001 & UP****PARTS
CATALOG****48cm REAR BAGGING MOWER**

C-2277

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	71-9860	Decal - 48cm	1	15	17-1569	Door - Discharge (Incl. Ref. #4)	1
2	16-5979	Housing - 48cm	1	16	71-7900	Cap - Hinge Bolt L.H.	1
3	71-7920	Cover - Belt	1	17	322-29	Screw - Cap Hex. Hd.	2
†4	93-4105	Decal - Danger	1	†18	71-9840	Spring - Door	2
5	32144-70	Screw - Hex. Flange Hd.	1	20	71-8580	Spacer - Door	2
6	71-7870	Grip - Lower	1	21	71-7890	Guide - Belt Rear	1
7	71-7930	Trigger - H.O.C.	1	22	71-7990	Ramp - Discharge	1
8	3284-5	Pin - Roll	1	23	32112-11	Nut - Push	1
10	32144-4	Screw - Thread Forming	10	24	71-8830	Retainer - Shaft	2
11	71-7910	Cap - Hinge Bolt R.H.	1	†25	71-7820	Pivot - Front	1
12	65-5210	Screw - Thread Forming	2	26	3296-5	Nut - Lock	2
13	71-7860	Grip - Upper	1	27	40-1940	Washer - Wheel	2
14	32144-97	Screw - Thread Forming	2				

 † Obtain From Toro Europe N.V.

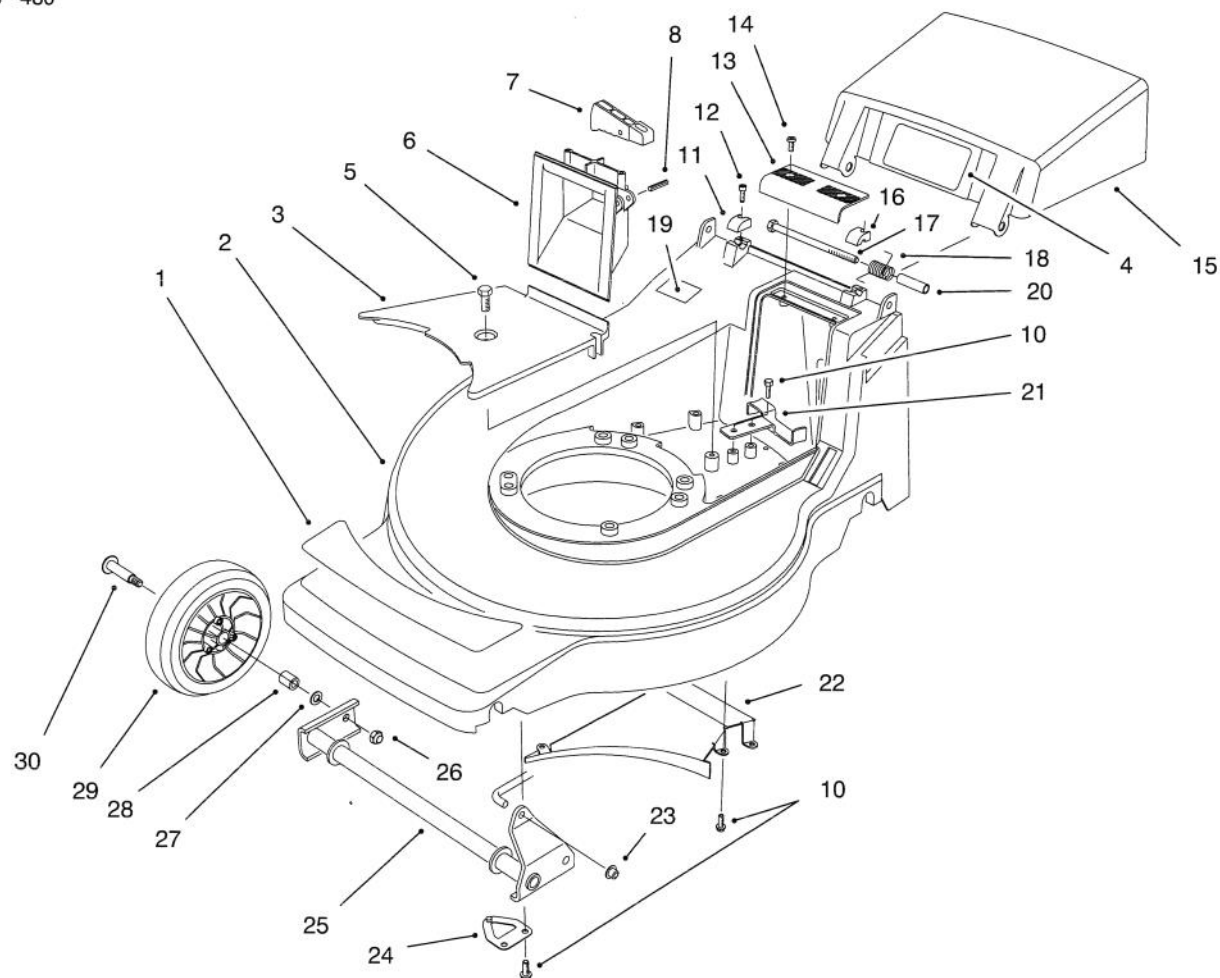


C-2277

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
28	27-6250	Bushing - Wheel	4
29	46-1113	Wheel & Tire Assembly (Incl. Ref. #28)	2


Ref. No.	Part No.	Description	No. Used
30	27-6230	Bolt - Wheel	2

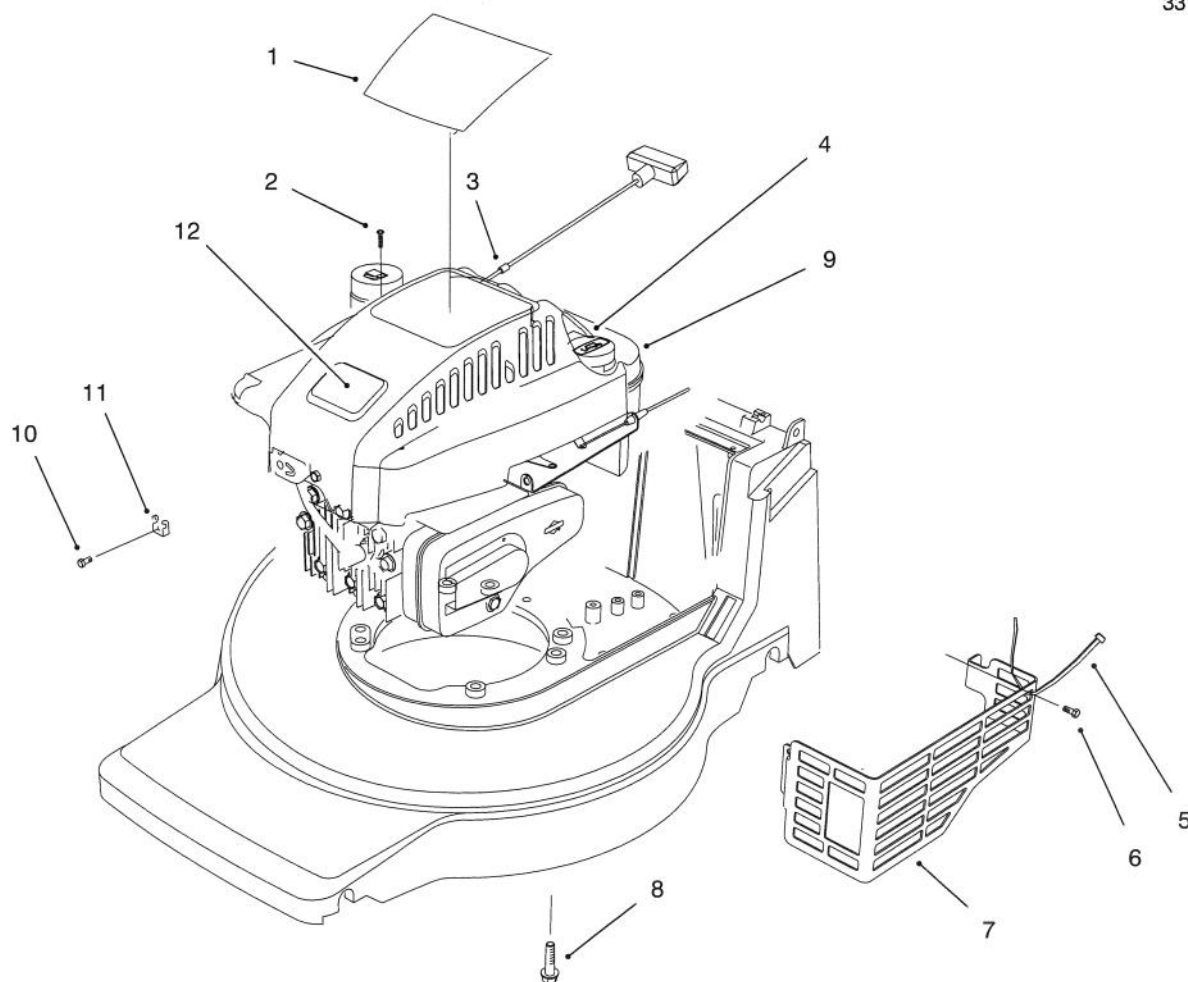 

C-2273

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4354	Decal - Engine	1	7	82-8550	Shield - Muffler	1
2	32144-121	Screw	2	8	32144-102	Screw - Engine Mount	3
3	2210-316	Stop - Rope	1	9		Engine - B&S	1
4	93-0243	Shroud - QT Wedge	1	10	93-8470	Screw - Clamp	1
5	3290-378	Tie - Cable	1	11	2210-249	Clamp - Cable	1
6	32144-73	Screw - Muffler	3	12	92-2289	Decal - Toro Logo	1

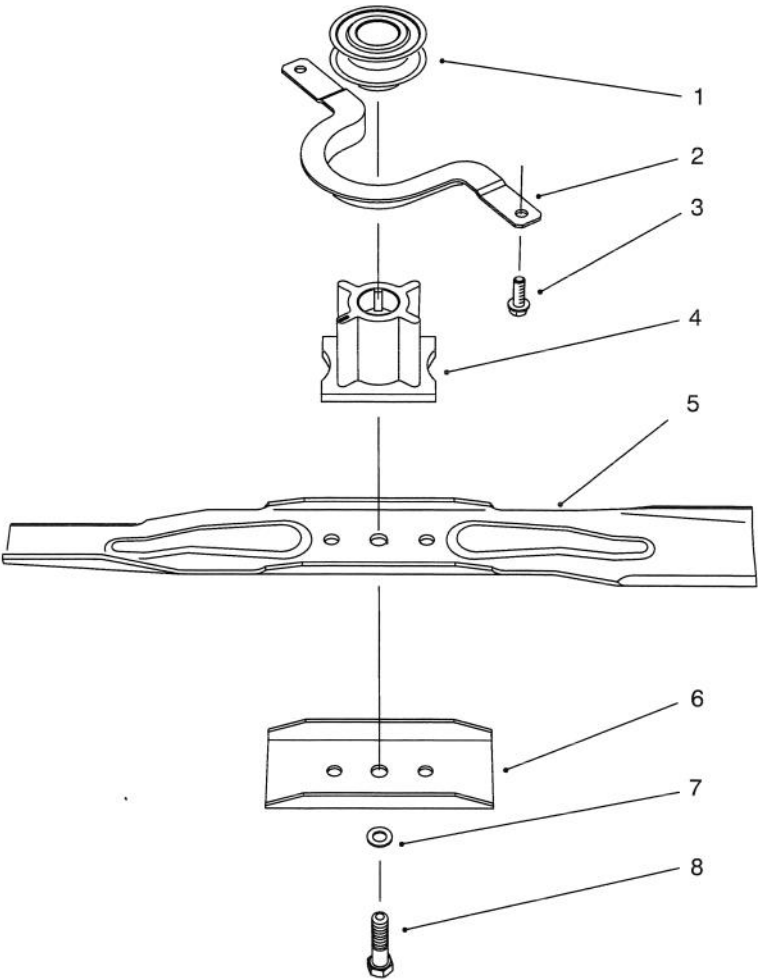 


C-1012

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-7550	Pulley - Driver	1	†5	92-9813	Blade - 48cm	1
2	71-7960	Guide - Engine Belt	1	†6	92-9812	Stiffener - Blade	1
3	32144-4	Screw - Tapping	2	7	3253-22	Washer - Lock	1
4	71-7940	Retainer - Blade	1	8	26-0672	Bolt - Blade	1

 † Obtain From Toro Europe N.V.

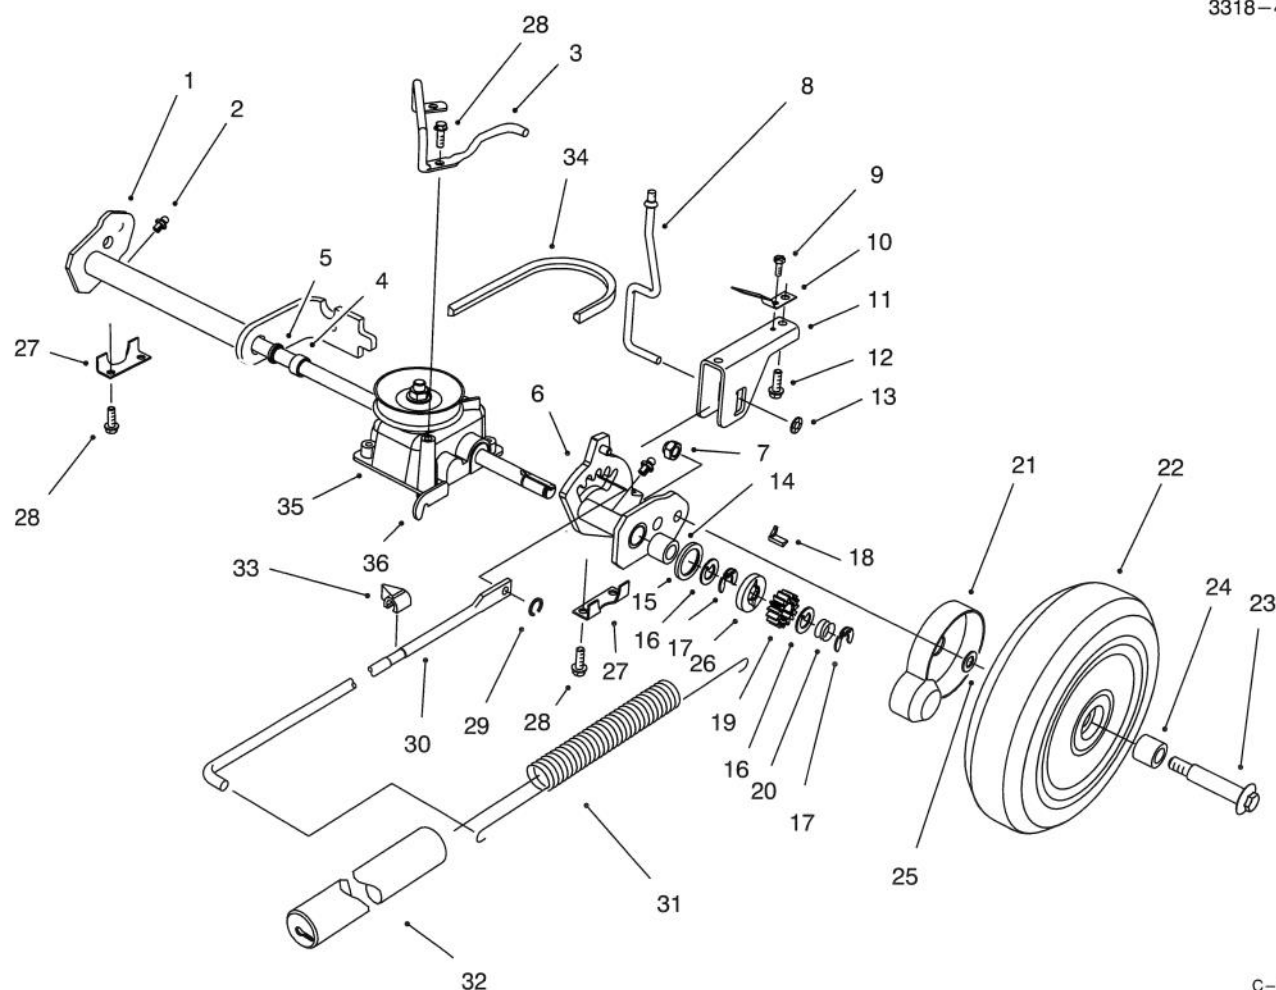


C-1880

S. P. REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1	92-9680	Rear Pivot Assembly R.H. (Incl. Ref. #2, 4, 5 & 14)	1	19	65-4750	Gear - Pinion	2
2	302-26	Fitting - Grease	2	20	65-4720	Spring - Compression	2
†3	71-9850	Retainer - Belt	1	21	74-1660	Cover - Wheel	2
4	47-2890	Bushing - Sleeve	2	22	14-9959	Wheel, Tire & Gear Assy. (Incl. Ref. #24)	2
5	47-6730	Seal - Grease	2	23	27-6230	Bolt - Wheel	2
†6	92-9677	Rear Pivot Assembly L.H. (Incl. Ref. #2, 4, 5 & 14)	1	24	27-6250	Bushing - Wheel	4
7	3296-5	Nut - Lock	2	25	74-1670	Spacer - Wheel	2
8	71-7840	Rod - Trigger	1	26	65-4760	Washer - Clutch	2
9	32144-31	Screw - Thread Forming	1	27	71-7770	Plate - Rear Securing	2
10	71-8060	Spring - Trigger Return	2	28	32144-4	Screw - Thread Forming	6
11	71-8080	Saddle - H.O.C.	1	29	32151-93	Ring - Grip	1
12	63-8590	Screw - Thread Forming	2	30	71-7970	Rod - Link	1
13	32112-13	Nut - Push	1	†31	71-7740	Spring - Counterbalance	1
14	48-2060	Bearing - Needle	2	32	71-8450	Cover - Spring	1
15	65-4710	Washer - Friction	2	33	71-7980	Indicator - H.O.C.	1
16	65-4740	Washer - Keyed Thrust	4	34	71-9450	V-Belt	1
17	65-2720	Ring - Retaining	4	35	71-9600	Gearcase Assembly (Incl. Ref. #36)	1
18	66-6050	Key - Rocking L.H.	1	36	71-9630	Bracket - Traction	1
*	66-6040	Key - Rocking R.H.	1				

*Not Illustrated

 † Obtain From Toro Europe N.V.

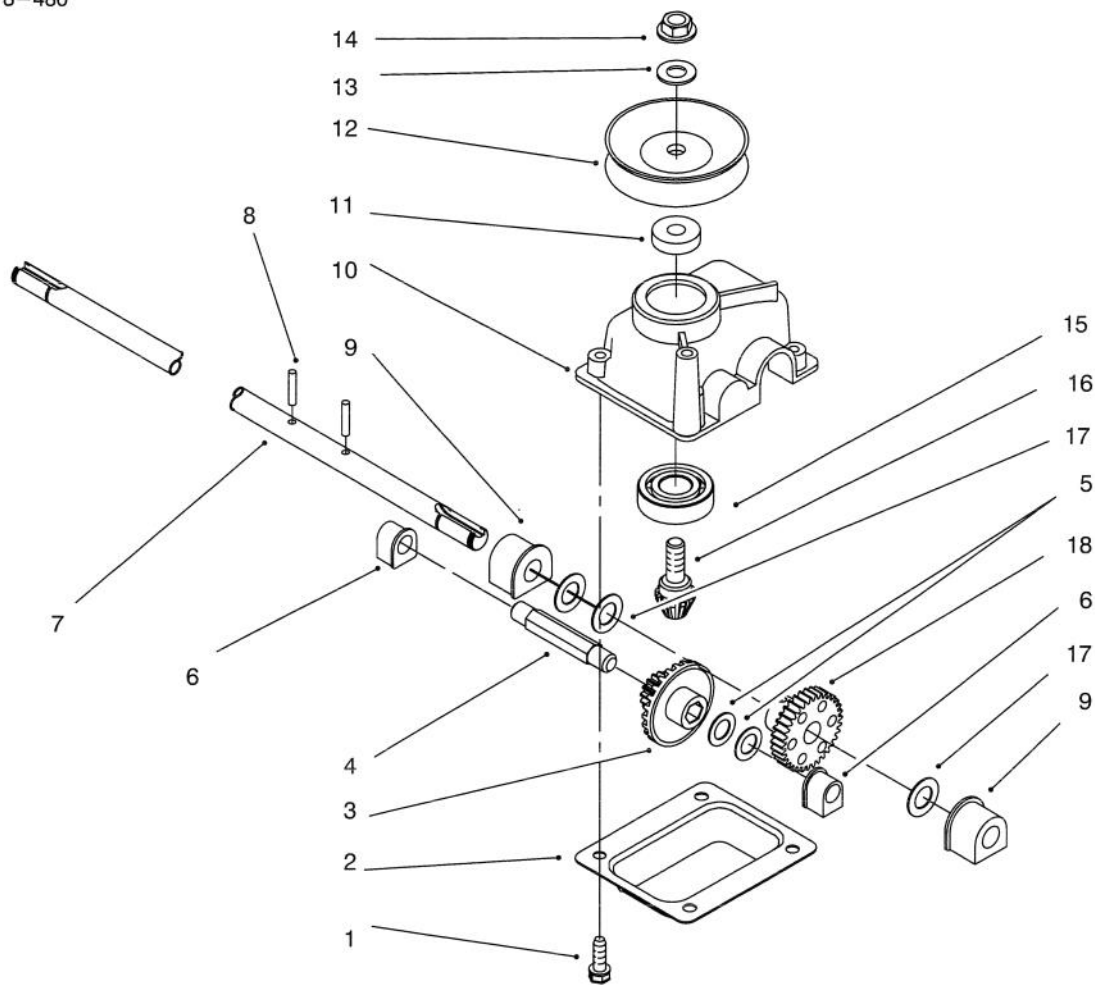

C-1292


GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw - Taptite	4
2	614668	Cover - Gear Case	1
3	55-3760	Pinion - 15 Tooth	1
4	614696	Shaft - Intermediate	1
5	36-4791	Washer	2
6	60-8750	Bushing	2
†7	71-9620	Shaft - Output	1
8	32121-114	Pin - Groove	2
9	60-8850	Bushing - Output	2
10	614578	Gearcase	1

Ref. No.	Part No.	Description	No. Used
11	62-6660	Spacer	1
12	71-9610	Pulley - Half	2
13	3256-24	Washer	1
14	3296-5	Nut	1
15	38-7820	Bearing - Ball	1
16	60-8890	Gear - Bevel Pinion	1
17	36-4780	Washer - Thrust	3
18	614596	Gear 34 Tooth	1
†*	71-9600	Gear Case Ass'y Complete	1

*Not Illustrated

 † Obtain From Toro Europe N.V.

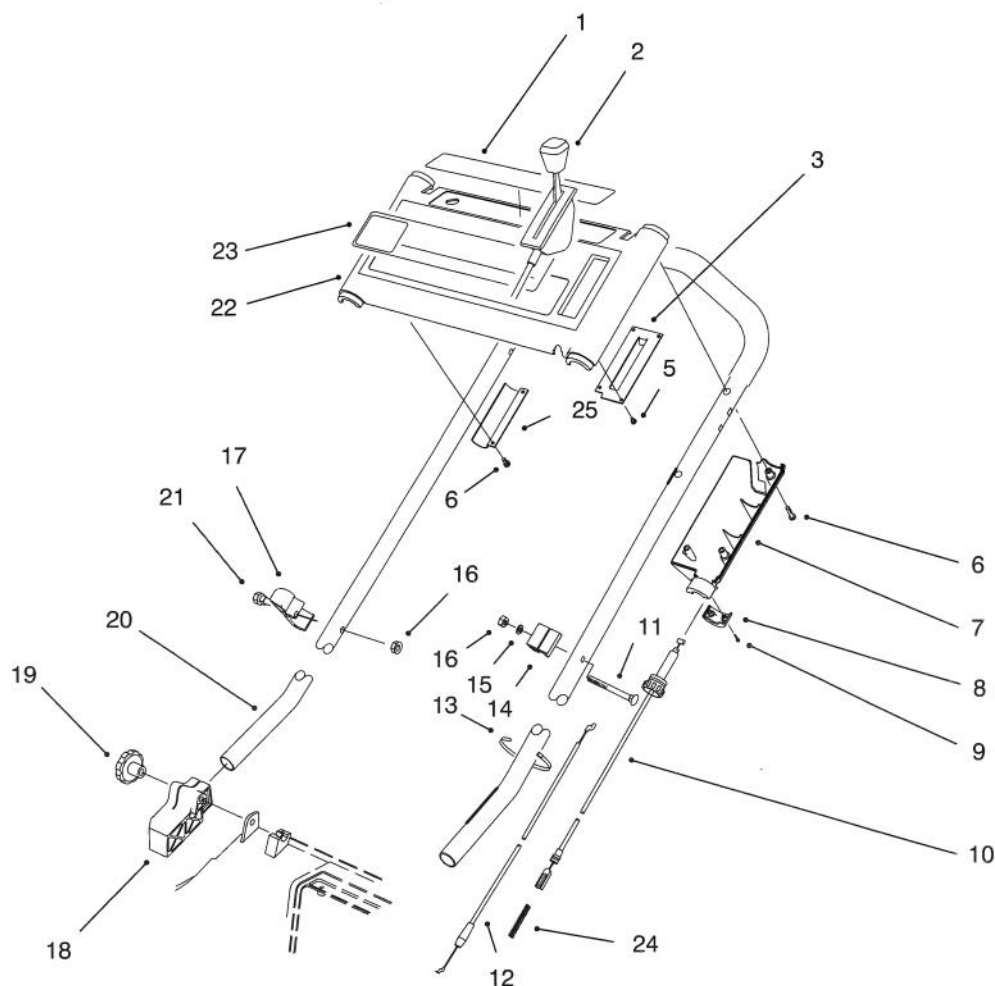


C-2507

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-6026	Decal - Instruction	1	15	3256-1	Washer - Flat	1
2	93-1117	Control - Throttle	1	16	3296-73	Nut - Lock	2
3	71-8040	Plate - Throttle	1	†17	93-3772	Guide - Rope	1
5	32144-98	Screw - Phillips Pan Hd.	4	18	71-8100	Mount - Handle R.H.	1
6	32144-97	Screw - Phillips Pan Hd.	5	*	71-8090	Mount - Handle L.H.	1
7	93-0339	Cover - Throttle Lower	1	19	19-4050	Knob	2
8	71-7630	Cap - Throttle Lower	1	20	94-4367	Handle Assembly	1
9	32144-99	Screw - Phillips Pan Hd.	2	21	321-52	Screw - Hex Hd. Cap	1
10	94-6754	Cable - Traction	1	22	17-4319	Panel - Control (Incl. Ref. #1)	1
11	92-2270	Screw - Handle	1	23	71-9861	Decal - Panel	1
12	93-1116	Cable - Brake	1	24	71-8310	Spring - Compression	1
13	3290-378	Tie - Cable	2	25	71-8130	Bracket - Control	1
14	46-6980	Support - Cable	1				

*Not Illustrated

 † Obtain From Toro Europe N.V.

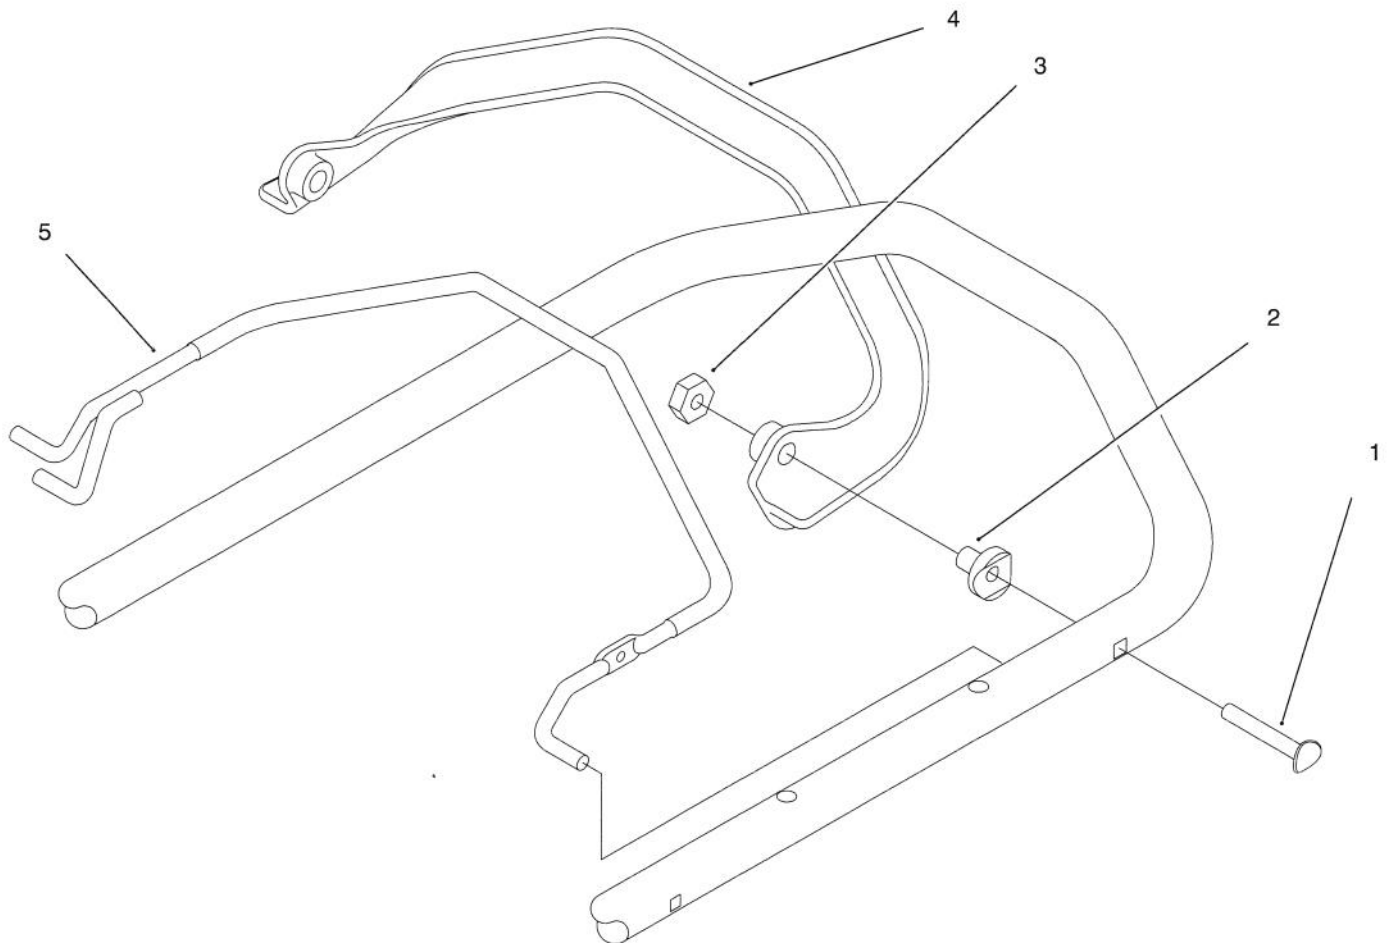


C-2492

BAIL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	17-9428	Screw	2
2	66-0330	Spacer - Support	2
3	3296-74	Nut - Flange, Nylon	2

Ref. No.	Part No.	Description	No. Used
4	94-4365	Bail - Traction	1
5	94-4364	Bail - Brake	1

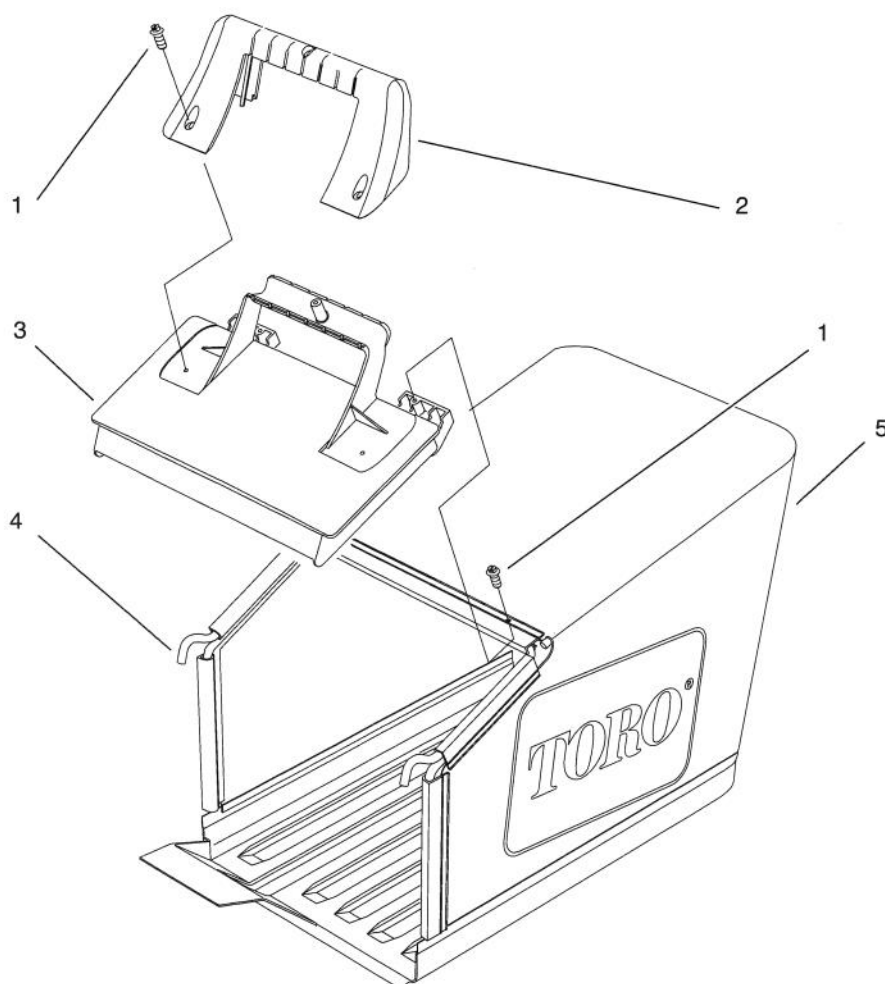 

C-1509


GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Thr'd Form	5
†2	71-9480	Handle - Door	1
†3	71-9470	Door - Bag	1

Ref. No.	Part No.	Description	No. Used
†4	71-9900	Frame - Bag	1
5	71-9460	Bag - Grass	1

† Obtain From Toro Europe N.V.

 * Not Illustrated.

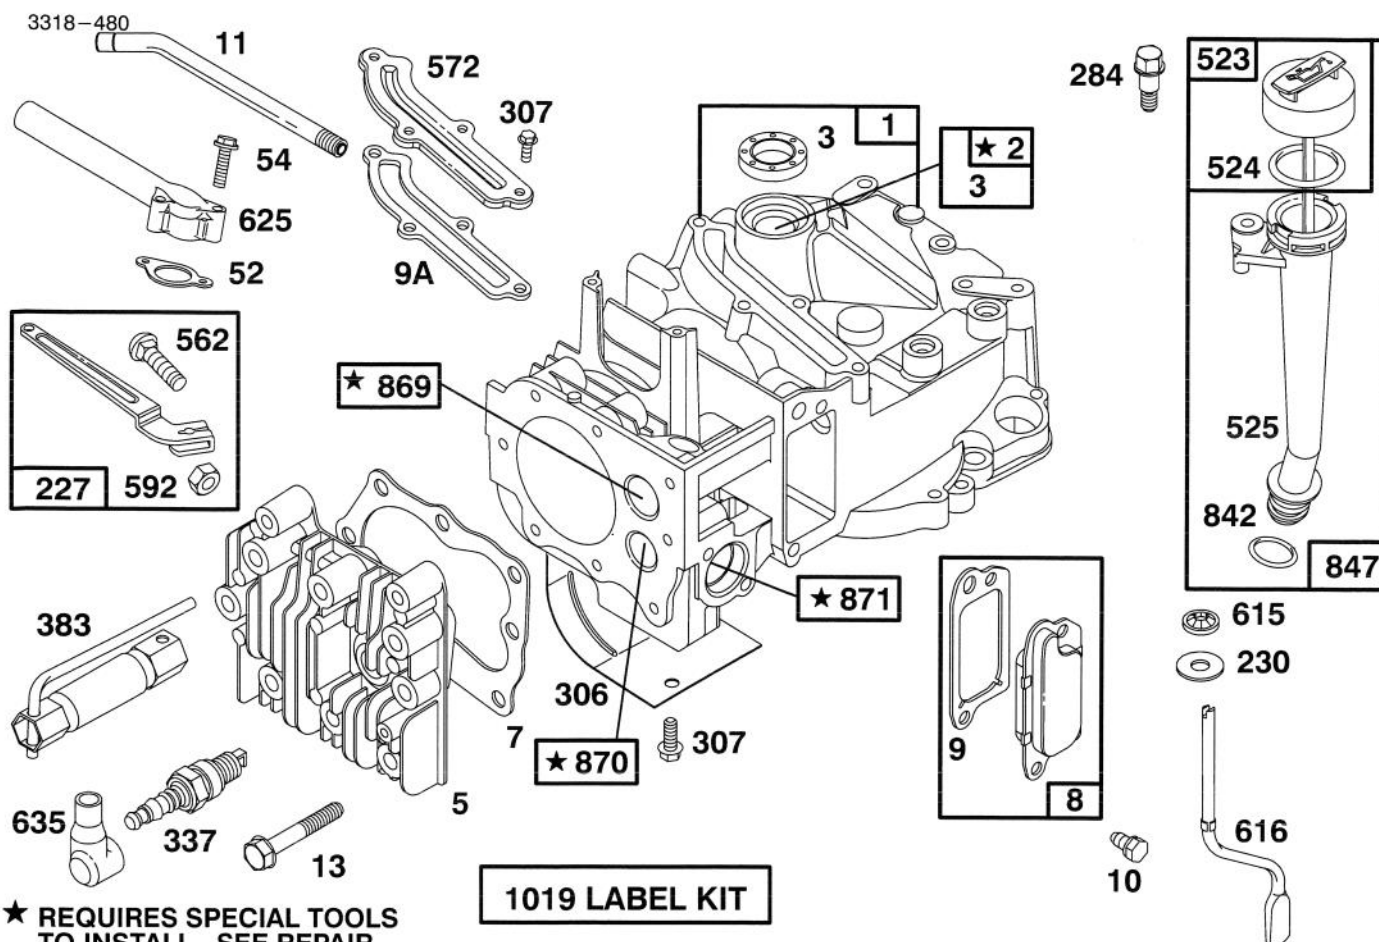


ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214349	Head – Cylinder	1
★7	272916	Gasket – Cylinder Head	1
8	495786	Breather – Valve Chamber	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
10	94650	Screw – Breather Mtg.	1
11	231933	Tube – Breather	1
13	94547	Screw – Cylinder Head	1
★52	272199	Gasket – Intake Elbow	1
54	94526	Screw – Intake Elbow Mtg.	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex. Head	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex. Head	1
337	802592	Plug – Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench – Spark Plug	1
523	495264	Cap With Dipstick – Oil Filler	1
★524	280393	Seal – Filler Tube	1
525	495265	Tube – Oil Filler	1
562	94852	Bolt – Carriage	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	262578	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
★842	280966	Seal – O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat – Intake Valve	1
870	213513	Seat – Exhaust Valve	1
871	262001	Guide – Exhaust Valve	1
		Note: 63709 Guide – Intake Valve	1
1019	494256	Label Kit	1

 ★ Included in Gasket Set–Part No. 496316.

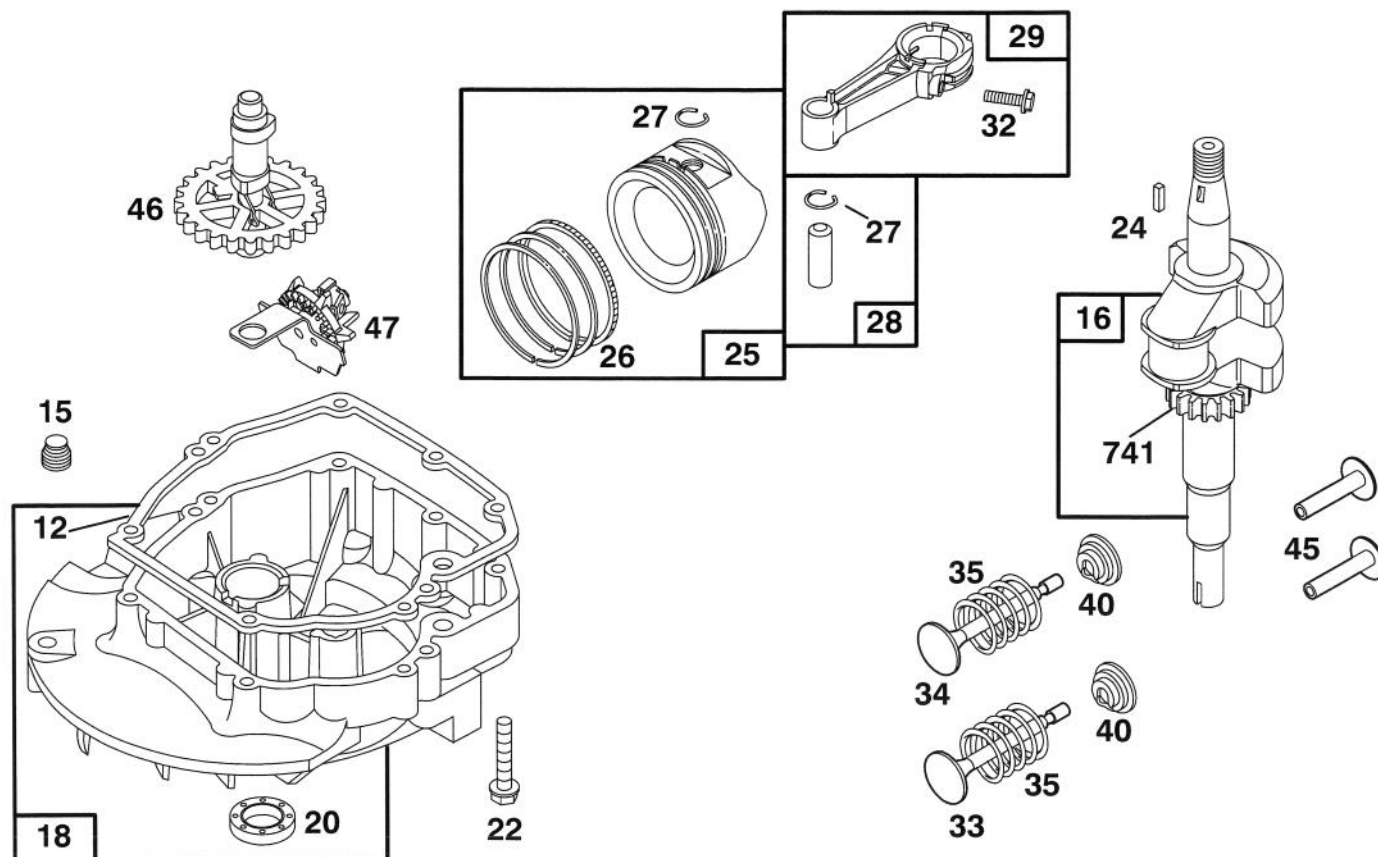


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket – Crankcase	1
15	94720	Plug – Oil Drain	1
16	494546	Crankshaft	
		Note: Order 94388 For Timing Gear Key.	1
18	493279	Sump – Engine	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex. Head	1
		Note: 94612 Screw – Hex. Head (One (1) Used in Hole Nearest Breather)	1
24	222698	Key – Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock – Piston Pin	1
28	298909	Pin – Piston (Standard)	1
	298908	Pin – Piston (.005" O.S.)	1
29	490566	Rod Assembly – Connecting	1
		Note: For Conn. Rod With .020" Undersize Crankpin Bearing – Order No. 490743.	1
32	94699	Screw – Connecting Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	492830	Gear – Cam	1
47	493737	Slinger – Oil	1
741	262598	Gear – Timing	1

 ★ Included in Gasket Set—Part No. 496316.

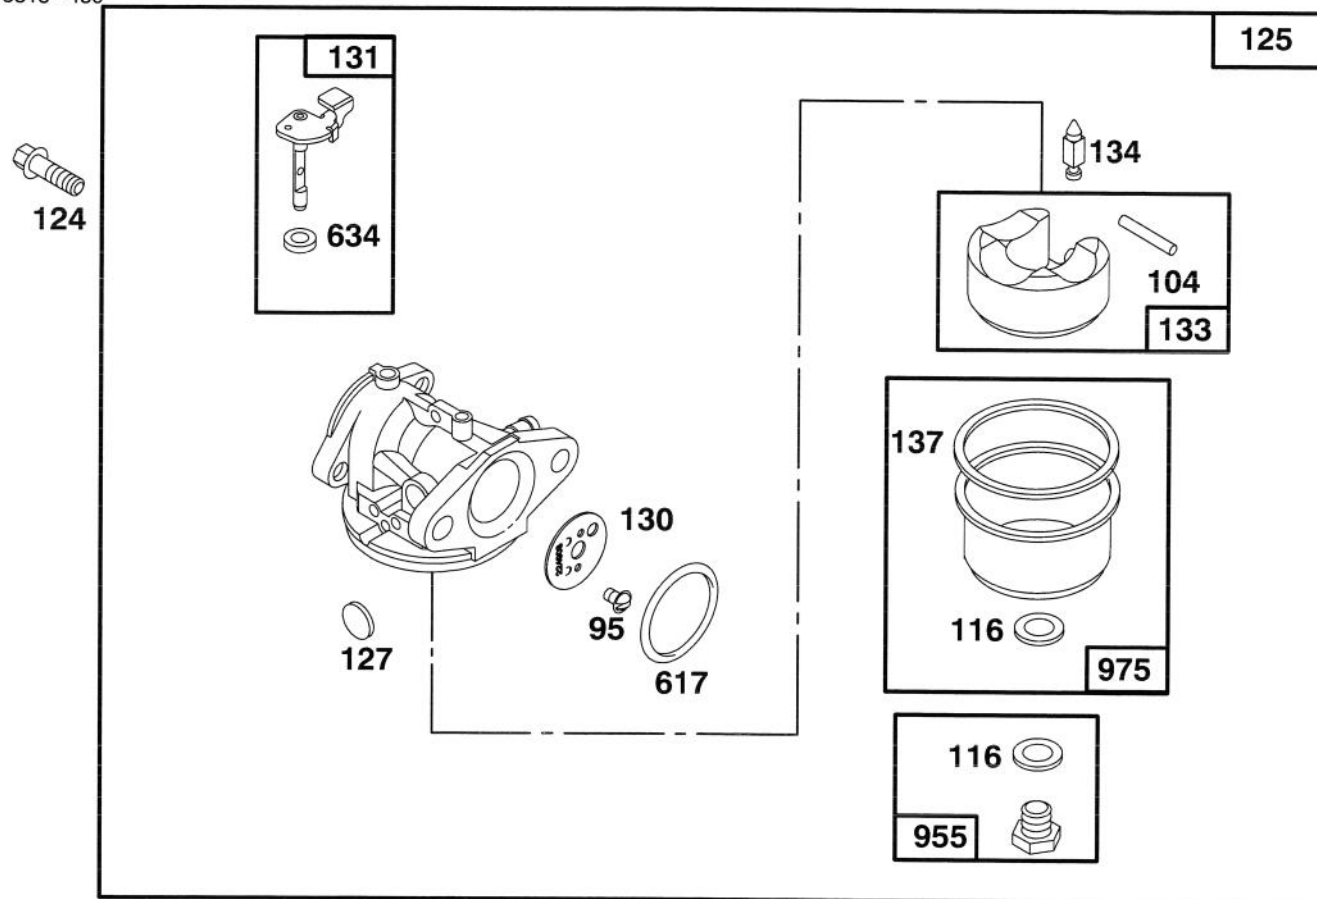

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Throttle Valve Mounting	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket – Sealing (Sold in Kit Only)	1
124	94525	Screw – Carburetor Mtg.	1
125	497314	Carburetor	1
●127		Plug – Welch (Sold in Kit Only)	1
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float Assy. – Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
955	497315	Screw – Bowl Mtg. (Std.) Note: 496495 Screw – Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. – Carburetor	1

● Included in Carburetor Kit – Part No. 493762.

 ◆ Included in Carburetor Gasket Set – Part No. 490937.

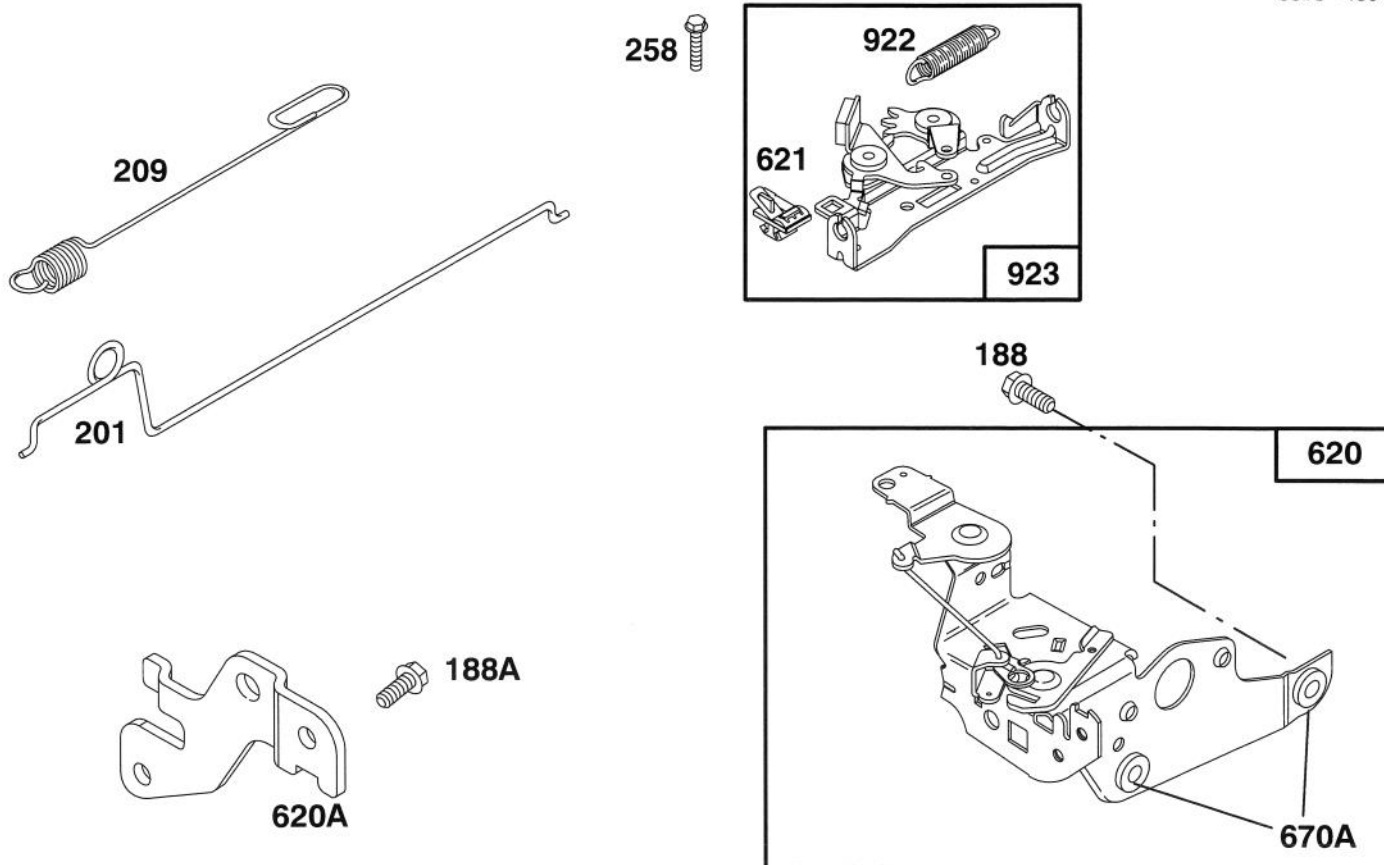


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
188	94644	Screw - Hex. Head	1
188A	94602	Screw - Hex. Head	1
201	262579	Link - Governor	1
209	263046	Spring - Governor	1
258	94512	Screw - Hex. Head	1
620	497203	Bracket - Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket - Control	1
621	396847	Switch - Stop	1
670A	493823	Spacer - Bracket	1
922	262640	Spring - Brake	1
923	493442	Brake Assembly	1

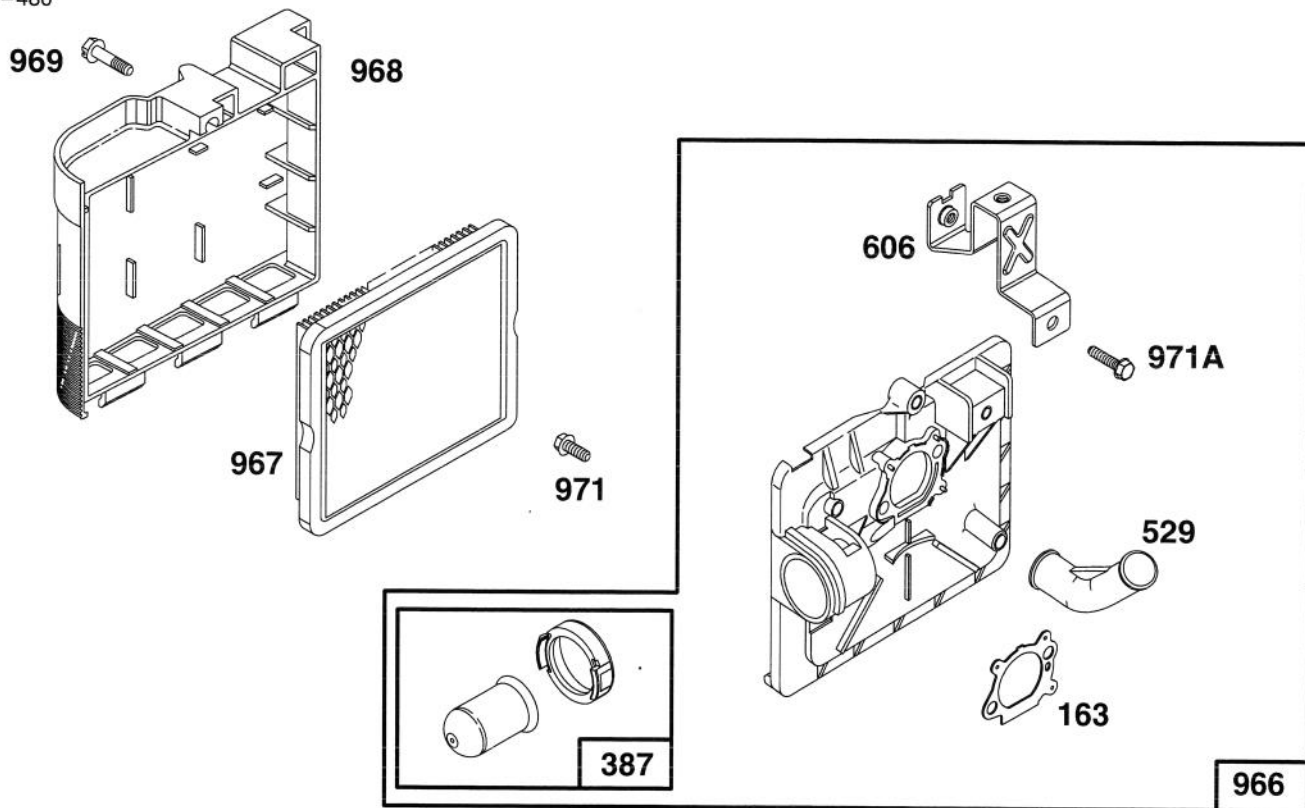 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket - Air Cleaner	1
387	496115	Primer - Carburetor	1
529	281299	Grommet - Breather	1
606	224815	Strap - Bracket	1
966	496116	Base - Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
967	491588	Filter - Air	1
968	281340	Cover - Air Cleaner	1
969	94120	Screw - Cover Mtg.	1
971	94121	Screw - Air Cleaner	1
971A	94749	Screw - Hex. Head	1

 * Included in Gasket Set - Part No. 496316.

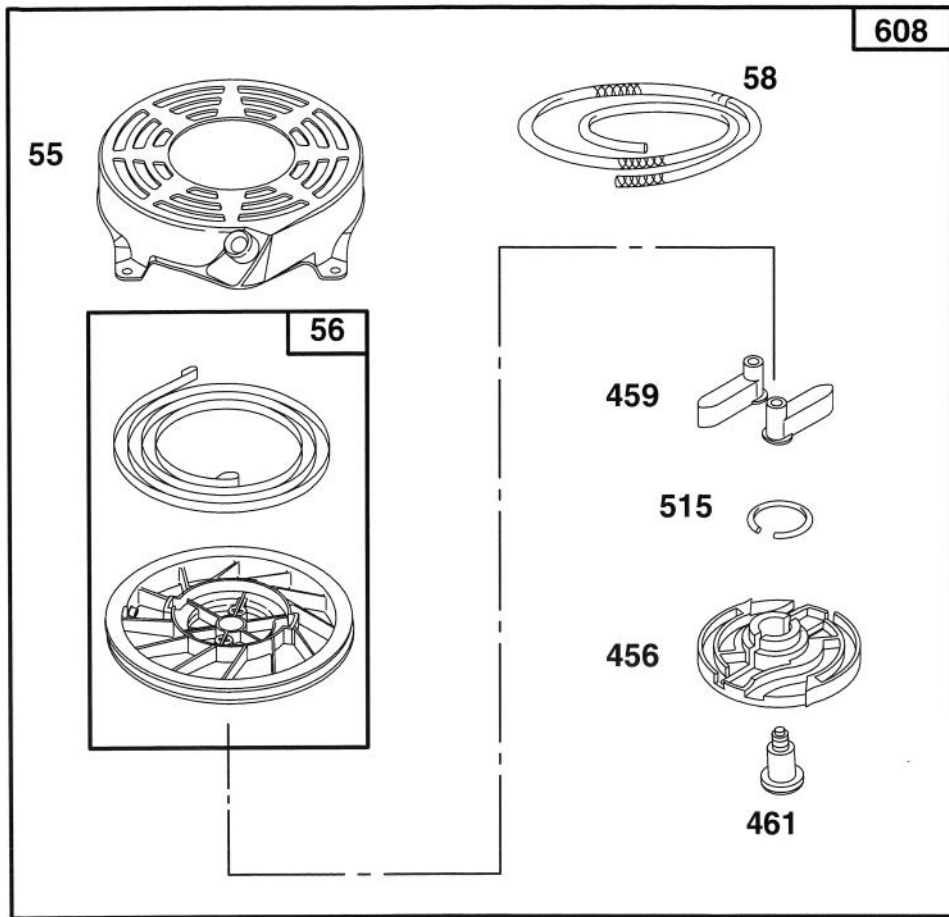


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01





Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1
56	498144	Pulley – Rewind Starter	1
58	280399	Rope – Rewind Starter (Cut to Required Length)	1
59	224467	Insert – Starter Grip	1
60	493926	Handle – Rewind Starter	1
456	281503	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	281505	Pawl – Starter	1
461	94943	Pin – Starter	1
515	263073	Spring – Torsion	1
608	497680	Starter Assy. – Rewind Includes: 94128 Screw – Hex Hd. 92987 Nut – Hex.	1 1 1

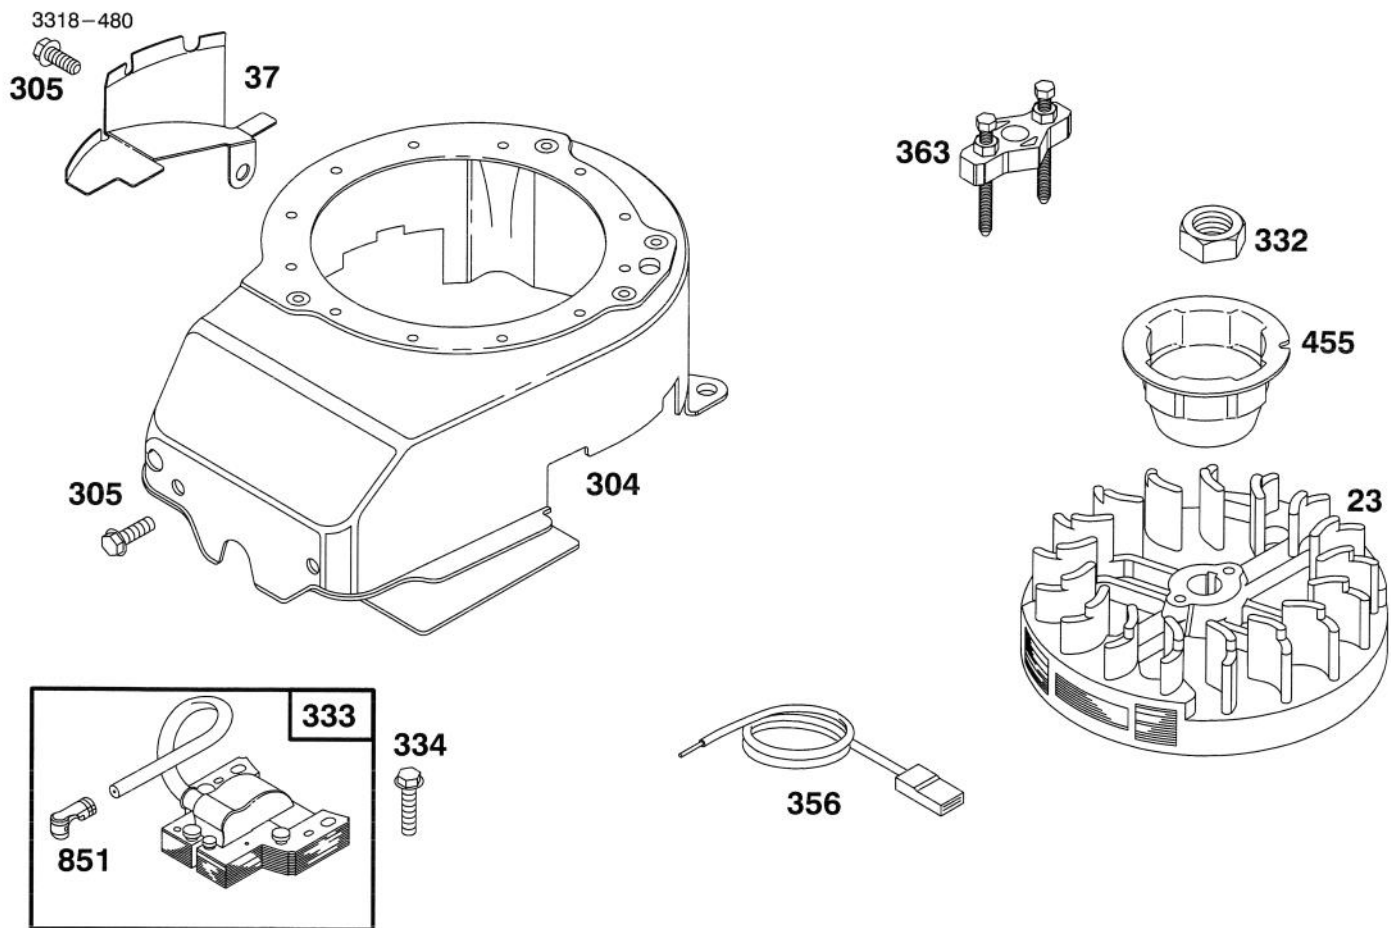 

Assemblies include all parts shown in frames.

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard – Flywheel	1
304	493293	Housing – Blower	1
305	94744	Screw – Sem	1
332	92284	Nut – Flywheel	1
333	802574	Armature – Magneto	1

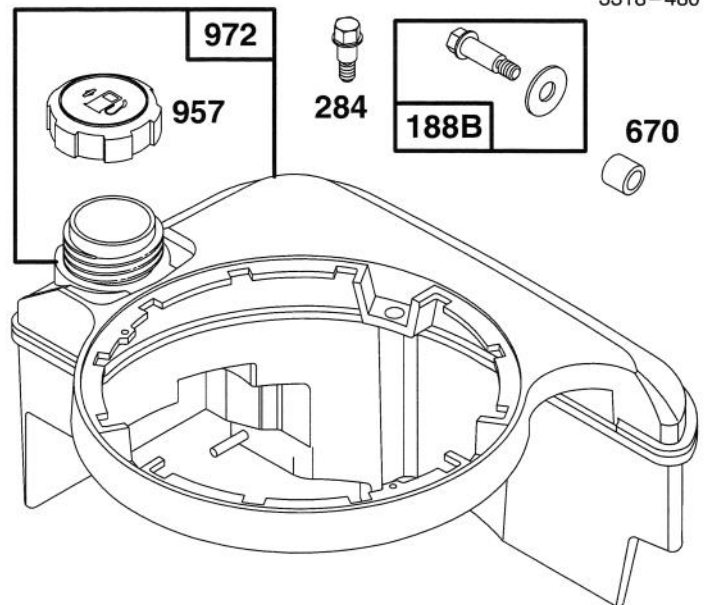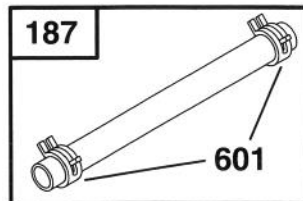  
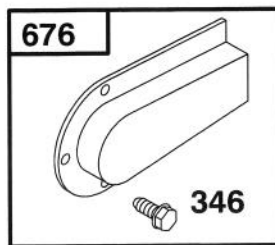 
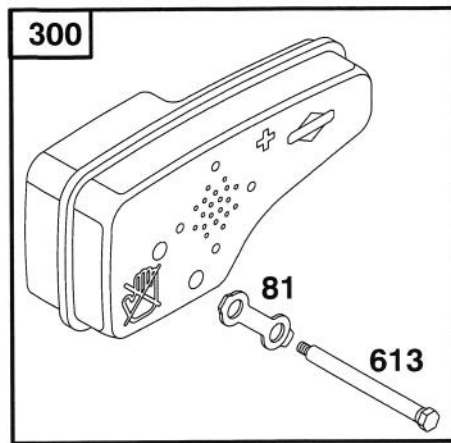 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188	398540	Screw – Tank Mounting	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93053	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Shoulder	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

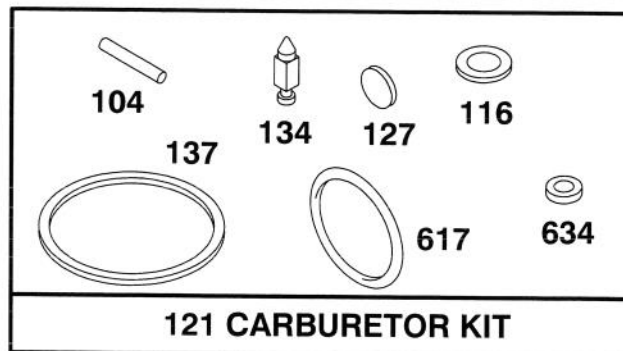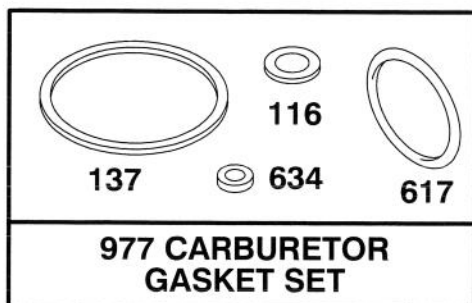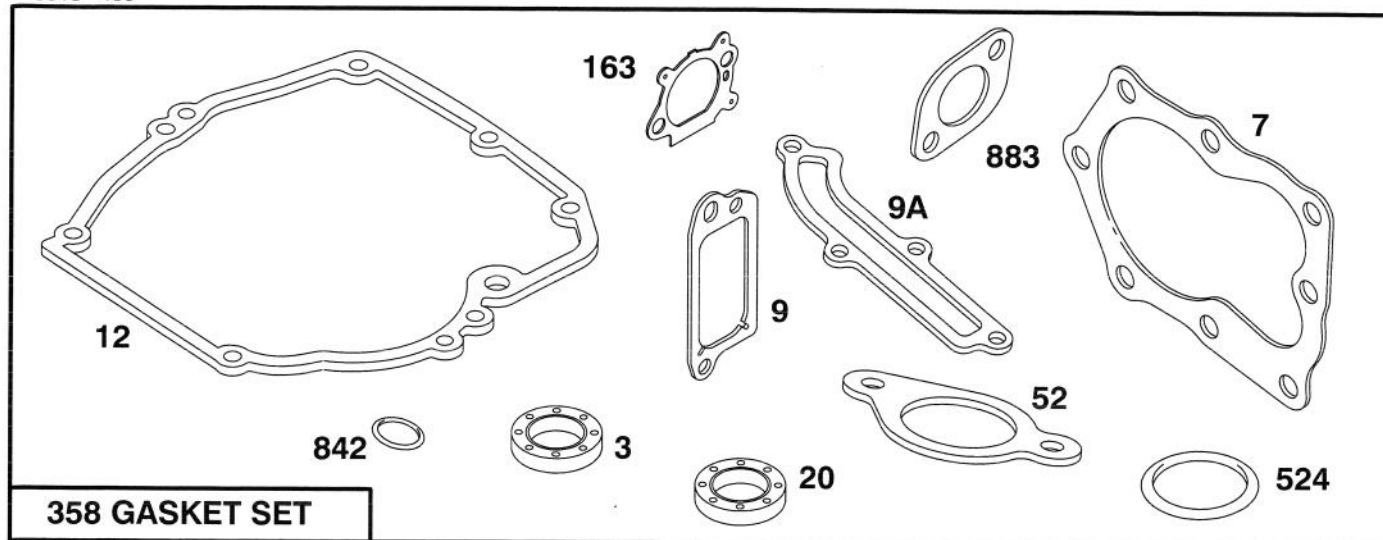   

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272916	Gasket – Cylinder Hd.	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
◆◆116		Gasket – Sealing (Sold in Kit Only)	1
121	493762	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
◆◆137		Gasket – Bowl (Sold in Kit Only)	1
★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
◆◆617	270344	Seal – Fuel Intake Tube	1
◆◆634		Washer – Shaft (Sold in Kit Only)	1
★842	280966	Seal – O-Ring	1
★883	272253	Gasket – Exhaust	1
977	490937	Gasket Set – Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 496316.

TORO PART NUMBER INDEX

3318-480

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
614578	Gearcase	6 10 1	71-9470	Door - Bag	9 3 1
614596	Gear 34 Tooth	6 18 1	71-9480	Handle - Door	9 2 1
614668	Cover - Gear Case	6 2 1	71-9600	Gear Case Ass'y Complete	6 * 1
614696	Shaft - Intermediate	6 4 1	71-9600	Gearcase Assembly	5 35 1
14-9959	Wheel, Tire & Gear Assy.	5 22 2	71-9610	Pulley - Half	6 12 2
16-5979	Housing - 48cm	1 2 1	71-9620	Shaft - Output	6 7 1
17-4319	Panel - Control	7 22 1	71-9630	Bracket - Traction	5 36 1
17-9428	Screw	8 1 2	71-9800	Door - Discharge	1 15 1
19-4050	Knob	7 19 2	71-9840	Spring - Door	1 18 2
26-0672	Bolt - Blade	4 8 1	71-9850	Retainer - Belt	5 3 1
27-6230	Bolt - Wheel	5 23 2	71-9860	Decal - 48cm	1 1 1
27-6230	Bolt - Wheel	2 30 2	71-9861	Decal - Panel	7 23 1
27-6250	Bushing - Wheel	5 24 4	71-9900	Frame - Bag	9 4 1
27-6250	Bushing - Wheel	2 28 4	74-1660	Cover - Wheel	5 21 2
36-4780	Washer - Thrust	6 17 3	74-1670	Spacer - Wheel	5 25 2
36-4791	Washer	6 5 2	82-8550	Shield - Muffler	3 7 1
38-7820	Bearing - Ball	6 15 1	92-2270	Screw - Handle	7 11 1
40-1940	Washer - Wheel	1 27 2	92-2289	Decal - Toro Logo	3 12 1
46-1113	Wheel & Tire Assembly	2 29 2	92-9677	Rear Pivot Assembly L.H.	5 6 1
46-6980	Support - Cable	7 14 1	92-9680	Rear Pivot Assembly R.H.	5 1 1
47-2890	Bushing - Sleeve	5 4 2	92-9812	Stiffener - Blade	4 6 1
47-6730	Seal - Grease	5 5 2	92-9813	Blade - 48cm	4 5 1
48-2060	Bearing - Needle	5 14 2	93-0243	Shroud - QT Wedge	3 4 1
49-2040	Screw - Tapitite	6 1 4	93-0339	Cover - Throttle Lower	7 7 1
55-3760	Pinion - 15 Tooth	6 3 1	93-1116	Cable - Brake	7 12 1
60-8750	Bushing	6 6 2	93-1117	Control - Throttle	7 2 1
60-8850	Bushing - Output	6 9 2	93-3772	Guide - Rope	7 17 1
60-8890	Gear - Bevel Pinion	6 16 1	93-4105	Decal - Danger	1 4 1
62-6660	Spacer	6 11 1	93-4354	Decal - Engine	3 1 1
62-7550	Pulley - Driver	4 1 1	93-8470	Screw - Clamp	3 10 1
63-8590	Screw - Thread Forming	5 12 2	94-4364	Bail - Brake	8 5 1
65-2720	Ring - Retaining	5 17 4	94-4365	Bail - Traction	8 4 1
65-4710	Washer - Friction	5 15 2	94-4367	Handle Assembly	7 20 1
65-4720	Spring - Compression	5 20 2	94-6026	Decal - Instruction	7 1 1
65-4740	Washer - Keyed Thrust	5 16 4	94-6754	Cable - Traction	7 10 1
65-4750	Gear - Pinion	5 19 2	2210-249	Clamp - Cable	3 11 1
65-4760	Washer - Clutch	5 26 2	2210-316	Stop - Rope	3 3 1
65-5210	Screw - Thread Forming	1 12 2	302-26	Fitting - Grease	5 2 2
66-0330	Spacer - Support	8 2 2	321-52	Screw - Hex Hd. Cap	7 21 1
66-1700	Decal - Noise	1 19 1	322-29	Screw - Cap Hex. Hd.	1 17 2
66-6040	Key - Rocking R.H.	5 * 1	3253-22	Washer - Lock	4 7 1
66-6050	Key - Rocking L.H.	5 18 1	3256-1	Washer - Flat	7 15 1
71-7630	Cap - Throttle Lower	7 8 1	3256-24	Washer	6 13 1
71-7740	Spring - Counterbalance	5 31 1	3284-5	Pin - Roll	1 8 1
71-7770	Plate - Rear Securing	5 27 2	3290-378	Tie - Cable	9 * 1
71-7820	Pivot - Front	1 25 1	3290-378	Tie - Cable	3 5 1
71-7840	Rod - Trigger	5 8 1	3290-378	Tie - Cable	7 13 1
71-7860	Grip - Upper	1 13 1	3296-5	Nut	6 14 1
71-7870	Grip - Lower	1 6 1	3296-5	Nut - Lock	1 26 2
71-7890	Guide - Belt Rear	1 21 1	3296-5	Nut - Lock	5 7 2
71-7900	Cap - Hinge Bolt L.H.	1 16 1	3296-73	Nut - Lock	7 16 2
71-7910	Cap - Hinge Bolt R.H.	1 11 1	3296-74	Nut - Flange, Nylon	8 3 2
71-7920	Cover - Belt	1 3 1	32112-11	Nut - Push	1 23 1
71-7930	Trigger - H.O.C.	1 7 1	32112-13	Nut - Push	5 13 1
71-7940	Retainer - Blade	4 4 1	32121-114	Pin - Groove	6 8 2
71-7960	Guide - Engine Belt	4 2 1	32144-4	Screw - Tapping	4 3 2
71-7970	Rod - Link	5 30 1	32144-4	Screw - Thread Forming	1 10 10
71-7980	Indicator - H.O.C.	5 33 1	32144-4	Screw - Thread Forming	5 28 6
71-7990	Ramp - Discharge	1 22 1	32144-31	Screw - Thread Forming	5 9 1
71-8040	Plate - Throttle	7 3 1	32144-70	Screw - Hex. Flange Hd.	1 5 1
71-8060	Spring - Trigger Return	5 10 2	32144-73	Screw - Muffler	3 6 3
71-8080	Saddle - H.O.C.	5 11 1	32144-97	Screw - Phillips Pan Hd.	7 6 5
71-8090	Mount - Handle L.H.	7 * 1	32144-97	Screw - Thread Forming	1 14 2
71-8100	Mount - Handle R.H.	7 18 1	32144-98	Screw - Phillips Pan Hd.	7 5 4
71-8130	Bracket - Control	7 25 1	32144-99	Screw - Phillips Pan Hd.	7 9 2
71-8310	Spring - Compression	7 24 1	32144-102	Screw - Engine Mount	3 8 3
71-8450	Cover - Spring	5 32 1	32144-111	Screw - Thr'd Form	9 1 5
71-8580	Spacer - Door	1 20 2	32144-121	Screw	3 2 2
71-8830	Retainer - Shaft	1 24 2	32151-93	Ring - Grip	5 29 1
71-9450	V-Belt	5 34 1			
71-9460	Bag - Grass	9 5 1			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]