 




MODEL NO. 20923B-6900001 & UP

PARTS
CATALOG

48cm REAR BAGGING MOWER

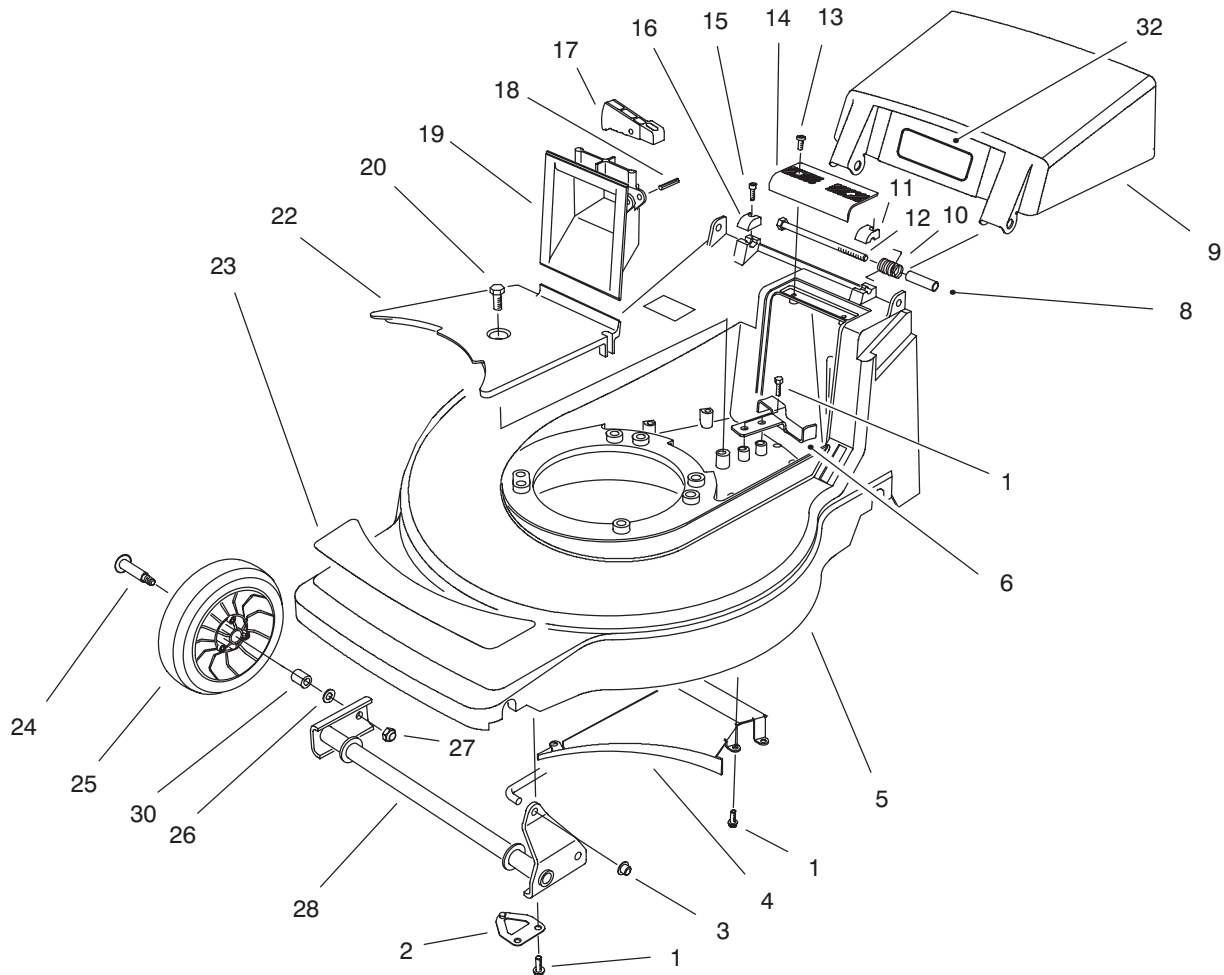


C-2490

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Hex Hd. Tap	10
2	71-8830	Retainer - Shaft	2
3	32112-11	Nut - Push	1
4	71-7990	Ramp - Discharge	1
5	16-5979	Housing - 48cm (Incl. Ref. #23)	1
6	71-7890	Guide - Belt Rear	1
8	71-8580	Spacer - Door	2
9	71-1569	Door - Discharge (Incl. Ref. #32)	1
10	71-9840	Spring - Door	2
11	71-7900	Cap - Bolt Hinge L.H.	1
12	322-29	Screw - Hex Hd.	2
13	32144-97	Screw - Thread Forming	2
14	71-7860	Grip - Upper	1
15	65-5210	Screw - Thread Forming	2

Ref. No.	Part No.	Description	No. Used
16	71-7910	Cap - Bolt Hinge R.H.	1
17	71-7930	Trigger - HOC	1
18	3284-5	Pin - Groove	1
19	71-7870	Grip - Lower	1
20	32144-70	Screw - Hex Flange Hd.	1
22	71-7920	Cover - Belt	1
23	71-9860	Decal - Deck 48cm	1
24	27-6230	Bolt - Wheel	2
25	46-1113	Wheel & Tire Assembly (Incl. Ref. #30)	2
26	40-1940	Washer	2
27	3296-5	Nut - Lock, Nylon	2
28	71-7820	Pivot - Front	1
30	27-6250	Bushing - Wheel	4
32	93-4105	Decal - Danger	1

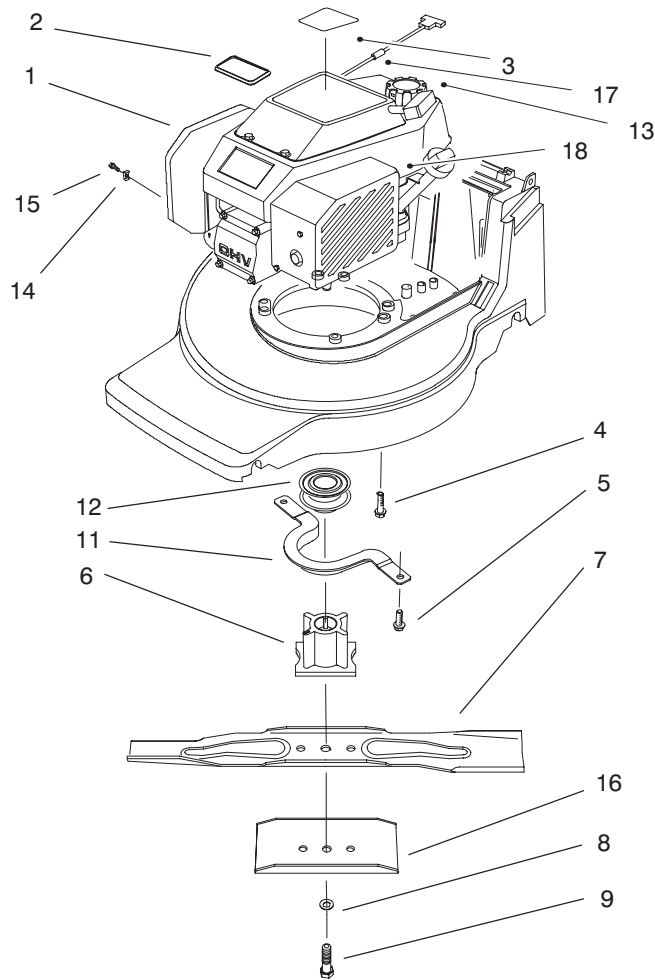 


C-2085

ENGINE & BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-1604	Engine – Complete	1	11	71-7960	Guide – Engine Belt	1
2	92-2289	Plate – Toro Logo	1	12	62-7550	Pulley – Driver	1
3	93-4355	Decal – Recoil	1	13	93-7198	Cap – Gas	1
4	32144-102	Screw – Thread Forming	3	14	2210-249	Clamp – Casing	1
5	32144-4	Screw – Thread Forming	2	15	86-7990	Screw – Clamp	1
6	71-7940	Retainer – Blade	1	†16	92-9812	Stiffener – Blade	1
†7	92-9813	Blade – 48cm	1	17	2210-316	Stop – Rope	1
8	3253-22	Washer – Lock	1	18	77-9550	Cover – Brake	1
9	26-0672	Bolt – Blade	1				

 † Obtain From Toro Europe N.V.

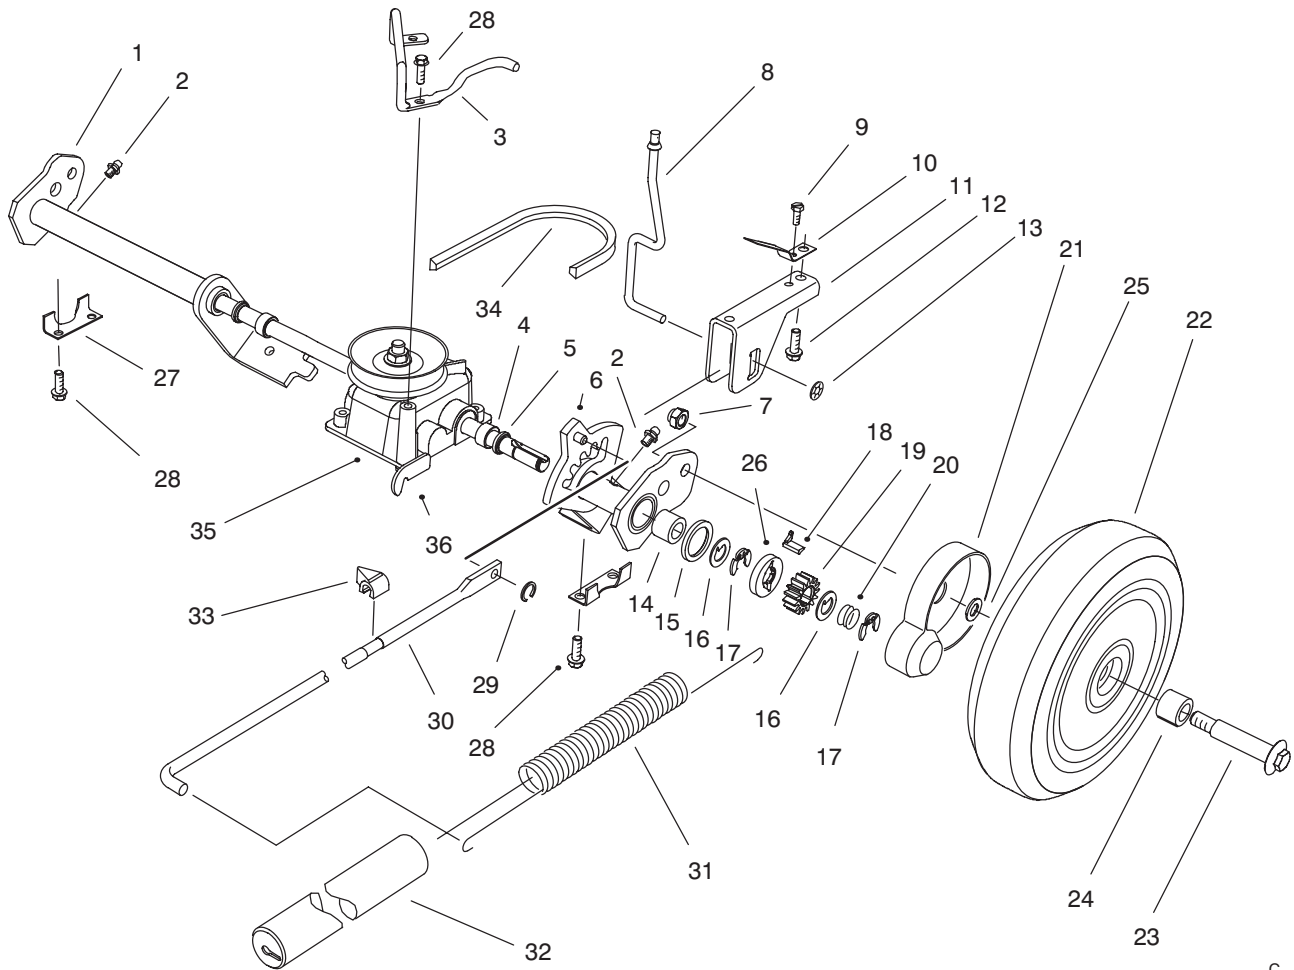


C-1883

S. P. REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1	92-9680	Rear Pivot Assembly R.H. (Incl. Ref. #2, 4, 5 & 14)	1	19	65-4750	Gear – Pinion	2
2	302-26	Fitting – Grease	2	20	65-4720	Spring – Compression	2
†3	71-9850	Retainer – Belt	1	21	74-1660	Cover – Wheel	2
4	47-2890	Bushing – Sleeve	2	22	14-9959	Wheel, Tire & Gear Assy. (Incl. Ref. #24)	2
5	47-6730	Seal – Grease	2	23	27-6230	Bolt – Wheel	2
†6	92-9677	Rear Pivot Assembly L.H. (Incl. Ref. #2, 4, 5 & 14)	1	24	27-6250	Bushing – Wheel	4
7	3296-5	Nut – Lock	2	25	74-1670	Spacer – Wheel	2
8	71-7840	Rod – Trigger	1	26	65-4760	Washer – Clutch	2
9	32144-31	Screw – Thread Forming	1	27	71-7770	Plate – Rear Securing	2
10	71-8060	Spring – Trigger Return	2	28	32144-4	Screw – Thread Forming	6
11	71-8080	Saddle – H.O.C.	1	29	32151-93	Ring – Grip	1
12	63-8590	Screw – Thread Forming	2	30	71-7970	Rod – Link	1
13	32112-13	Nut – Push	1	31	71-7740	Spring – Counterbalance	1
14	48-2060	Bearing – Needle	2	32	71-8450	Cover – Spring	1
15	65-4710	Washer – Friction	2	33	71-7980	Indicator – H.O.C.	1
16	65-4740	Washer – Keyed Thrust	4	34	71-9450	V- Belt	1
17	65-2720	Ring – Retaining	4	†35	71-9600	Gearcase Assembly (Incl. Ref. #36)	1
18	66-6050	Key – Rocking L.H.	1	36	71-9630	Bracket – Traction	1
*	66-6040	Key – Rocking R.H.	1				

*Not Illustrated

 † Obtain From Toro Europe N.V.

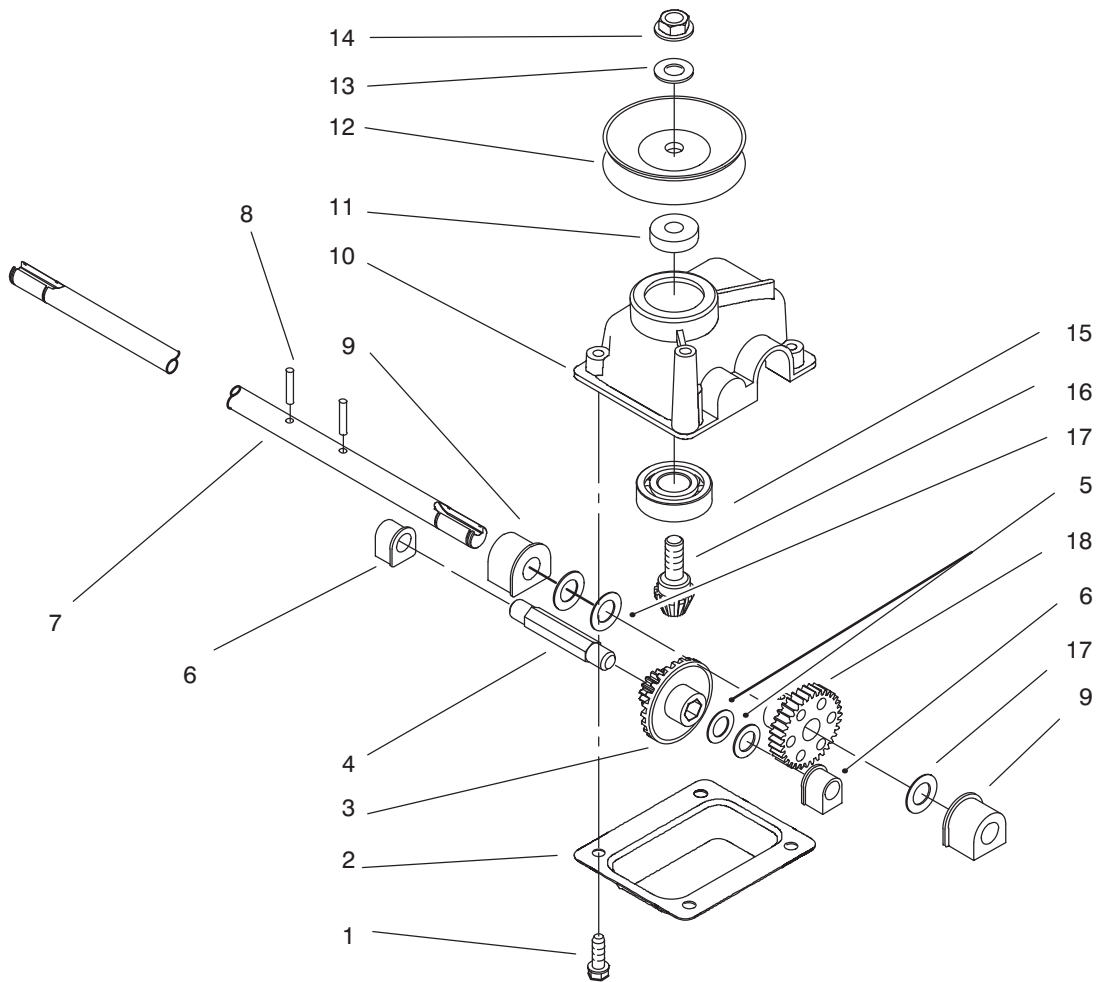

C-1292


GEARCASE ASSEMBLY NO. 71-9600†

Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw - Taptite	4
2	614668	Cover - Gear Case	1
3	55-3760	Pinion - 15 Tooth	1
4	614696	Shaft - Intermediate	1
5	36-4791	Washer	2
6	60-8750	Bushing	2
7	71-9620	Shaft - Output	1
8	32121-114	Pin - Spirol	2
9	60-8850	Bushing - Output	2
10	614578	Gearcase	1

Ref. No.	Part No.	Description	No. Used
11	62-6660	Spacer	1
12	71-9610	Pulley - Half	2
13	3256-24	Washer	1
14	3296-5	Nut	1
15	38-7820	Bearing - Ball	1
16	60-8890	Gear - Bevel Pinion	1
17	36-4780	Washer - Thrust	3
18	614596	Gear 34 Tooth	1
†*	71-9600	Gear Case Ass'y Complete	1

*Not Illustrated

 † Obtain From Toro Europe N.V.

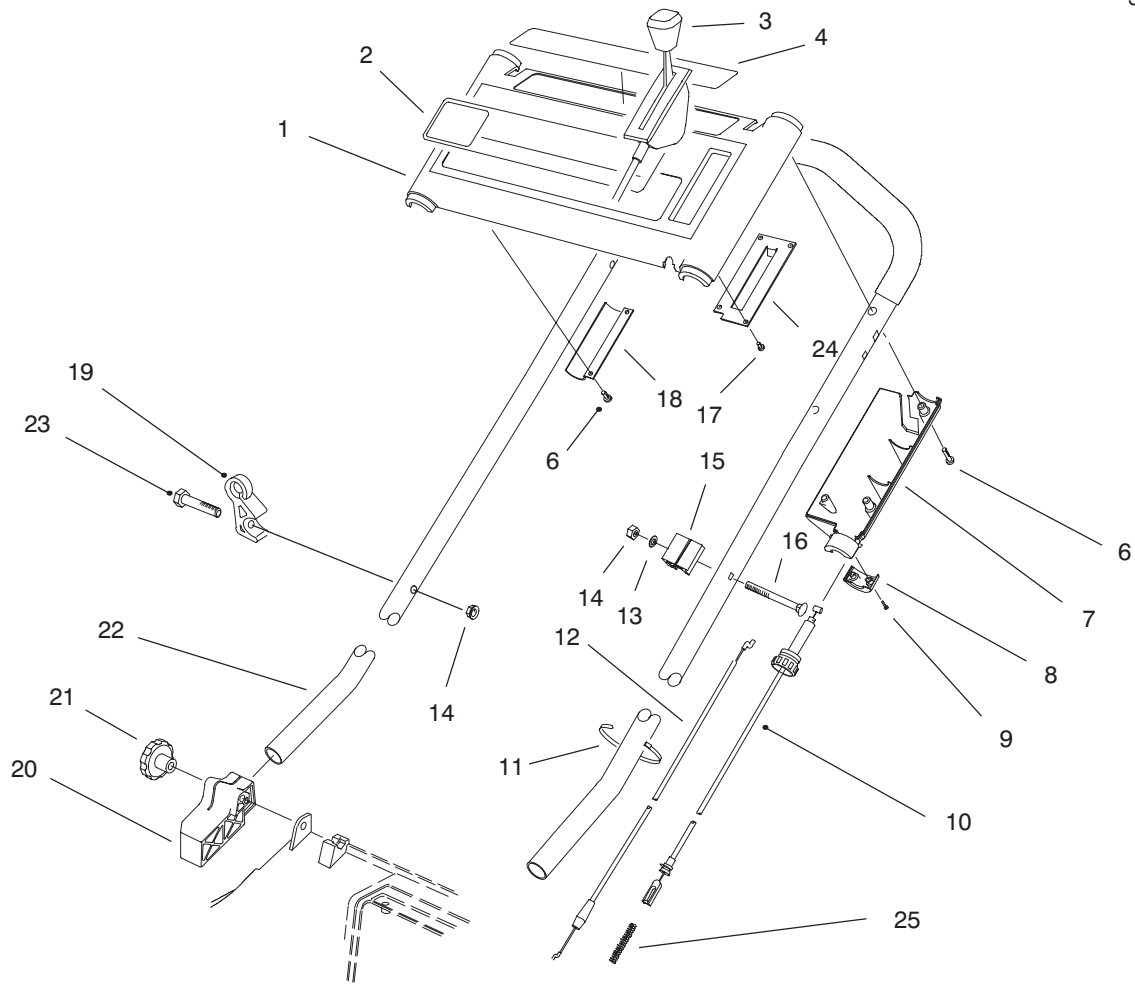


C-2491

S. P. HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	17-4529	Panel - Control (Incl. Ref. #2 & 4)	1
2	71-9863	Decal - Panel OHV	1
3	93-1115	Control - Throttle	1
4	94-6027	Decal - Instruction	1
6	32144-97	Screw - Phillips Pan Hd.	5
7	93-0339	Cover - Throttle Lower	1
8	71-7630	Cap - Throttle Lower	1
9	32144-99	Screw - Phillips Pan Hd.	2
10	94-6754	Cable - Traction	1
11	3290-378	Tie - Cable	2
12	93-1116	Cable - Brake	1
13	3256-1	Washer - Flat	1

Ref. No.	Part No.	Description	No. Used
14	3296-73	Nut - Lock	2
15	46-6980	Support - Cable	1
16	92-2270	Screw - Handle	1
17	32144-98	Screw - Phillips Pan Hd.	4
18	71-8130	Bracket - Control	1
19	93-3772	Guide - Rope	1
20	71-8100	Mount - Handle R.H.	1
*	71-8090	Mount - Handle L.H.	1
21	19-4050	Knob	2
22	94-4367	Handle Assembly	1
23	321-52	Screw - Hex Hd. Cap	1
24	71-8040	Plate - Throttle	1
25	71-8310	Spring - Compression	1

 *Not Illustrated

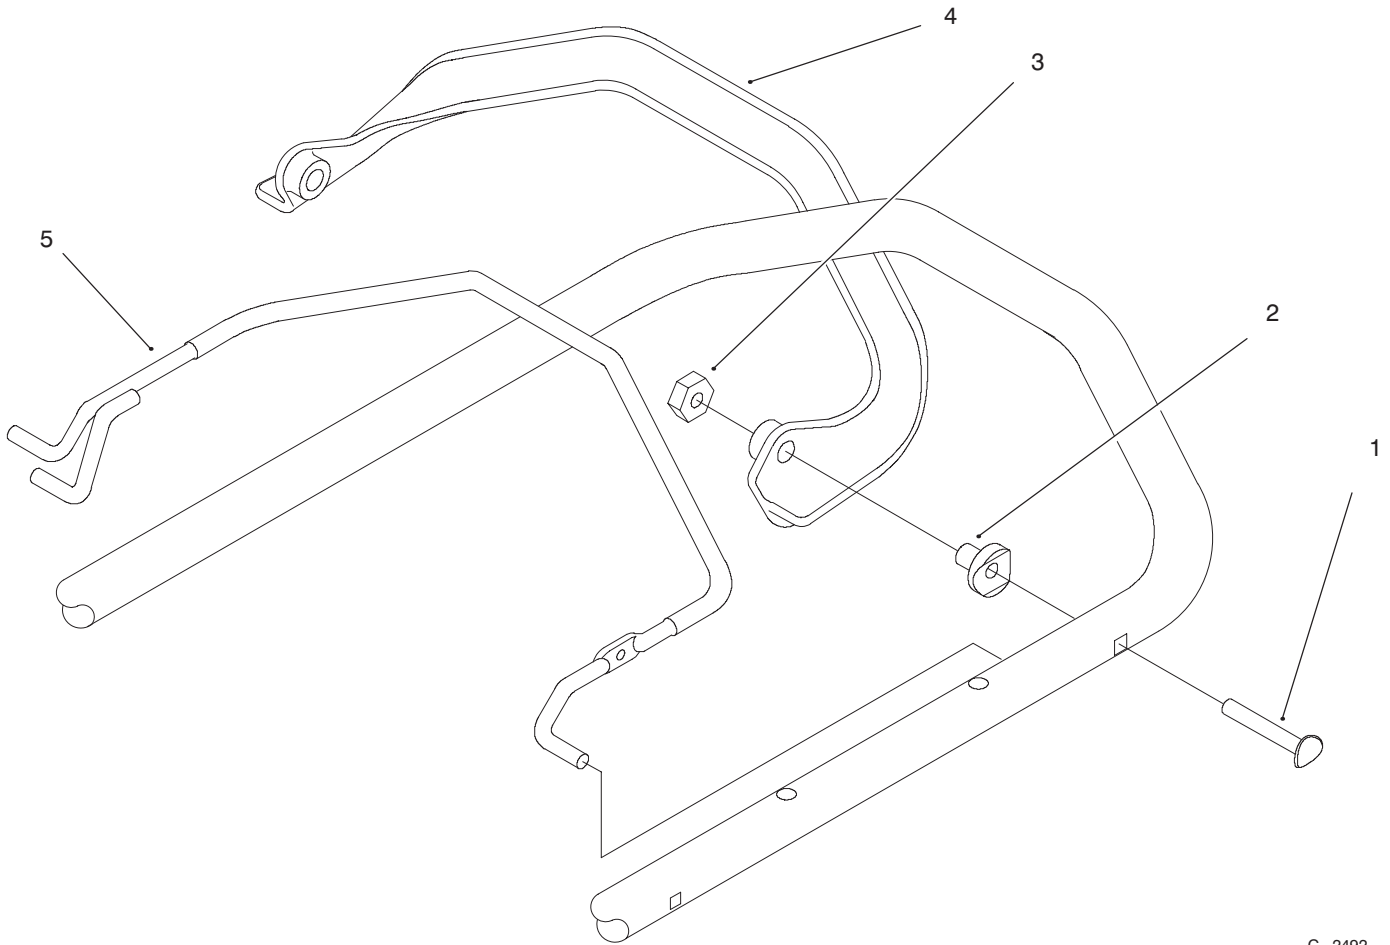


C-2492

BAIL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	17-9428	Screw	2
2	66-0330	Spacer - Support	2
3	3296-74	Nut - Flange, Nylon	2

Ref. No.	Part No.	Description	No. Used
4	94-4365	Bail - Traction	1
5	94-4364	Bail - Brake	1

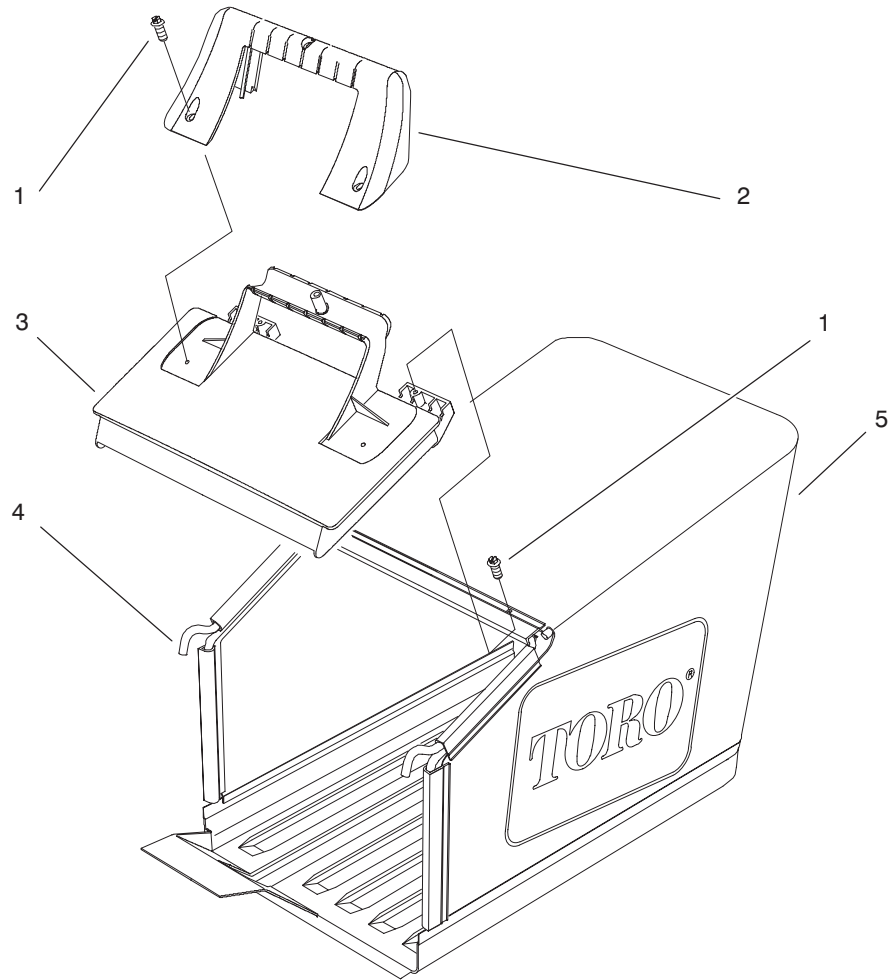 


C-1509

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Hex Washer Hd. Thread Forming	5
2	71-9480	Handle - Door	1
3	71-9470	Door - Bag	1

Ref. No.	Part No.	Description	No. Used
†4	71-9900	Frame - Bag	1
5	71-9460	Bag - Grass	1

 † Obtain From Toro Europe N.V.

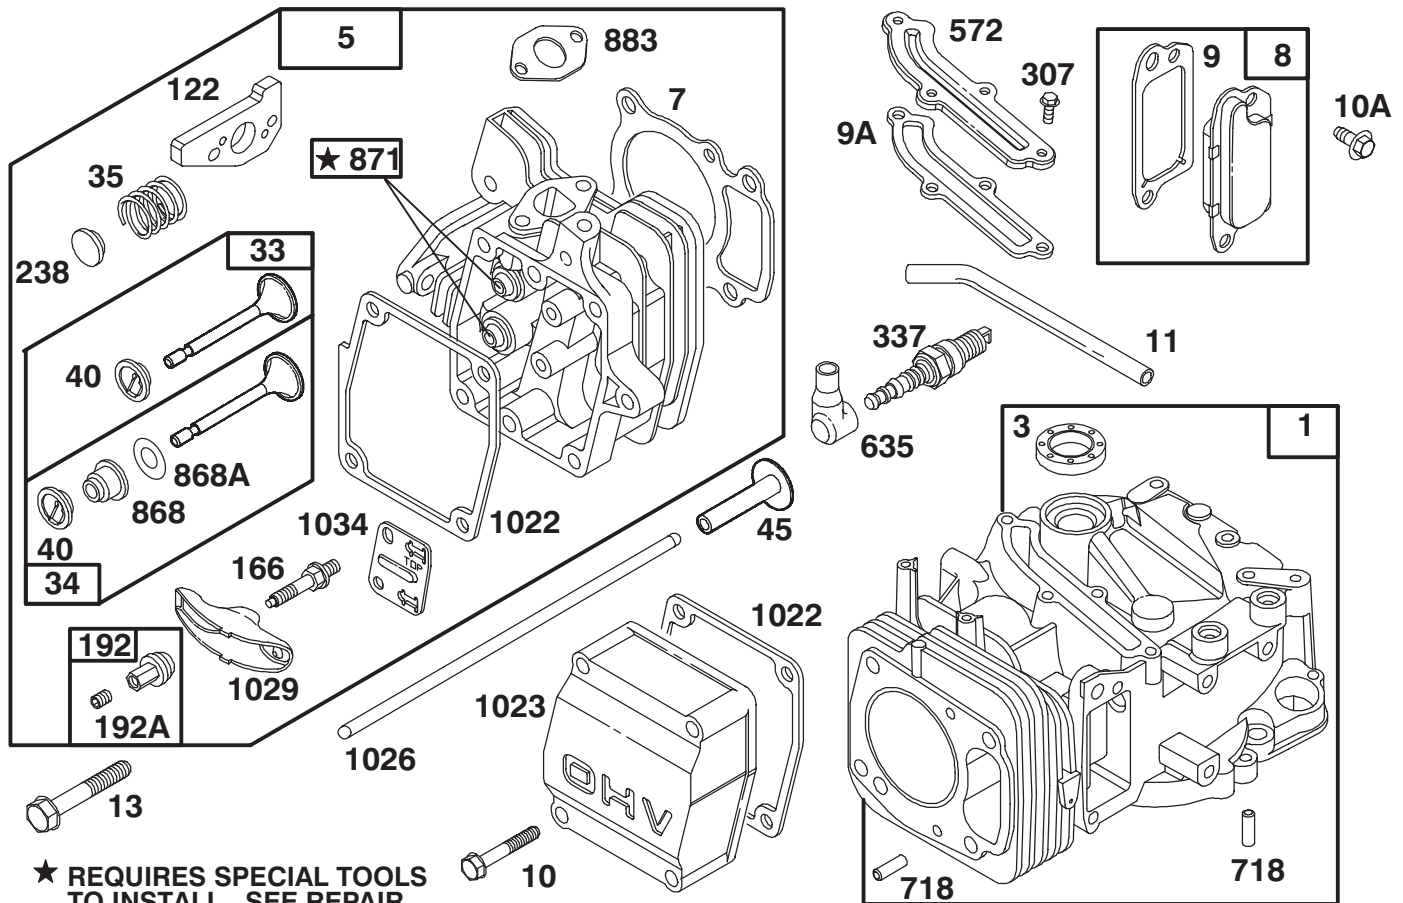


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
1	77-7590	Cylinder Assy.	1
★3	77-9060	Seal – Oil	1
5	77-7730	Head – Cylinder	1
★7	77-7740	Gasket – Cylinder Head	1
8	77-9300	Breather Assy.	1
★9	77-9250	Gasket – Breather	1
★9A	77-7410	Gasket – Breather	1
10	77-7360	Screw – Hex. Head (Valve Cover)	1
10A	77-9200	Screw – Hex. Head	1
11	77-9410	Tube – Breather	1
13	77-7630	Screw – Cylinder Head	1
33	77-7860	Valve – Exhaust	1
34	77-7880	Valve – Intake	1
35	77-7810	Spring – Valve	1
40	77-7870	Retainer – Spring	1
45	77-7610	Tappet – Valve	1
●122	77-7820	Adapter Assy.	1
166	77-7780	Stud – Rocker Arm	1
192	77-7910	Ball & Screw – Rocker Arm	1

Ref. No.	Part No.	Description	No. Used
192A	77-9310	Screw – Set	1
238	77-7800	Cap – Valve	1
307	77-7420	Screw – Breather Cover Mtg.	1
337	77-7330	Plug – Spark	1
572	77-7400	Cover – Breather	1
635	77-7340	Elbow – Spark Plug	1
718	77-7600	Pin – Cylinder	1
★868	77-7890	Seal Assy. – Valve	1
★868A	77-7900	Gasket – Valve	1
871	77-7850	Bushing – Guide	1
★883	77-7760	Gasket – Exhaust	1
★1022	77-7320	Gasket – Rocker Cover	1
1023	77-9320	Cover – Valve	1
1026	77-7620	Rod – Push	1
1029	77-7790	Arm – Rocker	1
1034	77-7770	Guide – Push Rod	1
	77-9020	Short Block	1

★ Included in Gasket Set–Part No. 77-8900

 ● Included in Carburetor Overhaul Kit–Part No. 77-8920

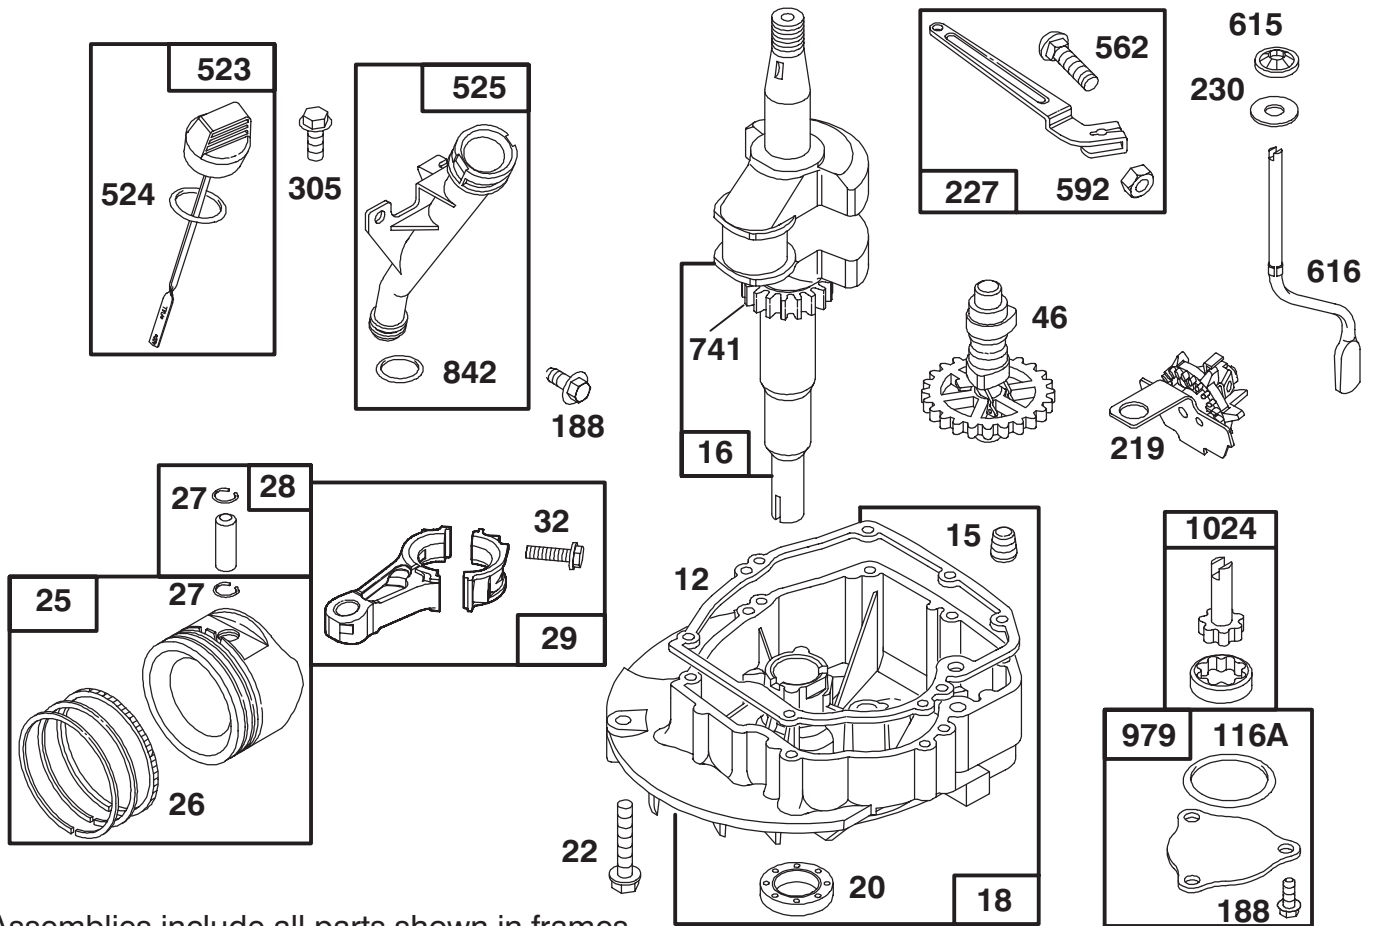


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
★12	77-7550	Gasket – Engine Base	1
15	77-9240	Plug – Pipe	1
16	77-9330	Crankshaft	1
		Note: Order Part No. 77-7540 For Timing Gear Key.	
18	77-7560	Base – Engine	1
★20	77-7570	Seal – Oil	1
22	77-9070	Screw – Engine Base	1
25	77-7690	Piston Assy. (Std.)	1
26	77-7700	Ring Set (Std.)	1
27	77-7710	Lock – Piston Pin	1
28	77-9340	Pin Assy. – Piston	1
29	77-7670	Rod – Connecting	1
32	77-9350	Screw – Connecting Rod	1
46	77-7490	Gear – Cam	1
★116A	77-7660	O-Ring	1

Ref. No.	Part No.	Description	No. Used
188	77-9360	Screw – Hex. Head	1
219	77-7500	Gear – Governor	1
227	77-7370	Lever Assy. – Governor	1
230	77-7470	Washer	1
305	77-8310	Screw – Hex. Head	1
523	77-7260	Dipstick – Oil	1
★524	77-7270	Seal – O-Ring	1
525	77-7280	Tube – Oil Filler	1
562	77-7380	Bolt – Governor Lever	1
592	77-7390	Nut – Hex.	1
615	77-7480	Pushnut	1
616	77-7460	Crank – Governor	1
741	77-7530	Gear – Timing	1
★842	77-7300	Seal – O-Ring	1
979	77-7650	Cover – Oil Pump	1
1024	77-7640	Pump – Oil	1

 ★ Included in Gasket Set—Part No. 77-8900

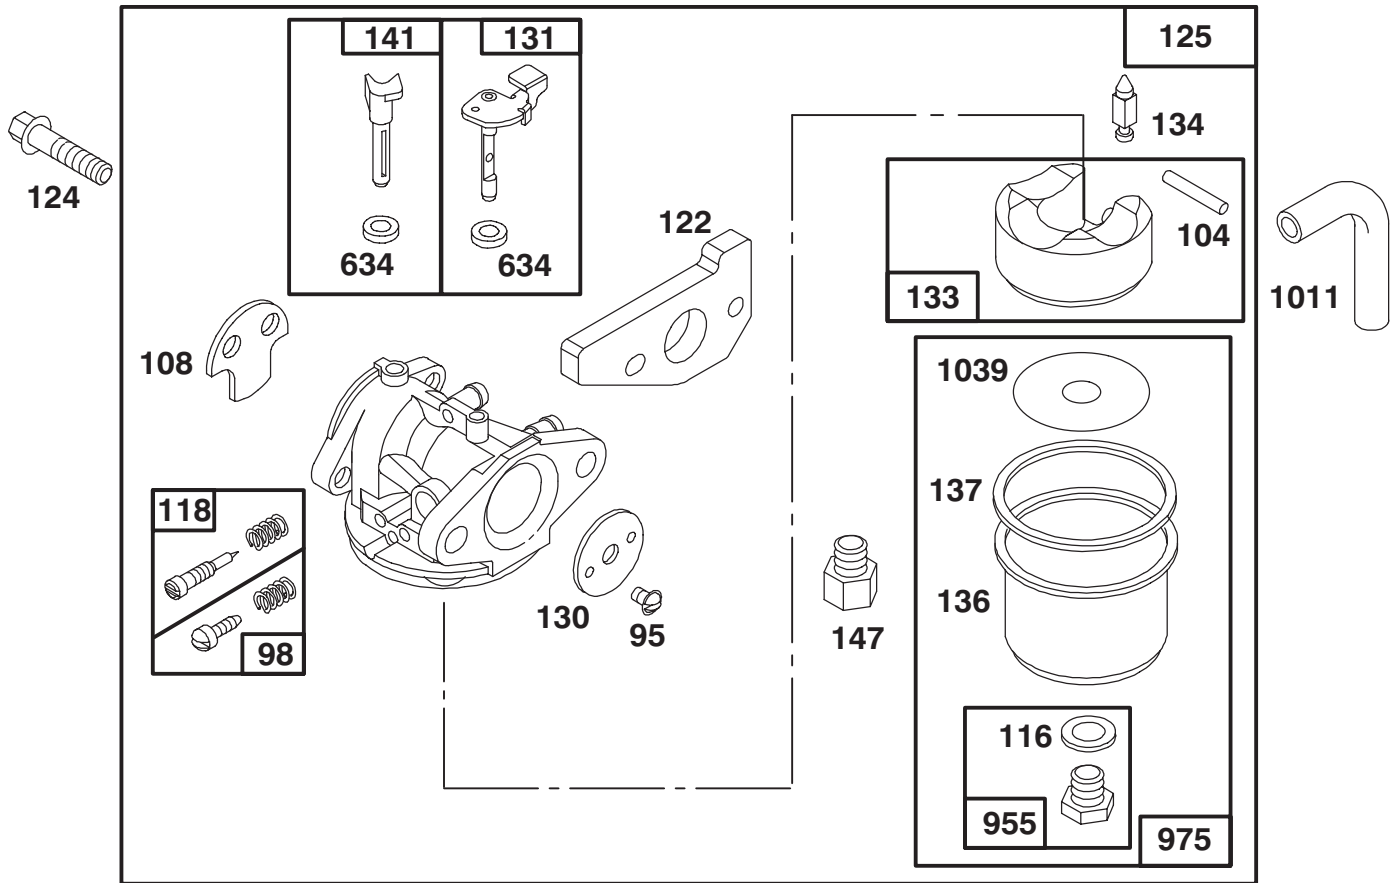

Assemblies include all parts shown in frames.


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
95	77-8090	Screw - Valve Mtg.	1
98	77-8240	Screw - Idle Adj.	1
●104	77-8180	Pin - Float Hinge	1
108	77-7080	Valve - Choke	1
●◆116	77-8210	Sealing - Gasket	1
●118	77-8230	Valve & Spring - Needle	1
●122	77-7820	Adapter Assy.	1
124	77-7970	Screw - Hex. Head (carb. mtg.)	1
125	77-8050	Carburetor Assy.	1
130	77-8080	Valve - Throttle	1
131	77-8160	Shaft - Throttle	1
133	77-8170	Float - Carburetor	1
●134	77-8110	Valve - Inlet	1

Ref. No.	Part No.	Description	No. Used
		(Includes Seat)	1
136	77-7240	Bowl - Fuel	1
●◆137	77-8200	Gasket - Float Bowl	1
141	77-8130	Shaft - Choke	1
147	77-8120	Adapter - Jet	1
		Note: For High Altitude Jet Order Part No. 77-9000	
◆634	77-8150	Washer - Seal	1
955	77-8220	Screw - Hex. Head	1
975	77-8190	Bowl Assy. - Carburetor	1
1011	77-8040	Tube - Vent	1
●1039	77-7250	Limiters - Float	1

● Included in Carb. Overhaul Kit Part No. 77-8920

 ◆ Included in Carb. Gasket Set Part No. 77-8930

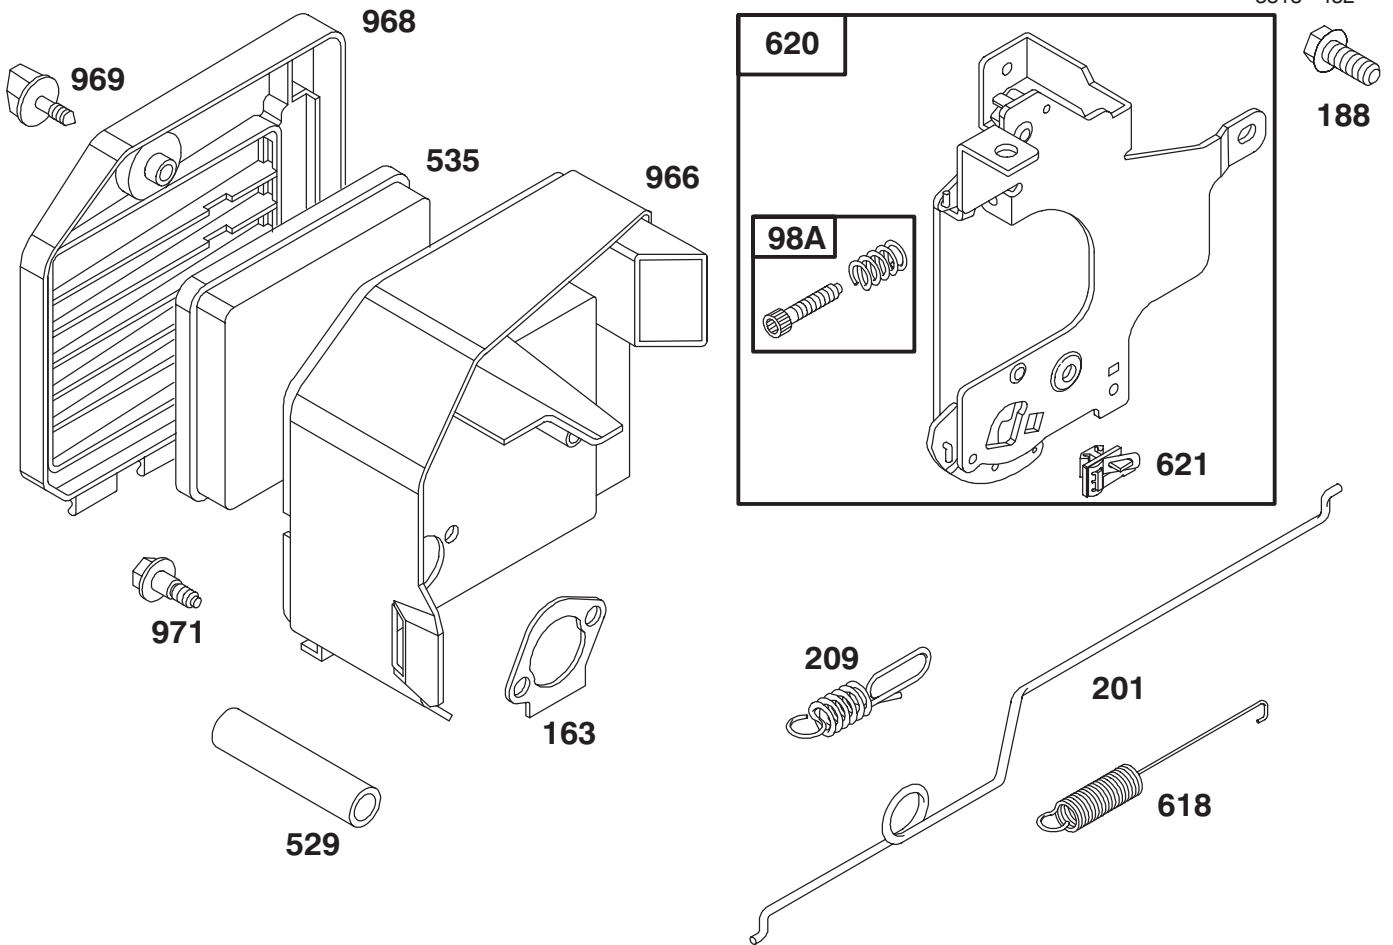


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
98A	77-8020	Screw Assy. - Speed Adj.	1
★163	77-7960	Gasket - Air Cleaner	1
188	77-9360	Screw - Hex. Head	1
201	77-7980	Link - Governor	1
209	77-7990	Spring - Governor	1
529	77-9470	Tube - Breather	1
535	77-7950	Element - Filter	1

Ref. No.	Part No.	Description	No. Used
618	77-8140	Spring - Choke	1
620	77-8000	Bracket - Carburetor	1
621	77-8010	Switch - Stop	1
966	77-7940	Base - Air Cleaner	1
968	77-7040	Cover - Air Cleaner	1
969	77-7920	Screw - Air Cleaner	1
971	77-7930	Screw - Air Cleaner	1

 ★ Included in Gasket Set-Part No. 77-8900

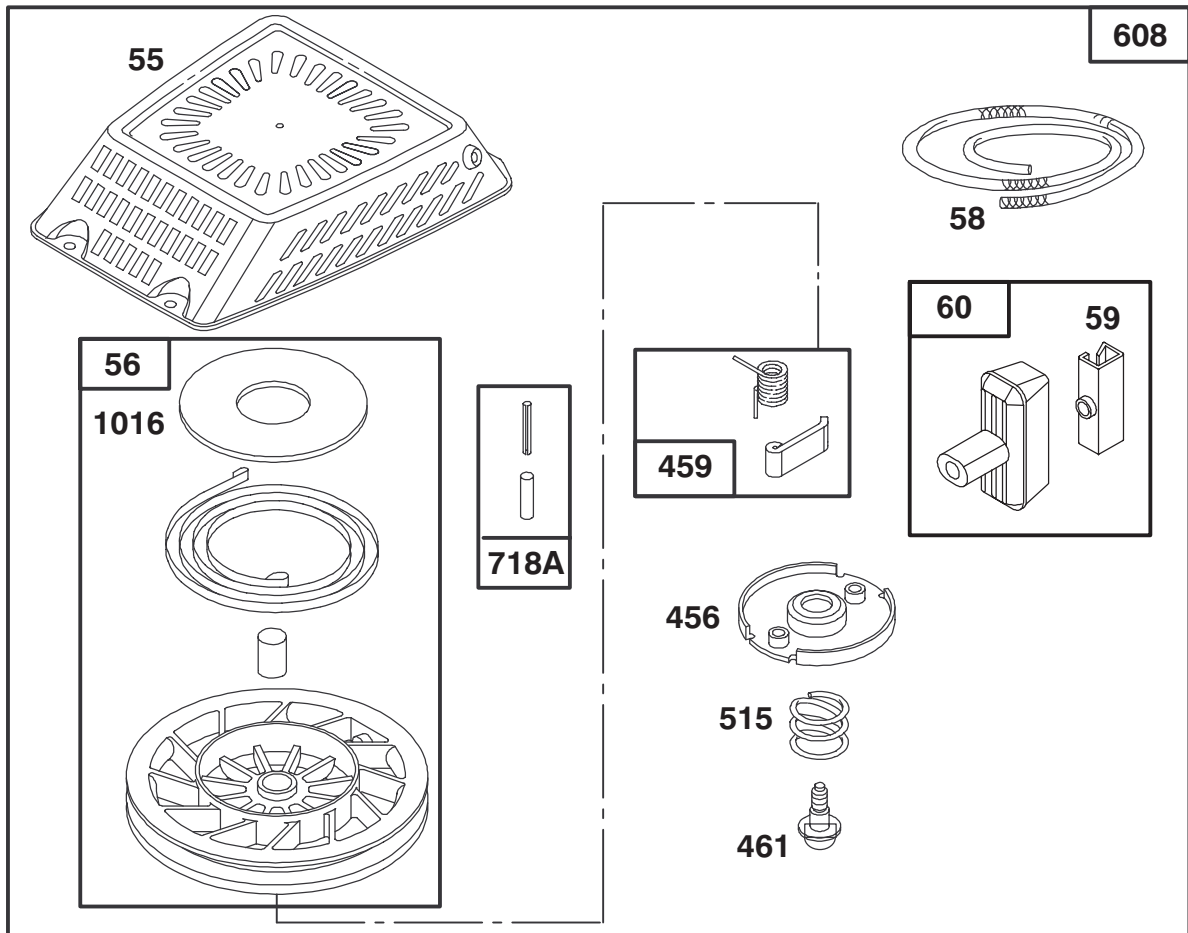


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
55	77-8890	Housing – Rewind Starter	1
56	77-9270	Pulley – Rewind Starter	1
58	77-8480	Rope – Starter (Cut To Suit)	1
59	77-9380	Insert – Rewind Handle	1
60	77-9390	Handle – Rewind Starter	1
65	77-8300	Screw – Hex. Head	1
456	77-8470	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	77-8530	Pawl – Starter	1
461	77-8490	Screw – Rewind Starter	1
515	77-8500	Spring – Torsion	1
608	77-9400	Starter Assy. – Rewind	1
718A	77-8550	Pin – Spring	1
1016	77-8570	Cover – Spring	1

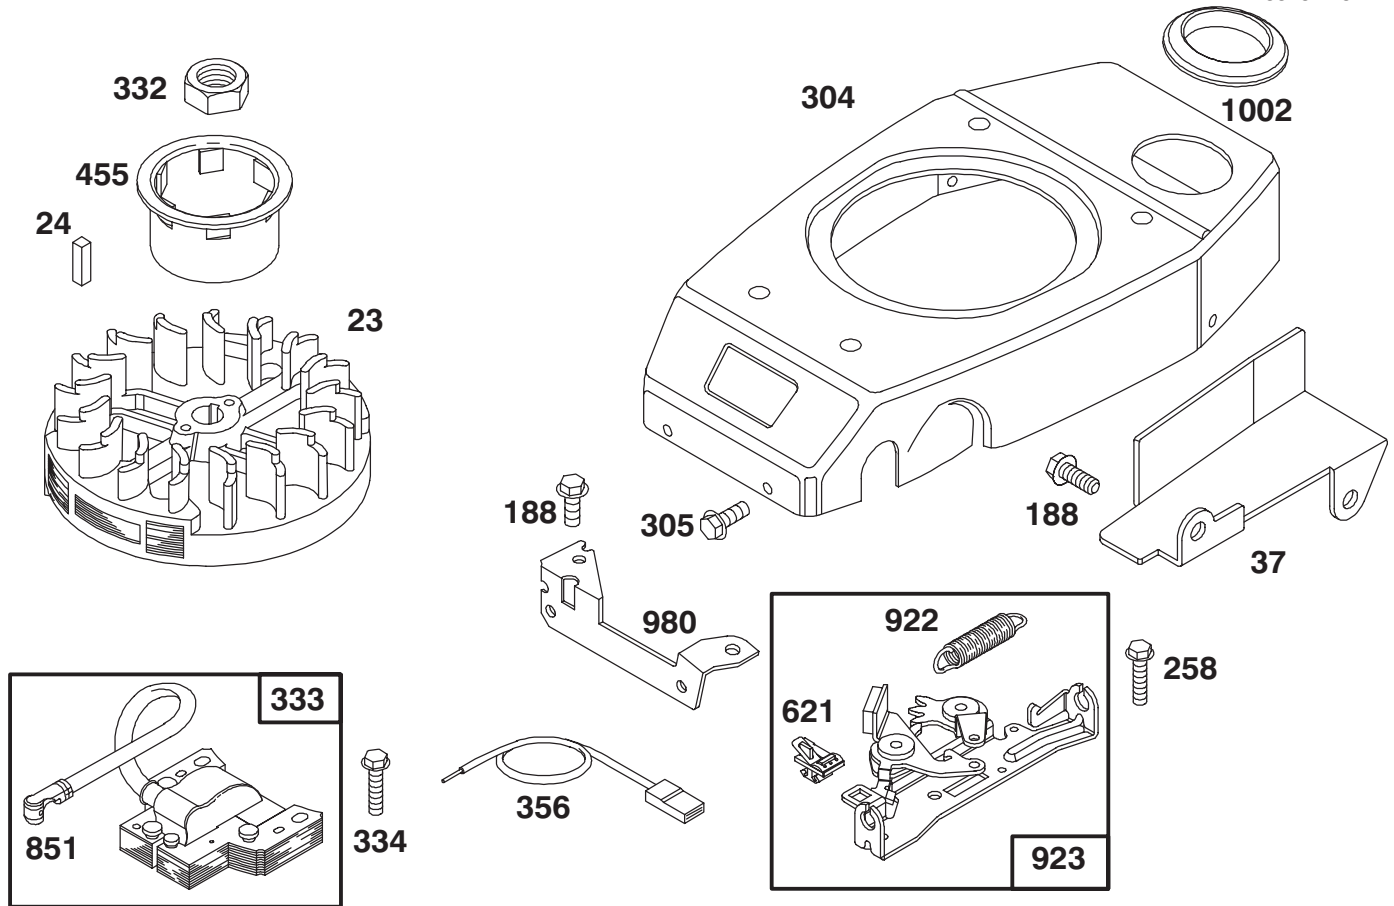 


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
23	77-8330	Flywheel – Magneto	1
24	77-8340	Key – Flywheel	1
37	77-7190	Guard – Flywheel	1
188	77-9360	Screw – Hex. Head	1
258	77-8870	Screw – Hex. Head	1
304	77-8260	Housing – Blower	1
305	77-8310	Screw – Hex. Head	1
332	77-8360	Nut – Flywheel	1
333	77-8420	Armature – Magneto	1

Ref. No.	Part No.	Description	No. Used
334	77-7420	Screw – Armature Mtg.	1
356	77-8400	Wire – Ground	1
455	77-8350	Cup – Starter	1
621	77-8010	Switch – Stop	1
851	77-9450	Terminal – Spark Plug	1
922	77-8860	Spring – Brake	1
923	77-9460	Brake Assy.	1
980	77-7140	Bracket – Blower Hsg.	1
1002	77-7180	Grommet	1

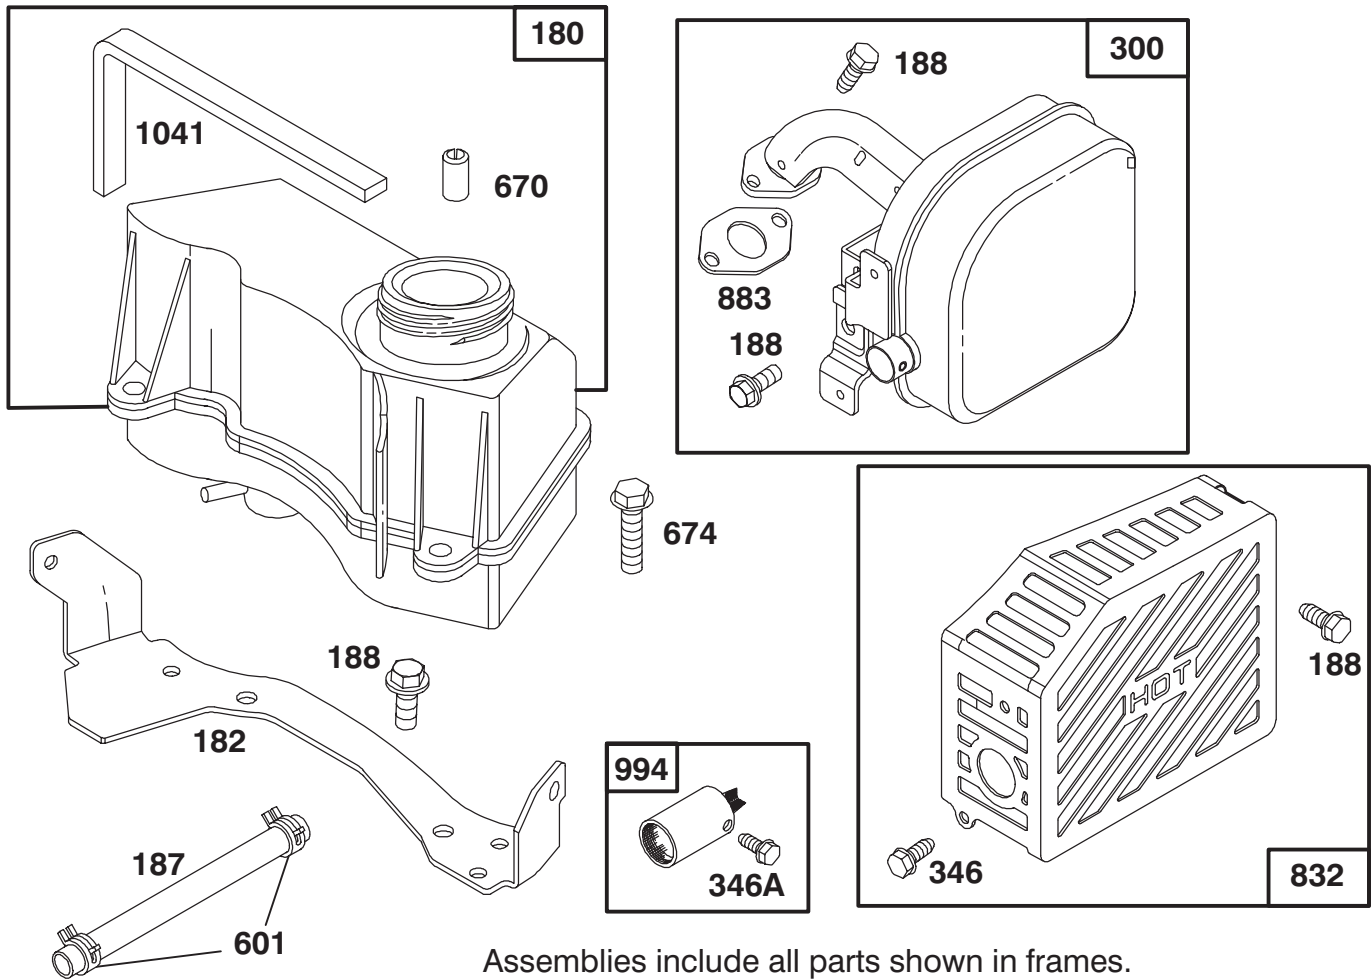 




Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
180	77-8580	Tank Assy. – Fuel	1
182	77-7170	Bracket – Fuel Tank	1
187	77-8620	Hose – Fuel (Cut To Suit)	1
188	77-9360	Screw – Hex. Head	1
300	77-8640	Muffler – Exhaust	1
346	77-9430	Screw – Hex.	1
346A	77-9050	Screw – Arrester Mtg.	1

Ref. No.	Part No.	Description	No. Used
601	77-8630	Clamp – Fuel Hose	1
670	77-9030	Spacer – Fuel Tank (Includes 2)	1
674	77-8600	Screw – Tank Mtg.	1
832	77-8660	Guard – Muffler	1
*883	77-7760	Gasket – Exhaust	1
994	77-9040	Arrester – Spark	1
*1041	77-8590	Seal – Foam	1

   * Included in Gasket Set–Part No. 77-8900

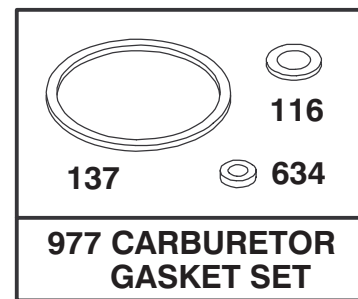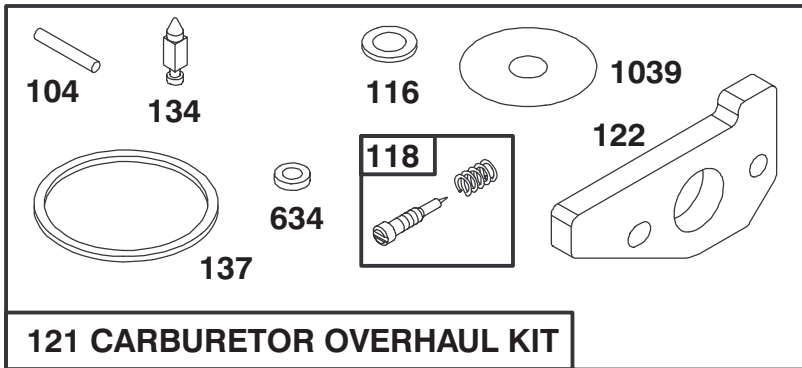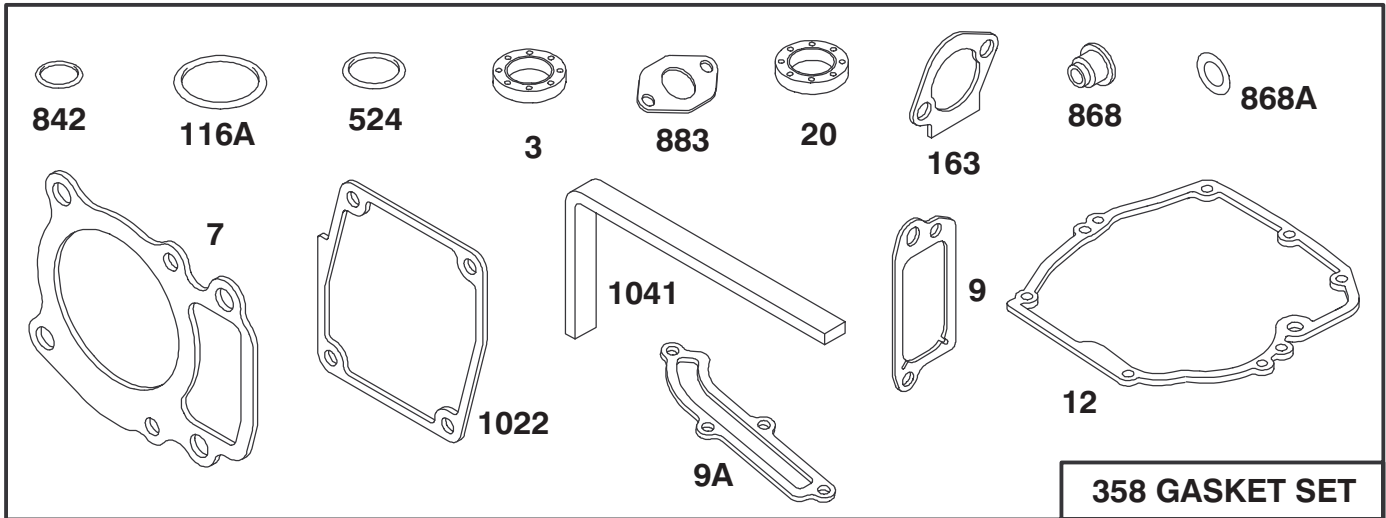

Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
★3	77-9060	Seal – Oil	1
★7	77-7740	Gasket – Cylinder Head	1
★9	77-9250	Gasket – Breather	1
★9A	77-7410	Gasket – Breather	1
★12	77-7550	Gasket – Engine Base	1
★20	77-7570	Seal – Oil	1
●104	77-8180	Pin – Float Hinge	1
●◆116	77-8210	Gasket – Sealing	1
★116A	77-7660	O-Ring	1
●118	77-8230	Valve and Spring – Needle	1
121	77-8920	Carburetor Overhaul Kit	1
●122	77-7820	Adapter Assembly	1
●134	77-8110	Valve – Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137	77-8200	Gasket – Float Bowl	1
★163	77-7960	Gasket – Air Cleaner	1
358	77-8900	Gasket Set	1
★524	77-7270	Seal – O-Ring	1
◆634	77-8150	Washer – Seal	1
★842	77-7300	Seal – O-Ring	1
★868	77-7890	Seal Assy. – Valve	1
★868A	77-7900	Seal – Valve	1
★883	77-7760	Gasket – Exhaust	1
977	77-8930	Carburetor Gasket Set	1
★1022	77-7320	Gasket – Rocker Cover	1
●1039	77-8040	Limiter – Float	1
★1041	77-8590	Seal – Foam	1

● Incl. in Carburetor Overhaul Kit—Part No. 77-8920
◆ Included in Carburetor Gasket Set—Part No. 77-8930

★ Included in Gasket Set—Part No. 77-8900

TORO PART NUMBER INDEX

3318-482

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
614578	Gearcase	4	10	1	71-9470	Door - Bag	7	3	1
614596	Gear 34 Tooth	4	1	1	71-9480	Handle - Door	7	2	1
614668	Cover - Gear Case	4	2	1	71-9600	Gear Case Ass'y Complete	4	*	1
614696	Shaft - Intermediate	4	4	1	71-9600	Gearcase Assembly	3	35	1
14-9959	Wheel, Tire & Gear Assy.	3	22	2	71-9610	Pulley - Half	4	12	2
16-5979	Housing - 48cm	1	5	1	71-9620	Shaft - Output	4	7	1
17-1569	Door - Discharge	1	9	1	71-9630	Bracket - Traction	3	36	1
17-4529	Panel - Control	5	1	1	71-9840	Spring - Door	1	10	2
17-9428	Screw	6	1	2	71-9850	Retainer - Belt	3	3	1
19-4050	Knob	5	21	2	71-9860	Decal - Deck 48cm	1	23	1
26-0672	Bolt - Blade	2	9	1	71-9863	Decal - Panel OHV	5	2	1
27-6230	Bolt - Wheel	3	23	2	71-9900	Frame - Bag	7	4	1
27-6230	Bolt - Wheel	1	24	2	74-1660	Cover - Wheel	3	21	2
27-6250	Bushing - Wheel	3	24	4	74-1670	Spacer - Wheel	3	25	2
27-6250	Bushing - Wheel	1	30	4	77-7040	Cover - Air Cleaner	11	968	1
36-4780	Washer - Thrust	4	17	3	77-7080	Valve - Choke	10	108	1
36-4791	Washer	4	5	2	77-7140	Bracket - Blower Hsg.	13	980	1
38-7820	Bearing - Ball	4	15	1	77-7170	Bracket - Fuel Tank	14	182	1
40-1940	Washer	1	26	2	77-7180	Grommet	13	1002	1
46-1113	Wheel & Tire Assembly	1	25	2	77-7190	Guard - Flywheel	13	37	1
46-6980	Support - Cable	5	15	1	77-7240	Bowl - Fuel	10	136	1
47-2890	Bushing - Sleeve	3	4	2	77-7250	Limiter - Float	10	1039	1
47-6730	Seal - Grease	3	5	2	77-7260	Dipstick - Oil	9	523	1
48-2060	Bearing - Needle	3	14	2	77-7270	Seal - O-Ring	15	524	1
49-2040	Screw - Taptite	4	1	4	77-7270	Seal - O-Ring	9	524	1
55-3760	Pinion - 15 Tooth	4	3	1	77-7280	Tube - Oil Filler	9	525	1
60-8750	Bushing	4	6	2	77-7300	Seal - O-Ring	15	842	1
60-8850	Bushing - Output	4	9	2	77-7320	Gasket - Rocker Cover	15	1022	1
60-8890	Gear - Bevel Pinion	4	16	1	77-7320	Gasket - Rocker Cover	8	1022	1
62-6660	Spacer	4	11	1	77-7330	Plug - Spark	8	337	1
62-7550	Pulley - Driver	2	12	1	77-7340	Elbow - Spark Plug	8	635	1
63-8590	Screw - Thread Forming	3	12	2	77-7360	Screw - Hex. Head	8	10	1
65-2720	Ring - Retaining	3	17	4	77-7370	Lever Assy. - Governor	9	227	1
65-4710	Washer - Friction	3	15	2	77-7380	Bolt - Governor Lever	9	562	1
65-4720	Spring - Compression	3	20	2	77-7390	Nut - Hex.	9	592	1
65-4740	Washer - Keyed Thrust	3	16	4	77-7400	Cover - Breather	8	572	1
65-4750	Gear - Pinion	3	19	2	77-7410	Gasket - Breather	8	9A	1
65-4760	Washer - Clutch	3	26	2	77-7410	Gasket - Breather	15	9A	1
65-5210	Screw - Thread Forming	1	15	2	77-7420	Screw - Armature Mtg.	13	334	1
66-0330	Spacer - Support	6	2	2	77-7420	Screw - Breather Cover	8	307	1
66-1700	Decal - Noise Rating	1	33	1	77-7460	Crank - Governor	9	616	1
66-6040	Key - Rocking R.H.	3	*	1	77-7470	Washer	9	230	1
66-6050	Key - Rocking L.H.	3	18	1	77-7480	Pushnut	9	615	1
71-7630	Cap - Throttle Lower	5	8	1	77-7490	Gear - Cam	9	46	1
71-7740	Spring - Counterbalance	3	31	1	77-7500	Gear - Governor	9	219	1
71-7770	Plate - Rear Securing	3	27	2	77-7530	Gear - Timing	9	741	1
71-7820	Pivot - Front	1	28	1	77-7550	Gasket - Engine Base	15	12	1
71-7840	Rod - Trigger	3	8	1	77-7550	Gasket - Engine Base	9	12	1
71-7860	Grip - Upper	1	14	1	77-7560	Base - Engine	9	18	1
71-7870	Grip - Lower	1	19	1	77-7570	Seal - Oil	9	20	1
71-7890	Guide - Belt Rear	1	6	1	77-7570	Seal - Oil	15	20	1
71-7900	Cap - Bolt Hinge L.H.	1	11	1	77-7590	Cylinder Assy.	8	1	1
71-7910	Cap - Bolt Hinge R.H.	1	16	1	77-7600	Pin - Cylinder	8	718	1
71-7920	Cover - Belt	1	22	1	77-7610	Tappet - Valve	8	45	1
71-7930	Trigger - HOC	1	17	1	77-7620	Rod - Push	8	1026	1
71-7940	Retainer - Blade	2	6	1	77-7630	Screw - Cylinder Head	8	13	1
71-7960	Guide - Engine Belt	2	11	1	77-7640	Pump - Oil	9	1024	1
71-7970	Rod - Link	3	30	1	77-7650	Cover - Oil Pump	9	979	1
71-7980	Indicator - H.O.C.	3	33	1	77-7660	O-Ring	15	116A	1
71-7990	Ramp - Discharge	1	4	1	77-7670	Rod - Connecting	9	29	1
71-8040	Plate - Throttle	5	24	1	77-7690	Piston Assy. (Std.)	9	25	1
71-8060	Spring - Trigger Return	3	10	2	77-7700	Ring Set (Std.)	9	26	1
71-8080	Saddle - H.O.C.	3	11	1	77-7710	Lock - Piston Pin	9	27	1
71-8090	Mount - Handle L.H.	5	*	1	77-7730	Head - Cylinder	8	5	1
71-8100	Mount - Handle R.H.	5	20	1	77-7740	Gasket - Cylinder Head	15	7	1
71-8130	Bracket - Control	5	18	1	77-7740	Gasket - Cylinder Head	8	7	1
71-8310	Spring - Compression	5	25	1	77-7760	Gasket - Exhaust	14	883	1
71-8450	Cover - Spring	3	32	1	77-7760	Gasket - Exhaust	15	883	1
71-8580	Spacer - Door	1	8	2	77-7760	Gasket - Exhaust	8	883	1
71-8830	Retainer - Shaft	1	2	2	77-7770	Guide - Push Rod	8	1034	1
71-9450	V- Belt	3	34	1	77-7780	Stud - Rocker Arm	8	166	1
71-9460	Bag - Grass	7	5	1					

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3318-482

Part No.	Description	Pg. Ref. No. No.	Qty.	Part No.	Description	Pg. Ref. No. No.	Qty.
77-7790	Arm - Rocker	8 1029	1	77-8630	Clamp - Fuel Hose	14 601	1
77-7800	Cap - Valve	8 238	1	77-8640	Muffler - Exhaust	14 300	1
77-7810	Spring - Valve	8 35	1	77-8660	Guard - Muffler	14 832	1
77-7820	Adapter Assembly	15 122	1	77-8860	Spring - Brake	13 922	1
77-7820	Adapter Assy.	8 122	1	77-8870	Screw - Hex. Head	13 258	1
77-7850	Bushing - Guide	8 871	1	77-8890	Housing - Rewind	12 55	1
77-7860	Valve - Exhaust	8 33	1	77-8900	Gasket Set	15 358	1
77-7870	Retainer - Spring	8 40	1	77-8920	Carburetor Overhaul Kit	15 121	1
77-7880	Valve - Intake	8 34	1	77-8930	Carburetor Gasket Set	15 977	1
77-7890	Seal Assy. - Valve	15 868	1	77-9020	Short Block	8	1
77-7890	Seal Assy. - Valve	8 868	1	77-9030	Spacer - Fuel Tank	14 670	1
77-7900	Gasket - Valve	8 868A	1	77-9040	Arrester - Spark	14 994	1
77-7900	Seal - Valve	15 868A	1	77-9050	Screw - Arrester Mtg.	14 346A	1
77-7910	Ball & Screw - Rocker	8 192	1	77-9060	Seal - Oil	8 3	1
77-7920	Screw - Air Cleaner	11 969	1	77-9060	Seal - Oil	15 3	1
77-7930	Screw - Air Cleaner	11 971	1	77-9070	Screw - Engine Base	9 22	1
77-7940	Base - Air Cleaner	11 966	1	77-9200	Screw - Hex. Head	8 10A	1
77-7950	Element - Filter	11 535	1	77-9240	Plug - Pipe	9 15	1
77-7960	Gasket - Air Cleaner	11 163	1	77-9250	Gasket - Breather	8 9	1
77-7960	Gasket - Air Cleaner	15 163	1	77-9250	Gasket - Breather	15 9	1
77-7970	Screw - Hex. Head	10 124	1	77-9270	Pulley - Rewind Starter	12 56	1
77-7980	Link - Governor	11 201	1	77-9300	Breather Assy.	8 8	1
77-7990	Spring - Governor	11 209	1	77-9310	Screw - Set	8 192A	1
77-8000	Bracket - Carburetor	11 620	1	77-9320	Cover - Valve	8 1023	1
77-8010	Switch - Stop	11 621	1	77-9330	Crankshaft	9 16	1
77-8010	Switch - Stop	13 621	1	77-9340	Pin Assy. - Piston	9 28	1
77-8020	Screw Assy. - Speed Adj.	11 98A	1	77-9350	Screw - Connecting Rod	9 32	1
77-8040	Limitter - Float	15 1039	1	77-9360	Screw - Hex. Head	11 188	1
77-8040	Tube - Vent	10 1011	1	77-9360	Screw - Hex. Head	13 188	1
77-8050	Carburetor Assy.	10 125	1	77-9360	Screw - Hex. Head	14 188	1
77-8080	Valve - Throttle	10 130	1	77-9360	Screw - Hex. Head	9 188	1
77-8090	Screw - Valve Mtg.	10 95	1	77-9380	Insert - Rewind Handle	12 59	1
77-8110	Valve - Inlet	10 134	1	77-9390	Handle - Rewind Starter	12 60	1
77-8110	Valve - Inlet	15 134	1	77-9400	Starter Assy. - Rewind	12 608	1
77-8120	Adapter - Jet	10 147	1	77-9410	Tube - Breather	8 11	1
77-8130	Shaft - Choke	10 141	1	77-9430	Screw - Hex.	14 346	1
77-8150	Washer - Seal	10 634	1	77-9450	Terminal - Spark Plug	13 851	1
77-8150	Washer - Seal	15 634	1	77-9460	Brake Assy.	13 923	1
77-8160	Shaft - Throttle	10 131	1	77-9470	Tube - Breather	11 529	1
77-8170	Float - Carburetor	10 133	1	77-9550	Cover - Brake	2 18	1
77-8180	Pin - Float Hinge	10 104	1	86-7990	Screw - Clamp	2 15	1
77-8180	Pin - Float Hinge	15 104	1	92-2270	Screw - Handle	5 16	1
77-8190	Bowl Assy. - Carburetor	10 975	1	92-2289	Plate - Toro Logo	2 2	1
77-8200	Gasket - Float	15 137	1	92-9677	Rear Pivot Assembly L.H.	3 6	1
77-8210	Sealing - Gasket	10 116	1	92-9680	Rear Pivot Assembly R.H.	3 1	1
77-8220	Screw - Hex. Head	10 955	1	92-9812	Stiffener - Blade	2 16	1
77-8230	Valve & Spring -	10 118	1	92-9813	Blade - 48cm	2 7	1
77-8230	Valve and Spring -	15 118	1	93-0339	Cover - Throttle Lower	5 7	1
77-8240	Screw - Idle Adj.	10 98	1	93-1115	Control - Throttle	5 3	1
77-8260	Housing - Blower	13 304	1	93-1116	Cable - Brake	5 12	1
77-8300	Screw - Hex. Head	12 65	1	93-3772	Guide - Rope	5 19	1
77-8310	Screw - Hex. Head	9 305	1	93-4105	Decal - Danger	1 32	1
77-8310	Screw - Hex. Head	13 305	1	93-4355	Decal - Recoil	2 3	1
77-8330	Flywheel - Magneto	13 23	1	93-7198	Cap - Gas	2 13	1
77-8340	Key - Flywheel	13 24	1	94-1604	Engine - Complete	2 1	1
77-8350	Cup - Starter	13 455	1	94-4364	Bail - Brake	6 5	1
77-8360	Nut - Flywheel	13 332	1	94-4365	Bail - Traction	6 4	1
77-8400	Wire - Ground	13 356	1	94-4367	Handle Assembly	5 22	1
77-8420	Armature - Magneto	13 333	1	94-6027	Decal - Instruction	5 4	1
77-8470	Retainer - Rewind	12 456	1	94-6754	Cable - Traction	5 10	1
77-8480	Rope - Starter	12 58	1	2210-249	Clamp - Casing	2 14	1
77-8490	Screw - Rewind Starter	12 461	1	2210-316	Stop - Rope	2 17	1
77-8500	Spring - Torsion	12 515	1	302-26	Fitting - Grease	3 2	2
77-8530	Pawl - Starter	12 459	1	321-52	Screw - Hex Hd. Cap	5 23	1
77-8550	Pin - Spring	12 718A	1	322-29	Screw - Hex Hd.	1 12	2
77-8570	Cover - Spring	12 1016	1	3253-22	Washer - Lock	2 8	1
77-8580	Tank Assy. - Fuel	14 180	1	3256-1	Washer - Flat	5 13	1
77-8590	Seal - Foam	14 1041	1	3256-24	Washer	4 13	1
77-8590	Seal - Foam	15 1041	1	3284-5	Pin - Groove	1 18	1
77-8600	Screw - Tank Mtg.	14 674	1	3290-378	Tie - Cable	5 11	2
77-8620	Hose - Fuel	14 187	1	3296-5	Nut	4 14	1
				3296-5	Nut - Lock	3 7	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref.		Part No.	Description	Pg. Ref.			
		No.	Qty.			No.	Qty.		
3296-5	Nut - Lock, Nylon	1	27	2	32144-70	Screw - Hex Flange Hd.	1	20	1
3296-73	Nut - Lock	5	14	2	32144-97	Screw - Phillips Pan Hd.	5	6	5
3296-74	Nut - Flange, Nylon	6	3	2	32144-97	Screw - Thread Forming	1	13	2
32112-11	Nut - Push	1	3	1	32144-98	Screw - Phillips Pan Hd.	5	17	4
32112-13	Nut - Push	3	13	1	32144-99	Screw - Phillips Pan Hd.	5	9	2
32121-114	Pin - Spirol	4	8	2	32144-102	Screw - Thread Forming	2	4	3
32144-4	Screw - Hex Hd. Tap	1	1	10	32144-111	Screw - Hex Washer	7	1	5
32144-4	Screw - Thread Forming	2	5	2	32151-93	Ring - Grip	3	29	1
32144-4	Screw - Thread Forming	3	28	6					
32144-31	Screw - Thread Forming	3	9	1					

