

LAWN-BOY®

21" GOLD SERIES WALK—BEHIND MOWER

MODEL NO. 10546—6900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN-BOY owners as quickly as possible, minor changes are incorporated into LAWN-BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN-BOY Distributor or his Authorized LAWN-BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.


NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Mulch Plate & Wheel Assembly	3	Air Filter Assembly	12
Housing Assembly	4	Electric Motor Assembly	13
Gear Case & Wheel Assembly	5	Gear Case Assembly	14
Engine, Fuel Tank & Blade Assembly	6	Lower Handle Assembly	15
Starter Assembly	7	Upper Handle Assembly	16
Flywheel & Wire Harness Assembly	8	Numeric Parts Index	17-19
Crankshaft & Cylinder Assembly	9-10	Maintenance Record	20
Carburetor Assembly	11		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800	Leaf Shredder Kit	Model No. 89860

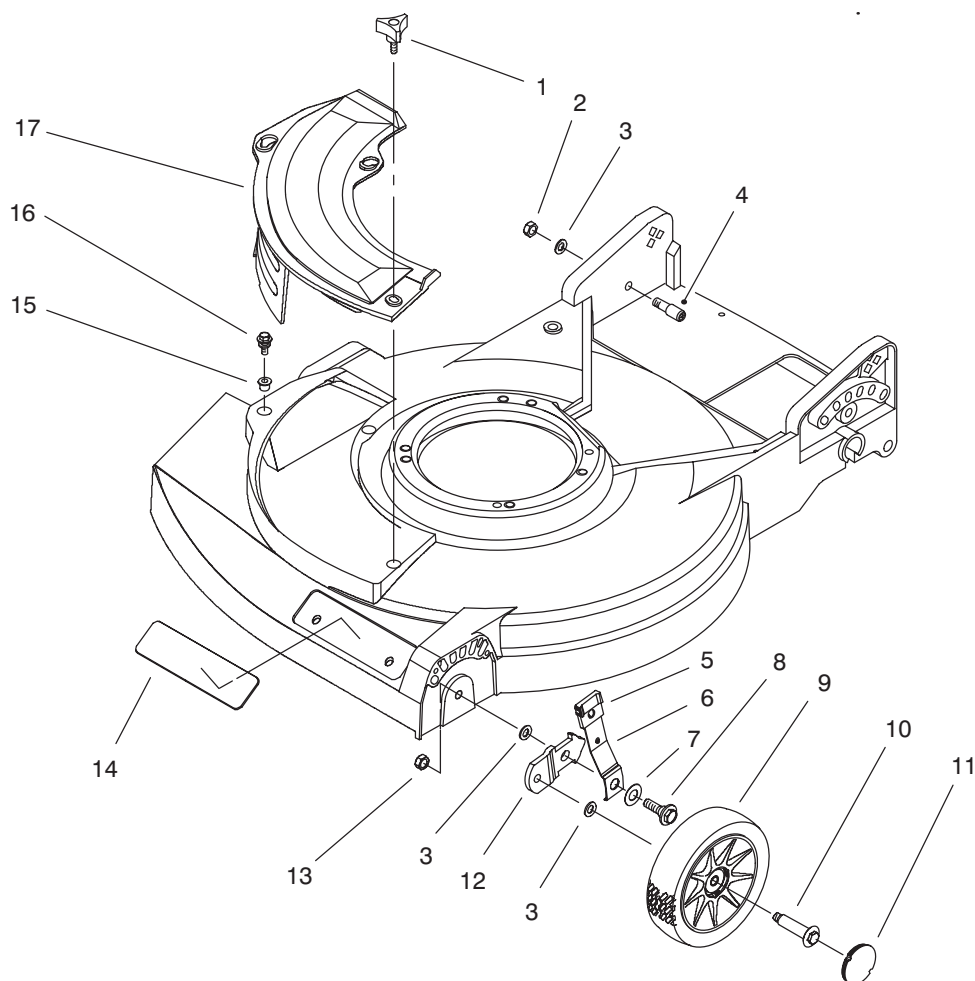


C—1917

MULCH PLATE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	614682	Knob — Cover Plate	1
2	610358	Nut — Lock	2
3	40—1940	Washer	6
4	92—9673	Bolt — Shoulder	2
5	92—1008	Knob — Height Adjust	4
6	92—1006	Spring Arm Ass'y — Front	2
7	3290—413	Washer — Belleville	2
8	92—4856	Bolt — Shoulder	2
9	684776	Wheel & Tire Assembly 6"	2

Ref. No.	Part No.	Description	No. Used
10	92—1099	Bolt — Shoulder	2
11	92—1604	Cap — Hub	4
12	614637	Bracket — Wheel Height Adj.	2
13	3296—39	Nut — Lock	2
14	93—0290	Decal — Deck	1
15	94—1610	Grommet	3
16	614677	Screw — Sems Thr'd Form.	2
17	92—8630	Plate — Mulch	1

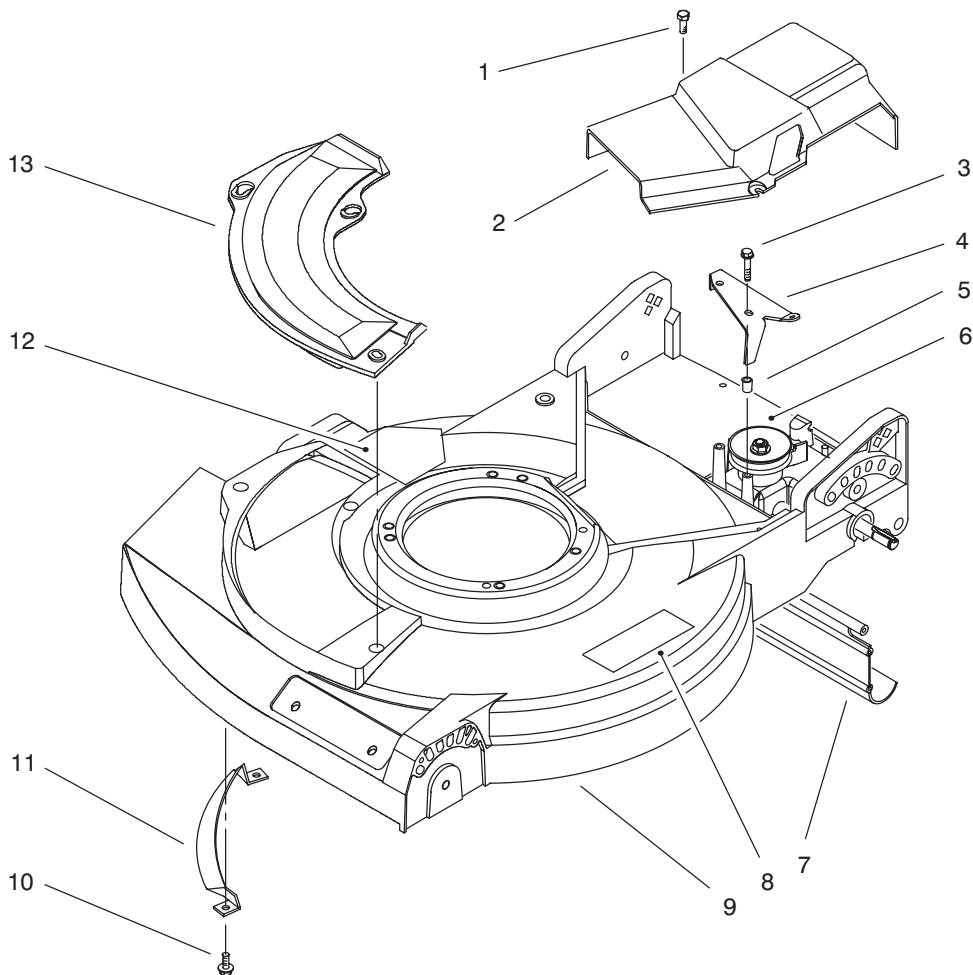


C-2183A

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	12-5450	Screw – Hex Washer Hd. Thread Forming	2
2	92-8853	Cover – Transmission	1
3	92-7748	Screw	2
4	92-7699	Bracket – Actuator	1
5	256-251	Bushing – Spacer	2
6	92-7869	Gear Case Assembly	1
7	92-7736	Shield – Trailing	1

Ref. No.	Part No.	Description	No. Used
8	93-7250	Decal – Warning	1
9	17-1219	Housing – 21” (Incl. Ref. #8, 12, & 14)	1
10	46-6811	Screw – Hex Washer Hd.	2
11	608175	Bar – Toe	1
12	39-5770	Decal – Danger	1
13	607560	Plate – Cover	1

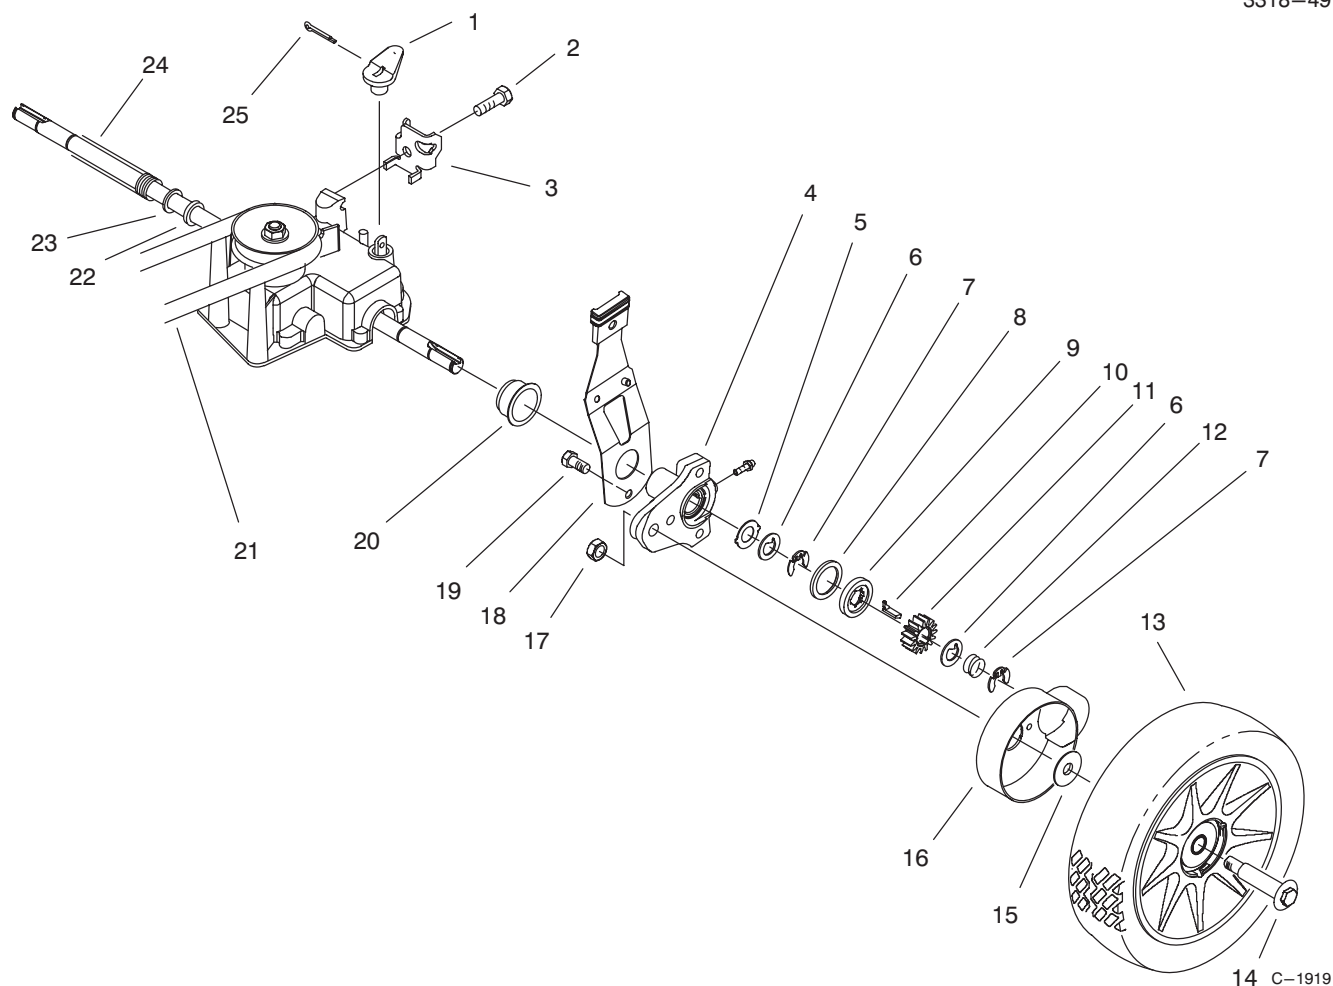 


14 C-1919

GEAR CASE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	60-8821	Lever – Shift	1
2	32144-70	Screw – Tapping	1
3	82-8780	Retainer – Cable	1
4	92-7746	Arm – Rear Height Adjust.	2
5	65-4730	Washer – Thrust	2
6	65-4740	Washer – Thrust Keyed	4
7	65-2720	Ring – Retaining	4
8	65-4710	Ring – Friction	2
9	65-4760	Washer	2
10	66-6050	Key – Rocking L.H.	1
*	66-6040	Key – Rocking R.H.	1
11	65-4750	Gear – Pinion	2
12	65-4720	Spring – Compression	2
13	92-1042	Wheel & Tire Assembly	2

Ref. No.	Part No.	Description	No. Used
14	92-1057	Bolt – Shoulder	2
15	614426	Washer – Stepped	2
16	94-1609	Cover – Wheel	2
17	610358	Nut – Lock	2
18	92-6540	Spring Arm Assembly – L.H.	1
*	92-6539	Spring Arm Assembly – R.H.	1
19	32144-85	Screw – Hex Hd Tapping	2
20	92-6535	Cap – End	2
21	92-1043	V-Belt	1
22	605255	Washer – Flat	1
23	303259	Washer	1
24	24-7920	Cover – Drive Shaft	1
25	3272-10	Pin – Cotter	1

 *Not Illustrated

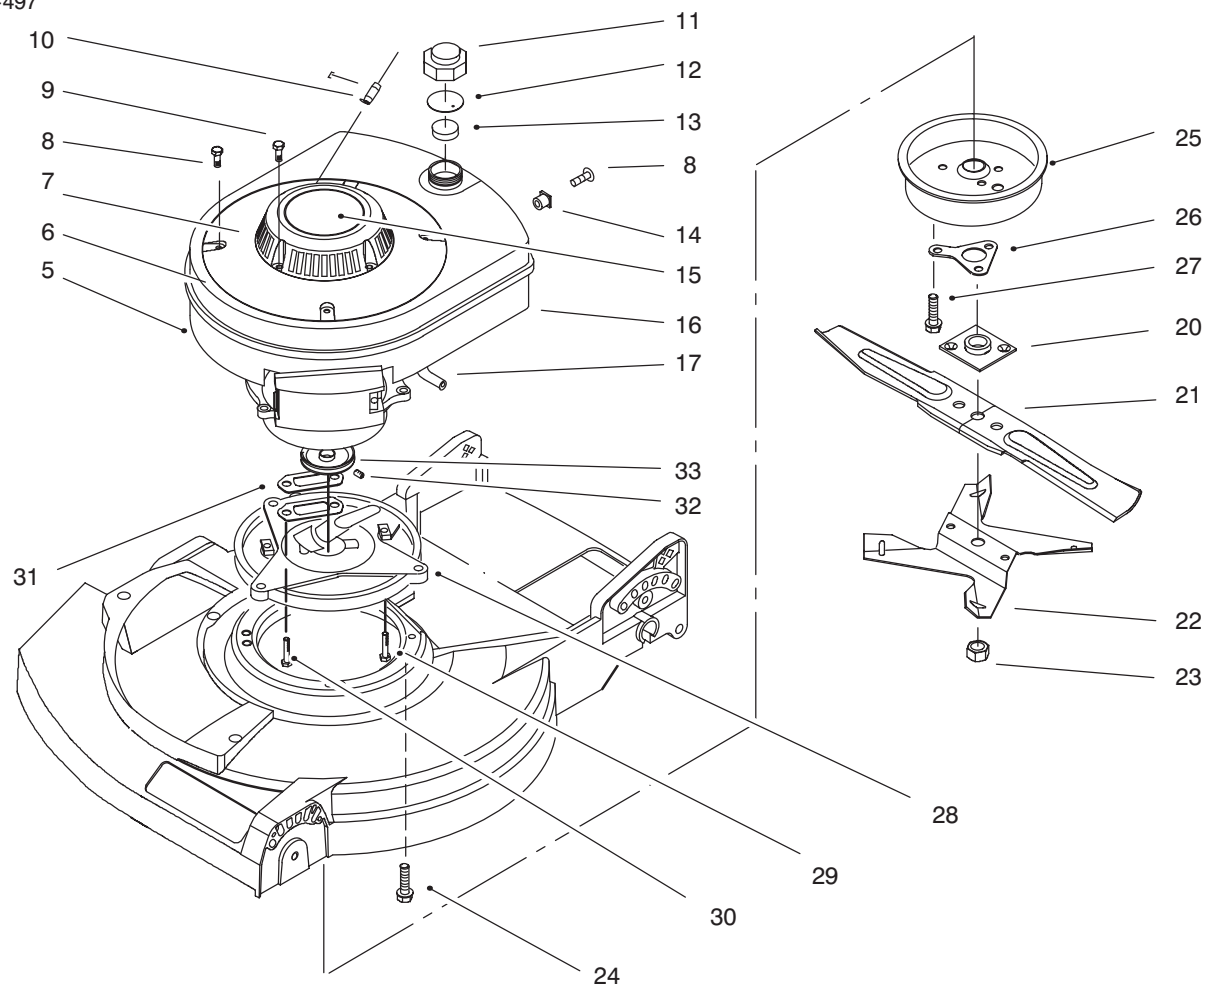


C-2176A

ENGINE, FUEL TANK & BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
5	16-5539	Shroud & Tank Assembly	1
6	684301	Base - Starter	1
7	684622	Starter Assembly	1
8	32144-53	Screw - Self Tapping	5
9	612428	Screw	4
10	47-2480	Stop - Rope	1
11	611327	Cap - Fuel	1
12	607213	Gasket - Fuel Cap	1
13	609150	Baffle Fuel Cap	1
14	605120	Grommet	1
15	93-0293	Decal - Recoil	1
16		Engine Assembly	1
17	612783	Line - Fuel	1
20	677525	Plate & Collar Assembly	1

Ref. No.	Part No.	Description	No. Used
21	612543	Blade 21"	1
22	92-1630	Fan - Mulching	1
23	603164	Nut - Blade	1
24	92-1648	Screw - Engine	3
25	682876	Muffler Cover Assembly	1
26	609786	Support - Crankshaft	1
27	609471	Screw	3
28	92-6388	Plate - Muffler	1
29	613500	Screw	1
30	607601	Screw	3
31	93-1233	Gasket - Muffler	1
32	610345	Screw - Set	1
33	609976	Pulley	1

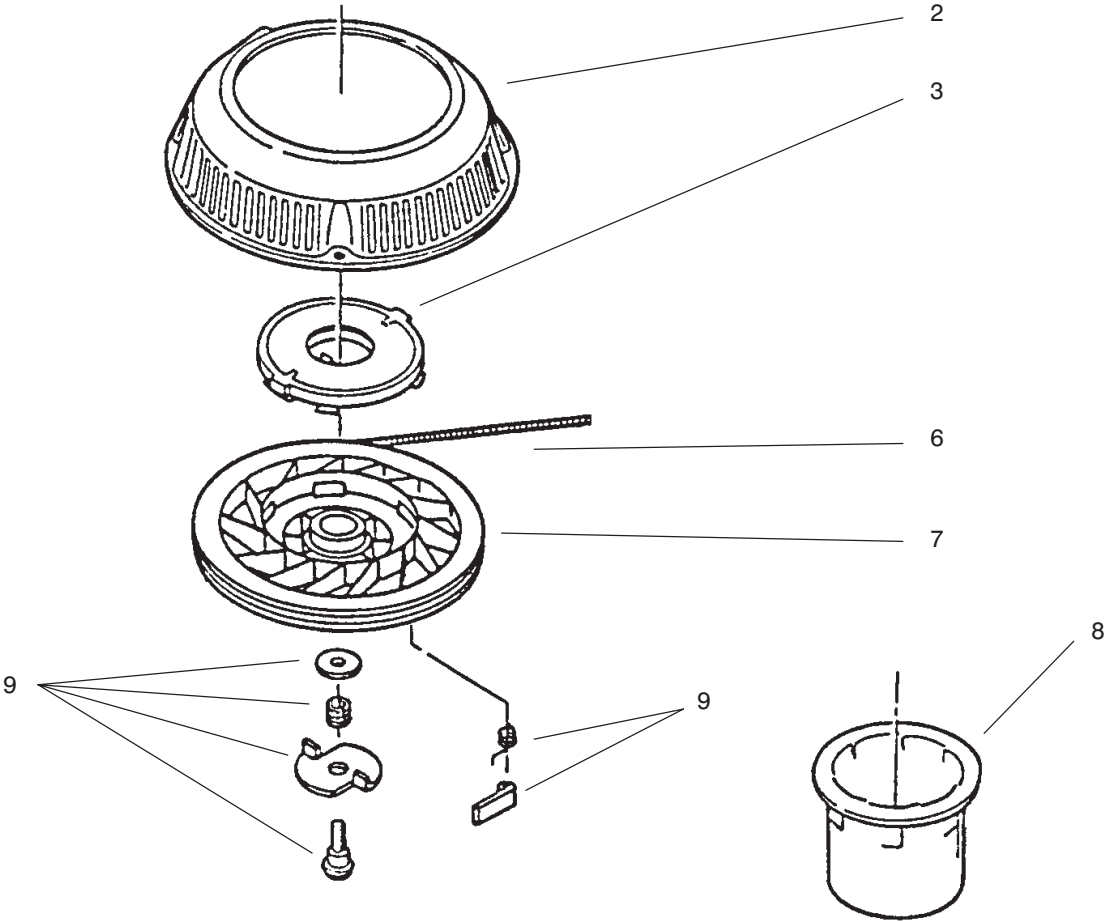 


C-2187

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
2	684567	Starter Housing & Shaft	1	8	612949	Hub – Starter	1
3	92-4935	Spring & Keeper	1	9	683899	Kit – Dog	1
6	612432	Rope	1	*	684622	Starter Assembly	1
7	612950	Pulley	1			(Incl. Ref. #2, 3, 6, 7, & 9)	


*Not Illustrated

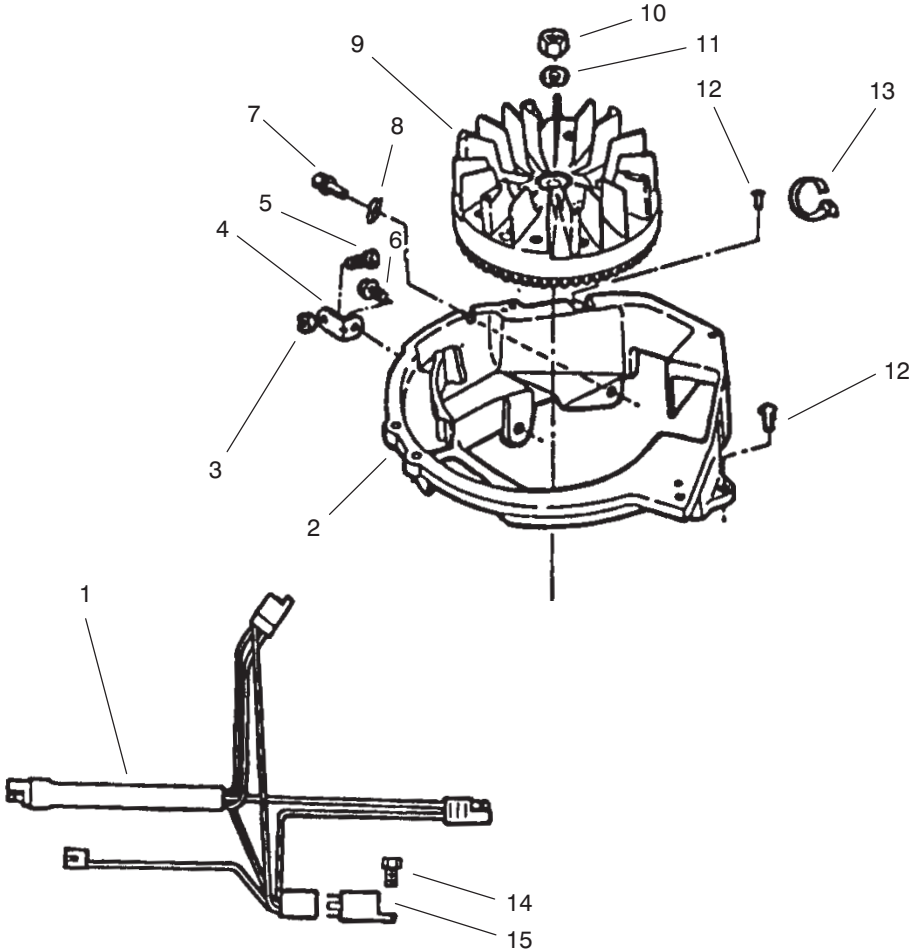

C-1925

FLYWHEEL & WIRE HARNESS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4300	Harness - Wire	1	9	683580	Flywheel	1
2	611215	Base - Shroud	1	10	130743	Nut - Flywheel	1
3	608311	Nut	1	11	316959	Washer - Lock	1
4	611512	Brace - Alternator	1	12	609808	Screw	2
5	603014	Bolt	1	13	317893	Strap - Tie	1
6	614343	Screw	1	14	606537	Screw	1
7	609947	Screw	3	15	682776	Relay	1
8	611191	Clip - J	1				

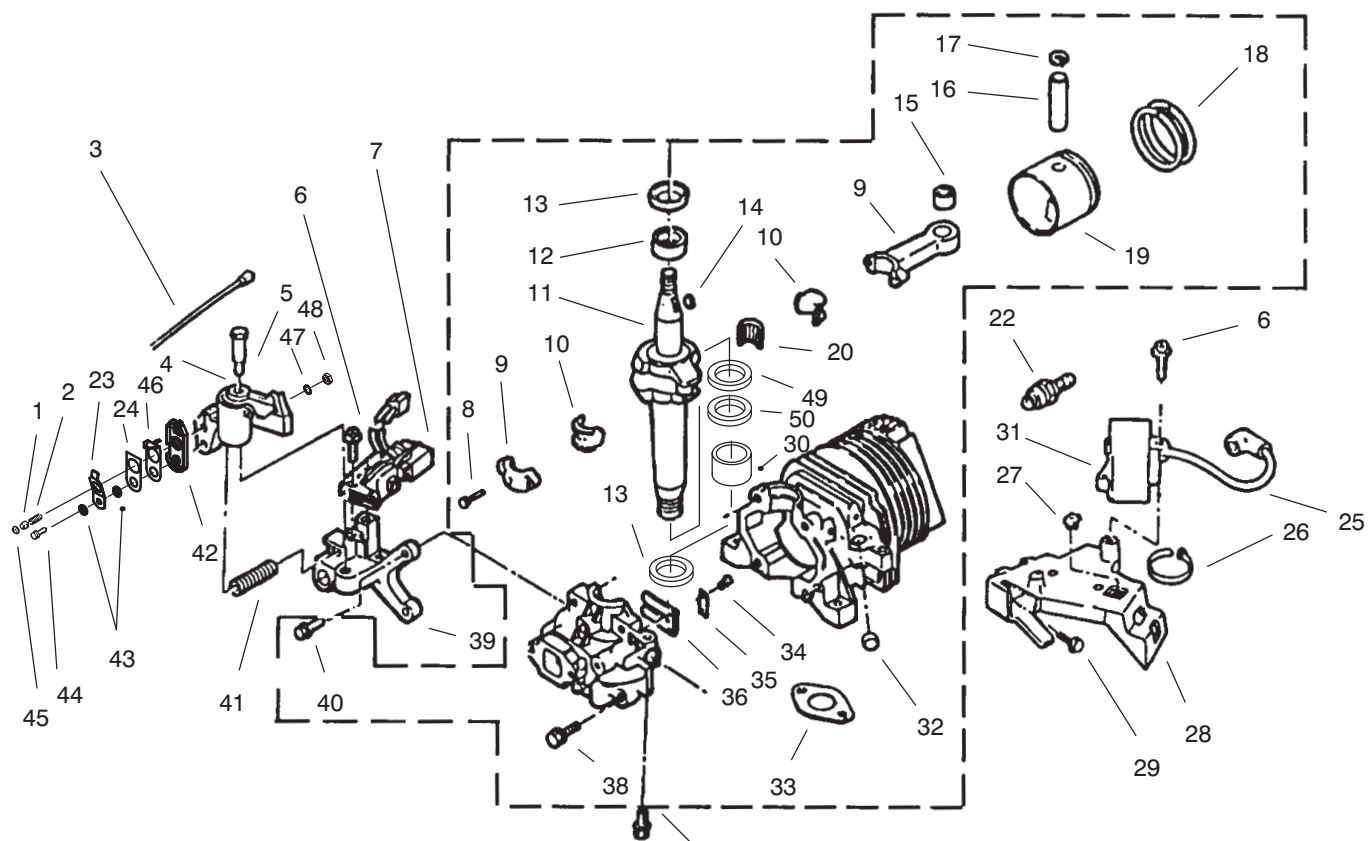 


37

C-2172A

CRANKSHAFT & CYLINDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	611509	Actuator – Brake Lever	1	23	93-1239	Spring – Contact	1
2	611214	Spring – Cable Return	1	24	612842	Shield	1
3	683821	Lead	1	25	681678	Lead – High Tension	1
4	682683	Brake Assembly	1	26	614249	Strap – Tie	1
5	613529	Bolt – Shoulder	1	27	605120	Grommet	1
6	607526	Screw – C.D. Mounting	4	28	613073	Bracket – C.D. Mounting	1
7	683964	Alternator Assembly	1	29	614343	Screw	2
8	611393	Screw – Cap	2	30	681831	Bearing	1
9	92-4921	Connecting Rod Assembly (Incl. Ref. #8, 10, & 20)	1	31	683215	Module – C.D. Ignition & Lead	1
10	677982	Liner – Split (1 pair)	1	32	609123	Plug	4
11	94-5713	Crankshaft	1	33	93-1233	Gasket – Exhaust	1
12	681830	Bearing – Upper Main	1	34	612872	Screw – Reed To Cover	2
13	611396	Seal – Upper Oil	2	35	602587	Plate – Reed Hold Down	1
14	607199	Key – Flywheel	1	36	602588	Reed	1
15	92-4927	Bearing Assembly	1	37	611073	Screw – Set	1
16	606608	Pin – Wrist	1	38	613110	Screw – Cover to Crankcase	1
17	303712	Ring – Retaining	2	39	611337	Bracket	1
18	681737	Ring Set	1	40	613233	Screw – Brake Mtg. Brkt.	2
19	92-4925	Piston & Ring Set (Incl. Ref. #16-18)	1	41	611211	Spring – Brake	1
20	609754	Strip – Roller	1	42	93-4301	Case Assembly	1
22	614009	Plug – Spark	1				

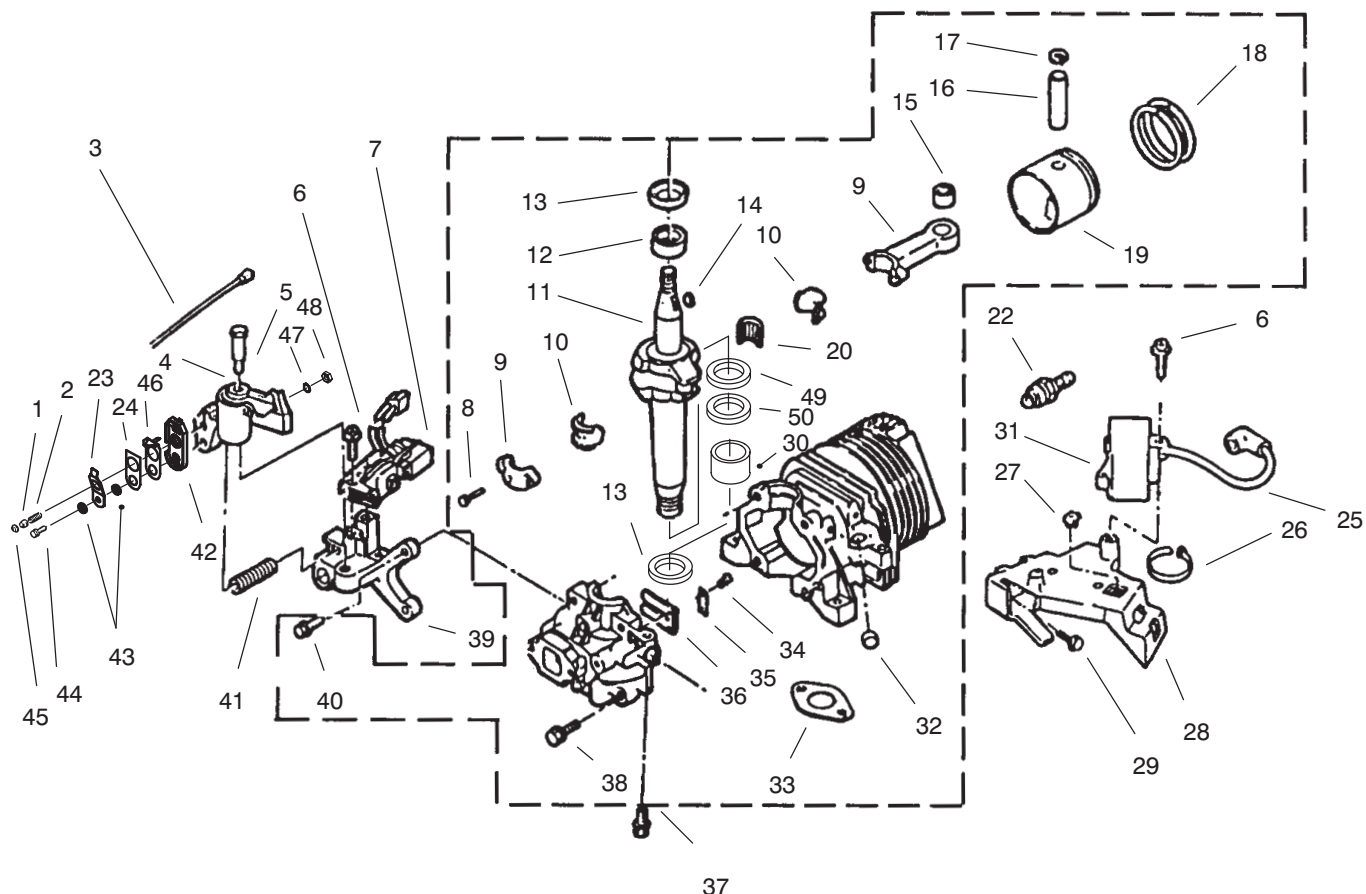 


C-2172A

CRANKSHAFT & CYLINDER ASSEMBLY (Cont.)

Ref. No.	Part No.	Description	No. Used
43	306407	Washer	2
44	321-6	Screw - Hex Hd. Cap	1
45	611213	Retainer	1
46	612841	Plate - Contact	1
47	3255-7	Washer - Ext. Tooth Lock	1

Ref. No.	Part No.	Description	No. Used
48	306375	Nut	1
49	252-76	Bearing - Thrust	1
50	252-80	Washer - Thrust	1
*	94-5734	Short Block	1

 *Not Illustrated

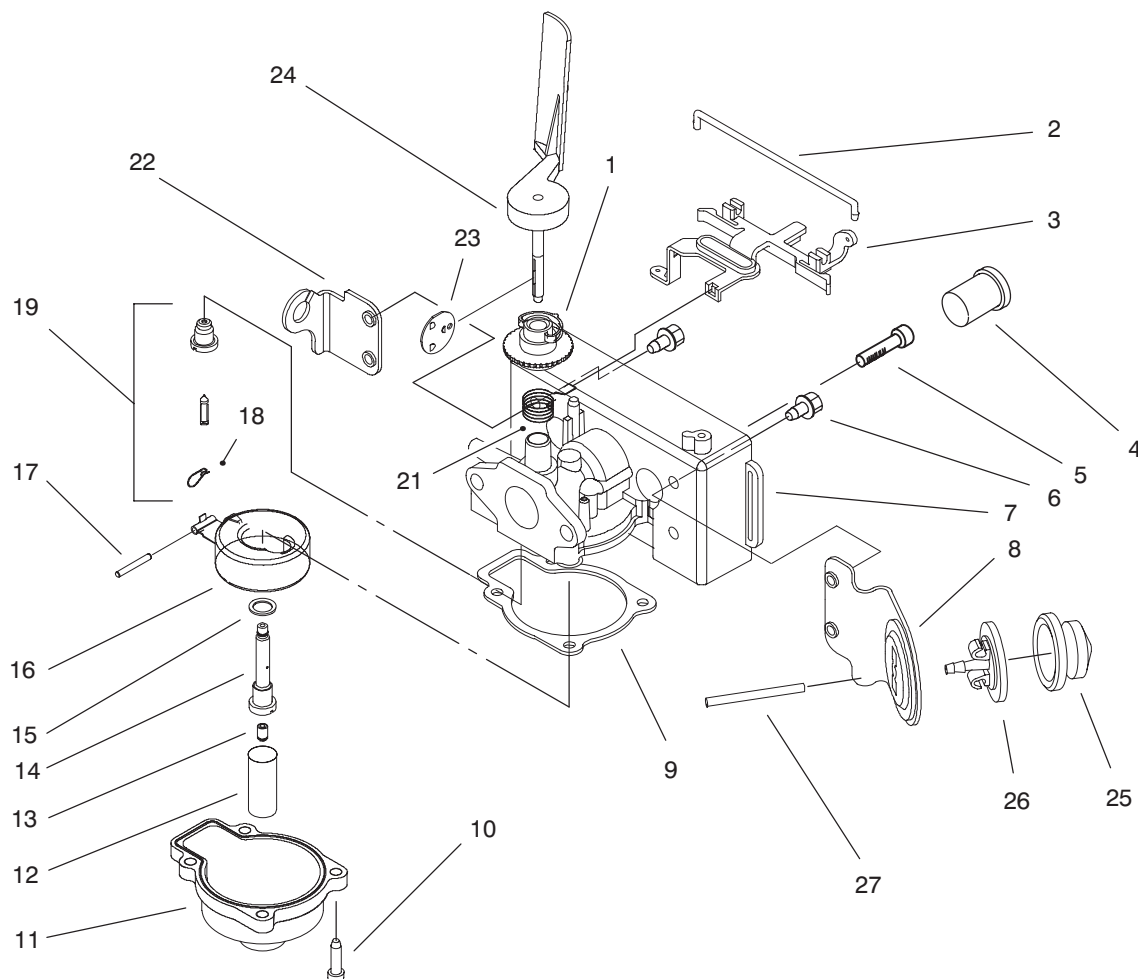


C-2182A

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	610834	Collar – Adjustment	1	15	612383	Washer	1
2	610165	Retainer	1	16	678113	Float & Arm Assembly	1
3	93-1225	Lever – Speed Adjust	1	17	92-6389	Pin	1
4	611545	Plug	1	18	603145	Clip	1
5	609482	Screw – Pan Hd. Sems	2	19	678278	Float, Valve, & Body Ass'y	1
6	613269	Screw	4	21	92-4944	Spring – Governor	1
7	93-4341	Body – Carburetor	1	22	93-1226	Bracket – Throttle Control	1
8	93-1232	Bracket – Primer	1	23	94-5704	Disc – Throttle	1
9	602850	Gasket – Float Chamber	1	24	92-6376	Air Vane & Shaft	1
10	608850	Screw	4	25	66-7460	Bulb – Primer	1
11	92-9691	Float Chamber	1	26	44-2750	Body – Primer	1
12	611071	Filter – Fuel	1	27	44-3172	Hose – Primer	1
13	94-5710	Main Jet	1	*	94-5738	Carburetor Complete	1
14	92-6371	Nozzle	1				

 *Not Illustrated

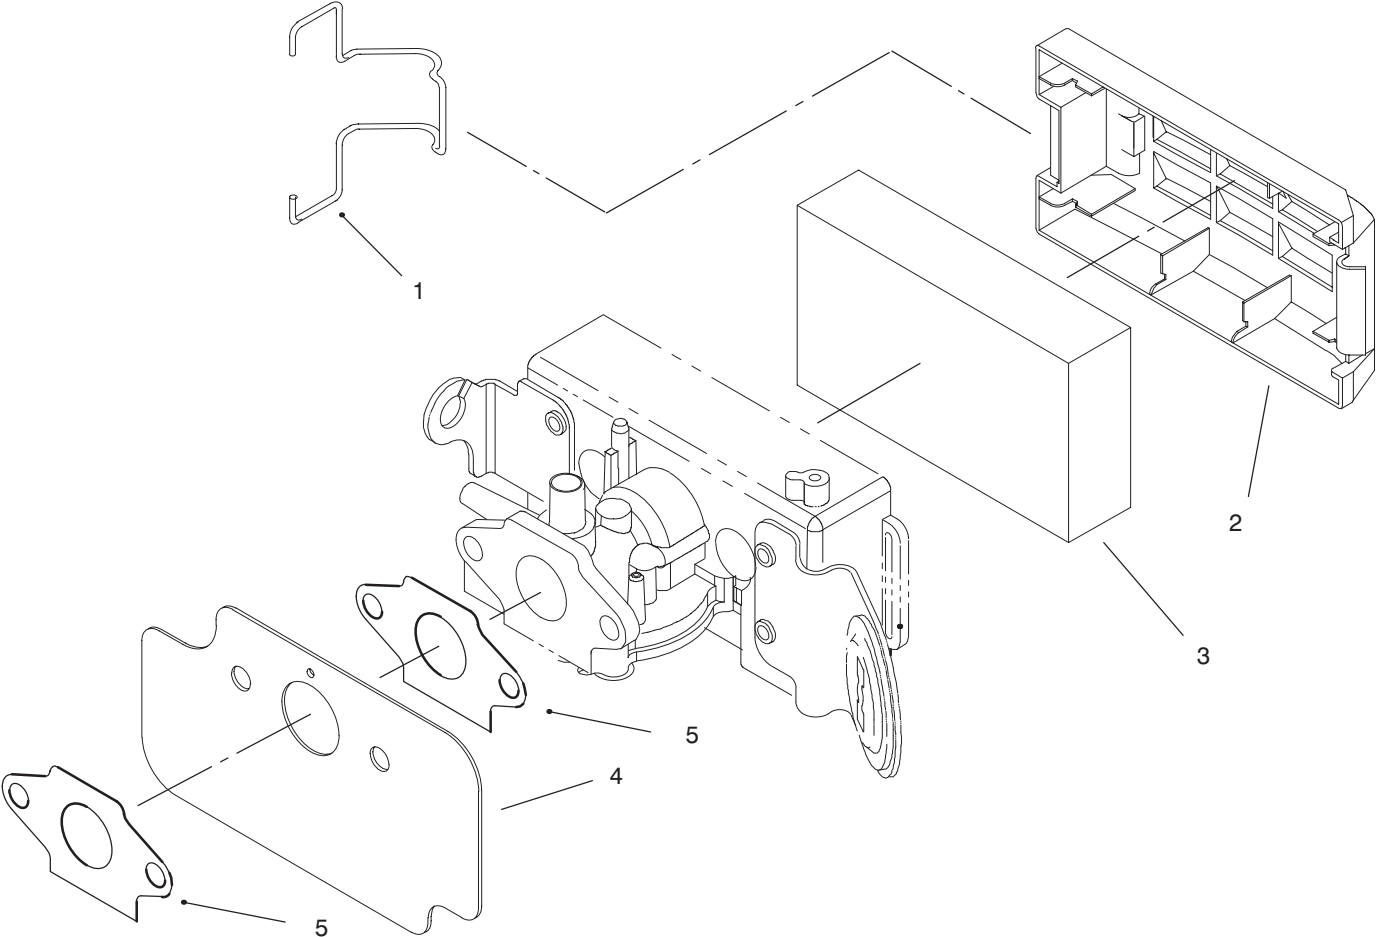


C-2184A

AIR FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610383	Retainer – Cover	1
2	93-1231	Cover – Air Filter	1
3	609493	Element – Air Filter	1

Ref. No.	Part No.	Description	No. Used
4	93-1221	Shield – Heat	1
5	92-4948	Gasket	2

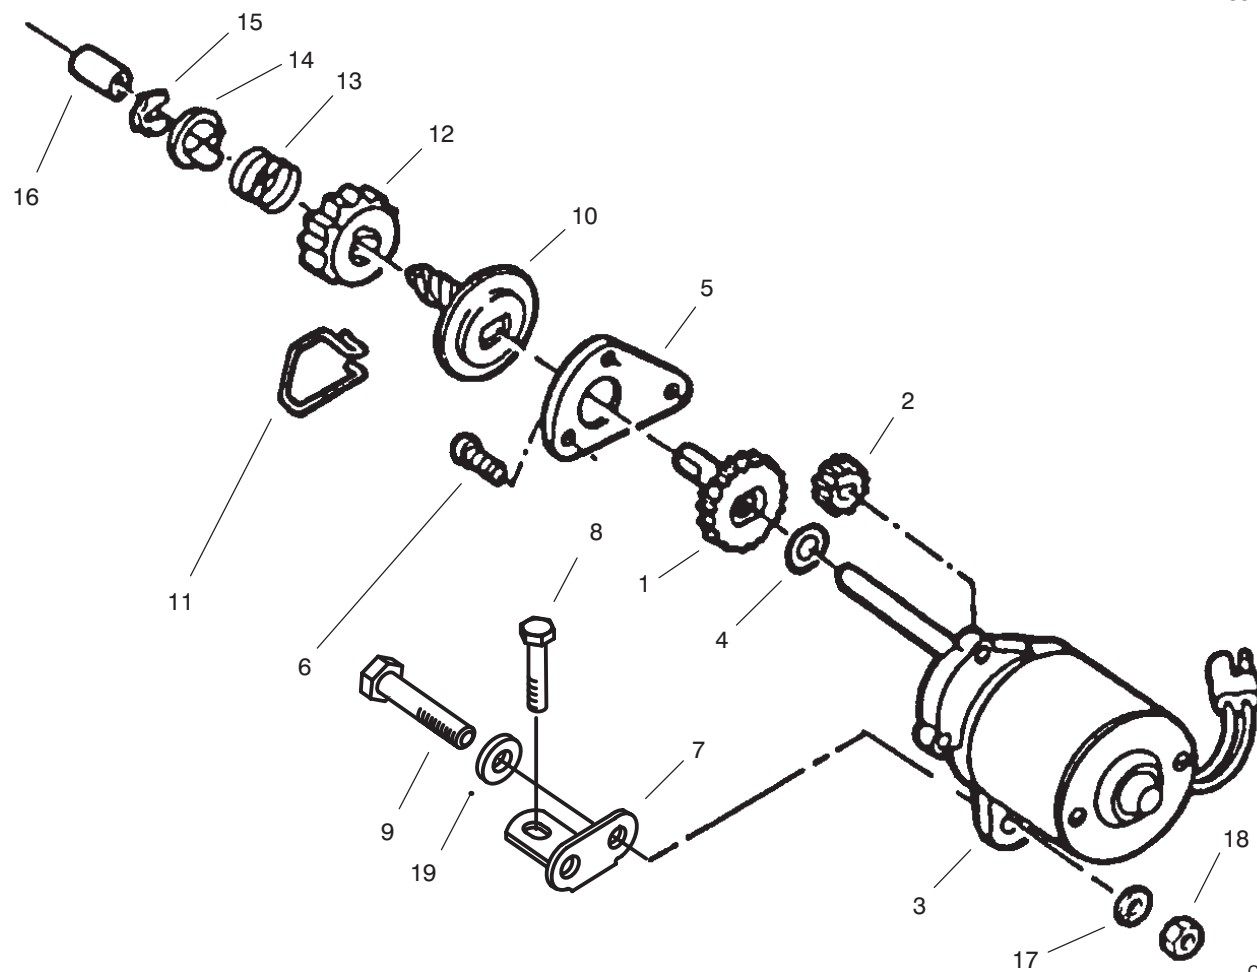 


C-1924A

ELECTRIC MOTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	611386	Gear – Driven	1	11	609229	Spring – Drag	1
2	611385	Pinion – Motor shaft	1	12	610258	Pinion	1
3	682807	Motor Housing & Pin Ass'y	1	13	610257	Spring – Pinion Return	1
4	609568	Washer	1	14	613451	Washer – Pinion Stop	1
5	613517	Plate – Gear Cover	1	15	608622	Ring – Retaining	1
6	609130	Screw	3	16	609572	Sleeve	1
7	612661	Bracket – Starter Mounting	1	17	306992	Washer – Lock	1
8	609471	Screw	1	18	328712	Nut	1
9	613075	Screw	2	19	306407	Washer	2
10	682809	Pinion – Spring & Clutch Ass'y (Incl. Ref. #11–15)	1	*	682806	Electric Starter Assembly (Incl. Ref. #1–6)	1

 *Not Illustrated

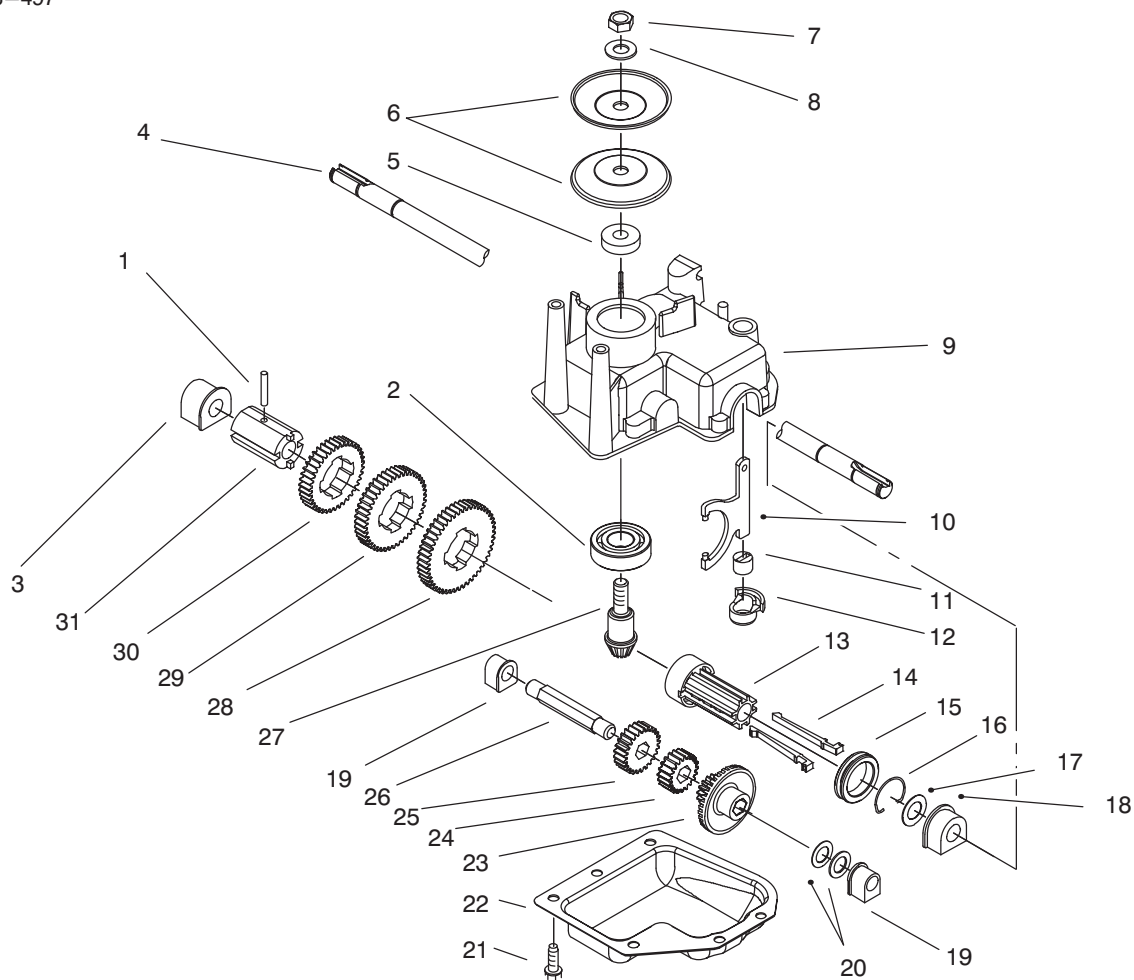


C-1322

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3285-19	Pin - Groove	1	18	60-8770	Bushing - Output	1
2	38-7820	Bearing - Ball	1	19	60-8750	Bushing - Inter. Shaft	2
3	60-8850	Bushing - Output	1	20	36-4791	Washer - Thrust	2
4	65-4770	Shaft - Output	1	21	49-2040	Screw	6
5	92-5791	Spacer	1	22	60-8730	Gear Case Cover	1
6	60-8840	Pulley - Half	2	23	55-3760	Pinion - 15 Tooth	1
7	3296-5	Nut	1	24	55-3780	Pinion - 20 Tooth	1
8	3256-24	Washer	1	25	55-3800	Pinion - 25 Tooth	1
9	60-8710	Gearcase - Upper	1	26	60-8800	Shaft - Intermediate	1
10	60-8870	Yoke - Shift	1	27	92-5790	Pinion - Bevel	1
11	29-9570	Bushing - Yoke	1	28	55-3770	Gear - 49 Tooth	1
12	60-8810	Retainer - Shift Fork	1	29	55-3790	Gear - 44 Tooth	1
13	76-0780	Sleeve - Shift Key	1	30	55-3810	Gear - 39 Tooth	1
14	76-0760	Key - Shift	2	31	60-8790	Sleeve - Gear	1
15	76-0770	Collar - Shift	1	*	92-7869	Gear Case Assembly Complete	1
16	65-5250	Clip - Spring	1				
17	36-4780	Washer	1				

 *Not Illustrated

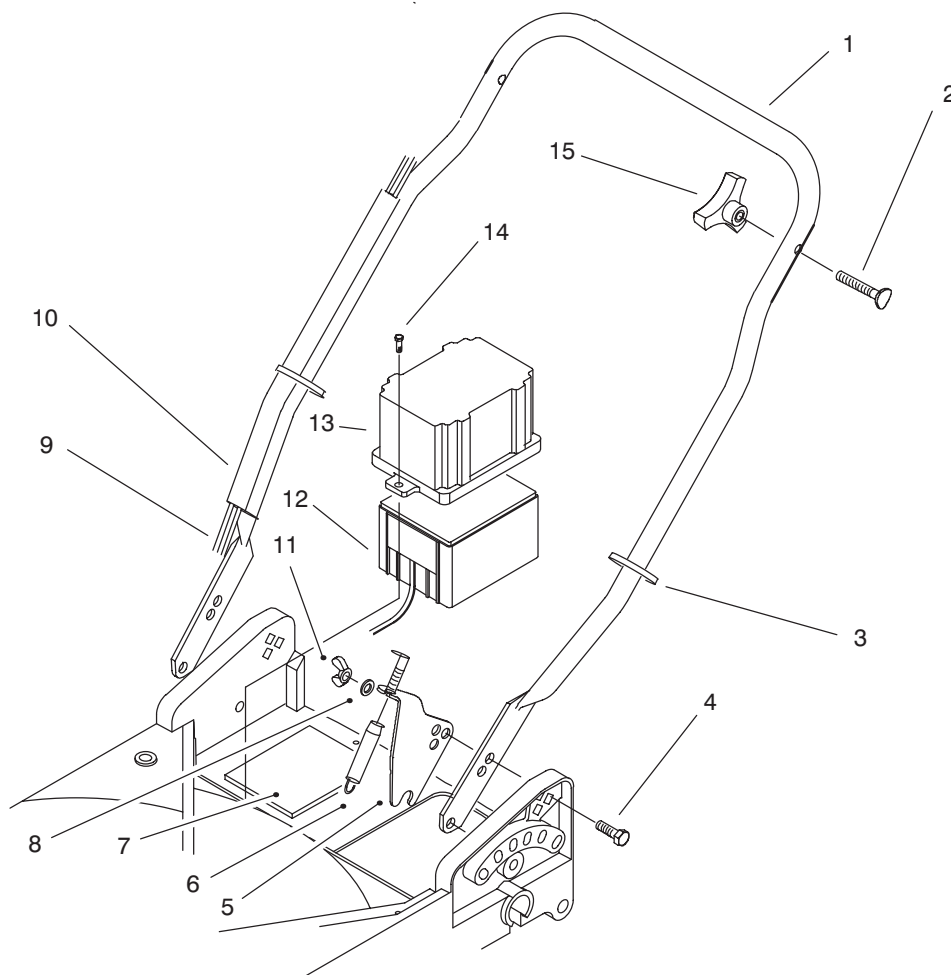


C-1921

LOWER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-6537	Handle - Lower	1
2	614697	Screw - Handle	2
3	614249	Tie - Strap	2
4	3230-29	Bolt - Carriage	2
5	92-7899	Bracket - Traction Cable	1
6	92-6518	Cable - Traction	1
7	612510	Pad - Battery	1
8	3253-33	Washer - Lock	2
9	94-6059	Wire Assembly	1

Ref. No.	Part No.	Description	No. Used
10	92-8917	Cover - Controls	1
11	32103-29	Nut - Wing	2
12	55-7520	Pack - Battery	1
13	612690	Case - Battery	1
14	12-5450	Screw - Hex Washer Hd. Thread Forming	2
15	614243	Knob	2
*	92-1743	Charger - Battery	1

 *Not Illustrated

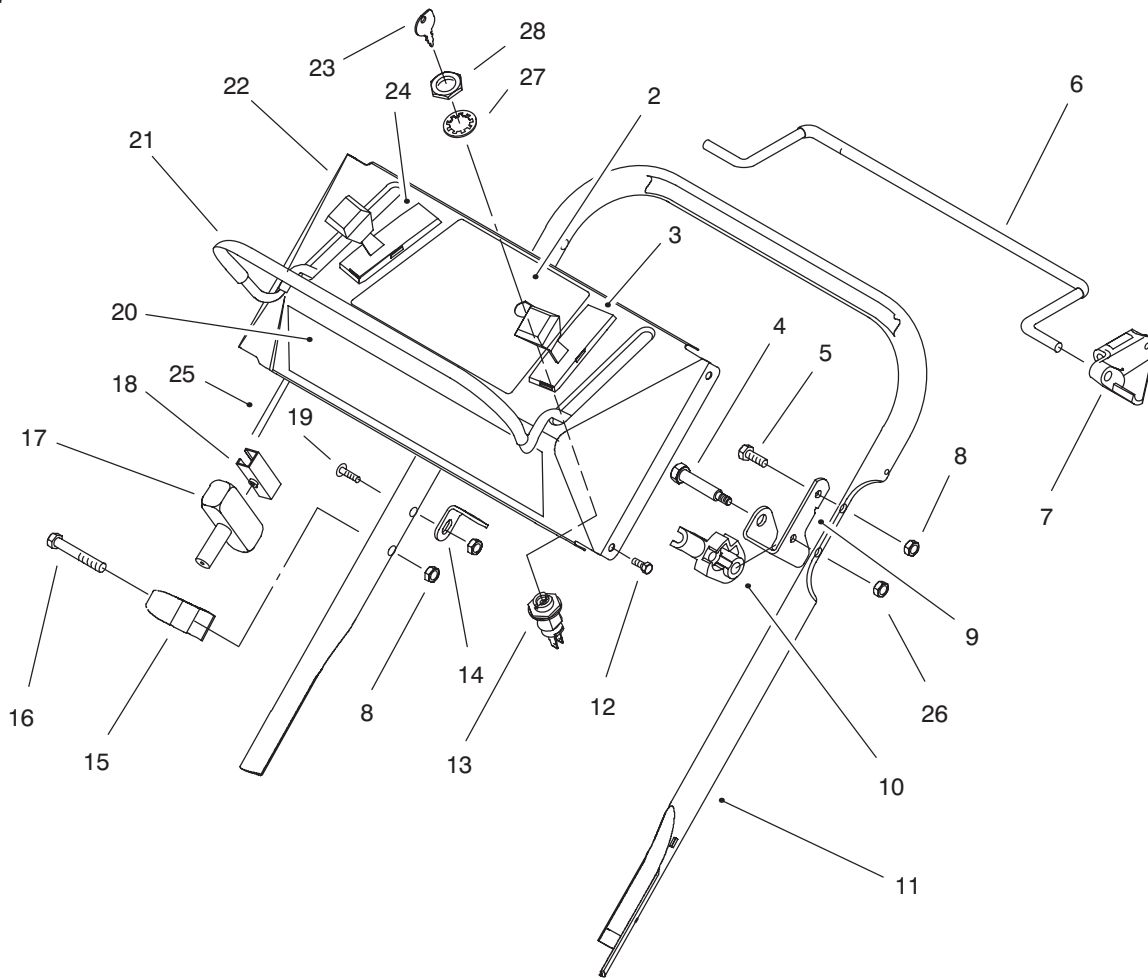

C-1922B

UPPER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	94-1615	Decal - Warning	1
3	93-3683	Cable - Throttle	1
4	613050	Bolt	1
5	321-4	Screw - Hex Hd. Cap	1
6	92-1617	Bail - Control S.P.	1
7	92-5412	Stop - Pivot	1
8	3296-73	Nut - Lock	3
9	92-1094	Bail - Stop Bracket	1
10	92-1078	Cam - Brake	1
11	92-1092	Handle - Upper	1
12	92-9665	Screw - Phillips Hd.	4
13	46-5780	Switch - Starter	1
14	92-2928	Bracket - Cable Anchor	1
15	93-7383	Guide - Rope	1

Ref. No.	Part No.	Description	No. Used
16	321-51	Screw - Hex Hd. Cap	1
17	612825	Handle - Starter	1
18	612824	Clip - Rope Insert	1
19	92-2268	Screw - Handle	1
20	92-9561	Decal - Console Front	1
21	92-1093	Bail - Engine Control	1
22	17-4539	Panel - Control (Incl. Ref. #2, & 20)	1
23	700918	Key	1
24	92-8926	Control - Ground Speed	1
25	93-3248	Cable - Control	1
26	3296-56	Nut - Lock	1
27	3254-5	Washer - Star	1
28	218-461	Nut	1

LAWN-BOY PART NUMBER INDEX

3318-497

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
130743	Nut – Flywheel	8 10 1	611386	Gear – Driven	13 1 1
303259	Washer	5 23 1	611393	Screw – Cap	9 8 2
303712	Ring – Retaining	9 17 2	611396	Seal – Upper Oil	9 13 2
306375	Nut	10 48 1	611509	Actuator – Brake Lever	9 1 1
306407	Washer	13 19 2	611512	Brace – Alternator	8 4 1
306407	Washer	10 43 2	611545	Plug	11 4 2
306992	Washer – Lock	13 17 1	612383	Washer	11 15 1
316959	Washer – Lock	8 11 1	612428	Screw	6 9 4
317893	Strap – Tie	8 13 1	612432	Rope	7 6 1
328712	Nut	13 18 1	612510	Pad – Battery	15 7 1
602587	Plate – Reed Hold Down	9 35 1	612543	Blade 21	6 21 1
602588	Reed	9 36 1	612661	Bracket – Starter Mounting	13 7 1
602850	Gasket – Float Chamber	11 9 1	612690	Case – Battery	15 13 1
603014	Bolt	8 5 1	612783	Line – Fuel	6 17 1
603145	Clip	11 18 1	612824	Clip – Rope Insert	16 18 1
603164	Nut – Blade	6 23 1	612825	Handle – Starter	16 17 1
605120	Grommet	6 14 1	612841	Plate – Contact	10 46 1
605120	Grommet	9 27 1	612842	Shield	9 24 1
605255	Washer – Flat	5 22 1	612872	Screw – Reed To Cover	9 34 2
606537	Screw	8 14 1	612949	Hub – Starter	7 8 1
606608	Pin – Wrist	9 16 1	612950	Pulley	7 7 1
607199	Key – Flywheel	9 14 1	613050	Bolt	16 4 1
607213	Gasket – Fuel Cap	6 12 1	613073	Bracket – C.D. Mounting	9 28 1
607526	Screw – C.D. Mounting	9 6 4	613075	Screw	13 9 2
607560	Plate – Cover	4 13 1	613110	Screw – Cover to	9 38 1
607601	Screw	6 30 3	613233	Screw – Brake Mtg. Brkt.	9 40 2
608175	Bar – Toe	4 11 1	613269	Screw	11 6 4
608311	Nut	8 3 1	613451	Washer – Pinion Stop	13 14 1
608622	Ring – Retaining	13 15 1	613500	Screw	6 29 1
608850	Screw	11 10 4	613517	Plate – Gear Cover	13 5 1
609123	Plug	9 32 4	613529	Bolt – Shoulder	9 5 1
609130	Screw	13 6 3	614009	Plug – Spark	9 22 1
609150	Baffle Fuel Cap	6 13 1	614243	Knob	15 15 2
609229	Spring – Drag	13 11 1	614249	Strap – Tie	9 26 1
609471	Screw	13 8 1	614249	Tie – Strap	15 3 2
609471	Screw	6 27 3	614343	Screw	8 6 1
609482	Screw – Pan Hd. Sems	11 5 2	614343	Screw	9 29 2
609493	Element – Air Filter	12 3 1	614426	Washer – Stepped	5 15 2
609568	Washer	13 4 1	614637	Bracket – Wheel Height Adj.	3 12 2
609572	Sleeve	13 16 1	614677	Screw – Sems Thr'd Form.	3 16 2
609754	Strip – Roller	9 20 1	614682	Knob – Cover Plate	3 1 1
609786	Support – Crankshaft	6 26 1	614697	Screw – Handle	15 2 2
609808	Screw	8 12 2	677525	Plate & Collar Assembly	6 20 1
609947	Screw	8 7 3	677982	Liner – Split (1 pair)	9 10 1
609976	Pulley	6 33 1	678113	Float & Arm Assembly	11 16 1
610165	Retainer	11 2 1	678278	Float, Valve, & Body Ass'y	11 19 1
610257	Spring – Pinion Return	13 13 1	681678	Lead – High Tension	9 25 1
610258	Pinion	13 12 1	681737	Ring Set	9 18 1
610345	Screw – Set	6 32 1	681830	Bearing – Upper Main	9 12 1
610358	Nut – Lock	3 2 2	681831	Bearing	9 30 1
610358	Nut – Lock	5 17 2	682683	Brake Assembly	9 4 1
610383	Retainer – Cover	12 1 1	682776	Relay	8 15 1
610834	Collar – Adjustment	11 1 1	682806	Electric Starter Assembly	13 * 1
611071	Filter – Fuel	11 12 1	682807	Motor Housing & Pin Ass'y	13 3 1
611073	Screw – Set	9 37 1	682809	Pinion – Spring & Clutch	13 10 1
611191	Clip – J	8 8 1	682876	Muffler Cover Assembly	6 25 1
611211	Spring – Brake	9 41 1	683215	Module – C.D. Ignition	9 31 1
611213	Retainer	10 45 1	683580	Flywheel	8 9 1
611214	Spring – Cable Return	9 2 1	683821	Lead	9 3 1
611215	Base – Shroud	8 2 1	683899	Kit – Dog	7 9 1
611327	Cap – Fuel	6 11 1	683964	Alternator Assembly	9 7 1
611337	Bracket	9 39 1	684301	Base – Starter	6 6 1
611385	Pinion – Motor shaft	13 2 1	684567	Starter Housing & Shaft	7 2 1

*Not Illustrated

LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
684622	Starter Assembly	7 * 1	92-1093	Bail - Engine Control	16 21 1
684622	Starter Assembly	6 7 1	92-1094	Bail - Stop Bracket	16 9 1
684776	Wheel & Tire Assembly 6	3 9 2	92-1099	Bolt - Shoulder	3 10 2
700918	Key	16 23 1	92-1604	Cap - Hub	3 11 4
12-5450	Screw - Hex Washer Hd.	4 1 2	92-1617	Bail - Control S.P.	16 6 1
12-5450	Screw - Hex Washer Hd.	15 14 2	92-1630	Fan - Mulching	6 22 1
16-5539	Shroud & Tank Assembly	6 5 1	92-1648	Screw - Engine	6 24 3
17-1219	Housing - 21	4 9 1	92-1743	Charger - Battery	15 * 1
17-4539	Panel - Control	16 22 1	92-2268	Screw - Handle	16 19 1
24-7920	Cover - Drive Shaft	5 24 1	92-2928	Bracket - Cable Anchor	16 14 1
29-9570	Bushing - Yoke	14 11 1	92-4856	Bolt - Shoulder	3 8 2
36-4780	Washer	14 17 1	92-4921	Connecting Rod Assembly	9 9 1
36-4791	Washer - Thrust	14 20 2	92-4925	Piston & Ring Set	9 19 1
38-7820	Bearing - Ball	14 2 1	92-4927	Bearing Assembly	9 15 1
39-5770	Decal - Danger	4 12 1	92-4935	Spring & Keeper	7 3 1
40-1940	Washer	3 3 6	92-4944	Spring - Governor	11 21 1
44-2750	Body - Primer	11 26 1	92-4948	Gasket	12 5 2
44-3172	Hose - Primer	11 27 1	92-5412	Stop - Pivot	16 7 1
46-5780	Switch - Starter	16 13 1	92-5790	Pinion - Bevel	14 27 1
46-6811	Screw - Hex Washer Hd.	4 10 2	92-5791	Spacer	14 5 1
47-2480	Stop - Rope	6 10 1	92-6371	Nozzle	11 14 1
49-2040	Screw	14 21 6	92-6376	Air Vane & Shaft	11 24 1
55-3760	Pinion - 15 Tooth	14 23 1	92-6388	Plate - Muffler	6 28 1
55-3770	Gear - 49 Tooth	14 28 1	92-6389	Pin	11 17 1
55-3780	Pinion - 20 Tooth	14 24 1	92-6518	Cable - Traction	15 6 1
55-3790	Gear - 44 Tooth	14 29 1	92-6535	Cap - End	5 20 2
55-3800	Pinion - 25 Tooth	14 25 1	92-6537	Handle - Lower	15 1 1
55-3810	Gear - 39 Tooth	14 30 1	92-6539	Spring Arm Assembly - R.H.	5 * 1
55-7520	Pack - Battery	15 12 1	92-6540	Spring Arm Assembly- L.H.	5 18 1
60-8710	Gearcase - Upper	14 9 1	92-7699	Bracket - Actuator	4 4 1
60-8730	Gear Case Cover	14 22 1	92-7736	Shield - Trailing	4 7 1
60-8750	Bushing - Inter. Shaft	14 19 2	92-7746	Arm - Rear Height Adjust.	5 4 2
60-8770	Bushing - Output	14 18 1	92-7748	Screw	4 3 2
60-8790	Sleeve - Gear	14 31 1	92-7869	Gear Case Assembly	14 * 1
60-8800	Shaft - Intermediate	14 26 1	92-7869	Gear Case Assembly	4 6 1
60-8810	Retainer - Shift Fork	14 12 1	92-7899	Bracket - Traction Cable	15 5 1
60-8821	Lever - Shift	5 1 1	92-8630	Plate - Mulch	3 17 1
60-8840	Pulley - Half	14 6 2	92-8853	Cover - Transmission	4 2 1
60-8850	Bushing - Output	14 3 1	92-8917	Cover - Controls	15 10 1
60-8870	Yoke - Shift	14 10 1	92-8926	Control - Ground Speed	16 24 1
65-2720	Ring - Retaining	5 7 4	92-9561	Decal - Console Front	16 20 1
65-4710	Ring - Friction	5 8 2	92-9665	Screw - Phillips Hd.	16 12 4
65-4720	Spring - Compression	5 12 2	92-9673	Bolt - Shoulder	3 4 2
65-4730	Washer - Thrust	5 5 2	92-9691	Float Chamber	11 11 1
65-4740	Washer - Thrust Keyed	5 6 4	93-0290	Decal - Deck	3 14 1
65-4750	Gear - Pinion	5 11 2	93-0293	Decal - Recoil	6 15 1
65-4760	Washer	5 9 2	93-1221	Shield - Heat	12 4 1
65-4770	Shaft - Output	14 4 1	93-1225	Lever - Speed Adjust	11 3 1
65-5250	Clip - Spring	14 16 1	93-1226	Bracket - Throttle Control	11 22 1
66-6040	Key - Rocking R.H.	5 * 1	93-1231	Cover - Air Filter	12 2 1
66-6050	Key - Rocking L.H.	5 10 1	93-1232	Bracket - Primer	11 8 1
66-7460	Bulb - Primer	11 25 1	93-1233	Gasket - Exhaust	9 33 1
76-0760	Key - Shift	14 14 2	93-1233	Gasket - Muffler	6 31 1
76-0770	Collar - Shift	14 15 1	93-1239	Spring - Contact	9 23 1
76-0780	Sleeve - Shift Key	14 13 1	93-3248	Cable - Control	16 25 1
82-8780	Retainer - Cable	5 3 1	93-3683	Cable - Throttle	16 3 1
92-1006	Spring Arm Ass'y - Front	3 6 2	93-4300	Harness - Wire	8 1 1
92-1008	Knob - Height Adjust	3 5 4	93-4301	Case Assembly	9 42 1
92-1042	Wheel & Tire Assembly	5 13 2	93-4341	Body - Carburetor	11 7 1
92-1043	V-Belt	5 21 1	93-7250	Decal - Warning	4 8 1
92-1057	Bolt - Shoulder	5 14 2	93-7383	Guide - Rope	16 15 1
92-1078	Cam - Brake	16 10 1	94-1609	Cover - Wheel	5 16 2
92-1092	Handle - Upper	16 11 1	94-1610	Grommet	3 15 3

*Not Illustrated

LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-1615	Decal - Warning	16 2 1	3254-5	Washer - Star	16 27 1
94-5704	Disc - Throttle	11 23 1	3255-7	Washer - Ext. Tooth Lock	10 47 1
94-5710	Main Jet	11 13 1	3256-24	Washer	14 8 1
94-5713	Crankshaft	9 11 1	3272-10	Pin - Cotter	5 25 1
94-5734	Short Block	10 * 1	3285-19	Pin - Groove	14 1 1
94-5738	Carburetor Complete	11 * 1	3290-413	Washer - Belleville	3 7 2
94-6050	Wire Assembly	15 9 1	3296-5	Nut	14 7 1
218-461	Nut	16 28 1	3296-39	Nut - Lock	3 13 2
252-76	Bearing - Thrust	10 49 1	3296-56	Nut - Lock	16 26 1
252-80	Washer - Thrust	10 50 1	3296-73	Nut - Lock	16 8 3
256-251	Bushing - Spacer	4 5 2	32103-29	Nut - Wing	15 11 2
321-4	Screw - Hex Hd. Cap	16 5 1	32144-53	Screw - Self Tapping	6 8 5
321-6	Screw - Hex Hd. Cap	10 44 1	32144-70	Screw - Tapping	5 2 1
321-51	Screw - Hex Hd. Cap	16 16 1	32144-85	Screw - Hex Hd Tapping	5 19 2
3230-29	Bolt - Carriage	15 4 2			
3253-33	Washer - Lock	15 8 2			

MAINTENANCE RECORD

[illegible]