

LAWN-BOY®

19" GOLD SERIES WALK—BEHIND MOWER

MODEL NO. 10401—6900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.


NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Engine, Shroud and Muffler Plate	1	Crankshaft & Cylinder Assembly	8–9
Deck, Muffler Cover, Blade & Wheels	2	Carburetor Assembly	10
Upper Handle Assembly	3	Air Filter Assembly	11
Lower Handle Assembly	4	Starter	12
Engine Assembly	5–6	Numeric Parts Index	13–14
Flywheel & Wire Harness Assembly	7		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Shredder Kit	Part No. 681683
Leaf Bag	Model No. 89804		

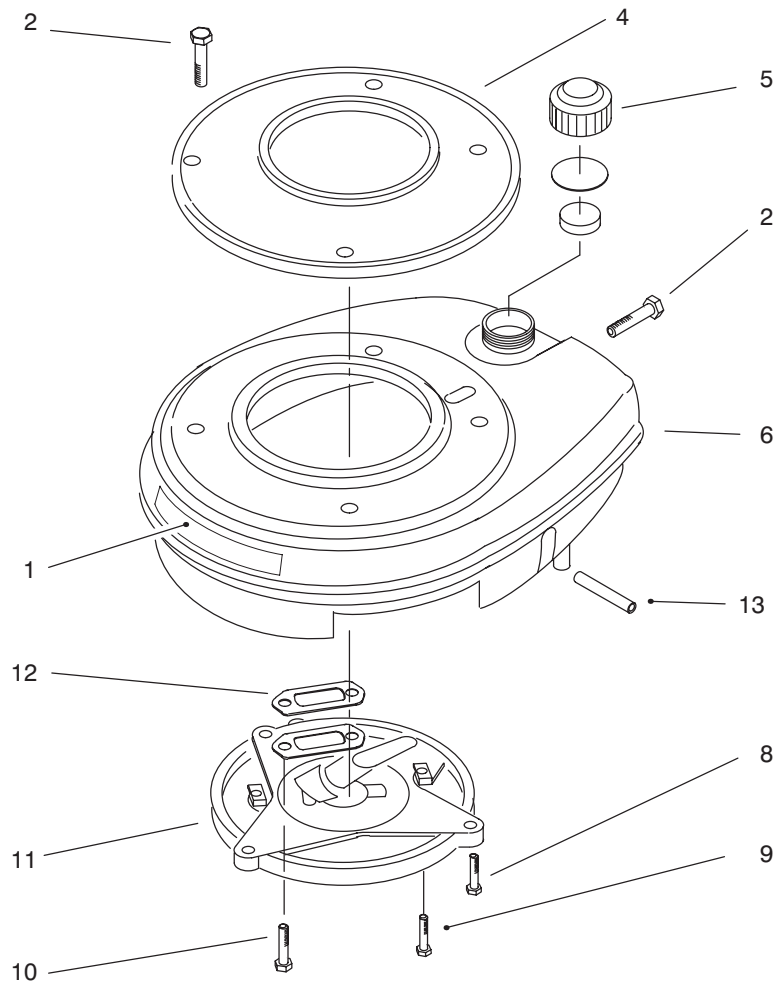


C-2196A

ENGINE SHROUD AND MUFFLER PLATE

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-8615	Applique	1	8	92-1648	Screw - Muffler Plt. to Hsg.	3
2	32144-53	Screw	5	9	613500	Screw - Muffler Plt. to Block	1
4	684570	Starter Base	1	10	607601	Screw	3
5	682755	Fuel Cap	1	11	92-1054	Plate - Muffler	1
*	607213	Gasket	1	12	93-1233	Gasket - Exhaust	1
*	609150	Baffle	1	13	612783	Hose - Gas	1
6	16-5539	Shroud - Engine	1				

*Not Illustrated

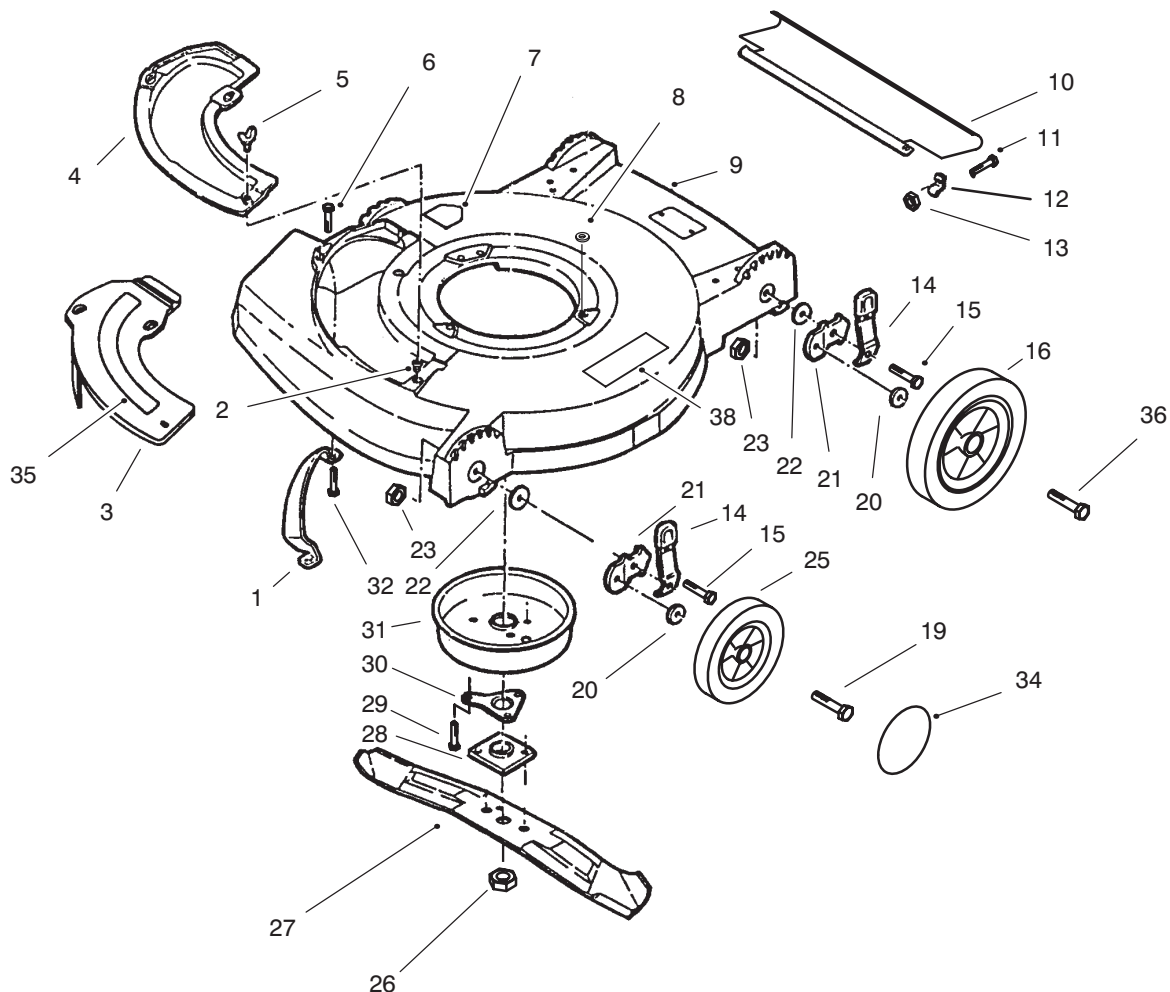


C-2197A

DECK, MUFFLER COVER, BLADE & WHEELS

Ref. No.	Part No.	Description	No. Used
1	608159	Toe Bar	1
2	94-1610	Grommet	3
3	684619	Cover - Plate, Mulch (Incl. Ref.#35)	1
4	607560	Cover Plate	1
5	614682	Nut - Wing	1
6	614677	Screw - Plate Mounting	2
7	39-5770	Decal - Danger (English)	1
8	3256-4	Washer - Flat	3
9	16-2169	Housing Assembly (Incl. Ref. # 2, 7, 38 & 39)	1
10	93-7369	Shield - Trailing	1
11	321-39	Screw - Trailing Shield	2
12	93-7693	Clamp	2
13	3296-73	Nut	2
14	92-4880	Knob and Spring Assembly	4
15	610646	Bolt - Shoulder	4

Ref. No.	Part No.	Description	No. Used
16	684777	Wheel - Rear 8"	2
19	92-1099	Bolt - Wheel 6"	2
20	40-1940	Washer	4
21	608833	Bracket - Wheel Ht. Adjust	4
22	608834	Washer - Wheel Ht. Adjust	4
23	603773	Nut - Wheel Ht. Adjust	4
25	684776	Wheel - Front 6"	2
26	603164	Nut	1
27	612079	Blade 19"	1
28	677525	Collar and Plate Assembly	1
29	609471	Screw - Muff. to Muff. Plate	3
30	609786	Support - Crankshaft	1
31	682876	Muffler Cover Assembly	1
32	46-6811	Screw	2
34	92-1604	Hub Cap	4
35	92-8620	Decal	1
36	614650	Bolt - Wheel 8"	2
38	93-7250	Decal - Warning	1


*Not Illustrated

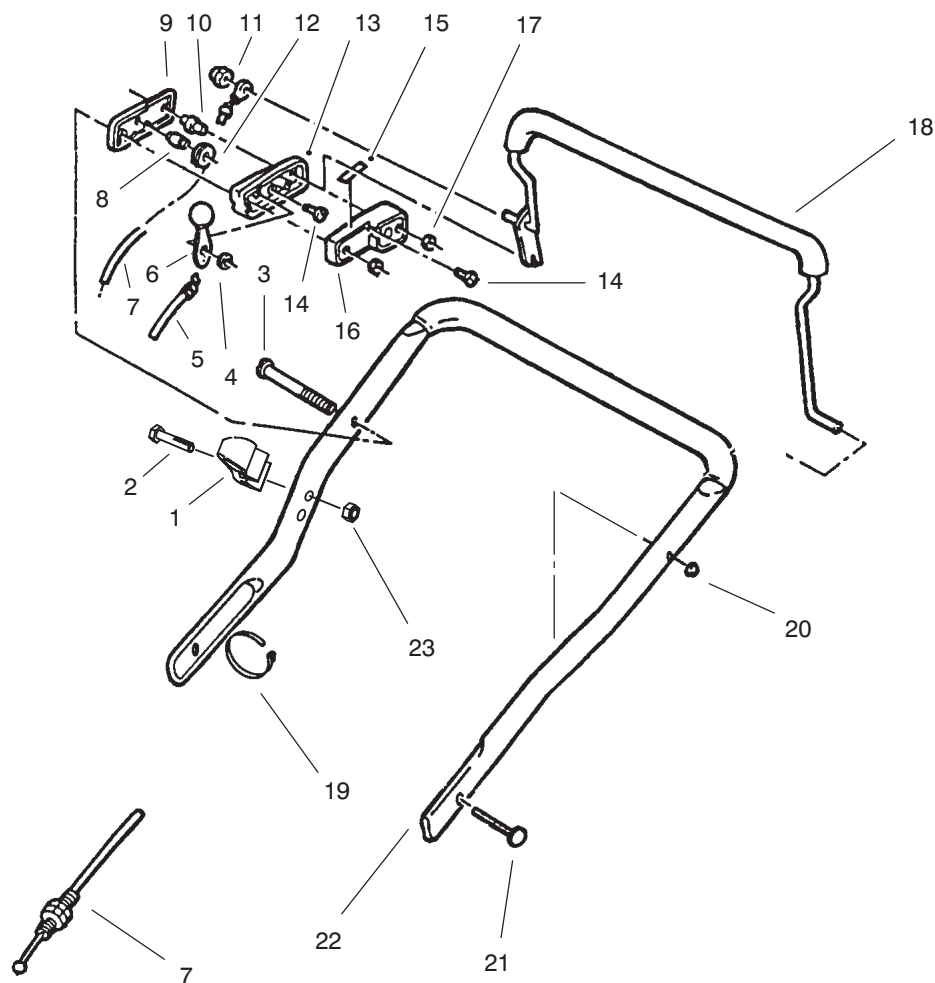

C-2198A

UPPER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7383	Guide - Rope	1	13	612633	Case - Throttle, Center	1
2	321-51	Screw	1	14	611543	Screw	2
3	611799	Screw	2	15	93-4136	Decal - Throttle	1
4	612586	Washer	2	16	612634	Case - Throttle, Inner	1
5	93-3779	Cable - Throttle	1	17	3296-12	Nut	2
6	93-4135	Lever & Knob Assembly	1	18	683478	Lever - Control	1
7	93-4102	Cable - Control	1	19	614249	Tie Strap	4
8	611542	Pin	1	20	605546	Nut - Push	1
9	611777	Control Case Outer	1	21	614697	Screw	2
10	611541	Column	1	22	611250	Handle Assembly - Top	1
11	612168	Nut - Acorn	1	23	3296-73	Nut - Lock	4
12	612564	Pulley	1				

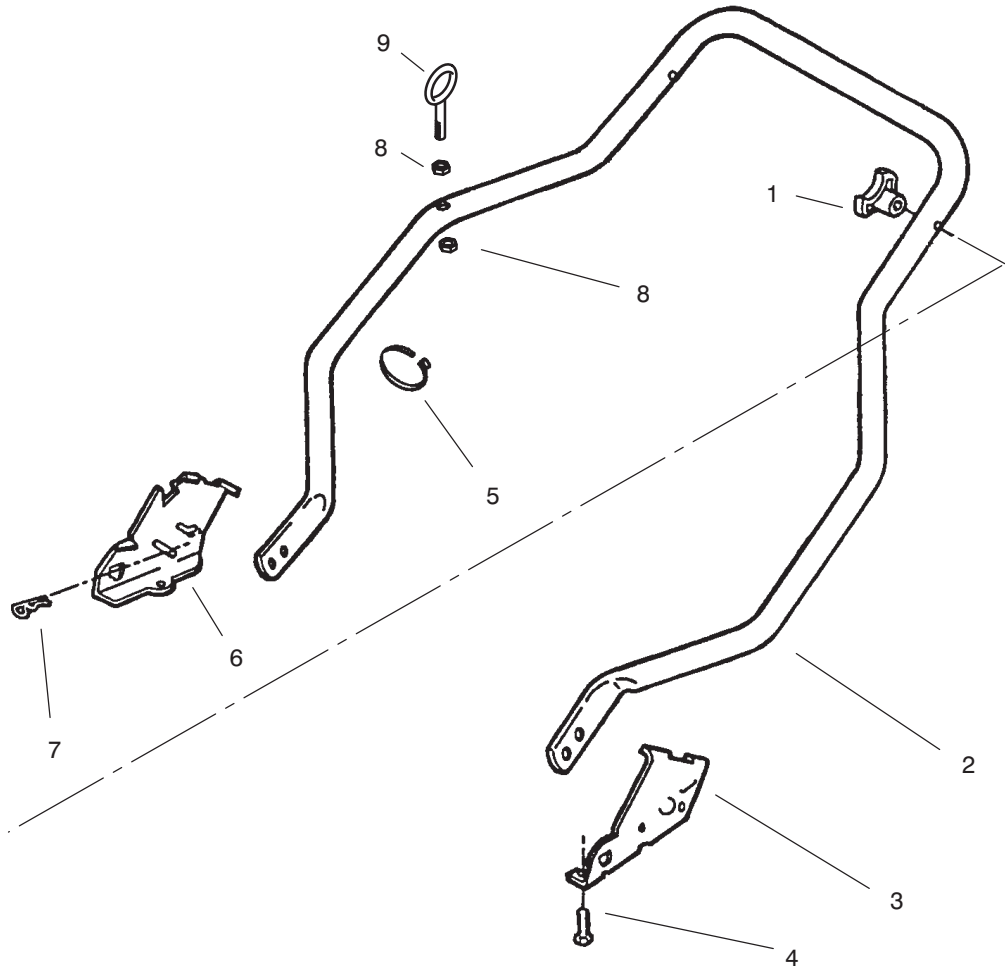

C-2506


LOWER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	614243	Knob	2
2	612788	Handle – Lower	1
3	683925	Bracket – Handle L.H.	1
4	607188	Screw	4
5	614249	Tie Strap	4

Ref. No.	Part No.	Description	No. Used
6	683926	Bracket – Handle R.H.	1
7	605803	Pin – Cotter	2
8	3296-73	Nut – Lock	4
9	611571	EyeBolt	1

ENGINE ASSEMBLY (Serial No. 6900001—6901660)

3318—510

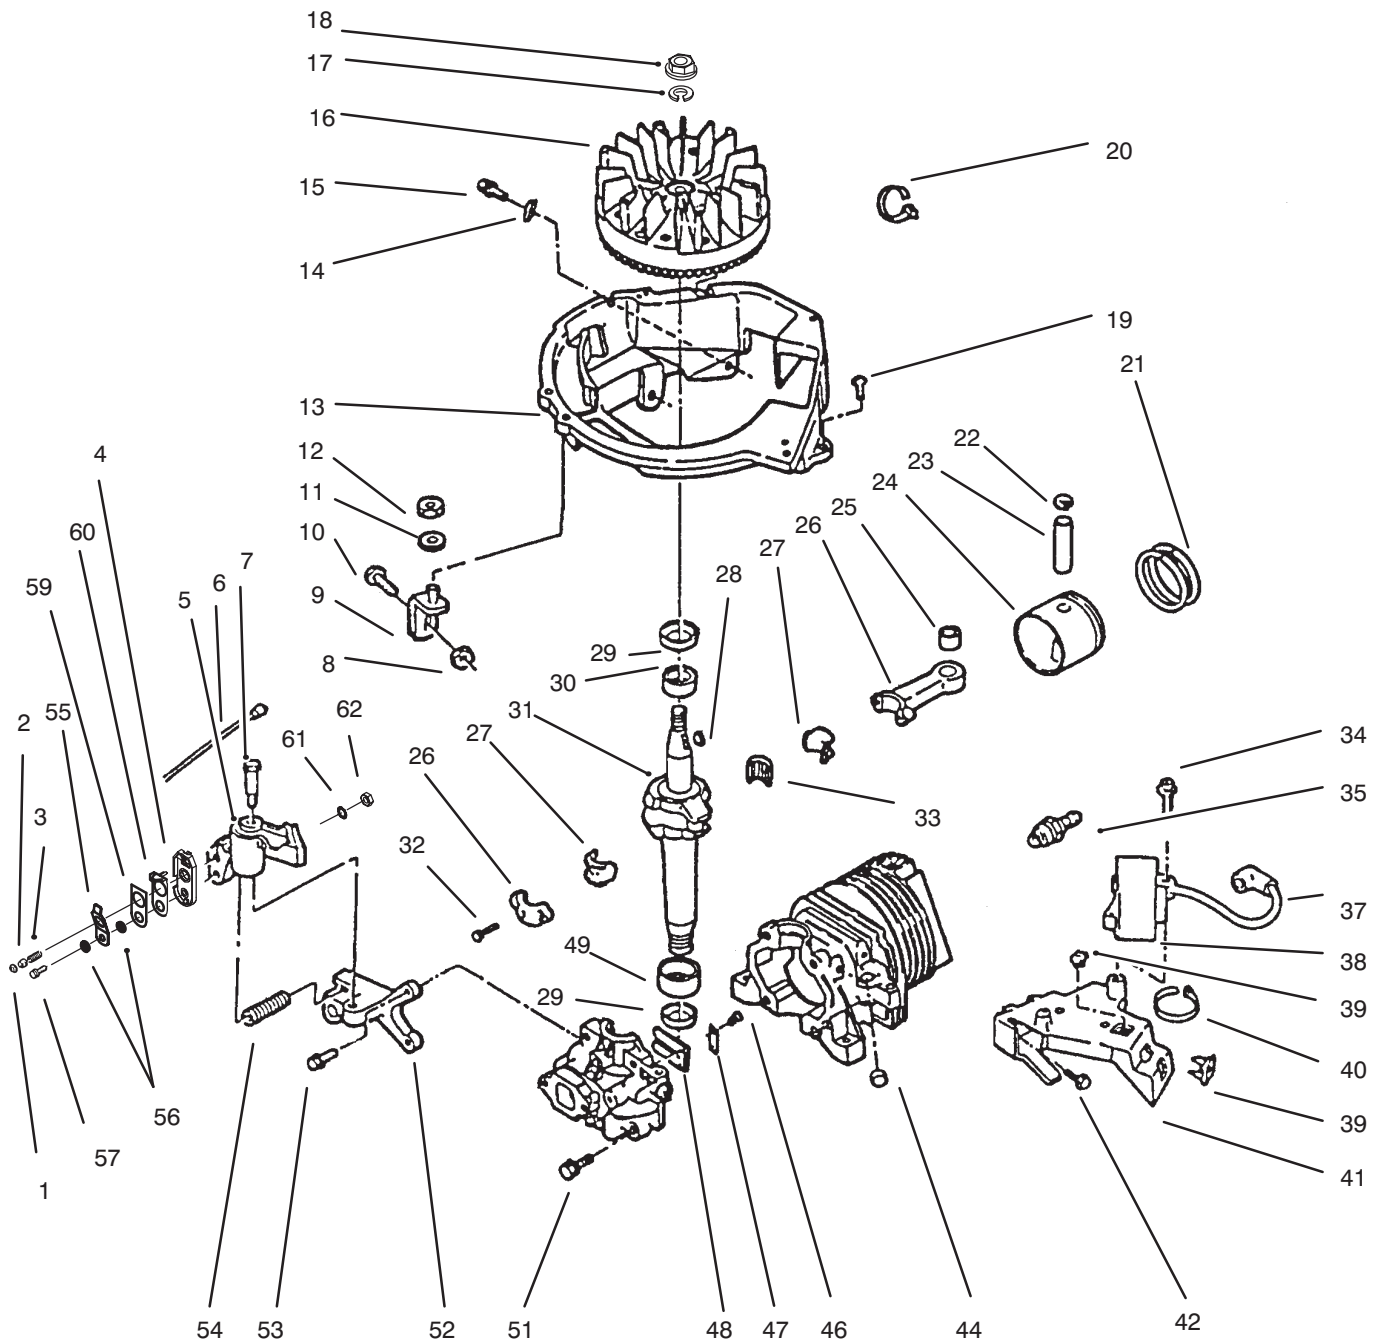


C-2192B

ENGINE ASSEMBLY (Serial No. 6900001—6901660)

Ref. No.	Part No.	Description	No. Used
1	611213	Retainer	1
2	611509	Actuator — Brake Lever	1
3	611214	Spring — Cable, Return	1
4	93—1240	Case — Switch	1
5	682683	Brake Assembly	1
6	683821	Wire Lead	1
7	613529	Bolt — Shoulder	1
8	608311	Nut	1
9	683581	Brace Assembly	1
10	603014	Bolt	1
11	306407	Washer	1
12	602315	Nut	1
13	612427	Shroud — Base	1
14	611191	"J"Clip	1
15	609947	Screw	3
16	683580	Flywheel Assembly	1
17	316959	Washer — Lock	1
18	130743	Nut — Flywheel	1
19	609808	Screw	1
20	317893	Tie Strap	1
21	681737	Set — Ring	1
22	303712	Ring — Retaining	2
23	606608	Pin — Wrist	1
24	92—4925	Piston & Connecting Rod Assembly (Incl. Ref. #21—23, 25—27 & 32—33)	1
*	92—4923	Set — Piston & Ring (Incl. Ref. # 21—23)	1
25	92—4927	Bearing Assembly	1
26	92—4921	Connecting Rod Assembly (Incl. Ref. #25,27,32 & 33)	1
27	677982	Liner — Pair	1
28	607199	Key — Flywheel	1

Ref. No.	Part No.	Description	No. Used
29	611396	Seal — Oil	2
30	681830	Bearing — Main	1
31	92—6375	Crankshaft	1
32	611393	Screw	2
33	609754	Set — Needle Bearing	1
34	607526	Screw	2
35	614009	Spark Plug	1
37	681678	Wire Lead	1
38	683215	C. D. Ignition Module (Incl. Ref. #37)	1
39	605120	Grommet	2
40	614249	Tie Strap	1
41	613073	Bracket — C. D.	1
42	614343	Screw	2
44	609123	Plug	4
46	612872	Screw	2
47	602587	Plate — Reed	1
48	602588	Reed	1
49	681831	Bearing — Main	1
51	613110	Screw	2
52	611192	Bracket — Brake	1
53	613233	Screw	2
54	611211	Spring — Brake	1
55	93—1239	Spring	1
56	306407	Washer	1
57	321—6	Screw — Hex. Hd. Cap	1
59	612842	Shield	
60	612841	Plate — Contact	1
61	3255—7	Washer — Lock	1
62	306375	Nut	1
*	94—5734	Short Block	1


*Not Illustrated

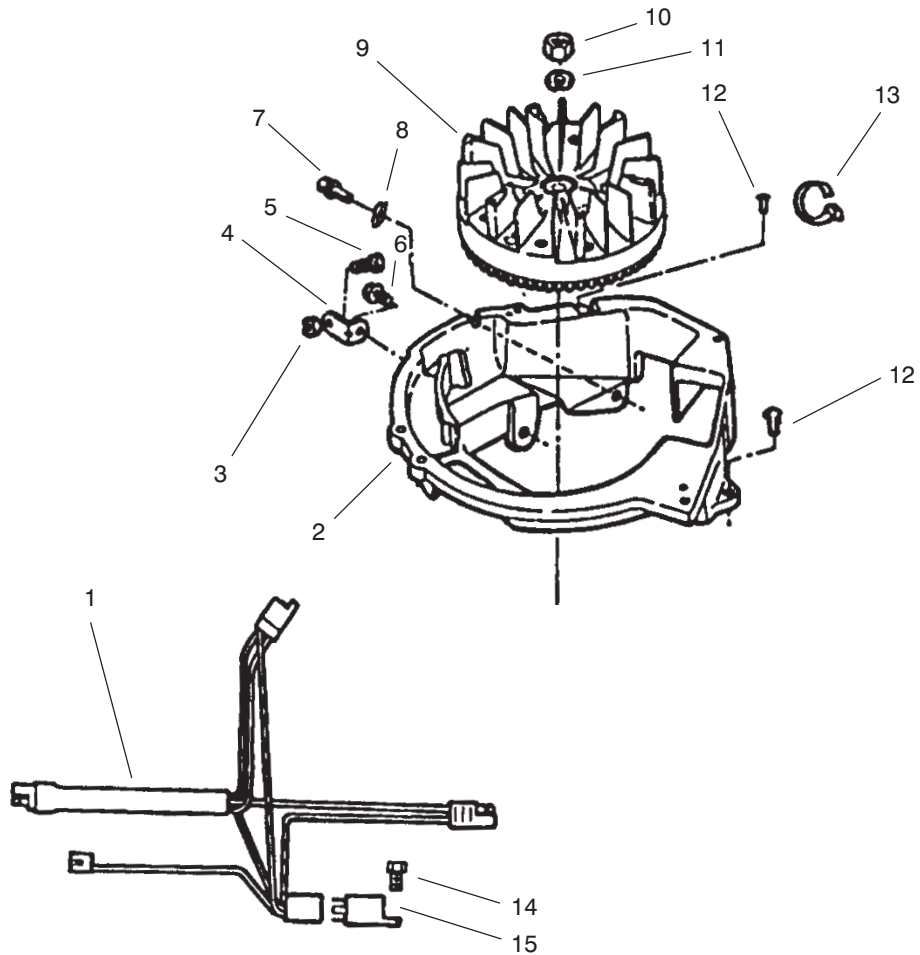

C-1925

FLYWHEEL & WIRE HARNESS ASSEMBLY **(Serial No. 6901661 & Up)**

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4300	Harness - Wire	1	9	683580	Flywheel	1
2	611215	Base - Shroud	1	10	130743	Nut - Flywheel	1
3	608311	Nut	1	11	316959	Washer - Lock	1
4	611512	Brace - Alternator	1	12	609808	Screw	2
5	603014	Bolt	1	13	317893	Strap - Tie	1
6	614343	Screw	1	14	606537	Screw	1
7	609947	Screw	3	15	682776	Relay	1
8	611191	Clip - J	1				

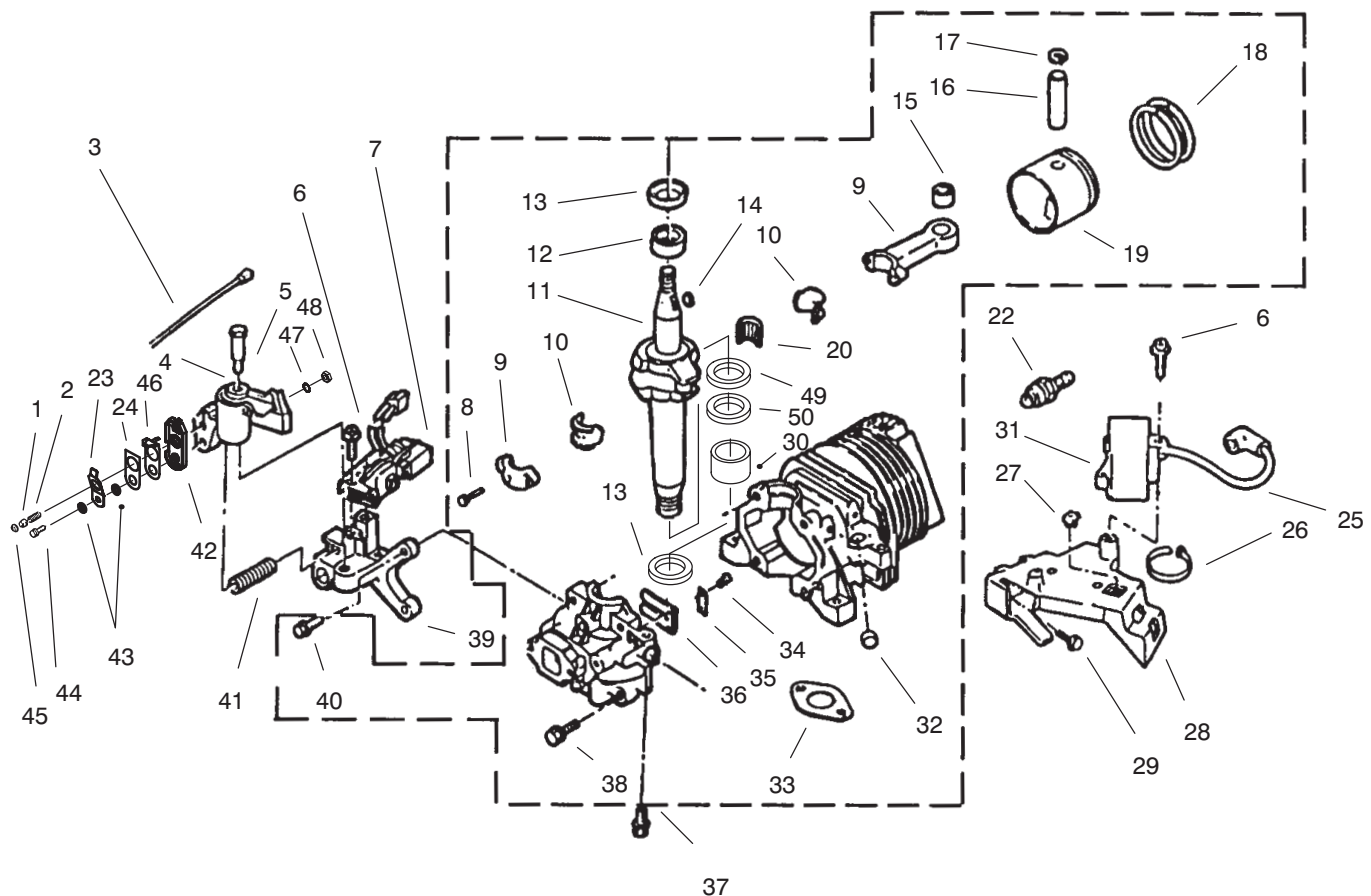


37

C-2172B

CRANKSHAFT & CYLINDER ASSEMBLY (Serial No. 6901661 & Up)

Ref. No.	Part No.	Description	No. Used
1	611509	Actuator — Brake Lever	1
2	611214	Spring — Cable Return	1
3	683821	Lead	1
4	682683	Brake Assembly	1
5	613529	Bolt — Shoulder	1
6	607526	Screw — C.D. Mounting	4
7	683964	Alternator Assembly	1
8	611393	Screw — Cap	2
9	92-4921	Connecting Rod Assembly (Incl. Ref. #8, 10, & 20)	1
10	677982	Liner — Split (1 pair)	1
11	94-5713	Crankshaft	1
12	681830	Bearing — Upper Main	1
13	611396	Seal — Upper Oil	2
14	607199	Key — Flywheel	1
15	92-4927	Bearing Assembly	1
16	606608	Pin — Wrist	1
17	303712	Ring — Retaining	2
18	681737	Ring Set	1
19	92-4925	Piston & Ring Set (Incl. Ref. #16-18)	1
20	609754	Strip — Roller	1
22	614009	Plug — Spark	1
23	93-1239	Spring — Contact	1

Ref. No.	Part No.	Description	No. Used
24	612842	Shield	1
25	681678	Lead — High Tension	1
26	614249	Strap — Tie	1
27	605120	Grommet	1
28	613073	Bracket — C.D. Mounting	1
29	614343	Screw	2
30	681831	Bearing	1
31	683215	Module — C.D. Ignition & Lead	1
32	609123	Plug	4
33	93-1233	Gasket — Exhaust	1
34	612872	Screw — Reed To Cover	2
35	602587	Plate — Reed Hold Down	1
36	602588	Reed	1
37	611073	Screw — Set	1
38	613110	Screw — Cover to Crankcase	1
39	611337	Bracket	1
40	613233	Screw — Brake Mtg. Brkt.	2
41	611211	Spring — Brake	1
42	93-4301	Case Assembly	1

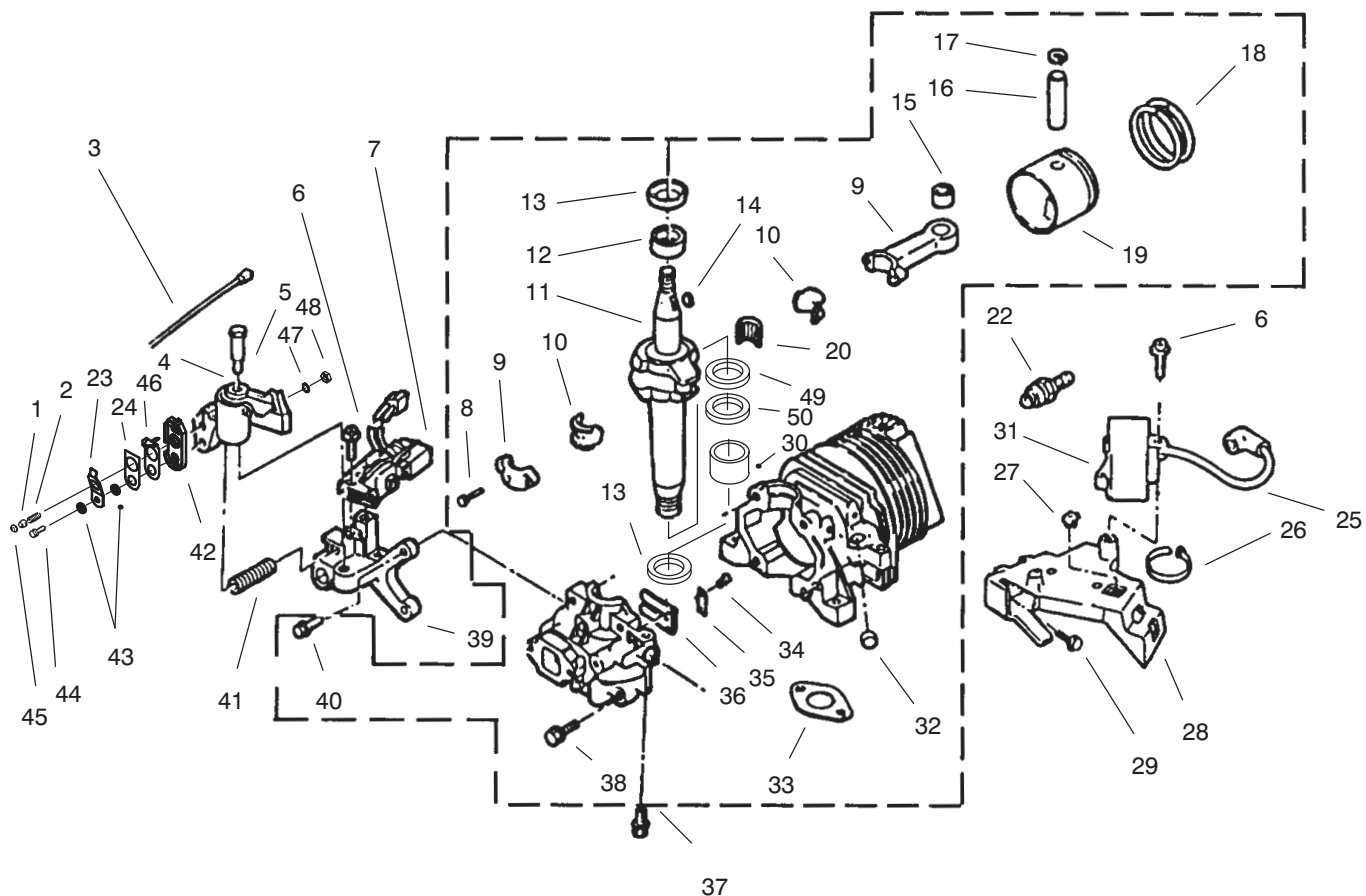


C-2172B

CRANKSHAFT & CYLINDER ASSEMBLY (Cont.) (Serial No. 6901661 & Up)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
43	306407	Washer	2	48	306375	Nut	1
44	321-6	Screw - Hex Hd. Cap	1	49	252-76	Bearing - Thrust	1
45	611213	Retainer	1	50	252-80	Washer - Thrust	1
46	612841	Plate - Contact	1	*	94-5734	Short Block	1
47	3255-7	Washer - Ext. Tooth Lock	1				

*Not Illustrated

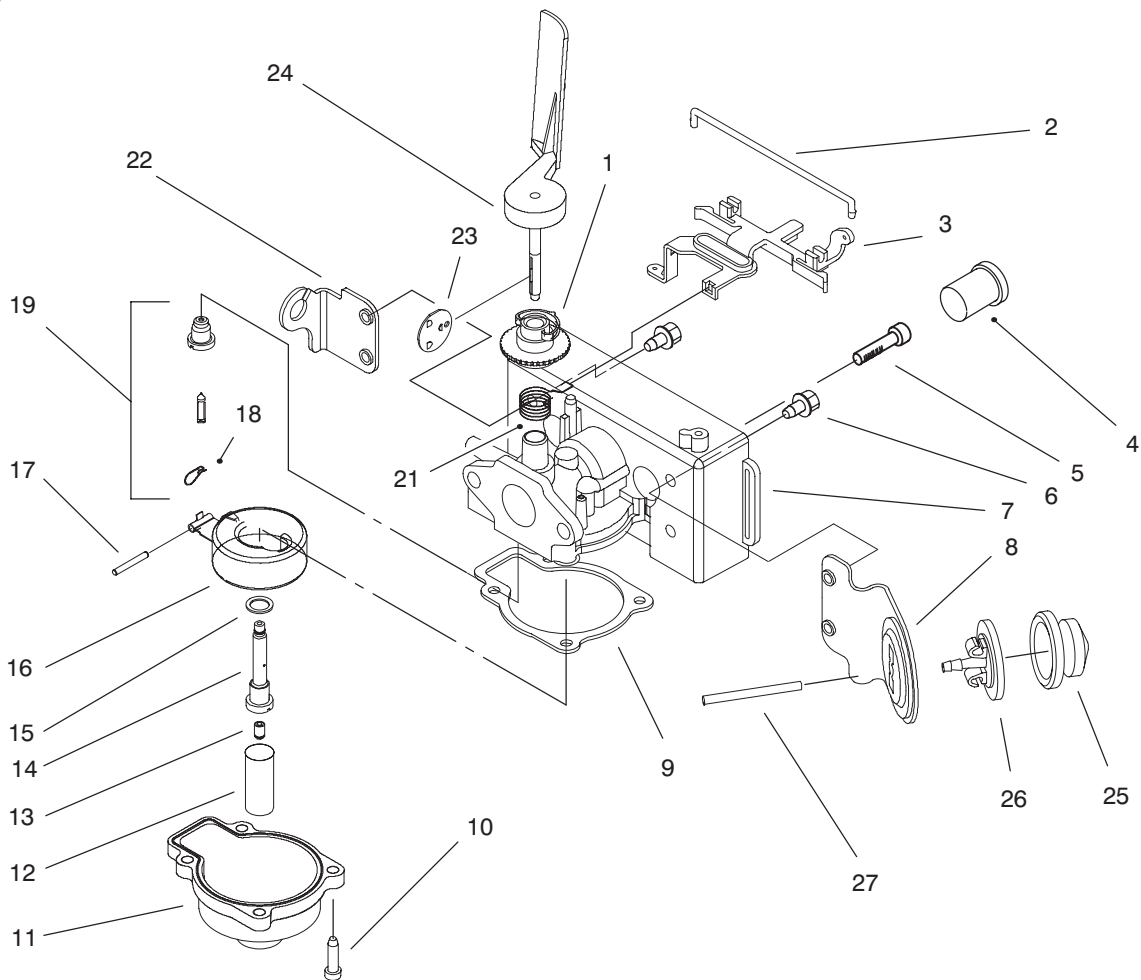


C-2182C

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610834	Collar — Adjustment	1
2	610165	Retainer	1
3	93-1225	Lever — Speed Adjust	1
4	611545	Plug	2
5	609482	Screw — Pan Hd. Sems	2
6	613269	Screw	4
7	93-4341	Body — Carburetor	1
8	93-1232	Bracket — Primer	1
9	602850	Gasket — Float Chamber	1
10	608850	Screw	4
11	92-9691	Float Chamber	1
12	611071	Filter — Fuel	1
13	94-5710	Main Jet	1
14	92-6371	Nozzle	1

Ref. No.	Part No.	Description	No. Used
15	612383	Washer	1
16	678113	Float & Arm Assembly	1
17	92-6389	Pin	1
18	603145	Clip	1
19	678278	Float, Valve, & Body Ass'y	1
21	92-4944	Spring — Governor	1
22	93-1226	Bracket — Throttle Control	1
23	94-5704	Disc — Throttle	1
24	92-6376	Air Vane & Shaft	1
25	66-7460	Bulb — Primer	1
26	44-2750	Body — Primer	1
27	44-3172	Hose — Primer	1
*	94-5738	Carburetor Complete	1

*Not Illustrated

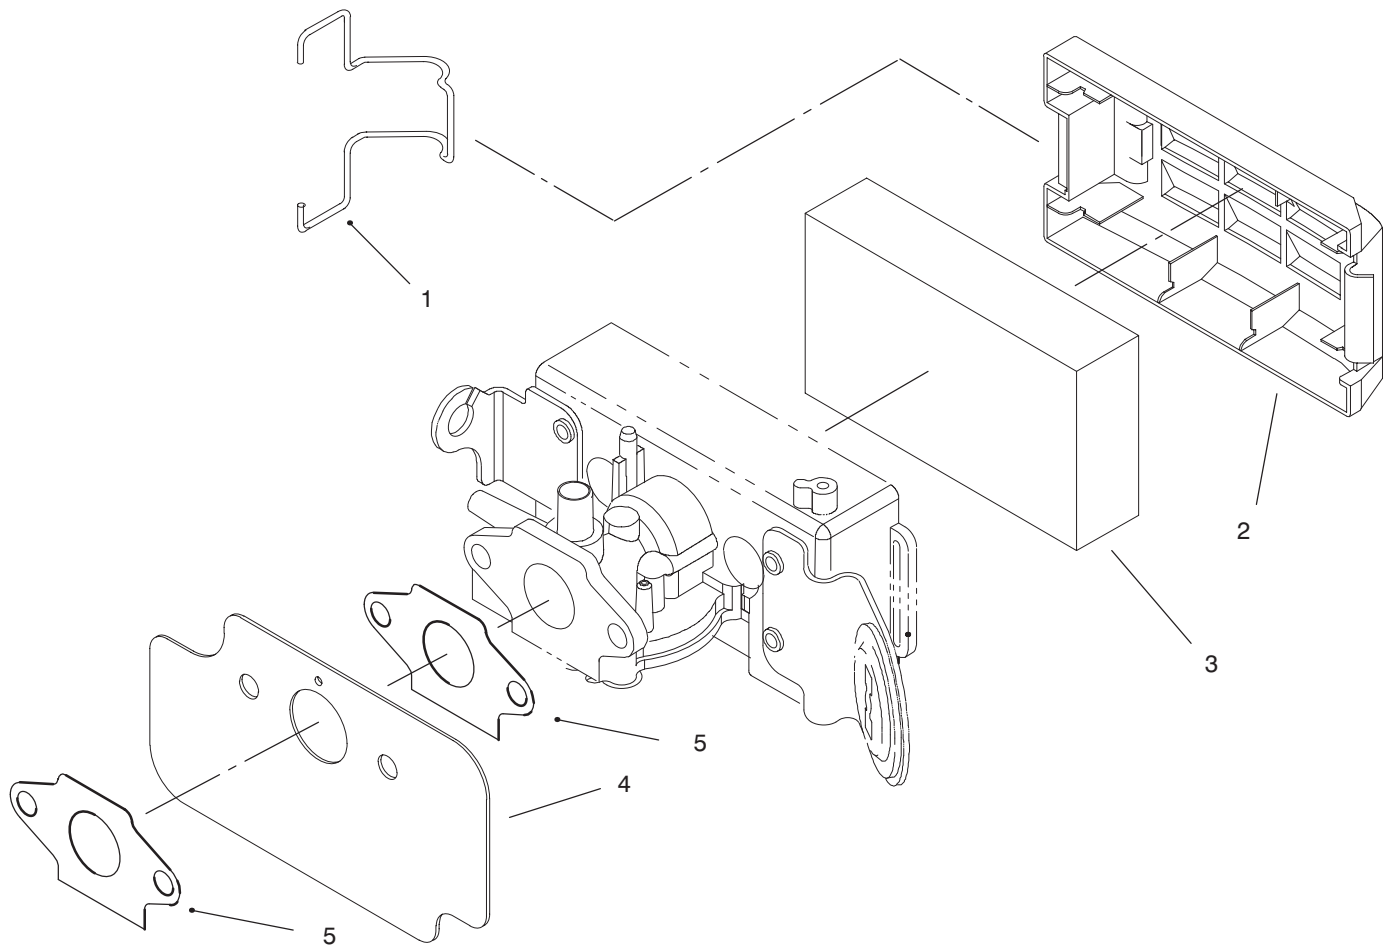


C-2184A

AIR FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610383	Retainer - Cover	1
2	93-1231	Cover - Air Filter	1
3	609493	Element - Air Filter	1

Ref. No.	Part No.	Description	No. Used
4	93-1221	Shield - Heat	1
5	92-4948	Gasket	2

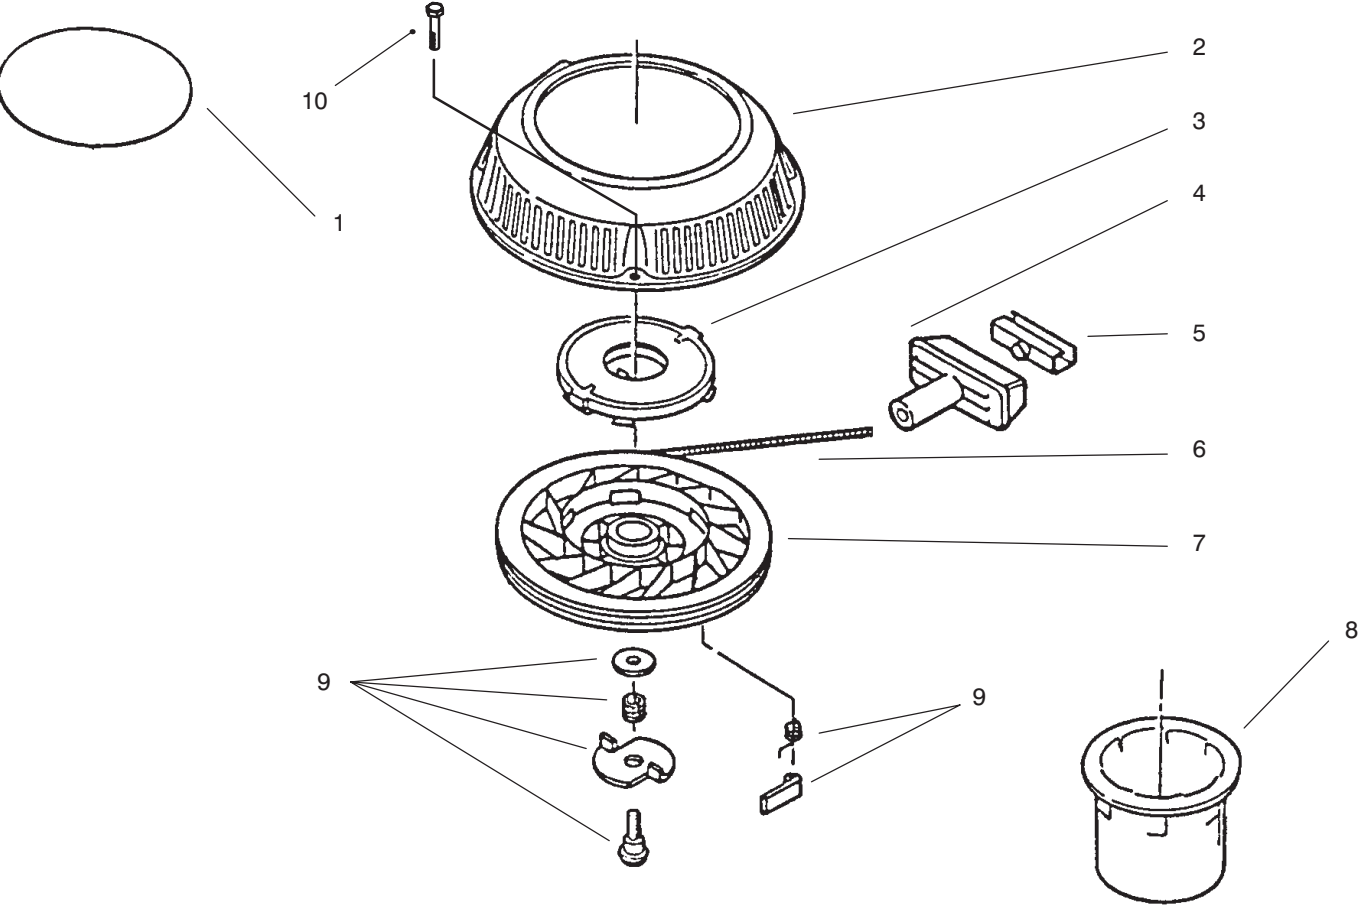

C-1337A

STARTER

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
*	684622	Starter Assembly (Incl. Ref. #2, 3-6, 7, & 9)	1	5	612824	Clip - Rope	1
1	93-0293	Decal - Recoil	1	6	612432	Rope	1
2	684567	Starter Housing & Shaft	1	7	612950	Pulley	1
3	92-4935	Spring & Keeper	1	8	612949	Hub - Starter	1
4	612825	Handle - Starter	1	9	683899	Kit - Dog	1
				10	612428	Screw - Starter Mtg.	4

*Not Illustrated

TORO PART NUMBER INDEX

3318—510

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
130743	Nut — Flywheel	7 10 1	611191	JClip	6 14 1
130743	Nut — Flywheel	6 18 1	611191	Clip — J	7 8 1
303712	Ring — Retaining	8 17 2	611192	Bracket — Brake	6 52 1
303712	Ring — Retaining	6 22 2	611211	Spring — Brake	8 41 1
306375	Nut	9 48 1	611211	Spring — Brake	6 54 1
306375	Nut	6 62 1	611213	Retainer	6 1 1
306407	Washer	6 11 1	611213	Retainer	9 45 1
306407	Washer	9 43 2	611214	Spring — Cable Return	8 2 1
306407	Washer	6 56 1	611214	Spring — Cable, Return	6 3 1
316959	Washer — Lock	7 11 1	611215	Base — Shroud	7 2 1
316959	Washer — Lock	6 17 1	611250	Handle Assembly — Top	3 22 1
317893	Strap — Tie	7 13 1	611337	Bracket	8 39 1
317893	Tie Strap	6 20 1	611393	Screw	6 32 2
602315	Nut	6 12 1	611393	Screw — Cap	8 8 2
602587	Plate — Reed	6 47 1	611396	Seal — Oil	6 29 2
602587	Plate — Reed Hold Down	8 35 1	611396	Seal — Upper Oil	8 13 2
602588	Reed	8 36 1	611509	Actuator — Brake Lever	8 1 1
602588	Reed	6 48 1	611509	Actuator — Brake Lever	6 2 1
602850	Gasket — Float Chamber	10 9 1	611512	Brace — Alternator	7 4 1
603014	Bolt	7 5 1	611541	Column	3 10 1
603014	Bolt	6 10 1	611542	Pin	3 8 1
603145	Clip	10 18 1	611543	Screw	3 14 2
603164	Nut	2 26 1	611545	Plug	10 4 2
603773	Nut — Wheel Ht. Adjust	2 23 4	611571	EyeBolt	4 9 1
605120	Grommet	8 27 1	611777	Control Case Outer	3 9 1
605120	Grommet	6 39 2	611799	Screw	3 3 2
605546	Nut — Push	3 20 1	612079	Blade 19	2 27 1
605803	Pin — Cotter	4 7 2	612168	Nut — Acorn	3 11 1
606537	Screw	7 14 1	612383	Washer	10 15 1
606608	Pin — Wrist	8 16 1	612427	Shroud — Base	6 13 1
606608	Pin — Wrist	6 23 1	612428	Screw — Starter Mtg.	12 10 4
607188	Screw	4 4 4	612432	Rope	12 6 1
607199	Key — Flywheel	8 14 1	612564	Pulley	3 12 1
607199	Key — Flywheel	6 28 1	612586	Washer	3 4 2
607213	Gasket	1 * 1	612633	Case — Throttle, Center	3 13 1
607526	Screw	6 34 2	612634	Case — Throttle, Inner	3 16 1
607526	Screw — C.D. Mounting	8 6 4	612783	Hose — Gas	1 13 1
607560	Cover Plate	2 4 1	612788	Handle — Lower	4 2 1
607601	Screw	1 10 3	612824	Clip — Rope	12 5 1
608159	Toe Bar	2 1 1	612825	Handle — Starter	12 4 1
608311	Nut	7 3 1	612841	Plate — Contact	9 46 1
608311	Nut	6 8 1	612841	Plate — Contact	6 60 1
608833	Bracket — Wheel Ht. Adjust	2 21 4	612842	Shield	8 24 1
608834	Washer — Wheel Ht. Adjust	2 22 4	612842	Shield	6 59
608850	Screw	10 10 4	612872	Screw	6 46 2
609123	Plug	8 32 4	612872	Screw — Reed To Cover	8 34 2
609123	Plug	6 44 4	612949	Hub — Starter	12 8 1
609150	Baffle	1 * 1	612950	Pulley	12 7 1
609471	Screw — Muff. to Muff. Plate	2 29 3	613073	Bracket — C. D.	6 41 1
609482	Screw — Pan Hd. Sems	10 5 2	613073	Bracket — C.D. Mounting	8 28 1
609493	Element — Air Filter	11 3 1	613110	Screw	6 51 2
609754	Set — Needle Bearing	6 33 1	613110	Screw — Cover to	8 38 1
609754	Strip — Roller	8 20 1	613233	Screw	6 53 2
609786	Support — Crankshaft	2 30 1	613233	Screw — Brake Mtg. Brkt.	8 40 2
609808	Screw	7 12 2	613269	Screw	10 6 4
609808	Screw	6 19 1	613500	Screw — Muffler Plt. to Block	1 9 1
609947	Screw	7 7 3	613529	Bolt — Shoulder	8 5 1
609947	Screw	6 15 3	613529	Bolt — Shoulder	6 7 1
610165	Retainer	10 2 1	614009	Plug — Spark	8 22 1
610383	Retainer — Cover	11 1 1	614009	Spark Plug	6 35 1
610646	Bolt — Shoulder	2 15 4	614243	Knob	4 1 2
610834	Collar — Adjustment	10 1 1	614249	Strap — Tie	8 26 1
611071	Filter — Fuel	10 12 1	614249	Tie Strap	4 5 4
611073	Screw — Set	8 37 1	614249	Tie Strap	3 19 4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
614249	Tie Strap	6 40 1	92-4923	Set - Piston & Ring	6 * 1
614343	Screw	7 6 1	92-4925	Piston & Connecting Rod	6 24 1
614343	Screw	8 29 2	92-4925	Piston & Ring Set	8 19 1
614343	Screw	6 42 2	92-4927	Bearing Assembly	8 15 1
614650	Bolt - Wheel 8	2 36 2	92-4927	Bearing Assembly	6 25 1
614677	Screw - Plate Mounting	2 6 2	92-4935	Spring & Keeper	12 3 1
614682	Nut - Wing	2 5 1	92-4944	Spring - Governor	10 21 1
614697	Screw	3 21 2	92-4948	Gasket	11 5 2
677525	Collar and Plate Assembly	2 28 1	92-6371	Nozzle	10 14 1
677982	Liner - Pair	6 27 1	92-6375	Crankshaft	6 31 1
677982	Liner - Split (1 pair)	8 10 1	92-6376	Air Vane & Shaft	10 24 1
678113	Float & Arm Assembly	10 16 1	92-6389	Pin	10 17 1
678278	Float, Valve, & Body Ass'y	10 19 1	92-8615	Applique	1 1 1
681678	Lead - High Tension	8 25 1	92-8620	Decal	2 35 1
681678	Wire Lead	6 37 1	92-9691	Float Chamber	10 11 1
681737	Ring Set	8 18 1	93-0293	Decal - Recoil	12 1 1
681737	Set - Ring	6 21 1	93-1221	Shield - Heat	11 4 1
681830	Bearing - Main	6 30 1	93-1225	Lever - Speed Adjust	10 3 1
681830	Bearing - Upper Main	8 12 1	93-1226	Bracket - Throttle Control	10 22 1
681831	Bearing	8 30 1	93-1231	Cover - Air Filter	11 2 1
681831	Bearing - Main	6 49 1	93-1232	Bracket - Primer	10 8 1
682683	Brake Assembly	8 4 1	93-1233	Gasket - Exhaust	1 12 1
682683	Brake Assembly	6 5 1	93-1233	Gasket - Exhaust	8 33 1
682755	Fuel Cap	1 5 1	93-1239	Spring	6 55 1
682776	Relay	7 15 1	93-1239	Spring - Contact	8 23 1
682876	Muffler Cover Assembly	2 31 1	93-1240	Case - Switch	6 4 1
683215	C. D. Ignition Module	6 38 1	93-3779	Cable - Throttle	3 5 1
683215	Module - C.D. Ignition	8 31 1	93-4102	Cable - Control	3 7 1
683478	Lever - Control	3 18 1	93-4135	Lever & Knob Assembly	3 6 1
683580	Flywheel	7 9 1	93-4136	Decal - Throttle	3 15 1
683580	Flywheel Assembly	6 16 1	93-4300	Harness - Wire	7 1 1
683581	Brace Assembly	6 9 1	93-4301	Case Assembly	8 42 1
683821	Lead	8 3 1	93-4341	Body - Carburetor	10 7 1
683821	Wire Lead	6 6 1	93-7250	Decal - Warning	2 38 1
683899	Kit - Dog	12 9 1	93-7369	Shield - Trailing	2 10 1
683925	Bracket - Handle L.H.	4 3 1	93-7383	Guide - Rope	3 1 1
683926	Bracket - Handle R.H.	4 6 1	93-7693	Clamp	2 12 2
683964	Alternator Assembly	8 7 1	94-1610	Grommet	2 2 3
684567	Starter Housing & Shaft	12 2 1	94-5704	Disc - Throttle	10 23 1
684570	Starter Base	1 4 1	94-5710	Main Jet	10 13 1
684619	Cover - Plate, Mulch	2 3 1	94-5713	Crankshaft	8 11 1
684622	Starter Assembly	12 * 1	94-5734	Short Block	6 * 1
684776	Wheel - Front 6	2 25 2	94-5734	Short Block	9 * 1
684777	Wheel - Rear 8	2 16 2	94-5738	Carburetor Complete	10 * 1
16-2169	Housing Assembly	2 9 1	252-76	Bearing - Thrust	9 49 1
16-5539	Shroud - Engine	1 6 1	252-80	Washer - Thrust	9 50 1
39-5770	Decal - Danger	2 7 1	321-6	Screw - Hex Hd. Cap	9 44 1
40-1940	Washer	2 20 4	321-6	Screw - Hex. Hd. Cap	6 57 1
44-2750	Body - Primer	10 26 1	321-39	Screw - Trailing Shield	2 11 2
44-3172	Hose - Primer	10 27 1	321-51	Screw	3 2 1
46-6811	Screw	2 32 2	3255-7	Washer - Ext. Tooth Lock	9 47 1
66-7460	Bulb - Primer	10 25 1	3255-7	Washer - Lock	6 61 1
92-1054	Plate - Muffler	1 11 1	3256-4	Washer - Flat	2 8 3
92-1099	Bolt - Wheel 6	2 19 2	3296-12	Nut	3 17 2
92-1604	Hub Cap	2 34 4	3296-73	Nut	2 13 2
92-1648	Screw - Muffler Plt. to Hsg.	1 8 3	3296-73	Nut - Lock	4 8 4
92-4880	Knob and Spring Assembly	2 14 4	3296-73	Nut - Lock	3 23 4
92-4921	Connecting Rod Assembly	8 9 1	32144-53	Screw	1 2 5
92-4921	Connecting Rod Assembly	6 26 1			

*Not Illustrated